

ard_k210-QR code identification

ard_k210-QR code identification

1.K210 and Arduino communication

1.1 Experimental premises

1.2 Experimental wiring

1.3 Main code explanation

1.4 Experimental phenomena

1.K210 and Arduino communication

1.1 Experimental premises

This tutorial uses arduino, and K210 requires running the program in **K210-AI (stm32_pico_arduino)** to start the experiment

arduino *1



K210 perspective module * 1 (requires SD card (with AI model inside) and camera)

USB to TTL module * 1

1.2 Experimental wiring

arduino	usb to ttl
TXD	RXD
GND	GND

arduino	K210 perspective module
RXD	TXD
GND	GND
VCC	5V
Wiring as shown in the diagram:	

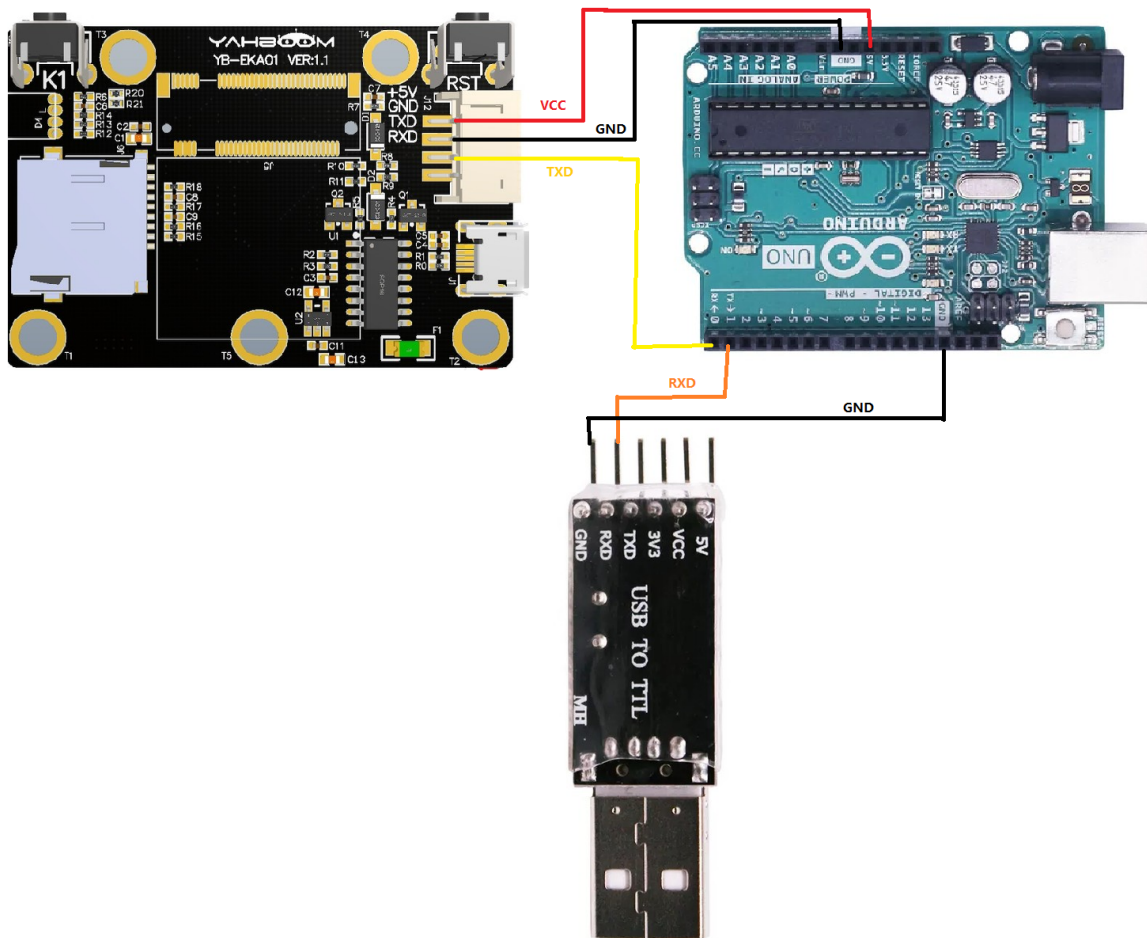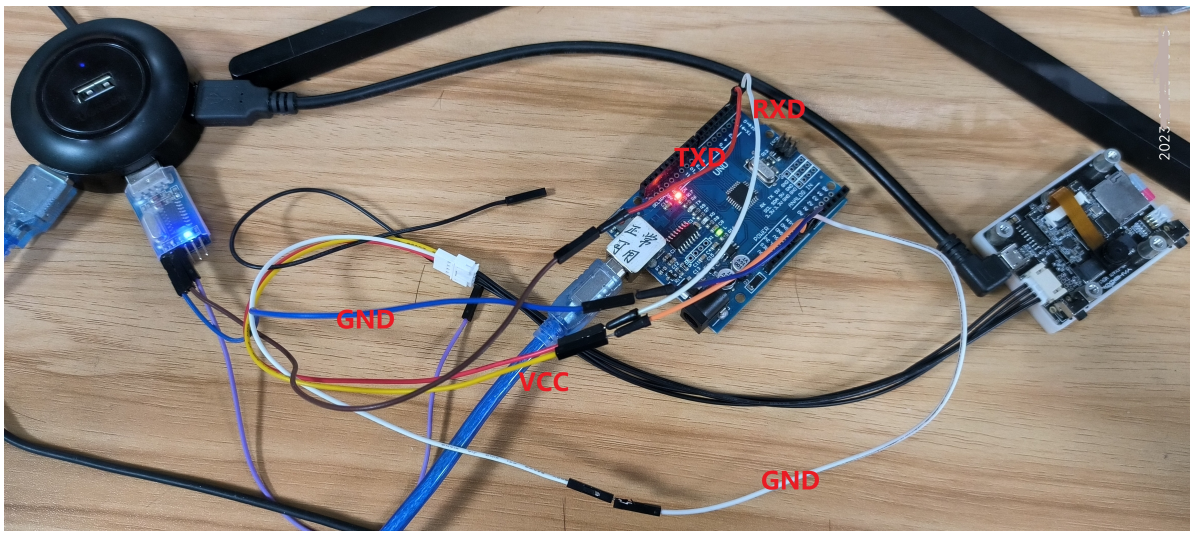

1.3 Main code explanation

```
void loop()
{
  while (K210Serial1.available())
  {
    recv_k210msg(K210Serial1.read());

    if (k210_msg.class_n != 0)
    {
      if(k210_msg.class_n == 3)
      {
```

```

    sprintf(buff_com, "x=%d,y=%d,w=%d,h=%d\r\n", k210_msg.x, k210_msg.y, k210_msg.w, k210_msg.h);
    K210Serial.print(buff_com);

    sprintf(buff_com, "str = %s\r\n", k210_msg.msg_msg);
    K210Serial.print(buff_com);

    k210_msg.class_n = 0;
}

}

}
}

```

After the above program, if you are running this routine, k210_ The members of the msg structure have corresponding values and are processed through serial port printing

K210_Msg: is a structure that receives information, and its main members are

- X: is the horizontal coordinate of the top left corner of the recognized box (range: 0-240)
- Y: is the vertical coordinate of the upper left corner of the identified box (range: 0-320)
- W: is the width of the recognized box (range: 0-240)
- H: The length of the recognized box (range: 0-320)
- ID: is the recognized label
- Class_n: Routine number
- Msg_Msg [20]: Valid data

After receiving and processing data, k210_ Each member of the msg will store valid information. If you want to develop it again, call K210 directly_ Members of msg are sufficient

1.4 Experimental phenomena

1. After connecting the cable, the K210 perspective module runs offline. Please check 【6.2 K210 as coprocessor】 -- 【ReadMe】

2. Set the serial port assistant to the interface shown in the figure

The image shows two stacked dialog boxes from a serial assistant application. The top dialog, titled 'COM Configs', has fields for Channel (COM1), Baudrate (115200), Paritybits (NONE), Databits (8), Stopbits (1), and Flowctrl (NONE). It includes a 'Close' button with a red stop icon. The bottom dialog, titled 'Recv Options', has radio buttons for ASCII (selected) and HEX, and checkboxes for Log display mode, Auto linefeed, Hide received data, and Recv save to file... It also has 'AutoScroll' and 'Clear' links. Below it, the 'Send Options' section has radio buttons for ASCII (selected) and HEX, and checkboxes for Enable escape chars, AT CMD auto CRLF, Auto append bytes, Send from file ..., and Period (1000 ms). It includes 'Shortcut' and 'History' links.

3. Then run the QR code recognition routine, and the serial assistant will print out the important information transmitted from k210 to stm32, as shown in the following figure

```
x=35, y=0, w=198, h=195
str = hello world
x=34, y=1, w=195, h=195
str = hello world
x=32, y=7, w=195, h=197
str = hello world
x=37, y=8, w=192, h=191
str = hello world
x=39, y=9, w=193, h=192
str = hello world
x=42, y=11, w=188, h=192
str = hello world
x=43, y=10, w=189, h=190
str = hello world
x=43, y=12, w=189, h=187
str = hello world
x=55, y=19, w=187, h=189
str = hello world
x=60, y=22, w=187, h=188
str = hello world
x=61, y=23, w=186, h=189
str = hello world
x=61, y=26, w=184, h=185
str = hello world
x=60, y=24, w=185, h=187
str = hello world
x=56, y=21, w=190, h=185
```

QR code recognition only transmitsThe five Member variable of k210_msg are x, y, w, h and msg.

