

Model: Z8PM3(4)Pro

User Guide

026L 00106

!! ATTENTION !!



Please strictly follow the standard operation when installation.



Please put the printer away from the reach of kids.



Must be guided by adults when children are installed or used.



Take care when installation, to avoid electrical shock hazards.



Caution: Hot!

Hotend has high temperature even the printer stop working.



Caution: Hot!

Hotbed has high temperature even the printer stop working.



Please keep well-ventilated condition! May produce toxic gases when printer working.




Please make sure you have set the AC power select switch to the correct position before power on.

The newest documents download link:

<https://github.com/ZONESTAR3D/Z8P>

Parts List

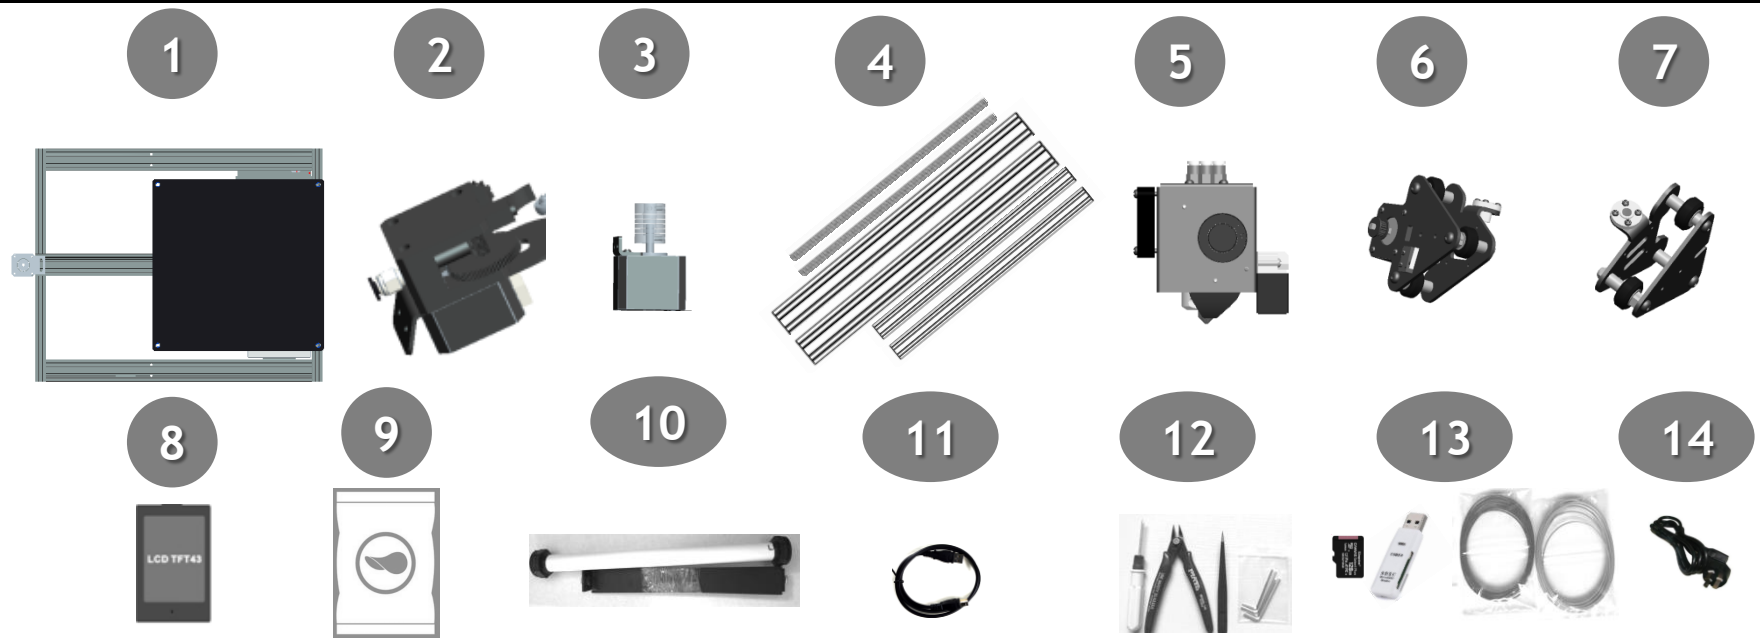

No.	Name	Check	No.	Name	Check
1	Base Module	<input type="checkbox"/>	8	Contol Panel	<input type="checkbox"/>
2	Extruders (3 sets for M3 and 4 sets for M4)	<input type="checkbox"/>	9	Scews, lead screws fix blocks, ENDSTOPs, Fittings, PTFE Tubes, belt, cable tie, etc.	<input type="checkbox"/>
3	Z-axis Motor Modules (2 sets)	<input type="checkbox"/>	10	Filament Roll Bracket	<input type="checkbox"/>
4	Lead screw & Profiles	<input type="checkbox"/>	11	USB cable	<input type="checkbox"/>
5	Print head with bracket M3 or M4 hotend	<input type="checkbox"/>	12	Tools	<input type="checkbox"/>
6	Z carrier left	<input type="checkbox"/>	13	SD card, Card Reader, Gift filament	<input type="checkbox"/>
7	Z carrier right	<input type="checkbox"/>	14	Power cord	<input type="checkbox"/>

Parts




2x Z aluminum profiles, there are 4 tapping hole on the end
There are 2 hole on the bottom side

These two holes on the bottom
when install



1x top aluminum profile, there are many hole on the front




1x X Profile, 2020-420mm, There are two big hole on the back




2x lead screws insert into the Z profile (They are put inside the Z aluminum profiles)



Install Z axis Parts

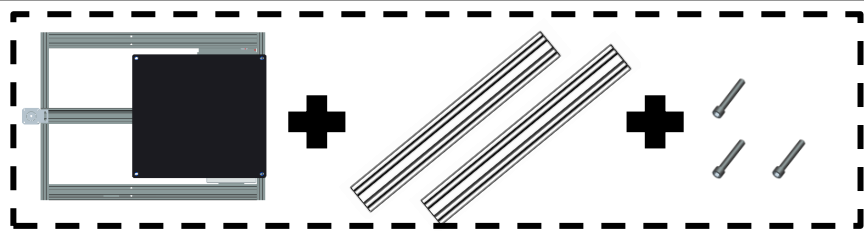

2040V profiles

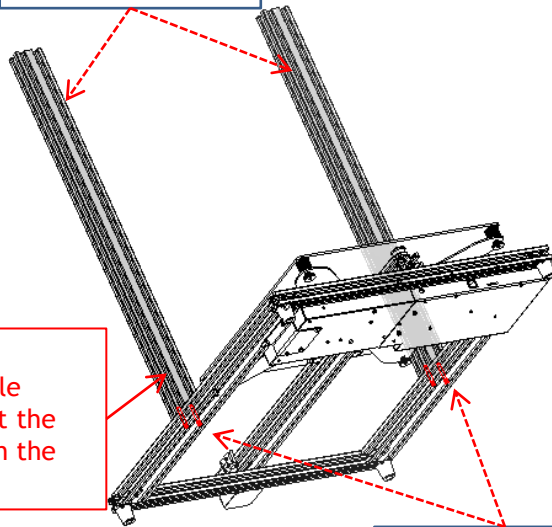


NOTE:


There are two hole on the profile, let the side with holes on the bottom.

Install Z profiles to base


M4x25 *4

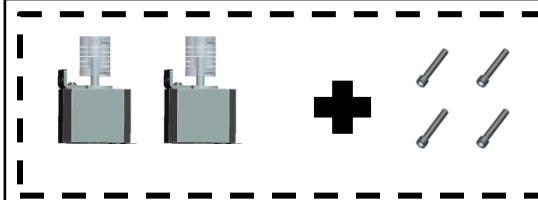


M4x18 *4

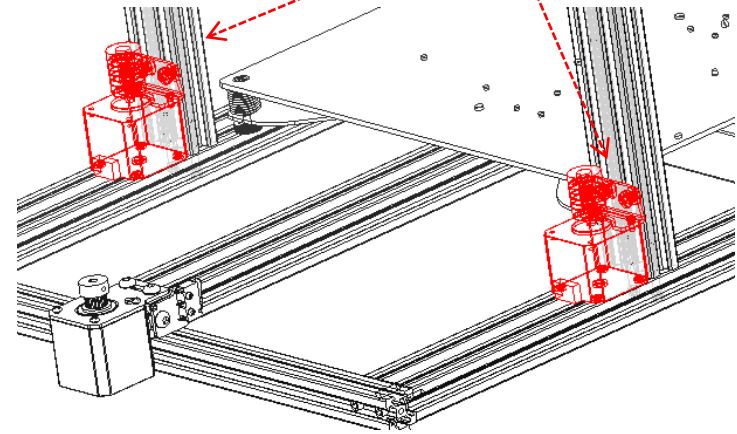

Install Zmotor module to the Z profiles

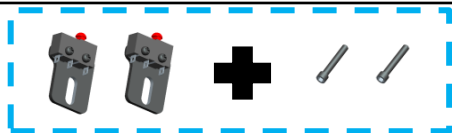


Z ENDSTOPs

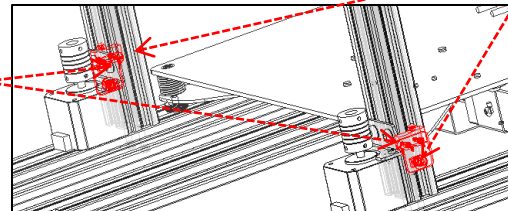


M4x18 *2

Install Z ENDSTOPs module to the out side of the Z profiles

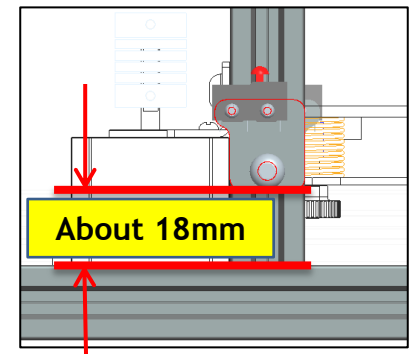



Install Z axis Parts

Install Z Carrier

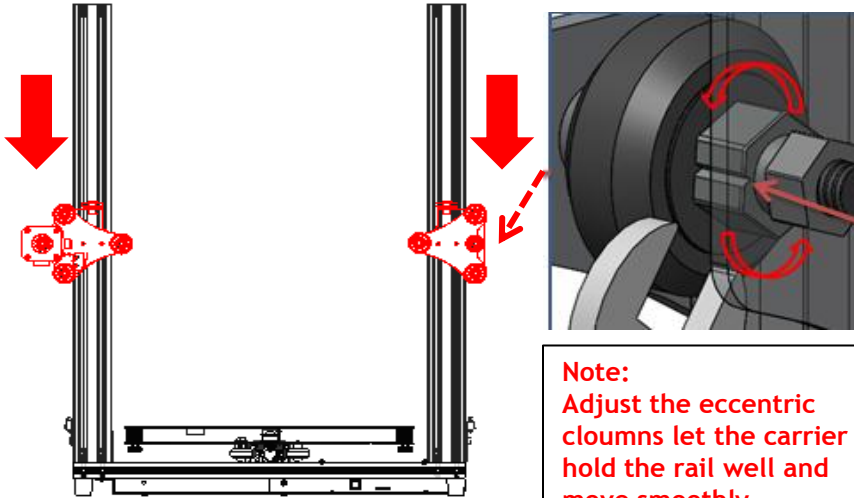


Note:
Adjust the eccentric
columns let the carrier
hold the rail well and
move smoothly.

Install lead screws

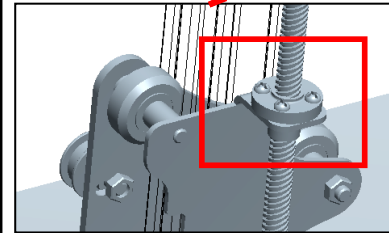
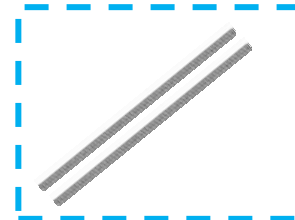


Through the
copper nut

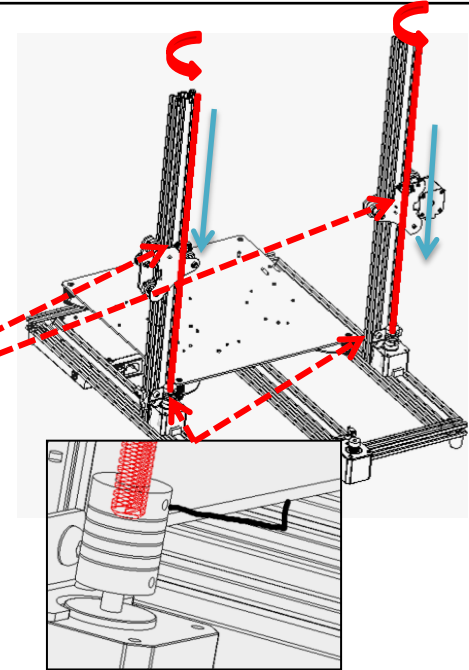



Fixed on the Coupling
of Z axis motor

Install Top profile

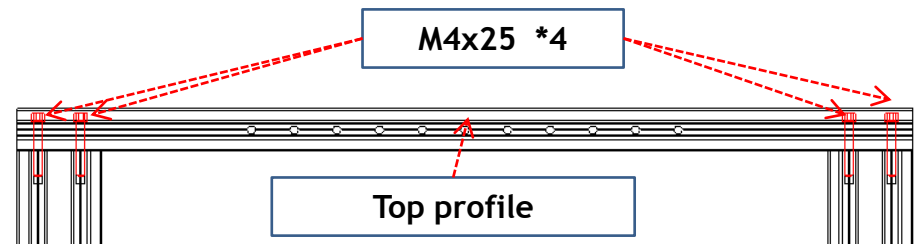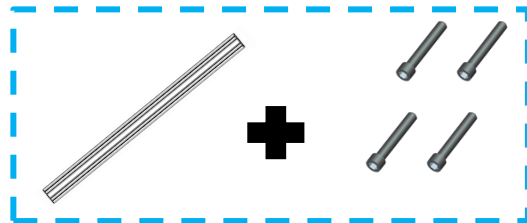


Install X axis Parts



Install X belt idler and X profile

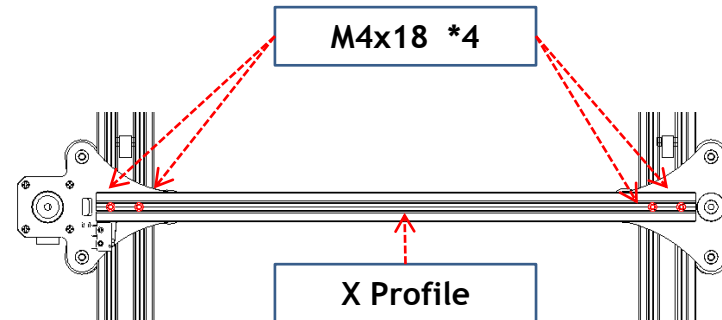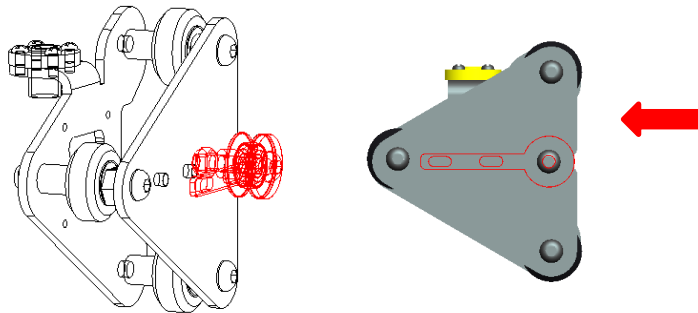

Install the X belt idler to the Z right carrier, move it from right to left

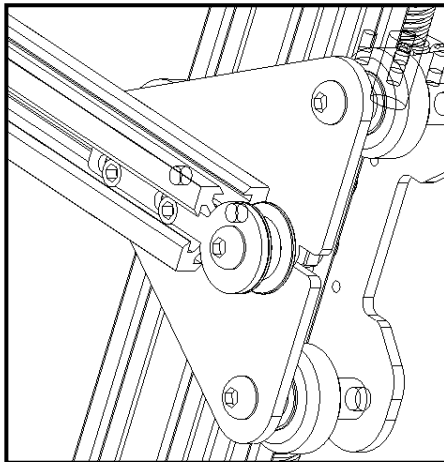


Install the X profile to the Z carrier

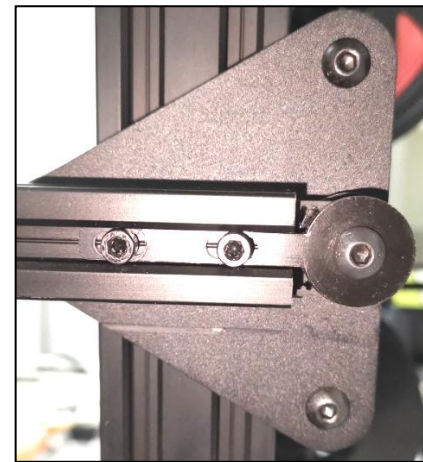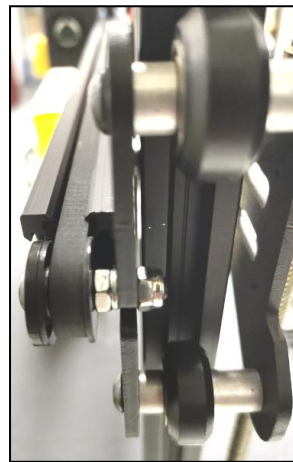


Install X axis Parts


Install X profile

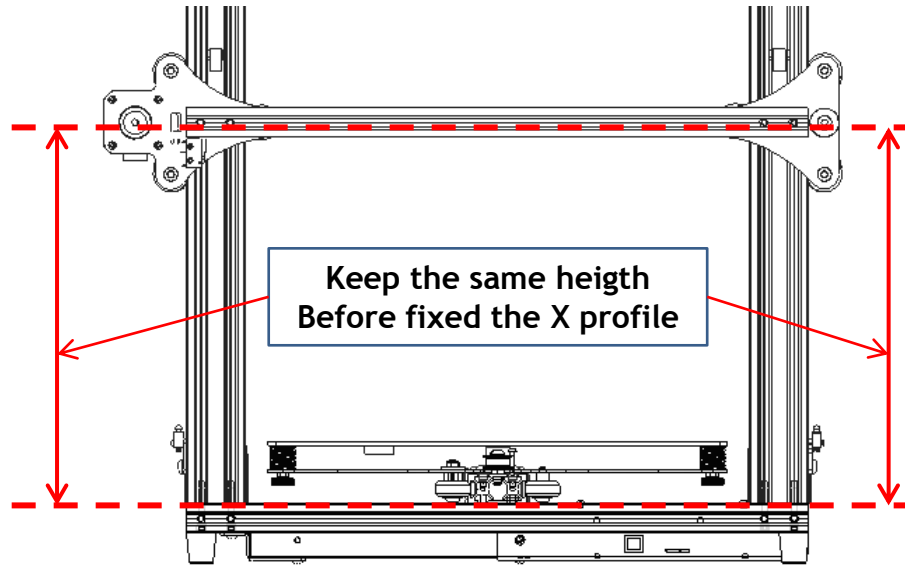


Install print head (hotend assembly)

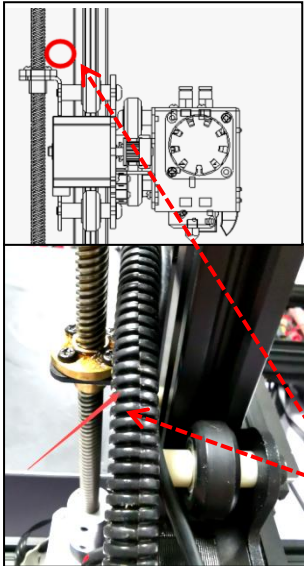

Layout the hotend cable

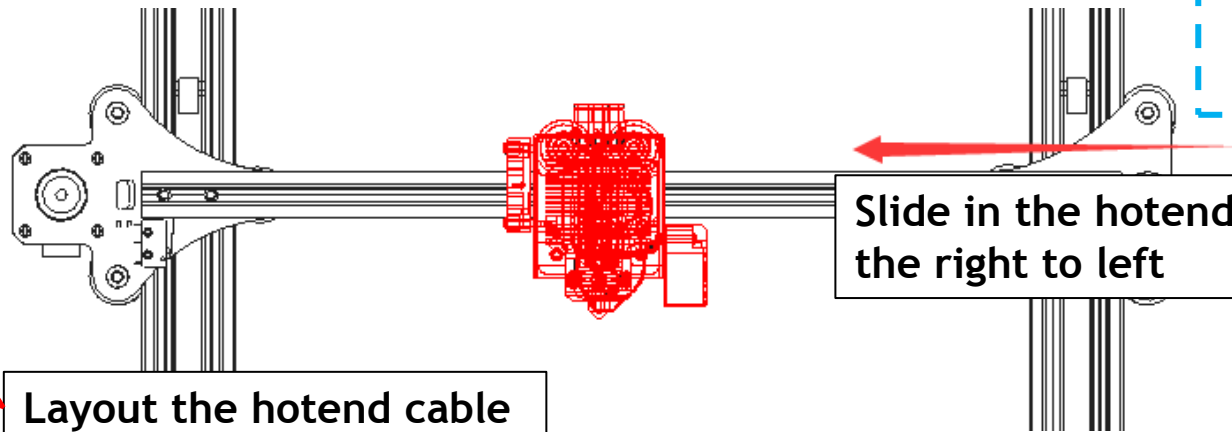

Slide in the hotend from
the right to left

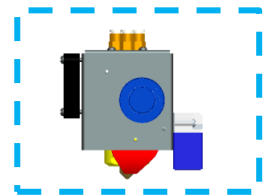


Install X belt

Install the X belt


Hotend
(the hotend be hide in this picture)

X Timing Belt

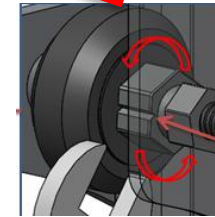


Adjust the eccentric cloumns, let the X carrier hold the rail well and move smoothly

Tigten the X belt

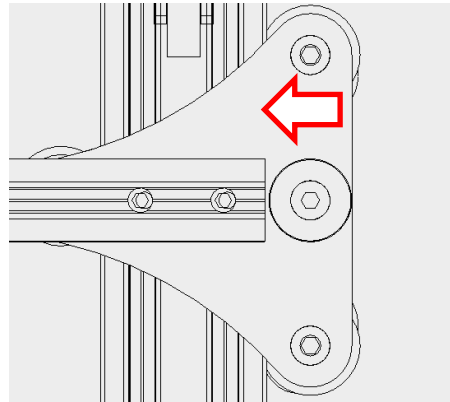

Move X belt idler to the left
before fix the belt

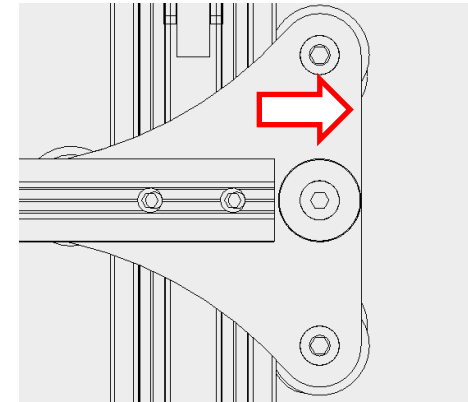


Move X belt idler to the right
after fixed the belt

Install the other parts



Install the LCD screen on the right/bottom of printer

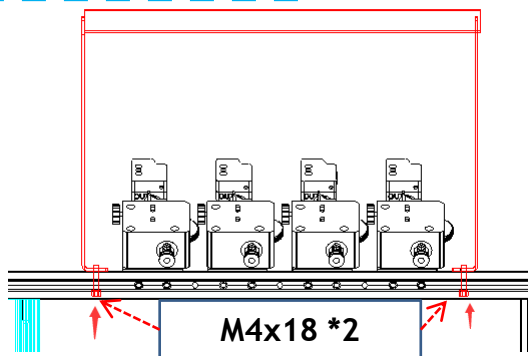


Install the filament roll bracket to the top of the frame



x 3 or 4


Z8-M3 is 3 sets and Z8-M4 is 4 sets

NOTE: Try to rotate the extruders a little when install to keep a little clearance between the adjusting screw and the indenter.

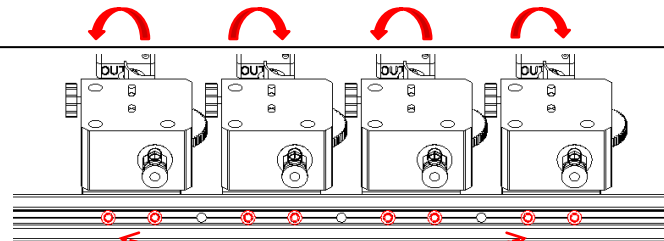

M4x18 *6(8)

Install Extrusion feeders to the top of the frame

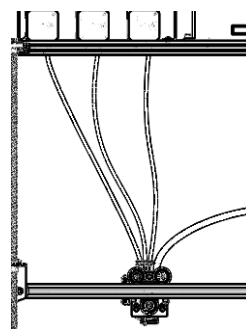

NOTE: One of the channels is connected and others closed by hotend clean tool when the machine left factory. If you don't have experience in using 3D printers, start with single color.

Connect the extrusion feeder with the print head by filament guide (PTFE tube)

Debug the Z Movement system



Keep the lead screws parallel to the Z axis profiles as far as possible will help to obtain better printing quality, please debug them refer to the following steps:

Step 1. Loosen all the screws a little that fixed the Z motors and T8 copper nut.

Step 2. Synchronous Rotate the couplings to move up the X axis to 1/2 height of the printer.

Step 3. Keep the lead screws parallel to the Z profiles, then tighten the screws that fixed the Z motor and T8 copper nuts.


Step 4. Install the Z lead screws fix blocks on the top profile after done.

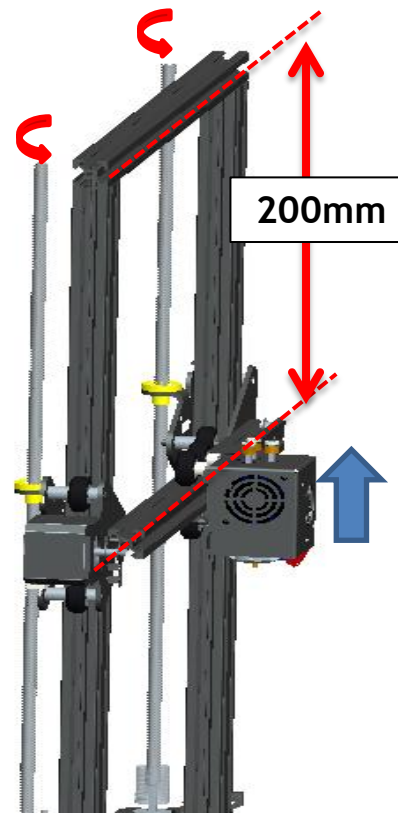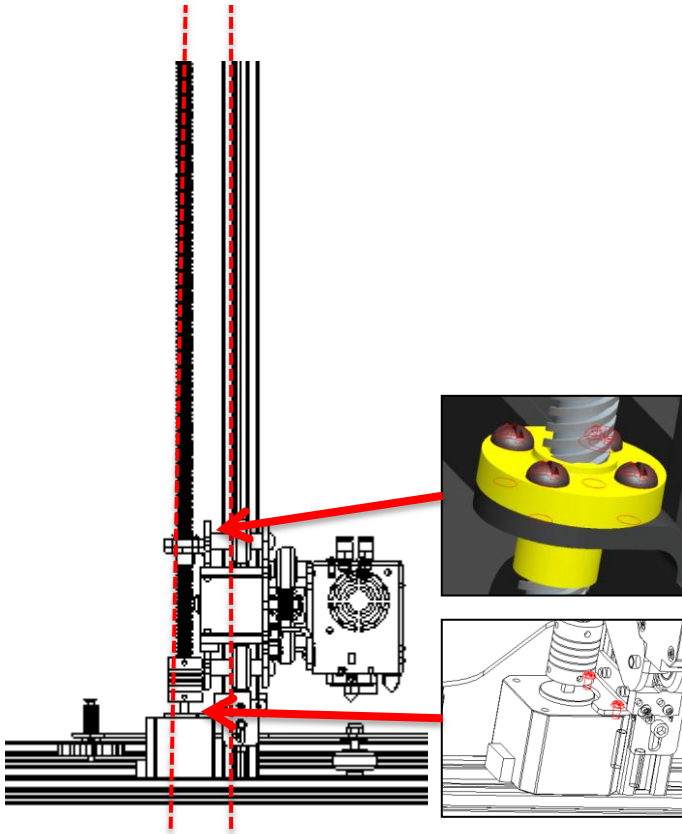


Loosen
a little



Put in

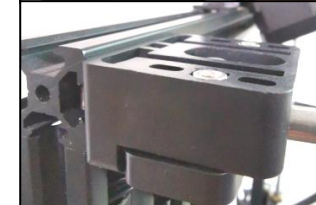


Fixed

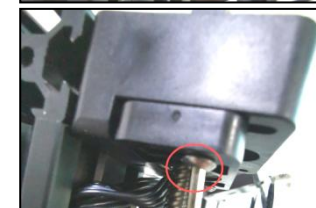

Fixed

Adjust height of Z ENDSTOPS

- Step 1:** Adjust the 4 **hand nuts** under the hotbed, let the hotbed is parallel with bottom profile.
- Step 2:** Manual rotate the couplings on both of the Z axis motors , let the nozzle touched the hotbed.
- Step 3:** Move up the ENDSTOP, let its RED part touched the pulley of the Z carriers.
- Step 4:** Tighten the screws to fix the Z ENDSTOPS

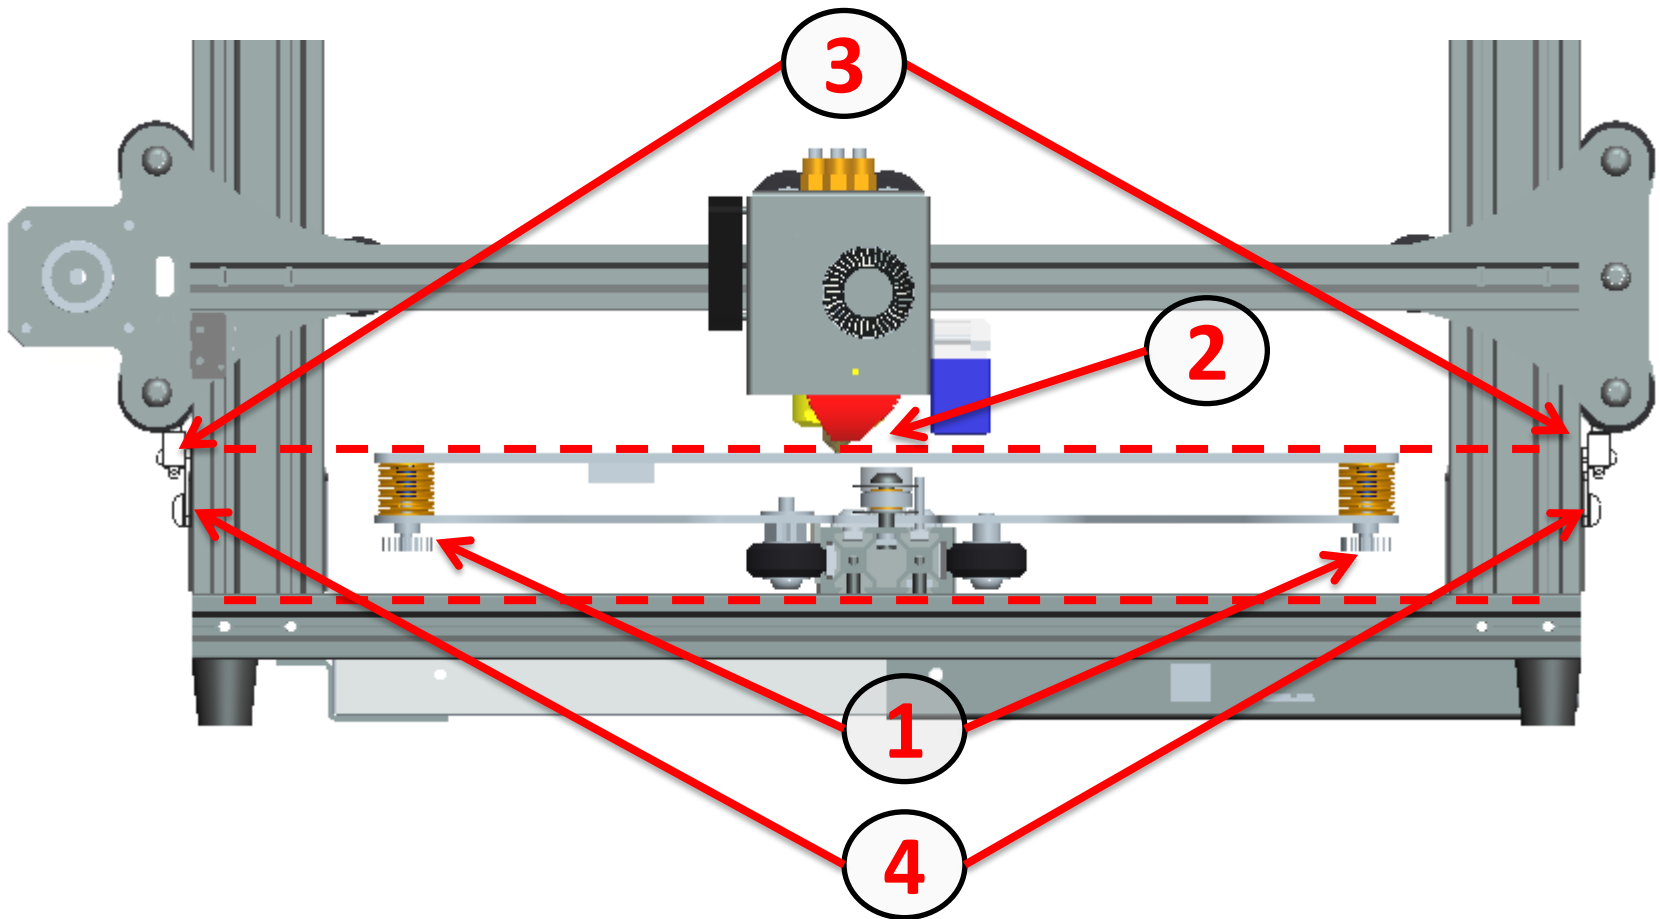

!!ATTENTION!!



Take care when installation, *to avoid electrical shock hazards!*



Set the 110V/220V switch (on the side of power supply) to correct position according to your city power voltage!



DC-IN, HOTBED has larger operating current, please *make sure these wires contact well with the terminal.*



Double check the wiring! WRONG WIRING MAY DAMAGED THE ELECTRONIC DEVICE!



Stop working immediately if the motor has abnormal vibration or noise,, otherwise the driver modules may be damaged!










Make sure the hotend cooling fan is working when the nozzle temperature is over 60 degree, otherwise check the wiring again.




Put the motor wire to the grooves of profile and cover them by plastic *profile cover*, and using *cable tie* to wrap the free wires.

About electronics parts

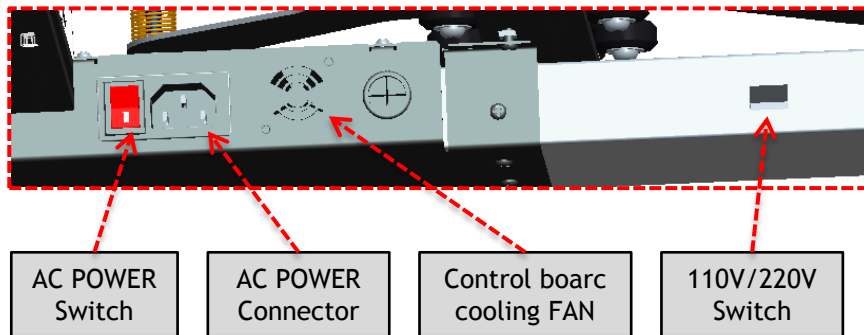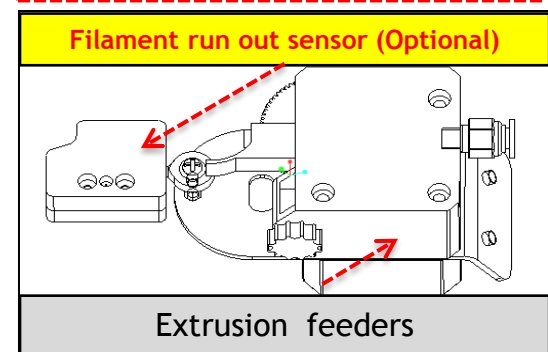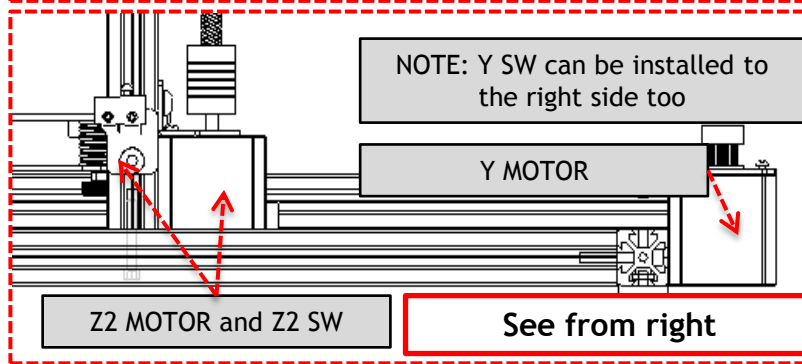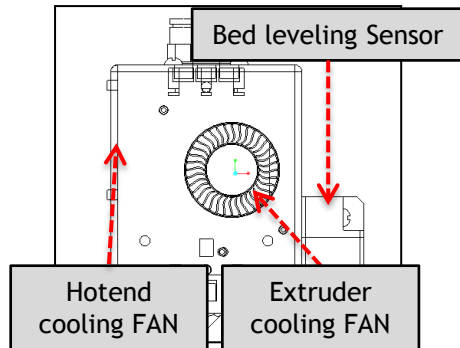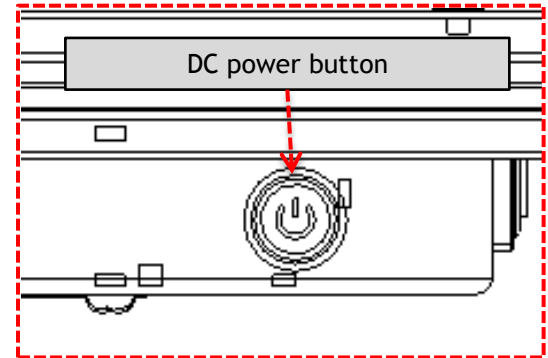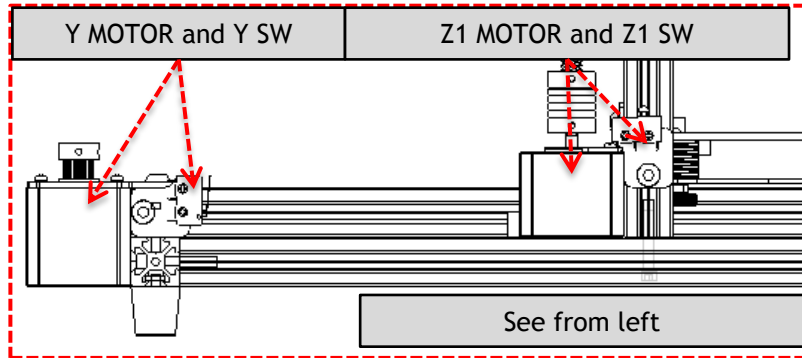
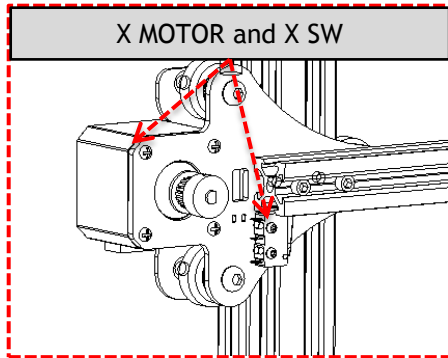


Wiring Block

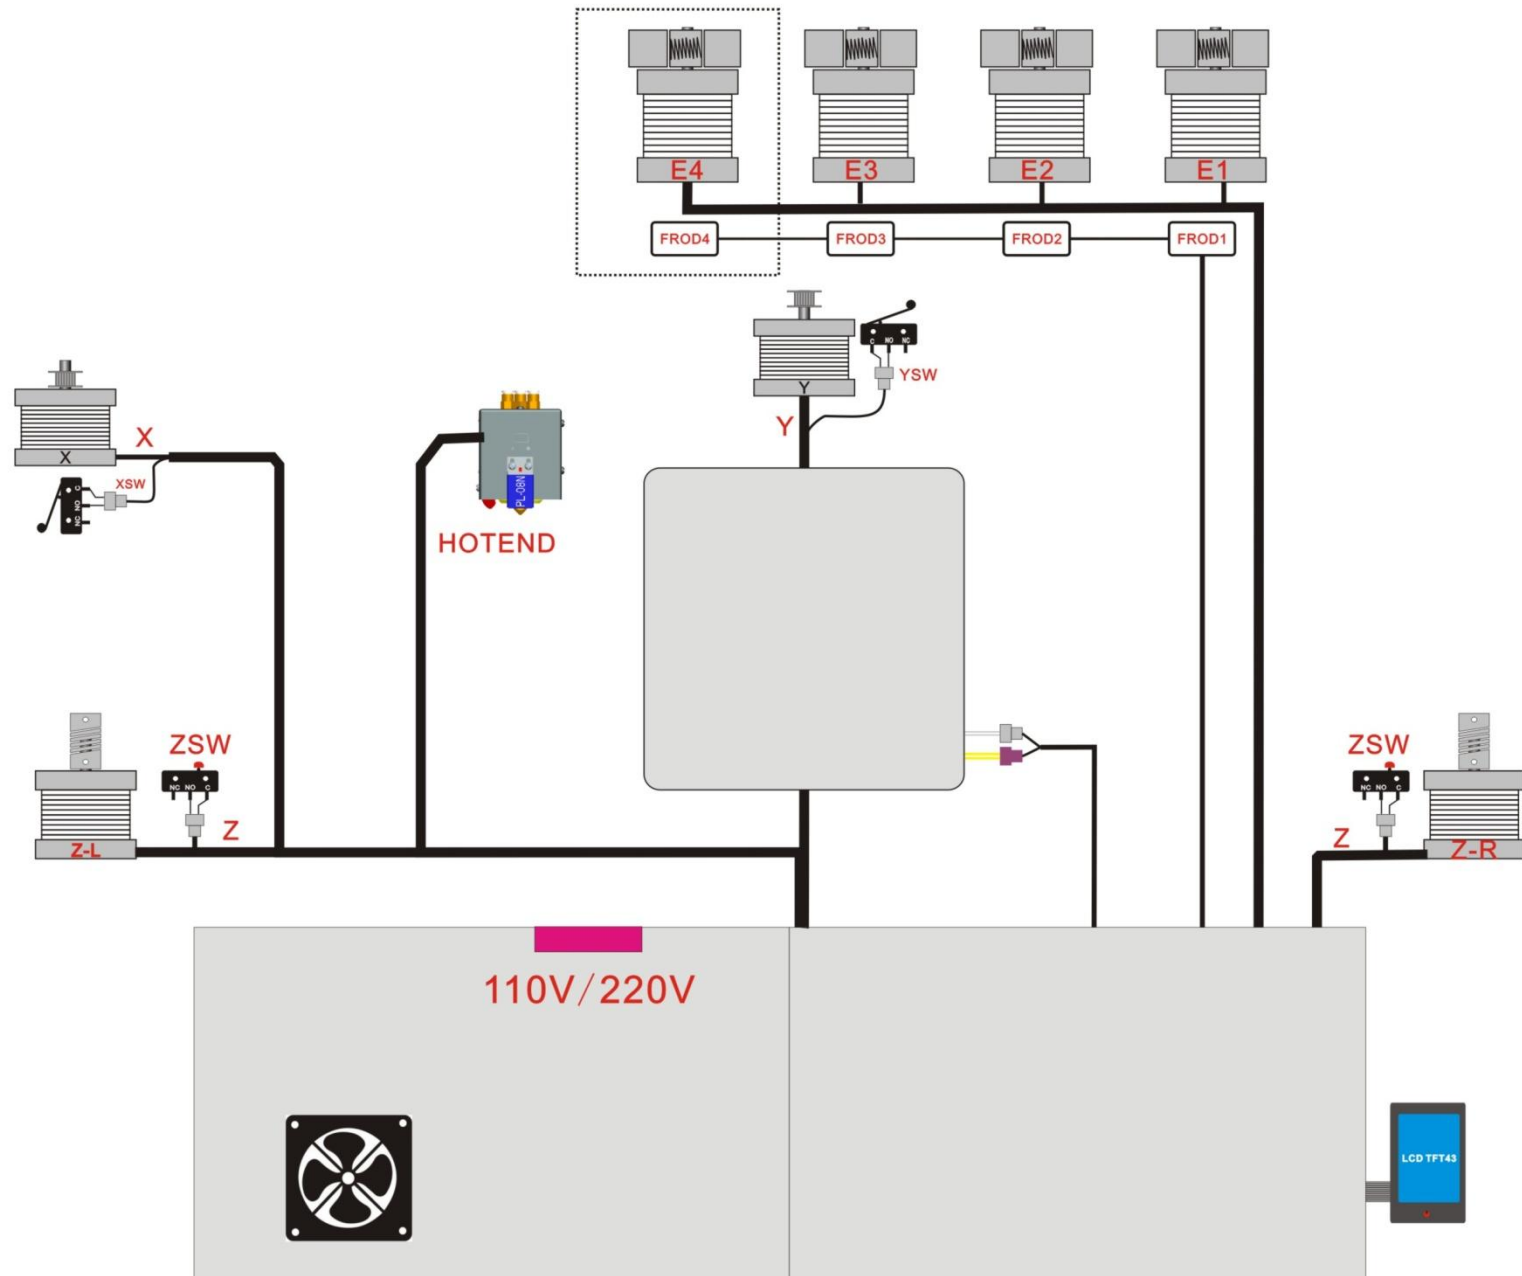



Layout the wires / cables

BOTTOM VIEW

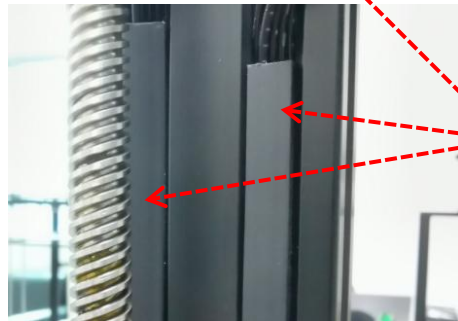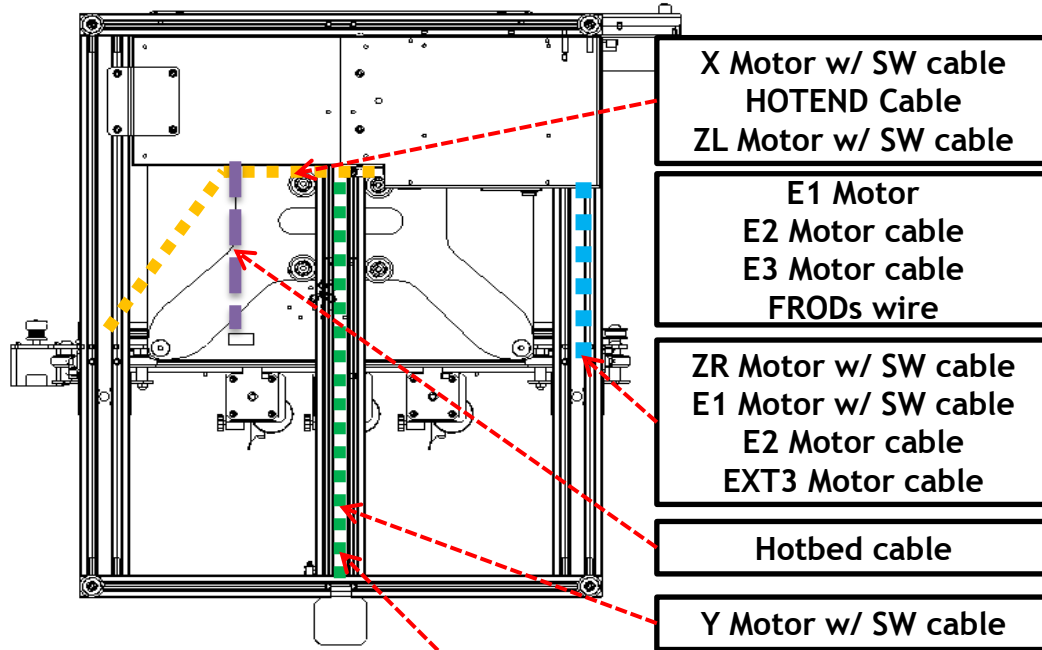

Put the motor wire into the groove of profile, and cover it by the profile cover

BACK VIEW

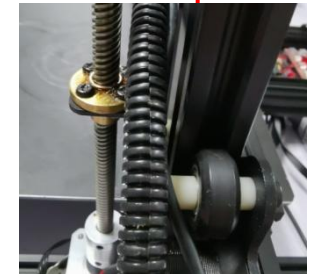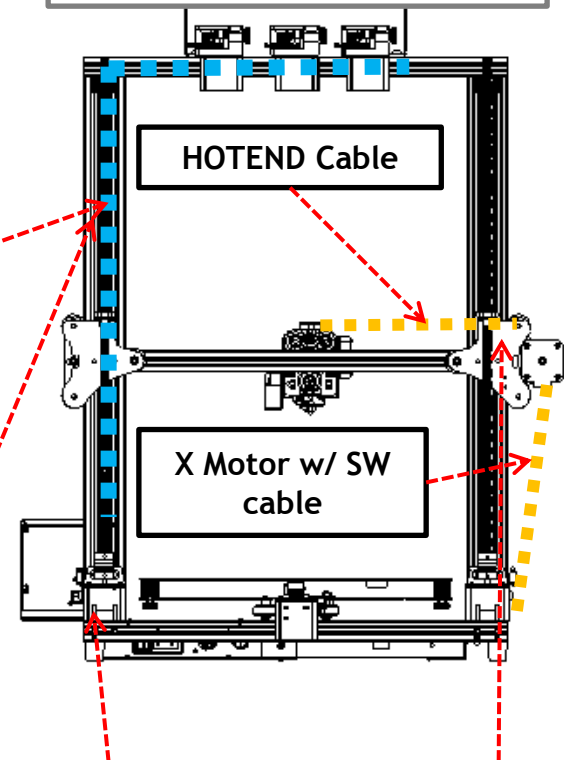

Check before power on

It is very important to check the machine before power on. It can eliminate the trouble brought by some hardware to ensure the smooth printing!

Step 1: Please check if the X&Y axis timing pulley are fixed on the shaft of motor, and the couplings are fixed on the shaft of the Z motors.

Step 2: Please check if the lead screws have been fixed on the shaft of coupling.

Step 3: Move the hotend and hotbed to their respective limit switch positions to check whether the contact is good and there is a clear sound. Otherwise, please check the limit switch and reassemble it.

Step 4: Manually move the hotend and hotbed to see if the movement is smooth, otherwise, adjust the eccentric nut until the motor moves smoothly. Refer to the installation procedure.

Step 5: Check whether the X and Y-axis drive belt is firmly installed. If it is too loose, please try to tighten it.

Step 6: Check whether the screw rod is assembled in place and whether the screw is tightened

Step 7: Manually rotate the z-axis screw rod to check whether the z-axis limit switch contacts reliably.

Power ON / Power OFF

!!ATTENTION!!

MAKE SURE THE AC VOLTAGE SELECT SWITCH HAS BEEN SET TO THE CORRECT POSITION!!!




POWER ON




Plug in power
cord



Turn ON
AC Power Switch

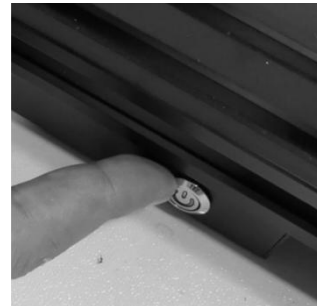

Push and **hold** DC
power button

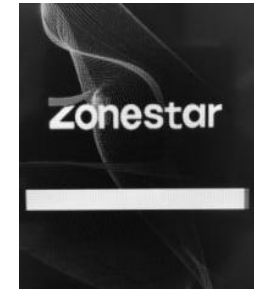

until the LCD shows Logo
and release the DC
power button

POWER OFF




“Switch
Power Off” on
LCD Screen

Wait the LCD screen off

Turn OFF
AC Power Switch



LCD Menu and Operation

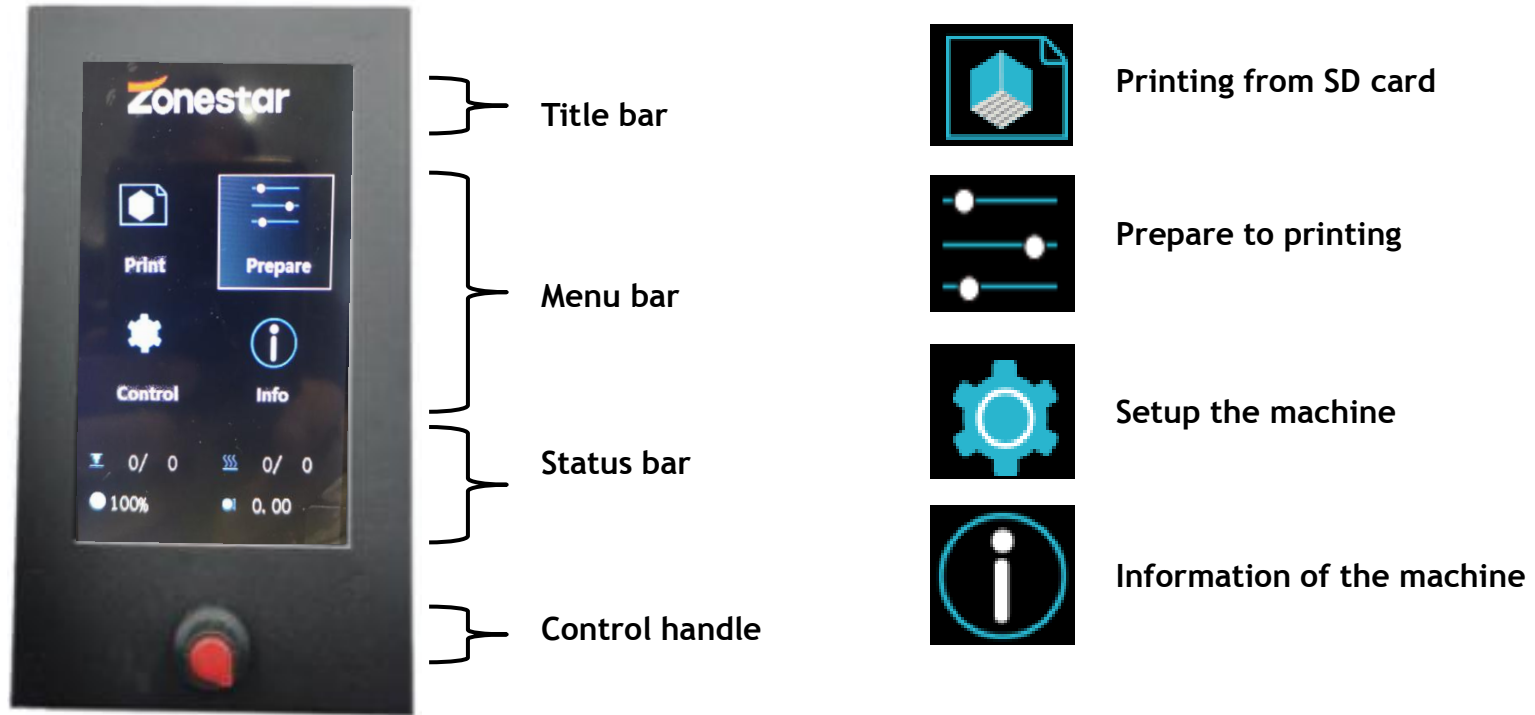

For details on the TFT-LCD menu, please refer to "[LCD_DWIN Menu Description.pdf](#)".

Prepare to print - Level the hotbed

1. Power on the 3d printer and then do “**Prepare>>Auto Home>>Home All**” on control panel, wait the hotend go to the HOME (origin) position.
2. Watch the nozzle, tighten the hand nuts under the bed to move down or loosen these nuts to move up the bed **(Fig 1)**, let the nozzle is higher than the bed about 1~2mm.
3. Do “**Prepare>> Bed leveling>> Point 1(2/3/4)**” on control panel**(Fig 2)**, the nozzle will go to the corners of the bed, adjust the hand nuts under the hotbed and let the nozzle almost touch the hotbed **(Fig 3)**. Continue to do the next point until all of the 4 corners has been leveled.
4. Repeat step 3 (recommend to do 3 rounds at least), until all of the four corners at the same height.

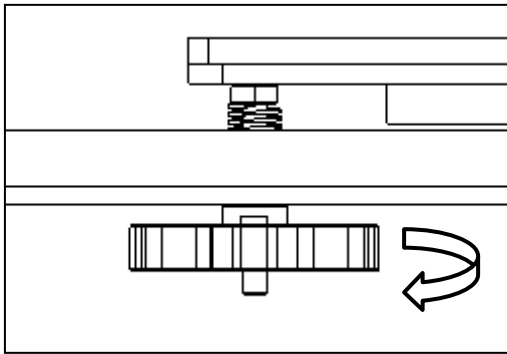


Fig 1

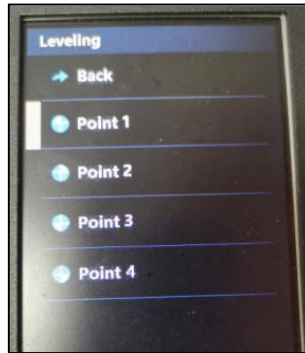


Fig 2



Fig 3

Prepare to print - Load Filament

1. Check the hotend, make sure only the center channel of the hotend connected “filament guide” and the others channels has been closed by hotend clean tools (Fig 1).
2. Do “*Prepare>>Auto Home>>Home All*” on control panel, and then do *repare>>Temperature>>Preheat PLA*”, waiting nozzle Temperature reached to 190 °C (Fig 2).
3. Use a diagonal pliers to cut off the head of filament (Fig 3), and then press the handle of the *extrude feeder #1* and insert filament, push the filament until you can see the filament in the guide (Fig 4).
4. Rotate the gear of extrude feeder #1 (Fig 5), watch the filament until it enter the hotend. Continue to rotate the gear **slowly** and watch the nozzle, until you can see the filament flowed out from the nozzle (Fig 6).

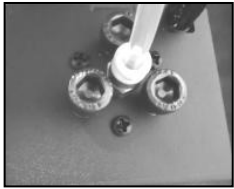


Fig 1



Fig 2



Fig 3



Fig 4

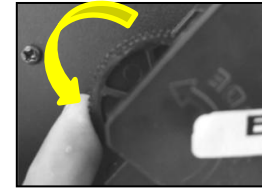


Fig 5

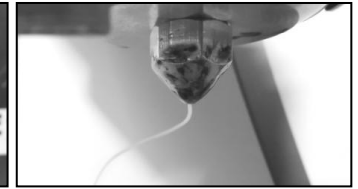


Fig 6

NOTE:

1. We have only open one channel of the hotend when the printer left the factory, so please load one filament the hotend in your first prints.
2. Before loading more than one filament to the hotend, please read this guide first “Mix Color HOTEND User Guide- load and unload filament.pdf” file in the SD card

Print your first work

1. Insert the SD card to the SD card socket on the printer (**Fig 1**).
2. Click “Print” on the control panel and choose “*Test gcode\xyz_cube.gcode*” (**Fig 2**), click the knob to start printing.
3. Wait until the hotend and hotbed is reached to the setting temperature (**Fig 3**), the nozzle will home to the origin position and then move to above of the printing platform and extrude the filament, use a tweezers to remove the outflow filament (**Fig 4**).
4. Double click the knob on the control panel to open a “*Babysteps*” menu (**Fig 5**), rotate knob slowly to fine tune the height of printing platform, watch the distance from nozzle to bed, until the distance is well (**Fig 6**). Wait the printing finished, you will get your first works (**Fig 7**).
5. Wait the hotbed cool (≤ 25 degree) (**Fig 8**), and then remove the printed object from the hotbed glass(**Fig 9**).



Fig 1

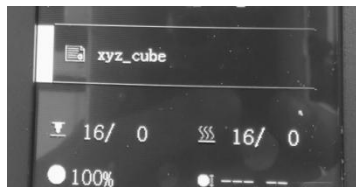


Fig 2

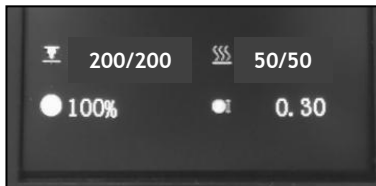


Fig 3



Fig 4

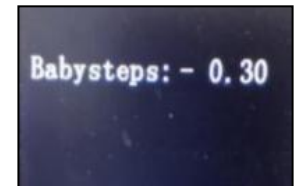


Fig 5

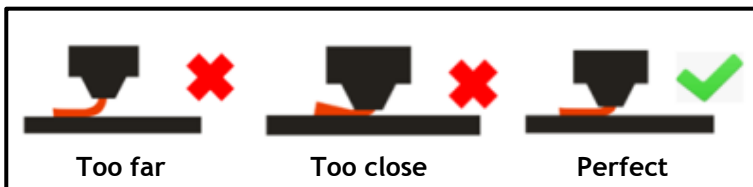


Fig 6



Fig 7

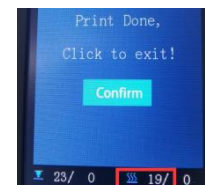


Fig 8



Fig 9

Slicing

About slicing

Slicing a 3D drawing translates the 3D drawing into a language that a 3D printer can understand and print. The slicing software is a computer software used in the majority of 3D printing processes for the conversion of a 3D object model to specific instructions for the printer. In particular, the conversion from a model in **STL(Obj, Amf)** format to printer commands in **g-code** format. This machine can use a variety of slicing software to complete slicing. We will now introduce the most commonly used slicing software: **Cura**.

NOTE: 1. Slicing software is not a part of this machine. 2. You can download Cura for free from the internet.

Install slicing software and step up the printer


In order to run the slicing software, you need a PC or laptop, installed windows/linux/Macos.

Step 1: Download and install **Cura** to your PC, please search “ultimaker cura” from google.

Step 2: Copy “cura resources.zip” from the SD card and unzip it to your PC.

Step 3: Copy “resources” file to the same directory in cura which you installed.

Step 4: Run **cura** software, and follow the below steps to choose the printer.

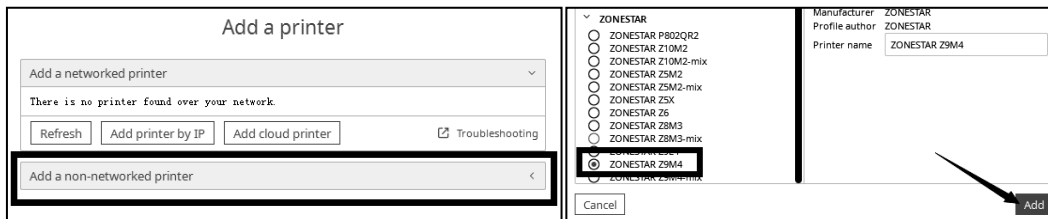


Download
Cura



Download
Slicing Guide

Slicing process

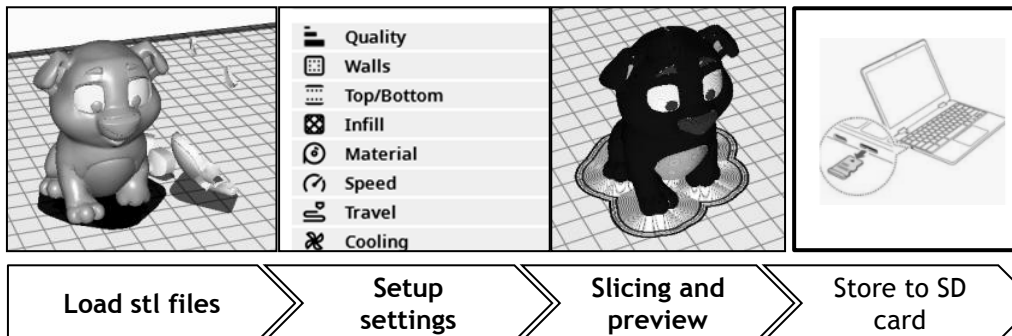

NOTE:
For description of slicing, please refer to the documents in the directory of “slicing”.

Advance features

NOTE: Do not turn on these functions until you clearly understand how to use them and precautions.

◆ Bed auto leveling feature:

This printer is equipped with a *Bed leveling sensor (PL-08N)*, with this sensor, you can correct the unevenness of the hot bed. . For the details please refer to the guide in [“Bed Auto Leveling Feature”](#).

Switch on: MENU>>Control>> Configre>> Auto Leveling

◆ Auto retract feature:

The strings issue of the mixed color hot end is often more serious than that of the single color hotend. Therefore, an automatic retraction feature is set in the firmware. Using automatic retraction can improve this problem. For the details please refer to [How to set auto retract function](#).

◆ Filament run out detection feature (Filament run out sensor is an optional parts):

With these sensors, the printer can pause the printing while one of the filament spool used up, and when you load a new roll filament, you can continue to print. For the detail please refer to [How to set filament runout function](#). Switch on: MENU>>Control>>Configre>>Runout Sensor

◆ Power loss recovery feature:

While printing from SD card and power is lost, after power on again, the printer will resume to print from the last layer which printed before power lost. For the detail please refer to [Power loss recovery feature user guide](#).

Switch on: MENU>>Control>> Configre>>PowerLoss Recovery


◆ Auto power shut down feature:

While printing from SD card and the work is finished, the printer will auto shut down after about 3 minutes. For the details please refer to [How to set auto shutdown function](#).


Switch on: MENU>>Control>> Configre>> Auto Shutdown

Upgrade your printer

You can print something to upgrade your printer, we have made some printed part and store the stl file to the SD card, you can feel free to slicing it and print it out, and then install them to your kit to make the printer better.

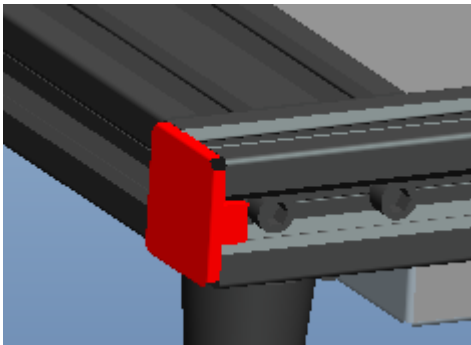

cap_af_20v.stl

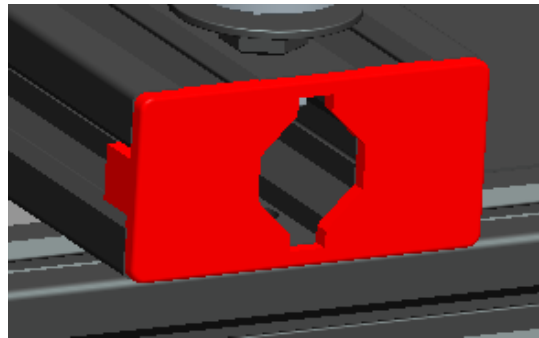

cap_af_40v.stl