



Enable cloud services on NetApp HCI

HCI

NetApp

April 24, 2020

This PDF was generated from https://docs.netapp.com/us-en/hci/docs/task_deploying_overview.html on April 24, 2020. Always check docs.netapp.com for the latest.



Table of Contents

- Enable cloud services on NetApp HCI 1
 - Deploy cloud services on NetApp HCI overview..... 1
 - Enable cloud services 1
 - Enable Cloud Volumes on NetApp HCI after NKS is already enabled 10

Enable cloud services on NetApp HCI

Deploy cloud services on NetApp HCI overview

NetApp HCI installations connect to, register with, and become a deployable region with NetApp Cloud Central. With this, you can centrally manage cloud services for NetApp HCI on-premise systems in the same way that you do in public clouds.

Deployment overview

Deploying and configuring a NetApp HCI solution in the cloud involves these steps. Our user interfaces help you every step of the way:

- Deploy and configure NetApp HCI using the quick and easy NetApp Deployment Engine that you've used previously. See the [NetApp HCI Deployment Guide in the NetApp HCI Documentation Center](#).
- [Enable cloud services](#) using the management node along with a NetApp Hybrid Cloud Control wizard. You establish a connection to NetApp Cloud Central and authenticate and register your NetApp HCI installation to your Cloud Central account.
- [Create a Kubernetes cluster](#) using the NetApp Kubernetes Service, one of many services located on NetApp Cloud Central.
- [Create a Kubernetes project](#).
- [Add applications to your Kubernetes cluster](#).
- [Create cloud volumes](#) using NetApp Fabric Orchestrator.

Find more information

- [NetApp HCI Documentation Center](#)
- [NetApp Cloud Central](#)
- [NetApp Cloud Documentation](#)

Enable cloud services

Enabling NetApp cloud services adds your local NetApp HCI system as a region to NetApp Cloud Central.

Enabling cloud services is performed using the NetApp Hybrid Cloud Control.

About this task

This lets you use NetApp Kubernetes Service and Cloud Volumes on NetApp HCI on your on-premises private cloud. With the NetApp Kubernetes Service, you can deploy and manage

Kubernetes clusters.

A NetApp Hybrid Cloud Control wizard takes you through the following tasks:

- Select the cloud services you want to enable.
- Obtain a Kubernetes API token and register your installation with NetApp Cloud Central.
- Select the vCenter resources.
- If you enabled Cloud Volumes on NetApp HCI, enable licenses using a link to the NetApp License Generator.
- Configure networking.

Sign in to or register with NetApp Cloud Central

1. Access NetApp Hybrid Cloud Control (HCC) by opening a web browser and browsing to the IP address of the management node:
"https://<_ManagementNodeIP_>"



For details, see [Accessing NetApp Hybrid Cloud Control](#).

2. Click the **Cloud** icon.

An outline of a cloud indicates that no services have been enabled. A filled in cloud indicates that some services have been enabled.

3. In the Cloud Services popup, review the services that are available and click **Enable Cloud Services**.

Enable Cloud Services



Step 1 - Select the Cloud Services to Enable

Find out more about the many cloud service offering NetApp has to offer at cloud.netapp.com

NetApp Kubernetes Service
Connect your NetApp HCI to NKS, the universal control plane for Kubernetes, and deploy the foundation for enabling additional cloud services.
[Learn more](#)
Preview

Cloud Volumes
Deploy on-demand file services for your business critical applications on NetApp HCI powered by NetApp ONTAP.
[Learn more](#)
Preview

Cloud Insights
Monitor, troubleshoot, and optimize your entire hybrid infrastructure and application workloads across both public and private clouds.
[Learn more](#)
Coming Soon

Select the Cloud Services you want to enable

SERVICES and INFORMATION ARE PROVIDED as a TECHNOLOGY PREVIEW. You might see a different set of services than those listed here.

1. On the Services page, select the services that you want to enable.
 - **NetApp Kubernetes Service:** You must use NetApp Kubernetes Service, a SaaS platform that enables you to deploy a Kubernetes cluster in the cloud with the major cloud providers and also with a NetApp private cloud. This is required to enable cloud services on NetApp HCI. This service is installed as a VM on a NetApp HCI compute node.
 - **Cloud Volumes:** To install Cloud Volumes on NetApp HCI, select this service. This service offers an on-demand shared file systems feature on your premises. The Cloud Volumes option will enable Data Fabric replication to and from public clouds.
 - **Cloud Insights:** This option will enable you to monitor cloud services on NetApp HCI. *Coming soon.*
2. Click **Continue**.

Get a Kubernetes API token

Enabling cloud services on NetApp HCI requires a NetApp Kubernetes Service API token that is associated with your Cloud Central account. You can complete these steps prior to enabling cloud services or during the process.

If you already have a NetApp Kubernetes Service API token, you can skip this procedure.

1. On the Enable Cloud Services > NetApp Cloud Central page, click the **API token** link to get a Kubernetes Service API token if you do not already have one.

Enable Cloud Services



Step 2 - Register Installation with NetApp Cloud Central

Register this NetApp HCI to your NetApp Cloud Central account and select your installation's organization and region name. If you do not have a NetApp Cloud Central account you may sign up at nks.netapp.io

NetApp Kubernetes Service API Token

Connect

Don't have a NetApp Kubernetes Service API Token associated with your Cloud Central Account?
One can be generated at nks.netapp.io/user/profile in the API Tokens section.

Back

Continue

2. Enter a token name and click **Create**.



API Tokens

Authorization tokens that can be used to access NetApp Kubernetes Service API.

```
curl -X GET "https://api-test.nks.netapp.io/orgs/97/clusters" -H "Authorization: Bearer 458c7c890683f9fa429ad195f2e809e1ced3bb06ac5dfa3e3e7cda5f5c9490d9"
```

Name	Created	Action
Test Token	May 30, 2019 11:58 AM -0600	
demo	Jun 5, 2019 10:19 AM -0600	

Please copy your new token. If you create a new token or refresh the page you won't have access to the plaintext token anymore.

[458c7c890683f9fa429ad195f2e809e1ced3bb06ac5dfa3e3e7cda5f5c9490d9](#)

3. Copy the token.
4. Return to NetApp Hybrid Cloud Control and paste it into the NetApp Kubernetes Service API Token field.
5. Click **Connect**.


The registration is now established and you are connected to Cloud Central. The Organization and Region Name fields appear listing the datacenters and regions available for this Cloud Central connection.

Enable Cloud Services





Step 2 - Register Installation with NetApp Cloud Central

Register this NetApp HCI to your NetApp Cloud Central account and select your installation's organization and region name. If you do not have a NetApp Cloud Central account you may sign up at nks.netapp.io

 Connected to Cloud Central. [Change API Token](#)

NetApp Cloud Central Organization ?

Fragrant Waterfall  

NetApp Cloud Central Region Name ?

griss-datacenter

Examples: Boulder-Datacenter, House-HIC-03, OLTP_Database

Back

Continue

Register your installation with NetApp Cloud Central

1. On the NetApp Cloud Central page, select your Cloud Central organization and region name.



This region name is used to identify this NetApp HCI installation and is used as the site name for any NetApp Kubernetes clusters created on this installation.

2. Click **Continue** to go to the vCenter Resources page.

Select the vCenter resources

Because the management node is connected to the vCenter, the vCenter used for deployment is displayed.

1. On the vCenter page, enter or select the following:
 - a. **Datacenter**: Select a datacenter from those configured on the NetApp HCI system.
 - b. **Cluster**: Select a cluster from those configured on the NetApp HCI system.
 - c. **Switch**: Select a switch. Only switches that meet the redundant management and storage uplinks are displayed.


The vCenter instance and admin user connected to it are displayed.

Enable Cloud Services



Step 3 - Select vCenter Resources

Enter the vCenter resources you want to use for your NetApp Cloud Services.

 Connected to vCenter instance **10.193.139.140** as user **administrator@vsphere.local**

Datacenter

NetApp-HCI-Datacenter ▼

Cluster

NetApp-HCI-Cluster-01 ▼

Back

2. Click **Continue**.

Enter license information

If you enabled Cloud Volumes, a Licensing page appears. If not, the Licensing page does not appear and you should skip the Licensing steps and enter networking information on the Networking page instead.

The NetApp license files use the following format:

NLF<serialnumber>.txt

1. If you already have obtained license files, click **Browse** to locate them.
Select both licenses and click **Choose** so they can be uploaded.
2. If you have not obtained license files, complete the following to obtain or retrieve them:
 - a. Serial number information is provided in an email after ordering software. Go to the [NetApp Support Site](#), click **Products** > **Software Licenses**, and enter product and serial number.
 - b. Return to the Hybrid Cloud Control Licensing page, click the link to the NetApp License File Generator, supply your password, select “ONTAP Select-Premium” as the product line, and supply the product serial number that you obtained from the NetApp Support Site.

Enable Cloud Services



Step 4 - Licensing

Activating Cloud Volumes requires two license files. [Obtain your license files at the NetApp License Generator.](#)

.....l.txt, !.....l.txt (1.95 KB)

100%

Files uploaded successfully

✓ Your license files are valid.

BackContinue

- c. Acknowledge the Global Data Privacy Policy and click **Submit**.
 - d. Download the license files either directly from the NetApp License File Generator or from the email.
 - e. Do this twice for the two licenses, one for each of the HA clusters.
 - f. You can now upload the license files. In the Licensing page, click **Browse** to locate both license files that you downloaded. Select both licenses and click **Choose** to upload them.
3. Click **Continue**.

Select networking options

1. On the Networking page, review the hover text for each of the following and configure networking information:

- **NetApp Kubernetes Service Management Network:** Select the vSphere distributed port group to use for management traffic for the NetApp Kubernetes Service service cluster. This network requires outbound Internet access.
- **NetApp Kubernetes Service Workload Network:** Select the vSphere distributed port group to use for management traffic for the NetApp Kubernetes Service user clusters, on which you place your applications. This network requires outbound Internet access.
- **NetApp Kubernetes Service Data Network:** Select the vSphere distributed port group to use for persistent volume data traffic for the NetApp Kubernetes Service user clusters.

2. If you enabled Cloud Volumes on the Services page, the following additional fields appear:

- **Cloud Volumes Management Network:** Enter the IP addresses for managing the Cloud Volumes deployment VM and its deployed nodes. These IP addresses are used during the installation to configure Cloud Volumes enablement.
- **Cloud Volumes Cluster Network:** Enter network information used by the cluster nodes used by Cloud Volumes deployment to communicate with each other.
- **Cloud Volumes Storage Network:** Enter network information to serve data from Cloud Volumes on NetApp HCI. This will become the network from which you access provisioned cloud volumes.

Enable Cloud Services



Step 5 - Define Network Settings

Define the network settings you want your NetApp cloud services to use.

NetApp Kubernetes Service Management Network ?

Management Network Port Group	Note: The selected port group must have a DHCP server configured.	Refresh
NetApp HCI VDS 01-HCI_Internal_NKS_Management		

NetApp Kubernetes Service Workload Network ?

Workload Network Port Group	Note: The selected port group must have a DHCP server configured.	Refresh
NetApp HCI VDS 01-HCI_Internal_NKS_Workload		

NetApp Kubernetes Service Data Network ?

Data Network Port Group	Note: The selected port group must have a DHCP server configured.	Refresh
NetApp HCI VDS 01-HCI_Internal_NKS_Data		

Cloud Volumes Management Network ?

4 Addresses Required

VLAN ID	Subnet ?	Default Gateway	Starting IP Address	Ending IP Address
Untagged Network	xxx.xxx.xxx.xxx/nn	xxx.xxx.xxx.xxx	xxx.xxx.xxx.xxx	

Cloud Volumes Cluster Network ?

VLAN ID	This network will be created using Automatic Private IP Addressing.
Untagged Network	

Cloud Volumes Data Network ?

1 Address Required

VLAN ID	Subnet ?	Default Gateway	Starting IP Address	Ending IP Address
Untagged Network	xxx.xxx.xxx.xxx/nn	xxx.xxx.xxx.xxx	xxx.xxx.xxx.xxx	

3. Click **Continue**.

4. On the Review page, review your choices by expanding each option. and click **Continue**.

Result

NetApp HCI cloud services are enabled and the NetApp Hybrid Cloud Control opening page reappears.

Click the cloud icon to see the number of services enabled.

The process can take up to 30 minutes for NKS and 60 minutes for NKS along with Cloud Volumes on

NetApp HCI.

NetApp HCI uses the NetApp Kubernetes Service to create a service cluster, which is a Kubernetes cluster that consists of four VMs (one Kubernetes master node and three Kubernetes worker compute nodes).

After you finish

Next, continue with [Creating Kubernetes clusters](#) on your NetApp HCI system by using the NetApp Kubernetes Service.

Or, to create cloud volumes, create custom data management workflows, and manage data across volumes, use NetApp Fabric Orchestrator. See [Managing data in NetApp Cloud Volumes](#).

Top Link

- [Deploying cloud services on NetApp HCI overview](#)

Find more information

- [NetApp Cloud Central](#)
- [NetApp Cloud Documentation](#)

Enable Cloud Volumes on NetApp HCI after NKS is already enabled

After you enable NetApp Kubernetes Service (NKS) on NetApp HCI, you might want to later enable the Cloud Volumes on NetApp HCI.

Enabling cloud services is performed using the NetApp Hybrid Cloud Control.

About this task

This lets you use Cloud Volumes on NetApp HCI on your on-premises private cloud.

A NetApp Hybrid Cloud Control wizard takes you through the following tasks:

- Select the Cloud Volumes service you want to enable.
- Enable licenses using a link to the NetApp License Generator.
- Configure networking.

Sign in to NetApp Cloud Central

1. Access NetApp Hybrid Cloud Control (HCC) by opening a web browser and browsing to the IP address of the management node:

"https://<_ManagementNodeIP_>"




For details, see [Accessing NetApp Hybrid Cloud Control](#).

2. Click the **Cloud** icon.

An outline of a cloud indicates that no services have been enabled. A filled in cloud indicates that some services have been enabled. This image shows that NKS has already been enabled, but Cloud Volumes has not yet been enabled.

3. In the Cloud Services popup, review the services that are available.

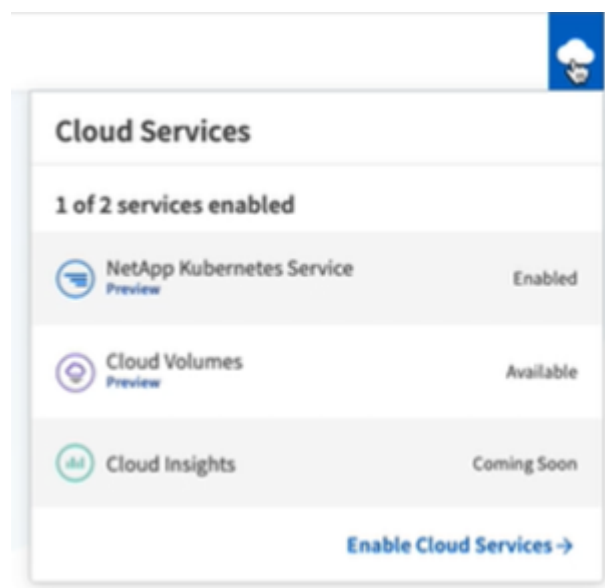

4. Click **Enable cloud services**.

Select the Cloud Services you want to enable

SERVICES and INFORMATION ARE PROVIDED as a TECHNOLOGY PREVIEW. You might see a different set of services than those listed here.

1. On the Services page, select the services that you want to enable.
 - **NetApp Kubernetes Service:** This is enabled already. You must use NetApp Kubernetes Service, a SaaS platform that enables you to deploy a Kubernetes cluster in the cloud with the major cloud providers and also with a NetApp private cloud. This is required to enable cloud services on NetApp HCI. This service is installed as a VM on a NetApp HCI compute node.
 - **Cloud Volumes:** To install Cloud Volumes on NetApp HCI, select this service. This service offers an on-demand shared file systems feature on your premises. The Cloud Volumes option will enable Data Fabric replication to and from public clouds.

- **Cloud Insights:** This option will enable you to monitor cloud services on NetApp HCI. *Coming soon.*

2. Click **Continue**.

Enter license information


If you enabled Cloud Volumes, a Licensing page appears.

The NetApp license files use the following format:


NLF<serialnumber>.txt


1. If you already have obtained license files, click **Browse** to locate them.
Select both licenses and click **Choose** so they can be uploaded.
2. If you have not obtained license files, complete the following to obtain or retrieve them:
 - a. Serial number information is provided in an email after ordering software. Go to the [NetApp Support Site](#), click **Products > Software Licenses**, and enter product and serial number.
 - b. Return to the Hybrid Cloud Control Licensing page, click the link to the NetApp License File Generator, supply your password, select “ONTAP Select-Premium” as the product line, and supply the product serial number that you obtained from the NetApp Support Site.







Enable Cloud Services


Services


Licensing


Networking


Review

Step 2 - Licensing

Activating Cloud Volumes requires two license files. [Obtain your license files at the NetApp License Generator.](#)

Select your two license files.

- c. Acknowledge the Global Data Privacy Policy and click **Submit**.
- d. Download the license files either directly from the NetApp License File Generator or from the email.
- e. Do this twice for the two licenses, one for each of the HA clusters.

f. You can now upload the license files. In the Licensing page, click **Browse** to locate both license files that you downloaded. Select both licenses and click **Choose** to upload them.

3. Click **Continue**.

Select networking options

1. If you enabled Cloud Volumes on the Services page, the following additional fields appear:

- **Cloud Volumes Management Network:** Enter the IP addresses for managing the Cloud Volumes deployment VM and its deployed nodes. These IP addresses are used during the installation to configure Cloud Volumes enablement.
- **Cloud Volumes Cluster Network:** Enter network information used by the cluster nodes used by Cloud Volumes deployment to communicate with each other.
- **Cloud Volumes Storage Network:** Enter network information to serve data from Cloud Volumes on NetApp HCI. This will become the network from which you access provisioned cloud volumes.

Enable Cloud Services



Step 3 - Define Network Settings

Define the network settings you want your NetApp cloud services to use.

Cloud Volumes Management Network ?

4 Addresses Required

VLAN ID	Subnet ?	Default Gateway	Starting IP Address	Ending IP Address
Untagged Network	xxx.xxx.xxx.xxx/nn	xxx.xxx.xxx.xxx	xxx.xxx.xxx.xxx	

Cloud Volumes Cluster Network ?

VLAN ID
Untagged Network

This network will be created using Automatic Private IP Addressing.

Cloud Volumes Data Network ?

1 Address Required

VLAN ID	Subnet ?	Default Gateway	Starting IP Address	Ending IP Address
Untagged Network	xxx.xxx.xxx.xxx/nn	xxx.xxx.xxx.xxx	xxx.xxx.xxx.xxx	

Back

Continue

2. Click **Continue**.
3. On the Review page, review your choices by expanding each option. and click **Continue**.

Result

Cloud Volumes on NetApp HCI are enabled and the NetApp Hybrid Cloud Control opening page reappears.

Click the cloud icon to see the number of services enabled.

The process can take up to 30 minutes for Cloud Volumes on NetApp HCI.

After you finish

To create cloud volumes, create custom data management workflows, and manage data across volumes, use NetApp Fabric Orchestrator. See [Managing data in NetApp Cloud Volumes](#).

Top Link

- [Deploying cloud services on NetApp HCI overview](#)

Find more information

- [NetApp Cloud Central](#)
- [NetApp Cloud Documentation](#)

Copyright Information

Copyright © 2019–2020 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system-without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

Trademark Information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.