

EVALOGIK™

ZW97 Smart Plug(2 Channel) Manual



Federal Communications Commission (FCC) Statement

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

IC Caution:


This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

DECLARATION DE CONFORMITE D'INDUSTRIE CANADA

Ce périphérique a été testé et reconnu conforme aux limites spécifiées dans RSS-210.

Son utilisation est soumise aux deux conditions suivantes :

- (1) il ne doit pas provoquer d'interférences gênantes et
- (2) il doit tolérer les interférences reçues, notamment celles susceptibles d'en perturber le fonctionnement.

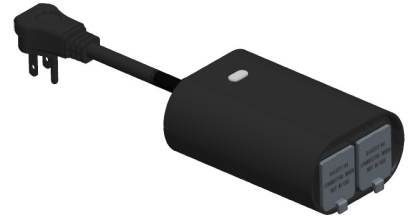

Outdoor Smart Plug(2-Channel)

WARRANTY

Evalogik Products warrants this product to be free from manufacturing defects for a period of two years from the original date of consumer purchase. This warranty is limited to the repair or replacement of this product only and does not extend to consequential or incidental damage to other products that may be used with this product.

This warranty is in lieu of all other warranties, expressed or implied. Some states do not allow limitations on how long an implied warranty lasts or permit the exclusion or limitation of incidental or consequential damage, so the above limitations may not apply to you.

This warranty gives you specific rights, and you may also have other rights which vary from state to state. If the unit should prove defective within the warranty period.

SPECIFICATIONS

Model: ZW97

Power: 120 VAC, 60 Hz.

Signal (Frequency): 908.42 MHz.

Maximum load for outlet 15A, 1200W Resistive

Maximum load for the Z-Wave controlled outlet:

600W Incandescent, ½ HP Motor or 1200W Resistive

Range: Up to 100 feet line of sight between the Wireless Controller and the closest Z-Wave receiver module.

Operating Temperature Range: 32-104° F (0-40° C)

For Outdoor use

Specifications subject to change without notice due to continuing product improvement

Website: www.ishowlights.com

WARNING

RISK OF FIRE

RISK OF ELECTRICAL SHOCK

RISK OF BURNS

CONTROLLING APPLIANCES:

EXERCISE EXTREME CAUTION WHEN USING Z-WAVE DEVICES TO CONTROL APPLIANCES. OPERATION OF THE Z-WAVE DEVICE MAY BE IN A DIFFERENT ROOM THAN THE CONTROLLED APPLIANCE, ALSO AN UNINTENTIONAL ACTIVATION MAY OCCUR IF THE WRONG BUTTON ON THE REMOTE IS PRESSED. Z-WAVE DEVICES MAY AUTOMATICALLY BE POWERED ON DUE TO TIMED EVENT PROGRAMMING. DEPENDING UPON THE APPLIANCE, THESE UNATTENDED OR UNINTENTIONAL OPERATIONS COULD POSSIBLY RESULT IN A HAZARDOUS CONDITION. FOR THESE REASONS, WE RECOMMEND DO NOT RETURN THIS PRODUCT TO THE STORE THE FOLLOWING:

DO NOT USE Z-WAVE DEVICES TO CONTROL ELECTRIC HEATERS OR ANY OTHER APPLIANCES WHICH MAY PRESENT A HAZARDOUS CONDITION DUE TO UNATTENDED OR UNINTENTIONAL OR AUTOMATIC POWER ON CONTROL.

Introduction:


The ZW97 is a Z-Wave enabled device and is fully compatible with any Z-Wave Plus enabled network. This product can be operated in any Z-Wave network with other Z-Wave certified devices from other manufacturers. Each module is designed to act as a repeater, which will re-transmit a radio frequency (RF) signal by routing the signal around obstacles and radio dead spots to ensure that the signal is received at its intended destination. ZW97 is a security enabled Z-Wave plus device. A security Enabled Z-Wave Plus Controller must be used in order to fully utilize the product.

Key Features:

- Remote ON/OFF control via the Z-Wave controller
- Manual ON/OFF control with the front panel push button
- Support Association Group and Auto Report switch status
- Over temperature protection
- Support firmware upgrades via Over-the-air (need Gateways support)

Product Overview:

- A AC plug
- B Z-Wave controlled outlet-1
- C Z-Wave controlled outlet-2
- D ON/OFF/PROG Push button
- E Status LED

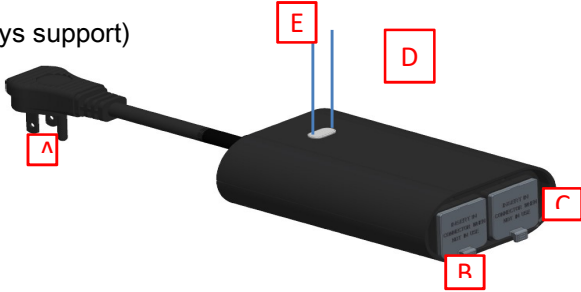

Z-Wave Remote Control

ADD or Remove the ZW97 from the existing Z-Wave home control network with your primary controller.

- Refer to your primary controller instructions to process the inclusion / exclusion setup procedure.
- When prompted by your primary controller, click the PROG button five times in one second.

Include ZW97 to/from a Z-Wave Gateway with supporting Security. The ZW97 can support the Primary Controller that implemented the security.

Notice: Including a node ID allocated by Z-WaveTM Controller means “Add” or “Inclusion”. Excluding a node ID allocated by Z-WaveTM Controller means “Remove” or “Exclusion”.

Z-Wave MULTI_CHANNEL

ZW97 is multi channel device , It has two endpoints. Outlet-1 is Endpoint1, outlet-2 is Endpoint2.

ZW97 Endpoint1 / Endpoint2 Device Type

Generic Device Class: GENERIC_TYPE_SWITCH_BINARY

Specific Device Class: SPECIFIC_TYPE_POWER_SWITCH_BINARY

| | Endpoint1 | Endpoint2 |
|----------------|---|---|
| Manual Control | click the ON/OFF button two times | click the ON/OFF button three times |
| Z-wave Control | COMMAND_CLASS:COMMAND_CLASS_BASIC COMMAND: BASIC_SET Properties2:001 Value=00(OFF),Value=FF(ON) | COMMAND_CLASS:COMMAND_CLASS_BASIC COMMAND: BASIC_SET Properties2:002 Value=01(OFF),Value=FF(ON) |
| Report | COMMAND_CLASS:COMMAND_CLASS_SWITCH_BINARY COMMAND: SWITCH_BINARY_REPORT Properties2:001 Value=01(OFF),Value=FF(ON) | COMMAND_CLASS:COMMAND_CLASS_SWITCH_BINARY COMMAND: SWITCH_BINARY_REPORT Properties2:002 Value=02(OFF),Value=FF(ON) |

z-wave protocol Command Class Node Info

COMMAND_CLASS_ZWAVEPLUS_INFO,
COMMAND_CLASS_SWITCH_BINARY,
COMMAND_CLASS_ASSOCIATION,
COMMAND_CLASS_MULTI_CHANNEL_ASSOCIATION_V2,
COMMAND_CLASS_ASSOCIATION_GRP_INFO,
COMMAND_CLASS_TRANSPORT_SERVICE_V2,
COMMAND_CLASS_VERSION,
COMMAND_CLASS_MANUFACTURER_SPECIFIC,
COMMAND_CLASS_POWERLEVEL,
COMMAND_CLASS_CONFIGURATION,
COMMAND_CLASS_NOTIFICATION_V8,
COMMAND_CLASS_SECURITY,
COMMAND_CLASS_SECURITY_2,
COMMAND_CLASS_MULTI_CHANNEL_V4,
COMMAND_CLASS_SUPERVISION
COMMAND_CLASS_FIRMWARE_UPDATE_MD_V2

The Below listed Command Class are all supported the Security S2

COMMAND_CLASS_VERSION,
COMMAND_CLASS_SWITCH_BINARY,
COMMAND_CLASS_ASSOCIATION,
COMMAND_CLASS_MULTI_CHANNEL_ASSOCIATION_V2,
COMMAND_CLASS_ASSOCIATION_GRP_INFO,
COMMAND_CLASS_MULTI_CHANNEL_V3,
COMMAND_CLASS_MANUFACTURER_SPECIFIC,
COMMAND_CLASS_POWERLEVEL,
COMMAND_CLASS_CONFIGURATION,
COMMAND_CLASS_NOTIFICATION_V8,
COMMAND_CLASS_FIRMWARE_UPDATE_MD_V2

ZW97 protocol Endpoint 1

Full Command Class Node Info

COMMAND_CLASS_ZWAVEPLUS_INFO,
COMMAND_CLASS_ASSOCIATION,
COMMAND_CLASS_ASSOCIATION_GRP_INFO,
COMMAND_CLASS_MULTI_CHANNEL_ASSOCIATION_V2,
COMMAND_CLASS_SWITCH_BINARY,
COMMAND_CLASS_SUPERVISION,
COMMAND_CLASS_SECURITY,
COMMAND_CLASS_SECURITY_2

The Below listed Command Class are all supported the Security S2

COMMAND_CLASS_ASSOCIATION,
COMMAND_CLASS_ASSOCIATION_GRP_INFO,
COMMAND_CLASS_MULTI_CHANNEL_ASSOCIATION_V2,
COMMAND_CLASS_SWITCH_BINARY,

ZW97 protocol Endpoint 2

Full Command Class Node Info

COMMAND_CLASS_ZWAVEPLUS_INFO,
COMMAND_CLASS_ASSOCIATION,
COMMAND_CLASS_ASSOCIATION_GRP_INFO,
COMMAND_CLASS_MULTI_CHANNEL_ASSOCIATION_V2,
COMMAND_CLASS_SWITCH_BINARY,
COMMAND_CLASS_SUPERVISION,
COMMAND_CLASS_SECURITY,
COMMAND_CLASS_SECURITY_2

The Below listed Command Class are all supported the Security S2

COMMAND_CLASS_ASSOCIATION,
COMMAND_CLASS_ASSOCIATION_GRP_INFO,
COMMAND_CLASS_MULTI_CHANNEL_ASSOCIATION_V2,
COMMAND_CLASS_SWITCH_BINARY,

Z-Wave Configuration Parameters

You may use the below configuration parameters to change settings of the corresponding functionality.

1 : Status LED Configuration

| | | | |
|----------------------|-------------|--------------------|--------------------|
| Paramter No: 1(0x01) | Size:1 Byte | Value: 00(default) | outlet on,led on. |
| | | Value: 01 | outlet on,led off. |
| | | Value: 02 | led no work. |

2 : Count Down Configuration(Turn off the output by time)

| | | | |
|---|-------------|--------------|---|
| Paramter No: 2(0x02) | Size:2 Byte | Value: xx xx | Turn off left outlet (Turn off Endpoint1 outlet) |
| Value Scope :0----36000S (default:00 00 no timer) | | | |
| Paramter No: 3(0x03) | Size:2 Byte | Value: xx xx | Turn off right outlet (Turn off Endpoint2 outlet) |
| Value Scope :0----36000S (default:00 00 no timer) | | | |

Support for Association Groups

ZW97 supports 3 association groups. A maximum of 5 node ID's (nonmulti-channel devices) can be assigned to these association groups.

| Root Device | Endpoint1 | Endpoint2 |
|----------------------------------|---------------------------|---------------------------|
| Group 1:Lifeline | Group 1:Lifeline | Group 1:Lifeline |
| Group 2:Basic set From Endpoint1 | Group 2:Basic set command | Group 2:Basic set command |
| Group 3:Basic set From Endpoint2 | | |

Association group_1:Z-Wave Plus Lifeline

Association group_1 is default to associate with the primary controller (Gateway/Hub/Controller) for ZW97 Status change report,

- 1. ZW97 will trigger AUTO report function if the Switch status had been changed.
- 2. When ZW97 high temperature alarm sends out notifications or releases notifications, ZW97 will auto report

Association group_2:basic set command

When the output of the ZW97 Enpoint1 socket is changed, On (0xFF) or Off (0x00). The ZW97 will automatically send out a related command. On (0xFF) or Off (0x00) to its associated group.

Association group_3:basic set command

When the output of the ZW97 Enpoint2 socket is changed, On (0xFF) or Off (0x00). The ZW97 will automatically send out a related command. On (0xFF) or Off (0x00) to its associated group.

Support for Over temperature protection

ZW97 support Over temperature protection,When the temperature is greater than 105 degrees Celsius, the Heat Alarm signal is sent out

Notification Type : Heat Alarm 0x04 . Event :Overheat detected 0x02

Restoring Factory Defaults

ZW97 is removed from the network and will be restored to the factory setting

All Configuration Parameters values and Association information will be restored to factory default settings and excluded from the network.

MANUAL RESET

- Power off ZW97
- keep holding the PROG button
- Power on,Press and keep holding the PROG button for no less than 10 seconds.

Remark : All the setting and data will be permanently deleted.

Please use this procedure only when the network primary controller is missing or otherwise inoperable.