



Elektrobit

# EB tresos<sup>®</sup> AutoCore Generic 8 CAN Stack documentation

product release 8.5.1





Elektrobit Automotive GmbH  
Am Wolfsmantel 46  
91058 Erlangen, Germany  
Phone: +49 9131 7701 0  
Fax: +49 9131 7701 6333  
Email: [info.automotive@elektrobit.com](mailto:info.automotive@elektrobit.com)

## Technical support

### Europe

Phone: +49 9131 7701 6060

### Japan

Phone: +81 3 5577 6110

### USA

Phone: +1 888 346 3813

## Support URL

<https://www.elektrobit.com/support>

## Legal notice

Confidential and proprietary information

ALL RIGHTS RESERVED. No part of this publication may be copied in any form, by photocopy, microfilm, retrieval system, or by any other means now known or hereafter invented without the prior written permission of Elektrobit Automotive GmbH.

ProOSEK®, tresos®, and street director® are registered trademarks of Elektrobit Automotive GmbH.

All brand names, trademarks and registered trademarks are property of their rightful owners and are used only for description.

Copyright 2018, Elektrobit Automotive GmbH.

# Table of Contents

1. Overview of EB tresos AutoCore Generic 8 CAN Stack documentation .....	13
2. Supported features .....	14
2.1. Overview .....	14
2.2. Supported CanNm features .....	14
3. ACG8 CAN Stack release notes .....	16
3.1. Overview .....	16
3.2. Scope of the release .....	16
3.2.1. Configuration tool .....	16
3.2.2. AUTOSAR modules .....	16
3.2.3. EB (Elektrobit) modules .....	17
3.2.4. MCAL modules and EB tresos AutoCore OS .....	17
3.3. Module release notes .....	17
3.3.1. CanAs module release notes .....	17
3.3.1.1. Change log .....	17
3.3.1.2. New features .....	22
3.3.1.3. EB-specific enhancements .....	22
3.3.1.4. Deviations .....	22
3.3.1.5. Limitations .....	23
3.3.2. CanIf module release notes .....	23
3.3.2.1. Change log .....	24
3.3.2.2. New features .....	30
3.3.2.3. EB-specific enhancements .....	30
3.3.2.4. Deviations .....	33
3.3.2.5. Limitations .....	40
3.3.3. CanNm module release notes .....	42
3.3.3.1. Change log .....	42
3.3.3.2. New features .....	49
3.3.3.3. EB-specific enhancements .....	50
3.3.3.4. Deviations .....	51
3.3.3.5. Limitations .....	56
3.3.4. CanSM module release notes .....	56
3.3.4.1. Change log .....	56
3.3.4.2. New features .....	61
3.3.4.3. EB-specific enhancements .....	62
3.3.4.4. Deviations .....	64
3.3.4.5. Limitations .....	67
3.3.5. CanTp module release notes .....	67
3.3.5.1. Change log .....	68
3.3.5.2. New features .....	75

3.3.5.3. EB-specific enhancements .....	75
3.3.5.4. Deviations .....	76
3.3.5.5. Limitations .....	80
4. ACG8 CAN Stack user's guide .....	82
4.1. Overview .....	82
4.2. Background information .....	82
4.2.1. Communication in AUTOSAR CAN .....	82
4.3. CAN communication stack dependencies .....	83
4.3.1. Module dependencies .....	83
4.4. CAN FD .....	84
4.4.1. Overview .....	84
4.4.2. Background information .....	84
4.4.3. How to configure .....	84
4.5. Network management in AUTOSAR CAN stack .....	85
4.6. Configuring HOH assignment and bit timing in Can and CanIf .....	85
4.6.1. Overview .....	85
4.6.2. Background information .....	86
4.6.2.1. System and local configuration parameters .....	86
4.6.2.2. Necessary parameters .....	87
4.6.2.2.1. Necessary parameters for PDU to HOH assignment .....	88
4.6.2.2.2. Necessary parameters for bit timing configuration .....	90
4.6.2.3. Resource files .....	91
4.6.2.3.1. Missing resource file .....	93
4.6.2.4. The CAN Buffer Assignment Editor GUI .....	94
4.6.2.4.1. The PDU grid .....	96
4.6.2.4.2. The Hardware Object Handles grid .....	97
4.6.2.5. Auto assignment .....	100
4.6.2.6. The CAN Bit Timing Editor GUI .....	101
4.6.2.6.1. CAN Bit Timing grid .....	103
4.6.2.6.2. CAN FD Bit Timing grid .....	104
4.6.3. Using the CAN Buffer Assignment Editor .....	105
4.6.3.1. Clearing HOH assignment of PDUs .....	107
4.6.3.2. Clearing PDU assignment of HOHs .....	107
4.6.3.3. Optimizing filter mask and CAN-ID parameters .....	107
4.6.3.4. Assigning PDUs to an HOH .....	107
4.6.3.5. Automatically assigning PDUs to HOHs .....	108
4.6.3.6. Writing the assignment back to Can and CanIf .....	109
4.6.4. Using the CAN Bit Timing Editor .....	110
4.6.4.1. Configuring CanCpuClockRef .....	111
4.6.4.2. Configuring the CAN and CAN FD bit timing parameters .....	111
4.6.4.3. Writing the bit timing configuration back to Can .....	112
5. ACG8 CAN Stack module references .....	113

5.1. Overview .....	113
5.1.1. Notation in EB module references .....	113
5.1.1.1. Default value of configuration parameters .....	113
5.1.1.2. Range information of configuration parameters .....	113
5.2. CanIf .....	114
5.2.1. Configuration parameters .....	114
5.2.1.1. CanIfCtrlDrvCfg .....	115
5.2.1.2. CanIfCtrlCfg .....	117
5.2.1.3. CanIfDispatchCfg .....	119
5.2.1.4. CanIfInitCfg .....	127
5.2.1.5. CanIfBufferCfg .....	128
5.2.1.6. CanIfInitHohCfg .....	129
5.2.1.7. CanIfHrhCfg .....	130
5.2.1.8. CanIfHrhRangeCfg .....	132
5.2.1.9. CanIfHthCfg .....	133
5.2.1.10. CanIfRxPduCfg .....	134
5.2.1.11. CanIfRxPduCanIdRange .....	141
5.2.1.12. CanIfTTxRxFrameTriggering .....	142
5.2.1.13. CanIfTxPduCfg .....	142
5.2.1.14. CanIfTTTxFrameTriggering .....	148
5.2.1.15. CanIfPrivateCfg .....	149
5.2.1.16. CanIfTTGeneral .....	151
5.2.1.17. CanIfPublicCfg .....	151
5.2.1.18. CanIfRxProcessing .....	168
5.2.1.19. CanIfTxProcessing .....	170
5.2.1.20. CanIfTrcvDrvCfg .....	170
5.2.1.21. CanIfTrcvCfg .....	171
5.2.1.22. CanIfUpperLayerConfig .....	173
5.2.1.23. CommonPublishedInformation .....	176
5.2.1.24. PublishedInformation .....	179
5.2.2. Recommended configurations .....	180
5.2.2.1. CanIfRecConfigurationDflt .....	180
5.2.2.1.1. CAN_NM .....	180
5.2.2.1.2. CAN_TP .....	181
5.2.2.1.3. CAN_TSYN .....	181
5.2.2.1.4. PDUR .....	181
5.2.3. Application programming interface (API) .....	182
5.2.3.1. Type definitions .....	182
5.2.3.1.1. CanIf_ConfigType .....	182
5.2.3.1.2. CanIf_ControllerModeType .....	182
5.2.3.1.3. CanIf_NotifStatusType .....	182
5.2.3.1.4. CanIf_PduModeType .....	183

5.2.3.2. Macro constants .....	183
5.2.3.2.1. CANIF_AR_RELEASE_MAJOR_VERSION .....	183
5.2.3.2.2. CANIF_AR_RELEASE_MINOR_VERSION .....	183
5.2.3.2.3. CANIF_AR_RELEASE_REVISION_VERSION .....	183
5.2.3.2.4. CANIF_E_INVALID_RXPDUID .....	184
5.2.3.2.5. CANIF_E_INVALID_TXPDUID .....	184
5.2.3.2.6. CANIF_E_NOK_NOSUPPORT .....	184
5.2.3.2.7. CANIF_E_PARAM_CANID .....	184
5.2.3.2.8. CANIF_E_PARAM_CONTROLLER .....	184
5.2.3.2.9. CANIF_E_PARAM_CONTROLLERID .....	184
5.2.3.2.10. CANIF_E_PARAM_CTRLMODE .....	184
5.2.3.2.11. CANIF_E_PARAM_DLC .....	185
5.2.3.2.12. CANIF_E_PARAM_HRH .....	185
5.2.3.2.13. CANIF_E_PARAM_LPDU .....	185
5.2.3.2.14. CANIF_E_PARAM_PDU_MODE .....	185
5.2.3.2.15. CANIF_E_PARAM_POINTER .....	185
5.2.3.2.16. CANIF_E_PARAM_TRCV .....	185
5.2.3.2.17. CANIF_E_PARAM_TRCVMODE .....	186
5.2.3.2.18. CANIF_E_PARAM_TRCVWAKEUPMODE .....	186
5.2.3.2.19. CANIF_E_PARAM_WAKEUPSOURCE .....	186
5.2.3.2.20. CANIF_E_UNINIT .....	186
5.2.3.2.21. CANIF_MODULE_ID .....	186
5.2.3.2.22. CANIF_SID_CANCELTRANSMIT .....	186
5.2.3.2.23. CANIF_SID_CANCELTXCONFIRMATION .....	186
5.2.3.2.24. CANIF_SID_CHECKTRCVWAKEFLAG .....	187
5.2.3.2.25. CANIF_SID_CHECKTRCVWAKEFLAGIND .....	187
5.2.3.2.26. CANIF_SID_CHECKVALIDATION .....	187
5.2.3.2.27. CANIF_SID_CHECKWAKEUP .....	187
5.2.3.2.28. CANIF_SID_CLEARTRCVWUFFLAG .....	187
5.2.3.2.29. CANIF_SID_CLEARTRCVWUFFLAGIND .....	187
5.2.3.2.30. CANIF_SID_CONFIRMPNAVAILABILITY .....	187
5.2.3.2.31. CANIF_SID_CONTROLLERBUSOFF .....	188
5.2.3.2.32. CANIF_SID_CONTROLLERMODEIND .....	188
5.2.3.2.33. CANIF_SID_GETCONTROLLERMODE .....	188
5.2.3.2.34. CANIF_SID_GETPDUMODE .....	188
5.2.3.2.35. CANIF_SID_GETTRANSCIEVERMODE .....	188
5.2.3.2.36. CANIF_SID_GETTRCVWAKEUPREASON .....	188
5.2.3.2.37. CANIF_SID_GETTXCONFIRMSTATE .....	188
5.2.3.2.38. CANIF_SID_GETVERSIONINFO .....	189
5.2.3.2.39. CANIF_SID_INIT .....	189
5.2.3.2.40. CANIF_SID_READRXNOTIFSTATUS .....	189
5.2.3.2.41. CANIF_SID_READRXPDUDATA .....	189

5.2.3.2.42. CANIF_SID_READTXNOTIFSTATUS .....	189
5.2.3.2.43. CANIF_SID_RXINDICATION .....	189
5.2.3.2.44. CANIF_SID_SETBAUDRATE .....	189
5.2.3.2.45. CANIF_SID_SETCONTROLLERMODE .....	190
5.2.3.2.46. CANIF_SID_SETDYNAMICCTXID .....	190
5.2.3.2.47. CANIF_SID_SETPDUMODE .....	190
5.2.3.2.48. CANIF_SID_SETTRANSCIEVERMODE .....	190
5.2.3.2.49. CANIF_SID_SETTRCVWAKEUPMODE .....	190
5.2.3.2.50. CANIF_SID_TRANSCIEVERMODEIND .....	190
5.2.3.2.51. CANIF_SID_TRANSMIT .....	190
5.2.3.2.52. CANIF_SID_TXCONFIRMATION .....	191
5.2.3.2.53. CANIF_SW_MAJOR_VERSION .....	191
5.2.3.2.54. CANIF_SW_MINOR_VERSION .....	191
5.2.3.2.55. CANIF_SW_PATCH_VERSION .....	191
5.2.3.2.56. CANIF_VENDOR_ID .....	191
5.2.3.3. Objects .....	191
5.2.3.3.1. CanIf_InitCfg_Xxx .....	191
5.2.3.4. Functions .....	192
5.2.3.4.1. CanIf_CancelTransmit .....	192
5.2.3.4.2. CanIf_CancelTxConfirmation .....	192
5.2.3.4.3. CanIf_CheckTrcvWakeFlag .....	193
5.2.3.4.4. CanIf_CheckTrcvWakeFlagIndication .....	193
5.2.3.4.5. CanIf_CheckValidation .....	193
5.2.3.4.6. CanIf_CheckWakeup .....	194
5.2.3.4.7. CanIf_ClearTrcvWufFlag .....	194
5.2.3.4.8. CanIf_ClearTrcvWufFlagIndication .....	195
5.2.3.4.9. CanIf_ConfirmPnAvailability .....	195
5.2.3.4.10. CanIf_ControllerBusOff .....	195
5.2.3.4.11. CanIf_ControllerModeIndication .....	196
5.2.3.4.12. CanIf_GetControllerMode .....	196
5.2.3.4.13. CanIf_GetPduMode .....	197
5.2.3.4.14. CanIf_GetTrcvMode .....	197
5.2.3.4.15. CanIf_GetTrcvWakeupReason .....	198
5.2.3.4.16. CanIf_GetTxConfirmationState .....	198
5.2.3.4.17. CanIf_GetVersionInfo .....	199
5.2.3.4.18. CanIf_Init .....	199
5.2.3.4.19. CanIf_IsValidConfig .....	200
5.2.3.4.20. CanIf_ReadRxNotifStatus .....	200
5.2.3.4.21. CanIf_ReadRxPduData .....	201
5.2.3.4.22. CanIf_ReadTxNotifStatus .....	201
5.2.3.4.23. CanIf_RxIndication .....	202
5.2.3.4.24. CanIf_SetBaudrate .....	203

5.2.3.4.25. CanIf_SetControllerMode .....	203
5.2.3.4.26. CanIf_SetDynamicTxId .....	204
5.2.3.4.27. CanIf_SetPduMode .....	204
5.2.3.4.28. CanIf_SetTrcvMode .....	205
5.2.3.4.29. CanIf_SetTrcvWakeupMode .....	206
5.2.3.4.30. CanIf_Transmit .....	206
5.2.3.4.31. CanIf_TrvcModeIndication .....	207
5.2.3.4.32. CanIf_TxConfirmation .....	207
5.2.4. Integration notes .....	208
5.2.4.1. Exclusive areas .....	208
5.2.4.1.1. SCHM_CANIF_EXCLUSIVE_AREA_0 .....	208
5.2.4.2. Production errors .....	208
5.2.4.3. Memory mapping .....	208
5.2.4.4. Integration requirements .....	209
5.2.4.4.1. lim.CanIf.EB_INTREQ_CanIf_0001 .....	209
5.2.4.4.2. lim.CanIf.EB_INTREQ_CanIf_0002 .....	210
5.2.4.4.3. lim.CanIf.EB_INTREQ_CanIf_0003 .....	210
5.3. CanNm .....	210
5.3.1. Configuration parameters .....	211
5.3.1.1. CanNmGeneral .....	212
5.3.1.2. CanNmGlobalConfig .....	213
5.3.1.3. CanNmChannelConfig .....	222
5.3.1.4. CanNmRxPdu .....	237
5.3.1.5. CanNmTxPdu .....	238
5.3.1.6. CanNmUserDataTxPdu .....	238
5.3.1.7. CanNmUserDataRxPdu .....	239
5.3.1.8. CanNmPnInfo .....	239
5.3.1.9. CanNmPnFilterMaskByte .....	240
5.3.1.10. CanNmDefensiveProgramming .....	241
5.3.1.11. CommonPublishedInformation .....	244
5.3.1.12. PublishedInformation .....	247
5.3.2. Application programming interface (API) .....	248
5.3.2.1. Macro constants .....	248
5.3.2.1.1. CANNM_API_ID_RXINDICATION .....	248
5.3.2.1.2. CANNM_API_ID_TXCONFIRMATION .....	248
5.3.2.1.3. CANNM_AR_RELEASE_MAJOR_VERSION .....	248
5.3.2.1.4. CANNM_AR_RELEASE_MINOR_VERSION .....	248
5.3.2.1.5. CANNM_AR_RELEASE_REVISION_VERSION .....	249
5.3.2.1.6. CANNM_E_INIT_FAILED .....	249
5.3.2.1.7. CANNM_E_INVALID_CHANNEL .....	249
5.3.2.1.8. CANNM_E_INVALID_FUNCTION_ARG .....	249
5.3.2.1.9. CANNM_E_INVALID_PDUID .....	249



5.3.2.1.10. CANNM_E_NETWORK_TIMEOUT .....	249
5.3.2.1.11. CANNM_E_NET_START_IND .....	250
5.3.2.1.12. CANNM_E_NO_INIT .....	250
5.3.2.1.13. CANNM_E_NULL_POINTER .....	250
5.3.2.1.14. CANNM_INSTANCE_ID .....	250
5.3.2.1.15. CANNM_INVALID_PDU_INSTANCE_ID .....	250
5.3.2.1.16. CANNM_MODULE_ID .....	250
5.3.2.1.17. CANNM_PDU_BYTE_0 .....	250
5.3.2.1.18. CANNM_PDU_BYTE_1 .....	251
5.3.2.1.19. CANNM_PDU_OFF .....	251
5.3.2.1.20. CANNM_SERVID_CANNMTRANSMIT .....	251
5.3.2.1.21. CANNM_SERVID_CHECKREMOTESLEEPINDICATION .....	251
5.3.2.1.22. CANNM_SERVID_CONFIRMPNAVAILABILITY .....	251
5.3.2.1.23. CANNM_SERVID_DISABLECOMMUNICATION .....	252
5.3.2.1.24. CANNM_SERVID_ENABLECOMMUNICATION .....	252
5.3.2.1.25. CANNM_SERVID_GETLOCALNODEIDENTIFIER .....	252
5.3.2.1.26. CANNM_SERVID_GETNODEIDENTIFIER .....	252
5.3.2.1.27. CANNM_SERVID_GETPDUDATA .....	252
5.3.2.1.28. CANNM_SERVID_GETSTATE .....	252
5.3.2.1.29. CANNM_SERVID_GETUSERDATA .....	253
5.3.2.1.30. CANNM_SERVID_GETVERSIONINFO .....	253
5.3.2.1.31. CANNM_SERVID_INIT .....	253
5.3.2.1.32. CANNM_SERVID_MAINFUNCTION_X .....	253
5.3.2.1.33. CANNM_SERVID_NETWORKRELEASE .....	253
5.3.2.1.34. CANNM_SERVID_NETWORKREQUEST .....	254
5.3.2.1.35. CANNM_SERVID_PASSIVESTARTUP .....	254
5.3.2.1.36. CANNM_SERVID_REPEATMESSAGEREQUEST .....	254
5.3.2.1.37. CANNM_SERVID_REQUESTBUSSYNCHRONIZATION .....	254
5.3.2.1.38. CANNM_SERVID_RXINDICATION .....	254
5.3.2.1.39. CANNM_SERVID_SETUSERDATA .....	254
5.3.2.1.40. CANNM_SERVID_TXCONFIRMATION .....	255
5.3.2.1.41. CANNM_SERVID_TXTIMEOUTEXCEPTION .....	255
5.3.2.1.42. CANNM_SW_MAJOR_VERSION .....	255
5.3.2.1.43. CANNM_SW_MINOR_VERSION .....	255
5.3.2.1.44. CANNM_SW_PATCH_VERSION .....	255
5.3.2.1.45. CANNM_VENDOR_ID .....	255
5.3.2.2. Functions .....	256
5.3.2.2.1. CanNm_CheckRemoteSleepIndication .....	256
5.3.2.2.2. CanNm_ConfirmPnAvailability .....	256
5.3.2.2.3. CanNm_DisableCommunication .....	257
5.3.2.2.4. CanNm_EnableCommunication .....	257
5.3.2.2.5. CanNm_GetLocalNodeIdentifier .....	258

5.3.2.2.6. CanNm_GetNodeIdentifier .....	258
5.3.2.2.7. CanNm_GetPduData .....	259
5.3.2.2.8. CanNm_GetState .....	259
5.3.2.2.9. CanNm_GetUserData .....	260
5.3.2.2.10. CanNm_GetVersionInfo .....	260
5.3.2.2.11. CanNm_Init .....	261
5.3.2.2.12. CanNm_IsValidConfig .....	261
5.3.2.2.13. CanNm_MainFunction .....	262
5.3.2.2.14. CanNm_NetworkRelease .....	262
5.3.2.2.15. CanNm_NetworkRequest .....	262
5.3.2.2.16. CanNm_PassiveStartUp .....	263
5.3.2.2.17. CanNm_RepeatMessageRequest .....	263
5.3.2.2.18. CanNm_RequestBusSynchronization .....	264
5.3.2.2.19. CanNm_RxIndication .....	264
5.3.2.2.20. CanNm_SetUserData .....	265
5.3.2.2.21. CanNm_Transmit .....	265
5.3.2.2.22. CanNm_TxConfirmation .....	266
5.3.3. Integration notes .....	266
5.3.3.1. Exclusive areas .....	266
5.3.3.1.1. SCHM_CANNM_EXCLUSIVE_AREA_0 .....	266
5.3.3.2. Production errors .....	267
5.3.3.3. Memory mapping .....	267
5.3.3.4. Integration requirements .....	268
5.4. CanSM .....	268
5.4.1. Configuration parameters .....	268
5.4.1.1. CanSMDefensiveProgramming .....	269
5.4.1.2. CanSMConfiguration .....	272
5.4.1.3. CanSMManagerNetwork .....	274
5.4.1.4. CanSMController .....	279
5.4.1.5. CanSMDemEventParameterRefs .....	279
5.4.1.6. ReportToDem .....	280
5.4.1.7. CanSMGeneral .....	281
5.4.1.8. CommonPublishedInformation .....	286
5.4.1.9. PublishedInformation .....	289
5.4.2. Application programming interface (API) .....	289
5.4.2.1. Type definitions .....	289
5.4.2.1.1. CanSM_ConfigType .....	289
5.4.2.1.2. CanSM_NetworkModeStateType .....	290
5.4.2.2. Functions .....	290
5.4.2.2.1. CanSM_CheckTransceiverWakeFlagIndication .....	290
5.4.2.2.2. CanSM_ClearTrcvWufFlagIndication .....	290
5.4.2.2.3. CanSM_ConfirmPnAvailability .....	291

5.4.2.2.4. CanSM_ControllerBusOff .....	291
5.4.2.2.5. CanSM_ControllerModeIndication .....	291
5.4.2.2.6. CanSM_GetCurrentComMode .....	292
5.4.2.2.7. CanSM_GetVersionInfo .....	292
5.4.2.2.8. CanSM_Init .....	293
5.4.2.2.9. CanSM_MainFunction .....	293
5.4.2.2.10. CanSM_RequestComMode .....	293
5.4.2.2.11. CanSM_SetBaudrate .....	294
5.4.2.2.12. CanSM_TransceiverModeIndication .....	294
5.4.2.2.13. CanSM_TxTimeoutException .....	295
5.4.3. Integration notes .....	295
5.4.3.1. Exclusive areas .....	295
5.4.3.1.1. SCHM_CANSM_EXCLUSIVE_AREA_0 .....	295
5.4.3.2. Production errors .....	296
5.4.3.3. Memory mapping .....	296
5.4.3.4. Integration requirements .....	297
5.4.3.4.1. lim.CanSM.EB_INTREQ_CanSM_0001 .....	297
5.5. CanTp .....	297
5.5.1. Configuration parameters .....	297
5.5.1.1. CanTpDefensiveProgramming .....	298
5.5.1.2. CanTpGeneral .....	301
5.5.1.3. CanTpJumpTable .....	309
5.5.1.4. CanTpConfig .....	313
5.5.1.5. CanTpChannel .....	313
5.5.1.6. CanTpRxNSdu .....	316
5.5.1.7. CanTpNAe .....	321
5.5.1.8. CanTpNSa .....	322
5.5.1.9. CanTpNTa .....	322
5.5.1.10. CanTpRxNPdu .....	323
5.5.1.11. CanTpTxFcNPdu .....	323
5.5.1.12. CanTpTxNSdu .....	324
5.5.1.13. CanTpNAe .....	328
5.5.1.14. CanTpNSa .....	329
5.5.1.15. CanTpNTa .....	329
5.5.1.16. CanTpRxFcNPdu .....	330
5.5.1.17. CanTpTxNPdu .....	330
5.5.1.18. CommonPublishedInformation .....	331
5.5.1.19. PublishedInformation .....	334
5.5.2. Application programming interface (API) .....	335
5.5.2.1. Macro constants .....	335
5.5.2.1.1. CANTP_PDU_DIR_RECEIVE .....	335
5.5.2.1.2. CANTP_PDU_DIR_TRANSMIT .....	335

5.5.2.2. Functions .....	335
5.5.2.2.1. CanTp_CancelReceive .....	335
5.5.2.2.2. CanTp_CancelTransmit .....	336
5.5.2.2.3. CanTp_ChangeParameter .....	336
5.5.2.2.4. CanTp_GetNSa .....	337
5.5.2.2.5. CanTp_GetVersionInfo .....	338
5.5.2.2.6. CanTp_Init .....	338
5.5.2.2.7. CanTp_IsValidConfig .....	339
5.5.2.2.8. CanTp_MainFunction .....	339
5.5.2.2.9. CanTp_ReadParameter .....	339
5.5.2.2.10. CanTp_RxIndication .....	340
5.5.2.2.11. CanTp_SetNSa .....	340
5.5.2.2.12. CanTp_Transmit .....	341
5.5.2.2.13. CanTp_TxConfirmation .....	342
5.5.3. Integration notes .....	342
5.5.3.1. Exclusive areas .....	342
5.5.3.1.1. SCHM_CANTP_EXCLUSIVE_AREA_0 .....	342
5.5.3.2. Production errors .....	343
5.5.3.3. Memory mapping .....	343
5.5.3.4. Integration requirements .....	343
5.5.3.4.1. lim.CanTp.EB_INTREQ_CanTp_0001 .....	343
5.5.3.4.2. lim.CanTp.EB_INTREQ_CanTp_0002 .....	344
5.5.3.4.3. lim.CanTp.EB_INTREQ_CanTp_0003 .....	345
5.5.3.4.4. lim.CanTp.EB_INTREQ_CanTp_0004 .....	345
5.5.3.4.5. lim.CanTp.EB_INTREQ_CanTp_0005 .....	345
6. Bibliography .....	346



# 1. Overview of EB tresos AutoCore Generic 8 CAN Stack documentation

Welcome to the EB tresos AutoCore Generic 8 CAN Stack (ACG8 CAN Stack) product documentation.

This document provides:

- ▶ [Chapter 3, “ACG8 CAN Stack release notes”](#): release notes for the ACG8 CAN Stack modules
- ▶ [Chapter 4, “ACG8 CAN Stack user's guide”](#): containing background information and instructions
- ▶ [Chapter 5, “ACG8 CAN Stack module references”](#): information about configuration parameters and the application programming interface

## 2. Supported features

### 2.1. Overview

This chapter provides an overview of the ACG8 CAN Stack and the features that are currently supported.

[Section 2.2, "Supported CanNm features"](#) contains an overview of CanNm features.

### 2.2. Supported CanNm features

- ▶ **Support Autosar network management coordination algorithm:** Support of transmission of periodic Network Management PDUs as long as the bus-communication is requested and detection of Network Management PDUs signalling that other nodes request bus-communication.
- ▶ **Support operational modes:** Support of operational modes Network Mode (with internal states Repeat Message State, Normal Operation State, Ready Sleep State), Prepare Bus-Sleep Mode, Bus-Sleep Mode according to Autosar specifications.
- ▶ **Support for communication startup:** Support for interface to the upper layer to initiate transmission of NM PDUS due to a user(s) requesting communication.
- ▶ **Support for communication shutdown:** Support for interface to the upper layer to stop transmission of NM PDUS due to a user(s) not requesting communication.
- ▶ **Support for communication passive wakeup:** Support interface to the upper layer to initiate communication capabilities due to a wakeup event network start or network restart indication.
- ▶ **Support for passive mode:** Support for nodes with transmission of network management PDUs disabled.
- ▶ **Support for detection of remote sleep:** Support for detecting if all other nodes are ready to sleep.
- ▶ **Support for state change notification:** Support for notification function to Nm called when CanNm state is changed.
- ▶ **Support for car wakeup:** Support of CarWakeup bit as part of the network management PDU and car wakeup callout function.
- ▶ **Support for bus-load reduction mechanism:** Support mechanism to reduce the number of transmitted NM messages for realizing network management algorithm.
- ▶ **Support for user data in NM messages:** Support for user data in NM messages. User data can be updated either using CanNM interfaces or communication stack by collecting the data from and an I-PDU.
- ▶ **Support for PDU length higher than 8 bytes:** Support payloads higher than 8 bytes of the NM messages (when supported by the bus type).



- ▶ **Support for communication control:** Support for interfaces to enable/disable transmission of NM messages.
- ▶ **Support for partial networking:** Support for updating and filtering partial network information as part of the NM messages.
- ▶ **Support for spontaneous transmission:** Support interface to trigger spontaneous transmission of an NM message with the provided NM user data.
- ▶ **Support for immediate transmission:** Support for transmission of a predefined number of NM messages with an different cycle time when entering RepeatMessage state from BusSleep state or PrepareBusSleep state.
- ▶ **Support for immediate restart:** Support transmission of an NM messages when the network has been requested in the PrepareBusSleep state.
- ▶ **Support of RepeateMsgInd|NodeDetection|NodeIdEnabled channel based configurable:** Support per channel configuration of parameters CanNmRepeatMsgIndEnabled, CanNmNodeDetectionEnabled, CanNmNodeIdEnabled.
- ▶ **Support for post-build selectable:** Support for post-build selectable functionality, allow multiple module configuration sets to be loaded at the same time.

## 3. ACG8 CAN Stack release notes

### 3.1. Overview

This chapter provides the ACG8 CAN Stack product specific release notes. General release notes that are applicable to all products are provided in the EB tresos AutoCore Generic documentation. Refer to the general release notes in addition to the product release notes documented here.

### 3.2. Scope of the release

#### 3.2.1. Configuration tool

Your release of EB tresos AutoCore is compatible with the release of the EB tresos Studio configuration tool:

- ▶ EB tresos Studio: 25.0.0 b180628-0943

#### 3.2.2. AUTOSAR modules

The following table lists the AUTOSAR modules that are part of this ACG8 CAN Stack release.

Module name	AUTOSAR version and revision	SWS version and revision	Module version	Supplier
<a href="#">CanIf</a>	4.0.3 []	5.0.0 [0000]	6.9.10	Elektrobit Automotive GmbH
<a href="#">CanNm</a>	4.0.3 []	3.3.0 [3]	6.17.3	Elektrobit Automotive GmbH
<a href="#">CanSM</a>	4.0.3 []	2.2.0 [0000]	3.6.12	Elektrobit Automotive GmbH
<a href="#">CanTp</a>	4.0.3 []	4.0.0 [0000]	6.8.13	Elektrobit Automotive GmbH

Table 3.1. Hardware-Independent Modules specified by the AUTOSAR standard



### 3.2.3. EB (Elektrobit) modules

The following table lists all modules which are part of this release but are not specified by the AUTOSAR standard. These modules include tooling developed by EB or they may hold files shared by all other modules.

Module name	Module version	Supplier
<a href="#">CanAs</a>	2.4.11	Elektrobit Automotive GmbH

Table 3.2. Modules not specified by the AUTOSAR standard

### 3.2.4. MCAL modules and EB tresos AutoCore OS

For information about MCAL modules and OS, refer to the respective documentation, which is available as PDF at `$TRESOS_BASE/doc/3.0_EB_tresos_AutoCore_OS` and `$TRESOS_BASE/doc/5.0_MCAL_modules`<sup>1</sup>. It is also available in the online help in EB tresos Studio. Browse to the folders `EB tresos AutoCore OS` and `MCAL modules`.

## 3.3. Module release notes

### 3.3.1. CanAs module release notes

- ▶ Module version: 2.4.11.B206164
- ▶ Supplier: Elektrobit Automotive GmbH

#### 3.3.1.1. Change log

This chapter lists the changes between different versions.

##### Module version 2.4.11

2018-06-22

- ▶ Internal module improvement. This module version update does not affect module functionality

---

<sup>1</sup>`$TRESOS_BASE` is the location at which you installed EB tresos Studio.



#### **Module version 2.4.10**

2018-05-25

- ▶ Internal module improvement. This module version update does not affect module functionality

#### **Module version 2.4.9**

2018-02-16

- ▶ Internal module improvement. This module version update does not affect module functionality
- ▶ Internal module improvement. This module version update does not affect module functionality

#### **Module version 2.4.8**

2017-09-21

- ▶ Removed warnings for HOHs with overlapping CAN Id ranges, added a warning if one HOH covers all CAN Ids of a second HOH

#### **Module version 2.4.7**

2017-03-31

- ▶ Internal module improvement. This module version update does not affect module functionality

#### **Module version 2.4.6**

2017-03-03

- ▶ Internal module improvement. This module version update does not affect module functionality

#### **Module version 2.4.5**

2017-02-03

- ▶ The PDU to CanController assignment is now stored in configurations with two or more CanControllers even if the PDU has no HOH assignment

#### **Module version 2.4.4**

2016-10-07

- ▶ ASCCANAS-345 Fixed known issue: CAN Buffer Assignment Editor stops with an error when writing an ASR 4.2.2 Can configuration

#### **Module version 2.4.3**

2016-09-09

- ▶ Internal module improvement. This module version update does not affect module functionality

#### **Module version 2.4.2**

2016-08-05

- ▶ Added support for CAN FD PDUs

#### **Module version 2.4.1**

2016-07-01

- ▶ Internal module improvement. This module version update does not affect module functionality

#### **Module version 2.4.0**

2016-05-25

- ▶ Added support for AUTOSAR 4.2.x Can modules

#### **Module version 2.3.2**

2016-04-29

- ▶ Internal module improvement. This module version update does not affect module functionality

#### **Module version 2.3.1**

2016-04-01

- ▶ Internal module improvement. This module version update does not affect module functionality

#### **Module version 2.3.0**

2016-02-05

- ▶ ASCCANAS-313 Fixed known issue: CanObjectId parameters are configured incorrectly if two or more CanControllers exist
- ▶ Add support for new enum values in CanIfRxPduCanIdType and CanIfTxPduCanIdType: STANDARD\_FD\_CAN, STANDARD\_NO\_FD\_CAN, EXTENDED\_FD\_CAN, EXTENDED\_NO\_FD\_CAN

#### **Module version 2.2.1**

2015-11-06

- ▶ Internal module improvement. This module version update does not affect module functionality

#### **Module version 2.2.0**

2015-09-18

- ▶ Implemented Bit Timing editor page

#### **Module version 2.1.10**

2015-06-19

- ▶ ASCCANAS-295 Fixed known issue: AutoAssignment fails with Platforms supplying only Full Rx HOHs

#### **Module version 2.1.9**

2015-02-20

- ▶ Internal module improvement. This module version update does not affect module functionality

#### **Module version 2.1.8**

2014-10-03

- ▶ Internal module improvement. This module version update does not affect module functionality

#### **Module version 2.1.7**

2014-04-25

- ▶ Added support for CAN modules supplying two or more types of controllers with different buffer/HOH properties

#### **Module version 2.1.6**

2013-10-11

- ▶ Added bulk change support in PDU and HOH tables

#### **Module version 2.1.5**

2013-06-14

- ▶ Internal module improvement. This module version update does not affect module functionality

#### **Module version 2.1.4**

2013-05-08

- ▶ Removed support for AUTOSAR 3.x configurations which became obsolete

#### **Module version 2.1.3**

2013-02-08

- ▶ ASCCANAS-235 Fixed known issue: `NullPointerException` when configurations are written containing at least one Tx Pdu without HOH assignment

#### **Module version 2.1.2**

2012-10-12

- ▶ Internal module improvement. This module version update does not affect module functionality

#### **Module version 2.1.1**

2012-06-15

- ▶ Extended AUTOSAR 4.0 back end to support `CanFilterMaskRef` as single element reference list

#### **Module version 2.1.0**

2012-05-16

- ▶ Configuration results are now shown in the results view
- ▶ ASCCANAS-205 Fixed known issue: Reading in previously written Can/CanIf configurations may fail
- ▶ Adaptations due to CanIf parameter changes according to AUTOSAR 4.0 rev 3

#### **Module version 2.0.3**

2012-03-16

- ▶ Automatic buffer assignment algorithm can now be configured to use dedicated HTHs for standard and extended CAN Id PDU transmission

#### **Module version 2.0.2**

2012-01-20

- ▶ Internal module improvement. This module version update does not affect module functionality

#### **Module version 2.0.1**

2011-09-30

- ▶ ASCCANAS-180 Fixed known issue: PDU to HTH references may be set incorrectly if CAN Id range PDU is contained in CanIf configuration

#### **Module version 2.0.0**

2011-09-02

- ▶ Initial AUTOSAR 4.0 version

### **3.3.1.2. New features**

- ▶ AUTOSAR 4.2.x Can module configurations are now supported.
- ▶ CAN FD PDUs are now supported.

### **3.3.1.3. EB-specific enhancements**

This module is not part of the AUTOSAR specification.

### **3.3.1.4. Deviations**

This module is not part of the AUTOSAR specification.

### 3.3.1.5. Limitations

This chapter lists the limitations of the module. Refer to the module references chapter *Integration notes*, subsection *Integration requirements* for requirements on integrating this module.

- ▶ Automatic Assignment takes long/does not always find assignment solutions in large configurations

Description:

If a configuration consists of a large number of PDUs (>80), the automatic HOH assignment algorithm may take several seconds, a progress bar is being displayed to you while the algorithm is running. Moreover it can happen in large configurations, that the algorithm does not find a valid solution.

Rationale:

The total number of solutions for the HOH assignment problem grows exponentially with the number of processed PDUs, as does the processing time that would be necessary to examine all possible solutions. Therefore, it is necessary to examine only a subset of all solutions. If no valid solution is contained in the subset, the algorithm fails to find a valid solution.

- ▶ Controller Network Assignments cannot be retrieved in AUTOSAR version 4.0

Description:

The CanIf does not contain information about the network in which a Can controller resides. In consequence, the Can Assistant cannot determine the network of a controller, leading to erroneous assignments in the Automatic Assignment when two or more controllers are assigned to the same network.

Rationale:

The information on how to retrieve the network of a Controller has not been fully clarified. As a fallback solution, the Can Assistant assumes that each controller is attached to a dedicated network in the case that two or more controllers exist.

- ▶ Only one element CanIfBufferHthRef element per CanIfBufferCfg container is supported in AUTOSAR 4.-0 CanIf configurations

Description:

When AUTOSAR 4.0 CanIf configurations are read in or written out, only the first CanIfBufferCfg element is read and written, i.e. it is not possible to assign more than one HTH to a CanIfBufferCfg, nor is it possible to properly read in such CanIf configurations.

### 3.3.2. CanIf module release notes

- ▶ AUTOSAR R4.0 Rev 3

- ▶ AUTOSAR SWS document version: 5.0.0
- ▶ Module version: 6.9.10.B206164
- ▶ Supplier: Elektrobit Automotive GmbH

### 3.3.2.1. Change log

This chapter lists the changes between different versions.

#### Module version 6.9.10

2018-06-22

- ▶ Internal module improvement. This module version update does not affect module functionality.

#### Module version 6.9.9

2018-05-25

- ▶ Support for decoupled processing of reception and transmission confirmation events.

#### Module version 6.9.8

2018-04-20

- ▶ Add support for uint32 PduLengthType.

#### Module version 6.9.7

2018-02-16

- ▶ ASCCANIF-1286 Fixed known issue: Possible prolongation of Tx confirmation ISR when Tx buffering is enabled.

#### Module version 6.9.6

2018-01-19

- ▶ Added support of CanTSyn as upper layer.

#### Module version 6.9.5

2017-12-15



- ▶ ASCCANIF-1267 Fixed known issue: Compilation fails if DLC check is disabled for CAN 4.2 support.

#### **Module version 6.9.4**

2017-09-22

- ▶ Internal module improvement. This module version update does not affect module functionality.

#### **Module version 6.9.3**

2017-07-28

- ▶ Post-build selectable support.

#### **Module version 6.9.2**

2017-05-05

- ▶ Internal module improvement. This module version update does not affect module functionality.

#### **Module version 6.9.1**

2017-03-31

- ▶ Internal module improvement. This module version update does not affect module functionality.

#### **Module version 6.9.0**

2017-03-10

- ▶ Added support for AUTOSAR 4.2.2 CAN drivers.

#### **Module version 6.8.0**

2017-03-03

- ▶ CAN and CANFD frames on the same CanId shall be received in two separate RxPdus
- ▶ Move integration requirements to separate reqm file.

#### **Module version 6.7.0**

2017-02-03

- ▶ Do not enable partial networking TX filter after BusOff.
- ▶ Internal module improvement. This module version update does not affect module functionality.

#### **Module version 6.6.2**

2017-01-05

- ▶ Internal module improvement. This module version update does not affect module functionality.

#### **Module version 6.6.1**

2016-11-04

- ▶ Internal module improvement. This module version update does not affect module functionality.

#### **Module version 6.6.0**

2016-09-23

- ▶ Disable partial networking TX filter in case of ongoing transmission.

#### **Module version 6.5.6**

2016-05-25

- ▶ ASCCANIF-1169 Fixed known issue: CanIf may discard L-Pdu if CanIf\_TxConfirmation() preempts CanIf\_Transmit()
- ▶ Added handle Id wizard support for configuration parameter CanIfCtrlId.

#### **Module version 6.5.5**

2016-02-05

- ▶ Added support for Debug & Trace with custom header file configurable via parameter `BaseDbgHeader-File`

#### **Module version 6.5.4**

2015-11-06

- ▶ Added a check to avoid multiple references to the same Can controller.

#### **Module version 6.5.3**

2015-06-19

- ▶ ASCCANIF-1139 Fixed known issue: CanIf passes the configured length value (DLC) to the upper layer modules
- ▶ Added support for 64 bytes CAN-FD frames



- ▶ ASCCANIF-1142 Fixed known issue: CanIf may include CanTrcv header file although CanTrcv support is disabled
- ▶ ASCCANIF-1145 Fixed known issue: CanIf does not disable PnTxFilter
- ▶ ASCCANIF-1147 Fixed known issue: CanIf does not include CanSM\_Cbk.h

#### **Module version 6.5.2**

2015-02-20

- ▶ Internal module improvement. This module version update does not affect module functionality

#### **Module version 6.5.1**

2014-12-19

- ▶ Removed AUTOSAR 3.x compliant symbolic name value macros and updated the logic to only provide AUTOSAR 4.0.2 compliant macros if macro CANIF\_PROVIDE\_LEGACY\_SYMBOLIC\_NAMES is defined
- ▶ Added support for configurable mapping of CanIf\_IsValidConfig function to dedicate memory section
- ▶ CanIf calls EcuM\_ValidateWakeupEvent() only if wakeup has been successfully validated

#### **Module version 6.5.0**

2014-10-02

- ▶ ASCCANIF-1072 Fixed known issue: CanIfTxPduCfg containers cannot be added or removed at post-build time
- ▶ Introduced configuration container CanIfUpperLayerConfig to define upper layer modules at Pre-compile time
- ▶ Added proper name mangling for header files and API functions of CanTrcv
- ▶ Improved parameter description and error checks for configurations with multiple CanTrcv

#### **Module version 6.4.4**

2014-04-25

- ▶ ASCCANIF-1068 Fixed known issue: CanIf module reports an error if config time support is enabled
- ▶ ASCCANIF-1070 Fixed known issue: Build error due to missing file CanIf\_PBcfg.c if code generation for CanIf is disabled and only post-build configuration is compiled

#### **Module version 6.4.3**

2013-11-15

- ▶ Removed warning from unused configuration parameter `CanIfHrhCanHandleTypeRef`
- ▶ Implemented support for CAN FD according to AUTOSAR R4.1 Rev 1

#### **Module version 6.4.2**

2013-10-11

- ▶ Changed MCG to introduce generation of XML code for Binary Code Generation

#### **Module version 6.4.1**

2013-06-28

- ▶ ASCCANIF-954 Fixed known issue: `CanIf_SetControllerMode()` does not report the DET error code `CANIF_E_PARAM_CTRLMODE`
- ▶ Implemented a configuration signature for consistency checks
- ▶ Updated memory sections of variables initialized during `CanIf_Init()` to `NO_INIT`
- ▶ Added a signature check to verify the precompile and link time configuration
- ▶ ASCCANIF-979 Fixed known issue: `CanIf` aborts compilation if AUTOSAR R4.0 Rev 3 compliant `Can` driver is used
- ▶ ASCCANIF-985 Fixed known issue: API services `CanIf_ControllerBusOff()` and `CanIf_ControllerModeIndication()` may report a DET error for a valid controller ID
- ▶ ASCCANIF-997 Fixed known issue: `CanIf` post-build-time configuration does not compile if used with `PbcfgM`
- ▶ ASCCANIF-999 Fixed known issue: `CanIf` calls `Can_Write` within a critical section causing system failure if interrupts are locked

#### **Module version 6.4.0**

2013-02-08

- ▶ ASCCANIF-934 Fixed known issue: A compiler error occurs if only a single HOH (sum of all HRHs and HTHs) is configured
- ▶ ASCCANIF-906 Fixed known issue: `CanIfPublicHandleTypeEnum` must be configured to `UINT16` if more than 254 HOHs are used
- ▶ Updated `CanIf` to `Can` driver API according to AUTOSAR R4.0 Rev 3

#### **Module version 6.3.0**

2012-10-12

- ▶ Implementation of Handle-Id policy according to AUTOSAR R4.0 Rev 3
- ▶ The top-level structure of the software-component description in the ARXML files changed from `/AUTOSAR/CanIf` to `/AUTOSAR_CanIf`
- ▶ ASCCANIF-891 Fixed known issue: Condition for availability of configuration parameter `CanIfDispatchUserConfirmPnAvailabilityName` is incorrect

#### **Module version 6.2.0**

2012-06-20

- ▶ Update of config schema files according to AUTOSAR R4.0 Rev 3
- ▶ ASCCANIF-832 Fixed known issue: `CanIf` does not compile if wakeup validation and transmit confirmation in polling mode is disabled but partial network support is enabled
- ▶ Introduce post build configuration data structures
- ▶ Made config parameters `CanIfHthCanHandleTypeRef` and `CanIfHrhCanHandleTypeRef` optional
- ▶ ASCCANIF-856 Fixed known issue: HandleId wizard does not work for configuration parameter `CanIfTxPduId`

#### **Module version 6.1.1**

2012-04-20

- ▶ ASCCANIF-814 Fixed known issue: Eclipse framework crashes during execution of the handle ID generator

#### **Module version 6.1.0**

2012-03-16

- ▶ Update of Dem reporting to the AUTOSAR 4.0 `CanIf` specification
- ▶ Remove dependency from `Can_CheckWakeup()` and `CanTrcv_CheckWakeup()` if the functions are not used
- ▶ Update naming scheme for `#defines` for symbolic name values to AUTOSAR R4.0 Rev 3 naming scheme
- ▶ Add support of partial networking filters for Tx PDUs according to AUTOSAR R4.0 Rev 3
- ▶ Add API and call back functions related to partial networking according to AUTOSAR R4.0 Rev 3

#### **Module version 6.0.0**

2011-09-02

- ▶ Initial AUTOSAR 4.0 version.

### 3.3.2.2. New features

- ▶ Added support for decoupled processing of reception and transmission confirmation events.

### 3.3.2.3. EB-specific enhancements

This chapter lists the enhancements provided by the module.

- ▶ [HisCanIf0001] Transmit buffering (extension to AUTOSAR specification)

Description:

If no transmit buffers are configured, the corresponding code and data are removed via the C preprocessor.

- ▶ [HisCanIf0002, HisCanIf0004] Single controller support (extension to AUTOSAR specification)

Description:

The configuration and the code were optimized for the use case of only one CAN controller. Unnecessary configuration data is removed and macros are used, to allow the compiler to better optimize loops.

Please note however, that the controller configuration is not pre-compile-time and therefore the controller configuration structure is also used in this case.

- ▶ [HisCanIf0003, HisCanIf0005] Single driver support (extension to AUTOSAR specification)

Description:

This implementation only supports one CAN driver. It contains no code in form of loops, branches, etc. to support several CAN drivers.

Please note however, that the driver configuration is not pre-compile-time and therefore there is a driver configuration structure in the C code.

- ▶ CAN ID parameter support for user specific upper layer callbacks

Description:

This implementation supports to provide the CAN ID as parameter to the receive indication callback function of user specific upper layers.

The vendor specific parameter `CanIfUserUpperLayerConfig/CanIfUpperLayerUseCanId` was added to configure this feature.

- ▶ DLC check callout function support

Description:

This implementation supports the configuration of up to two DLC check callout functions for each upper layer. The first function is called, if a DLC check fails while the other is called in the case, that the DLC check succeeds.

The vendor specific parameters `CanIfUserDlcErrorNotification` and `CanIfUserDlcPassedNotification` were added to the container `CanIfRxPduConfig` to configure the new callout functions.

► CAN ID translation callout support

Description:

This implementation supports the configuration of CAN ID translation callout functions. During run-time these functions can be used to change the CAN ID used on the CAN bus from the CAN ID that was originally configured (in parameter `CanIfTxPduCanId` and `CanIfRxPduCanId`).

The vendor specific parameters `CanIfTranslateTxCanIdFunc` and `CanIfTranslateRxCanIdFunc` were added to the container `CanIfDispatchConfig` to configure the new callout functions.

► API and call back functions according to AUTOSAR 4.0 rev 3

Description:

The API functions `CanIf_ClearTrcvWufFlag`, `CanIf_CheckTrcvWakeFlag` and the call back functions `CanIf_ConfirmPnAvailability`, `CanIf_ClearTrcvWufFlagIndication`, `CanIf_CheckTrcvWakeFlagIndication` according to AUTOSAR 4.0 rev 3 were added.

► Support for AUTOSAR 4.0 rev 2 Can MCAL modules

Description:

The config parameter `CanIfEnableCanRev2Compatibility` was added to support compatibility with AUTOSAR 4.0 rev 2 Can MCAL modules.

► CanTrcv name mangling

Description:

This implementation supports to disable name mangling for header files and API functions of `CanTrcv` if a single `CanTrcv` driver is used.

The vendor specific parameter `CanIfPublicCfg/CanIfSingleCanTrcvAPIInfixEnable` was added to configure this feature.

► Partial networking TX filter support (extension to AUTOSAR 4.2.2 specification)

Description:

According to AUTOSAR 4.2.2 a configured partial networking TX filter is enabled in the following cases:

- at initialization - when `CanIf_SetPduMode()` is called with `CANIF_TX_OFFLINE` - when `CanIf_SetCon-`

trollerMode() is called with CANIF\_CS\_SLEEP The partial networking TX filter shall be deactivated after successful transmission of Wake-Up Frame. In case communication is ongoing and there is an successful reception of frame with PnTxFilter enabled, PnTxFilter shall be disabled. The PnTxFilter is in this case not needed since an Ack will be provided by an already active node.

Please note however, that the transmit requests for other PDUs will be rejected until the configured PDU was sent. Only the very first PDU which initiates the Wake-up of the Network has to be the CanIfTxPduPnFilterPdu.

► TX Offline Active mode support

Description:

The config parameter `CanIfTxOfflineActiveSupport` was introduced to determines whether TxOfflineActive feature is enabled or not. During CANIF\_TX\_OFFLINE\_ACTIVE mode the upper layer has to handle the execution of the transmit confirmations immediately at the end of the transmit request.

► Support for AUTOSAR 4.2 rev 2 Can MCAL modules

Description:

The config parameter `CanIfEnableCanRel422Compatibility` was added to support compatibility with AUTOSAR 4.2 rev 2 Can MCAL modules.

► Support for decoupled processing of reception and transmission confirmation events

Description:

This implementation supports the configuration of decoupled processing of reception and transmission confirmation events on the MainFunction. This allows configuration of different PDUs to multiple CanIf\_MainFunctionRx/Tx (with different period and priority) in order to limit the CPU load. During run-time these functions (CanIf\_MainFunctionRx/Tx) can be used to process the reception/ transmission confirmation events received in interrupt context (CanIf\_RxIndication/CanIf\_TxConfirmation) using parameters `CanIfRxProcessing` and `CanIfTxProcessing`. The PDUs that are not assigned to a CanIf\_MainFunctionRx/Tx() will be handled in interrupt context.

The vendor specific parameter `CanIfDecoupledProcessingSupport` was added to enable this feature. The vendor specific containers `CanIfRxProcessing` and `CanIfTxProcessing` were added to the container `CanIfPublicCfg` to configure the new CanIf\_MainFunctionRx and CanIf\_MainFunctionTx functions. Each `CanIfRxProcessing` container contains the following parameters `CanIfRxPduQueueSize` and `CanIfPublicMaxPayloadQueueSize` which define the number of PDUs that can be added to the queue and the size of the data queue. Each `CanIfTxProcessing` container contains the parameter `CanIfTxPduQueueSize` which defines the number of PDUs that can be added to the queue. The vendor specific parameters `CanIfRxPduProcessingRef` and `CanIfTxPduProcessingRef` (added to the containers `CanIfRxProcessing` and `CanIfTxProcessing`) reference the PDUs that shall be processed on the MainFunction. When the queue is full, the incoming events will be ignored.



### 3.3.2.4. Deviations

This chapter lists the deviations of the module from the AUTOSAR standard.

► No inter-module consistency checks

Description:

The CanIf module does not perform the inter-module version checks as specified in the CanIf SWS.

Rationale:

The module consistency check is not within the responsibility of the basic software but part of the configuration management and delivery process.

Requirements:

CANIF021

► Hrh Range Container (`CanIfHrhRangeCfg`) is not used

Description:

The software receive range filter as configured by configuration parameter `CanIfHrhRangeCfg` is not supported.

Rationale:

Software filtering is done by mapping received CanIDs to configured Rx LPdus. Putting an extra software range filter in front does not add any functional benefit.

Requirements:

CANIF645, CANIF646, CANIF628\_Conf, CANIF629\_Conf, CANIF644\_Conf, CANIF630\_Conf

► No Debug and Trace support

Description:

CanIf is not instrumented for the usage with Debug and Trace.

Requirements:

CANIF565, CANIF566, CANIF567, CANIF568

► `CanIf_Init()` has no default configuration if `NULL_PTR` is passed

Description:

If a `NULL_PTR` is passed to function `CanIf_Init()` differs from the SWS:

- Module `PbCfgM` used: Post-build-time configuration pointer is requested from `PbCfgM` module.

- ▶ Module PbCfgM not used: Module initialization is aborted and CANIF\_E\_PARAM\_POINTER is reported to Det\_ReportErrorStatus() if CanIfDevErrorDetect is true.

Requirements:

CANIF301

- ▶ CanIf\_ChangeBaudrate and CanIf\_CheckBaudrate API functions are not supported (reference to product description: ASCPD-98)

Description:

CanIf\_ChangeBaudrate and CanIf\_CheckBaudrate API functions are not implemented. Instead this feature is implemented according to AUTOSAR R4.1 Rev 1. where a new function CanIf\_SetBaudrate has been introduced while CanIf\_ChangeBaudrate and CanIf\_CheckBaudrate are set to deprecated.

Requirements:

CANIF775, CANIF786, CANIF778, CANIF779, CANIF780, CANIF776, CANIF787, CANIF782, CANIF783, CANIF784, CANIF785\_Conf, CANIF294

- ▶ Only post-build configuration is supported

Description:

The CanIf module only supports configuration variant VARIANT-POST-BUILD. VARIANT-PRE-COMPILE and VARIANT-LINK-TIME are not supported.

Requirements:

CANIF460, CANIF461, CANIF377

- ▶ Only binary software filter algorithm is supported

Description:

The CanIf module only supports algorithm BINARY of configuration parameter CanIfPrivateSoftwareFilter-Type which configures the software filtering algorithm.

Requirements:

CANIF619\_Conf

- ▶ Only a single CAN Driver is supported (reference to product description: ASCPD-1)

Description:

The CanIf implementation supports a single CAN Driver only.

Requirements:

CANIF378, CANIF115, CANIF124, CANIF612\_Conf

- ▶ No TTCan support

Description:

The CanIf implementation does not support TTCan.

Requirements:

CANIF675\_Conf

- ▶ Parameter `CanIfTxPduDlc` is not used

Description:

The parameter `CanIfInitCfg/CanIfTxPduCfg/CanIfTxPduDlc` is not used. Instead, `CanIf_Transmit()` uses the DLC value given by the caller.

Requirements:

CANIF594\_Conf

- ▶ Tx buffer handling according to AUTOSAR R4.0 Rev 2 (reference to product description: ASCPD-97)

Description:

If transmit buffering is enabled via parameter `CanIfPublicCfg/CanIfPublicTxBuffering`, the CanIf provides one buffer for each Tx PDU independent on the type of the associated HTH. I.e. the CanIf provides buffers for Tx PDUs assigned for BasicCAN as well as FullCAN transmission. Configuration parameter `CanIfBufferSize` is not used.

If a dynamic Tx PDU shall be buffered and the buffer for that PDU is already in use, the old message will only be overwritten, if the CAN ID of the new PDU is still the same as the one of the buffered message. If the CAN ID was changed in the meantime, the new message will be discarded and the old one remains in the buffer.

Rationale:

Resorting of pending Tx messages in case of an overwritten buffer is not implemented. Therefore overwriting buffers with messages that have a different CAN ID is rejected to prevent priority inversion in the CanIf Tx buffers. Also compare the requirement CANIF282 from previous AUTOSAR releases (e.g. R3.1).

Requirements:

CANIF837, CANIF833\_Conf, CANIF834\_Conf

- ▶ CanIf upper layers XCP and J1939TP must be configured as CDD modules

Description:

The standard upper layers XCP and J1939TP are not contained in the enumeration range of the configuration parameters `CanIfRxPduUserRxIndicationUL` and `CanIfTxPduUserTxConfirmationUL`.

If one of these upper layers shall be used, configure them as complex device drivers (CDD).

Requirements:

CANIF544, CANIF556, CANIF554, CANIF555

- Symbolic names for `CanIfCtrlIds` and `CanIfTrcvIds` do not follow the AUTOSAR naming scheme

Description:

Some of the implemented symbolic name macros do not follow the AUTOSAR R4.0 Rev 3 naming scheme. AUTOSAR only specifies the inclusion of the name of direct parents in the symbolic macros but it is getting violated for `CanIfCtrlIds` and `CanIfTrcvIds`. `CanIfCtrlIds`: "CanIfConf\_[CanIfCtrlDrvCfg]\_[Controllername]"  
`CanIfTrcvIds`: "CanIfConf\_[CanIfTrcvDrvCfg]\_[CanIfTrcvCfg]"

Rationale:

`CanIfCtrlIds` short names are only distinct within the context of the superior `CanIfCtrlDrv`. `CanIfTrcvIds` short names are only distinct within the context of the superior `CanIfTrcvDrv`. The generation of SymbolicName macros as specified within the ECU configuration specification could lead to multiple macro redefinitions.

- Some configuration parameters have a lower config variant than specified

Description:

The following configuration parameters are specified to implement config variant link-time but actually implement config variant pre-compile:

- `CanIfDispatchUserCtrlBusOffName`
- `CanIfDispatchUserCtrlModeIndicationName`
- `CanIfDispatchUserCheckTrcvWakeFlagIndicationName`
- `CanIfDispatchUserCheckTrcvWakeFlagIndicationUL`
- `CanIfDispatchUserClearTrcvWufFlagIndicationName`
- `CanIfDispatchUserClearTrcvWufFlagIndicationUL`
- `CanIfDispatchUserConfirmPnAvailabilityName`
- `CanIfDispatchUserConfirmPnAvailabilityUL`
- `CanIfDispatchUserTrcvModeIndicationName`
- `CanIfDispatchUserValidateWakeupEventName`

- ▶ CanIfDispatchUserCtrlBusOffUL
- ▶ CanIfDispatchUserCtrlModeIndicationUL
- ▶ CanIfDispatchUserValidateWakeupEventUL

The following configuration parameters are specified to implement config variant post-build but actually implement config variant link-time:

- ▶ CanIfRxPduUserRxIndicationUL
- ▶ CanIfTxPduUserTxConfirmationUL
- ▶ Wakeup validation is processed in CANIF\_CS\_SLEEP, CANIF\_CS\_STOPPED, and CANIF\_CS\_STARTED

Description:

According to AUTOSAR R4.0 Rev 3 specification successful wakeup validation shall be stored only if the Can controller is in state CANIF\_CS\_STARTED. Instead the current implementation validates wakeup successfully if the following conditions apply:

- ▶ a) The Can controller is in state CANIF\_CS\_SLEEP.
- ▶ b) The Can controller is in state CANIF\_CS\_STARTED or CANIF\_CS\_STOPPED and a wakeup has been previously detected.

Requirements:

CANIF286

- ▶ Transmit confirmations always forwarded to upper layer module

Description:

Transmit confirmations are always forwarded to the upper layer regardless of the PDU mode.

The CanIf SWS prohibits calling the transmit confirmation callback service of the upper layer module if the PDU mode is equal to CANIF\_SET\_OFFLINE or CANIF\_SET\_TX\_OFFLINE.

Rationale:

This mechanism ensures that pending confirmations are not blocked. A confirmation may be pending, if a transmission of LPDU occurred before PDU mode was set to CANIF\_SET\_OFFLINE or CANIF\_SET\_TX\_OFFLINE. Confirmations for transmissions triggered in PDU mode CANIF\_SET\_OFFLINE or CANIF\_SET\_TX\_OFFLINE cannot occur, because transmission is prohibited in this case. Unexpected confirmations which may be triggered because of an erroneous CAN driver (hardware) are not taken into account.

Requirements:

CANIF073, CANIF489

- ▶ API service `CanIf_ReadRxPduData` always accepted

Description:

API service `CanIf_ReadRxPduData` accepts a request even if the corresponding CCMSM is not equal to `CANIF_CS_STARTED` or the corresponding PDU channel mode is not equal to `CANIF_SET_ONLINE` or `CANIF_SET_TX_ONLINE`.

Rationale:

The AUTOSAR configuration schema allows multiple HRHs and therefore multiple CanIf controller assigned to a single Rx-LPdu. This would force to merge the status of multiple CCMSM and PDU channel modes and is not specified. In addition it would increase the configuration complexity drastically.

Requirements:

CANIF324

- ▶ Reception of L-PDU is not limited to a single CAN controller

Description:

CanIf allows the configuration of a Rx-PDU with an assignment to multiple HRHs with different underlying CAN controller. The assignment of a Tx-PDUs and its corresponding Tx-Buffer is limited to a single HTH only.

Rationale:

The limitation, as described in the requirement, would prevent the reception of PDUs assigned to HRHs of a different CAN controller.

Requirements:

CANIF046

- ▶ DET error `CANIF_E_STOPPED` not supported

Description:

CanIf does not support the DET error `CANIF_E_STOPPED`. In detail this means:

- ▶ `CanIf_Transmit` does not report `CANIF_E_STOPPED` if invoked in CCMSM `CANIF_CS_STOPPED` .
- ▶ `CanIf_Transmit` does not report `CANIF_E_STOPPED` if invoked in PDU channel mode `CANIF_OFFLINE` .

Rationale:

In case of a bus-off, CanIf switches the CCMSM to `CANIF_E_STOPPED` and informs CanSM about the bus-off. But informing the upper layers does not happen in an atomic fashion. This leads to a small time slot, where a transmission by the upper layers is a regular use-case. CanIf handles this scenario by rejecting the transmit request, but without reporting the DET error.

Requirements:

CANIF382, CANIF723

- CanIf calls `EcuM_ValidateWakeupEvent()` only if wake-up has been successfully validated

Description:

CanIf calls `EcuM_ValidateWakeupEvent()` within the context of `CanIf_CheckValidation()` only if wake-up has been successfully validated.

Rationale:

EcuM performs an action triggered by `EcuM_ValidateWakeupEvent()` no matter of the value of the parameter `sources`. According to Bugzilla ([https://www.autosar.org/bugzilla/show\\_bug.cgi?id=57883](https://www.autosar.org/bugzilla/show_bug.cgi?id=57883)), CanIf must NOT call `<User_ValidateWakeupEvent>(sources)` if wakeup has not been validated.

Requirements:

CANIF681

- CanIf does not support the API service `CanIf_TriggerTransmit()`.

Description:

CanIf does not support the API service `CanIf_TriggerTransmit()` introduced by AUTOSAR 4.2.1 along with CAN-FD.

Requirements:

SWS\_CANIF\_00883

- Due to "[https://www.autosar.org/bugzilla/show\\_bug.cgi?id=52225](https://www.autosar.org/bugzilla/show_bug.cgi?id=52225)" and "[https://www.autosar.org/bugzilla/show\\_bug.cgi?id=61651](https://www.autosar.org/bugzilla/show_bug.cgi?id=61651)" RfCs, CanIf\_PduModeType was introduced, according with AUTOSAR 4.2.-2 specification.

Description:

Due to "[https://www.autosar.org/bugzilla/show\\_bug.cgi?id=52225](https://www.autosar.org/bugzilla/show_bug.cgi?id=52225)" and "[https://www.autosar.org/bugzilla/show\\_bug.cgi?id=61651](https://www.autosar.org/bugzilla/show_bug.cgi?id=61651)" RfCs, CanIf\_PduGetModeType and CanIf\_PduSetModeType shall no longer be used. CanIf\_PduModeType was introduced and shall be used accordingly: -CANIF\_SET\_TX\_OFFLINE and CANIF\_SET\_TX\_OFFLINE are not used anymore -CANIF\_SET\_TX\_ONLINE and CANIF\_SET\_RX\_ONLINE are not used anymore -CANIF\_ONLINE shall be used instead of CANIF\_SET\_

ONLINE and CANIF\_GET\_ONLINE -CANIF\_TX\_OFFLINE\_ACTIVE shall be used instead of CANIF\_SET\_TX\_OFFLINE\_ACTIVE, CANIF\_GET\_OFFLINE\_ACTIVE -CANIF\_TX\_OFFLINE shall be used instead of CANIF\_SET\_TX\_OFFLINE -CANIF\_GET\_RX\_ONLINE and CANIF\_GET\_TX\_ONLINE are not used anymore -CANIF\_OFFLINE shall be used instead of CANIF\_GET\_OFFLINE -CANIF\_GET\_OFFLINE\_ACTIVE\_RX\_ONLINE is not used anymore PnTxFilter will be enabled if CanIf\_SetControllerMode(controllerId, CANIF\_CS\_CLEEP) will be called. CanIf\_PduModeType was introduced, according with AUTOSAR 4.2.2 specification.

Requirements:

CANIF490, CANIF491, CANIF492, SWS\_CANIF\_00073, SWS\_CANIF\_00483

### 3.3.2.5. Limitations

This chapter lists the limitations of the module. Refer to the module references chapter *Integration notes*, subsection *Integration requirements* for requirements on integrating this module.

- ▶ No support of TTCan (reference to product description: ASCPD-3)

Description:

TTCan controllers are not supported by this implementation of CanIf.

- ▶ Number of supported CAN controllers

Description:

The CanIf only supports configurations with CAN controllers that have a controller ID less than 255.

Rationale:

The number 255 is used by the CanIf to classify a controller ID as invalid.

- ▶ Number of supported CAN Transceiver Drivers

Description:

Up to 255 CAN Transceiver Drivers are supported.

Rationale:

This restriction allows to use smaller types (uint8 instead of uint16) for internal calculations.

- ▶ No support for multiple configurations

Description:

Only one configuration is supported. Multiple configurations are not allowed.



► Supported software filtering mechanisms

Description:

Binary search is the only supported software filtering method.

► Only one upper layer callback function is supported (reference to product description: ASCPD-2)

Description:

Only one RX indication and one TX confirmation callback function is supported for each upper layer.

► Code optimizations may result in compiler warnings

Description:

The `CanIf` implicitly uses code optimizations for certain configurations. This may, however, lead to compiler warnings such as "if-statement always evaluates to true".

Rationale:

Excluding all potentially redundant control flow statements would clutter code.

► Reconfiguration of CAN identifier limited for Flexible Data-Rate

Description:

The reconfiguration of a CAN identifier via the API service `CanIf_SetDynamicTxId` is restricted to a separate range for CAN 2.0 and CAN Flexible Data-Rate messages.

A Tx-PDU with a CAN 2.0 identifier (`STANDARD_CAN` or `EXTENDED_CAN`) can not be reconfigured to a CAN Flexible Data-Rate identifier (`STANDARD_FD_CAN` or `EXTENDED_FD_CAN`) and vice versa.

Rationale:

The `CanIf` reserves a transmit buffer of 8 bytes for CAN 2.0 messages. A reconfiguration to a CAN Flexible Data-Rate message offers the possibility to send up to 64 bytes without having an underlying buffer of sufficient size.

► Delayed transmission after bus-off recovery if Partial Networking is used

Description:

If Partial Networking is enabled and the `PnTxFilter` mechanism is used the `CanIf` blocks all transmission requests to that CAN controller, except if the requested TxPdu is one of the configured `PnFilterPdu`s.

The `PnTxFilter` is activated when `CanIf_SetPduMode` is invoked with `CANIF_SET_ONLINE` or `CANIF_SET_TX_ONLINE` which is also the case when bus-off recovery completes.

After a completed bus-off recovery `CanIf` drops all transmission requests until the first `PnFilterPdu` is sent, which is usually a `Nm` message.

In this case the delay depends on the transmission frequency of `Nm` messages.

Rationale:

This behavior results on the `PnTxFilter` mechanism as defined in AUTOSAR 4.0 rev3. The behavior was reworked for AUTOSAR 4.1. For more details refer to [https://www.autosar.org/bugzilla/show\\_bug.cgi?id=52225](https://www.autosar.org/bugzilla/show_bug.cgi?id=52225)

Please be aware that an active `PnTxFilter` ensures that the first messages on bus is `CanIfTxPduPnFilterPdu`. In case that `CanIfTxPduPnFilterPdu` is the NM-PDU the COM-Stack start up takes care that the `PduGroups` are disabled until successful transmission of that PDU. However, transmit requests for other PDUs (i.e. initially started PDUs, TP-PDUs, XCP-PDUs) will be rejected until the configured PDU was sent. Only the very first PDU which initiates the Wake-up of the Network has to be the `CanIfTx- PduPnFilterPdu`. In case communication is ongoing and there is an successful reception of frame with `PnTxFilter` enabled, `PnTxFilter` shall be disabled. The `PnTxFilter` is in this case not needed since an Ack will be provided by an already active Node. For more details refer to [https://www.autosar.org/bugzilla/show\\_bug.cgi?id=71054](https://www.autosar.org/bugzilla/show_bug.cgi?id=71054).

### 3.3.3. CanNm module release notes

- ▶ AUTOSAR R4.0 Rev 3
- ▶ AUTOSAR SWS document version: 3.3.0
- ▶ Module version: 6.17.3.B206164
- ▶ Supplier: Elektrobit Automotive GmbH

#### 3.3.3.1. Change log

This chapter lists the changes between different versions.

##### Module version 6.17.3

2018-06-22

- ▶ Internal module improvement. This module version update does not affect module functionality.

##### Module version 6.17.2

2018-02-16

- ▶ Implemented Post-build selectable support

- ▶ Removed AUTOSAR 3.x compliant symbolic name value macros and updated the logic to only provide AUTOSAR 4.0.2 compliant macros

#### **Module version 6.17.1**

2017-09-22

- ▶ Implemented support for car wake up
- ▶ Changed number of calls for Nm\_StateChangeNotification during Prepare Bus Sleep Mode to Repeat Message State. Reverted ASCCANNM-923 Wrong state change information sent on CanBus on transition from Prepare Bus Sleep Mode to Repeat Message State
- ▶ ASCCANNM-943 Fixed known issue: Compilation error occurs if all CanNmPnFilterMaskByteValues are set to zero
- ▶ Added CanNmNodeDetectionEnabled, CanNmNodeIdEnabled and CanNmRepeatMsgIndEnabled as per channel configurable.
- ▶ ASCCANNM-944 Fixed known issue: Out of bounds access in case at post-build more PNCs are configured than at precompile time
- ▶ Implemented Support for PDU Length greater than 8 Bytes
- ▶ ASCCANNM-959 Fixed known issue: Source code does not compile if CanNmPnEraCalcEnabled is set to false and for at least one channel CanNmPnEraCalcEnabled is set to true
- ▶ ASCCANNM-972 Fixed known issue: Code generation error for user data with length zero
- ▶ ASCCANNM-973 Fixed known issue: API CanNm\_CheckRemoteSleepIndication indicates wrong state if the API interrupts the execution of the main function
- ▶ ASCCANNM-961-973 Fixed known issue: Existence of PDU referenced by CanNmPnEraRxNSduRef in PduR is not checked
- ▶ ASCCANNM-960 Fixed known issue: CanNmPnEraRxNSduRef shall be available based on parameter CanNmPnEraCalcEnabled
- ▶ ASCCANNM-963 Fixed known issue: Tx timeout exception is generated for a channel which works correctly

#### **Module version 6.17.0**

2017-03-31

- ▶ ASCCANNM-900 Fixed known issue: CanNm causes the ECU to become asynchronous with other ECUs on the network
- ▶ Added/corrected missing memory sections and compiler abstraction
- ▶ ASCCANNM-885 Fixed known issue: Incorrect consistency check of CanNmComUserDataSupport against CanNmUserDataEnabled

- ▶ ASCCANNM-881 Fixed known issue: The user data transmitted in the NM PDU could be inconsistent
- ▶ Removed CanNmRepeatMessageTime - CanNmMsgCycleTime multiplicity constrain
- ▶ Changed UserTxConfPduId member in the CanNm\_ChannelDataType structure
- ▶ ASCCANNM-915 Fixed known issue: Wrong dependency CanNmStateChangeIndEnabled - CanNmPassiveModeEnabled. Improved CanNmStateChangeIndEnabled parameter description.
- ▶ ASCCANNM-923 Fixed known issue: Wrong state change information sent on CanBus on transition from Prepare Bus Sleep Mode to Repeat Message State

#### **Module version 6.16.0**

2016-10-31

- ▶ Added aggregation of internal and external requested partial networks also if the NM-PDU filter algorithm is disabled
- ▶ Implement CanNm\_Transmit(...) for sponaneous transmission of NM frames
- ▶ ASCCANNM-870 Fixed known issue: Tx timeout timer called incorrectly

#### **Module version 6.15.0**

2016-05-23

- ▶ ASCCANNM-871 Fixed known issue: Repeat Message time is not editable if Passive mode is enabled

#### **Module version 6.14.0**

2016-02-10

- ▶ ASCCANNM-842 Fixed known issue: Handle ID wizard error computing CanNmRxPduls when multiple CanNmRxPdu per channel are configured
- ▶ Added support for Debug & Trace with custom header file configurable via parameter `BaseDbgHeaderFile`

#### **Module version 6.13.0**

2015-11-06

- ▶ Fixed In case RMS timer is zero parameter NmRetryFirstMessageRequest should not be active
- ▶ Fixed incorrect handling of RSI timer in case of disabled communication
- ▶ Implemented NmRetryFirstMessageRequest functionality to Normal operation state if Repeat Message Time is zero

- ▶ Fixed the NM-Timeout and ReducedTime timer restart if Communication is disabled

#### **Module version 6.12.0**

2015-07-28

- ▶ ASCCANNM-807 Fixed known issue: Generation error when CanNmNodeIdEnabled = TRUE and CanNmPassiveModeEnabled = TRUE
- ▶ ASCCANNM-818 Fixed known issue: Changed implementation class of CanNmNodeId to PostBuild
- ▶ ASCCANNM-780 Fixed known issue: RMS time can be 1 cycle shorter if Immediate transmission is set to true
- ▶ ASCCANNM-812 Fixed known issue: Unintended trigger of immediate messages when CanNmImmediateNmTransmissions > 0 but CanNmImmediateNmCycleTime is disabled.
- ▶ ASCCANNM-798 Fixed known issue: In case of passive mode CanNmUserDataTxPdu should not be forced to exist

#### **Module version 6.11.0**

2015-06-24

- ▶ ASCCANNM-771 Fixed known issue: The Nm Message Tx Timeout Timer is not started when entering Network Mode from Prepare Bus Sleep Mode
- ▶ ASCCANNM-770 Fixed known issue: The Nm\_RemoteSleepIndication() can be triggered by a transition from Ready Sleep to Normal Operation
- ▶ ASCCANNM-751 Fixed known issue: TX Pdu is still transmitted after API CanNm\_DisableCommunication is called
- ▶ ASCCANNM-765 Fixed known issue: CanNm\_CheckRemoteSleepIndication has an incorrect return value

#### **Module version 6.10.0**

2015-02-20

- ▶ ASCCANNM-776 Fixed known issue: Statemachine remains in RepeatMessageState if CanNmRepeatMessageTime is 0
- ▶ CanNm\_Checks.m misleading error message

#### **Module version 6.9.0**

2015-01-07

- ▶ Fixed MISRA warning
- ▶ Update multiplicity of CanNmRxPdu elements according to resolution in bugzilla 54555.
- ▶ Add the CanNmNodeIdEnabled parameter.

#### **Module version 6.8.0**

2014-10-02

- ▶ Removed dependency that if CanNmRemoteSleepIndEnabled is false, then CanNmRemoteSleepIndTime needs to be 0
- ▶ ASCCANNM-686 Fixed known issue: Incomplete initialization of EIRA timer array
- ▶ ASCCANNM-674 Fixed known issue: NM messages are lost in case of external wake-ups
- ▶ Loosen the dependency between parameters `CanNmRemoteSleepIndTime` and `CanNmMsgCycleTime`
- ▶ Implemented support for Side Allocation
- ▶ Refactor CanNm.h to CanNm\_Api.h
- ▶ Add a test to prove that the module compiles without any post build information
- ▶ ASCCANNM-744 Fixed known issue: CanNmRemoteSleepIndTime cannot be 0 even if CanNmRemoteSleepIndEnabled is false
- ▶ Implement support for the aggregation of external requested partial networks (ERA)

#### **Module version 6.7.0**

2014-04-25

- ▶ ASCCANNM-648 Fixed known issue: Wrong memory section for an array of type `NetworkHandleType`
- ▶ ASCCANNM-663 Fixed known issue: `PreCompile` parameters referencing `Postbuild` parameters in invalid conditions in CanNm's XDM schema
- ▶ ASCCANNM-670 Fixed known issue: ECU may be prevented from entering SLEEP mode due to incorrect handling of EIRA
- ▶ ASCCANNM-675 Fixed known issue: Compile error in `CanNm_HandleTimerTick` function if Debug and Trace module is enabled
- ▶ ASCCANNM-668 Fixed known issue: In case of active wake-ups the last immediate and first cyclic message shall not be transmitted in the same cycle if `CanNmMsgCycleOffset` is configured to 0

#### **Module version 6.6.0**

2013-12-11

- ▶ ASCCANNM-624 Fixed known issue: TX timeout exception is not reported if `CanIf_Transmit()` returns `E_NOT_OK`
- ▶ ASCCANNM-623 Fixed known issue: User data is initialized incorrectly to 0x00U instead of 0xFFU if partial networking is enabled
- ▶ ASCCANNM-608 Fixed known issue: An incorrect DET error is reported when an invalid PDU ID is passed to `CanNm_TxConfirmation()` or `CanNm_RxIndication()`
- ▶ Implemented support of `VARIANT-POST-BUILD` for `CanNm`

#### Module version 6.5.0

2013-10-18

- ▶ ASCCANNM-587 Fixed known issue: NM Messages are stopped after the transmission of immediate NM messages
- ▶ ASCCANNM-586 Fixed known issue: Unexpected behavior when `CanNmPduCbvPosition` is configured to `CANNM_PDU_OFF`
- ▶ Implemented support of spontaneous transmission of NM PDUs via calls of API function `CanNm_NetworkRequest()`
- ▶ Changed functionality to release a network even if transmission of NM messages is disabled
- ▶ Implemented support for notification of transmission timeouts to `CanSM`
- ▶ ASCCANNM-609 Fixed known issue: `CanNm` erroneously reports TX timeout exception if feature *Bus Load Reduction* is enabled
- ▶ Changed the default value of parameter `CanNmRemoteSleepIndEnabled` to `false`
- ▶ Added support for function tracing via AUTOSAR Debugging

#### Module version 6.4.0

2013-06-25

- ▶ Improved the robustness of the finite state machine design by revising the event handling; removed configuration parameter `CanNmEventQueueSize`
- ▶ ASCCANNM-548 Fixed known issue: A compiler errors when `CanNmNodeDetectionEnabled` is set to `false` and '`CanNmPduNidPosition` is not set to `CANNM_PDU_OFF`'
- ▶ ASCCANNM-439 Fixed known issue: `CanNm` does not switch to repeat message state if communication is disabled

#### Module version 6.3.0

2013-02-15

- ▶ ASCCANNM-504 Fixed known issue: Error occurs during code generation when `CanNmTxPd` is disabled and `CanNmPassiveMode` is set to false
- ▶ Changed the reference path of `ComMChannel` in parameter `CanNmComMNetworkHandleRef` to `/AUTOSAR/EcuDefs/ComM/ComMConfigSet/ComMChannel`
- ▶ Memory allocation keywords were implemented in compliance to ASR 4.0.3
- ▶ ASCCANNM-474 Fixed known issue: The API functions `CanNm_GetNodeIdentifier()` / `CanNm_GetLocalNodeIdentifier()` are also available when parameter `CanNmPduNidPosition` is set to off
- ▶ ASCCANNM-507 Fixed known issue: Compiler errors when symbolic names according to AR4.0.3 are used
- ▶ ASCCANNM-512 Fixed known issue: `PduR_CanNmTxConfirmation()` and `PduR_CanNmTriggerTransmit()` are called with the wrong handle ID

#### Module version 6.2.0

2012-10-12

- ▶ ASCCANNM-463 Fixed known issue: Immediate Nm messages are not sent when `CanNmComControlEnabled` is set to false
- ▶ ASCCANNM-464 Fixed known issue: Incorrect number of immediate Nm messages
- ▶ ASCCANNM-461 Fixed known issue: Extra NM message is sent while leaving Repeat Message State when `CanNmMsgCycleOffset` is zero
- ▶ ASCCANNM-465 Fixed known issue: Compiler warning `statement not reached`
- ▶ ASCCANNM-467 Fixed known issue: CanNm schema does not prevent an invalid configuration of `CanNmRepeatMessageTime`
- ▶ Migrated to ASR 4.0 ComStack HandleId Policy
- ▶ Support for `ActiveWakeUp` bit in CBV added
- ▶ The top-level structure of the software-component description in the ARXML files changed from `/AUTOSAR/CanNm` to `/AUTOSAR_CanNm`
- ▶ ASCCANNM-486 Fixed known issue: Error during the PduR code generation when Com User Data support is enabled

#### Module version 6.1.1

2012-06-27

- ▶ Update to AUTOSAR 4.0.3 version
- ▶ ASCCANNM-413 Fixed known issue: No configuration constant for `CanNm_Init` is available



- ▶ ASCCANNM-422 Fixed known issue: CanNm may ignore valid PN messages
- ▶ ASCCANNM-397 Fixed known issue: Transition from Ready Sleep State to Prepare Bus-Sleep Mode takes longer than `CanNmTimeoutTime`
- ▶ ASCCANNM-425 Fixed known issue: EIRA contains PN requests which are not relevant for the ECU
- ▶ Corrected the invalid MemMap usage in `CanNm_HsmCanNmFnct.c`

#### **Module version 6.1.0**

2012-03-15

- ▶ ASCCANNM-364 Fixed known issue: Node never goes to Sleep state if `CanNm_DisableCommunication` is called in Repeat message state
- ▶ ASCCANNM-339 Fixed known issue: Event queue overflow
- ▶ ASCCANNM-385 Fixed known issue: Production error `CANNM_E_NETWORK_TIMEOUT` is erroneously reported

#### **Module version 6.0.2**

2011-12-08

- ▶ COM User Data Support added

#### **Module version 6.0.1**

2011-09-28

- ▶ EBACANNM-219 Fixed known issue: Bus Load Reduction Mechanism might increase the bus load

#### **Module version 6.0.0**

2011-09-02

- ▶ Initial AUTOSAR 4.0 version

### **3.3.3.2. New features**

- ▶ No new features have been added since the last release.

### 3.3.3.3. EB-specific enhancements

This chapter lists the enhancements provided by the module.

► COM Rx user data

Description:

COM Support for Rx user data is added.

- New container `CanNmUserDataRxPdu` is added to configure the Rx Pdu of received user data.
- User can enable or disable this container.

When this feature is enabled, then user must configure the respective Pdu in EcuC and provide correct routing path in PduR. When this feature is disabled, the user can still receive data using `CanNm_GetUserData()` API.

Rationale:

User has freedom of receiving the user data over COM.

► Channel with no user data with user data support enabled

Description:

As per AUTOSAR requirement CANNM086, when `CanNmUserDataEnabled` is enabled, the `CanNmUserDataLength` should not be zero.

The module deviates from this requirement. The module allows a user to configure a mixture of channels where some channels support user data and some channels doesn't support user data.

If `CanNm_GetUserData` or `CanNm_SetUserData` API is called for a channel with user data length as 0, DET error CANNM\_E\_INVALID\_FUNCTION\_ARG will be registered.

Rationale:

More flexibility and freedom of configuration for user is achieved.

► Support for `CanNmRetryFirstMessageRequest`

Description:

If `CanNmRetryFirstMessageRequest` is enabled and if the first transmit request after entry into Network Mode is not accepted by CanIf, the message request shall be repeated in the next main function until one transmit request is accepted by CanIf.

This enhancement can be used in case of partial network wakeup filter to avoid a blocking of all messages in case of passive start-up and first message request is not accepted by CanIf due to CanSM could not enable transmission path fast enough (e.g. in case of asynchronous transceiver handling).

This enhancement was implemented according to [http://www.autosar.org/bugzilla/show\\_bug.cgi?id=56407](http://www.autosar.org/bugzilla/show_bug.cgi?id=56407).

► Support for Side Allocation

Description:

The Side Allocation feature allow flashing of two different ECUs with the same software. The behaviour of each ECU will differ at runtime based on a flag(eg: stored in EEPROM or the level of a pin).

The following parameter differ between the two variants: `CanNmNodeId` `CanNm` supports configuring a callout function to be called everytime the `CanNm` module needs to retrieve a `NodId` for an ECU.

### 3.3.3.4. Deviations

This chapter lists the deviations of the module from the AUTOSAR standard.

► Initialization check in main function

Description:

According to requirements CANNM235 and CANNM236, if the main function (`CanNm_MainFunction()`) is called before the module is initialized (`CanNm_Init()`), the main function shall report an error to DET with an instance ID of `CanNm_MainFunction()`. In contrast to these requirements, `CanNm_MainFunction()` does not report any error to DET if it is called before initialization. However it returns immediately without performing any functionality.

Rationale:

According to AUTOSAR 4.0 General SRS requirement BSW00450, if a main function of an un-initialized module is called from the BSW Scheduler, it shall return immediately without performing any functionality and without raising any errors.

Requirements:

CANNM235, CANNM236

► COM user data zero length

Description:

As per the requirement CANNM086, if `CANNM_USER_DATA_ENABLED` is enabled, `CANNM_USER_DATA_LENGTH` should not be zero. In contrast to this, the user is allowed to configure a channel with `CANNM_USER_DATA_LENGTH` as zero.

Rationale:

In reality we may have a use case, where in a `CanNm` channel user data is present and another channel is not having user data. This requirement puts restriction on such use case.

Requirements:

CANNM086

► Coordinator Synchronization Support

Description:

The requirement CANNM341 describes that if the `CanNm` receives a NM message with the `NmCoordinatorSleepReady` bit (see CBV) set it shall indicate this to the Nm by calling `Nm_CoordReadyToSleepIndication()`.

The requirement CANNM342 describes that the `NmCoordinatorSleepReady` bit in the CBV shall be set by the API `CanNm_SetSleepReadyBit()`.

In contrast to the above requirements, `Nm_CoordReadyToSleepIndication()` is never called and the API `CanNm_SetSleepReadyBit()` is not provided.

Requirements:

CANNM341, CANNM342, CANNM343, CANNM338, CANNM340, CANNM080\_Conf

► Dependency between `CanNmTimeoutTime` and `CanNmMsgCycleTime`

Description:

The requirement CANNM020\_Conf states that the configuration parameter `CanNmTimeoutTime` must be a multiple of the value of the configuration parameter `CanNmMsgCycleTime`.

This dependency shall be removed since this dependency does not exist and therefore is wrong.

Rationale:

The system requirements of at least one customer requires timing settings where `CanNmTimeoutTime` is not a multiple of `CanNmMsgCycleTime`.

Additional information:

[http://www.autosar.org/bugzilla/show\\_bug.cgi?id=54115](http://www.autosar.org/bugzilla/show_bug.cgi?id=54115)

Requirements:

CANNM020\_Conf

► Changes in symbolic name references

Description:

If the attribute `SHORT-NAME` is not specified for the container `CanNmRxPdu` the symbolic name macros for `CanNmRxPduId` are generated not according to the requirement `ecuc_sws_2108` but according to the naming pattern `CanNmConf_CanNmChannelConfig_<ChannelName>_CanNmRxPdu`. where `<ChannelName>` is the name of the channel containing `CanNmRxPdu`.

The above behavior is also applicable for the generation of symbolic name for the parameter `CanNmTxConfirmationPduId` which is located inside the container `CanNmTxPdu` and `CanNmTxUserDataPduId` which is located inside the container `CanNmUserDataTxPdu` whose symbolic name macros are generated in the following pattern: `CanNmConf_CanNmChannelConfig_<ChannelName>_CanNmTxPdu` and `CanNmConf_CanNmChannelConfig_<ChannelName>_CanNmUserDataTxPdu`.

Rationale:

If no short-name is specified, EB tresos Studio assumes the name of the corresponding schema node as a default. Thus, the symbolic name macros generated according to the requirement `ecuc_sws_2108` are not unique.

► Dependency of `CanNmNodeId` on `CanNmNodeDetectionEnabled`

Description:

The description of the parameter `CanNmNodeId` contains the following dependency: "This parameter is only valid if `CanNmPassiveModeEnabled = false` and `CanNmNodeDetectionEnabled = true`."

In contrast to this, the parameter `CanNmNodeId` can be configured with no dependency on `CanNmNodeDetectionEnabled`.

Rationale:

The dependency that `CanNmNodeId` is valid only if `CanNmNodeDetectionEnabled = true` is incorrect.

Additional information:

[http://www.autosar.org/bugzilla/show\\_bug.cgi?id=57577](http://www.autosar.org/bugzilla/show_bug.cgi?id=57577)

Requirements:

CANNM031\_Conf

► Tracing of variables is not supported via AUTOSAR Debugging

Description:

`CanNm` module does not provide support for tracing global variables.

Requirements:

CANNM287, CANNM288, CANNM289, CANNM290

- ▶ Allow release of network if transmission of Nm messages is disabled

Description:

The function `CanNm_NetworkRelease()` returns `E_OK` and releases the network also if transmission of NM messages has been disabled by calling the function `CanNm_DisableCommunication()`.

Rationale:

According to requirement CANNM294 the function `CanNm_NetworkRelease()` shall have no effect and return `E_NOT_OK` if transmission of Nm messages is disabled. This behavior may cause problems when the network should be released. In case a call to `CanNm_NetworkRelease()` does not release the network the respective communication channel might not shut down and keep the ECU awake.

Additional information:

[http://www.autosar.org/bugzilla/show\\_bug.cgi?id=60589](http://www.autosar.org/bugzilla/show_bug.cgi?id=60589)

Requirements:

CANNM294

- ▶ No support for link-time configuration parameters

Description:

The following parameters are treated as pre-compile time parameters instead of as link-time parameters:

- ▶ `CanNmGlobalConfig/CanNmMainFunctionPeriod`
- ▶ `CanNmGlobalConfig/CanNmPnResetTime`
- ▶ `CanNmGlobalConfig/CanNmPnEiraRxNSduRef`
- ▶ `CanNmGlobalConfig/CanNmChannelConfig/CanNmAllNmMessagesKeepAwake`
- ▶ `CanNmGlobalConfig/CanNmChannelConfig/CanNmBusLoadReductionActive`
- ▶ `CanNmGlobalConfig/CanNmChannelConfig/CanNmCarWakeUpBitPosition`
- ▶ `CanNmGlobalConfig/CanNmChannelConfig/CanNmCarWakeUpBytePosition`
- ▶ `CanNmGlobalConfig/CanNmChannelConfig/CanNmCarWakeUpFilterEnabled`
- ▶ `CanNmGlobalConfig/CanNmChannelConfig/CanNmCarWakeUpFilterNodeId`
- ▶ `CanNmGlobalConfig/CanNmChannelConfig/CanNmCarWakeUpRxEnabled`
- ▶ `CanNmGlobalConfig/CanNmChannelConfig/CanNmImmediateNmCycleTime`
- ▶ `CanNmGlobalConfig/CanNmChannelConfig/CanNmImmediateNmTransmissions`
- ▶ `CanNmGlobalConfig/CanNmChannelConfig/CanNmMsgCycleOffset`
- ▶ `CanNmGlobalConfig/CanNmChannelConfig/CanNmMsgCycleTime`

- ▶ CanNmGlobalConfig/CanNmChannelConfig/CanNmMsgReducedTime
- ▶ CanNmGlobalConfig/CanNmChannelConfig/CanNmMsgTimeoutTime
- ▶ CanNmGlobalConfig/CanNmChannelConfig/CanNmNodeId
- ▶ CanNmGlobalConfig/CanNmChannelConfig/CanNmPduCbvPosition
- ▶ CanNmGlobalConfig/CanNmChannelConfig/CanNmPduNidPosition
- ▶ CanNmGlobalConfig/CanNmChannelConfig/CanNmPnEraCalcEnabled
- ▶ CanNmGlobalConfig/CanNmChannelConfig/CanNmPnHandleMultipleNetworkRequests
- ▶ CanNmGlobalConfig/CanNmChannelConfig/CanNmRemoteSleepIndTime
- ▶ CanNmGlobalConfig/CanNmChannelConfig/CanNmRepeatMessageTime
- ▶ CanNmGlobalConfig/CanNmChannelConfig/CanNmTimeoutTime
- ▶ CanNmGlobalConfig/CanNmChannelConfig/CanNmUserDataLength
- ▶ CanNmGlobalConfig/CanNmChannelConfig/CanNmWaitBusSleepTime
- ▶ CanNmGlobalConfig/CanNmChannelConfig/CanNmPnEraRxNSduRef
- ▶ CanNmGlobalConfig/CanNmChannelConfig/CanNmComMNetworkHandleRef
- ▶ CanNmGlobalConfig/CanNmChannelConfig/CanNmRxPdu/CanNmRxPduId
- ▶ CanNmGlobalConfig/CanNmChannelConfig/CanNmTxPdu/CanNmTxConfirmationPduId
- ▶ CanNmGlobalConfig/CanNmChannelConfig/CanNmUserDataTxPdu/CanNmTxUserDataPduId
- ▶ CanNmGlobalConfig/CanNmPnInfo/CanNmPnInfoLength
- ▶ CanNmGlobalConfig/CanNmPnInfo/CanNmPnInfoOffset
- ▶ CanNmGlobalConfig/CanNmPnInfo/CanNmPnFilterMaskByte/CanNmPnFilterMaskByteIndex

**Requirements:**

**CANNM300**

▶ **Description:**

The container CanNmRxPdu according to AUTOSAR R4.0.3 must have 1 element, but according to AUTOSAR R4.1.3 the multiplicity for the container CanNmRxPdu is 1..\*

This deviation has been introduced due to bugzilla ticket #54555.

**Requirements:**

**CANNM038\_Conf**

▶ **Changes in symbolic name references**

Description:

If the attribute `SHORT-NAME` is specified for the container `CanNmRxPdu` the symbolic name macros for `CanNmRxPduId` are generated not according to the requirement `ecuc_sws_2108` but according to the naming pattern `CanNmConf_CanNmChannelConfig_<ChannelName>_SHORT-NAME`. where `<ChannelName>` is the name of the channel containing `CanNmRxPdu`.

- Changes regarding `CanNmImmediateNmCycleTime`

Description:

Parameter `CanNmImmediateNmCycleTime` has a default value of 0.001 and the multiplicity is 1 and not 0..1 as in the Autosar 4.0.3 SWS.

Requirements:

`CANNM057_Conf`

### 3.3.3.5. Limitations

This chapter lists the limitations of the module. Refer to the module references chapter *Integration notes*, subsection *Integration requirements* for requirements on integrating this module.

- For this module no limitations are known.

## 3.3.4. CanSM module release notes

- AUTOSAR R4.0 Rev 3
- AUTOSAR SWS document version: 2.2.0
- Module version: 3.6.12.B206164
- Supplier: Elektrobit Automotive GmbH

### 3.3.4.1. Change log

This chapter lists the changes between different versions.

#### Module version 3.6.12

2018-06-22

- Internal module improvement. This module version update does not affect module functionality.





**Module version 3.6.11**

2018-05-25

- ▶ Internal module improvement. This module version update does not affect module functionality.

**Module version 3.6.10**

2018-04-20

- ▶ Internal module improvement. This module version update does not affect module functionality.

**Module version 3.6.9**

2018-02-16

- ▶ ASCCANSM-502 Fixed known issue: Missing include in source files when TS\_MERGED\_COMPILE is disabled

**Module version 3.6.8**

2017-11-17

- ▶ Internal module improvement. This module version update does not affect module functionality.

**Module version 3.6.7**

2017-09-22

- ▶ ASCCANSM-481 Fixed known issue: Call CanIf\_SetPduMode() with CANIF\_ONLINE after CanSM\_Tx-TimeoutException()

**Module version 3.6.6**

2017-08-25

- ▶ Inverted logic for AUTOSAR 4.0.2 and remove AUTOSAR 3.x legacy support for symbolic names

**Module version 3.6.5**

2017-07-28

- ▶ Support of specific Bus-Off handling.

#### **Module version 3.6.4**

2017-06-02

- ▶ ASCCANSM-469 Fixed known issue: Wrong error message and inconsistency in check of providing legacy defines

#### **Module version 3.6.3**

2017-03-31

- ▶ ASCCANSM-467 Fixed known issue: Memory mapping is unbalanced if merged compilation is used and partial networking enabled

#### **Module version 3.6.2**

2017-03-10

- ▶ Internal module improvement. This module version update does not affect module functionality.

#### **Module version 3.6.1**

2017-03-03

- ▶ Move integration requirements to separate reqm file.

#### **Module version 3.6.0**

2017-02-03

- ▶ Internal module improvement. This module version update does not affect module functionality
- ▶ Do not enable partial networking TX filter after BusOff

#### **Module version 3.5.1**

2017-01-05

- ▶ ASCCANSM-425 Fixed known issue: Changed the way ServiceNeedsWizard configures CanSM DemEvents

#### **Module version 3.5.0**

2016-11-04

- ▶ Usage of partial networking functionality on transceivers without selective wakeup capability

#### Module version 3.4.6

2016-05-25

- ▶ ASCCANSM-429 Fixed known issue: CanSM aborts compilation if validation of memory section enabled

#### Module version 3.4.5

2016-02-05

- ▶ Added support for Debug & Trace with custom header file configurable via parameter `BaseDbgHeader-File`

#### Module version 3.4.4

2015-11-06

- ▶ Source code restructuring in order to improve maintainability.

#### Module version 3.4.3

2015-09-18

- ▶ ASCCANSM-408 Fixed known issue: Bus-off recovery results in switch to OFFLINE if multiple Can controllers are connected to a single Can network

#### Module version 3.4.2

2015-06-18

- ▶ ASCCANSM-399 Fixed known issue: CanSM calls `CanNm_ConfirmPnAvailability()` with a wrong value for parameter `nmChannelHandle`

#### Module version 3.4.1

2014-12-19

- ▶ Internal module improvement. This module version update does not affect module functionality

#### Module version 3.4.0

2014-10-02

- ▶ ASCCANSM-366 Fixed known issue: CanSM does not handle subsequent bus-off events
- ▶ Updated state machine to harmonize with a ComM module according to AUTOSAR SWS 4.1 rev3
- ▶ Updated Tx timeout exception behavior according to AUTOSAR SWS 4.1 rev3
- ▶ Added possibility to enable partial networking without a transceiver configuration

#### **Module version 3.3.4**

2014-04-25

- ▶ ASCCANSM-356 Fixed known issue: CanSM includes DEM interface header file even if Dem module is not used
- ▶ Added support for enhanced BswM bus-off reporting

#### **Module version 3.3.3**

2013-11-15

- ▶ ASCCANSM-348 Fixed known issue: CanSM makes unattended calls to `BswM_CanSM_CurrentState()` and `CanIf_SetPduMode()`
- ▶ Added support for new baudrate switching API function `CanSM_SetBaudrate()`

#### **Module version 3.3.2**

2013-10-11

- ▶ Implemented support for handling of transmission timeouts

#### **Module version 3.3.1**

2013-06-14

- ▶ Added support for EB Debug and Trace solution
- ▶ Implemented non-functional code improvements in order to meet mass production criteria

#### **Module version 3.3.0**

2013-02-08

- ▶ ASCCANSM-275 Fixed known issue: Wrong header file included for usage of API function `CanNm_ConfirmPnAvailability()`

- ▶ ASCCANSM-284 Fixed known issue: CanSM uses wrong symbolic name for DEM event referenced by configuration parameter `CANSM_E_BUS_OFF`
- ▶ ASCCANSM-301 Fixed known issue: Compiler errors occur when partial networking is enabled but no transceiver is configured
- ▶ Updated reference paths of CanSM-ComMChannel reference for the introduction of `ComMConfigSet` container in ComM
- ▶ Updated state machine according to AUTOSAR 4.0 Rev 3 SWS

#### Module version 3.2.0

2012-10-19

- ▶ ASCCANSM-248 Fixed known issue: The CanSM prevents the shutdown of the ECU in case the `ComM-NmVariant` of the corresponding `ComMChannel` is configured to NONE or LIGHT
- ▶ Changed the top-level structure of the software-component description in the ARXML files from `/AUTOSAR/CanSM` to `/AUTOSAR_CanSM`
- ▶ Implemented Dem handling according to AUTOSAR 4.0 Rev 3 SWS

#### Module version 3.1.1

2012-06-20

- ▶ ASCCANSM-221 Fixed known issue: Wrong header file included for usage of API function `CanNm_ConfirmPnAvailability()`

#### Module version 3.1.0

2012-03-16

- ▶ Partial networking support

#### Module version 3.0.0

2011-09-02

- ▶ Initial AUTOSAR 4.0 version.

### 3.3.4.2. New features

- ▶ No new features have been added since the last release.

### 3.3.4.3. EB-specific enhancements

This chapter lists the enhancements provided by the module.

► Enhanced production error reporting

Description:

An enhanced production error reporting mechanism has been introduced. This allows to configure the following options independently for each Dem event:

- Report production errors to the `Diagnostics Event Manager (Dem)`.
- Report production errors to the `Development Error Tracer (Det)` as development errors.
- Do not report production errors at all.

If a production error is redirected towards the `Det`, you may configure the reported `Det` error-ID.

Rationale:

This enhancement implements the HIS requirements concerning fault operation and error detection: HisGen0007, HisGen0008 and HisGen0009.

► DET error `CANSM_E_INVALID_BUSOFF_INDICATION` introduced

Description:

If the function `CanSM_ControllerBusOff()` is indicated and `CanSM` is not in state `COMM_FULL_COMMUNICATION`, `CanSM_ControllerBusOff()` calls the function `Det_ReportError()` with the `ErrorId` parameter `CANSM_E_INVALID_BUSOFF_INDICATION` (value `0x0B`).

Rationale:

Bus-off recovery is only applicable if `CanSM` is in full communication.

► DET error `CANSM_E_TXTIMEOUT_RECOVERY_ACTIVE` introduced

Description:

If the function `CanSM_RequestComMode()` is indicated and `CanSM` perform Tx timeout recovery (refer to function `CanSM_TxTimeoutException()`), `CanSM_RequestComMode()` calls the function `Det_ReportError()` with the `ErrorId` parameter `CANSM_E_TXTIMEOUT_RECOVERY_ACTIVE` (value `0x0C`).

Rationale:

Mode transition is only applicable if no Tx timeout recovery is active.

► Enhanced bus-off reporting

Description:

Refer to the EB specific configuration parameter `CanSMEnhancedBusOffReporting` for enabling enhanced bus-off reporting. If enhanced bus-off reporting is enabled, the `CanSM` reports the following two additional states to the `BswM`:

- ▶ `CANSM_BSWM_BUS_OFF_L1`: To report a bus-off when the bus-off counter is lower than `CanSMBorCounterL1ToL2`.
- ▶ `CANSM_BSWM_BUS_OFF_L2`: To report a bus-off when the bus-off counter is greater than or equal to `CanSMBorCounterL1ToL2`.

**Rationale:**

This enhancement allows the `BswM` and its extensions to distinguish between the bus-off recovery levels L1 and L2 when a bus-off is notified.

- ▶ Partial networking usage

**Description:**

`CanSM` allows to use the feature `partial networking` without any CAN transceiver driver configuration.

**Rationale:**

This enhancement gives `CanNm` the possibility to enable its `partial networking` support without using an AUTOSAR conform CAN Transceiver driver module.

This might be a valid use-case for an ECU initiating wakeups of partial networks without needing the capability to wakeup on its own.

- ▶ Partial networking Tx filter not enabled after Bus-Off

**Description:**

`CanSM` allows to use the feature `partial networking` without delaying the startup through `TxPnFilter` (needed to handle first the NM messages) after a Bus-Off.

**Rationale:**

This enhancement implements the PDU mode state machine according to ASR 4.2.2. Please refer to Bugzilla RFC 52225 and 61651 for more details.

- ▶ Support of specific Bus-Off handling

**Description:**

`CanSM` supports a specific bus-off handling which is achieved by a pre-compile time config parameter named `CanSMBusDeactivatedBussOff`. This new feature will deactivate the CAN controller, during the bus-off recovery time.

Rationale:

After a Bus-Off, CanSM module shall - deactivate Tx and also Rx path, setting Pdu modes to CANIF\_OFFLINE, instead of CANIF\_TX\_OFFLINE(AUTOSAR-like behavior) - start CAN controller

#### 3.3.4.4. Deviations

This chapter lists the deviations of the module from the AUTOSAR standard.

- On bus-off event, the order of actions differs from the AUTOSAR SWS

Description:

In case of a bus-off event, AUTOSAR specifies the following actions to be performed:

1. Call BswM\_CanSM\_CurrentState(network, CANSM\_BSWM\_BUS\_OFF) [CANS508]
2. Call ComM\_BusSM\_ModeIndication(network, COMM\_SILENT\_COMMUNICATION) [CANS521]
3. Call Dem\_ReportErrorStatus(eventId, DEM\_EVENT\_STATUS\_PREFAILED) [CANS522]
4. Call CanIf\_SetControllerMode(ctrlId, CANIF\_CS\_STARTED) [CANS509]

This implementations performs the required action in the following order:

1. Call BswM\_CanSM\_CurrentState(network, CANSM\_BSWM\_BUS\_OFF)
2. Call Dem\_ReportErrorStatus(eventId, DEM\_EVENT\_STATUS\_PREFAILED)
3. Call CanIf\_SetControllerMode(ctrlId, CANIF\_CS\_STARTED)
4. Call ComM\_BusSM\_ModeIndication(network, COMM\_SILENT\_COMMUNICATION)

Rationale:

Action order follows the AUTOSAR 4.2 Rev 2 SWS.

Requirements:

CANS508 CANS521 CANS522 CANS509

- Only pre-compile configuration is supported (reference to product description ASCPD-77)

Description:

The CanSM module only supports configuration variant VARIANT-PRE-COMPILE. VARIANT-LINK-TIME (CANS251) and VARIANT-POST-BUILD (CANS252) are not supported. The source files CanSM\_Lcfg.c (CANS361) and CanSM\_PBcfg.c (CANS362) are not provided.

Requirements:



CANSM251 CANSM252 CANSM361 CANSM362 CANSM010 CANSM251 CANSM252

- ▶ `CanSM` does not provide APIs to change or check baud rate of a CAN network (reference to product description: ASCPD-98)

Description:

`CanSM` does not support the following API services:

- ▶ `CanSM_CheckBaudrate`
- ▶ `CanSM_ChangeBaudrate`

Requirements:

CANSM501 CANSM564 CANSM565 CANSM562 CANSM571 CANSM563 CANSM566 CANSM561  
CANSM569 CANSM570 CANSM502 CANSM504 CANSM505 CANSM530 CANSM506 CANSM573  
CANSM574 CANSM503 CANSM567 CANSM568 CANSM572 CANSM432 CANSM433 CANSM524  
CANSM525 CANSM526 CANSM527 CANSM529 CANSM531 CANSM532 CANSM533 CANSM534  
CANSM535 CANSM536 CANSM542 CANSM543 CANSM342\_Conf CANSM507

- ▶ No consistency check between code files and header files

Description:

The inter-module version checks as specified in the `CanSM` SWS are not implemented.

Rationale:

Module consistency check is not within the responsibility of the basic software but part of configuration management and delivery process.

Requirements:

CANSM025

- ▶ Communication mode may change in context of `CanSM_RequestComMode`

Description:

Transitions of the `CanSM` state machine, which are triggered by the API function `CanSM_RequestComMode`, are fully operated in the context of `CanSM_RequestComMode` if expected mode indications are performed synchronously.

Rationale:

Reduction of time necessary for a state transition. In case of synchronous mode indications the transition is also synchronous, instead of lasting until the next `CanSM` `MainFunction` invocation.

Requirements:

#### CANSM428

- ▶ No AUTOSAR debug and trace support

##### Description:

`CanSM` does not support AUTOSAR debug and trace support.

##### Requirements:

#### CANSM310 CANSM309

- ▶ `CanSM` does not call `ComM` during initial transition

##### Description:

`CanSM` does not call `ComM` notification `ComM_BusSM_ModeIndication()` during the initial transition to No Communication.

##### Rationale:

The initial transition takes place in the initialization of `CanSM`. `ComM` may not be initialized at this moment.

##### Requirements:

#### CANSM430

- ▶ `CanSM` always accepts a mode request

##### Description:

The `CanSM` always accepts a mode request by `ComM` and reports a Development Error only, if a mode request is done with invalid parameters.

##### Rationale:

`CanSM` must not lose a mode request by `ComM`. A mode request done during an ongoing transition shall be stored and processed afterwards. Please refer to Bugzilla Rfc 55033 for more details.

##### Requirements:

#### CANSM375 CANSM376 CANSM377 CANSM395 CANSM555 CANSM402

- ▶ Partial networking TX filter is not enabled after BusOff

##### Description:

The TX\_OFFLINE transition as a E\_FULL\_TO\_SILENT\_COM effect is now done directly without passing through ONLINE first. The effect E\_TX\_OFF of the sub state machine CANSM\_BSM\_S\_FULLCOM is not

needed anymore (no PDU mode request to CANIF\_TX\_OFFLINE needed). `CanIf` sets the CANIF\_TX\_OFFLINE mode when `CanIf_ControllerBusOff()` is called.

Rationale:

The PDU mode state machine is updated to ASR 4.2.2 and now the transition to OFFLINE is done automatically by `CanIf`. `CanIf_PduSetModeType` and `CanIf_PduGetModeType` were replaced by `CanIf_PduModeType` containing the following PDU Channel Modes: CANIF\_ONLINE, CANIF\_OFFLINE, CANIF\_TX\_OFFLINE and CANIF\_TX\_OFFLINE\_ACTIVE. Please refer to Bugzilla RFC 52225 and 61651 for more details.

Requirements:

CANSM537 CANSM513

### 3.3.4.5. Limitations

This chapter lists the limitations of the module. Refer to the module references chapter *Integration notes*, subsection *Integration requirements* for requirements on integrating this module.

- ▶ Number of supported underlying `CanIfCtrlDrvCfg` container

Description:

The `CanSM` only supports a single CAN controller driver configuration in module `CanIf`. The configuration parameter `CanSMControllerId` of each `CanSMController` container must refer to the same `CanIfCtrlDrvCfg` container.

Rationale:

Multiple CAN controller driver configurations are not supported in module `CanIf`.

- ▶ Code optimizations may result in compiler warnings

Description:

The `CanSM` implicitly uses code optimizations for certain configurations. This may, however, lead to compiler warnings such as "if-statement always evaluates to true".

Rationale:

Excluding all potentially redundant control flow statements would clutter code.

### 3.3.5. CanTp module release notes

- ▶ AUTOSAR R4.0 Rev 3

- ▶ AUTOSAR SWS document version: 4.0.0
- ▶ Module version: 6.8.13.B206164
- ▶ Supplier: Elektrobit Automotive GmbH

### 3.3.5.1. Change log

This chapter lists the changes between different versions.

#### Module version 6.8.13

2018-06-22

- ▶ Allow TxConfirmation() to request another transmission of the same PDU.
- ▶ ASCCANTP-1228 Fixed known issue: The dynamic STmin value change during segmented transmission is not allowed.
- ▶ ASCCANTP-1253 Fixed known issue: Invalid N\_PCI of Single Frame with FD accepted.

#### Module version 6.8.12

2018-05-25

- ▶ ASCCANTP-1209 Fixed known issue: Wrong padding value for small CAN-FD frames.

#### Module version 6.8.11

2018-04-20

- ▶ Add support for uint32 PduLengthType

#### Module version 6.8.10

2018-03-16

- ▶ Internal module improvement. This module version update does not affect module functionality.

#### Module version 6.8.9

2018-02-16

- ▶ ASCCANTP-1206 Fixed known issue: CAN-FD Flow Control length erroneously computed for CAN-FD messages.



#### **Module version 6.8.8**

2018-01-19

- ▶ ASCCANTP-1174 Fixed known issue: Configuration of CAN 2.0 frames with length less than 8 bytes is not allowed.

#### **Module version 6.8.7**

2017-12-15

- ▶ Reduce memory consumption by introducing parallel channels.

#### **Module version 6.8.6**

2017-09-22

- ▶ Improve usage of critical section for idle channels.

#### **Module version 6.8.5**

2017-08-25

- ▶ ASCCANTP-1157 Fixed known issue: Usage of mixed CAN 2.0 and CAN-FD PDUs not allowed.

#### **Module version 6.8.4**

2017-07-28

- ▶ ASCCANTP-1150 Fixed known issue: Incorrect compiler abstraction used in CanTp\_RxIndication.
- ▶ Post-build selectable support.
- ▶ ASCCANTP-1148 Fixed known issue: Wrong data type is used for the structure member NumberOfChannels.

#### **Module version 6.8.3**

2017-06-30

- ▶ Internal module improvement. This module version update does not affect module functionality.

#### **Module version 6.8.2**

2017-06-02

- ▶ Provide CanTp\_ReadParameter() API.

**Module version 6.8.1**

2017-05-05

- ▶ Report Det error when a postponed Rx frame is overwritten.

**Module version 6.8.0**

2017-03-31

- ▶ The number of CanTpRx/TxChannels as well as CanTpRx/TxNSdus that are supported by the implementation is extended.

**Module version 6.7.1**

2017-03-10

- ▶ Internal module improvement. This module version update does not affect module functionality.

**Module version 6.7.0**

2017-03-03

- ▶ Configurable CAN-FD PDUs padding length to 64 bytes.
- ▶ Move integration requirements to separate reqm file.

**Module version 6.6.1**

2017-02-03

- ▶ Internal module improvement. This module version update does not affect module functionality

**Module version 6.6.0**

2017-01-05

- ▶ Different padding byte values for CAN 2.0 and CAN FD PDUs.
- ▶ Different configurable timeout values for repeated FC WAIT and other FC PDUs

**Module version 6.5.12**

2016-12-02

- ▶ ASCCANTP-1078 Fixed known issue: Behavior upon reception of unexpected PDUs deviates from ISO/CD 15765-2:2014 and AUTOSAR 4.1.x/4.2.x

#### Module version 6.5.11

2016-11-04

- ▶ Adapted resource file for the scheduling of main functions to the split of `IpduM_MainFunction()` into `IpduM_MainFunctionRx()` and `IpduM_MainFunctionTx()`.
- ▶ Improve the description of `CanTpNSa` and `CanTpNTa`
- ▶ Remove compiler warnings with GHS multi C Compiler v2014.1.6

#### Module version 6.5.10

2016-07-01

- ▶ Internal module improvement. This module version update does not affect module functionality

#### Module version 6.5.9

2016-04-29

- ▶ ASCCANTP-1059 Fixed known issue: `CanTp` sends flow control frame with status overflow as response on discarded single frame

#### Module version 6.5.8

2016-02-05

- ▶ Added support for Debug & Trace with custom header file configurable via parameter `BaseDbgHeader-File`

#### Module version 6.5.7

2015-11-06

- ▶ Removed the usage `EcuC PduLength` as maximum for I-PDUs
- ▶ ASCCANTP-1045 Fixed known issue: If there are multiple `CanTpRxNPduld` or `CanTpRxFcNPduld` instances configured to value 0, `CanTp_SetNSa()` fails
- ▶ Updated memory section naming

#### Module version 6.5.6

2015-06-19



- ▶ Added support to transmit and receive segmented messages with more than 4095 bytes
- ▶ Added CAN FD support to transmit and receive N-PDUs with length up to 64 bytes
- ▶ ASCCANTP-1037 Fixed known issue: CanTp\_SetNSa()/CanTp\_GetNSa() APIs write and read source addresses for wrong N-SDUs

#### **Module version 6.5.5**

2015-02-20

- ▶ Internal module improvement. This module version update does not affect module functionality

#### **Module version 6.5.4**

2015-01-07

- ▶ Added support for configurable mapping of CanTp\_IsValidConfig function to dedicate memory section
- ▶ Removed AUTOSAR 3.x compliant symbolic name value macros and updated the logic to only provide AUTOSAR 4.0.2 compliant macros if macro CANTP\_PROVIDE\_LEGACY\_SYMBOLIC\_NAMES is defined

#### **Module version 6.5.3**

2014-10-02

- ▶ Improved state machine to allow expected incoming frames (CTS, CF) before outgoing frames (CF, CTS) are confirmed
- ▶ Update range check of CanTpGptChannelResolution to prevent that it is configured to zero

#### **Module version 6.5.2**

2014-04-24

- ▶ Updated address space to allow incoming N-PDU and FC N-PDU with same address
- ▶ ASCCANTP-964 Fixed known issue: The service needs assistant tries to generate (non existent) CanTp Dem events and reports a warning that shall be ignored
- ▶ ASCCANTP-983 Fixed known issue: Compilation aborts and reports an error if memory mapping is used for memory sections CANTP\_START\_CONFIG\_DATA\_UNSPECIFIED and CANTP\_START\_SEC\_CODE
- ▶ Introduced memory section for jump table shared variables
- ▶ ASCCANTP-985 Fixed known issue: Compilation aborts if Dbg function call tracing is enabled for internal CanTp function CanTp\_RequestTxFrameData()



- ▶ ASCCANTP-986 Fixed known issue: Build error due to missing file `CanTp_PBcfg.c` if code generation for CanTp is disabled and only post-build configuration is compiled
- ▶ Updated block size value for segmented frame reception

#### Module version 6.5.1

2013-10-10

- ▶ ASCCANTP-913 Fixed known issue: CanTp expects the upper layer to provide data sufficient to fill a CF which may lead to a `N_Cr` timeout
- ▶ Updated symbolic name value naming schema according to AUTOSAR 4.0 rev3
- ▶ Updated MCG to generate XML code for Binary Code Generation

#### Module version 6.5.0

2013-06-18

- ▶ ASCCANTP-804 Fixed known issue: The functions `CanTp_CancelReceive()` and `CanTp_CancelTransmit()` incorrectly report a DET error
- ▶ ASCCANTP-836 Fixed known issue: `CanTp_Transmit` does not check the N-Sdu data size for functional addressing properly
- ▶ Added checking of configuration and platform specific signature to prevent loading of incompatible post-build configuration
- ▶ Added checking of published information signature to prevent loading of incompatible post-build configuration
- ▶ ASCCANTP-862 Fixed known issue: Post-build configuration does not work if jumptables are enabled
- ▶ Implemented `CanTpTc`
- ▶ Updated handle ID wizard to set the configuration parameters `CanTpRxNPduId` and `CanTpRxFcNPduId` also for extended and mixed addressing format

#### Module version 6.4.0

2013-02-08

- ▶ Add relocatability to post build configuration
- ▶ ASCCANTP-729 Fixed known issue: If `CanTpNcs` is equal to `CanTpMainFunctionPeriod`, a timeout always occurs
- ▶ ASCCANTP-598 Fixed known issue: If a timeout occurs, CanTp might report `NTFRSLT_E_NOT_OK` instead of the timeout specific error code

- ▶ Update block size calculation to AUTOSAR 4.0 rev3

#### **Module version 6.3.0**

2012-10-16

- ▶ Update BSW to AUTOSAR 4.0 rev3 TP API
- ▶ Migration to ASR 4.0 ComStack HandleId Policy
- ▶ ASCCANTP-738 Fixed known issue: Automatic assignment of `CanTp_MainFunction()` to a task for periodic execution works only if the `CanTpConfig` is named `CanTpConfig_0`
- ▶ The top-level structure of the software-component description in the ARXML files changed from `/AUTOSAR/CanTp` to `/AUTOSAR_CanTp`

#### **Module version 6.2.0**

2012-06-20

- ▶ Updated config according to AUTOSAR 4.0 rev3
- ▶ Introduce post build data structure

#### **Module version 6.1.0**

2012-03-16

- ▶ ASCCANTP-612 Fixed known issue: CanTp uses default `N-Cs` value for buffer handling timeouts if no physical Tx N-SDU is configured
- ▶ Updated naming scheme for `#defines` for symbolic name values to AUTOSAR 4.0 rev3 naming scheme

#### **Module version 6.0.1**

2011-09-30

- ▶ ASCCANTP-597 Fixed known issue: Compilation of CanTp generates a compiler warning or fails with an error due to the use of invalid preprocessor directive in the source code
- ▶ Updated Dem handling (except the configuration) to AUTOSAR 4.0

#### **Module version 6.0.0**

2011-09-02

- ▶ Initial AUTOSAR 4.0 version

### 3.3.5.2. New features

- ▶ Allow TxConfirmation() to request another transmission of the same PDU.

### 3.3.5.3. EB-specific enhancements

This chapter lists the enhancements provided by the module.

- ▶ The parameter `CanTpGeneral/CanTpDynamicNSaEnabled` was added to configure the handling of N\_SA values. It allows to configure the following handling of N\_SA values:
  - ▶ TRUE: N\_SA values can be set and get via API interface functions.
  - ▶ FALSE: Use of N\_SA values as configured in ROM (default).
- ▶ The module can be used as jump table module from several applications.

In this case, one application must be the jump table server, that implements the jump table and all functionality. The other applications can then configure the CanTp as jump table client which means that the functionality is reduced to wrapper functions or macros, that call the jump table server functions.

- ▶ The module can recover from lower layer transmit errors.

If the call to `CanIf_Transmit()` fails, the module does not return an error immediately. Instead, it tries to transmit the frame until the N\_As timeout has elapsed and then it notifies the upper layer upon failure.

- ▶ The module tolerates received padded frames even if padding is disabled.

If the CanTp module of the sender is configured with padding enabled and the CanTp module of the receiver is configured with padding disabled, the CanTp module of the receiver tolerates received padded frames and processes them.

- ▶ The module is able to receive and transmit segmented frames with up to 65535 bytes of payload.

The module is able to transmit and receive segmented frames to transport up to 65535 bytes of data. For a payload greater than 4095 the module will use the first frame format as specified in AUTOSAR 4.2.1.

- ▶ The module supports CAN FD to transmit and receive PDUs up to 64 byte.

The module is also able to transmit and receive frames with PDU length of 12, 16, 20, 24, 32, 48, or 64. For single frames with PDU size greater 8 the module will use the single frame format as specified in AUTOSAR 4.2.1. This feature can be enabled by the configuration parameter `CanTpGeneral/CanTpFlexibleDataRateSupport`. The maximum allowed PDU size can be configured for every EcuC PDU which is referred by `CanTpRxnPduRef` or `CanTpTxnPduRef`.

- ▶ The CanTp module supports different configurable padding values for CAN-FD frames.

The module is able to transmit different padding values for CAN-FD and CAN 2.0 PDUs. This feature can be enabled by the configuration parameter `CanTpGeneral/CanTpPaddingByteCanFD` allowing a maximum padding value up to 255.

- ▶ The module supports different configurable timeout values for repeated FC WAIT PDUs.

The module is able to transmit Flow Control frames with WAIT status using a different timeout value for repeated Flow Control WAIT PDUs. This feature can be enabled by the configuration parameter `CanTpGeneral/CanTpNbrWaitRepeatedSupport`. The Flow Control PDU timeout can be configured for every `RxNSdu` via `CanTpNbrWaitRepeated`.

- ▶ The CanTp module supports mandatory padding of CAN FD PDUs to 64 bytes and CAN 2.0 PDUs to 8 bytes, if `CANTP_ON_CAN_CAN_FD` is configured.

The module is able to transmit CAN FD PDUs with the maximum value of 64 bytes. This feature can be enabled by the configuration parameter `CanTpTxPaddingActivation` (on transmission) and `CanTpRxPaddingActivation` (on reception). The possible enumeration literals of the existing config parameters `CanTpTxPaddingActivation` and `CanTpRxPaddingActivation` are extended by the literal `CANTP_ON_CAN_CAN_FD`: - `CANTP_OFF`: No padding needed - `CANTP_ON`: Enable mandatory padding to 8 bytes for CAN 2.0 PDUs only - `CANTP_ON_CAN_CAN_FD`: Enable mandatory padding to 8 bytes for CAN 2.0 PDUs and 64 bytes for CAN FD PDUs

- ▶ The module supports an enlarged upper limit of NSdus and channels.

The CanTp module supports up to 65535 half duplex or 32767 full duplex connection channels. The maximum number of `TxNSdus`, as well as `RxNSdus` was extended to 32767.

- ▶ The module reports an error when a queued CF is overwritten.

The module reports a Det error when a postpones Rx frame is overwritten.

- ▶ The module provides `CanTp_ReadParameter()` API.

To get a high performance link between a tester and an ECU during the network, the TP has to be speed up by changing FlowControl parameters like `STmin` and `Blocksize`. After changing `STmin` and `Blocksize` parameters, CanTp module provides an interface to read the current values for `STmin` and `Blocksize` from the CAN-TP. The use case for reading the TP parameters is to have the possibility to check the values of the parameters after writing them.

- ▶ The module supports parallel channels.

Parallel channels are an efficient and fast way to reduce RAM consumption. Information during run-time can be stored using parallel channels. When `CanTpMaxParallelChannels` are configured the major amount of required global RAM is given by the array `CanTp_Channel` which dimension is equal with the maximum number of parallel channels.

### 3.3.5.4. Deviations

This chapter lists the deviations of the module from the AUTOSAR standard.

- ▶ Flow control frames are sent immediately without respecting timeout `N_Br`.

Description:

During reception of a segmented message, ISO 15765-2 chapter 6.7.1 mandates to wait for N\_Br to elapse before sending a flow control (FC) frame. For the CanTp implementation, the flow control messages FC(CTS) and FC(OVFLW) are sent immediately when the corresponding conditions (buffer available, buffer request failed permanently) are met. The flow control message FC(WT) is sent after N\_Br has elapsed.

Rationale:

To improve bus performance, feedback is provided immediately when it is known. FC(WT) is only sent if needed.

- Initialization check in main function

Description:

If the main function is called while the module is not yet initialized the main function returns immediately without performing any functionality and without raising any Det error. This initialization check is always performed independent of the development error detection setting.

Rationale:

The RTE module may schedule the modules main function before the module is initialized. This would result in lots of Det errors during start up. Therefore the module's main function does not throw a Det error if the module is not yet initialized and simply returns in this case.

- CanTp does not report `CANTP_E_INVALID_TX_BUFFER` and `CANTP_E_INVALID_RX_BUFFER`.

Description:

CanTp does not provide any DET checks which reports the error `CANTP_E_INVALID_TX_BUFFER` or `CANTP_E_INVALID_RX_BUFFER`.

Rationale:

With the change of the AUTOSAR Tp API in AUTOSAR 4.0, the CanTp DET errors `CANTP_E_INVALID_TX_BUFFER` and `CANTP_E_INVALID_RX_BUFFER` are obsolete. See Bugzilla [http://www.autosar.org/bugzilla/show\\_bug.cgi?id=56264](http://www.autosar.org/bugzilla/show_bug.cgi?id=56264).

Requirements:

CANTP293

- CanTp does not provide the API function `CanTp_Shutdown()` (reference to product description: ASCPD-96).

Description:

The API function `CanTp_Shutdown()` is not implemented in the CanTp module.

Rationale:

There is no AUTOSAR internal user for the API function `CanTp_Shutdown()` and the behavior and operating constraints are not clearly specified in the AUTOSAR SWS. Using the function might be risky since expectations and actual behavior might differ, so it was decided to skip the function implementation.

Requirements:

CANTP010, CANTP211, CANTP202, CANTP200

- ▶ `PduR_CanTpChangeParameterConfirmation()` must not be called.

Description:

The callback function `PduR_CanTpChangeParameterConfirmation()` is not used to notify the upper layer about the result of the `CanTp_ChangeParameter()` function call.

Rationale:

Since `CanTp_ChangeParameter()` is specified as synchronous, there is no need to use the callback function `PduR_CanTpChangeParameterConfirmation()` to notify the upper layer. The return value is sufficient. Also see Bugzilla [http://www.autosar.org/bugzilla/show\\_bug.cgi?id=46227](http://www.autosar.org/bugzilla/show_bug.cgi?id=46227).

Requirements:

CANTP304, CANTP305, CANTP306

- ▶ Notification result `NTFRSLT_E_CANCELATION_OK` and `NTFRSLT_E_CANCELATION_NOT_OK` not used

Description:

CanTp reports a successful cancellation with `PduR_CanTpRxIndication()/PduR_CanTpTxConfirmation()` using the notification result `NTFRSLT_E_NOT_OK`. In case that the cancellation was not successful, `PduR_CanTpRxIndication()/PduR_CanTpTxConfirmation()` is not called.

Rationale:

Due to the decision in the Bugzilla issue [http://www.autosar.org/bugzilla/show\\_bug.cgi?id=52106](http://www.autosar.org/bugzilla/show_bug.cgi?id=52106) the notification result `NTFRSLT_E_CANCELATION_OK` and `NTFRSLT_E_CANCELATION_NOT_OK` shall not be used. Instead a successful cancellation shall be reported with `PduR_CanTpRxIndication()/PduR_CanTpTxConfirmation()` using the notification result `NTFRSLT_E_NOT_OK`.

Requirements:

CANTP244, CANTP255, CANTP263

- ▶ No AUTOSAR Debug and Trace support

Description:

CanTp is not instrumented for the usage with AUTOSAR Debug and Trace.

Requirements:

CANTP249, CANTP250, CANTP251, CANTP252, CANTP253

- ▶ CanTpRxDl and CanTpTxDl are not used

Description:

The configuration parameters CanTpRxDl and CanTpTxDl are not used.

Rationale:

Based on RFC53101 the CanTpRxDl and CanTpTxDl are deprecated and shall not be used in the future.  
[http://www.autosar.org/bugzilla/show\\_bug.cgi?id=53101](http://www.autosar.org/bugzilla/show_bug.cgi?id=53101)

Requirements:

CANTP280\_Conf, CANTP267\_Conf

- ▶ Det errors CANTP\_E\_TX\_COM, CANTP\_E\_RX\_COM and CANTP\_E\_COM are not reported

Description:

In case that a connection is aborted due to a timeout or other connection related issues, the module does not report a Det error.

Rationale:

These Det reports are no real development error information but additional runtime information in case that a connection problem occurs. However, in this case the upper layer is informed about the reason of the aborted connection anyway. The Det report does not provide any additional or relevant information if this happens. Find the discussion to this topic at [http://www.autosar.org/bugzilla/show\\_bug.cgi?id=52569](http://www.autosar.org/bugzilla/show_bug.cgi?id=52569)

Requirements:

CANTP229, CANTP293

- ▶ No consistency check between code files and header files

Description:

The inter-module version checks as specified by the SWS are not implemented.

Rationale:

- ▶ The required compile-time version checks would result in an inflexible basic software stack hardly to integrate.
- ▶ EB tresos AutoCore is an already integrated product.
- ▶ The project handling of EB tresos Studio provides means to enforce that only modules with the same AUTOSAR release version can be added to the project.

Requirements:

CANTP307, CANTP308

### 3.3.5.5. Limitations

This chapter lists the limitations of the module. Refer to the module references chapter *Integration notes*, subsection *Integration requirements* for requirements on integrating this module.

- ▶ Limitation on the number of connection channels

Description:

The CanTp supports up to 65535 half duplex or 32767 full duplex connection channels. If full and half duplex channels are mixed twice the number of full duplex channels plus the number of half duplex channels must be lower than or equal to 65535.

Rationale:

This limitation allows to use 2 byte to identify channels and therefore reduces the ROM size of the configuration.

- ▶ Limitation on the number of N-SDUs

Description:

The maximum number of `CanTpRxNSdus` and `CanTpTxNSdus` are implementation dependent and limited to 32767 each.

- ▶ Limitation on parameter `CanTpRxWftMax`

Description:

The CanTp supports a maximum value of 255 for parameter `CanTpRxWftMax`.

Rationale:

This limitation allows to use 1 byte for the `N_WFTmax` parameter and therefore reduces the ROM size of the configuration.

- ▶ Maximum data size of segmented frames is limited to 65535





Description:

CanTp only supports to transmit N-SDUs and receive I-PDUs which do not exceed 65535.

Rationale:

The `PduLengthTypeEnum` in `EcuC` is limited to 16 bit.

## 4. ACG8 CAN Stack user's guide

### 4.1. Overview

The ACG8 CAN Stack user's guide provides information about the concepts of the CAN stack in the AUTOSAR context. Before you read this user's guide, read the general concepts about communication stacks in AUTOSAR that are described in the EB tresos AutoCore Generic documentation.

- ▶ [Section 4.2, “Background information”](#) describes the concept of CAN communication in the AUTOSAR context.
- ▶ [Section 4.3, “CAN communication stack dependencies”](#) describes the CAN stack module dependencies that differ from the general communication stack module dependencies as described in the EB tresos AutoCore Generic documentation.
- ▶ [Section 4.6, “Configuring HOH assignment and bit timing in Can and CanIf”](#) describes the CAN Assistant tool designed to help you configure the CAN stack modules `Can` and `CanIf`.
- ▶ [Section 4.4, “CAN FD”](#) describes the feature CAN FD and the starting points on how to configure the CAN stack to use CAN FD.

### 4.2. Background information

This chapter provides general information about the CAN communication concepts in the AUTOSAR context. If you are not familiar with the general concepts of communication in AUTOSAR, read the general information provided in the EB tresos AutoCore Generic documentation first.

#### 4.2.1. Communication in AUTOSAR CAN

The CAN communication stack provides a one-to-one mapping between I/N-PDUs and L-PDUs. This means each I/N-PDU is packed into exactly one CAN frame and each CAN frame carries exactly one I/N-PDU.

The `Com` module triggers the transmission of an L-PDU in the CAN communication. The `Com` module

1. calls `PduR_ComTransmit()`;
2. this causes the `PduR` to call `CanIf_Transmit()`;

3. this calls the `Can_Write()` function of the `Can` module.

This way, the temporal schedule of the `Com` schedule drives a periodic transmission of L-PDUs on the CAN bus.

The fact that the CAN bus receives an L-PDU causes the call of the reception indication. Whenever the `Can` module detects that it has received an L-PDU that is configured to be received by the ECU, the `Can` module calls the callback function `CanIf_RxIndication()` of the `CanIf` module.

In addition, the `Can` module provides support for the following events issued by the CAN controller:

- ▶ *bus-off* events,
- ▶ *wake-up* events,
- ▶ *transmission confirmations*,
- ▶ and *transmission cancellation confirmations*.

Each of these events can

- ▶ either be serviced in the context of an *interrupt service routine* provided by the `Can` module
- ▶ or via *polling functions*, which have to be scheduled cyclically. These are in particular the functions
  - ▶ `Can_MainFunction_Read()` for handling reception indications,
  - ▶ `Can_MainFunction_Write()` for handling transmission confirmations and transmission cancellation confirmations,
  - ▶ `Can_MainFunction_BusOff()` for handling bus-off indications,
  - ▶ and `Can_MainFunction_Wakeup()` for handling wakeup indications.

## 4.3. CAN communication stack dependencies

This section describes issues in which the functionality and/or the module dependencies of the CAN communication stack modules differ from the description provided in the EB tresos AutoCore Generic documentation.

### 4.3.1. Module dependencies

In addition to the dependencies described in the EB tresos AutoCore Generic documentation, the `CanTp` module exhibits a dependency on the General Purpose Timer (`Gpt`) module. The `CanTp` uses a timer of the `Gpt` module for the measuring of the `CanTp` specific time-outs.

## 4.4. CAN FD

### 4.4.1. Overview

CAN FD (flexible data rate) is an enhancement of the CAN protocol that supports higher bandwidth. You can use it in existing CAN networks.

Section [Section 4.4.2, “Background information”](#) provides background information to CAN FD.

Section [Section 4.4.3, “How to configure”](#) provides starting points on how to configure CAN FD.

### 4.4.2. Background information

CAN FD addresses the demand of higher bandwidth without changing the technology. Compared to CAN 2.0 the feature CAN FD has following advantages:

- ▶ CAN FD increases the payload of CAN frames from 8 up to 64 bytes.
- ▶ CAN FD increases the transmission rate of the data phase. Baud rate is increased for payload and CRC of a CAN FD frame.

Each listed functionality increases the bandwidth on the CAN network.

### 4.4.3. How to configure

This section provides a starting point on how to configure the CAN FD feature. To use CAN FD functionality, you need the following configuration settings:

`CanControllerFdBaudrateConfig`

To support CAN FD, a Can controller requires a reference to a configuration container `CanControllerBaudrateConfig` with configured subcontainer `CanControllerFdBaudrateConfig`.

`CanIfRxPduCanIdType/CanIfTxPduCanIdType`

The configuration parameters `CanIfRxPduCanIdType` and `CanIfTxPduCanIdType` define the frame type to be used. In addition to CAN 2.0 frame types, you can also choose CAN FD.

`CanIfRxPduDlc`

The configuration parameter `CanIfRxPduDlc` is a lower limit for received CAN FD frame payload. You can set the limit up to 64.

---

**WARNING**      **Usage of padded CAN FD frames**



A CAN FD frame shall match one of the specified FD lengths. If this is not the case it is automatically padded by the CAN driver. `CanIf` does not perform padding and cannot detect padding bytes within a CAN FD frame. `CanIf` uses the length of the `EcuC` PDU that is referred to in the parameter `CanIfRxPduRef` for the maximum length. If the number of data bytes is static, you can use this configuration parameter to cut off padding bytes. Otherwise the application needs to take care to remove the padding bytes.

---

**TIP**



**Padded CAN FD frames with `CanTp`**

`CanTp` automatically performs padding of unaligned data. The module detects incoming padded CAN FD frames and only passes the data to the upper layer.

---

`CanTpFlexibleDataRateSupport`

The configuration parameter `CanTpFlexibleDataRateSupport` enables the CAN FD functionality globally for `CanTp`.

`CanTpRxNPduRef/CanTpTxNPduRef`

Both parameters `CanTpRxNPduRef` and `CanTpTxNPduRef` refer to `EcuC` PDUs. The configured PDU lengths of the references define the maximum payload size of the CAN FD frames up to 64 bytes.

---

**NOTE**



**Usage of `CanTp` is optional**

The module `CanTp` is still optional. You can use CAN FD without `CanTp`.

---

## 4.5. Network management in AUTOSAR CAN stack

The network and state management is described in the EB tresos AutoCore Generic documentation concept chapter "Network management and state management stack". You find information about the concepts of the network and state management in AUTOSAR. You also learn how to configure the stack.

## 4.6. Configuring HOH assignment and bit timing in Can and CanIf

### 4.6.1. Overview

The CAN Buffer Assignment Editor and the CAN Bit Timing Editor are editors that are contained in the CAN Assistant which comes as a EB tresos Studio-based Eclipse plug-in for configuring the `Can` and `CanIf` modules in your configuration project. If you want to configure your `Can` and `CanIf` modules in the area of PDU to hardware object handle (HOH) assignment, the CAN Buffer Assignment Editor can help you accomplish this task. If you want to set up the bit timing parameters in your `Can` module, the CAN Bit Timing Editor helps you here. The CAN Buffer Assignment Editor and CAN Bit Timing Editor are referred to as CAN wizards in the remainder of this documentation.

[Section 4.6.2, “Background information”](#) gives you necessary background information about the CAN wizards and their user interfaces.

[Section 4.6.3, “Using the CAN Buffer Assignment Editor”](#) outlines how you can execute specific configuration steps for PDU to HOH assignment.

[Section 4.6.4, “Using the CAN Bit Timing Editor”](#) outlines how you can execute specific configuration steps for setting up the bit timing parameters.

## 4.6.2. Background information

The following sections describe basic concepts about the CAN wizards and their user interfaces:

- ▶ [Section 4.6.2.1, “System and local configuration parameters”](#) explains the *local* and *system* configuration parameters of the `Can` and `CanIf` configurations.
- ▶ [Section 4.6.2.2, “Necessary parameters”](#) outlines which kind of parameters the CAN wizards depend on.
- ▶ [Section 4.6.2.3, “Resource files”](#) explains how the CAN wizards are tailored to specific hardware platforms.
- ▶ [Section 4.6.2.4, “The CAN Buffer Assignment Editor GUI”](#) describes the GUI of the CAN Buffer Assignment Editor.
- ▶ [Section 4.6.2.5, “Auto assignment”](#) explains the auto assignment algorithm.
- ▶ [Section 4.6.2.6, “The CAN Bit Timing Editor GUI”](#) describes the GUI of the CAN Bit Timing Editor.

### 4.6.2.1. System and local configuration parameters

Configuration parameters of communication stack modules can be grouped into

- ▶ *System configuration parameters* and
- ▶ *Local configuration parameters*.

The term *system configuration parameters* refers to parameters that must be configured consistently among all nodes of the same communication network for proper operation.

System configuration parameters for CAN networks are, for example:

- ▶ The *CAN network bit rate*.
- ▶ The set of *communication controllers* that participate in the CAN network.
- ▶ The set of *PDU*s each communication controller sends and receives.

*Local configuration parameters* are parameters you can configure freely as long as they do not become inconsistent with the system configuration parameters. The properties of the shared communication network do not directly depend on local parameters.

The local configuration parameters include:

- ▶ The *HOH*s used to send and receive PDUs.
- ▶ The point in time when the communication controller samples the value of a CAN bit (sample point position).

System configuration parameters are usually imported into a configuration project. File types that can be imported into EB tresos Studio configuration projects include DBC, Fibex, or AUTOSAR system description files. For detailed information about these file formats, see the EB tresos Studio user's guide.

The CAN wizards configure Can and CanIf local configuration parameters that take Can and CanIf system and local configuration parameters as input.

---

#### TIP



#### Leave the importer option **Buffer Assignment in Can/CanIf** at the predefined value

When you configure the import, leave the option **Buffer Assignment in Can/CanIf** at the predefined value **Create default buffer assignment**. There is no direct link between PDUs and communication controllers in the CanIf configuration. This relationship is implicitly given by HOHs that define links to controllers and PDUs. If you choose **Do not create Buffer Assignment** for **Buffer Assignment in Can/CanIf**, the relationship between PDUs and controllers is lost because no HOHs are created with this setting.

---

If your Can and CanIf parameters are already configured by a configuration import, you can use the CAN Buffer Assignment Editor without further configuration steps.

To use the CAN Bit Timing Editor, configure the source clock rate that your communication controllers use by configuring the parameter `CanCpuClockRef`. For more information on `CanCpuClockRef`, see [Section 4.6.2.2.2, "Necessary parameters for bit timing configuration"](#). For information on how to configure `CanCpuClockRef`, see [Section 4.6.4.1, "Configuring CanCpuClockRef"](#).

For information on how to configure the `CanIf` and `Can` system configuration parameters completely by hand, see [Section 4.6.2.2, "Necessary parameters"](#).

### 4.6.2.2. Necessary parameters

This section outlines the system level configuration elements that must exist before you can use the CAN Buffer Assignment Editor and the CAN Bit Timing Editor.

---

**WARNING****Manual configuration is prone to errors and therefore not recommended**

If you configure the required configuration parameters manually, do not omit any parameter and enter the parameters in the form in which the `Can` and `CanIf` modules expect them. The `Can` and `CanIf` modules cannot detect all resulting errors, e.g. incorrectly entered CAN-IDs or filter masks. Incorrectly entered CAN IDs may lead to incorrectly sent or received PDUs in the configured ECUs.

To avoid configuration errors, see the documentation of the modules for information on their configuration.

---

If your `Can` and `CanIf` modules are configured via a configuration import and you only use the CAN Buffer Assignment Editor, you can skip this chapter. To use the CAN Bit Timing Editor, configure the source clock rate of your communication controllers by setting `CanCpuClockRef`. For information on how to configure this parameter, see [Section 4.6.4.1, “Configuring CanCpuClockRef”](#).

If you configure the `CanIf` and `Can` system configuration parameters manually, this chapter outlines the elements you need to add. See the documentation of the `Can` and `CanIf` modules for detailed information. This chapter refers to the AUTOSAR 4.0 and 4.2 configuration parameters. Information about the AUTOSAR 4.0 and 4.2 release and the `Can` and `CanIf` SWS documents can be obtained from [\[1\]](#).

#### 4.6.2.2.1. Necessary parameters for PDU to HOH assignment

##### `CanIf/CanIfInitCfg`

The CAN Buffer Assignment Editor supports the `CanIfInitCfg` container, encompassing their sent and received PDUs in the subcontainer lists `CanIfRxPduCfg` and `CanIfTxPduCfg`. If you want to define HOHs for PDU transmission, these must reside in `CanIfInitHohCfg/CanIfHrhCfg` and `CanIfInitHohCfg/CanIfHthCfg`.

##### `CanIf/CanIfCtrlDrvCfg/CanIfCtrlCfg`

For every communication controller that connects the configured ECU to a CAN network, one configuration container must exist as sub container. The parameter `CanIfCtrlCanCtrlRef` must refer to the representation of the communication controller in the `Can` configuration module.

##### `CanIf/CanIfInitCfg/CanIfRxPduCfg`

The containers for received PDUs must have the following parameters defined:

- ▶ `CanIfRxPduCanId` if the PDU is received via one specific CAN-ID.
- ▶ If the PDU owns a CAN-ID range, i.e. it can be received by any CAN-ID within a given range, the parameters of the subcontainer `CanIfRxPduCanIdRange` must be configured. `CanIfRxPduCanIdRangeLowerCanId` and `CanIfRxPduCanIdRangeUpperCanId` define the lower and upper bounds of the range.



- ▶ `CanIfRxPduCanIdType`.
- ▶ One or more references to assigned HOHs within `CanIfRxPduHrhIdRef` (only if the PDU has already been assigned to one or more HOHs).

`CanIf/CanIfInitCfg/CanIfTxPduCfg`

The containers for sent PDUs must have the following parameters defined:

- ▶ `CanIfTxPduCanId`.
- ▶ `CanIfTxPduCanIdType`.
- ▶ `CanIfTxPduType`.
- ▶ `CanIfTxPduBufferRef` (only if the PDU has already been assigned to an HOH).

If HOHs for sending/receiving PDUs are configured, the CAN Buffer Assignment Editor requires the correct setting for several parameters.

`CanIf/CanIfInitCfg/CanIfInitHohCfg/CanIfHrhCfg`

The containers for HOHs used for receiving PDUs must have the following parameters defined:

- ▶ `CanIfHrhCanCtrlIdRef`.
- ▶ `CanIfHrhIdSymRef`.

`CanIf/CanIfInitCfg/CanIfInitHohCfg/CanIfHthCfg`

The containers for HOHs used to send PDUs must have the following parameters defined:

- ▶ `CanIfHthCanCtrlIdRef`.
- ▶ `CanIfHthIdSymRef`.

`CanIf/CanIfInitCfg/CanIfBufferCfg`

`CanIfBufferCfg` containers, which are referenced by sending PDUs, must have exactly one `CanIfBufferHthRef` defined. More than one `CanIfBufferHthRef` results in a warning and only the first `CanIfBufferHthRef` is used.

`Can/CanConfigSet/CanController`

For every controller instance in the `CanIf` configuration, a corresponding instance must exist in the `Can` configuration. The `CanIf` instance must reference the `Can` instance by the parameter `CanIfCtrlCanCtrlRef`. If any of the controller's HOHs requires a filter mask, it must be configured in the `CanFilterMask` subcontainer of `Can/CanConfigSet/CanController`.

`Can/CanConfigSet/CanHardwareObject`

For every HOH instance in the `CanIf` configuration, a corresponding instance must exist in the `Can` configuration. The `CanIf` instance must reference the `Can` instance by the parameter `CanIfHrhIdSymRef` or `CanIfHthIdSymRef`. If the HOH requires a filter mask, AUTOSAR 4.0 `Can` module configurations must reference the corresponding container in `Can/CanConfigSet/CanHardwareObject/CanFilterMaskRef`. AUTOSAR 4.2 `Can` module configurations must provide the filter mask in `Can/CanConfigSet/CanHardwareObject/CanHwFilter/CanHwFilterMask`.

The containers for HOHs must have the following parameters defined:

- ▶ `CanHandleType`.
- ▶ AUTOSAR 4.0 Can module configurations must provide `CanIdValue`
- ▶ AUTOSAR 4.2 Can module configurations must provide `CanHwFilter/CanHwFilterCode`

#### 4.6.2.2.2. Necessary parameters for bit timing configuration

`Can/CanConfigSet/CanController`

For every communication controller that is attached to a CAN network, a corresponding configuration container must exist in the Can configuration. The CAN Bit Timing Editor requires that the container in turn contains at least one `CanControllerBaudrateConfig` sub container.

`Can/CanConfigSet/CanController/CanCpuClockRef`

Every communication controller that is attached to a CAN network requires a source clock from which it derives its own clock rate. The source clock of the communication controller is referenced in `Can/CanConfigSet/CanController/CanCpuClockRef`. The reference target is `/Mcu/McuModuleConfiguration/McuClockSettingConfig/McuClockReferencePoint`. `McuClockReferencePointFrequency` defines the rate of the clock. It is required that the clock rate is an integral multiple of the bit rate on the CAN bus and (if used) of the CAN-FD bit rate.

Since AUTOSAR system models do not provide the hardware properties of a given ECU, a configuration import cannot configure this parameter. This reference must therefore be configured by hand. For more information, see [Section 4.6.4.1, “Configuring CanCpuClockRef”](#).

`Can/CanConfigSet/CanController/CanControllerDefaultBaudrate`

The `CanControllerDefaultBaudrate` must refer to one of the `CanControllerBaudrateConfig` sub containers in `Can/CanConfigSet/CanController`. The CAN Bit Timing Editor uses the referenced parameter for bit timing configuration.

`Can/CanConfigSet/CanController/CanControllerBaudrateConfig`

The `CanControllerBaudrateConfig` configuration container provides the CAN bit rate of the attached network in `CanControllerBaudRate` in units of kilobits per second and the bit timing parameters that define the sample point for bits transmitted in the CAN bit rate. These parameters are given in multiples of a *time quantum*/ $Tq$ . The CAN Bit Timing Editor reads and writes these parameters:

- ▶ `CanControllerPropSeg` defines the propagation time segment
- ▶ `CanControllerSeg1` defines the phase buffer segment 1
- ▶ `CanControllerSeg2` defines the phase buffer segment 2
- ▶ `CanControllerSyncJumpWidth` defines the resynchronization jump width

`Can/`

`CanConfigSet/CanController/CanControllerBaudrateConfig/CanControllerFdBaudrateConfig`

The optional `CanControllerFdBaudrateConfig` configuration container is enabled if the CAN configuration controller supports CAN FD. `CanControllerFdBaudRate` provides the CAN FD bit rate of the

attached network in units of kilobits per second and the bit timing parameters that define the sample point for bits transmitted in the CAN FD bit rate. These parameters are given in multiples of a *time quantum/Tq*. The CAN Bit Timing Editor reads and writes these parameters:

- ▶ `CanControllerPropSeg` defines the propagation time segment
- ▶ `CanControllerSeg1` defines the phase buffer segment 1
- ▶ `CanControllerSeg2` defines the phase buffer segment 2
- ▶ `CanControllerSyncJumpWidth` defines the resynchronization jump width

In addition to that, the CAN Bit Timing Editor also reads and writes the parameters `CanControllerTrcvDelayCompensationOffset` and `CanControllerTxBitRateSwitch`. For a detailed description of these parameters, see the related Can SWS document, [\[1\]](#).

#### 4.6.2.3. Resource files

The CAN wizards are already shipped with a resource file tailored to the peculiarities of your hardware platform. If you are not interested in how the CAN Buffer Assignment Editor determines which HOHs are available or how the CAN Bit Timing Editor determines the bit timing peculiarities for your platform, you can skip this section.

##### HOH groups

Every hardware platform defines one or more HOH groups. These groups represent one or more of the platforms HOHs that exhibit the following properties:

- ▶ **Direction:** Defines whether the HOHs that belong to this group can be used to send, to receive, or both.
- ▶ **Filter mask:** In order to receive more than one PDU, a filter mask must be assigned to an HOH. This property defines whether the HOHs that belong to this group:
  - ▶ define their own individual filter mask,
  - ▶ refer to a shared filter mask, or
  - ▶ may not define a filter mask at all.
- ▶ **MCU/CC level:** This property defines whether the HOHs of the group are:
  - ▶ directly available at each of the CAN cells communication controllers (CC)s, or
  - ▶ whether the HOHs are defined on MCU level that implies that the HOHs are shared and can only be assigned to one of the CAN cells CCs.

##### Filter masks

Several hardware platforms define filter mask registers which can be shared among several HOHs. These shared filter masks can either be defined at the CC level, or at the the MCU level. CC level filter masks can be used within each CC individually. MCU level filter masks must be shared among all communication controllers of the node.

#### Don't-care-bit value

Although AUTOSAR `Can` defines the semantics of the filter mask value by defining "0" as a don't-care-bit, `Can` implementations exist that assume that a logical "1" in a filter mask identifies a don't-care-bit. To configure filter masks correctly, the resource file therefore also has to provide the don't-care-bit value for the current `Can` implementation.

#### TIP



#### CAN Buffer Assignment Editor displays don't-care-bits as logical zeros

The CAN Buffer Assignment Editor displays filter mask values as if the don't-care-bit is defined as a logical zero in the **Filter Mask** field within the **CanIf Hardware Object Handles** grid. If an AUTOSAR `Can` implementation requires don't-care-bits to be logical ones, the CAN Buffer Assignment Editor:

1. Reads the filter masks in.
2. Inverts the filter masks.
3. Writes the filter masks back out.

You can see the inverted filter mask value in the **Inv. Filter Mask** field.

#### Shift FilterMask of standard CAN identifiers

If an MCAL configuration generator tool requires, for instance, that the 11 bits of a standard CAN identifier (and of the filter mask) reside in the 11 most significant bits of a 29-bit value, the value must be shifted left by 18 before it is written to the configuration. This value indicates by how many bit positions the filter mask is shifted.

#### Shift FilterMask of extended CAN identifiers

Same as above for extended (29-bit) CAN identifiers.

#### Controller types

Multiple controller types that differ by the number of available HOHs and/or filter masks can be defined for hardware platforms that support two or more kinds of controller. Each of the controllers in your configuration is assigned to one controller type. The assigned controller type can be changed in the GUI, see [Figure 4.2, "CAN Buffer Assignment Editor"](#).

#### bit timing register to values offset

Some MCAL `Can` modules require that bit timing related parameters are configured in the representation that the corresponding register of the underlying hardware expects. The value range [1..8] for instance can be represented in a three bit hardware register that contains register values in the range of [0..7]. If the MCAL configuration generator module is not able to do the translation from the original value range to the register value range itself, the offset of the two value ranges can be provided in the resource file. The values that are affected by the offset are `CanControllerPropSeg`, `CanControllerSeg1`, `CanControllerSeg2`, and `CanControllerSyncJumpWidth` for the CAN and CAN-FD bit timing configurations.

#### bit timing register constraints

Some MCAL `Can` modules constrain the values of two or more bit timing parameters in relation to each other. For instance, an MCAL `Can` module might require that one parameter must always be less or equal

to another parameter, or it might require that the sum of several parameters must not exceed a certain value. For instance `PropSeg + Seg1 + Seg2 <= 24` implies that the sum of the parameters `CanControllerPropSeg`, `CanControllerSeg1`, and `CanControllerSeg2` must not be larger than 24. Such constraints can be specified independently for the CAN and the CAN-FD bit timing register set.

#### 4.6.2.3.1. Missing resource file

The CAN Buffer Assignment Editor and the CAN Bit Timing Editor stop with the error message displayed in [Figure 4.1, “Missing resource file error message”](#) if no resource file could be found for the target and derivative of your Can module.

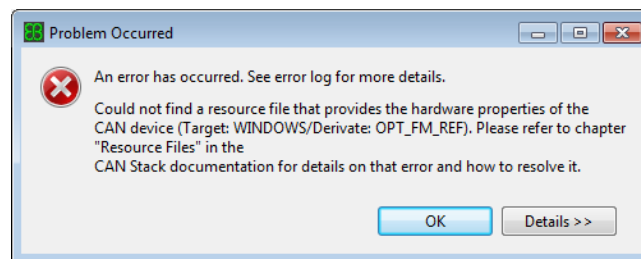


Figure 4.1. Missing resource file error message

This error occurs under the following scenarios:

- ▶ *Sub-derivative not configured correctly:* If your Can module supports sub-derivatives, verify that you correctly configured the sub-derivative of your hardware. Refer to your MCAL manual for information on how to correctly configure the sub-derivative.

If the error occurs although the sub-derivative is configured correctly, the resource file for your sub-derivative is missing.

- ▶ *No resource file available for the derivative:* If your Can module only supports one derivative (i.e. it does not support sub-derivatives) and the error message in [Figure 4.1, “Missing resource file error message”](#) is displayed, this means that your Can module was shipped without any resource file.

The resource file might be missing for the following reasons:

- ▶ The peculiarities of the underlying hardware cannot be modeled by means of a resource file for your Can module or for your specific sub-derivative of your Can module.
- ▶ EB did not integrate your Can module into the ACG communication stack yet. Usually, a resource file is created and tested in the course of such an integration.

Contact <https://www.elektrobit.com/support/> if you think that your Can module was accidentally delivered without resource file, or if you want EB to create a resource file for your Can module.

#### 4.6.2.4. The CAN Buffer Assignment Editor GUI

This chapter describes the GUI of the CAN Buffer Assignment Editor. [Figure 4.2, “CAN Buffer Assignment Editor”](#) shows the various fields of the main window.

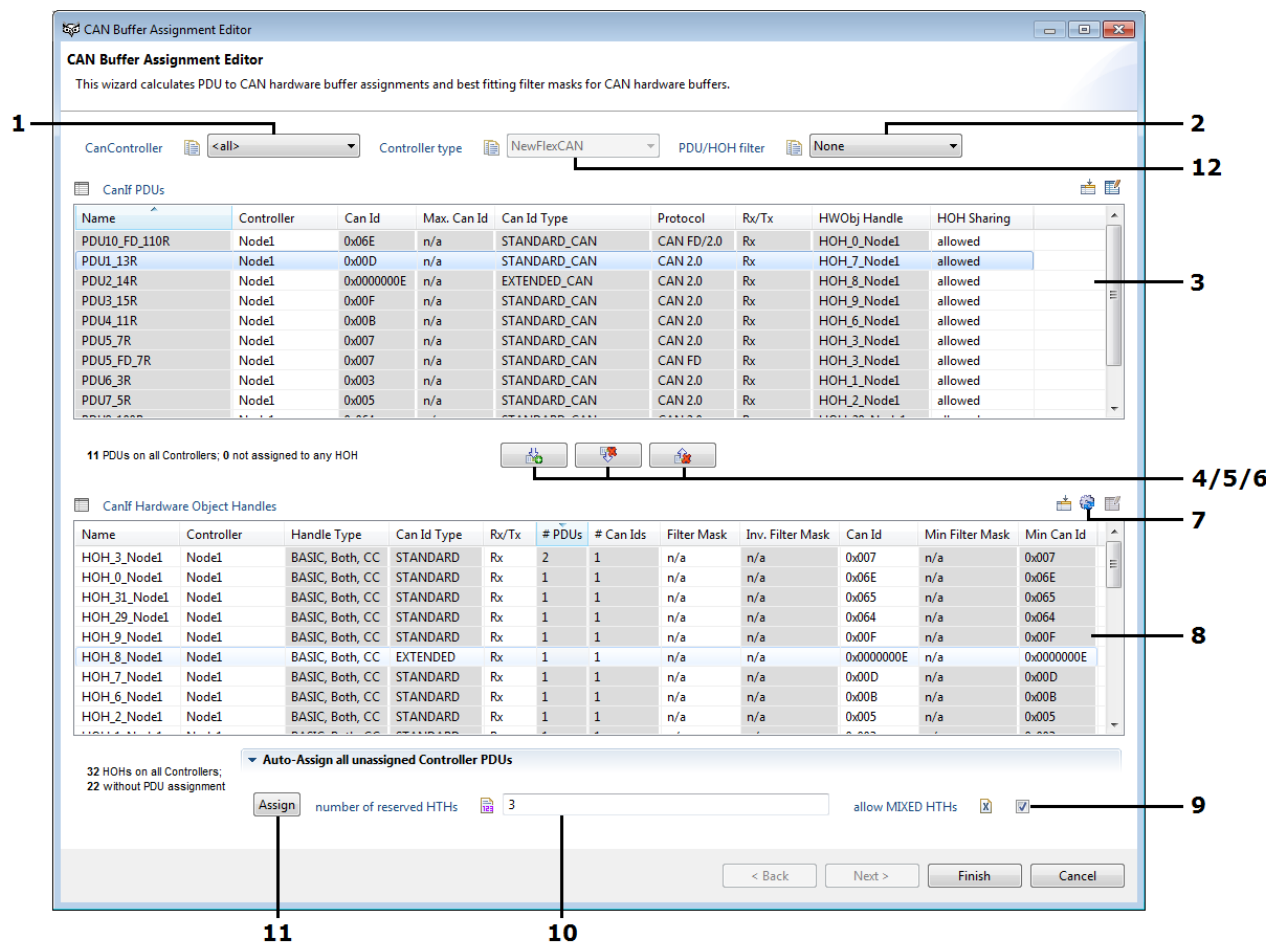


Figure 4.2. CAN Buffer Assignment Editor

Number on image	Item	Description
1	Controller selector	The Controller selector is used to filter PDU and HOH data of a specific communication controller. It contains one entry for each CAN communication controller found in the CanIf configuration and one additional entry, <b>&lt;all&gt;</b> , which is selected per default. If this entry is selected, PDUs and HOHs of all communication controllers are displayed.
2	PDU/HOH filter	The PDU/HOH filter provides the values:  ► <b>None</b>

Number on image	Item	Description
		<ul style="list-style-type: none"> <li>▶ <b>Filter HOHs of selected PDUs</b></li> <li>▶ <b>Filter PDUs of selected HOHs</b></li> </ul> <p>It is used to filter PDUs which are assigned to a specific HOH and vice versa. If you select <b>None</b>, no filter is applied.</p>
3	<b>CanIf PDUs</b> grid	This grid displays all PDUs that the node either sends or receives. <a href="#">Section 4.6.2.4.1, “The PDU grid”</a> describes the columns of the PDU grid in detail.
4	<b>Clear selected HOHs</b> button	If you click this button, you can remove the PDU assignment from all currently selected HOHs.
5	<b>Clear selected PDUs</b> button	If you click this button, you can remove the HOH assignment of all currently selected PDUs.
6	<b>Assign PDUs to HOH</b> button	If you click this button, you can assign all currently selected PDUs to the currently selected HOH.
7	<b>Optimize</b> button	If you click this button, you can remove unnecessary don't-care-bits from the <b>Filter Mask</b> and <b>Can Id</b> parameters of the currently selected Rx HOHs. All assigned PDUs can still be received.
8	<b>CanIf Hardware Object Handles</b> grid	This grid shows the HOHs that can be used to send or receive PDUs. <a href="#">Section 4.6.2.4.2, “The Hardware Object Handles grid”</a> describes the columns of the <b>CanIf Hardware Object Handles</b> grid in detail.
9	<b>allow MIXED HTHs</b> check box	If you activate this check box, the CAN Buffer Assignment Editor auto assignment algorithm may assign sent standard and extended CAN identifier PDUs to the same HOHs, to configure MIXED HTHs. Deactivate this option, if the Can driver in use does not allow MIXED HTHs.
10	<b>Reserved HTHs</b> field	This field is used to configure the number of HOHs the auto assignment algorithm tries to reserve for PDU transmission. For details, see <a href="#">Section 4.6.3.5, “Automatically assigning PDUs to HOHs”</a> .
11	<b>Assign</b> button	If you click this button, the CAN Buffer Assignment Editor tries to find a valid assignment for all currently unassigned PDUs. The CAN Buffer Assignment Editor considers the available hardware resources and several other side constraints. The auto assignment algo-

Number on image	Item	Description
		rithm is described in detail in <a href="#">Section 4.6.3.5, “Automatically assigning PDUs to HOHs”</a> .
12	<b>Controller type selector</b>	The controller type selector is used to assign a different controller type to your CAN communication controller as provided in the resource file (see <a href="#">Section 4.6.2.3, “Resource files”</a> ). The selector is only enabled if a specific controller is selected, more than one controller type is available and a license for this feature is present.

#### NOTE



#### Controller type re-assignment will delete existing HOH assignments

If you assign a new controller type to your CAN communication controller, the CAN Buffer Assignment Editor deletes all previously existing HOH assignments of all CAN communication controllers in your configuration. Therefore, if you assign a new controller type to one or more CAN communication controllers of your configuration you have to set up the HOH assignments again.

#### 4.6.2.4.1. The PDU grid

The PDU grid allows to select one or more PDUs, and to change the read-writable properties of these one by one. Click one or more times onto the column labels to sort the elements in the grid according to the column content either in ascending or descending order. The PDU grid contains the following columns:

Name	Controller	Can Id	Max. Can Id	Can Id Type	Protocol	Rx/Tx	HWObj Handle	HOH Sharing
PDU10_FD_110R	Node1	0x06E	n/a	STANDARD_CAN	CAN FD/2.0	Rx	HOH_0_Node1	allowed
PDU1_13R	Node1	0x00D	n/a	STANDARD_CAN	CAN 2.0	Rx	HOH_7_Node1	allowed
PDU2_14R	Node1	0x0000000E	n/a	EXTENDED_CAN	CAN 2.0	Rx	HOH_8_Node1	allowed
PDU3_15R	Node1	0x00F	n/a	STANDARD_CAN	CAN 2.0	Rx	HOH_9_Node1	allowed
PDU4_11R	Node1	0x00B	n/a	STANDARD_CAN	CAN 2.0	Rx	HOH_6_Node1	allowed
PDU5_7R	Node1	0x007	n/a	STANDARD_CAN	CAN 2.0	Rx	HOH_3_Node1	allowed
PDU5_FD_7R	Node1	0x007	n/a	STANDARD_CAN	CAN FD	Rx	HOH_3_Node1	allowed
PDU6_3R	Node1	0x003	n/a	STANDARD_CAN	CAN 2.0	Rx	HOH_1_Node1	allowed
PDU7_5R	Node1	0x005	n/a	STANDARD_CAN	CAN 2.0	Rx	HOH_2_Node1	allowed

Figure 4.3. The PDU grid

Column	Description
<b>Name</b>	Displays the PDUs short name as retrieved from the CanIf configuration
<b>Controller</b>	Displays the name of the CAN communication controller which sends or receives the PDU. If the CAN Buffer Assignment Editor is not able to determine the controller that processes one or more PDUs, this column displays <b>&lt;undefined&gt;</b> . In this case, assign the controller to the unassigned PDU as follows:



Column	Description
	<ol style="list-style-type: none"> <li>1. Select the PDU in the column <b>Name</b>.</li> <li>2. Click the <b>Controller</b> column of the selected element.</li> <li>3. Select the desired controller from the displayed controller list.</li> </ol> <p>To assign a controller to multiple PDUs at once, you can use the bulk change dialog.</p>
<b>Can Id</b>	Displays in hexadecimal format the CAN-ID of the PDU as it is retrieved from the CanIf configuration. If the PDU owns a CAN-ID range, this value represents the minimum CAN-ID of the range.
<b>Max. Can Id</b>	Displays in hexadecimal format the maximum CAN-ID, if the PDU owns a CAN-ID range.
<b>Can Id Type</b>	Displays the CAN-ID type of the PDU as retrieved from the CanIf configuration. <b>STANDARD_CAN</b> indicates that the PDU is assigned an 11-bit CAN identifier. <b>EXTENDED_CAN</b> indicates a 29-bit extended frame CAN identifier
<b>Protocol</b>	Displays information whether the PDU is transmitted on the bus as <b>CAN 2.0</b> PDU, as <b>CAN FD</b> PDU, or whether it may appear on the bus in both <b>CAN FD/2.0</b> formats.
<b>Rx/Tx</b>	Indicates whether the PDU is sent ( <b>Tx</b> ), or received ( <b>Rx</b> ).
<b>HWObjHandle</b>	If the PDU is currently assigned to an HOH, the name of the HOH is displayed in this column. An empty value indicates that the PDU currently has not been assigned an HOH.
<b>HOH Sharing</b>	<p>This column is only applied to Rx PDUs; If the current value is <b>allowed</b>, this implies that during auto assignment the PDU may be assigned to an HOH that also receives other PDUs. If the value is set to <b>forbidden</b>, the auto assignment reserves a dedicated Rx HOH for the PDU. See <a href="#">Section 4.6.3.5, “Automatically assigning PDUs to HOHs”</a> for a detailed description of auto assignment.</p> <p>To set the HOH Sharing property for multiple PDUs at once, you can use the bulk change dialog.</p>

#### NOTE



#### Received PDUs with identical CAN identifiers must have their HOH Sharing set to allowed

If one communication controller receives one CAN FD PDU and one CAN 2.0 PDU via the same CAN identifier, both PDUs must be assigned to the same HOH. Therefore, the **HOH Sharing** field must be left at **allowed** for both PDUs.

#### 4.6.2.4.2. The Hardware Object Handles grid

The Hardware Object Handles grid allows you to select one or more HOHs and to change the read-writable properties of these one by one. Click the column labels to sort the elements in the grid according to the column content either in ascending or descending order.

The elements in the Hardware Object Handles grid are derived from HOHs that are actually present in the Can and CanIf configurations. Additionally the CAN Buffer Assignment Editor detects whether the hardware platform allows the configuration of additional HOHs. If the hardware platform allows this, the additional HOHs are also added to the grid.

The Hardware Object Handles grid contains the following columns:

Name	Controller	Handle Type	Can Id Type	Rx/Tx	# PDUs	# Can Ids	Filter Mask	Inv. Filter Mask	Can Id	Min Filter Mask	Min Can Id
HOH_3_Node1	Node1	BASIC, Both, CC	STANDARD	Rx	2	1	n/a	n/a	0x007	n/a	0x007
HOH_0_Node1	Node1	BASIC, Both, CC	STANDARD	Rx	1	1	n/a	n/a	0x06E	n/a	0x06E
HOH_31_Node1	Node1	BASIC, Both, CC	STANDARD	Rx	1	1	n/a	n/a	0x065	n/a	0x065
HOH_29_Node1	Node1	BASIC, Both, CC	STANDARD	Rx	1	1	n/a	n/a	0x064	n/a	0x064
HOH_9_Node1	Node1	BASIC, Both, CC	STANDARD	Rx	1	1	n/a	n/a	0x00F	n/a	0x00F
HOH_8_Node1	Node1	BASIC, Both, CC	EXTENDED	Rx	1	1	n/a	n/a	0x0000000E	n/a	0x0000000E
HOH_7_Node1	Node1	BASIC, Both, CC	STANDARD	Rx	1	1	n/a	n/a	0x00D	n/a	0x00D
HOH_6_Node1	Node1	BASIC, Both, CC	STANDARD	Rx	1	1	n/a	n/a	0x00B	n/a	0x00B
HOH_2_Node1	Node1	BASIC, Both, CC	STANDARD	Rx	1	1	n/a	n/a	0x005	n/a	0x005

Figure 4.4. The Hardware Object Handles grid

Column	Description
<b>Name</b>	Displays the HOHs short name as retrieved from the CanIf configuration. If the HOH does not yet exist in the Can and CanIf configurations, the name is derived from the corresponding HOH group listed in the resource file. For details, see <a href="#">Section 4.6.2.3, “Resource files”</a> . You may enter an arbitrary AUTOSAR short name as long as it is unique among all HOHs.
<b>Controller</b>	<p>Displays the name of the CAN communication controller that currently uses the HOH. If the CanIf and Can configurations contain more than one communication controller and the HOH has been derived from an HOH group defined on the MCU level, the column displays <b>&lt;undefined&gt;</b>. You have to assign the HOHs to a communication controller to use them for automatic assignment as follows:</p> <ol style="list-style-type: none"> <li>1. Select the HOH.</li> <li>2. Click the <b>Controller</b> column of the selected element.</li> <li>3. Select the desired controller from the displayed controller list.</li> </ol> <p>To assign a controller to multiple HOHs at once, you can use the bulk change dialog.</p>
<b>Handle Type</b>	<p>Displays the properties of the HOH. This column consists of three components:</p> <ol style="list-style-type: none"> <li>1. The first component indicates whether the HOH is a <i>Full Can</i> (<b>FULL</b>) or <i>Basic Can</i> (<b>BASIC</b>) HOH. See <a href="#">Section 4.6.2.5, “Auto assignment”</a> for a detailed description of <i>Full Can</i> and <i>Basic Can</i> HOHs.</li> </ol>

Column	Description
	<p>2. The second component indicates whether the HOH can be solely used to</p> <ul style="list-style-type: none"> <li>▶ send (<b>Tx</b>),</li> <li>▶ receive (<b>Rx</b>),</li> <li>▶ or whether it allows the configuration to either send or receive (<b>Both</b>).</li> </ul> <p>3. The last component indicates whether</p> <ul style="list-style-type: none"> <li>▶ the HOH is owned by an individual controller (<b>CC</b>),</li> <li>▶ or the HOH is defined on the MCU level and must therefore be assigned to one of the present controllers (<b>MCU</b>) before you can use it.</li> </ul>
<b>Can Id Type</b>	<p>Displays the CAN-ID type of the HOH. The type:</p> <ul style="list-style-type: none"> <li>▶ <b>STANDARD</b> indicates that the HOH only processes PDUs that provide an 11-bit CAN identifier.</li> <li>▶ <b>EXTENDED</b> indicates that the HOH only processes CAN PDUs that provide a 29-bit CAN identifier.</li> <li>▶ <b>MIXED</b> means that PDUs of both CAN identifier types can be processed.</li> </ul>
<b>Rx/Tx</b>	Indicates whether the HOH is currently used to transmit ( <b>Tx</b> ), or receive ( <b>Rx</b> ).
<b># PDUs</b>	Indicates the number of PDUs the HOH processes.
<b># Can Ids</b>	<p>For Tx HOHs, this field displays the number of distinct CAN identifiers of the PDUs that are sent on this HOH. For Rx HOHs, a CAN identifier and filter mask parameter pair defines the set of CAN identifiers that can be received. The number of don't-care-bits in the filter mask defines the number of CAN identifiers which can potentially be processed by the HOH, which is <math>2^{(\# \text{don't-CareBits})}</math>. Usually a filter mask is chosen in such a way that the number of totally received CAN identifiers is the same as the number of distinct CAN identifiers of processed PDUs, i.e. that no unwanted PDUs are received.</p>
<b>Filter Mask</b>	<p>If an HOH is a <b>BASIC Rx</b> HOH, it may define a filter mask to receive several PDUs. See <a href="#">Section 4.6.2.5, "Auto assignment"</a> for a detailed description of <i>Full Can</i> and <i>Basic Can</i> HOHs. The don't-care-bits are always displayed as logical zeros in this field. You may enter the desired value either in decimal or in hexadecimal format. The value is always displayed in hexadecimal format.</p>
<b>Inv. Filter Mask</b>	Displays the inverted filter mask, which displays don't-care-bits as logical ones.
<b>Can Id</b>	<p>Defines the CAN-ID used by <b>Rx</b> HOHs to receive PDUs. If used in combination with the <b>Filter Mask</b> value, the CAN-ID bit value at the filter mask's don't-care-positions is not considered for PDU reception. You may enter the desired value either in decimal or in hexadecimal format. The value is always displayed in hexadecimal format.</p>

Column	Description
<b>Min Filter Mask</b>	Displays the filter mask which contains the least don't-care-bits necessary to receive the HOHs Rx PDUs. This parameter is only relevant for BASIC Rx HOHs.
<b>Min Can Id</b>	Displays the CAN-ID which, together with the <b>Min Filter Mask</b> , can be used to receive all the assigned Rx PDUs. This parameter is only relevant for BASIC Rx HOHs.

#### 4.6.2.5. Auto assignment

This chapter explains the auto assignment algorithm in detail. If you are not interested in the details of auto assignment, you may skip this section and proceed at [Section 4.6.3.5, “Automatically assigning PDUs to HOHs”](#).

In the following, PDUs are grouped according to their properties:

- ▶ `Tx/Rx PDUs` Tx and Rx PDUs are PDUs which are sent or received by the node.
- ▶ `Assigned/Unassigned PDUs` Assigned PDUs are assigned to exactly one HOH. Unassigned PDUs are not yet assigned.
- ▶ `Shared/Individual Rx PDUs` Individual Rx PDUs require to be assigned to one dedicated HOH for reception. However, a set of shared Rx PDUs may be assigned to one common HOH. Shared Rx PDUs have their `HOH Sharing` parameter set to `allowed`, whereas individual Rx PDUs set the parameter to `forbidden`.

HOHs are grouped according to the following properties:

- ▶ `Assigned/Unassigned HOHs` Assigned HOHs have one or more PDUs assigned for reception/transmission. Unassigned HOHs are not assigned to any PDU.
- ▶ `Rx/Tx HOHs, HOHs for both directions` Rx HOHs are HOHs which may only receive PDUs, whereas Tx HOHs may only send PDUs. HOHs for both directions can be used to either receive or send PDUs.
- ▶ `BASIC/FULL Rx HOHs` FULL Rx HOHs only define the `CAN Id` property and therefore only receive the CAN PDU with this specific CAN-ID. BASIC Rx HOHs additionally define a `Filter Mask` to specify the bits in the `CAN Id` property that have to match in order to receive a CAN PDU. The bit positions in the `CAN Id` that may have an arbitrary value are called don't-care-bits.
- ▶ `BASIC Rx HOHs with shared/own Filter Mask` BASIC Rx HOHs with their own filter mask may define their filter mask value freely. BASIC Rx HOHs with shared filter mask have to share their filter mask value with other BASIC Rx HOHs. Since there are usually less filter masks than BASIC Rx HOHs available, the assignment algorithm must take care that the number of used different filter mask values does not exceed the number of available shared filter masks.

1. In the first step, the auto assignment algorithm determines the number of Tx HOHs that are already assigned to PDUs. Then the algorithm tries to reserve additional Tx HOHs until the desired number of Tx

HOHs (GUI parameter) is reached or no more Tx HOHs are available. If at least one Tx HOH is reserved, the algorithm continues. If no Tx HOH is present after the reservation process, the algorithm terminates and issues an error message.

2. Then, all unassigned Tx PDUs are sorted according to their CAN-ID. All available Tx HOHs are sorted according to the number of PDUs they currently process. In the next step, the Tx PDU with the lowest CAN-ID is assigned to the Tx HOH with the fewest assigned Tx PDUs. After the assignment, PDUs and HOHs are sorted again and the assignment is repeated until no unassigned Tx PDUs remain.
3. In the next step, the algorithm retrieves all unassigned shared Rx PDUs and all basic Rx HOHs which have already assigned at least one PDU. The algorithm checks for every PDU/HOH combination, whether the CAN-ID of the PDU matches the HOHs filter mask and CAN-ID value. If the algorithm detects a match, the PDU is assigned to the HOH.
4. Thereafter the algorithm retrieves all unassigned individual Rx PDUs. For each of these PDUs the algorithm tries to reserve an Rx HOH. If the algorithm detects that not enough HOHs are available, the assignment process is terminated and an error message is issued. If enough HOHs are available, the individual Rx PDUs are assigned to their HOHs.
5. If the previous assignment steps are successful, only unassigned shared Rx PDUs remain to be assigned. These shared Rx PDUs remain for assignment. They cannot be processed by BASIC RX HOHs which already exist. The shared Rx PDUs are distributed among the remaining free BASIC and FULL Rx HOHs. The distribution uses already allocated and free shared filter masks.

#### 4.6.2.6. The CAN Bit Timing Editor GUI

This chapter describes the GUI of the CAN Bit Timing Editor. To launch the CAN Bit Timing Editor, click the **Can Assistant: Edit CAN Bit Timing** menu item in the **Sidebar** view. The following prerequisites must be fulfilled:

- ▶ You provided the necessary system level parameters for `Can`, either by configuration import or by defining them by hand. For more information, see [Section 4.6.2.2.2, “Necessary parameters for bit timing configuration”](#).
- ▶ You configured `CanCpuClockRef` manually. For more information, see [Section 4.6.4.1, “Configuring CanCpuClockRef”](#).

For information on how to retrieve the **Sidebar** view, see [Section 4.6.3, “Using the CAN Buffer Assignment Editor”](#).

After the CAN Bit Timing Editor has started, its main window is displayed as shown in [Figure 4.5, “CAN Bit Timing Editor Main Window”](#).

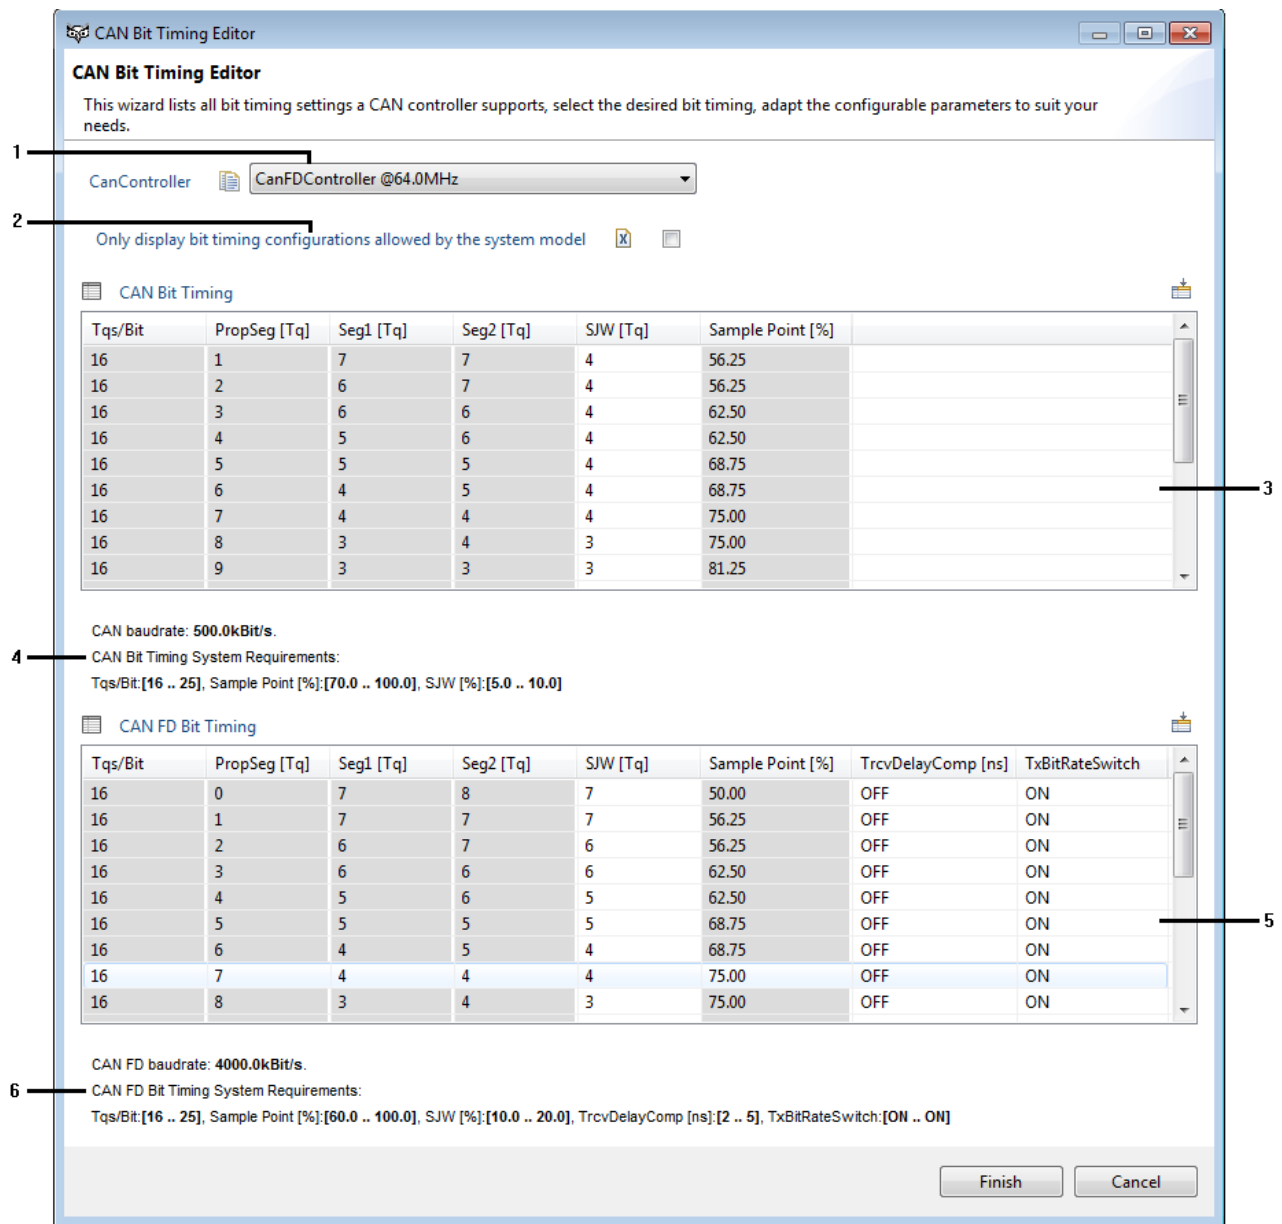


Figure 4.5. CAN Bit Timing Editor Main Window

Number on image	Item	Description
1	<b>CanController</b> drop-down list box	Use the <b>CanController</b> drop-down list box to select the CAN communication controller for which the bit timing registers shall be displayed and/or configured. The drop-down list box contains one entry for each <b>CanController</b> container found in the <b>Can</b> configuration. The entry consists of the container name and its configured source clock rate.

Number on image	Item	Description
2	System requirements filter	An AUTOSAR system model may contain requirements on the allowed range of bit timing registers. If you activate this check box, the bit timing grids for CAN and CAN FD only display configurations that adhere to these requirements. If you deactivate this check box, the bit timing grids display all configurations that the hardware supports.
3 and 5	<b>CAN Bit Timing</b> and <b>CAN FD Bit Timing</b> grids	The CAN bit timing and CAN FD bit timing grids display the bit timing configurations that can be configured for the currently selected CAN controller. The CAN FD bit timing grid is empty if the currently selected CAN Controller does not support CAN FD. For more information, see <a href="#">Section 4.6.2.6.1, “CAN Bit Timing grid”</a> and <a href="#">Section 4.6.2.6.2, “CAN FD Bit Timing grid”</a> .
4 and 6	<b>CAN Bit Timing</b> and <b>CAN FD Bit Timing</b> property fields	The CAN bit timing and CAN FD bit timing property fields display the bit rate of the connected network in CAN and CAN FD mode as well as the system model requirements related to the bit timing configurations in CAN and CAN FD mode.

#### 4.6.2.6.1. CAN Bit Timing grid

The **CAN Bit Timing** grid displays all bit timing configurations that you can configure for the currently selected CAN communication controller. Click one or more times onto the column labels to sort the elements in the grid according to the column content either in ascending or descending order. The **CAN Bit Timing** grid contains the following columns:

Column	Description
<b>Tqs/Bit</b>	Displays the number of Tqs that make up the duration of one bit ( $1/(\text{CanControllerBaudRate} * 1000)$ ). The number of Tqs per bit is also given by $\text{SyncSeg} + \text{PropSeg} + \text{Seg1} + \text{Seg2}$ . SyncSeg is not displayed in a dedicated column since its value is always 1.
<b>PropSeg [Tq]</b>	Displays the number of Tqs that define the length of the propagation time segment/ $\text{CanControllerPropSeg}$ .
<b>Seg1 [Tq]</b>	Displays the number of Tqs that define the length of the phase buffer segment $1/\text{CanControllerSeg1}$ .
<b>Seg2 [Tq]</b>	Displays the number of Tqs that define the length of the phase buffer segment $2/\text{CanControllerSeg2}$ .

Column	Description
<b>SJW [Tq]</b>	Displays the number of Tqs that define the length of the resynchronization jump width/ <code>CanControllerSyncJumpWidth</code> . You can change this value in the column.
<b>Sample Point [%]</b>	Displays the sample point in percent of the whole bit time.

#### NOTE



**Value range of SJW [Tq] is restricted if the system requirements filter is activated**

An activated system requirements filter may restrict the allowed values for `CanControllerSyncJumpWidth`. If you want to configure a value that does not appear in the list of allowed values, first deactivate the system requirements filter check box, then select the desired value.

#### 4.6.2.6.2. CAN FD Bit Timing grid

The **CAN FD Bit Timing** grid displays all bit timing configurations that can be configured for the currently selected CAN communication controller in CAN FD mode. Click one or more times onto the column labels to sort the elements in the grid according to the column content either in ascending or descending order. The **CAN FD Bit Timing** grid contains the following columns in addition to the columns listed in [Section 4.6.2.6.1, “CAN Bit Timing grid”](#):

Column	Description
<b>TrcvDelayComp [ns]</b>	Displays the value of the optional parameter <code>CanControllerTrcvDelayCompensationOffset</code> given in nanoseconds. A value of <code>OFF</code> indicates that the parameter is currently disabled. To enable the parameter, enter a positive integral value. To set the parameter to <code>OFF</code> again, delete the value.
<b>TxBitRateSwitch</b>	Displays the value of the boolean parameter <code>TxBitRateSwitch</code> . You can set it to <code>ON</code> or <code>OFF</code> .



---

**NOTE**



**Value range of TrcvDelayComp [ns] is restricted if the system requirements filter is activated**

If the system requirements filter check box is activated and a system model requirement restricts the value range of **TrcvDelayComp**, the CAN Bit Timing Editor adapts the input value if it does not adhere to the system requirement. If you want to configure a value that does not adhere to the system model requirement, deactivate the system requirements filter check box before you can set the value.

---

**NOTE**



**Value range of TxBitRateSwitch is restricted if the system requirements filter is activated**

If the system requirements filter check box is activated and a system model requirement restricts the value of **TxBitRateSwitch** either to **ON** or to **OFF**, the CAN Bit Timing Editor does not allow to set **TxBitRateSwitch** to a different value. If you want to configure a value that does not adhere to the system model requirement, deactivate the system requirements filter check box before you can set the value.

---

### 4.6.3. Using the CAN Buffer Assignment Editor

This chapter provides instructions on how to assign hardware object handles (HOHs) to PDUs with the CAN Buffer Assignment Editor.

You may launch the CAN Buffer Assignment Editor, when you provide the necessary system level parameters for `Can` and `CanIf`. You can import the configuration or define it manually.

The CAN Buffer Assignment Editor is launched via the **Sidebar** view of EB tresos Studio. If the **Sidebar** view is not displayed, you can activate it as follows:

1. Select **Window** from the tool bar.
2. Select **Show View**.
3. Select **Sidebar**.

To launch the CAN Buffer Assignment Editor, click **Edit CAN Buffer Assignment** in the **Sidebar** view.

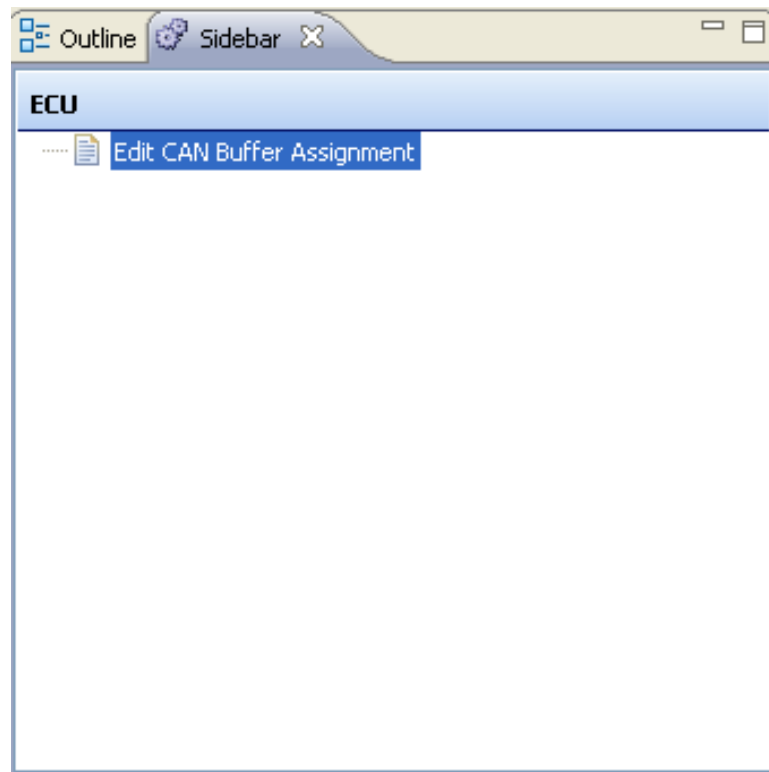


Figure 4.6. The CAN Buffer Assignment Editor in the **Sidebar** view

**TIP**



**If you do not see the CAN Buffer Assignment Editor entry in the Sidebar view**

If your **Sidebar** view does not contain any entries:

1. Check if the `Can` and `CanIf` configuration is loaded.
2. Check if the project or any project subelement is selected in the **Project Explorer** view.
3. Right-click the configuration in the **Project Explorer** view to load a configuration.
4. Select **Load Configuration**.

After the CAN Buffer Assignment Editor has successfully started, its main window is displayed. [Figure 4.2, “CAN Buffer Assignment Editor”](#) shows the main window.

To use the CAN Buffer Assignment Editor, see the following instructions:

- ▶ [Section 4.6.3.1, “Clearing HOH assignment of PDUs”](#)
- ▶ [Section 4.6.3.2, “Clearing PDU assignment of HOHs”](#)
- ▶ [Section 4.6.3.3, “Optimizing filter mask and CAN-ID parameters”](#)
- ▶ [Section 4.6.3.4, “Assigning PDUs to an HOH”](#)
- ▶ [Section 4.6.3.5, “Automatically assigning PDUs to HOHs”](#)
- ▶ [Section 4.6.3.6, “Writing the assignment back to Can and CanIf”](#)

#### 4.6.3.1. Clearing HOH assignment of PDUs

To clear the HOH assignment of one or more PDUs:

1. Select the PDUs in the PDU grid.
2. Click the **Clear selected PDUs** button.

#### 4.6.3.2. Clearing PDU assignment of HOHs

To clear the PDU assignment of one or more HOHs:

1. Select the HOHs in the Hardware Object Handles grid
2. Click the **Clear selected HOHs** button.

---

##### NOTE



**If you remove all PDU assignments, the Filter Mask and the Can Id fields are reset**

The **Filter Mask** and the **Can Id** fields of a BASIC Rx HOH in the Hardware Object Handles grid are reset if all of its PDU assignments are removed.

---

#### 4.6.3.3. Optimizing filter mask and CAN-ID parameters

---

##### NOTE



**Optimizing the filter mask might increase the number of required filter mask registers**

If your platform only provides a limited number of shared filter mask registers, you have to use the following feature carefully. When you click the **Optimize...** button, it usually leads to a new filter mask value. This new value requires an additional filter mask register on the hardware. If the number of configured filter masks exceeds the number of filter masks that are actually available in the hardware:

- ▶ the `Can` module usually reports an error,
  - ▶ no `Can` configuration code is generated.
- 

Click the **Optimize FilterMask and CanId to assigned PDUs** button to reduce the number of unwanted PDUs. This allows you to make the hardware filter mask of one or more BASIC HOHs as restrictive as possible.

#### 4.6.3.4. Assigning PDUs to an HOH

To assign one or more PDUs to an HOH:

1. Select the PDUs in the PDU grid.
2. Select one HOH in the HOH grid.
3. Then click the **Assign PDUs to HOH** button.

There are several constraints if you want to assign one or more PDUs to an HOH manually.

- ▶ *Same direction of PDUs, HOH:* Only assignments of PDUs with the same Rx/Tx direction to an HOH that supports this direction are allowed.
- ▶ *Multiple Rx PDUs to BASIC HOH:* If you want to assign more than one Rx PDU to an HOH, ensure that the HOH is a BASIC HOH. Assignment of more than one Rx PDU to a FULL HOH is not allowed.
- ▶ *Same controller:* Make sure that the PDUs and the HOH are assigned to the same controller. Assignment of PDUs to HOHs across different controllers is not allowed.
- ▶ *PDUs with forbidden HOH Sharing:* Make sure that you assign PDUs with the **HOH Sharing** option set to **forbidden** only to HOHs that are not assigned other PDUs.

If the assignment is successful, the **Filter Mask** and **Can Id** fields of **BASIC** Rx HOHs are updated. All CAN-IDs of the assigned PDUs are accepted for reception.

---

**NOTE**



**Implicit update of filter mask and Can-ID**

If you move an Rx PDU from one BASIC Rx HOH to another, the **Filter Mask** and the **Can Id** fields of both HOHs are implicitly updated.

---

**NOTE**



**Assign received PDUs with the same CAN identifier to the same HOH**

If one communication controller receives one CAN FD PDU and one CAN 2.0 PDU via the same CAN identifier, you must assign both PDUs to the same Rx HOH to be able to receive both PDUs.

---

#### 4.6.3.5. Automatically assigning PDUs to HOHs

You may use the auto assignment to assign all of your configurations PDUs that are not yet assigned to an HOH. PDUs with already assigned HOHs are left untouched from auto assignment.

---

**TIP**



**Repeating the automatic assignment**

If you want to repeat the automatic assignment for one or more than one PDU of your configuration:

1. Clear the HOH assignment for the PDUs you want to assign automatically to HOHs again.
2. Leave the HOH assignments of all other PDUs as they are.
3. Restart the auto assignment.

Similar steps are required if you want to repeat the automatic assignment for one or more HOHs.

---

To launch the auto assignment:

1. Enter the number of HOHs that the algorithm shall try to reserve for PDU transmission into the **reserved HTHs** field.
2. Click the **Auto-Assign all unassigned Controller PDUs** button to the left.

Depending on the number of PDUs to assign, the auto assignment algorithm may take several seconds to find an assignment.

---

**TIP**



**Performing the automatic assignment for specific controllers**

If you want to perform the automatic assignment function for all of your controllers, select **<all>** in the **CanController** combo box. If you want to perform the automatic assignment function for one specific controller, select the controller in the combo box.

---

#### 4.6.3.6. Writing the assignment back to Can and CanIf

---

**TIP**



**Check for problems first**

Before you click the **Finish** button, check whether the CAN Buffer Assignment Editor detected any problems in your PDU to HOH assignment. Warnings and errors are displayed in the top part of the HOH Assignment Window. If there are any errors the **Finish** button is disabled.

---

To write the PDU to HOH assignment back to the Can and CanIf configurations, click the **Finish** button. The PDU to HOH assignment is written back provided there is no error in the configuration.

Every HOH with at least one PDU assigned is written back to the configuration. HOHs without any PDU assigned (any more) are removed from the configuration. If an HOH requires a filter mask to receive several PDUs, a filter mask container is added to the corresponding CAN controller configuration (if it does not already exist), then the Can HOHs filter mask link is set to this filter mask container.

When you click the **Finish** button, the **Results** view displays a tab called **Edit CAN Buffer Assignment**. Click on this tab to see all nodes and values that are changed or added by the CAN Buffer Assignment Editor. In addition, you see information or warning messages that occurred during the write process.

#### 4.6.4. Using the CAN Bit Timing Editor

This chapter provides instructions on how to set up the bit timing configuration parameters using the CAN Bit Timing Editor

The CAN Bit Timing Editor is launched via the **Sidebar** view of EB tresos Studio. If the **Sidebar** view is not displayed, see [Section 4.6.3, “Using the CAN Buffer Assignment Editor”](#) for instructions on how to activate it.

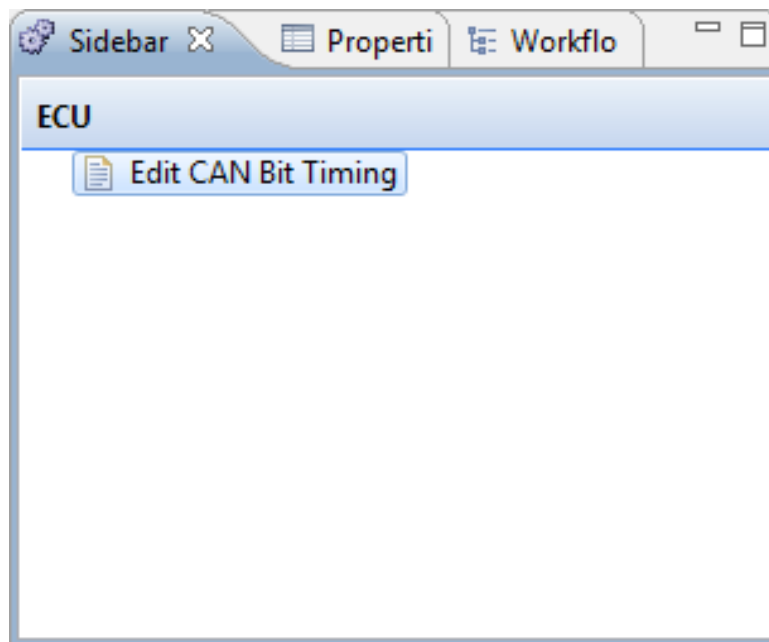


Figure 4.7. The CAN Bit Timing Editor in the **Sidebar** view

#### TIP



#### If you do not see the CAN Bit Timing Editor entry in the Sidebar view

If your **Sidebar** view does not contain any entries:

1. Check if the `Can` and `Mcu` configurations are loaded.
2. Check if the project or any project subelement is selected in the **Project Explorer** view.
3. Right-click the configuration in the **Project Explorer** view to load a configuration.
4. Select **Load Configuration**.

### 4.6.4.1. Configuring CanCpuClockRef

If the CAN Bit Timing Editor issues an error message related to the parameter `CanCpuClockRef`, configure this parameter in the EB tresos Studio configuration project:

1. Select the `CanController` container for which `CanCpuClockRef` must be configured.
2. Update the parameter `CanCpuClockRef`. For an example, see [Figure 4.8, “Configuring CanCpuClockRef”](#).

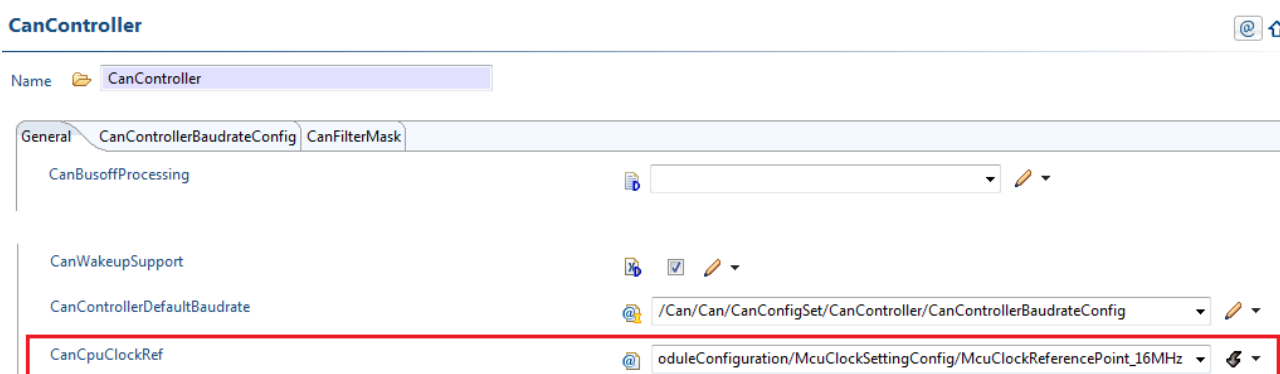


Figure 4.8. Configuring CanCpuClockRef

After the CAN Bit Timing Editor has started, its main window is displayed as shown in [Figure 4.5, “CAN Bit Timing Editor Main Window”](#).

For information on how to use the CAN Bit Timing Editor, see the following instructions:

- ▶ [Section 4.6.4.2, “Configuring the CAN and CAN FD bit timing parameters”](#)
- ▶ [Section 4.6.4.3, “Writing the bit timing configuration back to Can”](#)

### 4.6.4.2. Configuring the CAN and CAN FD bit timing parameters

To configure the CAN bit timing parameters of a CAN communication controller, take the following steps:

1. Select the controller in the **CanController** drop-down list box.
2. Select the desired bit timing configuration in the **CAN Bit Timing** grid.
3. Set the **SJW [Tq]** field of the selected bit timing configuration to the desired value.

To configure the CAN FD bit timing parameters of a CAN communication controller supporting CAN FD, take the following steps:

1. Select the controller in the **CanController** drop-down list box.
2. Select the desired bit timing configuration in the **CAN FD Bit Timing** grid.
3. Set the **SJW [Tq]**, **TrcvDelayComp [ns]**, **TxBitRateSwitch** fields of the selected bit timing configuration to the desired values.

#### 4.6.4.3. Writing the bit timing configuration back to Can

To write the bit timing configurations back to the `Can` configuration, click the **Finish** button.

When you click the **Finish** button, the **Results** view displays a tab called **Edit CAN Bit Timing**. Click this tab to see all nodes and values that are changed or added by the CAN Bit Timing Editor. In addition, you see information or warning messages that occurred during the write process.



## 5. ACG8 CAN Stack module references

### 5.1. Overview

This chapter provides module references for the ACG8 CAN Stack product modules. These include a detailed description of all configuration parameters. Furthermore this chapter lists the application programming interface with all data types, constants and functions.

The content of the sections is sorted alphabetically according the EB tresos AutoCore Generic module names.

For further information on the functional behavior of these modules, refer to the chapter ACG8 CAN Stack user's guide.

#### 5.1.1. Notation in EB module references

EB notation may differ from the AUTOSAR standard notation in the software specification documents (SWS). This section describes the notation of *default value* and *range* fields in the EB module references.

##### 5.1.1.1. Default value of configuration parameters

If there is no default value specified for a parameter, the default value field is omitted to prevent ambiguity with parameters that have -- as default values.

Example: The parameter `BswMCompuConstText` of the `BswM` module of EB tresos AutoCore Generic 8 Mode Management has no default value field, therefore it is omitted.

##### 5.1.1.2. Range information of configuration parameters

The range of a configuration parameter contains an upper and a lower boundary. However, in special cases the range of allowed values can be computed by means of an XPath function that is evaluated at configuration time. An XPath function can either be a standard `xpath:<function>()` or a custom `cxpath:<function>()` function. The range of a configuration parameter may be computed based on other configuration parameters that are referenced from the XPath function. For more information on custom XPath functions, see section *Custom XPath Functions API* of the EB tresos Studio developer's guide.

Example: The parameter `BswMCompuConstText` of the `BswM` module of EB tresos AutoCore Generic 8 Mode Management has the custom XPath function `cxpath:getCompuMethodsVT()` in the range field which provides the allowed values.

## 5.2. CanIf

### 5.2.1. Configuration parameters

Containers included		
Container name	Multiplicity	Description
<a href="#">CanIfCtrlDrvCfg</a>	1..1	Configuration parameters for all the underlying CAN Driver modules are aggregated under this container. For each CAN Driver module a separate instance of this container has to be provided.
<a href="#">CanIfDispatchCfg</a>	1..1	Callback functions provided by upper layer modules of the CanIf. The callback functions defined in this container are common to all configured CAN Driver / CAN Transceiver Driver modules.
<a href="#">CanIfInitCfg</a>	1..1	CanIfInitCfg contains the init parameter of the CAN Interface.  Note: The number of instances of CanIfInitCfg is limited to 1, i.e. there is no multiple container support.
<a href="#">CanIfPrivateCfg</a>	1..1	CanIfPrivateCfg contains the private configuration parameters of the CAN Interface.
<a href="#">CanIfPublicCfg</a>	1..1	CanIfPublicCfg contains the public configuration parameters of the CAN Interface.
<a href="#">CanIfTrcvDrvCfg</a>	0..n	CanIfTrcvDrvCfg contains the configuration parameters of all addressed CAN transceivers by each underlying CAN Transceiver Driver module.  For each CAN Transceiver Driver a separate instance of this container shall be provided.
<a href="#">CanIfUpperLayerConfig</a>	0..16	User upper layer configuration for CanIf.  Any upper layer above CanIf needs a configuration in this list. This also applies for the well-known upper layers of CanIf which are CanTp, CanTSyn, CanNm and PduR.  Upper layers are identified by their names. To add an entry for a well-known upper layer of CanIf the name of the container must be PDUR (for upper layer PduR), CAN_TP (for upper layer CanTp), CAN_TSYN (for upper layer CanTSyn) or CAN_NM

Containers included		
		<p>(for upper layer CanNm). Any other name indicates an user defined upper layer (CDD). User defined upper layer also includes the AUTOSAR modules Xcp and J1939Tp.</p> <p>To assign a particular Pdu to a user specific upper CanIf module (this means any upper layer which is not PduR, CanNm, CanTSyn or CanTp), the parameter CanIfRxPduUpperLayerRef within the CanIfRxPduCfg configuration container and the parameter CanIfTxPduUpperLayerRef within the CanIfTxPduCfg configuration container must refer to an entry of this list.</p>
<a href="#">CommonPublishedInformation</a>	1..1	<p><b>Label:</b> Common Published Information</p> <p>Common container, aggregated by all modules. It contains published information about vendor and versions.</p>
<a href="#">PublishedInformation</a>	1..1	<p><b>Label:</b> EB Published Information</p> <p>Additional published parameters not covered by CommonPublishedInformation container.</p>

Parameters included	
Parameter name	Multiplicity
<a href="#">IMPLEMENTATION_CONFIG_VARIANT</a>	1..1

Parameter Name	IMPLEMENTATION_CONFIG_VARIANT
Label	Config Variant
Multiplicity	1..1
Type	ENUMERATION
Default value	VariantPostBuild
Range	VariantPostBuild

#### 5.2.1.1. CanIfCtrlDrvCfg

Containers included		
Container name	Multiplicity	Description
<a href="#">CanIfCtrlCfg</a>	1..255	<p>CanIfCtrlCfg contains the configuration parameter of an addressed CAN controller by an underlying CAN Driver module.</p> <p>This container is configurable per CAN controller.</p>

Parameters included	
Parameter name	Multiplicity
<a href="#">CanIfCtrlDrvTxCancellation</a>	1..1
<a href="#">CanIfCtrlDrvInitHohConfigRef</a>	1..1
<a href="#">CanIfCtrlDrvNameRef</a>	1..1

Parameter Name	CanIfCtrlDrvTxCancellation
Description	<p>Selects whether transmit cancellation is supported and if the appropriate callback will be provided to the CAN Driver module.</p> <ul style="list-style-type: none"> <li>▶ True: Enabled</li> <li>▶ False: Disabled</li> </ul> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM increase (code):</b> Enabling this parameter increases the ROM consumption of the module code.</li> <li>▶ <b>Execution time increase (code):</b> Enabling this parameter increases the execution time of the module code.</li> </ul>
Multiplicity	1..1
Type	BOOLEAN
Default value	false
Configuration class	PreCompile: VariantPostBuild
Origin	AUTOSAR_ECUC

Parameter Name	CanIfCtrlDrvInitHohConfigRef
Description	<p>Reference to the Init Hoh Configuration.</p> <p><b>This configuration parameter is not used.</b></p>
Multiplicity	1..1
Type	REFERENCE
Configuration class	VariantPostBuild: VariantPostBuild
Origin	AUTOSAR_ECUC

Parameter Name	CanIfCtrlDrvNameRef
----------------	---------------------

<b>Description</b>	<p>CAN Interface driver reference.</p> <p>This reference can be used to get any information (Ex. Driver Name, Vendor ID) from the CAN Driver.</p> <p>The CAN Driver name can be derived from the SHORT-NAME of the CAN Driver module.</p> <p><b>This configuration parameter is not used.</b></p>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	REFERENCE	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

### 5.2.1.2. CanIfCtrlCfg

Parameters included	
Parameter name	Multiplicity
<a href="#">CanIfCtrlId</a>	1..1
<a href="#">CanIfCtrlWakeupSupport</a>	1..1
<a href="#">CanIfCtrlCanCtrlRef</a>	1..1
<a href="#">CanIfCtrlWakeupSourceInRef</a>	0..1
<a href="#">CanIfCtrlWakeupSourceOutRef</a>	0..1

Parameter Name	CanIfCtrlId
<b>Description</b>	<p>CanIfCtrlId abstracts from the CAN Driver specific parameter controller. Each controller of all connected CAN Driver modules shall be assigned to one specific ControllerId of the CanIf.</p> <p>Range: 0..number of configured controllers of all CAN Driver modules.</p>
<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

Parameter Name	CanIfCtrlWakeupSupport
Description	<p>CanIfCtrlWakeupSupport defines if a respective controller of the referenced CAN Driver modules is queriable for wake up events.</p> <ul style="list-style-type: none"> <li>▶ True: Wakeup Support Enabled</li> <li>▶ False: Wakeup Support Disabled</li> </ul>
Multiplicity	1..1
Type	BOOLEAN
Default value	false
Configuration class	VariantPostBuild: VariantPostBuild
Origin	AUTOSAR_ECUC

Parameter Name	CanIfCtrlCanCtrlRef
Description	<p>CanIfCtrlCanCtrlRef references to the logical handle of the underlying CAN controller from the CAN Driver module to be served by the CAN Interface module. The following parameters of CanController config container shall be referenced by this link: CanControllerId, CanWakeupSourceRef.</p> <p>Range: 0..max. number of underlying supported CAN controllers</p>
Multiplicity	1..1
Type	SYMBOLIC-NAME-REFERENCE
Configuration class	VariantPostBuild: VariantPostBuild
Origin	AUTOSAR_ECUC

Parameter Name	CanIfCtrlWakeupSourceInRef
Description	<p>CanIfCtrlWakeupSourceInRef contains a reference to the wake up source for the controller as defined in the ECU State Manager.</p> <p>CanIfCtrlWakeupSourceInRef allows mapping of incoming wake up source (i.e. a wake up event is detected by the CanDrv Driver) to a specific controller. Therefore the parameter is used as input to API CanIf_CheckWakeup().</p> <p>The parameter is optional since providing the API CanIf_CheckWakeup() is also optional. If the parameter is used, CanIfCtrlWakeupSourceOutRef must be set as well.</p> <p>Implementation Type: reference to EcuM_WakeupSourceType.</p>
Multiplicity	0..1
Type	SYMBOLIC-NAME-REFERENCE

<b>Configuration class</b>	<b>PostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanIfCtrlWakeupSourceOutRef</b>
<b>Description</b>	<p>CanIfCtrlWakeupSourceOutRef contains a reference to the wake up source for the controller as defined in the ECU State Manager.</p> <p>CanIfCtrlWakeupSourceOutRef allows mapping of outgoing wake up source (i.e. wake up is signalled to the user notification API) to a specific controller. Therefore the parameter is used as output from CanIf_CheckWakeup() to &lt;User_SetWakeupEvent&gt;. The parameter is also used for wake up validation, i.e. as input and output for API CanIf_CheckValidation().</p> <p>The parameter is optional since providing the API CanIf_CheckWakeup() is also optional.</p> <p>Implementation Type: reference to EcuM_WakeupSourceType.</p>
<b>Multiplicity</b>	0..1
<b>Type</b>	SYMBOLIC-NAME-REFERENCE
<b>Configuration class</b>	<b>PostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

### 5.2.1.3. CanIfDispatchCfg

Parameters included	
Parameter name	Multiplicity
<a href="#">CanIfDispatchUserCtrl-BusOffName</a>	1..1
<a href="#">CanIfDispatchUserCtrl-BusOffUL</a>	1..1
<a href="#">CanIfDispatchUserCtrlModeIndicationName</a>	1..1
<a href="#">CanIfDispatchUserCtrlModeIndicationUL</a>	1..1
<a href="#">CanIfDispatchUserCheckTrcvWakeFlagIndicationName</a>	0..1

Parameters included	
<a href="#">CanIfDispatchUserCheckTrcvWakeFlagIndicationUL</a>	0..1
<a href="#">CanIfDispatchUserClearTrcvWufFlagIndicationName</a>	0..1
<a href="#">CanIfDispatchUserClearTrcvWufFlagIndicationUL</a>	0..1
<a href="#">CanIfDispatchUserConfirmPnAvailabilityName</a>	1..1
<a href="#">CanIfDispatchUserConfirmPnAvailabilityUL</a>	1..1
<a href="#">CanIfDispatchUserTrcvModeIndicationName</a>	1..1
<a href="#">CanIfDispatchUserTrcvModeIndicationUL</a>	1..1
<a href="#">CanIfDispatchUserValidateWakeupEventName</a>	1..1
<a href="#">CanIfDispatchUserValidateWakeupEventUL</a>	1..1
<a href="#">CanIfTranslateTxCanIdFunc</a>	0..1
<a href="#">CanIfTranslateRxCanIdFunc</a>	0..1
<a href="#">CanIfDispatchUserSetWakeupEventName</a>	1..1
<a href="#">CanIfDispatchUserSetWakeupEventUL</a>	1..1
Parameter Name	CanIfDispatchUserCtrlBusOffName
<b>Description</b>	<p>CanIfDispatchUserCtrlBusOffName defines the name of &lt;User_ControllerBusOff&gt;.</p> <p>CanIfDispatchUserCtrlBusOffName depends on the parameter CanIfDispatchUserCtrlBusOffUL. If CanIfDispatchUserCtrlBusOffUL equals CAN_SM the name of &lt;User_ControllerBusOff&gt; is fixed to CanSM_ControllerBu-</p>



	sOff. If CanIfDispatchUserCtrlBusOffUL equals CDD, the name of <User_>ControllerBusOff is selectable.
<b>Multiplicity</b>	1..1
<b>Type</b>	FUNCTION-NAME
<b>Configuration class</b>	<b>PreCompile:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanIfDispatchUserCtrlBusOffUL</b>
<b>Description</b>	<p>CanIfDispatchUserCtrlBusOffUL defines the upper layer (UL) module to which the notifications of all ControllerBusOff events from the CAN Driver modules have to be routed via &lt;User_&gt;ControllerBusOff.</p> <p>The upper layer (UL) module as the provider of &lt;User_&gt;ControllerBusOff must always be configured.</p>
<b>Multiplicity</b>	1..1
<b>Type</b>	ENUMERATION
<b>Default value</b>	CAN_SM
<b>Range</b>	CAN_SM CDD
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanIfDispatchUserCtrlModelIndicationName</b>
<b>Description</b>	<p>CanIfDispatchUserCtrlModelIndicationName defines the name of &lt;User_&gt;ControllerModelIndication.</p> <p>CanIfDispatchUserCtrlModelIndicationName depends on the parameter CanIfDispatchUserCtrlModelIndicationUL. If CanIfDispatchUserCtrlModelIndicationUL equals CAN_SM the name of &lt;User_&gt;ControllerModelIndication is fixed to CanSM_ControllerModelIndication. If CanIfDispatchUserCtrlModelIndicationUL equals CDD, the name of &lt;User_&gt;ControllerModelIndication is selectable.</p>
<b>Multiplicity</b>	1..1
<b>Type</b>	FUNCTION-NAME
<b>Configuration class</b>	<b>PreCompile:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanIfDispatchUserCtrlModelIndicationUL</b>
-----------------------	---

<b>Description</b>	CanIfDispatchUserCtrlModelIndicationUL defines the upper layer (UL) module to which the notifications of all ControllerTransition events from the CAN Driver modules have to be routed via <User_ControllerModelIndication>.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	ENUMERATION	
<b>Default value</b>	CAN_SM	
<b>Range</b>	CAN_SM	
	CDD	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanIfDispatchUserCheckTrcvWakeFlagIndicationName</b>	
<b>Description</b>	This parameter defines the name of <User_CheckTrcvWakeFlagIndication>.. If CANIF_DISPATCH_USERCHECKTRCVWAKEFLAGINDICATION_UL equals CAN_SM the name of <User_CheckTrcvWakeFlagIndication> is fixed. If it equals CDD, the name is selectable. If CANIF_PUBLIC_PN_SUPPORT equals False, this parameter shall not be configurable.	
<b>Multiplicity</b>	0..1	
<b>Type</b>	FUNCTION-NAME	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanIfDispatchUserCheckTrcvWakeFlagIndicationUL</b>	
<b>Description</b>	This parameter defines the upper layer module to which the CheckTrcvWakeFlagIndication from the Driver modules have to be routed.. If CANIF_PUBLIC_PN_SUPPORT equals False, this parameter shall not be configurable.	
<b>Multiplicity</b>	0..1	
<b>Type</b>	ENUMERATION	
<b>Default value</b>	CAN_SM	
<b>Range</b>	CAN_SM	
	CDD	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanIfDispatchUserClearTrcvWufFlagIndicationName</b>	
-----------------------	--	--

<b>Description</b>	This parameter defines the name of <User_ClearTrcvWufFlagIndication>.. If CANIF_DISPATCH_USERCLEARTRCVWUFFLAGINDICATION_UL equals CAN_SM the name of <User_ClearTrcvWufFlagIndication> is fixed. If it equals CDD, the name is selectable. If CANIF_PUBLIC_PN_SUPPORT equals False, this parameter shall not be configurable.	
<b>Multiplicity</b>	0..1	
<b>Type</b>	FUNCTION-NAME	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanIfDispatchUserClearTrcvWufFlagIndicationUL</b>	
<b>Description</b>	This parameter defines the upper layer module to which the ClearTrcvWuf-FlagIndication from the Driver modules have to be routed.. If CANIF_PUBLIC_PN_SUPPORT equals False, this parameter shall not be configurable.	
<b>Multiplicity</b>	0..1	
<b>Type</b>	ENUMERATION	
<b>Default value</b>	CAN_SM	
<b>Range</b>	CAN_SM	
	CDD	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanIfDispatchUserConfirmPnAvailabilityName</b>	
<b>Description</b>	This parameter defines the name of User_ConfirmPnAvailability. If CANIF_DISPATCH_USERCONFIRMPNAVAILABILITY_UL equals CAN_SM the name of User_ConfirmPnAvailability is fixed. If it equals CDD, the name is selectable. If CANIF_PUBLIC_PN_SUPPORT equals False, this parameter shall not be configurable.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	FUNCTION-NAME	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanIfDispatchUserConfirmPnAvailabilityUL</b>	
<b>Description</b>	This parameter defines the upper layer module to which the ConfirmPnAvailability notification from the Driver modules have to be routed. If CANIF_PUBLIC_PN_SUPPORT equals False, this parameter shall not be configurable.	

<b>Multiplicity</b>	1..1
<b>Type</b>	ENUMERATION
<b>Default value</b>	CAN_SM
<b>Range</b>	CAN_SM CDD
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanIfDispatchUserTrcvModelIndicationName</b>
<b>Description</b>	CanIfDispatchUserTrcvModelIndicationName defines the name of <User_ TrcvModelIndication>.  CanIfDispatchUserTrcvModelIndicationName depends on the parameter CanIfDispatchUserTrcvModelIndicationUL. If CanIfDispatchUserTrcvModelIndicationUL equals CAN_SM the name of <User_ TrcvModelIndication> is fixed to CanSM_ TrcvModelIndication. If CanIfDispatchUserTrcvModelIndicationUL equals CDD, the name of <User_ TrcvModelIndication> is selectable.
<b>Multiplicity</b>	1..1
<b>Type</b>	FUNCTION-NAME
<b>Configuration class</b>	<b>PreCompile:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanIfDispatchUserTrcvModelIndicationUL</b>
<b>Description</b>	CanIfDispatchUserTrcvModelIndicationUL defines the upper layer (UL) module to which the notifications of all TransceiverTransition events from the CAN Transceiver Driver modules are routed via <User_ TrcvModelIndication>.
<b>Multiplicity</b>	1..1
<b>Type</b>	ENUMERATION
<b>Default value</b>	CAN_SM
<b>Range</b>	CAN_SM CDD
<b>Configuration class</b>	<b>PreCompile:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanIfDispatchUserValidateWakeupEventName</b>
-----------------------	---

<b>Description</b>	<p>CanIfDispatchUserValidateWakeupEventName defines the name of &lt;User_ValidateWakeupEvent&gt;.</p> <p>CanIfDispatchUserValidateWakeupEventName depends on the parameter CanIfDispatchUserValidateWakeupEventUL. If CanIfDispatchUserValidateWakeupEventUL equals ECUM the name of &lt;User_ValidateWakeupEvent&gt; is fixed to EcuM_ValidateWakeupEvent. If CanIfDispatchUserValidateWakeupEventUL equals CDD, the name of &lt;User_ValidateWakeupEvent&gt; is selectable.</p> <p>If parameter CanIfPublicWakeupCheckValidSupport is disabled, no &lt;User_ValidateWakeupEvent&gt; API can be configured.</p>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	FUNCTION-NAME	
<b>Configuration class</b>	<b>PreCompile:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanIfDispatchUserValidateWakeupEventUL</b>	
<b>Description</b>	<p>CanIfDispatchUserValidateWakeupEventUL defines the upper layer (UL) module to which the notifications about positive former requested wake up sources have to be routed via &lt;User_ValidateWakeupEvent&gt;.</p> <p>If parameter CanIfPublicWakeupCheckValidSupport is disabled, CanIfDispatchUserValidateWakeupEventUL cannot be configured.</p>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	ENUMERATION	
<b>Range</b>	CDD	
	ECUM	
<b>Configuration class</b>	<b>PreCompile:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanIfTranslateTxCanIdFunc</b>	
<b>Label</b>	CanIfTranslateTxCanIdFunc	
<b>Description</b>	<p>CanIfTranslateTxCanIdFunc can be used to configure the user specific CAN ID translation function/macro for Tx PDUs.</p> <p>If CanIfTranslateTxCanIdFunc is disabled, the configured CAN ID (parameter CanIfTxPduCanId) will be used when transmitting a message. If it is enabled, the configured function will be called with a CAN ID and the returned CAN ID will be used when the message is transmitted.</p>	

	<p>The prototype of this function must be as follows (if a macro is used it must behave accordingly):</p> <p>Can_IdType function-name( Can_IdType CanId )</p> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM increase (code):</b> Enabling this parameter increases the ROM consumption of the module code.</li> <li>▶ <b>Execution time increase (code):</b> Enabling this parameter increases the execution time of the module code.</li> </ul>	
<b>Multiplicity</b>	0..1	
<b>Type</b>	FUNCTION-NAME	
<b>Default value</b>	CanIf_TranslateTxCanId	
<b>Configuration class</b>	<b>PreCompile:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

Parameter Name	CanIfTranslateRxCanIdFunc	
<b>Label</b>	CanIfTranslateRxCanIdFunc	
<b>Description</b>	<p>CanIfTranslateRxCanIdFunc can be used to configure the user specific CAN ID translation function/macro for Rx PDUs.</p> <p>If CanIfTranslateRxCanIdFunc is disabled, the configured CAN ID (parameter CanIfRxPduCanId) will be expected by CanIf_RxIndication() when receiving a message. If it is enabled, CanIf_RxIndication() will call this function to translate the received CAN ID into the configured CAN ID (parameter CanIfRxPduCanId) of the corresponding Rx PDU before and use this translated CAN ID for software filtering.</p> <p>The prototype of this function must be as follows (if a macro is used it must behave accordingly):</p> <p>Can_IdType function-name( Can_IdType CanId )</p> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM increase (code):</b> Enabling this parameter increases the ROM consumption of the module code.</li> <li>▶ <b>Execution time increase (code):</b> Enabling this parameter increases the execution time of the module code.</li> </ul>	
<b>Multiplicity</b>	0..1	

<b>Type</b>	FUNCTION-NAME
<b>Default value</b>	CanIf_TranslateRxCanId
<b>Configuration class</b>	<b>PreCompile:</b> VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>CanIfDispatchUserSetWakeupEventName</b>
<b>Description</b>	<p>CanIfDispatchUserSetWakeupEventName defines the name of &lt;User_SetWakeupEvent&gt;.</p> <p>CanIfDispatchUserSetWakeupEventName depends on the parameter CanIfDispatchUserSetWakeupEventUL. If CanIfDispatchUserSetWakeupEventUL equals ECUM the name of &lt;User_SetWakeupEvent&gt; is fixed to EcuM_SetWakeupEvent. If CanIfDispatchUserSetWakeupEventUL equals CDD, the name of &lt;User_SetWakeupEvent&gt; is selectable.</p>
<b>Multiplicity</b>	1..1
<b>Type</b>	FUNCTION-NAME
<b>Configuration class</b>	<b>PreCompile:</b> VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>CanIfDispatchUserSetWakeupEventUL</b>
<b>Description</b>	CanIfDispatchUserSetWakeupEventUL defines the upper layer (UL) module to which the notifications about positive former requested wake up sources have to be routed via <User_SetWakeupEvent>.
<b>Multiplicity</b>	1..1
<b>Type</b>	ENUMERATION
<b>Default value</b>	ECUM
<b>Range</b>	CDD ECUM
<b>Configuration class</b>	<b>PreCompile:</b> VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH

#### 5.2.1.4. CanIfInitCfg

Containers included		
Container name	Multiplicity	Description

Containers included		
<a href="#">CanIfBufferCfg</a>	0..n	This container contains the Txbuffer configuration. Multiple buffers with different sizes could be configured. If CanIfBuffer-Size (CANIF834_Conf) equals 0, the CanIf Tx L-PDU only refers via this CanIfBufferCfg the corresponding CanIfHthCfg..
<a href="#">CanIfInitHohCfg</a>	1..1	This container contains the references to the configuration set-up of each underlying CAN Driver.
<a href="#">CanIfRxPduCfg</a>	0..n	CanIfRxPduCfg contains the configuration parameters of each Rx L-PDU.  The SHORT-NAME of "CanIfRxPduConfig" container itself represents the symbolic name of Rx L-PDU.
<a href="#">CanIfTxPduCfg</a>	0..n	CanIfTxPduCfg contains the configuration parameters of a Tx L-PDU.  It has to be configured as often as a Tx L-PDU is needed.  The SHORT-NAME of "CanIfTxPduConfig" container represents the symbolic name of Tx L-PDU.

Parameters included	
Parameter name	Multiplicity
<a href="#">CanIfInitCfgSet</a>	1..1

Parameter Name	CanIfInitCfgSet	
Description	CanIfInitCfgSet is not used by the CanIf and therefore can not be edited.	
Multiplicity	1..1	
Type	STRING	
Default value		
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

### 5.2.1.5. CanIfBufferCfg

Parameters included	
Parameter name	Multiplicity



Parameters included	
<a href="#">CanIfBufferSize</a>	1..1
<a href="#">CanIfBufferHthRef</a>	1..1

Parameter Name	CanIfBufferSize	
Description	This parameter defines the number of CanIf Tx L-PDUs which can be buffered in one Txbuffer. If this value equals 0, the CanIf does not perform Txbuffering for the CanIf Tx L-PDUs which are assigned to this Txbuffer. If CanIfPublicTxBuffering equals False, this parameter equals 0 for all TxBuffer. If the CanHandleType of the referred HTH equals FULL, this parameter equals 0 for this TxBuffer..	
Multiplicity	1..1	
Type	INTEGER	
Default value	0	
Range	<div>&lt;=255</div> <div>&gt;=0</div>	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

Parameter Name	CanIfBufferHthRef	
Description	Reference to HTH, that defines the hardware object or the pool of hardware objects configured for transmission. All the CanIf Tx L-PDUs refer via the CanIf-BufferCfg and this parameter to the HTHs if TxBuffering is enabled, or not.. Each HTH shall not be assigned to more than one buffer.	
Multiplicity	1..1	
Type	REFERENCE	
Configuration class	PostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

### 5.2.1.6. CanIfInitHohCfg

Containers included		
Container name	Multiplicity	Description
<a href="#">CanIfHrhCfg</a>	0..n	CanIfHrhCfg contains configuration parameter for each hardware receive object (HRH).

Containers included		
<a href="#">CanIfHthCfg</a>	0..n	CanIfHthCfg contains parameters related to each HTH.

Parameters included	
Parameter name	Multiplicity
<a href="#">CanIfInitRefCfgSet</a>	1..1

Parameter Name	CanIfInitRefCfgSet	
Description	<p>Selects the CAN Interface specific configuration setup.</p> <p>This type of external data structure shall contain the post build initialization data for the CAN Interface for all underlying CAN Drivers.</p> <p><b>This configuration parameter is not used.</b></p>	
Multiplicity	1..1	
Type	REFERENCE	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

### 5.2.1.7. CanIfHrhCfg

Containers included		
Container name	Multiplicity	Description
<a href="#">CanIfHrhRangeCfg</a>	0..0	<p>CanIfHrhRangeCfg is not used and therefore can not be edited.</p> <p>The range configuration is done by container CanIfRxPduCanIdRange instead.</p>

Parameters included	
Parameter name	Multiplicity
<a href="#">CanIfHrhSoftwareFilter</a>	1..1
<a href="#">CanIfHrhCanCtrlIdRef</a>	1..1
<a href="#">CanIfHrhCanHandle-TypeRef</a>	0..1
<a href="#">CanIfHrhIdSymRef</a>	1..1

Parameter Name	CanIfHrhSoftwareFilter
Description	<p>Selects the hardware receive objects by using the HRH range/list from CAN Driver configuration to define, for which HRH a software filtering is be performed during receive processing.</p> <ul style="list-style-type: none"> <li>▶ True: Software filtering is enabled.</li> <li>▶ False: Software filtering is enabled.</li> </ul> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>Execution time increase (code):</b> Enabling this parameter increases the execution time of the module code.</li> </ul>
Multiplicity	1..1
Type	BOOLEAN
Default value	true
Configuration class	VariantPostBuild: VariantPostBuild
Origin	AUTOSAR_ECUC

Parameter Name	CanIfHrhCanCtrlIdRef
Description	Reference to controller ID to which the HRH belongs to. A controller can contain one or more HRHs.
Multiplicity	1..1
Type	REFERENCE
Configuration class	VariantPostBuild: VariantPostBuild
Origin	AUTOSAR_ECUC

Parameter Name	CanIfHrhCanHandleTypeRef
Description	CanIfHrhCanHandleTypeRef shall refer to the same HRH as CanIfHrhIdSymRef. Therefore CanIfHrhCanHandleTypeRef can not be edited.
Multiplicity	0..1
Type	SYMBOLIC-NAME-REFERENCE
Configuration class	PostBuild: VariantPostBuild
Origin	AUTOSAR_ECUC

Parameter Name	CanIfHrhIdSymRef
Description	CanIfHrhIdSymRef refers to a particular HRH object in the CanDrv configuration (see CanHardwareObject CAN324_Conf)

	The CanIf receives the following information of the CanDrv module by this reference:  <ul style="list-style-type: none"> <li>▶ CanHandleType (see CAN323_Conf)</li> <li>▶ CanObjectId (see CAN326_Conf)</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	SYMBOLIC-NAME-REFERENCE	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

### 5.2.1.8. CanIfHrhRangeCfg

Parameters included	
Parameter name	Multiplicity
<a href="#">CanIfHrhRangeRxPdu-LowerCanId</a>	1..1
<a href="#">CanIfHrhRangeRxPdu-RangeCanIdType</a>	1..1
<a href="#">CanIfHrhRangeRxPdu-UpperCanId</a>	1..1

Parameter Name	CanIfHrhRangeRxPduLowerCanId
<b>Description</b>	CanIfHrhRangeRxPduLowerCanId is not used.
<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER
<b>Default value</b>	0
<b>Range</b>	<div>&lt;=536870911</div> <div>&gt;=0</div>
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

Parameter Name	CanIfHrhRangeRxPduRangeCanIdType
<b>Description</b>	CanIfHrhRangeRxPduRangeCanIdType is not used.
<b>Multiplicity</b>	1..1

<b>Type</b>	ENUMERATION	
<b>Default value</b>	STANDARD	
<b>Range</b>	EXTENDED	
	STANDARD	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanIfHrhRangeRxPduUpperCanId</b>	
<b>Description</b>	CanIfHrhRangeRxPduUpperCanId is not used.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	
<b>Default value</b>	1	
<b>Range</b>	<=536870911	
	>=0	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

### 5.2.1.9. CanIfHthCfg

Parameters included	
Parameter name	Multiplicity
<a href="#">CanIfHthCanCtrlIdRef</a>	1..1
<a href="#">CanIfHthCanHandle-TypeRef</a>	0..1
<a href="#">CanIfHthIdSymRef</a>	1..1

<b>Parameter Name</b>	<b>CanIfHthCanCtrlIdRef</b>	
<b>Description</b>	Reference to controller ID to which the HTH belongs to. A controller can contain one or more HTHs.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	REFERENCE	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

Parameter Name	CanIfHthCanHandleTypeRef	
Description	CanIfHthCanHandleTypeRef shall refer to the same HTH as CanIfHthIdSymRef. Therefore CanIfHthCanHandleTypeRef can not be edited.	
Multiplicity	0..1	
Type	SYMBOLIC-NAME-REFERENCE	
Configuration class	Link:	VariantPostBuild
Origin	AUTOSAR_ECUC	

Parameter Name	CanIfHthIdSymRef	
Description	<p>CanIfHthIdSymRef refers to a particular HTH object in the CAN Driver module configuration.</p> <p>The HTH ID is unique in a given CAN Driver. The HTH IDs are defined in the CAN Driver module and hence it is derived from CAN Driver configuration.</p>	
Multiplicity	1..1	
Type	SYMBOLIC-NAME-REFERENCE	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

#### 5.2.1.10. CanIfRxPduCfg

Containers included		
Container name	Multiplicity	Description
<a href="#">CanIfRxPduCanIdRange</a>	0..1	<p>Range of CAN identifier of Rx L-PDUs used by the CAN Interface.</p> <p>CanIfRxPduCanIdRange is used if a range of CAN identifier is assigned to the PDU. If a single ID is assigned then the parameter CanIfRxPduCanId shall be used instead.</p> <p>The boundaries of the range are configured with the parameter CanIfRxPduCanIdRangeLowerCanId and CanIfRxPduCanIdRangeUpperCanId.</p> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>► <b>ROM increase (config):</b> Using this container increases the ROM consumption of the module configuration.</li> </ul>

Containers included		
		<ul style="list-style-type: none"> <li>► <b>ROM increase (code):</b> Using this container increases the ROM consumption of the module code.</li> <li>► <b>Execution time increase (code):</b> Using this container increases the execution time of the module code.</li> </ul>
<a href="#">CanIfTTRxFrameTriggering</a>	1..1	CanIfTTRxFrameTriggering is not used by the CanIf.

Parameters included	
Parameter name	Multiplicity
<a href="#">CanIfRxPduCanId</a>	1..1
<a href="#">CanIfRxPduCanIdType</a>	1..1
<a href="#">CanIfRxPduDlc</a>	1..1
<a href="#">CanIfRxPduId</a>	1..1
<a href="#">CanIfRxPduReadData</a>	1..1
<a href="#">CanIfRxPduReadNotifyStatus</a>	1..1
<a href="#">CanIfRxPduUserRxIndicationName</a>	1..1
<a href="#">CanIfRxPduUserRxIndicationUL</a>	0..1
<a href="#">CanIfRxPduBswSchExclAreaIdRef</a>	1..1
<a href="#">CanIfRxPduHrIdRef</a>	1..n
<a href="#">CanIfRxPduRef</a>	1..1
<a href="#">CanIfRxPduTargetPduId</a>	1..1
<a href="#">CanIfRxPduUpperLayerRef</a>	1..1

Parameter Name	CanIfRxPduCanId
Description	<p>CAN identifier of Rx L-PDUs used by the CAN Interface.</p> <p>CanIfRxPduCanId is used if exactly one CAN identifier is assigned to the PDU. If a range is assigned then the CanIfRxPduCanIdRange container shall be used instead.</p> <p>Range:</p>

	<ul style="list-style-type: none"> <li>▶ 11 bit for standard CAN identifier.</li> <li>▶ 29 bit for extended CAN identifier.</li> </ul> <p>Example: The parameter is used by the CanIf within the Software Filtering functions.</p>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	
<b>Default value</b>	0	
<b>Configuration class</b>	<b>PostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

Parameter Name	CanIfRxPduCanIdType	
<b>Description</b>	<p>CanIfRxPduCanIdType describes the type of the CAN identifier of Rx L-PDUs used by the CAN Driver for CAN L-PDU reception.</p> <p>Range:</p> <ul style="list-style-type: none"> <li>▶ EXTENDED_CAN for CAN 2.0 or CAN FD frame with extended identifier (29 bits).</li> <li>▶ EXTENDED_FD_CAN for CAN FD frame with extended identifier (29 bits).</li> <li>▶ EXTENDED_NO_FD_CAN for CAN 2.0 frame with extended identifier (29 bits).</li> <li>▶ STANDARD_CAN for CAN 2.0 or CAN FD frame with standard identifier (11 bits).</li> <li>▶ STANDARD_FD_CAN for CAN FD frame with standard identifier (11 bits).</li> <li>▶ STANDARD_NO_FD_CAN for CAN 2.0 frame with standard identifier (11 bits).</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	ENUMERATION	
<b>Default value</b>	STANDARD_CAN	
<b>Range</b>	EXTENDED_CAN	
	EXTENDED_FD_CAN	
	EXTENDED_NO_FD_CAN	
	STANDARD_CAN	
	STANDARD_FD_CAN	
	STANDARD_NO_FD_CAN	



<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

Parameter Name	CanIfRxPduDlc	
<b>Description</b>	<p>Data Length code of Rx L-PDUs used by the CAN Interface.</p> <p>This information is used for DLC checking. A Rx L-PDU passes the DLC check if the received DLC is equal or greater than this value.</p> <p>If a Rx L-PDU passes the DLC check, CanIf passes the PDU to the upper layer module. Otherwise the Rx L-PDU is silently discarded.</p> <p>A value of 0 disables the DLC check for this PDU.</p> <p>If DLC check is disabled via the parameter CanIfPrivateDlcCheck this value has no effect on reception.</p>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	
<b>Default value</b>	0	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

Parameter Name	CanIfRxPduId	
<b>Description</b>	<p>Unique ID for the Rx L-PDU in the CAN Interface.</p> <p>Range: 0..max. number of defined CanRxPduIds.</p>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	
<b>Range</b>	<p>&lt;=65534</p> <p>&gt;=0</p>	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

Parameter Name	CanIfRxPduReadData	
<b>Description</b>	<p>Enables and disables the Rx buffering for reading of Rx L-PDU data.</p> <ul style="list-style-type: none"> <li>▶ True: Enabled</li> <li>▶ False: Disabled</li> </ul>	

	<b>Optimization Effect:</b> <ul style="list-style-type: none"> <li>▶ <b>RAM increase (config):</b> Enabling this parameter increases the RAM consumption of the module configuration.</li> <li>▶ <b>Execution time increase (code):</b> Enabling this parameter increases the execution time of the module code.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

Parameter Name	CanIfRxPduReadNotifyStatus	
<b>Description</b>	<p>Enables and disables receive indication for each Rx L-PDU for reading its notification status.</p> <ul style="list-style-type: none"> <li>▶ True: Enabled</li> <li>▶ False: Disabled</li> </ul> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>RAM increase (config):</b> Enabling this parameter increases the RAM consumption of the module configuration.</li> <li>▶ <b>Execution time increase (code):</b> Enabling this parameter increases the execution time of the module code.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

Parameter Name	CanIfRxPduUserRxIndicationName	
<b>Description</b>	<p>In order to make this configuration container capable for post-build configuraton it is not possible to use this paramter. Please use the configuration parameter of the same name in the container CanIfUpperLayerConfig relating to CanIfRxPduUserRxIndicationUL.</p>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	FUNCTION-NAME	

<b>Default value</b>	
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanIfRxPduUserRxIndicationUL</b>
<b>Description</b>	<p>CanIfRxPduUserRxIndicationUL defines the upper layer (UL) module to which the indication of the successfully received CanRxPduId is routed via &lt;User_RxIndication&gt;.</p> <p>&lt;User_RxIndication&gt; is invoked when the indication of the configured CanRx-PduId is received by a Rx indication event from the CAN Driver module. If no upper layer (UL) module is configured, no &lt;User_RxIndication&gt; is called in case of a Rx indication event of the CanRxPduId from the CAN Driver module.</p>
<b>Multiplicity</b>	0..1
<b>Type</b>	ENUMERATION
<b>Default value</b>	PDUR
<b>Range</b>	CAN_NM CAN_TP CAN_TSYN CDD PDUR
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanIfRxPduBswSchExclAreIdRef</b>
<b>Description</b>	CanIfRxPduBswSchExclAreIdRef is not used by the CanIf and therefore can not be edited.
<b>Multiplicity</b>	1..1
<b>Type</b>	REFERENCE
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanIfRxPduHrIdRef</b>
<b>Description</b>	CanIfRxPduHrIdRef refers to the HRH to which Rx L-PDU belongs to.
<b>Multiplicity</b>	1..n

<b>Type</b>	REFERENCE	
<b>Configuration class</b>	<b>PostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanIfRxPduRef</b>	
<b>Description</b>	Reference to the "global" PDU structure to allow harmonization of handle IDs in the com stack.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	REFERENCE	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanIfRxPduTargetPduID</b>	
<b>Label</b>	CanIfRxPduTargetPduID	
<b>Description</b>	<p>CanIfRxPduTargetPduID defines the PDU ID to be delivered for this Rx L-PDU if this message is received on the bus.</p> <p>Please note that CanIfRxPduTargetPduID is used only if this Rx L-PDU is assigned to a user specific upper layer (parameter <i>CanIfRxPduUserRxIndicationUL</i> is set to <i>CDD</i>).</p>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	
<b>Range</b>	<=65535	
	>=0	
<b>Configuration class</b>	<b>PostBuild:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>CanIfRxPduUpperLayerRef</b>	
<b>Label</b>	CanIfRxPduUpperLayerRef	
<b>Description</b>	CanIfRxPduUpperLayerRef references the user specific upper layer for this Rx L-PDU in the case that <i>CanIfRxPduUserRxIndicationUL</i> is set to <i>CDD</i> .	
<b>Multiplicity</b>	1..1	
<b>Type</b>	REFERENCE	
<b>Configuration class</b>	<b>PostBuild:</b>	VariantPostBuild

<b>Origin</b>	Elektrobit Automotive GmbH
---------------	----------------------------

### 5.2.1.11. CanIfRxPduCanIdRange

Parameters included	
Parameter name	Multiplicity
<a href="#">CanIfRxPduCanIdRangeLowerCanId</a>	1..1
<a href="#">CanIfRxPduCanIdRangeUpperCanId</a>	1..1

Parameter Name	CanIfRxPduCanIdRangeLowerCanId
<b>Description</b>	Lower CAN identifier of a Rx L-PDU for identifier range definition, in which all CAN IDs are mapped to one PDU ID.  Range: <ul style="list-style-type: none"> <li>▶ 11 bit for standard CAN identifier.</li> <li>▶ 29 bit for extended CAN identifier.</li> </ul>
<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER
<b>Default value</b>	0
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

Parameter Name	CanIfRxPduCanIdRangeUpperCanId
<b>Description</b>	Upper CAN identifier of a Rx L-PDU for identifier range definition, in which all CAN IDs are mapped to one PDU ID.  Range: <ul style="list-style-type: none"> <li>▶ 11 bit for standard CAN identifier.</li> <li>▶ 29 bit for extended CAN identifier.</li> </ul>
<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER
<b>Default value</b>	1

<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

### 5.2.1.12. CanIfTTRxFrameTriggering

Parameters included	
Parameter name	Multiplicity
<a href="#">CanTTRxJoblistTimeMark</a>	0..1
<a href="#">CanIfTTRxHwObjectTriggerIdRef</a>	1..1

Parameter Name	CanTTRxJoblistTimeMark	
Description	CanTTRxJoblistTimeMark is not used by the CanIf and therefore can not be edited.	
Multiplicity	0..1	
Type	INTEGER	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

Parameter Name	CanIfTTRxHwObjectTriggerIdRef	
Description	CanIfTTRxHwObjectTriggerIdRef is not used by the CanIf and therefore can not be edited.	
Multiplicity	1..1	
Type	REFERENCE	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

### 5.2.1.13. CanIfTxPduCfg

Containers included		
Container name	Multiplicity	Description

Containers included		
<a href="#">CanIfTTTxFrameTriggering</a>	1..1	CanIfTTTxFrameTriggering is not used by the CanIf.

Parameters included	
Parameter name	Multiplicity
<a href="#">CanIfTxPduCanId</a>	1..1
<a href="#">CanIfTxPduCanIdType</a>	1..1
<a href="#">CanIfTxPduDlc</a>	1..1
<a href="#">CanIfTxPduId</a>	1..1
<a href="#">CanIfTxPduPnFilterPdu</a>	1..1
<a href="#">CanIfTxPduReadNotifyStatus</a>	1..1
<a href="#">CanIfTxPduType</a>	1..1
<a href="#">CanIfTxPduUserTxConfirmationName</a>	1..1
<a href="#">CanIfTxPduUserTxConfirmationUL</a>	0..1
<a href="#">CanIfTxPduBswSchExclArealdRef</a>	1..1
<a href="#">CanIfTxPduBufferRef</a>	1..1
<a href="#">CanIfTxPduRef</a>	1..1
<a href="#">CanIfTxPduSourcePduId</a>	1..1
<a href="#">CanIfTxPduUpperLayerRef</a>	1..1

Parameter Name	CanIfTxPduCanId
<b>Description</b>	<p>CAN identifier of Tx L-PDUs used by the CAN Driver for CAN L-PDU transmission.</p> <p>Range:</p> <ul style="list-style-type: none"> <li>▶ 11 bit for standard CAN identifier.</li> <li>▶ 29 bit for extended CAN identifier.</li> </ul>
<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER

<b>Default value</b>	0
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanIfTxPduCanIdType</b>
<b>Description</b>	<p>CanIfTxPduCanIdType describes the type of the CAN identifier of Tx L-PDUs used by the CAN Driver for CAN L-PDU transmission.</p> <p>Range:</p> <ul style="list-style-type: none"> <li>▶ STANDARD_CAN Can frame with standard identifier (11 bits).</li> <li>▶ STANDARD_FD_CAN Can FD frame with standard identifier (11 bits).</li> <li>▶ EXTENDED_CAN Can frame with extended identifier (29 bits).</li> <li>▶ EXTENDED_FD_CAN Can FD frame with extended identifier (29 bits).</li> </ul>
<b>Multiplicity</b>	1..1
<b>Type</b>	ENUMERATION
<b>Default value</b>	STANDARD_CAN
<b>Range</b>	<div>EXTENDED_CAN</div> <div>EXTENDED_FD_CAN</div> <div>STANDARD_CAN</div> <div>STANDARD_FD_CAN</div>
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanIfTxPduDlc</b>
<b>Description</b>	<p>CanIfTxPduDlc is not used by the CanIf and therefore can not be edited.</p> <p>Please note: The data length code is derived from the PduInfoPtr of the CanIf_-Transmit() function instead.</p>
<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER
<b>Default value</b>	8
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanIfTxPduId</b>
-----------------------	---------------------



<b>Description</b>	ECU wide unique, symbolic handle for Tx L-PDU.  Range: 0..max. number of CanTxPduIds.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	
<b>Range</b>	<=65534	
	>=0	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanIfTxPduPnFilterPdu</b>	
<b>Description</b>	If CanIfPublicPnFilterSupport is enabled, by this parameter PDUs could be configured which will pass the CanIfPnFilter. If there is no CanIfTxPduPnFilterPdu configured per controller, the corresponding controller applies no CanIfPnFilter.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>PostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanIfTxPduReadNotifyStatus</b>	
<b>Description</b>	<p>Enables and disables transmit confirmation for each Tx L-PDU for reading its notification status.</p> <ul style="list-style-type: none"> <li>▶ True: Enabled</li> <li>▶ False: Disabled</li> </ul> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>RAM increase (config):</b> Enabling this parameter increases the RAM consumption of the module configuration.</li> <li>▶ <b>Execution time increase (code):</b> Enabling this parameter increases the execution time of the module code.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild

<b>Origin</b>	AUTOSAR_ECUC	
---------------	--------------	--

Parameter Name	CanIfTxPduType	
<b>Description</b>	<p>CanIfTxPduType defines the type of each Tx L-PDU. CanIfTxPduType selects between static CAN ID or a possible CAN ID change via the API CanIf_SetDynamic-TxId()</p> <p>Range:</p> <ul style="list-style-type: none"> <li>▶ STATIC: CAN ID can not be changed during run-time</li> <li>▶ DYNAMIC: CAN ID can be changed during run-time</li> </ul> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>RAM increase (config):</b> Setting this parameter to DYNAMIC increases the RAM consumption of the module configuration.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	ENUMERATION	
<b>Default value</b>	STATIC	
<b>Range</b>	DYNAMIC	
	STATIC	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

Parameter Name	CanIfTxPduUserTxConfirmationName	
<b>Description</b>	<p>In order to make this configuration container capable for post-build configuraton it is not possible to use this paramter. Please use the configuration parameter of the same name in the container CanIfUpperLayerConfig relating to CanIfTxPdu-UserTxConfirmationUL.</p>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	FUNCTION-NAME	
<b>Default value</b>		
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

Parameter Name	CanIfTxPduUserTxConfirmationUL	
<b>Description</b>	<p>CanIfTxPduUserTxConfirmationUL defines the upper layer (UL) module to which the confirmation of the successfully transmitted CanTxPduld is routed via the &lt;User_TxConfirmation&gt;.</p>	

	<User_TxConfirmation> is invoked when the confirmation of the configured CanTxPduId was received by a Tx confirmation event from the CAN Driver module. If no upper layer (UL) module is configured, no <User_TxConfirmation> is called in case of a Tx confirmation event of the CanTxPduId from the CAN Driver module.	
<b>Multiplicity</b>	0..1	
<b>Type</b>	ENUMERATION	
<b>Default value</b>	PDUR	
<b>Range</b>	CAN_NM	
	CAN_TP	
	CAN_TSYN	
	CDD	
	PDUR	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanIfTxPduBswSchExclAreIdRef</b>	
<b>Description</b>	CanIfTxPduBswSchExclAreIdRef is not used by the CanIf and therefore can not be edited.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	REFERENCE	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanIfTxPduBufferRef</b>	
<b>Description</b>	Configurable reference to a CanIf buffer configuration..	
<b>Multiplicity</b>	1..1	
<b>Type</b>	REFERENCE	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanIfTxPduRef</b>	
<b>Description</b>	Reference to the "global" PDU structure to allow harmonization of handle IDs in the com stack.	

<b>Multiplicity</b>	1..1
<b>Type</b>	REFERENCE
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanIfTxPduSourcePduID</b>
<b>Label</b>	CanIfTxPduSourcePduID
<b>Description</b>	<p>CanIfTxPduSourcePduID defines the PDU ID to be used for Tx confirmations of this Tx L-PDU if this message successfully transmitted.</p> <p>Please note that CanIfTxPduSourcePduID is used only if this Tx L-PDU is assigned to a user specific upper layer (parameter <i>CanIfTxPduUserTxConfirmationUL</i> is set to <i>CDD</i>).</p>
<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER
<b>Range</b>	<p>&lt;=65535</p> <p>&gt;=0</p>
<b>Configuration class</b>	<b>PostBuild:</b> VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>CanIfTxPduUpperLayerRef</b>
<b>Label</b>	CanIfTxPduUpperLayerRef
<b>Description</b>	CanIfTxPduUpperLayerRef references the user specific upper layer for this Tx L-PDU in the case that <i>CanIfTxPduUserTxConfirmationUL</i> is set to <i>CDD</i> .
<b>Multiplicity</b>	1..1
<b>Type</b>	REFERENCE
<b>Configuration class</b>	<b>PostBuild:</b> VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH

#### 5.2.1.14. CanIfTTTxFrameTriggering

<b>Parameters included</b>	
<b>Parameter name</b>	<b>Multiplicity</b>

Parameters included	
<a href="#">CanIfTTTxJoblistTimeMark</a>	0..1
<a href="#">CanIfTTTxHwObjectTriggerIdRef</a>	1..1

Parameter Name	CanIfTTTxJoblistTimeMark	
Description	CanIfTTTxJoblistTimeMark is not used by the CanIf and therefore can not be edited.	
Multiplicity	0..1	
Type	INTEGER	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

Parameter Name	CanIfTTTxHwObjectTriggerIdRef	
Description	CanIfTTTxHwObjectTriggerIdRef is not used by the CanIf and therefore can not be edited.	
Multiplicity	1..1	
Type	REFERENCE	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

### 5.2.1.15. CanIfPrivateCfg

Containers included		
Container name	Multiplicity	Description
<a href="#">CanIfTTGeneral</a>	1..1	CanIfTTGeneral is not used by the CanIf.

Parameters included	
Parameter name	Multiplicity
<a href="#">CanIfPrivateDlcCheck</a>	1..1
<a href="#">CanIfPrivateSoftwareFilterType</a>	1..1

Parameters included	
<a href="#">CanIfSupportTTCAN</a>	1..1

Parameter Name	CanIfPrivateDlcCheck
Description	<p>Selects whether the DLC check is supported.</p> <ul style="list-style-type: none"> <li>▶ True: Enabled</li> <li>▶ False: Disabled</li> </ul> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM increase (code):</b> Enabling this parameter increases the ROM consumption of the module code.</li> <li>▶ <b>Execution time increase (code):</b> Enabling this parameter increases the execution time of the module code.</li> </ul>
Multiplicity	1..1
Type	BOOLEAN
Default value	true
Configuration class	VariantPostBuild: VariantPostBuild
Origin	AUTOSAR_ECUC

Parameter Name	CanIfPrivateSoftwareFilterType
Description	<p>Selects the desired software filter mechanism for reception only.</p> <p>Each implemented software filtering method is identified by this enumeration number.</p> <p>Range: The types of implemented software filtering methods. Only BINARY is supported.</p>
Multiplicity	1..1
Type	ENUMERATION
Default value	BINARY
Range	BINARY
Configuration class	VariantPostBuild: VariantPostBuild
Origin	AUTOSAR_ECUC

Parameter Name	CanIfSupportTTCAN
Description	CanIfSupportTTCAN is not used by the CanIf and therefore can not be edited.

<b>Multiplicity</b>	1..1
<b>Type</b>	BOOLEAN
<b>Default value</b>	false
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

### 5.2.1.16. CanIfTTGeneral

Parameters included	
Parameter name	Multiplicity
<a href="#">CanIfTTJoblist</a>	1..1
<a href="#">CanIfTTMaxIsrDelay</a>	1..1

<b>Parameter Name</b>	<b>CanIfTTJoblist</b>
<b>Description</b>	CanIfTTJoblist is not used by the CanIf and therefore can not be edited.
<b>Multiplicity</b>	1..1
<b>Type</b>	BOOLEAN
<b>Default value</b>	false
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanIfTTMaxIsrDelay</b>
<b>Description</b>	CanIfTTMaxIsrDelay is not used by the CanIf and therefore can not be edited.
<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

### 5.2.1.17. CanIfPublicCfg

Containers included		
Container name	Multiplicity	Description

Containers included		
<a href="#">CanIfRxProcessing</a>	0..n	Configuration of a dedicated Rx MainFunction. The name of the generated function uses the pattern <code>CanIf_ MainFunctionRx_-"Short-Name"</code> .
<a href="#">CanIfTxProcessing</a>	0..n	Configuration of a dedicated Tx MainFunction. The name of the generated function uses the pattern <code>CanIf_ MainFunctionTx_-"Short-Name"</code> .

Parameters included	
Parameter name	Multiplicity
<a href="#">CanIfSetBaudrateApi</a>	1..1
<a href="#">CanIfPublicCancel- TransmitSupport</a>	1..1
<a href="#">CanIfPublicCddHeader- File</a>	0..n
<a href="#">CanIfPublicChangeBau- drateSupport</a>	1..1
<a href="#">CanIfPublicDevErrorDe- tect</a>	1..1
<a href="#">CanIfPublicHandleType- Enum</a>	1..1
<a href="#">CanIfPublicMultiple- DrvSupport</a>	1..1
<a href="#">CanIfPublicNumberOf- CanHwUnits</a>	1..1
<a href="#">CanIfPublicPnSupport</a>	1..1
<a href="#">CanIfPublicReadRxPdu- DataApi</a>	1..1
<a href="#">CanIfPublicReadRxP- duNotifyStatusApi</a>	1..1
<a href="#">CanIfPublicReadTxP- duNotifyStatusApi</a>	1..1
<a href="#">CanIfPublicSetDynamic- TxIdApi</a>	1..1
<a href="#">CanIfPublicTxBuffering</a>	1..1
<a href="#">CanIfPublicTxConfirm- PollingSupport</a>	1..1



Parameters included	
<a href="#">CanIfPublicVersionInfoApi</a>	1..1
<a href="#">CanIfPublicWake-upCheckValidSupport</a>	1..1
<a href="#">CanIfDecoupledProcessingSupport</a>	1..1
<a href="#">CanIfRelocatablePbcfgEnable</a>	1..1
<a href="#">CanIfEnableCanRel422Compatibility</a>	1..1
<a href="#">CanIfEnableCanRev2Compatibility</a>	1..1
<a href="#">CanIfPublicCanIdTypeEnum</a>	1..1
<a href="#">CanIfPublicSingleCtrlOpt</a>	1..1
<a href="#">CanIfPublicHohTranslationOpt</a>	1..1
<a href="#">CanIfPublicCtrlWake-upSupport</a>	1..1
<a href="#">CanIfPublicTrcvWake-upSupport</a>	1..1
<a href="#">CanIfPublicRangeReceptionSupport</a>	1..1
<a href="#">CanIfPublicTrcvSupport</a>	1..1
<a href="#">CanIfPublicMaxCtrl</a>	1..1
<a href="#">CanIfPublicMaxTxBuffers</a>	1..1
<a href="#">CanIfPublicMaxTxBufferSize</a>	1..1
<a href="#">CanIfPublicMaxHths</a>	1..1
<a href="#">CanIfPublicMaxRxNotifyPdus</a>	1..1
<a href="#">CanIfPublicMaxTxNotifyPdus</a>	1..1
<a href="#">CanIfPublicMaxRxBuffer</a>	1..1

Parameters included	
<a href="#">CanIfPublicMaxDynTxP-dus</a>	1..1
<a href="#">CanIfSingleCanTrc-vAPIInfixEnable</a>	1..1
<a href="#">CanIfTxOfflineActiveSupport</a>	1..1
<a href="#">CanIfPublicWake-upCheckValidByNM</a>	1..1

Parameter Name	CanIfSetBaudrateApi
Description	<p>Configuration parameter to enable/disable the CanIf_SetBaudrate API to change the baud rate of a CAN Controller.</p> <ul style="list-style-type: none"> <li>▶ True: CanIf_SetBaudrate API is supported.</li> <li>▶ False: CanIf_SetBaudrate API is not supported.</li> </ul>
Multiplicity	1..1
Type	BOOLEAN
Default value	false
Configuration class	VariantPostBuild: VariantPostBuild
Origin	Elektrobit Automotive GmbH

Parameter Name	CanIfPublicCancelTransmitSupport
Description	<p>CanIfPublicCancelTransmitSupport enables/disables a dummy API for upper layer modules which allows to request the cancellation of an I-PDU.</p> <ul style="list-style-type: none"> <li>▶ True: Enabled</li> <li>▶ False: Disabled</li> </ul> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM increase (code):</b> Enabling this parameter increases the ROM consumption of the module code.</li> <li>▶ <b>Execution time increase (code):</b> Enabling this parameter increases the execution time of the module code.</li> </ul>
Multiplicity	1..1
Type	BOOLEAN
Default value	false

<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanIfPublicCddHeaderFile</b>	
<b>Description</b>	<p>Defines header files for callback functions which shall be included in case of CDDs.</p> <p>Range of characters is 1.. 32.</p>	
<b>Multiplicity</b>	0..n	
<b>Type</b>	STRING	
<b>Configuration class</b>	<b>PreCompile:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanIfPublicChangeBaudrateSupport</b>	
<b>Description</b>	<p>Configuration parameter to enable/disable the API to change the baudrate of a CAN controller..</p> <ul style="list-style-type: none"> <li>▶ True: Enabled</li> <li>▶ False: Disabled</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanIfPublicDevErrorDetect</b>	
<b>Description</b>	<p>Enables and disables the development error detection and notification mechanism.</p> <ul style="list-style-type: none"> <li>▶ True: Enabled</li> <li>▶ False: Disabled</li> </ul> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM increase (code):</b> Enabling this parameter increases the ROM consumption of the module code.</li> <li>▶ <b>Execution time increase (code):</b> Enabling this parameter increases the execution time of the module code.</li> </ul>	

<b>Multiplicity</b>	1..1
<b>Type</b>	BOOLEAN
<b>Default value</b>	true
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanIfPublicHandleTypeEnum</b>
<b>Description</b>	<p>CanIfPublicHandleTypeEnum is used to configure the type Can_HwHandleType. The type Can_HwHandleType represents the hardware object handles of a CAN hardware unit. For CAN hardware units or in general systems with more than 254 hardware objects, the extended range (UINT16) shall be used. than</p> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>► <b>ROM reduction (config):</b> Setting this parameter to UINT8 reduces the ROM consumption of the module configuration.</li> </ul>
<b>Multiplicity</b>	1..1
<b>Type</b>	ENUMERATION
<b>Default value</b>	UINT8
<b>Range</b>	<div>UINT16</div> <div>UINT8</div>
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanIfPublicMultipleDrvSupport</b>
<b>Description</b>	CanIfPublicMultipleDrvSupport is not used by CanIf and therefore can not be edited.
<b>Multiplicity</b>	1..1
<b>Type</b>	BOOLEAN
<b>Default value</b>	false
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanIfPublicNumberOfCanHwUnits</b>
<b>Description</b>	CanIfPublicNumberOfCanHwUnits is not used by the CanIf and therefore can not be edited.

	Please note: The CanIf uses the default value CanIfPublicNumberOfCanHwUnits = 1.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	
<b>Default value</b>	1	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanIfPublicPnSupport</b>	
<b>Description</b>	<p>Selects support of Partial Network features in CanIf.</p> <ul style="list-style-type: none"> <li>▶ True: Enabled</li> <li>▶ False: Disabled</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanIfPublicReadRxPduDataApi</b>	
<b>Description</b>	<p>Enables / Disables the API CanIf_ReadRxPduData() for reading Rx L-PDU data.</p> <ul style="list-style-type: none"> <li>▶ True: Enabled</li> <li>▶ False: Disabled</li> </ul> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM increase (code):</b> Enabling this parameter increases the ROM consumption of the module code.</li> <li>▶ <b>Execution time increase (code):</b> Enabling this parameter increases the execution time of the module code.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

Parameter Name	CanIfPublicReadRxPduNotifyStatusApi
Description	<p>Enables and disables the API CanIf_ReadRxNotifStatus() for reading the Rx L-PDU data.</p> <ul style="list-style-type: none"> <li>▶ True: Enabled</li> <li>▶ False: Disabled</li> </ul> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM increase (code):</b> Enabling this parameter increases the ROM consumption of the module code.</li> <li>▶ <b>Execution time increase (code):</b> Enabling this parameter increases the execution time of the module code.</li> </ul>
Multiplicity	1..1
Type	BOOLEAN
Default value	false
Configuration class	VariantPostBuild:   VariantPostBuild
Origin	AUTOSAR_ECUC

Parameter Name	CanIfPublicReadTxPduNotifyStatusApi
Description	<p>Enables and disables the API CanIf_ReadTxNotifStatus() for reading the notification status of Tx L-PDUs.</p> <ul style="list-style-type: none"> <li>▶ True: Enabled</li> <li>▶ False: Disabled</li> </ul> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM increase (code):</b> Enabling this parameter increases the ROM consumption of the module code.</li> <li>▶ <b>Execution time increase (code):</b> Enabling this parameter increases the execution time of the module code.</li> </ul>
Multiplicity	1..1
Type	BOOLEAN
Default value	false
Configuration class	VariantPostBuild:   VariantPostBuild
Origin	AUTOSAR_ECUC

Parameter Name	CanIfPublicSetDynamicTxIdApi
----------------	------------------------------

<b>Description</b>	<p>Enables and disables the API CanIf_SetDynamicTxId() for reconfiguration of the CAN identifier for dynamic Tx L-PDUs.</p> <ul style="list-style-type: none"> <li>▶ True: Enabled</li> <li>▶ False: Disabled</li> </ul> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM increase (code):</b> Enabling this parameter increases the ROM consumption of the module code.</li> <li>▶ <b>Execution time increase (code):</b> Enabling this parameter increases the execution time of the module code.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanIfPublicTxBuffering</b>	
<b>Description</b>	<p>Enables and disables the buffering of Tx L-PDUs within the CAN Interface module.</p> <ul style="list-style-type: none"> <li>▶ True: Enabled</li> <li>▶ False: Disabled</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanIfPublicTxConfirmPollingSupport</b>	
<b>Description</b>	<p>Configuration parameter to enable/disable the API CanIf_GetTxConfirmationState() to poll for the Tx confirmation state.</p>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild

Origin	AUTOSAR_ECUC	
--------	--------------	--

Parameter Name	CanIfPublicVersionInfoApi	
Description	<p>Enables and disables the API CanIf_GetVersionInfo() for reading the version information about the CAN Interface.</p> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM increase (code):</b> Enabling this parameter increases the ROM consumption of the module code.</li> </ul>	
Multiplicity	1..1	
Type	BOOLEAN	
Default value	false	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

Parameter Name	CanIfPublicWakeupCheckValidSupport	
Description	<p>Selects support for wake up validation.</p> <ul style="list-style-type: none"> <li>▶ True: Enabled</li> <li>▶ False: Disabled</li> </ul>	
Multiplicity	1..1	
Type	BOOLEAN	
Default value	false	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

Parameter Name	CanIfDecoupledProcessingSupport	
Description	<p>Enable/disable the assignment of PDUs to selected MainFunctions for processing.</p> <ul style="list-style-type: none"> <li>▶ True: CanIf processes the reception indication and the transmission confirmation events in context of MainFunction.</li> <li>▶ False: CanIf processes the reception indication and the transmission confirmation events in ISR context (as defined by the SWS).</li> </ul>	
Multiplicity	1..1	
Type	BOOLEAN	
Default value	false	
Configuration class	VariantPostBuild:	VariantPostBuild



<b>Origin</b>	Elektrobit Automotive GmbH
---------------	----------------------------

<b>Parameter Name</b>	<b>CanIfRelocatablePbcfgEnable</b>	
<b>Description</b>	<p>Enables/disable support for relocatable postbuild configuration.</p> <ul style="list-style-type: none"> <li>▶ True: Postbuild configuration relocatable in memory.</li> <li>▶ False: Postbuild configuration not relocatable in memory.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	true	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>CanIfEnableCanRel422Compatibility</b>	
<b>Description</b>	<p>Enable/disable support for AUTOSAR 4.2 Rev.2 Can module compatibility.</p> <ul style="list-style-type: none"> <li>▶ True: CanIf behaves as specified in AUTOSAR 4.2 Rev.2 regarding to the Can module.</li> <li>▶ False: CanIf behaves as specified in AUTOSAR 4.0 Rev.3 regarding to the Can module.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>CanIfEnableCanRev2Compatibility</b>	
<b>Description</b>	<p>Enable/disable support for AUTOSAR 4.0 Rev.2 Can module compatibility.</p> <ul style="list-style-type: none"> <li>▶ True: CanIf behaves as specified in AUTOSAR 4.0 Rev.2 regarding to the Can module.</li> <li>▶ False: CanIf behaves as specified in AUTOSAR 4.0 Rev.3 regarding to the Can module.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild

<b>Origin</b>	Elektrobit Automotive GmbH	
<b>Parameter Name</b>	<b>CanIfPublicCanIdTypeEnum</b>	
<b>Label</b>	CanIfPublicCanIdTypeEnum	
<b>Description</b>	<p>CanIfPublicCanIdTypeEnum is used to configure the data type Can_IdType.</p> <p>The type Can_IdType represents the CAN identifiers (IDs) used on the bus. If any extended CAN IDs are used, this parameter must be set to <i>UINT32</i>.</p>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	ENUMERATION	
<b>Default value</b>	UINT32	
<b>Range</b>	UINT16	
	UINT32	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	
<b>Parameter Name</b>	<b>CanIfPublicSingleCtrlOpt</b>	
<b>Description</b>	<p>Optimization for using only a single Can controller.</p> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM reduction (code):</b> Enabling this parameter reduces the ROM consumption of the module code.</li> <li>▶ <b>Execution time reduction (code):</b> Enabling this parameter reduces the execution time of the module code.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	
<b>Parameter Name</b>	<b>CanIfPublicHohTranslationOpt</b>	
<b>Description</b>	<p>Optimization for a certain ordering of HOH CanObjectIds.</p> <p>This optimization can be enabled, if the following criterias for CanObjectIds are met:</p> <ul style="list-style-type: none"> <li>▶ All HRH CanObjectIds must be smaller than any of the HTH CanObjectId.</li> <li>▶ All CanObjectIds must be 0-based and dense.</li> </ul>	

	<b>Optimization Effect:</b> <ul style="list-style-type: none"> <li>▶ <b>ROM reduction (code):</b> Enabling this parameter reduces the ROM consumption of the module code.</li> <li>▶ <b>ROM reduction (config):</b> Enabling this parameter reduces the ROM consumption of the module configuration.</li> <li>▶ <b>Execution time reduction (code):</b> Enabling this parameter reduces the execution time of the module code.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

Parameter Name	CanIfPublicCtrlWakeupSupport	
<b>Description</b>	Enables wakeup detection via Can controllers.  <b>Optimization Effect:</b> <ul style="list-style-type: none"> <li>▶ <b>ROM reduction (code):</b> Disabling this parameter reduces the ROM consumption of the module code.</li> <li>▶ <b>Execution time reduction (code):</b> Disabling this parameter reduces the execution time of the module code.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	true	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

Parameter Name	CanIfPublicTrcvWakeupSupport	
<b>Description</b>	Enables wakeup detection via Can transceivers.  <b>Optimization Effect:</b> <ul style="list-style-type: none"> <li>▶ <b>ROM reduction (code):</b> Disabling this parameter reduces the ROM consumption of the module code.</li> <li>▶ <b>Execution time reduction (code):</b> Disabling this parameter reduces the execution time of the module code.</li> </ul>	

<b>Multiplicity</b>	1..1
<b>Type</b>	BOOLEAN
<b>Default value</b>	true
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>CanIfPublicRangeReceptionSupport</b>
<b>Description</b>	<p>Enables reception of CanId ranges using a single HRH.</p> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM reduction (code):</b> Disabling this parameter reduces the ROM consumption of the module code.</li> <li>▶ <b>ROM reduction (config):</b> Disabling this parameter reduces the ROM consumption of the module configuration.</li> <li>▶ <b>Execution time reduction (code):</b> Disabling this parameter reduces the execution time of the module code.</li> </ul>
<b>Multiplicity</b>	1..1
<b>Type</b>	BOOLEAN
<b>Default value</b>	true
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>CanIfPublicTrcvSupport</b>
<b>Description</b>	<p>Enables support of Can transceivers.</p> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM reduction (code):</b> Disabling this parameter reduces the ROM consumption of the module code.</li> </ul>
<b>Multiplicity</b>	1..1
<b>Type</b>	BOOLEAN
<b>Default value</b>	true
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>CanIfPublicMaxCtrl</b>
<b>Description</b>	Maximum number of Can controller supported.

	This configuration parameter allocates runtime memory per Can controller.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	
<b>Default value</b>	4	
<b>Range</b>	<=255	
	>=1	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

Parameter Name	<b>CanIfPublicMaxTxBuffers</b>	
<b>Description</b>	<p>Maximum number of TxBuffers supported.</p> <p>This configuration parameter allocates runtime memory per Tx Buffer. Please note, that the available buffer size is defined via parameter CanIfPublicMax-TxBufferSize.</p>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	
<b>Default value</b>	64	
<b>Range</b>	<=65535	
	>=1	
<b>Configuration class</b>	<b>PreCompile:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

Parameter Name	<b>CanIfPublicMaxTxBufferSize</b>	
<b>Description</b>	<p>Maximum shared memory in bytes reserved for all TxBuffers.</p> <p>This configuration parameter allocates runtime memory.</p>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	
<b>Default value</b>	512	
<b>Range</b>	<=65535	
	>=1	
<b>Configuration class</b>	<b>PreCompile:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

Parameter Name	CanIfPublicMaxHths	
Description	Maximum number of Hths supported.  This configuration parameter allocates runtime memory per Hth.	
Multiplicity	1..1	
Type	INTEGER	
Default value	16	
Range	<div>&lt;=65535</div> <div>&gt;=1</div>	
Configuration class	PreCompile:	VariantPostBuild
Origin	Elektrobit Automotive GmbH	

Parameter Name	CanIfPublicMaxRxNotifyPdus	
Description	Maximum number of Rx-Pdus which support notification functions.  This configuration parameter allocates runtime memory per notified Rx-Pdu.	
Multiplicity	1..1	
Type	INTEGER	
Default value	64	
Range	<div>&lt;=65535</div> <div>&gt;=1</div>	
Configuration class	PreCompile:	VariantPostBuild
Origin	Elektrobit Automotive GmbH	

Parameter Name	CanIfPublicMaxTxNotifyPdus	
Description	Maximum number of Tx-Pdus which support notification functions.  This configuration parameter allocates runtime memory per notified Tx-Pdu.	
Multiplicity	1..1	
Type	INTEGER	
Default value	64	
Range	<div>&lt;=65535</div> <div>&gt;=1</div>	
Configuration class	PreCompile:	VariantPostBuild

<b>Origin</b>	Elektrobit Automotive GmbH
---------------	----------------------------

<b>Parameter Name</b>	<b>CanIfPublicMaxRxBuffer</b>	
<b>Description</b>	Maximum size of Rx-Buffer allocated in bytes. The Rx-Buffer is required only, if the CanIf_ReadRxPduData() Api function is used.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	
<b>Default value</b>	72	
<b>Range</b>	<=65535	
	>=1	
<b>Configuration class</b>	<b>PreCompile:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>CanIfPublicMaxDynTxPduS</b>	
<b>Description</b>	Maximum number of dynamic Tx PduS supported.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	
<b>Default value</b>	8	
<b>Range</b>	<=65535	
	>=1	
<b>Configuration class</b>	<b>PreCompile:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>CanIfSingleCanTrcvAPIInfixEnable</b>	
<b>Description</b>	<p>This parameter defines if CanIf shall use the Vendor Id and the API Infix for accessing the CanTrcv module in case a single CanTrcv driver is configured.</p> <p>true: CanIf uses the Vendor Id and the API Infix of the CanTrcv for accessing the CanTrcv API (e.g. CanTrcv_1_T01_SetOpMode) in case only a single CanTrcv driver is used. In addition this name mangling is also used for including the CanTrcv header file (e.g. CanTrcv_1_T01.h)</p> <p>false: CanIf does not use the Vendor Id and the API Infix of the CanTrcv in case only a single CanTrcv driver is used.</p> <p>Note: If more than one CanTrcv driver is configured, name mangling must be used.</p>	

<b>Multiplicity</b>	1..1
<b>Type</b>	BOOLEAN
<b>Default value</b>	true
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>CanIfTxOfflineActiveSupport</b>
<b>Description</b>	Determines whether TxOfflineActive feature is supported by CanIf.  True: Enabled  False: Disabled
<b>Multiplicity</b>	1..1
<b>Type</b>	BOOLEAN
<b>Default value</b>	false
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanIfPublicWakeupCheckValidByNM</b>
<b>Description</b>	If enabled, only NM messages shall validate a detected wake-up event (see CANIF722) at the corresponding wake-up source in the CanIf.  If disabled, all messages shall validate such a wake-up event.  ▶ True: Enabled ▶ False: Disabled
<b>Multiplicity</b>	1..1
<b>Type</b>	BOOLEAN
<b>Default value</b>	false
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

### 5.2.1.18. CanIfRxProcessing

<b>Parameters included</b>	
<b>Parameter name</b>	<b>Multiplicity</b>



Parameters included	
<a href="#">CanIfRxPduProcessingRef</a>	1..n
<a href="#">CanIfRxPduQueueSize</a>	1..1
<a href="#">CanIfPublicMaxPayloadQueueSize</a>	1..1

Parameter Name	CanIfRxPduProcessingRef	
Description	Reference to CanIfRxPduCfg which is assigned to this MainFunction.	
Multiplicity	1..n	
Type	REFERENCE	
Configuration class	PostBuild:	VariantPostBuild
Origin	Elektrobit Automotive GmbH	

Parameter Name	CanIfRxPduQueueSize	
Description	CanIfRxPduQueueSize defines the local queue for handling of RxPdus.	
Multiplicity	1..1	
Type	INTEGER	
Default value	1	
Range	<=65535	
	>=1	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	Elektrobit Automotive GmbH	

Parameter Name	CanIfPublicMaxPayloadQueueSize	
Description	Maximum shared memory in bytes reserved for all RxQueues.  This configuration parameter allocates runtime memory.	
Multiplicity	1..1	
Type	INTEGER	
Default value	512	
Range	<=65535	
	>=1	
Configuration class	VariantPostBuild:	VariantPostBuild

<b>Origin</b>	Elektrobit Automotive GmbH
---------------	----------------------------

### 5.2.1.19. CanIfTxProcessing

Parameters included	
Parameter name	Multiplicity
<a href="#">CanIfTxPduProcessingRef</a>	1..n
<a href="#">CanIfTxPduQueueSize</a>	1..1

<b>Parameter Name</b>	<b>CanIfTxPduProcessingRef</b>	
<b>Description</b>	Reference to CanIfTxPduCfg which is assigned to this MainFunction.	
<b>Multiplicity</b>	1..n	
<b>Type</b>	CHOICE-REFERENCE	
<b>Configuration class</b>	<b>PostBuild:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>CanIfTxPduQueueSize</b>	
<b>Description</b>	CanIfTxPduQueueSize defines the local queue size for handling of TxPdus.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	
<b>Default value</b>	1	
<b>Range</b>	<=65535	
	>=1	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

### 5.2.1.20. CanIfTrcvDrvCfg

Containers included		
Container name	Multiplicity	Description
<a href="#">CanIfTrcvCfg</a>	1..255	CanIfTrcvCfg contains the configuration parameters of one addressed CAN transceiver by the underlying CAN Transceiver Driver module.

Containers included		
		For each CAN transceiver a seperate instance of this container has to be provided.

### 5.2.1.21. CanIfTrcvCfg

Parameters included	
Parameter name	Multiplicity
<a href="#">CanIfTrcvId</a>	1..1
<a href="#">CanIfTrcvWakeupSupport</a>	1..1
<a href="#">CanIfTrcvCanTrcvRef</a>	1..1
<a href="#">CanIfTrcvWakeupSourceInRef</a>	0..1
<a href="#">CanIfTrcvWakeupSourceOutRef</a>	0..1

Parameter Name	CanIfTrcvId
<b>Description</b>	<p>CanIfTrcvId abstracts from the CAN Transceiver Driver specific parameter transceiver.</p> <p>Each transceiver of all connected CAN Transceiver Driver modules shall be assigned to one specific TransceiverId of the CanIf.</p> <p>Range: 0..number of configured transceivers of all CAN Transceiver Driver modules.</p>
<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER
<b>Range</b>	<div>&lt;=254</div> <div>&gt;=0</div>
<b>Configuration class</b>	<div>VariantPostBuild:</div> <div>VariantPostBuild</div>
<b>Origin</b>	AUTOSAR_ECUC

Parameter Name	CanIfTrcvWakeupSupport
<b>Description</b>	CanIfTrcvWakeupSupport defines if a respective transceiver of the referenced CAN Transceiver Driver modules is queriable for wake up events.

	CanIfTrcvWakeupSupport can only be set to true, if the CAN transceiver, which is referenced by parameter CanIfTrcvCanTrcvRef, also supports wakeup, i.e. parameter CanTrcvWakeupByBusUsed is set to true.	
	<ul style="list-style-type: none"> <li>▶ True: Wakeup Support Enabled</li> <li>▶ False: Wakeup Support Disabled</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

Parameter Name	CanIfTrcvCanTrcvRef	
<b>Description</b>	<p>CanIfTrcvCanTrcvRef references exactly one CAN Transceiver (transceiver channel) of an underlying CAN Transceiver Driver module.</p> <p>If using multiple CAN Transceivers of the same CAN Transceiver Driver module, each reference located in the same CanIfTrcvDrvCfg container must point to the same underlying CAN Transceiver Driver module (but to different CAN Transceivers).</p>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	SYMBOLIC-NAME-REFERENCE	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

Parameter Name	CanIfTrcvWakeupSourceInRef	
<b>Description</b>	<p>CanIfTrcvWakeupSourceInRef contains a reference to the wake up source for the transceiver as defined in the ECU State Manager.</p> <p>CanIfTrcvWakeupSourceInRef allows mapping of incoming wake up source (i.e. a wake up event is detected by the CanTrcv Driver) to a specific transceiver. Therefore the parameter is used as input to API CanIf_CheckWakeup().</p> <p>The parameter is optional since providing the API CanIf_CheckWakeup() is also optional. If the parameter is used, CanIfTrcvWakeupSourceOutRef must be set as well.</p> <p>Implementation Type: reference to EcuM_WakeupSourceType.</p>	
<b>Multiplicity</b>	0..1	

<b>Type</b>	SYMBOLIC-NAME-REFERENCE	
<b>Configuration class</b>	<b>PostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanIfTrcvWakeupSourceOutRef</b>	
<b>Description</b>	<p>CanIfTrcvWakeupSourceOutRef contains a reference to the wake up source for the transceiver as defined in the ECU State Manager.</p> <p>CanIfTrcvWakeupSourceOutRef allows mapping of outgoing wake up source (i.e. wake up is signalled to the user notification API) to a specific transceiver. Therefore the parameter is used as output from CanIf_CheckWakeup() to &lt;User_SetWakeupEvent&gt;. The parameter is also used for wake up validation, i.e. as input and output for API CanIf_CheckValidation().</p> <p>The parameter is optional since providing the API CanIf_CheckWakeup() is also optional.</p> <p>Implementation Type: reference to EcuM_WakeupSourceType.</p>	
<b>Multiplicity</b>	0..1	
<b>Type</b>	SYMBOLIC-NAME-REFERENCE	
<b>Configuration class</b>	<b>PostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

#### 5.2.1.22. CanIfUpperLayerConfig

Parameters included	
Parameter name	Multiplicity
<a href="#">CanIfUpperLayerUse-CanId</a>	1..1
<a href="#">CanIfTxPduUserTxConfirmationName</a>	0..1
<a href="#">CanIfRxPduUserRxIndicationName</a>	0..1
<a href="#">CanIfUserDlcErrorNotification</a>	0..1
<a href="#">CanIfUserDlcPassedNotification</a>	0..1

Parameter Name	CanIfUpperLayerUseCanId
Label	CanIfUpperLayerUseCanId
Description	<p>CanIfUpperLayerUseCanId defines if the signature of the API function &lt;code&gt;&lt;UL&gt;_RxIndication&lt;/UL&gt;&lt;/code&gt; contains the CAN ID as additional argument.</p> <ul style="list-style-type: none"> <li>▶ True: Signature of &lt;code&gt;&lt;UL&gt;_RxIndication&lt;/UL&gt;&lt;/code&gt; changes to &lt;code&gt;&lt;UL&gt;_RxIndication(PduIdType, PduInfoType*, Can_IdType)&lt;/UL&gt;&lt;/code&gt;.</li> <li>▶ False: Signature of &lt;code&gt;&lt;UL&gt;_RxIndication&lt;/UL&gt;&lt;/code&gt; is conform to AUTOSAR.</li> </ul> <p>For the well-known upper layers of CanIf (PduR, CanTp, CanTSyn and CanNm) this parameter must be set to False.</p>
Multiplicity	1..1
Type	BOOLEAN
Default value	false
Configuration class	VariantPostBuild: VariantPostBuild
Origin	Elektrobit Automotive GmbH

Parameter Name	CanIfTxPduUserTxConfirmationName
Description	<p>CanIfTxPduUserTxConfirmationName defines the name of the &lt;code&gt;&lt;User_ - TxConfirmation&gt;&lt;/code&gt;.</p> <p>CanIfTxPduUserTxConfirmationName depends on the parameter CanIfTxPduUserTxConfirmationUL. If CanIfTxPduUserTxConfirmationUL is configured to a standard AUTOSAR upper layer (CanTp, CanTSyn, CanNm and PduR only), the name of the Tx confirmation function &lt;code&gt;&lt;User_ TxConfirmation&gt;&lt;/code&gt; is fixed:</p> <ul style="list-style-type: none"> <li>▶ CAN_TP: CanTp_TxConfirmation</li> <li>▶ CAN_TSYN: CanTSyn_TxConfirmation</li> <li>▶ CAN_NM: CanNm_TxConfirmation</li> <li>▶ PDUR: PduR_CanIfTxConfirmation</li> </ul> <p>If CanIfTxPduUserTxConfirmationUL equals CDD, the name of the &lt;code&gt;&lt;User_ - TxConfirmation&gt;&lt;/code&gt; is selectable.</p> <p>If CanIfTxPduUserTxConfirmationName is disabled there are no Tx-Confirmations for this upper layer.</p>
Multiplicity	0..1
Type	FUNCTION-NAME
Default value	

<b>Configuration class</b>	<b>PreCompile:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

Parameter Name	CanIfRxPduUserRxIndicationName	
<b>Description</b>	<p>CanIfRxPduUserRxIndicationName defines the name of the &lt;User_ - RxIndication&gt;.</p> <p>CanIfRxPduUserRxIndicationName depends on the parameter CanIfRxPduUserRxIndicationUL. If CanIfRxPduUserRxIndicationUL is configured to a standard AUTOSAR upper layer, the name of the &lt;User_ RxIndication&gt; is fixed:</p> <ul style="list-style-type: none"> <li>▶ CAN_TP: CanTp_RxIndication</li> <li>▶ CAN_TSYN: CanTSyn_RxIndication</li> <li>▶ CAN_NM: CanNm_RxIndication</li> <li>▶ PDUR: PduR_CanIfRxIndication</li> </ul> <p>If CanIfRxPduUserRxIndicationUL equals CDD, the name of the &lt;User_ - RxIndication&gt; is selectable.</p> <p>If CanIfRxPduUserRxIndicationName is disabled there are no Rx-Indications for this upper layer.</p>	
<b>Multiplicity</b>	0..1	
<b>Type</b>	FUNCTION-NAME	
<b>Default value</b>		
<b>Configuration class</b>	<b>PreCompile:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

Parameter Name	CanIfUserDlcErrorNotification	
<b>Label</b>	CanIfUserDlcErrorNotification	
<b>Description</b>	<p>Name of target user specific DLC check failed notification service.</p> <p>If CanIfUserDlcErrorNotification is disabled no call-out function will be called for this upper layer.</p> <p>To use the CanIfUserDlcErrorNotification a function prototype must exist in one of the header files pointed by CanIfPublicCddHeaderFile.</p> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM increase (code):</b> Using this parameter increases the ROM consumption of the module code.</li> </ul>	

	► <b>Execution time increase (code):</b> Using this parameter increases the execution time of the module code.	
<b>Multiplicity</b>	0..1	
<b>Type</b>	FUNCTION-NAME	
<b>Default value</b>		
<b>Configuration class</b>	<b>PreCompile:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

Parameter Name	CanIfUserDlcPassedNotification	
<b>Label</b>	CanIfUserDlcPassedNotification	
<b>Description</b>	<p>Name of target user specific DLC check passed notification service.</p> <p>If CanIfUserDlcPassedNotification is disabled no call-out function will be called for this upper layer.</p> <p>To use the CanIfUserDlcErrorNotification a function prototype must exists in one of the header files pointed by CanIfPublicCddHeaderFile.</p> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>► <b>ROM increase (code):</b> Using this parameter increases the ROM consumption of the module code.</li> <li>► <b>Execution time increase (code):</b> Using this parameter increases the execution time of the module code.</li> </ul>	
<b>Multiplicity</b>	0..1	
<b>Type</b>	FUNCTION-NAME	
<b>Default value</b>		
<b>Configuration class</b>	<b>PreCompile:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

### 5.2.1.23. CommonPublishedInformation

Parameters included	
Parameter name	Multiplicity
<a href="#">ArMajorVersion</a>	1..1
<a href="#">ArMinorVersion</a>	1..1
<a href="#">ArPatchVersion</a>	1..1



Parameters included	
<a href="#">SwMajorVersion</a>	1..1
<a href="#">SwMinorVersion</a>	1..1
<a href="#">SwPatchVersion</a>	1..1
<a href="#">ModuleId</a>	1..1
<a href="#">VendorId</a>	1..1
<a href="#">Release</a>	1..1

Parameter Name	ArMajorVersion
Label	AUTOSAR Major Version
Description	Major version number of AUTOSAR specification on which the appropriate implementation is based on.
Multiplicity	1..1
Type	INTEGER_LABEL
Default value	5
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name	ArMinorVersion
Label	AUTOSAR Minor Version
Description	Minor version number of AUTOSAR specification on which the appropriate implementation is based on.
Multiplicity	1..1
Type	INTEGER_LABEL
Default value	0
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name	ArPatchVersion
Label	AUTOSAR Patch Version
Description	Patch level version number of AUTOSAR specification on which the appropriate implementation is based on.
Multiplicity	1..1
Type	INTEGER_LABEL

<b>Default value</b>	0
<b>Configuration class</b>	<b>PublishedInformation:</b>
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>SwMajorVersion</b>
<b>Label</b>	Software Major Version
<b>Description</b>	Major version number of the vendor specific implementation of the module.
<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER_LABEL
<b>Default value</b>	6
<b>Configuration class</b>	<b>PublishedInformation:</b>
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>SwMinorVersion</b>
<b>Label</b>	Software Minor Version
<b>Description</b>	Minor version number of the vendor specific implementation of the module. The numbering is vendor specific.
<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER_LABEL
<b>Default value</b>	9
<b>Configuration class</b>	<b>PublishedInformation:</b>
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>SwPatchVersion</b>
<b>Label</b>	Software Patch Version
<b>Description</b>	Patch level version number of the vendor specific implementation of the module. The numbering is vendor specific.
<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER_LABEL
<b>Default value</b>	10
<b>Configuration class</b>	<b>PublishedInformation:</b>
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>ModuleId</b>
-----------------------	-----------------

<b>Label</b>	Numeric Module ID
<b>Description</b>	Module ID of this module from Module List
<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER_LABEL
<b>Default value</b>	60
<b>Configuration class</b>	<b>PublishedInformation:</b>
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>VendorId</b>
<b>Label</b>	Vendor ID
<b>Description</b>	Vendor ID of the dedicated implementation of this module according to the AUTOSAR vendor list
<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER_LABEL
<b>Default value</b>	1
<b>Configuration class</b>	<b>PublishedInformation:</b>
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>Release</b>
<b>Label</b>	Release Information
<b>Multiplicity</b>	1..1
<b>Type</b>	STRING_LABEL
<b>Default value</b>	
<b>Configuration class</b>	<b>PublishedInformation:</b>
<b>Origin</b>	Elektrobit Automotive GmbH

#### 5.2.1.24. PublishedInformation

<b>Parameters included</b>	
<b>Parameter name</b>	<b>Multiplicity</b>
<a href="#">PbcfgMSupport</a>	1..1

<b>Parameter Name</b>	<b>PbcfgMSupport</b>
-----------------------	----------------------

<b>Label</b>	PbcfgM support	
<b>Description</b>	Specifies whether or not the CanIf can use the PbcfgM module for post-build support.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	true	
<b>Configuration class</b>	<b>PublishedInformation:</b>	
<b>Origin</b>	Elektrobit Automotive GmbH	

## 5.2.2. Recommended configurations

### 5.2.2.1. CanIfRecConfigurationDflt

Containers included	
Container name	Container definition
<a href="#">CAN_NM</a>	<a href="#">CanIfUpperLayerConfig</a>
<a href="#">CAN_TP</a>	<a href="#">CanIfUpperLayerConfig</a>
<a href="#">CAN_TSYN</a>	<a href="#">CanIfUpperLayerConfig</a>
<a href="#">PDUR</a>	<a href="#">CanIfUpperLayerConfig</a>

Parameters included	
Parameter name	Value

#### 5.2.2.1.1. CAN\_NM

Parameters included	
Parameter name	Value
<a href="#">CanIfUpperLayerUseCanId</a>	false
<a href="#">CanIfTxPduUserTxConfirmationName</a>	CanNm_TxConfirmation
<a href="#">CanIfRxPduUserRxIndicationName</a>	CanNm_RxIndication
<a href="#">CanIfUserDlcErrorNotification</a>	(DISABLED)

Parameters included	
<a href="#">CanIfUserDlcPassedNotification</a>	(DISABLED)

#### 5.2.2.1.2. CAN\_TP

Parameters included	
Parameter name	Value
<a href="#">CanIfUpperLayerUseCanId</a>	false
<a href="#">CanIfTxPduUserTxConfirmationName</a>	CanTp_TxConfirmation
<a href="#">CanIfRxPduUserRxIndicationName</a>	CanTp_RxIndication
<a href="#">CanIfUserDlcErrorNotification</a>	(DISABLED)
<a href="#">CanIfUserDlcPassedNotification</a>	(DISABLED)

#### 5.2.2.1.3. CAN\_TSYN

Parameters included	
Parameter name	Value
<a href="#">CanIfUpperLayerUseCanId</a>	false
<a href="#">CanIfTxPduUserTxConfirmationName</a>	CanTSyn_TxConfirmation
<a href="#">CanIfRxPduUserRxIndicationName</a>	CanTSyn_RxIndication
<a href="#">CanIfUserDlcErrorNotification</a>	(DISABLED)
<a href="#">CanIfUserDlcPassedNotification</a>	(DISABLED)

#### 5.2.2.1.4. PDUR

Parameters included	
Parameter name	Value
<a href="#">CanIfUpperLayerUseCanId</a>	false
<a href="#">CanIfTxPduUserTxConfirmationName</a>	PduR_CanIfTxConfirmation
<a href="#">CanIfRxPduUserRxIndicationName</a>	PduR_CanIfRxIndication
<a href="#">CanIfUserDlcErrorNotification</a>	(DISABLED)
<a href="#">CanIfUserDlcPassedNotification</a>	(DISABLED)

## 5.2.3. Application programming interface (API)

### 5.2.3.1. Type definitions

#### 5.2.3.1.1. CanIf\_ConfigType

<b>Purpose</b>	Type for the CAN interface configuration.
<b>Type</b>	struct
<b>Description</b>	<p>This type defines the global configuration of the CAN interface.</p> <p>Please note that internal types are necessary as elements which are also published by the header files.</p>

#### 5.2.3.1.2. CanIf\_ControllerModeType

<b>Purpose</b>	States for a controller in the CAN interface.	
<b>Type</b>	enum	
<b>Constants</b>	CANIF_CS_UNINIT	Controller is not initialized
	CANIF_CS_SLEEP	Controller is in sleep mode
	CANIF_CS_STARTED	Controller is active/running
	CANIF_CS_STOPPED	Controller is stopped
<b>Description</b>	CAN controller states: Initially CANIF_CS_UNINIT, then switch between CANIF_CS_STOPPED, CANIF_CS_STARTED and CANIF_CS_SLEEP.	

#### 5.2.3.1.3. CanIf\_NotifStatusType

<b>Purpose</b>	Notification status type.	
<b>Type</b>	enum	
<b>Constants</b>	CANIF_NO_NOTIFICATION	No new event since the last read attempt
	CANIF_TX_RX_NOTIFICATION	New Rx/Tx event since the last read
<b>Description</b>	This type defines the values that the "read Rx/Tx notification status" API functions return if they are activated via configuration.	

#### 5.2.3.1.4. CanIf\_PduModeType

<b>Purpose</b>	Type for PDU channel mode requests.	
<b>Type</b>	enum	
<b>Constants</b>	CANIF_OFFLINE	Transmit and receive path of the corresponding channel are disabled => no communication mode
	CANIF_TX_OFFLINE	Transmit path of the corresponding channel is disabled. The receive path is enabled.
	CANIF_TX_OFFLINE_ACTIVE	Transmit path of the corresponding channel is in offline active mode. The receive path is disabled.
	CANIF_ONLINE	Transmit and receive path of the corresponding channel are enabled => full operation mode
<b>Description</b>	This type defines the possible mode requests that can be stated for a PDU channel.	

#### 5.2.3.2. Macro constants

##### 5.2.3.2.1. CANIF\_AR\_RELEASE\_MAJOR\_VERSION

<b>Purpose</b>	AUTOSAR release major version.
<b>Value</b>	4U

##### 5.2.3.2.2. CANIF\_AR\_RELEASE\_MINOR\_VERSION

<b>Purpose</b>	AUTOSAR release minor version.
<b>Value</b>	0U

##### 5.2.3.2.3. CANIF\_AR\_RELEASE\_REVISION\_VERSION

<b>Purpose</b>	AUTOSAR release revision version.
<b>Value</b>	3U

#### 5.2.3.2.4. CANIF\_E\_INVALID\_RXPDUID

<b>Purpose</b>	CANIF_E_INVALID_RXPDUID.
<b>Value</b>	60U

#### 5.2.3.2.5. CANIF\_E\_INVALID\_TXPDUID

<b>Purpose</b>	CANIF_E_INVALID_TXPDUID.
<b>Value</b>	50U

#### 5.2.3.2.6. CANIF\_E\_NOK\_NOSUPPORT

<b>Purpose</b>	CANIF_E_NOK_NOSUPPORT.
<b>Value</b>	40U

#### 5.2.3.2.7. CANIF\_E\_PARAM\_CANID

<b>Purpose</b>	CANIF_E_PARAM_CANID.
<b>Value</b>	10U

#### 5.2.3.2.8. CANIF\_E\_PARAM\_CONTROLLER

<b>Purpose</b>	CANIF_E_PARAM_CONTROLLER.
<b>Value</b>	14U

#### 5.2.3.2.9. CANIF\_E\_PARAM\_CONTROLLERID

<b>Purpose</b>	CANIF_E_PARAM_CONTROLLERID.
<b>Value</b>	15U

#### 5.2.3.2.10. CANIF\_E\_PARAM\_CTRLMODE

<b>Purpose</b>	CANIF_E_PARAM_CTRLMODE.
----------------	-------------------------



<b>Value</b>	21U
--------------	-----

#### 5.2.3.2.11. CANIF\_E\_PARAM\_DLC

<b>Purpose</b>	CANIF_E_PARAM_DLC.
<b>Value</b>	11U

#### 5.2.3.2.12. CANIF\_E\_PARAM\_HRH

<b>Purpose</b>	CANIF_E_PARAM_HRH.
<b>Value</b>	12U

#### 5.2.3.2.13. CANIF\_E\_PARAM\_LPDU

<b>Purpose</b>	CANIF_E_PARAM_LPDU.
<b>Value</b>	13U

#### 5.2.3.2.14. CANIF\_E\_PARAM\_PDU\_MODE

<b>Purpose</b>	CANIF_E_PARAM_PDU_MODE.
<b>Value</b>	22U

#### 5.2.3.2.15. CANIF\_E\_PARAM\_POINTER

<b>Purpose</b>	CANIF_E_PARAM_POINTER.
<b>Value</b>	20U

#### 5.2.3.2.16. CANIF\_E\_PARAM\_TRCV

<b>Purpose</b>	CANIF_E_PARAM_TRCV.
<b>Value</b>	17U

#### 5.2.3.2.17. CANIF\_E\_PARAM\_TRCVMODE

<b>Purpose</b>	CANIF_E_PARAM_TRCVMODE.
<b>Value</b>	18U

#### 5.2.3.2.18. CANIF\_E\_PARAM\_TRCVWAKEUPMODE

<b>Purpose</b>	CANIF_E_PARAM_TRCVWAKEUPMODE.
<b>Value</b>	19U

#### 5.2.3.2.19. CANIF\_E\_PARAM\_WAKEUPSOURCE

<b>Purpose</b>	CANIF_E_PARAM_WAKEUPSOURCE.
<b>Value</b>	16U

#### 5.2.3.2.20. CANIF\_E\_UNINIT

<b>Purpose</b>	CANIF_E_UNINIT.
<b>Value</b>	30U

#### 5.2.3.2.21. CANIF\_MODULE\_ID

<b>Purpose</b>	AUTOSAR module identification.
<b>Value</b>	60U

#### 5.2.3.2.22. CANIF\_SID\_CANCELTRANSMIT

<b>Purpose</b>	<a href="#">CanIf_CancelTransmit()</a> service ID.
<b>Value</b>	0x18U

#### 5.2.3.2.23. CANIF\_SID\_CANCELTXCONFIRMATION

<b>Purpose</b>	<a href="#">CanIf_CancelTxConfirmation()</a> service ID.
<b>Value</b>	0x15U

#### 5.2.3.2.24. CANIF\_SID\_CHECKTRCVWAKEFLAG

<b>Purpose</b>	<a href="#">CanIf_CheckTrcvWakeFlag()</a> service ID.
<b>Value</b>	0x1fU

#### 5.2.3.2.25. CANIF\_SID\_CHECKTRCVWAKEFLAGIND

<b>Purpose</b>	<a href="#">CanIf_CheckTrcvWakeFlagIndication()</a> service ID.
<b>Value</b>	0x21U

#### 5.2.3.2.26. CANIF\_SID\_CHECKVALIDATION

<b>Purpose</b>	<a href="#">CanIf_CheckValidation()</a> service ID.
<b>Value</b>	0x12U

#### 5.2.3.2.27. CANIF\_SID\_CHECKWAKEUP

<b>Purpose</b>	<a href="#">CanIf_CheckWakeup()</a> service ID.
<b>Value</b>	0x11U

#### 5.2.3.2.28. CANIF\_SID\_CLEARTRCVWUFFLAG

<b>Purpose</b>	<a href="#">CanIf_ClearTrcvWufFlag()</a> service ID.
<b>Value</b>	0x1eU

#### 5.2.3.2.29. CANIF\_SID\_CLEARTRCVWUFFLAGIND

<b>Purpose</b>	<a href="#">CanIf_ClearTrcvWufFlagIndication()</a> service ID.
<b>Value</b>	0x20U

#### 5.2.3.2.30. CANIF\_SID\_CONFIRM\_PN\_AVAILABILITY

<b>Purpose</b>	<a href="#">CanIf_ConfirmPnAvailability()</a> service ID.
<b>Value</b>	0x1aU

#### 5.2.3.2.31. CANIF\_SID\_CONTROLLERBUSOFF

<b>Purpose</b>	<a href="#">CanIf_ControllerBusOff()</a> service ID.
<b>Value</b>	0x16U

#### 5.2.3.2.32. CANIF\_SID\_CONTROLLERMODEIND

<b>Purpose</b>	<a href="#">CanIf_ControllerModeIndication()</a> service ID.
<b>Value</b>	0x17U

#### 5.2.3.2.33. CANIF\_SID\_GETCONTROLLERMODE

<b>Purpose</b>	<a href="#">CanIf_GetControllerMode()</a> service ID.
<b>Value</b>	0x04U

#### 5.2.3.2.34. CANIF\_SID\_GETPDUMODE

<b>Purpose</b>	<a href="#">CanIf_GetPduMode()</a> service ID.
<b>Value</b>	0x0aU

#### 5.2.3.2.35. CANIF\_SID\_GETTRANSCEIVERMODE

<b>Purpose</b>	<a href="#">CanIf_GetTrcvMode()</a> service ID.
<b>Value</b>	0x0eU

#### 5.2.3.2.36. CANIF\_SID\_GETTRCVWAKEUPREASON

<b>Purpose</b>	<a href="#">CanIf_GetTrcvWakeupReason()</a> service ID.
<b>Value</b>	0x0fU

#### 5.2.3.2.37. CANIF\_SID\_GETTXCONFIRMSTATE

<b>Purpose</b>	<a href="#">CanIf_GetTxConfirmationState()</a> service ID.
<b>Value</b>	0x19U

#### 5.2.3.2.38. CANIF\_SID\_GETVERSIONINFO

<b>Purpose</b>	<a href="#">CanIf_GetVersionInfo()</a> service ID.
<b>Value</b>	0x0bU

#### 5.2.3.2.39. CANIF\_SID\_INIT

<b>Purpose</b>	<a href="#">CanIf_Init()</a> service ID.
<b>Value</b>	0x01U

#### 5.2.3.2.40. CANIF\_SID\_READRXNOTIFSTATUS

<b>Purpose</b>	<a href="#">CanIf_ReadRxNotifStatus()</a> service ID.
<b>Value</b>	0x08U

#### 5.2.3.2.41. CANIF\_SID\_READRXPDUData

<b>Purpose</b>	<a href="#">CanIf_ReadRxPduData()</a> service ID.
<b>Value</b>	0x06U

#### 5.2.3.2.42. CANIF\_SID\_READTXNOTIFSTATUS

<b>Purpose</b>	<a href="#">CanIf_ReadTxNotifStatus()</a> service ID.
<b>Value</b>	0x07U

#### 5.2.3.2.43. CANIF\_SID\_RXINDICATION

<b>Purpose</b>	<a href="#">CanIf_RxIndication()</a> service ID.
<b>Value</b>	0x14U

#### 5.2.3.2.44. CANIF\_SID\_SETBAUDRATE

<b>Purpose</b>	<a href="#">CanIf_SetBaudrate()</a> service ID.
<b>Value</b>	0x27U

#### 5.2.3.2.45. CANIF\_SID\_SETCONTROLLERMODE

<b>Purpose</b>	<a href="#">CanIf_SetControllerMode()</a> service ID.
<b>Value</b>	0x03U

#### 5.2.3.2.46. CANIF\_SID\_SETDYNAMICTXID

<b>Purpose</b>	<a href="#">CanIf_SetDynamicTxId()</a> service ID.
<b>Value</b>	0x0cU

#### 5.2.3.2.47. CANIF\_SID\_SETPDUMODE

<b>Purpose</b>	<a href="#">CanIf_SetPduMode()</a> service ID.
<b>Value</b>	0x09U

#### 5.2.3.2.48. CANIF\_SID\_SETTRANSCEIVERMODE

<b>Purpose</b>	<a href="#">CanIf_SetTrcvMode()</a> service ID.
<b>Value</b>	0x0dU

#### 5.2.3.2.49. CANIF\_SID\_SETTRCVWAKEUPMODE

<b>Purpose</b>	<a href="#">CanIf_SetTrcvWakeupMode()</a> service ID.
<b>Value</b>	0x10U

#### 5.2.3.2.50. CANIF\_SID\_TRANSCEIVERMODEIND

<b>Purpose</b>	<a href="#">CanIf_TrcvModeIndication()</a> service ID.
<b>Value</b>	0x18U

#### 5.2.3.2.51. CANIF\_SID\_TRANSMIT

<b>Purpose</b>	<a href="#">CanIf_Transmit()</a> service ID.
<b>Value</b>	0x05U

#### 5.2.3.2.52. CANIF\_SID\_TXCONFIRMATION

<b>Purpose</b>	<a href="#">CanIf_TxConfirmation()</a> service ID.
<b>Value</b>	0x13U

#### 5.2.3.2.53. CANIF\_SW\_MAJOR\_VERSION

<b>Purpose</b>	AUTOSAR module major version.
<b>Value</b>	6U

#### 5.2.3.2.54. CANIF\_SW\_MINOR\_VERSION

<b>Purpose</b>	AUTOSAR module minor version.
<b>Value</b>	9U

#### 5.2.3.2.55. CANIF\_SW\_PATCH\_VERSION

<b>Purpose</b>	AUTOSAR module patch version.
<b>Value</b>	10U

#### 5.2.3.2.56. CANIF\_VENDOR\_ID

<b>Purpose</b>	AUTOSAR vendor identification: Elektrobit Automotive GmbH.
<b>Value</b>	1U

### 5.2.3.3. Objects

#### 5.2.3.3.1. CanIf\_InitCfg\_Xxx

<b>Purpose</b>	CanIf configuration.
<b>Type</b>	const <a href="#">CanIf_ConfigType</a>
<b>Description</b>	This is the CanIf configuration that can be given to CanIf_Init as configuration parameter.

Please note that the name of this element is configuration dependent and defined by the name of the CanIfInitCfg container.

## 5.2.3.4. Functions

### 5.2.3.4.1. CanIf\_CancelTransmit

<b>Purpose</b>	Cancel transmit dummy function.	
<b>Synopsis</b>	<code>Std_ReturnType CanIf_CancelTransmit ( PduIdType CanTxPduId );</code>	
<b>Service ID</b>	0x18	
<b>Sync/Async</b>	Asynchronous	
<b>Reentrancy</b>	Non-Reentrant	
<b>Parameters (in)</b>	CanTxPduId	Tx L-PDU handle
<b>Return Value</b>	Always return E_OK	
<b>Description</b>	<p>This function has no functionality and is called by the AUTOSAR PduR to achieve bus agnostic behavior.</p> <p>Preconditions:</p> <ul style="list-style-type: none"> <li>► The parameter CanTxPduId must be a valid Tx L-PDU</li> </ul>	

### 5.2.3.4.2. CanIf\_CancelTxConfirmation

<b>Purpose</b>	Transmit cancellation confirmation callback function.	
<b>Synopsis</b>	<code>void CanIf_CancelTxConfirmation ( PduIdType CanTxPduId , const PduInfoType * PduInfoPtr );</code>	
<b>Service ID</b>	0x15	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	PduInfoPtr	Pointer to the cancelled Tx L-PDU
<b>Description</b>	<p>This is the transmit cancellation confirmation callback function. It tries to store the PDU received in PduInfoPtr and send the Tx L-PDU with the highest priority.</p> <p>Preconditions:</p> <ul style="list-style-type: none"> <li>► The CAN interface must already be initialized by <a href="#">CanIf_Init()</a></li> </ul>	



► The parameter PduInfoPtr must be a valid PDU pointer

#### 5.2.3.4.3. CanIf\_CheckTrcvWakeFlag

<b>Purpose</b>	Check the wake flag of the designated CAN transceiver.	
<b>Synopsis</b>	<code>Std_ReturnType CanIf_CheckTrcvWakeFlag ( uint8 TransceiverId );</code>	
<b>Sync/Async</b>	Asynchronous	
<b>Reentrancy</b>	Reentrant for different CAN transceiver	
<b>Parameters (in)</b>	TransceiverId	designated CAN transceiver
<b>Return Value</b>	Result of operation	
	E_OK	Request has been accepted
	E_NOT_OK	Request has not been accepted
<b>Description</b>	{0x1f}	

#### 5.2.3.4.4. CanIf\_CheckTrcvWakeFlagIndication

<b>Purpose</b>	Indicate the reason for the wake up that the CAN transceiver has detected.	
<b>Synopsis</b>	<code>void CanIf_CheckTrcvWakeFlagIndication ( uint8 Transceiver );</code>	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	Transceiver	Transceiver for which the mode is indicated
<b>Description</b>	{0x21}	

#### 5.2.3.4.5. CanIf\_CheckValidation

<b>Purpose</b>	Check for validated wakeup events.	
<b>Synopsis</b>	<code>Std_ReturnType CanIf_CheckValidation ( Ecum_WakeupSourceType WakeupSource );</code>	
<b>Service ID</b>	0x12	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	WakeupSource	Bitfield of wakeup sources to be validated

<b>Return Value</b>	Result of operation	
	E_OK	The validation request was accepted and executed
	E_NOT_OK	The validation request was not accepted
<b>Description</b>	This function is used to validate previous wakeup events.	

#### 5.2.3.4.6. CanIf\_CheckWakeup

<b>Purpose</b>	Check for Can and CanTrcv wakeups.	
<b>Synopsis</b>	<pre>Std_ReturnType CanIf_CheckWakeup ( EcuM_WakeupSourceType WakeupSource );</pre>	
<b>Service ID</b>	0x11	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	WakeupSource	Bitfield of wakeup sources to be checked
<b>Return Value</b>	Result of operation	
	E_OK	The validation request was accepted and executed
	E_NOT_OK	The validation request was not accepted
<b>Description</b>	This function is used to check whether an underlying CAN driver or CAN transceiver driver signals a wakeup event.	

#### 5.2.3.4.7. CanIf\_ClearTrcvWufFlag

<b>Purpose</b>	Clear WUF flag of the designated CAN transceiver.	
<b>Synopsis</b>	<pre>Std_ReturnType CanIf_ClearTrcvWufFlag ( uint8 TransceiverId );</pre>	
<b>Sync/Async</b>	Asynchronous	
<b>Reentrancy</b>	Reentrant for different CAN transceiver	
<b>Parameters (in)</b>	TransceiverId	designated CAN transceiver
<b>Return Value</b>	Result of operation	
	E_OK	Request has been accepted
	E_NOT_OK	Request has not been accepted
<b>Description</b>	{0x1e}	

#### 5.2.3.4.8. CanIf\_ClearTrcvWufFlagIndication

<b>Purpose</b>	Indicate that the transceiver has cleared the WufFlag.	
<b>Synopsis</b>	<code>void CanIf_ClearTrcvWufFlagIndication ( uint8 Transceiver );</code>	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	Transceiver	Transceiver for which the mode is indicated
<b>Description</b>	{0x20}	

#### 5.2.3.4.9. CanIf\_ConfirmPnAvailability

<b>Purpose</b>	Indicate that the transceiver is running in PN communication mode.	
<b>Synopsis</b>	<code>void CanIf_ConfirmPnAvailability ( uint8 Transceiver );</code>	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	Transceiver	Transceiver for which the mode is indicated
<b>Description</b>	{0x1a}	

#### 5.2.3.4.10. CanIf\_ControllerBusOff

<b>Purpose</b>	Bus-off callback function.	
<b>Synopsis</b>	<code>void CanIf_ControllerBusOff ( uint8 Controller );</code>	
<b>Service ID</b>	0x16	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	Controller	Controller which went bus-off
<b>Description</b>	<p>This is the bus-off callback function. It changes the mode of the given controller Controller to STOPPED and clears the Tx buffers if necessary.</p> <p>Preconditions:</p> <ul style="list-style-type: none"> <li>▶ The CAN interface must already be initialized by <a href="#">CanIf_Init()</a></li> <li>▶ The parameter Controller must be a valid pointer</li> </ul>	

#### 5.2.3.4.11. CanIf\_ControllerModeIndication

<b>Purpose</b>	Controller mode indication callback function.	
<b>Synopsis</b>	<pre>void CanIf_ControllerModeIndication ( uint8 Controller , CanIf_ControllerModeType ControllerMode );</pre>	
<b>Service ID</b>	0x17	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	Controller	Controller for which the mode is indicated
	ControllerMode	Mode to which the controller switched
<b>Description</b>	<p>This is the controller mode indication callback function.</p> <p>Preconditions:</p> <ul style="list-style-type: none"> <li>► The parameter controller must be a valid CanIf controller ID</li> </ul>	

#### 5.2.3.4.12. CanIf\_GetControllerMode

<b>Purpose</b>	Get controller mode.	
<b>Synopsis</b>	<pre>Std_ReturnType CanIf_GetControllerMode ( uint8 ControllerId , CanIf_ControllerModeType * ControllerModePtr );</pre>	
<b>Service ID</b>	0x04	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Non-Reentrant	
<b>Parameters (in)</b>	ControllerId	CAN controller
<b>Parameters (out)</b>	ControllerModePtr	Pointer for returning the current mode
<b>Return Value</b>	Result of operation	
	E_OK	The returned mode is valid
	E_NOT_OK	An error occurred during function execution
<b>Description</b>	<p>This function queries the mode of the controller given in ControllerId.</p> <p>Preconditions:</p> <ul style="list-style-type: none"> <li>► The CAN interface must already be initialized by <a href="#">CanIf_Init()</a></li> </ul>	

	<ul style="list-style-type: none"> <li>▶ The parameter ControllerId must address a valid controller</li> <li>▶ The parameter ControllerModePtr must be a valid pointer</li> </ul>
--	---

#### 5.2.3.4.13. CanIf\_GetPduMode

<b>Purpose</b>	Read a L-PDU channel mode.	
<b>Synopsis</b>	<pre>Std_ReturnType CanIf_GetPduMode ( uint8 ControllerId , CanIf_PduModeType * PduModePtr );</pre>	
<b>Service ID</b>	0x0a	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Non-Reentrant	
<b>Parameters (in)</b>	ControllerId	CAN controller
<b>Parameters (out)</b>	PduModePtr	Pointer to return the current mode
<b>Return Value</b>	Result of operation	
	E_OK	Channel mode request has been accepted
	E_NOT_OK	Channel mode request has not been accepted
<b>Description</b>	<p>This function returns the current PDU mode of the requested controller (ControllerId) at the memory location referenced by PduModePtr.</p> <p>Preconditions:</p> <ul style="list-style-type: none"> <li>▶ The CAN interface must already be initialized by <a href="#">CanIf_Init()</a></li> <li>▶ The parameter ControllerId must be a valid CAN controller</li> <li>▶ The parameter PduModePtr must be a valid pointer</li> </ul>	

#### 5.2.3.4.14. CanIf\_GetTrcvMode

<b>Purpose</b>	Get transceiver mode.	
<b>Synopsis</b>	<pre>Std_ReturnType CanIf_GetTrcvMode ( CanTrcv_TrcevModeType * TransceiverModePtr , uint8 TransceiverId );</pre>	
<b>Service ID</b>	0x0e	
<b>Sync/Async</b>	Synchronous	

<b>Reentrancy</b>	Non-Reentrant	
<b>Parameters (in)</b>	TransceiverModePtr	Pointer to mode variable
	TransceiverId	CAN transceiver ID
<b>Return Value</b>	Result of operation	
	E_OK	Transceiver mode was changed as requested
	E_NOT_OK	Transceiver mode change failed; previous mode is still valid
<b>Description</b>	This function is used to read the mode of the transceiver assigned to transceiver channel TransceiverId to the memory location TransceiverModePtr.	

#### 5.2.3.4.15. CanIf\_GetTrcvWakeupReason

<b>Purpose</b>	Get transceiver wakeup reason.	
<b>Synopsis</b>	<pre>Std_ReturnType CanIf_GetTrcvWakeupReason ( uint8 TransceiverId , CanTrcv_TrvcWakeupReasonType * TrcvWuReasonPtr );</pre>	
<b>Service ID</b>	0x0f	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Non-Reentrant	
<b>Parameters (in)</b>	TransceiverId	CAN transceiver channel ID
	TrcvWuReasonPtr	Address to write wakeup reason to
<b>Return Value</b>	Result of operation	
	E_OK	Wakeup reason was correctly read
	E_NOT_OK	Wakeup reason could not be read
<b>Description</b>	This function is used to read the last wakeup reason of the transceiver assigned to transceiver channel TransceiverId into TrcvWuReasonPtr.	

#### 5.2.3.4.16. CanIf\_GetTxConfirmationState

<b>Purpose</b>	Report controller Tx confirmation state.	
<b>Synopsis</b>	<pre>CanIf_NotifStatusType CanIf_GetTxConfirmationState ( uint8 ControllerId );</pre>	
<b>Service ID</b>	0x19	

<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	ControllerId	Abstracted CanIf controller ID which is assigned to the CAN controller
<b>Return Value</b>	Notification status of the controller	
	CANIF_NO_NOTIFICATION	No notification was received
	CANIF_TX_RX_NOTIFICATION	A Tx confirmation was received
<b>Description</b>	<p>This function reports, if any Tx confirmation has been received for the whole CAN controller since the last controller start.</p> <p>Preconditions:</p> <ul style="list-style-type: none"> <li>► The parameter ControllerId must be a valid CanIf controller ID</li> </ul>	

#### 5.2.3.4.17. CanIf\_GetVersionInfo

<b>Purpose</b>	Return module version information.	
<b>Synopsis</b>	<pre>void CanIf_GetVersionInfo ( Std_                           VersionInfoType * Versioninfo );</pre>	
<b>Service ID</b>	0x0b	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Non-Reentrant	
<b>Parameters (out)</b>	Versioninfo	Version information
<b>Description</b>	<p>This function returns the CAN interface version information in the memory area Versioninfo references.</p> <p>Preconditions:</p> <ul style="list-style-type: none"> <li>► The parameter Versioninfo may not be a NULL pointer</li> </ul>	

#### 5.2.3.4.18. CanIf\_Init

<b>Purpose</b>	CAN interface initialization function.	
<b>Synopsis</b>	<pre>void CanIf_Init ( const CanIf_ConfigType * ConfigPtr );</pre>	
<b>Service ID</b>	0x01	

<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Non-Reentrant	
<b>Parameters (in)</b>	ConfigPtr	Pointer to the interface configuration
<b>Description</b>	<p>This function initializes the CAN interface.</p> <p>Caution:</p> <ul style="list-style-type: none"> <li>▶ <a href="#">CanIf_Init()</a> shall not preempt any other CanIf function.</li> <li>▶ No other CanIf function shall interrupt <a href="#">CanIf_Init()</a>.</li> </ul>	

#### 5.2.3.4.19. CanIf\_IsValidConfig

<b>Purpose</b>	Validate configuration.
<b>Synopsis</b>	<pre>Std_ReturnType CanIf_IsValidCon- fig ( const void * voidConfigPtr );</pre>
<b>Service ID</b>	0x60
<b>Sync/Async</b>	Synchronous
<b>Reentrancy</b>	Reentrant
<b>Return Value</b>	E_OK if the given module configurations is valid otherwise E_NOT_OK.
<b>Description</b>	Checks if the post build configuration fits to the link time configuration part.

#### 5.2.3.4.20. CanIf\_ReadRxNotifStatus

<b>Purpose</b>	Read Rx notification status.	
<b>Synopsis</b>	<pre>CanIf_NotifStatusType CanIf_ReadRxNo- tifStatus ( PduIdType CanRxPduId );</pre>	
<b>Service ID</b>	0x08	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Non-Reentrant	
<b>Parameters (in)</b>	CanRxPduId	Rx L-PDU handle
<b>Return Value</b>	Current notification status of the corresponding Rx L-PDU	
<b>Description</b>	This function provides the Rx L-PDU receive notification status of L-PDU CanRxPduId.	



	<p>Preconditions:</p> <ul style="list-style-type: none"> <li>▶ The CAN interface must already be initialized by <a href="#">CanIf_Init()</a></li> <li>▶ Transmit notification API must be enabled</li> <li>▶ The parameter CanRxPduId must be a valid Rx L-PDU.</li> </ul>
--	--

#### 5.2.3.4.21. CanIf\_ReadRxPduData

<b>Purpose</b>	Read received data.	
<b>Synopsis</b>	<pre>Std_ReturnType CanIf_ReadRxPduData ( PduId-                                      Type CanRxPduId , PduInfoType * PduInfoPtr );</pre>	
<b>Service ID</b>	0x06	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Non-Reentrant	
<b>Parameters (in)</b>	CanRxPduId	Rx L-PDU handle
<b>Parameters (out)</b>	PduInfoPtr	Memory pointer to store received data
<b>Return Value</b>	Result of operation	
	E_OK	Request has been accepted
	E_NOT_OK	Request has not been accepted
<b>Description</b>	<p>This function reads data previously received and stored in an internal buffer.</p> <p>Preconditions:</p> <ul style="list-style-type: none"> <li>▶ The CAN interface must already be initialized by <a href="#">CanIf_Init()</a></li> <li>▶ This API must be enabled by configuration</li> <li>▶ The parameter CanRxPduId must be a valid Rx L-PDU</li> <li>▶ The parameter PduInfoPtr must be a valid pointer</li> </ul>	

#### 5.2.3.4.22. CanIf\_ReadTxNotifStatus

<b>Purpose</b>	Read Tx notification status.	
<b>Synopsis</b>	<pre>CanIf_NotifStatusType CanIf_ReadTxNo-                        tifStatus ( PduIdType CanTxPduId );</pre>	
<b>Service ID</b>	0x07	

<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Non-Reentrant	
<b>Parameters (in)</b>	CanTxPduId	Tx L-PDU handle
<b>Return Value</b>	Current notification status of the corresponding Tx L-PDU	
<b>Description</b>	<p>This function provides the Tx L-PDU transmit notification status of L-PDU CanTxPduId.</p> <p>Preconditions:</p> <ul style="list-style-type: none"> <li>▶ The CAN interface must already be initialized by <a href="#">CanIf_Init()</a></li> <li>▶ Transmit notification API must be enabled</li> <li>▶ The parameter CanTxPduId must be a valid Tx L-PDU.</li> </ul>	

#### 5.2.3.4.23. CanIf\_RxIndication

<b>Purpose</b>	Receive indication callback function.	
<b>Synopsis</b>	<pre>void <b>CanIf_RxIndication</b> ( Can_HwHandleType Hrh , Can_IdType CanId , uint8 CanDlc , const uint8 * CanSduPtr );</pre>	
<b>Service ID</b>	0x14	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	Hrh	Index of the corresponding HRH
	CanId	CAN identifier
	CanDlc	Data length code
	CanSduPtr	Pointer to the received data
<b>Description</b>	<p>This is the receive indication callback function. It calls the corresponding upper layer receive indication callback function and stores the received message if the read PDU data API is enabled.</p> <p>Preconditions:</p> <ul style="list-style-type: none"> <li>▶ The CAN interface must already be initialized by <a href="#">CanIf_Init()</a></li> <li>▶ The parameter Hrh must be a valid HRH</li> <li>▶ The parameter CanId must be a valid CAN ID</li> <li>▶ The parameter CanDlc must be valid</li> <li>▶ The parameter CanSduPtr must be a valid pointer</li> </ul>	

#### 5.2.3.4.24. CanIf\_SetBaudrate

<b>Purpose</b>	Set Baudrate API function.	
<b>Synopsis</b>	<pre>Std_ReturnType CanIf_SetBaudrate ( uint8                                    ControllerId , uint16 BaudRateConfigID );</pre>	
<b>Service ID</b>	0x27	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant for different Controllers	
<b>Parameters (in)</b>	ControllerId	CAN controller, whose baud rate shall be set
	BaudRateConfigID	references a baud rate configuration by ID
<b>Return Value</b>	Result of operation	
	E_OK	Service request accepted, setting of (new) baud rate started
	E_NOT_OK	Service request not accepted
<b>Description</b>	This service shall set the baud rate configuration of the CAN controller. Depending on necessary baud rate modifications the controller might have to reset.	

#### 5.2.3.4.25. CanIf\_SetControllerMode

<b>Purpose</b>	Controller mode setting function.	
<b>Synopsis</b>	<pre>Std_ReturnType CanIf_SetControllerMode ( uint8 ControllerId , CanIf_ControllerModeType ControllerMode );</pre>	
<b>Service ID</b>	0x03	
<b>Sync/Async</b>	Asynchronous	
<b>Reentrancy</b>	Non-Reentrant	
<b>Parameters (in)</b>	ControllerId	Target controller
	ControllerMode	Requested mode transition
<b>Return Value</b>	Result of operation	
	E_OK	Controller mode request has been accepted
	E_NOT_OK	Controller mode request has not been accepted

<b>Description</b>	<p>This function performs a mode transition of the controller given in ControllerId to the mode ControllerMode</p> <p>Preconditions:</p> <ul style="list-style-type: none"> <li>▶ The CAN interface must already be initialized by <a href="#">CanIf_Init()</a></li> <li>▶ The parameter ControllerId must address a valid controller</li> <li>▶ The parameter ControllerMode must be a valid mode</li> </ul>
--------------------	---

#### 5.2.3.4.26. CanIf\_SetDynamicTxId

<b>Purpose</b>	Set CAN ID of dynamic Tx L-PDU.	
<b>Synopsis</b>	<pre>void <b>CanIf_SetDynamicTxId</b> ( PduId-                              Type CanTxPduId , Can_IdType CanId );</pre>	
<b>Service ID</b>	0x0c	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Non-Reentrant	
<b>Parameters (in)</b>	CanTxPduId	Tx L-PDU handle
	CanId	New CAN ID
<b>Description</b>	<p>This function sets the CAN ID of Tx L-PDU CanTxPduId to the new value CanId.</p> <p>Preconditions:</p> <ul style="list-style-type: none"> <li>▶ The CAN interface must already be initialized by <a href="#">CanIf_Init()</a></li> <li>▶ Dynamic Tx L-PDUs are used in the current configuration</li> <li>▶ The parameter CanTxPduId is a valid dynamic Tx L-PDU</li> <li>▶ The parameter CanId is a valid CAN ID</li> </ul>	

#### 5.2.3.4.27. CanIf\_SetPduMode

<b>Purpose</b>	Set requested L-PDU channel mode.	
<b>Synopsis</b>	<pre>Std_ReturnType <b>CanIf_SetPduMode</b> ( uint8 Con-                                      trollerId , CanIf_PduModeType PduModeRequest );</pre>	
<b>Service ID</b>	0x09	

<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Non-Reentrant	
<b>Parameters (in)</b>	ControllerId	CAN controller
	PduModeRequest	Requested PDU mode
<b>Return Value</b>	Result of operation	
	E_OK	Request for mode transition has been accepted
	E_NOT_OK	Request for mode transition has not been accepted
<b>Description</b>	<p>This function sets the L-PDU channel mode for the requested controller (ControllerId) to the requested mode (PduModeRequest).</p> <p>Preconditions:</p> <ul style="list-style-type: none"> <li>▶ The CAN interface must already be initialized by <a href="#">CanIf_Init()</a></li> <li>▶ The parameter ControllerId must be a valid CAN controller.</li> <li>▶ The parameter PduModeRequest must be a valid PDU mode.</li> </ul>	

#### 5.2.3.4.28. CanIf\_SetTrcvMode

<b>Purpose</b>	Set transceiver mode.	
<b>Synopsis</b>	<pre>Std_ReturnType CanIf_SetTrcvMode ( uint8 TransceiverId , CanTrcv_TrsvModeType TransceiverMode );</pre>	
<b>Service ID</b>	0x0d	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Non-Reentrant	
<b>Parameters (in)</b>	TransceiverId	CAN transceiver ID
	TransceiverMode	Requested transceiver mode
<b>Return Value</b>	Result of operation	
	E_OK	Transceiver mode was changed as requested
	E_NOT_OK	Transceiver mode change failed; previous mode is still valid
<b>Description</b>	<p>This function is used to set the mode of the transceiver assigned to transceiver channel TransceiverId to the mode given in TransceiverMode.</p>	

#### 5.2.3.4.29. CanIf\_SetTrcvWakeupMode

<b>Purpose</b>	Set transceiver wakeup mode.	
<b>Synopsis</b>	<pre>Std_ReturnType CanIf_SetTrcvWakeupMode ( uint8 TransceiverId , CanTrcv_TrvcWakeupModeType TrcvWakeupMode );</pre>	
<b>Service ID</b>	0x10	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Non-Reentrant	
<b>Parameters (in)</b>	TransceiverId	CAN transceiver channel ID
	TrcvWakeupMode	Wakeup mode/event to set
<b>Return Value</b>	Result of operation	
	E_OK	Wakeup state has been changed
	E_NOT_OK	Wakeup state change has failed
<b>Description</b>	This function is used to set the wakeup mode/event TrcvWakeupMode of the transceiver assigned to transceiver channel TransceiverId.	

#### 5.2.3.4.30. CanIf\_Transmit

<b>Purpose</b>	Transmit an L-PDU.	
<b>Synopsis</b>	<pre>Std_ReturnType CanIf_Transmit ( PduIdType CanTxPduId , const PduInfoType * PduInfoPtr );</pre>	
<b>Service ID</b>	0x05	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	CanTxPduId	Tx L-PDU handle
	PduInfoPtr	Message content to be transmitted
<b>Return Value</b>	Result of operation	
	E_OK	Transmit request has been accepted
	E_NOT_OK	Transmit request has not been accepted
<b>Description</b>	This function transmits the data given through PduInfoPtr through the L-PDU given by CanTxPduId.	

	<p>Preconditions:</p> <ul style="list-style-type: none"> <li>▶ The CAN interface must already be initialized by <a href="#">CanIf_Init()</a></li> <li>▶ The parameter CanTxPduId must be a valid Tx L-PDU</li> <li>▶ The parameter PduInfoPtr must be a valid pointer</li> </ul>
--	--

#### 5.2.3.4.31. CanIf\_TrcvModeIndication

<b>Purpose</b>	Transceiver mode indication callback function.	
<b>Synopsis</b>	<pre>void CanIf_TrcvModeIndication ( uint8 Transceiver                                , CanTrcv_TrcvModeType TransceiverMode );</pre>	
<b>Service ID</b>	0x18	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	Transceiver	Transceiver for which the mode is indicated
	TransceiverMode	Mode to which the transceiver switched
<b>Description</b>	<p>This is the transceiver mode indication callback function.</p> <p>Preconditions:</p> <ul style="list-style-type: none"> <li>▶ The parameter Transceiver must be a valid CanIf transceiver ID</li> </ul>	

#### 5.2.3.4.32. CanIf\_TxConfirmation

<b>Purpose</b>	Transmit confirmation callback function.	
<b>Synopsis</b>	<pre>void CanIf_TxConfirmation ( PduIdType CanTxPduId );</pre>	
<b>Service ID</b>	0x13	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	CanTxPduId	Tx L-PDU handle
<b>Description</b>	<p>This is the transmit confirmation callback function. It gets the PDU handle for the transmitted L-PDU, translates it for the upper layer and then calls the upper layer callback function configured for this handle. It furthermore starts the next transmission for the used HTH if there are other messages pending for transmission.</p>	



Preconditions:

- ▶ The CAN interface must already be initialized by [CanIf\\_Init\(\)](#)
- ▶ The parameter CanTxPduId must be a valid Tx L-PDU

## 5.2.4. Integration notes

### 5.2.4.1. Exclusive areas

This section describes the exclusive areas used by the `CanIf` module.

#### 5.2.4.1.1. SCHM\_CANIF\_EXCLUSIVE\_AREA\_0

<b>Protected data structures</b>	All shared data that shall be protected from mutual access.
<b>Recommended locking mechanism</b>	This exclusive area must always be protected by a locking mechanism. The options for locking are described in the <code>EB tresos AutoCore Generic</code> documentation. Refer to the section <code>Mapping exclusive areas in the basic software modules</code> in the <code>Integration notes</code> section for details.

### 5.2.4.2. Production errors

Production errors are not reported by the `CanIf` module.

### 5.2.4.3. Memory mapping

General information about memory mapping is provided in the `EB tresos AutoCore Generic` documentation. Refer to the section `Memory mapping and compiler abstraction` in the `Integration notes` section for details.

The following table provides the list of sections that may be mapped for this module:



Memory section
CONST_32
VAR_INIT_8
CONST_8
VAR_INIT_UNSPECIFIED
VAR_NO_INIT_8
VAR_NO_INIT_16
VAR_NO_INIT_32
VAR_NO_INIT_UNSPECIFIED
CONST_UNSPECIFIED
CODE
CONFIG_DATA_UNSPECIFIED
CODE_CC_BLOCK

#### 5.2.4.4. Integration requirements

##### WARNING



##### Integration requirements list is not exhaustive

The following list of integration requirements helps you to integrate your product. However, this list is not exhaustive. You also require information from the user's guide, release notes, and EB tresos AutoCore known issues to successfully integrate your product.

##### 5.2.4.4.1. lim.CanIf.EB\_INTREQ\_CanIf\_0001

<b>Description</b>	<p>Data copying mechanism in Rx indication code CanIf_RxIndication() does not copy the data provided by the CAN driver. Instead the data pointer is directly propagated to the upper layer.</p> <p>NOTE: For dynamic length PDU reception, upper layers might expect that always a buffer with the maximum possible PDU size is provided. Since CanIf does not perform buffering it is the Can drivers responsibility to fulfil this requirement.</p>
<b>Rationale</b>	<p>The data is copied in the different upper layers. The CanIf does not copy it as well to reduce runtime overhead.</p>

#### 5.2.4.4.2. lim.CanIf.EB\_INTREQ\_CanIf\_0002

<b>Description</b>	CanIf_CheckWakeup() must not preempt or be preempted by CanIf_SetControllerMode() The integrator must assure that CanIf_SetControllerMode() cannot preempt CanIf_CheckWakeup(). The integrator also must assure that CanIf_CheckWakeup() does not preempt CanIf_SetControllerMode().
<b>Rationale</b>	This limitation reduces code size and execution time by eliminating the need for extensive use of exclusive areas.

#### 5.2.4.4.3. lim.CanIf.EB\_INTREQ\_CanIf\_0003

<b>Description</b>	<p>CanIf controller mode might differ from Can controller hardware mode The CanIf software controller mode is always changed if an according event on the hardware is detected. These events are the following:</p> <ul style="list-style-type: none"><li>- Call of CanIf_ControllerModeIndication() (CANIF_CS_STOPPED, CANIF_CS_STARTED, CANIF_CS_SLEEP)</li><li>- Call of CanIf_ControllerBusOff() (CANIF_CS_STOPPED)</li><li>- Wakeup detection by calling Can_CheckWakeup() (CANIF_CS_STOPPED)</li></ul> <p>The state is always set to the latest detected/reported event. The result therefore is strongly dependent from the actual Can driver module behavior. Possible inconsistencies:</p> <ul style="list-style-type: none"><li>- Can_SetControllerMode(CAN_T_START) (current state is CANIF_CS_STARTED)</li><li>- CanIf_ControllerBusOff() -&gt; controller mode is changed to CANIF_CS_STOPPED both in CanIf SW and HW.</li><li>- CanIf_ControllerModeIndication(CANIF_CS_STARTED) -&gt; controller mode is changed to CANIF_CS_STARTED in CanIf SW although hardware stays stopped.</li><li>- Can_SetControllerMode(CAN_T_SLEEP) (current state is CANIF_CS_STOPPED)</li><li>- CanIf_CheckWakeup() reports wakeup event -&gt; controller mode is changed to CANIF_CS_STOPPED both in CanIf SW and HW.</li><li>- CanIf_ControllerModeIndication(CAN_T_SLEEP) -&gt; controller mode is changed to CAN_T_SLEEP in CanIf SW although hardware stays stopped.</li></ul>
<b>Rationale</b>	

## 5.3. CanNm

### 5.3.1. Configuration parameters

Containers included		
Container name	Multiplicity	Description
<a href="#">CanNmGeneral</a>	1..1	
<a href="#">CanNmGlobalConfig</a>	1..1	<p>This container contains the global configuration parameter of the CanNm. The parameters and the parameters of the sub containers shall be mapped to the C data type CanNm_ConfigType (for parameters where it is possible) which is passed to the CanNm_Init function.</p> <p>The CanNm only supports compile time configuration. Only the parameters from the first module configuration container from this list are used for module configuration.</p> <p>.</p>
<a href="#">CanNmDefensiveProgramming</a>	1..1	<p><b>Label:</b> Defensive Programming Options</p> <p>Parameters for defensive programming</p>
<a href="#">CommonPublishedInformation</a>	1..1	<p><b>Label:</b> Common Published Information</p> <p>Common container, aggregated by all modules. It contains published information about vendor and versions.</p>
<a href="#">PublishedInformation</a>	1..1	<p><b>Label:</b> EB Published Information</p> <p>Additional published parameters not covered by CommonPublishedInformation container.</p>

Parameters included	
Parameter name	Multiplicity
<a href="#">IMPLEMENTATION_CONFIG_VARIANT</a>	1..1

Parameter Name	IMPLEMENTATION_CONFIG_VARIANT	
Label	Config Variant	
Multiplicity	1..1	
Type	ENUMERATION	
Default value	VariantPostBuild	
Range	VariantPostBuild	
Configuration class	<b>VariantPostBuild:</b>	VariantPostBuild

### 5.3.1.1. CanNmGeneral

Parameters included	
Parameter name	Multiplicity
<a href="#">CanNmPnSupported</a>	1..1
<a href="#">CanNmRelocatablePbcfgEnable</a>	1..1
<a href="#">CanNmMaxPn</a>	0..1

Parameter Name	CanNmPnSupported
Label	Support for Partial Network Cluster (PNC)
Description	Enables or disables support of partial networking. <ul style="list-style-type: none"> <li>▶ False: Partial Networking is disabled</li> <li>▶ True: Partial Networking is enabled</li> </ul>
Multiplicity	1..1
Type	BOOLEAN
Default value	false
Configuration class	VariantPostBuild: VariantPostBuild
Origin	Elektrobit Automotive GmbH

Parameter Name	CanNmRelocatablePbcfgEnable
Label	CanNmRelocatablePbcfgEnable
Description	Enables/disables support for relocatable postbuild configuration. <ul style="list-style-type: none"> <li>▶ True: Postbuild configuration relocatable in memory.</li> <li>▶ False: Postbuild configuration not relocatable in memory.</li> </ul>
Multiplicity	1..1
Type	BOOLEAN
Default value	true
Configuration class	VariantPostBuild: VariantPostBuild
Origin	Elektrobit Automotive GmbH

Parameter Name	CanNmMaxPn
Label	CanNmMaxPn
Description	The maximum number of Partial Networking Clusters that can be configured.

<b>Multiplicity</b>	0..1
<b>Type</b>	INTEGER
<b>Default value</b>	0
<b>Configuration class</b>	<b>PreCompile:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

### 5.3.1.2. CanNmGlobalConfig

Containers included		
Container name	Multiplicity	Description
<a href="#">CanNmChannelConfig</a>	1..n	<b>Label:</b> Channel Configuration This container holds the channel specific configuration parameter of the CanNm.
<a href="#">CanNmPnInfo</a>	0..1	PN information configuration.

Parameters included	
Parameter name	Multiplicity
<a href="#">CanNmActiveWakeupBitEnabled</a>	1..1
<a href="#">CanNmBusLoadReductionEnabled</a>	1..1
<a href="#">CanNmBusSynchronizationEnabled</a>	1..1
<a href="#">CanNmComControlEnabled</a>	1..1
<a href="#">CanNmNodeIdCallback</a>	0..1
<a href="#">CanNmNodeIdCallbackHeader</a>	1..1
<a href="#">CanNmComUserDataSupport</a>	1..1
<a href="#">CanNmCoordinatorSyncSupport</a>	1..1
<a href="#">CanNmDevErrorDetect</a>	1..1
<a href="#">CanNmImmediateRestartEnabled</a>	1..1

Parameters included	
<a href="#">CanNmImmediateTx-confEnabled</a>	1..1
<a href="#">CanNmMainFunction-Period</a>	1..1
<a href="#">CanNmNumberOfChannels</a>	1..1
<a href="#">CanNmPostBuildRamSize</a>	1..1
<a href="#">CanNmPassiveModeEnabled</a>	1..1
<a href="#">CanNmPduRxIndicationEnabled</a>	1..1
<a href="#">CanNmPnEiraCalcEnabled</a>	0..1
<a href="#">CanNmPnResetTime</a>	0..1
<a href="#">CanNmRemoteSleepIndEnabled</a>	1..1
<a href="#">CanNmStateChangeIndEnabled</a>	1..1
<a href="#">CanNmUserDataEnabled</a>	1..1
<a href="#">CanNmVersionInfoApi</a>	1..1
<a href="#">CanNmPnEiraRxNSduRef</a>	0..1

Parameter Name	CanNmActiveWakeupBitEnabled	
Label	Active Wakeup Bit Enable	
Description	Enables/Disables the handling of the Active Wakeup Bit in the CanNm module.	
Multiplicity	1..1	
Type	BOOLEAN	
Default value	false	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	Elektrobit Automotive GmbH	

Parameter Name	CanNmBusLoadReductionEnabled
----------------	------------------------------

<b>Label</b>	Bus Load Reduction	
<b>Description</b>	<p>Pre-processor switch for enabling busload reduction support.</p> <p>The bus load reduction mechanisms ensures that the bus load is limited to maximum two NM messages within a Message Cycle Time (<code>CanNmMsgCycleTime</code>).</p> <p>Dependencies:</p> <ul style="list-style-type: none"> <li>▶ Passive Mode must be disabled.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmBusSynchronizationEnabled</b>	
<b>Label</b>	Bus Synchronization	
<b>Description</b>	<p>Pre-processor switch for enabling bus synchronization support. This feature is required for gateway nodes only.</p> <p>.</p> <p>The bus synchronization functionality triggers the transmission of a single NM message independently of the normal periodic transmission.</p> <p>Therefore, the following API function is provided:</p> <ul style="list-style-type: none"> <li>▶ <code>CanNm_RequestBusSynchronization()</code></li> </ul> <p>Dependencies:</p> <ul style="list-style-type: none"> <li>▶ The value of this parameter has to be synchronized with the value of respective parameter in the Nm module.</li> <li>▶ Passive Mode must be disabled.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmComControlEnabled</b>	
-----------------------	-------------------------------	--

<b>Label</b>	Communication Control	
<b>Description</b>	<p>Enable the Communication Control support.</p> <p>Dependencies:</p> <ul style="list-style-type: none"> <li>▶ The value of this parameter has to be synchronized with the value of respective parameter in the Nm module.</li> <li>▶ Passive Mode must be disabled.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmNodeIdCallback</b>	
<b>Label</b>	CanNm Node Id callback	
<b>Description</b>	Name of the callback function to be called if CanNmNodeIdCallback is enabled.	
<b>Multiplicity</b>	0..1	
<b>Type</b>	FUNCTION-NAME	
<b>Configuration class</b>	<b>PreCompile:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>CanNmNodeIdCallbackHeader</b>	
<b>Label</b>	Node Id callback header	
<b>Description</b>	<p>The name of a header file that will be included to obtain the external declaration of the callback function.</p> <p>Dependencies:</p> <ul style="list-style-type: none"> <li>▶ This parameter is only available if CanNmNodeIdCallback is enabled.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	STRING	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>CanNmComUserDataSupport</b>	
<b>Description</b>	Enable/disable the user data support.	



<b>Multiplicity</b>	1..1
<b>Type</b>	BOOLEAN
<b>Default value</b>	false
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanNmCoordinatorSyncSupport</b>
<b>Description</b>	<i>The functionality related to this parameter is not supported by the current implementation.</i>  Enables/disables the coordinator synchronisation support.
<b>Multiplicity</b>	1..1
<b>Type</b>	BOOLEAN
<b>Default value</b>	false
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanNmDevErrorDetect</b>
<b>Label</b>	Enable Development Error Detection
<b>Description</b>	Enable development error detection.
<b>Multiplicity</b>	1..1
<b>Type</b>	BOOLEAN
<b>Default value</b>	true
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanNmImmediateRestartEnabled</b>
<b>Label</b>	Immediate Restart
<b>Description</b>	Enabling the asynchronous transmission of a NM PDU upon bus communication request in Prepare-Bus-Sleep mode.  Dependencies:  ▶ Passive Mode must be disabled.
<b>Multiplicity</b>	1..1
<b>Type</b>	BOOLEAN

<b>Default value</b>	false
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanNmImmediateTxconfEnabled</b>
<b>Label</b>	Immediate Transmission Confirmation
<b>Description</b>	<p>Enable the immediate transmission(Tx) confirmation functionality.</p> <p>If this parameter is enabled it is assumed that each Network Management PDU transmission request results in a successful Network Management PDU transmission.</p> <p>Dependencies:</p> <ul style="list-style-type: none"> <li>► Passive Mode must be disabled</li> </ul>
<b>Multiplicity</b>	1..1
<b>Type</b>	BOOLEAN
<b>Default value</b>	false
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanNmMainFunctionPeriod</b>
<b>Label</b>	Main Function Period [s]
<b>Description</b>	Call cycle in seconds of CanNm_MainFunction CanNm_MainFunction_x
<b>Multiplicity</b>	1..1
<b>Type</b>	FLOAT
<b>Default value</b>	0.02
<b>Range</b>	<div>&lt;=0.255</div> <div>&gt;=0.001</div>
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanNmNumberOfChannels</b>
<b>Label</b>	Number Of Channels
<b>Description</b>	Maximum number of Can NM channels allowed within one ECU.
<b>Multiplicity</b>	1..1

Type	INTEGER
Default value	1
Configuration class	<b>VariantPostBuild:</b> VariantPostBuild
Origin	AUTOSAR_ECUC

Parameter Name	<b>CanNmPostBuildRamSize</b>
Label	CanNmPostBuildRamSize
Description	<p>Number of bytes for TX and RX buffers</p> <p>Value should be set as: the sum of the first RxPdu lengths on each channel multiplied with 2 (in case passive mode is disabled). Size should be big enough to hold eventual changes of PDU lengths at postbuild time</p>
Multiplicity	1..1
Type	INTEGER
Default value	96
Configuration class	<b>VariantPostBuild:</b> VariantPostBuild
Origin	Elektrobit Automotive GmbH

Parameter Name	<b>CanNmPassiveModeEnabled</b>
Label	Passive Mode
Description	<p>Enable the passive mode.</p> <p>In passive mode, the CanNm will not be able to wake up the bus and will not send NM messages. It will only listen to the NM messages and silently monitor the bus.</p>
Multiplicity	1..1
Type	BOOLEAN
Default value	false
Configuration class	<b>VariantPostBuild:</b> VariantPostBuild
Origin	AUTOSAR_ECUC

Parameter Name	<b>CanNmPduRxIndicationEnabled</b>
Label	PDU Receive Indication
Description	<p>Enable the notification of reception of a NM message. If a NM message is received the function <code>Nm_PduRxIndication()</code> is called.</p> <p>Dependencies:</p>

	► The value of this parameter has to be synchronized with the value of respective parameter in the Nm module.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmPnEiraCalcEnabled</b>	
<b>Description</b>	Specifies if CanNm calculates the PN request information for internal and external requests.	
<b>Multiplicity</b>	0..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>PreCompile:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmPnResetTime</b>	
<b>Description</b>	Specifies the runtime of the reset timer in seconds. This reset time is valid for the reset of PN requests in the EIRA and in the ERA. The value shall be the same for every channel.	
<b>Multiplicity</b>	0..1	
<b>Type</b>	FLOAT	
<b>Default value</b>	0.01	
<b>Range</b>	<=65.535	
	>=0.0010	
<b>Configuration class</b>	<b>PreCompile:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmRemoteSleepIndEnabled</b>	
<b>Label</b>	Remote Sleep Indication	
<b>Description</b>	Enable Support for Remote Sleep Indication.	
	The Remote Sleep Indication allows the CanNm module to detect a situation where all nodes in the cluster are ready to sleep apart from one node which still keeps the bus awake.	

	<p>Therefore the following API is provided:</p> <ul style="list-style-type: none"> <li>▶ <code>Nm_CheckRemoteSleepIndication()</code></li> </ul> <p>Dependencies:</p> <ul style="list-style-type: none"> <li>▶ The value of this parameter has to be synchronized with the value of respective parameter in the Nm module.</li> <li>▶ Passive Mode must be disabled.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmStateChangeIndEnabled</b>	
<b>Label</b>	State Change Indication	
<b>Description</b>	Pre-processor switch for enabling the CAN NM state change notification. This parameter shall be derived from NM_STATE_CHANGE_IND_ENABLED.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmUserDataEnabled</b>	
<b>Label</b>	User Data	
<b>Description</b>	<p>Enable support for transmission of user data in NM messages.</p> <p>Therefore the following API functions are provided:</p> <ul style="list-style-type: none"> <li>▶ <code>Nm_GetUserData()</code></li> <li>▶ <code>Nm_SetUserData()</code> <i>(Only if Passive Mode Support is disabled)</i></li> </ul> <p>Dependencies:</p> <ul style="list-style-type: none"> <li>▶ The value of this parameter has to be synchronized with the value of respective parameter in the Nm module.</li> </ul>	
<b>Multiplicity</b>	1..1	

Type	BOOLEAN	
Default value	false	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

Parameter Name	CanNmVersionInfoApi	
Label	Enable Version Info API	
Description	Provide API function for retrieving version information:  ▶ CanNm_GetVersionInfo()	
Multiplicity	1..1	
Type	BOOLEAN	
Default value	false	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

Parameter Name	CanNmPnEiraRxNSduRef	
Description	Reference to a Pdu in the COM-Stack. EIRA is forwarded to PduR using this Pdu.	
Multiplicity	0..1	
Type	REFERENCE	
Configuration class	PreCompile:	VariantPostBuild
Origin	AUTOSAR_ECUC	

### 5.3.1.3. CanNmChannelConfig

Containers included		
Container name	Multiplicity	Description
<a href="#">CanNmRxPdu</a>	1..n	<b>Label:</b> Receive PDU ID and Reference This container holds the CanNmRxPduId and the CanNmRxPduRef.
<a href="#">CanNmTxPdu</a>	0..1	<b>Label:</b> Transmit PDU Reference This container contains the CanNmTxConfirmationPduId and the CanNmTxPduRef.
<a href="#">CanNmUserDataTxPdu</a>	0..1	<b>Label:</b> User Data Transmission PDU

Containers included		
		This optional container is used to configure the UserNm PDU. This container is only available if <code>CanNmComUserDataSupport</code> is enabled.
<a href="#">CanNmUserDataRxPdu</a>	0..1	<b>Label:</b> User Data Reception PDUs  This optional container is used to configure the UserNm PDU. This container is only available if <code>CanNmComUserDataSupport</code> is enabled.

Parameters included	
Parameter name	Multiplicity
<a href="#">CanNmNodeIdEnabled</a>	1..1
<a href="#">CanNmRepeatMsgIn- dEnabled</a>	1..1
<a href="#">CanNmNodeDetectio- nEnabled</a>	1..1
<a href="#">CanNmAllNmMes- sagesKeepAwake</a>	0..1
<a href="#">CanNmCarWakeUpBit- Position</a>	1..1
<a href="#">CanNmCarWakeUp- BytePosition</a>	1..1
<a href="#">CanNmCarWakeUpFil- terEnabled</a>	1..1
<a href="#">CanNmCarWakeUpFil- terNodeId</a>	1..1
<a href="#">CanNmCarWakeUpRx- Enabled</a>	1..1
<a href="#">CanNmPnEnabled</a>	0..1
<a href="#">CanNmPnEraCalcEn- abled</a>	0..1
<a href="#">CanNmPnHandleMulti- pleNetworkRequests</a>	0..1
<a href="#">CanNmPnEraRxNS- duRef</a>	0..1
<a href="#">CanNmBusLoadReduc- tionActive</a>	1..1

Parameters included	
<a href="#">CanNmImmediateNmCycleTime</a>	1..1
<a href="#">CanNmImmediateNmTransmissions</a>	1..1
<a href="#">CanNmRetryFirstMessageRequest</a>	1..1
<a href="#">CanNmMsgCycleOffset</a>	1..1
<a href="#">CanNmMsgCycleTime</a>	1..1
<a href="#">CanNmMsgReducedTime</a>	1..1
<a href="#">CanNmMsgTimeoutTime</a>	1..1
<a href="#">CanNmNodeId</a>	1..1
<a href="#">CanNmPduCbvPosition</a>	1..1
<a href="#">CanNmPduNidPosition</a>	1..1
<a href="#">CanNmRemoteSleepIndTime</a>	1..1
<a href="#">CanNmRepeatMessageTime</a>	1..1
<a href="#">CanNmTimeoutTime</a>	1..1
<a href="#">CanNmUserDataLength</a>	1..1
<a href="#">CanNmWaitBusSleepTime</a>	1..1
<a href="#">CanNmComMNet-workHandleRef</a>	1..1

Parameter Name	CanNmNodeIdEnabled
<b>Label</b>	Node Identifier
<b>Description</b>	<p>Enable support for sending of Node Ids in NM messages and provide functions for retrieving the node identifier from the most recently received NM PDU and the local node identifier.</p> <p>Therefore the following API functions are provided:</p> <ul style="list-style-type: none"> <li>▶ <code>Nm_GetNodeIdIdentifier()</code></li> <li>▶ <code>Nm_GetLocalNodeIdIdentifier()</code></li> </ul>



	Dependencies:	
	<ul style="list-style-type: none"> <li>▶ The value of this parameter has to be synchronized with the value of the respective parameter in the Nm module.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmRepeatMsgIndEnabled</b>	
<b>Label</b>	Repeat Message Indication	
<b>Description</b>	<p>Enable the notification that a Repeat Message Request Bit has been received. If a Repeat Message Request Bit has been received the function <code>Nm_RepeatMessageIndication()</code> is called.</p> <p>Dependencies:</p> <ul style="list-style-type: none"> <li>▶ Node Detection must be enabled.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmNodeDetectionEnabled</b>	
<b>Label</b>	Node Detection	
<b>Description</b>	<p>Enable the handling <i>Repeat Message Request Bit</i> in the <i>Control Bit Vector</i>. If the <i>Request Message Bit</i> in the NM message set the nodes receiving the message start sending NM messages.</p> <p>For setting the <i>Repeat Message Request Bit</i> in NM messages following API function is provided:</p> <ul style="list-style-type: none"> <li>▶ <code>CanNm_RepeatMessageRequest()</code></li> </ul> <p>Dependencies:</p> <ul style="list-style-type: none"> <li>▶ The value of this parameter has to be synchronized with the value of the respective parameter in the Nm module.</li> </ul>	

	<ul style="list-style-type: none"> <li>▶ Support for Node Identifiers must be enabled.</li> <li>▶ Passive Mode must be disabled.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmAllNmMessagesKeepAwake</b>	
<b>Description</b>	Specifies if CanNm drops irrelevant NM messages.	
<b>Multiplicity</b>	0..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>PreCompile:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmCarWakeUpBitPosition</b>	
<b>Description</b>	Specifies the Bit position of the CWU within the CanNmCarWakeUpBytePosition.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	
<b>Default value</b>	0	
<b>Range</b>	<=7	
	>=0	
<b>Configuration class</b>	<b>PreCompile:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmCarWakeUpBytePosition</b>	
<b>Description</b>	Specifies the Byte position of the CWU within the NM-Message.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	
<b>Default value</b>	2	
<b>Configuration class</b>	<b>PreCompile:</b>	VariantPostBuild

<b>Origin</b>	AUTOSAR_ECUC
---------------	--------------

<b>Parameter Name</b>	<b>CanNmCarWakeUpFilterEnabled</b>	
<b>Description</b>	If CWU filtering is supported, only the CWU bit within the NM message with source node identifier CanNmCarWakeUpFilterNodeId is considered as CWU request.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>PreCompile:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmCarWakeUpFilterNodeId</b>	
<b>Description</b>	Source node identifier for CWU filtering. If CWU filtering is supported, only the CWU bit within the NM message with source node identifier CanNmCarWakeUpFilterNodeId is considered as CWU request.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	
<b>Default value</b>	0	
<b>Range</b>	<=255	
	>=0	
<b>Configuration class</b>	<b>PreCompile:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmCarWakeUpRxEnabled</b>	
<b>Description</b>	Enables or disables support of CarWakeUp bit evaluation in received NM messages.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmPnEnabled</b>	
<b>Description</b>	Enables or disables support of partial networking.	

	<ul style="list-style-type: none"> <li>▶ false : Partial networking not supported.</li> <li>▶ true : Partial networking supported.</li> </ul>	
<b>Multiplicity</b>	0..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>PostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmPnEraCalcEnabled</b>	
<b>Description</b>	Specifies if CanNm calculates the PN request information for external requests.(ERA)	
<b>Multiplicity</b>	0..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>PreCompile:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmPnHandleMultipleNetworkRequests</b>	
<b>Description</b>	<p>In case this parameter is set to <b>true</b> a call of the API function <code>CanNm_NetworkRequest()</code> in the state <code>NormalOperationState</code>, <code>ReadySleepState</code> or <code>RepeatMessageState</code> causes the CanNm to (re-)enter the <code>RepeatMessageState</code> and to send immediate Nm messages.</p> <p>Dependencies:</p> <ul style="list-style-type: none"> <li>▶ Support for Partial Networks must be enabled for this channel (<code>CanNmPnEnabled</code>).</li> <li>▶ The number of immediate transmissions must greater than 0 for this channel (<code>CanNmImmediateNmTransmissions</code>).</li> </ul>	
<b>Multiplicity</b>	0..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>PostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmPnEraRxNSduRef</b>	
-----------------------	----------------------------	--

<b>Description</b>	Reference to a Pdu in the COM-Stack. The SduRef is required for every CanNm Channel, because ERA is reported per channel.	
<b>Multiplicity</b>	0..1	
<b>Type</b>	REFERENCE	
<b>Configuration class</b>	<b>PreCompile:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmBusLoadReductionActive</b>	
<b>Label</b>	Bus Load Reduction Active	
<b>Description</b>	<p>This parameter defines if bus load reduction for the respective NM channel is active or not.</p> <p>Dependencies:</p> <ul style="list-style-type: none"> <li>► Support for Bus Load Reduction must be enabled.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmImmediateNmCycleTime</b>	
<b>Label</b>	Immediate NM PDU cycle time	
<b>Description</b>	<p>Defines the immediate NM PDU cycle time in seconds which is used for CanNmImmediateNmTransmissions NM PDU transmissions. This parameter is only valid if CanNmImmediateNmTransmissions is greater one</p> <p>Dependencies:</p> <ul style="list-style-type: none"> <li>► This parameter is active only if CanNmImmediateNmTransmissions greater than one</li> <li>► The transmission of the first NM PDU shall be delayed by the time indicated by CANNM_MSG_CYCLE_OFFSET in order to avoid bursts of NM messages if CanNmImmediateNmTransmissions is zero</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	FLOAT	
<b>Default value</b>	0.001	
<b>Configuration class</b>	<b>PreCompile:</b>	VariantPostBuild

Origin	AUTOSAR_ECUC	
Parameter Name	<b>CanNmImmediateNmTransmissions</b>	
Label	Number of immediate NM PDUs	
Description	<p>Defines the number of immediate NM PDUs which shall be transmitted. If the value is zero no immediate NM PDUs are transmitted. The cycle time of immediate NM PDUs is defined by <code>CanNmImmediateNmCycleTime</code>.</p> <p>Dependencies:</p> <ul style="list-style-type: none"> <li>▶ <code>CanNmImmediateNmCycleTime</code> is active only if this parameter greater than zero</li> <li>▶ The transmission of the first NM PDU shall be delayed by the time indicated by <code>ANNM_MSG_CYCLE_OFFSET</code> in order to avoid bursts of NM messages if <code>CanNmImmediateNmTransmissions</code> is zero</li> </ul>	
Multiplicity	1..1	
Type	INTEGER	
Default value	0	
Configuration class	<b>VariantPostBuild:</b>	VariantPostBuild
Origin	AUTOSAR_ECUC	

Parameter Name	<b>CanNmRetryFirstMessageRequest</b>	
Label	CanNmRetryFirstMessageRequest	
Description	<p>If <code>CANNM_RETRY_FIRST_MESSAGE_REQUEST</code> is enabled and if the first transmit request after transition into NetworkMode is not accepted by CanIf, the message request shall be repeated in the next main function until one transmit request is accepted by CanIf. Note: This feature can be used in case of partial network wakeup filter to avoid a blocking of all messages in case of passive start-up and first message request is not accepted by CanIf due to CanSM could not enable transmission path fast enough (e.g. in case of asynchronous transceiver handling).</p>	
Multiplicity	1..1	
Type	BOOLEAN	
Default value	false	
Configuration class	<b>PreCompile:</b>	VariantPostBuild
Origin	Elektrobit Automotive GmbH	

Parameter Name	<b>CanNmMsgCycleOffset</b>	
----------------	----------------------------	--

<b>Label</b>	Message Cycle Offset [s]	
<b>Description</b>	<p>Time offset in seconds of the periodic transmission.</p> <p>It determines the start delay of the transmission.</p> <p>Dependencies:</p> <ul style="list-style-type: none"> <li>▶ If Passive Mode is enabled this parameter is ignored.</li> <li>▶ The Message Cycle Offset must be smaller than the Message Cycle Time.</li> <li>▶ The value must be multiple of the Main Function Period.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	FLOAT	
<b>Default value</b>	0.001	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmMsgCycleTime</b>	
<b>Label</b>	Message Cycle Time [s]	
<b>Description</b>	<p>Period of a NM message in seconds.</p> <p>It determines the periodic rate in the 'periodic transmission mode with bus load reduction'; and is the basis for transmit scheduling in the 'periodic transmission mode without bus load reduction'.</p> <p>Dependencies:</p> <ul style="list-style-type: none"> <li>▶ If Passive Mode is enabled this parameter is ignored.</li> <li>▶ The value must be multiple of the Main Function Period.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	FLOAT	
<b>Default value</b>	0.002	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmMsgReducedTime</b>	
<b>Label</b>	Message Reduced Time [s]	
<b>Description</b>	Node specific bus cycle time in the periodic transmission mode with bus load reduction.	

	<p>Dependencies:</p> <ul style="list-style-type: none"> <li>▶ This parameter is only valid if <code>CanNmBusLoadReductionEnabled == True</code> <b>and</b> <code>CanNmBusLoadReductionActive == True</code> <b>and</b> <code>CanNmPassiveModeEnabled == False</code></li> <li>▶ Value must be smaller than the Message Cycle Time of this NM channel.</li> <li>▶ Value must be greater than or equal to half the Message Cycle Time of this NM channel.</li> <li>▶ Value must be a multiple of the Main Function Period.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	FLOAT	
<b>Default value</b>	0.001	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmMsgTimeoutTime</b>	
<b>Label</b>	Message Timeout Time [s]	
<b>Description</b>	<p>Transmission Timeout of NM message.</p> <p>If there is no transmission confirmation by the CAN Interface within this timeout, the CanNm module shall give an error notification.</p> <p>Dependencies:</p> <ul style="list-style-type: none"> <li>▶ If Passive Mode is enabled this parameter is ignored.</li> <li>▶ Value must be a multiple of the Main Function Period.</li> <li>▶ Value must be less than the Message Cycle Time.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	FLOAT	
<b>Default value</b>	0.002	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmNodeId</b>	
<b>Label</b>	Node Identifier	
<b>Description</b>	<p>Node identifier of local node.</p> <p>Dependencies:</p>	



	<ul style="list-style-type: none"> <li>▶ This parameter is only valid if <code>CanNmPassiveModeEnabled = False</code></li> <li>▶ If the Node Identifier Position is set to <code>CANNM_PDU_OFF</code> this parameter is ignored.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	
<b>Default value</b>	0	
<b>Range</b>	<=255	
	>=0	
<b>Configuration class</b>	<b>PostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

Parameter Name	CanNmPduCbvPosition	
<b>Label</b>	PDU Control Bit Vector Position	
<b>Description</b>	<p>This parameter defines the position of the Control Bit Vector within a NM message:</p> <ul style="list-style-type: none"> <li>▶ <code>CANNM_PDU_BYTE_0</code>: byte 0</li> <li>▶ <code>CANNM_PDU_BYTE_1</code>: byte 1,</li> <li>▶ <code>CANNM_PDU_OFF</code>: Control bit vector is not part of the NM PDU</li> </ul> <p>Dependencies:</p> <ul style="list-style-type: none"> <li>▶ If Node Detection support is disabled this parameter is ignored.</li> <li>▶ The Control Bit Vector must not occupy the same byte as the Node Id.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	ENUMERATION	
<b>Default value</b>	CANNM_PDU_BYTE_1	
<b>Range</b>	CANNM_PDU_BYTE_0	
	CANNM_PDU_BYTE_1	
	CANNM_PDU_OFF	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

Parameter Name	CanNmPduNidPosition	
<b>Label</b>	PDU Node Identifier Position	

<b>Description</b>	<p>This parameter defines the position of the Node Id within a NM message:</p> <ul style="list-style-type: none"> <li>▶ <code>CANNM_PDU_BYTE_0</code>: byte 0</li> <li>▶ <code>CANNM_PDU_BYTE_1</code>: byte 1,</li> <li>▶ <code>CANNM_PDU_OFF</code>: source node identifier is not part of the NM PDU</li> </ul> <p>Dependencies:</p> <ul style="list-style-type: none"> <li>▶ If Node Id support is disabled this parameter is ignored.</li> <li>▶ The Node Id must not occupy the same byte as the Control Bit Vector</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	ENUMERATION	
<b>Default value</b>	<code>CANNM_PDU_BYTE_0</code>	
<b>Range</b>	<code>CANNM_PDU_BYTE_0</code>	
	<code>CANNM_PDU_BYTE_1</code>	
	<code>CANNM_PDU_OFF</code>	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmRemoteSleepIndTime</b>	
<b>Label</b>	Remote Sleep Indication Time [s]	
<b>Description</b>	<p>Timeout for Remote Sleep Indication.</p> <p>It defines the time in seconds how long it shall take to recognize that all other nodes are ready to sleep.</p> <p>Dependencies:</p> <ul style="list-style-type: none"> <li>▶ <code>CanNmRemoteSleepIndTime</code> &gt;= <code>CanNmMsgCycleTime</code></li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	FLOAT	
<b>Default value</b>	0.000	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmRepeatMessageTime</b>	
<b>Label</b>	Repeat Message Time [s]	
<b>Description</b>	Timeout for Repeat Message State.	

	<p>It defines the time in seconds how long the NM shall stay in the Repeat Message State.</p> <p>Typically the value of this parameter should be a multiple of Message Cycle Time.</p> <p>The value 0 denotes that <i>no Repeat Message State</i> is configured. It means that Repeat Message State is transient what implicates that it is left immediately after entrance and in result no start-up stability is guaranteed and no node detection procedure is possible.</p> <p>Dependencies:</p> <ul style="list-style-type: none"> <li>► Value must be a multiple of the Main Function Period.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	FLOAT	
<b>Default value</b>	0.001	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmTimeoutTime</b>	
<b>Label</b>	Timeout Time [s]	
<b>Description</b>	<p>Network Timeout for NM messages.</p> <p>It specifies the time in seconds how long the NM stays in the Network Mode before transition to Prepare Bus-Sleep Mode takes place after the network has been released.</p> <p>Transition to Prepare Bus-Sleep Mode take place if</p> <ul style="list-style-type: none"> <li>► the network has been released and</li> <li>► no NM messages are received within this period</li> </ul> <p>It shall be equal for all nodes in the cluster. It shall be greater than CanNmMsgCycleTime.</p> <p>Dependencies:</p> <ul style="list-style-type: none"> <li>► Value must be a multiple of the Main Function Period.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	FLOAT	
<b>Default value</b>	0.004	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild

<b>Origin</b>	AUTOSAR_ECUC	
<b>Parameter Name</b>	<b>CanNmUserDataLength</b>	
<b>Label</b>	User Data Length	
<b>Description</b>	<p>Defines the length of the user data contained in the NM PDU</p> <p>Dependencies:</p> <ul style="list-style-type: none"> <li>▶ The size of the user data must be smaller than the length of the PDU with length of the Control Bit Vector and/or the Node Id subtracted.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	
<b>Default value</b>	6	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanNmWaitBusSleepTime</b>	
<b>Label</b>	Wait Bus Sleep Time [s]	
<b>Description</b>	<p>Timeout for bus calm down phase.</p> <p>This parameter specifies the time in seconds how long the NM shall stay in the Prepare Bus-Sleep Mode before transition into Bus-Sleep Mode takes place.</p> <p>Transition to Prepare Bus-Sleep Mode take place if</p> <ul style="list-style-type: none"> <li>▶ the network has not been requested again and</li> <li>▶ no NM messages are received within this period</li> </ul> <p>Typically the value of this parameter should be a multiple of Message Cycle Time. It shall be equal for all nodes in the cluster. It shall be long enough to make all Tx-buffer empty.</p> <p>Dependencies:</p> <ul style="list-style-type: none"> <li>▶ Value must be a multiple of the Main Function Period.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	FLOAT	
<b>Default value</b>	0.004	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

Parameter Name	CanNmComMNetworkHandleRef	
Description	This reference points to the unique channel defined by the ComMChannel and provides access to the unique channel index value in ComMChannelId.  Dependencies:	
Multiplicity	1..1	
Type	SYMBOLIC-NAME-REFERENCE	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

#### 5.3.1.4. CanNmRxPdu

Parameters included	
Parameter name	Multiplicity
<a href="#">CanNmRxPduId</a>	1..1
<a href="#">CanNmRxPduRef</a>	1..1

Parameter Name	CanNmRxPduId	
Label	Receive PDU ID	
Description	This parameter defines the Rx PDU ID of the CanIf L-PDU range that is associated with this CanNmChannel instance.	
Multiplicity	1..1	
Type	INTEGER	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

Parameter Name	CanNmRxPduRef	
Label	Receive PDU Reference	
Description	Reference to the global PDU that is used by this CanNmChannel instance.	
Multiplicity	1..1	
Type	REFERENCE	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

### 5.3.1.5. CanNmTxPdu

Parameters included	
Parameter name	Multiplicity
<a href="#">CanNmTxConfirmationPduId</a>	1..1
<a href="#">CanNmTxPduRef</a>	1..1

Parameter Name	CanNmTxConfirmationPduId
Description	Handle Id to be used by the Lower Layer (CanIf) to confirm the transmission of the CanNmTxPdu.
Multiplicity	1..1
Type	INTEGER
Default value	0
Configuration class	VariantPostBuild: VariantPostBuild
Origin	AUTOSAR_ECUC

Parameter Name	CanNmTxPduRef
Label	Transmit PDU Reference
Description	The reference to a common PDU structure used for transmission of NM messages.
Multiplicity	1..1
Type	REFERENCE
Configuration class	VariantPostBuild: VariantPostBuild
Origin	AUTOSAR_ECUC

### 5.3.1.6. CanNmUserDataTxPdu

Parameters included	
Parameter name	Multiplicity
<a href="#">CanNmTxUserDataPduId</a>	1..1
<a href="#">CanNmTxUserDataPduRef</a>	1..1

Parameter Name	CanNmTxUserDataPduId	
Description	This parameter defines the handle ID of the Tx NM User Data I-PDU. The handle ID is used by PduR to invoke <code>CanNm_Transmit()</code> .	
Multiplicity	1..1	
Type	INTEGER	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

Parameter Name	CanNmTxUserDataPduRef	
Description	Reference to the Tx NM User Data I-PDU in the global PDU collection	
Multiplicity	1..1	
Type	REFERENCE	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

### 5.3.1.7. CanNmUserDataRxPdu

Parameters included	
Parameter name	Multiplicity
<a href="#">CanNmRxUserDataPduRef</a>	1..1

Parameter Name	CanNmRxUserDataPduRef	
Description	Reference to the Rx NM User Data I-PDU in the global PDU collection	
Multiplicity	1..1	
Type	REFERENCE	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	Elektrobit Automotive GmbH	

### 5.3.1.8. CanNmPnInfo

Containers included		
Container name	Multiplicity	Description

Containers included		
<a href="#">CanNmPnFilterMaskByte</a>	0..7	PN information configuration.

Parameters included	
Parameter name	Multiplicity
<a href="#">CanNmPnInfoLength</a>	1..1
<a href="#">CanNmPnInfoOffset</a>	1..1

Parameter Name	CanNmPnInfoLength	
Description	Specifies the length of the PN request information in the NM message.	
Multiplicity	1..1	
Type	INTEGER	
Default value	0	
Range	<=7	
	>=0	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

Parameter Name	CanNmPnInfoOffset	
Description	Specifies the offset of the PN request information in the NM message.	
Multiplicity	1..1	
Type	INTEGER	
Default value	1	
Range	<=4294967295	
	>=1	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

### 5.3.1.9. CanNmPnFilterMaskByte

Parameters included	
Parameter name	Multiplicity



Parameters included	
<a href="#">CanNmPnFilterMaskByteIndex</a>	1..1
<a href="#">CanNmPnFilterMaskByteValue</a>	1..1

Parameter Name	CanNmPnFilterMaskByteIndex	
Description	Specifies the offset of the PN request information in the NM message.	
Multiplicity	1..1	
Type	INTEGER	
Default value	0	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

Parameter Name	CanNmPnFilterMaskByteValue	
Description	Parameter to configure the filter mask byte.	
Multiplicity	1..1	
Type	INTEGER	
Default value	0	
Range	<=255	
	>=0	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

### 5.3.1.10. CanNmDefensiveProgramming

Parameters included	
Parameter name	Multiplicity
<a href="#">CanNmDefProgEnabled</a>	1..1
<a href="#">CanNmPrecondAssertEnabled</a>	1..1
<a href="#">CanNmPostcondAssertEnabled</a>	1..1

Parameters included	
<a href="#">CanNmStaticAssertEnabled</a>	1..1
<a href="#">CanNmUnreachAssertEnabled</a>	1..1
<a href="#">CanNmInvariantAssertEnabled</a>	1..1

Parameter Name	CanNmDefProgEnabled	
Label	Enable Defensive Programming	
Description	<p>Enables or disables the defensive programming feature for the module CanNm.</p> <p>Note: This feature is dependent on the use of the development error detection module. To use the defensive programming feature, proceed as follows:</p> <ol style="list-style-type: none"> <li>1. Enable development error detection</li> <li>2. Enable defensive programming</li> <li>3. Enable assertions as required</li> </ol>	
Multiplicity	1..1	
Type	BOOLEAN	
Default value	false	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	Elektrobit Automotive GmbH	

Parameter Name	CanNmPrecondAssertEnabled	
Label	Enable Precondition Assertions	
Description	<p>Enables handling of precondition assertion checks reported from the module CanNm.</p> <p>Dependency on parameter(s):</p> <ul style="list-style-type: none"> <li>► Enable Development Error Detection (<code>CanNmDevErrorDetect</code>): must be enabled</li> <li>► Enable Defensive Programming (<code>CanNmDefProgEnabled</code>): must be enabled</li> </ul>	
Multiplicity	1..1	
Type	BOOLEAN	
Default value	false	

<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>CanNmPostcondAssertEnabled</b>
<b>Label</b>	Enable Postcondition Assertions
<b>Description</b>	<p>Enables handling of postcondition assertion checks reported from the module CanNm.</p> <p>Dependency on parameter(s):</p> <ul style="list-style-type: none"> <li>▶ Enable Development Error Detection (CanNmDevErrorDetect): must be enabled</li> <li>▶ Enable Defensive Programming (CanNmDefProgEnabled): must be enabled</li> </ul>
<b>Multiplicity</b>	1..1
<b>Type</b>	BOOLEAN
<b>Default value</b>	false
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>CanNmStaticAssertEnabled</b>
<b>Label</b>	Enable Static Assertions
<b>Description</b>	<p>Enables handling of static assertion checks reported from the module CanNm.</p> <p>Dependency on parameter(s):</p> <ul style="list-style-type: none"> <li>▶ Enable Development Error Detection (CanNmDevErrorDetect): must be enabled</li> <li>▶ Enable Defensive Programming (CanNmDefProgEnabled): must be enabled</li> </ul>
<b>Multiplicity</b>	1..1
<b>Type</b>	BOOLEAN
<b>Default value</b>	false
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>CanNmUnreachAssertEnabled</b>
<b>Label</b>	Enable Unreachable Code Assertions
<b>Description</b>	Enables handling of unreachable code assertion checks reported from the module CanNm.

	Dependency on parameter(s): <ul style="list-style-type: none"> <li>▶ Enable Development Error Detection (<code>CanNmDevErrorDetect</code>): must be enabled</li> <li>▶ Enable Defensive Programming (<code>CanNmDefProgEnabled</code>): must be enabled</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>CanNmInvariantAssertEnabled</b>	
<b>Label</b>	Enable Invariant Assertions	
<b>Description</b>	Enables handling of invariant assertion checks reported from functions of the module CanNm.  Dependency on parameter(s): <ul style="list-style-type: none"> <li>▶ Enable Development Error Detection (<code>CanNmDevErrorDetect</code>): must be enabled</li> <li>▶ Enable Defensive Programming (<code>CanNmDefProgEnabled</code>): must be enabled</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

### 5.3.1.11. CommonPublishedInformation

Parameters included	
Parameter name	Multiplicity
<a href="#">ArMajorVersion</a>	1..1
<a href="#">ArMinorVersion</a>	1..1
<a href="#">ArPatchVersion</a>	1..1
<a href="#">SwMajorVersion</a>	1..1

Parameters included	
<a href="#">SwMinorVersion</a>	1..1
<a href="#">SwPatchVersion</a>	1..1
<a href="#">ModuleId</a>	1..1
<a href="#">VendorId</a>	1..1
<a href="#">Release</a>	1..1

Parameter Name	ArMajorVersion
Label	AUTOSAR Major Version
Description	Major version number of AUTOSAR specification on which the appropriate implementation is based on.
Multiplicity	1..1
Type	INTEGER_LABEL
Default value	3
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name	ArMinorVersion
Label	AUTOSAR Minor Version
Description	Minor version number of AUTOSAR specification on which the appropriate implementation is based on.
Multiplicity	1..1
Type	INTEGER_LABEL
Default value	3
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name	ArPatchVersion
Label	AUTOSAR Patch Version
Description	Patch level version number of AUTOSAR specification on which the appropriate implementation is based on.
Multiplicity	1..1
Type	INTEGER_LABEL
Default value	0

<b>Configuration class</b>	<b>PublishedInformation:</b>	
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>SwMajorVersion</b>	
<b>Label</b>	Software Major Version	
<b>Description</b>	Major version number of the vendor specific implementation of the module.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER_LABEL	
<b>Default value</b>	6	
<b>Configuration class</b>	<b>PublishedInformation:</b>	
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>SwMinorVersion</b>	
<b>Label</b>	Software Minor Version	
<b>Description</b>	Minor version number of the vendor specific implementation of the module. The numbering is vendor specific.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER_LABEL	
<b>Default value</b>	17	
<b>Configuration class</b>	<b>PublishedInformation:</b>	
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>SwPatchVersion</b>	
<b>Label</b>	Software Patch Version	
<b>Description</b>	Patch level version number of the vendor specific implementation of the module. The numbering is vendor specific.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER_LABEL	
<b>Default value</b>	3	
<b>Configuration class</b>	<b>PublishedInformation:</b>	
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>ModuleId</b>	
<b>Label</b>	Numeric Module ID	
<b>Description</b>	Module ID of this module from Module List	

<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER_LABEL
<b>Default value</b>	31
<b>Configuration class</b>	<b>PublishedInformation:</b>
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>VendorId</b>
<b>Label</b>	Vendor ID
<b>Description</b>	Vendor ID of the dedicated implementation of this module according to the AUTOSAR vendor list
<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER_LABEL
<b>Default value</b>	1
<b>Configuration class</b>	<b>PublishedInformation:</b>
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>Release</b>
<b>Label</b>	Release Information
<b>Multiplicity</b>	1..1
<b>Type</b>	STRING_LABEL
<b>Default value</b>	
<b>Configuration class</b>	<b>PublishedInformation:</b>
<b>Origin</b>	Elektrobit Automotive GmbH

### 5.3.1.12. PublishedInformation

Parameters included	
Parameter name	Multiplicity
<a href="#">PbcfgMSupport</a>	1..1

<b>Parameter Name</b>	<b>PbcfgMSupport</b>
<b>Label</b>	PbcfgM support
<b>Description</b>	Specifies whether or not the CanNm can use the PbcfgM module for post-build support.

<b>Multiplicity</b>	1..1
<b>Type</b>	BOOLEAN
<b>Default value</b>	true
<b>Configuration class</b>	<b>PublishedInformation:</b>
<b>Origin</b>	Elektrobit Automotive GmbH

## 5.3.2. Application programming interface (API)

### 5.3.2.1. Macro constants

#### 5.3.2.1.1. CANNM\_API\_ID\_RXINDICATION

<b>Purpose</b>	CanNM API ID.
<b>Value</b>	16U
<b>Description</b>	Definition of CANNM_API_ID_RXINDICATION.

#### 5.3.2.1.2. CANNM\_API\_ID\_TXCONFIRMATION

<b>Purpose</b>	CanNM API ID.
<b>Value</b>	15U
<b>Description</b>	Definition of CANNM_API_ID_TXCONFIRMATION.

#### 5.3.2.1.3. CANNM\_AR\_RELEASE\_MAJOR\_VERSION

<b>Purpose</b>	AUTOSAR release major version.
<b>Value</b>	4U

#### 5.3.2.1.4. CANNM\_AR\_RELEASE\_MINOR\_VERSION

<b>Purpose</b>	AUTOSAR release minor version.
----------------	--------------------------------



<b>Value</b>	0U
--------------	----

#### 5.3.2.1.5. CANNM\_AR\_RELEASE\_REVISION\_VERSION

<b>Purpose</b>	AUTOSAR release revision version.
<b>Value</b>	3U

#### 5.3.2.1.6. CANNM\_E\_INIT\_FAILED

<b>Purpose</b>	Error code for the case in which CanNm initialization fails.
<b>Value</b>	0x05U

#### 5.3.2.1.7. CANNM\_E\_INVALID\_CHANNEL

<b>Purpose</b>	Error Code for Invalid channel.
<b>Value</b>	0x02U

#### 5.3.2.1.8. CANNM\_E\_INVALID\_FUNCTION\_ARG

<b>Purpose</b>	Error code for other invalid API function argument in API.
<b>Value</b>	0x23U

#### 5.3.2.1.9. CANNM\_E\_INVALID\_PDUID

<b>Purpose</b>	Error code for Invalid PDU Id.
<b>Value</b>	0x21U

#### 5.3.2.1.10. CANNM\_E\_NETWORK\_TIMEOUT

<b>Purpose</b>	Error code for unexpected timeout of NM timer.
<b>Value</b>	0x11U

#### 5.3.2.1.11. CANNM\_E\_NET\_START\_IND

<b>Purpose</b>	Error code for Reception of NM messages in Bus-Sleep Mode.
<b>Value</b>	0x04U

#### 5.3.2.1.12. CANNM\_E\_NO\_INIT

<b>Purpose</b>	Initialization status before module initilaization.
<b>Value</b>	0x01U

#### 5.3.2.1.13. CANNM\_E\_NULL\_POINTER

<b>Purpose</b>	Error code for NULL pointers.
<b>Value</b>	0x12U

#### 5.3.2.1.14. CANNM\_INSTANCE\_ID

<b>Purpose</b>	Instance Id of CanNm.
<b>Value</b>	0U

#### 5.3.2.1.15. CANNM\_INVALID\_PDU\_INSTANCE\_ID

<b>Purpose</b>	Instance Id of CanNm when an invalid PDU is passed.
<b>Value</b>	255U

#### 5.3.2.1.16. CANNM\_MODULE\_ID

<b>Purpose</b>	AUTOSAR module identification.
<b>Value</b>	31U

#### 5.3.2.1.17. CANNM\_PDU\_BYTE\_0

<b>Purpose</b>	AUTOSAR API service ID.
----------------	-------------------------

<b>Value</b>	0U
<b>Description</b>	Definition of CANNM_PDU_BYTE_0.

#### 5.3.2.1.18. CANNM\_PDU\_BYTE\_1

<b>Purpose</b>	AUTOSAR API service ID.
<b>Value</b>	1U
<b>Description</b>	Definition of CANNM_PDU_BYTE_1.

#### 5.3.2.1.19. CANNM\_PDU\_OFF

<b>Purpose</b>	AUTOSAR API service ID.
<b>Value</b>	3U
<b>Description</b>	Definition of CANNM_PDU_OFF.

#### 5.3.2.1.20. CANNM\_SERVID\_CANNMTRANSMIT

<b>Purpose</b>	AUTOSAR API service ID.
<b>Value</b>	0x14U
<b>Description</b>	Definition of CANNM_SERVID_CANNMTRANSMIT.

#### 5.3.2.1.21. CANNM\_SERVID\_CHECKREMOTESLEEPINDICATION

<b>Purpose</b>	AUTOSAR API service ID.
<b>Value</b>	0xD0U
<b>Description</b>	Definition of CANNM_SERVID_CHECKREMOTESLEEPINDICATION.

#### 5.3.2.1.22. CANNM\_SERVID\_CONFIRMPNAVAILABILITY

<b>Purpose</b>	AUTOSAR API service ID.
<b>Value</b>	0x16U
<b>Description</b>	Definition of CANNM_SERVID_CONFIRMPNAVAILABILITY.

#### 5.3.2.1.23. CANNM\_SERVID\_DISABLECOMMUNICATION

<b>Purpose</b>	AUTOSAR API service ID.
<b>Value</b>	0x0CU
<b>Description</b>	Definition of CANNM_SERVID_DISABLECOMMUNICATION.

#### 5.3.2.1.24. CANNM\_SERVID\_ENABLECOMMUNICATION

<b>Purpose</b>	AUTOSAR API service ID.
<b>Value</b>	0x0DU
<b>Description</b>	Definition of CANNM_SERVID_ENABLECOMMUNICATION.

#### 5.3.2.1.25. CANNM\_SERVID\_GETLOCALNODEIDENTIFIER

<b>Purpose</b>	AUTOSAR API service ID.
<b>Value</b>	0x07U
<b>Description</b>	Definition of CANNM_SERVID_GETLOCALNODEIDENTIFIER.

#### 5.3.2.1.26. CANNM\_SERVID\_GETNODEIDENTIFIER

<b>Purpose</b>	AUTOSAR API service ID.
<b>Value</b>	0x06U
<b>Description</b>	Definition of CANNM_SERVID_GETNODEIDENTIFIER.

#### 5.3.2.1.27. CANNM\_SERVID\_GETPDUDATA

<b>Purpose</b>	AUTOSAR API service ID.
<b>Value</b>	0x0AU
<b>Description</b>	Definition of CANNM_SERVID_GETPDUDATA.

#### 5.3.2.1.28. CANNM\_SERVID\_GETSTATE

<b>Purpose</b>	AUTOSAR API service ID.
----------------	-------------------------

<b>Value</b>	0x0BU
<b>Description</b>	Definition of CANNM_SERVID_GETSTATE.

#### 5.3.2.1.29. CANNM\_SERVID\_GETUSERDATA

<b>Purpose</b>	AUTOSAR API service ID.
<b>Value</b>	0x05U
<b>Description</b>	Definition of CANNM_SERVID_GETUSERDATA.

#### 5.3.2.1.30. CANNM\_SERVID\_GETVERSIONINFO

<b>Purpose</b>	AUTOSAR API service ID.
<b>Value</b>	0xF1U
<b>Description</b>	Definition of CANNM_SERVID_GETVERSIONINFO.

#### 5.3.2.1.31. CANNM\_SERVID\_INIT

<b>Purpose</b>	AUTOSAR API service ID.
<b>Value</b>	0x00U
<b>Description</b>	Definition of CANNM_SERVID_INIT.

#### 5.3.2.1.32. CANNM\_SERVID\_MAINFUNCTION\_X

<b>Purpose</b>	AUTOSAR API service ID.
<b>Value</b>	0x13U
<b>Description</b>	Definition of CANNM_SERVID_MAINFUNCTION_X.

#### 5.3.2.1.33. CANNM\_SERVID\_NETWORKRELEASE

<b>Purpose</b>	AUTOSAR API service ID.
<b>Value</b>	0x03U
<b>Description</b>	Definition of CANNM_SERVID_NETWORKRELEASE.

#### 5.3.2.1.34. CANNM\_SERVID\_NETWORKREQUEST

<b>Purpose</b>	AUTOSAR API service ID.
<b>Value</b>	0x02U
<b>Description</b>	Definition of CANNM_SERVID_NETWORKREQUEST.

#### 5.3.2.1.35. CANNM\_SERVID\_PASSIVESTARTUP

<b>Purpose</b>	AUTOSAR API service ID.
<b>Value</b>	0x01U
<b>Description</b>	Definition of CANNM_SERVID_PASSIVESTARTUP

#### 5.3.2.1.36. CANNM\_SERVID\_REPEATMESSAGEREQUEST

<b>Purpose</b>	AUTOSAR API service ID.
<b>Value</b>	0x08U
<b>Description</b>	Definition of CANNM_SERVID_REPEATMESSAGEREQUEST.

#### 5.3.2.1.37. CANNM\_SERVID\_REQUESTBUSSYNCHRONIZATION

<b>Purpose</b>	AUTOSAR API service ID.
<b>Value</b>	0xC0U
<b>Description</b>	Definition of CANNM_SERVID_REQUESTBUSSYNCHRONIZATION.

#### 5.3.2.1.38. CANNM\_SERVID\_RXINDICATION

<b>Purpose</b>	AUTOSAR API service ID.
<b>Value</b>	0x10U
<b>Description</b>	Definition of CANNM_SERVID_RXINDICATION.

#### 5.3.2.1.39. CANNM\_SERVID\_SETUSERDATA

<b>Purpose</b>	AUTOSAR API service ID.
<b>Value</b>	0x04U

<b>Description</b>	Definition of CANNM_SERVID_SETUSERDATA.
--------------------	---

#### 5.3.2.1.40. CANNM\_SERVID\_TXCONFIRMATION

<b>Purpose</b>	AUTOSAR API service ID.
<b>Value</b>	0x0FU
<b>Description</b>	Definition of CANNM_SERVID_TXCONFIRMATION.

#### 5.3.2.1.41. CANNM\_SERVID\_TXTIMEOUTEXCEPTION

<b>Purpose</b>	AUTOSAR API service ID.
<b>Value</b>	0x27U
<b>Description</b>	Definition of CANNM_SERVID_TXTIMEOUTEXCEPTION.

#### 5.3.2.1.42. CANNM\_SW\_MAJOR\_VERSION

<b>Purpose</b>	AUTOSAR module major version.
<b>Value</b>	6U

#### 5.3.2.1.43. CANNM\_SW\_MINOR\_VERSION

<b>Purpose</b>	AUTOSAR module minor version.
<b>Value</b>	17U

#### 5.3.2.1.44. CANNM\_SW\_PATCH\_VERSION

<b>Purpose</b>	AUTOSAR module patch version.
<b>Value</b>	3U

#### 5.3.2.1.45. CANNM\_VENDOR\_ID

<b>Purpose</b>	AUTOSAR vendor identification: Elektrobit Automotive GmbH.
<b>Value</b>	1U

## 5.3.2.2. Functions

### 5.3.2.2.1. CanNm\_CheckRemoteSleepIndication

<b>Purpose</b>	Check if sleep indication has taken place.	
<b>Synopsis</b>	<pre>Std_ReturnType CanNm_CheckRemoteSleepIndication ( const NetworkHandleType nmChannelHandle , boolean *const nmRemoteSleepIndPtr );</pre>	
<b>Service ID</b>	208	
<b>Sync/Async</b>	Asynchronous	
<b>Reentrancy</b>	Non-Reentrant	
<b>Parameters (in)</b>	nmChannelHandle	Identification of the NM-channel.
<b>Parameters (out)</b>	nmRemoteSleepIndPtr	Pointer where check result of remote sleep indication shall be copied to.
<b>Return Value</b>	Standard Return Code	
	E_OK	No Error.
	E_NOT_OK	Checking of remote sleep indication bits has failed/not executed.
<b>Description</b>	This function checks if remote sleep indication has taken place or not.	

### 5.3.2.2.2. CanNm\_ConfirmPnAvailability

<b>Purpose</b>	Enable PN Filtering.	
<b>Synopsis</b>	<pre>void CanNm_ConfirmPnAvailability ( const NetworkHandleType nmChannelHandle );</pre>	
<b>Service ID</b>	0x16	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant (but not for the same NM Channel)	
<b>Parameters (in)</b>	nmChannelHandle	Identification of the NM channel.
<b>Description</b>	Enables the PN filter functionality on the indicated NM channel. Availability:	
	<p>Preconditions:</p> <ul style="list-style-type: none"> <li>► The API is only available if CanNmPnSupported is TRUE.</li> </ul>	



#### 5.3.2.2.3. CanNm\_DisableCommunication

<b>Purpose</b>	Disable NM PDU transmission.	
<b>Synopsis</b>	<pre>Std_ReturnType CanNm_DisableCommunication ( const NetworkHandleType nmChannelHandle );</pre>	
<b>Service ID</b>	12	
<b>Sync/Async</b>	Asynchronous	
<b>Reentrancy</b>	Reentrant (But not for the same NM Channel)	
<b>Parameters (in)</b>	nmChannelHandle	Identification of the NM channel.
<b>Return Value</b>	Standard Return Code	
	E_OK	No Error.
	E_NOT_OK	Disabling of NM PDU transmission ability has failed/not executed.
<b>Description</b>	This function disables the NM PDU transmission ability due to a ISO14229 Communication Control (28hex) service.	

#### 5.3.2.2.4. CanNm\_EnableCommunication

<b>Purpose</b>	Enable NM PDU transmission.	
<b>Synopsis</b>	<pre>Std_ReturnType CanNm_EnableCommunication ( const NetworkHandleType nmChannelHandle );</pre>	
<b>Service ID</b>	13	
<b>Sync/Async</b>	Asynchronous	
<b>Reentrancy</b>	Reentrant (But not for the same NM Channel)	
<b>Parameters (in)</b>	nmChannelHandle	Identification of the NM channel.
<b>Return Value</b>	Standard Return Code	
	E_OK	No Error.
	E_NOT_OK	Enabling of NM PDU transmission ability has failed/not executed.
<b>Description</b>	This function enables the NM PDU transmission ability due to a ISO14229 Communication Control (28hex) service.	

#### 5.3.2.2.5. CanNm\_GetLocalNodeIdentifier

<b>Purpose</b>	Get Local Node Identifier.	
<b>Synopsis</b>	<pre>Std_ReturnType CanNm_GetLocalNodeIdentifier ( const Net- workHandleType nmChannelHandle , uint8 *const nmNodeIdPtr );</pre>	
<b>Service ID</b>	7	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	nmChannelHandle	Identification of the NM channel.
<b>Parameters (out)</b>	nmNodeIdPtr	Pointer where node identifier of the local node shall be copied to.
<b>Return Value</b>	Standard Return Code	
	E_OK	No Error.
	E_NOT_OK	Getting of the node identifier of the local node has failed.
<b>Description</b>	This function gets the node identifier configured as the local node.	

#### 5.3.2.2.6. CanNm\_GetNodeIdentifier

<b>Purpose</b>	Get Node Identifier.	
<b>Synopsis</b>	<pre>Std_ReturnType CanNm_GetNodeIdentifier ( const NetworkHan- dleType nmChannelHandle , uint8 *const nmNodeIdPtr );</pre>	
<b>Service ID</b>	6	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	nmChannelHandle	Identification of the NM channel.
<b>Parameters (out)</b>	nmNodeIdPtr	Pointer where node identifier out of the most recently received NM PDU shall be copied to.
<b>Return Value</b>	Standard Return Code	
	E_OK	No Error.
	E_NOT_OK	Getting of the node identifier out of the most recently received NM PDU has failed.
<b>Description</b>	This function gets the node identifier out of the most recently received NM PDU.	

#### 5.3.2.2.7. CanNm\_GetPduData

<b>Purpose</b>	Retrieve the data of the last received NM message.	
<b>Synopsis</b>	<pre>Std_ReturnType CanNm_GetPduData ( const NetworkHandleType nmChannelHandle , uint8 *const nmPduDataPtr );</pre>	
<b>Service ID</b>	10	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	nmChannelHandle	Identification of the NM channel.
	nmPduDataPtr	Pointer where NM PDU data shall be copied to.
<b>Return Value</b>	Standard Return Code	
	E_OK	No Error.
	E_NOT_OK	Getting of NM PDU data has failed.
<b>Description</b>	<p>This function retrieves the whole PDU data out of the most recently received NM message.</p> <p>Preconditions:</p> <ul style="list-style-type: none"> <li>► The channel handle should be valid and the module should have been initialized for this channel (checked).</li> </ul>	

#### 5.3.2.2.8. CanNm\_GetState

<b>Purpose</b>	Get the State and mode of the Network Management.	
<b>Synopsis</b>	<pre>Std_ReturnType CanNm_GetState ( const NetworkHandleType nmChannelHandle , Nm_StateType *const nmStatePtr , Nm_ModeType *const nmModePtr );</pre>	
<b>Service ID</b>	11	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	nmChannelHandle	Identification of the NM-channel.
<b>Parameters (out)</b>	nmStatePtr	Pointer to state of network management.
	nmModePtr	Pointer to mode of network management.

<b>Return Value</b>	Standard Return Code	
	E_OK	No Error.
	E_NOT_OK	Getting of NM state has failed.
<b>Description</b>	This function returns the state and the mode of the network management.	

#### 5.3.2.2.9. CanNm\_GetUserData

<b>Purpose</b>	Get User Data from NM messages.	
<b>Synopsis</b>	<pre>Std_ReturnType CanNm_GetUserData ( const NetworkHandle-                                      Type nmChannelHandle , uint8 *const nmUserDataPtr );</pre>	
<b>Service ID</b>	5	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	nmChannelHandle	Identification of the NM channel.
	nmUserDataPtr	Pointer to where user data out of the most recently received NM message shall be copied to.
<b>Return Value</b>	Standard Return Code	
	E_OK	No Error.
	E_NOT_OK	Getting of user data has failed.
<b>Description</b>	<p>This function retrieves the user data from the last received NM message.</p> <p>Preconditions:</p> <ul style="list-style-type: none"> <li>► The channel handle should be valid and the module should have been initialized for this channel (checked).</li> </ul>	

#### 5.3.2.2.10. CanNm\_GetVersionInfo

<b>Purpose</b>	Get version information for the CAN Network Management.	
<b>Synopsis</b>	<pre>void CanNm_GetVersionInfo ( Std_-                              VersionInfoType * versioninfo );</pre>	
<b>Service ID</b>	241	
<b>Sync/Async</b>	synchronous	

<b>Reentrancy</b>	reentrant	
<b>Parameters (out)</b>	versioninfo	Pointer to where to store the version information of this module.
<b>Description</b>	<p>This service returns the version information of this module. The version information includes:</p> <ul style="list-style-type: none"> <li>▶ Module Id</li> <li>▶ Vendor Id</li> <li>▶ Vendor specific version numbers (BSW00407).</li> </ul> <p>Note: This function can be called even if CanNm is not initialized.</p>	

#### 5.3.2.2.11. CanNm\_Init

<b>Purpose</b>	Initialization of CanNm module.	
<b>Synopsis</b>	<pre>void <b>CanNm_Init</b> ( const CanNm_Con-                   figType *const cannmConfigPtr );</pre>	
<b>Service ID</b>	1	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Non-Reentrant	
<b>Parameters (in)</b>	cannmConfigPtr	Pointer to selected configuration structure.
<b>Description</b>	<p>This function initializes the CanNm module and starts the cyclic transmission of NM-packages.</p> <p>This function has to be called after initialization of the CanIf.</p>	

#### 5.3.2.2.12. CanNm\_IsValidConfig

<b>Purpose</b>	Validate configuration.	
<b>Synopsis</b>	<pre>Std_ReturnType <b>CanNm_IsValidCon-</b> <b>fig</b> ( const void * voidConfigPtr );</pre>	
<b>Service ID</b>	0x60	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Return Value</b>	E_OK if the given module configurations is valid otherwise E_NOT_OK.	

<b>Description</b>	Checks if the post build configuration fits to the link time configuration part.
--------------------	--

#### 5.3.2.2.13. CanNm\_MainFunction

<b>Purpose</b>	Main function of the CanNm.
<b>Synopsis</b>	<pre>void CanNm_MainFunction ( void );</pre>
<b>Service ID</b>	19
<b>Sync/Async</b>	Synchronous
<b>Reentrancy</b>	Non-Reentrant
<b>Description</b>	This function handles scheduled tasks such as timers.

#### 5.3.2.2.14. CanNm\_NetworkRelease

<b>Purpose</b>	Release the Network.	
<b>Synopsis</b>	<pre>Std_ReturnType CanNm_NetworkRelease ( con- st NetworkHandleType nmChannelHandle );</pre>	
<b>Service ID</b>	3	
<b>Sync/Async</b>	Asynchronous	
<b>Reentrancy</b>	Reentrant (But not for the same NM Channel)	
<b>Parameters (in)</b>	nmChannelHandle	Identification of the NM channel.
<b>Return Value</b>	Standard Return Code	
	E_OK	No Error.
	E_NOT_OK	Releasing of network has failed/not executed.
<b>Description</b>	This function releases the network, when there is no need for bus communication. Network state shall be changed to released.	

#### 5.3.2.2.15. CanNm\_NetworkRequest

<b>Purpose</b>	Network Request.
<b>Synopsis</b>	<pre>Std_ReturnType CanNm_NetworkRequest ( con- st NetworkHandleType nmChannelHandle );</pre>

<b>Service ID</b>	2	
<b>Sync/Async</b>	Asynchronous	
<b>Reentrancy</b>	Reentrant (But not for the same NM Channel)	
<b>Parameters (in)</b>	nmChannelHandle	Identification of the NM channel.
<b>Return Value</b>	Standard Return Code	
	E_OK	No Error.
	E_NOT_OK	Requesting of network has failed.
<b>Description</b>	This function request the network when bus communication is needed. Network state shall be changed to requested.	

#### 5.3.2.2.16. CanNm\_PassiveStartUp

<b>Purpose</b>	Passive startup of CanNm module.	
<b>Synopsis</b>	<pre>Std_ReturnType CanNm_PassiveStartUp ( const                                      NetworkHandleType nmChannelHandle );</pre>	
<b>Service ID</b>	1	
<b>Sync/Async</b>	Asynchronous	
<b>Reentrancy</b>	Reentrant (But not for the same NM Channel)	
<b>Return Value</b>	Standard Return Code	
	E_OK	No Error.
	E_NOT_OK	Passive startup of network management has failed/not executed.
<b>Description</b>	<p>This function performs a passive startup of the AUTOSAR CAN NM. It triggers the transition from Bus-Sleep Mode to the Network Mode in Repeat Message State.</p> <p>This service has no effect if the current state is not equal to Bus-Sleep Mode. In that case E_NOT_OK is returned.</p>	

#### 5.3.2.2.17. CanNm\_RepeatMessageRequest

<b>Purpose</b>	Set the Repeat Message Request Bit.	
<b>Synopsis</b>	<pre>Std_ReturnType CanNm_RepeatMessageRequest ( const NetworkHandleType nmChannelHandle );</pre>	

<b>Service ID</b>	8	
<b>Sync/Async</b>	Asynchronous	
<b>Reentrancy</b>	Reentrant (but not for the same NM Channel)	
<b>Parameters (in)</b>	nmChannelHandle	Identification of the NM channel.
<b>Return Value</b>	Standard Return Code	
	E_OK	No Error.
	E_NOT_OK	Setting of Repeat Message Request Bit has failed/not executed.
<b>Description</b>	This function sets the Repeat Message Request Bit for NM messages transmitted next on the bus.	

#### 5.3.2.2.18. CanNm\_RequestBusSynchronization

<b>Purpose</b>	Request Bus Synchorization.	
<b>Synopsis</b>	<pre>Std_ReturnType CanNm_RequestBusSynchronization ( const NetworkHandleType nmChannelHandle );</pre>	
<b>Service ID</b>	192	
<b>Sync/Async</b>	synchronous	
<b>Reentrancy</b>	Reentrant (but not for the same NM Channel)	
<b>Parameters (in)</b>	nmChannelHandle	Identification of the NM-channel.
<b>Return Value</b>	Standard Return Code	
	E_OK	No Error.
	E_NOT_OK	Requesting of bus synchronization has failed/not executed.
<b>Description</b>	This function requests bus synchronization.	

#### 5.3.2.2.19. CanNm\_RxIndication

<b>Purpose</b>	Indicates a received transmission.	
<b>Synopsis</b>	<pre>void CanNm_RxIndication ( PduIdType Rx- PduId , PduInfoType * PduInfoPtr );</pre>	
<b>Parameters (in)</b>	RxPduId	Identification of the network through PDU-ID.



	PduInfoPtr	Contains the length of the received I-PDU and a pointer to a buffer containing the I-PDU.
<b>Description</b>	This function indicates the reception of an NM-message PDU.	

#### 5.3.2.2.20. CanNm\_SetUserData

<b>Purpose</b>	Set User Data for NM messages.	
<b>Synopsis</b>	<pre>Std_ReturnType CanNm_SetUserData ( const NetworkHandle-     Type nmChannelHandle , const uint8 *const nmUserDataPtr );</pre>	
<b>Service ID</b>	4	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Non-Reentrant	
<b>Parameters (in)</b>	nmChannelHandle	Identification of the NM channel.
	nmUserDataPtr	Pointer where the user data for the next transmitted NM message shall be copied from.
<b>Return Value</b>	Standard Return Code	
	E_OK	No Error.
	E_NOT_OK	Setting of user data has failed.
<b>Description</b>	<p>This function sets the user data for the next NM message that is transmitted on the bus.</p> <p>Preconditions:</p> <ul style="list-style-type: none"> <li>► The channel handle should be valid and the module should have been initialized for this channel (checked).</li> </ul>	

#### 5.3.2.2.21. CanNm\_Transmit

<b>Purpose</b>	Dummy function.	
<b>Synopsis</b>	<pre>Std_ReturnType CanNm_Transmit ( PduIdType Can-     TxPduId , const PduInfoType * PduInfoPtr );</pre>	
<b>Service ID</b>	0	
<b>Sync/Async</b>	Synchronous	

<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	CanTxPduId	Identification of the NM channel.
	PduInfoPtr	Pointer to a structure with CAN L-PDU related data: DLC and pointer to CAN L-SDU buffer
<b>Return Value</b>	Standard Return Code	
	E_OK	always
<b>Description</b>	<p>CanNm_Transmit is implemented as an empty function and always returns E_OK. The function CanNm_Transmit is only available if the configuration switch CanNmComUserDataSupport is enabled.</p> <p>Preconditions:</p> <ul style="list-style-type: none"> <li>► None</li> </ul>	

#### 5.3.2.2.22. CanNm\_TxConfirmation

<b>Purpose</b>	Confirms a transmission.	
<b>Synopsis</b>	<pre>void CanNm_TxConfirmation ( PduIdType TxPduId );</pre>	
<b>Parameters (in)</b>	TxPduId	Identification of the network through PDU-ID.
<b>Description</b>	This function confirms the transmission of a NM-package.	

### 5.3.3. Integration notes

#### 5.3.3.1. Exclusive areas

This section describes the exclusive areas used by the CanNm module.

##### 5.3.3.1.1. SCHM\_CANNM\_EXCLUSIVE\_AREA\_0

<b>Protected data structures</b>	All shared data that shall be protected from mutual access.
<b>Recommended locking mechanism</b>	This exclusive area must always be protected by a locking mechanism. The options for locking are described in the <a href="#">EB</a>



	tresos AutoCore Generic documentation. Refer to the section Mapping exclusive areas in the basic software modules in the Integration notes section for details.
--	---

CanNm uses exclusive areas for protecting the global data against concurrent read/write access:

- ▶ The status of CanNm channels - the consistency of this global variable must be assured as it can be read/written by the CanNm state machine and/or following user interfaces:
  - ▶ CanNm\_NetworkRequest()
  - ▶ CanNm\_NetworkRelease()
  - ▶ CanNm\_EnableCommunication()
  - ▶ CanNm\_DisableCommunication()
- ▶ The partial networking bits - the consistency of this global data must be assured as it can be read/written by the CanNm state machine, RxIndication and/or following user interface:
  - ▶ CanNm\_GetPduUserData()
- ▶ The NM PDU data - the consistency of the PDU data must be assured as it can be read/written by the RxIndication and/or following interfaces:
  - ▶ CanNm\_GetUserData()
  - ▶ CanNm\_GetPduData()

### 5.3.3.2. Production errors

Production errors are not reported by the CanNm module.

### 5.3.3.3. Memory mapping

General information about memory mapping is provided in the EB tresos AutoCore Generic documentation. Refer to the section Memory mapping and compiler abstraction in the Integration notes section for details.

The following table provides the list of sections that may be mapped for this module:

Memory section
CONST_8
CONST_32
VAR_INIT_8

CONST_UNSPECIFIED
CODE
VAR_FAST_NO_INIT_UNSPECIFIED
VAR_INIT_UNSPECIFIED
VAR_NO_INIT_8
VAR_NO_INIT_UNSPECIFIED
VAR_INIT_BOOLEAN
CONFIG_DATA_UNSPECIFIED

### 5.3.3.4. Integration requirements

**WARNING**



**Integration requirements list is not exhaustive**

The following list of integration requirements helps you to integrate your product. However, this list is not exhaustive. You also require information from the user's guide, release notes, and EB tresos AutoCore known issues to successfully integrate your product.

Integration requirements are not listed for the CanNm module.

## 5.4. CanSM

### 5.4.1. Configuration parameters

Containers included		
Container name	Multiplicity	Description
<a href="#">CanSMDefensiveProgramming</a>	1..1	<b>Label:</b> Defensive Programming Options Parameters for defensive programming
<a href="#">CanSMConfiguration</a>	1..n	This container contains the global parameters of the CanSM and sub containers, which are for the CAN network specific configuration.
<a href="#">ReportToDem</a>	1..1	<b>Label:</b> Production error handling Production error handling
<a href="#">CanSMGeneral</a>	1..1	<b>Label:</b> General CanSM Configuration

Containers included		
		Container for general pre-compile parameters of the CanSM module.
<a href="#">CommonPublishedInformation</a>	1..1	<b>Label:</b> Common Published Information Common container, aggregated by all modules. It contains published information about vendor and versions.
<a href="#">PublishedInformation</a>	1..1	<b>Label:</b> EB Published Information Additional published parameters not covered by CommonPublishedInformation container.

Parameters included	
Parameter name	Multiplicity
<a href="#">IMPLEMENTATION_CONFIG_VARIANT</a>	1..1

Parameter Name	IMPLEMENTATION_CONFIG_VARIANT
<b>Label</b>	Config Variant
<b>Multiplicity</b>	1..1
<b>Type</b>	ENUMERATION
<b>Default value</b>	VariantPreCompile
<b>Range</b>	VariantPreCompile

#### 5.4.1.1. CanSMDefensiveProgramming

Parameters included	
Parameter name	Multiplicity
<a href="#">CanSMDefProgEnabled</a>	1..1
<a href="#">CanSMPrecondAssertEnabled</a>	1..1
<a href="#">CanSMPostcondAssertEnabled</a>	1..1
<a href="#">CanSMStaticAssertEnabled</a>	1..1
<a href="#">CanSMUnreachAssertEnabled</a>	1..1

Parameters included	
<a href="#">CanSMInvariantAssertEnabled</a>	1..1

Parameter Name	CanSMDefProgEnabled	
Label	Enable Defensive Programming	
Description	<p>Enables or disables the defensive programming feature for the module CanSM.</p> <p>Note: This feature is dependent on the use of the development error detection module. To use the defensive programming feature, proceed as follows:</p> <ol style="list-style-type: none"> <li>1. Enable development error detection</li> <li>2. Enable defensive programming</li> <li>3. Enable assertions as required</li> </ol>	
Multiplicity	1..1	
Type	BOOLEAN	
Default value	false	
Configuration class	VariantPreCompile:	VariantPreCompile
Origin	Elektrobit Automotive GmbH	

Parameter Name	CanSMPrecondAssertEnabled	
Label	Enable Precondition Assertions	
Description	<p>Enables handling of precondition assertion checks reported from the module CanSM.</p> <p>Dependency on parameter(s):</p> <ul style="list-style-type: none"> <li>► Enable Development Error Detection (<code>CanSMDevErrorDetect</code>): must be enabled</li> <li>► Enable Defensive Programming (<code>CanSMDefProgEnabled</code>): must be enabled</li> </ul>	
Multiplicity	1..1	
Type	BOOLEAN	
Default value	false	
Configuration class	VariantPreCompile:	VariantPreCompile
Origin	Elektrobit Automotive GmbH	

Parameter Name	CanSMPostcondAssertEnabled	
Label	Enable Postcondition Assertions	

<b>Description</b>	<p>Enables handling of postcondition assertion checks reported from the module CanSM.</p> <p>Dependency on parameter(s):</p> <ul style="list-style-type: none"> <li>▶ Enable Development Error Detection (CanSMDevErrorDetect): must be enabled</li> <li>▶ Enable Defensive Programming (CanSMDefProgEnabled): must be enabled</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPreCompile:</b>	VariantPreCompile
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>CanSMStaticAssertEnabled</b>	
<b>Label</b>	Enable Static Assertions	
<b>Description</b>	<p>Enables handling of static assertion checks reported from the module CanSM.</p> <p>Dependency on parameter(s):</p> <ul style="list-style-type: none"> <li>▶ Enable Development Error Detection (CanSMDevErrorDetect): must be enabled</li> <li>▶ Enable Defensive Programming (CanSMDefProgEnabled): must be enabled</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPreCompile:</b>	VariantPreCompile
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>CanSMUnreachAssertEnabled</b>	
<b>Label</b>	Enable Unreachable Code Assertions	
<b>Description</b>	<p>Enables handling of unreachable code assertion checks reported from the module CanSM.</p> <p>Dependency on parameter(s):</p> <ul style="list-style-type: none"> <li>▶ Enable Development Error Detection (CanSMDevErrorDetect): must be enabled</li> <li>▶ Enable Defensive Programming (CanSMDefProgEnabled): must be enabled</li> </ul>	

<b>Multiplicity</b>	1..1
<b>Type</b>	BOOLEAN
<b>Default value</b>	false
<b>Configuration class</b>	<b>VariantPreCompile:</b> VariantPreCompile
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>CanSMInvariantAssertEnabled</b>
<b>Label</b>	Enable Invariant Assertions
<b>Description</b>	<p>Enables handling of invariant assertion checks reported from functions of the module CanSM.</p> <p>Dependency on parameter(s):</p> <ul style="list-style-type: none"> <li>▶ Enable Development Error Detection (<code>CanSMDevErrorDetect</code>): must be enabled</li> <li>▶ Enable Defensive Programming (<code>CanSMDefProgEnabled</code>): must be enabled</li> </ul>
<b>Multiplicity</b>	1..1
<b>Type</b>	BOOLEAN
<b>Default value</b>	false
<b>Configuration class</b>	<b>VariantPreCompile:</b> VariantPreCompile
<b>Origin</b>	Elektrobit Automotive GmbH

### 5.4.1.2. CanSMConfiguration

Containers included		
Container name	Multiplicity	Description
<a href="#">CanSMManagerNet-work</a>	1..255	<p>This container contains the CAN network specific parameters of each CAN network.</p> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM reduction (config):</b> Using only one container of this type reduces the ROM consumption of the module configuration.</li> <li>▶ <b>RAM reduction (config):</b> Using only one container of this type reduces the RAM consumption of the module configuration.</li> </ul>



Containers included		
		<ul style="list-style-type: none"> <li>▶ <b>ROM reduction (code):</b> Using only one container of this type reduces the ROM consumption of the module code.</li> <li>▶ <b>Execution time reduction (code):</b> Using only one container of this type reduces the execution time of the module code.</li> </ul>

Parameters included	
Parameter name	Multiplicity
<a href="#">CanSMod-eRequestRepetitionMax</a>	1..1
<a href="#">CanSMod-eRequestRepetition-Time</a>	1..1

Parameter Name	CanSMModeRequestRepetitionMax	
Label	Max. number of mode requests	
Description	Specifies the maximal amount of mode request repetitions without a respective mode indication from the CanIf module until the CanSM module reports a development error to the DET and tries to go back to no communication.	
Multiplicity	1..1	
Type	INTEGER	
Default value	0	
Range	<=255	
	>=0	
Configuration class	VariantPreCompile:	VariantPreCompile
Origin	AUTOSAR_ECUC	

Parameter Name	CanSMModeRequestRepetitionTime
Label	Mode request repetition time
Description	Specifies in which time duration the CanSM module shall repeat mode change requests by using the API of the CanIf module.
Multiplicity	1..1
Type	FLOAT
Default value	0.0
Range	<=65.534

	>=0	
<b>Configuration class</b>	<b>VariantPreCompile:</b>	VariantPreCompile
<b>Origin</b>	AUTOSAR_ECUC	

### 5.4.1.3. CanSMManagerNetwork

Containers included		
Container name	Multiplicity	Description
<a href="#">CanSMController</a>	1..255	<p>This container contains the controller IDs assigned to a CAN network.</p> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM reduction (config):</b> Using a single controller for each network reduces the ROM consumption of the module configuration.</li> <li>▶ <b>ROM reduction (code):</b> Using a single controller for each network reduces the ROM consumption of the module code.</li> <li>▶ <b>Execution time reduction (code):</b> Using a single controller for each network reduces the execution time of the module code.</li> </ul>
<a href="#">CanSMDemEventParameterRefs</a>	0..1	<p><b>Label:</b> Dem Events</p> <p>Container for the references to DemEventParameter elements which shall be invoked using the API Dem_ReportErrorStatus API in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId value. The standardized errors are provided in the container and can be extended by vendor specific error references.</p>

Parameters included	
Parameter name	Multiplicity
<a href="#">CanSMBorCounterL1Tol</a>	1..1
<a href="#">CanSMBorTimeL1</a>	1..1
<a href="#">CanSMBorTimeL2</a>	1..1
<a href="#">CanSMBorTimeTxEnsured</a>	1..1

Parameters included	
<a href="#">CanSMBorTxConfirmationPolling</a>	1..1
<a href="#">CanSMComMNetworkHandleRef</a>	1..1
<a href="#">CanSMTransceiverId</a>	0..1
<a href="#">CanSMActivatePN</a>	1..1

Parameter Name	CanSMBorCounterL1ToL2	
Label	BOR L1 to L2 Threshold	
Description	<p>If the count of bus-offs is <i>greater than or equal to</i> this threshold, the bus-off recovery switches from level 1 (short recovery time) to level 2 (long recovery time).</p> <p><i>Remark:</i> By comparison, the "BOR L2 Error Reporting Threshold" is a "greater than" threshold.</p> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM reduction (config):</b> Using the same value for all networks reduces the ROM consumption of the module configuration.</li> <li>▶ <b>ROM reduction (code):</b> Using the same value for all networks reduces the ROM consumption of the module code.</li> <li>▶ <b>Execution time reduction (code):</b> Using the same value for all networks reduces the execution time of the module code.</li> </ul>	
Multiplicity	1..1	
Type	INTEGER	
Default value	2	
Range	<=255	
	>=0	
Configuration class	VariantPreCompile:	VariantPreCompile
Origin	AUTOSAR_ECUC	

Parameter Name	CanSMBorTimeL1
Label	BOR L1 Recovery Time [s]
Description	<p>This time parameter defines in seconds the duration of the bus-off recovery time in level 1 (short recovery time).</p> <p><b>Optimization Effect:</b></p>

	<ul style="list-style-type: none"> <li>▶ <b>ROM reduction (config):</b> Using the same value for all networks reduces the ROM consumption of the module configuration.</li> <li>▶ <b>ROM reduction (code):</b> Using the same value for all networks reduces the ROM consumption of the module code.</li> <li>▶ <b>Execution time reduction (code):</b> Using the same value for all networks reduces the execution time of the module code.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	FLOAT	
<b>Default value</b>	0.5	
<b>Range</b>	<=65.535	
	>=0	
<b>Configuration class</b>	<b>VariantPreCompile:</b>	VariantPreCompile
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanSMBorTimeL2</b>	
<b>Label</b>	BOR L2 Recovery Time [s]	
<b>Description</b>	<p>This time parameter defines in seconds the duration of the bus-off recovery time in level 2 (long recovery time).</p> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM reduction (config):</b> Using the same value for all networks reduces the ROM consumption of the module configuration.</li> <li>▶ <b>ROM reduction (code):</b> Using the same value for all networks reduces the ROM consumption of the module code.</li> <li>▶ <b>Execution time reduction (code):</b> Using the same value for all networks reduces the execution time of the module code.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	FLOAT	
<b>Default value</b>	1.5	
<b>Range</b>	<=65.535	
	>=0	
<b>Configuration class</b>	<b>VariantPreCompile:</b>	VariantPreCompile
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanSMBorTimeTxEnsured</b>	
-----------------------	------------------------------	--

<b>Label</b>	BOR Time Ensured [s]	
<b>Description</b>	<p>This parameter defines in seconds the duration of the bus-off event check.</p> <p>This parameter is ignored if parameter CanSMBorTxConfirmationPolling is enabled.</p> <p>This check assesses, if the recovery has been successful after the recovery reenables the transmit path. If a new bus-off occurs during this time period, the CanSM assesses this bus-off as sequential bus-off without successful recovery.</p> <p>Because a bus-off only can be detected, when PDUs are transmitted, the time has to be great enough to ensure that PDUs are transmitted again (e. g. time period of the fastest cyclic transmitted PDU of the COM module / ComTxModeTimePeriod-Factor).</p> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM reduction (config):</b> Using the same value for all networks reduces the ROM consumption of the module configuration.</li> <li>▶ <b>ROM reduction (code):</b> Using the same value for all networks reduces the ROM consumption of the module code.</li> <li>▶ <b>Execution time reduction (code):</b> Using the same value for all networks reduces the execution time of the module code.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	FLOAT	
<b>Default value</b>	5.0	
<b>Range</b>	<=65.534	
	>=0	
<b>Configuration class</b>	<b>VariantPreCompile:</b>	VariantPreCompile
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanSMBorTxConfirmationPolling</b>
<b>Label</b>	BOR Tx Confirmation Polling
<b>Description</b>	This parameter shall configure, if the CanSM polls the CanIf_GetTxConfirmationState API to decide the bus-off state to be recovered instead of using the CanSMBorTimeTxEnsured parameter for this decision.
<b>Multiplicity</b>	1..1
<b>Type</b>	BOOLEAN
<b>Default value</b>	false

<b>Configuration class</b>	<b>VariantPreCompile:</b> VariantPreCompile
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanSMComMNetworkHandleRef</b>
<b>Label</b>	ComM Channel
<b>Description</b>	Unique handle to identify one certain CAN network. Reference to one of the network handles configured for the ComM.
<b>Multiplicity</b>	1..1
<b>Type</b>	SYMBOLIC-NAME-REFERENCE
<b>Configuration class</b>	<b>VariantPreCompile:</b> VariantPreCompile
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanSMTransceiverId</b>
<b>Label</b>	Can Transceiver Channel
<b>Description</b>	<p>ID of the CAN transceiver assigned to the configured network handle. Reference to one of the transceivers managed by the CanIf module.</p> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM increase (config):</b> Using this parameter increases the ROM consumption of the module configuration.</li> <li>▶ <b>ROM increase (code):</b> Using this parameter increases the ROM consumption of the module code.</li> <li>▶ <b>Execution time increase (code):</b> Using this parameter increases the execution time of the module code.</li> </ul>
<b>Multiplicity</b>	0..1
<b>Type</b>	SYMBOLIC-NAME-REFERENCE
<b>Configuration class</b>	<b>VariantPreCompile:</b> VariantPreCompile
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanSMAActivatePN</b>
<b>Label</b>	Activate PN for this network
<b>Description</b>	<p>Activate/deactivate the partial networking for this network.</p> <ul style="list-style-type: none"> <li>▶ true: Partial Networking activated for this network</li> <li>▶ false: Partial Networking deactivated for this network</li> </ul>
<b>Multiplicity</b>	1..1

Type	BOOLEAN	
Default value	false	
Configuration class	VariantPreCompile:	VariantPreCompile
Origin	Elektrobit Automotive GmbH	

#### 5.4.1.4. CanSMController

Parameters included	
Parameter name	Multiplicity
<a href="#">CanSMControllerId</a>	1..1

Parameter Name	CanSMControllerId
Label	CAN Controller
Description	Unique handle to identify one certain CAN controller. Reference to one of the CAN controllers managed by the CanIf module.
Multiplicity	1..1
Type	SYMBOLIC-NAME-REFERENCE
Configuration class	VariantPreCompile: VariantPreCompile
Origin	AUTOSAR_ECUC

#### 5.4.1.5. CanSMDemEventParameterRefs

Parameters included	
Parameter name	Multiplicity
<a href="#">CANSM_E_BUS_OFF</a>	0..1

Parameter Name	CANSM_E_BUS_OFF
Label	CANSM_E_BUS_OFF
Description	Reference to configured DEM event to report bus off errors for this CAN network.  Further notes:  ► Activation: Thrown, if there is a notification of a bus-off event on a CAN controller

	<ul style="list-style-type: none"> <li>▶ Healing: Will be healed, if communication goes on within the configurable timespan of Bus-Off recovery timers <code>CanSMBorTimeL1</code> and <code>CanSMBorTimeL2</code></li> <li>▶ Trigger debounce: None. The error is reported on first occurrence.</li> <li>▶ Rate of diagnostic checks: Checked cyclically within <code>CanSM_MainFunction()</code>.</li> </ul>
<b>Multiplicity</b>	0..1
<b>Type</b>	SYMBOLIC-NAME-REFERENCE
<b>Configuration class</b>	<b>VariantPreCompile:</b> VariantPreCompile
<b>Origin</b>	AUTOSAR_ECUC

#### 5.4.1.6. ReportToDem

Parameters included	
Parameter name	Multiplicity
<a href="#">CanSMBusOffReportToDem</a>	1..1
<a href="#">CanSMBusOffReportToDemDetErrorId</a>	1..1

Parameter Name	CanSMBusOffReportToDem
<b>Label</b>	Bus off recovery state machine production error
<b>Description</b>	<p>Selects the handling of the production error: <i>bus off recovery state machine error</i></p> <ul style="list-style-type: none"> <li>▶ DEM: All errors are reported to the Diagnostics Event Manager (Dem).</li> <li>▶ DET: All errors are reported to the Development Error Tracer (Det) if enabled.</li> <li>▶ DISABLE: Production errors are not reported at all.</li> </ul> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM reduction (code):</b> Setting this parameter to a value of DISABLE reduces the ROM consumption of the module code.</li> <li>▶ <b>Execution time reduction (code):</b> Setting this parameter to a value of DISABLE reduces the execution time of the module code.</li> </ul>
<b>Multiplicity</b>	1..1
<b>Type</b>	ENUMERATION



<b>Default value</b>	DEM
<b>Range</b>	DEM
	DET
	DISABLE
<b>Configuration class</b>	<b>VariantPreCompile:</b> VariantPreCompile
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>CanSMBusOffReportToDemDetErrorId</b>
<b>Label</b>	Bus off recovery state machine Det error ID
<b>Description</b>	<p>If a production error is reported towards the Det, this parameter defines the error id of the production errors CANSM_E_BUS_OFF for all networks.</p> <p>The Det instance id is the ComM channel ID (parameter ComMChannelId of the ComM channel referenced by parameter CanSMComMNetworkHandleRef).</p>
<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER
<b>Default value</b>	128
<b>Range</b>	>=0
	<=255
<b>Configuration class</b>	<b>PreCompile:</b> VariantPreCompile
<b>Origin</b>	Elektrobit Automotive GmbH

#### 5.4.1.7. CanSMGeneral

Parameters included	
Parameter name	Multiplicity
<a href="#">CanSMDevErrorDetect</a>	1..1
<a href="#">CanSMMainFunction-TimePeriod</a>	1..1
<a href="#">CanSMVersionInfoApi</a>	1..1
<a href="#">CanSMChangeBaudrateApi</a>	1..1
<a href="#">CanSMPNSupport</a>	1..1
<a href="#">CanSMSetBaudrateApi</a>	1..1

Parameters included	
<a href="#">CanSMBusDeactivated-BusOff</a>	1..1
<a href="#">CanSMEnhancedBusOffReporting</a>	1..1
<a href="#">CanSMTxTimeoutExceptionApi</a>	1..1

Parameter Name	CanSMDevErrorDetect	
Label	Enable Development Error Detection	
Description	<p>Enables and disables the development error detection and notification mechanism.</p> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM increase (code):</b> Enabling this parameter increases the ROM consumption of the module code.</li> <li>▶ <b>Execution time increase (code):</b> Enabling this parameter increases the execution time of the module code.</li> </ul>	
Multiplicity	1..1	
Type	BOOLEAN	
Default value	true	
Configuration class	VariantPreCompile:	VariantPreCompile
Origin	AUTOSAR_ECUC	

Parameter Name	CanSMMainFunctionTimePeriod	
Label	Main Function Period [s]	
Description	This parameter defines the cycle time of the function <code>CanSM_MainFunction</code> in seconds.	
Multiplicity	1..1	
Type	FLOAT	
Default value	0.02	
Range	<=65.535	
	>=0.001	
Configuration class	VariantPreCompile:	VariantPreCompile
Origin	AUTOSAR_ECUC	

Parameter Name	CanSMVersionInfoApi
Label	Enable Version Info API
Description	<p>Activate/deactivate the version information API (CanSM_GetVersionInfo).</p> <ul style="list-style-type: none"> <li>▶ true: Version information API activated</li> <li>▶ false: Version information API deactivated</li> </ul> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM increase (code):</b> Enabling this parameter increases the ROM consumption of the module code.</li> </ul>
Multiplicity	1..1
Type	BOOLEAN
Default value	false
Configuration class	VariantPreCompile: VariantPreCompile
Origin	AUTOSAR_ECUC

Parameter Name	CanSMChangeBaudrateApi
Description	<p>The support of the Can_ChangeBaudrate API is optional..</p> <ul style="list-style-type: none"> <li>▶ true: Can_ChangeBaudrate API shall be supported</li> <li>▶ false: Can_ChangeBaudrate API is not supported</li> </ul> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM reduction (code):</b> Disabling this parameter decreases the ROM consumption of the module code.</li> </ul> <p><b>This feature is currently not supported.</b></p>
Multiplicity	1..1
Type	BOOLEAN
Default value	false
Configuration class	VariantPreCompile: VariantPreCompile
Origin	AUTOSAR_ECUC

Parameter Name	CanSMPNSupport
Label	Enable Partial Networking
Description	<p>Activate/deactivate the partial networking support.</p> <ul style="list-style-type: none"> <li>▶ true: Partial Networking enabled</li> </ul>

	<p>► false: Partial Networking disabled</p> <p><b>Optimization Effect:</b></p> <p>► <b>ROM reduction (code):</b> Disabling this parameter reduces the ROM consumption of the module code.</p>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPreCompile:</b>	VariantPreCompile
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>CanSMSetBaudrateApi</b>	
<b>Label</b>	Enable API function CanSM_SetBaudrate()	
<b>Description</b>	<p>Activate/deactivate the API function CanSM_SetBaudrate().</p> <p>► true: CanSM_SetBaudrate() enabled</p> <p>► false: CanSM_SetBaudrate() disabled</p> <p><b>Optimization Effect:</b></p> <p>► <b>ROM reduction (code):</b> Disabling this parameter reduces the ROM consumption of the module code.</p>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPreCompile:</b>	VariantPreCompile
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>CanSMBusDeactivatedBusOff</b>	
<b>Label</b>	Enables specific Bus Off handling	
<b>Description</b>	<p>This parameter selects how Bus Off is handled.</p> <p>Effect:</p> <p>► Enabled: Bus Off will trigger No Communication until controller is restarted.</p> <p>► Disabled: Bus Off will trigger Silent Communication (AUTOSAR handling) until controller is restarted.</p>	
<b>Multiplicity</b>	1..1	

<b>Type</b>	BOOLEAN
<b>Default value</b>	false
<b>Configuration class</b>	<b>VariantPreCompile:</b> VariantPreCompile
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>CanSMEnhancedBusOffReporting</b>
<b>Label</b>	Enable enhanced bus-off reporting
<b>Description</b>	<p>Activate/deactivate enhanced bus-off reporting to BswM. Concerning to enhanced bus-off reporting the range of enumeration CanSM_BswMCurrentStateType as defined in chapter 8.2.3 of the CAN State Manager SWS has changed to:</p> <p>Range:</p> <p>CANSM_BSWM_NO_COMMUNICATION CANSM_BSWM_SILENT_COMMUNICATION CANSM_BSWM_FULL_COMMUNICATION CANSM_BSWM_BUS_OFF CANSM_BSWM_CHANGE_BAUDRATE CANSM_BSWM_BUS_OFF_L1 CANSM_BSWM_BUS_OFF_L2</p> <p>If this parameter is enabled and a bus-off event occurs and the bus-off counter is lower than CanSMBorCounterL1ToL2, CanSM reports the value CANSM_BSWM_BUS_OFF_L1 to BswM.</p> <p>If a bus-off event occurs and the bus-off counter is greater than or equal to CanSMBorCounterL1ToL2, CanSM reports the value CANSM_BSWM_BUS_OFF_L2 to BswM.</p> <ul style="list-style-type: none"> <li>▶ true: CanSM reports the values CANSM_BSWM_BUS_OFF_L1 or CANSM_BSWM_BUS_OFF_L2 in case of bus-off.</li> <li>▶ false: CanSM always reports the value CANSM_BSWM_BUS_OFF in case of bus-off (= SWS defined behavior).</li> </ul>
<b>Multiplicity</b>	1..1
<b>Type</b>	BOOLEAN
<b>Default value</b>	false
<b>Configuration class</b>	<b>VariantPreCompile:</b> VariantPreCompile
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>CanSMTxTimeoutExceptionApi</b>
<b>Label</b>	Enable API function CanSM_TxTimeoutException()
<b>Description</b>	Activate/deactivate the API function CanSM_TxTimeoutException().

	<ul style="list-style-type: none"> <li>▶ true: CanSM_TxTimeoutException() enabled</li> <li>▶ false: CanSM_TxTimeoutException() disabled</li> </ul> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM reduction (code):</b> Disabling this parameter reduces the ROM consumption of the module code.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPreCompile:</b>	VariantPreCompile
<b>Origin</b>	Elektrobit Automotive GmbH	

#### 5.4.1.8. CommonPublishedInformation

Parameters included	
Parameter name	Multiplicity
<a href="#">ArMajorVersion</a>	1..1
<a href="#">ArMinorVersion</a>	1..1
<a href="#">ArPatchVersion</a>	1..1
<a href="#">SwMajorVersion</a>	1..1
<a href="#">SwMinorVersion</a>	1..1
<a href="#">SwPatchVersion</a>	1..1
<a href="#">ModuleId</a>	1..1
<a href="#">VendorId</a>	1..1
<a href="#">Release</a>	1..1

Parameter Name	ArMajorVersion
<b>Label</b>	AUTOSAR Major Version
<b>Description</b>	Major version number of AUTOSAR specification on which the appropriate implementation is based on.
<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER_LABEL
<b>Default value</b>	2
<b>Configuration class</b>	<b>PublishedInformation:</b>

<b>Origin</b>	Elektrobit Automotive GmbH
---------------	----------------------------

<b>Parameter Name</b>	<b>ArMinorVersion</b>	
<b>Label</b>	AUTOSAR Minor Version	
<b>Description</b>	Minor version number of AUTOSAR specification on which the appropriate implementation is based on.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER_LABEL	
<b>Default value</b>	2	
<b>Configuration class</b>	<b>PublishedInformation:</b>	
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>ArPatchVersion</b>	
<b>Label</b>	AUTOSAR Patch Version	
<b>Description</b>	Patch level version number of AUTOSAR specification on which the appropriate implementation is based on.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER_LABEL	
<b>Default value</b>	0	
<b>Configuration class</b>	<b>PublishedInformation:</b>	
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>SwMajorVersion</b>	
<b>Label</b>	Software Major Version	
<b>Description</b>	Major version number of the vendor specific implementation of the module.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER_LABEL	
<b>Default value</b>	3	
<b>Configuration class</b>	<b>PublishedInformation:</b>	
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>SwMinorVersion</b>	
<b>Label</b>	Software Minor Version	
<b>Description</b>	Minor version number of the vendor specific implementation of the module. The numbering is vendor specific.	

<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER_LABEL
<b>Default value</b>	6
<b>Configuration class</b>	<b>PublishedInformation:</b>
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>SwPatchVersion</b>
<b>Label</b>	Software Patch Version
<b>Description</b>	Patch level version number of the vendor specific implementation of the module. The numbering is vendor specific.
<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER_LABEL
<b>Default value</b>	12
<b>Configuration class</b>	<b>PublishedInformation:</b>
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>ModuleId</b>
<b>Label</b>	Numeric Module ID
<b>Description</b>	Module ID of this module from Module List
<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER_LABEL
<b>Default value</b>	140
<b>Configuration class</b>	<b>PublishedInformation:</b>
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>VendorId</b>
<b>Label</b>	Vendor ID
<b>Description</b>	Vendor ID of the dedicated implementation of this module according to the AUTOSAR vendor list
<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER_LABEL
<b>Default value</b>	1
<b>Configuration class</b>	<b>PublishedInformation:</b>
<b>Origin</b>	Elektrobit Automotive GmbH



Parameter Name	Release
Label	Release Information
Multiplicity	1..1
Type	STRING_LABEL
Default value	
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

#### 5.4.1.9. PublishedInformation

Parameters included	
Parameter name	Multiplicity
<a href="#">PbcfgMSupport</a>	1..1

Parameter Name	PbcfgMSupport
Label	PbcfgM support
Description	Specifies whether or not the CanSM can use the PbcfgM module for post-build support.
Multiplicity	1..1
Type	BOOLEAN
Default value	false
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

### 5.4.2. Application programming interface (API)

#### 5.4.2.1. Type definitions

##### 5.4.2.1.1. CanSM\_ConfigType

Purpose	Post-build configuration type (no functionality).
---------	---

<b>Type</b>	uint8
<b>Description</b>	Data structure type for the post-build configuration parameters. This is a non-functional data type necessary for the unused parameter of the <a href="#">CanSM_Init()</a> function.

#### 5.4.2.1.2. CanSM\_NetworkModeStateType

<b>Purpose</b>	Definition of the NetworkModeStateType.	
<b>Type</b>	enum	
<b>Constants</b>	CANSM_UNINITED	Network is uninitialized (initial state).
	CANSM_NO_COMMUNICATION	No communication. Wakeup can be detected.
	CANSM_SILENT_COMMUNICATION	No outgoing communication.
	CANSM_FULL_COMMUNICATION	All communication is possible.
<b>Description</b>	This type defines the states of the network mode state machine.	

### 5.4.2.2. Functions

#### 5.4.2.2.1. CanSM\_CheckTransceiverWakeFlagIndication

<b>Purpose</b>	This callback function indicates the CheckTransceiverWakeFlag API process end for the notified CAN Transceiver.	
<b>Synopsis</b>	<pre>void CanSM_CheckTransceiverWake- FlagIndication ( uint8 Transceiver );</pre>	
<b>Service ID</b>	10	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant for different CAN Transceivers	
<b>Parameters (in)</b>	Transceiver	Requested Transceiver

#### 5.4.2.2.2. CanSM\_ClearTrcvWufFlagIndication

<b>Purpose</b>	This callback function shall indicate the CanIf_ClearTrcvWufFlag API process end for the notified CAN Transceiver.	
<b>Synopsis</b>	<pre>void CanSM_ClearTrcvWufFlagIndication ( uint8 Transceiver );</pre>	

<b>Service ID</b>	8	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant for different CAN Transceivers	
<b>Parameters (in)</b>	Transceiver	Requested Transceiver

#### 5.4.2.2.3. CanSM\_ConfirmPnAvailability

<b>Purpose</b>	This callback function indicates that the transceiver is running in PN communication mode.	
<b>Synopsis</b>	<code>void CanSM_ConfirmPnAvailability ( uint8 TransceiverId );</code>	
<b>Service ID</b>	6	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	TransceiverId	CAN transceiver, which was checked for PN availability

#### 5.4.2.2.4. CanSM\_ControllerBusOff

<b>Purpose</b>	This function is called to notify a bus-off event.	
<b>Synopsis</b>	<code>void CanSM_ControllerBusOff ( uint8 ControllerId );</code>	
<b>Service ID</b>	4	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant (only for different CanControllers)	
<b>Parameters (in)</b>	ControllerId	CAN controller, which detected a bus-off event.
<b>Description</b>	This function notifies the CanSM module of a bus-off event on a CAN controller. The bus-off recovery state machine is executed for the corresponding network handle.	

#### 5.4.2.2.5. CanSM\_ControllerModeIndication

<b>Purpose</b>	This callback shall notify the CanSM module about a CAN controller mode change.	
<b>Synopsis</b>	<code>void CanSM_ControllerModeIndication ( uint8 ControllerId , CanIf_ControllerModeType ControllerMode );</code>	
<b>Service ID</b>	7	

<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant (only for different CAN controllers)	
<b>Parameters (in)</b>	ControllerId	CAN controller, whose mode has changed
	ControllerMode	Notified CAN controller mode

#### 5.4.2.2.6. CanSM\_GetCurrentComMode

<b>Purpose</b>	Provide the current communication mode of a CAN network.	
<b>Synopsis</b>	<pre>Std_ReturnType CanSM_GetCurrentComMode ( NetworkHandleType network , ComM_ModeType * ComM_ModePtr );</pre>	
<b>Service ID</b>	3	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	network	Handle of the target network.
<b>Parameters (out)</b>	ComM_ModePtr	Pointer to where to store the current mode.
<b>Return Value</b>	Std_ReturnType	
	E_OK	No Error.
	E_NOT_OK	Getting of current Communication Mode failed.
<b>Description</b>	This service gets the current communication mode of a CAN network.	

#### 5.4.2.2.7. CanSM\_GetVersionInfo

<b>Purpose</b>	Get version information of the CanSM module.	
<b>Synopsis</b>	<pre>void CanSM_GetVersionInfo ( Std_VersionInfoType * VersionInfo );</pre>	
<b>Service ID</b>	1	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (out)</b>	VersionInfo	Pointer to where to store the version information of this module.
<b>Description</b>	This service puts out the version information of this module (module ID, vendor ID, vendor specific version numbers related to BSW00407).	

#### 5.4.2.2.8. CanSM\_Init

<b>Purpose</b>	Initializes the CanSM module.	
<b>Synopsis</b>	<pre>void <b>CanSM_Init</b> ( const CanSM_ConfigType * ConfigPtr );</pre>	
<b>Service ID</b>	0	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Non-Reentrant	
<b>Parameters (in)</b>	ConfigPtr	Pointer to init structure for the post-build configuration parameters of the CanSM. This parameter is ignored because post-build configuration is not supported. Please use NULL_PTR as parameter for the initialization.
<b>Description</b>	This function initializes the CanSM module. It is the first function called in CanSM.	

#### 5.4.2.2.9. CanSM\_MainFunction

<b>Purpose</b>	This function handles asynchronous events, such as mode changes.	
<b>Synopsis</b>	<pre>void <b>CanSM_MainFunction</b> ( void );</pre>	
<b>Service ID</b>	5	
<b>Production Errors</b>	►	<a href="#">CANSMEBUSOFF</a> : thrown, if there is a notification of a bus-off event on a CAN controller
<b>Description</b>	This is the main function of the CanSM. It handles asynchronous events, such as mode changes. It is called cyclically with a fixed period from the BSW Scheduler.	

#### 5.4.2.2.10. CanSM\_RequestComMode

<b>Purpose</b>	Request a change of the communication mode of a CAN network.	
<b>Synopsis</b>	<pre>Std_ReturnType <b>CanSM_RequestComMode</b> ( NetworkHandleType network , ComM_ModeType ComM_Mode );</pre>	
<b>Service ID</b>	2	
<b>Sync/Async</b>	Asynchronous	

<b>Reentrancy</b>	Reentrant (only for different network handles)	
<b>Parameters (in)</b>	network	Handle of the target network.
	ComM_Mode	Requested communication mode.
<b>Return Value</b>	Std_ReturnType	
	E_OK	No Errors.
	E_NOT_OK	Requesting of Communication Mode failed.
<b>Description</b>	This service changes the communication mode of a CAN network to the requested one.	

#### 5.4.2.2.11. CanSM\_SetBaudrate

<b>Purpose</b>	Requests change of baudrate for indicated network.	
<b>Synopsis</b>	<pre>Std_ReturnType CanSM_SetBaudrate ( NetworkHandleType network , uint16 BaudRateConfigID );</pre>	
<b>Service ID</b>	13	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Non-Reentrant for same network	
<b>Parameters (in)</b>	network	Handle of destined communication network for request.
	BaudRateConfigID	References a baud rate configuration by ID (see CanControllerBaudRateConfigID).
<b>Return Value</b>	Std_ReturnType	
	E_OK	Service request accepted, setting of (new) baud rate.
	E_NOT_OK	Service request not accepted.
<b>Description</b>	This service shall start an asynchronous process to change the baud rate for the configured CAN controllers of a certain CAN network. Depending on necessary baud rate modifications the controllers might have to reset.	

#### 5.4.2.2.12. CanSM\_TransceiverModeIndication

<b>Purpose</b>	This callback shall notify the CanSM module about a CAN transceiver mode change.
----------------	--

<b>Synopsis</b>	<pre>void CanSM_TransceiverModeIndication ( uint8 TransceiverId , CanTrcv_TrcevModeType TransceiverMode );</pre>	
<b>Service ID</b>	9	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant for different CAN Transceivers	
<b>Parameters (in)</b>	TransceiverId	CAN transceiver, whose mode has changed
	TransceiverMode	Notified CAN transceiver mode

#### 5.4.2.2.13. CanSM\_TxTimeoutException

<b>Purpose</b>	Request recovery from Tx timeout exception.	
<b>Synopsis</b>	<pre>void CanSM_TxTimeoutException ( NetworkHandleType Channel );</pre>	
<b>Service ID</b>	11	
<b>Sync/Async</b>	Asynchronous	
<b>Reentrancy</b>	Reentrant (only for different channels)	
<b>Parameters (in)</b>	Channel	Affected CAN network
<b>Description</b>	<p>This function notifies the CanSM module, that the CanNm has detected a tx timeout exception for the affected partial CAN network, which shall be recovered by the CanSM module with a transition to no communication and back to the requested communication mode.</p>	

### 5.4.3. Integration notes

#### 5.4.3.1. Exclusive areas

This section describes the exclusive areas used by the CanSM module.

##### 5.4.3.1.1. SCHM\_CANSM\_EXCLUSIVE\_AREA\_0

<b>Protected data structures</b>	All shared data that shall be protected from mutual access.
----------------------------------	---



<b>Recommended locking mechanism</b>	<p>The locking mechanism for this exclusive area can be disabled if all of the following conditions are true:</p> <ul style="list-style-type: none"><li>▶ ComM_MainFunction() does not interrupt CanSM_MainFunction() (and vice versa)</li><li>▶ Dcm_MainFunction() does not interrupt CanSM_MainFunction() (and vice versa)</li><li>▶ Can driver Mainfunction does not interrupt CanSM_MainFunction() (and vice versa)</li><li>▶ CanTrcv driver Mainfunction does not interrupt CanSM_MainFunction() (and vice versa)</li></ul> <p>If the condition listed above does not apply, the exclusive area shall be protected by a locking mechanism. The options for locking are described in the EB tresos AutoCore Generic documentation. Refer to the section Mapping exclusive areas in the basic software modules in the Integration notes section for details.</p>
--------------------------------------	---

5.4.3.2. Production errors

<a href="#">CANSM_E_BUS_OFF</a>	▶ <a href="#">CanSM_MainFunction</a>
---------------------------------	--------------------------------------

5.4.3.3. Memory mapping

General information about memory mapping is provided in the EB tresos AutoCore Generic documentation. Refer to the section Memory mapping and compiler abstraction in the Integration notes section for details.

The following table provides the list of sections that may be mapped for this module:

Memory section
VAR_INIT_UNSPECIFIED
VAR_INIT_8
VAR_NO_INIT_8
VAR_NO_INIT_UNSPECIFIED
CODE



CONFIG_DATA_8
CONFIG_DATA_UNSPECIFIED

#### 5.4.3.4. Integration requirements

**WARNING**



**Integration requirements list is not exhaustive**

The following list of integration requirements helps you to integrate your product. However, this list is not exhaustive. You also require information from the user's guide, release notes, and EB tresos AutoCore known issues to successfully integrate your product.

##### 5.4.3.4.1. lim.CanSM.EB\_INTREQ\_CanSM\_0001

<b>Description</b>	The CanSM state machine is incompatible to a CanTrcv strictly implemented according to the requirements of the CanTrcv SWS for the purpose of making a transition to state COMM_NO_COMMUNICATION if partial network is enabled.
<b>Rationale</b>	During a transition towards state COMM_NO_COMMUNICATION (refer to Figure 7-3) the CanSM calls CanIf_CheckTrcvWakeFlag [CANS458] and waits for the callback function CanSM_CheckTransceiverWakeFlagIndication [CANS460]. Contrary to the requirements in the CanSM SWS the CanTrcv SWS [CanTrcv224] demands the callback only for the case that a wakeup was detected. To ensure correct functionality the CanTrcv must invoke CanIf_CheckTrcvWakeFlagIndication in any case.

## 5.5. CanTp

### 5.5.1. Configuration parameters

Containers included		
Container name	Multiplicity	Description
<a href="#">CanTpDefensiveProgramming</a>	1..1	<b>Label:</b> Defensive Programming Options

Containers included		
		Parameters for defensive programming
<a href="#">CanTpGeneral</a>	1..1	This container contains the general configuration parameters of the CanTp module.
<a href="#">CanTpJumpTable</a>	1..1	This container contains the jumptable related configuration parameters of the CanTp module.
<a href="#">CanTpConfig</a>	1..1	This container contains the configuration parameters and sub containers of the AUTOSAR CanTp module. This container is a MultipleConfigurationContainer, i.e. this container and its sub-containers exist once per configuration set.
<a href="#">CommonPublishedInformation</a>	1..1	<b>Label:</b> Common Published Information Common container, aggregated by all modules. It contains published information about vendor and versions.
<a href="#">PublishedInformation</a>	1..1	<b>Label:</b> EB Published Information Additional published parameters not covered by CommonPublishedInformation container.

Parameters included	
Parameter name	Multiplicity
<a href="#">IMPLEMENTATION_CONFIG_VARIANT</a>	1..1

Parameter Name	IMPLEMENTATION_CONFIG_VARIANT
<b>Label</b>	Config Variant
<b>Multiplicity</b>	1..1
<b>Type</b>	ENUMERATION
<b>Default value</b>	VariantPostBuild
<b>Range</b>	VariantPostBuild

### 5.5.1.1. CanTpDefensiveProgramming

Parameters included	
Parameter name	Multiplicity
<a href="#">CanTpDefProgEnabled</a>	1..1

Parameters included	
<a href="#">CanTpPrecondAssertEnabled</a>	1..1
<a href="#">CanTpPostcondAssertEnabled</a>	1..1
<a href="#">CanTpStaticAssertEnabled</a>	1..1
<a href="#">CanTpUnreachAssertEnabled</a>	1..1
<a href="#">CanTpInvariantAssertEnabled</a>	1..1

Parameter Name	CanTpDefProgEnabled
Label	Enable Defensive Programming
Description	<p>Enables or disables the defensive programming feature for the module CanTp.</p> <p>Note: This feature is dependent on the use of the development error detection module. To use the defensive programming feature, proceed as follows:</p> <ol style="list-style-type: none"> <li>1. Enable development error detection</li> <li>2. Enable defensive programming</li> <li>3. Enable assertions as required</li> </ol>
Multiplicity	1..1
Type	BOOLEAN
Default value	false
Configuration class	VariantPostBuild: VariantPostBuild
Origin	Elektrobit Automotive GmbH

Parameter Name	CanTpPrecondAssertEnabled
Label	Enable Precondition Assertions
Description	<p>Enables handling of precondition assertion checks reported from the module CanTp.</p> <p>Dependency on parameter(s):</p> <ul style="list-style-type: none"> <li>► Enable Development Error Detection (CanTpDevErrorDetect): must be enabled</li> <li>► Enable Defensive Programming (CanTpDefProgEnabled): must be enabled</li> </ul>

<b>Multiplicity</b>	1..1
<b>Type</b>	BOOLEAN
<b>Default value</b>	false
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>CanTpPostcondAssertEnabled</b>
<b>Label</b>	Enable Postcondition Assertions
<b>Description</b>	<p>Enables handling of postcondition assertion checks reported from the module CanTp.</p> <p>Dependency on parameter(s):</p> <ul style="list-style-type: none"> <li>▶ Enable Development Error Detection (CanTpDevErrorDetect): must be enabled</li> <li>▶ Enable Defensive Programming (CanTpDefProgEnabled): must be enabled</li> </ul>
<b>Multiplicity</b>	1..1
<b>Type</b>	BOOLEAN
<b>Default value</b>	false
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>CanTpStaticAssertEnabled</b>
<b>Label</b>	Enable Static Assertions
<b>Description</b>	<p>Enables handling of static assertion checks reported from the module CanTp.</p> <p>Dependency on parameter(s):</p> <ul style="list-style-type: none"> <li>▶ Enable Development Error Detection (CanTpDevErrorDetect): must be enabled</li> <li>▶ Enable Defensive Programming (CanTpDefProgEnabled): must be enabled</li> </ul>
<b>Multiplicity</b>	1..1
<b>Type</b>	BOOLEAN
<b>Default value</b>	false
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH

Parameter Name	CanTpUnreachAssertEnabled
Label	Enable Unreachable Code Assertions
Description	<p>Enables handling of unreachable code assertion checks reported from the module CanTp.</p> <p>Dependency on parameter(s):</p> <ul style="list-style-type: none"> <li>▶ Enable Development Error Detection (CanTpDevErrorDetect): must be enabled</li> <li>▶ Enable Defensive Programming (CanTpDefProgEnabled): must be enabled</li> </ul>
Multiplicity	1..1
Type	BOOLEAN
Default value	false
Configuration class	VariantPostBuild: VariantPostBuild
Origin	Elektrobit Automotive GmbH

Parameter Name	CanTpInvariantAssertEnabled
Label	Enable Invariant Assertions
Description	<p>Enables handling of invariant assertion checks reported from functions of the module CanTp.</p> <p>Dependency on parameter(s):</p> <ul style="list-style-type: none"> <li>▶ Enable Development Error Detection (CanTpDevErrorDetect): must be enabled</li> <li>▶ Enable Defensive Programming (CanTpDefProgEnabled): must be enabled</li> </ul>
Multiplicity	1..1
Type	BOOLEAN
Default value	false
Configuration class	VariantPostBuild: VariantPostBuild
Origin	Elektrobit Automotive GmbH

### 5.5.1.2. CanTpGeneral

Parameters included	
Parameter name	Multiplicity

Parameters included	
<a href="#">CanTpChangeParameterApi</a>	1..1
<a href="#">CanTpDevErrorDetect</a>	1..1
<a href="#">CanTpPaddingByte</a>	1..1
<a href="#">CanTpReadParameterApi</a>	1..1
<a href="#">CanTpVersionInfoApi</a>	1..1
<a href="#">CanTpPaddingByte-CanFD</a>	0..1
<a href="#">CanTpRelocatablePbcfgEnable</a>	1..1
<a href="#">CanTpDynamicNSaEnabled</a>	1..1
<a href="#">CanTpCancelReceiveApi</a>	1..1
<a href="#">CanTpCancelTransmitApi</a>	1..1
<a href="#">CanTpGptUsageEnable</a>	1..1
<a href="#">CanTpMaxParallelTxChannels</a>	0..1
<a href="#">CanTpMaxParallelRxChannels</a>	0..1
<a href="#">CanTpMaxTxChannels</a>	1..1
<a href="#">CanTpMaxRxChannels</a>	1..1
<a href="#">CanTpMaxRxNSdus</a>	1..1
<a href="#">CanTpMaxTxNSdus</a>	1..1
<a href="#">CanTpMaxFcPdus</a>	1..1
<a href="#">CanTpFlexibleDataRateSupport</a>	1..1
<a href="#">CanTpNbrWaitRepeatedSupport</a>	1..1

Parameter Name	CanTpChangeParameterApi
Description	This parameter, if set to true, enables the CanTp_ChangeParameter API for this Module.

	<b>Optimization Effect:</b> <ul style="list-style-type: none"> <li>▶ <b>ROM reduction (code):</b> Disabling this parameter reduces the ROM consumption of the module code.</li> <li>▶ <b>RAM reduction (config):</b> Disabling this parameter reduces the RAM consumption of the module configuration.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

Parameter Name	CanTpDevErrorDetect	
<b>Description</b>	Switches the Development Error Detection and Notification ON or OFF.  <b>Optimization Effect:</b> <ul style="list-style-type: none"> <li>▶ <b>ROM increase (code):</b> Enabling this parameter increases the ROM consumption of the module code.</li> <li>▶ <b>Execution time increase (code):</b> Enabling this parameter increases the execution time of the module code.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	true	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

Parameter Name	CanTpPaddingByte	
<b>Description</b>	Used for the initialization of unused bytes with a certain value, for CAN 2.0 frames and CAN FD frames (if CANTP_PADDING_BYTE_CANFD is not configured).	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	
<b>Default value</b>	0	
<b>Range</b>	<=255	
	>=0	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild

Origin	AUTOSAR_ECUC
--------	--------------

Parameter Name	CanTpReadParameterApi	
Description	<p>This parameter, if set to true, enables the CanTp_ReadParameter API for this Module.</p> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM reduction (code):</b> Disabling this parameter reduces the ROM consumption of the module code.</li> <li>▶ <b>RAM reduction (config):</b> Disabling this parameter reduces the RAM consumption of the module configuration.</li> </ul>	
Multiplicity	1..1	
Type	BOOLEAN	
Default value	false	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

Parameter Name	CanTpVersionInfoApi	
Description	<p>The function CanTp_GetVersionInfo is configurable (On/Off) by this configuration parameter.</p> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM increase (code):</b> Enabling this parameter increases the ROM consumption of the module code.</li> </ul>	
Multiplicity	1..1	
Type	BOOLEAN	
Default value	false	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

Parameter Name	CanTpPaddingByteCanFD
Description	Used for the initialization of unused bytes with a certain value, for CAN FD frames.
Multiplicity	0..1
Type	INTEGER
Range	<=255



	>=0	
<b>Configuration class</b>	<b>PreCompile:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>CanTpRelocatablePbcfgEnable</b>	
<b>Description</b>	<p>Enables/disable support for relocatable postbuild configuration.</p> <ul style="list-style-type: none"> <li>▶ True: Postbuild configuration relocatable in memory.</li> <li>▶ False: Postbuild configuration not relocatable in memory.</li> </ul> <p><b>Note:</b> If PbcfgM support is enabled for CanTp, this feature is managed by by the parameter PbcfgMRelocatableCfgEnable.</p>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	true	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>CanTpDynamicNSaEnabled</b>	
<b>Description</b>	<p>Enables or disables the support for setting of the N_SA values for Rx and Tx N-SDUs during runtime.</p> <p>If the parameter is disabled, normal Autosar behaviour is activated, which means, that the N_SA parameter is defined during the configuration and cannot be changed.</p> <p>If it is enabled, the N_SA values of each Rx and Tx N-SDU can be changed via CanTp_SetNSa() during runtime. In this case, the current value can be read via CanTp_GetNSa().</p> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>RAM increase (config):</b> Enabling this parameter increases the RAM consumption of the module configuration.</li> <li>▶ <b>ROM increase (code):</b> Enabling this parameter increases the ROM consumption of the module code.</li> <li>▶ <b>Execution time increase (code):</b> Enabling this parameter increases the execution time of the module code.</li> </ul>	
<b>Multiplicity</b>	1..1	

Type	BOOLEAN
Default value	false
Configuration class	VariantPostBuild: VariantPostBuild
Origin	Elektrobit Automotive GmbH

Parameter Name	CanTpCancelReceiveApi
Description	Preprocessor switch for enabling the reception cancellation API function.  <b>Optimization Effect:</b> <ul style="list-style-type: none"> <li>▶ <b>ROM increase (code):</b> Enabling this parameter increases the ROM consumption of the module code.</li> <li>▶ <b>Execution time increase (code):</b> Enabling this parameter increases the execution time of the module code.</li> </ul>
Multiplicity	1..1
Type	BOOLEAN
Default value	false
Configuration class	VariantPostBuild: VariantPostBuild
Origin	Elektrobit Automotive GmbH

Parameter Name	CanTpCancelTransmitApi
Description	Preprocessor switch for enabling the transmit cancellation API function.  <b>Optimization Effect:</b> <ul style="list-style-type: none"> <li>▶ <b>ROM increase (code):</b> Enabling this parameter increases the ROM consumption of the module code.</li> <li>▶ <b>Execution time increase (code):</b> Enabling this parameter increases the execution time of the module code.</li> </ul>
Multiplicity	1..1
Type	BOOLEAN
Default value	false
Configuration class	VariantPostBuild: VariantPostBuild
Origin	Elektrobit Automotive GmbH

Parameter Name	CanTpGptUsageEnable
Description	Preprocessor switch to enable the general purpose timer instead of the main function period for timeout handling of the channels.

	<b>Optimization Effect:</b>	
	► <b>ROM reduction (code):</b> Disabling this parameter reduces the ROM consumption of the module code.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>CanTpMaxParallelTxChannels</b>	
<b>Description</b>	Limits the total number of parallel transmit channels.	
<b>Multiplicity</b>	0..1	
<b>Type</b>	INTEGER	
<b>Configuration class</b>	<b>PreCompile:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>CanTpMaxParallelRxChannels</b>	
<b>Description</b>	Limits the total number of parallel receive channels.	
<b>Multiplicity</b>	0..1	
<b>Type</b>	INTEGER	
<b>Configuration class</b>	<b>PreCompile:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>CanTpMaxTxChannels</b>	
<b>Description</b>	Limits the total number of transmit channels.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	
<b>Default value</b>	10	
<b>Range</b>	<=32767	
	>=1	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>CanTpMaxRxChannels</b>	
-----------------------	---------------------------	--

<b>Description</b>	Limits the total number of receive channels.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	
<b>Default value</b>	10	
<b>Range</b>	<=32767	
	>=1	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>CanTpMaxRxNSdus</b>	
<b>Description</b>	Limits the total number of RX-PDUs.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	
<b>Default value</b>	10	
<b>Range</b>	<=32767	
	>=1	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>CanTpMaxTxNSdus</b>	
<b>Description</b>	Limits the total number of TX-PDUs.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	
<b>Default value</b>	10	
<b>Range</b>	<=32767	
	>=1	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>CanTpMaxFcPdus</b>	
<b>Description</b>	Limits the total number of flow control PDUs.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	

<b>Default value</b>	10
<b>Range</b>	<=32767
	>=1
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>CanTpFlexibleDataRateSupport</b>
<b>Description</b>	<p>Enable/Disable support for CAN FD frames up to 64 byte.</p> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>► <b>RAM reduction (code):</b> Disabling this parameter reduces the RAM consumption of the module code.</li> </ul>
<b>Multiplicity</b>	1..1
<b>Type</b>	BOOLEAN
<b>Default value</b>	false
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild

<b>Parameter Name</b>	<b>CanTpNbrWaitRepeatedSupport</b>
<b>Description</b>	<p>Enable/Disable support of different timeout values for repeated FC WAIT PDUs.</p> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>► <b>RAM reduction (code):</b> Disabling this parameter reduces the RAM consumption of the module code.</li> </ul>
<b>Multiplicity</b>	1..1
<b>Type</b>	BOOLEAN
<b>Default value</b>	false
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH

### 5.5.1.3. CanTpJumpTable

<b>Parameters included</b>	
<b>Parameter name</b>	<b>Multiplicity</b>

Parameters included	
<a href="#">CanTpJumpTableMode</a>	1..1
<a href="#">CanTpUseSchMMacros</a>	1..1
<a href="#">CanTpUseWrapperMacros</a>	1..1
<a href="#">CanTpJumpTableAddress</a>	1..1
<a href="#">CanTpJumpTableIncludeFile</a>	0..1

Parameter Name	CanTpJumpTableMode
<b>Description</b>	<p>Switches the jump table support ON/OFF and defines the jump table mode if enabled.</p> <ul style="list-style-type: none"> <li>▶ OFF: Jump table support is off.</li> <li>▶ SERVER: Jump table support is enabled and the module acts as jump table server (which means it provides all functionality).</li> <li>▶ CLIENT: Jump table support is enabled and the module acts as jump table client (it provides the means to call CanTp server APIs).</li> </ul> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>▶ <b>ROM increase (config):</b> Enabling this parameter increases the ROM consumption of the module configuration.</li> <li>▶ <b>RAM increase (config):</b> Enabling this parameter increases the RAM consumption of the module configuration.</li> <li>▶ <b>ROM reduction (code):</b> Setting this parameter to a value of SERVER for the bootloader and CLIENT for the application (or vice versa) reduces the ROM consumption of the module code compared to disabling this parameter for the application and the bootloader.</li> <li>▶ <b>Execution time increase (code):</b> Enabling this parameter increases the execution time of the module code.</li> </ul>
<b>Multiplicity</b>	1..1
<b>Type</b>	ENUMERATION
<b>Default value</b>	OFF
<b>Range</b>	OFF
	SERVER
	CLIENT

<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

Parameter Name	CanTpUseSchMMacros
Description	<p>Defines if the CanTp uses SchM macros or adds the SchM functions to its exit jumtable.</p> <ul style="list-style-type: none"><li>▶ True: The CanTp uses SchM macros.</li><li>▶ False: The CanTp adds SchM function pointers to the exit jumtable.</li></ul> <p>This parameter is only used if jump table support is enabled.</p> <p><b>Please make sure, that this parameter is configured equal for the jump table server and all associated clients.</b></p> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"><li>▶ <b>ROM reduction (config):</b> Enabling this parameter reduces the ROM consumption of the module configuration.</li><li>▶ <b>ROM reduction (code):</b> Enabling this parameter reduces the ROM consumption of the module code.</li><li>▶ <b>Execution time reduction (code):</b> Enabling this parameter reduces the execution time of the module code.</li></ul>
Multiplicity	1..1
Type	BOOLEAN
Default value	false
Configuration class	<div>VariantPostBuild:VariantPostBuild</div>
Origin	Elektrobit Automotive GmbH

Parameter Name	CanTpUseWrapperMacros
<b>Description</b>	<p>Defines if the CanTp provides wrapper functions or macros for accessing the API functions via the entry jumtable. The names of those wrapper functions/macros are those of the original API functions.</p> <ul style="list-style-type: none"> <li>▶ True: Wrapper macros are defined.</li> <li>▶ False: Wrapper functions are defined.</li> </ul> <p>This parameter is only used if CanTpJumpTableMode is set to CLIENT.</p> <p><b>Optimization Effect:</b></p>

	<ul style="list-style-type: none"> <li>► <b>ROM reduction (config):</b> Enabling this parameter reduces the ROM consumption of the module configuration.</li> <li>► <b>ROM reduction (code):</b> Enabling this parameter reduces the ROM consumption of the module code.</li> <li>► <b>Execution time reduction (code):</b> Enabling this parameter reduces the execution time of the module code.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	false	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>CanTpJumpTableAddress</b>	
<b>Description</b>	<p>This parameter defines the base address of the entry jumtable. The entry jumtable is the jumtable, via which an application can access the CanTp API functions.</p> <p>This parameter is only used if CanTpJumpTableMode is set to CLIENT.</p> <p><b>Please note, that the value of this parameter is directly written to the C code and must therefore be a correct symbol or address for being compilable.</b></p>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	STRING	
<b>Default value</b>	0x0	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>CanTpJumpTableIncludeFile</b>	
<b>Description</b>	<p>This parameter defines the name of the include file that shall be included, if a symbol is used for parameter CanTpJumpTableAddress.</p> <p><b>Please enable this parameter only if CanTpJumpTableAddress is set to a symbol. The named include file must then provide the symbol declaration.</b></p>	
<b>Multiplicity</b>	0..1	
<b>Type</b>	STRING	
<b>Default value</b>		
<b>Configuration class</b>	<b>PreCompile:</b>	VariantPostBuild



<b>Origin</b>	Elektrobit Automotive GmbH
---------------	----------------------------

#### 5.5.1.4. CanTpConfig

Containers included		
Container name	Multiplicity	Description
<a href="#">CanTpChannel</a>	1..n	This container contains the configuration parameters of the CanTp channel.

Parameters included	
Parameter name	Multiplicity
<a href="#">CanTpMainFunctionPeriod</a>	1..1

Parameter Name	CanTpMainFunctionPeriod	
<b>Description</b>	Allow to configure the time for the MainFunction (as float in seconds). Please note: This period shall be the same as call cycle time of the periodic task were CanTp Main function is called.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	FLOAT	
<b>Default value</b>	0.005	
<b>Range</b>	<=0.255	
	>=0.0001	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

#### 5.5.1.5. CanTpChannel

Containers included		
Container name	Multiplicity	Description
<a href="#">CanTpRxNSdu</a>	0..n	The following parameters need to be configured for each CAN N-SDU that the CanTp module receives via the CanTpChannel.

Containers included		
<a href="#">CanTpTxNSdu</a>	0..n	The following parameters need to be configured for each CAN N-SDU that the CanTp module transmits via the CanTpChannel.

Parameters included	
Parameter name	Multiplicity
<a href="#">CanTpChannelMode</a>	1..1
<a href="#">CanTpSTminTime-outHandling</a>	1..1
<a href="#">CanTpGptChannelId</a>	1..1
<a href="#">CanTpGptChannelResolution</a>	1..1
<a href="#">CanTpGptChannelCallbackName</a>	1..1

Parameter Name	CanTpChannelMode	
Description	<p>The CAN Transport Layer supports half and full duplex channel modes.</p> <p><b>Optimization Effect:</b></p> <ul style="list-style-type: none"> <li>► <b>ROM reduction (config):</b> Choosing the value CANTP_MODE_HALF_DUPLEX for this parameter reduces the ROM consumption of the module configuration.</li> <li>► <b>RAM reduction (config):</b> Choosing the value CANTP_MODE_HALF_DUPLEX for this parameter reduces the RAM consumption of the module.</li> </ul>	
Multiplicity	1..1	
Type	ENUMERATION	
Default value	CANTP_MODE_HALF_DUPLEX	
Range	CANTP_MODE_FULL_DUPLEX CANTP_MODE_HALF_DUPLEX	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

Parameter Name	CanTpSTminTimeoutHandling
Description	Decides whether waiting for STmin timing is done via the GPT or from the CanTp_MainFunction.

	<b>Optimization Effect:</b> <ul style="list-style-type: none"> <li>▶ <b>ROM increase (config):</b> Setting this parameter to Gpt increases the ROM consumption of the module configuration.</li> <li>▶ <b>ROM increase (code):</b> Setting this parameter to Gpt increases the ROM consumption of the module code.</li> <li>▶ <b>Execution time increase (code):</b> Setting this parameter to Gpt increases the execution time of the module code.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	ENUMERATION	
<b>Default value</b>	CanTpMainFunction	
<b>Range</b>	Gpt	
	CanTpMainFunction	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>CanTpGptChannelId</b>	
<b>Description</b>	Identifier/Channel Handle of the GPT timer to be used for this channel.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	STRING	
<b>Configuration class</b>	<b>PostBuild:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>CanTpGptChannelResolution</b>	
<b>Description</b>	The resolution of the associated GPT channel (in ns per tick).	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	
<b>Range</b>	<=1000000000	
	>0	
<b>Configuration class</b>	<b>PostBuild:</b>	VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH	

<b>Parameter Name</b>	<b>CanTpGptChannelCallbackName</b>	
<b>Description</b>	Identifier of the GPT callback routine for this channel.	
	An appropriate callback function with this name will be created by the CanTp.	

<b>Multiplicity</b>	1..1
<b>Type</b>	STRING
<b>Configuration class</b>	<b>PostBuild:</b> VariantPostBuild
<b>Origin</b>	Elektrobit Automotive GmbH

### 5.5.1.6. CanTpRxNSdu

Containers included		
Container name	Multiplicity	Description
<a href="#">CanTpNAe</a>	1..1	Contains the parameters needed to configure each Rx N-SDU with CanTpRxAddressingFormat set to CANTP_MIXED.
<a href="#">CanTpNSa</a>	1..1	Contains the parameters needed to configure each Rx N-SDU with CanTpRxAddressingFormat set to CANTP_EXTENDED.
<a href="#">CanTpNTa</a>	1..1	The following parameters need to be configured for each RxNsdu with the CanTpRxAddressingFormat set to CANTP_EXTENDED.
<a href="#">CanTpRxNPdu</a>	1..1	Used for grouping of the ID of a PDU and the Reference to a PDU.
<a href="#">CanTpTxFcNPdu</a>	1..1	Used for grouping of the ID of a PDU and the reference to a PDU.

Parameters included	
Parameter name	Multiplicity
<a href="#">CanTpBs</a>	1..1
<a href="#">CanTpNar</a>	1..1
<a href="#">CanTpNbr</a>	1..1
<a href="#">CanTpNbrWaitRepeated</a>	0..1
<a href="#">CanTpNcr</a>	1..1
<a href="#">CanTpRxAddressingFormat</a>	1..1
<a href="#">CanTpRxDI</a>	1..1
<a href="#">CanTpRxNSduId</a>	1..1
<a href="#">CanTpRxPaddingActivation</a>	0..1

Parameters included	
<a href="#">CanTpRxTaType</a>	1..1
<a href="#">CanTpRxWftMax</a>	1..1
<a href="#">CanTpSTmin</a>	1..1
<a href="#">CanTpRxNSduRef</a>	1..1

Parameter Name	CanTpBs
Description	<p>Sets the maximum number of N-PDUs the CanTp receiver allows the sender to send, before waiting for an authorization to continue transmission of the following N-PDUs. For further details on this parameter value see ISO 15765-2 specification.</p> <p><b>Note:</b> For reasons of buffer length, the CAN Transport Layer can adapt the BS value within the limit of this maximum BS.</p>
Multiplicity	1..1
Type	INTEGER
Default value	16
Range	<div>&lt;=255</div> <div>&gt;=0</div>
Configuration class	<div>PostBuild:</div> <div>VariantPostBuild</div>
Origin	AUTOSAR_ECUC

Parameter Name	CanTpNar
Description	Value in seconds of the N_Ar timeout. N_Ar is the time for transmission of a CAN frame (any N_PDU) on the receiver side.
Multiplicity	1..1
Type	FLOAT
Default value	0.1
Configuration class	<div>PostBuild:</div> <div>VariantPostBuild</div>
Origin	AUTOSAR_ECUC

Parameter Name	CanTpNbr
Description	Value in seconds of the performance requirement for (N_Br + N_Ar). N_Br is the elapsed time between the receiving indication of a FF or CF or the transmit confirmation of a FC, until the transmit request of the next FC.

	<b>Note:</b> N_Br is only respected when sending FC(WT) frames, other flow control status (CTS, OVFLW) are sent at once when their conditions are met.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	FLOAT	
<b>Default value</b>	0.1	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

Parameter Name	CanTpNbrWaitRepeated	
<b>Description</b>	Vendor specific configuration parameter for handling of dedicated N_Br timeout values for repeated FC WAIT PDUs. Value in seconds of the performance requirement for(N_Br_WT + N_Ar). N_Br_WT is the elapsed time until the next Flow Control transmission when sending subsequent FC WAIT PDUs.  <b>Note:</b> N_Br_WT is only respected when sending FC(WT) frames, starting with the second FC(WT).	
<b>Multiplicity</b>	0..1	
<b>Type</b>	FLOAT	
<b>Default value</b>	0.0	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

Parameter Name	CanTpNcr	
<b>Description</b>	Value in seconds of the N_Cr timeout. N_Cr is the time until reception of the next Consecutive Frame N_PDU is expected.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	FLOAT	
<b>Default value</b>	1.0	
<b>Configuration class</b>	<b>PostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

Parameter Name	CanTpRxAddressingFormat	
<b>Description</b>	Declares which communication addressing format is supported for this Rx N-SDU.  Enum values:  ► CANTP_STANDARD: Use normal addressing format.	

	<ul style="list-style-type: none"> <li>▶ CANTP_EXTENDED: Use extended addressing format.</li> <li>▶ CANTP_MIXED: Use mixed addressing format.</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	ENUMERATION	
<b>Default value</b>	CANTP_STANDARD	
<b>Range</b>	CANTP_EXTENDED	
	CANTP_MIXED	
	CANTP_STANDARD	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanTpRxDI</b>	
<b>Description</b>	<p><b>This parameter has been deprecate according to AUTOSAR RFC53101.</b></p> <p>Data Length Code of this RxNsdu. In case of variable message length, this value indicates the minimum data length.</p> <p>Depending on SF or FF N-SDU the value will be limited to 7 (6 for an extended addressing format) and 4095 respectively.</p>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	
<b>Default value</b>	1	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanTpRxNSduld</b>	
<b>Description</b>	Unique identifier used by the upper layer to call CanTp_CancelReceive, CanTp_ChangeParameter and CanTp_ReadParameter.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanTpRxPaddingActivation</b>	
<b>Description</b>	Defines if the receive frame uses padding or not.	

	<p>Definition of enumeration values:</p> <ul style="list-style-type: none"> <li>▶ CANTP_OFF: The transmit N-PDU does not use padding for SF, CF and the last CF. (N-PDU length is dynamic)</li> <li>▶ CANTP_ON: Enabled mandatory padding to 8 bytes for CAN 2.0 PDUs only (SF, FC and last CF).</li> <li>▶ CANTP_ON_CAN_CAN_FD: Enable mandatory padding to 8 bytes for CAN 2.0 PDUs and 64 bytes for CAN FD PDUs</li> </ul>	
<b>Multiplicity</b>	0..1	
<b>Type</b>	ENUMERATION	
<b>Default value</b>	CANTP_ON	
<b>Range</b>	CANTP_OFF	
	CANTP_ON	
	CANTP_ON_CAN_CAN_FD	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanTpRxTaType</b>	
<b>Description</b>	Declares the communication type of this Rx N-SDU.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	ENUMERATION	
<b>Default value</b>	CANTP_PHYSICAL	
<b>Range</b>	CANTP_FUNCTIONAL	
	CANTP_PHYSICAL	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanTpRxWftMax</b>	
<b>Description</b>	<p>This parameter indicates how many Flow Control wait N-PDUs can be consecutively transmitted by the receiver. It is local to the node and is not transmitted inside the FC protocol data unit.</p>	
	<p>CanTpRxWftMax is used to avoid sender nodes being potentially hooked-up in case of a temporarily reception inability on the part of the receiver nodes, whereby the sender could be waiting continuously.</p>	
<b>Multiplicity</b>	1..1	



<b>Type</b>	INTEGER	
<b>Default value</b>	4	
<b>Range</b>	<=255	
	>=0	
<b>Configuration class</b>	<b>PostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanTpSTmin</b>	
<b>Description</b>	Sets the duration of the minimum time (in seconds) the CanTp sender shall wait between the transmissions of two CF N-PDUs.  For further details on this parameter value see ISO 15765-2 specification.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	FLOAT	
<b>Default value</b>	0.0	
<b>Configuration class</b>	<b>PostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanTpRxNSduRef</b>	
<b>Description</b>	Reference to a PDU in the COM-Stack.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	REFERENCE	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

### 5.5.1.7. CanTpNAe

<b>Parameters included</b>	
<b>Parameter name</b>	<b>Multiplicity</b>
<a href="#">CanTpNAe</a>	1..1

<b>Parameter Name</b>	<b>CanTpNAe</b>
<b>Description</b>	If an Rx N-SDU is configured for mixed addressing format, this parameter contains the value of the transport protocol address extension.

<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER
<b>Configuration class</b>	<b>PostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

#### 5.5.1.8. CanTpNSa

Parameters included	
Parameter name	Multiplicity
<a href="#">CanTpNSa</a>	1..1

<b>Parameter Name</b>	<b>CanTpNSa</b>
<b>Description</b>	If an Rx N-SDU is configured for extended addressing format, this parameter contains the value of the transport protocol address of the local node (e.g., this ECU).
<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER
<b>Configuration class</b>	<b>PostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

#### 5.5.1.9. CanTpNTa

Parameters included	
Parameter name	Multiplicity
<a href="#">CanTpNTa</a>	1..1

<b>Parameter Name</b>	<b>CanTpNTa</b>
<b>Description</b>	If an Rx N-SDU is configured for extended addressing format, this parameter contains value of the transport protocol address of the remote node (e.g., the diagnostic tester).
<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER
<b>Configuration class</b>	<b>PostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

### 5.5.1.10. CanTpRxNPdu

Parameters included	
Parameter name	Multiplicity
<a href="#">CanTpRxNPduId</a>	1..1
<a href="#">CanTpRxNPduRef</a>	1..1

Parameter Name	CanTpRxNPduId
Description	<p>The N-PDU identifier attached to the RxNsdu is identified by CanTpRxNSduId.</p> <p>Each RxNsdu identifier is linked to only one SF/FF/CF N-PDU identifier. Nevertheless, in the case of extended or mixed addressing format, the same N-PDU identifier can be used for several N-SDU identifiers. The distinction is made by the N_TA or N_AE value (first data byte of SF or FF).</p>
Multiplicity	1..1
Type	INTEGER
Configuration class	VariantPostBuild: VariantPostBuild
Origin	AUTOSAR_ECUC

Parameter Name	CanTpRxNPduRef
Description	Reference to a PDU in the COM-Stack.
Multiplicity	1..1
Type	REFERENCE
Configuration class	VariantPostBuild: VariantPostBuild
Origin	AUTOSAR_ECUC

### 5.5.1.11. CanTpTxFcNPdu

Parameters included	
Parameter name	Multiplicity
<a href="#">CanTpTxFcNPduConfirmationPduId</a>	1..1
<a href="#">CanTpTxFcNPduRef</a>	1..1

Parameter Name	CanTpTxFcNPduConfirmationPduId
----------------	--------------------------------

<b>Description</b>	Handle ID to be used by the CanIf to confirm the transmission of the CanTpTxFcNPdu to the CanIf module.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	INTEGER	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanTpTxFcNPduRef</b>	
<b>Description</b>	Reference to a PDU in the COM-Stack.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	REFERENCE	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

#### 5.5.1.12. CanTpTxNSdu

Containers included		
Container name	Multiplicity	Description
<a href="#">CanTpNAe</a>	1..1	Contains the parameters needed to configure each Tx N-SDU with CanTpTxAddressingFormat set to CANTP_MIXED.
<a href="#">CanTpNSa</a>	1..1	Contains the parameters needed to configure each Tx N-SDU with CanTpTxAddressingFormat set to CANTP_EXTENDED.
<a href="#">CanTpNTa</a>	1..1	The following parameters need to be configured for each Tx N-SDU with CanTpTxAddressingFormat set to CANTP_EXTENDED.
<a href="#">CanTpRxFcNPdu</a>	1..1	Used for grouping of the ID of a PDU and the Reference to a PDU.
<a href="#">CanTpTxNPdu</a>	1..1	Used for grouping of the ID of a PDU and the Reference to a PDU.

Parameters included	
Parameter name	Multiplicity
<a href="#">CanTpNas</a>	1..1
<a href="#">CanTpNbs</a>	1..1
<a href="#">CanTpNcs</a>	1..1

Parameters included	
<a href="#">CanTpTc</a>	1..1
<a href="#">CanTpTxAddressing-Format</a>	1..1
<a href="#">CanTpTxDI</a>	1..1
<a href="#">CanTpTxNSduId</a>	1..1
<a href="#">CanTpTxPaddingActivation</a>	0..1
<a href="#">CanTpTxTaType</a>	1..1
<a href="#">CanTpTxNSduRef</a>	1..1

Parameter Name	CanTpNas	
Description	Value in second of the N_As timeout. N_As is the time for the transmission of a CAN frame (any N-PDU) on the part of the sender.	
Multiplicity	1..1	
Type	FLOAT	
Default value	0.1	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

Parameter Name	CanTpNbs	
Description	Value in seconds of the N_Bs timeout. N_Bs is the time of transmission until reception of the next Flow Control N-PDU.	
Multiplicity	1..1	
Type	FLOAT	
Default value	1.0	
Configuration class	PostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

Parameter Name	CanTpNcs	
Description	<p>Value in seconds of the performance requirement of (N_Cs + N_As). N_Cs is the time which elapses between the transmit request of a CF N-PDU until the transmit request of the next CF N-PDU.</p> <p><b>Note:</b> N_Cs is used as buffer request timeout by Autosar. Therefore it should be greater than the minimum separation time (STmin) of connections allowing seg-</p>	

	mented frames. Otherwise, the transmission of following consecutive frames is prevented by this timeout if the connections block size allows the transmission of several consecutive frames between two flow control frames.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	FLOAT	
<b>Default value</b>	0.9	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanTpTc</b>	
<b>Description</b>	Switch for enabling Transmit Cancellation for a certain Tx N-Sdu.	
<b>Multiplicity</b>	1..1	
<b>Type</b>	BOOLEAN	
<b>Default value</b>	true	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

<b>Parameter Name</b>	<b>CanTpTxAddressingFormat</b>	
<b>Description</b>	<p>Declares which communication addressing format is supported for this Tx N-SDU.</p> <p>Definition of Enumeration values:</p> <ul style="list-style-type: none"> <li>▶ CANTP_STANDARD: Use normal addressing format.</li> <li>▶ CANTP_EXTENDED: Use extended addressing format (the N_TA container of this TxNsdu will be used).</li> <li>▶ CANTP_MIXED: Use mixed addressing format (the N_AE container of this TxNsdu will be used).</li> </ul>	
<b>Multiplicity</b>	1..1	
<b>Type</b>	ENUMERATION	
<b>Default value</b>	CANTP_STANDARD	
<b>Range</b>	CANTP_EXTENDED	
	CANTP_MIXED	
	CANTP_STANDARD	
<b>Configuration class</b>	<b>VariantPostBuild:</b>	VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC	

Parameter Name	CanTpTxDI
Description	<b>This parameter has been deprecate according to AUTOSAR RFC53101.</b>  Data Length Code of this Tx N-SDU. In case of variable length message, this value indicates the minimum data length.
Multiplicity	1..1
Type	INTEGER
Default value	1
Configuration class	<b>VariantPostBuild:</b> VariantPostBuild
Origin	AUTOSAR_ECUC

Parameter Name	CanTpTxNSduld
Description	Unique identifier to a structure that contains all useful information to process the transmission of a Tx N-SDU.
Multiplicity	1..1
Type	INTEGER
Configuration class	<b>VariantPostBuild:</b> VariantPostBuild
Origin	AUTOSAR_ECUC

Parameter Name	CanTpTxPaddingActivation
Description	Defines if the transmit frame use padding or not.  Definition of Enumeration values: <ul style="list-style-type: none"> <li>▶ CANTP_OFF: The transmit N-PDU does not use padding for SF, CF and the last CF. (N-PDU length is dynamic)</li> <li>▶ CANTP_ON: Enabled mandatory padding to 8 bytes for CAN 2.0 PDUs only (SF, FC and last CF).</li> <li>▶ CANTP_ON_CAN_CAN_FD: Enable mandatory padding to 8 bytes for CAN 2.0 PDUs and 64 bytes for CAN FD PDUs</li> </ul>
Multiplicity	0..1
Type	ENUMERATION
Default value	CANTP_ON
Range	CANTP_OFF CANTP_ON CANTP_ON_CAN_CAN_FD

<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanTpTxTaType</b>
<b>Description</b>	Declares the communication type of this Tx N-SDU.  Enumeration values: <ul style="list-style-type: none"> <li>▶ CANTP_PHYSICAL: Used for 1:1 communication.</li> <li>▶ CANTP_FUNCTIONAL: Used for 1:n communication (SFs only).</li> </ul>
<b>Multiplicity</b>	1..1
<b>Type</b>	ENUMERATION
<b>Default value</b>	CANTP_PHYSICAL
<b>Range</b>	CANTP_FUNCTIONAL CANTP_PHYSICAL
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

<b>Parameter Name</b>	<b>CanTpTxNSduRef</b>
<b>Description</b>	Reference to a PDU in the COM-Stack.
<b>Multiplicity</b>	1..1
<b>Type</b>	REFERENCE
<b>Configuration class</b>	<b>VariantPostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

### 5.5.1.13. CanTpNAe

Parameters included	
Parameter name	Multiplicity
<a href="#">CanTpNAe</a>	1..1

<b>Parameter Name</b>	<b>CanTpNAe</b>
<b>Description</b>	If a Tx N-SDU is configured for mixed addressing format, this parameter contains the value of the transport protocol address extension.



<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER
<b>Configuration class</b>	<b>PostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

#### 5.5.1.14. CanTpNSa

Parameters included	
Parameter name	Multiplicity
<a href="#">CanTpNSa</a>	1..1

<b>Parameter Name</b>	<b>CanTpNSa</b>
<b>Description</b>	If a Tx N-SDU is configured for extended addressing format, this parameter contains the value of the transport protocol address of the local node (i.e., this ECU).
<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER
<b>Configuration class</b>	<b>PostBuild:</b> VariantPostBuild
<b>Origin</b>	AUTOSAR_ECUC

#### 5.5.1.15. CanTpNTa

Parameters included	
Parameter name	Multiplicity
<a href="#">CanTpNTa</a>	1..1

<b>Parameter Name</b>	<b>CanTpNTa</b>
<b>Description</b>	If Tx N-SDU is configured for extended addressing format, this parameter contains the value of the transport protocol address of the remote node (e.g., the diagnostic tester).
<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER
<b>Configuration class</b>	<b>PostBuild:</b> VariantPostBuild

Origin	AUTOSAR_ECUC
--------	--------------

#### 5.5.1.16. CanTpRxFcNPdu

Parameters included	
Parameter name	Multiplicity
<a href="#">CanTpRxFcNPduId</a>	1..1
<a href="#">CanTpRxFcNPduRef</a>	1..1

Parameter Name	CanTpRxFcNPduId	
Description	<p>N-PDU identifier attached to the FC N-PDU of this Tx N-SDU identified by CanTp-TxNSduId.</p> <p>Each Tx N-SDU identifier is linked to one Rx FC N-PDU identifier only. However, in the case of extended or mixed addressing format, the same FC N-PDU identifier can be used for several N-SDU identifiers. The distinction is made by means of the N_TA value (extended addressing format) or the N_AE value (mixed addressing format). In both cases, this is the first data byte of FC frame.</p>	
Multiplicity	1..1	
Type	INTEGER	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

Parameter Name	CanTpRxFcNPduRef	
Description	Reference to a PDU in the COM-Stack.	
Multiplicity	1..1	
Type	REFERENCE	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

#### 5.5.1.17. CanTpTxNPdu

Parameters included	
Parameter name	Multiplicity

Parameters included	
<a href="#">CanTpTxNPduConfirmationPduld</a>	1..1
<a href="#">CanTpTxNPduRef</a>	1..1

Parameter Name	CanTpTxNPduConfirmationPduld	
Description	Handle ID to be used by the CanIf to confirm the transmission of the CanTpTxN-Pdu to the CanIf module.	
Multiplicity	1..1	
Type	INTEGER	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

Parameter Name	CanTpTxNPduRef	
Description	Reference to a PDU in the COM-Stack.	
Multiplicity	1..1	
Type	REFERENCE	
Configuration class	VariantPostBuild:	VariantPostBuild
Origin	AUTOSAR_ECUC	

#### 5.5.1.18. CommonPublishedInformation

Parameters included	
Parameter name	Multiplicity
<a href="#">ArMajorVersion</a>	1..1
<a href="#">ArMinorVersion</a>	1..1
<a href="#">ArPatchVersion</a>	1..1
<a href="#">SwMajorVersion</a>	1..1
<a href="#">SwMinorVersion</a>	1..1
<a href="#">SwPatchVersion</a>	1..1
<a href="#">ModuleId</a>	1..1
<a href="#">VendorId</a>	1..1
<a href="#">Release</a>	1..1

Parameter Name	ArMajorVersion	
Label	AUTOSAR Major Version	
Description	Major version number of AUTOSAR specification on which the appropriate implementation is based on.	
Multiplicity	1..1	
Type	INTEGER_LABEL	
Default value	4	
Configuration class	PublishedInformation:	
Origin	Elektrobit Automotive GmbH	

Parameter Name	ArMinorVersion	
Label	AUTOSAR Minor Version	
Description	Minor version number of AUTOSAR specification on which the appropriate implementation is based on.	
Multiplicity	1..1	
Type	INTEGER_LABEL	
Default value	0	
Configuration class	PublishedInformation:	
Origin	Elektrobit Automotive GmbH	

Parameter Name	ArPatchVersion	
Label	AUTOSAR Patch Version	
Description	Patch level version number of AUTOSAR specification on which the appropriate implementation is based on.	
Multiplicity	1..1	
Type	INTEGER_LABEL	
Default value	0	
Configuration class	PublishedInformation:	
Origin	Elektrobit Automotive GmbH	

Parameter Name	SwMajorVersion	
Label	Software Major Version	
Description	Major version number of the vendor specific implementation of the module.	
Multiplicity	1..1	

<b>Type</b>	INTEGER_LABEL
<b>Default value</b>	6
<b>Configuration class</b>	<b>PublishedInformation:</b>
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>SwMinorVersion</b>
<b>Label</b>	Software Minor Version
<b>Description</b>	Minor version number of the vendor specific implementation of the module. The numbering is vendor specific.
<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER_LABEL
<b>Default value</b>	8
<b>Configuration class</b>	<b>PublishedInformation:</b>
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>SwPatchVersion</b>
<b>Label</b>	Software Patch Version
<b>Description</b>	Patch level version number of the vendor specific implementation of the module. The numbering is vendor specific.
<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER_LABEL
<b>Default value</b>	13
<b>Configuration class</b>	<b>PublishedInformation:</b>
<b>Origin</b>	Elektrobit Automotive GmbH

<b>Parameter Name</b>	<b>ModuleId</b>
<b>Label</b>	Numeric Module ID
<b>Description</b>	Module ID of this module from Module List
<b>Multiplicity</b>	1..1
<b>Type</b>	INTEGER_LABEL
<b>Default value</b>	35
<b>Configuration class</b>	<b>PublishedInformation:</b>
<b>Origin</b>	Elektrobit Automotive GmbH

Parameter Name	VendorId
Label	Vendor ID
Description	Vendor ID of the dedicated implementation of this module according to the AUTOSAR vendor list
Multiplicity	1..1
Type	INTEGER_LABEL
Default value	1
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name	Release
Label	Release Information
Multiplicity	1..1
Type	STRING_LABEL
Default value	
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

### 5.5.1.19. PublishedInformation

Parameters included	
Parameter name	Multiplicity
<a href="#">PbcfgMSupport</a>	1..1

Parameter Name	PbcfgMSupport
Label	PbcfgM support
Description	Specifies whether or not the CanTp can use the PbcfgM module for post-build support.
Multiplicity	1..1
Type	BOOLEAN
Default value	true
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

## 5.5.2. Application programming interface (API)

### 5.5.2.1. Macro constants

#### 5.5.2.1.1. CANTP\_PDU\_DIR\_RECEIVE

<b>Purpose</b>	Define for CanTp N-SDU direction (Rx N_SDU).
<b>Value</b>	1U

#### 5.5.2.1.2. CANTP\_PDU\_DIR\_TRANSMIT

<b>Purpose</b>	Define for CanTp N-SDU direction (Tx N_SDU).
<b>Value</b>	0U

### 5.5.2.2. Functions

#### 5.5.2.2.1. CanTp\_CancelReceive

<b>Purpose</b>	Cancel an ongoing reception.	
<b>Synopsis</b>	<code>Std_ReturnType CanTp_CancelReceive ( PduIdType CanTpRxSduId );</code>	
<b>Service ID</b>	0x09	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	CanTpRxSduId	Identifier of the received N-SDU.
<b>Return Value</b>	Std_ReturnType	
	E_OK	Cancellation request of the specified N-SDU is accepted.
	E_NOT_OK	Cancellation request is rejected; the reason can be that request is issued for an N-

	SDU that is not segmented or request is issued for an N-SDU that is not in the reception process.
<b>Description</b>	<p>This service is used to cancel an ongoing segmented reception.</p> <p><b>** Preconditions:</b></p> <ul style="list-style-type: none"> <li>▶ Related N-SDU is segmented and not waiting for the last CF.</li> <li>▶ N-SDU id must be valid.</li> <li>▶ Module must be initialized.</li> <li>▶ Corresponding channel is not waiting for a response of the lower layer.</li> </ul>

#### 5.5.2.2.2. CanTp\_CancelTransmit

<b>Purpose</b>	Cancel a pending transfer.	
<b>Synopsis</b>	<code>Std_ReturnType CanTp_CancelTransmit ( PduIdType CanTpTxSduId );</code>	
<b>Service ID</b>	0x08	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	CanTpTxSduId	Tx N-SDU ID
<b>Return Value</b>	Std_ReturnType	
	E_OK	cancellation request accepted
	E_NOT_OK	cancellation request rejected
<b>Description</b>	This API-Service is used to cancel the transfer of pending Can N-SDUs.	

#### 5.5.2.2.3. CanTp\_ChangeParameter

<b>Purpose</b>	Change parameter BS or STmin.	
<b>Synopsis</b>	<code>Std_ReturnType CanTp_ChangeParameter ( PduIdType Id , TPPParameterType Parameter , uint16 Value );</code>	
<b>Service ID</b>	0x0A	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	



<b>Parameters (in)</b>	Id	Identifier of the received N-SDU on which the parameter has to be changed.
	Parameter	Specify the parameter to which the value has to be changed (BS or STmin).
	Value	The new value of the parameter.
<b>Return Value</b>	Std_ReturnType	
	E_OK	request is accepted.
	E_NOT_OK	request is not accepted.
<b>Description</b>	<p>This API-Service is used to request the change of reception parameters BS and STmin for a specified N-SDU.</p> <p>Preconditions:</p> <ul style="list-style-type: none"> <li>▶ Related N-SDU must not be in the process of reception</li> <li>▶ Function paramter must be valid</li> </ul>	

#### 5.5.2.2.4. CanTp\_GetNSa

<b>Purpose</b>	Get N_SA value for a specific N-SDU ID.	
<b>Synopsis</b>	<pre>Std_ReturnType CanTp_GetNSa ( PduIdType CanTpPduId , uint8 CanTpDirection , uint8 * CanTpNSaPtr );</pre>	
<b>Service ID</b>	0x1F	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Non-Reentrant	
<b>Parameters (in)</b>	CanTpPduId	Contains the N-SDU ID
	CanTpDirection	CANTP_PDU_DIR_TRANSMIT and CANTP_PDU_DIR_RECEIVE
<b>Parameters (out)</b>	CanTpNSaPtr	A pointer to a N_SA value, where the current N_SA value can be written to.
<b>Return Value</b>	Std_ReturnType	
	E_OK	No Errors.
	E_NOT_OK	Det error occured or N-SDU is not configured.
<b>Description</b>	<p>This service gets the N_SA value for the given N-SDU if it is configured with extended addressing format. N_SA in this context always refers to the address of this (the own) ECU, independent of the N-SDU direction.</p>	

	<p>For CanTpDirection CANTP_PDU_DIR_RECEIVE it can be found in CanTp configuration in the configuration parameter CanTpRxNSdu/CanTpRxNSduld.</p> <p>For CanTpDirection CANTP_PDU_DIR_TRANSMIT it can be found in CanTp configuration in the configuration parameter CanTpTxNSdu/CanTpTxNSduld.</p>
--	--

#### 5.5.2.2.5. CanTp\_GetVersionInfo

<b>Purpose</b>	Get version information of the CanTP module.	
<b>Synopsis</b>	<pre>void CanTp_GetVersionInfo ( Std_ VersionInfoType * VersionInfoPtr );</pre>	
<b>Service ID</b>	0x07	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Non-Reentrant	
<b>Parameters (out)</b>	VersionInfoPtr	Pointer to where to store the version information of this module.
<b>Description</b>	<p>This service returns the version information of this module. The version information includes:</p> <ul style="list-style-type: none"> <li>▶ Module Id</li> <li>▶ Vendor Id</li> <li>▶ Vendor specific version numbers</li> </ul>	

#### 5.5.2.2.6. CanTp\_Init

<b>Purpose</b>	Initialize the CanTP module.	
<b>Synopsis</b>	<pre>void CanTp_Init ( const CanTp_ConfigType * CfgPtr );</pre>	
<b>Service ID</b>	0x01	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Non-Reentrant	
<b>Parameters (in)</b>	CfgPtr	Pointer to the CanTp post-build configuration data. This parameter is ignored because the CanTp does not support post-build configuration. Please use NULL_PTR as parameter for the initialization.
<b>Description</b>	This function initializes the CanTP module.	

#### 5.5.2.2.7. CanTp\_IsValidConfig

<b>Purpose</b>	Validate configuration.
<b>Synopsis</b>	<pre>Std_ReturnType CanTp_IsValidCon- fig ( const void * voidConfigPtr );</pre>
<b>Service ID</b>	0x60
<b>Sync/Async</b>	Synchronous
<b>Reentrancy</b>	Reentrant
<b>Return Value</b>	E_OK if the given module configurations is valid otherwise E_NOT_OK.
<b>Description</b>	Checks if the post build configuration fits to the link time configuration part.

#### 5.5.2.2.8. CanTp\_MainFunction

<b>Purpose</b>	Main function of the CanTp.
<b>Synopsis</b>	<pre>void CanTp_MainFunction ( void );</pre>
<b>Service ID</b>	0x06
<b>Sync/Async</b>	Synchronous
<b>Reentrancy</b>	Non-Reentrant
<b>Description</b>	This function is the main function for scheduling CanTP.

#### 5.5.2.2.9. CanTp\_ReadParameter

<b>Purpose</b>	Read parameter BS or STmin.	
<b>Synopsis</b>	<pre>Std_ReturnType CanTp_ReadParameter ( PduIdType id , TPParameterType parameter , uint16 * value );</pre>	
<b>Service ID</b>	0x0B	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Non Reentrant	
<b>Parameters (in)</b>	id	Identifier of the received N-SDU on which the reception parameters are read.
	parameter	Specify the parameter to which the value has to be read (BS or STmin).

	value	Pointer where the parameter value will be provided.
<b>Return Value</b>	Std_ReturnType	
	E_OK	request is accepted.
	E_NOT_OK	request is not accepted.
<b>Description</b>	<p>This API-Service is used to read reception parameters BS and STmin for a specified N-SDU.</p> <p>Preconditions:</p> <ul style="list-style-type: none"> <li>► Function parameter must be valid</li> </ul>	

#### 5.5.2.2.10. CanTp\_RxIndication

<b>Purpose</b>	Indicate a successful reception.	
<b>Synopsis</b>	<pre>void <b>CanTp_RxIndication</b> ( PduIdType CanTpRxPduId , PduInfoType * CanTpRxPduPtr );</pre>	
<b>Service ID</b>	0x42	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	CanTpRxPduId	ID of CAN L-PDU that has been received. Identifies the data that has been received. Range: 0..(maximum number of L-PDU IDs received ) - 1.
	CanTpRxPduPtr	Indicator of structure with received L-SDU (payload) and data length.
<b>Description</b>	This function is called by the CAN Interface after a successful reception of a Rx CAN L-PDU.	

#### 5.5.2.2.11. CanTp\_SetNSa

<b>Purpose</b>	Set N_SA value for a specific N-SDU ID.	
<b>Synopsis</b>	<pre>Std_ReturnType <b>CanTp_SetNSa</b> ( PduIdType CanTpPduId , uint8 CanTpDirection , uint8 CanTpNSa );</pre>	
<b>Service ID</b>	0x1E	

<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Non-Reentrant	
<b>Parameters (in)</b>	CanTpPduId	Contains the N-SDU ID
	CanTpDirection	CANTP_PDU_DIR_TRANSMIT and CANTP_PDU_DIR_RECEIVE
	CanTpNSa	N_SA value to be set
<b>Return Value</b>	Std_ReturnType	
	E_OK	No Errors.
	E_NOT_OK	Det error occurred or N-SDU is not configured.
<b>Description</b>	<p>This service sets the N_SA value for the given N-SDU if it is configured with extended addressing format. N_SA in this context always refers to the address of this (the own) ECU, independent of the N-SDU direction.</p> <p>For CanTpDirection CANTP_PDU_DIR_RECEIVE it can be found in CanTp configuration in the configuration parameter CanTpRxNSdu/CanTpRxNSduld.</p> <p>For CanTpDirection CANTP_PDU_DIR_TRANSMIT it can be found in CanTp configuration in the configuration parameter CanTpTxNSdu/CanTpTxNSduld.</p>	

#### 5.5.2.2.12. CanTp\_Transmit

<b>Purpose</b>	Transfer segmented data.	
<b>Synopsis</b>	<pre>Std_ReturnType CanTp_Transmit ( PduIdType CanTp-     TxSduId , const PduInfoType * CanTpTxInfoPtr );</pre>	
<b>Service ID</b>	0x03	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	CanTpTxSduId	Contains the unique CanTp module identifier of the CAN N-SDU to be transmitted. Range: - 0..(maximum number of L-PDU IDs received ) - 1.
	CanTpTxInfoPtr	A pointer to a structure with CAN N-SDU related data (CAN N-SDU buffer and the length of this buffer)
<b>Return Value</b>	Std_ReturnType	

	E_OK	No Errors.
	E_NOT_OK	The request cannot be started (e.g. a transmit request is in progress with the same N-SDU identifier).
<b>Description</b>	This service is used to request the transfer of segmented data.	

#### 5.5.2.2.13. CanTp\_TxConfirmation

<b>Purpose</b>	Confirm transmitted frame.	
<b>Synopsis</b>	<code>void CanTp_TxConfirmation ( PduIdType CanTpTxPduId );</code>	
<b>Service ID</b>	0x40	
<b>Sync/Async</b>	Synchronous	
<b>Reentrancy</b>	Reentrant	
<b>Parameters (in)</b>	CanTpTxPduId	ID of CAN L-PDU that has been transmitted. Range: 0...(maximum number of L-PDU IDs received) - 1.
<b>Description</b>	This function confirms all transmitted CAN frames belonging to the CAN Transport Layer.	

### 5.5.3. Integration notes

#### 5.5.3.1. Exclusive areas

This section describes the exclusive areas used by the CanTp module.

##### 5.5.3.1.1. SCHM\_CANTP\_EXCLUSIVE\_AREA\_0

<b>Protected data structures</b>	All shared data that shall be protected from mutual access.
<b>Recommended locking mechanism</b>	This exclusive area must always be protected by a locking mechanism. The options for locking are described in the EB tresos AutoCore Generic documentation. Refer to the section Mapping exclusive areas in the basic software modules in the Integration notes section for details.

### 5.5.3.2. Production errors

Production errors are not reported by the CanTp module.

### 5.5.3.3. Memory mapping

General information about memory mapping is provided in the EB tresos AutoCore Generic documentation. Refer to the section `Memory mapping and compiler abstraction` in the `Integration notes` section for details.

The following table provides the list of sections that may be mapped for this module:

Memory section
CONST_ENTRY_JUMP_TABLE
CONST_UNSPECIFIED
CONST_EXIT_JUMP_TABLE
JUMP_TABLE_SHARED_VAR_INIT_UNSPECIFIED
VAR_NO_INIT_8
VAR_NO_INIT_UNSPECIFIED
CONFIG_DATA_UNSPECIFIED
VAR_INIT_UNSPECIFIED
CODE
CONST_32
CODE_CC_BLOCK

### 5.5.3.4. Integration requirements

#### WARNING



#### Integration requirements list is not exhaustive

The following list of integration requirements helps you to integrate your product. However, this list is not exhaustive. You also require information from the user's guide, release notes, and EB tresos AutoCore known issues to successfully integrate your product.

#### 5.5.3.4.1. `lim.CanTp.EB_INTREQ_CanTp_0001`

Description	Limitation on multiple invocations of functions The module postpones invocations of <code>CanTp_RxIndication</code> , <code>CanTp_TxConfirmation</code> or the <code>Gpt</code> callback function in case that
-------------	--

	the channel is occupied to handle a previous call of these functions. In this case the incoming call is postponed. In case of multiple calls on an occupied channel only the last call is stored and all previous pending calls are discarded.
<b>Rationale</b>	API functions have to occupy the CanTp Channel for consistent operations. During execution the API function might get interrupted. Especially the three functions CanTp_RxIndication, CanTp_TxConfirmation and the Gpt callback function are relevant because they are most likely called in interrupt mode. The CanTp addresses this issue. One incoming call of CanTp_RxIndication, CanTp_TxConfirmation and the Gpt callback function per channel are stored and resolved at the end of the initial API function call. In the unlikely event of multiple calls take place while the channel is occupied. The last incoming frame is stored. Discarded frames segmented messages are detected through the sequence number check provided for this type of frames.

#### 5.5.3.4.2. lim.CanTp.EB\_INTREQ\_CanTp\_0002

<b>Description</b>	<p>Limitation on API CanTp_CancelReceive and CanTp_CancelTransmit The API services CanTp_CancelReceive and CanTp_CancelTransmit do not cancel an ongoing reception/transmission of a message if the API call interrupts data processing. In this case the APIs signalize the disability to cancel the communication by returning E_NOT_OK. For a successful receive cancellation following preconditions must be fulfilled:</p> <ul style="list-style-type: none"> <li>- Related N-SDU is in state of reception.</li> <li>- Receive cancellation is applied to a segmented message.</li> <li>- Channel is not locked.</li> <li>- CanTp is not waiting for the last consecutive frame.</li> </ul> <p>Channel is not waiting for a TX confirmation response from lower layer. For a successful transmit cancellation following preconditions must be fulfilled:</p> <ul style="list-style-type: none"> <li>- Related N-SDU is in state of transmission.</li> <li>- Channel is not locked.</li> </ul> <p>Channel is not waiting for a TX confirmation response from lower layer. Channel is not waiting for a flow control message.</p>
<b>Rationale</b>	To ensure internal data consistency of a communication channel it is advisable to wait with the cancellation until the data handling mechanism frees (unlocks) the channel. A storage of the cancellation event to process it after the channel unlock is not possible because the API service shall return immediately with the correct return status which is not yet known.



#### 5.5.3.4.3. lim.CanTp.EB\_INTREQ\_CanTp\_0003

<b>Description</b>	The effect of CanTpGeneral/CanTpMainFunctionPeriod on the accuracy of the callback functions If CanTpSTminTimeoutHandling is configured to CanTpMainFunction, the module uses an internal counter to trigger the callback routine used for the STmin delay. Note that the accuracy of this method depends highly on the time between subsequent CanTp_MainFunction calls as specified in CanTpGeneral/CanTpMainFunctionPeriod. This value is also used to calculate the counter values for the CanTp_MainFunction timer.
<b>Rationale</b>	

#### 5.5.3.4.4. lim.CanTp.EB\_INTREQ\_CanTp\_0004

<b>Description</b>	The reinitialization process must not interrupt other module functions If reinitialization of the module is required, the call of CanTp_Init must not interrupt other module functions.
<b>Rationale</b>	The reinitialization process resets all internal variables. Continuing and interrupted module function after reinitialization can lead to undefined module behavior.

#### 5.5.3.4.5. lim.CanTp.EB\_INTREQ\_CanTp\_0005

<b>Description</b>	CanTp_Init() shall not be preempted by any other module API calls. It needs to be ensured that the function call CanTp_Init() is not preempted by any other module API calls.
<b>Rationale</b>	During the call of CanTp_Init() global variables and pointers get initialized. It is easy for the integrator to avoid this preemption, thus no data protection mechanism has been implemented for function CanTp_Init().

## 6. Bibliography

### Bibliography

[1] AUTOSAR consortium homepage, URL: <http://www.autosar.org/>, Publisher: AUTOSAR