

EPICS QT Framework

2.7.1

Generated by Doxygen 1.7.4

Mon Oct 7 2013 10:43:52

Contents

1	QE framework - EPICS aware Qt Widgets and data access classes	1
1.1	Documentation	1
1.2	License	2
1.3	Platforms	2
1.4	Screenshots	2
1.5	Downloads	2
1.6	Installation	2
1.7	Support	3
1.8	Related Projects	3
1.9	Credits:	3
2	GNU General Public License	5
3	ASgui screen shots	7
4	other applications using epicsqt widgets	13
5	Qt Designer	15
6	Qt Creator	17
7	Class Index	19
7.1	Class Hierarchy	19
8	Class Index	23
8.1	Class List	23
9	Class Documentation	27
9.1	_Field Class Reference	27

9.2	_Item Class Reference	28
9.3	_QDialogItem Class Reference	28
9.4	_QPushButtonGroup Class Reference	28
9.5	_QTableWidgetFileBrowser Class Reference	29
9.6	_QTableWidgetLog Class Reference	29
9.7	_QTableWidgetScript Class Reference	29
9.8	QEAnalogIndicator::Band Struct Reference	30
9.9	QEAnalogIndicator::BandList Class Reference	30
9.10	ChartState Class Reference	30
9.11	qcastatemachine::ConnectionQCaStateMachine Class Reference	31
9.12	ContainerProfile Class Reference	31
9.13	contextMenu Class Reference	33
9.14	contextMenuObject Class Reference	35
9.15	QEPeriodic::elementInfoStruct Struct Reference	35
9.16	flipRotateMenu Class Reference	36
9.17	imageContextMenu Class Reference	36
9.18	imageInfo Class Reference	37
9.19	imageMarkup Class Reference	38
9.20	localBrightnessContrast Class Reference	40
9.21	loginWidget Class Reference	40
9.22	managePixmapaps Class Reference	40
9.23	markupBeam Class Reference	41
9.24	markupHLine Class Reference	42
9.24.1	Member Function Documentation	42
9.24.1.1	drawMarkup	42
9.25	markupItem Class Reference	42
9.26	markupLine Class Reference	44
9.27	markupRegion Class Reference	45
9.28	markupTarget Class Reference	46
9.29	markupText Class Reference	47
9.30	markupVLine Class Reference	47
9.30.1	Member Function Documentation	48
9.30.1.1	drawMarkup	48
9.31	message_types Class Reference	48

9.32 QEStripChartToolBar::OwnWidgets Class Reference	49
9.33 PeriodicDialog Class Reference	49
9.34 PeriodicElementSetupForm Class Reference	49
9.35 PeriodicSetupDialog Class Reference	50
9.36 PersistenceManager Class Reference	50
9.37 PMContext Class Reference	51
9.38 PMSymbol Class Reference	51
9.39 PMSymbolList Class Reference	52
9.39.1 Member Function Documentation	52
9.39.1.1 getElement	52
9.40 QEStripChart::PrivateData Class Reference	52
9.41 profilePlot Class Reference	53
9.42 PublishedProfile Class Reference	53
9.43 QPushButtonSpecifications Struct Reference	54
9.44 QBitStatus Class Reference	54
9.45 QCaAlarmInfo Class Reference	56
9.46 QCaConnectionInfo Class Reference	57
9.47 QCaDataPoint Class Reference	57
9.48 QCaDataPointList Class Reference	57
9.49 QCaDateTime Class Reference	58
9.49.1 Member Function Documentation	58
9.49.1.1 floating	58
9.50 QCaEventFilter Class Reference	58
9.51 QCaEventItem Class Reference	58
9.52 QCaEventUpdate Class Reference	59
9.53 QCaInstalledFiltersListItem Class Reference	59
9.54 qcaobject::QCaObject Class Reference	60
9.55 qcastatemachine::QCaStateMachine Class Reference	61
9.56 QCaVariableNamePropertyManager Class Reference	62
9.57 QEAnalogIndicator Class Reference	62
9.57.1 Detailed Description	65
9.57.2 Member Enumeration Documentation	66
9.57.2.1 Modes	66
9.57.2.2 Orientations	66

9.57.3	Property Documentation	66
9.57.3.1	backgroundColour	66
9.57.3.2	borderColour	66
9.57.3.3	centreAngle	66
9.57.3.4	fontColour	66
9.57.3.5	foregroundColour	66
9.57.3.6	logScale	67
9.57.3.7	logScaleInterval	67
9.57.3.8	majorInterval	67
9.57.3.9	maximum	67
9.57.3.10	minimum	67
9.57.3.11	minorInterval	67
9.57.3.12	mode	67
9.57.3.13	orientation	67
9.57.3.14	showScale	67
9.57.3.15	showText	67
9.57.3.16	spanAngle	68
9.57.3.17	value	68
9.58	QEAAnalogProgressBar Class Reference	68
9.58.1	Member Enumeration Documentation	71
9.58.1.1	ArrayActions	71
9.58.1.2	Formats	71
9.58.1.3	Notations	71
9.58.1.4	UserLevels	71
9.58.2	Constructor & Destructor Documentation	72
9.58.2.1	QEAAnalogProgressBar	72
9.58.2.2	QEAAnalogProgressBar	72
9.58.3	Member Function Documentation	72
9.58.3.1	dbValueChanged	72
9.58.4	Property Documentation	72
9.58.4.1	addUnits	72
9.58.4.2	alarmSeverityDisplayMode	72
9.58.4.3	allowDrop	72
9.58.4.4	arrayAction	73

9.58.4.5	displayAlarmState	73
9.58.4.6	format	73
9.58.4.7	int	73
9.58.4.8	leadingZero	73
9.58.4.9	localEnumeration	74
9.58.4.10	notation	74
9.58.4.11	precision	74
9.58.4.12	trailingZeros	74
9.58.4.13	useDbDisplayLimits	74
9.58.4.14	useDbPrecision	75
9.58.4.15	userLevelEnabled	75
9.58.4.16	userLevelEngineerStyle	75
9.58.4.17	userLevelScientistStyle	75
9.58.4.18	userLevelUserStyle	75
9.58.4.19	userLevelVisibility	75
9.58.4.20	variable	76
9.58.4.21	variableAsToolTip	76
9.58.4.22	variableSubstitutions	76
9.58.4.23	visible	76
9.59	QEBitStatus Class Reference	76
9.59.1	Member Enumeration Documentation	78
9.59.1.1	UserLevels	78
9.59.2	Member Function Documentation	78
9.59.2.1	dbValueChanged	78
9.59.2.2	setVariableNameAndSubstitutions	78
9.59.3	Property Documentation	79
9.59.3.1	allowDrop	79
9.59.3.2	displayAlarmState	79
9.59.3.3	int	79
9.59.3.4	userLevelEnabled	79
9.59.3.5	userLevelEngineerStyle	79
9.59.3.6	userLevelScientistStyle	80
9.59.3.7	userLevelUserStyle	80
9.59.3.8	userLevelVisibility	80

9.59.3.9	variable	80
9.59.3.10	variableAsToolTip	80
9.59.3.11	variableSubstitutions	80
9.59.3.12	visible	81
9.60	QByteArray Class Reference	81
9.61	QChartStateLists Class Reference	82
9.62	QCheckBox Class Reference	82
9.62.1	Member Enumeration Documentation	85
9.62.1.1	ArrayActions	85
9.62.1.2	CreationOptionNames	85
9.62.1.3	Formats	85
9.62.1.4	Notations	85
9.62.1.5	UpdateOptions	86
9.62.1.6	UserLevels	86
9.62.2	Constructor & Destructor Documentation	86
9.62.2.1	QCheckBox	86
9.62.2.2	QCheckBox	86
9.62.3	Member Function Documentation	86
9.62.3.1	clicked	86
9.62.3.2	dbValueChanged	87
9.62.3.3	launchGui	87
9.62.3.4	pressed	87
9.62.3.5	released	87
9.62.4	Property Documentation	87
9.62.4.1	addUnits	87
9.62.4.2	alignment	87
9.62.4.3	allowDrop	88
9.62.4.4	arguments	88
9.62.4.5	arrayAction	88
9.62.4.6	clickCheckedText	88
9.62.4.7	clickText	88
9.62.4.8	confirmAction	89
9.62.4.9	creationOption	89
9.62.4.10	displayAlarmState	89

9.62.4.11	format	89
9.62.4.12	guiFile	89
9.62.4.13	int	89
9.62.4.14	labelText	90
9.62.4.15	leadingZero	90
9.62.4.16	localEnumeration	90
9.62.4.17	notation	91
9.62.4.18	password	91
9.62.4.19	pixmap0	91
9.62.4.20	pixmap1	91
9.62.4.21	pixmap2	91
9.62.4.22	pixmap3	91
9.62.4.23	pixmap4	91
9.62.4.24	pixmap5	91
9.62.4.25	pixmap6	92
9.62.4.26	pixmap7	92
9.62.4.27	precision	92
9.62.4.28	pressText	92
9.62.4.29	prioritySubstitutions	92
9.62.4.30	program	92
9.62.4.31	releaseText	92
9.62.4.32	subscribe	93
9.62.4.33	trailingZeros	93
9.62.4.34	updateOption	93
9.62.4.35	useDbPrecision	93
9.62.4.36	userLevelEnabled	93
9.62.4.37	userLevelEngineerStyle	93
9.62.4.38	userLevelScientistStyle	93
9.62.4.39	userLevelUserStyle	94
9.62.4.40	userLevelVisibility	94
9.62.4.41	variable	94
9.62.4.42	variableAsToolTip	94
9.62.4.43	variableSubstitutions	94
9.62.4.44	visible	94

9.62.4.45	writeOnClick	95
9.62.4.46	writeOnPress	95
9.62.4.47	writeOnRelease	95
9.63	QCheckBoxManager Class Reference	95
9.64	QComboBox Class Reference	96
9.64.1	Member Enumeration Documentation	98
9.64.1.1	UserLevels	98
9.64.2	Member Function Documentation	98
9.64.2.1	dbValueChanged	98
9.64.3	Member Data Documentation	98
9.64.3.1	useDbEnumerations	98
9.64.3.2	writeOnChange	98
9.64.4	Property Documentation	98
9.64.4.1	allowDrop	98
9.64.4.2	displayAlarmState	99
9.64.4.3	int	99
9.64.4.4	localEnumeration	99
9.64.4.5	subscribe	99
9.64.4.6	userLevelEnabled	99
9.64.4.7	userLevelEngineerStyle	99
9.64.4.8	userLevelScientistStyle	100
9.64.4.9	userLevelUserStyle	100
9.64.4.10	userLevelVisibility	100
9.64.4.11	variable	100
9.64.4.12	variableAsToolTip	100
9.64.4.13	variableSubstitutions	100
9.64.4.14	visible	101
9.65	QConfiguredLayout Class Reference	101
9.66	QConfiguredLayoutManager Class Reference	103
9.67	QEDragDrop Class Reference	103
9.68	QFileBrowser Class Reference	105
9.69	QEFloating Class Reference	106
9.70	QEFloatingArray Class Reference	107
9.70.1	Detailed Description	107

9.71	QEFloatingFormatting Class Reference	108
9.72	QForm Class Reference	108
9.73	QFrame Class Reference	110
9.73.1	Member Enumeration Documentation	111
9.73.1.1	UserLevels	111
9.73.2	Property Documentation	111
9.73.2.1	allowDrop	111
9.73.2.2	displayAlarmState	111
9.73.2.3	int	111
9.73.2.4	userLevelEnabled	112
9.73.2.5	userLevelEngineerStyle	112
9.73.2.6	userLevelScientistStyle	112
9.73.2.7	userLevelUserStyle	112
9.73.2.8	userLevelVisibility	112
9.73.2.9	variableAsToolTip	113
9.73.2.10	visible	113
9.74	QGenericButton Class Reference	113
9.75	QGenericEdit Class Reference	115
9.75.1	Member Enumeration Documentation	117
9.75.1.1	UserLevels	117
9.75.2	Constructor & Destructor Documentation	117
9.75.2.1	QGenericEdit	117
9.75.2.2	QGenericEdit	117
9.75.3	Member Function Documentation	117
9.75.3.1	getConfirmWrite	117
9.75.3.2	getSubscribe	117
9.75.3.3	getWriteOnEnter	118
9.75.3.4	getWriteOnFinish	118
9.75.3.5	getWriteOnLoseFocus	118
9.75.3.6	setConfirmWrite	118
9.75.3.7	setSubscribe	118
9.75.3.8	setWriteOnEnter	118
9.75.3.9	setWriteOnFinish	118
9.75.3.10	setWriteOnLoseFocus	118

9.75.4	Property Documentation	118
9.75.4.1	allowDrop	119
9.75.4.2	confirmWrite	119
9.75.4.3	displayAlarmState	119
9.75.4.4	int	119
9.75.4.5	subscribe	119
9.75.4.6	userLevelEnabled	119
9.75.4.7	userLevelEngineerStyle	120
9.75.4.8	userLevelScientistStyle	120
9.75.4.9	userLevelUserStyle	120
9.75.4.10	userLevelVisibility	120
9.75.4.11	variable	120
9.75.4.12	variableAsToolTip	120
9.75.4.13	variableSubstitutions	121
9.75.4.14	visible	121
9.75.4.15	writeOnEnter	121
9.75.4.16	writeOnFinish	121
9.75.4.17	writeOnLoseFocus	121
9.76	QEGroupBox Class Reference	121
9.76.1	Member Enumeration Documentation	122
9.76.1.1	UserLevels	122
9.76.2	Property Documentation	123
9.76.2.1	allowDrop	123
9.76.2.2	displayAlarmState	123
9.76.2.3	int	123
9.76.2.4	userLevelEnabled	123
9.76.2.5	userLevelEngineerStyle	123
9.76.2.6	userLevelScientistStyle	124
9.76.2.7	userLevelUserStyle	124
9.76.2.8	userLevelVisibility	124
9.76.2.9	variableAsToolTip	124
9.76.2.10	visible	124
9.77	QEImage Class Reference	125
9.77.1	Member Enumeration Documentation	132

9.77.1.1	formatOptions	132
9.77.1.2	FormatOptions	133
9.77.1.3	ResizeOptions	133
9.77.1.4	resizeOptions	133
9.77.1.5	rotationOptions	133
9.77.1.6	RotationOptions	134
9.77.1.7	selectOptions	134
9.77.1.8	UserLevels	134
9.77.2	Constructor & Destructor Documentation	134
9.77.2.1	QEImage	134
9.77.2.2	QEImage	135
9.77.3	Member Function Documentation	135
9.77.3.1	dbValueChanged	135
9.77.4	Member Data Documentation	135
9.77.4.1	displayButtonBar	135
9.77.4.2	enableBrightnessContrast	135
9.77.4.3	initialVertScrollPos	135
9.77.5	Property Documentation	135
9.77.5.1	allowDrop	135
9.77.5.2	areaColor	136
9.77.5.3	autoBrightnessContrast	136
9.77.5.4	beamColor	136
9.77.5.5	beamXVariable	136
9.77.5.6	beamYVariable	136
9.77.5.7	clippingHighVariable	136
9.77.5.8	clippingLowVariable	136
9.77.5.9	clippingOnOffVariable	136
9.77.5.10	displayAlarmState	137
9.77.5.11	enableHozSliceSelection	137
9.77.5.12	enableVertSliceSelection	137
9.77.5.13	formatOption	137
9.77.5.14	heightVariable	137
9.77.5.15	horizontalFlip	137
9.77.5.16	hozSliceColor	137

9.77.5.17 imageVariable	137
9.77.5.18 initialHosScrollPos	138
9.77.5.19 int	138
9.77.5.20 profileColor	138
9.77.5.21 regionOfInterest1HVariable	138
9.77.5.22 regionOfInterest1WVariable	138
9.77.5.23 regionOfInterest1XVariable	138
9.77.5.24 regionOfInterest1YVariable	138
9.77.5.25 regionOfInterest2HVariable	138
9.77.5.26 regionOfInterest2WVariable	139
9.77.5.27 regionOfInterest2XVariable	139
9.77.5.28 regionOfInterest2YVariable	139
9.77.5.29 regionOfInterest3HVariable	139
9.77.5.30 regionOfInterest3WVariable	139
9.77.5.31 regionOfInterest3XVariable	139
9.77.5.32 regionOfInterest3YVariable	139
9.77.5.33 regionOfInterest4HVariable	139
9.77.5.34 regionOfInterest4WVariable	139
9.77.5.35 regionOfInterest4XVariable	140
9.77.5.36 regionOfInterest4YVariable	140
9.77.5.37 resizeMode	140
9.77.5.38 rotation	140
9.77.5.39 showTime	140
9.77.5.40 targetColor	140
9.77.5.41 targetTriggerVariable	140
9.77.5.42 targetXVariable	140
9.77.5.43 targetYVariable	140
9.77.5.44 timeColor	141
9.77.5.45 userLevelEnabled	141
9.77.5.46 userLevelEngineerStyle	141
9.77.5.47 userLevelScientistStyle	141
9.77.5.48 userLevelUserStyle	141
9.77.5.49 userLevelVisibility	141
9.77.5.50 variableAsToolTip	142

9.77.5.51	variableSubstitutions	142
9.77.5.52	verticalFlip	142
9.77.5.53	vertSliceColor	142
9.77.5.54	visible	142
9.77.5.55	widthVariable	142
9.78	QEInteger Class Reference	142
9.79	QEIntegerArray Class Reference	143
9.79.1	Detailed Description	144
9.80	QEIntegerFormatting Class Reference	144
9.80.1	Detailed Description	144
9.80.2	Member Function Documentation	144
9.80.2.1	formatInteger	145
9.80.2.2	formatIntegerArray	145
9.80.2.3	formatValue	145
9.81	QELabel Class Reference	145
9.81.1	Detailed Description	148
9.81.2	Member Enumeration Documentation	149
9.81.2.1	ArrayActions	149
9.81.2.2	Formats	149
9.81.2.3	Notations	149
9.81.2.4	UpdateOptions	149
9.81.2.5	updateOptions	150
9.81.2.6	UserLevels	150
9.81.3	Constructor & Destructor Documentation	150
9.81.3.1	QELabel	150
9.81.3.2	QELabel	150
9.81.4	Member Function Documentation	150
9.81.4.1	dbValueChanged	150
9.81.5	Property Documentation	151
9.81.5.1	addUnits	151
9.81.5.2	allowDrop	151
9.81.5.3	arrayAction	151
9.81.5.4	displayAlarmState	151
9.81.5.5	format	151

9.81.5.6	int	152
9.81.5.7	leadingZero	152
9.81.5.8	localEnumeration	152
9.81.5.9	notation	153
9.81.5.10	pixmap0	153
9.81.5.11	pixmap1	153
9.81.5.12	pixmap2	153
9.81.5.13	pixmap3	153
9.81.5.14	pixmap4	153
9.81.5.15	pixmap5	153
9.81.5.16	pixmap6	153
9.81.5.17	pixmap7	153
9.81.5.18	precision	154
9.81.5.19	trailingZeros	154
9.81.5.20	updateOption	154
9.81.5.21	useDbPrecision	154
9.81.5.22	userLevelEnabled	154
9.81.5.23	userLevelEngineerStyle	154
9.81.5.24	userLevelScientistStyle	154
9.81.5.25	userLevelUserStyle	155
9.81.5.26	userLevelVisibility	155
9.81.5.27	variable	155
9.81.5.28	variableAsToolTip	155
9.81.5.29	variableSubstitutions	155
9.81.5.30	visible	155
9.82	QLineEdit Class Reference	156
9.82.1	Member Enumeration Documentation	157
9.82.1.1	ArrayActions	157
9.82.1.2	Formats	158
9.82.1.3	Notations	158
9.82.2	Constructor & Destructor Documentation	158
9.82.2.1	QLineEdit	158
9.82.2.2	QLineEdit	158
9.82.3	Member Function Documentation	158

9.82.3.1	dbValueChanged	158
9.82.4	Property Documentation	159
9.82.4.1	addUnits	159
9.82.4.2	arrayAction	159
9.82.4.3	format	159
9.82.4.4	int	159
9.82.4.5	leadingZero	159
9.82.4.6	localEnumeration	159
9.82.4.7	notation	160
9.82.4.8	precision	160
9.82.4.9	trailingZeros	160
9.82.4.10	useDbPrecision	160
9.83	QELineEditManager Class Reference	161
9.84	QELink Class Reference	161
9.85	QELocalEnumeration Class Reference	163
9.85.1	Detailed Description	163
9.85.2	Constructor & Destructor Documentation	164
9.85.2.1	QELocalEnumeration	164
9.85.2.2	QELocalEnumeration	164
9.85.3	Member Function Documentation	164
9.85.3.1	getLocalEnumeration	164
9.85.3.2	isDefined	164
9.85.3.3	setLocalEnumeration	164
9.85.3.4	textToDouble	165
9.85.3.5	textToInt	165
9.85.3.6	textToValue	165
9.85.3.7	valueToText	165
9.86	QELog Class Reference	165
9.87	QELogin Class Reference	168
9.88	QELoginDialog Class Reference	168
9.89	QENumericEdit Class Reference	169
9.89.1	Detailed Description	171
9.89.2	Constructor & Destructor Documentation	171
9.89.2.1	QENumericEdit	171

9.89.2.2	QENumericEdit	171
9.89.3	Member Function Documentation	171
9.89.3.1	dbValueChanged	171
9.89.4	Property Documentation	172
9.89.4.1	addUnits	172
9.89.4.2	autoScale	172
9.89.4.3	leadingZeros	172
9.89.4.4	maximum	172
9.89.4.5	minimum	172
9.89.4.6	precision	172
9.90	QENumericEditManager Class Reference	172
9.91	QEPeriodic Class Reference	173
9.91.1	Member Enumeration Documentation	176
9.91.1.1	UserLevels	176
9.91.2	Member Function Documentation	176
9.91.2.1	dbElementChanged	176
9.91.2.2	dbValueChanged	177
9.91.3	Member Data Documentation	177
9.91.3.1	allowDrop	177
9.91.4	Property Documentation	177
9.91.4.1	displayAlarmState	177
9.91.4.2	int	177
9.91.4.3	readbackLabelVariable1	177
9.91.4.4	readbackLabelVariable2	177
9.91.4.5	subscribe	178
9.91.4.6	userLevelEnabled	178
9.91.4.7	userLevelEngineerStyle	178
9.91.4.8	userLevelScientistStyle	178
9.91.4.9	userLevelUserStyle	178
9.91.4.10	userLevelVisibility	179
9.91.4.11	variableAsToolTip	179
9.91.4.12	variableSubstitutions	179
9.91.4.13	visible	179
9.91.4.14	writeButtonVariable1	179

9.91.4.15 writeButtonVariable2	179
9.92 QEPeiodicComponentData Class Reference	179
9.93 QEPeiodicTaskMenu Class Reference	180
9.94 QEPeiodicTaskMenuFactory Class Reference	180
9.95 QEpicsPV Class Reference	181
9.96 QEPlot Class Reference	182
9.96.1 Member Enumeration Documentation	185
9.96.1.1 UserLevels	185
9.96.2 Member Function Documentation	185
9.96.2.1 dbValueChanged	185
9.96.2.2 dbValueChanged	186
9.96.3 Member Data Documentation	186
9.96.3.1 allowDrop	186
9.96.4 Property Documentation	186
9.96.4.1 displayAlarmState	186
9.96.4.2 int	186
9.96.4.3 userLevelEnabled	186
9.96.4.4 userLevelEngineerStyle	187
9.96.4.5 userLevelScientistStyle	187
9.96.4.6 userLevelUserStyle	187
9.96.4.7 userLevelVisibility	187
9.96.4.8 variable1	187
9.96.4.9 variable2	187
9.96.4.10 variable3	188
9.96.4.11 variable4	188
9.96.4.12 variableAsToolTip	188
9.96.4.13 variableSubstitutions	188
9.96.4.14 visible	188
9.97 QEPushButton Class Reference	188
9.97.1 Member Enumeration Documentation	191
9.97.1.1 ArrayActions	191
9.97.1.2 CreationOptionNames	192
9.97.1.3 Formats	192
9.97.1.4 Notations	192

9.97.1.5	UpdateOptions	192
9.97.1.6	UserLevels	193
9.97.2	Constructor & Destructor Documentation	193
9.97.2.1	QEPushButton	193
9.97.2.2	QEPushButton	193
9.97.3	Member Function Documentation	193
9.97.3.1	clicked	193
9.97.3.2	dbValueChanged	193
9.97.3.3	launchGui	193
9.97.3.4	pressed	194
9.97.3.5	released	194
9.97.4	Property Documentation	194
9.97.4.1	addUnits	194
9.97.4.2	alignment	194
9.97.4.3	allowDrop	194
9.97.4.4	altReadbackVariable	194
9.97.4.5	arguments	194
9.97.4.6	arrayAction	195
9.97.4.7	clickCheckedText	195
9.97.4.8	clickText	195
9.97.4.9	confirmAction	195
9.97.4.10	creationOption	196
9.97.4.11	displayAlarmState	196
9.97.4.12	format	196
9.97.4.13	guiFile	196
9.97.4.14	int	196
9.97.4.15	labelText	197
9.97.4.16	leadingZero	197
9.97.4.17	localEnumeration	197
9.97.4.18	notation	198
9.97.4.19	password	198
9.97.4.20	pixmap0	198
9.97.4.21	pixmap1	198
9.97.4.22	pixmap2	198

9.97.4.23 pixmap3	198
9.97.4.24 pixmap4	198
9.97.4.25 pixmap5	198
9.97.4.26 pixmap6	198
9.97.4.27 pixmap7	199
9.97.4.28 precision	199
9.97.4.29 pressText	199
9.97.4.30 prioritySubstitutions	199
9.97.4.31 program	199
9.97.4.32 releaseText	199
9.97.4.33 subscribe	199
9.97.4.34 trailingZeros	200
9.97.4.35 updateOption	200
9.97.4.36 useDbPrecision	200
9.97.4.37 userLevelEnabled	200
9.97.4.38 userLevelEngineerStyle	200
9.97.4.39 userLevelScientistStyle	200
9.97.4.40 userLevelUserStyle	201
9.97.4.41 userLevelVisibility	201
9.97.4.42 variable	201
9.97.4.43 variableAsToolTip	201
9.97.4.44 variableSubstitutions	201
9.97.4.45 visible	201
9.97.4.46 writeOnClick	201
9.97.4.47 writeOnPress	202
9.97.4.48 writeOnRelease	202
9.98 QEPVNameLists Class Reference	202
9.99 QEPvProperties Class Reference	202
9.99.1 Member Function Documentation	203
9.99.1.1 restoreConfiguration	203
9.99.1.2 saveConfiguration	204
9.99.1.3 scaleBy	204
9.99.2 Property Documentation	204
9.99.2.1 variable	204

9.99.2.2	variableSubstitutions	204
9.100	QEPvPropertiesManager Class Reference	204
9.101	QERadioButton Class Reference	205
9.101.1	Member Enumeration Documentation	208
9.101.1.1	ArrayActions	208
9.101.1.2	CreationOptionNames	208
9.101.1.3	Formats	208
9.101.1.4	Notations	209
9.101.1.5	UpdateOptions	209
9.101.1.6	UserLevels	209
9.101.2	Constructor & Destructor Documentation	210
9.101.2.1	QERadioButton	210
9.101.2.2	QERadioButton	210
9.101.3	Member Function Documentation	210
9.101.3.1	clicked	210
9.101.3.2	dbValueChanged	210
9.101.3.3	launchGui	210
9.101.3.4	pressed	210
9.101.3.5	released	211
9.101.4	Property Documentation	211
9.101.4.1	addUnits	211
9.101.4.2	alignment	211
9.101.4.3	allowDrop	211
9.101.4.4	arguments	211
9.101.4.5	arrayAction	211
9.101.4.6	clickCheckedText	212
9.101.4.7	clickText	212
9.101.4.8	confirmAction	212
9.101.4.9	creationOption	212
9.101.4.10	displayAlarmState	212
9.101.4.11	format	213
9.101.4.12	guiFile	213
9.101.4.13	nt	213
9.101.4.14	labelText	213

9.101.4.15leadingZero	213
9.101.4.16localEnumeration	213
9.101.4.17notation	214
9.101.4.18password	214
9.101.4.19pixmap0	214
9.101.4.20pixmap1	214
9.101.4.21pixmap2	215
9.101.4.22pixmap3	215
9.101.4.23pixmap4	215
9.101.4.24pixmap5	215
9.101.4.25pixmap6	215
9.101.4.26pixmap7	215
9.101.4.27precision	215
9.101.4.28pressText	215
9.101.4.29prioritySubstitutions	216
9.101.4.30program	216
9.101.4.31releaseText	216
9.101.4.32subscribe	216
9.101.4.33trailingZeros	216
9.101.4.34updateOption	216
9.101.4.35useDbPrecision	216
9.101.4.36userLevelEnabled	217
9.101.4.37userLevelEngineerStyle	217
9.101.4.38userLevelScientistStyle	217
9.101.4.39userLevelUserStyle	217
9.101.4.40userLevelVisibility	217
9.101.4.41variable	218
9.101.4.42variableAsToolTip	218
9.101.4.43variableSubstitutions	218
9.101.4.44visible	218
9.101.4.45writeOnClick	218
9.101.4.46writeOnPress	218
9.101.4.47writeOnRelease	218
9.102QERecipe Class Reference	219

9.103QERRecordFieldName Class Reference	221
9.104QERRecordSpec Class Reference	221
9.105QERRecordSpecList Class Reference	222
9.106QEScript Class Reference	222
9.107QEShape Class Reference	224
9.107.1 Detailed Description	228
9.107.2 Member Enumeration Documentation	228
9.107.2.1 animationOptions	228
9.107.2.2 shapeOptions	228
9.107.2.3 UserLevels	228
9.107.3 Constructor & Destructor Documentation	228
9.107.3.1 QEShape	228
9.107.3.2 QEShape	228
9.107.4 Member Function Documentation	229
9.107.4.1 dbValueChanged1	229
9.107.4.2 dbValueChanged2	229
9.107.4.3 dbValueChanged3	229
9.107.4.4 dbValueChanged4	229
9.107.4.5 dbValueChanged5	229
9.107.4.6 dbValueChanged6	229
9.107.5 Property Documentation	229
9.107.5.1 allowDrop	229
9.107.5.2 animation1	230
9.107.5.3 animation2	230
9.107.5.4 animation3	230
9.107.5.5 animation4	230
9.107.5.6 animation5	230
9.107.5.7 animation6	230
9.107.5.8 color1	230
9.107.5.9 color10	230
9.107.5.10color2	231
9.107.5.11color3	231
9.107.5.12color4	231
9.107.5.13color5	231

9.107.5.14color6	231
9.107.5.15color7	231
9.107.5.16color8	231
9.107.5.17color9	231
9.107.5.18displayAlarmState	231
9.107.5.19nt	232
9.107.5.20offset1	232
9.107.5.21offset2	232
9.107.5.22offset3	232
9.107.5.23offset4	232
9.107.5.24offset5	232
9.107.5.25offset6	232
9.107.5.26point1	233
9.107.5.27point10	233
9.107.5.28point2	233
9.107.5.29point3	233
9.107.5.30point4	233
9.107.5.31point5	233
9.107.5.32point6	233
9.107.5.33point7	233
9.107.5.34point8	234
9.107.5.35point9	234
9.107.5.36scale2	234
9.107.5.37scale3	234
9.107.5.38scale4	234
9.107.5.39scale5	234
9.107.5.40scale6	234
9.107.5.41userLevelEnabled	234
9.107.5.42userLevelEngineerStyle	235
9.107.5.43userLevelScientistStyle	235
9.107.5.44userLevelUserStyle	235
9.107.5.45userLevelVisibility	235
9.107.5.46variable1	235
9.107.5.47variable2	235

9.107.5.48variable3	236
9.107.5.49variable4	236
9.107.5.50variable5	236
9.107.5.51variable6	236
9.107.5.52variableAsToolTip	236
9.107.5.53variableSubstitutions	236
9.107.5.54visible	236
9.108QESlider Class Reference	237
9.108.1 Member Enumeration Documentation	238
9.108.1.1 UserLevels	238
9.108.2 Member Function Documentation	239
9.108.2.1 dbValueChanged	239
9.108.3 Member Data Documentation	239
9.108.3.1 writeOnChange	239
9.108.4 Property Documentation	239
9.108.4.1 allowDrop	239
9.108.4.2 displayAlarmState	239
9.108.4.3 int	239
9.108.4.4 subscribe	240
9.108.4.5 userLevelEnabled	240
9.108.4.6 userLevelEngineerStyle	240
9.108.4.7 userLevelScientistStyle	240
9.108.4.8 userLevelUserStyle	240
9.108.4.9 userLevelVisibility	241
9.108.4.10variable	241
9.108.4.11variableAsToolTip	241
9.108.4.12variableSubstitutions	241
9.108.4.13visible	241
9.109QESpinBox Class Reference	241
9.109.1 Member Enumeration Documentation	243
9.109.1.1 UserLevels	243
9.109.2 Member Function Documentation	244
9.109.2.1 dbValueChanged	244
9.109.3 Property Documentation	244

9.109.3.1 allowDrop	244
9.109.3.2 displayAlarmState	244
9.109.3.3 int	244
9.109.3.4 subscribe	244
9.109.3.5 userLevelEnabled	245
9.109.3.6 userLevelEngineerStyle	245
9.109.3.7 userLevelScientistStyle	245
9.109.3.8 userLevelUserStyle	245
9.109.3.9 userLevelVisibility	245
9.109.3.10variable	246
9.109.3.11variableAsToolTip	246
9.109.3.12variableSubstitutions	246
9.109.3.13visible	246
9.110QString Class Reference	246
9.111QStringFormatting Class Reference	247
9.111.1 Member Enumeration Documentation	248
9.111.1.1 arrayActions	248
9.111.1.2 formats	248
9.111.1.3 notations	249
9.112QStringFormattingMethods Class Reference	249
9.113QESTripChart Class Reference	250
9.113.1 Member Function Documentation	252
9.113.1.1 restoreConfiguration	252
9.113.1.2 saveConfiguration	252
9.113.2 Property Documentation	252
9.113.2.1 variableSubstitutions	252
9.114QESTripChartAdjustPVDialo Class Reference	253
9.115QESTripChartContextMenu Class Reference	253
9.115.1 Constructor & Destructor Documentation	253
9.115.1.1 QESTripChartContextMenu	253
9.116QESTripChartItem Class Reference	254
9.117QESTripChartItemDialog Class Reference	255
9.118QESTripChartNames Class Reference	255
9.119QESTripChartRangeDialog Class Reference	256

9.120QEStripChartTimeDialog Class Reference	256
9.121QEStripChartToolBar Class Reference	257
9.121.1 Detailed Description	258
9.122QESubstitutedLabel Class Reference	258
9.122.1 Member Data Documentation	259
9.122.1.1 labelText	259
9.122.2 Property Documentation	259
9.122.2.1 textSubstitutions	259
9.123QEToolTip Class Reference	259
9.124QEWidget Class Reference	261
9.124.1 Detailed Description	263
9.124.2 Member Function Documentation	264
9.124.2.1 activate	264
9.124.2.2 deactivate	264
9.124.2.3 defaultFileLocation	264
9.124.2.4 findQEFile	264
9.124.2.5 getColor	264
9.124.2.6 getFrameworkVersion	264
9.124.2.7 getMessageSourceId	264
9.124.2.8 getQcaltem	265
9.124.2.9 getQWidget	265
9.124.2.10openQEFile	265
9.124.2.11processAlarmInfo	265
9.124.2.12readNow	265
9.124.2.13restoreConfiguration	265
9.124.2.14saveConfiguration	265
9.124.2.15scaleBy	266
9.124.2.16setMessageSourceId	266
9.124.2.17setVariableNameAndSubstitutions	266
9.124.2.18writeNow	266
9.125QEWidgets Class Reference	266
9.126qcastatemachine::ReadQCaStateMachine Class Reference	267
9.127ROInfo Class Reference	267
9.128SaveRestoreSignal Class Reference	268

9.128.1 Member Function Documentation	268
9.128.1.1 restore	268
9.128.1.2 save	268
9.129saveRestoreSlot Class Reference	268
9.130selectMenu Class Reference	269
9.131standardProperties Class Reference	269
9.132StateMachineTemplate Class Reference	271
9.133qcastatemachine::SubscriptionQCaStateMachine Class Reference	271
9.134trace Class Reference	272
9.135TrackRange Class Reference	272
9.136userInfoStruct Class Reference	273
9.137QEPeriodic::userInfoStructArray Struct Reference	273
9.138userLevelSignal Class Reference	273
9.139userLevelSlot Class Reference	274
9.140userLevelTypes Class Reference	274
9.140.1 Member Enumeration Documentation	274
9.140.1.1 userLevels	274
9.141UserMessage Class Reference	274
9.141.1 Detailed Description	276
9.142UserMessageSignal Class Reference	277
9.142.1 Detailed Description	278
9.143UserMessageSlot Class Reference	278
9.143.1 Detailed Description	278
9.144ValueScaling Class Reference	279
9.145VideoWidget Class Reference	279
9.146WidgetRef Class Reference	280
9.147qcastatemachine::WriteQCaStateMachine Class Reference	280
9.148zoomMenu Class Reference	281

Chapter 1

QE framework - EPICS aware Qt Widgets and data access classes

- QE is a layered software framework for accessing EPICS data using Channel Access on a range of platforms.
- The QE framework provides object oriented C++ access to control systems using EPICS (Experimental Physics and Industrial Control System). It is based on Qt, a widely used cross-platform application development framework.
- GUI or console based applications can be written that use QE at several levels. QE includes Qt plugin libraries, EPICS aware widgets, data formatting classes, and classes for accessing raw EPICS data in a Qt friendly way.
- QE also includes an application - QEgui - for displaying forms produced by the Qt development tool 'Designer'. Using this application a complete EPICS GUI system can be generated without writing any code. A GUI system produced in this way can interact with existing EPICS display tools such as EDM.
- QE handles much of the complexities of Channel Access including initiating and managing a channel. Applications using QE can interact with Channel Access using Qt based classes and data types. Channel Access updates are delivered using Qt's signals and slots mechanism.

1.1 Documentation

Support documents can be found in the [documentation](#) section of the epicsqt sourceforge project. The framework download (available on the epicsqt sourceforge [homepage](#)) also includes this documentation as well as full Doxygen generated documentation of all the epicsqt classes and widgets.

1.2 License

epicsqt is distributed under the terms of the [GNU General Public License](#).

1.3 Platforms

epicsqt might be usable in all environments where you find [Qt](#). It is compatible with Qt ≥ 4.4 .

1.4 Screenshots

- [ASgui screen shots](#)
- [other applications using epicsqt widgets](#)
- [Qt Designer](#)
- [Qt Creator](#)

Screenshots are only available in the HTML docs.

1.5 Downloads

Stable releases and development snapshots are available at the epicsqt [project page](#).

For getting a development snapshot from the SVN repository:

```
svn svn co https://epicsqt.svn.sourceforge.net/svnroot/epicsqt epicsqt
```

Alternatively, get a packaged file (epicsqt.tar.gz) from the [epicsqt repository site](#).

1.6 Installation

Read [QE_GettingStarted.pdf](#) in the documentation for setting up an environment for building or using the epicsqt framework.

To build the framework, open epicsqt.pro in QtCreator, ensure shadow build is turned off, and hit build.

The resultant library libQEPlugin.so will need to be installed or referenced up according to how it is to be used - see QE_GettingStarted.pdf for details.

Any Qt specific queries? start at [the Qt Project](#)

1.7 Support

Visit the sourceforge epicsqt [support page](#) for assistance.

1.8 Related Projects

[Qwt](#), The core of a Channel Access aware plotting widget.

1.9 Credits:

Authors:

Andrew Rhyder, Anthony Owen, Glenn Jackson

Project admin:

Andrew Rhyder <andrew.rhyder@synchrotron.org.au>

Chapter 2

GNU General Public License

The EPICS QT Framework is free software: you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation, either version 3 of the License, or (at your option) any later version.

The EPICS QT Framework is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.

See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with the EPICS QT Framework.

If not, see "<http://www.gnu.org/licenses/>

Chapter 3

ASgui screen shots

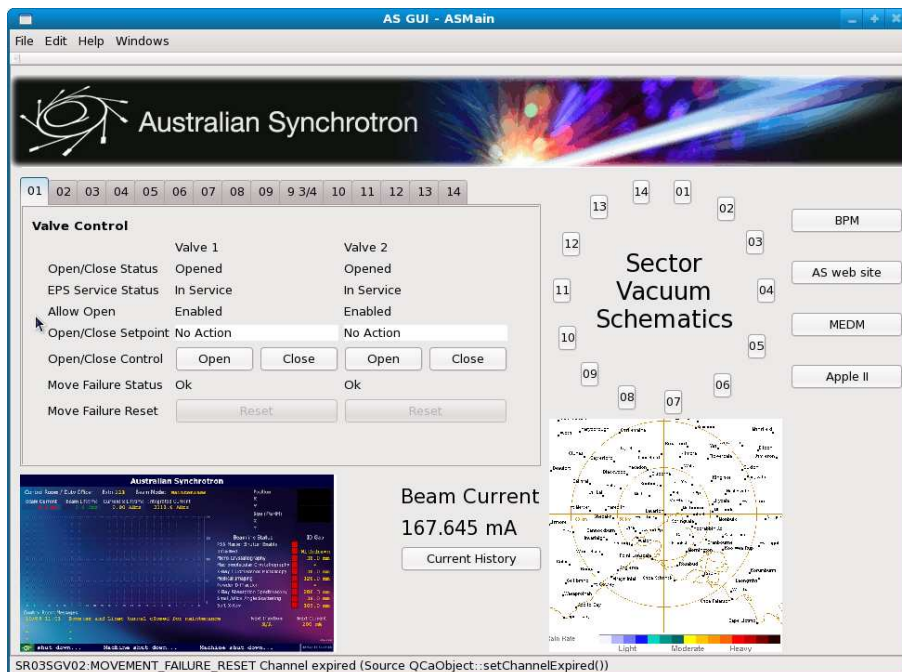


Figure 3.1: Australian Synchrotron mock up

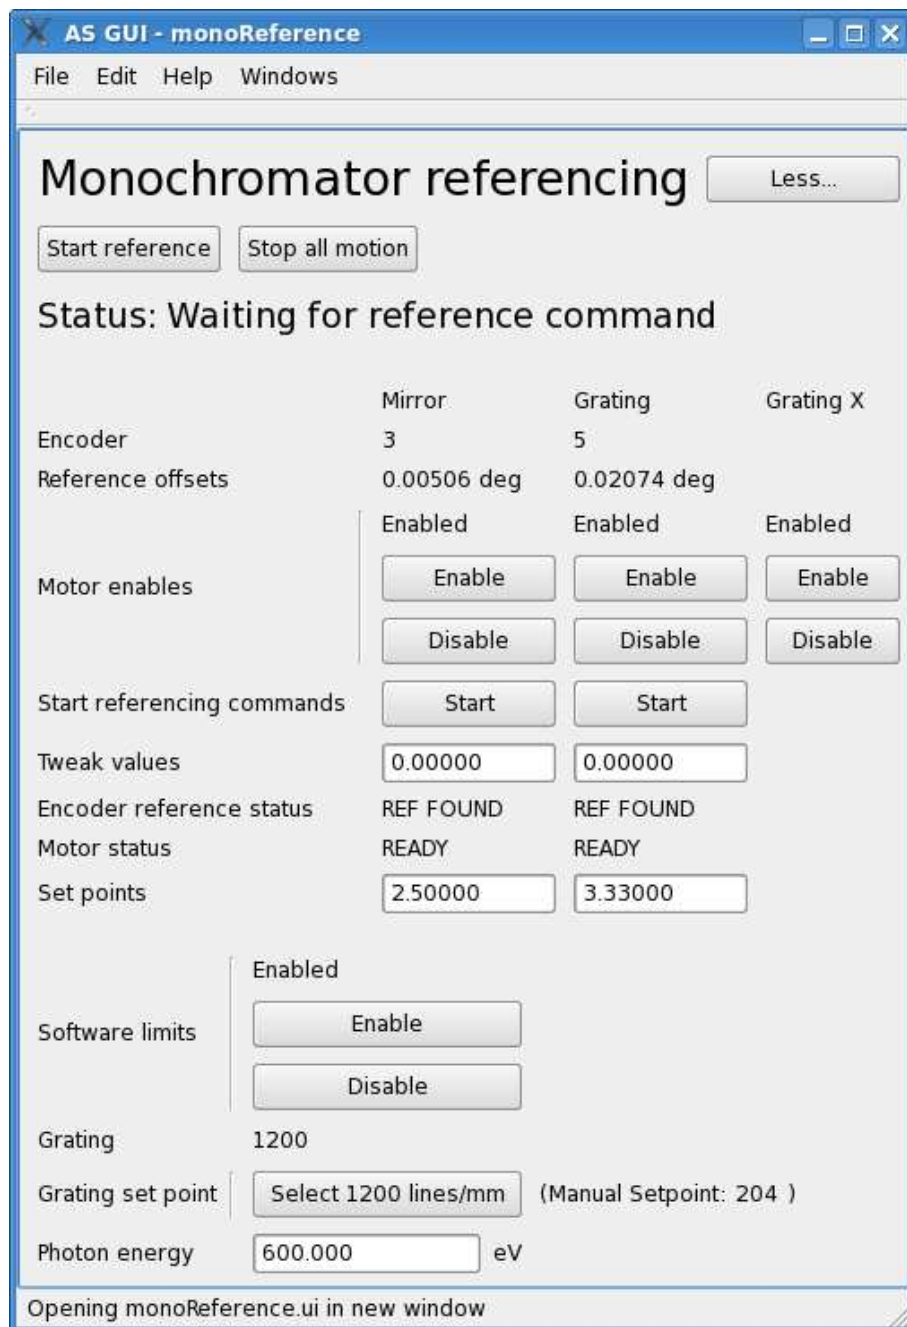


Figure 3.2: Monochromator referencing

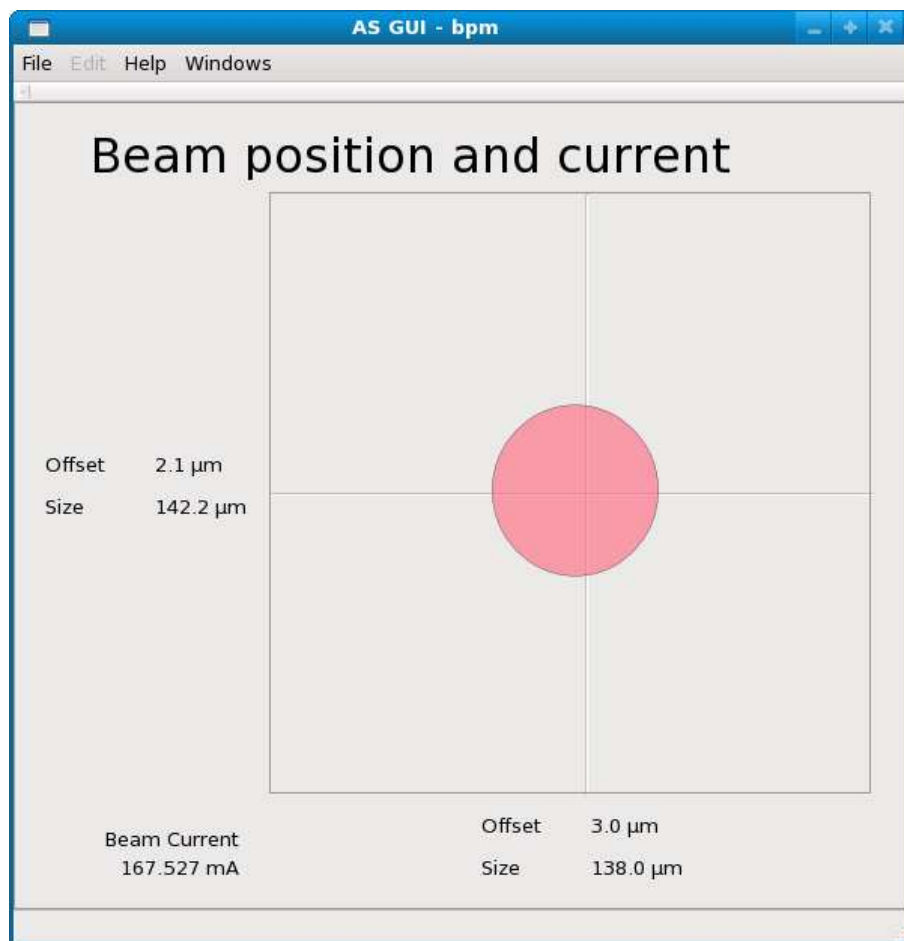


Figure 3.3: Beam position monitor

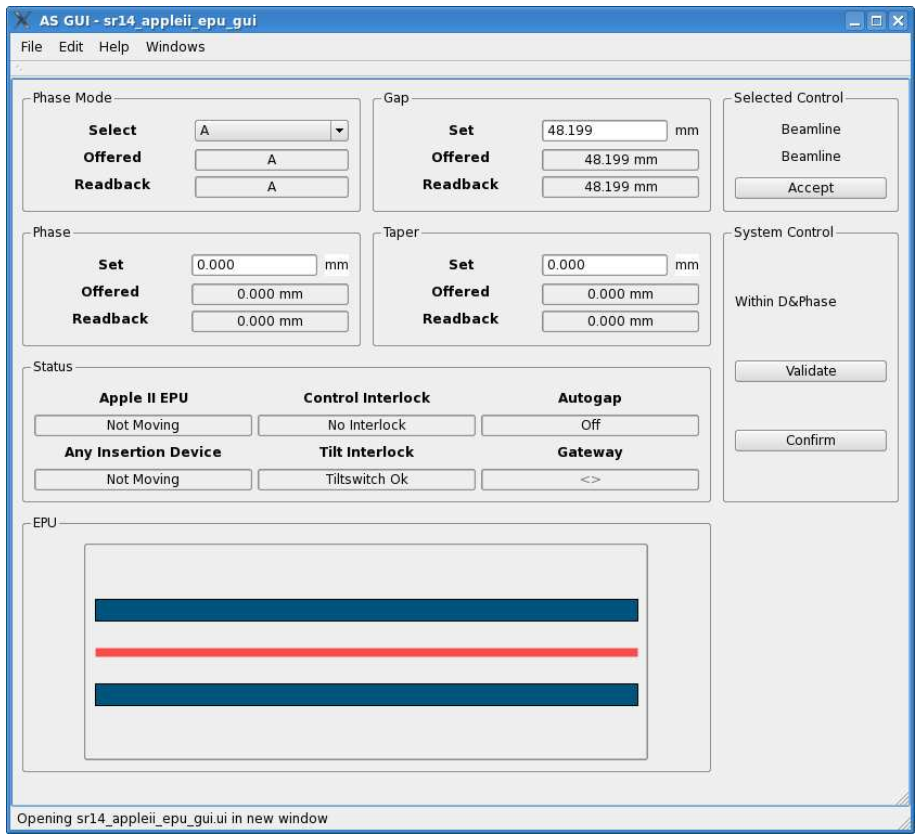


Figure 3.4: Insertion device



Figure 3.5: Injection efficiency monitor

Chapter 4

other applications using epicsqt widgets

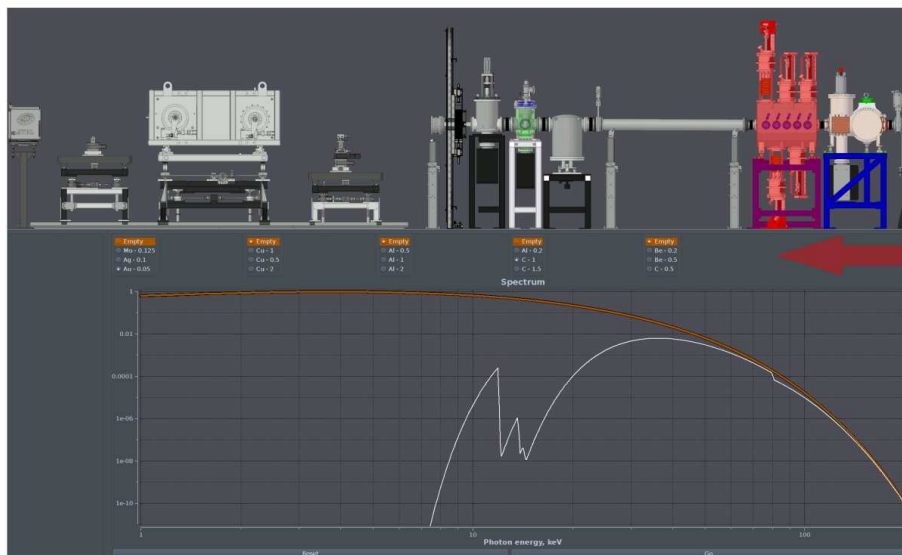


Figure 4.1: Medical Imaging beamline

2B SampleTable Z <@SR08ID01OPI01>

PV name: View mode:

Description:

Precision: Units:

Message:

User: Move absolutely: Raw:

User: = Hi limit

Resolution: *

Raw: + Lo limit

Offset:

Speed:

Acceleration:

Normal:

Backlash:

log:

Backlash:

Figure 4.2: Motor controller

MotorMx <@SR08ID01OPI01>

- ▲ ▼	DEI Theta Mono	<input type="text" value="109.5mm"/>	< 0.1 >	UNDO
- ▲ ▼	DEI Mono Z	<input type="text" value="-0.3mm"/>	< 0.1 >	UNDO
- ▲ ▼	2B Sample Table Y	<input type="text" value="0mm"/>	< 1 >	UNDO
- ▲ ▼	2B SampleTable Z	<input type="text" value="6mm"/>	< 1 >	UNDO
- ▲ ▼	2B Detector Table Z	<input type="text" value="42mm"/>	< 5 >	UNDO
- ▲ ▼	2B Sample Rotate	<input type="text" value="-1deg"/>	< 1 >	UNDO
- ▲ ▼	2B Detector Table Y	<input type="text" value="13.9025mm"/>	< 1 >	UNDO
- ▲ ▼	SETUP	<input type="text" value="0"/>	< relative >	STOP
- ▲ ▼	SLW01:LEFT	<input type="text" value="9.99975mm"/>	< 3456 >	UNDO

Figure 4.3: Motor controller

Qt Designer

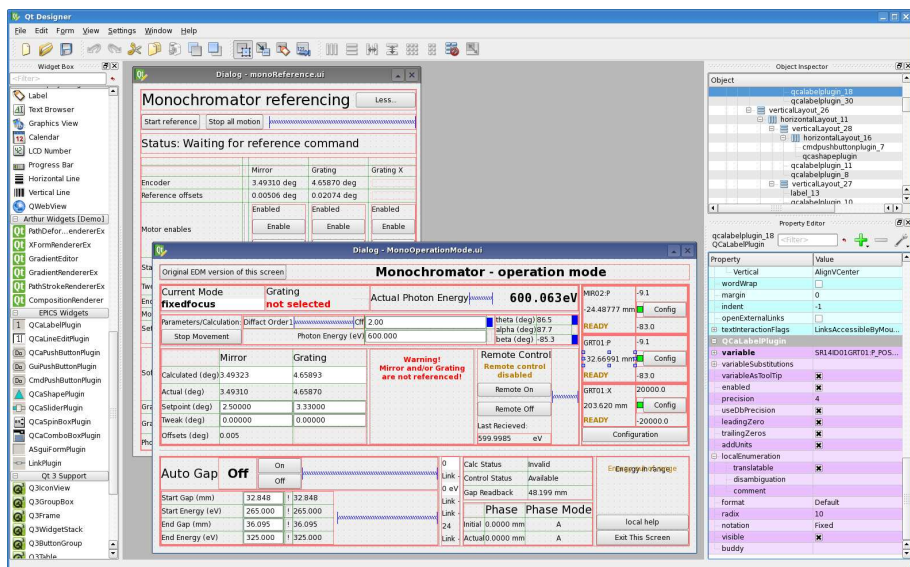


Figure 5.1: Editing multiple GUIs

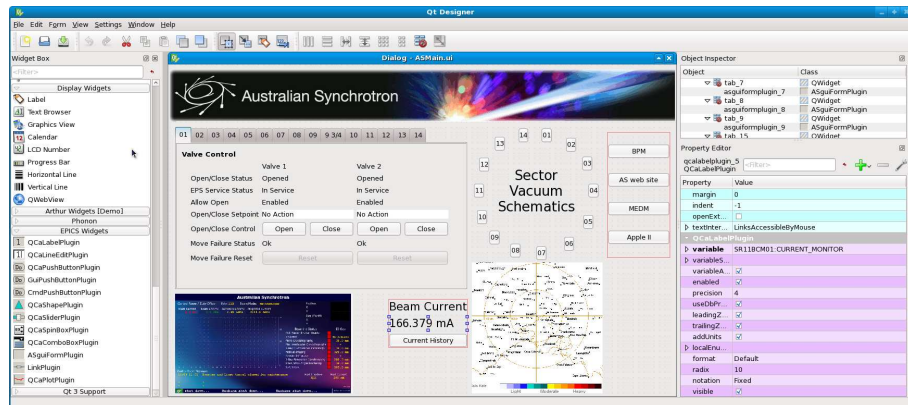


Figure 5.2: Editing a GUI

Chapter 6

Qt Creator

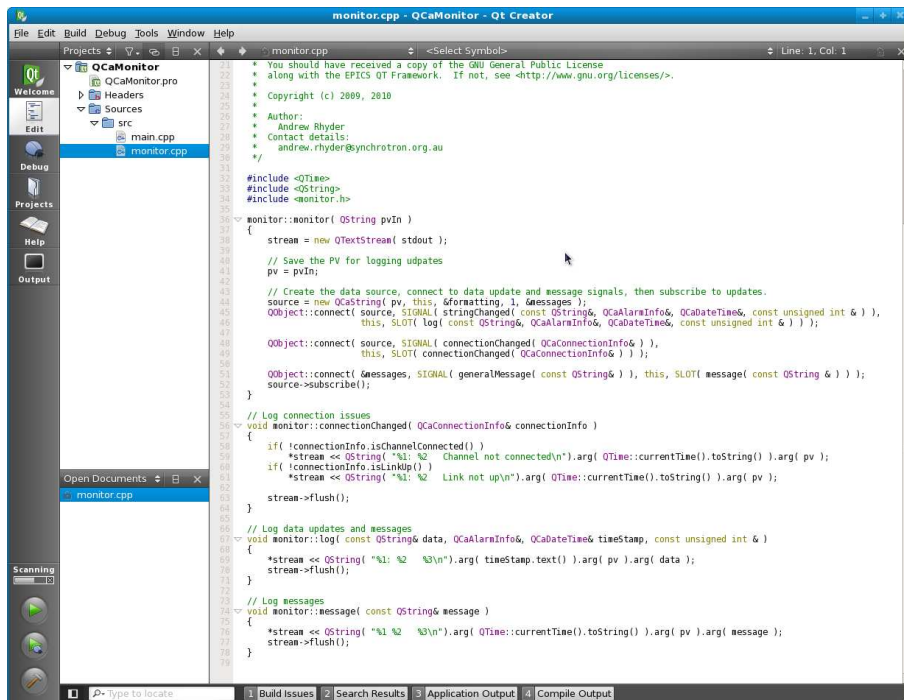


Figure 6.1: Application using epicsqt data source classes

Chapter 7

Class Index

7.1 Class Hierarchy

This inheritance list is sorted roughly, but not completely, alphabetically:

_Field	27
_Item	28
_QDialogItem	28
_QPushButtonGroup	28
_QTableWidgetFileBrowser	29
_QTableWidgetLog	29
_QTableWidgetScript	29
QEAnalogIndicator::Band	30
QEAnalogIndicator::BandList	30
ChartState	30
ContainerProfile	31
QEWidget	261
QEAnalogProgressBar	68
QEBitStatus	76
QEComboBox	96
QEConfiguredLayout	101
QEFileBrowser	105
QEForm	108
QEFrame	110
QEPvProperties	202
QEGenericButton	113
QECheckBox	82
QEPushButton	188
QERadioButton	205
QEGenericEdit	115
QELineEdit	156
QENumericEdit	169
QEGroupBox	121
QEImage	125

QELabel	145
QELink	161
QELog	165
QELogin	168
QEPeiodic	173
QEPlot	182
QERecipe	219
QEScript	222
QEShape	224
QESlider	237
QESpinBox	241
QEStripChart	250
QESubstitutedLabel	258
contextMenu	33
QEWidget	261
contextMenuObject	35
QEPeiodic::elementInfoStruct	35
flipRotateMenu	36
imageContextMenu	36
imageInfo	37
QEImage	125
imageMarkup	38
VideoWidget	279
localBrightnessContrast	40
loginWidget	40
managePixmaps	40
QEGenericButton	113
QELabel	145
markupItem	42
markupBeam	41
markupHLine	42
markupLine	44
markupRegion	45
markupTarget	46
markupText	47
markupVLine	47
message_types	48
QEStripChartToolBar::OwnWidgets	49
PeriodicDialog	49
PeriodicElementSetupForm	49
PeriodicSetupDialog	50
PersistanceManager	50
PMContext	51
PMElement	51
PMElementList	52
QEStripChart::PrivateData	52
profilePlot	53
PublishedProfile	53

PushButtonSpecifications	54
QBitStatus	54
QEBitStatus	76
QCaAlarmInfo	56
QCaConnectionInfo	57
QCaDataPoint	57
QCaDataPointList	57
QCaDateTime	58
QCaEventFilter	58
QCaEventItem	58
QCaEventUpdate	59
QCaInstalledFiltersListItem	59
qcaobject::QCaObject	60
QEByteArray	81
QEFloating	106
QEInteger	142
QEString	246
QCaVariableNamePropertyManager	62
QEAnalogIndicator	62
QEAnalogProgressBar	68
QEChartStateLists	82
QECheckBoxManager	95
QEConfiguredLayoutManager	103
QEDragDrop	103
QEWidget	261
QEFloatingArray	107
QEFloatingFormatting	108
QEIntegerArray	143
QEIntegerFormatting	144
QELineEditManager	161
QELocalEnumeration	163
QELoginDialog	168
QENumericEditManager	172
QEPeriodicComponentData	179
QEPeriodicTaskMenu	180
QEPeriodicTaskMenuFactory	180
QEpicsPV	181
QEPVNameLists	202
QEPvPropertiesManager	204
QERecordFieldName	221
QERecordSpec	221
QERecordSpecList	222
QEStringFormatting	247
QEStringFormattingMethods	249
QEAnalogProgressBar	68
QEGenericButton	113
QELabel	145
QELineEdit	156

QEStripChartAdjustPVDialo	253
QEStripChartContextMenu	253
QEStripChartItem	254
QEStripChartItemDialog	255
QEStripChartNames	255
QEStripChartRangeDialog	256
QEStripChartTimeDialog	256
QEStripChartToolBar	257
QEToolTip	259
QEWidget	261
QEWidgets	266
ROInfo	267
SaveRestoreSignal	268
saveRestoreSlot	268
selectMenu	269
standardProperties	269
QEWidget	261
StateMachineTemplate	271
qcastatemachine::QCaStateMachine	61
qcastatemachine::ConnectionQCaStateMachine	31
qcastatemachine::ReadQCaStateMachine	267
qcastatemachine::SubscriptionQCaStateMachine	271
qcastatemachine::WriteQCaStateMachine	280
trace	272
TrackRange	272
userInfoStruct	273
QEPeiodic::userInfoStructArray	273
userLevelSignal	273
userLevelSlot	274
userLevelTypes	274
UserMessage	274
QEWidget	261
UserMessageSignal	277
UserMessageSlot	278
ValueScaling	279
WidgetRef	280
zoomMenu	281

Chapter 8

Class Index

8.1 Class List

Here are the classes, structs, unions and interfaces with brief descriptions:

_Field	27
_Item	28
_QDialogItem	28
_QPushButtonGroup	28
_QTableWidgetFileBrowser	29
_QTableWidgetLog	29
_QTableWidgetScript	29
QEAnalogIndicator::Band	30
QEAnalogIndicator::BandList	30
ChartState	30
qcastatemachine::ConnectionQCaStateMachine	31
ContainerProfile	31
contextMenu	33
contextMenuObject	35
QEPeriodic::elementInfoStruct	35
flipRotateMenu	36
imageContextMenu	36
imageInfo	37
imageMarkup	38
localBrightnessContrast	40
loginWidget	40
managePixmaps	40
markupBeam	41
markupHLine	42
markupItem	42
markupLine	44
markupRegion	45
markupTarget	46
markupText	47

markupVLine	47
message_types	48
QEStripChartToolBar::OwnWidgets	49
PeriodicDialog	49
PeriodicElementSetupForm	49
PeriodicSetupDialog	50
PersistenceManager	50
PMContext	51
PMElement	51
PMElementList	52
QEStripChart::PrivateData	52
profilePlot	53
PublishedProfile	53
PushButtonSpecifications	54
QBitStatus	54
QCaAlarmInfo	56
QCaConnectionInfo	57
QCaDataPoint	57
QCaDataPointList	57
QCaDateTime	58
QCaEventFilter	58
QCaEventItem	58
QCaEventUpdate	59
QCaInstalledFiltersListItem	59
qcaobject::QCaObject	60
qcastatemachine::QCaStateMachine	61
QCaVariableNamePropertyManager	62
QEAAnalogIndicator	62
QEAAnalogProgressBar	68
QEBitStatus	76
QEByteArray	81
QEChartStateLists	82
QECheckBox	82
QECheckBoxManager	95
QEComboBox	96
QEConfiguredLayout	101
QEConfiguredLayoutManager	103
QEDragDrop	103
QEFileBrowser	105
QEFloating	106
QEFloatingArray	107
QEFloatingFormatting	108
QEForm	108
QEFrame	110
QEGenericButton	113
QEGenericEdit	115
QEGroupBox	121
QEImage	125
QEInteger	142
QEIntegerArray	143

QEIntegerFormatting	144
QELabel	145
QELineEdit	156
QELineEditManager	161
QELink	161
QELocalEnumeration	163
QELog	165
QELogin	168
QELoginDialog	168
QENumericEdit (The QENumericEdit class This class is similar to QELineEdit (both of which are derived from QLineEdit). However this class is tailored specifically for editing numerical values)	169
QENumericEditManager	172
QEPeriodic	173
QEPeriodicComponentData	179
QEPeriodicTaskMenu	180
QEPeriodicTaskMenuFactory	180
QEpicsPV	181
QEPlot	182
QEPushButton	188
QEPVNameLists	202
QEPvProperties	202
QEPvPropertiesManager	204
QERadioButton	205
QERecipe	219
QERecordFieldName	221
QERecordSpec	221
QERecordSpecList	222
QEScript	222
QEShape	224
QESlider	237
QESpinBox	241
QEString	246
QEStringFormatting	247
QEStringFormattingMethods	249
QEStripChart	250
QEStripChartAdjustPVDIALOG	253
QEStripChartContextMenu	253
QEStripChartItem	254
QEStripChartItemDialog	255
QEStripChartNames	255
QEStripChartRangeDialog	256
QEStripChartTimeDialog	256
QEStripChartToolBar (This class holds all the StripChart tool bar widgets)	257
QESubstitutedLabel	258
QEToolTip	259
QEWidget	261
QEWidgets	266
qcastatemachine::ReadQCaStateMachine	267
ROLinfo	267

SaveRestoreSignal	268
saveRestoreSlot	268
selectMenu	269
standardProperties	269
StateMachineTemplate	271
qcastatemachine::SubscriptionQCaStateMachine	271
trace	272
TrackRange	272
userInfoStruct	273
QEPeiodic::userInfoStructArray	273
userLevelSignal	273
userLevelSlot	274
userLevelTypes	274
UserMessage	274
UserMessageSignal	277
UserMessageSlot	278
ValueScaling	279
VideoWidget	279
WidgetRef	280
qcastatemachine::WriteQCaStateMachine	280
zoomMenu	281

Chapter 9

Class Documentation

9.1 _Field Class Reference

Public Member Functions

- [QEObject](#) * **getObject** ()
- void **setObject** (QString *pValue)
- QString **getName** ()
- void **setName** (QString pValue)
- QString **getProcessVariable** ()
- void **setProcessVariable** (QString pValue)
- void **setJoin** (bool pValue)
- bool **getJoin** ()
- int **getType** ()
- void **setType** (int pValue)
- QString **getGroup** ()
- void **setGroup** (QString pValue)
- QString **getVisible** ()
- void **setVisible** (QString pValue)
- QString **getEditable** ()
- void **setEditable** (QString pValue)
- bool **getVisibility** ()
- void **setVisibility** (bool pValue)

Public Attributes

- [QEObject](#) * **qCaWidget**

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEConfiguredLayout/QEConfiguredLayout.h
- /tmp/epicsqt/trunk/framework/widgets/QEConfiguredLayout/QEConfiguredLayout.cpp

9.2 `_Item` Class Reference

Public Member Functions

- void **setName** (QString pValue)
- QString **getName** ()
- void **setSubstitution** (QString pValue)
- QString **getSubstitution** ()
- void **setVisible** (QString pValue)
- QString **getVisible** ()

Public Attributes

- QList< `_Field` * > **fieldList**

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEConfiguredLayout/QEConfiguredLayout.h
- /tmp/epicsqt/trunk/framework/widgets/QEConfiguredLayout/QEConfiguredLayout.cpp

9.3 `_QDialogItem` Class Reference

Public Member Functions

- **_QDialogItem** (QWidget *pParent=0, QString pItemName="", QString pGroupName="", QList< `_Field` * > *pCurrentFieldList=0, Qt::WindowFlags pF=0)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEConfiguredLayout/QEConfiguredLayout.h
- /tmp/epicsqt/trunk/framework/widgets/QEConfiguredLayout/QEConfiguredLayout.cpp

9.4 `_QPushButtonGroup` Class Reference

Public Slots

- void **buttonGroupClicked** ()

Public Member Functions

- **_QPushButtonGroup** (QWidget *pParent=0, QString pItemName="", QString pGroupName="", QList< `_Field` * > *pCurrentFieldList=0)
- void **mousePressEvent** (QMouseEvent *qMouseEvent)

- void **keyPressEvent** (QKeyEvent *pKeyEvent)
- void **showDialogGroup** ()

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEConfiguredLayout/QEConfiguredLayout.h
- /tmp/epicsqt/trunk/framework/widgets/QEConfiguredLayout/QEConfiguredLayout.cpp

9.5 **_QTableWidgetFileBrowser Class Reference**

Public Member Functions

- **_QTableWidgetFileBrowser** (QWidget *pParent=0)
- void **refreshSize** ()
- void **resizeEvent** (QResizeEvent *)
- void **resize** (int w, int h)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEFileBrowser/QEFileBrowser.h
- /tmp/epicsqt/trunk/framework/widgets/QEFileBrowser/QEFileBrowser.cpp

9.6 **_QTableWidgetLog Class Reference**

Public Member Functions

- **_QTableWidgetLog** (QWidget *pParent=0)
- void **refreshSize** ()
- void **resizeEvent** (QResizeEvent *)
- void **resize** (int w, int h)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QELog/QELog.h
- /tmp/epicsqt/trunk/framework/widgets/QELog/QELog.cpp

9.7 **_QTableWidgetScript Class Reference**

Public Member Functions

- **_QTableWidgetScript** (QWidget *pParent=0)
- void **refreshSize** ()

- void **resizeEvent** (QResizeEvent *)
- void **resize** (int w, int h)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEScript/QEScript.h
- /tmp/epicsqt/trunk/framework/widgets/QEScript/QEScript.cpp

9.8 QEAnalogIndicator::Band Struct Reference

Public Attributes

- double **lower**
- double **upper**
- QColor **colour**

The documentation for this struct was generated from the following file:

- /tmp/epicsqt/trunk/framework/widgets/QEAnalogIndicator/QEAnalogIndicator.h

9.9 QEAnalogIndicator::BandList Class Reference

The documentation for this class was generated from the following file:

- /tmp/epicsqt/trunk/framework/widgets/QEAnalogIndicator/QEAnalogIndicator.h

9.10 ChartState Class Reference

Public Member Functions

- void **saveConfiguration** (PMElement &parentElement)
- void **restoreConfiguration** (PMElement &parentElement)

Public Attributes

- bool **isNormalVideo**
- QEStripChartNames::ChartTimeModes **chartTimeMode**
- QEStripChartNames::YScaleModes **yScaleMode**
- QEStripChartNames::ChartYRanges **chartYScale**
- double **yMinimum**
- double **yMaximum**
- int **duration**


- Qt::TimeSpec **timeZoneSpec**
- QDateTime **endDateTime**

The documentation for this class was generated from the following file:

- /tmp/epicsqt/trunk/framework/widgets/QESTripChart/QESTripChart.cpp

9.11 qcastatemachine::ConnectionQCaStateMachine Class Reference

Inheritance diagram for qcastatemachine::ConnectionQCaStateMachine:

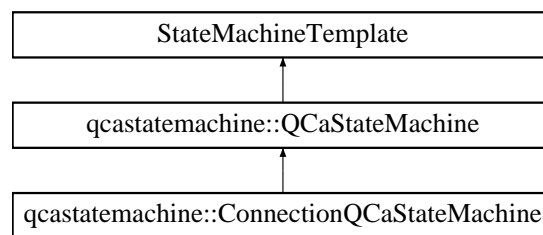

Public Member Functions


- **ConnectionQCaStateMachine** (void *parent)
- bool **process** (int requestedState)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/data/include/QCaStateMachine.h
- /tmp/epicsqt/trunk/framework/data/src/QCaStateMachine.cpp

9.12 ContainerProfile Class Reference

Inheritance diagram for ContainerProfile:

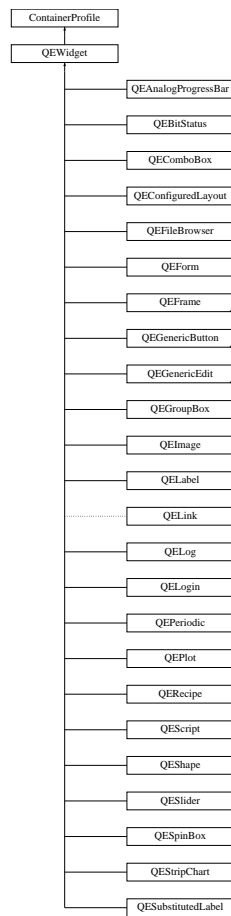

Public Member Functions

- void **takeLocalCopy** ()
- void **setupProfile** (QObject *guiLaunchConsumerIn, QStringList pathListIn, QString parentPathIn, QString macroSubstitutionsIn)
- void **setupLocalProfile** (QObject *guiLaunchConsumerIn, QStringList pathListIn, QString parentPathIn, QString macroSubstitutionsIn)
- void **updateConsumers** (QObject *guiLaunchConsumerIn)
- QObject * **replaceGuiLaunchConsumer** (QObject *newGuiLaunchConsumerIn)

- void **addMacroSubstitutions** (QString macroSubstitutionsIn)
- void **removeMacroSubstitutions** ()
- void **addPriorityMacroSubstitutions** (QString macroSubstitutionsIn)
- void **removePriorityMacroSubstitutions** ()
- QObject * **getGuiLaunchConsumer** ()
- QString **getPath** ()
- QStringList **getPathList** ()
- QString **getParentPath** ()

- void **setPublishedParentPath** (QString publishedParentPathIn)
- QString **getMacroSubstitutions** ()
- bool **isProfileDefined** ()
- bool **areUserLevelPasswordsSet** ()
- QStringList **getEnvPathList** ()
- QString **getUserLevelPassword** (userLevelTypes::userLevels level)
- void **setUserLevelPassword** (userLevelTypes::userLevels level, QString passwordIn)
- void **addContainedWidget** (QEWWidget *containedWidget)
- QEWWidget * **getNextContainedWidget** ()
- void **removeContainedWidget** (QEWWidget *containedWidget)
- unsigned int **getMessageFormId** ()
- unsigned int **getPublishedMessageFormId** ()
- void **setPublishedMessageFormId** (unsigned int publishedMessageFormIdIn)
- bool **setDontActivateYet** (bool dontActivateIn)
- bool **getDontActivateYet** ()
- void **releaseProfile** ()
- void **publishOwnProfile** ()
- void **setUserLevel** (userLevelTypes::userLevels level)
- userLevelTypes::userLevels **getUserLevel** ()
- virtual void **userLevelChangedGeneral** (userLevelTypes::userLevels)
- PersistenceManager * **getPersistenceManager** ()

Static Public Member Functions


- static QChar **platformSeperator** ()

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/include/ContainerProfile.h
- /tmp/epicsqt/trunk/framework/widgets/src/ContainerProfile.cpp

9.13 contextMenu Class Reference

Inheritance diagram for contextMenu:

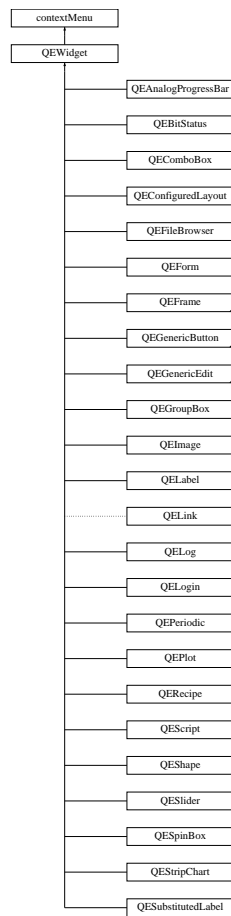

Public Types

- enum **contextMenuOptions** {
CM_NONE, **CM_COPY_VARIABLE**, **CM_COPY_DATA**, **CM_PASTE**,
CM_DRAG_VARIABLE, **CM_DRAG_DATA**, **CM_SHOW_PV_PROPERTIES**, **CM_-**
ADD_TO_STRIPCHART,
CM_ADD_TO_SCRATCH_PAD, **CM_SPECIFIC_WIDGETS_START_HERE** }

Public Member Functions

- **contextMenu** ([QEWidget](#) *qewIn)
- void **setConsumer** (QObject *consumer)
- void **setupContextMenu** ()
- bool **isDraggingVariable** ()
- QMenu * **buildContextMenu** ()
- void **contextMenuTriggered** (int selectedItemNum)

- virtual QString **copyVariable** ()
- virtual QVariant **copyData** ()
- virtual void **paste** (QVariant)

Friends

- class [contextMenuObject](#)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/include/contextMenu.h
- /tmp/epicsqt/trunk/framework/widgets/src/contextMenu.cpp

9.14 contextMenuObject Class Reference

Public Slots

- void **contextMenuTriggeredSlot** (QAction *selectedItem)
- void **showContextMenuSlot** (const QPoint &pos)

Signals

- void **requestGui** (const QEGuiLaunchRequests &)

Public Member Functions

- **contextMenuObject** ([contextMenu](#) *menuIn)
- void **sendRequestGui** (const QEGuiLaunchRequests &request)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/include/contextMenu.h
- /tmp/epicsqt/trunk/framework/widgets/src/contextMenu.cpp

9.15 QEPeriodic::elementInfoStruct Struct Reference

Public Attributes

- unsigned int **number**
- double **atomicWeight**
- QString **name**
- QString **symbol**

- double **meltingPoint**
- double **boilingPoint**
- double **density**
- unsigned int **group**
- double **ionizationEnergy**
- unsigned int **tableRow**
- unsigned int **tableCol**

The documentation for this struct was generated from the following file:

- /tmp/epicsqt/trunk/framework/widgets/QEPeriodic/QEPeriodic.h

9.16 flipRotateMenu Class Reference

Public Member Functions

- **flipRotateMenu** (QWidget *parent=0)
- imageContextMenu::imageContextMenuOptions **getFlipRotate** (const QPoint &pos)
- void **setChecked** (const int rotation, const bool flipH, const bool flipV)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEImage/flipRotateMenu.h
- /tmp/epicsqt/trunk/framework/widgets/QEImage/flipRotateMenu.cpp

9.17 imageContextMenu Class Reference

Public Types

- enum **imageContextMenuOptions** {
ICM_NONE = contextMenu::CM_SPECIFIC_WIDGETS_START_HERE, **ICM_SAVE**,
ICM_PAUSE, **ICM_ENABLE_TIME**,
ICM_ENABLE_CURSOR_PIXEL, **ICM_ENABLE_CONTRAST_REVERSAL**, **ICM_-**
ABOUT_IMAGE, **ICM_ENABLE_VERT**,
ICM_ENABLE_HOZ, **ICM_ENABLE_AREA**, **ICM_ENABLE_LINE**, **ICM_ENABLE_-**
TARGET,
ICM_DISPLAY_BUTTON_BAR, **ICM_DISPLAY_BRIGHTNESS_CONTRAST**, **ICM_-**
ZOOM_SELECTED, **ICM_ZOOM_FIT**,
ICM_ZOOM_10, **ICM_ZOOM_25**, **ICM_ZOOM_50**, **ICM_ZOOM_75**,
ICM_ZOOM_100, **ICM_ZOOM_150**, **ICM_ZOOM_200**, **ICM_ZOOM_300**,
ICM_ZOOM_400, **ICM_ROTATE_NONE**, **ICM_ROTATE_RIGHT**, **ICM_ROTATE_-**
LEFT,

```

ICM_ROTATE_180, ICM_FLIP_HORIZONTAL, ICM_FLIP_VERTICAL, ICM_SELECT_ -
PAN,
ICM_SELECT_HSLICE, ICM_SELECT_VSLICE, ICM_SELECT_AREA1, ICM_ -
SELECT_AREA2,
ICM_SELECT_AREA3, ICM_SELECT_AREA4, ICM_SELECT_PROFILE, ICM_ -
SELECT_TARGET,
ICM_SELECT_BEAM, ICM_CLEAR_MARKUP, ICM_THICKNESS_ONE_MARKUP,
ICM_THICKNESS_SELECT_MARKUP,
ICM_COPY_PLOT_DATA }

```

Public Member Functions


- **imageContextMenu** (QWidget *parent=0)
- void **getContextMenuOption** (const QPoint &, imageContextMenuOptions *option, bool *checked)
- void **addMenuItem** (const QString &title, const bool checkable, const bool checked, const imageContextMenuOptions option)
- void **addOptionMenuItem** (const QString &title, const bool checkable, const bool checked, const imageContextMenuOptions option)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEImage/imageContextMenu.h
- /tmp/epicsqt/trunk/framework/widgets/QEImage/imageContextMenu.cpp

9.18 imageInfo Class Reference

Inheritance diagram for imageInfo:

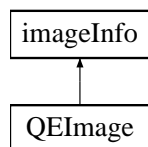

Public Member Functions

- void **showInfo** (bool show)
- QLayout * **getInfoWidget** ()
- void **infoShow** (const bool show)
- void **infoUpdateTarget** ()
- void **infoUpdateTarget** (const int x, const int y)
- void **infoUpdateBeam** ()


- void **infoUpdateBeam** (const int x, const int y)
- void **infoUpdateVertProfile** ()
- void **infoUpdateVertProfile** (const int x, const unsigned int thickness)
- void **infoUpdateHozProfile** ()
- void **infoUpdateHozProfile** (const int y, const unsigned int thickness)
- void **infoUpdateProfile** ()
- void **infoUpdateProfile** (const QPoint start, const QPoint end, const unsigned int thickness)
- void **infoUpdateRegion** (const unsigned int region)
- void **infoUpdateRegion** (const unsigned int region, const int x1, const int y1, const int x2, const int y2)
- void **infoUpdatePixel** ()
- void **infoUpdatePixel** (const QPoint pos, int value)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEImage/imageInfo.h
- /tmp/epicsqt/trunk/framework/widgets/QEImage/imageInfo.cpp

9.19 imageMarkup Class Reference

Inheritance diagram for imageMarkup:

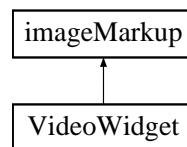

Public Types

- enum **markupIds** {
MARKUP_ID_REGION1, **MARKUP_ID_REGION2**, **MARKUP_ID_REGION3**, **MARKUP_ID_REGION4**,
MARKUP_ID_H_SLICE, **MARKUP_ID_V_SLICE**, **MARKUP_ID_LINE**, **MARKUP_ID_TARGET**,
MARKUP_ID_BEAM, **MARKUP_ID_TIMESTAMP**, **MARKUP_ID_COUNT**, **MARKUP_ID_NONE** }

Public Member Functions

- void **setShowTime** (bool visibleIn)
- bool **getShowTime** ()

- markupIds **getMode** ()
- void **setMode** (markupIds modeIn)
- void **setMarkupColor** (markupIds mode, QColor markupColorIn)
- QColor **getMarkupColor** (markupIds mode)
- bool **showMarkupMenu** (const QPoint &pos, const QPoint &globalPos)
- void **markupRegionValueChange** (int areaIndex, QRect area)
- QCursor **getCircleCursor** ()
- QCursor **getTargetCursor** ()
- QCursor **getVLineCursor** ()
- QCursor **getHLineCursor** ()
- QCursor **getLineCursor** ()
- QCursor **getRegionCursor** ()
- virtual void **markupSetCursor** (QCursor cursor)=0

Public Attributes

- QVector< [markupItem](#) * > **items**
- QPoint **grabOffset**
- bool **markupAreasStale**
- QFont **legendFont**
- QFontMetrics * **legendFontMetrics**

Protected Member Functions

- void **drawMarkups** (QPainter &p, const QRect &rect)
- bool **anyVisibleMarkups** ()
- QCursor **getDefaultMarkupCursor** ()
- void **setMarkupTime** ([QCaDateTime](#) &time)
- bool **markupMouseEvent** (QMouseEvent *event, bool panning)
- bool **markupMouseReleaseEvent** (QMouseEvent *event, bool panning)
- bool **markupMouseMoveEvent** (QMouseEvent *event, bool panning)
- void **markupResize** (const QSize &newSize, const QSize &oldSize, const double scale)
- virtual void **markupChange** (QVector< QRect > &changedAreas)=0
- virtual void **markupAction** (markupIds mode, bool complete, bool clearing, QPoint point1, QPoint point2, unsigned int thickness)=0

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEImage/imageMarkup.h
- /tmp/epicsqt/trunk/framework/widgets/QEImage/imageMarkup.cpp

9.20 localBrightnessContrast Class Reference

Signals

- void **brightnessContrastChange** ()

Public Member Functions

- void **setBrightnessContrast** (int brightness, int contrast)
- void **setAutoBrightnessContrast** (bool autoBrightnessContrast)
- bool **getAutoBrightnessContrast** ()
- int **getBrightness** ()
- int **getContrast** ()

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEImage/brightnessContrast.h
- /tmp/epicsqt/trunk/framework/widgets/QEImage/brightnessContrast.cpp

9.21 loginWidget Class Reference

Public Member Functions


- **loginWidget** (QLogin *ownerIn)
- [userLevelTypes::userLevels](#) **getUserType** ()
- QString **getPassword** ()
- void **clearPassword** ()

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QELogin/QELogin.h
- /tmp/epicsqt/trunk/framework/widgets/QELogin/QELogin.cpp

9.22 managePixmaps Class Reference

Inheritance diagram for managePixmaps:

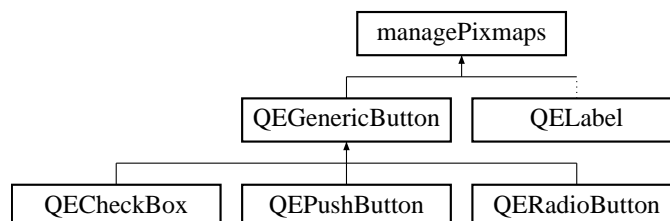

Public Member Functions


- void **setDataPixmap** (const QPixmap &Pixmap, const unsigned int index)
- QPixmap **getDataPixmap** (const unsigned int index)
- QPixmap **getDataPixmap** (const QString value)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/include/managePixmaps.h
- /tmp/epicsqt/trunk/framework/widgets/src/managePixmaps.cpp

9.23 markupBeam Class Reference

Inheritance diagram for markupBeam:

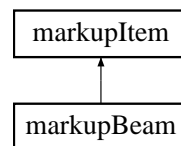

Public Member Functions


- **markupBeam** ([imageMarkup](#) *ownerIn, const bool interactivelyIn, const bool reportOnMoveIn, const QString legendIn)
- void **startDrawing** (const QPoint pos)
- void **setArea** ()
- void **drawMarkup** (QPainter &p)
- void **moveTo** (const QPoint pos)
- bool **isOver** (const QPoint point, QCursor *cursor)
- QPoint **origin** ()
- QCursor **cursorForHandle** (const markupItem::markupHandles handle)
- QPoint **getPoint1** ()
- QPoint **getPoint2** ()
- QCursor **defaultCursor** ()
- void **scaleSpecific** (const double xScale, const double yScale, const double zoomScale)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEImage/markupBeam.h
- /tmp/epicsqt/trunk/framework/widgets/QEImage/markupBeam.cpp

9.24 markupHLine Class Reference

Inheritance diagram for markupHLine:

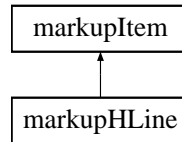

Public Member Functions

- **markupHLine** ([imageMarkup](#) *ownerIn, const bool interactiveIn, const bool reportOnMoveIn, const QString legendIn)
- void **startDrawing** (const QPoint pos)
- void **setArea** ()
- void [drawMarkup](#) (QPainter &p)
- void **moveTo** (const QPoint pos)
- bool **isOver** (const QPoint point, QCursor *cursor)
- QPoint **origin** ()
- QCursor **cursorForHandle** (const markupItem::markupHandles handle)
- QPoint **getPoint1** ()
- QPoint **getPoint2** ()
- QCursor **defaultCursor** ()
- void **scaleSpecific** (const double xScale, const double yScale, const double zoomScale)

9.24.1 Member Function Documentation

9.24.1.1 void markupHLine::drawMarkup (QPainter & p) [virtual]

!! draw the handle in the middle of the existing view, not the entire image


Implements [markupItem](#).

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEImage/markupHLine.h
- /tmp/epicsqt/trunk/framework/widgets/QEImage/markupHLine.cpp

9.25 markupItem Class Reference

Inheritance diagram for markupItem:

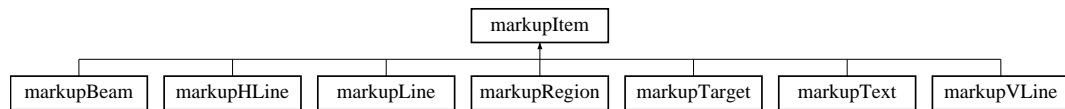

Public Types

- enum **markupHandles** {
MARKUP_HANDLE_NONE, **MARKUP_HANDLE_START**, **MARKUP_HANDLE_END**, **MARKUP_HANDLE_CENTER**,
MARKUP_HANDLE_TL, **MARKUP_HANDLE_TR**, **MARKUP_HANDLE_BL**, **MARKUP_HANDLE_BR**,
MARKUP_HANDLE_T, **MARKUP_HANDLE_B**, **MARKUP_HANDLE_L**, **MARKUP_HANDLE_R** }

Public Member Functions

- void **drawMarkupItem** (QPainter &p)
- void **setColor** (QColor colorIn)
- void **scale** (const double xScale, const double yScale, const double zoomScale)
- void **setImageSize** (const QSize &newSize)
- virtual QPoint **origin** ()=0
- virtual void **moveTo** (const QPoint pos)=0
- virtual void **startDrawing** (const QPoint pos)=0
- virtual bool **isOver** (const QPoint point, QCursor *cursor)=0
- virtual QCursor **cursorForHandle** (const markupItem::markupHandles handle)=0
- virtual QPoint **getPoint1** ()=0
- virtual QPoint **getPoint2** ()=0
- virtual QCursor **defaultCursor** ()=0
- virtual void **nonInteractiveUpdate** (QRect)
- void **setThickness** (const unsigned int thicknessIn)
- unsigned int **getThickness** ()

Public Attributes

- QRect **area**
- bool **visible**
- bool **interactive**
- bool **reportOnMove**
- QColor **color**

Protected Types

- enum **isOverOptions** { **OVER_LINE**, **OVER_BORDER**, **OVER_AREA** }
- enum **legendJustification** { **ABOVE_RIGHT**, **BELOW_LEFT**, **BELOW_RIGHT** }

Protected Member Functions

- **markupItem** ([imageMarkup](#) *ownerIn, const isOverOptions over, const bool interactiveIn, const bool reportOnMoveIn, const QString legendIn)
- virtual void **setArea** ()=0
- virtual void **drawMarkup** (QPainter &p)=0
- bool **pointIsNear** (QPoint p1, QPoint p)
- QColor **getColor** ()
- const QString **getLegend** ()
- const QSize **getLegendSize** ()
- void **addLegendArea** ()
- const QPoint **setLegendPos** (QPoint pos, legendJustification just)
- const QPoint **getLegendPos** ()
- void **drawLegend** (QPainter &p, QPoint pos, legendJustification just)
- QPoint **limitPointToImage** (const QPoint pos)

Protected Attributes


- markupHandles **activeHandle**
- [imageMarkup](#) * **owner**
- QSize **imageSize**
- unsigned int **thickness**
- unsigned int **maxThickness**

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEImage/markupItem.h
- /tmp/epicsqt/trunk/framework/widgets/QEImage/markupItem.cpp

9.26 markupLine Class Reference

Inheritance diagram for markupLine:

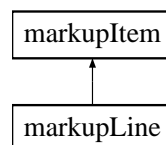

Public Member Functions


- **markupLine** ([imageMarkup](#) *ownerIn, const bool interactiveIn, const bool reportOnMoveIn, const QString legendIn)
- void **startDrawing** (const QPoint pos)
- void **setArea** ()
- void **drawMarkup** (QPainter &p)
- void **moveTo** (const QPoint pos)
- bool **isOver** (const QPoint point, QCursor *cursor)
- QPoint **origin** ()
- QCursor **cursorForHandle** (const markupItem::markupHandles handle)
- QPoint **getPoint1** ()
- QPoint **getPoint2** ()
- QCursor **defaultCursor** ()
- void **scaleSpecific** (const double xScale, const double yScale, const double zoomScale)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEImage/markupLine.h
- /tmp/epicsqt/trunk/framework/widgets/QEImage/markupLine.cpp

9.27 markupRegion Class Reference

Inheritance diagram for markupRegion:

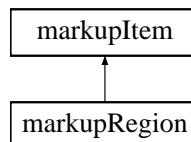

Public Member Functions

- **markupRegion** ([imageMarkup](#) *ownerIn, const bool interactiveIn, const bool reportOnMoveIn, const QString legendIn)
- void **startDrawing** (const QPoint pos)
- void **setArea** ()
- void **drawMarkup** (QPainter &p)
- void **moveTo** (const QPoint pos)
- bool **isOver** (const QPoint point, QCursor *cursor)
- QPoint **origin** ()
- QCursor **cursorForHandle** (const markupItem::markupHandles handle)
- QPoint **getPoint1** ()
- QPoint **getPoint2** ()


- QCursor **defaultCursor** ()
- void **scaleSpecific** (const double xScale, const double yScale, const double zoomScale)
- void **nonInteractiveUpdate** (QRect)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEImage/markupRegion.h
- /tmp/epicsqt/trunk/framework/widgets/QEImage/markupRegion.cpp

9.28 markupTarget Class Reference

Inheritance diagram for markupTarget:

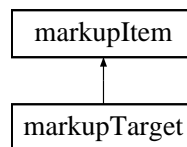

Public Member Functions


- **markupTarget** ([imageMarkup](#) *ownerIn, const bool interactiveIn, const bool reportOnMoveIn, const QString legendIn)
- void **startDrawing** (const QPoint pos)
- void **setArea** ()
- void **drawMarkup** (QPainter &p)
- void **moveTo** (const QPoint pos)
- bool **isOver** (const QPoint point, QCursor *cursor)
- QPoint **origin** ()
- QCursor **cursorForHandle** (const markupItem::markupHandles handle)
- QPoint **getPoint1** ()
- QPoint **getPoint2** ()
- QCursor **defaultCursor** ()
- void **scaleSpecific** (const double xScale, const double yScale, const double zoomScale)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEImage/markupTarget.h
- /tmp/epicsqt/trunk/framework/widgets/QEImage/markupTarget.cpp

9.29 markupText Class Reference

Inheritance diagram for markupText:

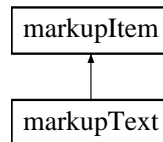

Public Member Functions


- **markupText** ([imageMarkup](#) *ownerIn, const bool interactiveIn, const bool reportOnMoveIn, const QString legendIn)
- void **setText** (QString textIn)
- void **startDrawing** (const QPoint pos)
- void **setArea** ()
- void **drawMarkup** (QPainter &p)
- void **moveTo** (const QPoint pos)
- bool **isOver** (const QPoint point, QCursor *cursor)
- QPoint **origin** ()
- QCursor **cursorForHandle** (const markupItem::markupHandles handle)
- QPoint **getPoint1** ()
- QPoint **getPoint2** ()
- QCursor **defaultCursor** ()
- void **scaleSpecific** (const double xScale, const double yScale, const double zoomScale)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEImage/markupText.h
- /tmp/epicsqt/trunk/framework/widgets/QEImage/markupText.cpp

9.30 markupVLine Class Reference

Inheritance diagram for markupVLine:

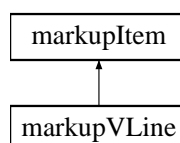

Public Member Functions

- **markupVLine** ([imageMarkup](#) *ownerIn, const bool interactiveIn, const bool reportOnMoveIn, const QString legendIn)
- void **startDrawing** (const QPoint pos)
- void **setArea** ()
- void **drawMarkup** (QPainter &p)
- void **moveTo** (const QPoint pos)
- bool **isOver** (const QPoint point, QCursor *cursor)
- QPoint **origin** ()
- QCursor **cursorForHandle** (const markupItem::markupHandles handle)
- QPoint **getPoint1** ()
- QPoint **getPoint2** ()
- QCursor **defaultCursor** ()
- void **scaleSpecific** (const double xScale, const double yScale, const double zoomScale)

9.30.1 Member Function Documentation

9.30.1.1 void markupVLine::drawMarkup (QPainter & p) [virtual]

!! draw the handle in the middle of the existing view, not the entire image

Implements [markupItem](#).

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEImage/markupVLine.h
- /tmp/epicsqt/trunk/framework/widgets/QEImage/markupVLine.cpp

9.31 message_types Class Reference

Public Member Functions

- **message_types** (message_severities severityIn, message_kind_sets kind_setIn=MESSAGE_KIND_STANDARD)
- QString **getSeverityName** ()

Function to provide string name for each message type severity.

Public Attributes

- message_severities **severity**
- message_kind_sets **kind_set**

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/include/UserMessage.h
- /tmp/epicsqt/trunk/framework/widgets/src/UserMessage.cpp

9.32 QEStripChartToolBar::OwnWidgets Class Reference

Public Member Functions

- **OwnWidgets** (QEStripChartToolBar *parent)

Public Attributes

- QPushButton * **pushButtons** [NUMBER_OF_BUTTONS]
- QLabel * **timeStatus**

The documentation for this class was generated from the following file:

- /tmp/epicsqt/trunk/framework/widgets/QEStripChart/QEStripChartToolBar.cpp

9.33 PeriodicDialog Class Reference

Public Member Functions

- **PeriodicDialog** (QWidget *parent=0)
- QString **getElement** ()
- void **setElement** (QString elementIn, QList< bool > &enabledList, QList< QString > &elementList)

Protected Member Functions

- void **changeEvent** (QEvent *e)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEPeriodic/PeriodicDialog.h
- /tmp/epicsqt/trunk/framework/widgets/QEPeriodic/PeriodicDialog.cpp

9.34 PeriodicElementSetupForm Class Reference

Public Member Functions

- **PeriodicElementSetupForm** (QWidget *parent=0)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEPeriodic/PeriodicElementSetupForm.h
- /tmp/epicsqt/trunk/framework/widgets/QEPeriodic/PeriodicElementSetupForm.cpp

9.35 PeriodicSetupDialog Class Reference

Public Member Functions

- **PeriodicSetupDialog** (QWidget *parent=0)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEPeriodic/PeriodicSetupDialog.h
- /tmp/epicsqt/trunk/framework/widgets/QEPeriodic/PeriodicSetupDialog.cpp

9.36 PersistenceManager Class Reference

Public Member Functions

- QObject * **getSaveRestoreObject** ()
- void **save** (const QString fileName, const QString rootName, const QString configName)
- void **restore** (const QString fileName, const QString rootName, const QString configName)
- bool **isRestoring** ()
- [PMElement](#) **addNamedConfiguration** (QString name)
- [PMElement](#) **getNamedConfiguration** (QString name)
- QStringList **getConfigNames** (QString fileName, QString rootName)
- QStringList **getConfigNames** (QString fileName, QString rootName, bool &hasDefault)
- void **deleteConfigs** (QString fileName, QString rootName, QStringList names)

Public Attributes

- bool **restoring**

Static Public Attributes

- static QString **defaultName**

Friends

- class [PMElement](#)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/include/persistenceManager.h
- /tmp/epicsqt/trunk/framework/widgets/src/persistenceManager.cpp

9.37 PMContext Class Reference

The documentation for this class was generated from the following file:

- /tmp/epicsqt/trunk/framework/widgets/include/persistenceManager.h

9.38 PMLElement Class Reference

Public Member Functions

- **PMElement** ([PersistenceManager](#) *ownerIn, QDomElement elementIn)
- [PMElement](#) **addElement** (QString name)
- void **addValue** (QString name, bool value)
- void **addValue** (QString name, int value)
- void **addValue** (QString name, double value)
- void **addValue** (QString name, QString value)
- void **addAttribute** (QString name, bool value)
- void **addAttribute** (QString name, int value)
- void **addAttribute** (QString name, double value)
- void **addAttribute** (QString name, QString value)
- [PMElement](#) **getElement** (QString name)
- [PMElement](#) **getElement** (QString name, int i)
- [PMElement](#) **getElement** (QString name, QString attrName, QString attrValue)
- [PMElement](#) **getElement** (QString name, QString attrName, int attrValue)
- [PMElementList](#) **getElementList** (QString name)
- bool **getValue** (QString name, bool &val)
- bool **getValue** (QString name, int &val)
- bool **getValue** (QString name, double &val)
- bool **getValue** (QString name, QString &val)
- bool **getAttribute** (QString name, bool &val)
- bool **getAttribute** (QString name, int &val)
- bool **getAttribute** (QString name, double &val)
- bool **getAttribute** (QString name, QString &val)
- bool **isNull** ()

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/include/persistenceManager.h
- /tmp/epicsqt/trunk/framework/widgets/src/persistenceManager.cpp

9.39 PMLElementList Class Reference

Public Member Functions

- **PMLElementList** ([PersistenceManager](#) *ownerIn, QDomNodeList elementListIn)
- [PMElement](#) **getElement** (int i)
- int **count** ()

9.39.1 Member Function Documentation

9.39.1.1 PMElement PMLElementList::getElement (int i)

!! check range of i

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/include/persistenceManager.h
- /tmp/epicsqt/trunk/framework/widgets/src/persistenceManager.cpp

9.40 QEStripChart::PrivateData Class Reference

Public Member Functions

- **PrivateData** ([QEStripChart](#) *chartIn)
- [QEStripChartItem](#) * **getItem** (unsigned int slot)
- QwtPlotCurve * **allocateCurve** ()
- void **calcDisplayMinMax** ()
- void **plotData** ()
- void **setReadOut** (const QString &text)
- void **setNormalBackground** (bool state)
- void **chartContextMenuRequested** (const QPoint &pos)
- void **nullContextMenuRequested** (const QPoint &pos)
- void **chartContextMenuTriggered** (QAction *action)
- void **pushState** ()
- void **prevState** ()
- void **nextState** ()
- void **captureState** ([ChartState](#) &chartState)
- void **applyState** (const [ChartState](#) &chartState)

Public Attributes

- QEStripChartNames::ChartYRanges **chartYScale**
- QEStripChartNames::YScaleModes **yScaleMode**
- QEStripChartNames::ChartTimeModes **chartTimeMode**
- double **timeScale**
- QString **timeUnits**

Protected Member Functions

- bool **eventFilter** (QObject *obj, QEvent *event)

The documentation for this class was generated from the following file:

- /tmp/epicsqt/trunk/framework/widgets/QEStripChart/QEStripChart.cpp

9.41 profilePlot Class Reference

Public Types

- enum **plotDirections** { **PROFILEPLOT_LR**, **PROFILEPLOT_RL**, **PROFILEPLOT_TB**, **PROFILEPLOT_BT** }

Public Member Functions

- **profilePlot** (plotDirections plotDirectionIn)
- void **setProfile** (QVector< QPointF > *profile, double minX, double maxX, double minY, double maxY, QString title, QPoint start, QPoint end, unsigned int thicknessIn)
- void **clearProfile** ()

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEImage/profilePlot.h
- /tmp/epicsqt/trunk/framework/widgets/QEImage/profilePlot.cpp

9.42 PublishedProfile Class Reference

Public Attributes

- QObject * **guiLaunchConsumer**
- QStringList **pathList**
- QString **parentPath**
- QList< QString > **macroSubstitutions**
- unsigned int **messageFormId**
- QList< [WidgetRef](#) > **containedWidgets**
- [userLevelSignal](#) **userSignal**
- QString **userLevelPassword**
- QString **scientistLevelPassword**
- QString **engineerLevelPassword**
- bool **profileDefined**
- [PersistenceManager](#) **persistenceManager**

- bool **dontActivateYet**
- bool **userLevelPasswordsSet**

The documentation for this class was generated from the following file:

- /tmp/epicsqt/trunk/framework/widgets/include/ContainerProfile.h

9.43 QPushButtonSpecifications Struct Reference

Public Attributes


- int **gap**
- int **width**
- bool **isIcon**
- const QString **captionOrIcon**
- const QString **toolTip**
- const char * **member**

The documentation for this struct was generated from the following file:

- /tmp/epicsqt/trunk/framework/widgets/QEStripChart/QEStripChartToolBar.cpp

9.44 QBitStatus Class Reference

Inheritance diagram for QBitStatus:

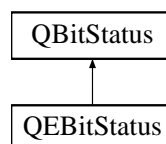

Public Types

- enum **Orientations** { **LSB_On_Right**, **LSB_On_Bottom**, **LSB_On_Left**, **LSB_On_Top** }
- enum **Shapes** { **Rectangle**, **Circle** }

Public Slots

- void **setValue** (const int value)

Public Member Functions

- **QBitStatus** (QWidget *parent=0)
- virtual QSize **sizeHint** () const
- void **setBorderColour** (const QColor value)
- QColor **getBorderColour** ()
- void **setOnColour** (const QColor value)
- QColor **getOnColour** ()
- void **setOffColour** (const QColor value)
- QColor **getOffColour** ()
- void **setInvalidColour** (const QColor value)
- QColor **getInvalidColour** ()
- void **setClearColour** (const QColor value)
- QColor **getClearColour** ()
- void **setDrawBorder** (const bool value)
- bool **getDrawBorder** ()
- void **setNumberOfBits** (const int value)
- int **getNumberOfBits** ()
- void **setGap** (const int value)
- int **getGap** ()
- void **setShift** (const int value)
- int **getShift** ()
- void **setOnClearMask** (const QString value)
- QString **getOnClearMask** ()
- void **setOffClearMask** (const QString value)
- QString **getOffClearMask** ()
- void **setReversePolarityMask** (const QString value)
- QString **getReversePolarityMask** ()
- void **setIsValid** (const bool value)
- bool **getIsValid** ()
- void **setOrientation** (const enum Orientations value)
- enum Orientations **getOrientation** ()
- void **setShape** (const enum Shapes value)
- enum Shapes **getShape** ()
- int **getValue** ()

Protected Member Functions

- void **setIsActive** (const bool value)
- bool **getIsActive** ()

Properties

- int **value**
- int **numberOfBits**
- int **shift**
- Orientations **Orientation**
- Shapes **shape**
- int **gap**
- QString **reversePolarityMask**
- QString **onClearMask**
- QString **offClearMask**
- QColor **boarderColour**
- QColor **invalidColour**
- QColor **onColour**
- QColor **offColour**
- QColor **clearColour**
- bool **drawBorder**
- bool **isValid**
- bool **isActive**

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEBitStatus/QBitStatus.h
- /tmp/epicsqt/trunk/framework/widgets/QEBitStatus/QBitStatus.cpp

9.45 QCaAlarmInfo Class Reference

Public Member Functions

- **QCaAlarmInfo** (unsigned short statusIn, unsigned short severityIn)
- QString **statusName** ()
- QString **severityName** ()
- bool **isInAlarm** ()
- bool **isMinor** ()
- bool **isMajor** ()
- bool **isInvalid** ()
- QString **style** ()
- QString **getColorName** ()
- QCAALARMINFO_SEVERITY **getSeverity** ()

Static Public Member Functions

- static QCAALARMINFO_SEVERITY **getInvalidSeverity** ()

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/data/include/QCaAlarmInfo.h
- /tmp/epicsqt/trunk/framework/data/src/QCaAlarmInfo.cpp

9.46 QCaConnectionInfo Class Reference

Public Member Functions

- **QCaConnectionInfo** (unsigned short channelStateIn, unsigned short linkStateIn)
- bool **isChannelConnected** ()
- bool **isLinkUp** ()

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/data/include/QCaConnectionInfo.h
- /tmp/epicsqt/trunk/framework/data/src/QCaConnectionInfo.cpp

9.47 QCaDataPoint Class Reference

Public Member Functions

- bool **isDisplayable** ()
- QString **toString** ()
- QString **toString** (const [QCaDateTime](#) &originDateTime)

Public Attributes

- double **value**
- [QCaDateTime](#) **datetime**
- [QCaAlarmInfo](#) **alarm**

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/data/include/QCaDataPoint.h
- /tmp/epicsqt/trunk/framework/data/src/QCaDataPoint.cpp

9.48 QCaDataPointList Class Reference

Public Member Functions

- void **resample** (const [QCaDataPointList](#) &source, const double interval, const [QCaDateTime](#) &endTime)
- void **toStream** (QTextStream &target, bool withIndex, bool withRelativeTime)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/data/include/QCaDataPoint.h
- /tmp/epicsqt/trunk/framework/data/src/QCaDataPoint.cpp

9.49 QCaDateTime Class Reference

Public Member Functions

- **QCaDateTime** (QDateTime dt)
 - **QCaDateTime** & **operator=** (const **QCaDateTime** &other)
 - **QCaDateTime** (unsigned long seconds, unsigned long nanoseconds)
 - QString **text** ()
 - double **floating** (const QDateTime &base) const
 - unsigned long **getSeconds** () const
- Recover original EPICS time constructor parameters.*
- unsigned long **getNanoSeconds** () const

9.49.1 Member Function Documentation

9.49.1.1 double QCaDateTime::floating (const QDateTime & base) const

Duration in seconds from base time to this time. Note: this is the opposite sense to the parent QDateTime daysTo, secsTo and msecsTo functions.

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/data/include/QCaDateTime.h
- /tmp/epicsqt/trunk/framework/data/src/QCaDateTime.cpp

9.50 QCaEventFilter Class Reference

Public Member Functions

- void **addFilter** (QObject *objectIn)
- void **deleteFilter** (QObject *objectIn)
- bool **eventFilter** (QObject *watched, QEvent *e)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/data/include/QCaEventFilter.h
- /tmp/epicsqt/trunk/framework/data/src/QCaEventFilter.cpp

9.51 QCaEventItem Class Reference

Public Member Functions

- **QCaEventItem** (**QCaEventUpdate** *newEvent)

Public Attributes

- [QCaEventUpdate](#) * **event**

The documentation for this class was generated from the following file:

- /tmp/epicsqt/trunk/framework/data/include/QCaEventUpdate.h

9.52 QCaEventUpdate Class Reference

Public Member Functions

- **QCaEventUpdate** ([qcaobject::QCaObject](#) *emitterObjectIn, long newReason, void *newDataPtr)

Public Attributes

- bool **acceptThisEvent**
- [qcaobject::QCaObject](#) * **emitterObject**
- long **reason**
- void * **dataPtr**

Static Public Attributes

- static QEvent::Type **EVENT_UPDATE_TYPE** = QEvent::User

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/data/include/QCaEventUpdate.h
- /tmp/epicsqt/trunk/framework/data/src/QCaEventUpdate.cpp

9.53 QCaInstalledFiltersListItem Class Reference

Public Member Functions

- **QCaInstalledFiltersListItem** (QObject *eventObjectIn)

Public Attributes


- QObject * **eventObject**
- long **referenceCount**

The documentation for this class was generated from the following file:

- /tmp/epicsqt/trunk/framework/data/include/QCaEventFilter.h

9.54 qcaobject::QCaObject Class Reference

Inheritance diagram for qcaobject::QCaObject:

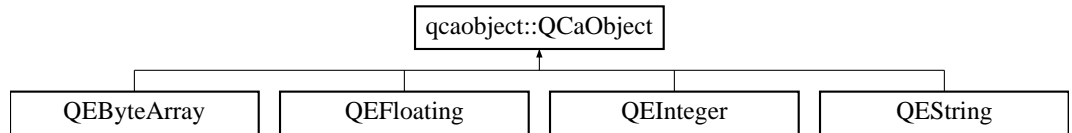

Public Slots

- bool **writeData** (const QVariant &value)
- void **resendLastData** ()

Signals

- void **dataChanged** (const QVariant &value, [QCaAlarmInfo](#) &alarmInfo, [QCaDateTime](#) &timeStamp)
- void **dataChanged** (const QByteArray &value, unsigned long dataSize, [QCaAlarmInfo](#) &alarmInfo, [QCaDateTime](#) &timeStamp)
- void **connectionChanged** ([QCaConnectionInfo](#) &connectionInfo)

Public Member Functions

- **QCaObject** (const QString &recordName, QObject *eventObject, unsigned char signalsToSendIn=SIG_VARIANT)
- **QCaObject** (const QString &recordName, QObject *eventObject, [UserMessage](#) *userMessageIn, unsigned char signalsToSendIn=SIG_VARIANT)
- bool **subscribe** ()
- bool **singleShotRead** ()
- bool **dataTypeKnown** ()
- bool **createChannel** ()
- void **deleteChannel** ()
- bool **createSubscription** ()
- bool **getChannel** ()
- bool **putChannel** ()
- bool **isChannelConnected** ()
- void **startConnectionTimer** ()
- void **stopConnectionTimer** ()
- void **setUserMessage** ([UserMessage](#) *userMessageIn)
- void **enableWriteCallbacks** (bool enable)
- bool **isWriteCallbacksEnabled** ()
- QString **getRecordName** ()
- QString **getEgu** ()

- QStringList **getEnumerations** ()
- unsigned int **getPrecision** ()
- [QCaAlarmInfo](#) **getAlarmInfo** ()
- [QCaDateTime](#) **getDateTime** ()
- double **getDisplayLimitUpper** ()
- double **getDisplayLimitLower** ()
- double **getAlarmLimitUpper** ()
- double **getAlarmLimitLower** ()
- double **getWarningLimitUpper** ()
- double **getWarningLimitLower** ()
- double **getControlLimitUpper** ()
- double **getControlLimitLower** ()
- generic::generic_types **getDataType** ()
- QString **getHostName** ()
- QString **getFieldType** ()
- unsigned long **getElementCount** ()
- void **getLastData** (bool &isDefined, QVariant &value, [QCaAlarmInfo](#) &alarmInfo, [QCaDateTime](#) &timeStamp)

Static Public Member Functions


- static void **processEventStatic** ([QCaEventUpdate](#) *dataUpdateEvent)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/data/include/QCaObject.h
- /tmp/epicsqt/trunk/framework/data/src/QCaObject.cpp

9.55 qcastatemachine::QCaStateMachine Class Reference

Inheritance diagram for qcastatemachine::QCaStateMachine:

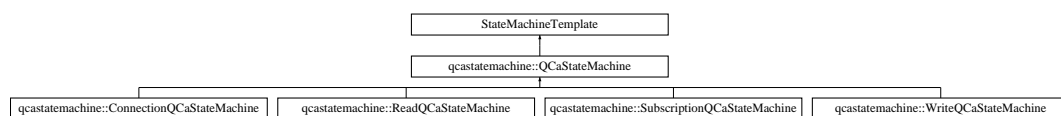

Public Member Functions

- **QCaStateMachine** (void *parent)
- virtual bool **process** (int requestedState)=0

Public Attributes

- QMutex **lock**
- bool **pending**
- bool **active**
- bool **expired**
- void * **myWorker**

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/data/include/QCaStateMachine.h
- /tmp/epicsqt/trunk/framework/data/src/QCaStateMachine.cpp

9.56 QCaVariableNamePropertyManager Class Reference

Signals

- void **newVariableNameProperty** (QString variable, QString Substitutions, unsigned int variableIndex)

Public Member Functions

- QString **getVariableNameProperty** ()
- void **setVariableNameProperty** (QString variableNamePropertyIn)
- QString **getSubstitutionsProperty** ()
- void **setSubstitutionsProperty** (QString substitutionsPropertyIn)
- void **setVariableIndex** (unsigned int variableIndexIn)


The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/data/include/QCaVariableNamePropertyManager.h
- /tmp/epicsqt/trunk/framework/data/src/QCaVariableNamePropertyManager.cpp

9.57 QEAnalogIndicator Class Reference

```
#include <QEAnalogIndicator.h>
```

Inheritance diagram for QEAnalogIndicator:

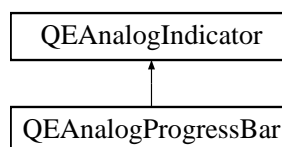

Classes

- struct [Band](#)
- class [BandList](#)

Public Types

- enum [Orientations](#) { [Left_To_Right](#), [Top_To_Bottom](#), [Right_To_Left](#), [Bottom_To_Top](#) }
- enum [Modes](#) { [Bar](#), [Scale](#), [Meter](#) }

Public Slots

- void **setRange** (const double MinimumIn, const double MaximumIn)
- void **setValue** (const double ValueIn)

Public Member Functions

- [QEAnalogIndicator](#) (QWidget *parent=0)
Constructor.
- virtual [~QEAnalogIndicator](#) ()
Destructor.
- virtual QSize [sizeHint](#) () const
Size hint.
- double [getValue](#) ()
Access function for [value](#) property - refer to [value](#) property for details.
- void [setMinimum](#) (const double value)
Access function for [minimum](#) - refer to [minimum](#) property for details.
- double [getMinimum](#) ()
Access function for [minimum](#) - refer to [minimum](#) property for details.
- void [setMaximum](#) (const double value)
Access function for [maximum](#) - refer to [maximum](#) property for details.
- double [getMaximum](#) ()
Access function for [maximum](#) - refer to [maximum](#) property for details.
- void [setOrientation](#) (const enum [Orientations](#) value)
Access function for [orientation](#) - refer to [orientation](#) property for details.
- enum [Orientations](#) [getOrientation](#) ()
Access function for [orientation](#) - refer to [orientation](#) property for details.
- void [setMode](#) (const enum [Modes](#) value)
Access function for [mode](#) - refer to [mode](#) property for details.
- enum [Modes](#) [getMode](#) ()
Access function for [mode](#) - refer to [mode](#) property for details.
- void [setCentreAngle](#) (const int value)

- Access function for [centreAngle](#) - refer to [centreAngle](#) property for details.*

 - int [getCentreAngle](#) ()
- Access function for [centreAngle](#) - refer to [centreAngle](#) property for details.*

 - void [setSpanAngle](#) (const int value)
- Access function for [spanAngle](#) - refer to [spanAngle](#) property for details.*

 - int [getSpanAngle](#) ()
- Access function for [spanAngle](#) - refer to [spanAngle](#) property for details.*

 - void [setMinorInterval](#) (const double value)
- Access function for [minorInterval](#) - refer to [minorInterval](#) property for details.*

 - double [getMinorInterval](#) ()
- Access function for [minorInterval](#) - refer to [minorInterval](#) property for details.*

 - void [setMajorInterval](#) (const double value)
- Access function for [majorInterval](#) - refer to [majorInterval](#) property for details.*

 - double [getMajorInterval](#) ()
- Access function for [majorInterval](#) - refer to [majorInterval](#) property for details.*

 - void [setLogScaleInterval](#) (const int value)
- Access function for [logScaleInterval](#) - refer to [logScaleInterval](#) property for details.*

 - int [getLogScaleInterval](#) ()
- Access function for [logScaleInterval](#) - refer to [logScaleInterval](#) property for details.*

 - void [setBorderColour](#) (const QColor value)
- Access function for [borderColour](#) - refer to [borderColour](#) property for details.*

 - QColor [getBorderColour](#) ()
- Access function for [borderColour](#) - refer to [borderColour](#) property for details.*

 - void [setForegroundColour](#) (const QColor value)
- Access function for [foregroundColour](#) - refer to [foregroundColour](#) property for details.*

 - QColor [getForegroundColour](#) ()
- Access function for [foregroundColour](#) - refer to [foregroundColour](#) property for details.*

 - void [setBackgroundColour](#) (const QColor value)
- Access function for [backgroundColour](#) - refer to [backgroundColour](#) property for details.*

 - QColor [getBackgroundColour](#) ()
- Access function for [backgroundColour](#) - refer to [backgroundColour](#) property for details.*

 - void [setFontColour](#) (const QColor value)
- Access function for [fontColour](#) - refer to [fontColour](#) property for details.*

 - QColor [getFontColour](#) ()
- Access function for [fontColour](#) - refer to [fontColour](#) property for details.*

 - void [setShowText](#) (const bool value)
- Access function for [showText](#) - refer to [showText](#) property for details.*

 - bool [getShowText](#) ()
- Access function for [showText](#) - refer to [showText](#) property for details.*

 - void [setShowScale](#) (const bool value)
- Access function for [showScale](#) - refer to [showScale](#) property for details.*

 - bool [getShowScale](#) ()
- Access function for [showScale](#) - refer to [showScale](#) property for details.*

- void [setLogScale](#) (const bool value)
Access function for [logScale](#) - refer to [logScale](#) property for details.
- bool [getLogScale](#) ()
Access function for [logScale](#) - refer to [logScale](#) property for details.

Protected Member Functions

- virtual QString **getTextImage** ()
- virtual [BandList](#) **getBandList** ()
- void **setIsActive** (const bool value)
- bool **getIsActive** ()

Properties

- double [value](#)
- double [minimum](#)
- double [maximum](#)
- double [minorInterval](#)
- double [majorInterval](#)
- int [logScaleInterval](#)
- bool [showText](#)
- bool [showScale](#)
- bool [logScale](#)
- [Modes](#) [mode](#)
- [Orientations](#) [orientation](#)
- int [centreAngle](#)
- int [spanAngle](#)
- QColor [borderColour](#)
- QColor [backgroundColour](#)
- QColor [foregroundColour](#)
- QColor [fontColour](#)
- bool **isActive**

9.57.1 Detailed Description

This class provides a non CA aware graphical analog indicator base class. It supports a number of display modes including Bar, Scale and Meter.

When in Bar mode, it mimics QProgressBar and provides an analog progress bar widget.

9.57.2 Member Enumeration Documentation

9.57.2.1 enum QEAnalogIndicator::Modes

The type of analog indicator used to represent the value

Enumerator:

Bar Bar (solid bar from minimum up to current value)

Scale Scale (diamond marker tracks current value)

Meter Meter (Needle moving across an arc scale)

9.57.2.2 enum QEAnalogIndicator::Orientations

The orientation of Bar and Scale indicators

Enumerator:

Left_To_Right Left to right.

Top_To_Bottom Top to bottom.

Right_To_Left Right to left.

Bottom_To_Top Bottom to top.

9.57.3 Property Documentation

9.57.3.1 QColor QEAnalogIndicator::backgroundColour [read, write]

Background colour

9.57.3.2 QColor QEAnalogIndicator::borderColour [read, write]

Border colour

9.57.3.3 int QEAnalogIndicator::centreAngle [read, write]

The angle in degrees of the line that Meter indicators are centered around. Zero represents a vertical centerline and angles increment clockwise.

9.57.3.4 QColor QEAnalogIndicator::fontColour [read, write]

Font colour

9.57.3.5 QColor QEAnalogIndicator::foregroundColour [read, write]

Foreground colour

9.57.3.6 `bool QEAnalogIndicator::logScale` [read, write]

If set, use a logarithmic scale. If clear, use a linear scale

9.57.3.7 `int QEAnalogIndicator::logScaleInterval` [read, write]

Log scale interval.

9.57.3.8 `double QEAnalogIndicator::majorInterval` [read, write]

Minor scale interval. Only applies for linear scale (not log scale)

9.57.3.9 `double QEAnalogIndicator::maximum` [read, write]

Maximum indicated value.

9.57.3.10 `double QEAnalogIndicator::minimum` [read, write]

Minimum indicated value.

9.57.3.11 `double QEAnalogIndicator::minorInterval` [read, write]

Minor scale interval. Only applies for linear scale (not log scale)

9.57.3.12 **Modes** `QEAnalogIndicator::mode` [read, write]

Selects what type of indicator is used (refer to Modes)

9.57.3.13 **Orientations** `QEAnalogIndicator::orientation` [read, write]

The orientation of Bar and Scale indicators (refer to Orientations)

9.57.3.14 `bool QEAnalogIndicator::showScale` [read, write]

If set, show the scale

9.57.3.15 `bool QEAnalogIndicator::showText` [read, write]

If set, show textual representation of value on the indicator

9.57.3.16 int QEAnalogIndicator::spanAngle [read, write]

The span of the Meter scale arc in degrees Typical meters are 180 deg and 270 deg

9.57.3.17 double QEAnalogIndicator::value [read, write]


Current indicated value.

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEAnalogIndicator/QEAnalogIndicator.h
- /tmp/epicsqt/trunk/framework/widgets/QEAnalogIndicator/QEAnalogIndicator.cpp

9.58 QEAnalogProgressBar Class Reference

Inheritance diagram for QEAnalogProgressBar:

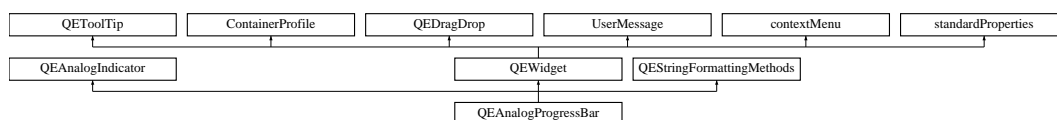

Public Types

- enum **UserLevels** { **User** = userLevelTypes::USERLEVEL_USER, **Scientist** = userLevelTypes::USERLEVEL_SCIENTIST, **Engineer** = userLevelTypes::USERLEVEL_ENGINEER }
- enum **AlarmSeverityDisplayModes** { **foreground**, **background** }
- enum **Formats** {
Default = QEStringFormatting::FORMAT_DEFAULT, **Floating** = QEStringFormatting::FORMAT_FLOATING, **Integer** = QEStringFormatting::FORMAT_INTEGER, **UnsignedInteger** = QEStringFormatting::FORMAT_UNSIGNEDINTEGER,
Time = QEStringFormatting::FORMAT_TIME, **LocalEnumeration** = QEStringFormatting::FORMAT_LOCAL_ENUMERATE }
- enum **Notations** { **Fixed** = QEStringFormatting::NOTATION_FIXED, **Scientific** = QEStringFormatting::NOTATION_SCIENTIFIC, **Automatic** = QEStringFormatting::NOTATION_AUTOMATIC }
- enum **ArrayActions** { **Append** = QEStringFormatting::APPEND, **Ascii** = QEStringFormatting::ASCII, **Index** = QEStringFormatting::INDEX }

Signals

- void **dbValueChanged** (const double &out)
- void **requestResend** ()

Internal use only. Used when changing a property value to force a re-display to reflect the new property value.

Public Member Functions

- [UserLevels](#) [getUserLevelVisibilityProperty](#) ()
Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.
- void [setUserLevelVisibilityProperty](#) ([UserLevels](#) level)
Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.
- [UserLevels](#) [getUserLevelEnabledProperty](#) ()
Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.
- void [setUserLevelEnabledProperty](#) ([UserLevels](#) level)
Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.
- void [setFormatProperty](#) ([Formats](#) format)
Access function for [format](#) property - refer to [format](#) property for details.
- [Formats](#) [getFormatProperty](#) ()
Access function for [format](#) property - refer to [format](#) property for details.
- void [setNotationProperty](#) ([Notations](#) notation)
Access function for [notation](#) property - refer to [notation](#) property for details.
- [Notations](#) [getNotationProperty](#) ()
Access function for [notation](#) property - refer to [notation](#) property for details.
- void [setArrayActionProperty](#) ([ArrayActions](#) arrayAction)
Access function for [arrayAction](#) property - refer to [arrayAction](#) property for details.
- [ArrayActions](#) [getArrayActionProperty](#) ()
Access function for [arrayAction](#) property - refer to [arrayAction](#) property for details.
- [QEAnalogProgressBar](#) (QWidget *parent=0)
- [QEAnalogProgressBar](#) (const QString &variableName, QWidget *parent=0)
- virtual [~QEAnalogProgressBar](#) ()
Destruction.
- void [setUseDbDisplayLimits](#) (bool useDbDisplayLimitsIn)
Access function for [useDbDisplayLimits](#) property - refer to [useDbDisplayLimits](#) property for details.
- bool [getUseDbDisplayLimits](#) ()
Access function for [useDbDisplayLimits](#) property - refer to [useDbDisplayLimits](#) property for details.
- void [setAlarmSeverityDisplayMode](#) ([AlarmSeverityDisplayModes](#) value)
Access function for [#AlarmSeverityDisplayModes](#) property - refer to [#AlarmSeverityDisplayModes](#) property for details.
- [AlarmSeverityDisplayModes](#) [getAlarmSeverityDisplayMode](#) ()
Access function for [#AlarmSeverityDisplayModes](#) property - refer to [#AlarmSeverityDisplayModes](#) property for details.

Protected Member Functions

- QString **getTextImage** ()
- [BandList](#) **getBandList** ()
- void **establishConnection** (unsigned int variableIndex)
- void **stringFormattingChange** ()
- void **dragEnterEvent** (QDragEnterEvent *event)
- void **dropEvent** (QDropEvent *event)
- void **mousePressEvent** (QMouseEvent *event)
- void **setDrop** (QVariant drop)
- QVariant **getDrop** ()
- QString **copyVariable** ()
- QVariant **copyData** ()

Protected Attributes

- [QEFloatingFormatting](#) **floatingFormatting**

Properties

- QString [variable](#)
- QString [variableSubstitutions](#)
- bool [variableAsToolTip](#)
- bool [allowDrop](#)
- bool [visible](#)
- unsigned int
- QString [userLevelUserStyle](#)
- QString [userLevelScientistStyle](#)
- QString [userLevelEngineerStyle](#)
- [UserLevels](#) [userLevelVisibility](#)
- [UserLevels](#) [userLevelEnabled](#)
- bool [displayAlarmState](#)
- AlarmSeverityDisplayModes [alarmSeverityDisplayMode](#)
- bool [useDbDisplayLimits](#)
- int [precision](#)
- bool [useDbPrecision](#)
- bool [leadingZero](#)
- bool [trailingZeros](#)
- bool [addUnits](#)
- QString [localEnumeration](#)
- [Formats](#) [format](#)
- [Notations](#) [notation](#)
- [ArrayActions](#) [arrayAction](#)

9.58.1 Member Enumeration Documentation

9.58.1.1 enum QEAnalogProgressBar::ArrayActions

User friendly enumerations for arrayAction property - refer to [QQStringFormatting::arrayActions](#) for details.

Enumerator:

Append Refer to [QQStringFormatting::APPEND](#) for details.

Ascii Refer to [QQStringFormatting::ASCII](#) for details.

Index Refer to [QQStringFormatting::INDEX](#) for details.

9.58.1.2 enum QEAnalogProgressBar::Formats

User friendly enumerations for format property - refer to [QQStringFormatting::formats](#) for details.

Enumerator:

Default Format as best appropriate for the data type.

Floating Format as a floating point number.

Integer Format as an integer.

UnsignedInteger Format as an unsigned integer.

Time Format as a time.

LocalEnumeration Format as a selection from the [localEnumeration](#) property.

9.58.1.3 enum QEAnalogProgressBar::Notations

User friendly enumerations for notation property - refer to [QQStringFormatting::notations](#) for details.

Enumerator:

Fixed Refer to [QQStringFormatting::NOTATION_FIXED](#) for details.

Scientific Refer to [QQStringFormatting::NOTATION_SCIENTIFIC](#) for details.

Automatic Refer to [QQStringFormatting::NOTATION_AUTOMATIC](#) for details.

9.58.1.4 enum QEAnalogProgressBar::UserLevels

User friendly enumerations for [userLevelVisibility](#) and [userLevelEnabled](#) properties - refer to [userLevelVisibility](#) and [userLevelEnabled](#) properties and [userLevel](#) enumeration for details.

Enumerator:

User Refer to USERLEVEL_USER for details.

Scientist Refer to USERLEVEL_SCIENTIST for details.

Engineer Refer to USERLEVEL_ENGINEER for details.

9.58.2 Constructor & Destructor Documentation**9.58.2.1 QAnalogProgressBar::QAnalogProgressBar (QWidget * *parent* = 0)**

Create without a variable. Use `setVariableNameProperty()` and `setSubstitutionsProperty()` to define a variable and, optionally, macro substitutions later.

9.58.2.2 QAnalogProgressBar::QAnalogProgressBar (const QString & *variableName*, QWidget * *parent* = 0)

Create with a variable. A connection is automatically established. If macro substitutions are required, create without a variable and set the variable and macro substitutions after creation.

9.58.3 Member Function Documentation**9.58.3.1 void QAnalogProgressBar::dbValueChanged (const double & *out*) [signal]**

Sent when the widget is updated following a data change Can be used to pass on EPICS data (as presented in this widget) to other widgets. For example a QList widget could log updates from this widget.

9.58.4 Property Documentation**9.58.4.1 bool QAnalogProgressBar::addUnits [read, write]**

If true (default), add engineering units supplied with the data.

9.58.4.2 AlarmSeverityDisplayModes QAnalogProgressBar::alarmSeverityDisplayMode [read, write]

Visualise the EPICS alarm severity

9.58.4.3 bool QAnalogProgressBar::allowDrop [read, write]

Allow drag/drops operations to this widget. Default is false. Any dropped text will be used as a new variable name.

Reimplemented from [QEDragDrop](#).

9.58.4.4 ArrayActions QEAnalogProgressBar::arrayAction [read, write]

Text formatting option for array data. Default is ASCII. Options are:

- ASCII - treat array as a single text string. For example an array of three characters 'a' 'b' 'c' will be formatted as 'abc'.
- APPEND - treat array as an array of numbers and format a string containing them all with a space between each. For example, an array of three numbers 10, 11 and 12 will be formatted as '10 11 12'.
- INDEX - Extract a single item from the array. The item is then formatted as any other non array data would be. The item selected is determined by the arrayIndex property. For example, if arrayIndex property is 1, an array of three numbers 10, 11 and 12 will be formatted as '11'.

9.58.4.5 bool QEAnalogProgressBar::displayAlarmState [read, write]

If set (default) widget will indicate the alarm state of any variable data is displaying. Typically the background colour is set to indicate the alarm state. Note, this property is included in the set of standard properties as it applies to most widgets. It will do nothing for widgets that don't display data.

Reimplemented from [standardProperties](#).

9.58.4.6 Formats QEAnalogProgressBar::format [read, write]

Format to apply to data. Default is 'Default' in which case the data type supplied with the data determines how the data is formatted. For all other options, an attempt is made to format the data as requested (whatever its native form).

9.58.4.7 unsigned QEAnalogProgressBar::int [read, write]

Set the ID used by the message filtering system. Default is zero. Widgets or applications that use messages from the framework have the option of filtering on this ID. For example, by using a unique message source ID a [QELog](#) widget may be set up to only log messages from a select set of widgets.

Base used for when formatting integers. Default is 10 (duh!)

Index used to select a single item of data for formatting from an array of data. Default is 0. Only used when the arrayAction property is INDEX. Refer to the arrayAction property for more details.

9.58.4.8 bool QEAnalogProgressBar::leadingZero [read, write]

If true (default), always add a leading zero when formatting numbers.

9.58.4.9 QString QEAnalogProgressBar::localEnumeration [read, write]

An enumeration list used to data values. Used only when the formatting option is 'local enumeration'. Value is converted to an integer and used to select a string from this list.

Format is:

```
[[<|<=|=|!=|>|=|>]value1|*]: string1 , [[<|<=|=|!=|>|=|>]value2|*]: string2 , [[<|<=|=|!=|>|=|>]value3|*]: string3 , ...
```

Where: < Less than <= Less than or equal = Equal (default if no operator specified)
>= Greather than or equal > Greater than Always match (used to specify default text)

Values may be numeric or textual Values do not have to be in any order, but first match wins Values may be quoted Strings may be quoted Consecutive values do not have to be present. Operator is assumed to be equality if not present. White space is ignored except within quoted strings.

may be included in a string to indicate a line break

Examples are:

```
0:Off,1:On 0 : "Pump Running", 1 : "Pump not running" 0:"", 1:"Warning!\nAlarm"
<2:"Value is less than two", =2:"Value is equal to two", >2:"Value is grater than 2"
3:"Beamline Available", *:"" "Pump Off": "OH NO!, the pump is OFF!","Pump On": "It's OK, the pump is on"
```

The data value is converted to a string if no enumeration for that value is available. For example, if the local enumeration is '0:off,1:on', and a value of 10 is processed, the text generated is '10'. If a blank string is required, this should be explicit. for example, '0:off,1:on,10: ""'

A range of numbers can be covered by a pair of values as in the following example:
>=4:"Between 4 and 8",<=8:"Between 4 and 8"

9.58.4.10 Notations QEAnalogProgressBar::notation [read, write]

Notation used for numerical formatting. Default is fixed.

9.58.4.11 int QEAnalogProgressBar::precision [read, write]

Precision used when formatting floating point numbers. The default is 4. This is only used if useDbPrecision is false.

9.58.4.12 bool QEAnalogProgressBar::trailingZeros [read, write]

If true (default), always remove any trailing zeros when formatting numbers.

9.58.4.13 bool QEAnalogProgressBar::useDbDisplayLimits [read, write]

Use the EPICS database display limits

9.58.4.14 `bool QEAnalogProgressBar::useDbPrecision` `[read, write]`

If true (default), format floating point numbers using the precision supplied with the data. If false, the precision property is used.

9.58.4.15 `UserLevels QEAnalogProgressBar::userLevelEnabled` `[read, write]`

Lowest user level at which the widget is enabled. Default is 'User'. Used when designing GUIs that allow access to more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through `setUserLevel()` Widgets that are always accessible should be visible at 'User'. Widgets that are only accessible to scientists managing the facility should be visible at 'Scientist'. Widgets that are only accessible to engineers maintaining the facility should be visible at 'Engineer'.

9.58.4.16 `QString QEAnalogProgressBar::userLevelEngineerStyle` `[read, write]`

Style Sheet string to be applied when the widget is displayed in 'Engineer' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the `styleManager` class. Refer to the `styleManager` class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.58.4.17 `QString QEAnalogProgressBar::userLevelScientistStyle` `[read, write]`

Style Sheet string to be applied when the widget is displayed in 'Scientist' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the `styleManager` class. Refer to the `styleManager` class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.58.4.18 `QString QEAnalogProgressBar::userLevelUserStyle` `[read, write]`

Style Sheet string to be applied when the widget is displayed in 'User' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the `styleManager` class. Refer to the `styleManager` class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.58.4.19 `UserLevels QEAnalogProgressBar::userLevelVisibility` `[read, write]`

Lowest user level at which the widget is visible. Default is 'User'. Used when designing GUIs that display more and more detail according to the user mode. The user mode is

set application wide through the [QELogin](#) widget, or programmatically through `setUserLevel()`. Widgets that are always visible should be visible at 'User'. Widgets that are only used by scientists managing the facility should be visible at 'Scientist'. Widgets that are only used by engineers maintaining the facility should be visible at 'Engineer'.

9.58.4.20 `QString QEAnalogProgressBar::variable` [read, write]

EPICS variable name (CA PV)

9.58.4.21 `bool QEAnalogProgressBar::variableAsToolTip` [read, write]

Use the variable as the tool tip. Default is true. Tool tip property will be overwritten by the variable name.

Reimplemented from [QEToolTip](#).

9.58.4.22 `QString QEAnalogProgressBar::variableSubstitutions` [read, write]

Macro substitutions. The default is no substitutions. The format is `NAME1=VALUE1[, NAME2=VALUE2...`. Values may be quoted strings. For example, `'PUMP=PMP3, NAME = "My Pump"'`. These substitutions are applied to variable names for all QE widgets. In some widgets are also used for other purposes.

9.58.4.23 `bool QEAnalogProgressBar::visible` [read, write]


Display the widget. Default is true. Setting this property false is usefull if widget is only used to provide a signal - for example, when supplying data to a [QELink](#) widget. Note, when false the widget will still be visible in Qt Designer.

The documentation for this class was generated from the following files:

- `/tmp/epicsqt/trunk/framework/widgets/QEAnalogProgressBar/QEAnalogProgressBar.h`
- `/tmp/epicsqt/trunk/framework/widgets/QEAnalogProgressBar/QEAnalogProgressBar.cpp`

9.59 QEBitStatus Class Reference

Inheritance diagram for QEBitStatus:

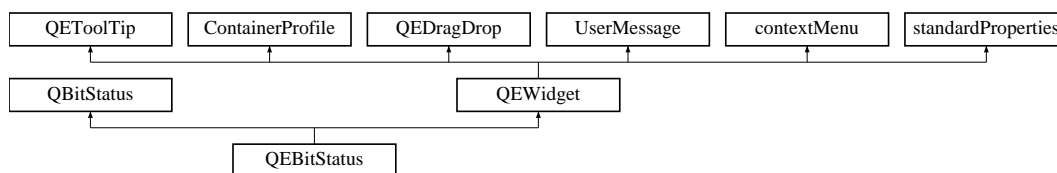

Public Types

- enum [UserLevels](#) { [User](#) = userLevelTypes::USERLEVEL_USER, [Scientist](#) = userLevelTypes::USERLEVEL_SCIENTIST, [Engineer](#) = userLevelTypes::USERLEVEL_ENGINEER }

Signals

- void [dbValueChanged](#) (const long &out)

Public Member Functions

- [UserLevels](#) [getUserLevelVisibilityProperty](#) ()
Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.
- void [setUserLevelVisibilityProperty](#) ([UserLevels](#) level)
Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.
- [UserLevels](#) [getUserLevelEnabledProperty](#) ()
Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.
- void [setUserLevelEnabledProperty](#) ([UserLevels](#) level)
Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.
- QEBitStatus** (QWidget *parent=0)
- QEBitStatus** (const QString &variableName, QWidget *parent=0)
- void [setVariableNameAndSubstitutions](#) (QString variableNameIn, QString variableNameSubstitutionsIn, unsigned int variableIndex)

Protected Member Functions

- void **establishConnection** (unsigned int variableIndex)
- void **dragEnterEvent** (QDragEnterEvent *event)
- void **dropEvent** (QDropEvent *event)
- void **mousePressEvent** (QMouseEvent *event)
- void **setDrop** (QVariant drop)
- QVariant **getDrop** ()
- QString **copyVariable** ()
- QVariant **copyData** ()

Protected Attributes

- [QEIntegerFormatting](#) **integerFormatting**

Properties

- QString [variable](#)
- QString [variableSubstitutions](#)
- bool [variableAsToolTip](#)
- bool [allowDrop](#)
- bool [visible](#)
- unsigned [int](#)
- QString [userLevelUserStyle](#)
- QString [userLevelScientistStyle](#)
- QString [userLevelEngineerStyle](#)
- [UserLevels](#) [userLevelVisibility](#)
- [UserLevels](#) [userLevelEnabled](#)
- bool [displayAlarmState](#)

9.59.1 Member Enumeration Documentation

9.59.1.1 enum [QEBitStatus::UserLevels](#)

User friendly enumerations for [userLevelVisibility](#) and [userLevelEnabled](#) properties - refer to [userLevelVisibility](#) and [userLevelEnabled](#) properties and [userLevel](#) enumeration for details.

Enumerator:

User Refer to [USERLEVEL_USER](#) for details.

Scientist Refer to [USERLEVEL_SCIENTIST](#) for details.

Engineer Refer to [USERLEVEL_ENGINEER](#) for details.

9.59.2 Member Function Documentation

9.59.2.1 void [QEBitStatus::dbValueChanged](#) (const long & *out*) [signal]

Sent when the widget is updated following a data change Can be used to pass on EPICS data (as presented in this widget) to other widgets. For example a QList widget could log updates from this widget.

9.59.2.2 void [QEBitStatus::setVariableNameAndSubstitutions](#) (QString *variableNameIn*, QString *variableNameSubstitutionsIn*, unsigned int *variableIndex*) [virtual]

Virtual function that may be implimented by users of [QEWidget](#) to update variable names and macro substitutions. A default is provided that is suitable in most cases.

Reimplemented from [QEWidget](#).

9.59.3 Property Documentation

9.59.3.1 `bool QEBitStatus::allowDrop` [read, write]

Allow drag/drops operations to this widget. Default is false. Any dropped text will be used as a new variable name.

Reimplemented from [QEDragDrop](#).

9.59.3.2 `bool QEBitStatus::displayAlarmState` [read, write]

If set (default) widget will indicate the alarm state of any variable data is displaying. Typically the background colour is set to indicate the alarm state. Note, this property is included in the set of standard properties as it applies to most widgets. It will do nothing for widgets that don't display data.

Reimplemented from [standardProperties](#).

9.59.3.3 `unsigned QEBitStatus::int` [read, write]

Set the ID used by the message filtering system. Default is zero. Widgets or applications that use messages from the framework have the option of filtering on this ID. For example, by using a unique message source ID a [QELog](#) widget may be set up to only log messages from a select set of widgets.

9.59.3.4 `UserLevels QEBitStatus::userLevelEnabled` [read, write]

Lowest user level at which the widget is enabled. Default is 'User'. Used when designing GUIs that allow access to more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through `setUserLevel()`. Widgets that are always accessible should be visible at 'User'. Widgets that are only accessible to scientists managing the facility should be visible at 'Scientist'. Widgets that are only accessible to engineers maintaining the facility should be visible at 'Engineer'.

9.59.3.5 `QString QEBitStatus::userLevelEngineerStyle` [read, write]

Style Sheet string to be applied when the widget is displayed in 'Engineer' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red'. This Style Sheet string will be applied by the `styleManager` class. Refer to the `styleManager` class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.59.3.6 QString QEBitStatus::userLevelScientistStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'Scientist' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.59.3.7 QString QEBitStatus::userLevelUserStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'User' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.59.3.8 UserLevels QEBitStatus::userLevelVisibility [read, write]

Lowest user level at which the widget is visible. Default is 'User'. Used when designing GUIs that display more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through setUserLevel() Widgets that are always visible should be visible at 'User'. Widgets that are only used by scientists managing the facility should be visible at 'Scientist'. Widgets that are only used by engineers maintaining the facility should be visible at 'Engineer'.

9.59.3.9 QString QEBitStatus::variable [read, write]

EPICS variable name (CA PV)

9.59.3.10 bool QEBitStatus::variableAsToolTip [read, write]

Use the variable as the tool tip. Default is true. Tool tip property will be overwritten by the variable name.

Reimplemented from [QEToolTip](#).

9.59.3.11 QString QEBitStatus::variableSubstitutions [read, write]

Macro substitutions. The default is no substitutions. The format is NAME1=VALUE1[, NAME2=VALUE2... Values may be quoted strings. For example, 'PUMP=PMP3, NAME = "My Pump"' These substitutions are applied to variable names for all QE widgets. In some widgets are also used for other purposes.

9.59.3.12 bool QEBitStatus::visible [read, write]


Display the widget. Default is true. Setting this property false is usefull if widget is only used to provide a signal - for example, when supplying data to a [QELink](#) widget. Note, when false the widget will still be visible in Qt Designer.

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEBitStatus/QEBitStatus.h
- /tmp/epicsqt/trunk/framework/widgets/QEBitStatus/QEBitStatus.cpp

9.60 QByteArray Class Reference

Inheritance diagram for QByteArray:

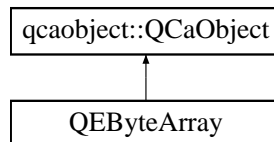

Public Slots

- void **writeByteArray** (const QByteArray &data)

Signals

- void **byteArrayConnectionChanged** ([QCaConnectionInfo](#) &connectionInfo, const unsigned int &variableIndex)
- void **byteArrayChanged** (const QByteArray &value, unsigned long dataSize, [QCaAlarmInfo](#) &alarmInfo, [QCaDateTime](#) &timeStamp, const unsigned int &variableIndex)

Public Member Functions

- **QByteArray** (QString recordName, QObject *eventObject, unsigned int variableIndexIn)
- **QByteArray** (QString recordName, QObject *eventObject, unsigned int variableIndexIn, [UserMessage](#) *userMessageIn)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/data/include/QByteArray.h
- /tmp/epicsqt/trunk/framework/data/src/QByteArray.cpp


9.61 QEChartStateLists Class Reference

The documentation for this class was generated from the following file:

- /tmp/epicsqt/trunk/framework/widgets/QESTripChart/QESTripChart.cpp

9.62 QECheckBox Class Reference

Inheritance diagram for QECheckBox:

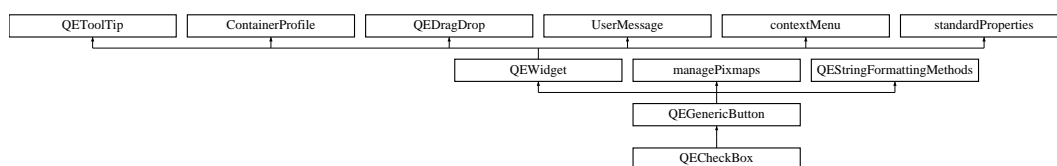

Public Types

- enum `UserLevels` { `User` = `userLevelTypes::USERLEVEL_USER`, `Scientist` = `userLevelTypes::USERLEVEL_SCIENTIST`, `Engineer` = `userLevelTypes::USERLEVEL_ENGINEER` }
- enum `Formats` {
`Default` = `QEStringFormatting::FORMAT_DEFAULT`, `Floating` = `QEStringFormatting::FORMAT_FLOATING`, `Integer` = `QEStringFormatting::FORMAT_INTEGER`, `UnsignedInteger` = `QEStringFormatting::FORMAT_UNSIGNEDINTEGER`,
`Time` = `QEStringFormatting::FORMAT_TIME`, `LocalEnumeration` = `QEStringFormatting::FORMAT_LOCAL_ENUMERATE` }
- enum `Notations` { `Fixed` = `QEStringFormatting::NOTATION_FIXED`, `Scientific` = `QEStringFormatting::NOTATION_SCIENTIFIC`, `Automatic` = `QEStringFormatting::NOTATION_AUTOMATIC` }
- enum `ArrayActions` { `Append` = `QEStringFormatting::APPEND`, `Ascii` = `QEStringFormatting::ASCII`, `Index` = `QEStringFormatting::INDEX` }
- enum `UpdateOptions` { `Text` = `QEGenericButton::UPDATE_TEXT`, `Icon` = `QEGenericButton::UPDATE_ICON`, `TextAndIcon` = `QEGenericButton::UPDATE_TEXT_AND_ICON`, `State` = `QEGenericButton::UPDATE_STATE` }

User friendly enumerations for updateOption property - refer to QEGenericButton::updateOptions for details.

- enum `CreationOptionNames` { `Open` = `QForm::CREATION_OPTION_OPEN`, `NewTab` = `QForm::CREATION_OPTION_NEW_TAB`, `NewWindow` = `QForm::CREATION_OPTION_NEW_WINDOW` }

Creation options. Used to indicate how to present a GUI when requesting a new GUI be created. Open a new window, open a new tab, or replace the current window.

Public Slots

- void `launchGui` (QString guiName, QForm::creationOptions creationOption)

Signals

- void [dbValueChanged](#) (const QString &out)
- void [requestResend](#) ()
Internal use only. Used when changing a property value to force a re-display to reflect the new property value.
- void [newGui](#) (QString guiName, QForm::creationOptions creationOption)
Internal use only. Request a new GUI is created. Typically, this is caught by the QEGui application.
- void [pressed](#) (int value)
- void [released](#) (int value)
- void [clicked](#) (int value)

Public Member Functions

- [QECheckBox](#) (QWidget *parent=0)
- [QECheckBox](#) (const QString &variableName, QWidget *parent=0)
- [UserLevels](#) [getUserLevelVisibilityProperty](#) ()
Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.
- void [setUserLevelVisibilityProperty](#) ([UserLevels](#) level)
Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.
- [UserLevels](#) [getUserLevelEnabledProperty](#) ()
Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.
- void [setUserLevelEnabledProperty](#) ([UserLevels](#) level)
Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.
- void [setFormatProperty](#) ([Formats](#) format)
Access function for [format](#) property - refer to [format](#) property for details.
- [Formats](#) [getFormatProperty](#) ()
Access function for [format](#) property - refer to [format](#) property for details.
- void [setNotationProperty](#) ([Notations](#) notation)
Access function for [notation](#) property - refer to [notation](#) property for details.
- [Notations](#) [getNotationProperty](#) ()
Access function for [notation](#) property - refer to [notation](#) property for details.
- void [setArrayActionProperty](#) ([ArrayActions](#) arrayAction)
Access function for [arrayAction](#) property - refer to [arrayAction](#) property for details.
- [ArrayActions](#) [getArrayActionProperty](#) ()
Access function for [arrayAction](#) property - refer to [arrayAction](#) property for details.

Properties

- QString [variable](#)
- QString [variableSubstitutions](#)
- bool [subscribe](#)
- bool [variableAsToolTip](#)
- bool [allowDrop](#)
- bool [visible](#)
- unsigned int
- QString [userLevelUserStyle](#)
- QString [userLevelScientistStyle](#)
- QString [userLevelEngineerStyle](#)
- UserLevels [userLevelVisibility](#)
- UserLevels [userLevelEnabled](#)
- bool [displayAlarmState](#)
- int [precision](#)
- bool [useDbPrecision](#)
- bool [leadingZero](#)
- bool [trailingZeros](#)
- bool [addUnits](#)
- QString [localEnumeration](#)
- Formats [format](#)
- Notations [notation](#)
- ArrayActions [arrayAction](#)
- Qt::Alignment [alignment](#)
- UpdateOptions [updateOption](#)
- QPixmap [pixmap0](#)
- QPixmap [pixmap1](#)
- QPixmap [pixmap2](#)
- QPixmap [pixmap3](#)
- QPixmap [pixmap4](#)
- QPixmap [pixmap5](#)
- QPixmap [pixmap6](#)
- QPixmap [pixmap7](#)
- QString [password](#)
- bool [confirmAction](#)
- bool [writeOnPress](#)
- bool [writeOnRelease](#)
- bool [writeOnClick](#)
- QString [pressText](#)
- QString [releaseText](#)
- QString [clickText](#)
- QString [clickCheckedText](#)
- QString [labelText](#)
- QString [program](#)
- QStringList [arguments](#)
- QString [guiFile](#)
- CreationOptionNames [creationOption](#)
- QString [prioritySubstitutions](#)

9.62.1 Member Enumeration Documentation

9.62.1.1 enum QCheckBox::ArrayActions

User friendly enumerations for arrayAction property - refer to [QStringFormatting::arrayActions](#) for details.

Enumerator:

Append Refer to [QStringFormatting::APPEND](#) for details.

Ascii Refer to [QStringFormatting::ASCII](#) for details.

Index Refer to [QStringFormatting::INDEX](#) for details.

9.62.1.2 enum QCheckBox::CreationOptionNames

Creation options. Used to indicate how to present a GUI when requesting a new GUI be created. Open a new window, open a new tab, or replace the current window.

Enumerator:

Open Replace the current GUI with the new GUI.

NewTab Open new GUI in a new tab.

NewWindow Open new GUI in a new window.

9.62.1.3 enum QCheckBox::Formats

User friendly enumerations for format property - refer to [QStringFormatting::formats](#) for details.

Enumerator:

Default Format as best appropriate for the data type.

Floating Format as a floating point number.

Integer Format as an integer.

UnsignedInteger Format as an unsigned integer.

Time Format as a time.

LocalEnumeration Format as a selection from the [localEnumeration](#) property.

9.62.1.4 enum QCheckBox::Notations

User friendly enumerations for notation property - refer to [QStringFormatting::notations](#) for details.

Enumerator:

Fixed Refer to [QStringFormatting::NOTATION_FIXED](#) for details.

Scientific Refer to [QStringFormatting::NOTATION_SCIENTIFIC](#) for details.

Automatic Refer to [QStringFormatting::NOTATION_AUTOMATIC](#) for details.

9.62.1.5 enum QCheckBox::UpdateOptions

User friendly enumerations for updateOption property - refer to QGenericButton::updateOptions for details.

Enumerator:

- Text** Data updates will update the button text.
- Icon** Data updates will update the button icon.
- TextAndIcon** Data updates will update the button text and icon.
- State** Data updates will update the button state (checked or unchecked)

9.62.1.6 enum QCheckBox::UserLevels

User friendly enumerations for [userLevelVisibility](#) and [userLevelEnabled](#) properties - refer to [userLevelVisibility](#) and [userLevelEnabled](#) properties and userLevel enumeration for details.

Enumerator:

- User** Refer to USERLEVEL_USER for details.
- Scientist** Refer to USERLEVEL_SCIENTIST for details.
- Engineer** Refer to USERLEVEL_ENGINEER for details.

9.62.2 Constructor & Destructor Documentation

9.62.2.1 QCheckBox::QCheckBox (QWidget * parent = 0)

Create without a variable. Use setVariableNameProperty() and setSubstitutionsProperty() to define a variable and, optionally, macro substitutions later.

9.62.2.2 QCheckBox::QCheckBox (const QString & variableName, QWidget * parent = 0)

Create with a variable. A connection is automatically established. If macro substitutions are required, create without a variable and set the variable and macro substitutions after creation.

9.62.3 Member Function Documentation

9.62.3.1 void QCheckBox::clicked (int value) [signal]

Button has been Clicked. The value emitted is the integer interpretation of the clickText property (or the clickCheckedText property if the button was checked)

9.62.3.2 void QECheckBox::dbValueChanged (const QString & out) [signal]

Sent when the widget is updated following a data change Can be used to pass on EPICS data (as presented in this widget) to other widgets. For example a QList widget could log updates from this widget.

9.62.3.3 void QECheckBox::launchGui (QString guiName, QEForm::creationOptions creationOption) [inline, slot]

Default slot used to create a new GUI if there is no slot indicated in the [ContainerProfile](#) class. This slot is typically used when the button is pressed within the Designer preview window to allow the operation of the button to be tested. If an application does not specify a slot to use for creating new windows (through the [ContainerProfile](#) class) a window will still be created through this slot, but it will not respect the window creation options or any other window related application constraints. For example, the QEGui application does provide a slot for creating new GUIs in the [ContainerProfile](#) class which respects the creation options, knows how to add tabs in the application, and extend the application's window menu in the menu bar.

Reimplemented from [QEGenericButton](#).

9.62.3.4 void QECheckBox::pressed (int value) [signal]

Button has been Pressed. The value emitted is the integer interpretation of the press-Text property

9.62.3.5 void QECheckBox::released (int value) [signal]

Button has been Released The value emitted is the integer interpretation of the release-Text property

9.62.4 Property Documentation

9.62.4.1 bool QECheckBox::addUnits [read, write]

If true (default), add engineering units supplied with the data.

9.62.4.2 Qt::Alignment QECheckBox::alignment [read, write]

Set the buttons text alignment. Left justification is particularly useful when displaying quickly changing numeric data updates.

9.62.4.3 `bool QCheckBox::allowDrop` [read, write]

Allow drag/drops operations to this widget. Default is false. Any dropped text will be used as a new variable name.

Reimplemented from [QEDragDrop](#).

9.62.4.4 `QStringList QCheckBox::arguments` [read, write]

Arguments for program specified in the 'program' property.

Reimplemented from [QEGenericButton](#).

9.62.4.5 `ArrayActions QCheckBox::arrayAction` [read, write]

Text formatting option for array data. Default is ASCII. Options are:

- ASCII - treat array as a single text string. For example an array of three characters 'a' 'b' 'c' will be formatted as 'abc'.
- APPEND - treat array as an array of numbers and format a string containing them all with a space between each. For example, an array of three numbers 10, 11 and 12 will be formatted as '10 11 12'.
- INDEX - Extract a single item from the array. The item is then formatted as any other non array data would be. The item selected is determined by the `arrayIndex` property. For example, if `arrayIndex` property is 1, an array of three numbers 10, 11 and 12 will be formatted as '11'.

9.62.4.6 `QString QCheckBox::clickCheckedText` [read, write]

Text used to compare with text written or read to determine if push button should be marked as checked. Note, must be an exact match following formatting of data updates. When writing values, the 'pressText', 'ReleaseText', or 'clickedtext' must match this property to cause the button to be checked when the write occurs.

Good example: formatting set to display a data value of '1' as 'On', `clickCheckedText` is 'On', `clickText` is 'On'. In this example, the push button will be checked when a data update occurs with a value of 1 or when the button is clicked.

Bad example: formatting set to display a data value of '1' as 'On', `clickCheckedText` is 'On', `clickText` is '1'. In this example, the push button will be checked when a data update occurs with a value of 1 but, although a valid value will be written when clicked, the button will not be checked when clicked as '1' is not the same as 'On'.

Reimplemented from [QEGenericButton](#).

9.62.4.7 `QString QCheckBox::clickText` [read, write]

Value written when user clicks button if 'writeOnClick' property is true

Reimplemented from [QEGenericButton](#).

9.62.4.8 bool QECheckBox::confirmAction [read, write]

If true, a dialog will be presented asking the user to confirm if the button action should be carried out

9.62.4.9 CreationOptionNames QECheckBox::creationOption [read, write]

Creation options when opening a new GUI. Open a new window, open a new tab, or replace the current window. the creation option is supplied when the button generates a newGui signal. Application code connected to this signal should honour this request if possible. When used within the QEGui application, the QEGui application creates a new window, new tab, or replaces the current window as appropriate.

Reimplemented from [QEGenericButton](#).

9.62.4.10 bool QECheckBox::displayAlarmState [read, write]

If set (default) widget will indicate the alarm state of any variable data is displaying. Typically the background colour is set to indicate the alarm state. Note, this property is included in the set of standard properties as it applies to most widgets. It will do nothing for widgets that don't display data.

Reimplemented from [standardProperties](#).

9.62.4.11 Formats QECheckBox::format [read, write]

Format to apply to data. Default is 'Default' in which case the data type supplied with the data determines how the data is formatted. For all other options, an attempt is made to format the data as requested (whatever its native form).

9.62.4.12 QString QECheckBox::guiFile [read, write]

File name of GUI to be presented on button click. File name can be absolute, relative to the path of the QEform in which the [QEPushButton](#) is located, relative to the any path in the path list published in the [ContainerProfile](#) class, or relative to the current path. See [QEWidget::openQEFile\(\)](#) in QEWidget.cpp for details.

9.62.4.13 unsigned QECheckBox::int [read, write]

Set the ID used by the message filtering system. Default is zero. Widgets or applications that use messages from the framework have the option of filtering on this ID. For example, by using a unique message source ID a [QELog](#) widget may be set up to only log messages from a select set of widgets.

Base used for when formatting integers. Default is 10 (duh!)

Index used to select a single item of data for formatting from an array of data. Default is 0. Only used when the `arrayAction` property is `INDEX`. Refer to the `arrayAction` property for more details.

9.62.4.14 `QString QCheckBox::labelText` [read, write]

Button label text (prior to substitution). Macro substitutions will be applied to this text and the result will be set as the button text. Used when data updates are not being represented in the button text. IF NOT LEFT EMPTY, THIS TEXT WILL TAKE PRIORITY OVER THE PUSH BUTTON 'text' PROPERTY! For example, a button in a sub form may have a 'labelText' property of 'Turn Pump On'. When the sub form is used twice in a main form with substitutions `PUMPNUM=1` and `PUMPNUM=2` respectively, the two identical buttons in the sub forms will have the labels 'Turn Pump 1 On' and 'Turn Pump 2 On' respectively.

Reimplemented from [QGenericButton](#).

9.62.4.15 `bool QCheckBox::leadingZero` [read, write]

If true (default), always add a leading zero when formatting numbers.

9.62.4.16 `QString QCheckBox::localEnumeration` [read, write]

An enumeration list used to data values. Used only when the formatting option is 'local enumeration'. Value is converted to an integer and used to select a string from this list.

Format is:

```
[[<|<=|=|!=|>|=|>]value1[*] : string1 , [[<|<=|=|!=|>|=|>]value2[*] : string2 , [[<|<=|=|!=|>|=|>]value3[*] : string3 , ...
```

Where: < Less than <= Less than or equal = Equal (default if no operator specified)
>= Greather than or equal > Greater than Always match (used to specify default text)

Values may be numeric or textual Values do not have to be in any order, but first match wins Values may be quoted Strings may be quoted Consecutive values do not have to be present. Operator is assumed to be equality if not present. White space is ignored except within quoted strings.

may be included in a string to indicate a line break

Examples are:

```
0:Off,1:On 0 : "Pump Running", 1 : "Pump not running" 0:"", 1:"Warning!\nAlarm"
<2:"Value is less than two", =2:"Value is equal to two", >2:"Value is grater than 2"
3:"Beamline Available", *:"" "Pump Off":"OH NO!, the pump is OFF!","Pump On":"It's
OK, the pump is on"
```

The data value is converted to a string if no enumeration for that value is available. For example, if the local enumeration is '0:off,1:on', and a value of 10 is processed, the

text generated is '10'. If a blank string is required, this should be explicit. for example, '0:off,1:on,10:'"

A range of numbers can be covered by a pair of values as in the following example:
>=4:"Between 4 and 8",<=8:"Between 4 and 8"

9.62.4.17 Notations QCheckBox::notation [read, write]

Notation used for numerical formatting. Default is fixed.

9.62.4.18 QString QCheckBox::password [read, write]

Password user will need to enter before any action is taken

Reimplemented from [QGenericButton](#).

9.62.4.19 QPixmap QCheckBox::pixmap0 [read, write]

Pixmap to display if updateOption is Icon or TextAndIcon and data value translates to an index of 0

9.62.4.20 QPixmap QCheckBox::pixmap1 [read, write]

Pixmap to display if updateOption is Icon or TextAndIcon and data value translates to an index of 1

9.62.4.21 QPixmap QCheckBox::pixmap2 [read, write]

Pixmap to display if updateOption is Icon or TextAndIcon and data value translates to an index of 2

9.62.4.22 QPixmap QCheckBox::pixmap3 [read, write]

Pixmap to display if updateOption is Icon or TextAndIcon and data value translates to an index of 3

9.62.4.23 QPixmap QCheckBox::pixmap4 [read, write]

Pixmap to display if updateOption is Icon or TextAndIcon and data value translates to an index of 4

9.62.4.24 QPixmap QCheckBox::pixmap5 [read, write]

Pixmap to display if updateOption is Icon or TextAndIcon and data value translates to an index of 5

9.62.4.25 QPixmap QECheckBox::pixmap6 [read, write]

Pixmap to display if updateOption is Icon or TextAndIcon and data value translates to an index of 6

9.62.4.26 QPixmap QECheckBox::pixmap7 [read, write]

Pixmap to display if updateOption is Icon or TextAndIcon and data value translates to an index of 7

9.62.4.27 int QECheckBox::precision [read, write]

Precision used when formatting floating point numbers. The default is 4. This is only used if useDbPrecision is false.

9.62.4.28 QString QECheckBox::pressText [read, write]

Value written when user presses button if 'writeOnPress' property is true

Reimplemented from [QEGenericButton](#).

9.62.4.29 QString QECheckBox::prioritySubstitutions [read, write]

Overriding macro substitutions. These macro substitutions take precedence over any existing macro substitutions defined by the variableSubstitutions property, any parent forms, or the application containing the button. These macro substitutions are particularly useful when the button's function is to reload the same form but with different macro substitutions. The variableSubstitutions property cannot be used for this since, although they are added to the list of macro substitutions applied to the new form, they are appended to the list and the existing macro substitutions take precedence.

Reimplemented from [QEGenericButton](#).

9.62.4.30 QString QECheckBox::program [read, write]

Program to run when the button is clicked. No attempt to run a program is made if this property is empty. Example: firefox

Reimplemented from [QEGenericButton](#).

9.62.4.31 QString QECheckBox::releaseText [read, write]

Value written when user releases button if 'writeOnRelease' property is true

Reimplemented from [QEGenericButton](#).

9.62.4.32 bool QCheckBox::subscribe [read, write]

Sets if this widget subscribes for data updates and displays current data. Default is 'true' (subscribes for and displays data updates)

Reimplemented from [QEObject](#).

9.62.4.33 bool QCheckBox::trailingZeros [read, write]

If true (default), always remove any trailing zeros when formatting numbers.

9.62.4.34 UpdateOptions QCheckBox::updateOption [read, write]

Update options (text, pixmap, both, or state (checked or unchecked))

Reimplemented from [QEGenericButton](#).

9.62.4.35 bool QCheckBox::useDbPrecision [read, write]

If true (default), format floating point numbers using the precision supplied with the data. If false, the precision property is used.

9.62.4.36 UserLevels QCheckBox::userLevelEnabled [read, write]

Lowest user level at which the widget is enabled. Default is 'User'. Used when designing GUIs that allow access to more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through `setUserLevel()` Widgets that are always accessible should be visible at 'User'. Widgets that are only accessible to scientists managing the facility should be visible at 'Scientist'. Widgets that are only accessible to engineers maintaining the facility should be visible at 'Engineer'.

9.62.4.37 QString QCheckBox::userLevelEngineerStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'Engineer' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.62.4.38 QString QCheckBox::userLevelScientistStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'Scientist' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager

class. Refer to the `styleManager` class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.62.4.39 `QString QECheckBox::userLevelUserStyle` [read, write]

Style Sheet string to be applied when the widget is displayed in 'User' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the `styleManager` class. Refer to the `styleManager` class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.62.4.40 `UserLevels QECheckBox::userLevelVisibility` [read, write]

Lowest user level at which the widget is visible. Default is 'User'. Used when designing GUIs that display more and more detail according to the user mode. The user mode is set application wide through the `QELogin` widget, or programatically through `setUserLevel()` Widgets that are always visible should be visible at 'User'. Widgets that are only used by scientists managing the facility should be visible at 'Scientist'. Widgets that are only used by engineers maintaining the facility should be visible at 'Engineer'.

9.62.4.41 `QString QECheckBox::variable` [read, write]

EPICS variable name (CA PV)

9.62.4.42 `bool QECheckBox::variableAsToolTip` [read, write]

Use the variable as the tool tip. Default is true. Tool tip property will be overwritten by the variable name.

Reimplemented from `QEToolTip`.

9.62.4.43 `QString QECheckBox::variableSubstitutions` [read, write]

Macro substitutions. The default is no substitutions. The format is NAME1=VALUE1[, NAME2=VALUE2... Values may be quoted strings. For example, 'PUMP=PMP3, NAME = "My Pump"' These substitutions are applied to variable names for all QE widgets. In some widgets are also used for other purposes.

9.62.4.44 `bool QECheckBox::visible` [read, write]

Display the widget. Default is true. Setting this property false is usefull if widget is only used to provide a signal - for example, when supplying data to a `QELink` widget. Note, when false the widget will still be visible in Qt Designer.

9.62.4.45 `bool QECheckBox::writeOnClick` [read, write]

If true, the 'clickText' property is written when the button is clicked. Default is true

Reimplemented from [QEGenericButton](#).

9.62.4.46 `bool QECheckBox::writeOnPress` [read, write]

If true, the 'pressText' property is written when the button is pressed. Default is false

Reimplemented from [QEGenericButton](#).

9.62.4.47 `bool QECheckBox::writeOnRelease` [read, write]

If true, the 'releaseText' property is written when the button is released. Default is false

Reimplemented from [QEGenericButton](#).

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEButton/QECheckBox.h
- /tmp/epicsqt/trunk/framework/widgets/QEButton/QECheckBox.cpp

9.63 QECheckBoxManager Class Reference

Public Member Functions


- **QECheckBoxManager** (QObject *parent=0)
- `bool isContainer` () const
- `bool isInitialized` () const
- `QIcon icon` () const
- `QString group` () const
- `QString includeFile` () const
- `QString name` () const
- `QString toolTip` () const
- `QString whatsThis` () const
- `QWidget * createWidget` (QWidget *parent)
- `void initialize` (QDesignerFormEditorInterface *core)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEButton/QECheckBoxManager.h
- /tmp/epicsqt/trunk/framework/widgets/QEButton/QECheckBoxManager.cpp

9.64 QComboBox Class Reference

Inheritance diagram for QComboBox:

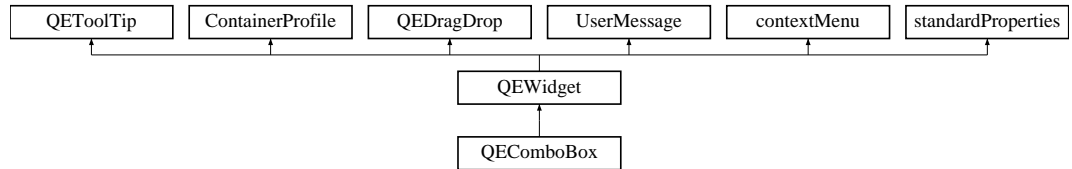

Public Types

- enum [UserLevels](#) { [User](#) = userLevelTypes::USERLEVEL_USER, [Scientist](#) = userLevelTypes::USERLEVEL_SCIENTIST, [Engineer](#) = userLevelTypes::USERLEVEL_ENGINEER }

Signals

- void [dbValueChanged](#) (const qlonglong &out)
- void [userChange](#) (const QString &oldValue, const QString &newValue, const QString &lastValue)

Internal use only. Used by [QEConfiguredLayout](#) to be notified when one of its widgets has written something.

Public Member Functions

- **QComboBox** (QWidget *parent=0)
- **QComboBox** (const QString &variableName, QWidget *parent=0)
- void **setWriteOnChange** (bool writeOnChangeIn)
- bool **getWriteOnChange** ()
- void **setSubscribe** (bool subscribe)
- bool **getSubscribe** ()
- void **setUseDbEnumerations** (bool [useDbEnumerations](#))
- bool **getUseDbEnumerations** ()
- void **setLocalEnumerations** (const QString &localEnumerations)
- QString **getLocalEnumerations** ()
- [UserLevels](#) **getUserLevelVisibilityProperty** ()
Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.
- void **setUserLevelVisibilityProperty** ([UserLevels](#) level)
Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.
- [UserLevels](#) **getUserLevelEnabledProperty** ()
Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.

- void **setUserLevelEnabledProperty** (UserLevels level)

Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.

Protected Member Functions

- void **establishConnection** (unsigned int variableIndex)
- void **dragEnterEvent** (QDragEnterEvent *event)
- void **dropEvent** (QDropEvent *event)
- void **setDrop** (QVariant drop)
- QVariant **getDrop** ()
- QString **copyVariable** ()
- QVariant **copyData** ()
- void **paste** (QVariant s)

Protected Attributes

- [QEIntegerFormatting](#) **integerFormatting**
- [QELocalEnumeration](#) **localEnumerations**
- bool [useDbEnumerations](#)
- bool [writeOnChange](#)

Properties

- QString [variable](#)
- QString [variableSubstitutions](#)
- bool [subscribe](#)
- bool [variableAsToolTip](#)
- bool [allowDrop](#)
- bool [visible](#)
- unsigned [int](#)
- QString [userLevelUserStyle](#)
- QString [userLevelScientistStyle](#)
- QString [userLevelEngineerStyle](#)
- [UserLevels](#) [userLevelVisibility](#)
- [UserLevels](#) [userLevelEnabled](#)
- bool [displayAlarmState](#)
- QString [localEnumeration](#)

9.64.1 Member Enumeration Documentation

9.64.1.1 enum QComboBox::UserLevels

User friendly enumerations for [userLevelVisibility](#) and [userLevelEnabled](#) properties - refer to [userLevelVisibility](#) and [userLevelEnabled](#) properties and `userLevel` enumeration for details.

Enumerator:

User Refer to `USERLEVEL_USER` for details.

Scientist Refer to `USERLEVEL_SCIENTIST` for details.

Engineer Refer to `USERLEVEL_ENGINEER` for details.

9.64.2 Member Function Documentation

9.64.2.1 void QComboBox::dbValueChanged (const qulonglong & out) [signal]

Sent when the widget is updated following a data change Can be used to pass on EPICS data (as presented in this widget) to other widgets. For example a QList widget could log updates from this widget.

9.64.3 Member Data Documentation

9.64.3.1 bool QComboBox::useDbEnumerations [read, write, protected]

Use database enumerations - defaults to true

9.64.3.2 bool QComboBox::writeOnChange [read, write, protected]

Sets if this widget writes any changes as the user selects values (the QComboBox 'activated' signal is emitted). Default is 'true' (writes any changes when the QComboBox 'activated' signal is emitted).

9.64.4 Property Documentation

9.64.4.1 bool QComboBox::allowDrop [read, write]

Allow drag/drops operations to this widget. Default is false. Any dropped text will be used as a new variable name.

Reimplemented from [QEDragDrop](#).

9.64.4.2 `bool QComboBox::displayAlarmState` [read, write]

If set (default) widget will indicate the alarm state of any variable data is displaying. Typically the background colour is set to indicate the alarm state. Note, this property is included in the set of standard properties as it applies to most widgets. It will do nothing for widgets that don't display data.

Reimplemented from [standardProperties](#).

9.64.4.3 `unsigned QComboBox::int` [read, write]

Set the ID used by the message filtering system. Default is zero. Widgets or applications that use messages from the framework have the option of filtering on this ID. For example, by using a unique message source ID a [QELog](#) widget may be set up to only log messages from a select set of widgets.

9.64.4.4 `QString QComboBox::localEnumeration` [read, write]

Enumerations values used when useDbEnumerations is false.

9.64.4.5 `bool QComboBox::subscribe` [read, write]

Sets if this widget subscribes for data updates and displays current data. Default is 'true' (subscribes for and displays data updates)

Reimplemented from [QEWidget](#).

9.64.4.6 `UserLevels QComboBox::userLevelEnabled` [read, write]

Lowest user level at which the widget is enabled. Default is 'User'. Used when designing GUIs that allow access to more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through `setUserLevel()` Widgets that are always accessible should be visible at 'User'. Widgets that are only accessible to scientists managing the facility should be visible at 'Scientist'. Widgets that are only accessible to engineers maintaining the facility should be visible at 'Engineer'.

9.64.4.7 `QString QComboBox::userLevelEngineerStyle` [read, write]

Style Sheet string to be applied when the widget is displayed in 'Engineer' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the `styleManager` class. Refer to the `styleManager` class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.64.4.8 QString QComboBox::userLevelScientistStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'Scientist' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.64.4.9 QString QComboBox::userLevelUserStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'User' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.64.4.10 UserLevels QComboBox::userLevelVisibility [read, write]

Lowest user level at which the widget is visible. Default is 'User'. Used when designing GUIs that display more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through setUserLevel() Widgets that are always visible should be visible at 'User'. Widgets that are only used by scientists managing the facility should be visible at 'Scientist'. Widgets that are only used by engineers maintaining the facility should be visible at 'Engineer'.

9.64.4.11 QString QComboBox::variable [read, write]

EPICS variable name (CA PV)

9.64.4.12 bool QComboBox::variableAsToolTip [read, write]

Use the variable as the tool tip. Default is true. Tool tip property will be overwritten by the variable name.

Reimplemented from [QEToolTip](#).

9.64.4.13 QString QComboBox::variableSubstitutions [read, write]

Macro substitutions. The default is no substitutions. The format is NAME1=VALUE1[, NAME2=VALUE2... Values may be quoted strings. For example, 'PUMP=PMP3, NAME = "My Pump"' These substitutions are applied to variable names for all QE widgets. In some widgets are also used for other purposes.

9.64.4.14 bool QEComboBox::visible [read, write]


Display the widget. Default is true. Setting this property false is usefull if widget is only used to provide a signal - for example, when supplying data to a [QELink](#) widget. Note, when false the widget will still be visible in Qt Designer.

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEComboBox/QEComboBox.h
- /tmp/epicsqt/trunk/framework/widgets/QEComboBox/QEComboBox.cpp

9.65 QEConfiguredLayout Class Reference

Inheritance diagram for QEConfiguredLayout:

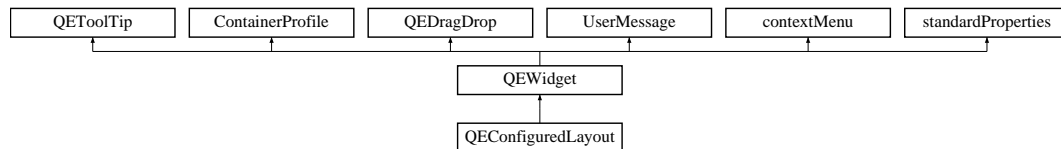

Public Types

- enum **configurationTypesProperty** { **File** = FROM_FILE, **Text** = FROM_TEXT }
- enum **detailsLayoutProperty** { **Top** = TOP, **Bottom** = BOTTOM, **Left** = LEFT, **Right** = RIGHT }
- enum **userTypesProperty** { **User** = userLevelTypes::USERLEVEL_USER, **Scientist** = userLevelTypes::USERLEVEL_SCIENTIST, **Engineer** = userLevelTypes::USERLEVEL_ENGINEER }

Public Member Functions

- **QEConfiguredLayout** (QWidget *pParent=0, bool pSubscription=true)
- void **setItemDescription** (QString pValue)
- QString **getItemDescription** ()
- void **setShowItemList** (bool pValue)
- bool **getShowItemList** ()
- void **setConfigurationType** (int pValue)
- int **getConfigurationType** ()
- void **setConfigurationFile** (QString pValue)
- QString **getConfigurationFile** ()
- void **setConfigurationText** (QString pValue)
- QString **getConfigurationText** ()
- void **setDetailsLayout** (int pValue)
- int **getDetailsLayout** ()

- void **setCurrentUserType** (int pValue)
- int **getCurrentUserType** ()
- void **refreshFields** ()
- void **userLevelChanged** (userLevelTypes::userLevels pValue)
- void **setConfigurationTypeProperty** (configurationTypesProperty pConfigurationType)
- configurationTypesProperty **getConfigurationTypeProperty** ()
- void **setDetailsLayoutProperty** (detailsLayoutProperty pDetailsLayout)
- detailsLayoutProperty **getDetailsLayoutProperty** ()
- void **setCurrentUserTypeProperty** (userTypesProperty pUserType)
- userTypesProperty **getCurrentUserTypeProperty** ()

Public Attributes

- QList< [_Item](#) * > **itemList**
- QList< [_Field](#) * > **currentFieldList**

Protected Attributes

- QLabel * **qLabelItemDescription**
- QComboBox * **qComboBoxItemList**
- QVBoxLayout * **qVBoxLayoutFields**
- QScrollArea * **qScrollArea**
- QString **configurationFile**
- QString **configurationText**
- int **configurationType**
- int **detailsLayout**
- int **currentUserType**
- bool **subscription**

Properties

- QString **itemDescription**
- bool **showItemList**
- configurationTypesProperty **configurationType**
- detailsLayoutProperty **detailsLayout**
- userTypesProperty **currentUserType**

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEConfiguredLayout/QEConfiguredLayout.h
- /tmp/epicsqt/trunk/framework/widgets/QEConfiguredLayout/QEConfiguredLayout.cpp

9.66 QEConfiguredLayoutManager Class Reference

Public Member Functions


- **QEConfiguredLayoutManager** (QObject *pParent=0)
- bool **isContainer** () const
- bool **isInitialized** () const
- QIcon **icon** () const
- QString **group** () const
- QString **includeFile** () const
- QString **name** () const
- QString **toolTip** () const
- QString **whatsThis** () const
- QWidget * **createWidget** (QWidget *pParent)
- void **initialize** (QDesignerFormEditorInterface *pCore)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEConfiguredLayout/QEConfiguredLayoutManager.h
- /tmp/epicsqt/trunk/framework/widgets/QEConfiguredLayout/QEConfiguredLayoutManager.cpp

9.67 QEDragDrop Class Reference

Inheritance diagram for QEDragDrop:

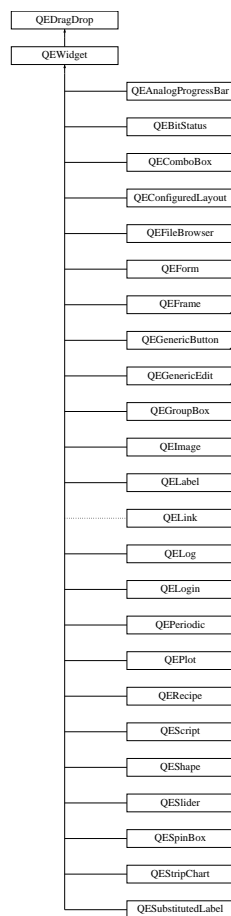

Public Member Functions

- **QEDragDrop** (QWidget *ownerIn)
- bool **getAllowDrop** ()

Protected Member Functions


- void **qcaDragEnterEvent** (QDragEnterEvent *event)
- void **qcaDropEvent** (QDropEvent *event)
- void **qcaMousePressEvent** (QMouseEvent *event)
- virtual void **setDrop** (QVariant)
- virtual QVariant **getDrop** ()
- void **setAllowDrop** (bool allowDropIn)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/include/QEDragDrop.h
- /tmp/epicsqt/trunk/framework/widgets/src/QEDragDrop.cpp

9.68 QFileDialog Class Reference

Inheritance diagram for QFileDialog:

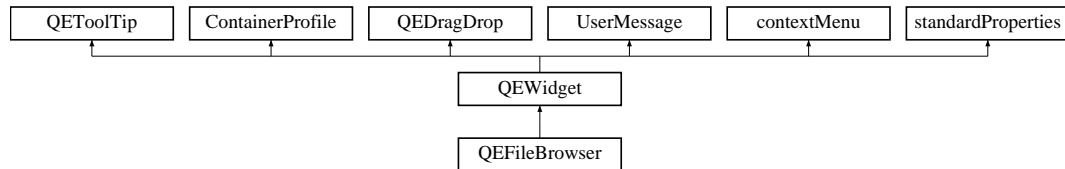

Public Types

- enum **detailsLayoutProperty** { **Top** = TOP, **Bottom** = BOTTOM, **Left** = LEFT, **Right** = RIGHT }

Signals

- void **selected** (QString pFilename)

Public Member Functions

- **QFileDialog** (QWidget *pParent=0)
- void **setDirectoryPath** (QString pValue)
- QString **getDirectoryPath** ()
- void **setShowDirectoryPath** (bool pValue)
- bool **getShowDirectoryPath** ()
- void **setShowDirectoryBrowser** (bool pValue)
- bool **getShowDirectoryBrowser** ()
- void **setShowRefresh** (bool pValue)
- bool **getShowRefresh** ()
- void **setShowColumnTime** (bool pValue)
- bool **getShowColumnTime** ()
- void **setShowColumnSize** (bool pValue)
- bool **getShowColumnSize** ()
- void **setShowColumnFilename** (bool pValue)
- bool **getShowColumnFilename** ()
- void **setShowFileExtension** (bool pValue)
- bool **getShowFileExtension** ()
- void **setFileFilter** (QString pValue)
- QString **getFileFilter** ()
- void **setDetailsLayout** (int pValue)
- int **getDetailsLayout** ()
- void **updateTable** ()
- void **setDetailsLayoutProperty** (detailsLayoutProperty pDetailsLayout)
- detailsLayoutProperty **getDetailsLayoutProperty** ()

Protected Attributes

- QLineEdit * **qlineEditDirectoryPath**
- QPushButton * **qPushButtonDirectoryBrowser**
- QPushButton * **qPushButtonRefresh**
- [_QTableWidgetFileBrowser](#) * **qTableWidgetFileBrowser**
- QString **fileFilter**
- bool **showFileExtension**
- int **detailsLayout**

Properties


- QString **directoryPath**
- bool **showDirectoryPath**
- bool **showDirectoryBrowser**
- bool **showRefresh**
- bool **showColumnTime**
- bool **showColumnSize**
- bool **showColumnFilename**
- detailsLayoutProperty **detailsLayout**

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEFileBrowser/QEFileBrowser.h
- /tmp/epicsqt/trunk/framework/widgets/QEFileBrowser/QEFileBrowser.cpp

9.69 QEFloating Class Reference

Inheritance diagram for QEFloating:

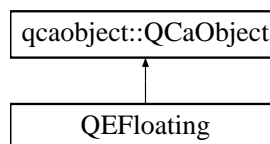

Public Slots

- void **writeFloating** (const double &data)

Signals

- void **floatingConnectionChanged** ([QCaConnectionInfo](#) &connectionInfo, const unsigned int &variableIndex)
- void **floatingChanged** (const double &value, [QCaAlarmInfo](#) &alarmInfo, [QCaDateTime](#) &timeStamp, const unsigned int &variableIndex)
- void **floatingArrayChanged** (const QVector< double > &values, [QCaAlarmInfo](#) &alarmInfo, [QCaDateTime](#) &timeStamp, const unsigned int &variableIndex)

Public Member Functions

- **QEFloating** (QString recordName, QObject *eventObject, [QEFloatingFormatting](#) *floatingFormattingIn, unsigned int variableIndexIn)
- **QEFloating** (QString recordName, QObject *eventObject, [QEFloatingFormatting](#) *floatingFormattingIn, unsigned int variableIndexIn, [UserMessage](#) *userMessageIn)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/data/include/QEFloating.h
- /tmp/epicsqt/trunk/framework/data/src/QEFloating.cpp

9.70 QEFloatingArray Class Reference

```
#include <QEFloatingArray.h>
```

Public Member Functions

- **QEFloatingArray** (int size)
- **QEFloatingArray** (int size, const double &t)
- **QEFloatingArray** (const QVector< double > &other)
- double **minimumValue** (const double &defaultValue=0.0)
- double **maximumValue** (const double &defaultValue=0.0)
- [QEFloatingArray](#) **calcDyByDx** (const QVector< double > &x)

9.70.1 Detailed Description

This class provides short hand for QVector<double> together with some basic double vector operations.

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/data/include/QEFloatingArray.h
- /tmp/epicsqt/trunk/framework/data/src/QEFloatingArray.cpp

9.71 QEFloatingFormatting Class Reference

Public Types

- enum **formats** {
FORMAT_e = 'e', **FORMAT_E** = 'E', **FORMAT_f** = 'f', **FORMAT_g** = 'g',
FORMAT_G = 'G' }

Public Member Functions


- double **formatFloating** (const QVariant &value)
- QVector< double > **formatFloatingArray** (const QVariant &value)
- QVariant **formatValue** (const double &floatingValue, generic::generic_types valueType)
- void **setPrecision** (unsigned int precision)
- void **setFormat** (formats format)
- unsigned int **getPrecision** ()
- int **getFormat** ()

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/data/include/QEFloatingFormatting.h
- /tmp/epicsqt/trunk/framework/data/src/QEFloatingFormatting.cpp

9.72 QEForm Class Reference

Inheritance diagram for QEForm:

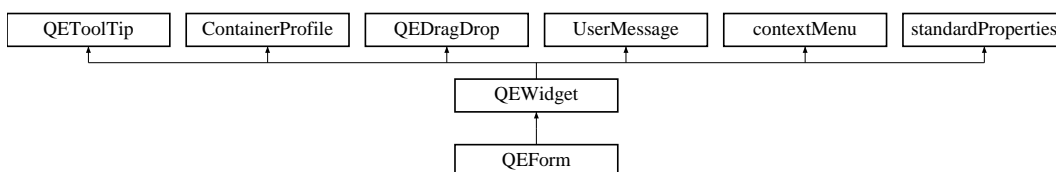

Public Types

- enum **creationOptions** { **CREATION_OPTION_OPEN** = QEGuiLaunchRequests::OptionOpen, **CREATION_OPTION_NEW_TAB** = QEGuiLaunchRequests::OptionNewTab, **CREATION_OPTION_NEW_WINDOW** = QEGuiLaunchRequests::OptionNewWindow }
- enum **MessageFilterOptions** { **Match** = UserMessage::MESSAGE_FILTER_MATCH, **None** = UserMessage::MESSAGE_FILTER_NONE }

Public Slots

- bool **readUiFile** ()
- void **launchGui** (QString guiName, QEForm::creationOptions createOption)
- void **requestGui** (const QEGuiLaunchRequests &request)

Public Member Functions

- **QEForm** (QWidget *parent=0)
- **QEForm** (const QString &uiFileNameIn, QWidget *parent=0)
- void **commonInit** (const bool alertIfUINotFoundIn)
- QString **getQEGuiTitle** ()
- QString **getFullFileName** ()
- QString **getUiFileName** ()
- void **setHandleGuiLaunchRequests** (bool handleGuiLaunchRequests)
- bool **getHandleGuiLaunchRequests** ()
- void **setResizeContents** (bool resizeContentsIn)
- bool **getResizeContents** ()
- QString **getContainedFrameworkVersion** ()
- QString **getUniqueIdentifier** ()
- void **setUniqueIdentifier** (QString name)
- void **setUiFileNameProperty** (QString uiFileName)
- QString **getUiFileNameProperty** ()
- void **setVariableNameSubstitutionsProperty** (QString variableNameSubstitutions)
- QString **getVariableNameSubstitutionsProperty** ()
- MessageFilterOptions **getMessageFormFilter** ()
- void **setMessageFormFilter** (MessageFilterOptions messageFormFilter)
- MessageFilterOptions **getMessageSourceFilter** ()
- void **setMessageSourceFilter** (MessageFilterOptions messageSourceFilter)

Protected Attributes

- QString **uiFileName**
- QString **fullUiFileName**
- bool **handleGuiLaunchRequests**
- bool **resizeContents**

Properties


- QString **uiFile**
- QString **variableSubstitutions**
- unsigned int
- MessageFilterOptions **messageFormFilter**
- MessageFilterOptions **messageSourceFilter**

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEForm/QEForm.h
- /tmp/epicsqt/trunk/framework/widgets/QEForm/QEForm.cpp

9.73 QEFrame Class Reference

Inheritance diagram for QEFrame:

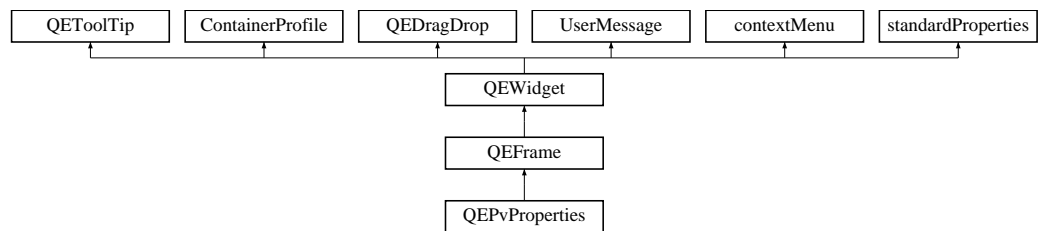

Public Types

- enum **UserLevels** { **User** = userLevelTypes::USERLEVEL_USER, **Scientist** = userLevelTypes::USERLEVEL_SCIENTIST, **Engineer** = userLevelTypes::USERLEVEL_ENGINEER }

Public Member Functions

- **UserLevels** **getUserLevelVisibilityProperty** ()
Access function for *userLevelVisibility* property - refer to *userLevelVisibility* property for details.
- void **setUserLevelVisibilityProperty** (**UserLevels** level)
Access function for *userLevelVisibility* property - refer to *userLevelVisibility* property for details.
- **UserLevels** **getUserLevelEnabledProperty** ()
Access function for *userLevelEnabled* property - refer to *userLevelEnabled* property for details.
- void **setUserLevelEnabledProperty** (**UserLevels** level)
Access function for *userLevelEnabled* property - refer to *userLevelEnabled* property for details.
- **QEFrame** (QWidget *parent=0)
- QSize **sizeHint** () const

Properties

- bool **variableAsToolTip**
- bool **allowDrop**

- bool [visible](#)
- unsigned [int](#)
- QString [userLevelUserStyle](#)
- QString [userLevelScientistStyle](#)
- QString [userLevelEngineerStyle](#)
- [UserLevels](#) [userLevelVisibility](#)
- [UserLevels](#) [userLevelEnabled](#)
- bool [displayAlarmState](#)

9.73.1 Member Enumeration Documentation

9.73.1.1 enum QEFrame::UserLevels

User friendly enumerations for [userLevelVisibility](#) and [userLevelEnabled](#) properties - refer to [userLevelVisibility](#) and [userLevelEnabled](#) properties and [userLevel](#) enumeration for details.

Enumerator:

User Refer to `USERLEVEL_USER` for details.

Scientist Refer to `USERLEVEL_SCIENTIST` for details.

Engineer Refer to `USERLEVEL_ENGINEER` for details.

9.73.2 Property Documentation

9.73.2.1 bool QEFrame::allowDrop [read, write]

Allow drag/drops operations to this widget. Default is false. Any dropped text will be used as a new variable name.

Reimplemented from [QEDragDrop](#).

9.73.2.2 bool QEFrame::displayAlarmState [read, write]

If set (default) widget will indicate the alarm state of any variable data is displaying. Typically the background colour is set to indicate the alarm state. Note, this property is included in the set of standard properties as it applies to most widgets. It will do nothing for widgets that don't display data.

Reimplemented from [standardProperties](#).

9.73.2.3 unsigned QEFrame::int [read, write]

Set the ID used by the message filtering system. Default is zero. Widgets or applications that use messages from the framework have the option of filtering on this ID. For example, by using a unique message source ID a [QELog](#) widget may be set up to only log messages from a select set of widgets.

9.73.2.4 UserLevels QFrame::userLevelEnabled [read, write]

Lowest user level at which the widget is enabled. Default is 'User'. Used when designing GUIs that allow access to more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through `setUserLevel()` Widgets that are always accessible should be visible at 'User'. Widgets that are only accessible to scientists managing the facility should be visible at 'Scientist'. Widgets that are only accessible to engineers maintaining the facility should be visible at 'Engineer'.

9.73.2.5 QString QFrame::userLevelEngineerStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'Engineer' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.73.2.6 QString QFrame::userLevelScientistStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'Scientist' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.73.2.7 QString QFrame::userLevelUserStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'User' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.73.2.8 UserLevels QFrame::userLevelVisibility [read, write]

Lowest user level at which the widget is visible. Default is 'User'. Used when designing GUIs that display more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through `setUserLevel()` Widgets that are always visible should be visible at 'User'. Widgets that are only used by scientists managing the facility should be visible at 'Scientist'. Widgets that are only used by engineers maintaining the facility should be visible at 'Engineer'.

Use the variable as the tool tip. Default is true. Tool tip property will be overwritten by the variable name.

Display the widget. Default is true. Setting this property false is usefull if widget is only used to provide a signal - for example, when supplying data to a [QELink](#) widget. Note, when false the widget will still be visible in Qt Designer.

- /tmp/epicsqt/trunk/framework/widgets/QEFrame/QEFrame.h
- /tmp/epicsqt/trunk/framework/widgets/QEFrame/QEFrame.cpp

```

graph TD
    QEToolTip[QEToolTip]
    ContainerProfile[ContainerProfile]
    QEDragDrop[QEDragDrop]
    UserMessage[UserMessage]
    contextMenu[contextMenu]
    standardProperties[standardProperties]
    QEDragDrop --> QEToolTip
    QEDragDrop --> ContainerProfile
    QEDragDrop --> UserMessage
    QEDragDrop --> contextMenu
    QEDragDrop --> standardProperties
    QEDragDrop --> QEWidget[QEWidget]
    QEDragDrop --> managePixmaps[managePixmaps]
    QEDragDrop --> QEStrFormattingMethods[QStringFormattingMethods]
    QEWidget --> QEGenericButton[QEGenericButton]
    managePixmaps --> QEGenericButton
    QEStrFormattingMethods --> QEGenericButton
    QEGenericButton --> QECheckBox[QECheckBox]
    QEGenericButton --> QEPushButton[QEPushButton]
    QEGenericButton --> QERadioButton[QERadioButton]

```

- `enum updateOptions { UPDATE_TEXT, UPDATE_ICON, UPDATE_TEXT_AND_ICON, UPDATE_STATE }`

- **QEGenericButton** (QWidget *owner)
- void **setSubscribe** (bool subscribe)
- bool **getSubscribe** ()
- void **setUpdateOption** (updateOptions updateOptionIn)
- updateOptions **getUpdateOption** ()
- void **setTextAlignment** (Qt::Alignment alignment)
- Qt::Alignment **getTextAlignment** ()
- void **setPassword** (QString password)
- QString **getPassword** ()
- void **setConfirmAction** (bool confirmRequiredIn)

- bool **getConfirmAction** ()
- void **setWriteOnPress** (bool writeOnPress)
- bool **getWriteOnPress** ()
- void **setWriteOnRelease** (bool writeOnRelease)
- bool **getWriteOnRelease** ()
- void **setWriteOnClick** (bool writeOnClick)
- bool **getWriteOnClick** ()
- void **setPressText** (QString pressText)
- QString **getPressText** ()
- void **setReleaseText** (QString releaseTextIn)
- QString **getReleaseText** ()
- void **setClickText** (QString clickTextIn)
- QString **getClickText** ()
- void **setClickCheckedText** (QString clickCheckedTextIn)
- QString **getClickCheckedText** ()
- void **setProgram** (QString program)
- QString **getProgram** ()
- void **setArguments** (QStringList arguments)
- QStringList **getArguments** ()
- void **setGuiName** (QString guiName)
- QString **getGuiName** ()
- void **setPrioritySubstitutions** (QString prioritySubstitutionsIn)
- QString **getPrioritySubstitutions** ()
- void **setCreationOption** (QForm::creationOptions creationOption)
- QForm::creationOptions **getCreationOption** ()
- void **setLabelTextProperty** (QString labelTextIn)
- QString **getLabelTextProperty** ()

Protected Member Functions


- void **connectionChanged** ([QCaConnectionInfo](#) &connectionInfo)
- void **setGenericButtonText** (const QString &text, [QCaAlarmInfo](#) &alarmInfo, [QCaDateTime](#) &, const unsigned int &variableIndex)
- void **userPressed** ()
- void **userReleased** ()
- void **userClicked** (bool checked)
- void **launchGui** (QString guiName, QForm::creationOptions creationOption)
- virtual updateOptions **getDefaultUpdateOption** ()=0
- void **setup** ()
- void **establishConnection** (unsigned int variableIndex)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEButton/QEGenericButton.h
- /tmp/epicsqt/trunk/framework/widgets/QEButton/QEGenericButton.cpp

9.75 QEGenericEdit Class Reference

Inheritance diagram for QEGenericEdit:

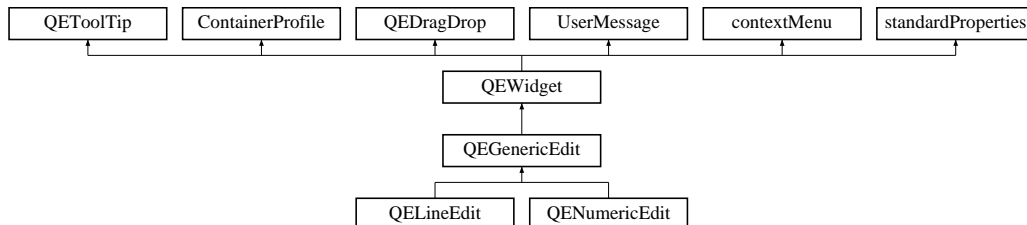

Public Types

- enum [UserLevels](#) { [User](#) = userLevelTypes::USERLEVEL_USER, [Scientist](#) = userLevelTypes::USERLEVEL_SCIENTIST, [Engineer](#) = userLevelTypes::USERLEVEL_ENGINEER }

Signals

- void [userChange](#) (const QVariant &oldValue, const QVariant &newValue, const QVariant &lastValue)
Internal use only. Used by [QEConfiguredLayout](#) to be notified when one of its widgets has written something.
- void [requestResend](#) ()
Internal use only. Used when changing a property value to force a re-display to reflect the new property value.

Public Member Functions

- [UserLevels](#) [getUserLevelVisibilityProperty](#) ()
Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.
- void [setUserLevelVisibilityProperty](#) ([UserLevels](#) level)
Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.
- [UserLevels](#) [getUserLevelEnabledProperty](#) ()
Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.
- void [setUserLevelEnabledProperty](#) ([UserLevels](#) level)
Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.
- [QEGenericEdit](#) (QWidget *parent=0)
- [QEGenericEdit](#) (const QString &variableName, QWidget *parent=0)
- void [setWriteOnLoseFocus](#) (bool writeOnLoseFocus)

- bool [getWriteOnLoseFocus](#) ()
- void [setWriteOnEnter](#) (bool writeOnEnter)
- bool [getWriteOnEnter](#) ()
- void [setWriteOnFinish](#) (bool writeOnFinish)
- bool [getWriteOnFinish](#) ()
- void [setConfirmWrite](#) (bool confirmWrite)
- bool [getConfirmWrite](#) ()
- void [setSubscribe](#) (bool subscribe)
- bool [getSubscribe](#) ()
- void **writeValue** ([qcaobject::QCaObject](#) *qca, QVariant newValue)

Protected Member Functions

- void **setDataIfNoFocus** (const QVariant &value, [QCaAlarmInfo](#) &alarmInfo, [QCaDateTime](#) &dateTime)
- bool **getIsConnected** ()
- bool **testAndClearIsFirstUpdate** ()
- virtual void **setValue** (const QVariant &value)=0
- virtual QVariant **getValue** ()=0
- virtual bool **writeData** (const QVariant &value, QString &message)=0
- void [writeNow](#) ()

Write the value now.

Protected Attributes

- QVariant **lastValue**
- QVariant **lastUserValue**
- bool **messageDialogPresent**
- bool **writeFailMessageDialogPresent**
- bool **isConnected**

Properties

- QString [variable](#)
- QString [variableSubstitutions](#)
- bool [subscribe](#)
- bool [writeOnLoseFocus](#)
- bool [writeOnEnter](#)
- bool [writeOnFinish](#)
- bool [confirmWrite](#)
- bool [variableAsToolTip](#)
- bool [allowDrop](#)
- bool [visible](#)
- unsigned [int](#)
- QString [userLevelUserStyle](#)

- QString [userLevelScientistStyle](#)
- QString [userLevelEngineerStyle](#)
- [UserLevels](#) [userLevelVisibility](#)
- [UserLevels](#) [userLevelEnabled](#)
- bool [displayAlarmState](#)

9.75.1 Member Enumeration Documentation

9.75.1.1 enum QEGenericEdit::UserLevels

User friendly enumerations for [userLevelVisibility](#) and [userLevelEnabled](#) properties - refer to [userLevelVisibility](#) and [userLevelEnabled](#) properties and [userLevel](#) enumeration for details.

Enumerator:

User Refer to `USERLEVEL_USER` for details.

Scientist Refer to `USERLEVEL_SCIENTIST` for details.

Engineer Refer to `USERLEVEL_ENGINEER` for details.

9.75.2 Constructor & Destructor Documentation

9.75.2.1 QEGenericEdit::QEGenericEdit (QWidget * *parent* = 0)

Create without a variable. Use `setVariableNameProperty()` and `setSubstitutionsProperty()` to define a variable and, optionally, macro substitutions later.

9.75.2.2 QEGenericEdit::QEGenericEdit (const QString & *variableName*, QWidget * *parent* = 0)

Create with a variable. A connection is automatically established. If macro substitutions are required, create without a variable and set the variable and macro substitutions after creation.

9.75.3 Member Function Documentation

9.75.3.1 bool QEGenericEdit::getConfirmWrite ()

Returns 'true' if this widget will ask for confirmation (using a dialog box) prior to writing data.

9.75.3.2 bool QEGenericEdit::getSubscribe ()

Returns 'true' if this widget subscribes for data updates and displays current data.

9.75.3.3 `bool QEGenericEdit::getWriteOnEnter ()`

Returns 'true' if this widget writes any changes when the user presses 'enter'.

9.75.3.4 `bool QEGenericEdit::getWriteOnFinish ()`

Returns 'true' if this widget writes any changes when the user finished editing (the QLineEdit 'editingFinished' signal is emitted).

9.75.3.5 `bool QEGenericEdit::getWriteOnLoseFocus ()`

Returns 'true' if this widget automatically writes any changes when it loses focus.

9.75.3.6 `void QEGenericEdit::setConfirmWrite (bool confirmWrite)`

Sets if this widget will ask for confirmation (using a dialog box) prior to writing data. Default is 'false' (will not ask for confirmation (using a dialog box) prior to writing data).

9.75.3.7 `void QEGenericEdit::setSubscribe (bool subscribe)`

Sets if this widget subscribes for data updates and displays current data. Default is 'true' (subscribes for and displays data updates)

9.75.3.8 `void QEGenericEdit::setWriteOnEnter (bool writeOnEnter)`

Sets if this widget writes any changes when the user presses 'enter'. Note, the current value will be written even if the user has not changed it. Default is 'true' (writes any changes when the user presses 'enter').

9.75.3.9 `void QEGenericEdit::setWriteOnFinish (bool writeOnFinish)`

Sets if this widget writes any changes when the user finished editing (the QLineEdit 'editingFinished' signal is emitted). No writing occurs if no changes were made. Default is 'true' (writes any changes when the QLineEdit 'editingFinished' signal is emitted).

9.75.3.10 `void QEGenericEdit::setWriteOnLoseFocus (bool writeOnLoseFocus)`

Sets if this widget automatically writes any changes when it loses focus. Default is 'false' (does not write any changes when it loses focus).

9.75.4 Property Documentation

9.75.4.1 bool QEGenericEdit::allowDrop [read, write]

Allow drag/drops operations to this widget. Default is false. Any dropped text will be used as a new variable name.

Reimplemented from [QEDragDrop](#).

9.75.4.2 bool QEGenericEdit::confirmWrite [read, write]

Sets if this widget will ask for confirmation (using a dialog box) prior to writing data. Default is 'false' (will not ask for confirmation (using a dialog box) prior to writing data).

9.75.4.3 bool QEGenericEdit::displayAlarmState [read, write]

If set (default) widget will indicate the alarm state of any variable data is displaying. Typically the background colour is set to indicate the alarm state. Note, this property is included in the set of standard properties as it applies to most widgets. It will do nothing for widgets that don't display data.

Reimplemented from [standardProperties](#).

9.75.4.4 unsigned QEGenericEdit::int [read, write]

Set the ID used by the message filtering system. Default is zero. Widgets or applications that use messages from the framework have the option of filtering on this ID. For example, by using a unique message source ID a [QELog](#) widget may be set up to only log messages from a select set of widgets.

Reimplemented in [QELineEdit](#).

9.75.4.5 bool QEGenericEdit::subscribe [read, write]

Sets if this widget subscribes for data updates and displays current data. Default is 'true' (subscribes for and displays data updates)

Reimplemented from [QEWidget](#).

9.75.4.6 UserLevels QEGenericEdit::userLevelEnabled [read, write]

Lowest user level at which the widget is enabled. Default is 'User'. Used when designing GUIs that allow access to more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through `setUserLevel()` Widgets that are always accessible should be visible at 'User'. Widgets that are only accessible to scientists managing the facility should be visible at 'Scientist'. Widgets that are only accessible to engineers maintaining the facility should be visible at 'Engineer'.

9.75.4.7 QString QEGenericEdit::userLevelEngineerStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'Engineer' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.75.4.8 QString QEGenericEdit::userLevelScientistStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'Scientist' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.75.4.9 QString QEGenericEdit::userLevelUserStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'User' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.75.4.10 UserLevels QEGenericEdit::userLevelVisibility [read, write]

Lowest user level at which the widget is visible. Default is 'User'. Used when designing GUIs that display more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through setUserLevel() Widgets that are always visible should be visible at 'User'. Widgets that are only used by scientists managing the facility should be visible at 'Scientist'. Widgets that are only used by engineers maintaining the facility should be visible at 'Engineer'.

9.75.4.11 QString QEGenericEdit::variable [read, write]

EPICS variable name (CA PV)

9.75.4.12 bool QEGenericEdit::variableAsToolTip [read, write]

Use the variable as the tool tip. Default is true. Tool tip property will be overwritten by the variable name.

Reimplemented from [QEToolTip](#).

9.75.4.13 QString QEGenericEdit::variableSubstitutions [read, write]

Macro substitutions. The default is no substitutions. The format is NAME1=VALUE1[,] NAME2=VALUE2... Values may be quoted strings. For example, 'PUMP=PMP3, NAME = "My Pump"' These substitutions are applied to variable names for all QE widgets. In some widgets are also used for other purposes.

9.75.4.14 bool QEGenericEdit::visible [read, write]

Display the widget. Default is true. Setting this property false is usefull if widget is only used to provide a signal - for example, when supplying data to a [QELink](#) widget. Note, when false the widget will still be visible in Qt Designer.

9.75.4.15 bool QEGenericEdit::writeOnEnter [read, write]

Sets if this widget writes any changes when the user presses 'enter'. Note, the current value will be written even if the user has not changed it. Default is 'true' (writes any changes when the user presses 'enter').

9.75.4.16 bool QEGenericEdit::writeOnFinish [read, write]

Sets if this widget writes any changes when the user finished editing (the QLineEdit 'editingFinished' signal is emitted). No writing occurs if no changes were made. Default is 'true' (writes any changes when the QLineEdit 'editingFinished' signal is emitted).

9.75.4.17 bool QEGenericEdit::writeOnLoseFocus [read, write]


Sets if this widget automatically writes any changes when it loses focus. Default is 'false' (does not write any changes when it loses focus).

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QELineEdit/QEGenericEdit.h
- /tmp/epicsqt/trunk/framework/widgets/QELineEdit/QEGenericEdit.cpp

9.76 QEGroupBox Class Reference

Inheritance diagram for QEGroupBox:

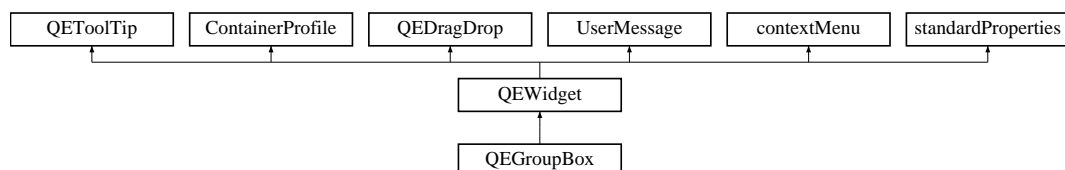

Public Types

- enum [UserLevels](#) { [User](#) = userLevelTypes::USERLEVEL_USER, [Scientist](#) = userLevelTypes::USERLEVEL_SCIENTIST, [Engineer](#) = userLevelTypes::USERLEVEL_ENGINEER }

Public Member Functions

- [UserLevels](#) [getUserLevelVisibilityProperty](#) ()
Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.
- void [setUserLevelVisibilityProperty](#) ([UserLevels](#) level)
Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.
- [UserLevels](#) [getUserLevelEnabledProperty](#) ()
Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.
- void [setUserLevelEnabledProperty](#) ([UserLevels](#) level)
Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.
- [QGroupBox](#) ([QWidget](#) *parent=0)
- [QGroupBox](#) (const [QString](#) &title, [QWidget](#) *parent=0)
- [QSize](#) [sizeHint](#) () const

Properties

- bool [variableAsToolTip](#)
- bool [allowDrop](#)
- bool [visible](#)
- unsigned [int](#)
- [QString](#) [userLevelUserStyle](#)
- [QString](#) [userLevelScientistStyle](#)
- [QString](#) [userLevelEngineerStyle](#)
- [UserLevels](#) [userLevelVisibility](#)
- [UserLevels](#) [userLevelEnabled](#)
- bool [displayAlarmState](#)

9.76.1 Member Enumeration Documentation

9.76.1.1 enum [QGroupBox::UserLevels](#)

User friendly enumerations for [userLevelVisibility](#) and [userLevelEnabled](#) properties - refer to [userLevelVisibility](#) and [userLevelEnabled](#) properties and [userLevel](#) enumeration for details.

Enumerator:

User Refer to [USERLEVEL_USER](#) for details.

Scientist Refer to USERLEVEL_SCIENTIST for details.

Engineer Refer to USERLEVEL_ENGINEER for details.

9.76.2 Property Documentation

9.76.2.1 bool QEGroupBox::allowDrop [read, write]

Allow drag/drops operations to this widget. Default is false. Any dropped text will be used as a new variable name.

Reimplemented from [QEDragDrop](#).

9.76.2.2 bool QEGroupBox::displayAlarmState [read, write]

If set (default) widget will indicate the alarm state of any variable data is displaying. Typically the background colour is set to indicate the alarm state. Note, this property is included in the set of standard properties as it applies to most widgets. It will do nothing for widgets that don't display data.

Reimplemented from [standardProperties](#).

9.76.2.3 unsigned QEGroupBox::int [read, write]

Set the ID used by the message filtering system. Default is zero. Widgets or applications that use messages from the framework have the option of filtering on this ID. For example, by using a unique message source ID a [QELog](#) widget may be set up to only log messages from a select set of widgets.

9.76.2.4 UserLevels QEGroupBox::userLevelEnabled [read, write]

Lowest user level at which the widget is enabled. Default is 'User'. Used when designing GUIs that allow access to more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through `setUserLevel()` Widgets that are always accessible should be visible at 'User'. Widgets that are only accessible to scientists managing the facility should be visible at 'Scientist'. Widgets that are only accessible to engineers maintaining the facility should be visible at 'Engineer'.

9.76.2.5 QString QEGroupBox::userLevelEngineerStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'Engineer' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the `styleManager` class. Refer to the `styleManager` class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.76.2.6 `QString QEGroupBox::userLevelScientistStyle` [read, write]

Style Sheet string to be applied when the widget is displayed in 'Scientist' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.76.2.7 `QString QEGroupBox::userLevelUserStyle` [read, write]

Style Sheet string to be applied when the widget is displayed in 'User' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.76.2.8 `UserLevels QEGroupBox::userLevelVisibility` [read, write]

Lowest user level at which the widget is visible. Default is 'User'. Used when designing GUIs that display more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through setUserLevel(). Widgets that are always visible should be visible at 'User'. Widgets that are only used by scientists managing the facility should be visible at 'Scientist'. Widgets that are only used by engineers maintaining the facility should be visible at 'Engineer'.

9.76.2.9 `bool QEGroupBox::variableAsToolTip` [read, write]

Use the variable as the tool tip. Default is true. Tool tip property will be overwritten by the variable name.

Reimplemented from [QEToolTip](#).

9.76.2.10 `bool QEGroupBox::visible` [read, write]


Display the widget. Default is true. Setting this property false is usefull if widget is only used to provide a signal - for example, when supplying data to a [QELink](#) widget. Note, when false the widget will still be visible in Qt Designer.

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEGroupBox/QEGroupBox.h
- /tmp/epicsqt/trunk/framework/widgets/QEGroupBox/QEGroupBox.cpp

9.77 QImage Class Reference

Inheritance diagram for QImage:

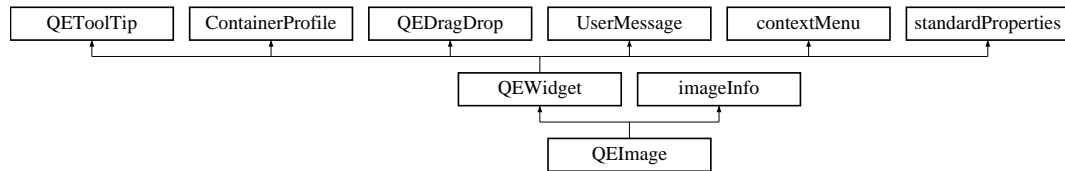

Classes

- struct **rgbPixel**

Public Types

- enum **selectOptions** {
SO_NONE, **SO_PANNING**, **SO_VSLICE**, **SO_HSLICE**,
SO_AREA1, **SO_AREA2**, **SO_AREA3**, **SO_AREA4**,
SO_PROFILE, **SO_TARGET**, **SO_BEAM** }
- enum **formatOptions** {
GREY8, **GREY12**, **GREY16**, **RGB_888**,
NUM_OPTIONS }
- enum **resizeOptions** { **RESIZE_OPTION_ZOOM**, **RESIZE_OPTION_FIT** }
- enum **rotationOptions** { **ROTATION_0**, **ROTATION_90_RIGHT**, **ROTATION_90_LEFT**, **ROTATION_180** }
- enum **UserLevels** { **User** = **userLevelTypes::USERLEVEL_USER**, **Scientist** = **userLevelTypes::USERLEVEL_SCIENTIST**, **Engineer** = **userLevelTypes::USERLEVEL_ENGINEER** }
- enum **FormatOptions** { **Grey_8** = **QImage::GREY8**, **Grey_12** = **QImage::GREY12**,
Grey_16 = **QImage::GREY16**, **RGB** = **QImage::RGB_888** }
- enum **ResizeOptions** { **Zoom** = **QImage::RESIZE_OPTION_ZOOM**, **Fit** = **QImage::RESIZE_OPTION_FIT** }
- enum **RotationOptions** { **NoRotation** = **QImage::ROTATION_0**, **Rotate90Right** = **QImage::ROTATION_90_RIGHT**, **Rotate90Left** = **QImage::ROTATION_90_LEFT**, **Rotate180** = **QImage::ROTATION_180** }

Public Slots

- void **setImageFile** (QString name)
- void **setSelectPanMode** ()
Framework use only. Slot to allow external setting of selection menu options.
- void **setSelectVSliceMode** ()
Framework use only. Slot to allow external setting of selection menu options.

- void [setSelectHSliceMode](#) ()
Framework use only. Slot to allow external setting of selection menu options.
- void [setSelectArea1Mode](#) ()
Framework use only. Slot to allow external setting of selection menu options.
- void [setSelectArea2Mode](#) ()
Framework use only. Slot to allow external setting of selection menu options.
- void [setSelectArea3Mode](#) ()
Framework use only. Slot to allow external setting of selection menu options.
- void [setSelectArea4Mode](#) ()
Framework use only. Slot to allow external setting of selection menu options.
- void [setSelectProfileMode](#) ()
Framework use only. Slot to allow external setting of selection menu options.
- void [setSelectTargetMode](#) ()
Framework use only. Slot to allow external setting of selection menu options.
- void [setSelectBeamMode](#) ()
Framework use only. Slot to allow external setting of selection menu options.
- void [pauseClicked](#) ()
Framework use only. Slot to allow external setting of selection menu options.
- void [saveClicked](#) ()
Framework use only. Slot to allow external setting of selection menu options.
- void [roi1Changed](#) ()
Framework use only. Slot to allow external setting of selection menu options.
- void [roi2Changed](#) ()
Framework use only. Slot to allow external setting of selection menu options.
- void [roi3Changed](#) ()
Framework use only. Slot to allow external setting of selection menu options.
- void [roi4Changed](#) ()
Framework use only. Slot to allow external setting of selection menu options.
- void [targetClicked](#) ()
Framework use only. Slot to allow external setting of selection menu options.

Signals

- void [dbValueChanged](#) (const QString &out)
- void [requestResend](#) ()
Internal use only. Used when changing a property value to force a re-display to reflect the new property value.

Public Member Functions

- [QImage](#) (QWidget *parent=0)
- [QImage](#) (const QString &variableName, QWidget *parent=0)
- [~QImage](#) ()
Destructor.
- [selectOptions](#) **getSelectionOption** ()
- void [setFormatOption](#) ([formatOptions](#) formatOption)
Access function for #formatOption property - refer to #formatOption property for details.
- [formatOptions](#) **getFormatOption** ()
Access function for #formatOption property - refer to #formatOption property for details.
- void [setResizeOption](#) ([resizeOptions](#) resizeModeIn)
Access function for #resizeOption property - refer to #resizeOption property for details.
- [resizeOptions](#) **getResizeOption** ()
Access function for #resizeOption property - refer to #resizeOption property for details.
- void [setZoom](#) (int zoomIn)
Access function for [zoom](#) property - refer to [zoom](#) property for details.
- int [getZoom](#) ()
Access function for [zoom](#) property - refer to [zoom](#) property for details.
- void [setRotation](#) ([rotationOptions](#) rotationIn)
Access function for #rotation property - refer to #rotation property for details.
- [rotationOptions](#) **getRotation** ()
Access function for #rotation property - refer to #rotation property for details.
- void [setHorizontalFlip](#) (bool flipHozIn)
Access function for [horizontalFlip](#) property - refer to [horizontalFlip](#) property for details.
- bool [getHorizontalFlip](#) ()
Access function for [horizontalFlip](#) property - refer to [horizontalFlip](#) property for details.
- void [setVerticalFlip](#) (bool flipVertIn)
Access function for [verticalFlip](#) property - refer to [verticalFlip](#) property for details.
- bool [getVerticalFlip](#) ()
Access function for [verticalFlip](#) property - refer to [verticalFlip](#) property for details.
- void [setInitialHozScrollPos](#) (int initialHozScrollPosIn)
Access function for [initialHozScrollPos](#) property - refer to [initialHozScrollPos](#) property for details.
- int [getInitialHozScrollPos](#) ()
Access function for [initialHozScrollPos](#) property - refer to [initialHozScrollPos](#) property for details.
- void [setInitialVertScrollPos](#) (int initialVertScrollPosIn)
Access function for [initialVertScrollPos](#) property - refer to [initialVertScrollPos](#) property for details.
- int [getInitialVertScrollPos](#) ()
Access function for [initialVertScrollPos](#) property - refer to [initialVertScrollPos](#) property for details.

- void [setDisplayButtonBar](#) (bool displayButtonBarIn)
Access function for [displayButtonBar](#) property - refer to [displayButtonBar](#) property for details.
- bool [getDisplayButtonBar](#) ()
Access function for [displayButtonBar](#) property - refer to [displayButtonBar](#) property for details.
- void [setShowTime](#) (bool pValue)
Access function for [showTime](#) property - refer to [showTime](#) property for details.
- bool [getShowTime](#) ()
Access function for [showTime](#) property - refer to [showTime](#) property for details.
- void [setVertSliceMarkupColor](#) (QColor pValue)
Access function for [vertSliceColor](#) property - refer to [vertSliceColor](#) property for details.
- QColor [getVertSliceMarkupColor](#) ()
Access function for [vertSliceColor](#) property - refer to [vertSliceColor](#) property for details.
- void [setHozSliceMarkupColor](#) (QColor pValue)
Access function for [hozSliceColor](#) property - refer to [hozSliceColor](#) property for details.
- QColor [getHozSliceMarkupColor](#) ()
Access function for [hozSliceColor](#) property - refer to [hozSliceColor](#) property for details.
- void [setProfileMarkupColor](#) (QColor pValue)
Access function for [profileColor](#) property - refer to [profileColor](#) property for details.
- QColor [getProfileMarkupColor](#) ()
Access function for [profileColor](#) property - refer to [profileColor](#) property for details.
- void [setAreaMarkupColor](#) (QColor pValue)
Access function for [areaColor](#) property - refer to [areaColor](#) property for details.
- QColor [getAreaMarkupColor](#) ()
Access function for [areaColor](#) property - refer to [areaColor](#) property for details.
- void [setTargetMarkupColor](#) (QColor pValue)
Access function for [targetColor](#) property - refer to [targetColor](#) property for details.
- QColor [getTargetMarkupColor](#) ()
Access function for [targetColor](#) property - refer to [targetColor](#) property for details.
- void [setBeamMarkupColor](#) (QColor pValue)
Access function for [beamColor](#) property - refer to [beamColor](#) property for details.
- QColor [getBeamMarkupColor](#) ()
Access function for [beamColor](#) property - refer to [beamColor](#) property for details.
- void [setTimeMarkupColor](#) (QColor pValue)
Access function for [timeColor](#) property - refer to [timeColor](#) property for details.
- QColor [getTimeMarkupColor](#) ()
Access function for [timeColor](#) property - refer to [timeColor](#) property for details.
- void [setDisplayCursorPixelInfo](#) (bool displayCursorPixelInfoIn)
Access function for [#displayCursorPixelInfo](#) property - refer to [#displayCursorPixelInfo](#) property for details.
- bool [getDisplayCursorPixelInfo](#) ()
Access function for [#displayCursorPixelInfo](#) property - refer to [#displayCursorPixelInfo](#) property for details.

- void [setContrastReversal](#) (bool contrastReversalIn)
Access function for `#contrastReversal` property - refer to `#contrastReversal` property for details.
- bool [getContrastReversal](#) ()
Access function for `#contrastReversal` property - refer to `#contrastReversal` property for details.
- void [setEnableVertSliceSelection](#) (bool enableVSliceSelectionIn)
Access function for [enableVertSliceSelection](#) property - refer to [enableVertSliceSelection](#) property for details.
- bool [getEnableVertSliceSelection](#) ()
Access function for [enableVertSliceSelection](#) property - refer to [enableVertSliceSelection](#) property for details.
- void [setEnableHozSliceSelection](#) (bool enableHSliceSelectionIn)
Access function for [enableHozSliceSelection](#) property - refer to [enableHozSliceSelection](#) property for details.
- bool [getEnableHozSliceSelection](#) ()
Access function for [enableHozSliceSelection](#) property - refer to [enableHozSliceSelection](#) property for details.
- void [setEnableAreaSelection](#) (bool enableAreaSelectionIn)
Access function for `#enableAreaSelection` property - refer to `#enableAreaSelection` property for details.
- bool [getEnableAreaSelection](#) ()
Access function for `#enableAreaSelection` property - refer to `#enableAreaSelection` property for details.
- void [setEnableProfileSelection](#) (bool enableProfileSelectionIn)
Access function for `#enableProfileSelection` property - refer to `#enableProfileSelection` property for details.
- bool [getEnableProfileSelection](#) ()
Access function for `#enableProfileSelection` property - refer to `#enableProfileSelection` property for details.
- void [setEnableTargetSelection](#) (bool enableTargetSelectionIn)
Access function for `#enableTargetSelection` property - refer to `#enableTargetSelection` property for details.
- bool [getEnableTargetSelection](#) ()
Access function for `#enableTargetSelection` property - refer to `#enableTargetSelection` property for details.
- void [setEnableBrightnessContrast](#) (bool enableBrightnessContrastIn)
Access function for [enableBrightnessContrast](#) property - refer to [enableBrightnessContrast](#) property for details.
- bool [getEnableBrightnessContrast](#) ()
Access function for [enableBrightnessContrast](#) property - refer to [enableBrightnessContrast](#) property for details.
- void [setAutoBrightnessContrast](#) (bool autoBrightnessContrastIn)
Access function for [autoBrightnessContrast](#) property - refer to [autoBrightnessContrast](#) property for details.
- bool [getAutoBrightnessContrast](#) ()

Access function for [autoBrightnessContrast](#) property - refer to [autoBrightnessContrast](#) property for details.

- [UserLevels](#) [getUserLevelVisibilityProperty](#) ()

Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.

- void [setUserLevelVisibilityProperty](#) ([UserLevels](#) level)

Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.

- [UserLevels](#) [getUserLevelEnabledProperty](#) ()

Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.

- void [setUserLevelEnabledProperty](#) ([UserLevels](#) level)

Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.

- void [setFormatOptionProperty](#) ([FormatOptions](#) formatOption)

Access function for [#formatOption](#) property - refer to [#formatOption](#) property for details.

- [FormatOptions](#) [getFormatOptionProperty](#) ()

Access function for [#formatOption](#) property - refer to [#formatOption](#) property for details.

- void [setResizeOptionProperty](#) ([ResizeOptions](#) resizeOption)

Access function for [#resizeOption](#) property - refer to [#resizeOption](#) property for details.

- [ResizeOptions](#) [getResizeOptionProperty](#) ()

Access function for [#resizeOption](#) property - refer to [#resizeOption](#) property for details.

- void [setRotationProperty](#) ([RotationOptions](#) rotation)

Access function for [#rotation](#) property - refer to [#rotation](#) property for details.

- [RotationOptions](#) [getRotationProperty](#) ()

Access function for [#rotation](#) property - refer to [#rotation](#) property for details.

Protected Types

- enum **variableIndexes** {
IMAGE_VARIABLE, WIDTH_VARIABLE, HEIGHT_VARIABLE, ROI1_X_VARIABLE,
ROI1_Y_VARIABLE, ROI1_W_VARIABLE, ROI1_H_VARIABLE, ROI2_X_VARIABLE,
ROI2_Y_VARIABLE, ROI2_W_VARIABLE, ROI2_H_VARIABLE, ROI3_X_VARIABLE,
ROI3_Y_VARIABLE, ROI3_W_VARIABLE, ROI3_H_VARIABLE, ROI4_X_VARIABLE,
ROI4_Y_VARIABLE, ROI4_W_VARIABLE, ROI4_H_VARIABLE, TARGET_X_VARIABLE,
TARGET_Y_VARIABLE, BEAM_X_VARIABLE, BEAM_Y_VARIABLE, TARGET_TRIGGER_VARIABLE,
CLIPPING_ONOFF_VARIABLE, CLIPPING_LOW_VARIABLE, CLIPPING_HIGH_VARIABLE, QEIMAGE_NUM_VARIABLES }

Protected Member Functions

- void **establishConnection** (unsigned int variableIndex)
- void **dragEnterEvent** (QDragEnterEvent *event)
- void **dropEvent** (QDropEvent *event)
- void **setDrop** (QVariant drop)
- QVariant **getDrop** ()
- QString **copyVariable** ()
- QVariant **copyData** ()
- void **paste** (QVariant v)
- void **resizeEvent** (QResizeEvent *)

Protected Attributes

- [QEIntegerFormatting](#) **integerFormatting**
- [resizeOptions](#) **resizeOption**
- int [zoom](#)
Zoom percentage. Used when #resizeOption is [Zoom](#).
- [rotationOptions](#) **rotation**
- bool **flipVert**
- bool **flipHoz**
- int **initialHozScrollPos**
- int **initialVertScrollPos**
- bool **displayButtonBar**
- bool **enableBrightnessContrast**

Properties

- QString [imageVariable](#)
- QString [widthVariable](#)
- QString [heightVariable](#)
- QString [regionOfInterest1XVariable](#)
- QString [regionOfInterest1YVariable](#)
- QString [regionOfInterest1WVariable](#)
- QString [regionOfInterest1HVariable](#)
- QString [regionOfInterest2XVariable](#)
- QString [regionOfInterest2YVariable](#)
- QString [regionOfInterest2WVariable](#)
- QString [regionOfInterest2HVariable](#)
- QString [regionOfInterest3XVariable](#)
- QString [regionOfInterest3YVariable](#)
- QString [regionOfInterest3WVariable](#)
- QString [regionOfInterest3HVariable](#)
- QString [regionOfInterest4XVariable](#)
- QString [regionOfInterest4YVariable](#)

- QString [regionOfInterest4WVariable](#)
- QString [regionOfInterest4HVariable](#)
- QString [targetXVariable](#)
- QString [targetYVariable](#)
- QString [beamXVariable](#)
- QString [beamYVariable](#)
- QString [targetTriggerVariable](#)
- QString [clippingOnOffVariable](#)
- QString [clippingLowVariable](#)
- QString [clippingHighVariable](#)
- QString [variableSubstitutions](#)
- bool [variableAsToolTip](#)
- bool [allowDrop](#)
- bool [visible](#)
- unsigned [int](#)
- QString [userLevelUserStyle](#)
- QString [userLevelScientistStyle](#)
- QString [userLevelEngineerStyle](#)
- [UserLevels](#) [userLevelVisibility](#)
- [UserLevels](#) [userLevelEnabled](#)
- bool [displayAlarmState](#)
- [FormatOptions](#) [formatOption](#)
- bool [enableVertSliceSelection](#)
- bool [enableHozSliceSelection](#)
- bool [showTime](#)
- QColor [vertSliceColor](#)
- QColor [hozSliceColor](#)
- QColor [profileColor](#)
- QColor [areaColor](#)
- QColor [beamColor](#)
- QColor [targetColor](#)
- QColor [timeColor](#)
- [ResizeOptions](#) [resizeOption](#)
- [RotationOptions](#) [rotation](#)
- bool [verticalFlip](#)
- bool [horizontalFlip](#)
- int [initialHosScrollPos](#)
- bool [autoBrightnessContrast](#)

9.77.1 Member Enumeration Documentation

9.77.1.1 enum [QEImage::formatOptions](#)

Video format options

Enumerator:

GREY8 8 bit grey scale
GREY12 12 bit grey scale
GREY16 16 bit grey scale
RGB_888 24 bit RGB

9.77.1.2 enum QImage::FormatOptions

User friendly enumerations for #formatOption property - refer to #formatOption property and [formatOptions](#) enumeration for details.

Enumerator:

Grey_8 8 bit grey scale
Grey_12 12 bit grey scale
Grey_16 16 bit grey scale

9.77.1.3 enum QImage::ResizeOptions

User friendly enumerations for #resizeOption property

Enumerator:

Zoom Zoom to selected percentage.
Fit Zoom to fit the current window size.

9.77.1.4 enum QImage::resizeOptions

Image resize options

Enumerator:

RESIZE_OPTION_ZOOM Zoom to selected percentage.
RESIZE_OPTION_FIT Zoom to fit the current window size.

9.77.1.5 enum QImage::rotationOptions

Image rotation options

Enumerator:

ROTATION_0 No image rotation.
ROTATION_90_RIGHT Rotate image 90 degrees clockwise.
ROTATION_90_LEFT Rotate image 90 degrees anticlockwise.
ROTATION_180 Rotate image 180 degrees.

9.77.1.6 enum QImage::RotationOptions

User friendly enumerations for #rotation property

Enumerator:

- NoRotation** No image rotation.
- Rotate90Right** Rotate image 90 degrees clockwise.
- Rotate90Left** Rotate image 90 degrees anticlockwise.
- Rotate180** Rotate image 180 degrees.

9.77.1.7 enum QImage::selectOptions

Internal use only. Selection options. What will happen when the user interacts with the image area

Enumerator:

- SO_NONE** Do nothing.
- SO_PANNING** User is panning.
- SO_VSLICE** Select the vertical slice point.
- SO_HSLICE** Select the horizontal slice point.
- SO_AREA4** User is selecting an area (for region of interest)
- SO_PROFILE** Select an arbitrary line across the image (to determine a profile)
- SO_TARGET** Mark the target point.
- SO_BEAM** Mark the current beam location.

9.77.1.8 enum QImage::UserLevels

User friendly enumerations for [userLevelVisibility](#) and [userLevelEnabled](#) properties - refer to [userLevelVisibility](#) and [userLevelEnabled](#) properties and userLevel enumeration for details.

Enumerator:

- User** Refer to USERLEVEL_USER for details.
- Scientist** Refer to USERLEVEL_SCIENTIST for details.
- Engineer** Refer to USERLEVEL_ENGINEER for details.

9.77.2 Constructor & Destructor Documentation

9.77.2.1 QImage::QImage (QWidget * parent = 0)

Create without a variable. Use `setVariableName'n'Property()` - where 'n' is a number from 0 to 26 - and `setSubstitutionsProperty()` to define variables and, optionally, macro

substitutions later. Note, each variable property is named by function (such as `imageVariable` and `widthVariable`) but given a numeric get and set property access function such as `setVariableName22Property()`. Refer to the property definitions to determine what 'set' and 'get' function is used for each variable, or use Qt library functions to set or get the variable names by name.

9.77.2.2 QEImage::QEImage (const QString & *variableName*, QWidget * *parent* = 0)

Create with a variable. A connection is automatically established. The variable is set up as the first variable. This is consistent with other widgets, but will not result in an updating image as the width and height variables are required as a minimum.

9.77.3 Member Function Documentation

9.77.3.1 void QEImage::dbValueChanged (const QString & *out*) [signal]

Sent when the widget is updated following a data change. Can be used to pass on EPICS data (as presented in this widget) to other widgets. For example a QList widget could log updates from this widget.

9.77.4 Member Data Documentation

9.77.4.1 bool QEImage::displayButtonBar [read, write, protected]

If true, a button bar will be displayed above the image. If not displayed, all buttons in the button bar are still available in the right click menu.

9.77.4.2 bool QEImage::enableBrightnessContrast [read, write, protected]

If true, auto set local brightness and contrast when any area is selected. The brightness and contrast is set to use the full range of pixels in the selected area.

9.77.4.3 int QEImage::initialVertScrollPos [read, write, protected]

Sets the initial position of the vertical scroll bar, if present. Used to set up an initial view when zoomed in.

9.77.5 Property Documentation

9.77.5.1 bool QEImage::allowDrop [read, write]

Allow drag/drops operations to this widget. Default is false. Any dropped text will be used as a new variable name.

Reimplemented from [QEDragDrop](#).

9.77.5.2 QColor QImage::areaColor [read, write]

Used to select the color of the area selection markups.

9.77.5.3 bool QImage::autoBrightnessContrast [read, write]

If true, local brightness and contrast controls are displayed. The brightness and contrast is set to use the full range of pixels in the selected area.

9.77.5.4 QColor QImage::beamColor [read, write]

Used to select the color of the beam marker.

9.77.5.5 QString QImage::beamXVariable [read, write]

EPICS variable name (CA PV). This variable is used to write the selected beam X position.

9.77.5.6 QString QImage::beamYVariable [read, write]

EPICS variable name (CA PV). This variable is used to write the selected beam Y position.

9.77.5.7 QString QImage::clippingHighVariable [read, write]

EPICS variable name (CA PV). This variable is used to write the areadetector clipping high level.

9.77.5.8 QString QImage::clippingLowVariable [read, write]

EPICS variable name (CA PV). This variable is used to write the areadetector clipping low level.

9.77.5.9 QString QImage::clippingOnOffVariable [read, write]

EPICS variable name (CA PV). This variable is used to write the areadetector clipping on/off command.

9.77.5.10 bool QImage::displayAlarmState [read, write]

If set (default) widget will indicate the alarm state of any variable data is displaying. Typically the background colour is set to indicate the alarm state. Note, this property is included in the set of standard properties as it applies to most widgets. It will do nothing for widgets that don't display data.

Reimplemented from [standardProperties](#).

9.77.5.11 bool QImage::enableHozSliceSelection [read, write]

If true, the option to select a horizontal slice through the image will be available to the user. This will be used to generate a horizontal pixel profile.

9.77.5.12 bool QImage::enableVertSliceSelection [read, write]

If true, the option to select a vertical slice through the image will be available to the user. This will be used to generate a vertical pixel profile.

9.77.5.13 FormatOptions QImage::formatOption [read, write]

Video format. EPICS data type size will typically be adequate for the number of bits required (one byte for 8 bits, 2 bytes for 12 and 16 bits), but can be larger (4 bytes for 24 bits.)

9.77.5.14 QString QImage::heightVariable [read, write]

EPICS variable name (CA PV). This variable is used to read the height of the image.

9.77.5.15 bool QImage::horizontalFlip [read, write]

If true, flip image horizontally.

9.77.5.16 QColor QImage::hozSliceColor [read, write]

Used to select the color of the horizontal slice markup.

9.77.5.17 QString QImage::imageVariable [read, write]

EPICS variable name (CA PV). This variable is used as the source the image waveform.

9.77.5.18 `int QElImage::initialHosScrollPos` `[read, write]`

Sets the initial position of the horizontal scroll bar, if present. Used to set up an initial view when zoomed in.

9.77.5.19 `unsigned QElImage::int` `[read, write]`

Set the ID used by the message filtering system. Default is zero. Widgets or applications that use messages from the framework have the option of filtering on this ID. For example, by using a unique message source ID a [QELog](#) widget may be set up to only log messages from a select set of widgets.

9.77.5.20 `QColor QElImage::profileColor` `[read, write]`

Used to select the color of the arbitrary profile line markup.

9.77.5.21 `QString QElImage::regionOfInterest1HVariable` `[read, write]`

EPICS variable name (CA PV). This variable is used to write the first region of interest height.

9.77.5.22 `QString QElImage::regionOfInterest1WVariable` `[read, write]`

EPICS variable name (CA PV). This variable is used to write the first region of interest width.

9.77.5.23 `QString QElImage::regionOfInterest1XVariable` `[read, write]`

EPICS variable name (CA PV). This variable is used to write the first region of interest X position.

9.77.5.24 `QString QElImage::regionOfInterest1YVariable` `[read, write]`

EPICS variable name (CA PV). This variable is used to write the first region of interest Y position.

9.77.5.25 `QString QElImage::regionOfInterest2HVariable` `[read, write]`

EPICS variable name (CA PV). This variable is used to write the second region of interest height.

9.77.5.26 QString QImage::regionOfInterest2WVariable [read, write]

EPICS variable name (CA PV). This variable is used to write the second region of interest width.

9.77.5.27 QString QImage::regionOfInterest2XVariable [read, write]

EPICS variable name (CA PV). This variable is used to write the second region of interest X position.

9.77.5.28 QString QImage::regionOfInterest2YVariable [read, write]

EPICS variable name (CA PV). This variable is used to write the second region of interest Y position.

9.77.5.29 QString QImage::regionOfInterest3HVariable [read, write]

EPICS variable name (CA PV). This variable is used to write the third region of interest height.

9.77.5.30 QString QImage::regionOfInterest3WVariable [read, write]

EPICS variable name (CA PV). This variable is used to write the third region of interest width.

9.77.5.31 QString QImage::regionOfInterest3XVariable [read, write]

EPICS variable name (CA PV). This variable is used to write the third region of interest X position.

9.77.5.32 QString QImage::regionOfInterest3YVariable [read, write]

EPICS variable name (CA PV). This variable is used to write the third region of interest Y position.

9.77.5.33 QString QImage::regionOfInterest4HVariable [read, write]

EPICS variable name (CA PV). This variable is used to write the fourth region of interest height.

9.77.5.34 QString QImage::regionOfInterest4WVariable [read, write]

EPICS variable name (CA PV). This variable is used to write the fourth region of interest width.

9.77.5.35 QString QEImage::regionOfInterest4XVariable [read, write]

EPICS variable name (CA PV). This variable is used to write the fourth region of interest X position.

9.77.5.36 QString QEImage::regionOfInterest4YVariable [read, write]

EPICS variable name (CA PV). This variable is used to write the fourth region of interest Y position.

9.77.5.37 ResizeOptions QEImage::resizeOption [read, write]

Resize option. Zoom to zoom to the percentage given by the [zoom](#) property, or fit to the window size.

9.77.5.38 RotationOptions QEImage::rotation [read, write]

Image rotation option.

9.77.5.39 bool QEImage::showTime [read, write]

If true, the image timestamp will be written in the top left of the image.

9.77.5.40 QColor QEImage::targetColor [read, write]

Used to select the color of the target marker.

9.77.5.41 QString QEImage::targetTriggerVariable [read, write]

EPICS variable name (CA PV). This variable is used to write a 'trigger' to initiate movement of the target into the beam as defined by the target and beam X and Y positions.

9.77.5.42 QString QEImage::targetXVariable [read, write]

EPICS variable name (CA PV). This variable is used to write the selected target X position.

9.77.5.43 QString QEImage::targetYVariable [read, write]

EPICS variable name (CA PV). This variable is used to write the selected target Y position.

9.77.5.44 QColor QImage::timeColor [read, write]

Used to select the color of the timestamp.

9.77.5.45 UserLevels QImage::userLevelEnabled [read, write]

Lowest user level at which the widget is enabled. Default is 'User'. Used when designing GUIs that allow access to more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through `setUserLevel()` Widgets that are always accessible should be visible at 'User'. Widgets that are only accessible to scientists managing the facility should be visible at 'Scientist'. Widgets that are only accessible to engineers maintaining the facility should be visible at 'Engineer'.

9.77.5.46 QString QImage::userLevelEngineerStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'Engineer' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the `styleManager` class. Refer to the `styleManager` class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.77.5.47 QString QImage::userLevelScientistStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'Scientist' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the `styleManager` class. Refer to the `styleManager` class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.77.5.48 QString QImage::userLevelUserStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'User' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the `styleManager` class. Refer to the `styleManager` class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.77.5.49 UserLevels QImage::userLevelVisibility [read, write]

Lowest user level at which the widget is visible. Default is 'User'. Used when designing GUIs that display more and more detail according to the user mode. The user mode is

set application wide through the [QELogin](#) widget, or programatically through `setUserLevel()`. Widgets that are always visible should be visible at 'User'. Widgets that are only used by scientists managing the facility should be visible at 'Scientist'. Widgets that are only used by engineers maintaining the facility should be visible at 'Engineer'.

9.77.5.50 `bool QEImage::variableAsToolTip` [read, write]

Use the variable as the tool tip. Default is true. Tool tip property will be overwritten by the variable name.

Reimplemented from [QEToolTip](#).

9.77.5.51 `QString QEImage::variableSubstitutions` [read, write]

Macro substitutions. The default is no substitutions. The format is NAME1=VALUE1[, NAME2=VALUE2... Values may be quoted strings. For example, 'CAM=1, NAME = "Image 1"' These substitutions are applied to all the variable names.

9.77.5.52 `bool QEImage::verticalFlip` [read, write]

If true, flip image vertically.

9.77.5.53 `QColor QEImage::vertSliceColor` [read, write]

Used to select the color of the vertical slice markup.

9.77.5.54 `bool QEImage::visible` [read, write]

Display the widget. Default is true. Setting this property false is usefull if widget is only used to provide a signal - for example, when supplying data to a [QELink](#) widget. Note, when false the widget will still be visible in Qt Designer.

9.77.5.55 `QString QEImage::widthVariable` [read, write]


EPICS variable name (CA PV). This variable is used to read the width of the image.

The documentation for this class was generated from the following files:

- `/tmp/epicsqt/trunk/framework/widgets/QEImage/QEImage.h`
- `/tmp/epicsqt/trunk/framework/widgets/QEImage/QEImage.cpp`

9.78 QEInteger Class Reference

Inheritance diagram for QEInteger:

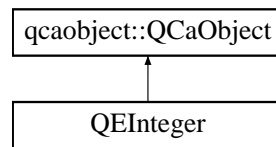

Public Slots

- void **writeInteger** (const long &data)

Signals

- void **integerConnectionChanged** ([QCaConnectionInfo](#) &connectionInfo, const unsigned int &variableIndex)
- void **integerChanged** (const long &value, [QCaAlarmInfo](#) &alarmInfo, [QCaDateTime](#) &timeStamp, const unsigned int &variableIndex)
- void **integerArrayChanged** (const QVector< long > &values, [QCaAlarmInfo](#) &alarmInfo, [QCaDateTime](#) &timeStamp, const unsigned int &variableIndex)

Public Member Functions

- **QEInteger** (QString recordName, QObject *eventObject, [QEIntegerFormatting](#) *integerFormattingIn, unsigned int variableIndexIn)
- **QEInteger** (QString recordName, QObject *eventObject, [QEIntegerFormatting](#) *integerFormattingIn, unsigned int variableIndexIn, [UserMessage](#) *userMessageIn)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/data/include/QEInteger.h
- /tmp/epicsqt/trunk/framework/data/src/QEInteger.cpp

9.79 QEIntegerArray Class Reference

```
#include <QEIntegerArray.h>
```

Public Member Functions

- **QEIntegerArray** (int size)
- **QEIntegerArray** (int size, const long &t)
- **QEIntegerArray** (const QVector< long > &other)
- long **minimumValue** (const long &defaultValue=0)
- long **maximumValue** (const long &defaultValue=0)

9.79.1 Detailed Description

This class provides short hand for `QVector<long>` together with some basic long vector operations.

The documentation for this class was generated from the following files:

- `/tmp/epicsqt/trunk/framework/data/include/QEIntegerArray.h`
- `/tmp/epicsqt/trunk/framework/data/src/QEIntegerArray.cpp`

9.80 QEIntegerFormatting Class Reference

```
#include <QEIntegerFormatting.h>
```

Public Member Functions

- [QEIntegerFormatting \(\)](#)
Constructor.
- `long` [formatInteger](#) (const `QVariant` &value)
- `QVector< long >` [formatIntegerArray](#) (const `QVariant` &value)
- `QVariant` [formatValue](#) (const `long` &integerValue, `generic::generic_types` valueType)
- `void` [setRadix](#) (unsigned int radix)
Set the radix used for all conversions. Default is 10.
- unsigned int [getPrecision](#) ()
Get the precision used for all conversions.
- unsigned int [getRadix](#) ()
Get the radix used for all conversions.

9.80.1 Detailed Description

This class holds formatting instructions and uses them to convert between an integer and a `QVariant` of any type. It is generally set up with it's formatting instructions and then passed to a [QEInteger](#) class that will sink and source integer data to widgets or other code. It is used to convert data to and from a `QCaObject` (which sources and sinks data in the form of a `QVariant` where the `QVariant` reflects the underlying variable data type) and the [QEInteger](#) class. An example of a requirement for integer data is a combo box which must determine an integer index to select a menu option.

9.80.2 Member Function Documentation

9.80.2.1 long QEIntegerFormatting::formatInteger (const QVariant & *value*)

Given a data value of any type, format it as an integer according to the formatting instructions held by the class. This is used to convert the QVariant value received from a QCaObject, which is still based on the data variable type, to an integer.

9.80.2.2 QVector< long > QEIntegerFormatting::formatIntegerArray (const QVariant & *value*)

Given a data value of any type, format it as an array of integers according to the formatting instructions held by the class. This is used to convert the QVariant value received from a QCaObject, which is still based on the data variable type, to an integer array. Typically used where the input QVariant value is an array of data values, but will work for any QVariant type.

9.80.2.3 QVariant QEIntegerFormatting::formatValue (const long & *integerValue*, generic::generic_types *valueType*)

Given an integer value, format it as a data value of the specified type, according to the formatting instructions held by the class. This is used when writing integer data to a QCaObject.


The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/data/include/QEIntegerFormatting.h
- /tmp/epicsqt/trunk/framework/data/src/QEIntegerFormatting.cpp

9.81 QELabel Class Reference

```
#include <QELabel.h>
```

Inheritance diagram for QELabel:

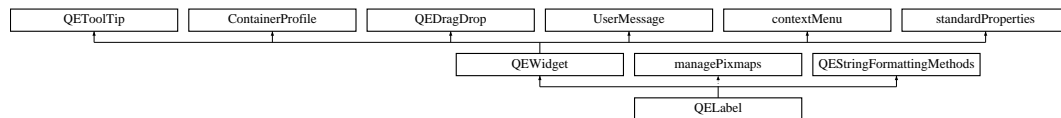

Public Types

- enum `updateOptions` { `UPDATE_TEXT`, `UPDATE_PIXMAP` }
- enum `UserLevels` { `User` = `userLevelTypes::USERLEVEL_USER`, `Scientist` = `userLevelTypes::USERLEVEL_SCIENTIST`, `Engineer` = `userLevelTypes::USERLEVEL_ENGINEER` }
- enum `Formats` {
`Default` = `QEStringFormatting::FORMAT_DEFAULT`, `Floating` = `QEStringFormatting::FORMAT_FLOATING`, `Integer` = `QEStringFormatting::FORMAT_INTEGER`, `UnsignedInteger` = `QEStringFormatting::FORMAT_UNSIGNEDINTEGER`,

- `Time` = `QStringFormatting::FORMAT_TIME`, `LocalEnumeration` = `QStringFormatting::FORMAT_LOCAL_ENUMERATE` }
- enum `Notations` { `Fixed` = `QStringFormatting::NOTATION_FIXED`, `Scientific` = `QStringFormatting::NOTATION_SCIENTIFIC`, `Automatic` = `QStringFormatting::NOTATION_AUTOMATIC` }
- enum `ArrayActions` { `Append` = `QStringFormatting::APPEND`, `Ascii` = `QStringFormatting::ASCII`, `Index` = `QStringFormatting::INDEX` }
- enum `UpdateOptions` { `Text` = `QELabel::UPDATE_TEXT`, `Picture` = `QELabel::UPDATE_PIXMAP` }

User friendly enumerations for updateOption property - refer to [QELabel::updateOptions](#) for details.

Signals

- void `dbValueChanged` (const `QString` &out)
- void `requestResend` ()

Internal use only. Used when changing a property value to force a re-display to reflect the new property value.

Public Member Functions

- `QELabel` (`QWidget` *parent=0)
- `QELabel` (const `QString` &variableName, `QWidget` *parent=0)
- `UserLevels` `getUserLevelVisibilityProperty` ()
Access function for `userLevelVisibility` property - refer to `userLevelVisibility` property for details.
- void `setUserLevelVisibilityProperty` (`UserLevels` level)
Access function for `userLevelVisibility` property - refer to `userLevelVisibility` property for details.
- `UserLevels` `getUserLevelEnabledProperty` ()
Access function for `userLevelEnabled` property - refer to `userLevelEnabled` property for details.
- void `setUserLevelEnabledProperty` (`UserLevels` level)
Access function for `userLevelEnabled` property - refer to `userLevelEnabled` property for details.
- void `setFormatProperty` (`Formats` format)
Access function for `format` property - refer to `format` property for details.
- `Formats` `getFormatProperty` ()
Access function for `format` property - refer to `format` property for details.
- void `setNotationProperty` (`Notations` notation)
Access function for `notation` property - refer to `notation` property for details.
- `Notations` `getNotationProperty` ()
Access function for `notation` property - refer to `notation` property for details.
- void `setArrayActionProperty` (`ArrayActions` arrayAction)
Access function for `arrayAction` property - refer to `arrayAction` property for details.

- [ArrayActions getArrayActionProperty \(\)](#)
Access function for [arrayAction](#) property - refer to [arrayAction](#) property for details.
- void [setUpdateOptionProperty \(UpdateOptions updateOption\)](#)
Access function for [#updateOption](#) property - refer to [#updateOption](#) property for details.
- [UpdateOptions getUpdateOptionProperty \(\)](#)
Access function for [#updateOption](#) property - refer to [#updateOption](#) property for details.
- void [setPixmap0Property \(QPixmap pixmap\)](#)
'Set' access function for [pixmap0](#) properties. Refer to [pixmap0](#) property for details
- void [setPixmap1Property \(QPixmap pixmap\)](#)
'Set' access function for [pixmap1](#) properties. Refer to [pixmap1](#) property for details
- void [setPixmap2Property \(QPixmap pixmap\)](#)
'Set' access function for [pixmap2](#) properties. Refer to [pixmap2](#) property for details
- void [setPixmap3Property \(QPixmap pixmap\)](#)
'Set' access function for [pixmap3](#) properties. Refer to [pixmap3](#) property for details
- void [setPixmap4Property \(QPixmap pixmap\)](#)
'Set' access function for [pixmap4](#) properties. Refer to [pixmap4](#) property for details
- void [setPixmap5Property \(QPixmap pixmap\)](#)
'Set' access function for [pixmap5](#) properties. Refer to [pixmap5](#) property for details
- void [setPixmap6Property \(QPixmap pixmap\)](#)
'Set' access function for [pixmap6](#) properties. Refer to [pixmap6](#) property for details
- void [setPixmap7Property \(QPixmap pixmap\)](#)
'Set' access function for [pixmap7](#) properties. Refer to [pixmap7](#) property for details
- QPixmap [getPixmap0Property \(\)](#)
'Get' access function for [pixmap0](#) properties. Refer to [pixmap0](#) property for details
- QPixmap [getPixmap1Property \(\)](#)
'Get' access function for [pixmap1](#) properties. Refer to [pixmap1](#) property for details
- QPixmap [getPixmap2Property \(\)](#)
'Get' access function for [pixmap2](#) properties. Refer to [pixmap2](#) property for details
- QPixmap [getPixmap3Property \(\)](#)
'Get' access function for [pixmap3](#) properties. Refer to [pixmap3](#) property for details
- QPixmap [getPixmap4Property \(\)](#)
'Get' access function for [pixmap4](#) properties. Refer to [pixmap4](#) property for details
- QPixmap [getPixmap5Property \(\)](#)
'Get' access function for [pixmap5](#) properties. Refer to [pixmap5](#) property for details
- QPixmap [getPixmap6Property \(\)](#)
'Get' access function for [pixmap6](#) properties. Refer to [pixmap6](#) property for details
- QPixmap [getPixmap7Property \(\)](#)
'Get' access function for [pixmap7](#) properties. Refer to [pixmap7](#) property for details

Properties

- QString [variable](#)
- QString [variableSubstitutions](#)
- bool [variableAsToolTip](#)
- bool [allowDrop](#)
- bool [visible](#)
- unsigned [int](#)
- QString [userLevelUserStyle](#)
- QString [userLevelScientistStyle](#)
- QString [userLevelEngineerStyle](#)
- [UserLevels](#) [userLevelVisibility](#)
- [UserLevels](#) [userLevelEnabled](#)
- bool [displayAlarmState](#)
- int [precision](#)
- bool [useDbPrecision](#)
- bool [leadingZero](#)
- bool [trailingZeros](#)
- bool [addUnits](#)
- QString [localEnumeration](#)
- [Formats](#) [format](#)
- [Notations](#) [notation](#)
- [ArrayActions](#) [arrayAction](#)
- [UpdateOptions](#) [updateOption](#)
- QPixmap [pixmap0](#)
- QPixmap [pixmap1](#)
- QPixmap [pixmap2](#)
- QPixmap [pixmap3](#)
- QPixmap [pixmap4](#)
- QPixmap [pixmap5](#)
- QPixmap [pixmap6](#)
- QPixmap [pixmap7](#)

9.81.1 Detailed Description

This class is a EPICS aware label widget based on the Qt label widget. When a variable is defined, the label text (or optionally the background pixmap) will be updated. The label will be disabled if the variable is invalid. It is tightly integrated with the base class [QEWidget](#) which provides generic support such as macro substitutions, drag/drop, and standard properties.

9.81.2 Member Enumeration Documentation

9.81.2.1 enum QELabel::ArrayActions

User friendly enumerations for arrayAction property - refer to [QCStringFormatting::arrayActions](#) for details.

Enumerator:

Append Refer to [QCStringFormatting::APPEND](#) for details.

Ascii Refer to [QCStringFormatting::ASCII](#) for details.

Index Refer to [QCStringFormatting::INDEX](#) for details.

9.81.2.2 enum QELabel::Formats

User friendly enumerations for format property - refer to [QCStringFormatting::formats](#) for details.

Enumerator:

Default Format as best appropriate for the data type.

Floating Format as a floating point number.

Integer Format as an integer.

UnsignedInteger Format as an unsigned integer.

Time Format as a time.

LocalEnumeration Format as a selection from the [localEnumeration](#) property.

9.81.2.3 enum QELabel::Notations

User friendly enumerations for notation property - refer to [QCStringFormatting::notations](#) for details.

Enumerator:

Fixed Refer to [QCStringFormatting::NOTATION_FIXED](#) for details.

Scientific Refer to [QCStringFormatting::NOTATION_SCIENTIFIC](#) for details.

Automatic Refer to [QCStringFormatting::NOTATION_AUTOMATIC](#) for details.

9.81.2.4 enum QELabel::UpdateOptions

User friendly enumerations for updateOption property - refer to [QELabel::updateOptions](#) for details.

Enumerator:

Text Data updates will update the label text.

Picture Data updates will update the label icon.

9.81.2.5 enum QELabel::updateOptions

Options for updating the label. The formatted text is used to update the label text, or select a background pixmap.

Enumerator:

UPDATE_TEXT Update the label text.

UPDATE_PIXMAP Update the label background pixmap.

9.81.2.6 enum QELabel::UserLevels

User friendly enumerations for [userLevelVisibility](#) and [userLevelEnabled](#) properties - refer to [userLevelVisibility](#) and [userLevelEnabled](#) properties and userLevel enumeration for details.

Enumerator:

User Refer to USERLEVEL_USER for details.

Scientist Refer to USERLEVEL_SCIENTIST for details.

Engineer Refer to USERLEVEL_ENGINEER for details.

9.81.3 Constructor & Destructor Documentation

9.81.3.1 QELabel::QELabel (QWidget * *parent* = 0)

Create without a variable. Use `setVariableNameProperty()` and `setSubstitutionsProperty()` to define a variable and, optionally, macro substitutions later.

9.81.3.2 QELabel::QELabel (const QString & *variableName*, QWidget * *parent* = 0)

Create with a variable. A connection is automatically established. If macro substitutions are required, create without a variable and set the variable and macro substitutions after creation.

9.81.4 Member Function Documentation

9.81.4.1 void QELabel::dbValueChanged (const QString & *out*) [signal]

Sent when the widget is updated following a data change Can be used to pass on EPICS data (as presented in this widget) to other widgets. For example a QList widget could log updates from this widget.

9.81.5 Property Documentation

9.81.5.1 `bool QELabel::addUnits` [read, write]

If true (default), add engineering units supplied with the data.

9.81.5.2 `bool QELabel::allowDrop` [read, write]

Allow drag/drops operations to this widget. Default is false. Any dropped text will be used as a new variable name.

Reimplemented from [QEDragDrop](#).

9.81.5.3 `ArrayActions QELabel::arrayAction` [read, write]

Text formatting option for array data. Default is ASCII. Options are:

- ASCII - treat array as a single text string. For example an array of three characters 'a' 'b' 'c' will be formatted as 'abc'.
- APPEND - treat array as an array of numbers and format a string containing them all with a space between each. For example, an array of three numbers 10, 11 and 12 will be formatted as '10 11 12'.
- INDEX - Extract a single item from the array. The item is then formatted as any other non array data would be. The item selected is determined by the `arrayIndex` property. For example, if `arrayIndex` property is 1, an array of three numbers 10, 11 and 12 will be formatted as '11'.

9.81.5.4 `bool QELabel::displayAlarmState` [read, write]

If set (default) widget will indicate the alarm state of any variable data is displaying. Typically the background colour is set to indicate the alarm state. Note, this property is included in the set of standard properties as it applies to most widgets. It will do nothing for widgets that don't display data.

Reimplemented from [standardProperties](#).

9.81.5.5 `Formats QELabel::format` [read, write]

Format to apply to data. Default is 'Default' in which case the data type supplied with the data determines how the data is formatted. For all other options, an attempt is made to format the data as requested (whatever its native form).

9.81.5.6 unsigned QELabel::int [read, write]

Set the ID used by the message filtering system. Default is zero. Widgets or applications that use messages from the framework have the option of filtering on this ID. For example, by using a unique message source ID a [QELog](#) widget may be set up to only log messages from a select set of widgets.

Base used for when formatting integers. Default is 10 (duh!)

Index used to select a single item of data for formatting from an array of data. Default is 0. Only used when the `arrayAction` property is `INDEX`. Refer to the `arrayAction` property for more details.

9.81.5.7 bool QELabel::leadingZero [read, write]

If true (default), always add a leading zero when formatting numbers.

9.81.5.8 QString QELabel::localEnumeration [read, write]

An enumeration list used to data values. Used only when the formatting option is 'local enumeration'. Value is converted to an integer and used to select a string from this list.

Format is:

```
[[<|<=|=|!=|>|=|>]value1|*]: string1 , [[<|<=|=|!=|>|=|>]value2|*]: string2 , [[<|<=|=|!=|>|=|>]value3|*]: string3 , ...
```

Where: < Less than <= Less than or equal = Equal (default if no operator specified)
 >= Greather than or equal > Greater than Always match (used to specify default text)

Values may be numeric or textual Values do not have to be in any order, but first match wins Values may be quoted Strings may be quoted Consecutive values do not have to be present. Operator is assumed to be equality if not present. White space is ignored except within quoted strings.

may be included in a string to indicate a line break

Examples are:

```
0:Off,1:On 0 : "Pump Running", 1 : "Pump not running" 0:"", 1:"Warning!\nAlarm"
<2:"Value is less than two", =2:"Value is equal to two", >2:"Value is grater than 2"
3:"Beamline Available", *:"" "Pump Off": "OH NO!, the pump is OFF!", "Pump On": "It's OK, the pump is on"
```

The data value is converted to a string if no enumeration for that value is available. For example, if the local enumeration is '0:off,1:on', and a value of 10 is processed, the text generated is '10'. If a blank string is required, this should be explicit. for example, '0:off,1:on,10: ""'

A range of numbers can be covered by a pair of values as in the following example:
 >=4:"Between 4 and 8", <=8:"Between 4 and 8"

9.81.5.9 Notations QELabel::notation [read, write]

Notation used for numerical formatting. Default is fixed.

9.81.5.10 QPixmap QELabel::pixmap0 [read, write]

Pixmap displayed when updateOption property is 'Picture' and data is interpreted as 0.

9.81.5.11 QPixmap QELabel::pixmap1 [read, write]

Pixmap displayed when updateOption property is 'Picture' and data is interpreted as 1.

9.81.5.12 QPixmap QELabel::pixmap2 [read, write]

Pixmap displayed when updateOption property is 'Picture' and data is interpreted as 2.

9.81.5.13 QPixmap QELabel::pixmap3 [read, write]

Pixmap displayed when updateOption property is 'Picture' and data is interpreted as 3.

9.81.5.14 QPixmap QELabel::pixmap4 [read, write]

Pixmap displayed when updateOption property is 'Picture' and data is interpreted as 4.

9.81.5.15 QPixmap QELabel::pixmap5 [read, write]

Pixmap displayed when updateOption property is 'Picture' and data is interpreted as 5.

9.81.5.16 QPixmap QELabel::pixmap6 [read, write]

Pixmap displayed when updateOption property is 'Picture' and data is interpreted as 6.

9.81.5.17 QPixmap QELabel::pixmap7 [read, write]

Pixmap displayed when updateOption property is 'Picture' and data is interpreted as 7.

9.81.5.18 `int QELabel::precision` [read, write]

Precision used when formatting floating point numbers. The default is 4. This is only used if `useDbPrecision` is false.

9.81.5.19 `bool QELabel::trailingZeros` [read, write]

If true (default), always remove any trailing zeros when formatting numbers.

9.81.5.20 `UpdateOptions QELabel::updateOption` [read, write]

Determines if data updates the label text, or the label pixmap. For both options all normal string formatting is applied. If Text, the formatted text is simply presented as the label text. If Picture, the FORMATTED text is then interpreted as an integer and used to select one of the pixmaps specified by properties `pixmap0` through to `pixmap7`.

9.81.5.21 `bool QELabel::useDbPrecision` [read, write]

If true (default), format floating point numbers using the precision supplied with the data. If false, the precision property is used.

9.81.5.22 `UserLevels QELabel::userLevelEnabled` [read, write]

Lowest user level at which the widget is enabled. Default is 'User'. Used when designing GUIs that allow access to more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through `setUserLevel()`. Widgets that are always accessible should be visible at 'User'. Widgets that are only accessible to scientists managing the facility should be visible at 'Scientist'. Widgets that are only accessible to engineers maintaining the facility should be visible at 'Engineer'.

9.81.5.23 `QString QELabel::userLevelEngineerStyle` [read, write]

Style Sheet string to be applied when the widget is displayed in 'Engineer' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the `styleManager` class. Refer to the `styleManager` class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.81.5.24 `QString QELabel::userLevelScientistStyle` [read, write]

Style Sheet string to be applied when the widget is displayed in 'Scientist' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the `styleManager`

class. Refer to the `styleManager` class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.81.5.25 `QString QELabel::userLevelUserStyle` [read, write]

Style Sheet string to be applied when the widget is displayed in 'User' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the `styleManager` class. Refer to the `styleManager` class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.81.5.26 `UserLevels QELabel::userLevelVisibility` [read, write]

Lowest user level at which the widget is visible. Default is 'User'. Used when designing GUIs that display more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through `setUserLevel()` Widgets that are always visible should be visible at 'User'. Widgets that are only used by scientists managing the facility should be visible at 'Scientist'. Widgets that are only used by engineers maintaining the facility should be visible at 'Engineer'.

9.81.5.27 `QString QELabel::variable` [read, write]

EPICS variable name (CA PV)

9.81.5.28 `bool QELabel::variableAsToolTip` [read, write]

Use the variable as the tool tip. Default is true. Tool tip property will be overwritten by the variable name.

Reimplemented from [QEToolTip](#).

9.81.5.29 `QString QELabel::variableSubstitutions` [read, write]

Macro substitutions. The default is no substitutions. The format is NAME1=VALUE1[, NAME2=VALUE2... Values may be quoted strings. For example, 'PUMP=PMP3, NAME = "My Pump"' These substitutions are applied to variable names for all QE widgets. In some widgets are also used for other purposes.

9.81.5.30 `bool QELabel::visible` [read, write]


Display the widget. Default is true. Setting this property false is usefull if widget is only used to provide a signal - for example, when supplying data to a [QELink](#) widget. Note, when false the widget will still be visible in Qt Designer.

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QELabel/QELabel.h
- /tmp/epicsqt/trunk/framework/widgets/QELabel/QELabel.cpp

9.82 QLEdit Class Reference

Inheritance diagram for QLEdit:

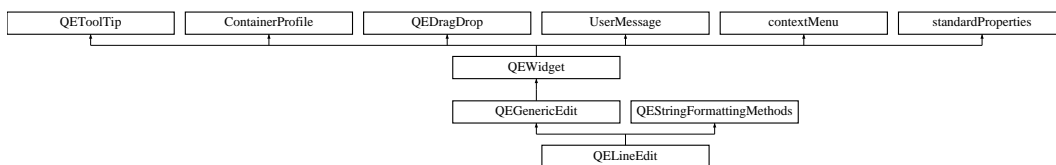

Public Types

- enum [Formats](#) {
[Default](#) = QStringFormatting::FORMAT_DEFAULT, [Floating](#) = QStringFormatting::FORMAT_FLOATING, [Integer](#) = QStringFormatting::FORMAT_INTEGER, [UnsignedInteger](#) = QStringFormatting::FORMAT_UNSIGNEDINTEGER,
[Time](#) = QStringFormatting::FORMAT_TIME, [LocalEnumeration](#) = QStringFormatting::FORMAT_LOCAL_ENUMERATE }
- enum [Notations](#) { [Fixed](#) = QStringFormatting::NOTATION_FIXED, [Scientific](#) = QStringFormatting::NOTATION_SCIENTIFIC, [Automatic](#) = QStringFormatting::NOTATION_AUTOMATIC }
- enum [ArrayActions](#) { [Append](#) = QStringFormatting::APPEND, [Ascii](#) = QStringFormatting::ASCII, [Index](#) = QStringFormatting::INDEX }

Signals

- void [dbValueChanged](#) (const QString &out)
- void [userChange](#) (const QString &oldValue, const QString &newValue, const QString &lastValue)
Internal use only. Used by [QEConfiguredLayout](#) to be notified when one of its widgets has written something.
- void [requestResend](#) ()
Internal use only. Used when changing a property value to force a re-display to reflect the new property value.

Public Member Functions

- void [setFormatProperty](#) ([Formats](#) format)
Access function for [format](#) property - refer to [format](#) property for details.
- [Formats](#) [getFormatProperty](#) ()
Access function for [format](#) property - refer to [format](#) property for details.
- void [setNotationProperty](#) ([Notations](#) notation)
Access function for [notation](#) property - refer to [notation](#) property for details.
- [Notations](#) [getNotationProperty](#) ()
Access function for [notation](#) property - refer to [notation](#) property for details.
- void [setArrayActionProperty](#) ([ArrayActions](#) arrayAction)
Access function for [arrayAction](#) property - refer to [arrayAction](#) property for details.
- [ArrayActions](#) [getArrayActionProperty](#) ()
Access function for [arrayAction](#) property - refer to [arrayAction](#) property for details.
- [QELineEdit](#) (QWidget *parent=0)
- [QELineEdit](#) (const QString &variableName, QWidget *parent=0)

Properties

- int [precision](#)
- bool [useDbPrecision](#)
- bool [leadingZero](#)
- bool [trailingZeros](#)
- bool [addUnits](#)
- QString [localEnumeration](#)
- [Formats](#) [format](#)
- unsigned int
- [Notations](#) [notation](#)
- [ArrayActions](#) [arrayAction](#)

9.82.1 Member Enumeration Documentation

9.82.1.1 enum QELineEdit::ArrayActions

User friendly enumerations for arrayAction property - refer to [QStringFormatting::arrayActions](#) for details.

Enumerator:

Append Refer to [QStringFormatting::APPEND](#) for details.

Ascii Refer to [QStringFormatting::ASCII](#) for details.

Index Refer to [QStringFormatting::INDEX](#) for details.

9.82.1.2 enum QLEdit::Formats

User friendly enumerations for format property - refer to [QStringFormatting::formats](#) for details.

Enumerator:

- Default** Format as best appropriate for the data type.
- Floating** Format as a floating point number.
- Integer** Format as an integer.
- UnsignedInteger** Format as an unsigned integer.
- Time** Format as a time.
- LocalEnumeration** Format as a selection from the [localEnumeration](#) property.

9.82.1.3 enum QLEdit::Notations

User friendly enumerations for notation property - refer to [QStringFormatting::notations](#) for details.

Enumerator:

- Fixed** Refer to [QStringFormatting::NOTATION_FIXED](#) for details.
- Scientific** Refer to [QStringFormatting::NOTATION_SCIENTIFIC](#) for details.
- Automatic** Refer to [QStringFormatting::NOTATION_AUTOMATIC](#) for details.

9.82.2 Constructor & Destructor Documentation

9.82.2.1 QLEdit::QLEdit (QWidget * parent = 0)

Create without a variable. Use `setVariableNameProperty()` and `setSubstitutionsProperty()` to define a variable and, optionally, macro substitutions later.

9.82.2.2 QLEdit::QLEdit (const QString & variableName, QWidget * parent = 0)

Create with a variable. A connection is automatically established. If macro substitutions are required, create without a variable and set the variable and macro substitutions after creation.

9.82.3 Member Function Documentation

9.82.3.1 void QLEdit::dbValueChanged (const QString & out) [signal]

Sent when the widget is updated following a data change Can be used to pass on EPICS data (as presented in this widget) to other widgets. For example a QList widget could log updates from this widget.

9.82.4 Property Documentation

9.82.4.1 `bool QLEdit::addUnits` [read, write]

If true (default), add engineering units supplied with the data.

9.82.4.2 `ArrayActions QLEdit::arrayAction` [read, write]

Text formatting option for array data. Default is ASCII. Options are:

- ASCII - treat array as a single text string. For example an array of three characters 'a' 'b' 'c' will be formatted as 'abc'.
- APPEND - treat array as an array of numbers and format a string containing them all with a space between each. For example, an array of three numbers 10, 11 and 12 will be formatted as '10 11 12'.
- INDEX - Extract a single item from the array. The item is then formatted as any other non array data would be. The item selected is determined by the `arrayIndex` property. For example, if `arrayIndex` property is 1, an array of three numbers 10, 11 and 12 will be formatted as '11'.

9.82.4.3 `Formats QLEdit::format` [read, write]

Format to apply to data. Default is 'Default' in which case the data type supplied with the data determines how the data is formatted. For all other options, an attempt is made to format the data as requested (whatever its native form).

9.82.4.4 `unsigned QLEdit::int` [read, write]

Base used for when formatting integers. Default is 10 (duh!)

Index used to select a single item of data for formatting from an array of data. Default is 0. Only used when the `arrayAction` property is INDEX. Refer to the `arrayAction` property for more details.

Reimplemented from [QEGenericEdit](#).

9.82.4.5 `bool QLEdit::leadingZero` [read, write]

If true (default), always add a leading zero when formatting numbers.

9.82.4.6 `QString QLEdit::localEnumeration` [read, write]

An enumeration list used to data values. Used only when the formatting option is 'local enumeration'. Value is converted to an integer and used to select a string from this list.

Format is:

```
[[<|<=|=|!=|>|=|>]value1|*]: string1, [[<|<=|=|!=|>|=|>]value2|*]: string2, [[<|<=|=|!=|>|=|>]value3|*]: string3, ...
```

Where: < Less than <= Less than or equal = Equal (default if no operator specified)
>= Greather than or equal > Greater than Always match (used to specify default text)

Values may be numeric or textual Values do not have to be in any order, but first match wins Values may be quoted Strings may be quoted Consecutive values do not have to be present. Operator is assumed to be equality if not present. White space is ignored except within quoted strings.

may be included in a string to indicate a line break

Examples are:

```
0:Off,1:On 0 : "Pump Running", 1 : "Pump not running" 0:"", 1:"Warning!\nAlarm"
<2:"Value is less than two", =2:"Value is equal to two", >2:"Value is grater than 2"
3:"Beamline Available", *: "" "Pump Off": "OH NO!, the pump is OFF!", "Pump On": "It's OK, the pump is on"
```

The data value is converted to a string if no enumeration for that value is available. For example, if the local enumeration is '0:off,1:on', and a value of 10 is processed, the text generated is '10'. If a blank string is required, this should be explicit. for example, '0:off,1:on,10: ""'

A range of numbers can be covered by a pair of values as in the following example:
>=4:"Between 4 and 8", <=8:"Between 4 and 8"

9.82.4.7 Notations QLEdit::notation [read, write]

Notation used for numerical formatting. Default is fixed.

9.82.4.8 int QLEdit::precision [read, write]

Precision used when formatting floating point numbers. The default is 4. This is only used if useDbPrecision is false.

9.82.4.9 bool QLEdit::trailingZeros [read, write]

If true (default), always remove any trailing zeros when formatting numbers.

9.82.4.10 bool QLEdit::useDbPrecision [read, write]

If true (default), format floating point numbers using the precision supplied with the data. If false, the precision property is used.

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QLEdit/QLEdit.h

- /tmp/epicsqt/trunk/framework/widgets/QELineEdit/QELineEdit.cpp

9.83 QELineEditManager Class Reference

Public Member Functions


- **QELineEditManager** (QObject *parent=0)
- bool **isContainer** () const
- bool **isInitialized** () const
- QIcon **icon** () const
- QString **group** () const
- QString **includeFile** () const
- QString **name** () const
- QString **toolTip** () const
- QString **whatsThis** () const
- QWidget * **createWidget** (QWidget *parent)
- void **initialize** (QDesignerFormEditorInterface *core)

The documentation for this class was generated from the following file:

- /tmp/epicsqt/trunk/framework/widgets/QELineEdit/QELineEditManager.h

9.84 QELink Class Reference

Inheritance diagram for QELink:

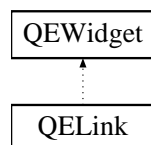

Public Types

- enum **conditions** {
CONDITION_EQ, **CONDITION_NE**, **CONDITION_GT**, **CONDITION_GE**,
CONDITION_LT, **CONDITION_LE** }
- enum **ConditionNames** {
Equal = QELink::CONDITION_EQ, **NotEqual** = QELink::CONDITION_NE, **GreaterThan**
= QELink::CONDITION_GT, **GreaterThanOrEqual** = QELink::CONDITION_GE,
LessThan = QELink::CONDITION_LT, **LessThanOrEqual** = QELink::CONDITION_
LE }

Public Slots

- void **in** (const bool &in)
- void **in** (const qlonglong &in)
- void **in** (const double &in)
- void **in** (const QString &in)
- void **autoFillBackground** (const bool &enable)

Signals

- void **out** (const bool &out)
- void **out** (const qlonglong &out)
- void **out** (const double &out)
- void **out** (const QString &out)

Public Member Functions

- **QELink** (QWidget *parent=0)
- void **setCondition** (conditions conditionIn)
- conditions **getCondition** ()
- void **setComparisonValue** (QString comparisonValue)
- QString **getComparisonValue** ()
- void **setSignalTrue** (bool signalTrue)
- bool **getSignalTrue** ()
- void **setSignalFalse** (bool signalFalse)
- bool **getSignalFalse** ()
- void **setOutTrueValue** (QString outTrueValue)
- QString **getOutTrueValue** ()
- void **setOutFalseValue** (QString outFalseValue)
- QString **getOutFalseValue** ()
- void **setRunVisible** (bool visibleIn)
- bool **getRunVisible** ()
- void **setConditionProperty** (ConditionNames condition)
- ConditionNames **getConditionProperty** ()

Protected Attributes

- conditions **condition**
- QVariant **comparisonValue**
- bool **signalTrue**
- bool **signalFalse**
- QVariant **outTrueValue**
- QVariant **outFalseValue**
- bool **visible**

Properties

- ConditionNames **condition**
- QString **comparisonValue**
- QString **outTrueValue**
- QString **outFalseValue**
- bool **runVisible**

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QELink/QELink.h
- /tmp/epicsqt/trunk/framework/widgets/QELink/QELink.cpp

9.85 QELocalEnumeration Class Reference

```
#include <QELocalEnumeration.h>
```

Classes

- class **localEnumerationItem**

Public Member Functions

- [QELocalEnumeration](#) ()
- [QELocalEnumeration](#) (const QString &localEnumeration)
- void [setLocalEnumeration](#) (const QString &localEnumeration)
- QString [getLocalEnumeration](#) ()
- bool [isDefined](#) ()
- QString [valueToText](#) (const QVariant &value, bool &match)
- QVariant [textToValue](#) (const QString &text, bool &ok)
- int [textToInt](#) (const QString &text, bool &ok)
- double [textToDouble](#) (const QString &text, bool &ok)

9.85.1 Detailed Description

This class allows a user defined two-way value to enumeration map. The map is define using a single string, typically a widget property string. This may then be used to replace the enumeration values provided by EPICS and/or provide an enueration set of more than 16 values. See [setLocalEnumeration\(\)](#) for the use of 'localEnumeration'.

This functionality that this class provided was formerly embedded within [QESTringFormatting](#).

9.85.2 Constructor & Destructor Documentation

9.85.2.1 QELocalEnumeration::QELocalEnumeration ()

Constructors

9.85.2.2 QELocalEnumeration::QELocalEnumeration (const QString & *localEnumeration*)

Constructor with localEnumeration

9.85.3 Member Function Documentation

9.85.3.1 QString QELocalEnumeration::getLocalEnumeration ()

Get the local enumeration strings. See [setLocalEnumeration\(\)](#) for the use of 'localEnumeration'.

9.85.3.2 bool QELocalEnumeration::isDefined ()

Evaluates: `getLocalEnumeration.count() > 0`

9.85.3.3 void QELocalEnumeration::setLocalEnumeration (const QString & *localEnumeration*)

Parse the local enumeration string.

Format is:

```
[[<|<=|=|!=|>|=|>]value1[*] : string1 , [[<|<=|=|!=|>|=|>]value2[*] : string2 , [[<|<=|=|!=|>|=|>]value3[*] : string3 , ...
```

Where: < Less than <= Less than or equal = Equal (default if no operator specified)
>= Greather than or equal > Greater than Always match (used to specify default text)

Values may be numeric or textual Values do not have to be in any order, but first match wins Values may be quoted Strings may be quoted Consecutive values do not have to be present. Operator is assumed to be equality if not present. White space is ignored except within quoted strings.

may be included in a string to indicate a line break

Examples are:

```
0:Off,1:On 0 : "Pump Running", 1 : "Pump not running" 0:"", 1:"Warning!\nAlarm"
<2:"Value is less than two", =2:"Value is equal to two", >2:"Value is grater than 2"
3:"Beamline Available", *:"" "Pump Off": "OH NO!, the pump is OFF!","Pump On": "It's OK, the pump is on"
```

The data value is converted to a string if no enumeration for that value is available. For example, if the local enumeration is '0:off,1:on', and a value of 10 is processed, the

text generated is '10'. If a blank string is required, this should be explicit. for example, '0:off,1:on,10:'"

A range of numbers can be covered by a pair of values as in the following example:
`>=4:"Between 4 and 8", <=8:"Between 4 and 8"`

Will completely re-initialises the object.

9.85.3.4 double QELocalEnumeration::textToDouble (const QString & text, bool & ok)

Generate a double value given a string, using formatting defined within this class. If the value can be formatted the formatted value is returned and 'ok' is true. If the value can't be formatted then 0.0 is returned and 'ok' is false.

9.85.3.5 int QELocalEnumeration::textToInt (const QString & text, bool & ok)

Generate an integer value given a string, using formatting defined within this class. If the value can be formatted the formatted value is returned and 'ok' is true. If the value can't be formatted then 0 is returned and 'ok' is false.

9.85.3.6 QVariant QELocalEnumeration::textToValue (const QString & text, bool & ok)

Generate a value given a string, using formatting defined within this class. If the value can be formatted the formatted value is returned and 'ok' is true. If the value can't be formatted an error string is returned and 'ok' is false

9.85.3.7 QString QELocalEnumeration::valueToText (const QVariant & value, bool & match)


Format a variant value using local enumeration list. If the value is numeric, then the value is compared to the numeric interpretation of the enumeration values, if the value is textual, then the value is compared to the textual enumeration values.

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/data/include/QELocalEnumeration.h
- /tmp/epicsqt/trunk/framework/data/src/QELocalEnumeration.cpp

9.86 QELog Class Reference

Inheritance diagram for QELog:

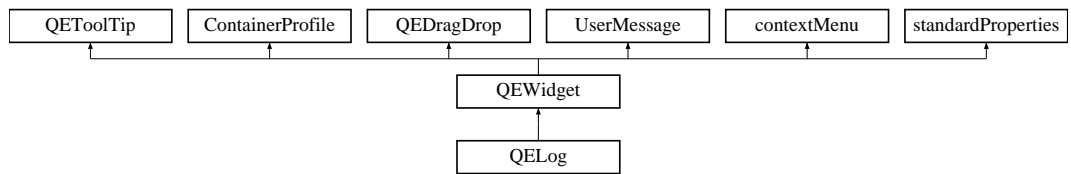

Public Types

- enum **detailsLayoutProperty** { **Top** = TOP, **Bottom** = BOTTOM, **Left** = LEFT, **Right** = RIGHT }
- enum **MessageFilterOptions** { **Any** = UserMessage::MESSAGE_FILTER_ANY, **Match** = UserMessage::MESSAGE_FILTER_MATCH, **None** = UserMessage::MESSAGE_FILTER_NONE }

Public Member Functions

- **QLog** (QWidget *pParent=0)
- void **setShowColumnTime** (bool pValue)
- bool **getShowColumnTime** ()
- void **setShowColumnType** (bool pValue)
- bool **getShowColumnType** ()
- void **setShowColumnMessage** (bool pValue)
- bool **getShowColumnMessage** ()
- void **setShowMessageFilter** (bool pValue)
- bool **getShowMessageFilter** ()
- void **setShowClear** (bool pValue)
- bool **getShowClear** ()
- void **setShowSave** (bool pValue)
- bool **getShowSave** ()
- void **setDetailsLayout** (int pValue)
- int **getDetailsLayout** ()
- void **setScrollToBottom** (bool pValue)
- bool **getScrollToBottom** ()
- void **setInfoColor** (QColor pValue)
- QColor **getInfoColor** ()
- void **setWarningColor** (QColor pValue)
- QColor **getWarningColor** ()
- void **setErrorColor** (QColor pValue)
- QColor **getErrorColor** ()
- void **clearLog** ()
- void **addLog** (int pType, QString pMessage)
- void **refreshLog** ()
- void **setDetailsLayoutProperty** (detailsLayoutProperty pDetailsLayout)
- detailsLayoutProperty **getDetailsLayoutProperty** ()
- MessageFilterOptions **getMessageFormFilter** ()

- void **setMessageFormFilter** (MessageFilterOptions messageFormFilter)
- MessageFilterOptions **getMessageSourceFilter** ()
- void **setMessageSourceFilter** (MessageFilterOptions messageSourceFilter)

Protected Attributes

- [_QTableWidgetLog](#) * **qTableWidgetLog**
- QCheckBox * **qCheckBoxInfoMessage**
- QCheckBox * **qCheckBoxWarningMessage**
- QCheckBox * **qCheckBoxErrorMessage**
- QPushButton * **qPushButtonClear**
- QPushButton * **qPushButtonSave**
- QColor **qColorInfo**
- QColor **qColorWarning**
- QColor **qColorError**
- bool **scrollToBottom**
- int **detailsLayout**

Properties


- bool **showColumnTime**
- bool **showColumnType**
- bool **showColumnMessage**
- bool **showMessageFilter**
- bool **showClear**
- bool **showSave**
- detailsLayoutProperty **detailsLayout**
- QColor **infoColor**
- QColor **warningColor**
- QColor **errorColor**
- MessageFilterOptions **messageFormFilter**
- MessageFilterOptions **messageSourceFilter**
- unsigned int

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QELog/QELog.h
- /tmp/epicsqt/trunk/framework/widgets/QELog/QELog.cpp

9.87 QELogin Class Reference

Inheritance diagram for QELogin:

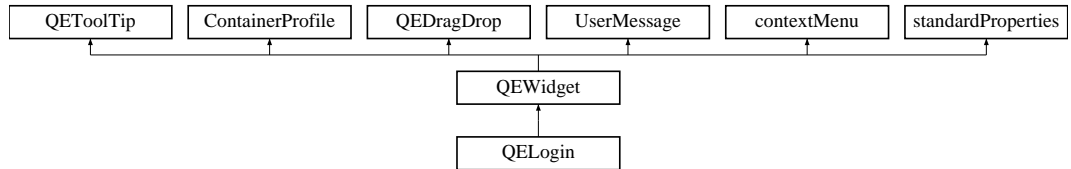

Signals

- void **login** ()

Public Member Functions

- **QELogin** (QWidget *pParent=0)
- bool **login** ([userLevelTypes::userLevels](#) level, QString password)
- QString **getPriorityUserPassword** ()
- QString **getPriorityScientistPassword** ()
- QString **getPriorityEngineerPassword** ()
- void **setUserPassword** (QString pValue)
- QString **getUserPassword** ()
- void **setScientistPassword** (QString pValue)
- QString **getScientistPassword** ()
- void **setEngineerPassword** (QString pValue)
- QString **getEngineerPassword** ()
- void **setCompactStyle** (bool compactStyle)
- bool **getCompactStyle** ()
- void **setStatusOnly** (bool statusOnlyIn)
- bool **getStatusOnly** ()
- QString **getUserTypeName** ([userLevelTypes::userLevels](#) type)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QELogin/QELogin.h
- /tmp/epicsqt/trunk/framework/widgets/QELogin/QELogin.cpp

9.88 QELoginDialog Class Reference

Public Member Functions

- **QELoginDialog** ([QELogin](#) *ownerIn)

The documentation for this class was generated from the following files:


- /tmp/epicsqt/trunk/framework/widgets/QELogin/QELogin.h
- /tmp/epicsqt/trunk/framework/widgets/QELogin/QELogin.cpp

9.89 QENumericEdit Class Reference

The [QENumericEdit](#) class This class is similar to [QELineEdit](#) (both of which are derived from [QLineEdit](#)). However this class is tailored specifically for editing numerical values.

```
#include <QENumericEdit.h>
```

Inheritance diagram for QENumericEdit:

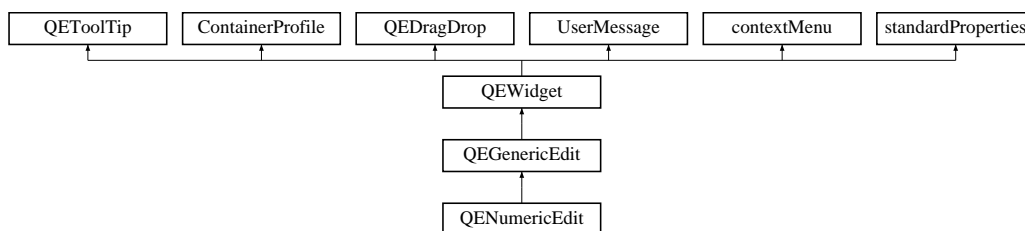

Public Types

- enum [Radices](#) { **Decimal** = 0, **Hexadecimal**, **Octal**, **Binary** }
Specify radix, default is Decimal.
- enum [Separators](#) { **None** = 0, **Comma**, **Underscore**, **Space** }
Specify digit 'thousands' separator character, default is none.

Signals

- void [dbValueChanged](#) (const double &out)

Public Member Functions

- [QENumericEdit](#) (QWidget *parent=0)
- [QENumericEdit](#) (const QString &variableName, QWidget *parent=0)
- virtual [~QENumericEdit](#) ()
Destruction.
- double [getNumericValue](#) ()

Protected Member Functions

- void **setAutoScale** (const bool value)
- bool **getAutoScale** ()
- void **setPropertyPrecision** (const int value)
- int **getPropertyPrecision** ()
- void **setPropertyLeadingZeros** (const int value)
- int **getPropertyLeadingZeros** ()
- void **setPropertyMinimum** (const double value)
- double **getPropertyMinimum** ()
- void **setPropertyMaximum** (const double value)
- double **getPropertyMaximum** ()
- void **setAddUnits** (bool addUnits)
- bool **getAddUnits** ()
- void **setRadix** (const [Radices](#) value)
- [Radices](#) **getRadix** ()
- void **setSeparator** (const [Separators](#) value)
- [Separators](#) **getSeparator** ()
- void **keyPressEvent** (QKeyEvent *event)
- void **focusInEvent** (QFocusEvent *event)
- void **mouseReleaseEvent** (QMouseEvent *event)
- void **establishConnection** (unsigned int variableIndex)
- [qcaobject::QCaObject](#) * **createQcaltem** (unsigned int variableIndex)
- int **getPrecision** ()
- int **getLeadingZeros** ()
- double **getMinimum** ()
- double **getMaximum** ()
- int **maximumSignificance** ()
- int **getRadixValue** ()
- void **setValue** (const QVariant &value)
Sets the undelying QLineEdit widget to the given value.
- QVariant **getValue** ()
Gets the undelying value.
- bool **writeData** (const QVariant &value, QString &message)
Write the data to the channel.

Protected Attributes

- [QEFloatingFormatting](#) **floatingFormatting**

Properties

- bool [autoScale](#)
- int [precision](#)
- int [leadingZeros](#)
- double [minimum](#)
- double [maximum](#)
- bool [addUnits](#)
- [Radices](#) **radix**
- [Separators](#) **separator**

Friends

- class **NumericValidator**

9.89.1 Detailed Description

The [QENumericEdit](#) class This class is similar to [QELineEdit](#) (both of which are derived from [QLineEdit](#)). However this class is tailored specficially for editing numerical values.

Note: this class based on thumb_wheel_edits.pas by same author.

9.89.2 Constructor & Destructor Documentation

9.89.2.1 QENumericEdit::QENumericEdit (QWidget * *parent* = 0)

Create without a variable. Use [setVariableNameProperty\(\)](#) and [setSubstitutionsProperty\(\)](#) to define a variable and, optionally, macro substitutions later.

9.89.2.2 QENumericEdit::QENumericEdit (const QString & *variableName*, QWidget * *parent* = 0)

Create with a variable. A connection is automatically established. If macro substitutions are required, create without a variable and set the variable and macro substitutions after creation.

9.89.3 Member Function Documentation

9.89.3.1 void QENumericEdit::dbValueChanged (const double & *out*) [signal]

Sent when the widget is updated following a data change Can be used to pass on EPICS data (as presented in this widget) to other widgets. For example a QList widget could log updates from this widget.

9.89.4 Property Documentation

9.89.4.1 `bool QNumericEdit::addUnits` [read, write]

If true (default), add engineering units supplied with the data.

9.89.4.2 `bool QNumericEdit::autoScale` [read, write]

If true (default), display and editing of numbers using the precision, and control limits supplied with the data. If false, the precision, leadingZeros, minimum and maximum properties are used.

9.89.4.3 `int QNumericEdit::leadingZeros` [read, write]

Specifies the number of leading zeros. This is only used if autoScale is false. Strictly speaking, this should be an unsigned int, but designer properties editor much 'nicer' with integers.

9.89.4.4 `double QNumericEdit::maximum` [read, write]

Specifies the maximum allowed value. This is only used if autoScale is false.

9.89.4.5 `double QNumericEdit::minimum` [read, write]

Specifies the minimum allowed value. This is only used if autoScale is false.

9.89.4.6 `int QNumericEdit::precision` [read, write]

Precision used for the display and editing of numbers. The default is 4. This is only used if autoScale is false. Strictly speaking, this should be an unsigned int, but designer properties editor much 'nicer' with integers.

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QLineEdit/QNumericEdit.h
- /tmp/epicsqt/trunk/framework/widgets/QLineEdit/QNumericEdit.cpp

9.90 QNumericEditManager Class Reference

Public Member Functions

- **QNumericEditManager** (QObject *parent=0)
- **bool isContainer** () const
- **bool isInitialized** () const


- QIcon **icon** () const
- QString **group** () const
- QString **includeFile** () const
- QString **name** () const
- QString **toolTip** () const
- QString **whatsThis** () const
- QWidget * **createWidget** (QWidget *parent)
- void **initialize** (QDesignerFormEditorInterface *core)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QELineEdit/QENumericEditManager.h
- /tmp/epicsqt/trunk/framework/widgets/QELineEdit/QENumericEditManager.cpp

9.91 QEPeiodic Class Reference

Inheritance diagram for QEPeiodic:

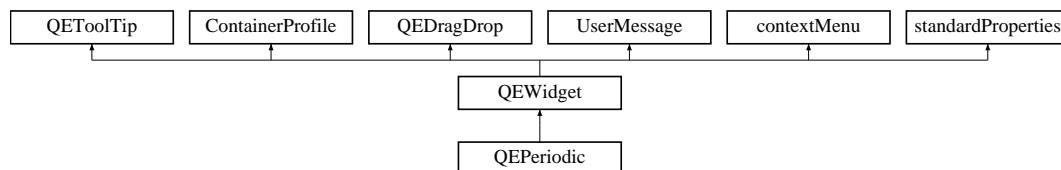

Classes

- struct [elementInfoStruct](#)
- struct [userInfoStructArray](#)

Public Types

- enum **variableTypes** {
VARIABLE_TYPE_NUMBER, **VARIABLE_TYPE_ATOMIC_WEIGHT**, **VARIABLE_TYPE_MELTING_POINT**, **VARIABLE_TYPE_BOILING_POINT**,
VARIABLE_TYPE_DENSITY, **VARIABLE_TYPE_GROUP**, **VARIABLE_TYPE_IONIZATION_ENERGY**, **VARIABLE_TYPE_USER_VALUE_1**,
VARIABLE_TYPE_USER_VALUE_2 }
- enum **presentationOptions** { **PRESENTATION_BUTTON_AND_LABEL**, **PRESENTATION_BUTTON_ONLY**, **PRESENTATION_LABEL_ONLY** }
- enum **UserLevels** { **User** = userLevelTypes::USERLEVEL_USER, **Scientist** = userLevelTypes::USERLEVEL_SCIENTIST, **Engineer** = userLevelTypes::USERLEVEL_ENGINEER }

- enum **PresentationOptions** { **buttonAndLabel** = QEPeiodic::PRESENTATION_BUTTON_AND_LABEL, **buttonOnly** = QEPeiodic::PRESENTATION_BUTTON_ONLY, **labelOnly** = QEPeiodic::PRESENTATION_LABEL_ONLY }
- enum **VariableTypes** {
Number = QEPeiodic::VARIABLE_TYPE_NUMBER, **atomicWeight** = QEPeiodic::VARIABLE_TYPE_ATOMIC_WEIGHT, **meltingPoint** = QEPeiodic::VARIABLE_TYPE_MELTING_POINT, **boilingPoint** = QEPeiodic::VARIABLE_TYPE_BOILING_POINT,
density = QEPeiodic::VARIABLE_TYPE_DENSITY, **group** = QEPeiodic::VARIABLE_TYPE_GROUP, **ionizationEnergy** = QEPeiodic::VARIABLE_TYPE_IONIZATION_ENERGY, **userValue1** = QEPeiodic::VARIABLE_TYPE_USER_VALUE_1,
userValue2 = QEPeiodic::VARIABLE_TYPE_USER_VALUE_2 }

Signals

- void [dbValueChanged](#) (const double &out)
- void [dbElementChanged](#) (const QString &out)
- void [requestResend](#) ()
Internal use only. Used when changing a property value to force a re-display to reflect the new property value.

Public Member Functions

- **QEPeiodic** (QWidget *parent=0)
- **QEPeiodic** (const QString &variableName, QWidget *parent=0)
- void **setSubscribe** (bool subscribe)
- bool **getSubscribe** ()
- void **setPresentationOption** (presentationOptions presentationOptionIn)
- presentationOptions **getPresentationOption** ()
- void **setVariableType1** (variableTypes variableType1In)
- variableTypes **getVariableType1** ()
- void **setVariableType2** (variableTypes variableType2In)
- variableTypes **getVariableType2** ()
- void **setVariableTolerance1** (double variableTolerance1In)
- double **getVariableTolerance1** ()
- void **setVariableTolerance2** (double variableTolerance2In)
- double **getVariableTolerance2** ()
- void **setUserInfo** (QString userInfo)
- QString **getUserInfo** ()
- [UserLevels](#) **getUserLevelVisibilityProperty** ()
Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.
- void **setUserLevelVisibilityProperty** ([UserLevels](#) level)
Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.
- [UserLevels](#) **getUserLevelEnabledProperty** ()

Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.

- void [setUserLevelEnabledProperty](#) (UserLevels level)

Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.

- void **setPresentationOptionProperty** (PresentationOptions presentationOption)
- PresentationOptions **getPresentationOptionProperty** ()
- void **setVariableType1Property** (VariableTypes variableType)
- void **setVariableType2Property** (VariableTypes variableType)
- VariableTypes **getVariableType1Property** ()
- VariableTypes **getVariableType2Property** ()

Public Attributes

- [userInfoStruct](#) **userInfo** [NUM_ELEMENTS]

Static Public Attributes

- static [elementInfoStruct](#) **elementInfo** [NUM_ELEMENTS]

Protected Member Functions

- void **establishConnection** (unsigned int variableIndex)
- void **dragEnterEvent** (QDragEnterEvent *event)
- void **dropEvent** (QDropEvent *event)
- void **mousePressEvent** (QMouseEvent *event)
- void **setDrop** (QVariant drop)
- QVariant **getDrop** ()
- QString **copyVariable** ()
- QVariant **copyData** ()
- void **paste** (QVariant s)

Protected Attributes

- [QEFloatingFormatting](#) **floatingFormatting**
- bool **localEnabled**
- bool [allowDrop](#)
- variableTypes **variableType1**
- variableTypes **variableType2**
- double **variableTolerance1**
- double **variableTolerance2**

Properties

- QString [writeButtonVariable1](#)
- QString [writeButtonVariable2](#)
- QString [readbackLabelVariable1](#)
- QString [readbackLabelVariable2](#)
- QString [variableSubstitutions](#)
- bool [subscribe](#)
- bool [variableAsToolTip](#)
- bool [visible](#)
- unsigned [int](#)
- QString [userLevelUserStyle](#)
- QString [userLevelScientistStyle](#)
- QString [userLevelEngineerStyle](#)
- [UserLevels](#) [userLevelVisibility](#)
- [UserLevels](#) [userLevelEnabled](#)
- bool [displayAlarmState](#)
- PresentationOptions **presentationOption**
- VariableTypes **variableType1**
- VariableTypes **variableType2**
- QString **userInfo**

9.91.1 Member Enumeration Documentation

9.91.1.1 enum QEPeiodic::UserLevels

User friendly enumerations for [userLevelVisibility](#) and [userLevelEnabled](#) properties - refer to [userLevelVisibility](#) and [userLevelEnabled](#) properties and [userLevel](#) enumeration for details.

Enumerator:

User Refer to USERLEVEL_USER for details.

Scientist Refer to USERLEVEL_SCIENTIST for details.

Engineer Refer to USERLEVEL_ENGINEER for details.

9.91.2 Member Function Documentation

9.91.2.1 void QEPeiodic::dbElementChanged (const QString & out) [signal]

Sent when the widget is updated following a data change Can be used to pass on EPICS data (as presented in this widget) to other widgets. For example a QList widget could log updates from this widget.

9.91.2.2 void QEPeriodic::dbValueChanged (const double & out) [signal]

Sent when the widget is updated following a data change. Can be used to pass on EPICS data (as presented in this widget) to other widgets. For example a QList widget could log updates from this widget.

9.91.3 Member Data Documentation

9.91.3.1 bool QEPeriodic::allowDrop [read, write, protected]

Allow drag/drops operations to this widget. Default is false. Any dropped text will be used as a new variable name.

Reimplemented from [QEDragDrop](#).

9.91.4 Property Documentation

9.91.4.1 bool QEPeriodic::displayAlarmState [read, write]

If set (default) widget will indicate the alarm state of any variable data is displaying. Typically the background colour is set to indicate the alarm state. Note, this property is included in the set of standard properties as it applies to most widgets. It will do nothing for widgets that don't display data.

Reimplemented from [standardProperties](#).

9.91.4.2 unsigned QEPeriodic::int [read, write]

Set the ID used by the message filtering system. Default is zero. Widgets or applications that use messages from the framework have the option of filtering on this ID. For example, by using a unique message source ID a [QELog](#) widget may be set up to only log messages from a select set of widgets.

9.91.4.3 QString QEPeriodic::readbackLabelVariable1 [read, write]

EPICS variable name (CA PV). This variable is used to read the value to the first of two positioners to determine which (if any) element is currently selected.

9.91.4.4 QString QEPeriodic::readbackLabelVariable2 [read, write]

EPICS variable name (CA PV). This variable is used to read the value to the second of two positioners to determine which (if any) element is currently selected.

9.91.4.5 `bool QEPeiodic::subscribe` [read, write]

Sets if this widget subscribes for data updates and displays current data. Default is 'true' (subscribes for and displays data updates)

Reimplemented from [QEWidget](#).

9.91.4.6 `UserLevels QEPeiodic::userLevelEnabled` [read, write]

Lowest user level at which the widget is enabled. Default is 'User'. Used when designing GUIs that allow access to more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through `setUserLevel()`. Widgets that are always accessible should be visible at 'User'. Widgets that are only accessible to scientists managing the facility should be visible at 'Scientist'. Widgets that are only accessible to engineers maintaining the facility should be visible at 'Engineer'.

9.91.4.7 `QString QEPeiodic::userLevelEngineerStyle` [read, write]

Style Sheet string to be applied when the widget is displayed in 'Engineer' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.91.4.8 `QString QEPeiodic::userLevelScientistStyle` [read, write]

Style Sheet string to be applied when the widget is displayed in 'Scientist' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.91.4.9 `QString QEPeiodic::userLevelUserStyle` [read, write]

Style Sheet string to be applied when the widget is displayed in 'User' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.91.4.10 UserLevels QEPeiodic::userLevelVisibility [read, write]

Lowest user level at which the widget is visible. Default is 'User'. Used when designing GUIs that display more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through setUserLevel(). Widgets that are always visible should be visible at 'User'. Widgets that are only used by scientists managing the facility should be visible at 'Scientist'. Widgets that are only used by engineers maintaining the facility should be visible at 'Engineer'.

9.91.4.11 bool QEPeiodic::variableAsToolTip [read, write]

Use the variable as the tool tip. Default is true. Tool tip property will be overwritten by the variable name.

Reimplemented from [QEToolTip](#).

9.91.4.12 QString QEPeiodic::variableSubstitutions [read, write]

Macro substitutions. The default is no substitutions. The format is NAME1=VALUE1[, NAME2=VALUE2... Values may be quoted strings. For example, 'SAMPLE=SAM1, NAME = "Ref foil"' These substitutions are applied to all the variable names.

9.91.4.13 bool QEPeiodic::visible [read, write]

Display the widget. Default is true. Setting this property false is usefull if widget is only used to provide a signal - for example, when supplying data to a [QELink](#) widget. Note, when false the widget will still be visible in Qt Designer.

9.91.4.14 QString QEPeiodic::writeButtonVariable1 [read, write]

EPICS variable name (CA PV). This variable is used to write a value to the first of two positioners that will position the select element.

9.91.4.15 QString QEPeiodic::writeButtonVariable2 [read, write]

EPICS variable name (CA PV). This variable is used to write a value to the second of two positioners that will position the select element.

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEPeiodic/QEPeiodic.h
- /tmp/epicsqt/trunk/framework/widgets/QEPeiodic/QEPeiodic.cpp

9.92 QEPeiodicComponentData Class Reference

Public Attributes

- unsigned int **variableIndex1**
- double **lastData1**
- bool **haveLastData1**
- unsigned int **variableIndex2**
- double **lastData2**
- bool **haveLastData2**

The documentation for this class was generated from the following file:

- /tmp/epicsqt/trunk/framework/widgets/QEPeriodic/QEPeriodic.h

9.93 QEPeriodicTaskMenu Class Reference

Public Member Functions

- **QEPeriodicTaskMenu** ([QEPeriodic](#) *periodic, QObject *parent)
- QAction * **preferredEditAction** () const
- QList< QAction * > **taskActions** () const

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEPeriodic/QEPeriodicTaskMenu.h
- /tmp/epicsqt/trunk/framework/widgets/QEPeriodic/QEPeriodicTaskMenuExtension.cpp

9.94 QEPeriodicTaskMenuFactory Class Reference

Public Member Functions

- **QEPeriodicTaskMenuFactory** (QExtensionManager *parent=0)

Protected Member Functions

- QObject * **createExtension** (QObject *object, const QString &iid, QObject *parent) const

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEPeriodic/QEPeriodicTaskMenu.h
- /tmp/epicsqt/trunk/framework/widgets/QEPeriodic/QEPeriodicTaskMenuExtension.cpp

9.95 QEpicsPV Class Reference

Public Slots

- const QVariant & **set** (QVariant value, int delay=-1)
- void **setPV** (const QString &_pvName="")

Signals

- void **connectionChanged** (bool connected)
- void **connected** ()
- void **disconnected** ()
- void **valueChanged** (const QVariant &value)
- void **valueUpdated** (const QVariant &value)
- void **valueInitd** (const QVariant &value)

Public Member Functions

- **QEpicsPV** (const QString &_pvName, QObject *parent=0)
- **QEpicsPV** (QObject *parent=0)
- const QVariant & **get** () const
- void **needUpdated** () const
- const QVariant & **getUpdated** (int delay=defaultDelay) const
- bool **isConnected** () const
- const QStringList & **getEnum** () const
- const QString & **pv** () const
- const QVariant & **getReady** (int delay=defaultDelay) const

Static Public Member Functions


- static void **setDebugLevel** (unsigned level=0)
- static QVariant **get** (const QString &_pvName, int delay=defaultDelay)
- static QVariant **set** (QString &_pvName, const QVariant &value, int delay=-1)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/data/include/qepicspv.h
- /tmp/epicsqt/trunk/framework/data/src/qepicspv.cpp

9.96 QEPlot Class Reference

Inheritance diagram for QEPlot:

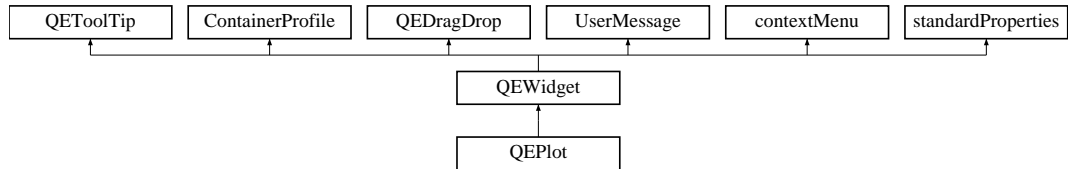

Public Types

- enum **UserLevels** { **User** = userLevelTypes::USERLEVEL_USER, **Scientist** = userLevelTypes::USERLEVEL_SCIENTIST, **Engineer** = userLevelTypes::USERLEVEL_ENGINEER }
- enum **TraceStyles** { **Lines** = QwtPlotCurve::Lines, **Sticks** = QwtPlotCurve::Sticks, **Steps** = QwtPlotCurve::Steps, **Dots** = QwtPlotCurve::Dots }

Signals

- void **dbValueChanged** (const double &out)
- void **dbValueChanged** (const QVector< double > &out)

Public Member Functions

- **QEPlot** (QWidget *parent=0)
- **QEPlot** (const QString &variableName, QWidget *parent=0)
- void **setYMin** (double yMin)
- double **getYMin** ()
- void **setYMax** (double yMax)
- double **getYMax** ()
- void **setAutoScale** (bool autoScale)
- bool **getAutoScale** ()
- void **setAxisEnableX** (bool axisEnableXIn)
- bool **getAxisEnableX** ()
- void **setAxisEnableY** (bool axisEnableYIn)
- bool **getAxisEnableY** ()
- QString **getTitle** ()
- void **setBackgroundColor** (QColor backgroundColor)
- QColor **getBackgroundColor** ()
- void **setTraceStyle** (QwtPlotCurve::CurveStyle traceStyle, const unsigned int variableIndex)
- QwtPlotCurve::CurveStyle **getTraceStyle** (const unsigned int variableIndex)
- void **setTraceColor** (QColor traceColor, const unsigned int variableIndex)
- void **setTraceColor1** (QColor traceColor)

- void **setTraceColor2** (QColor traceColor)
- void **setTraceColor3** (QColor traceColor)
- void **setTraceColor4** (QColor traceColor)
- QColor **getTraceColor** (const unsigned int variableIndex)
- QColor **getTraceColor1** ()
- QColor **getTraceColor2** ()
- QColor **getTraceColor3** ()
- QColor **getTraceColor4** ()
- void **setTraceLegend1** (QString traceLegend)
- void **setTraceLegend2** (QString traceLegend)
- void **setTraceLegend3** (QString traceLegend)
- void **setTraceLegend4** (QString traceLegend)
- QString **getTraceLegend1** ()
- QString **getTraceLegend2** ()
- QString **getTraceLegend3** ()
- QString **getTraceLegend4** ()
- void **setXUnit** (QString xUnit)
- QString **getXUnit** ()
- void **setYUnit** (QString yUnit)
- QString **getYUnit** ()
- void **setGridEnableMajorX** (bool gridEnableMajorXIn)
- void **setGridEnableMajorY** (bool gridEnableMajorYIn)
- void **setGridEnableMinorX** (bool gridEnableMinorXIn)
- void **setGridEnableMinorY** (bool gridEnableMinorYIn)
- bool **getGridEnableMajorX** ()
- bool **getGridEnableMajorY** ()
- bool **getGridEnableMinorX** ()
- bool **getGridEnableMinorY** ()
- void **setGridMajorColor** (QColor gridMajorColorIn)
- void **setGridMinorColor** (QColor gridMinorColorIn)
- QColor **getGridMajorColor** ()
- QColor **getGridMinorColor** ()
- void **setXStart** (double xStart)
- double **getXStart** ()
- void **setXIncrement** (double xIncrement)
- double **getXIncrement** ()
- void **setTimeSpan** (unsigned int timeSpan)
- unsigned int **getTimeSpan** ()
- void **setTickRate** (unsigned int tickRate)
- unsigned int **getTickRate** ()
- [UserLevels](#) **getUserLevelVisibilityProperty** ()

Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.
- void **setUserLevelVisibilityProperty** ([UserLevels](#) level)

Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.

- [UserLevels](#) `getUserLevelEnabledProperty ()`
Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.
- void [setUserLevelEnabledProperty](#) ([UserLevels](#) level)
Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.
- void **setTraceStyle1** (TraceStyles traceStyle)
- void **setTraceStyle2** (TraceStyles traceStyle)
- void **setTraceStyle3** (TraceStyles traceStyle)
- void **setTraceStyle4** (TraceStyles traceStyle)
- TraceStyles **getTraceStyle1** ()
- TraceStyles **getTraceStyle2** ()
- TraceStyles **getTraceStyle3** ()
- TraceStyles **getTraceStyle4** ()

Protected Member Functions

- void **establishConnection** (unsigned int variableIndex)
- void **dragEnterEvent** (QDragEnterEvent *event)
- void **dropEvent** (QDropEvent *event)
- void **mousePressEvent** (QMouseEvent *event)
- void **setDrop** (QVariant drop)
- QVariant **getDrop** ()
- QString **copyVariable** ()
- QVariant **copyData** ()
- void **paste** (QVariant s)

Protected Attributes

- [QEFloatingFormatting](#) **floatingFormatting**
- bool **localEnabled**
- bool [allowDrop](#)

Properties

- QString [variable1](#)
- QString [variable2](#)
- QString [variable3](#)
- QString [variable4](#)
- QString [variableSubstitutions](#)
- bool [variableAsToolTip](#)
- bool [visible](#)
- unsigned [int](#)
- QString [userLevelUserStyle](#)
- QString [userLevelScientistStyle](#)

- QString [userLevelEngineerStyle](#)
- [UserLevels](#) [userLevelVisibility](#)
- [UserLevels](#) [userLevelEnabled](#)
- bool [displayAlarmState](#)
- QColor **traceColor1**
- QColor **traceColor2**
- QColor **traceColor3**
- QColor **traceColor4**
- TraceStyles **traceStyle1**
- TraceStyles **traceStyle2**
- TraceStyles **traceStyle3**
- TraceStyles **traceStyle4**
- QString **traceLegend1**
- QString **traceLegend2**
- QString **traceLegend3**
- QString **traceLegend4**
- QString **title**
- QColor **backgroundColor**
- QString **xUnit**
- QString **yUnit**

9.96.1 Member Enumeration Documentation

9.96.1.1 enum QEPlot::UserLevels

User friendly enumerations for [userLevelVisibility](#) and [userLevelEnabled](#) properties - refer to [userLevelVisibility](#) and [userLevelEnabled](#) properties and [userLevel](#) enumeration for details.

Enumerator:

User Refer to `USERLEVEL_USER` for details.

Scientist Refer to `USERLEVEL_SCIENTIST` for details.

Engineer Refer to `USERLEVEL_ENGINEER` for details.

9.96.2 Member Function Documentation

9.96.2.1 void QEPlot::dbValueChanged (const double & out) [signal]

Sent when the widget is updated following a data change Can be used to pass on EPICS data (as presented in this widget) to other widgets. For example a QList widget could log updates from this widget.

9.96.2.2 void QEPlot::dbValueChanged (const QVector< double > & out) [signal]

Sent when the widget is updated following a data change. Can be used to pass on EPICS data (as presented in this widget) to other widgets. For example a QList widget could log updates from this widget.

9.96.3 Member Data Documentation

9.96.3.1 bool QEPlot::allowDrop [read, write, protected]

Allow drag/drops operations to this widget. Default is false. Any dropped text will be used as a new variable name.

Reimplemented from [QEDragDrop](#).

9.96.4 Property Documentation

9.96.4.1 bool QEPlot::displayAlarmState [read, write]

If set (default) widget will indicate the alarm state of any variable data is displaying. Typically the background colour is set to indicate the alarm state. Note, this property is included in the set of standard properties as it applies to most widgets. It will do nothing for widgets that don't display data.

Reimplemented from [standardProperties](#).

9.96.4.2 unsigned QEPlot::id [read, write]

Set the ID used by the message filtering system. Default is zero. Widgets or applications that use messages from the framework have the option of filtering on this ID. For example, by using a unique message source ID a [QELog](#) widget may be set up to only log messages from a select set of widgets.

9.96.4.3 UserLevels QEPlot::userLevelEnabled [read, write]

Lowest user level at which the widget is enabled. Default is 'User'. Used when designing GUIs that allow access to more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through setUserLevel(). Widgets that are always accessible should be visible at 'User'. Widgets that are only accessible to scientists managing the facility should be visible at 'Scientist'. Widgets that are only accessible to engineers maintaining the facility should be visible at 'Engineer'.

9.96.4.4 QString QEPlot::userLevelEngineerStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'Engineer' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.96.4.5 QString QEPlot::userLevelScientistStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'Scientist' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.96.4.6 QString QEPlot::userLevelUserStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'User' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.96.4.7 UserLevels QEPlot::userLevelVisibility [read, write]

Lowest user level at which the widget is visible. Default is 'User'. Used when designing GUIs that display more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through setUserLevel(). Widgets that are always visible should be visible at 'User'. Widgets that are only used by scientists managing the facility should be visible at 'Scientist'. Widgets that are only used by engineers maintaining the facility should be visible at 'Engineer'.

9.96.4.8 QString QEPlot::variable1 [read, write]

EPICS variable name (CA PV). This variable is used to read updating values or waveforms for plotting in the first trace.

9.96.4.9 QString QEPlot::variable2 [read, write]

EPICS variable name (CA PV). This variable is used to read updating values or waveforms for plotting in the second trace.

9.96.4.10 QString QEPlot::variable3 [read, write]

EPICS variable name (CA PV). This variable is used to read updating values or waveforms for plotting in the third trace.

9.96.4.11 QString QEPlot::variable4 [read, write]

EPICS variable name (CA PV). This variable is used to read updating values or waveforms for plotting in the fourth trace.

9.96.4.12 bool QEPlot::variableAsToolTip [read, write]

Use the variable as the tool tip. Default is true. Tool tip property will be overwritten by the variable name.

Reimplemented from [QEToolTip](#).

9.96.4.13 QString QEPlot::variableSubstitutions [read, write]

Macro substitutions. The default is no substitutions. The format is NAME1=VALUE1[, NAME2=VALUE2... Values may be quoted strings. For example, 'SAMPLE=SAM1, NAME = "Ref foil"' These substitutions are applied to all the variable names.

9.96.4.14 bool QEPlot::visible [read, write]


Display the widget. Default is true. Setting this property false is usefull if widget is only used to provide a signal - for example, when supplying data to a [QELink](#) widget. Note, when false the widget will still be visible in Qt Designer.

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEPlot/QEPlot.h
- /tmp/epicsqt/trunk/framework/widgets/QEPlot/QEPlot.cpp

9.97 QEPushButton Class Reference

Inheritance diagram for QEPushButton:

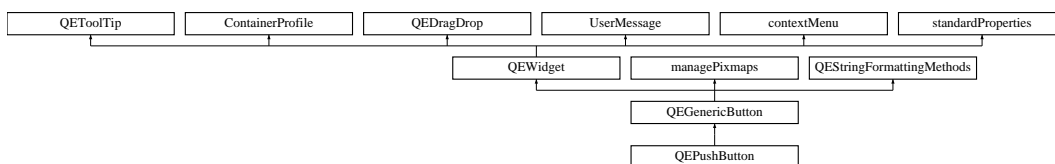

Public Types

- enum `UserLevels` { `User` = `userLevelTypes::USERLEVEL_USER`, `Scientist` = `userLevelTypes::USERLEVEL_SCIENTIST`, `Engineer` = `userLevelTypes::USERLEVEL_ENGINEER` }
- enum `Formats` {
`Default` = `QStringFormatting::FORMAT_DEFAULT`, `Floating` = `QStringFormatting::FORMAT_FLOATING`, `Integer` = `QStringFormatting::FORMAT_INTEGER`, `UnsignedInteger` = `QStringFormatting::FORMAT_UNSIGNEDINTEGER`,
`Time` = `QStringFormatting::FORMAT_TIME`, `LocalEnumeration` = `QStringFormatting::FORMAT_LOCAL_ENUMERATE` }
- enum `Notations` { `Fixed` = `QStringFormatting::NOTATION_FIXED`, `Scientific` = `QStringFormatting::NOTATION_SCIENTIFIC`, `Automatic` = `QStringFormatting::NOTATION_AUTOMATIC` }
- enum `ArrayActions` { `Append` = `QStringFormatting::APPEND`, `Ascii` = `QStringFormatting::ASCII`, `Index` = `QStringFormatting::INDEX` }
- enum `UpdateOptions` { `Text` = `QEGenericButton::UPDATE_TEXT`, `Icon` = `QEGenericButton::UPDATE_ICON`, `TextAndIcon` = `QEGenericButton::UPDATE_TEXT_AND_ICON`, `State` = `QEGenericButton::UPDATE_STATE` }

User friendly enumerations for updateOption property - refer to QEGenericButton::updateOptions for details.

- enum `CreationOptionNames` { `Open` = `QForm::CREATION_OPTION_OPEN`, `NewTab` = `QForm::CREATION_OPTION_NEW_TAB`, `NewWindow` = `QForm::CREATION_OPTION_NEW_WINDOW` }

Creation options. Used to indicate how to present a GUI when requesting a new GUI be created. Open a new window, open a new tab, or replace the current window.

Public Slots

- void `launchGui` (QString guiName, QForm::creationOptions creationOption)

Signals

- void `dbValueChanged` (const QString &out)
- void `requestResend` ()
Internal use only. Used when changing a property value to force a re-display to reflect the new property value.
- void `newGui` (QString guiName, QForm::creationOptions creationOption)
Internal use only. Request a new GUI is created. Typically, this is caught by the QEGui application.
- void `pressed` (int value)
- void `released` (int value)
- void `clicked` (int value)

Public Member Functions

- [QEPushButton](#) (QWidget *parent=0)
- [QEPushButton](#) (const QString &variableName, QWidget *parent=0)
- [UserLevels](#) [getUserLevelVisibilityProperty](#) ()
Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.
- void [setUserLevelVisibilityProperty](#) ([UserLevels](#) level)
Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.
- [UserLevels](#) [getUserLevelEnabledProperty](#) ()
Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.
- void [setUserLevelEnabledProperty](#) ([UserLevels](#) level)
Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.
- void [setFormatProperty](#) ([Formats](#) format)
Access function for [format](#) property - refer to [format](#) property for details.
- [Formats](#) [getFormatProperty](#) ()
Access function for [format](#) property - refer to [format](#) property for details.
- void [setNotationProperty](#) ([Notations](#) notation)
Access function for [notation](#) property - refer to [notation](#) property for details.
- [Notations](#) [getNotationProperty](#) ()
Access function for [notation](#) property - refer to [notation](#) property for details.
- void [setArrayActionProperty](#) ([ArrayActions](#) arrayAction)
Access function for [arrayAction](#) property - refer to [arrayAction](#) property for details.
- [ArrayActions](#) [getArrayActionProperty](#) ()
Access function for [arrayAction](#) property - refer to [arrayAction](#) property for details.

Properties

- QString [variable](#)
- QString [altReadbackVariable](#)
- QString [variableSubstitutions](#)
- bool [subscribe](#)
- bool [variableAsToolTip](#)
- bool [allowDrop](#)
- bool [visible](#)
- unsigned int
- QString [userLevelUserStyle](#)
- QString [userLevelScientistStyle](#)
- QString [userLevelEngineerStyle](#)
- [UserLevels](#) [userLevelVisibility](#)
- [UserLevels](#) [userLevelEnabled](#)
- bool [displayAlarmState](#)

- int [precision](#)
- bool [useDbPrecision](#)
- bool [leadingZero](#)
- bool [trailingZeros](#)
- bool [addUnits](#)
- QString [localEnumeration](#)
- [Formats](#) format
- [Notations](#) notation
- [ArrayActions](#) arrayAction
- Qt::Alignment [alignment](#)
- [UpdateOptions](#) updateOption
- QPixmap [pixmap0](#)
- QPixmap [pixmap1](#)
- QPixmap [pixmap2](#)
- QPixmap [pixmap3](#)
- QPixmap [pixmap4](#)
- QPixmap [pixmap5](#)
- QPixmap [pixmap6](#)
- QPixmap [pixmap7](#)
- QString [password](#)
- bool [confirmAction](#)
- bool [writeOnPress](#)
- bool [writeOnRelease](#)
- bool [writeOnClick](#)
- QString [pressText](#)
- QString [releaseText](#)
- QString [clickText](#)
- QString [clickCheckedText](#)
- QString [labelText](#)
- QString [program](#)
- QStringList [arguments](#)
- QString [guiFile](#)
- [CreationOptionNames](#) creationOption
- QString [prioritySubstitutions](#)

9.97.1 Member Enumeration Documentation

9.97.1.1 enum QEPushButton::ArrayActions

User friendly enumerations for arrayAction property - refer to [QQStringFormatting::arrayActions](#) for details.

Enumerator:

Append Refer to [QQStringFormatting::APPEND](#) for details.

Ascii Refer to [QQStringFormatting::ASCII](#) for details.

Index Refer to [QQStringFormatting::INDEX](#) for details.

9.97.1.2 enum `QEPushButton::CreationOptionNames`

Creation options. Used to indicate how to present a GUI when requesting a new GUI be created. Open a new window, open a new tab, or replace the current window.

Enumerator:

Open Replace the current GUI with the new GUI.

NewTab Open new GUI in a new tab.

NewWindow Open new GUI in a new window.

9.97.1.3 enum `QEPushButton::Formats`

User friendly enumerations for format property - refer to [QStringFormatting::formats](#) for details.

Enumerator:

Default Format as best appropriate for the data type.

Floating Format as a floating point number.

Integer Format as an integer.

UnsignedInteger Format as an unsigned integer.

Time Format as a time.

LocalEnumeration Format as a selection from the [localEnumeration](#) property.

9.97.1.4 enum `QEPushButton::Notations`

User friendly enumerations for notation property - refer to [QStringFormatting::notations](#) for details.

Enumerator:

Fixed Refer to [QStringFormatting::NOTATION_FIXED](#) for details.

Scientific Refer to [QStringFormatting::NOTATION_SCIENTIFIC](#) for details.

Automatic Refer to [QStringFormatting::NOTATION_AUTOMATIC](#) for details.

9.97.1.5 enum `QEPushButton::UpdateOptions`

User friendly enumerations for updateOption property - refer to [QEGenericButton::updateOptions](#) for details.

Enumerator:

Text Data updates will update the button text.

Icon Data updates will update the button icon.

TextAndIcon Data updates will update the button text and icon.

State Data updates will update the button state (checked or unchecked)

9.97.1.6 enum QEPushButton::UserLevels

User friendly enumerations for [userLevelVisibility](#) and [userLevelEnabled](#) properties - refer to [userLevelVisibility](#) and [userLevelEnabled](#) properties and #userLevel enumeration for details.

Enumerator:

User Refer to USERLEVEL_USER for details.

Scientist Refer to USERLEVEL_SCIENTIST for details.

Engineer Refer to USERLEVEL_ENGINEER for details.

9.97.2 Constructor & Destructor Documentation

9.97.2.1 QEPushButton::QEPushButton (QWidget * *parent* = 0)

Create without a variable. Use `setVariableNameProperty()` and `setSubstitutionsProperty()` to define a variable and, optionally, macro substitutions later.

9.97.2.2 QEPushButton::QEPushButton (const QString & *variableName*, QWidget * *parent* = 0)

Create with a variable. A connection is automatically established. If macro substitutions are required, create without a variable and set the variable and macro substitutions after creation.

9.97.3 Member Function Documentation

9.97.3.1 void QEPushButton::clicked (int *value*) [signal]

Button has been Clicked. The value emitted is the integer interpretation of the `clickText` property (or the `clickCheckedText` property if the button was checked)

9.97.3.2 void QEPushButton::dbValueChanged (const QString & *out*) [signal]

Sent when the widget is updated following a data change Can be used to pass on EPICS data (as presented in this widget) to other widgets. For example a QList widget could log updates from this widget.

9.97.3.3 void QEPushButton::launchGui (QString *guiName*, QForm::creationOptions *creationOption*) [inline, slot]

Default slot used to create a new GUI if there is no slot indicated in the [ContainerProfile](#) class. This slot is typically used when the button is pressed within the Designer preview window to allow the operation of the button to be tested. If an application does not

specify a slot to use for creating new windows (through the [ContainerProfile](#) class) a window will still be created through this slot, but it will not respect the window creation options or any other window related application constraints. For example, the QEGui application does provide a slot for creating new GUIs in the [ContainerProfile](#) class which respects the creation options, knows how to add tabs in the application, and extend the application's window menu in the menu bar.

Reimplemented from [QEGenericButton](#).

9.97.3.4 void QEPushButton::pressed (int *value*) [signal]

Button has been Pressed. The value emitted is the integer interpretation of the press-Text property

9.97.3.5 void QEPushButton::released (int *value*) [signal]

Button has been Released The value emitted is the integer interpretation of the release-Text property

9.97.4 Property Documentation

9.97.4.1 bool QEPushButton::addUnits [read, write]

If true (default), add engineering units supplied with the data.

9.97.4.2 Qt::Alignment QEPushButton::alignment [read, write]

Set the buttons text alignment. Left justification is particularly useful when displaying quickly changing numeric data updates.

9.97.4.3 bool QEPushButton::allowDrop [read, write]

Allow drag/drops operations to this widget. Default is false. Any dropped text will be used as a new variable name.

Reimplemented from [QEDragDrop](#).

9.97.4.4 QString QEPushButton::altReadbackVariable [read, write]

EPICS variable name (CA PV). This variable is used to provide a readback value when different to the variable written to by a button press.

9.97.4.5 QStringList QEPushButton::arguments [read, write]

Arguments for program specified in the 'program' property.

Reimplemented from [QEGenericButton](#).

9.97.4.6 ArrayActions QEPushButton::arrayAction [read, write]

Text formatting option for array data. Default is ASCII. Options are:

- ASCII - treat array as a single text string. For example an array of three characters 'a' 'b' 'c' will be formatted as 'abc'.
- APPEND - treat array as an array of numbers and format a string containing them all with a space between each. For example, an array of three numbers 10, 11 and 12 will be formatted as '10 11 12'.
- INDEX - Extract a single item from the array. The item is then formatted as any other non array data would be. The item selected is determined by the `arrayIndex` property. For example, if `arrayIndex` property is 1, an array of three numbers 10, 11 and 12 will be formatted as '11'.

9.97.4.7 QString QEPushButton::clickCheckedText [read, write]

Text used to compare with text written or read to determine if push button should be marked as checked. Note, must be an exact match following formatting of data updates. When writing values, the 'pressText', 'ReleaseText', or 'clickedtext' must match this property to cause the button to be checked when the write occurs.

Good example: formatting set to display a data value of '1' as 'On', `clickCheckedText` is 'On', `clickText` is 'On'. In this example, the push button will be checked when a data update occurs with a value of 1 or when the button is clicked.

Bad example: formatting set to display a data value of '1' as 'On', `clickCheckedText` is 'On', `clickText` is '1'. In this example, the push button will be checked when a data update occurs with a value of 1 but, although a valid value will be written when clicked, the button will not be checked when clicked as '1' is not the same as 'On'.

Reimplemented from [QEGenericButton](#).

9.97.4.8 QString QEPushButton::clickText [read, write]

Value written when user clicks button if 'writeOnClick' property is true

Reimplemented from [QEGenericButton](#).

9.97.4.9 bool QEPushButton::confirmAction [read, write]

If true, a dialog will be presented asking the user to confirm if the button action should be carried out

9.97.4.10 **CreationOptionNames** `QEPushButton::creationOption` [read, write]

Creation options when opening a new GUI. Open a new window, open a new tab, or replace the current window. the creation option is supplied when the button generates a newGui signal. Application code connected to this signal should honour this request if possible. When used within the QEGui application, the QEGui application creates a new window, new tab, or replaces the current window as appropriate.

Reimplemented from [QEGenericButton](#).

9.97.4.11 **bool** `QEPushButton::displayAlarmState` [read, write]

If set (default) widget will indicate the alarm state of any variable data is displaying. Typically the background colour is set to indicate the alarm state. Note, this property is included in the set of standard properties as it applies to most widgets. It will do nothing for widgets that don't display data.

Reimplemented from [standardProperties](#).

9.97.4.12 **Formats** `QEPushButton::format` [read, write]

Format to apply to data. Default is 'Default' in which case the data type supplied with the data determines how the data is formatted. For all other options, an attempt is made to format the data as requested (whatever its native form).

9.97.4.13 **QString** `QEPushButton::guiFile` [read, write]

File name of GUI to be presented on button click. File name can be absolute, relative to the path of the QEform in which the [QEPushButton](#) is located, relative to the any path in the path list published in the [ContainerProfile](#) class, or relative to the current path. See [QEWidget::openQEFile\(\)](#) in QEWidget.cpp for details.

9.97.4.14 **unsigned** `QEPushButton::int` [read, write]

Set the ID used by the message filtering system. Default is zero. Widgets or applications that use messages from the framework have the option of filtering on this ID. For example, by using a unique message source ID a [QELog](#) widget may be set up to only log messages from a select set of widgets.

Base used for when formatting integers. Default is 10 (duh!)

Index used to select a single item of data for formatting from an array of data. Default is 0. Only used when the arrayAction property is INDEX. Refer to the arrayAction property for more details.

9.97.4.15 QString QEPushButton::labelText [read, write]

Button label text (prior to substitution). Macro substitutions will be applied to this text and the result will be set as the button text. Used when data updates are not being represented in the button text. IF NOT LEFT EMPTY, THIS TEXT WILL TAKE PRIORITY OVER THE PUSH BUTTON 'text' PROPERTY! For example, a button in a sub form may have a 'labelText' property of 'Turn Pump On'. When the sub form is used twice in a main form with substitutions PUMPNUM=1 and PUMPNUM=2 respectively, the two identical buttons in the sub forms will have the labels 'Turn Pump 1 On' and 'Turn Pump 2 On' respectively.

Reimplemented from [QEGenericButton](#).

9.97.4.16 bool QEPushButton::leadingZero [read, write]

If true (default), always add a leading zero when formatting numbers.

9.97.4.17 QString QEPushButton::localEnumeration [read, write]

An enumeration list used to data values. Used only when the formatting option is 'local enumeration'. Value is converted to an integer and used to select a string from this list.

Format is:

```
[[<|<=|!=|>|=|>]value1|*]: string1 , [[<|<=|!=|>|=|>]value2|*]: string2 , [[<|<=|!=|>|=|>]value3|*]: string3 , ...
```

Where: < Less than <= Less than or equal = Equal (default if no operator specified)
 >= Greather than or equal > Greater than Always match (used to specify default text)

Values may be numeric or textual Values do not have to be in any order, but first match wins Values may be quoted Strings may be quoted Consecutive values do not have to be present. Operator is assumed to be equality if not present. White space is ignored except within quoted strings.

may be included in a string to indicate a line break

Examples are:

```
0:Off,1:On 0 : "Pump Running", 1 : "Pump not running" 0:"", 1:"Warning!\nAlarm"
<2:"Value is less than two", =2:"Value is equal to two", >2:"Value is grater than 2"
3:"Beamline Available", *: "" "Pump Off": "OH NO!, the pump is OFF!", "Pump On": "It's OK, the pump is on"
```

The data value is converted to a string if no enumeration for that value is available. For example, if the local enumeration is '0:off,1:on', and a value of 10 is processed, the text generated is '10'. If a blank string is required, this should be explicit. for example, '0:off,1:on,10: ""'

A range of numbers can be covered by a pair of values as in the following example:
 >=4:"Between 4 and 8", <=8:"Between 4 and 8"

9.97.4.18 Notations QEPushButton::notation [read, write]

Notation used for numerical formatting. Default is fixed.

9.97.4.19 QString QEPushButton::password [read, write]

Password user will need to enter before any action is taken

Reimplemented from [QEGenericButton](#).

9.97.4.20 QPixmap QEPushButton::pixmap0 [read, write]

Pixmap to display if updateOption is Icon or TextAndIcon and data value translates to an index of 0

9.97.4.21 QPixmap QEPushButton::pixmap1 [read, write]

Pixmap to display if updateOption is Icon or TextAndIcon and data value translates to an index of 1

9.97.4.22 QPixmap QEPushButton::pixmap2 [read, write]

Pixmap to display if updateOption is Icon or TextAndIcon and data value translates to an index of 2

9.97.4.23 QPixmap QEPushButton::pixmap3 [read, write]

Pixmap to display if updateOption is Icon or TextAndIcon and data value translates to an index of 3

9.97.4.24 QPixmap QEPushButton::pixmap4 [read, write]

Pixmap to display if updateOption is Icon or TextAndIcon and data value translates to an index of 4

9.97.4.25 QPixmap QEPushButton::pixmap5 [read, write]

Pixmap to display if updateOption is Icon or TextAndIcon and data value translates to an index of 5

9.97.4.26 QPixmap QEPushButton::pixmap6 [read, write]

Pixmap to display if updateOption is Icon or TextAndIcon and data value translates to an index of 6

9.97.4.27 QPixmap QEPushButton::pixmap7 [read, write]

Pixmap to display if updateOption is Icon or TextAndIcon and data value translates to an index of 7

9.97.4.28 int QEPushButton::precision [read, write]

Precision used when formatting floating point numbers. The default is 4. This is only used if useDbPrecision is false.

9.97.4.29 QString QEPushButton::pressText [read, write]

Value written when user presses button if 'writeOnPress' property is true

Reimplemented from [QEGenericButton](#).

9.97.4.30 QString QEPushButton::prioritySubstitutions [read, write]

Overriding macro substitutions. These macro substitutions take precedence over any existing macro substitutions defined by the variableSubstitutions property, any parent forms, or the application containing the button. These macro substitutions are particularly useful when the button's function is to reload the same form but with different macro substitutions. The variableSubstitutions property cannot be used for this since, although they are added to the list of macro substitutions applied to the new form, they are appended to the list and the existing macro substitutions take precedence.

Reimplemented from [QEGenericButton](#).

9.97.4.31 QString QEPushButton::program [read, write]

Program to run when the button is clicked. No attempt to run a program is made if this property is empty. Example: firefox

Reimplemented from [QEGenericButton](#).

9.97.4.32 QString QEPushButton::releaseText [read, write]

Value written when user releases button if 'writeOnRelease' property is true

Reimplemented from [QEGenericButton](#).

9.97.4.33 bool QEPushButton::subscribe [read, write]

Sets if this widget subscribes for data updates and displays current data. Default is 'true' (subscribes for and displays data updates)

Reimplemented from [QEWidget](#).

9.97.4.34 bool QEPushButton::trailingZeros [read, write]

If true (default), always remove any trailing zeros when formatting numbers.

9.97.4.35 UpdateOptions QEPushButton::updateOption [read, write]

Update options (text, pixmap, both, or state (checked or unchecked))

Reimplemented from [QEGenericButton](#).

9.97.4.36 bool QEPushButton::useDbPrecision [read, write]

If true (default), format floating point numbers using the precision supplied with the data.
If false, the precision property is used.

9.97.4.37 UserLevels QEPushButton::userLevelEnabled [read, write]

Lowest user level at which the widget is enabled. Default is 'User'. Used when designing GUIs that allow access to more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through `setUserLevel()`. Widgets that are always accessible should be visible at 'User'. Widgets that are only accessible to scientists managing the facility should be visible at 'Scientist'. Widgets that are only accessible to engineers maintaining the facility should be visible at 'Engineer'.

9.97.4.38 QString QEPushButton::userLevelEngineerStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'Engineer' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.97.4.39 QString QEPushButton::userLevelScientistStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'Scientist' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.97.4.40 QString QEPushButton::userLevelUserStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'User' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.97.4.41 UserLevels QEPushButton::userLevelVisibility [read, write]

Lowest user level at which the widget is visible. Default is 'User'. Used when designing GUIs that display more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through setUserLevel() Widgets that are always visible should be visible at 'User'. Widgets that are only used by scientists managing the facility should be visible at 'Scientist'. Widgets that are only used by engineers maintaining the facility should be visible at 'Engineer'.

9.97.4.42 QString QEPushButton::variable [read, write]

EPICS variable name (CA PV). This variable is used for both writing (on button press), and reading if subscribed and no alternate readback variable is provided.

9.97.4.43 bool QEPushButton::variableAsToolTip [read, write]

Use the variable as the tool tip. Default is true. Tool tip property will be overwritten by the variable name.

Reimplemented from [QEToolTip](#).

9.97.4.44 QString QEPushButton::variableSubstitutions [read, write]

Macro substitutions. The default is no substitutions. The format is NAME1=VALUE1[, NAME2=VALUE2... Values may be quoted strings. For example, 'PUMP=PMP3, NAME = "My Pump"' These substitutions are applied to variable names for all QE widgets. In some widgets are also used for other purposes.

9.97.4.45 bool QEPushButton::visible [read, write]

Display the widget. Default is true. Setting this property false is usefull if widget is only used to provide a signal - for example, when supplying data to a [QELink](#) widget. Note, when false the widget will still be visible in Qt Designer.

9.97.4.46 bool QEPushButton::writeOnClick [read, write]

If true, the 'clickText' property is written when the button is clicked. Default is true

Reimplemented from [QEGenericButton](#).

9.97.4.47 `bool QEPushButton::writeOnPress` [read, write]

If true, the 'pressText' property is written when the button is pressed. Default is false

Reimplemented from [QEGenericButton](#).

9.97.4.48 `bool QEPushButton::writeOnRelease` [read, write]

If true, the 'releaseText' property is written when the button is released. Default is false

Reimplemented from [QEGenericButton](#).

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEButton/QEPushButton.h
- /tmp/epicsqt/trunk/framework/widgets/QEButton/QEPushButton.cpp

9.98 QEPVNameLists Class Reference

Public Member Functions


- void **prependOrMoveToFirst** (const QString &item)
- void **saveConfiguration** ([PMElement](#) &parentElement)
- void **restoreConfiguration** ([PMElement](#) &parentElement)

The documentation for this class was generated from the following file:

- /tmp/epicsqt/trunk/framework/widgets/QEStripChart/QEStripChart.cpp

9.99 QEPvProperties Class Reference

Inheritance diagram for QEPvProperties:

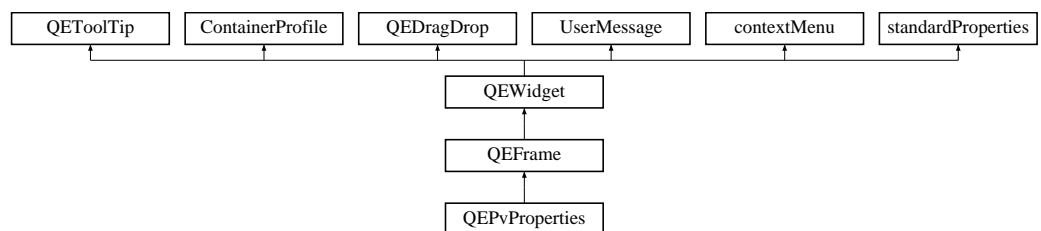

Signals

- void **setCurrentBoxIndex** (int index)

Public Member Functions

- **QEPvProperties** (QWidget *parent=0)
- **QEPvProperties** (const QString &variableName, QWidget *parent=0)
- QSize **sizeHint** () const

Protected Member Functions

- void **resizeEvent** (QResizeEvent *event)
- void **establishConnection** (unsigned int variableIndex)
- void **scaleBy** (const int m, const int d)
- [qcaobject::QCaObject](#) * **createQcalItem** (unsigned int variableIndex)
- void **dragEnterEvent** (QDragEnterEvent *event)
- void **dropEvent** (QDropEvent *event)
- void **setDrop** (QVariant drop)
- QVariant **getDrop** ()
- void **saveConfiguration** ([PersistenceManager](#) *pm)
- void **restoreConfiguration** ([PersistenceManager](#) *pm, [restorePhases](#) restorePhase)
- QString **copyVariable** ()
- QVariant **copyData** ()
- void **paste** (QVariant s)

Properties

- QString [variable](#)
- QString [variableSubstitutions](#)

9.99.1 Member Function Documentation

9.99.1.1 void **QEPvProperties::restoreConfiguration** ([PersistenceManager](#) * , [restorePhases](#)) [protected, virtual]

Service a request to restore the QE widget's configuration. A QE widget recover any configuration details from the [PersistenceManager](#). For example, a [QEStripChart](#) may restore the variables being plotted. Many QE widgets do not have any persistent data requirements and do not implement this method. This is called twice with an incrementing restorePhase. Most widgets will miss the first call as they don't exist yet (they are created as part of the first phase)

Reimplemented from [QEWidget](#).

9.99.1.2 void QEPvProperties::saveConfiguration (PersistenceManager *)
[protected, virtual]

Service a request to save the QE widget's current configuration. A widget may save any configuration details through the [PersistenceManager](#). For example, a [QEStripChart](#) may save the variables being plotted. Many QE widgets do not have any persistent data requirements and do not implement this method.

Reimplemented from [QEWidget](#).

9.99.1.3 void QEPvProperties::scaleBy (const int , const int) [protected, virtual]

Any [QEWidget](#) that requires additional scaling, i.e. above and beyond the standard scaling applied to size, minimum size, maximum size and font size, may override this function in order to perform any bespoke scaling need by the widget (for example see [QEShape](#)). The scaling is defined using a rational number specified by two integers (m, d). The first (m) parameter is the multiplier and the second (d) parameter is the divisor. For example, if m = 4 and d = 5, then an 80% scaling should be applied. And if m = 5 and d = 4, and a 125% scaling is required.

Reimplemented from [QEWidget](#).

9.99.2 Property Documentation

9.99.2.1 QString QEPvProperties::variable [read, write]

EPICS variable name (CA PV)

9.99.2.2 QString QEPvProperties::variableSubstitutions [read, write]

Macro substitutions. The default is no substitutions. The format is NAME1=VALUE1[, NAME2=VALUE2... Values may be quoted strings. For example, 'PUMP=PMP3, NAME = "My Pump"' These substitutions are applied to variable names for all QE widgets. In some widgets are also used for other purposes.

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEPvProperties/QEPvProperties.h
- /tmp/epicsqt/trunk/framework/widgets/QEPvProperties/QEPvProperties.cpp

9.100 QEPvPropertiesManager Class Reference

Public Member Functions

- **QEPvPropertiesManager** (QObject *parent=0)
- bool **isContainer** () const


- bool **isInitialized** () const
- QIcon **icon** () const
- QString **group** () const
- QString **includeFile** () const
- QString **name** () const
- QString **toolTip** () const
- QString **whatsThis** () const
- QWidget * **createWidget** (QWidget *parent)
- void **initialize** (QDesignerFormEditorInterface *core)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEPvProperties/QEPvPropertiesManager.h
- /tmp/epicsqt/trunk/framework/widgets/QEPvProperties/QEPvPropertiesManager.cpp

9.101 QERadioButton Class Reference

Inheritance diagram for QERadioButton:

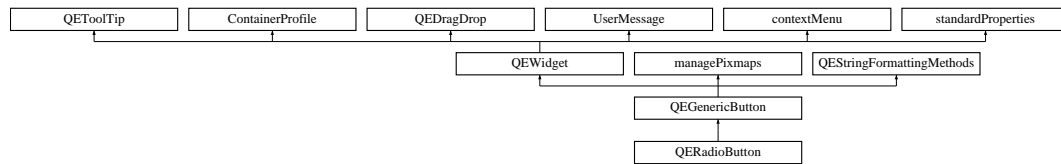

Public Types

- enum **UserLevels** { **User** = userLevelTypes::USERLEVEL_USER, **Scientist** = userLevelTypes::USERLEVEL_SCIENTIST, **Engineer** = userLevelTypes::USERLEVEL_ENGINEER }
- enum **Formats** {
Default = QEStrFormatting::FORMAT_DEFAULT, **Floating** = QEStrFormatting::FORMAT_FLOATING, **Integer** = QEStrFormatting::FORMAT_INTEGER, **UnsignedInteger** = QEStrFormatting::FORMAT_UNSIGNEDINTEGER,
Time = QEStrFormatting::FORMAT_TIME, **LocalEnumeration** = QEStrFormatting::FORMAT_LOCAL_ENUMERATE }
- enum **Notations** { **Fixed** = QEStrFormatting::NOTATION_FIXED, **Scientific** = QEStrFormatting::NOTATION_SCIENTIFIC, **Automatic** = QEStrFormatting::NOTATION_AUTOMATIC }
- enum **ArrayActions** { **Append** = QEStrFormatting::APPEND, **Ascii** = QEStrFormatting::ASCII, **Index** = QEStrFormatting::INDEX }
- enum **UpdateOptions** { **Text** = QEGenericButton::UPDATE_TEXT, **Icon** = QEGenericButton::UPDATE_ICON, **TextAndIcon** = QEGenericButton::UPDATE_TEXT_AND_ICON, **State** = QEGenericButton::UPDATE_STATE }

User friendly enumerations for updateOption property - refer to QEGenericButton::updateOptions for details.

- enum [CreationOptionNames](#) { [Open](#) = QForm::CREATION_OPTION_OPEN, [NewTab](#) = QForm::CREATION_OPTION_NEW_TAB, [NewWindow](#) = QForm::CREATION_OPTION_NEW_WINDOW }

Creation options. Used to indicate how to present a GUI when requesting a new GUI be created. Open a new window, open a new tab, or replace the current window.

Public Slots

- void [launchGui](#) (QString guiName, QForm::creationOptions creationOption)

Signals

- void [dbValueChanged](#) (const QString &out)
- void [requestResend](#) ()
Internal use only. Used when changing a property value to force a re-display to reflect the new property value.
- void [newGui](#) (QString guiName, QForm::creationOptions creationOption)
Internal use only. Request a new GUI is created. Typically, this is caught by the QEGui application.
- void [pressed](#) (int value)
- void [released](#) (int value)
- void [clicked](#) (int value)

Public Member Functions

- [QERadioButton](#) (QWidget *parent=0)
- [QERadioButton](#) (const QString &variableName, QWidget *parent=0)
- [UserLevels getUserLevelVisibilityProperty](#) ()
Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.
- void [setUserLevelVisibilityProperty](#) ([UserLevels](#) level)
Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.
- [UserLevels getUserLevelEnabledProperty](#) ()
Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.
- void [setUserLevelEnabledProperty](#) ([UserLevels](#) level)
Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.
- void [setFormatProperty](#) ([Formats](#) format)
Access function for [format](#) property - refer to [format](#) property for details.
- [Formats getFormatProperty](#) ()
Access function for [format](#) property - refer to [format](#) property for details.

- void [setNotationProperty](#) ([Notations](#) notation)
Access function for [notation](#) property - refer to [notation](#) property for details.
- [Notations](#) [getNotationProperty](#) ()
Access function for [notation](#) property - refer to [notation](#) property for details.
- void [setArrayActionProperty](#) ([ArrayActions](#) arrayAction)
Access function for [arrayAction](#) property - refer to [arrayAction](#) property for details.
- [ArrayActions](#) [getArrayActionProperty](#) ()
Access function for [arrayAction](#) property - refer to [arrayAction](#) property for details.

Properties

- QString [variable](#)
- QString [variableSubstitutions](#)
- bool [subscribe](#)
- bool [variableAsToolTip](#)
- bool [allowDrop](#)
- bool [visible](#)
- unsigned [int](#)
- QString [userLevelUserStyle](#)
- QString [userLevelScientistStyle](#)
- QString [userLevelEngineerStyle](#)
- [UserLevels](#) [userLevelVisibility](#)
- [UserLevels](#) [userLevelEnabled](#)
- bool [displayAlarmState](#)
- int [precision](#)
- bool [useDbPrecision](#)
- bool [leadingZero](#)
- bool [trailingZeros](#)
- bool [addUnits](#)
- QString [localEnumeration](#)
- [Formats](#) [format](#)
- [Notations](#) [notation](#)
- [ArrayActions](#) [arrayAction](#)
- Qt::Alignment [alignment](#)
- [UpdateOptions](#) [updateOption](#)
- QPixmap [pixmap0](#)
- QPixmap [pixmap1](#)
- QPixmap [pixmap2](#)
- QPixmap [pixmap3](#)
- QPixmap [pixmap4](#)
- QPixmap [pixmap5](#)
- QPixmap [pixmap6](#)
- QPixmap [pixmap7](#)
- QString [password](#)
- bool [confirmAction](#)

- bool [writeOnPress](#)
- bool [writeOnRelease](#)
- bool [writeOnClick](#)
- QString [pressText](#)
- QString [releaseText](#)
- QString [clickText](#)
- QString [clickCheckedText](#)
- QString [labelText](#)
- QString [program](#)
- QStringList [arguments](#)
- QString [guiFile](#)
- [CreationOptionNames](#) [creationOption](#)
- QString [prioritySubstitutions](#)

9.101.1 Member Enumeration Documentation

9.101.1.1 enum [QERadioButton::ArrayActions](#)

User friendly enumerations for arrayAction property - refer to [QCStringFormatting::arrayActions](#) for details.

Enumerator:

Append Refer to [QCStringFormatting::APPEND](#) for details.

Ascii Refer to [QCStringFormatting::ASCII](#) for details.

Index Refer to [QCStringFormatting::INDEX](#) for details.

9.101.1.2 enum [QERadioButton::CreationOptionNames](#)

Creation options. Used to indicate how to present a GUI when requesting a new GUI be created. Open a new window, open a new tab, or replace the current window.

Enumerator:

Open Replace the current GUI with the new GUI.

NewTab Open new GUI in a new tab.

NewWindow Open new GUI in a new window.

9.101.1.3 enum [QERadioButton::Formats](#)

User friendly enumerations for format property - refer to [QCStringFormatting::formats](#) for details.

Enumerator:

Default Format as best appropriate for the data type.

Floating Format as a floating point number.

Integer Format as an integer.

UnsignedInteger Format as an unsigned integer.

Time Format as a time.

LocalEnumeration Format as a selection from the [localEnumeration](#) property.

9.101.1.4 enum QERadioButton::Notations

User friendly enumerations for notation property - refer to [QCStringFormatting::notations](#) for details.

Enumerator:

Fixed Refer to [QCStringFormatting::NOTATION_FIXED](#) for details.

Scientific Refer to [QCStringFormatting::NOTATION_SCIENTIFIC](#) for details.

Automatic Refer to [QCStringFormatting::NOTATION_AUTOMATIC](#) for details.

9.101.1.5 enum QERadioButton::UpdateOptions

User friendly enumerations for updateOption property - refer to [QEGenericButton::updateOptions](#) for details.

Enumerator:

Text Data updates will update the button text.

Icon Data updates will update the button icon.

TextAndIcon Data updates will update the button text and icon.

State Data updates will update the button state (checked or unchecked)

9.101.1.6 enum QERadioButton::UserLevels

User friendly enumerations for [userLevelVisibility](#) and [userLevelEnabled](#) properties - refer to [userLevelVisibility](#) and [userLevelEnabled](#) properties and [userLevel](#) enumeration for details.

Enumerator:

User Refer to [USERLEVEL_USER](#) for details.

Scientist Refer to [USERLEVEL_SCIENTIST](#) for details.

Engineer Refer to [USERLEVEL_ENGINEER](#) for details.

9.101.2 Constructor & Destructor Documentation

9.101.2.1 `QERadioButton::QERadioButton (QWidget * parent = 0)`

Create without a variable. Use `setVariableNameProperty()` and `setSubstitutionsProperty()` to define a variable and, optionally, macro substitutions later.

9.101.2.2 `QERadioButton::QERadioButton (const QString & variableName, QWidget * parent = 0)`

Create with a variable. A connection is automatically established. If macro substitutions are required, create without a variable and set the variable and macro substitutions after creation.

9.101.3 Member Function Documentation

9.101.3.1 `void QERadioButton::clicked (int value) [signal]`

Button has been Clicked. The value emitted is the integer interpretation of the `clickText` property (or the `clickCheckedText` property if the button was checked)

9.101.3.2 `void QERadioButton::dbValueChanged (const QString & out) [signal]`

Sent when the widget is updated following a data change Can be used to pass on EPICS data (as presented in this widget) to other widgets. For example a QList widget could log updates from this widget.

9.101.3.3 `void QERadioButton::launchGui (QString guiName, QForm::creationOptions creationOption) [inline, slot]`

Default slot used to create a new GUI if there is no slot indicated in the [ContainerProfile](#) class. This slot is typically used when the button is pressed within the Designer preview window to allow the operation of the button to be tested. If an application does not specify a slot to use for creating new windows (through the [ContainerProfile](#) class) a window will still be created through this slot, but it will not respect the window creation options or any other window related application constraints. For example, the QEGui application does provide a slot for creating new GUIs in the [ContainerProfile](#) class which respects the creation options, knows how to add tabs in the application, and extend the application's window menu in the menu bar.

Reimplemented from [QEGenericButton](#).

9.101.3.4 `void QERadioButton::pressed (int value) [signal]`

Button has been Pressed. The value emitted is the integer interpretation of the `press-Text` property

9.101.3.5 void QERadioButton::released (int *value*) [signal]

Button has been Released The value emitted is the integer interpretation of the release-Text property

9.101.4 Property Documentation

9.101.4.1 bool QERadioButton::addUnits [read, write]

If true (default), add engineering units supplied with the data.

9.101.4.2 Qt::Alignment QERadioButton::alignment [read, write]

Set the buttons text alignment. Left justification is particularly useful when displaying quickly changing numeric data updates.

9.101.4.3 bool QERadioButton::allowDrop [read, write]

Allow drag/drops operations to this widget. Default is false. Any dropped text will be used as a new variable name.

Reimplemented from [QEDragDrop](#).

9.101.4.4 QStringList QERadioButton::arguments [read, write]

Arguments for program specified in the 'program' property.

Reimplemented from [QEGenericButton](#).

9.101.4.5 ArrayActions QERadioButton::arrayAction [read, write]

Text formatting option for array data. Default is ASCII. Options are:

- ASCII - treat array as a single text string. For example an array of three characters 'a' 'b' 'c' will be formatted as 'abc'.
- APPEND - treat array as an array of numbers and format a string containing them all with a space between each. For example, an array of three numbers 10, 11 and 12 will be formatted as '10 11 12'.
- INDEX - Extract a single item from the array. The item is then formatted as any other non array data would be. The item selected is determined by the arrayIndex property. For example, if arrayIndex property is 1, an array of three numbers 10, 11 and 12 will be formatted as '11'.

9.101.4.6 QString QERadioButton::clickCheckedText [read, write]

Text used to compare with text written or read to determine if push button should be marked as checked. Note, must be an exact match following formatting of data updates. When writing values, the 'pressText', 'ReleaseText', or 'clickedtext' must match this property to cause the button to be checked when the write occurs.

Good example: formatting set to display a data value of '1' as 'On', clickCheckedText is 'On', clickText is 'On'. In this example, the push button will be checked when a data update occurs with a value of 1 or when the button is clicked.

Bad example: formatting set to display a data value of '1' as 'On', clickCheckedText is 'On', clickText is '1'. In this example, the push button will be checked when a data update occurs with a value of 1 but, although a valid value will be written when clicked, the button will not be checked when clicked as '1' is not the same as 'On'.

Reimplemented from [QEGenericButton](#).

9.101.4.7 QString QERadioButton::clickText [read, write]

Value written when user clicks button if 'writeOnClick' property is true

Reimplemented from [QEGenericButton](#).

9.101.4.8 bool QERadioButton::confirmAction [read, write]

If true, a dialog will be presented asking the user to confirm if the button action should be carried out

9.101.4.9 CreationOptionNames QERadioButton::creationOption [read, write]

Creation options when opening a new GUI. Open a new window, open a new tab, or replace the current window. the creation option is supplied when the button generates a newGui signal. Application code connected to this signal should honour this request if possible. When used within the QEGui application, the QEGui application creates a new window, new tab, or replaces the current window as appropriate.

Reimplemented from [QEGenericButton](#).

9.101.4.10 bool QERadioButton::displayAlarmState [read, write]

If set (default) widget will indicate the alarm state of any variable data is displaying. Typically the background colour is set to indicate the alarm state. Note, this property is included in the set of standard properties as it applies to most widgets. It will do nothing for widgets that don't display data.

Reimplemented from [standardProperties](#).

9.101.4.11 Formats QERadioButton::format [read, write]

Format to apply to data. Default is 'Default' in which case the data type supplied with the data determines how the data is formatted. For all other options, an attempt is made to format the data as requested (whatever its native form).

9.101.4.12 QString QERadioButton::guiFile [read, write]

File name of GUI to be presented on button click. File name can be absolute, relative to the path of the QEform in which the [QEPushButton](#) is located, relative to the any path in the path list published in the [ContainerProfile](#) class, or relative to the current path. See [QEWidget::openQEFile\(\)](#) in [QEWidget.cpp](#) for details.

9.101.4.13 unsigned QERadioButton::int [read, write]

Set the ID used by the message filtering system. Default is zero. Widgets or applications that use messages from the framework have the option of filtering on this ID. For example, by using a unique message source ID a [QELog](#) widget may be set up to only log messages from a select set of widgets.

Base used for when formatting integers. Default is 10 (duh!)

Index used to select a single item of data for formatting from an array of data. Default is 0. Only used when the `arrayAction` property is INDEX. Refer to the `arrayAction` property for more details.

9.101.4.14 QString QERadioButton::labelText [read, write]

Button label text (prior to substitution). Macro substitutions will be applied to this text and the result will be set as the button text. Used when data updates are not being represented in the button text. IF NOT LEFT EMPTY, THIS TEXT WILL TAKE PRIORITY OVER THE PUSH BUTTON 'text' PROPERTY! For example, a button in a sub form may have a 'labelText' property of 'Turn Pump On'. When the sub form is used twice in a main form with substitutions PUMPNUM=1 and PUMPNUM=2 respectively, the two identical buttons in the sub forms will have the labels 'Turn Pump 1 On' and 'Turn Pump 2 On' respectively.

Reimplemented from [QEGenericButton](#).

9.101.4.15 bool QERadioButton::leadingZero [read, write]

If true (default), always add a leading zero when formatting numbers.

9.101.4.16 QString QERadioButton::localEnumeration [read, write]

An enumeration list used to data values. Used only when the formatting option is 'local enumeration'. Value is converted to an integer and used to select a string from this list.

Format is:

```
[[<|<=|=|!=|>|=|>]value1|*]: string1 , [[<|<=|=|!=|>|=|>]value2|*]: string2 , [[<|<=|=|!=|>|=|>]value3|*]: string3 , ...
```

Where: < Less than <= Less than or equal = Equal (default if no operator specified)
>= Greather than or equal > Greater than Always match (used to specify default text)

Values may be numeric or textual Values do not have to be in any order, but first match wins Values may be quoted Strings may be quoted Consecutive values do not have to be present. Operator is assumed to be equality if not present. White space is ignored except within quoted strings.

may be included in a string to indicate a line break

Examples are:

```
0:Off,1:On 0 : "Pump Running", 1 : "Pump not running" 0:"", 1:"Warning!\nAlarm"
<2:"Value is less than two", =2:"Value is equal to two", >2:"Value is grater than 2"
3:"Beamline Available", *:"" "Pump Off": "OH NO!, the pump is OFF!","Pump On": "It's OK, the pump is on"
```

The data value is converted to a string if no enumeration for that value is available. For example, if the local enumeration is '0:off,1:on', and a value of 10 is processed, the text generated is '10'. If a blank string is required, this should be explicit. for example, '0:off,1:on,10: ""'

A range of numbers can be covered by a pair of values as in the following example:
>=4:"Between 4 and 8", <=8:"Between 4 and 8"

9.101.4.17 Notations QERadioButton::notation [read, write]

Notation used for numerical formatting. Default is fixed.

9.101.4.18 QString QERadioButton::password [read, write]

Password user will need to enter before any action is taken

Reimplemented from [QEGenericButton](#).

9.101.4.19 QPixmap QERadioButton::pixmap0 [read, write]

Pixmap to display if updateOption is Icon or TextAndIcon and data value translates to an index of 0

9.101.4.20 QPixmap QERadioButton::pixmap1 [read, write]

Pixmap to display if updateOption is Icon or TextAndIcon and data value translates to an index of 1

9.101.4.21 QPixmap QERadioButton::pixmap2 [read, write]

Pixmap to display if updateOption is Icon or TextAndIcon and data value translates to an index of 2

9.101.4.22 QPixmap QERadioButton::pixmap3 [read, write]

Pixmap to display if updateOption is Icon or TextAndIcon and data value translates to an index of 3

9.101.4.23 QPixmap QERadioButton::pixmap4 [read, write]

Pixmap to display if updateOption is Icon or TextAndIcon and data value translates to an index of 4

9.101.4.24 QPixmap QERadioButton::pixmap5 [read, write]

Pixmap to display if updateOption is Icon or TextAndIcon and data value translates to an index of 5

9.101.4.25 QPixmap QERadioButton::pixmap6 [read, write]

Pixmap to display if updateOption is Icon or TextAndIcon and data value translates to an index of 6

9.101.4.26 QPixmap QERadioButton::pixmap7 [read, write]

Pixmap to display if updateOption is Icon or TextAndIcon and data value translates to an index of 7

9.101.4.27 int QERadioButton::precision [read, write]

Precision used when formatting floating point numbers. The default is 4. This is only used if useDbPrecision is false.

9.101.4.28 QString QERadioButton::pressText [read, write]

Value written when user presses button if 'writeOnPress' property is true

Reimplemented from [QEGenericButton](#).

9.101.4.29 QString QERadioButton::prioritySubstitutions [read, write]

Overriding macro substitutions. These macro substitutions take precedence over any existing macro substitutions defined by the `variableSubstitutions` property, any parent forms, or the application containing the button. These macro substitutions are particularly useful when the button's function is to reload the same form but with different macro substitutions. The `variableSubstitutions` property cannot be used for this since, although they are added to the list of macro substitutions applied to the new form, they are appended to the list and the existing macro substitutions take precedence.

Reimplemented from [QEGenericButton](#).

9.101.4.30 QString QERadioButton::program [read, write]

Program to run when the button is clicked. No attempt to run a program is made if this property is empty. Example: `firefox`

Reimplemented from [QEGenericButton](#).

9.101.4.31 QString QERadioButton::releaseText [read, write]

Value written when user releases button if `'writeOnRelease'` property is true

Reimplemented from [QEGenericButton](#).

9.101.4.32 bool QERadioButton::subscribe [read, write]

Sets if this widget subscribes for data updates and displays current data. Default is `'true'` (subscribes for and displays data updates)

Reimplemented from [QEWWidget](#).

9.101.4.33 bool QERadioButton::trailingZeros [read, write]

If true (default), always remove any trailing zeros when formatting numbers.

9.101.4.34 UpdateOptions QERadioButton::updateOption [read, write]

Update options (text, pixmap, both, or state (checked or unchecked))

Reimplemented from [QEGenericButton](#).

9.101.4.35 bool QERadioButton::useDbPrecision [read, write]

If true (default), format floating point numbers using the precision supplied with the data. If false, the `precision` property is used.

9.101.4.36 UserLevels QERadioButton::userLevelEnabled [read, write]

Lowest user level at which the widget is enabled. Default is 'User'. Used when designing GUIs that allow access to more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through `setUserLevel()` Widgets that are always accessible should be visible at 'User'. Widgets that are only accessible to scientists managing the facility should be visible at 'Scientist'. Widgets that are only accessible to engineers maintaining the facility should be visible at 'Engineer'.

9.101.4.37 QString QERadioButton::userLevelEngineerStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'Engineer' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the `styleManager` class. Refer to the `styleManager` class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.101.4.38 QString QERadioButton::userLevelScientistStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'Scientist' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the `styleManager` class. Refer to the `styleManager` class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.101.4.39 QString QERadioButton::userLevelUserStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'User' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the `styleManager` class. Refer to the `styleManager` class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.101.4.40 UserLevels QERadioButton::userLevelVisibility [read, write]

Lowest user level at which the widget is visible. Default is 'User'. Used when designing GUIs that display more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through `setUserLevel()` Widgets that are always visible should be visible at 'User'. Widgets that are only used by scientists managing the facility should be visible at 'Scientist'. Widgets that are only used by engineers maintaining the facility should be visible at 'Engineer'.

9.101.4.41 `QString QERadioButton::variable` [read, write]

EPICS variable name (CA PV)

9.101.4.42 `bool QERadioButton::variableAsToolTip` [read, write]

Use the variable as the tool tip. Default is true. Tool tip property will be overwritten by the variable name.

Reimplemented from [QEToolTip](#).

9.101.4.43 `QString QERadioButton::variableSubstitutions` [read, write]

Macro substitutions. The default is no substitutions. The format is NAME1=VALUE1[, NAME2=VALUE2... Values may be quoted strings. For example, 'PUMP=PMP3, NAME = "My Pump"' These substitutions are applied to variable names for all QE widgets. In some widgets are also used for other purposes.

9.101.4.44 `bool QERadioButton::visible` [read, write]

Display the widget. Default is true. Setting this property false is usefull if widget is only used to provide a signal - for example, when supplying data to a [QELink](#) widget. Note, when false the widget will still be visible in Qt Designer.

9.101.4.45 `bool QERadioButton::writeOnClick` [read, write]

If true, the 'clickText' property is written when the button is clicked. Default is true

Reimplemented from [QEGenericButton](#).

9.101.4.46 `bool QERadioButton::writeOnPress` [read, write]

If true, the 'pressText' property is written when the button is pressed. Default is false

Reimplemented from [QEGenericButton](#).

9.101.4.47 `bool QERadioButton::writeOnRelease` [read, write]

If true, the 'releaseText' property is written when the button is released. Default is false


Reimplemented from [QEGenericButton](#).

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEButton/QERadioButton.h
- /tmp/epicsqt/trunk/framework/widgets/QEButton/QERadioButton.cpp

9.102 QERecipe Class Reference

Inheritance diagram for QERecipe:

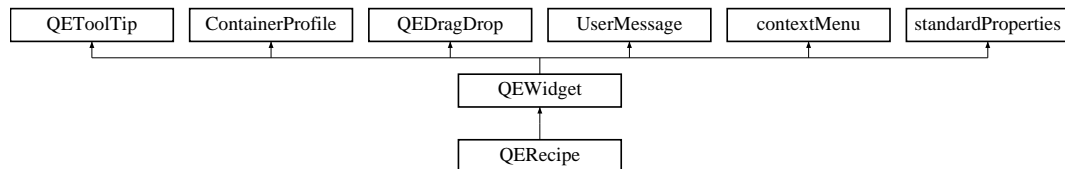

Public Types

- enum **configurationTypesProperty** { **File** = FROM_FILE, **Text** = FROM_TEXT }
- enum **detailsLayoutProperty** { **Top** = TOP, **Bottom** = BOTTOM, **Left** = LEFT, **Right** = RIGHT }
- enum **userTypesProperty** { **User** = userLevelTypes::USERLEVEL_USER, **Scientist** = userLevelTypes::USERLEVEL_SCIENTIST, **Engineer** = userLevelTypes::USERLEVEL_ENGINEER }

Public Member Functions

- **QERecipe** (QWidget *pParent=0)
- void **setRecipeDescription** (QString pValue)
- QString **getRecipeDescription** ()
- void **setShowRecipeList** (bool pValue)
- bool **getShowRecipeList** ()
- void **setShowNew** (bool pValue)
- bool **getShowNew** ()
- void **setShowSave** (bool pValue)
- bool **getShowSave** ()
- void **setShowDelete** (bool pValue)
- bool **getShowDelete** ()
- void **setShowApply** (bool pValue)
- bool **getShowApply** ()
- void **setShowRead** (bool pValue)
- bool **getShowRead** ()
- void **setShowFields** (bool pValue)
- bool **getShowFields** ()
- void **setConfigurationType** (int pValue)
- int **getConfigurationType** ()
- void **setConfigurationFile** (QString pValue)
- QString **getConfigurationFile** ()
- void **setRecipeFile** (QString pValue)
- QString **getRecipeFile** ()

- void **setConfigurationText** (QString pValue)
- QString **getConfigurationText** ()
- void **setDetailsLayout** (int pValue)
- int **getDetailsLayout** ()
- void **setCurrentUserType** (int pValue)
- int **getCurrentUserType** ()
- bool **saveRecipeList** ()
- void **refreshRecipeList** ()
- void **refreshButton** ()
- void **userLevelChanged** ([userLevelTypes::userLevels](#) pValue)
- void **setConfigurationTypeProperty** (configurationTypesProperty pConfigurationType)
- configurationTypesProperty **getConfigurationTypeProperty** ()
- void **setDetailsLayoutProperty** (detailsLayoutProperty pDetailsLayout)
- detailsLayoutProperty **getDetailsLayoutProperty** ()
- void **setCurrentUserTypeProperty** (userTypesProperty pUserType)
- userTypesProperty **getCurrentUserTypeProperty** ()

Protected Attributes

- QLabel * **qLabelRecipeDescription**
- QComboBox * **qComboBoxRecipeList**
- QPushButton * **qPushButtonNew**
- QPushButton * **qPushButtonSave**
- QPushButton * **qPushButtonDelete**
- QPushButton * **qPushButtonApply**
- QPushButton * **qPushButtonRead**
- [QEConfiguredLayout](#) * **qEConfiguredLayoutRecipeFields**
- QDomDocument **document**
- QString **recipeFile**
- QString **filename**
- int **detailsLayout**
- int **currentUserType**

Properties

- QString **recipeDescription**
- bool **showRecipeList**
- bool **showNew**
- bool **showSave**
- bool **showDelete**
- bool **showApply**
- bool **showRead**
- bool **showFields**
- configurationTypesProperty **configurationType**

- QString **configurationFile**
- QString **configurationText**
- detailsLayoutProperty **detailsLayout**
- userTypesProperty **currentUserType**

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QERecipe/QERecipe.h
- /tmp/epicsqt/trunk/framework/widgets/QERecipe/QERecipe.cpp

9.103 QERecordFieldName Class Reference

Static Public Member Functions

- static QString **recordName** (const QString &pvName)
- static QString **fieldName** (const QString &pvName)
- static QString **fieldPvName** (const QString &pvName, const QString &field)
- static QString **rtypePvName** (const QString &pvName)
- static bool **pvNameIsValid** (const QString &pvName)
- static bool **extractPvName** (const QString &item, QString &pvName)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEPvProperties/QEPvPropertiesUtilities.h
- /tmp/epicsqt/trunk/framework/widgets/QEPvProperties/QEPvPropertiesUtilities.cpp

9.104 QERecordSpec Class Reference

Public Member Functions

- **QERecordSpec** (const QString recordType)
- QString **getRecordType** ()
- QString **getFieldName** (const int index)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEPvProperties/QEPvPropertiesUtilities.h
- /tmp/epicsqt/trunk/framework/widgets/QEPvProperties/QEPvPropertiesUtilities.cpp

9.105 QERecordSpecList Class Reference

Public Member Functions


- [QERecordSpec](#) * **find** (const QString recordType)
- void **appendOrReplace** ([QERecordSpec](#) *recordSpec)
- bool **processRecordSpecFile** (const QString &filename)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEPvProperties/QEPvPropertiesUtilities.h
- /tmp/epicsqt/trunk/framework/widgets/QEPvProperties/QEPvPropertiesUtilities.cpp

9.106 QEScript Class Reference

Inheritance diagram for QEScript:

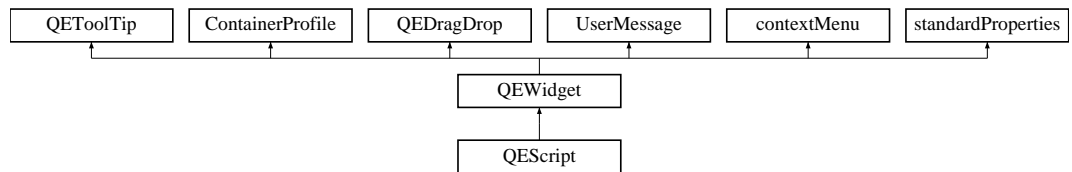

Public Types

- enum **detailsLayoutProperty** { **Top** = TOP, **Bottom** = BOTTOM, **Left** = LEFT, **Right** = RIGHT }

Signals

- void **selected** (QString pFilename)

Public Member Functions

- **QEScript** (QWidget *pParent=0)
- void **setDirectoryPath** (QString pValue)
- QString **getDirectoryPath** ()
- void **setShowDirectoryPath** (bool pValue)
- bool **getShowDirectoryPath** ()
- void **setShowDirectoryBrowser** (bool pValue)
- bool **getShowDirectoryBrowser** ()
- void **setShowRefresh** (bool pValue)

- bool **getShowRefresh** ()
- void **setShowColumnTime** (bool pValue)
- bool **getShowColumnTime** ()
- void **setShowColumnSize** (bool pValue)
- bool **getShowColumnSize** ()
- void **setShowColumnFilename** (bool pValue)
- bool **getShowColumnFilename** ()
- void **setShowFileExtension** (bool pValue)
- bool **getShowFileExtension** ()
- void **setFileFilter** (QString pValue)
- QString **getFileFilter** ()
- void **setDetailsLayout** (int pValue)
- int **getDetailsLayout** ()
- void **updateTable** ()
- void **setDetailsLayoutProperty** (detailsLayoutProperty pDetailsLayout)
- detailsLayoutProperty **getDetailsLayoutProperty** ()

Protected Attributes

- QLineEdit * **qlineEditDirectoryPath**
- QPushButton * **qPushButtonDirectoryBrowser**
- QPushButton * **qPushButtonRefresh**
- [_QTableWidgetScript](#) * **qTableWidgetScript**
- QString **fileFilter**
- bool **showFileExtension**
- int **detailsLayout**

Properties

- QString **directoryPath**
- bool **showDirectoryPath**
- bool **showDirectoryBrowser**
- bool **showRefresh**
- bool **showColumnTime**
- bool **showColumnSize**
- bool **showColumnFilename**
- detailsLayoutProperty **detailsLayout**


The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEScript/QEScript.h
- /tmp/epicsqt/trunk/framework/widgets/QEScript/QEScript.cpp

9.107 QEShape Class Reference

```
#include <QEShape.h>
```

Inheritance diagram for QEShape:

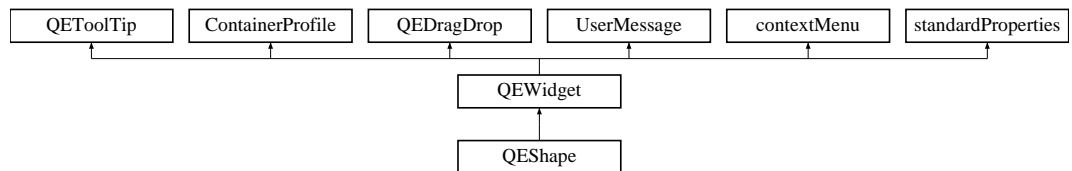

Public Types

- enum [shapeOptions](#) {
Line, Points, Polyline, Polygon,
Rect, RoundedRect, Ellipse, Arc,
Chord, Pie, Path }
- enum [animationOptions](#) {
Width, Height, X, Y,
Transperency, Rotation, ColourHue, ColourSaturation,
ColourValue, ColourIndex, Penwidth }
- enum [UserLevels](#) { [User](#) = userLevelTypes::USERLEVEL_USER, [Scientist](#) = userLevelTypes::USERLEVEL_SCIENTIST, [Engineer](#) = userLevelTypes::USERLEVEL_ENGINEER }

Signals

- void [dbValueChanged1](#) (const qlonglong &out)
- void [dbValueChanged2](#) (const qlonglong &out)
- void [dbValueChanged3](#) (const qlonglong &out)
- void [dbValueChanged4](#) (const qlonglong &out)
- void [dbValueChanged5](#) (const qlonglong &out)
- void [dbValueChanged6](#) (const qlonglong &out)

Public Member Functions

- [QEShape](#) (QWidget *parent=0)
- [QEShape](#) (const QString &variableName, QWidget *parent=0)
- void [scaleBy](#) (const int m, const int d)
Scale the widgets my m/d.
- void [setAnimation](#) ([animationOptions](#) animation, const int index)
Access function for #animation' properties - refer to animation' properties for details.
- [animationOptions](#) [getAnimation](#) (const int index)

- Access function for #animation' properties - refer to animation' properties for details.*

 - void [setScale](#) (const double scale, const int index)
- Access function for #scale' properties - refer to scale' properties for details.*

 - double [getScale](#) (const int index)
- Access function for #scale' properties - refer to scale' properties for details.*

 - void [setOffset](#) (const double offset, const int index)
- Access function for #offset' properties - refer to offset' properties for details.*

 - double [getOffset](#) (const int index)
- Access function for #offset' properties - refer to offset' properties for details.*

 - void [setBorder](#) (const bool border)
- Access function for #border' properties - refer to border' properties for details.*

 - bool [getBorder](#) ()
- Access function for #border' properties - refer to border' properties for details.*

 - void [setFill](#) (const bool fill)
- Access function for #fill' properties - refer to fill' properties for details.*

 - bool [getFill](#) ()
- Access function for #fill' properties - refer to fill' properties for details.*

 - void [setShape](#) ([shapeOptions](#) shape)
- Access function for #shape' properties - refer to shape' properties for details.*

 - [shapeOptions](#) [getShape](#) ()
- Access function for #shape' properties - refer to shape' properties for details.*

 - void [setNumPoints](#) (const unsigned int numPoints)
- Access function for #number of points' properties - refer to number of points' properties for details.*

 - unsigned int [getNumPoints](#) ()
- Access function for #number of points' properties - refer to number of points' properties for details.*

 - void [setOriginTranslation](#) (const QPoint originTranslation)
- Access function for #origin translation' properties - refer to origin translation' properties for details.*

 - QPoint [getOriginTranslation](#) ()
- Access function for #origin translation' properties - refer to origin translation' properties for details.*

 - void [setPoint](#) (const QPoint point, const int index)
- Access function for #point' properties - refer to point' properties for details.*

 - QPoint [getPoint](#) (const int index)
- Access function for #point' properties - refer to point' properties for details.*

 - void [setColor](#) (const QColor color, const int index)
- Access function for #colour' properties - refer to colour' properties for details.*

 - QColor [getColor](#) (const int index)
- Access function for #colour' properties - refer to colour' properties for details.*

 - void [setDrawBorder](#) (const bool drawBorder)
- Access function for #draw border' properties - refer to draw border' properties for details.*

- bool [getDrawBorder](#) ()
Access function for #draw border' properties - refer to draw border' properties for details.
- void [setLineWidth](#) (const unsigned int lineWidth)
Access function for #line width' properties - refer to line width' properties for details.
- unsigned int [getLineWidth](#) ()
Access function for #line width' properties - refer to line width' properties for details.
- void [setStartAngle](#) (const double startAngle)
Access function for #start angle' properties - refer to start angle' properties for details.
- double [getStartAngle](#) ()
Access function for #start angle' properties - refer to start angle' properties for details.
- void [setRotation](#) (const double rotation)
Access function for #rotation' properties - refer to rotation' properties for details.
- double [getRotation](#) ()
Access function for #rotation' properties - refer to rotation' properties for details.
- void [setArcLength](#) (const double arcLength)
Access function for #arc length' properties - refer to arc length' properties for details.
- double [getArcLength](#) ()
Access function for #arc length' properties - refer to arc length' properties for details.
- [UserLevels](#) [getUserLevelVisibilityProperty](#) ()
Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.
- void [setUserLevelVisibilityProperty](#) ([UserLevels](#) level)
Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.
- [UserLevels](#) [getUserLevelEnabledProperty](#) ()
Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.
- void [setUserLevelEnabledProperty](#) ([UserLevels](#) level)
Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.

Properties

- QString [variable1](#)
- QString [variable2](#)
- QString [variable3](#)
- QString [variable4](#)
- QString [variable5](#)
- QString [variable6](#)
- QString [variableSubstitutions](#)
- bool [variableAsToolTip](#)
- bool [allowDrop](#)
- bool [visible](#)
- unsigned [int](#)

- QString [userLevelUserStyle](#)
- QString [userLevelScientistStyle](#)
- QString [userLevelEngineerStyle](#)
- UserLevels [userLevelVisibility](#)
- UserLevels [userLevelEnabled](#)
- bool [displayAlarmState](#)
- animationOptions [animation1](#)
- animationOptions [animation2](#)
- animationOptions [animation3](#)
- animationOptions [animation4](#)
- animationOptions [animation5](#)
- animationOptions [animation6](#)
- double [scale1](#)

Scale factor applied to data from the 1st variable before it is used to animate the shape.

- double [scale2](#)
- double [scale3](#)
- double [scale4](#)
- double [scale5](#)
- double [scale6](#)
- double [offset1](#)
- double [offset2](#)
- double [offset3](#)
- double [offset4](#)
- double [offset5](#)
- double [offset6](#)
- QPoint [point1](#)
- QPoint [point2](#)
- QPoint [point3](#)
- QPoint [point4](#)
- QPoint [point5](#)
- QPoint [point6](#)
- QPoint [point7](#)
- QPoint [point8](#)
- QPoint [point9](#)
- QPoint [point10](#)
- QColor [color1](#)
- QColor [color2](#)
- QColor [color3](#)
- QColor [color4](#)
- QColor [color5](#)
- QColor [color6](#)
- QColor [color7](#)
- QColor [color8](#)
- QColor [color9](#)
- QColor [color10](#)

9.107.1 Detailed Description

This class is a EPICS aware shape widget based on the Qt widget. One of several shapes can be drawn within the widget, and up to 6 variables can be used to animate various attributes of the shape. For example to represent beam positino and size, an ellipse can be drawn with four variables animating its vertcal and horizontal size and position. It is tightly integrated with the base class [QEWidget](#) which provides generic support such as macro substitutions, drag/drop, and standard properties.

9.107.2 Member Enumeration Documentation

9.107.2.1 enum [QEShape::animationOptions](#)

Options for how a variable will animate the shape.

9.107.2.2 enum [QEShape::shapeOptions](#)

Options for the type of shape.

9.107.2.3 enum [QEShape::UserLevels](#)

User friendly enumerations for [userLevelVisibility](#) and [userLevelEnabled](#) properties - refer to [userLevelVisibility](#) and [userLevelEnabled](#) properties and [userLevel](#) enumeration for details.

Enumerator:

User Refer to `USERLEVEL_USER` for details.

Scientist Refer to `USERLEVEL_SCIENTIST` for details.

Engineer Refer to `USERLEVEL_ENGINEER` for details.

9.107.3 Constructor & Destructor Documentation

9.107.3.1 [QEShape::QEShape \(QWidget * *parent* = 0 \)](#)

Create without a variable. Use `setVariableNameProperty()` and `setSubstitutionsProperty()` to define a variable and, optionally, macro substitutions later.

9.107.3.2 [QEShape::QEShape \(const QString & *variableName*, QWidget * *parent* = 0 \)](#)

Create with a single variable. (Note, the [QEShape](#) widget can use up to 6 variables) A connection is automatically established. If macro substitutions are required, create without a variable and set the variable and macro substitutions after creation.

9.107.4 Member Function Documentation

9.107.4.1 void QEShape::dbValueChanged1 (const qulonglong & out) [signal]

Sent when the widget is updated following a data change for the first variable Can be used to pass on EPICS data (as presented in this widget) to other widgets. For example a QList widget could log updates from this widget.

9.107.4.2 void QEShape::dbValueChanged2 (const qulonglong & out) [signal]

Sent when the widget is updated following a data change for the second variable Can be used to pass on EPICS data (as presented in this widget) to other widgets. For example a QList widget could log updates from this widget.

9.107.4.3 void QEShape::dbValueChanged3 (const qulonglong & out) [signal]

Sent when the widget is updated following a data change for the third variable Can be used to pass on EPICS data (as presented in this widget) to other widgets. For example a QList widget could log updates from this widget.

9.107.4.4 void QEShape::dbValueChanged4 (const qulonglong & out) [signal]

Sent when the widget is updated following a data change for the fourth variable Can be used to pass on EPICS data (as presented in this widget) to other widgets. For example a QList widget could log updates from this widget.

9.107.4.5 void QEShape::dbValueChanged5 (const qulonglong & out) [signal]

Sent when the widget is updated following a data change for the fifth variable Can be used to pass on EPICS data (as presented in this widget) to other widgets. For example a QList widget could log updates from this widget.

9.107.4.6 void QEShape::dbValueChanged6 (const qulonglong & out) [signal]

Sent when the widget is updated following a data change for the sixth variable Can be used to pass on EPICS data (as presented in this widget) to other widgets. For example a QList widget could log updates from this widget.

9.107.5 Property Documentation

9.107.5.1 bool QEShape::allowDrop [read, write]

Allow drag/drops operations to this widget. Default is false. Any dropped text will be used as a new variable name.

Reimplemented from [QEDragDrop](#).

9.107.5.2 **animationOptions QEShape::animation1** [read, write]

Animation to be effected by the 1st variable. This is used to select what the effect changing data for the 1st variable will have on the shape.

9.107.5.3 **animationOptions QEShape::animation2** [read, write]

Animation to be effected by the 2nd variable. This is used to select what the effect changing data for the 2nd variable will have on the shape.

9.107.5.4 **animationOptions QEShape::animation3** [read, write]

Animation to be effected by the 3rd variable. This is used to select what the effect changing data for the 3rd variable will have on the shape.

9.107.5.5 **animationOptions QEShape::animation4** [read, write]

Animation to be effected by the 4th variable. This is used to select what the effect changing data for the 4th variable will have on the shape.

9.107.5.6 **animationOptions QEShape::animation5** [read, write]

Animation to be effected by the 5th variable. This is used to select what the effect changing data for the 5th variable will have on the shape.

9.107.5.7 **animationOptions QEShape::animation6** [read, write]

Animation to be effected by the 6th variable. This is used to select what the effect changing data for the 6th variable will have on the shape.

9.107.5.8 **QColor QEShape::color1** [read, write]

Used by the color animation to determine the color based on a data value. The scaled and offset data is used as an index to select color properties 'color1' to 'color10'.

9.107.5.9 **QColor QEShape::color10** [read, write]

Used by the color animation to determine the color based on a data value. The scaled and offset data is used as an index to select color properties 'color1' to 'color10'.

9.107.5.10 QColor QEShape::color2 [read, write]

Used by the color animation to determine the color based on a data value. The scaled and offset data is used as an index to select color properties 'color1' to 'color10'.

9.107.5.11 QColor QEShape::color3 [read, write]

Used by the color animation to determine the color based on a data value. The scaled and offset data is used as an index to select color properties 'color1' to 'color10'.

9.107.5.12 QColor QEShape::color4 [read, write]

Used by the color animation to determine the color based on a data value. The scaled and offset data is used as an index to select color properties 'color1' to 'color10'.

9.107.5.13 QColor QEShape::color5 [read, write]

Used by the color animation to determine the color based on a data value. The scaled and offset data is used as an index to select color properties 'color1' to 'color10'.

9.107.5.14 QColor QEShape::color6 [read, write]

Used by the color animation to determine the color based on a data value. The scaled and offset data is used as an index to select color properties 'color1' to 'color10'.

9.107.5.15 QColor QEShape::color7 [read, write]

Used by the color animation to determine the color based on a data value. The scaled and offset data is used as an index to select color properties 'color1' to 'color10'.

9.107.5.16 QColor QEShape::color8 [read, write]

Used by the color animation to determine the color based on a data value. The scaled and offset data is used as an index to select color properties 'color1' to 'color10'.

9.107.5.17 QColor QEShape::color9 [read, write]

Used by the color animation to determine the color based on a data value. The scaled and offset data is used as an index to select color properties 'color1' to 'color10'.

9.107.5.18 bool QEShape::displayAlarmState [read, write]

If set (default) widget will indicate the alarm state of any variable data is displaying. Typically the background colour is set to indicate the alarm state. Note, this property is

included in the set of standard properties as it applies to most widgets. It will do nothing for widgets that don't display data.

Reimplemented from [standardProperties](#).

9.107.5.19 unsigned QEShape::int [read, write]

Set the ID used by the message filtering system. Default is zero. Widgets or applications that use messages from the framework have the option of filtering on this ID. For example, by using a unique message source ID a [QELog](#) widget may be set up to only log messages from a select set of widgets.

The number of points to use when drawing shapes that are defined by a variable number of points, such as polyline, polygon, path, and series of points.

Sets the width of the pen. Used for the following shapes: Line, Points, Polyline, Polygon, Rect, RoundedRect, Ellipse, Arc, Chord, Pie, Path

9.107.5.20 double QEShape::offset1 [read, write]

Offset applied to data from the 1st variable before it is used to animate the shape

9.107.5.21 double QEShape::offset2 [read, write]

Offset applied to data from the 2nd variable before it is used to animate the shape

9.107.5.22 double QEShape::offset3 [read, write]

Offset applied to data from the 3rd variable before it is used to animate the shape

9.107.5.23 double QEShape::offset4 [read, write]

Offset applied to data from the 4th variable before it is used to animate the shape

9.107.5.24 double QEShape::offset5 [read, write]

Offset applied to data from the 5th variable before it is used to animate the shape

9.107.5.25 double QEShape::offset6 [read, write]

Offset applied to data from the 6th variable before it is used to animate the shape

9.107.5.26 QPoint QEShape::point1 [read, write]

1st coordinate used when drawing the shape. Used for the following shapes: Line, Points, Polyline, Polygon, Rect, RoundedRect, Ellipse, Arc, Chord, Pie, Path, Text, Pixmap

9.107.5.27 QPoint QEShape::point10 [read, write]

10th coordinate used when drawing the shape. Used for the following shapes: Points, Polyline, Polygon, Path

9.107.5.28 QPoint QEShape::point2 [read, write]

2nd coordinate used when drawing the shape. Used for the following shapes: Line, Points, Polyline, Polygon, Rect, RoundedRect, Ellipse, Arc, Chord, Pie, Path, Pixmap

9.107.5.29 QPoint QEShape::point3 [read, write]

3rd coordinate used when drawing the shape. Used for the following shapes: Points, Polyline, Polygon, Path

9.107.5.30 QPoint QEShape::point4 [read, write]

4th coordinate used when drawing the shape. Used for the following shapes: Points, Polyline, Polygon, Path

9.107.5.31 QPoint QEShape::point5 [read, write]

5th coordinate used when drawing the shape. Used for the following shapes: Points, Polyline, Polygon, Path

9.107.5.32 QPoint QEShape::point6 [read, write]

6th coordinate used when drawing the shape. Used for the following shapes: Points, Polyline, Polygon, Path

9.107.5.33 QPoint QEShape::point7 [read, write]

7th coordinate used when drawing the shape. Used for the following shapes: Points, Polyline, Polygon, Path

9.107.5.34 QPoint QEShape::point8 [read, write]

8th coordinate used when drawing the shape. Used for the following shapes: Points, Polyline, Polygon, Path

9.107.5.35 QPoint QEShape::point9 [read, write]

9th coordinate used when drawing the shape. Used for the following shapes: Points, Polyline, Polygon, Path

9.107.5.36 double QEShape::scale2 [read, write]

Scale factor applied to data from the 2nd variable before it is used to animate the shape

9.107.5.37 double QEShape::scale3 [read, write]

Scale factor applied to data from the 3rd variable before it is used to animate the shape

9.107.5.38 double QEShape::scale4 [read, write]

Scale factor applied to data from the 4th variable before it is used to animate the shape

9.107.5.39 double QEShape::scale5 [read, write]

Scale factor applied to data from the 5th variable before it is used to animate the shape

9.107.5.40 double QEShape::scale6 [read, write]

Scale factor applied to data from the 6th variable before it is used to animate the shape

9.107.5.41 UserLevels QEShape::userLevelEnabled [read, write]

Lowest user level at which the widget is enabled. Default is 'User'. Used when designing GUIs that allow access to more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through `setUserLevel()`. Widgets that are always accessible should be visible at 'User'. Widgets that are only accessible to scientists managing the facility should be visible at 'Scientist'. Widgets that are only accessible to engineers maintaining the facility should be visible at 'Engineer'.

9.107.5.42 QString QEShape::userLevelEngineerStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'Engineer' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.107.5.43 QString QEShape::userLevelScientistStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'Scientist' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.107.5.44 QString QEShape::userLevelUserStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'User' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.107.5.45 UserLevels QEShape::userLevelVisibility [read, write]

Lowest user level at which the widget is visible. Default is 'User'. Used when designing GUIs that display more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through setUserLevel() Widgets that are always visible should be visible at 'User'. Widgets that are only used by scientists managing the facility should be visible at 'Scientist'. Widgets that are only used by engineers maintaining the facility should be visible at 'Engineer'.

9.107.5.46 QString QEShape::variable1 [read, write]

EPICS variable name (CA PV). This variable is read and used to animate an attribute of the shape. The value read is first scaled and offset by properties scale1 and offset1 then the attribute selected for animation is selected by the property animation1.

9.107.5.47 QString QEShape::variable2 [read, write]

EPICS variable name (CA PV). This variable is read and used to animate an attribute of the shape. The value read is first scaled and offset by properties scale2 and offset2

then the attribute selected for animation is selected by the property `animation2`.

9.107.5.48 `QString QEShape::variable3` [read, write]

EPICS variable name (CA PV). This variable is read and used to animate an attribute of the shape. The value read is first scaled and offset by properties `scale3` and `offset3` then the attribute selected for animation is selected by the property `animation3`.

9.107.5.49 `QString QEShape::variable4` [read, write]

EPICS variable name (CA PV). This variable is read and used to animate an attribute of the shape. The value read is first scaled and offset by properties `scale4` and `offset4` then the attribute selected for animation is selected by the property `animation4`.

9.107.5.50 `QString QEShape::variable5` [read, write]

EPICS variable name (CA PV). This variable is read and used to animate an attribute of the shape. The value read is first scaled and offset by properties `scale5` and `offset5` then the attribute selected for animation is selected by the property `animation5`.

9.107.5.51 `QString QEShape::variable6` [read, write]

EPICS variable name (CA PV). This variable is read and used to animate an attribute of the shape. The value read is first scaled and offset by properties `scale6` and `offset6` then the attribute selected for animation is selected by the property `animation6`.

9.107.5.52 `bool QEShape::variableAsToolTip` [read, write]

Use the variable as the tool tip. Default is true. Tool tip property will be overwritten by the variable name.

Reimplemented from [QEToolTip](#).

9.107.5.53 `QString QEShape::variableSubstitutions` [read, write]

Macro substitutions. The default is no substitutions. The format is `NAME1=VALUE1[, NAME2=VALUE2...` Values may be quoted strings. For example, `'SAMPLE=SAM1, NAME = "Ref foil"'` These substitutions are applied to all the variable names.

9.107.5.54 `bool QEShape::visible` [read, write]


Display the widget. Default is true. Setting this property false is usefull if widget is only used to provide a signal - for example, when supplying data to a [QELink](#) widget. Note, when false the widget will still be visible in Qt Designer.

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEShape/QEShape.h
- /tmp/epicsqt/trunk/framework/widgets/QEShape/QEShape.cpp

9.108 QESlider Class Reference

Inheritance diagram for QESlider:

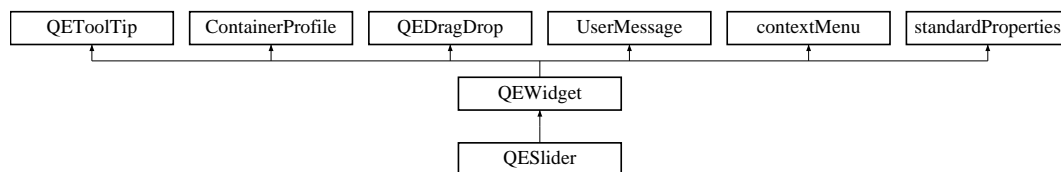

Public Types

- enum [UserLevels](#) { [User](#) = userLevelTypes::USERLEVEL_USER, [Scientist](#) = userLevelTypes::USERLEVEL_SCIENTIST, [Engineer](#) = userLevelTypes::USERLEVEL_ENGINEER }

Signals

- void [dbValueChanged](#) (const qlonglong &out)

Public Member Functions

- **QESlider** (QWidget *parent=0)
- **QESlider** (const QString &variableName, QWidget *parent=0)
- void **setWriteOnChange** (bool [writeOnChange](#))
- bool **getWriteOnChange** ()
- void **setSubscribe** (bool subscribe)
- bool **getSubscribe** ()
- void **setScale** (double scaleIn)
- double **getScale** ()
- void **setOffset** (double offsetIn)
- double **getOffset** ()
- [UserLevels](#) **getUserLevelVisibilityProperty** ()
Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.
- void **setUserLevelVisibilityProperty** ([UserLevels](#) level)
Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.
- [UserLevels](#) **getUserLevelEnabledProperty** ()

Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.

- void [setUserLevelEnabledProperty](#) (UserLevels level)

Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.

Protected Member Functions

- void **establishConnection** (unsigned int variableIndex)
- void **dragEnterEvent** (QDragEnterEvent *event)
- void **dropEvent** (QDropEvent *event)
- void **setDrop** (QVariant drop)
- QVariant **getDrop** ()
- QString **copyVariable** ()
- QVariant **copyData** ()
- void **paste** (QVariant s)

Protected Attributes

- [QEFloatingFormatting](#) **floatingFormatting**
- bool [writeOnChange](#)

Properties

- QString [variable](#)
- QString [variableSubstitutions](#)
- bool [subscribe](#)
- bool [variableAsToolTip](#)
- bool [allowDrop](#)
- bool [visible](#)
- unsigned int
- QString [userLevelUserStyle](#)
- QString [userLevelScientistStyle](#)
- QString [userLevelEngineerStyle](#)
- [UserLevels](#) [userLevelVisibility](#)
- [UserLevels](#) [userLevelEnabled](#)
- bool [displayAlarmState](#)

9.108.1 Member Enumeration Documentation

9.108.1.1 enum [QESlider::UserLevels](#)

User friendly enumerations for [userLevelVisibility](#) and [userLevelEnabled](#) properties - refer to [userLevelVisibility](#) and [userLevelEnabled](#) properties and userLevel enumeration for details.

Enumerator:

User Refer to USERLEVEL_USER for details.

Scientist Refer to USERLEVEL_SCIENTIST for details.

Engineer Refer to USERLEVEL_ENGINEER for details.

9.108.2 Member Function Documentation

9.108.2.1 void QESlider::dbValueChanged (const qulonglong & out) [signal]

Sent when the widget is updated following a data change Can be used to pass on EPICS data (as presented in this widget) to other widgets. For example a QList widget could log updates from this widget.

9.108.3 Member Data Documentation

9.108.3.1 bool QESlider::writeOnChange [read, write, protected]

Sets if this widget writes any changes as the user moves the slider (the QSlider 'valueChanged' signal is emitted). Default is 'true' (writes any changes when the QSlider 'valueChanged' signal is emitted).

9.108.4 Property Documentation

9.108.4.1 bool QESlider::allowDrop [read, write]

Allow drag/drops operations to this widget. Default is false. Any dropped text will be used as a new variable name.

Reimplemented from [QEDragDrop](#).

9.108.4.2 bool QESlider::displayAlarmState [read, write]

If set (default) widget will indicate the alarm state of any variable data is displaying. Typically the background colour is set to indicate the alarm state. Note, this property is included in the set of standard properties as it applies to most widgets. It will do nothing for widgets that don't display data.

Reimplemented from [standardProperties](#).

9.108.4.3 unsigned QESlider::int [read, write]

Set the ID used by the message filtering system. Default is zero. Widgets or applications that use messages from the framework have the option of filtering on this ID. For example, by using a unique message source ID a [QELog](#) widget may be set up to only log messages from a select set of widgets.

9.108.4.4 `bool QESlider::subscribe` [read, write]

Sets if this widget subscribes for data updates and displays current data. Default is 'true' (subscribes for and displays data updates)

Reimplemented from [QEWidget](#).

9.108.4.5 `UserLevels QESlider::userLevelEnabled` [read, write]

Lowest user level at which the widget is enabled. Default is 'User'. Used when designing GUIs that allow access to more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through `setUserLevel()`. Widgets that are always accessible should be visible at 'User'. Widgets that are only accessible to scientists managing the facility should be visible at 'Scientist'. Widgets that are only accessible to engineers maintaining the facility should be visible at 'Engineer'.

9.108.4.6 `QString QESlider::userLevelEngineerStyle` [read, write]

Style Sheet string to be applied when the widget is displayed in 'Engineer' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.108.4.7 `QString QESlider::userLevelScientistStyle` [read, write]

Style Sheet string to be applied when the widget is displayed in 'Scientist' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.108.4.8 `QString QESlider::userLevelUserStyle` [read, write]

Style Sheet string to be applied when the widget is displayed in 'User' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the styleManager class. Refer to the styleManager class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.108.4.9 UserLevels QESlider::userLevelVisibility [read, write]

Lowest user level at which the widget is visible. Default is 'User'. Used when designing GUIs that display more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programmatically through setUserLevel(). Widgets that are always visible should be visible at 'User'. Widgets that are only used by scientists managing the facility should be visible at 'Scientist'. Widgets that are only used by engineers maintaining the facility should be visible at 'Engineer'.

9.108.4.10 QString QESlider::variable [read, write]

EPICS variable name (CA PV)

9.108.4.11 bool QESlider::variableAsToolTip [read, write]

Use the variable as the tool tip. Default is true. Tool tip property will be overwritten by the variable name.

Reimplemented from [QEToolTip](#).

9.108.4.12 QString QESlider::variableSubstitutions [read, write]

Macro substitutions. The default is no substitutions. The format is NAME1=VALUE1[, NAME2=VALUE2... Values may be quoted strings. For example, 'PUMP=PMP3, NAME = "My Pump"' These substitutions are applied to variable names for all QE widgets. In some widgets are are also used for other purposes.

9.108.4.13 bool QESlider::visible [read, write]


Display the widget. Default is true. Setting this property false is usefull if widget is only used to provide a signal - for example, when supplying data to a [QELink](#) widget. Note, when false the widget will still be visible in Qt Designer.

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QESlider/QESlider.h
- /tmp/epicsqt/trunk/framework/widgets/QESlider/QESlider.cpp

9.109 QESpinBox Class Reference

Inheritance diagram for QESpinBox:

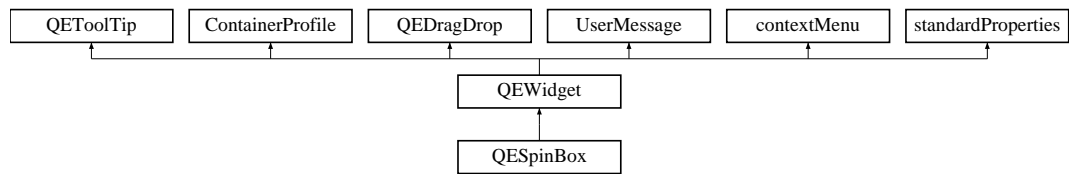

Public Types

- enum [UserLevels](#) { [User](#) = userLevelTypes::USERLEVEL_USER, [Scientist](#) = userLevelTypes::USERLEVEL_SCIENTIST, [Engineer](#) = userLevelTypes::USERLEVEL_ENGINEER }

Signals

- void [dbValueChanged](#) (const double &out)
- void [userChange](#) (const QString &oldValue, const QString &newValue, const QString &lastValue)

Internal use only. Used by [QEConfiguredLayout](#) to be notified when one of its widgets has written something.

Public Member Functions

- QESpinBox** (QWidget *parent=0)
- QESpinBox** (const QString &variableName, QWidget *parent=0)
- void **setWriteOnChange** (bool writeOnChangeIn)
- bool **getWriteOnChange** ()
- void **setSubscribe** (bool subscribe)
- bool **getSubscribe** ()
- void **setAddUnitsAsSuffix** (bool addUnitsAsSuffixIn)
- bool **getAddUnitsAsSuffix** ()
- void **setUseDbPrecisionForDecimals** (bool useDbPrecisionForDecimalsIn)
- bool **getUseDbPrecisionForDecimals** ()
- [UserLevels](#) **getUserLevelVisibilityProperty** ()
Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.
- void **setUserLevelVisibilityProperty** ([UserLevels](#) level)
Access function for [userLevelVisibility](#) property - refer to [userLevelVisibility](#) property for details.
- [UserLevels](#) **getUserLevelEnabledProperty** ()
Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.
- void **setUserLevelEnabledProperty** ([UserLevels](#) level)
Access function for [userLevelEnabled](#) property - refer to [userLevelEnabled](#) property for details.

Protected Member Functions

- void **establishConnection** (unsigned int variableIndex)
- void **dragEnterEvent** (QDragEnterEvent *event)
- void **dropEvent** (QDropEvent *event)
- void **setDrop** (QVariant drop)
- QVariant **getDrop** ()
- QString **copyVariable** ()
- QVariant **copyData** ()
- void **paste** (QVariant s)
- QMenu * **getDefaultContextMenu** ()

Protected Attributes

- [QEFloatingFormatting](#) **floatingFormatting**
- bool **writeOnChange**
- bool **addUnitsAsSuffix**
- bool **useDbPrecisionForDecimal**

Properties

- QString [variable](#)
- QString [variableSubstitutions](#)
- bool [variableAsToolTip](#)
- bool [allowDrop](#)
- bool [visible](#)
- unsigned int
- QString [userLevelUserStyle](#)
- QString [userLevelScientistStyle](#)
- QString [userLevelEngineerStyle](#)
- [UserLevels](#) [userLevelVisibility](#)
- [UserLevels](#) [userLevelEnabled](#)
- bool [displayAlarmState](#)
- bool [subscribe](#)
- bool **useDbPrecision**
- bool **addUnits**

9.109.1 Member Enumeration Documentation

9.109.1.1 enum QESpinBox::UserLevels

User friendly enumerations for [userLevelVisibility](#) and [userLevelEnabled](#) properties - refer to [userLevelVisibility](#) and [userLevelEnabled](#) properties and [userLevel](#) enumeration for details.

Enumerator:

User Refer to USERLEVEL_USER for details.

Scientist Refer to USERLEVEL_SCIENTIST for details.

Engineer Refer to USERLEVEL_ENGINEER for details.

9.109.2 Member Function Documentation**9.109.2.1 void QESpinBox::dbValueChanged (const double & out) [signal]**

Sent when the widget is updated following a data change Can be used to pass on EPICS data (as presented in this widget) to other widgets. For example a QList widget could log updates from this widget.

9.109.3 Property Documentation**9.109.3.1 bool QESpinBox::allowDrop [read, write]**

Allow drag/drops operations to this widget. Default is false. Any dropped text will be used as a new variable name.

Reimplemented from [QEDragDrop](#).

9.109.3.2 bool QESpinBox::displayAlarmState [read, write]

If set (default) widget will indicate the alarm state of any variable data is displaying. Typically the background colour is set to indicate the alarm state. Note, this property is included in the set of standard properties as it applies to most widgets. It will do nothing for widgets that don't display data.

Reimplemented from [standardProperties](#).

9.109.3.3 unsigned QESpinBox::int [read, write]

Set the ID used by the message filtering system. Default is zero. Widgets or applications that use messages from the framework have the option of filtering on this ID. For example, by using a unique message source ID a [QELog](#) widget may be set up to only log messages from a select set of widgets.

9.109.3.4 bool QESpinBox::subscribe [read, write]

Sets if this widget subscribes for data updates and displays current data. Default is 'true' (subscribes for and displays data updates)

Reimplemented from [QEWidget](#).

9.109.3.5 UserLevels QESpinBox::userLevelEnabled [read, write]

Lowest user level at which the widget is enabled. Default is 'User'. Used when designing GUIs that allow access to more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through `setUserLevel()` Widgets that are always accessible should be visible at 'User'. Widgets that are only accessible to scientists managing the facility should be visible at 'Scientist'. Widgets that are only accessible to engineers maintaining the facility should be visible at 'Engineer'.

9.109.3.6 QString QESpinBox::userLevelEngineerStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'Engineer' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the `styleManager` class. Refer to the `styleManager` class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.109.3.7 QString QESpinBox::userLevelScientistStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'Scientist' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the `styleManager` class. Refer to the `styleManager` class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.109.3.8 QString QESpinBox::userLevelUserStyle [read, write]

Style Sheet string to be applied when the widget is displayed in 'User' mode. Default is an empty string. The syntax is the standard Qt Style Sheet syntax. For example, 'background-color: red' This Style Sheet string will be applied by the `styleManager` class. Refer to the `styleManager` class for details about how this Style Sheet string will be merged with any pre-existing Style Sheet string and any Style Sheet strings generated during the display of data.

9.109.3.9 UserLevels QESpinBox::userLevelVisibility [read, write]

Lowest user level at which the widget is visible. Default is 'User'. Used when designing GUIs that display more and more detail according to the user mode. The user mode is set application wide through the [QELogin](#) widget, or programatically through `setUserLevel()` Widgets that are always visible should be visible at 'User'. Widgets that are only used by scientists managing the facility should be visible at 'Scientist'. Widgets that are only used by engineers maintaining the facility should be visible at 'Engineer'.

9.109.3.10 QString QESpinBox::variable [read, write]

EPICS variable name (CA PV)

9.109.3.11 bool QESpinBox::variableAsToolTip [read, write]

Use the variable as the tool tip. Default is true. Tool tip property will be overwritten by the variable name.

Reimplemented from [QEToolTip](#).

9.109.3.12 QString QESpinBox::variableSubstitutions [read, write]

Macro substitutions. The default is no substitutions. The format is NAME1=VALUE1[, NAME2=VALUE2... Values may be quoted strings. For example, 'PUMP=PMP3, NAME = "My Pump"' These substitutions are applied to variable names for all QE widgets. In some widgets are also used for other purposes.

9.109.3.13 bool QESpinBox::visible [read, write]


Display the widget. Default is true. Setting this property false is usefull if widget is only used to provide a signal - for example, when supplying data to a [QELink](#) widget. Note, when false the widget will still be visible in Qt Designer.

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QESpinBox/QESpinBox.h
- /tmp/epicsqt/trunk/framework/widgets/QESpinBox/QESpinBox.cpp

9.110 QString Class Reference

Inheritance diagram for QString:

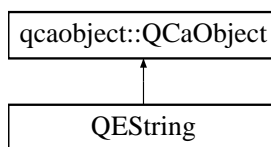

Public Slots

- void **writeString** (const QString &data)

Signals

- void **stringConnectionChanged** ([QCaConnectionInfo](#) &connectionInfo, const unsigned int &variableIndex)
- void **stringChanged** (const QString &value, [QCaAlarmInfo](#) &alarmInfo, [QCaDateTime](#) &timeStamp, const unsigned int &variableIndex)

Public Member Functions

- **QCString** (QString recordName, QObject *eventObject, [QCStringFormatting](#) *stringFormattingIn, unsigned int variableIndexIn)
- **QCString** (QString recordName, QObject *eventObject, [QCStringFormatting](#) *stringFormattingIn, unsigned int variableIndexIn, [UserMessage](#) *userMessageIn)
- bool **writeString** (const QString &data, QString &message)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/data/include/QCString.h
- /tmp/epicsqt/trunk/framework/data/src/QCString.cpp

9.111 QCStringFormatting Class Reference

Public Types

- enum [formats](#) {
[FORMAT_DEFAULT](#), [FORMAT_FLOATING](#), [FORMAT_INTEGER](#), [FORMAT_UNSIGNEDINTEGER](#),
[FORMAT_TIME](#), [FORMAT_LOCAL_ENUMERATE](#), [FORMAT_STRING](#) }
- enum [notations](#) { [NOTATION_FIXED](#) = QTextStream::FixedNotation, [NOTATION_SCIENTIFIC](#) = QTextStream::ScientificNotation, [NOTATION_AUTOMATIC](#) = QTextStream::SmartNotation }
- enum [arrayActions](#) { [APPEND](#), [ASCII](#), [INDEX](#) }

Public Member Functions

- QString **formatString** (const QVariant &value)
- QVariant **formatValue** (const QString &text, bool &ok)
- void **setDbEgu** (QString egu)
- void **setDbEnumerations** (QStringList enumerations)
- void **setDbPrecision** (unsigned int dbPrecisionIn)
- void **setPrecision** (int precision)
- void **setUseDbPrecision** (bool useDbPrecision)
- void **setLeadingZero** (bool leadingZero)
- void **setTrailingZeros** (bool trailingZeros)
- void **setFormat** ([formats](#) format)

- void **setRadix** (unsigned int radix)
- void **setNotation** (notations notation)
- void **setArrayAction** (arrayActions arrayActionIn)
- void **setArrayIndex** (unsigned int arrayIndexIn)
- void **setAddUnits** (bool addUnits)
- void **setLocalEnumeration** (QString localEnumerationIn)
- int **getPrecision** ()
- bool **getUseDbPrecision** ()
- bool **getLeadingZero** ()
- bool **getTrailingZeros** ()
- formats **getFormat** ()
- unsigned int **getRadix** ()
- notations **getNotation** ()
- arrayActions **getArrayAction** ()
- unsigned int **getArrayIndex** ()
- bool **getAddUnits** ()
- QString **getLocalEnumeration** ()

9.111.1 Member Enumeration Documentation

9.111.1.1 enum `QStringFormatting::arrayActions`

What action to take when formatting array data

Enumerator:

APPEND Interpret each element in the array as an unsigned integer and append string representations of each element from the array with a space in between each.

ASCII Interpret each element from the array as a character in a string. Translate all non printing characters to '?' except for trailing zeros (ignore them)

INDEX Interpret the element selected by `setArrayIndex()` as an unsigned integer.

9.111.1.2 enum `QStringFormatting::formats`

Formatting options

Enumerator:

FORMAT_DEFAULT Format according to the EPICS database record type.

FORMAT_FLOATING Format as a floating point number.

FORMAT_INTEGER Format as an integer.

FORMAT_UNSIGNEDINTEGER Format as an unsigned integer.

FORMAT_TIME Format as a time.

FORMAT_LOCAL_ENUMERATE Format as a selection from the local enumerations set by `setLocalEnumeration()`

FORMAT_STRING Format as a string.

9.111.1.3 enum QStringFormatting::notations

Notations when formatting a floating point number

Enumerator:

NOTATION_FIXED Standard floating point 123456.789.

NOTATION_SCIENTIFIC Scientific representation 1.23456789e6.


NOTATION_AUTOMATIC Automatic choice of standard or scientific notation.

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/data/include/QStringFormatting.h
- /tmp/epicsqt/trunk/framework/data/src/QStringFormatting.cpp

9.112 QStringFormattingMethods Class Reference

Inheritance diagram for QStringFormattingMethods:

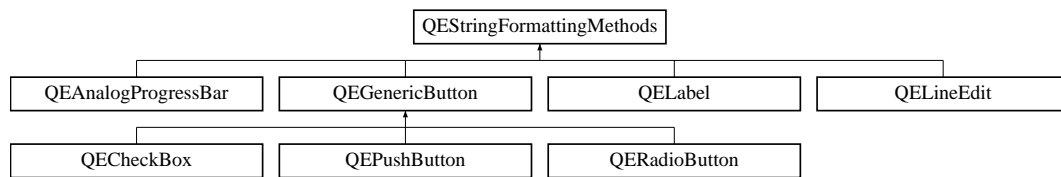**Public Member Functions**

- virtual void **stringFormattingChange** ()=0
- void **setPrecision** (int precision)
- int **getPrecision** ()
- void **setUseDbPrecision** (bool useDbPrecision)
- bool **getUseDbPrecision** ()
- void **setLeadingZero** (bool leadingZero)
- bool **getLeadingZero** ()
- void **setTrailingZeros** (bool trailingZeros)
- bool **getTrailingZeros** ()
- void **setAddUnits** (bool addUnits)
- bool **getAddUnits** ()
- void **setLocalEnumeration** (QString localEnumeration)
- QString **getLocalEnumeration** ()
- void **setFormat** (QStringFormatting::formats format)
- QStringFormatting::formats **getFormat** ()
- void **setRadix** (unsigned int radix)
- unsigned int **getRadix** ()

- void **setNotation** ([QCStringFormatting::notations](#) notation)
- [QCStringFormatting::notations](#) **getNotation** ()
- void **setArrayAction** ([QCStringFormatting::arrayActions](#) arrayAction)
- [QCStringFormatting::arrayActions](#) **getArrayAction** ()
- void **setArrayIndex** (unsigned int arrayIndex)
- unsigned int **getArrayIndex** ()

Protected Attributes


- [QCStringFormatting](#) **stringFormatting**

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/include/QCStringFormattingMethods.h
- /tmp/epicsqt/trunk/framework/widgets/src/QCStringFormattingMethods.cpp

9.113 QEStripChart Class Reference

Inheritance diagram for QEStripChart:

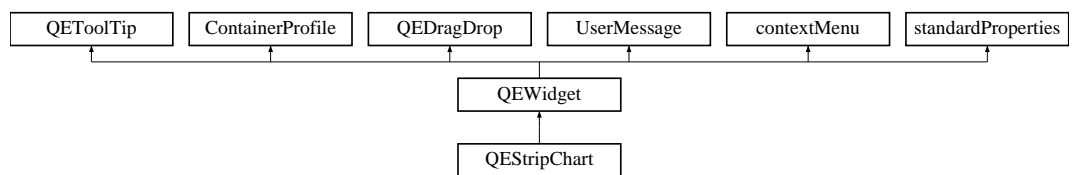

Classes

- class [PrivateData](#)

Public Types

- enum **Constants** { **NUMBER_OF_PVS** = 12 }

Public Member Functions

- **QEStripChart** (QWidget *parent=0)
- QSize **sizeHint** () const
- QDateTime **getStartDateTime** ()
- QDateTime **getEndDateTime** ()
- void **setEndDateTime** (QDateTime endDateTimeIn)
- int **getDuration** ()

- void **setDuration** (int durationIn)
- double **getYMinimum** ()
- void **setYMinimum** (const double yMinimumIn)
- double **getYMaximum** ()
- void **setYMaximum** (const double yMaximumIn)
- void **setYRange** (const double yMinimumIn, const double yMaximumIn)

Protected Member Functions

- void **dragEnterEvent** (QDragEnterEvent *event)
- void **dropEvent** (QDropEvent *event)
- void **setDrop** (QVariant drop)
- void **paste** (QVariant s)
- void **setup** ()
- [QCaObject::QCaObject](#) * **createQcaltem** (unsigned int variableIndex)
- void **establishConnection** (unsigned int variableIndex)
- void **saveConfiguration** ([PersistenceManager](#) *pm)
- void **restoreConfiguration** ([PersistenceManager](#) *pm, [restorePhases](#) restorePhase)
- void **addToPredefinedList** (const QString &pvName)
- QStringList **getPredefinedPVNameList** ()
- QString **getPredefinedItem** (int i)
- void **plotData** ()

Properties

- int **duration**
- double **yMinimum**
- double **yMaximum**
- QString **variable1**
- QString **variable2**
- QString **variable3**
- QString **variable4**
- QString **variable5**
- QString **variable6**
- QString **variable7**
- QString **variable8**
- QString **variable9**
- QString **variable10**
- QString **variable11**
- QString **variable12**
- QString [variableSubstitutions](#)
- QColor **colour1**
- QColor **colour2**
- QColor **colour3**
- QColor **colour4**

- QColor **colour5**
- QColor **colour6**
- QColor **colour7**
- QColor **colour8**
- QColor **colour9**
- QColor **colour10**
- QColor **colour11**
- QColor **colour12**

Friends

- class **PrivateData**
- class [QEStripChartItem](#)

9.113.1 Member Function Documentation

9.113.1.1 void [QEStripChart::restoreConfiguration](#) ([PersistenceManager](#) *,
restorePhases) [protected, virtual]

Service a request to restore the QE widget's configuration. A QE widget recover any configuration details from the [PersistenceManager](#). For example, a [QEStripChart](#) may restore the variables being plotted. Many QE widgets do not have any persistent data requirements and do not implement this method. This is called twice with an incrementing restorePhase. Most widgets will miss the first call as they don't exist yet (they are created as part of the first phase)

Reimplemented from [QEWidget](#).

9.113.1.2 void [QEStripChart::saveConfiguration](#) ([PersistenceManager](#) *)
[protected, virtual]

Service a request to save the QE widget's current configuration. A widget may save any configuration details through the [PersistenceManager](#). For example, a [QEStripChart](#) may save the variables being plotted. Many QE widgets do not have any persistent data requirements and do not implement this method.

Reimplemented from [QEWidget](#).

9.113.2 Property Documentation

9.113.2.1 QString [QEStripChart::variableSubstitutions](#) [read, write]

Macro substitutions. The default is no substitutions. The format is NAME1=VALUE1[,]
NAME2=VALUE2... Values may be quoted strings. For example, 'SAMPLE=SAM1,
NAME = "Ref foil" These substitutions are applied to all the variable names.

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEStripChart/QEStripChart.h
- /tmp/epicsqt/trunk/framework/widgets/QEStripChart/QEStripChart.cpp

9.114 QEStripChartAdjustPVDialog Class Reference

Public Member Functions

- **QEStripChartAdjustPVDialog** (QWidget *parent=0)
- void **setValueScaling** (const [ValueScaling](#) &valueScale)
- [ValueScaling](#) **getValueScaling** ()
- void **setSupport** (const double min, const double max, const [TrackRange](#) &loHopr, const [TrackRange](#) &plotted, const [TrackRange](#) &buffered)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEStripChart/QEStripChartAdjustPVDialog.h
- /tmp/epicsqt/trunk/framework/widgets/QEStripChart/QEStripChartAdjustPVDialog.cpp

9.115 QEStripChartContextMenu Class Reference

Signals

- void **contextMenuSelected** (const QEStripChartNames::ContextMenuOptions)

Public Member Functions

- [QEStripChartContextMenu](#) (bool inUse, QWidget *parent=0)
- void **setPredefinedNames** (const QStringList &pvList)
- void **setUseReceiveTime** (const bool useReceiveTime)
- void **setArchiveReadHow** (const QEArchiveInterface::How how)
- void **setLineDrawMode** (const QEStripChartNames::LineDrawModes mode)

9.115.1 Constructor & Destructor Documentation

9.115.1.1 **QEStripChartContextMenu::QEStripChartContextMenu** (bool *inUse*, QWidget * *parent* = 0) [explicit]

Construct strip chart item context menu. This menu item creates all required sub menu items. *inUse* set true for an inuse slot, i.e. already has a PV allocated. *inUse* set false for an empty slot.

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEStripChart/QEStripChartContextMenu.h
- /tmp/epicsqt/trunk/framework/widgets/QEStripChart/QEStripChartContextMenu.cpp

9.116 QEStripChartItem Class Reference

Public Slots

- void **setColour** (const QColor &colour)

Signals

- void **itemContextMenuRequested** (const unsigned int, const QPoint &)

Public Member Functions

- **QEStripChartItem** ([QEStripChart](#) *chart, unsigned int slot, QWidget *parent)
- bool **isInUse** ()
- void **setPvName** (QString pvName, QString substitutions)
- QString **getPvName** ()
- void **setScaling** (const double d, const double m, const double c)
- void **getScaling** (double &d, double &m, double &c)
- bool **isScaled** ()
- bool **getUseReceiveTime** ()
- QArchiveInterface::How **getArchiveReadHow** ()
- QEStripChartNames::LineDrawModes **getLineDrawMode** ()
- QColor **getColour** ()
- [TrackRange](#) **getLoprHopr** (bool doScale)
- [TrackRange](#) **getDisplayedMinMax** (bool doScale)
- [TrackRange](#) **getBufferedMinMax** (bool doScale)
- void **readArchive** ()
- void **normalise** ()
- void **plotData** (const double timeScale, const QEStripChartNames::YScaleModes yScaleMode)
- void **saveConfiguration** ([PMElement](#) &parentElement)
- void **restoreConfiguration** ([PMElement](#) &parentElement)

Public Attributes

- [QCaVariableNamePropertyManager](#) **pvNameProperyManager**

Protected Member Functions

- bool **eventFilter** (QObject *obj, QEvent *event)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEStripChart/QEStripChartItem.h
- /tmp/epicsqt/trunk/framework/widgets/QEStripChart/QEStripChartItem.cpp

9.117 QEStripChartItemDialog Class Reference

Public Member Functions

- **QEStripChartItemDialog** (QWidget *parent=0)
- void **setPvName** (QString pvNameIn)
- QString **getPvName** ()
- bool **isClear** ()

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEStripChart/QEStripChartItemDialog.h
- /tmp/epicsqt/trunk/framework/widgets/QEStripChart/QEStripChartItemDialog.cpp

9.118 QEStripChartNames Class Reference

Public Types

- enum **ChartTimeModes** { **tmRealTime**, **tmPaused**, **tmHistorical** }
- enum **ChartYRanges** {
 manual, **operatingRange**, **plotted**, **buffered**,
 dynamic, **normalised** }
- enum **PlayModes** {
 play, **pause**, **forward**, **backward**,
 selectTimes }
- enum **StateModes** { **previous**, **next** }
- enum **VideoModes** { **normal**, **reverse** }
- enum **YScaleModes** { **linear**, **log** }
- enum **LineDrawModes** { **ldmHide**, **ldmRegular**, **ldmBold** }
- enum **ContextMenuOptions** {
 SCCM_NONE = contextMenu::CM_SPECIFIC_WIDGETS_START_HERE, **SCCM_-**
 COPY_PV_NAMES, **SCCM_PASTE_PV_NAMES**, **SCCM_READ_ARCHIVE**,
 SCCM_SCALE_CHART_AUTO, **SCCM_SCALE_CHART_PLOTTED**, **SCCM_-**
 SCALE_CHART_BUFFERED, **SCCM_SCALE_PV_RESET**,
 SCCM_SCALE_PV_GENERAL, **SCCM_SCALE_PV_AUTO**, **SCCM_SCALE_-**
 PV_PLOTTED, **SCCM_SCALE_PV_BUFFERED**,
 SCCM_SCALE_PV_CENTRE, **SCCM_PLOT_RECTANGULAR**, **SCCM_PLOT_-**
 SMOOTH, **SCCM_PLOT_SERVER_TIME**,
 SCCM_PLOT_CLIENT_TIME, **SCCM_ARCH_LINEAR**, **SCCM_ARCH_PLOTBIN**,
 SCCM_ARCH_RAW,
 SCCM_ARCH_SHEET, **SCCM_ARCH_AVERAGED**, **SCCM_LINE_HIDE**, **SCCM_-**
 LINE_REGULAR,

```

SCCM_LINE_BOLD, SCCM_LINE_COLOUR, SCCM_PV_EDIT_NAME, SCCM -
ADD_TO_PREDEFINED,
SCCM_PV_WRITE_TRACE, SCCM_PV_STATS, SCCM_PV_CLEAR, SCCM -
PV_ADD_NAME,
SCCM_PV_PASTE_NAME, SCCM_PREDEFINED_01, SCCM_PREDEFINED_ -
02, SCCM_PREDEFINED_03,
SCCM_PREDEFINED_04, SCCM_PREDEFINED_05, SCCM_PREDEFINED_ -
06, SCCM_PREDEFINED_07,
SCCM_PREDEFINED_08, SCCM_PREDEFINED_09, SCCM_PREDEFINED_ -
10 }

```

Static Public Attributes

- static const ContextMenuOptions **ContextMenuFirst** = SCCM_READ_ARCHIVE
- static const ContextMenuOptions **ContextMenuLast** = SCCM_PREDEFINED_ - 10
- static const int **NumberPrefinedItems** = (SCCM_PREDEFINED_10 - SCCM_ - PREDEFINED_01 + 1)

The documentation for this class was generated from the following file:

- /tmp/epicsqt/trunk/framework/widgets/QEStripChart/QEStripChartNames.h

9.119 QEStripChartRangeDialog Class Reference

Public Member Functions

- **QEStripChartRangeDialog** (QWidget *parent=0)
- void **setRange** (const double min, const double max)
- double **getMinimum** ()
- double **getMaximum** ()

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEStripChart/QEStripChartRangeDialog.h
- /tmp/epicsqt/trunk/framework/widgets/QEStripChart/QEStripChartRangeDialog.cpp

9.120 QEStripChartTimeDialog Class Reference

Public Member Functions

- **QEStripChartTimeDialog** (QWidget *parent=0)

- void **setMaximumDateTime** (QDateTime datetime)
- void **setStartDateTime** (QDateTime datetime)
- QDateTime **getStartDateTime** ()
- void **setEndDateTime** (QDateTime datetime)
- QDateTime **getEndDateTime** ()

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEStripChart/QEStripChartTimeDialog.h
- /tmp/epicsqt/trunk/framework/widgets/QEStripChart/QEStripChartTimeDialog.cpp

9.121 QEStripChartToolBar Class Reference

This class holds all the StripChart tool bar widgets.

```
#include <QEStripChartToolBar.h>
```

Classes

- class [OwnWidgets](#)

Signals

- void **stateSelected** (const QEStripChartNames::StateModes mode)
- void **videoModeSelected** (const QEStripChartNames::VideoModes mode)
- void **yScaleModeSelected** (const QEStripChartNames::YScaleModes mode)
- void **yRangeSelected** (const QEStripChartNames::ChartYRanges scale)
- void **durationSelected** (const int seconds)
- void **timeZoneSelected** (const Qt::TimeSpec timeSpec)
- void **playModeSelected** (const QEStripChartNames::PlayModes mode)
- void **readArchiveSelected** ()

Public Member Functions

- **QEStripChartToolBar** (QWidget *parent=0)
- void **setTimeStatus** (const QString &timeStatus)
- void **setStateSelectionEnabled** (const QEStripChartNames::StateModes mode, const bool enabled)

Static Public Attributes

- static const int **designHeight** = 44

Protected Member Functions

- void **resizeEvent** (QResizeEvent *event)

9.121.1 Detailed Description


This class holds all the StripChart tool bar widgets.

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEStripChart/QEStripChartToolBar.h
- /tmp/epicsqt/trunk/framework/widgets/QEStripChart/QEStripChartToolBar.cpp

9.122 QESubstitutedLabel Class Reference

Inheritance diagram for QESubstitutedLabel:

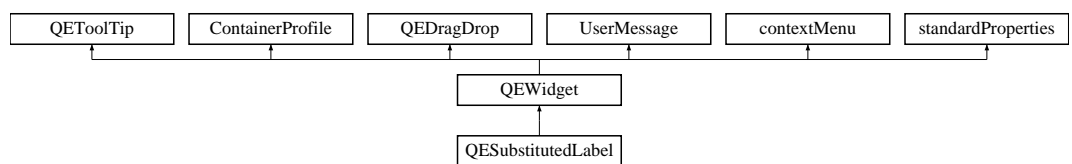

Public Member Functions

- **QESubstitutedLabel** (QWidget *parent=0)
- void **setLabelTextProperty** (QString labelTextIn)
- QString **getLabelTextProperty** ()
- void **setSubstitutionsProperty** (QString macroSubstitutionsIn)
- QString **getSubstitutionsProperty** ()
- QString **getLabelTextPropertyFormat** ()
- void **setLabelTextPropertyFormat** (QString labelTextIn)

Protected Attributes

- QString **labelText**

Properties

- QString **textSubstitutions**

9.122.1 Member Data Documentation

9.122.1.1 `QString QESubstitutedLabel::labelText` [read, write, protected]

Label text to be substituted. This text will be copied to the label text after applying any macro substitutions from the `textSubstitutions` property

9.122.2 Property Documentation

9.122.2.1 `QString QESubstitutedLabel::textSubstitutions` [read, write]


Text substitutions. These substitutions are applied to the 'labelText' property prior to copying it to the label text.

The documentation for this class was generated from the following files:

- `/tmp/epicsqt/trunk/framework/widgets/QESubstitutedLabel/QESubstitutedLabel.h`
- `/tmp/epicsqt/trunk/framework/widgets/QESubstitutedLabel/QESubstitutedLabel.cpp`

9.123 QEToolTip Class Reference

Inheritance diagram for QEToolTip:

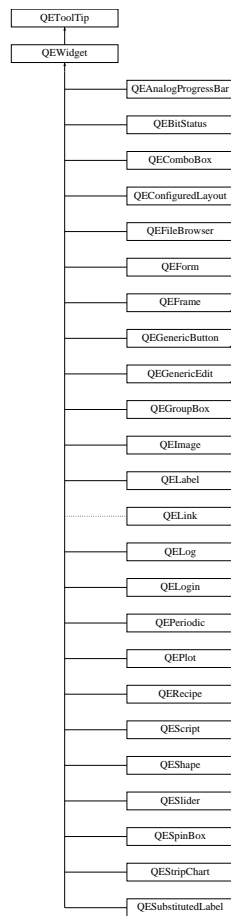

Public Member Functions

- **QEToolTip** (QWidget *ownerIn)
- void **updateToolTipVariable** (const QString &variable)
- void **updateToolTipAlarm** (const QString &alarm)
- void **updateToolTipCustom** (const QString &custom)
- void **updateToolTipConnection** (bool connection)
- void **setVariableAsToolTip** (bool variableAsToolTip)
- bool **getVariableAsToolTip** ()


The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/include/QEToolTip.h
- /tmp/epicsqt/trunk/framework/widgets/src/QEToolTip.cpp

9.124 QEWidget Class Reference

```
#include <QEWidget.h>
```

Inheritance diagram for QEWidget:

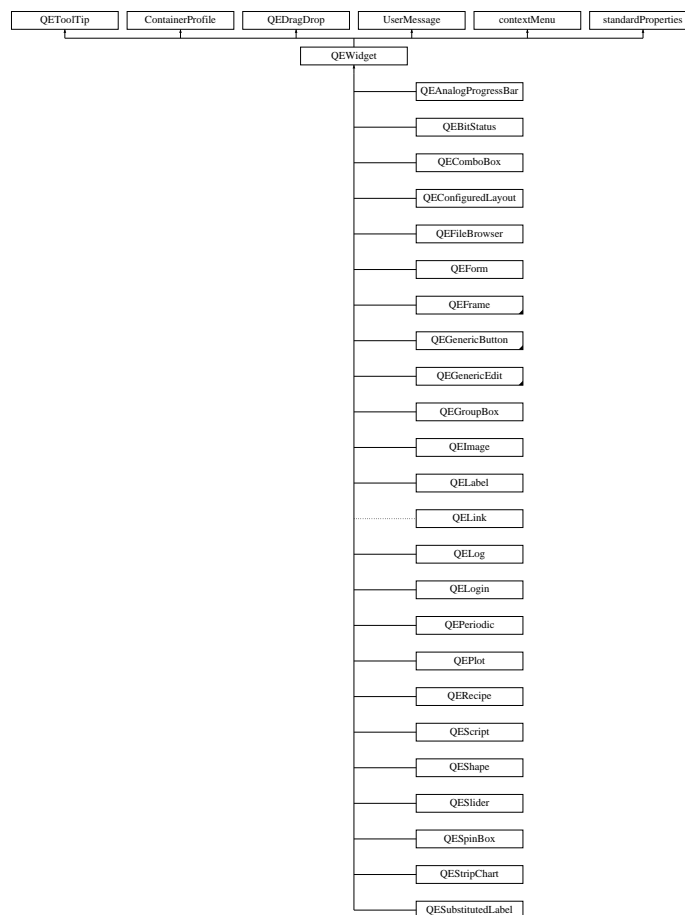

Public Types

- enum [restorePhases](#) { **APPLICATION** = SaveRestoreSignal::RESTORE_APPLICATION, **FRAMEWORK** = SaveRestoreSignal::RESTORE_QEFRAMEWORK }

Restore phases. When a widget's persistent data is restored, the restore occurs in two phases.

Public Member Functions

- [QEWidget](#) (QWidget *ownerIn)

Constructor.

- virtual [~QEWidget](#) ()
Destructor.
- void [activate](#) ()
- void [deactivate](#) ()
- unsigned int [getMessageSourceId](#) ()
- void [setMessageSourceId](#) (unsigned int messageSourceId)
- [qcaobject::QCaObject](#) * [getQcaltem](#) (unsigned int variableIndex)
- QColor [getColor](#) ([QCaAlarmInfo](#) &alarmInfo, const int saturation)
- void [processAlarmInfo](#) ([QCaAlarmInfo](#) &alarmInfo)
- void [readNow](#) ()
- virtual void [writeNow](#) ()
- virtual void [setVariableNameAndSubstitutions](#) (QString variableNameIn, QString variableNameSubstitutionsIn, unsigned int variableIndex)
- QFile * [openQEFile](#) (QString name, QFile::OpenModeFlag mode)
- QString [defaultFileLocation](#) ()
- QString [getFrameworkVersion](#) ()
- virtual void [saveConfiguration](#) ([PersistenceManager](#) *)
- virtual void [restoreConfiguration](#) ([PersistenceManager](#) *, [restorePhases](#))
- virtual void [scaleBy](#) (const int, const int)
- QWidget * [getQWidget](#) ()
- virtual QMenu * [getDefaultContextMenu](#) ()

Static Public Member Functions

- static QFile * [findQEFile](#) (QString name, [ContainerProfile](#) *profile)
- static bool [inDesigner](#) ()

Protected Member Functions

- void [setNumVariables](#) (unsigned int numVariablesIn)
- [qcaobject::QCaObject](#) * [createConnection](#) (unsigned int variableIndex)
- virtual [qcaobject::QCaObject](#) * [createQcaltem](#) (unsigned int variableIndex)
- virtual void [establishConnection](#) (unsigned int variableIndex)
- QString [persistantName](#) (QString prefix)

Protected Attributes

- bool [subscribe](#)

9.124.1 Detailed Description

This class is used as a base for all CA aware widgets, such as [QELabel](#), [QESpinBox](#), etc. It manages common issues including creating a source of CA data updates, handling error, warning and status messages, and setting tool tips based on variable names.

Note, there is tight integration between the CA aware widget classes, this class, and its base classes, especially [VariableNameManager](#) and [QEToolTip](#).

In particular, this class manages [QCaObject](#) classes that stream updates to the CA aware widget class. But this class, however, doesn't know how to format the data, or how the updates will be used. To resolve this, this class asks its parent class (such as [QELabel](#)) to create the [QCaObject](#) class in what ever flavour it wants, by calling the virtual function `createQcaltm`. A [QELabel](#), for example, wants string updates so it creates a [QEString](#) which is based on a [QCaObject](#) class and formats all updates as strings.

The CA aware parent class (such as [QELabel](#)) defines a variable by calling `VariableNameManager::setVariableName()`. The `VariableNamePropertyManager` class calls the `establishConnection` function of the CA aware parent class, such as [QELabel](#) when it has a new variable name.

This class uses its base [QEToolTip](#) class to format tool tips. that class in turn calls the CA aware parent class (such as [QELabel](#)) directly to make use of a new tool tip.

After construction, a CA aware widget is activated (starts updating) by calling it's `establishConnection()` function in one of two ways:

- 1) The variable name or variable name substitutions is changed by calling `setVariableName` or `setVariableNameSubstitutions` respectively. These functions are in the `VariableNameManager` class. The `VariableNamePropertyManager` calls a virtual function `establishConnection()` which is implemented by the CA aware widget. This is how a CA aware widget is activated in 'designer'. It occurs when 'designer' updates the variable name property or variable name substitution property.
- 2) When an [QEForm](#) widget is created, resulting in a set of CA aware widgets being created by loading a UI file containing plugin definitions. After loading the plugin widgets, code in the [QEForm](#) class calls the `activate()` function in this class ([QEWidget](#)). the `activate()` function calls `establishConnection()` in the CA aware widget for each variable. This simulates what the `VariableNamePropertyManager` does as each variable name is entered (see 1, above, for details)

No matter which way a CA aware widget is activated, the `establishConnection()` function in the CA aware widget is called for each variable. The `establishConnection()` function asks this [QEWidget](#) base class, by calling the `createConnection()` function, to perform the tasks common to all CA aware widgets for establishing a stream of CA data.

The `createConnection()` function sets up the widget 'tool tip', then immediately calls the CA aware widget back asking it to create an object based on [QCaObject](#). This object will supply a stream of CA update signals to the CA aware object in a form that it needs. For example a [QELabel](#) creates a [QEString](#) object. The [QEString](#) class is based on the [QCaObject](#) class and converts all update data to a strings which is required for updating a Qt label widget. This class stores the [QCaObject](#) based class.

After the `establishConnection()` function in the CA aware widget has called `createCon-`

nection(), the remaining task of the `establishConnection()` function is to connect the signals of the newly created `QCaObject` based classes to its own slots so that data updates can be used. For example, a [QELabel](#) connects the 'stringChanged' signal from the [QEString](#) object to its `setLabelText` slot.

9.124.2 Member Function Documentation

9.124.2.1 void QEWidget::activate ()

Initiate updates. Called after all configuration is complete.

9.124.2.2 void QEWidget::deactivate ()

Terminates updates. This has been provided for third party (non `QEGui`) applications using the framework.

9.124.2.3 QString QEWidget::defaultFileLocation ()

Returns the default location to create files. Use this to create files in a consistent location

9.124.2.4 QFile * QEWidget::findQEFile (QString *name*, ContainerProfile * *profile*) [static]

Static method that looks for a file in a standard set of locations Returns a pointer to a `QFile` which is the caller's responsibility to delete, or `NULL` if the file was not found.

9.124.2.5 QColor QEWidget::getColor (QCaAlarmInfo & *alarmInfo*, const int *saturation*)

Return a colour to update the widget's look to reflect the current alarm state Note, the color is determined by the `alarmInfo` class, but since that class is used in non gui applications, it can't return a `QColor`

9.124.2.6 QString QEWidget::getFrameworkVersion ()

Returns the QE framework that built this instance of the widget. On windows, the QE-Framework DLL may be loaded twice with potentially different versions of it.

9.124.2.7 unsigned int QEWidget::getMessageSourceId () [inline]

Get the message source ID. The message source ID is used as part of the system where QE widgets can emit a message and have the right QE widget in the right form catch the message. Refer to the [UserMessage](#) class for further details.

9.124.2.8 `qcaobject::QCaObject * QEWidget::getQcaltem (unsigned int variableIndex)`

Return a reference to one of the qCaObjects used to stream CA updates

9.124.2.9 `QWidget * QEWidget::getQWidget ()`

Get the QWidget that the parent of this [QEWidget](#) instance is based on. For example, the parent of a [QEWidget](#) might be a [QELabel](#), which is based on QLabel which is based on QWidget.

9.124.2.10 `QFile * QEWidget::openQEFile (QString name, QFile::OpenModeFlag mode)`

Looks for a file in a standard set of locations (and opens the file)

9.124.2.11 `void QEWidget::processAlarmInfo (QCaAlarmInfo & alarmInfo)`

This convenience function updates the alarm tool tip, and alarm status style if the `displayAlarmState` property is set to true - assumes the widget uses standard properties. This function is perhaps most usefull for single-variable widgets.

9.124.2.12 `void QEWidget::readNow ()`

Perform a single shot read on all variables (Usefull when not subscribing by default)

9.124.2.13 `virtual void QEWidget::restoreConfiguration (PersistenceManager *, restorePhases) [inline, virtual]`

Service a request to restore the QE widget's configuration. A QE widget recover any configuration details from the [PersistenceManager](#). For example, a [QEStripChart](#) may restore the variables being plotted. Many QE widgets do not have any persistant data requirements and do not implement this method. This is called twice with an incrementing `restorePhase`. Most widgets will miss the first call as they don't exist yet (they are created as part of the first phase)

Reimplemented in [QEPvProperties](#), and [QEStripChart](#).

9.124.2.14 `virtual void QEWidget::saveConfiguration (PersistenceManager *) [inline, virtual]`

Service a request to save the QE widget's current configuration. A widget may save any configuration details through the [PersistenceManager](#). For example, a [QEStripChart](#) may save the variables being plotted. Many QE widgets do not have any persistant data requirements and do not implement this method.

Reimplemented in [QEPvProperties](#), and [QEStripChart](#).

9.124.2.15 `virtual void QEWidget::scaleBy (const int , const int)` [inline, virtual]

Any [QEWidget](#) that requires additional scaling, i.e. above and beyond the standard scaling applied to size, minimum size, maximum size and font size, may override this function in order to perform any bespoke scaling need by the widget (for example see [QEShape](#)). The scaling is defined using a rational number specified by two integers (m, d). The first (m) parameter is the multiplier and the second (d) parameter is the divisor. For example, if m = 4 and d = 5, then an 80% scaling should be applied. And if m = 5 and d = 4, and a 125% scaling is required.

Reimplemented in [QEPvProperties](#), and [QEShape](#).

9.124.2.16 `void QEWidget::setMessageSourceId (unsigned int messageSourceId)` [inline]

Set the message source ID. The message source ID is used as part of the system where QE widgets can emit a message and have the right QE widget in the right form catch the message. Refer to the [UserMessage](#) class for further details.

9.124.2.17 `void QEWidget::setVariableNameAndSubstitutions (QString variableNameIn, QString variableNameSubstitutionsIn, unsigned int variableIndex)` [virtual]

Virtual function that may be implemented by users of [QEWidget](#) to update variable names and macro substitutions. A default is provided that is suitable in most cases.

Reimplemented in [QEBitStatus](#).

9.124.2.18 `virtual void QEWidget::writeNow ()` [inline, virtual]

(Control widgets only - such as [QELineEdit](#)) Write the value now. Used when writeOnChange, writeOnEnter, etc are all false

Reimplemented in [QEGenericEdit](#).

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/include/QEWidget.h
- /tmp/epicsqt/trunk/framework/widgets/src/QEWidget.cpp

9.125 QEWidgets Class Reference

Public Member Functions


- **QEWidgets** (QObject *parent=0)
- virtual QList< QDesignerCustomWidgetInterface * > **customWidgets** () const

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/include/QEDesignerPlugin.h
- /tmp/epicsqt/trunk/framework/widgets/src/QEDesignerPlugin.cpp

9.126 qcastatemachine::ReadQCaStateMachine Class Reference

Inheritance diagram for qcastatemachine::ReadQCaStateMachine:

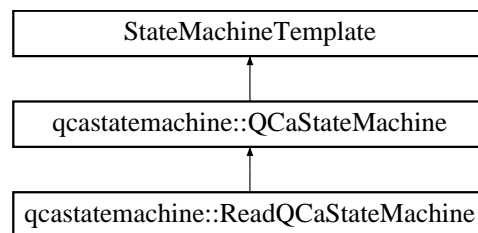

Public Member Functions

- **ReadQCaStateMachine** (void *parent)
- bool **process** (int requestedState)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/data/include/QCaStateMachine.h
- /tmp/epicsqt/trunk/framework/data/src/QCaStateMachine.cpp

9.127 ROlinfo Class Reference

Public Member Functions

- void **setX** (long x)
- void **setY** (long y)
- void **setW** (long w)
- void **setH** (long h)
- void **clearX** ()
- void **clearY** ()
- void **clearW** ()
- void **clearH** ()
- bool **getStatus** ()
- QRect **getArea** ()

The documentation for this class was generated from the following file:

- /tmp/epicsqt/trunk/framework/widgets/QEImage/QEImage.h

9.128 SaveRestoreSignal Class Reference

Public Types

- enum **saveRestoreOptions** { **SAVE**, **RESTORE_APPLICATION**, **RESTORE_QEFRAMEWORK** }

Signals

- void **saveRestore** (SaveRestoreSignal::saveRestoreOptions option)

Public Member Functions

- void **setOwner** ([PersistenceManager](#) *ownerIn)
- void [save](#) ()
- void [restore](#) ()

9.128.1 Member Function Documentation

9.128.1.1 void SaveRestoreSignal::restore ()

!! signal must be blocking

9.128.1.2 void SaveRestoreSignal::save ()

!! signal must be blocking

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/include/persistenceManager.h
- /tmp/epicsqt/trunk/framework/widgets/src/persistenceManager.cpp

9.129 saveRestoreSlot Class Reference

Public Slots

- void **saveRestore** (SaveRestoreSignal::saveRestoreOptions option)

Public Member Functions

- void **setOwner** ([QWidget](#) *ownerIn)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/include/QEWidget.h
- /tmp/epicsqt/trunk/framework/widgets/src/QEWidget.cpp

9.130 selectMenu Class Reference

Public Member Functions


- **selectMenu** (QWidget *parent=0)
- imageContextMenu::imageContextMenuOptions **getSelectOption** (const QPoint &pos)
- void **setChecked** (const int mode)
- void **setPanEnabled** (bool enablePan)
- void **setVSliceEnabled** (bool enableVSliceSelection)
- void **setHSliceEnabled** (bool enableHSliceSelection)
- void **setAreaEnabled** (bool enableAreaSelection)
- void **setProfileEnabled** (bool enableProfileSelection)
- void **setTargetEnabled** (bool enableTargetSelection)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEImage/selectMenu.h
- /tmp/epicsqt/trunk/framework/widgets/QEImage/selectMenu.cpp

9.131 standardProperties Class Reference

Inheritance diagram for standardProperties:

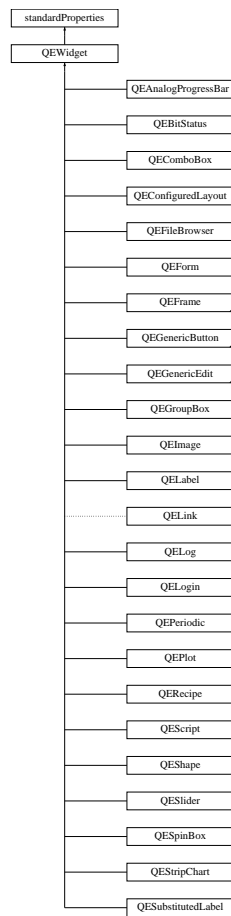

Public Member Functions

- **standardProperties** (QWidget *ownerIn)
- **userLevelTypes::userLevels** **getUserLevelVisibility** ()
- void **setUserLevelVisibility** (userLevelTypes::userLevels level)
- **userLevelTypes::userLevels** **getUserLevelEnabled** ()
- void **setUserLevelEnabled** (userLevelTypes::userLevels level)
- bool **getApplicationEnabled** () const
- void **setApplicationEnabled** (bool state)
- void **setRunVisible** (bool visibleIn)
- bool **getRunVisible** ()
- void **setDisplayAlarmState** (bool displayAlarmStateIn)
- bool **getDisplayAlarmState** ()

Protected Member Functions


- void **checkVisibilityEnabledLevel** (userLevelTypes::userLevels level)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/include/standardProperties.h
- /tmp/epicsqt/trunk/framework/widgets/src/standardProperties.cpp

9.132 StateMachineTemplate Class Reference

Inheritance diagram for StateMachineTemplate:

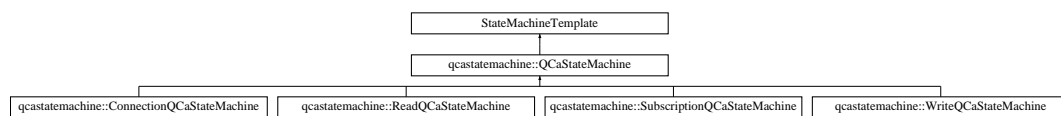

Public Member Functions

- virtual bool **process** (int requestedState)=0

Public Attributes


- int **currentState**
- int **requestState**

The documentation for this class was generated from the following file:

- /tmp/epicsqt/trunk/framework/data/include/QCaStateMachine.h

9.133 qcastatemachine::SubscriptionQCaStateMachine Class Reference

Inheritance diagram for qcastatemachine::SubscriptionQCaStateMachine:

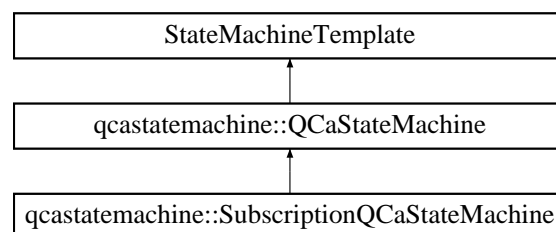

Public Member Functions

- **SubscriptionQCaStateMachine** (void *parent)
- bool **process** (int requestedState)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/data/include/QCaStateMachine.h
- /tmp/epicsqt/trunk/framework/data/src/QCaStateMachine.cpp

9.134 trace Class Reference

Public Attributes

- QVector< [QCaDateTime](#) > **timeStamps**
- QVector< double > **xdata**
- QVector< double > **ydata**
- QwtPlotCurve * **curve**
- QColor **color**
- QString **legend**
- bool **waveform**
- QwtPlotCurve::CurveStyle **style**

The documentation for this class was generated from the following file:

- /tmp/epicsqt/trunk/framework/widgets/QEPlot/QEPlot.h

9.135 TrackRange Class Reference

Public Member Functions

- void **clear** ()
- void **merge** (const double d)
- void **merge** (const [TrackRange](#) &that)
- bool **getMinMax** (double &min, double &max) const

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEStripChart/QEStripChartUtilities.h
- /tmp/epicsqt/trunk/framework/widgets/QEStripChart/QEStripChartUtilities.cpp

9.136 userInfoStruct Class Reference

Public Attributes

- bool **enable**
- double **value1**
- double **value2**
- QString **elementText**

The documentation for this class was generated from the following file:

- /tmp/epicsqt/trunk/framework/widgets/QEPeriodic/QEPeriodic.h

9.137 QEPeriodic::userInfoStructArray Struct Reference

Public Attributes

- [userInfoStruct](#) **array** [NUM_ELEMENTS]

The documentation for this struct was generated from the following file:

- /tmp/epicsqt/trunk/framework/widgets/QEPeriodic/QEPeriodic.h

9.138 userLevelSignal Class Reference

Signals

- void [userChanged](#) ([userLevelTypes::userLevels](#) level)
Internal use only. Send when the user level has changed.

Public Member Functions

- void **setLevel** ([userLevelTypes::userLevels](#) levelIn)
- [userLevelTypes::userLevels](#) **getLevel** ()

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/include/ContainerProfile.h
- /tmp/epicsqt/trunk/framework/widgets/src/ContainerProfile.cpp

9.139 userLevelSlot Class Reference

Public Slots

- void **userChanged** ([userLevelTypes::userLevels](#) level)

Public Member Functions

- void **setOwner** ([ContainerProfile](#) *ownerIn)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/include/ContainerProfile.h
- /tmp/epicsqt/trunk/framework/widgets/src/ContainerProfile.cpp

9.140 userLevelTypes Class Reference

Public Types

- enum [userLevels](#) { [USERLEVEL_USER](#), [USERLEVEL_SCIENTIST](#), [USERLEVEL_ENGINEER](#) }

9.140.1 Member Enumeration Documentation

9.140.1.1 enum userLevelTypes::userLevels

User levels set by widgets such as [QELogin](#) and used by many widgets to determine visibility, enabled state, and style.

Enumerator:

USERLEVEL_USER User level - least privileged.

USERLEVEL_SCIENTIST User level - more privileged than user, less than engineer.

USERLEVEL_ENGINEER User level - most privileged.


The documentation for this class was generated from the following file:

- /tmp/epicsqt/trunk/framework/widgets/include/ContainerProfile.h

9.141 UserMessage Class Reference

```
#include <UserMessage.h>
```


Inheritance diagram for UserMessage:

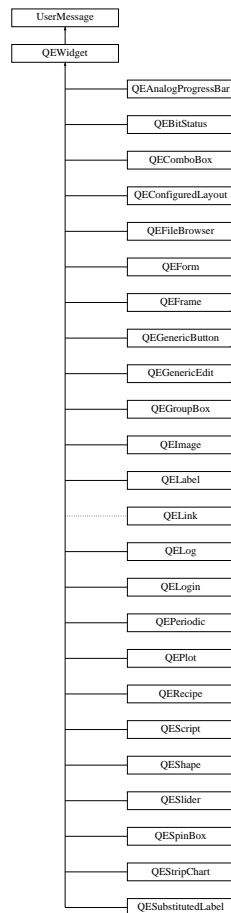

Public Types

- enum **message_filter_options** { MESSAGE_FILTER_ANY, MESSAGE_FILTER_MATCH, MESSAGE_FILTER_NONE }

Public Member Functions

- void **setSourceId** (unsigned int sourceId)
Set the source ID (the ID set up by the GUI designer, usually matched to the source ID of logging widgets)
- void **setFormId** (unsigned int formId)
Set the form ID (the the same ID for all sibling widgets within an **QEForm** widget)
- void **setFormFilter** (message_filter_options formFilterIn)
Set the message filtering applied to the form ID.
- void **setSourceFilter** (message_filter_options sourceFilterIn)

Set the message filtering applied to the source ID.

- unsigned int [getSourceId](#) ()

Get the source ID (the ID set up by the GUI designer, usually matched to the source ID of logging widgets).

- unsigned int [getFormId](#) ()

Get the form ID (the the same ID for all sibling widgets within an [QEForm](#) widget)

- message_filter_options [getFormFilter](#) ()

Get the message filtering applied to the form ID.

- message_filter_options [getSourceFilter](#) ()

Get the message filtering applied to the source ID.

- void [setChildFormId](#) (unsigned int)

Set the for ID of all widgets that are children of this widget.

- unsigned int [getChildFormId](#) ()

Get the for ID of all widgets that are children of this widget.

- unsigned int [getNextMessageFormId](#) ()

Generate a new form ID for all widgets in a new form.

- void [sendMessage](#) (QString message, [message_types](#) type=[message_types](#)(MESSAGE_TYPE_INFO))

Send a message to the user.

- void [sendMessage](#) (QString message, QString source, [message_types](#) type=[message_types](#)(MESSAGE_TYPE_INFO))

Send a message to the user with a source reference.

- QString [getMessageTypeName](#) ([message_types](#) type)

Convenience function to provide string names for each message type.

- virtual void [newMessage](#) (QString, [message_types](#))

Virtual function to pass messages to derived classes (typically logging widgets or application windows)

Friends

- class [UserMessageSlot](#)
- class [UserMessageSignal](#)

9.141.1 Detailed Description

A class to manage user messages.

This class passes messages between widgets and application code

This class is used as a base class.

Messages are sent by calling [sendMessage\(\)](#) Messages are received by implementing [newMessage\(\)](#) in the derived class.

Messages can be filtered based on a source ID or a form ID

The derived widget is free to set the source ID to any value

Derived form widgets ([QForm](#)) get a unique form ID using [getNextMessageFormId\(\)](#) (as well as being able to set a source ID like any other QE widget) and pass this unique form ID to all widgets within the form using the [ContainerProfile](#) class.

Messages sent by a QE widget are received by all QE widgets and can filter the messages required by form ID and source ID. The form ID is under the management of the [QForm](#) widget, the source ID is under the control of the GUI designer.

The [QForm](#) widget does not display messages, but re-send them using its own form ID. Read on to see how this can be used.

Widgets that generate messages, and widgets (or application code) that use messages can be set up as follows:

- Application wide logging: An application with a single log window can base a class on the [UserMessage](#) class and set up filtering to receive all messages. An application with log messages for separate windows containing [QForm](#) widgets (such as [QEGui](#)) can base each window class on the [UserMessage](#) class, then set up filtering for the appropriate form ID.
- Logging within a [QForm](#). A logging widget can be set to filter matching on the current form and so will pick up messages from any sibling widget. This includes messages from a sibling widget which is a nested [QForm](#). Whatever messages that nested form is set to receive, it will resend to its siblings. For example, if it is set to receive messages from the widgets it contains, these are resent up one level to the main form. If messages are dealt with within the nested [QForm](#) (for example, it may have its own logging QE widget) then the nested [QForm](#) could be set up not to filter and resend any messages.

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/include/UserMessage.h
- /tmp/epicsqt/trunk/framework/widgets/src/UserMessage.cpp

9.142 UserMessageSignal Class Reference

```
#include <UserMessage.h>
```

Signals

- void [message](#) (QString msg, [message_types](#) type, unsigned int formId, unsigned int sourceId, [UserMessage](#) *originator)

Emit a message signal. Any widget based on the [UserMessage](#) class can receive these messages, filtered on formId and sourceId.

Public Member Functions

- void [sendMessage](#) (QString msg, [message_types](#) type, unsigned int formId, unsigned int sourceId, [UserMessage](#) *originator)

Send a message to all widgets based on the [UserMessage](#) class.

9.142.1 Detailed Description

Class used to send message signals. Used only within `UserMessage.cpp` A single instance of this class is shared by all instances of the [UserMessage](#) class. This allows every [UserMessage](#) class instance to connect to a single source of messages

The documentation for this class was generated from the following files:

- `/tmp/epicsqt/trunk/framework/widgets/include/UserMessage.h`
- `/tmp/epicsqt/trunk/framework/widgets/src/UserMessage.cpp`

9.143 UserMessageSlot Class Reference

```
#include <UserMessage.h>
```

Public Slots

- void [message](#) (QString msg, [message_types](#) type, unsigned int formId, unsigned int sourceId, [UserMessage](#) *originator)

A message has been received.

Public Member Functions

- void [setOwner](#) ([UserMessage](#) *ownerIn)

Set the [UserMessage](#) class this is a part of.

9.143.1 Detailed Description

Class used to receive message signals. Used only within `UserMessage.cpp` An instance of this class is created by all instances of the [UserMessage](#) class. The [UserMessage](#) class uses an instance of this class to receive messages so it does not have to be based on `QObject` itself. This is required as derived classes generally need to be also based on another object derived from `QObject` (and `QObject` can only be the base of a single base class)

The documentation for this class was generated from the following files:

- `/tmp/epicsqt/trunk/framework/widgets/include/UserMessage.h`
- `/tmp/epicsqt/trunk/framework/widgets/src/UserMessage.cpp`

9.144 ValueScaling Class Reference

Public Member Functions


- void **reset** ()
- void **assign** (const [ValueScaling](#) &s)
- void **set** (const double dIn, const double mIn, const double cIn)
- void **get** (double &dOut, double &mOut, double &cOut)
- void **map** (const double fromLower, const double fromUpper, const double toLower, const double toUpper)
- bool **isScaled** ()
- double **value** (const double x)
- [TrackRange](#) **value** (const [TrackRange](#) &x)
- void **saveConfiguration** ([PMElement](#) &parentElement)
- void **restoreConfiguration** ([PMElement](#) &parentElement)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QESTripChart/QESTripChartUtilities.h
- /tmp/epicsqt/trunk/framework/widgets/QESTripChart/QESTripChartUtilities.cpp

9.145 VideoWidget Class Reference

Inheritance diagram for VideoWidget:

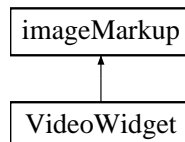

Signals

- void **userSelection** (imageMarkup::markupIds mode, bool complete, bool clearing, QPoint point1, QPoint point2, unsigned int thickness)
- void **zoomInOut** (int zoomAmount)
- void **currentPixelInfo** (QPoint pos)
- void **pan** (QPoint pos)

Public Member Functions

- **VideoWidget** (QWidget *parent=0)
- void **setNewImage** (const QImage image, [QCaDateTime](#) &time)
- void **setPanning** (bool panningIn)

- bool **getPanning** ()
- QPoint **scalePoint** (QPoint pnt)
- int **scaleOrdinate** (int ord)
- QPoint **scaleImagePoint** (QPoint pnt)
- int **scaleImageOrdinate** (int ord)
- QImage **getImage** ()

Protected Member Functions

- void **paintEvent** (QPaintEvent *)
- void **mousePressEvent** (QMouseEvent *event)
- void **mouseReleaseEvent** (QMouseEvent *event)
- void **mouseMoveEvent** (QMouseEvent *event)
- void **wheelEvent** (QWheelEvent *event)
- void **markupChange** (QVector< QRect > &changedAreas)
- void **resizeEvent** (QResizeEvent *event)
- void **markupSetCursor** (QCursor cursor)
- void **markupAction** (markupIds mode, bool complete, bool clearing, QPoint point1, QPoint point2, unsigned int thickness)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEImage/videowidget.h
- /tmp/epicsqt/trunk/framework/widgets/QEImage/videowidget.cpp

9.146 WidgetRef Class Reference

Public Member Functions


- **WidgetRef** ([QEWidget](#) *refIn)
- [QEWidget](#) * **getRef** ()

The documentation for this class was generated from the following file:

- /tmp/epicsqt/trunk/framework/widgets/include/ContainerProfile.h

9.147 qcastatemachine::WriteQCaStateMachine Class Reference

Inheritance diagram for qcastatemachine::WriteQCaStateMachine:

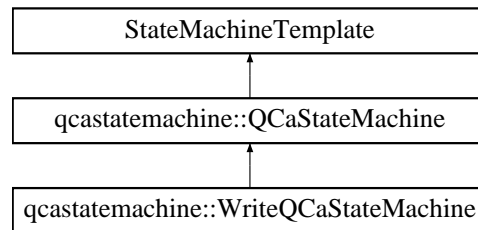

Public Member Functions

- **WriteQCaStateMachine** (void *parent)
- bool **process** (int requestedState)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/data/include/QCaStateMachine.h
- /tmp/epicsqt/trunk/framework/data/src/QCaStateMachine.cpp

9.148 zoomMenu Class Reference

Public Member Functions

- **zoomMenu** (QWidget *parent=0)
- void **enableAreaSelected** (bool enable)
- imageContextMenu::imageContextMenuOptions **getZoom** (const QPoint &pos)

The documentation for this class was generated from the following files:

- /tmp/epicsqt/trunk/framework/widgets/QEImage/zoomMenu.h
- /tmp/epicsqt/trunk/framework/widgets/QEImage/zoomMenu.cpp

Index

- [_Field, 27](#)
- [_Item, 28](#)
- [_QDialogItem, 28](#)
- [_QPushButtonGroup, 28](#)
- [_QTableWidgetFileBrowser, 29](#)
- [_QTableWidgetLog, 29](#)
- [_QTableWidgetScript, 29](#)
- activate
 - [QEWidget, 264](#)
- addUnits
 - [QEAnalogProgressBar, 72](#)
 - [QECheckBox, 87](#)
 - [QELabel, 151](#)
 - [QELineEdit, 159](#)
 - [QENumericEdit, 172](#)
 - [QEPushButton, 194](#)
 - [QERadioButton, 211](#)
- alarmSeverityDisplayMode
 - [QEAnalogProgressBar, 72](#)
- alignment
 - [QECheckBox, 87](#)
 - [QEPushButton, 194](#)
 - [QERadioButton, 211](#)
- allowDrop
 - [QEAnalogProgressBar, 72](#)
 - [QEBitStatus, 79](#)
 - [QECheckBox, 87](#)
 - [QEComboBox, 98](#)
 - [QEFrame, 111](#)
 - [QEGenericEdit, 118](#)
 - [QEGroupBox, 123](#)
 - [QEImage, 135](#)
 - [QELabel, 151](#)
 - [QEPeriodic, 177](#)
 - [QEPlot, 186](#)
 - [QEPushButton, 194](#)
 - [QERadioButton, 211](#)
 - [QEShape, 229](#)
 - [QESlider, 239](#)
 - [QESpinBox, 244](#)
- altReadbackVariable
 - [QEPushButton, 194](#)
- animation1
 - [QEShape, 230](#)
- animation2
 - [QEShape, 230](#)
- animation3
 - [QEShape, 230](#)
- animation4
 - [QEShape, 230](#)
- animation5
 - [QEShape, 230](#)
- animation6
 - [QEShape, 230](#)
- animationOptions
 - [QEShape, 228](#)
- APPEND
 - [QEStringFormatting, 248](#)
- Append
 - [QEAnalogProgressBar, 71](#)
 - [QECheckBox, 85](#)
 - [QELabel, 149](#)
 - [QELineEdit, 157](#)
 - [QEPushButton, 191](#)
 - [QERadioButton, 208](#)
- areaColor
 - [QEImage, 136](#)
- arguments
 - [QECheckBox, 88](#)
 - [QEPushButton, 194](#)
 - [QERadioButton, 211](#)
- arrayAction
 - [QEAnalogProgressBar, 72](#)
 - [QECheckBox, 88](#)
 - [QELabel, 151](#)
 - [QELineEdit, 159](#)
 - [QEPushButton, 195](#)
 - [QERadioButton, 211](#)
- ArrayActions
 - [QEAnalogProgressBar, 71](#)
 - [QECheckBox, 85](#)

- QELabel, [149](#)
- QELineEdit, [157](#)
- QEPushButton, [191](#)
- QERadioButton, [208](#)
- arrayActions
 - QEStrFormatting, [248](#)
- ASCII
 - QEStrFormatting, [248](#)
- Ascii
 - QEAnalogProgressBar, [71](#)
 - QECheckBox, [85](#)
 - QELabel, [149](#)
 - QELineEdit, [157](#)
 - QEPushButton, [191](#)
 - QERadioButton, [208](#)
- autoBrightnessContrast
 - QEImage, [136](#)
- Automatic
 - QEAnalogProgressBar, [71](#)
 - QECheckBox, [85](#)
 - QELabel, [149](#)
 - QELineEdit, [158](#)
 - QEPushButton, [192](#)
 - QERadioButton, [209](#)
- autoScale
 - QENumericEdit, [172](#)
- backgroundColour
 - QEAnalogIndicator, [66](#)
- Bar
 - QEAnalogIndicator, [66](#)
- beamColor
 - QEImage, [136](#)
- beamXVariable
 - QEImage, [136](#)
- beamYVariable
 - QEImage, [136](#)
- borderColour
 - QEAnalogIndicator, [66](#)
- Bottom_To_Top
 - QEAnalogIndicator, [66](#)
- centreAngle
 - QEAnalogIndicator, [66](#)
- ChartState, [30](#)
- clickCheckedText
 - QECheckBox, [88](#)
 - QEPushButton, [195](#)
 - QERadioButton, [211](#)
- clicked
 - QECheckBox, [86](#)
 - QEPushButton, [193](#)
 - QERadioButton, [210](#)
- clickText
 - QECheckBox, [88](#)
 - QEPushButton, [195](#)
 - QERadioButton, [212](#)
- clippingHighVariable
 - QEImage, [136](#)
- clippingLowVariable
 - QEImage, [136](#)
- clippingOnOffVariable
 - QEImage, [136](#)
- color1
 - QEShape, [230](#)
- color10
 - QEShape, [230](#)
- color2
 - QEShape, [230](#)
- color3
 - QEShape, [231](#)
- color4
 - QEShape, [231](#)
- color5
 - QEShape, [231](#)
- color6
 - QEShape, [231](#)
- color7
 - QEShape, [231](#)
- color8
 - QEShape, [231](#)
- color9
 - QEShape, [231](#)
- confirmAction
 - QECheckBox, [89](#)
 - QEPushButton, [195](#)
 - QERadioButton, [212](#)
- confirmWrite
 - QEGenericEdit, [119](#)
- ContainerProfile, [31](#)
- contextMenu, [33](#)
- contextMenuObject, [35](#)
- creationOption
 - QECheckBox, [89](#)
 - QEPushButton, [195](#)
 - QERadioButton, [212](#)
- CreationOptionNames
 - QECheckBox, [85](#)
 - QEPushButton, [191](#)
 - QERadioButton, [208](#)

- dbElementChanged
 - QEPeriodic, [176](#)
- dbValueChanged
 - QEAnalogProgressBar, [72](#)
 - QEBitStatus, [78](#)
 - QECheckBox, [86](#)
 - QEComboBox, [98](#)
 - QEImage, [135](#)
 - QELabel, [150](#)
 - QELineEdit, [158](#)
 - QENumericEdit, [171](#)
 - QEPeriodic, [176](#)
 - QEPlot, [185](#)
 - QEPushButton, [193](#)
 - QERadioButton, [210](#)
 - QESlider, [239](#)
 - QESpinBox, [244](#)
- dbValueChanged1
 - QEShape, [229](#)
- dbValueChanged2
 - QEShape, [229](#)
- dbValueChanged3
 - QEShape, [229](#)
- dbValueChanged4
 - QEShape, [229](#)
- dbValueChanged5
 - QEShape, [229](#)
- dbValueChanged6
 - QEShape, [229](#)
- deactivate
 - QEWidget, [264](#)
- Default
 - QEAnalogProgressBar, [71](#)
 - QECheckBox, [85](#)
 - QELabel, [149](#)
 - QELineEdit, [158](#)
 - QEPushButton, [192](#)
 - QERadioButton, [208](#)
- defaultFileLocation
 - QEWidget, [264](#)
- displayAlarmState
 - QEAnalogProgressBar, [73](#)
 - QEBitStatus, [79](#)
 - QECheckBox, [89](#)
 - QEComboBox, [98](#)
 - QEFrame, [111](#)
 - QEGenericEdit, [119](#)
 - QEGroupBox, [123](#)
 - QEImage, [136](#)
 - QELabel, [151](#)
 - QEPeriodic, [177](#)
 - QEPlot, [186](#)
 - QEPushButton, [196](#)
 - QERadioButton, [212](#)
 - QEShape, [231](#)
 - QESlider, [239](#)
 - QESpinBox, [244](#)
- displayButtonBar
 - QEImage, [135](#)
- drawMarkup
 - markupHLine, [42](#)
 - markupVLine, [48](#)
- enableBrightnessContrast
 - QEImage, [135](#)
- enableHozSliceSelection
 - QEImage, [137](#)
- enableVertSliceSelection
 - QEImage, [137](#)
- Engineer
 - QEAnalogProgressBar, [72](#)
 - QEBitStatus, [78](#)
 - QECheckBox, [86](#)
 - QEComboBox, [98](#)
 - QEFrame, [111](#)
 - QEGenericEdit, [117](#)
 - QEGroupBox, [123](#)
 - QEImage, [134](#)
 - QELabel, [150](#)
 - QEPeriodic, [176](#)
 - QEPlot, [185](#)
 - QEPushButton, [193](#)
 - QERadioButton, [209](#)
 - QEShape, [228](#)
 - QESlider, [239](#)
 - QESpinBox, [244](#)
- findQEFile
 - QEWidget, [264](#)
- Fit
 - QEImage, [133](#)
- Fixed
 - QEAnalogProgressBar, [71](#)
 - QECheckBox, [85](#)
 - QELabel, [149](#)
 - QELineEdit, [158](#)
 - QEPushButton, [192](#)
 - QERadioButton, [209](#)
- flipRotateMenu, [36](#)
- Floating

- QEAAnalogProgressBar, 71
- QECheckBox, 85
- QELabel, 149
- QELineEdit, 158
- QEPushButton, 192
- QERadioButton, 208
- floating
 - QCaDateTime, 58
- fontColour
 - QEAAnalogIndicator, 66
- foregroundColour
 - QEAAnalogIndicator, 66
- format
 - QEAAnalogProgressBar, 73
 - QECheckBox, 89
 - QELabel, 151
 - QELineEdit, 159
 - QEPushButton, 196
 - QERadioButton, 212
- FORMAT_DEFAULT
 - QESTringFormatting, 248
- FORMAT_FLOATING
 - QESTringFormatting, 248
- FORMAT_INTEGER
 - QESTringFormatting, 248
- FORMAT_LOCAL_ENUMERATE
 - QESTringFormatting, 248
- FORMAT_STRING
 - QESTringFormatting, 248
- FORMAT_TIME
 - QESTringFormatting, 248
- FORMAT_UNSIGNEDINTEGER
 - QESTringFormatting, 248
- formatInteger
 - QEIntegerFormatting, 144
- formatIntegerArray
 - QEIntegerFormatting, 145
- formatOption
 - QEImage, 137
- FormatOptions
 - QEImage, 133
- formatOptions
 - QEImage, 132
- Formats
 - QEAAnalogProgressBar, 71
 - QECheckBox, 85
 - QELabel, 149
 - QELineEdit, 157
 - QEPushButton, 192
 - QERadioButton, 208
- formats
 - QESTringFormatting, 248
- formatValue
 - QEIntegerFormatting, 145
- getColor
 - QEWidget, 264
- getConfirmWrite
 - QEGenericEdit, 117
- getElement
 - PMElementList, 52
- getFrameworkVersion
 - QEWidget, 264
- getLocalEnumeration
 - QELocalEnumeration, 164
- getMessageSourceId
 - QEWidget, 264
- getQcaltem
 - QEWidget, 264
- getQWidget
 - QEWidget, 265
- getSubscribe
 - QEGenericEdit, 117
- getWriteOnEnter
 - QEGenericEdit, 117
- getWriteOnFinish
 - QEGenericEdit, 118
- getWriteOnLoseFocus
 - QEGenericEdit, 118
- GREY12
 - QEImage, 133
- GREY16
 - QEImage, 133
- GREY8
 - QEImage, 133
- Grey_12
 - QEImage, 133
- Grey_16
 - QEImage, 133
- Grey_8
 - QEImage, 133
- guiFile
 - QECheckBox, 89
 - QEPushButton, 196
 - QERadioButton, 213
- heightVariable
 - QEImage, 137
- horizontalFlip
 - QEImage, 137

- hozSliceColor
 - QEImage, [137](#)
- Icon
 - QECheckBox, [86](#)
 - QEPushButton, [192](#)
 - QERadioButton, [209](#)
- imageContextMenu, [36](#)
- imageInfo, [37](#)
- imageMarkup, [38](#)
- imageVariable
 - QEImage, [137](#)
- INDEX
 - QStringFormatting, [248](#)
- Index
 - QEAnalogProgressBar, [71](#)
 - QECheckBox, [85](#)
 - QELabel, [149](#)
 - QELineEdit, [157](#)
 - QEPushButton, [191](#)
 - QERadioButton, [208](#)
- initialHosScrollPos
 - QEImage, [137](#)
- initialVertScrollPos
 - QEImage, [135](#)
- int
 - QEAnalogProgressBar, [73](#)
 - QEBitStatus, [79](#)
 - QECheckBox, [89](#)
 - QEComboBox, [99](#)
 - QEFrame, [111](#)
 - QEGenericEdit, [119](#)
 - QEGroupBox, [123](#)
 - QEImage, [138](#)
 - QELabel, [151](#)
 - QELineEdit, [159](#)
 - QEPeriodic, [177](#)
 - QEPlot, [186](#)
 - QEPushButton, [196](#)
 - QERadioButton, [213](#)
 - QEShape, [232](#)
 - QESlider, [239](#)
 - QESpinBox, [244](#)
- Integer
 - QEAnalogProgressBar, [71](#)
 - QECheckBox, [85](#)
 - QELabel, [149](#)
 - QELineEdit, [158](#)
 - QEPushButton, [192](#)
 - QERadioButton, [209](#)
- isDefined
 - QELocalEnumeration, [164](#)
- labelText
 - QECheckBox, [90](#)
 - QEPushButton, [196](#)
 - QERadioButton, [213](#)
 - QESubstitutedLabel, [259](#)
- launchGui
 - QECheckBox, [87](#)
 - QEPushButton, [193](#)
 - QERadioButton, [210](#)
- leadingZero
 - QEAnalogProgressBar, [73](#)
 - QECheckBox, [90](#)
 - QELabel, [152](#)
 - QELineEdit, [159](#)
 - QEPushButton, [197](#)
 - QERadioButton, [213](#)
- leadingZeros
 - QENumericEdit, [172](#)
- Left_To_Right
 - QEAnalogIndicator, [66](#)
- localBrightnessContrast, [40](#)
- LocalEnumeration
 - QEAnalogProgressBar, [71](#)
 - QECheckBox, [85](#)
 - QELabel, [149](#)
 - QELineEdit, [158](#)
 - QEPushButton, [192](#)
 - QERadioButton, [209](#)
- localEnumeration
 - QEAnalogProgressBar, [73](#)
 - QECheckBox, [90](#)
 - QEComboBox, [99](#)
 - QELabel, [152](#)
 - QELineEdit, [159](#)
 - QEPushButton, [197](#)
 - QERadioButton, [213](#)
- loginWidget, [40](#)
- logScale
 - QEAnalogIndicator, [66](#)
- logScaleInterval
 - QEAnalogIndicator, [67](#)
- majorInterval
 - QEAnalogIndicator, [67](#)
- managePixmaps, [40](#)
- markupBeam, [41](#)
- markupHLine, [42](#)

- drawMarkup, 42
- markupItem, 42
- markupLine, 44
- markupRegion, 45
- markupTarget, 46
- markupText, 47
- markupVLine, 47
 - drawMarkup, 48
- maximum
 - QEAAnalogIndicator, 67
 - QENumericEdit, 172
- message_types, 48
- Meter
 - QEAAnalogIndicator, 66
- minimum
 - QEAAnalogIndicator, 67
 - QENumericEdit, 172
- minorInterval
 - QEAAnalogIndicator, 67
- mode
 - QEAAnalogIndicator, 67
- Modes
 - QEAAnalogIndicator, 66
- NewTab
 - QECheckBox, 85
 - QEPushButton, 192
 - QERadioButton, 208
- NewWindow
 - QECheckBox, 85
 - QEPushButton, 192
 - QERadioButton, 208
- NoRotation
 - QEImage, 134
- notation
 - QEAAnalogProgressBar, 74
 - QECheckBox, 91
 - QELabel, 152
 - QELineEdit, 160
 - QEPushButton, 197
 - QERadioButton, 214
- NOTATION_AUTOMATIC
 - QEStrFormatting, 249
- NOTATION_FIXED
 - QEStrFormatting, 249
- NOTATION_SCIENTIFIC
 - QEStrFormatting, 249
- Notations
 - QEAAnalogProgressBar, 71
 - QECheckBox, 85
 - QELabel, 149
 - QELineEdit, 158
 - QEPushButton, 192
 - QERadioButton, 209
- notations
 - QEStrFormatting, 248
- offset1
 - QEShape, 232
- offset2
 - QEShape, 232
- offset3
 - QEShape, 232
- offset4
 - QEShape, 232
- offset5
 - QEShape, 232
- offset6
 - QEShape, 232
- Open
 - QECheckBox, 85
 - QEPushButton, 192
 - QERadioButton, 208
- openQEFile
 - QEWWidget, 265
- orientation
 - QEAAnalogIndicator, 67
- Orientations
 - QEAAnalogIndicator, 66
- password
 - QECheckBox, 91
 - QEPushButton, 198
 - QERadioButton, 214
- PeriodicDialog, 49
- PeriodicElementSetupForm, 49
- PeriodicSetupDialog, 50
- PersistenceManager, 50
- Picture
 - QELabel, 149
- pixmap0
 - QECheckBox, 91
 - QELabel, 153
 - QEPushButton, 198
 - QERadioButton, 214
- pixmap1
 - QECheckBox, 91
 - QELabel, 153
 - QEPushButton, 198
 - QERadioButton, 214

31

- qcastatemachine::QCaStateMachine, [61](#)
- qcastatemachine::ReadQCaStateMachine, [267](#)
- qcastatemachine::SubscriptionQCaStateMachine, [271](#)
- qcastatemachine::WriteQCaStateMachine, [280](#)
- QCaVariableNamePropertyManager, [62](#)
- QEAnalogIndicator, [62](#)
 - backgroundColour, [66](#)
 - Bar, [66](#)
 - borderColour, [66](#)
 - Bottom_To_Top, [66](#)
 - centreAngle, [66](#)
 - fontColour, [66](#)
 - foregroundColour, [66](#)
 - Left_To_Right, [66](#)
 - logScale, [66](#)
 - logScaleInterval, [67](#)
 - majorInterval, [67](#)
 - maximum, [67](#)
 - Meter, [66](#)
 - minimum, [67](#)
 - minorInterval, [67](#)
 - mode, [67](#)
 - Modes, [66](#)
 - orientation, [67](#)
 - Orientations, [66](#)
 - Right_To_Left, [66](#)
 - Scale, [66](#)
 - showScale, [67](#)
 - showText, [67](#)
 - spanAngle, [67](#)
 - Top_To_Bottom, [66](#)
 - value, [68](#)
- QEAnalogIndicator::Band, [30](#)
- QEAnalogIndicator::BandList, [30](#)
- QEAnalogProgressBar, [68](#)
 - addUnits, [72](#)
 - alarmSeverityDisplayMode, [72](#)
 - allowDrop, [72](#)
 - Append, [71](#)
 - arrayAction, [72](#)
 - ArrayActions, [71](#)
 - Ascii, [71](#)
 - Automatic, [71](#)
 - dbValueChanged, [72](#)
 - Default, [71](#)
 - displayAlarmState, [73](#)
 - Engineer, [72](#)
 - Fixed, [71](#)
 - Floating, [71](#)
 - format, [73](#)
 - Formats, [71](#)
 - Index, [71](#)
 - int, [73](#)
 - Integer, [71](#)
 - leadingZero, [73](#)
 - LocalEnumeration, [71](#)
 - localEnumeration, [73](#)
 - notation, [74](#)
 - Notations, [71](#)
 - precision, [74](#)
 - QEAnalogProgressBar, [72](#)
 - Scientific, [71](#)
 - Scientist, [72](#)
 - Time, [71](#)
 - trailingZeros, [74](#)
 - UnsignedInteger, [71](#)
 - useDbDisplayLimits, [74](#)
 - useDbPrecision, [74](#)
 - User, [72](#)
 - userLevelEnabled, [75](#)
 - userLevelEngineerStyle, [75](#)
 - UserLevels, [71](#)
 - userLevelScientistStyle, [75](#)
 - userLevelUserStyle, [75](#)
 - userLevelVisibility, [75](#)
 - variable, [76](#)
 - variableAsToolTip, [76](#)
 - variableSubstitutions, [76](#)
 - visible, [76](#)
- QEBitStatus, [76](#)
 - allowDrop, [79](#)
 - dbValueChanged, [78](#)
 - displayAlarmState, [79](#)
 - Engineer, [78](#)
 - int, [79](#)
 - Scientist, [78](#)
 - setVariableNameAndSubstitutions, [78](#)
 - User, [78](#)
 - userLevelEnabled, [79](#)
 - userLevelEngineerStyle, [79](#)
 - UserLevels, [78](#)
 - userLevelScientistStyle, [79](#)
 - userLevelUserStyle, [80](#)
 - userLevelVisibility, [80](#)
 - variable, [80](#)
 - variableAsToolTip, [80](#)
 - variableSubstitutions, [80](#)

- visible, [80](#)
- QByteArray, [81](#)
- QEChartStateLists, [82](#)
- QECheckBox, [82](#)
 - addUnits, [87](#)
 - alignment, [87](#)
 - allowDrop, [87](#)
 - Append, [85](#)
 - arguments, [88](#)
 - arrayAction, [88](#)
 - ArrayActions, [85](#)
 - Ascii, [85](#)
 - Automatic, [85](#)
 - clickCheckedText, [88](#)
 - clicked, [86](#)
 - clickText, [88](#)
 - confirmAction, [89](#)
 - creationOption, [89](#)
 - CreationOptionNames, [85](#)
 - dbValueChanged, [86](#)
 - Default, [85](#)
 - displayAlarmState, [89](#)
 - Engineer, [86](#)
 - Fixed, [85](#)
 - Floating, [85](#)
 - format, [89](#)
 - Formats, [85](#)
 - guiFile, [89](#)
 - Icon, [86](#)
 - Index, [85](#)
 - int, [89](#)
 - Integer, [85](#)
 - labelText, [90](#)
 - launchGui, [87](#)
 - leadingZero, [90](#)
 - LocalEnumeration, [85](#)
 - localEnumeration, [90](#)
 - NewTab, [85](#)
 - NewWindow, [85](#)
 - notation, [91](#)
 - Notations, [85](#)
 - Open, [85](#)
 - password, [91](#)
 - pixmap0, [91](#)
 - pixmap1, [91](#)
 - pixmap2, [91](#)
 - pixmap3, [91](#)
 - pixmap4, [91](#)
 - pixmap5, [91](#)
 - pixmap6, [91](#)
 - pixmap7, [92](#)
 - precision, [92](#)
 - pressed, [87](#)
 - pressText, [92](#)
 - prioritySubstitutions, [92](#)
 - program, [92](#)
 - QECheckBox, [86](#)
 - released, [87](#)
 - releaseText, [92](#)
 - Scientific, [85](#)
 - Scientist, [86](#)
 - State, [86](#)
 - subscribe, [92](#)
 - Text, [86](#)
 - TextAndIcon, [86](#)
 - Time, [85](#)
 - trailingZeros, [93](#)
 - UnsignedInteger, [85](#)
 - updateOption, [93](#)
 - UpdateOptions, [85](#)
 - useDbPrecision, [93](#)
 - User, [86](#)
 - userLevelEnabled, [93](#)
 - userLevelEngineerStyle, [93](#)
 - UserLevels, [86](#)
 - userLevelScientistStyle, [93](#)
 - userLevelUserStyle, [94](#)
 - userLevelVisibility, [94](#)
 - variable, [94](#)
 - variableAsToolTip, [94](#)
 - variableSubstitutions, [94](#)
 - visible, [94](#)
 - writeOnClick, [94](#)
 - writeOnPress, [95](#)
 - writeOnRelease, [95](#)
- QECheckBoxManager, [95](#)
- QEComboBox, [96](#)
 - allowDrop, [98](#)
 - dbValueChanged, [98](#)
 - displayAlarmState, [98](#)
 - Engineer, [98](#)
 - int, [99](#)
 - localEnumeration, [99](#)
 - Scientist, [98](#)
 - subscribe, [99](#)
 - useDbEnumerations, [98](#)
 - User, [98](#)
 - userLevelEnabled, [99](#)
 - userLevelEngineerStyle, [99](#)
 - UserLevels, [98](#)

- userLevelScientistStyle, 99
- userLevelUserStyle, 100
- userLevelVisibility, 100
- variable, 100
- variableAsToolTip, 100
- variableSubstitutions, 100
- visible, 100
- writeOnChange, 98
- QEConfiguredLayout, 101
- QEConfiguredLayoutManager, 103
- QEDragDrop, 103
- QEFileBrowser, 105
- QEFloating, 106
- QEFloatingArray, 107
- QEFloatingFormatting, 108
- QEForm, 108
- QEFrame, 110
 - allowDrop, 111
 - displayAlarmState, 111
 - Engineer, 111
 - int, 111
 - Scientist, 111
 - User, 111
 - userLevelEnabled, 111
 - userLevelEngineerStyle, 112
 - UserLevels, 111
 - userLevelScientistStyle, 112
 - userLevelUserStyle, 112
 - userLevelVisibility, 112
 - variableAsToolTip, 112
 - visible, 113
- QEGenericButton, 113
- QEGenericEdit, 115
 - allowDrop, 118
 - confirmWrite, 119
 - displayAlarmState, 119
 - Engineer, 117
 - getConfirmWrite, 117
 - getSubscribe, 117
 - getWriteOnEnter, 117
 - getWriteOnFinish, 118
 - getWriteOnLoseFocus, 118
 - int, 119
 - QEGenericEdit, 117
 - Scientist, 117
 - setConfirmWrite, 118
 - setSubscribe, 118
 - setWriteOnEnter, 118
 - setWriteOnFinish, 118
 - setWriteOnLoseFocus, 118
 - subscribe, 119
 - User, 117
 - userLevelEnabled, 119
 - userLevelEngineerStyle, 119
 - UserLevels, 117
 - userLevelScientistStyle, 120
 - userLevelUserStyle, 120
 - userLevelVisibility, 120
 - variable, 120
 - variableAsToolTip, 120
 - variableSubstitutions, 120
 - visible, 121
 - writeOnEnter, 121
 - writeOnFinish, 121
 - writeOnLoseFocus, 121
- QEGroupBox, 121
 - allowDrop, 123
 - displayAlarmState, 123
 - Engineer, 123
 - int, 123
 - Scientist, 122
 - User, 122
 - userLevelEnabled, 123
 - userLevelEngineerStyle, 123
 - UserLevels, 122
 - userLevelScientistStyle, 123
 - userLevelUserStyle, 124
 - userLevelVisibility, 124
 - variableAsToolTip, 124
 - visible, 124
- QEImage, 125
 - allowDrop, 135
 - areaColor, 136
 - autoBrightnessContrast, 136
 - beamColor, 136
 - beamXVariable, 136
 - beamYVariable, 136
 - clippingHighVariable, 136
 - clippingLowVariable, 136
 - clippingOnOffVariable, 136
 - dbValueChanged, 135
 - displayAlarmState, 136
 - displayButtonBar, 135
 - enableBrightnessContrast, 135
 - enableHozSliceSelection, 137
 - enableVertSliceSelection, 137
 - Engineer, 134
 - Fit, 133
 - formatOption, 137
 - FormatOptions, 133

- formatOptions, 132
- GREY12, 133
- GREY16, 133
- GREY8, 133
- Grey_12, 133
- Grey_16, 133
- Grey_8, 133
- heightVariable, 137
- horizontalFlip, 137
- hozSliceColor, 137
- imageVariable, 137
- initialHosScrollPos, 137
- initialVertScrollPos, 135
- int, 138
- NoRotation, 134
- profileColor, 138
- QEIImage, 134, 135
- regionOfInterest1HVariable, 138
- regionOfInterest1WVariable, 138
- regionOfInterest1XVariable, 138
- regionOfInterest1YVariable, 138
- regionOfInterest2HVariable, 138
- regionOfInterest2WVariable, 138
- regionOfInterest2XVariable, 139
- regionOfInterest2YVariable, 139
- regionOfInterest3HVariable, 139
- regionOfInterest3WVariable, 139
- regionOfInterest3XVariable, 139
- regionOfInterest3YVariable, 139
- regionOfInterest4HVariable, 139
- regionOfInterest4WVariable, 139
- regionOfInterest4XVariable, 139
- regionOfInterest4YVariable, 140
- RESIZE_OPTION_FIT, 133
- RESIZE_OPTION_ZOOM, 133
- resizeOption, 140
- ResizeOptions, 133
- resizeOptions, 133
- RGB_888, 133
- Rotate180, 134
- Rotate90Left, 134
- Rotate90Right, 134
- rotation, 140
- ROTATION_0, 133
- ROTATION_180, 133
- ROTATION_90_LEFT, 133
- ROTATION_90_RIGHT, 133
- RotationOptions, 133
- rotationOptions, 133
- Scientist, 134
- selectOptions, 134
- showTime, 140
- SO_AREA4, 134
- SO_BEAM, 134
- SO_HSLICE, 134
- SO_NONE, 134
- SO_PANNING, 134
- SO_PROFILE, 134
- SO_TARGET, 134
- SO_VSLICE, 134
- targetColor, 140
- targetTriggerVariable, 140
- targetXVariable, 140
- targetYVariable, 140
- timeColor, 140
- User, 134
- userLevelEnabled, 141
- userLevelEngineerStyle, 141
- UserLevels, 134
- userLevelScientistStyle, 141
- userLevelUserStyle, 141
- userLevelVisibility, 141
- variableAsToolTip, 142
- variableSubstitutions, 142
- verticalFlip, 142
- vertSliceColor, 142
- visible, 142
- widthVariable, 142
- Zoom, 133
- QEInteger, 142
- QEIntegerArray, 143
- QEIntegerFormatting, 144
 - formatInteger, 144
 - formatIntegerArray, 145
 - formatValue, 145
- QELabel, 145
 - addUnits, 151
 - allowDrop, 151
 - Append, 149
 - arrayAction, 151
 - ArrayActions, 149
 - Ascii, 149
 - Automatic, 149
 - dbValueChanged, 150
 - Default, 149
 - displayAlarmState, 151
 - Engineer, 150
 - Fixed, 149
 - Floating, 149
 - format, 151

- Formats, [149](#)
- Index, [149](#)
- int, [151](#)
- Integer, [149](#)
- leadingZero, [152](#)
- LocalEnumeration, [149](#)
- localEnumeration, [152](#)
- notation, [152](#)
- Notations, [149](#)
- Picture, [149](#)
- pixmap0, [153](#)
- pixmap1, [153](#)
- pixmap2, [153](#)
- pixmap3, [153](#)
- pixmap4, [153](#)
- pixmap5, [153](#)
- pixmap6, [153](#)
- pixmap7, [153](#)
- precision, [153](#)
- QELabel, [150](#)
- Scientific, [149](#)
- Scientist, [150](#)
- Text, [149](#)
- Time, [149](#)
- trailingZeros, [154](#)
- UnsignedInteger, [149](#)
- UPDATE_PIXMAP, [150](#)
- UPDATE_TEXT, [150](#)
- updateOption, [154](#)
- UpdateOptions, [149](#)
- updateOptions, [149](#)
- useDbPrecision, [154](#)
- User, [150](#)
- userLevelEnabled, [154](#)
- userLevelEngineerStyle, [154](#)
- UserLevels, [150](#)
- userLevelScientistStyle, [154](#)
- userLevelUserStyle, [155](#)
- userLevelVisibility, [155](#)
- variable, [155](#)
- variableAsToolTip, [155](#)
- variableSubstitutions, [155](#)
- visible, [155](#)
- QELineEdit, [156](#)
 - addUnits, [159](#)
 - Append, [157](#)
 - arrayAction, [159](#)
 - ArrayActions, [157](#)
 - Ascii, [157](#)
 - Automatic, [158](#)
 - dbValueChanged, [158](#)
 - Default, [158](#)
 - Fixed, [158](#)
 - Floating, [158](#)
 - format, [159](#)
 - Formats, [157](#)
 - Index, [157](#)
 - int, [159](#)
 - Integer, [158](#)
 - leadingZero, [159](#)
 - LocalEnumeration, [158](#)
 - localEnumeration, [159](#)
 - notation, [160](#)
 - Notations, [158](#)
 - precision, [160](#)
 - QELineEdit, [158](#)
 - Scientific, [158](#)
 - Time, [158](#)
 - trailingZeros, [160](#)
 - UnsignedInteger, [158](#)
 - useDbPrecision, [160](#)
- QELineEditManager, [161](#)
- QELink, [161](#)
- QELocalEnumeration, [163](#)
 - getLocalEnumeration, [164](#)
 - isDefined, [164](#)
 - QELocalEnumeration, [164](#)
 - setLocalEnumeration, [164](#)
 - textToDouble, [165](#)
 - textToInt, [165](#)
 - textToValue, [165](#)
 - valueToText, [165](#)
- QELog, [165](#)
- QELogin, [168](#)
- QELoginDialog, [168](#)
- QENumericEdit, [169](#)
 - addUnits, [172](#)
 - autoScale, [172](#)
 - dbValueChanged, [171](#)
 - leadingZeros, [172](#)
 - maximum, [172](#)
 - minimum, [172](#)
 - precision, [172](#)
 - QENumericEdit, [171](#)
- QENumericEditManager, [172](#)
- QEPeriodic, [173](#)
 - allowDrop, [177](#)
 - dbElementChanged, [176](#)
 - dbValueChanged, [176](#)
 - displayAlarmState, [177](#)

- Engineer, 176
- int, 177
- readbackLabelVariable1, 177
- readbackLabelVariable2, 177
- Scientist, 176
- subscribe, 177
- User, 176
- userLevelEnabled, 178
- userLevelEngineerStyle, 178
- UserLevels, 176
- userLevelScientistStyle, 178
- userLevelUserStyle, 178
- userLevelVisibility, 178
- variableAsToolTip, 179
- variableSubstitutions, 179
- visible, 179
- writeButtonVariable1, 179
- writeButtonVariable2, 179
- QEPeriodic::elementInfoStruct, 35
- QEPeriodic::userInfoStructArray, 273
- QEPeriodicComponentData, 179
- QEPeriodicTaskMenu, 180
- QEPeriodicTaskMenuFactory, 180
- QEpicsPV, 181
- QEPlot, 182
 - allowDrop, 186
 - dbValueChanged, 185
 - displayAlarmState, 186
 - Engineer, 185
 - int, 186
 - Scientist, 185
 - User, 185
 - userLevelEnabled, 186
 - userLevelEngineerStyle, 186
 - UserLevels, 185
 - userLevelScientistStyle, 187
 - userLevelUserStyle, 187
 - userLevelVisibility, 187
 - variable1, 187
 - variable2, 187
 - variable3, 187
 - variable4, 188
 - variableAsToolTip, 188
 - variableSubstitutions, 188
 - visible, 188
- QEPushButton, 188
 - addUnits, 194
 - alignment, 194
 - allowDrop, 194
 - altReadbackVariable, 194
 - Append, 191
 - arguments, 194
 - arrayAction, 195
 - ArrayActions, 191
 - Ascii, 191
 - Automatic, 192
 - clickCheckedText, 195
 - clicked, 193
 - clickText, 195
 - confirmAction, 195
 - creationOption, 195
 - CreationOptionNames, 191
 - dbValueChanged, 193
 - Default, 192
 - displayAlarmState, 196
 - Engineer, 193
 - Fixed, 192
 - Floating, 192
 - format, 196
 - Formats, 192
 - guiFile, 196
 - Icon, 192
 - Index, 191
 - int, 196
 - Integer, 192
 - labelText, 196
 - launchGui, 193
 - leadingZero, 197
 - LocalEnumeration, 192
 - localEnumeration, 197
 - NewTab, 192
 - NewWindow, 192
 - notation, 197
 - Notations, 192
 - Open, 192
 - password, 198
 - pixmap0, 198
 - pixmap1, 198
 - pixmap2, 198
 - pixmap3, 198
 - pixmap4, 198
 - pixmap5, 198
 - pixmap6, 198
 - pixmap7, 198
 - precision, 199
 - pressed, 194
 - pressText, 199
 - prioritySubstitutions, 199
 - program, 199
 - QEPushButton, 193

- released, [194](#)
- releaseText, [199](#)
- Scientific, [192](#)
- Scientist, [193](#)
- State, [192](#)
- subscribe, [199](#)
- Text, [192](#)
- TextAndIcon, [192](#)
- Time, [192](#)
- trailingZeros, [199](#)
- UnsignedInteger, [192](#)
- updateOption, [200](#)
- UpdateOptions, [192](#)
- useDbPrecision, [200](#)
- User, [193](#)
- userLevelEnabled, [200](#)
- userLevelEngineerStyle, [200](#)
- UserLevels, [192](#)
- userLevelScientistStyle, [200](#)
- userLevelUserStyle, [200](#)
- userLevelVisibility, [201](#)
- variable, [201](#)
- variableAsToolTip, [201](#)
- variableSubstitutions, [201](#)
- visible, [201](#)
- writeOnClick, [201](#)
- writeOnPress, [202](#)
- writeOnRelease, [202](#)
- QEPVNameLists, [202](#)
- QEPvProperties, [202](#)
 - restoreConfiguration, [203](#)
 - saveConfiguration, [203](#)
 - scaleBy, [204](#)
 - variable, [204](#)
 - variableSubstitutions, [204](#)
- QEPvPropertiesManager, [204](#)
- QERadioButton, [205](#)
 - addUnits, [211](#)
 - alignment, [211](#)
 - allowDrop, [211](#)
 - Append, [208](#)
 - arguments, [211](#)
 - arrayAction, [211](#)
 - ArrayActions, [208](#)
 - Ascii, [208](#)
 - Automatic, [209](#)
 - clickCheckedText, [211](#)
 - clicked, [210](#)
 - clickText, [212](#)
 - confirmAction, [212](#)
 - creationOption, [212](#)
 - CreationOptionNames, [208](#)
 - dbValueChanged, [210](#)
 - Default, [208](#)
 - displayAlarmState, [212](#)
 - Engineer, [209](#)
 - Fixed, [209](#)
 - Floating, [208](#)
 - format, [212](#)
 - Formats, [208](#)
 - guiFile, [213](#)
 - Icon, [209](#)
 - Index, [208](#)
 - int, [213](#)
 - Integer, [209](#)
 - labelText, [213](#)
 - launchGui, [210](#)
 - leadingZero, [213](#)
 - LocalEnumeration, [209](#)
 - localEnumeration, [213](#)
 - NewTab, [208](#)
 - NewWindow, [208](#)
 - notation, [214](#)
 - Notations, [209](#)
 - Open, [208](#)
 - password, [214](#)
 - pixmap0, [214](#)
 - pixmap1, [214](#)
 - pixmap2, [214](#)
 - pixmap3, [215](#)
 - pixmap4, [215](#)
 - pixmap5, [215](#)
 - pixmap6, [215](#)
 - pixmap7, [215](#)
 - precision, [215](#)
 - pressed, [210](#)
 - pressText, [215](#)
 - prioritySubstitutions, [215](#)
 - program, [216](#)
 - QERadioButton, [210](#)
 - released, [210](#)
 - releaseText, [216](#)
 - Scientific, [209](#)
 - Scientist, [209](#)
 - State, [209](#)
 - subscribe, [216](#)
 - Text, [209](#)
 - TextAndIcon, [209](#)
 - Time, [209](#)
 - trailingZeros, [216](#)

- UnsignedInteger, [209](#)
- updateOption, [216](#)
- UpdateOptions, [209](#)
- useDbPrecision, [216](#)
- User, [209](#)
- userLevelEnabled, [216](#)
- userLevelEngineerStyle, [217](#)
- UserLevels, [209](#)
- userLevelScientistStyle, [217](#)
- userLevelUserStyle, [217](#)
- userLevelVisibility, [217](#)
- variable, [217](#)
- variableAsToolTip, [218](#)
- variableSubstitutions, [218](#)
- visible, [218](#)
- writeOnClick, [218](#)
- writeOnPress, [218](#)
- writeOnRelease, [218](#)
- QERecipe, [219](#)
- QERecordFieldName, [221](#)
- QERecordSpec, [221](#)
- QERecordSpecList, [222](#)
- QEScript, [222](#)
- QEShape, [224](#)
 - allowDrop, [229](#)
 - animation1, [230](#)
 - animation2, [230](#)
 - animation3, [230](#)
 - animation4, [230](#)
 - animation5, [230](#)
 - animation6, [230](#)
 - animationOptions, [228](#)
 - color1, [230](#)
 - color10, [230](#)
 - color2, [230](#)
 - color3, [231](#)
 - color4, [231](#)
 - color5, [231](#)
 - color6, [231](#)
 - color7, [231](#)
 - color8, [231](#)
 - color9, [231](#)
 - dbValueChanged1, [229](#)
 - dbValueChanged2, [229](#)
 - dbValueChanged3, [229](#)
 - dbValueChanged4, [229](#)
 - dbValueChanged5, [229](#)
 - dbValueChanged6, [229](#)
 - displayAlarmState, [231](#)
 - Engineer, [228](#)
 - int, [232](#)
 - offset1, [232](#)
 - offset2, [232](#)
 - offset3, [232](#)
 - offset4, [232](#)
 - offset5, [232](#)
 - offset6, [232](#)
 - point1, [232](#)
 - point10, [233](#)
 - point2, [233](#)
 - point3, [233](#)
 - point4, [233](#)
 - point5, [233](#)
 - point6, [233](#)
 - point7, [233](#)
 - point8, [233](#)
 - point9, [234](#)
 - QEShape, [228](#)
 - scale2, [234](#)
 - scale3, [234](#)
 - scale4, [234](#)
 - scale5, [234](#)
 - scale6, [234](#)
 - Scientist, [228](#)
 - shapeOptions, [228](#)
 - User, [228](#)
 - userLevelEnabled, [234](#)
 - userLevelEngineerStyle, [234](#)
 - UserLevels, [228](#)
 - userLevelScientistStyle, [235](#)
 - userLevelUserStyle, [235](#)
 - userLevelVisibility, [235](#)
 - variable1, [235](#)
 - variable2, [235](#)
 - variable3, [236](#)
 - variable4, [236](#)
 - variable5, [236](#)
 - variable6, [236](#)
 - variableAsToolTip, [236](#)
 - variableSubstitutions, [236](#)
 - visible, [236](#)
- QESlider, [237](#)
 - allowDrop, [239](#)
 - dbValueChanged, [239](#)
 - displayAlarmState, [239](#)
 - Engineer, [239](#)
 - int, [239](#)
 - Scientist, [239](#)
 - subscribe, [239](#)
 - User, [239](#)

- userLevelEnabled, [240](#)
 - userLevelEngineerStyle, [240](#)
 - UserLevels, [238](#)
 - userLevelScientistStyle, [240](#)
 - userLevelUserStyle, [240](#)
 - userLevelVisibility, [240](#)
 - variable, [241](#)
 - variableAsToolTip, [241](#)
 - variableSubstitutions, [241](#)
 - visible, [241](#)
 - writeOnChange, [239](#)
- QESpinBox, [241](#)
 - allowDrop, [244](#)
 - dbValueChanged, [244](#)
 - displayAlarmState, [244](#)
 - Engineer, [244](#)
 - int, [244](#)
 - Scientist, [244](#)
 - subscribe, [244](#)
 - User, [244](#)
 - userLevelEnabled, [244](#)
 - userLevelEngineerStyle, [245](#)
 - UserLevels, [243](#)
 - userLevelScientistStyle, [245](#)
 - userLevelUserStyle, [245](#)
 - userLevelVisibility, [245](#)
 - variable, [245](#)
 - variableAsToolTip, [246](#)
 - variableSubstitutions, [246](#)
 - visible, [246](#)
- QString, [246](#)
- QStringFormatting, [247](#)
 - APPEND, [248](#)
 - arrayActions, [248](#)
 - ASCII, [248](#)
 - FORMAT_DEFAULT, [248](#)
 - FORMAT_FLOATING, [248](#)
 - FORMAT_INTEGER, [248](#)
 - FORMAT_LOCAL_ENUMERATE, [248](#)
 - FORMAT_STRING, [248](#)
 - FORMAT_TIME, [248](#)
 - FORMAT_UNSIGNEDINTEGER, [248](#)
 - formats, [248](#)
 - INDEX, [248](#)
 - NOTATION_AUTOMATIC, [249](#)
 - NOTATION_FIXED, [249](#)
 - NOTATION_SCIENTIFIC, [249](#)
 - notations, [248](#)
- QStringFormattingMethods, [249](#)
- QEStripChart, [250](#)
 - restoreConfiguration, [252](#)
 - saveConfiguration, [252](#)
 - variableSubstitutions, [252](#)
- QEStripChart::PrivateData, [52](#)
- QEStripChartAdjustPVDDialog, [253](#)
- QEStripChartContextMenu, [253](#)
 - QEStripChartContextMenu, [253](#)
- QEStripChartItem, [254](#)
- QEStripChartItemDialog, [255](#)
- QEStripChartNames, [255](#)
- QEStripChartRangeDialog, [256](#)
- QEStripChartTimeDialog, [256](#)
- QEStripChartToolBar, [257](#)
- QEStripChartToolBar::OwnWidgets, [49](#)
- QESubstitutedLabel, [258](#)
 - labelText, [259](#)
 - textSubstitutions, [259](#)
- QEToolTip, [259](#)
- QEWidget, [261](#)
 - activate, [264](#)
 - deactivate, [264](#)
 - defaultFileLocation, [264](#)
 - findQEFile, [264](#)
 - getColor, [264](#)
 - getFrameworkVersion, [264](#)
 - getMessageSourceId, [264](#)
 - getQcalItem, [264](#)
 - getQWidget, [265](#)
 - openQEFile, [265](#)
 - processAlarmInfo, [265](#)
 - readNow, [265](#)
 - restoreConfiguration, [265](#)
 - saveConfiguration, [265](#)
 - scaleBy, [265](#)
 - setMessageSourceId, [266](#)
 - setVariableNameAndSubstitutions, [266](#)
 - writeNow, [266](#)
- QEWidgets, [266](#)
- readbackLabelVariable1
 - QEPeiodic, [177](#)
- readbackLabelVariable2
 - QEPeiodic, [177](#)
- readNow
 - QEWidget, [265](#)
- regionOfInterest1HVariable
 - QEImage, [138](#)
- regionOfInterest1WVariable
 - QEImage, [138](#)
- regionOfInterest1XVariable

- QEImage, [138](#)
- regionOfInterest1YVariable
 - QEImage, [138](#)
- regionOfInterest2HVariable
 - QEImage, [138](#)
- regionOfInterest2WVariable
 - QEImage, [138](#)
- regionOfInterest2XVariable
 - QEImage, [139](#)
- regionOfInterest2YVariable
 - QEImage, [139](#)
- regionOfInterest3HVariable
 - QEImage, [139](#)
- regionOfInterest3WVariable
 - QEImage, [139](#)
- regionOfInterest3XVariable
 - QEImage, [139](#)
- regionOfInterest3YVariable
 - QEImage, [139](#)
- regionOfInterest4HVariable
 - QEImage, [139](#)
- regionOfInterest4WVariable
 - QEImage, [139](#)
- regionOfInterest4XVariable
 - QEImage, [139](#)
- regionOfInterest4YVariable
 - QEImage, [140](#)
- released
 - QECheckBox, [87](#)
 - QEPushButton, [194](#)
 - QERadioButton, [210](#)
- releaseText
 - QECheckBox, [92](#)
 - QEPushButton, [199](#)
 - QERadioButton, [216](#)
- RESIZE_OPTION_FIT
 - QEImage, [133](#)
- RESIZE_OPTION_ZOOM
 - QEImage, [133](#)
- resizeOption
 - QEImage, [140](#)
- ResizeOptions
 - QEImage, [133](#)
- resizeOptions
 - QEImage, [133](#)
- restore
 - SaveRestoreSignal, [268](#)
- restoreConfiguration
 - QEPvProperties, [203](#)
 - QEStripChart, [252](#)
- QEWidget, [265](#)
- RGB_888
 - QEImage, [133](#)
- Right_To_Left
 - QEAnalogIndicator, [66](#)
- ROInfo, [267](#)
- Rotate180
 - QEImage, [134](#)
- Rotate90Left
 - QEImage, [134](#)
- Rotate90Right
 - QEImage, [134](#)
- rotation
 - QEImage, [140](#)
- ROTATION_0
 - QEImage, [133](#)
- ROTATION_180
 - QEImage, [133](#)
- ROTATION_90_LEFT
 - QEImage, [133](#)
- ROTATION_90_RIGHT
 - QEImage, [133](#)
- RotationOptions
 - QEImage, [133](#)
- rotationOptions
 - QEImage, [133](#)
- save
 - SaveRestoreSignal, [268](#)
- saveConfiguration
 - QEPvProperties, [203](#)
 - QEStripChart, [252](#)
 - QEWidget, [265](#)
- SaveRestoreSignal, [268](#)
 - restore, [268](#)
 - save, [268](#)
- saveRestoreSlot, [268](#)
- Scale
 - QEAnalogIndicator, [66](#)
- scale2
 - QEShape, [234](#)
- scale3
 - QEShape, [234](#)
- scale4
 - QEShape, [234](#)
- scale5
 - QEShape, [234](#)
- scale6
 - QEShape, [234](#)
- scaleBy

- QEPvProperties, [204](#)
- QEWidget, [265](#)
- Scientific
 - QEAnalogProgressBar, [71](#)
 - QECheckBox, [85](#)
 - QELabel, [149](#)
 - QELineEdit, [158](#)
 - QEPushButton, [192](#)
 - QERadioButton, [209](#)
- Scientist
 - QEAnalogProgressBar, [72](#)
 - QEBitStatus, [78](#)
 - QECheckBox, [86](#)
 - QEComboBox, [98](#)
 - QEFrame, [111](#)
 - QEGenericEdit, [117](#)
 - QEGroupBox, [122](#)
 - QEImage, [134](#)
 - QELabel, [150](#)
 - QEPeriodic, [176](#)
 - QEPlot, [185](#)
 - QEPushButton, [193](#)
 - QERadioButton, [209](#)
 - QEShape, [228](#)
 - QESlider, [239](#)
 - QESpinBox, [244](#)
- selectMenu, [269](#)
- selectOptions
 - QEImage, [134](#)
- setConfirmWrite
 - QEGenericEdit, [118](#)
- setLocalEnumeration
 - QELocalEnumeration, [164](#)
- setMessageSourceId
 - QEWidget, [266](#)
- setSubscribe
 - QEGenericEdit, [118](#)
- setVariableNameAndSubstitutions
 - QEBitStatus, [78](#)
 - QEWidget, [266](#)
- setWriteOnEnter
 - QEGenericEdit, [118](#)
- setWriteOnFinish
 - QEGenericEdit, [118](#)
- setWriteOnLoseFocus
 - QEGenericEdit, [118](#)
- shapeOptions
 - QEShape, [228](#)
- showScale
 - QEAnalogIndicator, [67](#)
- showText
 - QEAnalogIndicator, [67](#)
- showTime
 - QEImage, [140](#)
- SO_AREA4
 - QEImage, [134](#)
- SO_BEAM
 - QEImage, [134](#)
- SO_HSLICE
 - QEImage, [134](#)
- SO_NONE
 - QEImage, [134](#)
- SO_PANNING
 - QEImage, [134](#)
- SO_PROFILE
 - QEImage, [134](#)
- SO_TARGET
 - QEImage, [134](#)
- SO_VSLICE
 - QEImage, [134](#)
- spanAngle
 - QEAnalogIndicator, [67](#)
- standardProperties, [269](#)
- State
 - QECheckBox, [86](#)
 - QEPushButton, [192](#)
 - QERadioButton, [209](#)
- StateMachineTemplate, [271](#)
- subscribe
 - QECheckBox, [92](#)
 - QEComboBox, [99](#)
 - QEGenericEdit, [119](#)
 - QEPeriodic, [177](#)
 - QEPushButton, [199](#)
 - QERadioButton, [216](#)
 - QESlider, [239](#)
 - QESpinBox, [244](#)
- targetColor
 - QEImage, [140](#)
- targetTriggerVariable
 - QEImage, [140](#)
- targetXVariable
 - QEImage, [140](#)
- targetYVariable
 - QEImage, [140](#)
- Text
 - QECheckBox, [86](#)
 - QELabel, [149](#)
 - QEPushButton, [192](#)

- QERadioButton, 209
- TextAndIcon
 - QCheckBox, 86
 - QEPushButton, 192
 - QERadioButton, 209
- textSubstitutions
 - QESubstitutedLabel, 259
- textToDouble
 - QELocalEnumeration, 165
- textToInt
 - QELocalEnumeration, 165
- textToValue
 - QELocalEnumeration, 165
- Time
 - QEAnalogProgressBar, 71
 - QCheckBox, 85
 - QELabel, 149
 - QELineEdit, 158
 - QEPushButton, 192
 - QERadioButton, 209
- timeColor
 - QEImage, 140
- Top_To_Bottom
 - QEAnalogIndicator, 66
- trace, 272
- TrackRange, 272
- trailingZeros
 - QEAnalogProgressBar, 74
 - QCheckBox, 93
 - QELabel, 154
 - QELineEdit, 160
 - QEPushButton, 199
 - QERadioButton, 216
- UnsignedInteger
 - QEAnalogProgressBar, 71
 - QCheckBox, 85
 - QELabel, 149
 - QELineEdit, 158
 - QEPushButton, 192
 - QERadioButton, 209
- UPDATE_PIXMAP
 - QELabel, 150
- UPDATE_TEXT
 - QELabel, 150
- updateOption
 - QCheckBox, 93
 - QELabel, 154
 - QEPushButton, 200
 - QERadioButton, 216
- UpdateOptions
 - QCheckBox, 85
 - QELabel, 149
 - QEPushButton, 192
 - QERadioButton, 209
- updateOptions
 - QELabel, 149
- useDbDisplayLimits
 - QEAnalogProgressBar, 74
- useDbEnumerations
 - QComboBox, 98
- useDbPrecision
 - QEAnalogProgressBar, 74
 - QCheckBox, 93
 - QELabel, 154
 - QELineEdit, 160
 - QEPushButton, 200
 - QERadioButton, 216
- User
 - QEAnalogProgressBar, 72
 - QEBitStatus, 78
 - QCheckBox, 86
 - QComboBox, 98
 - QFrame, 111
 - QEGenericEdit, 117
 - QEGroupBox, 122
 - QEImage, 134
 - QELabel, 150
 - QEPeriodic, 176
 - QEPlot, 185
 - QEPushButton, 193
 - QERadioButton, 209
 - QEShape, 228
 - QESlider, 239
 - QESpinBox, 244
- userInfoStruct, 273
- USERLEVEL_ENGINEER
 - userLevelTypes, 274
- USERLEVEL_SCIENTIST
 - userLevelTypes, 274
- USERLEVEL_USER
 - userLevelTypes, 274
- userLevelEnabled
 - QEAnalogProgressBar, 75
 - QEBitStatus, 79
 - QCheckBox, 93
 - QComboBox, 99
 - QFrame, 111
 - QEGenericEdit, 119
 - QEGroupBox, 123

- QEImage, [141](#)
- QELabel, [154](#)
- QEPeriodic, [178](#)
- QEPlot, [186](#)
- QEPushButton, [200](#)
- QERadioButton, [216](#)
- QEShape, [234](#)
- QESlider, [240](#)
- QESpinBox, [244](#)
- userLevelEngineerStyle
 - QEAnalogProgressBar, [75](#)
 - QEBitStatus, [79](#)
 - QECheckBox, [93](#)
 - QECombobox, [99](#)
 - QEFrame, [112](#)
 - QEGenericEdit, [119](#)
 - QEGroupBox, [123](#)
 - QEImage, [141](#)
 - QELabel, [154](#)
 - QEPeriodic, [178](#)
 - QEPlot, [186](#)
 - QEPushButton, [200](#)
 - QERadioButton, [217](#)
 - QEShape, [234](#)
 - QESlider, [240](#)
 - QESpinBox, [245](#)
- UserLevels
 - QEAnalogProgressBar, [71](#)
 - QEBitStatus, [78](#)
 - QECheckBox, [86](#)
 - QECombobox, [98](#)
 - QEFrame, [111](#)
 - QEGenericEdit, [117](#)
 - QEGroupBox, [122](#)
 - QEImage, [134](#)
 - QELabel, [150](#)
 - QEPeriodic, [176](#)
 - QEPlot, [185](#)
 - QEPushButton, [192](#)
 - QERadioButton, [209](#)
 - QEShape, [228](#)
 - QESlider, [238](#)
 - QESpinBox, [243](#)
- userLevels
 - userLevelTypes, [274](#)
- userLevelScientistStyle
 - QEAnalogProgressBar, [75](#)
 - QEBitStatus, [79](#)
 - QECheckBox, [93](#)
 - QECombobox, [99](#)
- QEFrame, [112](#)
- QEGenericEdit, [120](#)
- QEGroupBox, [123](#)
- QEImage, [141](#)
- QELabel, [154](#)
- QEPeriodic, [178](#)
- QEPlot, [187](#)
- QEPushButton, [200](#)
- QERadioButton, [217](#)
- QEShape, [235](#)
- QESlider, [240](#)
- QESpinBox, [245](#)
- userLevelSignal, [273](#)
- userLevelSlot, [274](#)
- userLevelTypes, [274](#)
 - USERLEVEL_ENGINEER, [274](#)
 - USERLEVEL_SCIENTIST, [274](#)
 - USERLEVEL_USER, [274](#)
- userLevels, [274](#)
- userLevelUserStyle
 - QEAnalogProgressBar, [75](#)
 - QEBitStatus, [80](#)
 - QECheckBox, [94](#)
 - QECombobox, [100](#)
 - QEFrame, [112](#)
 - QEGenericEdit, [120](#)
 - QEGroupBox, [124](#)
 - QEImage, [141](#)
 - QELabel, [155](#)
 - QEPeriodic, [178](#)
 - QEPlot, [187](#)
 - QEPushButton, [200](#)
 - QERadioButton, [217](#)
 - QEShape, [235](#)
 - QESlider, [240](#)
 - QESpinBox, [245](#)
- userLevelVisibility
 - QEAnalogProgressBar, [75](#)
 - QEBitStatus, [80](#)
 - QECheckBox, [94](#)
 - QECombobox, [100](#)
 - QEFrame, [112](#)
 - QEGenericEdit, [120](#)
 - QEGroupBox, [124](#)
 - QEImage, [141](#)
 - QELabel, [155](#)
 - QEPeriodic, [178](#)
 - QEPlot, [187](#)
 - QEPushButton, [201](#)
 - QERadioButton, [217](#)

- QEShape, 235
- QESlider, 240
- QESpinBox, 245
- UserMessage, 274
- UserMessageSignal, 277
- UserMessageSlot, 278
- value
 - QEAAnalogIndicator, 68
- ValueScaling, 279
- valueToText
 - QELocalEnumeration, 165
- variable
 - QEAAnalogProgressBar, 76
 - QEBitStatus, 80
 - QECheckBox, 94
 - QEComboBox, 100
 - QEGenericEdit, 120
 - QELabel, 155
 - QEPushButton, 201
 - QEPvProperties, 204
 - QERadioButton, 217
 - QESlider, 241
 - QESpinBox, 245
- variable1
 - QEPlot, 187
 - QEShape, 235
- variable2
 - QEPlot, 187
 - QEShape, 235
- variable3
 - QEPlot, 187
 - QEShape, 236
- variable4
 - QEPlot, 188
 - QEShape, 236
- variable5
 - QEShape, 236
- variable6
 - QEShape, 236
- variableAsToolTip
 - QEAAnalogProgressBar, 76
 - QEBitStatus, 80
 - QECheckBox, 94
 - QEComboBox, 100
 - QEFrmae, 112
 - QEGenericEdit, 120
 - QEGroupBox, 124
 - QEImage, 142
 - QELabel, 155
- QEPeiodic, 179
- QEPlot, 188
- QEPushButton, 201
- QERadioButton, 218
- QEShape, 236
- QESlider, 241
- QESpinBox, 246
- variableSubstitutions
 - QEAAnalogProgressBar, 76
 - QEBitStatus, 80
 - QECheckBox, 94
 - QEComboBox, 100
 - QEGenericEdit, 120
 - QEImage, 142
 - QELabel, 155
 - QEPeiodic, 179
 - QEPlot, 188
 - QEPushButton, 201
 - QEPvProperties, 204
 - QERadioButton, 218
 - QEShape, 236
 - QESlider, 241
 - QESpinBox, 246
 - QEStripChart, 252
- verticalFlip
 - QEImage, 142
- vertSliceColor
 - QEImage, 142
- VideoWidget, 279
- visible
 - QEAAnalogProgressBar, 76
 - QEBitStatus, 80
 - QECheckBox, 94
 - QEComboBox, 100
 - QEFrmae, 113
 - QEGenericEdit, 121
 - QEGroupBox, 124
 - QEImage, 142
 - QELabel, 155
 - QEPeiodic, 179
 - QEPlot, 188
 - QEPushButton, 201
 - QERadioButton, 218
 - QEShape, 236
 - QESlider, 241
 - QESpinBox, 246
- WidgetRef, 280
- widthVariable
 - QEImage, 142

- writeButtonVariable1
 - QEPeriodic, [179](#)
- writeButtonVariable2
 - QEPeriodic, [179](#)
- writeNow
 - QEWidget, [266](#)
- writeOnChange
 - QComboBox, [98](#)
 - QESlider, [239](#)
- writeOnClick
 - QCheckBox, [94](#)
 - QPushButton, [201](#)
 - QRadioButton, [218](#)
- writeOnEnter
 - QGenericEdit, [121](#)
- writeOnFinish
 - QGenericEdit, [121](#)
- writeOnLoseFocus
 - QGenericEdit, [121](#)
- writeOnPress
 - QCheckBox, [95](#)
 - QPushButton, [202](#)
 - QRadioButton, [218](#)
- writeOnRelease
 - QCheckBox, [95](#)
 - QPushButton, [202](#)
 - QRadioButton, [218](#)
- Zoom
 - QImage, [133](#)
- zoomMenu, [281](#)