

OBD BACCABLE

MANUAL

DISCLAIMER: BACCABLE is a project developed exclusively for educational and research purposes. The use of this tool on vehicles operating on public roads or in any context that may cause harm to people, property, or violate applicable regulations is strictly prohibited.

The author of this project assumes no responsibility for any damages, malfunctions, or consequences resulting from the use of BACCABLE. The end user bears full civil, criminal, and legal responsibility for its use.

It is strongly recommended not to use this project in real-world vehicle applications.

The installation in hidden location, requires specific technical skills in automotive electrical and electronic systems to avoid errors that could expose to safety risks.



INDEX

1. INSTALL	4
1.1 Composition	4
1.2 Pinout	5
1.3 Install instructions (to OBD port)	6
1.4 OBD Cable install instructions (optional)	7
1.5 First Startup (with additional wiring)	8
1.6 First Startup (insertion into standard OBD port)	8
1.7 Notes on Connections to 5V (optional)	9
1.8 Notes about connections toward can bus	9
1.9 Connection Examples	10
1.10 TECHNICAL CHARACTERISTICS	14
1.11 FIRMWARE UPGRADE	15
1.11.1 Procedure for firmware programming trough PC	16
2. USAGE	20
2.1 First Startup	20
2.2 Sniffer	21
2.3 Start&Stop disabler	21
2.4 Immobilizer	22
2.5 Led Strip Controller	23
2.6 Shift	24
2.7 My23 IPC	24
2.8 Params On Dashboard	24
2.9 Route	30
2.10 ESC+TC Selector	31
2.11 DYNO	32
2.12 ACC Virtual Pad	32
2.13 CLEAR FAULTS	33
2.14 REGENERATION ALERT	33
2.15 4WD DISABLER	33
2.16 BRAKES OVERRIDE	34
2.16.1 Launch Assist	34
2.16.1 Burn Out	34
2.17 REMOTE START	35

2.18	READ FAULTS	35
2.19	ODOMETER BLINK	35
2.20	SEAT BELT ALARM	36
2.21	PEDAL BOOSTER	36
2.22	MAIN SETUP MENU	37
2.23	PARAMS SETUP MENU	37
2.24	SHOW RACE MASK	37
2.25	PARK MIRROR.....	37
2.26	ACC AUTOSTART	38
2.27	CLOSE WINDOWS	38
2.28	OPEN WINDOWS	38
2.29	HAS VIRTUAL PAD	38

1. INSTALL

1.1 Composition




Composition

The cable and the "wire taps" (quick connectors or IDC) shown in the previous photo are optional. The Baccable can be used by connecting it directly to the OBD if the vehicle is not equipped with an SGW or if it has an SGW bypass (SGW = Secure Gateway). Therefore, using the included cable and quick connectors is not mandatory.


1.2 Pinout

The Baccable OBD V.3 is equipped with an OBD connector with the following pinout:

Male BACCABLE connector

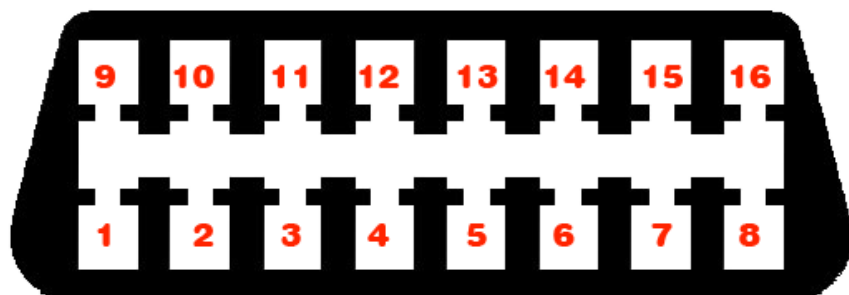

Female OBD connector

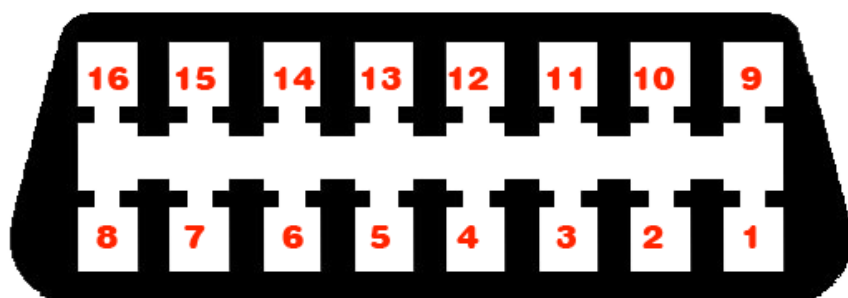

1 CMD1	2 CMD3	3 CAN BH H	4 GND
5 GND	6 CAN C1 H	7 STS3	8 LED CTRL
9 STS1	10 STS2	11 CAN BH L	12 CAN C2 H
13 CAN C2 L	14 CAN C1 L	15 CMD2	16 +12VOLT

BACCABLE Pinout and OBD cable pinout

Pin 16 corresponds to the 12V power supply of the vehicle's OBD port but can also be connected to a 5V supply if needed, as the BACCABLE supports a wide range of input voltages.

1.3 Install instructions (to OBD port)

- 1) When inserting the BACCABLE into the vehicle's OBD port, be careful not to press the PROGRAMMING button. If this happens, remove the BACCABLE and reinsert it.



PROGRAMMING button

- 2) When removing the BACCABLE from the vehicle's OBD port, do not pull on the casing. Instead, push by inserting your fingertips on the OBD connector side towards yourself to avoid stressing the latch that holds together the case (the part with the "BACCABLE" label) and the part where the OBD connector is located.

If the joint is accidentally disengaged, proceed by completely removing the parts (PCB and case) from the OBD connector. Then, reinsert the PCB (printed circuit board) into the case with the "BACCABLE" label, aligning the parts as shown in the previous image. Next, insert the side with the OBD connector until it touches the case.

WARNING: The OBD connector must have the two longer pins aligned with the long side. If inserted incorrectly, remove the OBD connector side, rotate it, and reinsert it.


Once the OBD connector side is in contact with the case, hold the BACCABLE firmly and press firmly on all four corners, ensuring that the cover gradually snaps into place from all sides until fully secured.

1.4 OBD Cable install instructions (optional)

- 1) In addition to the cable, IDCs (also known as "current taps") are provided. These are quick connectors that allow you to tap the desired signal without interrupting the vehicle's wiring. The dual quick connectors are designed for the H and L pins, while the single ones can be used for power supply or H and L pins.
- 2) The quick connector is capable of crimping a wide range of wire sizes; however, this versatility makes the dual quick connector more complex to use. To secure the wires of the double quick connector on the CAN bus, it is not enough to insert the wires into the slot and close the cover. First, it is necessary, using a small flat-head screwdriver, to push the wire into the guillotine to make it penetrate properly. If this preliminary operation is performed correctly, closing the connector cover firmly should engage the locking clips, ensuring the connector is tightly closed with no gaps between the transparent cover and the black base. The red single quick connector, on the other hand, can be tightened with pliers, so it does not require any preliminary steps. Always check the solidity of the connection after tightening.

The following image shows pins on the OBD diagnostic connector (the connector in the image is viewed from the external pin side, not the wire side). Pins 4 and 5 are the ground (GND), and pin 16 is the 12 Volt.

Connettore multiplo di Diagnosi DLC

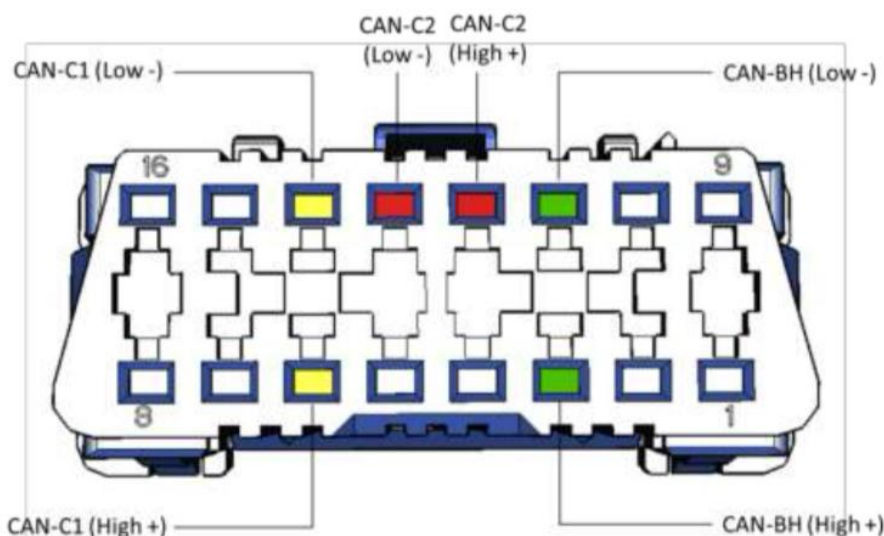

I pin del connettore multiplo di diagnosi dedicati alle tre reti sono:

- Pin 3 – CAN-BH High
- Pin 11 – CAN – BH Low
- Pin 12 – CAN-C2 High
- Pin 13 – CAN-C2 Low
- Pin 14 – CAN-C1 Low
- Pin 6 – CAN-C1 High

1.5 First Startup (with additional wiring)

During the first startup, perform the following preliminary checks:

1. Verify that all connections have been made according to the diagram and the requirements defined in this document.
2. With the ignition on, check that the green LED inside the BACCABLE enclosure is illuminated, confirming correct power supply reception.
3. If the dashboard does not turn on or random errors appear, check that the H and L pins have not been reversed or that neither has been mistakenly connected to another wire.
4. Check that the internal blue LED flashes twice at startup, indicating correct activation of the default-enabled Immobilizer function (note: without perfect alignment between the eye and the LED, it may not be visible—multiple startups may be needed for this check).
5. As soon as the BACCABLE is inserted, if the vehicle dashboard is already on, the instrument cluster should flash once to indicate that the immobilizer is active (enabled by default). If this does not happen, check the connections to the CAN bus.

1.6 First Startup (insertion into standard OBD port)

At first use, you must define which functions you wish to use on your vehicle by accessing the SETUP menu.

Instructions for accessing the SETUP menu, scrolling through the list of available functions, enabling/disabling features, and permanently saving the settings are provided in paragraph 2.1.


1.7 Notes on Connections to 5V (optional)

If the **BACCABLE** is powered by the 5V supply, you can connect to, for example, the **USB HUB** located in the glove compartment of the center console, next to the handbrake. This voltage is active as soon as you enter the vehicle, but also when connecting to the RF HUB as a thief. To access this voltage, follow these instructions:

1. Remove and disconnect the **USB HUB** from the vehicle.
2. Widen the 4 tabs on the back cover using small screwdrivers and tweezers, then remove the printed circuit board.
3. Drill a hole in the back plastic in the area not occupied by connectors to allow the wire, as shown in the figure, to pass through (make sure to drill a precise hole to prevent the wire from sliding too loosely; if needed, apply a drop of silicone inside at the end to provide resistance in case the wire is pulled).
4. Solder the wire to the **USB HUB** printed circuit board, at the **+5V** pin of the USB connector. You can use the reference images below to identify the correct pin to use.

Pin Out

- ① (+) 5V
- ② Data-
- ③ Data+
- ④ (-) Gnd




Female





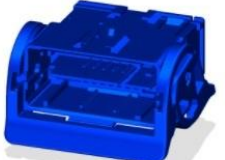
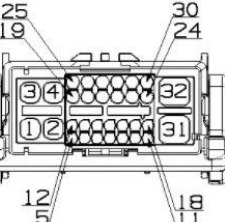
1.8 Notes about connections toward can bus

If the vehicle is equipped with an SGW (Secure Gateway), the pins on the OBD port cannot be used to connect the BACCABLE. Instead, it will be necessary to use an SGW bypass wiring that can be purchased online, which will provide an OBD port for the BACCABLE connection. Alternatively, you can intercept the wires of the desired CAN bus at other points in the vehicle, upstream of the SGW.


1.9 Connection Examples

Example 1 of a point upstream of the SGW where the C1 bus can be detected:

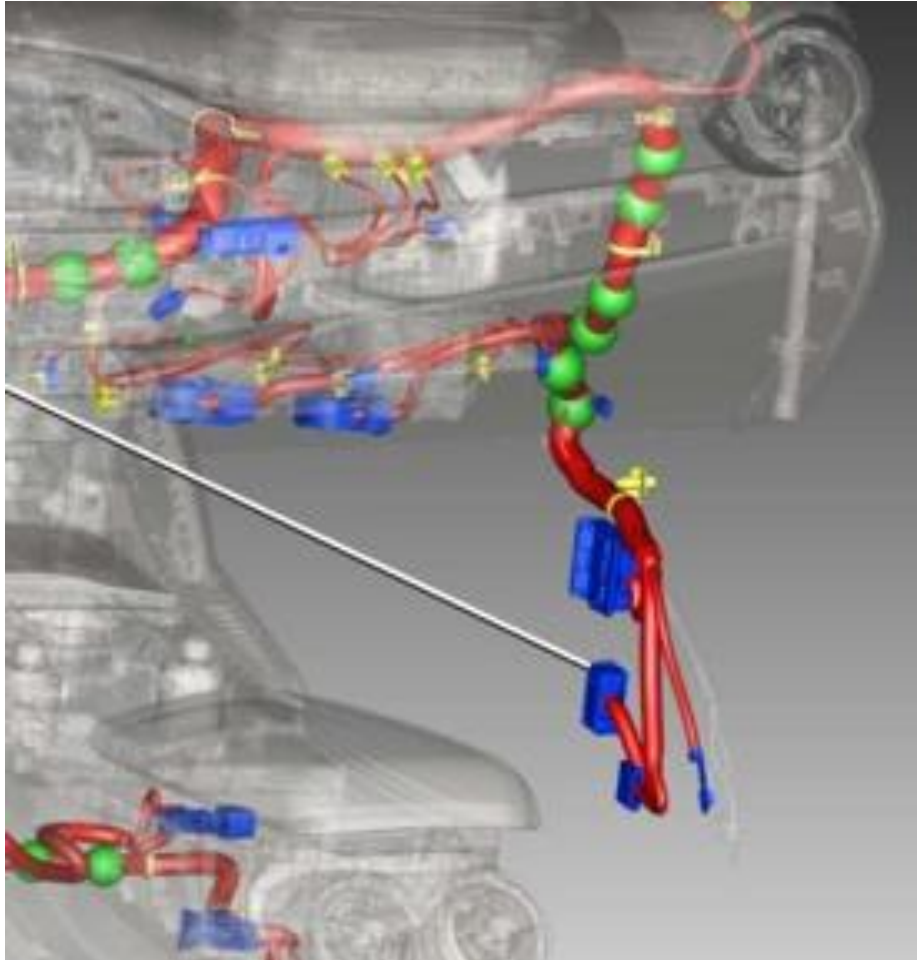


<p>Mating Side:</p> 	<p>Isometric View:</p> 	<p>Wire Insertion Side:</p> 	<table><tr><td>5</td><td>Body</td><td>P400</td><td>RIGHT FRONT PASSIVE ENTRY HANDLE SWITCH SENSE</td><td>VT / GN</td><td>0.35</td><td>LHD</td></tr><tr><td>IP</td><td>P400</td><td>RIGHT FRONT PASSIVE ENTRY HANDLE SWITCH SENSE</td><td>VT / GN</td><td>0.35</td><td>KEYLESS IGNITION</td></tr><tr><td>6</td><td>Body</td><td>P401</td><td>RIGHT FRONT PASSIVE ENTRY HANDLE SWITCH RETURN</td><td>VE / GY</td><td>0.35</td><td>LHD</td></tr><tr><td>IP</td><td>P401</td><td>RIGHT FRONT PASSIVE ENTRY HANDLE SWITCH RETURN</td><td>VE / GY</td><td>0.35</td><td>KEYLESS IGNITION</td></tr><tr><td>7</td><td>Body</td><td>X298</td><td>RIGHT FRONT SPEAKER (-)</td><td>VT / OG</td><td>0.75</td><td>BASE</td></tr><tr><td>Body</td><td>X298</td><td>RIGHT FRONT SPEAKER (-)</td><td>VT / OG</td><td>0.75</td><td>PREMIUM/PREMIUM 2</td></tr><tr><td>IP</td><td>X298</td><td>RIGHT FRONT SPEAKER (-)</td><td>VT / OG</td><td>0.75</td><td>BASE</td></tr><tr><td>IP</td><td>X298</td><td>RIGHT FRONT SPEAKER (-)</td><td>VT / OG</td><td>0.75</td><td>PREMIUM/PREMIUM 2</td></tr><tr><td>8</td><td>Body</td><td>X208</td><td>RIGHT FRONT SPEAKER (+)</td><td>VT</td><td>0.75</td><td>BASE</td></tr><tr><td>Body</td><td>X208</td><td>RIGHT FRONT SPEAKER (+)</td><td>VT</td><td>0.75</td><td>PREMIUM/PREMIUM 2</td></tr><tr><td>IP</td><td>X208</td><td>RIGHT FRONT SPEAKER (+)</td><td>VT</td><td>0.75</td><td>BASE</td></tr><tr><td>IP</td><td>X208</td><td>RIGHT FRONT SPEAKER (+)</td><td>VT</td><td>0.75</td><td>PREMIUM/PREMIUM 2</td></tr><tr><td>9</td><td>Body</td><td>G12</td><td>DOOR LOCK/UNLOCK LED DRIVER</td><td>GV / RD</td><td>0.35</td><td></td></tr><tr><td>IP</td><td>G12</td><td>DOOR LOCK/UNLOCK LED DRIVER</td><td>GV / RD</td><td>0.35</td><td>LHD</td></tr><tr><td>10</td><td>Body</td><td>E16</td><td>PANEL LAMPS DRIVER</td><td>GV / RD</td><td>0.35</td><td></td></tr><tr><td>IP</td><td>E16</td><td>PANEL LAMPS DRIVER</td><td>GV / RD</td><td>0.35</td><td>LHD</td></tr><tr><td>11</td><td>Body</td><td>Z904</td><td>GROUND</td><td>WH / OG</td><td>0.35</td><td></td></tr><tr><td>IP</td><td>Z904</td><td>GROUND</td><td>WH / OG</td><td>0.35</td><td>LHD</td></tr><tr><td>12</td><td>All Variants</td><td>D923</td><td>PASSIVE ENTRY ANTENNA 2 RETURN</td><td>WH / DB</td><td>0.5</td><td></td></tr><tr><td>13</td><td>All Variants</td><td>D922</td><td>PASSIVE ENTRY ANTENNA 2 SIGNAL</td><td>WH / BK</td><td>0.5</td><td></td></tr><tr><td>14</td><td>Body</td><td>D12</td><td>CAN C (-)</td><td>BN</td><td>0.35</td><td>BASE</td></tr><tr><td>Body</td><td>D12</td><td>CAN C (-)</td><td>BN</td><td>0.35</td><td>STABILITY CONTROL/ELECTRONIC DIFFERENTIAL EXCEPT 2.2L EU6</td></tr><tr><td>IP</td><td>D12</td><td>CAN C (-)</td><td>BN</td><td>0.35</td><td></td></tr><tr><td>15</td><td>Body</td><td>D11</td><td>CAN C (+)</td><td>GN</td><td>0.35</td><td>BASE</td></tr><tr><td>Body</td><td>D11</td><td>CAN C (+)</td><td>GN</td><td>0.35</td><td>STABILITY CONTROL/ELECTRONIC DIFFERENTIAL EXCEPT 2.2L EU6</td></tr><tr><td>IP</td><td>D11</td><td>CAN C (+)</td><td>GN</td><td>0.35</td><td></td></tr></table>	5	Body	P400	RIGHT FRONT PASSIVE ENTRY HANDLE SWITCH SENSE	VT / GN	0.35	LHD	IP	P400	RIGHT FRONT PASSIVE ENTRY HANDLE SWITCH SENSE	VT / GN	0.35	KEYLESS IGNITION	6	Body	P401	RIGHT FRONT PASSIVE ENTRY HANDLE SWITCH RETURN	VE / GY	0.35	LHD	IP	P401	RIGHT FRONT PASSIVE ENTRY HANDLE SWITCH RETURN	VE / GY	0.35	KEYLESS IGNITION	7	Body	X298	RIGHT FRONT SPEAKER (-)	VT / OG	0.75	BASE	Body	X298	RIGHT FRONT SPEAKER (-)	VT / OG	0.75	PREMIUM/PREMIUM 2	IP	X298	RIGHT FRONT SPEAKER (-)	VT / OG	0.75	BASE	IP	X298	RIGHT FRONT SPEAKER (-)	VT / OG	0.75	PREMIUM/PREMIUM 2	8	Body	X208	RIGHT FRONT SPEAKER (+)	VT	0.75	BASE	Body	X208	RIGHT FRONT SPEAKER (+)	VT	0.75	PREMIUM/PREMIUM 2	IP	X208	RIGHT FRONT SPEAKER (+)	VT	0.75	BASE	IP	X208	RIGHT FRONT SPEAKER (+)	VT	0.75	PREMIUM/PREMIUM 2	9	Body	G12	DOOR LOCK/UNLOCK LED DRIVER	GV / RD	0.35		IP	G12	DOOR LOCK/UNLOCK LED DRIVER	GV / RD	0.35	LHD	10	Body	E16	PANEL LAMPS DRIVER	GV / RD	0.35		IP	E16	PANEL LAMPS DRIVER	GV / RD	0.35	LHD	11	Body	Z904	GROUND	WH / OG	0.35		IP	Z904	GROUND	WH / OG	0.35	LHD	12	All Variants	D923	PASSIVE ENTRY ANTENNA 2 RETURN	WH / DB	0.5		13	All Variants	D922	PASSIVE ENTRY ANTENNA 2 SIGNAL	WH / BK	0.5		14	Body	D12	CAN C (-)	BN	0.35	BASE	Body	D12	CAN C (-)	BN	0.35	STABILITY CONTROL/ELECTRONIC DIFFERENTIAL EXCEPT 2.2L EU6	IP	D12	CAN C (-)	BN	0.35		15	Body	D11	CAN C (+)	GN	0.35	BASE	Body	D11	CAN C (+)	GN	0.35	STABILITY CONTROL/ELECTRONIC DIFFERENTIAL EXCEPT 2.2L EU6	IP	D11	CAN C (+)	GN	0.35	
5	Body	P400	RIGHT FRONT PASSIVE ENTRY HANDLE SWITCH SENSE	VT / GN	0.35	LHD																																																																																																																																																																				
IP	P400	RIGHT FRONT PASSIVE ENTRY HANDLE SWITCH SENSE	VT / GN	0.35	KEYLESS IGNITION																																																																																																																																																																					
6	Body	P401	RIGHT FRONT PASSIVE ENTRY HANDLE SWITCH RETURN	VE / GY	0.35	LHD																																																																																																																																																																				
IP	P401	RIGHT FRONT PASSIVE ENTRY HANDLE SWITCH RETURN	VE / GY	0.35	KEYLESS IGNITION																																																																																																																																																																					
7	Body	X298	RIGHT FRONT SPEAKER (-)	VT / OG	0.75	BASE																																																																																																																																																																				
Body	X298	RIGHT FRONT SPEAKER (-)	VT / OG	0.75	PREMIUM/PREMIUM 2																																																																																																																																																																					
IP	X298	RIGHT FRONT SPEAKER (-)	VT / OG	0.75	BASE																																																																																																																																																																					
IP	X298	RIGHT FRONT SPEAKER (-)	VT / OG	0.75	PREMIUM/PREMIUM 2																																																																																																																																																																					
8	Body	X208	RIGHT FRONT SPEAKER (+)	VT	0.75	BASE																																																																																																																																																																				
Body	X208	RIGHT FRONT SPEAKER (+)	VT	0.75	PREMIUM/PREMIUM 2																																																																																																																																																																					
IP	X208	RIGHT FRONT SPEAKER (+)	VT	0.75	BASE																																																																																																																																																																					
IP	X208	RIGHT FRONT SPEAKER (+)	VT	0.75	PREMIUM/PREMIUM 2																																																																																																																																																																					
9	Body	G12	DOOR LOCK/UNLOCK LED DRIVER	GV / RD	0.35																																																																																																																																																																					
IP	G12	DOOR LOCK/UNLOCK LED DRIVER	GV / RD	0.35	LHD																																																																																																																																																																					
10	Body	E16	PANEL LAMPS DRIVER	GV / RD	0.35																																																																																																																																																																					
IP	E16	PANEL LAMPS DRIVER	GV / RD	0.35	LHD																																																																																																																																																																					
11	Body	Z904	GROUND	WH / OG	0.35																																																																																																																																																																					
IP	Z904	GROUND	WH / OG	0.35	LHD																																																																																																																																																																					
12	All Variants	D923	PASSIVE ENTRY ANTENNA 2 RETURN	WH / DB	0.5																																																																																																																																																																					
13	All Variants	D922	PASSIVE ENTRY ANTENNA 2 SIGNAL	WH / BK	0.5																																																																																																																																																																					
14	Body	D12	CAN C (-)	BN	0.35	BASE																																																																																																																																																																				
Body	D12	CAN C (-)	BN	0.35	STABILITY CONTROL/ELECTRONIC DIFFERENTIAL EXCEPT 2.2L EU6																																																																																																																																																																					
IP	D12	CAN C (-)	BN	0.35																																																																																																																																																																						
15	Body	D11	CAN C (+)	GN	0.35	BASE																																																																																																																																																																				
Body	D11	CAN C (+)	GN	0.35	STABILITY CONTROL/ELECTRONIC DIFFERENTIAL EXCEPT 2.2L EU6																																																																																																																																																																					
IP	D11	CAN C (+)	GN	0.35																																																																																																																																																																						
<p>Mating Side:</p> 	<p>Isometric View:</p> 	<p>Wire Insertion Side:</p> 																																																																																																																																																																								

Example 2 of a point upstream of the SGW where the C1 bus can be detected:

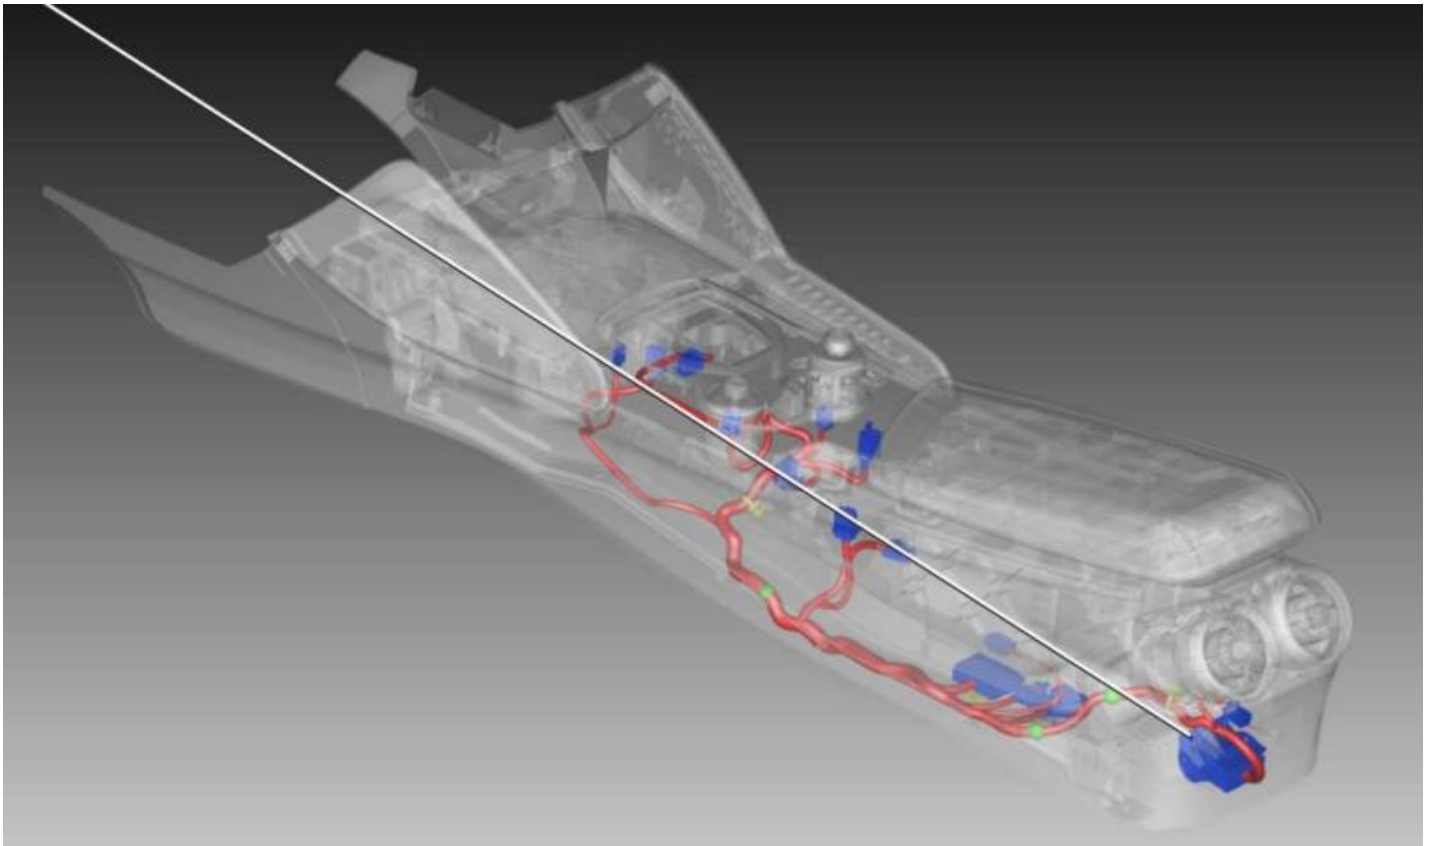

Connector Views

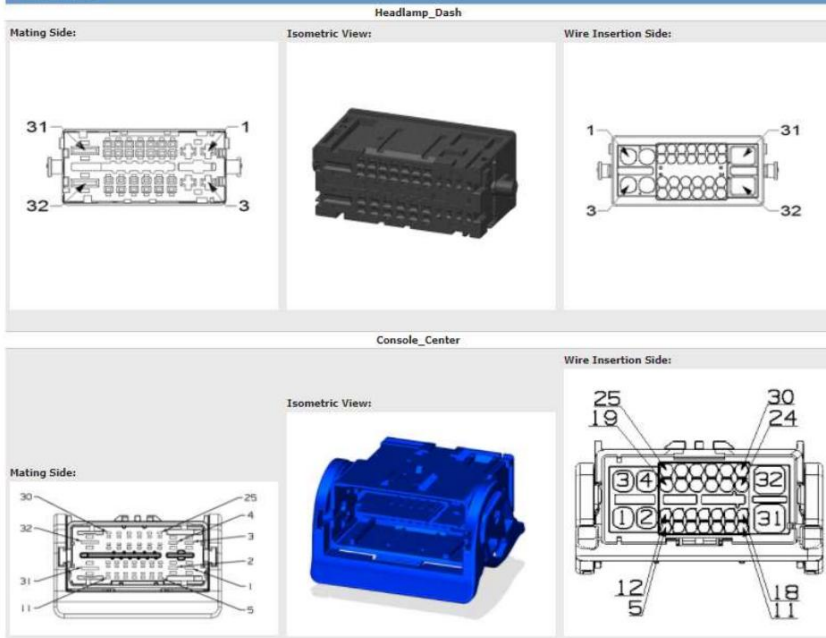

Headlamp_Dash	B68	EPB SWITCH POSITION 3 SIGNAL	VT / DB	0.35	LHD
9 Console_Center	D11	CAN C (+)	GN	0.35	ATX
Headlamp_Dash	D11	CAN C (+)	GN	0.35	2.0L/2.2L
Headlamp_Dash	D11	CAN C (+)	GN	0.35	2.9L
10 Console_Center	D12	CAN C (-)	BN	0.35	ATX
Headlamp_Dash	D12	CAN C (-)	BN	0.35	2.0L/2.2L
Headlamp_Dash	D12	CAN C (-)	BN	0.35	2.9L
11 Console_Center	D11	CAN C (+)	GN	0.35	ATX
Headlamp_Dash	D11	CAN C (+)	GN	0.35	
12 Console_Center	D12	CAN C (-)	BN	0.35	ATX
Headlamp_Dash	D12	CAN C (-)	BN	0.35	
13 Console_Center	M108	AMBIENT LIGHTING CONTROL	VE / GN	0.5	PREMIUM
Headlamp_Dash	M108	AMBIENT LIGHTING CONTROL	VE / GN	0.35	PREMIUM
14 Console_Center	Z101	GROUND	BK	0.5	PREMIUM
Headlamp_Dash	Z101	GROUND	BK	0.35	PREMIUM
15 Console_Center	F741	IGNITION RUN/START OUTPUT	DB / RD	0.5	ATX
Headlamp_Dash	F741	IGNITION RUN/START OUTPUT	DB / RD	0.5	
16 Console_Center	B71	EPB SWITCH POSITION 6 SIGNAL	VT / GN	0.35	LHD
Console_Center	B71	EPB SWITCH POSITION 6 SIGNAL	VT / GN	0.35	RHD
Headlamp_Dash	B71	EPB SWITCH POSITION 6 SIGNAL	VT / GN	0.35	LHD
17 Console_Center	B70	EPB SWITCH POSITION 5 SIGNAL	VT / RD	0.35	LHD
Console_Center	B70	EPB SWITCH POSITION 5 SIGNAL	VT / RD	0.35	RHD
Headlamp_Dash	B70	EPB SWITCH POSITION 5 SIGNAL	VT / RD	0.35	LHD
18 Console_Center	G63	EPB INDICATOR SIGNAL	GN / OG	0.35	LHD
Console_Center	G63	EPB INDICATOR SIGNAL	GN / OG	0.35	RHD
Headlamp_Dash	G63	EPB INDICATOR SIGNAL	GN / OG	0.35	LHD
19 Console_Center	A901	FUSED B(+)	RD / GN	0.5	LHD
Console_Center	A901	FUSED B(+)	RD / GN	0.5	RHD
Headlamp_Dash	A901	FUSED B(+)	RD / GN	0.5	
20 Console_Center	A901	FUSED B(+)	RD / YE	0.75	ATX
Headlamp_Dash	A901	FUSED B(+)	RD / BN	0.75	ATX
22 Console_Center	F741	IGNITION RUN/START OUTPUT	DB / GN	0.35	LHD
Console_Center	F741	IGNITION RUN/START OUTPUT	DB / GN	0.35	RHD
Headlamp_Dash	F741	IGNITION RUN/START OUTPUT	DB / GN	0.35	
25 All Variants	E3	PANEL LAMPS DIMMER SWITCH MUX	YE	0.5	
26 All Variants	Z136	GROUND	BK / YE	0.75	ATX
27 Console_Center	Z103	GROUND	BK	0.5	LHD
Console_Center	Z103	GROUND	BK	0.5	RHD
Headlamp_Dash	Z103	GROUND	BK	0.5	
29 Console_Center	F814	FUSED POWER OUTLET RELAY OUTPUT 1	DB	0.5	REAR USB
Headlamp_Dash	F814	FUSED POWER OUTLET RELAY OUTPUT 1	DB	0.5	

Example 3 of a point upstream of the SGW:

In the case of an automatic transmission, the following excerpt from the manual can be used, along with the pinout of the transmission connector:


Sensore della posizione della leva selettore

Il sensore integrato nella centralina della leva selettore rileva il movimento e la posizione della leva selettore; queste informazioni vengono inviate alla centralina del cambio TCM.

Basandosi su queste informazioni la centralina del cambio TCM determina la condizione del cambio (P, R, N, D, TIP) e la invia alla centralina della leva selettore AGSM.

In base a questi dati vengono comandate le strategie di funzionamento della leva ed il dispositivo di visualizzazione nella parte superiore della leva selettore


Pin out centralina AGSM

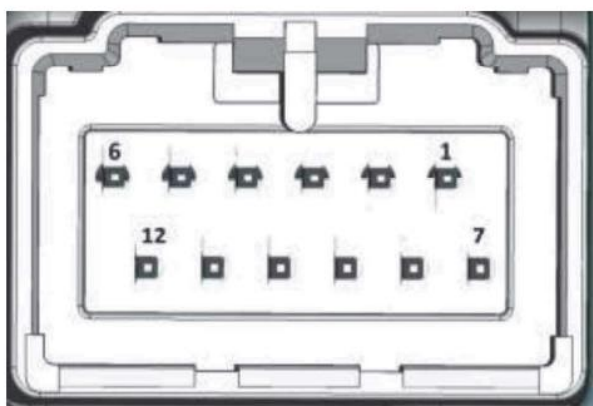

Pin	Funzione
1	KL30
2	KL15
4	C-Can1 H
5	C-Can1 L
10	Massa
11	C-Can1 H
12	C-Can1 L


Example 4 of a point upstream of the SGW:

On the Body, located at the passenger footwell, there are all the bus lines and the power supply.

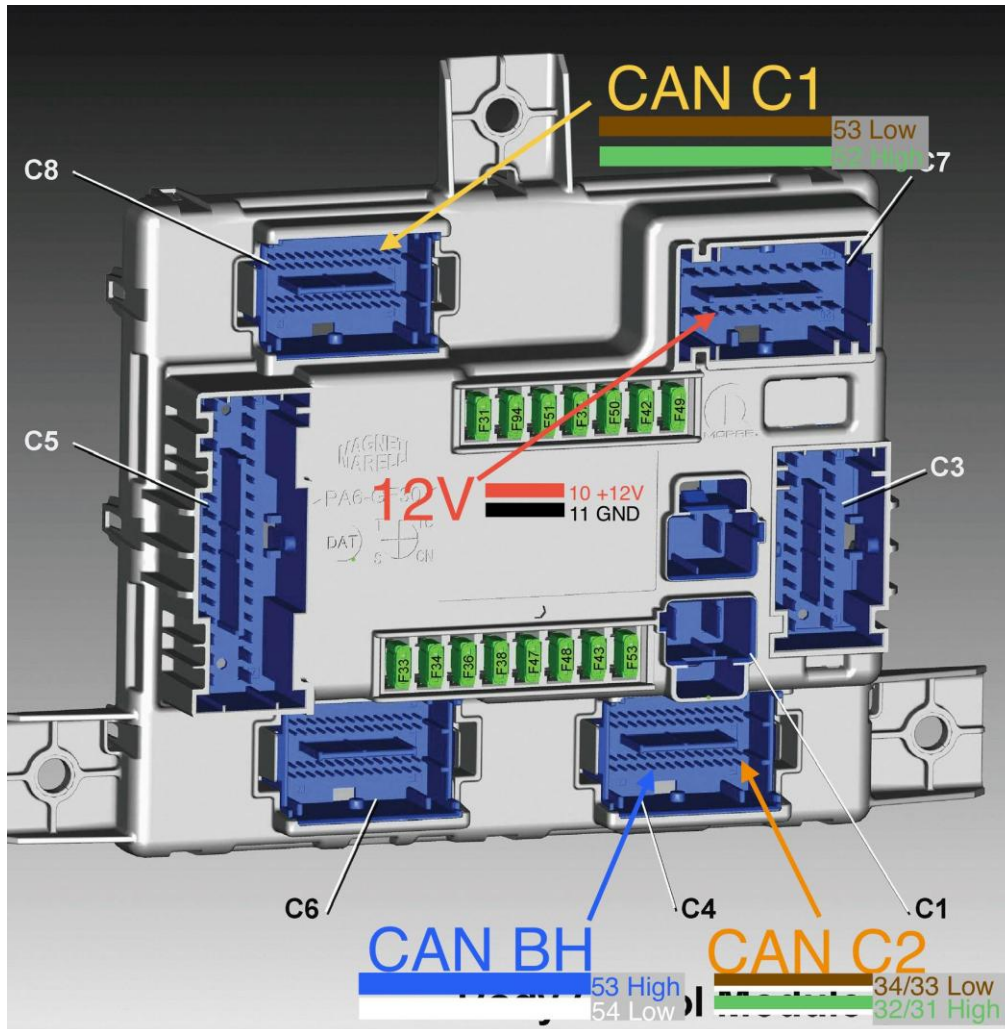

Can Bus and power supply on the Body Computer

The following image shows the Body Connectors Layout:

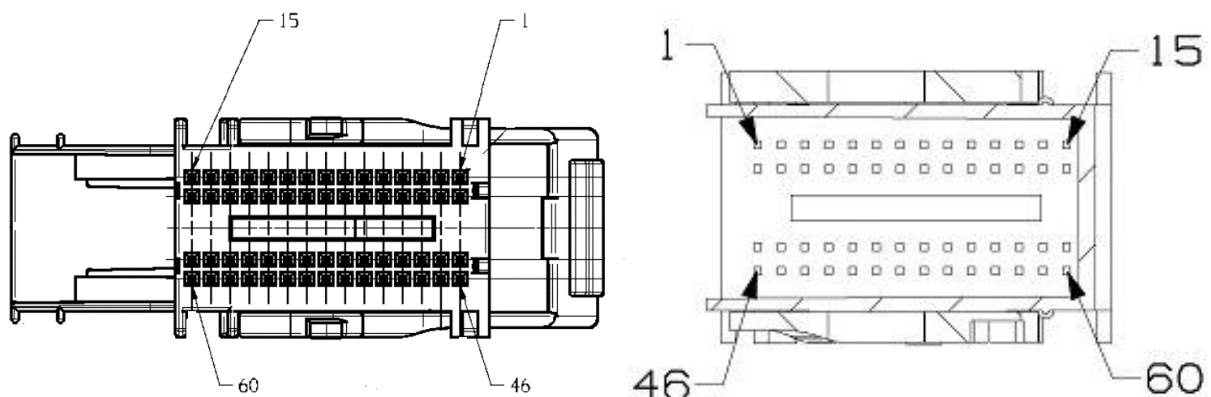

Body C4 connector

Body C8 connector

1.10 TECHNICAL CHARACTERISTICS

Dimensions: 57.5mm (width) x 44.5mm (height) x 22mm (depth)

Weight: less than 50 grams

Power supply voltage: 4.5V - 35V (DC)

Current consumption @12V: approximately 11mA with vehicle off in sleep mode. Less than 30mA during operation with vehicle on.

1.11 FIRMWARE UPGRADE


The BACCABLE is delivered pre-programmed with the latest available firmware release; however, it is possible to benefit from future firmware updates via the Firmware Update procedure.

To perform a firmware update, you will need a BACCABLE device, a computer with a USB port, the STM Cube Programmer software, and the firmware you wish to upload.

Note1: The STM Cube Programmer software can be downloaded from the STMicroelectronics website after free registration: <https://www.st.com/en/development-tools/stm32cubeprog.html>

Note2: As an alternative to a PC, you can use an Android smartphone with the StmDfuUsb app (https://play.google.com/store/apps/details?id=com.yatrim.stmdfuusb&pcampaignid=web_share) or equivalent one, along with a USB OTG cable. Once the 25-write limit is reached, simply clear the app data to continue using it. Other smartphone apps may also work, but they have not been tested.

To get started, visit the BACCable GitHub releases page (<https://github.com/gaUCHO1978/BACCable/releases/>) and download the latest STABLE version available for the BACCABLE.

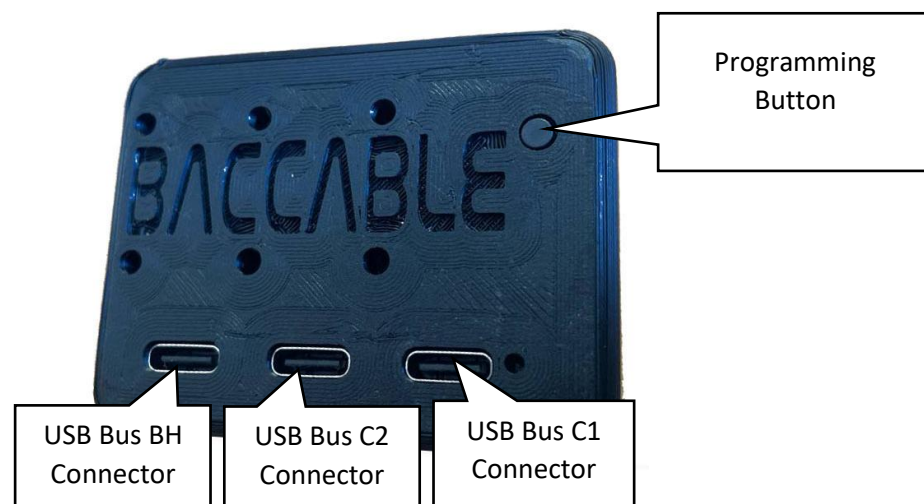

Programming connectors and button, used during programming phase

The files to use are:

- **baccableBH_stable.elf** (to upload connected to USB BH connector)
- **baccableC1diesel_stable.elf** (to upload connected to USB C1 connector)
- **baccableC2_stable.elf** (to upload connected to USB C2 connector)

Optionally, if you plan to carry out research and development activities using the Baccable as a sniffer (see section 2.2), you can upload the file **baccableCANable_stable.elf** to all USB ports.

Perform the firmware loading procedure on all three USB connectors by uploading the corresponding firmware to each USB port as follows:

- **baccableC1diesel_stable.elf** to USB C1
- **baccableC2_stable.elf** to USB C2
- **baccableBH_stable.elf** to USB BH

The procedure for uploading firmware via smartphone is not described, but the equivalent steps outlined in the following paragraph are sufficient.


1.11.1 Procedure for firmware programming trough PC

- 1) Press and hold the programming button on the board
- 2) Connect the USB port (C1, C2, BH) to the PC - The board will be recognized by the PC as a serial device named "STM32 Bootloader"
- 3) Only when the green LED is lit, the programming button can be released


Note1: If the green LED on the BACCABLE flickers or emits a weak light, use a shorter USB cable, or replace the USB cable

Note2: If the board is not detected by the PC, make sure the programming button was pressed correctly before connecting the USB cable, and keep it pressed until the USB connector is fully inserted on both sides. If the problem persists, rotate the USB-C connector on the BACCABLE side by 180 degrees and try again


- 4) Open the STM32CubeProgrammer software, select USB from the dropdown menu (on the right side of the window), then press the CONNECT button

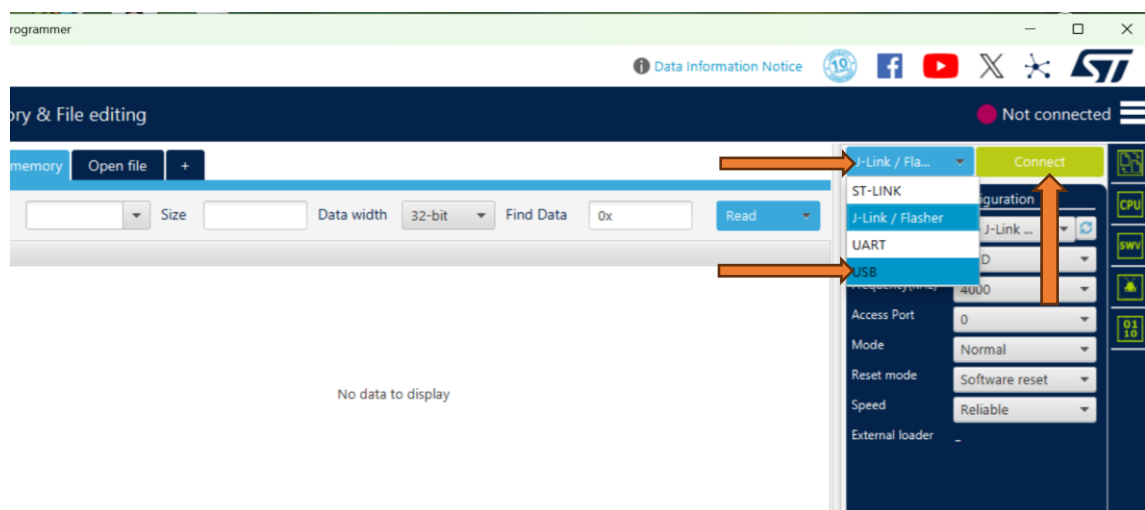


- 5) If the PORT field shows NO DFU as in the figure below, it means the device was not detected, and you need to restart this procedure or press the UPDATE button shown in the following figure.

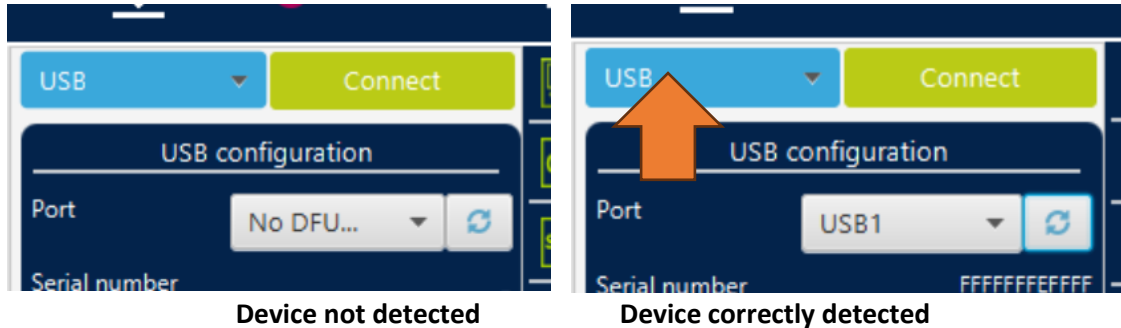


- 6) If, upon pressing the CONNECT button, the error “device is under read out protection” appears—as shown in the figure below—it’s likely due to an incompatibility between the USB port chipset of the PC and the chip used in the Baccable. To overcome this error, you can try the procedure again using other USB ports on the PC, use a different PC, or connect a USB hub (preferably a slow one, not a new-generation model) between the Baccable and the PC. The latter method is ideal for newer PCs.

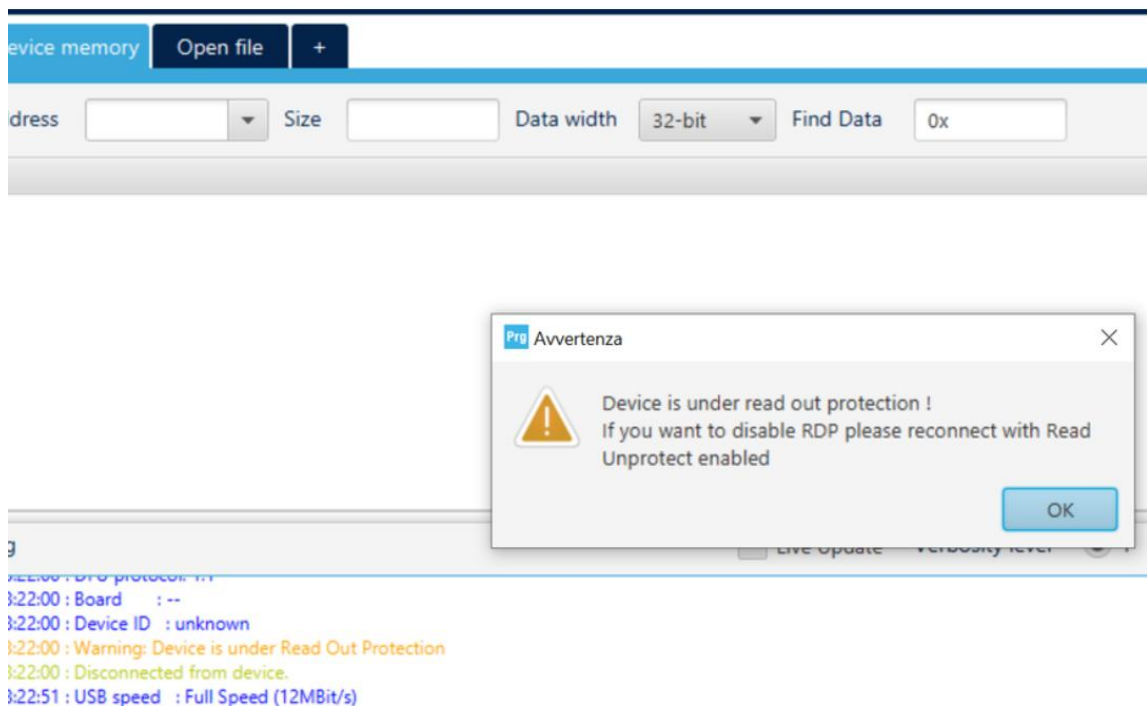


- 7) If the connection was successful, navigate to the "Erasing and Programming" section, then press the BROWSE button.

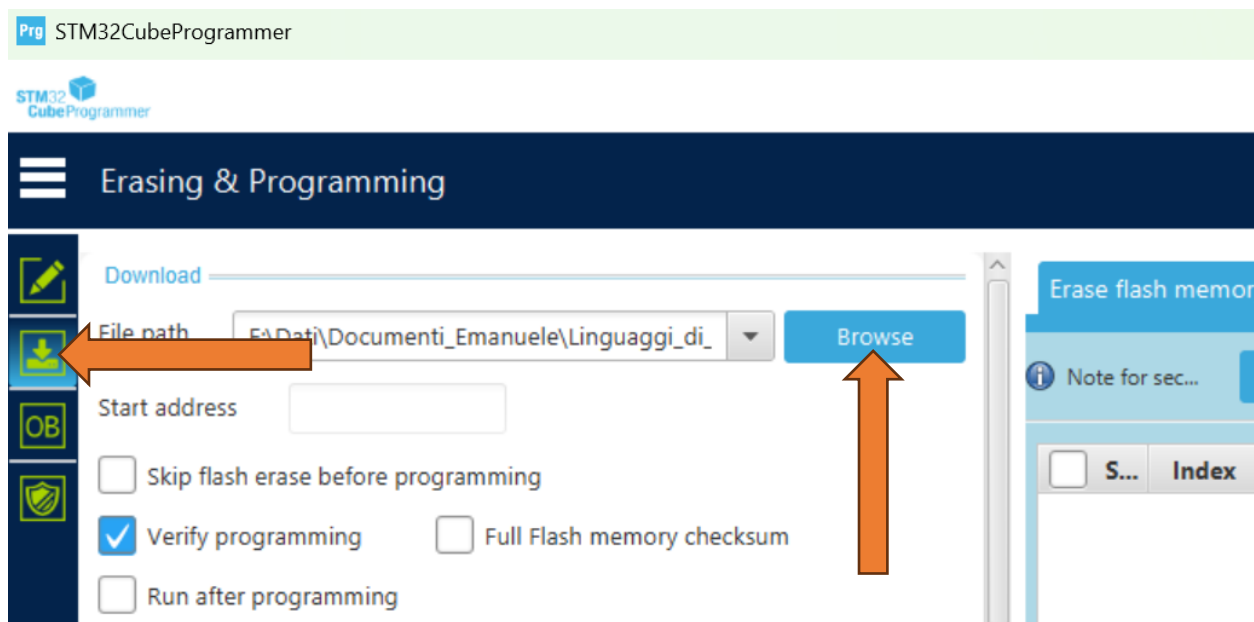

- 8) Select the .elf file you want to upload, based on the connector to which you are connected (as indicated in paragraph 1.11).
- 9) Select the "Verify Programming" option and press the START PROGRAMMING button.

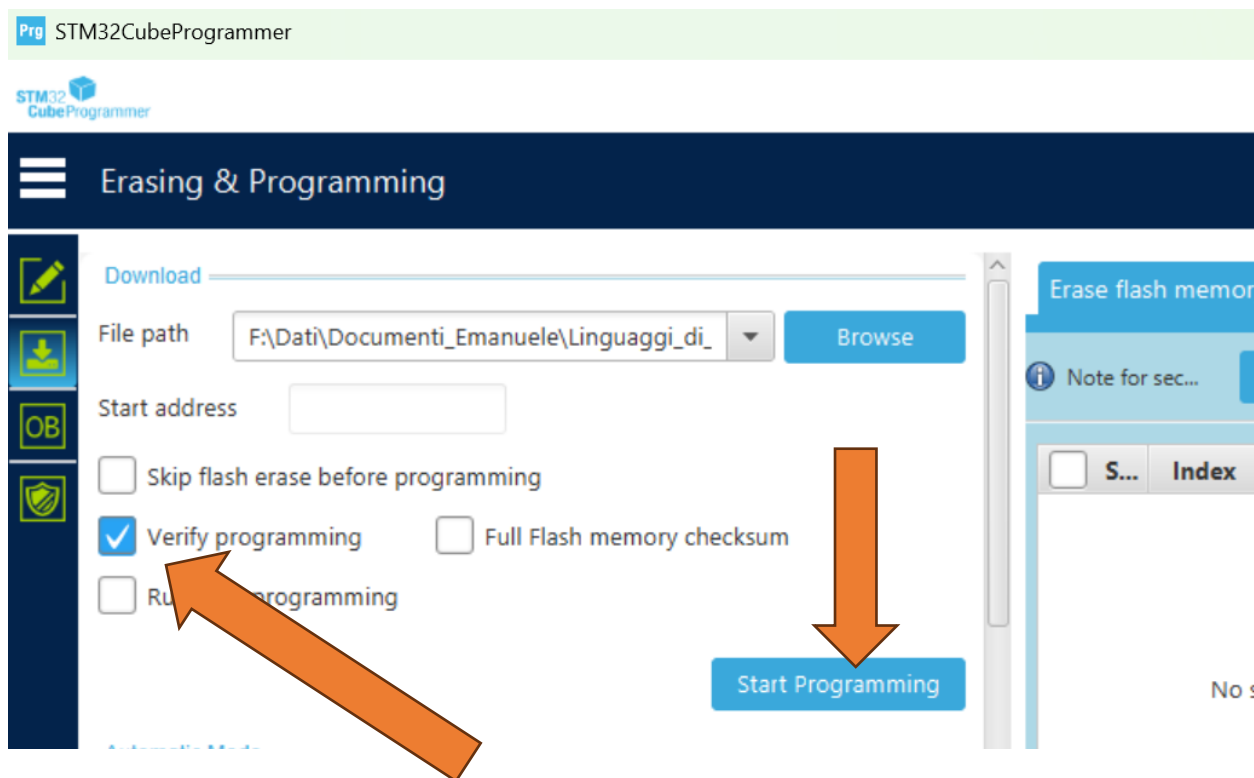

- 10) At the end of the programming process, press OK on the two confirmation popups regarding successful programming, then press DISCONNECT.

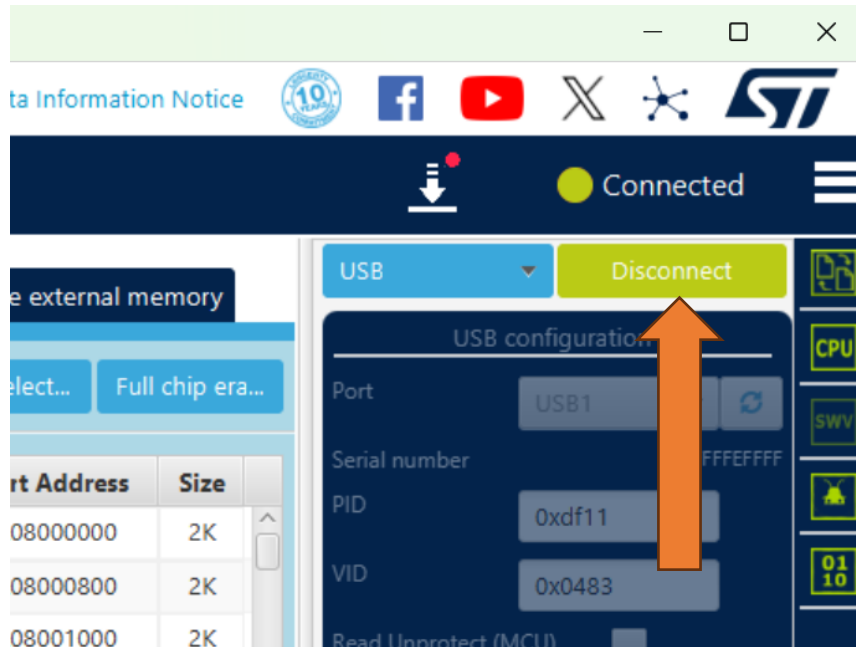

2. USAGE

2.1 First Startup

When using the BACCABLE for the first time, you need to set up the functions you wish to activate on your vehicle, from among those available, by following the instructions below:

1. Insert the BACCABLE into the OBD connector.
2. Start the engine.
3. With cruise control disabled, press the RES button (or the DISTANCE button) on the steering wheel for about 2 seconds. The display where the radio station name is usually shown will display the text *BACCABLE* along with the installed version identifier.
4. Navigate the circular scrolling menu using the up and down buttons until you reach the item *SETUP MENU*.
5. Press and immediately release the RES button (or the DISTANCE button) to enter the *SETUP* menu. The text *SAVE & EXIT* will be displayed.
6. Navigate through the circular scrolling menu using the up and down buttons to scroll through the list of available functions. The symbol **O** to the left indicates that the function is deselected, while the symbol **Ø** indicates that the function is selected. The functions are described in this chapter and its subchapters.

Note 1: An exception is the engine RPM threshold for the shift function, which is detailed in paragraph 2.6, and the DIESEL/GASOLINE selection, which is detailed in paragraph 2.7.

7. Press and immediately release the RES button (or the DISTANCE button) to select or deselect the displayed function.
8. After scrolling through the entire list of functions and enabling all desired features, you will return to the *SAVE & EXIT* item. Press and immediately release the RES button (or the DISTANCE button) on the steering wheel to permanently save the selected settings and return to the main menu.

Note 2: The items shown in the main menu depend on the settings made within the *SETUP MENU*, which you can access at any time.

9. About 40 seconds after turning off the engine, the menu will automatically be disabled. To display it again, press the RES button (or the DISTANCE button) for about 2 seconds.
10. In case the vehicle is restarted, the menu will be shown again on the last displayed page before shutdown.

WARNING: The *SETUP* menu includes two features currently under development which should not be enabled: **REMOTE START**, **READ FAULTS** and **PEDAL BOOSTER**

2.2 Sniffer

Brief description: Act as a sniffer, connected to a Personal Computer

Note: The use of this function requires reprogramming the BACCABLE. It is not a function that can be enabled or disabled from the SETUP MENU.

1. Each USB corresponds to a specific can Bus. Reading the BACCABLE name on the case, from left to right you have BH, C2 and C1 bus.
2. Plug usb cable from desired USB bus to the PC (with windows operative System).
3. Open SavvyCan (link to the SavvyCan opensource project is available in Baccable Repository in Github)
4. From top menu "Connection", select "Open Connection Window"
5. From window "Connection Settings" press button "Add new Device Connection"
6. From "New connection" window, select option "LAWICEL/SLCAN"
7. From "New connection" window, select from drop down menu serial the com port where the Baccable was found (you can check device manager to see which virtual COM serial port is associated to BACCABLE , revealed as ST device)
8. From "New connection" window, Leave Serial port speed as default (115000bps)
9. From "New connection" window, Set Can bus speed according to the speed of the desired bus (500000bps for C1 and C2, or 125000bps for BH bus)
10. From "New connection" window, press button "create new connection"
11. Close "connection settings" window
12. If ECUs vehicle are communicating, you will see related messages in the main window of SavvyCan.
13. On the right side of the window it is possible to stop and clear capture, on the bottom right side of the window it is possible to filter shown messages
14. From top menu file, you can select Save Log File or Load Log File to save current recording or to open previously recorded messages.
15. From bottom central part of the main window you can send messages to the can bus (detailed instructions in SavvyCan repository)
16. From menu RE TOOLS you can select sniffer to reach a window where you can analyze changing bytes upon specific events.

2.3 Start&Stop disabler

Brief description: Disable start&stop, if engine rotates and if start & stop is not disabled. This is a function that can be enabled and disabled from the SETUP MENU described in paragraph 2.1.

No additional instruction is required

2.4 Immobilizer

Brief description: Act as immobilizer. If a connection to the RFHUB is detected, it resets the connection, preventing the addition of a key, disables the ignition, and triggers the panic alarm (if activated on the proxy). The immobilizer can be permanently deactivated and reactivated by pressing the cruise control button upwards for 30 seconds with the engine running and the cruise control deactivated. The dashboard will flash 5-6 times if the immobilizer was successfully deactivated, and 3 times if it was successfully reactivated.

The functionality IMMOBILIZER performs the following:

1. Detects if the thief is trying to connect to RFHUB (they do it to add a key to the car)
2. Starts the Panic Alarm after one second
3. Continuously Resets the RFHUB in order to reset the thief connection, with this message for 10 seconds
4. after 10 seconds stops to send messages and stops alarm, and return listening for thief messages

Panic alarm will start only if you previously enabled panic alarm in your ECU, with the MES proxy alignment procedure.

The Immobilizer functionality will not detect the thief if you power the BACCable with a voltage available only when the panel is switched on. Therefore, if you use immobilizer function, plug it to OBD port 12V, or directly plug the cable to the 5V usb voltage taken from the connector of the USB interface in the central area, close to cigarette lighter socket. In fact, usb voltage is switched on as soon as the thief wakes up the rfhub.

Once we start to send the rfhub reset message, neither the injection button will work. the car will appear as dead.

Immobilizer at the beginning is enabled by default. To permanently toggle the status you shall be with motor on, cruise control disabled, neutral gear, press cruise control gentle speed up for around 30 seconds. If the immo becomes disabled, it will be blink the dashboard brightness for 5-6 times. If immo becomes activates, the dashboard will blink 3 times. The change is persistent after a power loss. The current status of the Immobilizer is also displayed in the main menu of the BACCABLE with the text "IMMOBILIZER ON" or "IMMOBILIZER OFF".

When you plug the power to BACCABLE (or if you plug baccable), if immobilizer is enabled, the blue led on BACCABLE will blink twice and the dashboard will blink once. This is useful to understand how the immobilizer is set.

To verify the correct functionality of the immobilizer, it is possible to simulate a theft attempt by connecting to the RF HUB using an ELM327 and the AlfaOBD smartphone app or the Multiecuscan application on a PC. Upon attempting to connect to the RF HUB, the ignition will no longer be possible, and the PANIC ALARM will activate, producing a periodic sound from the horn.

DON'T PANIC: simply disconnect the ELM327, wait 30 seconds, and BACCABLE will stop the panic alarm. In general, remember that by starting the vehicle, engaging gear, and driving, even at very low speeds, the panic alarm is automatically stopped by the vehicle's ECU.


2.5 Led Strip Controller

Brief description: Controls a **WS281x** LED strip according to the accelerator pedal position (requires connecting pin 8 to the LED strip (optional), while the power supply for the LED strip must be sourced from a voltage that is absent when the vehicle is off). Each gear is associated with a specific color pattern of the strip. Leds are lighted like a vumeter according to accelerator pedal press. With accelerator released, only central leds are lighted. The strip led is controlled assuming that central tunnel of the car is rounded by leds. Therefore central part of the leds strip is on the rear part of the central tunnel.

Note: This is a function that can be enabled and disabled from the SETUP MENU described in paragraph 2.1.

1. Connect pin 8 to control pin of the leds strip
2. Connect the + and – of the led strip to the desired voltage (5V or 12V of the car) ensuring it is a voltage cutted when the car goes to sleep in order to avoid battery drain. The number of leds in the strip shall correspond to the configured leds number in the firmware.

Example of voltage available only when car is on, therefore suitable for leds strip, is pin 12 (+12V) and 1 (GND) of the connector related to Start&Stop and lights panel.

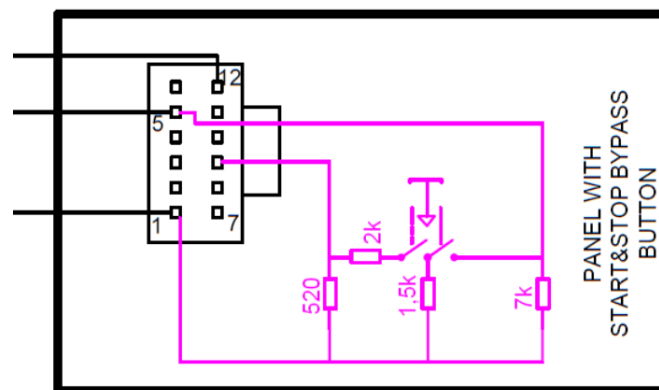

Connector related to Start&Stop and lights panel

2.6 Shift

Brief description: Shows, in race mode, the shift indicator in the dashboard (request to switch gear), when the defined engine RPM speed threshold is overcome. The threshold is stored in the BACCABLE firmware.

Note: This is a function that can be enabled and disabled via the SETUP MENU described in paragraph 2.1. The engine RPM threshold can be modified by accessing the SETUP menu as indicated in paragraph 2.1, SHIFT RPM menu item. Each time the RES button (or DISTANCE button) is pressed, the threshold changes in a rotating menu.

No further instructions are required.

See also the following paragraph (in case of my23 or newer) and paragraph 2.10 and its connections (related to race enabling).

2.7 My23 IPC

Brief description: Allows, on MY23 dashboards and later versions, the correct display of the SHIFT function described in the previous paragraph.

Note: This is a function that can be enabled and disabled via the SETUP MENU described in paragraph 2.1

2.8 Params On Dashboard

Brief description: Shows additional parameters on the dashboard. It can be enabled with the Cruise Control RES button (or DISTANCE button), if the engine is on and the cruise control is deactivated. Navigate through the menu using the Cruise Control UP and Cruise Control DOWN buttons, and disable the controls when cruise control is activated

Note: From the SETUP MENU described in paragraph 2.1, it is possible to choose whether to set the parameters for a GASOLINE or DIESEL engine.

Usage procedure:

1. By default, the dashboard menu is disabled.
2. To enable it, the engine must be running and cruise control must be deactivated. Press the RES button (or DISTANCE button) on the steering wheel for about 2 seconds, and the menu will display the BACCABLE version on the dashboard screen where the radio station name is usually shown.
3. To navigate the rotating menu, use the cruise control up and down buttons. When you reach the *SHOW PARAMS* item, press and immediately release the RES button (or DISTANCE button) on the steering wheel to access the SHOW PARAMS menu, where the parameters will be displayed.

4. To scroll through the menu, use the cruise control up and down buttons (press lightly to move by 1 parameter, press firmly to move by 10 parameters) in a circular menu.
5. When cruise control is enabled, the menu controls are disabled, but the last selected parameter remains on screen and continues to update.
6. Parameters are updated every 500 milliseconds.
7. To return to the main menu, press and immediately release the RES button (or DISTANCE button) on the steering wheel. The *SHOW PARAMS* item of the main menu will be displayed.
8. To disable the menu, with cruise control deactivated, press the RES button (or DISTANCE button) for about 2 seconds.
9. Upon restarting the vehicle, the last parameter displayed before shutdown will automatically appear.

Known issues: It may rarely occur that the radio or Bluetooth devices send text to the dashboard in a way that temporarily freezes the string populated by BACCABLE. In such cases, try disabling and re-enabling the menu using the RES (or DISTANCE) button, or switch the dashboard screen using the right stalk button (TRIP), or perform a vehicle power cycle.

Next pages show available parameters for gasoline engines (first table) and diesel engines (second table):

GASOLINE PARAMETERS		
PARAMETER	Unit	Description
PWR&TORQUE	CV & Nm	Power And Torque
Oil Press.%Water T	Bar & °C	Oil pressure and Water temperature
Oil & Water Temp.	°C & °C	Oil and water temperature
Bat SoC & Current	% & A	Battery State of charge and Current in ampere (positive values indicates charge, while negative values indicates discharge)
POWER	CV	Power calculated from torque and engine RPM
TORQUE	Nm	Torque
IC AIR OUT	°C	Intercooler output air temperature
IC AIR IN	°C	Intercooler input air temperature
BOOST ABS	BAR	Absolute Pressure
BOOST	BAR	Turbo pressure, obtained from absolute pressure
TURBO	V	Turbo Sensor Voltage
ODOMETER LAST	km	km since last odometer reset
OIL	L	Oil Quantity
OIL	BAR	Oil Pressure
OIL	°C	Oil Temperature
OIL QUALITY	%	Oil Quality
OIL UN. AIR	°C	Multiair module Oil temperature
GEARBOX	°C	Gearbox temperature
BATTERY	%	Battery charge percentage
BATTERY	A	Battery charging current (positive values mean charge, negative values mean discharge)
BATTERY	V	Battery voltage
AIR COND.	BAR	Air conditioner pressure
CUR. GEAR	-	Current gear
T-ON	m	Time since engine On
OVER RPM	s	Time in which engine was in overrun
EXHAUST GAS	°C	Exhaust gas temperature
CATAL.	°C	Catalytic Converter Probe Temperature
WATER	°C	Engine Coolant Temperature
KNOCK	mV	Engine Knocking
KEY IGN.	-	Ignition key ID
OVER RPM	-	Number of engine over-rev occurrences
SPARKL.1	°	Cylinder 1 correction
SPARKL.2	°	Cylinder 2 correction
SPARKL.3	°	Cylinder 3 correction
SPARKL.4	°	Cylinder 4 correction
R-DNA	-	R-DNA/DNA selector position
SPEED	km/h	speed

GASOLINE PARAMETERS		
PARAMETER	Unit	Description
Seat Belt Alarm	-	It Indicates whether the acoustic warning system for the seat belts is enabled (ON) or not (OFF)
0-100km/h	Sec	Time taken to accelerate from 0 to 100 km/h. Once the vehicle exceeds 0 km/h, the status changes to GO. After a timeout, if the required speed is not reached, MISS is displayed. Once the vehicle exceeds 100 km/h, the elapsed time is shown in seconds.
100-200km/h	Sec	Time taken to accelerate from 100 to 200 km/h. Once the vehicle exceeds 100 km/h, the status changes to GO. After a timeout, if the required speed is not reached, MISS is displayed. Once the vehicle exceeds 200 km/h, the elapsed time is shown in seconds..
Best 0-100km/h	Sec	Best time in seconds from 0 to 100 km/h permanently stored in baccable
Best 100-200km/h	Sec	Best time in seconds from 100 to 200 km/h permanently stored in baccable

DIESEL PARAMETERS		
PARAMETER	Unit	Description
PWR&TORQUE	CV & Nm	Power And Torque
Oil Press.%Water T	Bar & °C	Oil pressure and Water temperature
Oil & Water Temp.	°C & °C	Oil and water temperature
Bat SoC & Current	% & A	Battery State of charge and Current in ampere (positive values indicates charge, while negative values indicates discharge)
POWER	CV	Power calculated from torque and engine RPM
TORQUE	Nm	Torque
DPF	%	DPF occlusion percentage
DPF	°C	DPF temperature
DPF REGEN.	%	DPF regeneration process percentage
LAST REGEN.	km	km since last regeneration
TOT REGEN.	-	Total number of regenerations
MEAN REGEN.	km	Mean distance of regenerations
MEAN REGEN.	min	Mean time of regenerations
REGEN.	-	Type of regeneration in progress
BATT.	V	Battery voltage
BATT.	%	Battery recharge percentage
BATT.	A	Battery charge current (positive values mean in charge, negative values mean discharge)
OIL QUALITY	%	Oil quality
OIL	°C	Oil Temperature
OIL	BAR	Oil Pressure
OIL	mm	Oil level in the oil pan in mm (from 50 to 70 mm)
EXHAUST GAS	°C	Exhaust gas temperature (turbo input)
CUR. GEAR	-	Current gear
WATER	°C	Water temperature
EGR CMD	%	EGR valve command
EGR	%	EGR valve status
TURBO REQ.	BAR	Turbo pressure request
TURBO REQ.	%	Turbo request percentage
TURBO	°C	Turbo temperature
TURBO	BAR	Turbo Pressure
TURBO	%	Turbo Percentage
BOOST REQ.	BAR	Boost request pressure
BOOST	V	Boost sensor voltage
RAIL	BAR	Rail pressure
DIESEL	°C	Diesel temperature

DIESEL PARAMETERS		
PARAMETER	Unit	Description
ODOM. LAST	km	km since last odometer reset
AIR COND.	BAR	Air conditioner pressure
FUEL CONS.	L./h	Diesel consume
DEBIMETER	°C	Debimeter temperature
SPEED	km/h	Speed
Seat Belt Alarm	-	It Indicates whether the acoustic warning system for the seat belts is enabled (ON) or not (OFF)
0-100km/h	Sec	Time taken to accelerate from 0 to 100 km/h. Once the vehicle exceeds 0 km/h, the status changes to GO. After a timeout, if the required speed is not reached, MISS is displayed. Once the vehicle exceeds 100 km/h, the elapsed time is shown in seconds.
100-200km/h	Sec	Time taken to accelerate from 100 to 200 km/h. Once the vehicle exceeds 100 km/h, the status changes to GO. After a timeout, if the required speed is not reached, MISS is displayed. Once the vehicle exceeds 200 km/h, the elapsed time is shown in seconds..
Best 0-100km/h	Sec	Best time in seconds from 0 to 100 km/h permanently stored in baccable
Best 100-200km/h	Sec	Best time in seconds from 100 to 200 km/h permanently stored in baccable

Note: Each param can be hidden or shown from the PARAMS SETUP MENU.

2.9 Route

Brief description: Redirect the internal CAN bus messages to OBD peripherals that asks for a specific parameter. This allows displaying parameters on a smartphone that are normally not accessible using just the ELM327.

Note: This is a function that can be enabled and disabled via the SETUP MENU described in paragraph 2.1

You can route native messages encapsulating them in uds parameter response, in order to make them available to diagnostic requests performed with OBD (you can get parameters commonly not available in OBD apps). This functionality performs the following: Upon receive of UDS request with message id 0x18DABAF1 having message data 0622xzyyyyyyyy, Baccable will understand the following:

- 0x18DABAF1 identifies that the message is a Route request (request to route a native message to the diagnostic)
- The route is done just one time (one packet) to avoid bus flood, and it routes only 5 bytes of the requested message
- x (first nibble of third byte of the can message) can be 0 (std Id) or 1 (Ext Id).
- z (second nibble of third byte of the can message) is the offset of the message to route. the number of bytes routed will be only 5. offset will set the part of the message to route
- yyyyyyyy is the requested msg id right aligned.

Example1:

Diagnostic sends msgID 0x18DABAF1 with data 062201000004B2


BACCABLE replies msgID 0x18DAF1BA with data 076201AABBCCDDEE where AA is the second byte of the original 0x4b2 message

Example2:

Diagnostic sends msgID 0x18DABAF1 with data 062210E10204B2

BACCABLE replies msgID 0x18DAF1BA with data 076210AABBCCDDEE where AA is the first byte of the original 0xE10204B2 message

The following image summarizes the route functionality:

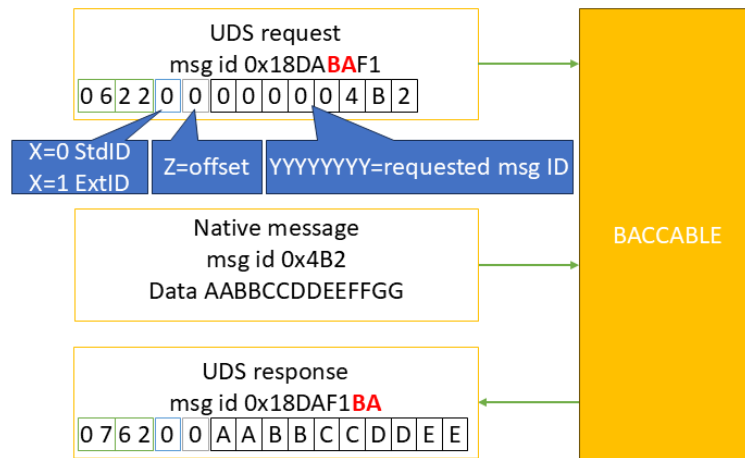

Route messages handshake sequence

2.10 ESC+TC Selector

Brief description: Enables and disables, if the race mode was previously enabled with a proxy alignment procedure (see para.2.19), the ESC (Electronic Stability Control) and TC (Traction Control). It is activated by pressing the button on the left lever (Lane) for at least 3 seconds. When activated, the “ESC OFF” indicator and the collision avoidance disabled icon will be shown on the dashboard, together with standard race masks.

Alternatively, this function can be enabled or disabled from the main menu of the BACCABLE by scrolling through the list and pressing RES (or the DISTANCE button) on the “TOGGLE ESC/TC” item, if it has been previously enabled in the SETUP MENU as described in section 2.1.

Note: This is a function that can be enabled or disabled from the SETUP MENU as detailed in section 2.1.

No further instructions are required.

2.11 DYNO

Brief description: Disables all controls (included ABS, ESC, TC...). This works on stock Giulia/Stelvio too.

Note: This is a function that can be enabled or disabled from the SETUP MENU as detailed in section 2.1.

1. The function is activated and deactivated by pressing the PARK button for a few seconds.
2. Alternatively, this function can be enabled or disabled from the main menu of the BACCABLE by scrolling through the list and pressing RES (or the DISTANCE button) on the "TOGGLE DYNO" item, if it has been previously enabled in the SETUP MENU as described in section 2.1.
3. Once activated, a sequence of alerts will be displayed on the dashboard, indicating that the function is active.
4. Pressing the PARK button again, turning off the vehicle, or selecting "TOGGLE DYNO" from the menu will deactivate the function, and the alerts will disappear from the dashboard.

Warning: This function should only be activated or deactivated when the vehicle is stationary.

Known issues: On some Giulia/Stelvio models, it may occasionally happen that some faults remain displayed on the dashboard after deactivating the function. In such cases, perform a vehicle ignition cycle, or select the **CLEAR FAULT** function as described in section 2.13.

Note: You can quickly scroll through the dashboard alerts by pressing the **TRIP** button on the right-hand stalk.

2.12 ACC Virtual Pad

Brief description: Detects the button presses on the Cruise Control keypad, replacing them with those of the Adaptive Cruise Control (ACC) keypad. This eliminates the need to purchase the ACC keypad on the steering wheel. It is dependent on performing a proxy alignment to enable ACC and disable CC

Note: This is a function that can be enabled or disabled from the SETUP MENU, as described in section 2.1.

Pressing the Cruise Control button will activate or deactivate the Adaptive Cruise Control.

Pressing the RES button while Adaptive Cruise Control is active will change the distance from the vehicle ahead.

Warning: A proxy alignment must first be performed to enable Adaptive Cruise Control and disable standard Cruise Control, in the same way as required when replacing the standard Cruise Control button panel with the ACC version. The vehicle must, of course, be properly equipped (presence of a front radar with compatible ECU firmware and automatic transmission).

2.13 CLEAR FAULTS

Brief description: Clears all error codes, if present, from all the vehicle's ECUs (across all 3 CAN buses).

Note: This is a function that can be enabled or disabled from the SETUP MENU, as described in section 2.1.

Once this function is enabled, the CLEAR FAULTS option will appear in the BACCABLE main menu. Pressing and immediately releasing the RES button (or DISTANCE button) will display the message *WAIT* for a few seconds. After the command is executed, the message *CLEAR FAULTS* will reappear.

2.14 REGENERATION ALERT

Brief description: Triggers a visual and audible alert whenever a DPF regeneration occurs (DIESEL vehicles). By default, only certain types of regeneration are shown to the user. This function allows for a notification to be received every time, starting from the post-injection phase, which is part of the regeneration process.

Note: This is a function that can be enabled or disabled from the SETUP MENU, as described in section 2.1.

2.15 4WD DISABLER

Brief description: Disables all-wheel drive. To be enabled only on vehicles equipped with this feature.

Note 1: This is a function that can be enabled or disabled from the SETUP MENU, as described in section 2.1.

Once the function has been enabled through the SETUP menu, a new option "4WD ENABLED" will appear in the BACCABLE main menu, indicating the default condition for AWD vehicles. Pressing and immediately releasing the RES button (or DISTANCE button) on the steering wheel will change the menu to display "4WD DISABLED."

Note 2: This function can only be activated while the vehicle is stationary.

2.16 BRAKES OVERRIDE

Brief description: Activates and deactivates the front brakes via the RES button (or DISTANCE button) on the steering wheel.. This function implements the commonly called “launch assist” and “burn out”.

Note1: This is a function that can be enabled or disabled from the SETUP MENU, as described in section 2.1.

Once this function has been enabled via the SETUP menu, an additional option “Front Brake Normal” will appear in the BACCABLE main menu, indicating the default condition.

Note2: before using this function, it is necessary to enable the DYNO in order to ensure maximum power delivery to the wheels.

2.16.1 Launch Assist

By Moving to the Baccable ‘s main menu, on the “Front Brake Normal” item, with the engine running, without engaged handbrake, and the brake pedal released, by p ressing and immediately releasing the RES button (or DISTANCE button) on the steering wheel will change the menu to display “Front Brake ASSIST” and the brake will engage. Only front brakes will be engaged.

In this mode, the brakes will be automatically released upon exceeding the torque value in Nm previously set in the setup menu under the item LAUNCH TORQUE.

As soon as acceleration begins to apply torque to the wheels, the screen will display the current torque and the threshold torque in a string (example: 15Nm/150Nm where 15Nm is the current torque and 150Nm is the threshold torque set in the setup menu).

Once the set torque threshold is exceeded, the brakes are automatically released and the dashboard shows the parameter “Best Time 0-100km/h” (best time in seconds taken to reach 100km/h) from the SHOW PARAMS section. For details on how the “Best Time 0-100km/h” parameter works, refer to paragraph 2.8.

2.16.1 Burn Out

By moving to the Baccable’s main menu, on the “Front Brake Normal” item, with the engine running, the car without the handbrake engaged, and the brake pedal released, pressing and immediately releasing the RES button (or DISTANCE button) on the steering wheel, the menu will display “Front Brake Assist” and the brake engagement will be perceptible. Only the calipers of the front wheels will be activated. Pressing the RES button again, the dashboard will display the message “Front Brake FORCED”.

In this mode, the brake will be released only by pressing the RES button again.

Pressing and immediately releasing the RES button (or DISTANCE button) again will release the brake and the menu will show “Front Brake Normal” again.

Note 3: For a proper burnout on 2WD vehicles, it is mandatory to first disable stability controls by activating the DYNO function. Then activate the front brakes using the function described in this section. After a few seconds of throttle application and once smoke appears from the rear tires, press the button again to release the front brakes.

Note 4: This function can only be activated while the vehicle is stationary.

WARNING: It is strongly recommended to deactivate the BRAKES OVERRIDE function via the SETUP menu when not in use.

WARNING: This function causes significant stress on all mechanical components involved, including suspension, half-shafts, clutch, and flywheel. Apply throttle decisively to quickly overcome the tires' initial friction, which is the point of highest mechanical stress.

2.17 REMOTE START

Under development. Do not activate this function.

2.18 READ FAULTS

Under development. Do not activate this function.

2.19 ODOMETER BLINK

2.19 ODOMETER BLINK

Brief description: Hides the odometer blinking on the dashboard.

Note: This is a function that can be enabled and disabled from the SETUP MENU described in para.2.1.

Typically, the odometer blinks to indicate an unsuccessful proxy alignment. Once this function is enabled, the odometer blinking will be stopped.

One of the applications of this function is summarized below:

Premise: Proxy alignment is a procedure to be performed with Multiecuscan, an elm327 and suitable cables, which synchronizes the electronic control units (ECUs) with each other so that all modules recognize the current vehicle configuration. Among these configurations is the activation of race mode, which allows the ESC/TC function of the BACCABLE to be used without installing the RDNA selector. The activation of race mode via alignment procedure is well described at the following link: <https://giuliatech.com/t/how-to-enable-race-mode-on-non-qv-giulia-2017-2024/21>

The above procedure describes the necessary steps for hardware modification of the vehicle and those for proxy alignment. The part relevant to use with the Baccable is only the proxy alignment section.

Activating Race via Proxy alignment causes the loss of pedal maps, meaning all DNA driving styles adopt the N mode map, which has a linear curve, while Dynamic should have a very sensitive tip-in curve. To solve this issue, it is possible to disable race via proxy alignment on the engine ECU only. This way, the pedal maps return to their correct curve, and race remains available. To achieve this result, after

successfully completing the race activation procedure as per the link in the Premise, simply set, in proxy setup, the selector type 1 (meaning: disable race), disconnect the elm327 from the vehicle and start the proxy alignment procedure. The first ECU that MES will try to write is the body, then failing to do so (since the elm327 will be disconnected), it will report an error. At that moment, we must reconnect the elm327 because the second ECU to be written will be the engine ECU. As soon as successful writing of the engine ECU is reported, we must again remove the elm327, or disconnect the USB cable if using a USB elm327, to prevent Multiecuscan from writing the other ECUs. At this point, by turning the vehicle off and on again, after a while, the odometer will start blinking to indicate an incomplete proxy alignment, the pedal maps will work as originally intended, and the ESC/TC function of the BACCABLE will operate normally. To eliminate the annoying odometer blinking, we will select the ODOMETER BLINK function in the BACCABLE setup menu.

2.20 SEAT BELT ALARM

Brief description: Disables the acoustic warning indicating unfastened seat belts.

Note: This is a function that can be enabled and disabled from the SETUP MENU described in para.2.1.

By deselecting this function in the setup menu, the acoustic warning indicating unfastened seat belts is disabled. The setting is permanent even after removing the BACCABLE and may require a restart to take effect

2.21 PEDAL BOOSTER

Under development. Do not activate this function.

Brief description: Pedal booster with customized maps based on the selected driving style.

Premise: A pedal booster is an electronic device that connects between the accelerator pedal and the Body (vehicle ECU) to improve vehicle response. It does not increase engine power but makes acceleration more prompt and smooth.

Note: To use this function, a specific connection cable between Baccable and Pedal Booster is required, available separately.

In the setup menu, the function can be set as follows (rotary menu activated by pressing the RES and DISTANCE buttons):

- 1) **Pedal Booster Deselected:** the function does not control the analog signals from the pedal to the body.
- 2) **Pedal Booster Auto:** the function assigns different pedal maps to different driving styles, appropriately amplifying and attenuating the analog signals from the accelerator pedal.
- 3) **Pedal Booster Bypass:** the function does not alter the analog signals from the accelerator pedal but simply repeats them.

- 4) **Pedal Booster A Map:** the function forces the use of the pedal map associated with driving style A (All weather), appropriately amplifying and attenuating the analog signals from the accelerator pedal.
- 5) **Pedal Booster N Map:** the function forces the use of the pedal map associated with driving style N (Natural), appropriately amplifying and attenuating the analog signals from the accelerator pedal.
- 6) **Pedal Booster D Map:** the function forces the use of the pedal map associated with driving style D (Dynamic), appropriately amplifying and attenuating the analog signals from the accelerator pedal.
- 7) **Pedal Booster R Map:** the function forces the use of the pedal map associated with driving style R (Race), appropriately amplifying and attenuating the analog signals from the accelerator pedal.

2.22 MAIN SETUP MENU

It is accessible from the main menu and allows you to enable and disable each individual function of the baccable. See para. 2.1

2.23 PARAMS SETUP MENU

It is accessible from the main menu and allows you to hide or show each individual parameter of the SHOW PARAMS menu. See para. 2.8

2.24 SHOW RACE MASK

Brief Description: shows race screens on the dashboard and infotainment system when the ESC/TC function is active. See para. 2.10.

WARNING: If flickering of the race display masks occurs on the dashboard or infotainment system of your vehicle, it is recommended to disable and avoid using the SHOW RACE MASK function.

2.25 PARK MIRROR

Brief Description: It moves the side mirrors to display the rear wheels when reverse gear and either the left or right turn signal are activated, in order to assist with parking near curbs.

Note: This function only works on vehicles equipped with mirror encoders. To check compatibility with your vehicle, simply test the feature.

Usage Procedure:

- 1) Position both side mirrors so that the rear wheel area is clearly visible.
- 2) Access the MAIN SETUP MENU and enable the PARK MIRROR function. If it is already selected, deselect it and then reselect it. At this stage, the current mirror positions will be stored.
- 3) Select SAVE & EXIT to permanently save the settings and exit the MAIN SETUP MENU. These steps will not need to be repeated.
- 4) Reposition the side mirrors to their normal operating position.
- 5) From now on, whenever reverse gear and the left turn signal are activated, the left mirror will automatically move to the previously stored position set during the function activation. Once reverse gear is disengaged, the mirror will return to its normal position. The same logic applies to the right mirror when the right turn signal and reverse gear are activated.

2.26 ACC AUTOSTART

Brief Description: On vehicles equipped with ACC, when the vehicle with ACC engaged comes to a stop behind the preceding vehicle, this function allows ACC to remain engaged—whereas normally, ACC would automatically disengage approximately 5 seconds after stopping.

2.27 CLOSE WINDOWS

Brief Description: Allows the activation of the power windows when locking the vehicle, with multiple configuration options.

The CLOSE WINDOWS function supports various options, which can be selected using the RES or DISTANCE button after navigating to the CLOSE WINDOWS item in the MAIN SETUP MENU:

OPZIONE	DESCRIZIONE
O CLOSE WINDOWS 1	Close windows deselected, the vehicle will act normally
Ø CLOSE WINDOWS 1	Close windows 1 selected. With a single activation of the vehicle lock via remote control, the vehicle doors are locked and the windows are closed. With two consecutive activations of the vehicle lock via remote control, the windows are first closed and then slightly reopened to allow air circulation.
Ø CLOSE WINDOWS 2	Close windows 2 selected. With two consecutive activations of the vehicle lock via remote control, the windows are closed. With three consecutive activations of the vehicle lock via remote control, the windows are closed and then slightly reopened to allow air circulation.

2.28 OPEN WINDOWS

Brief Description: Allows the activation of the power windows when unlocking the vehicle, with multiple configuration options.

The OPEN WINDOWS function supports various options, which can be selected using the RES or DISTANCE button after navigating to the OPEN WINDOWS item in the MAIN SETUP MENU:

OPZIONE	DESCRIZIONE
O OPEN WINDOWS 1	OPEN windows deselected, the vehicle will act normally
Ø OPEN WINDOWS 2	OPEN windows 1 selected. With a single activation of the vehicle unlock via remote control, in addition to unlocking the vehicle doors, the windows are fully opened.
Ø OPEN WINDOWS 2	OPEN windows 2 selected. With a double activation of the vehicle unlock via remote control, in addition to unlocking the vehicle doors, the windows are fully opened.

2.29 HAS VIRTUAL PAD

Brief Description: Simulates the press of the HAS (Highway Assist System) button.

The HAS VIRTUAL PAD function allows the HAS button press to be simulated by double-clicking the LANE button (located on the stalk to the left of the steering wheel). This eliminates the need to purchase the dedicated keypad.

Note: The HAS function requires activation via proxy alignment (Byte 166, bit 2 — i.e., binary format xxxxx1xx to enable it), along with the following prerequisites. Vehicle must be MY20

or later, Equipped with a camera with compatible firmware, Steering wheel with touch sensors or a bypass for those sensors, Motorized steering wheel with compatible A420 firmware, Navigation system enabled via proxy and available, Adaptive Cruise Control (ACC).