

# voacapgui Manual

---

Copyright © 2014-2020 J.Watson

Permission is granted to copy, distribute and/or modify this document under the terms of the GNU Free Documentation License (GFDL), Version 1.1 or any later version published by the Free Software Foundation with no Invariant Sections, no Front-Cover Texts, and no Back-Cover Texts. You can find a copy of the GFDL at this [link](#) or in the file COPYING-DOCS distributed with this manual.

This manual is part of a collection of GNOME manuals distributed under the GFDL. If you want to distribute this manual separately from the collection, you can do so by adding a copy of the license to the manual, as described in section 6 of the license.

Many of the names used by companies to distinguish their products and services are claimed as trademarks. Where those names appear in any GNOME documentation, and the members of the GNOME Documentation Project are made aware of those trademarks, then the names are in capital letters or initial capital letters.

DOCUMENT AND MODIFIED VERSIONS OF THE DOCUMENT ARE PROVIDED UNDER THE TERMS OF THE GNU FREE DOCUMENTATION LICENSE WITH THE FURTHER UNDERSTANDING THAT:

1. DOCUMENT IS PROVIDED ON AN "AS IS" BASIS, WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, WARRANTIES THAT THE DOCUMENT OR MODIFIED VERSION OF THE DOCUMENT IS FREE OF DEFECTS MERCHANTABLE, FIT FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT. THE ENTIRE RISK AS TO THE QUALITY, ACCURACY, AND PERFORMANCE OF THE DOCUMENT OR MODIFIED VERSION OF THE DOCUMENT IS WITH YOU. SHOULD ANY DOCUMENT OR MODIFIED VERSION PROVE DEFECTIVE IN ANY RESPECT, YOU (NOT THE INITIAL WRITER, AUTHOR OR ANY CONTRIBUTOR) ASSUME THE COST OF ANY NECESSARY SERVICING, REPAIR OR CORRECTION. THIS DISCLAIMER OF WARRANTY CONSTITUTES AN ESSENTIAL PART OF THIS LICENSE. NO USE OF ANY DOCUMENT OR MODIFIED VERSION OF THE DOCUMENT IS AUTHORIZED HEREUNDER EXCEPT UNDER THIS DISCLAIMER; AND UNDER NO CIRCUMSTANCES AND UNDER NO LEGAL THEORY, WHETHER IN TORT (INCLUDING NEGLIGENCE), CONTRACT, OR OTHERWISE, SHALL THE AUTHOR, INITIAL WRITER, ANY CONTRIBUTOR, OR ANY DISTRIBUTOR OF THE DOCUMENT OR MODIFIED VERSION OF THE DOCUMENT, OR ANY SUPPLIER OF ANY OF SUCH PARTIES, BE LIABLE TO ANY PERSON FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY CHARACTER INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF GOODWILL, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, OR ANY AND ALL OTHER DAMAGES OR LOSSES ARISING OUT OF OR RELATING TO USE OF THE DOCUMENT AND MODIFIED VERSIONS OF THE DOCUMENT, EVEN IF SUCH PARTY SHALL HAVE BEEN INFORMED OF THE POSSIBILITY OF SUCH DAMAGES.

### Feedback

To report a bug or make a suggestion regarding voacapgui application or this manual, please contact the author.

**COLLABORATORS**

	<i>TITLE :</i> voacapgui Manual		
<i>ACTION</i>	<i>NAME</i>	<i>DATE</i>	<i>SIGNATURE</i>
WRITTEN BY	James Watson	May 25, 2020	

**REVISION HISTORY**

NUMBER	DATE	DESCRIPTION	NAME
v0.2	2016-02-01	J.Watson <a href="mailto:jwatson@neomailbox.ch">jwatson@neomailbox.ch</a>	

# Contents

<b>1</b>	<b>Introduction</b>	<b>1</b>
<b>2</b>	<b>Installation</b>	<b>1</b>
2.1	Desktop File . . . . .	1
2.2	Icon . . . . .	1
<b>3</b>	<b>Getting Started</b>	<b>1</b>
3.1	Starting voacapgui . . . . .	1
3.2	When You Start voacapgui . . . . .	1
<b>4</b>	<b>Usage</b>	<b>3</b>
4.1	VOACAP Point-to-Point Predictions . . . . .	3
4.1.1	Circuit Calculations . . . . .	5
4.2	Displaying the results . . . . .	6
4.3	VOACAP Area Predictions . . . . .	7
4.4	Displaying the Area Results . . . . .	9
<b>5</b>	<b>System Settings</b>	<b>10</b>
5.1	System Settings . . . . .	10
5.2	Sun Spot Numbers (SSN) . . . . .	12
<b>6</b>	<b>Templates</b>	<b>13</b>
<b>7</b>	<b>Known Bugs and Limitations</b>	<b>14</b>
<b>8</b>	<b>About voacapgui</b>	<b>14</b>

## List of Figures

1	voacapgui Start Up Window . . . . .	2
2	voacapgui Site Chooser . . . . .	3
3	voacapgui Antenna Chooser . . . . .	4
4	voacapgui P2P Notebook Tab . . . . .	5
5	voacapgui P2P Plot Configuration . . . . .	6
6	voacapgui Area Tab . . . . .	8
7	voacapgui Area Plot Configuration . . . . .	9
8	voacapgui System Tab . . . . .	11
9	voacapgui SSN Tab . . . . .	13

### Abstract

voacapgui provides a Graphical User Interface to the VOACAP HF propagation prediction application.

# 1 Introduction

voacapgui is a front end to the VOACAP engine and may be used to;

- Produce HF propagation predictions between two fixed locations (Point-to-Point / P2P mode).
- Produce HF propagation plots over a user defined area from a fixed transmit site (Area Mode).

---

**Note**

voacapgui requires a working copy of the VOACAP engine installed on the host machine. Installation of VOACAP is beyond the scope of this manual.

---

## 2 Installation

### 2.1 Desktop File

Run the update-desktop-database application to rebuild the desktop file database.

### 2.2 Icon

The Gnome desktop looks for icons in the selected theme directory of /usr/share/icons/. Copy the the icon into /usr/share/icons/hicolor/48x48/apps/.

Run gtk-update-icon-cache to update the icon database.

## 3 Getting Started

### 3.1 Starting voacapgui

You can start voacapgui in the following ways:

**Applications menu** Choose Submenu Name → voacapgui.

**Command line** To start voacapgui from a command line, type the following command, then press **Return**:  
`voacapgui`

### 3.2 When You Start voacapgui

When you start voacapgui, the following window is displayed.

---

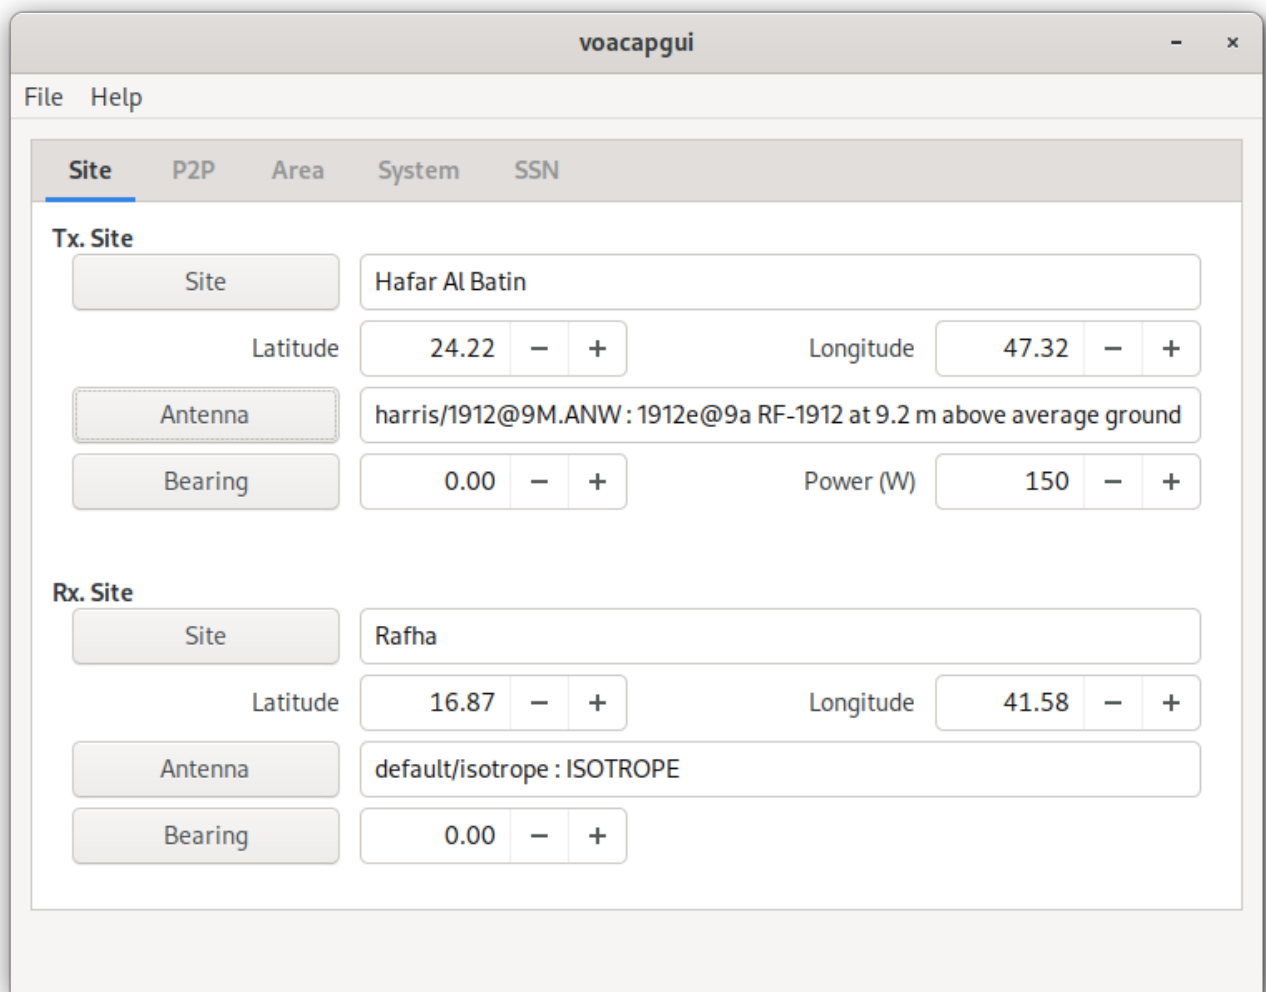


Figure 1: voacapgui Start Up Window

The voacapgui window contains the following elements:

**Menubar** The menu contains submenus allowing users to quit the application and access the help documentation.

**Tabbed Notebook** The tabs are divided into functional sections and most users will enter the required input data working left to right along the tabs.

**Applications Tab** Used to define the geographic location of sites and associated properties (transmitter power, antennas etc.).

**Applications Tab** Used to define the geographic location of sites and associated properties (transmitter power, antennas etc.).

**P2P Tab** Used to define parameters unique to Point-to-Point predictions.

**Area Tab** Used to define parameters unique to Area predictions.

**System Tab** Used to define the common system parameters.

**SSN Tab** Used to define the Sun Spot Numbers (SSN) used by the VOACAP prediction engine.

## 4 Usage

You can use the voacapgui application to perform the following tasks:

- Produce Point-to-Point Predictions Section 4.1
- Produce Area Plots Section 4.3

### 4.1 VOACAP Point-to-Point Predictions

To perform a P2P prediction, select the Site tab in the notebook and click the Site button in the Tx. Site panel to open the Site Chooser dialog window.

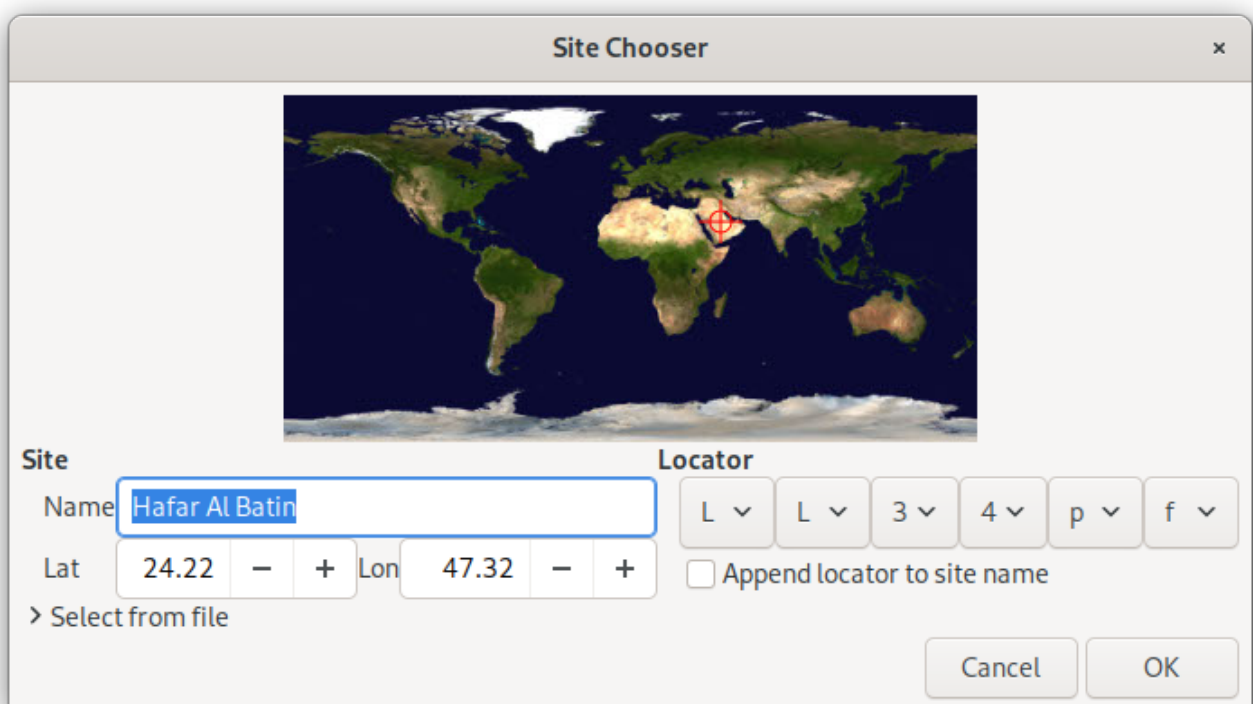


Figure 2: voacapgui Site Chooser

Sites may be defined by either;

- Clicking on the map.
- Using the Locator combo boxes.
- Entering latitude and longitude directly into the Lat: and Lon: text entry fields.
- Selecting from a list of predefined sites accessed by clicking the Select From File expander.

Once the required site information has been entered, click the OK to close the Site Chooser dialog and return to the main window. Antenna Selection is made by clicking the Antenna button to open the Antenna Chooser dialog window.



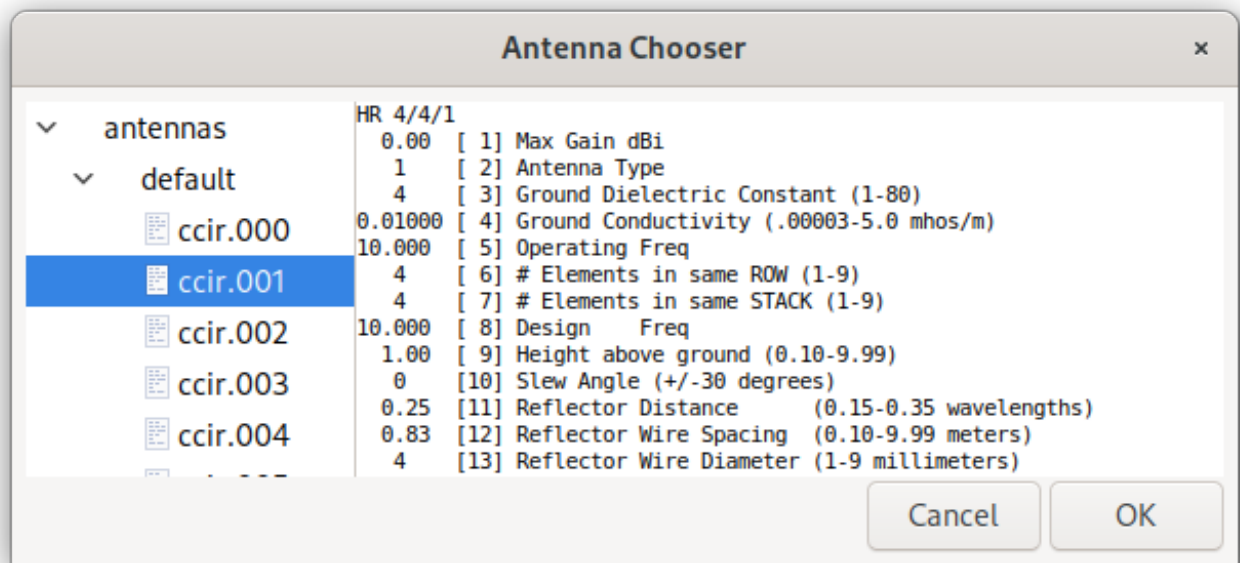


Figure 3: voacapgui Antenna Chooser

Specific antenna models may be selected by browsing through the available models by clicking on the expander buttons in the left panel. Click the OK button to accept the selected antenna and return to the main window.

The bearing of the antenna is defined in the bearing text entry and may be either entered directly or directed to the Rx. Site by clicking the Bearing button.

The transmitter power (in Watts) is then entered using the Power (W) entry field.

Site data for the receive site may then be entered in the Rx. Site panel.

---

#### Tip

After entering the receive site coordinate, it may be necessary to click the Bearing button in the Tx. Site panel to redirect the transmit antenna to the newly defined receive site.

---

Click the P2P tab to move to the Point-to-Point panel to define the predictions to be performed.

The screenshot shows the 'voacapgui' application window with the 'P2P' tab selected. The interface is titled 'Point-to-Point Predictions'. It features several input fields: 'Year' (2020), 'Month' (5), 'Day' (25), and 'Frequency' (14.200). Each field has increment/decrement buttons. There are checkboxes for 'Use day' and 'Circuit'. A 'Calendar' button is located below the day field. To the right of these inputs is a table with columns 'Day', 'Month', and 'Year', currently displaying 'May' and '2020'. Below the table is a 'Frequency (MHz)' field. At the bottom, a 'Method' dropdown is set to '30: Smoothed LP/SP Model', and an 'Execute' button is present. 'Add', 'Delete', and 'Clear' buttons are also visible for managing the data table.

Figure 4: voacapgui P2P Notebook Tab

Define the time for the prediction by specifying a year and month in the Year and Month entry fields respectively. If required, a day may also be specified by selecting the Use Day checkbox and entering a day value in the Day entry field.

**Caution**

Enabling the Days value will force the VOACAP engine to use the URSI88 coefficients instead of the preferred CCIR values.

**4.1.1 Circuit Calculations**

The default behavior of voacapgui is to produce graphical output showing the performance of frequencies in the range 2-30MHz over a 24 hour period. While this may be useful for most applications, text based 'circuit' predictions may be used when an analysis of performance at spot frequencies is required

To enable circuit predictions, click the Circuit checkbox and use the Frequency entry panel and associated Add button to populate the frequency table

Select the method from the Method combo box at the bottom of the entry panel

**Tip**

Most users will want to select method 30, 'Complete System Performance'

## 4.2 Displaying the results

Results of circuit mode calculations are displayed directly in a text dialog.

In the case of graphical results, the Plot Control opens and offers the following selections;

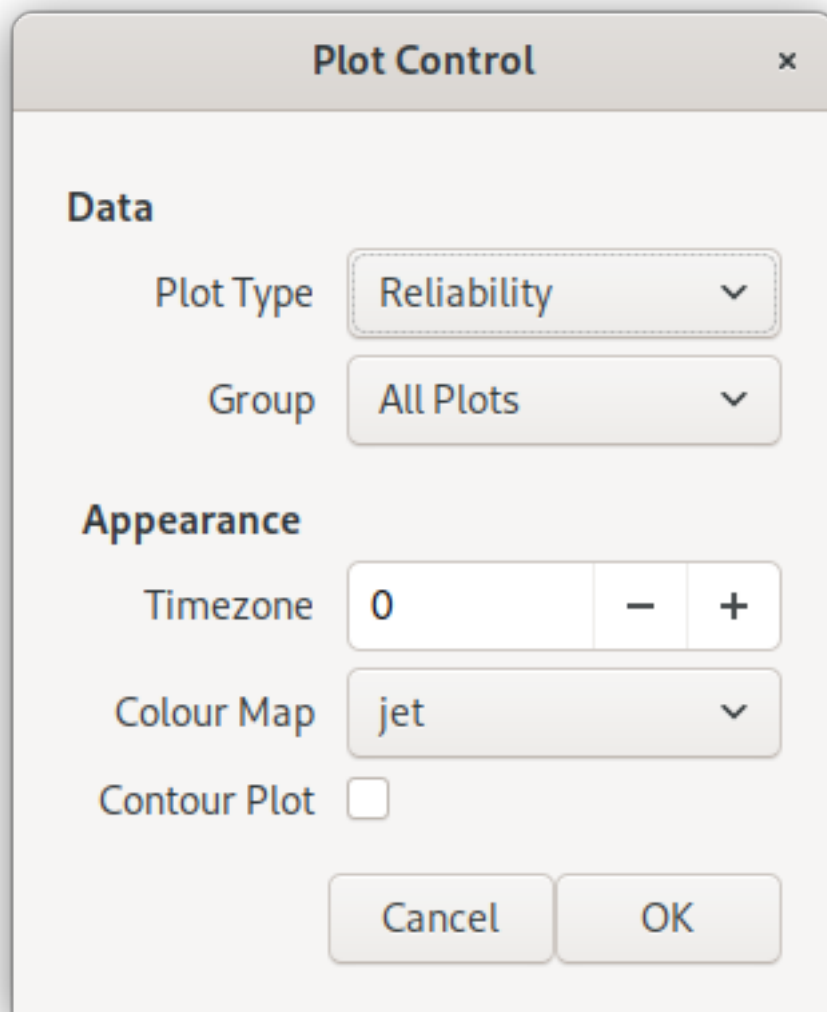


Figure 5: voacapgui P2P Plot Configuration

**Plot Type** Specify the data to be displayed behind the MUF / FOT curves. Available data sets are Reliability, MUFday, DBW, SNR and none.

**Group** Specify the SSN groups to plot

**Timezone** Specify a timezone to shift the plotted data to.

**colour Map** Specify the colour map to use for plotting the background data set.

Click the OK button to open the image file.

### 4.3 VOACAP Area Predictions

To perform an area prediction, select the Site tab in the notebook and click the Site in the Tx. Site panel to open the Site Chooser dialog window.

Sites may be defined by either;

- Clicking on the map.
- Using the Locator combo boxes.
- Entering latitude and longitude directly into the Lat: and Lon: text entry fields.
- Selecting from a list of predefined sites accessed by clicking the Select From File expander.

Once the required site information has been entered, click the OK to close the Site Chooser dialog and return to the main window.

Antenna Selection is made by clicking the Antenna button to open the Antenna Chooser dialog window. Specific antenna models may be selected by browsing through the available models by clicking on the expander buttons in the left panel. Click the OK button to accept the selected antenna and return to the main window.

The bearing of the antenna is defined in the bearing text entry and may be either entered directly or directed to the Rx. Site by clicking the Bearing button.

The transmitter power (in Watts) is then entered using the Power (W) entry field.

Details of the receive antenna then be entered in the Rx. Site panel.

---

**Note** When performing area calculations only the receive site antenna definition is used. All other information in the Rx Site is ignored.

---

Click the Area tab to move to the Area panel to define the predictions to be performed.

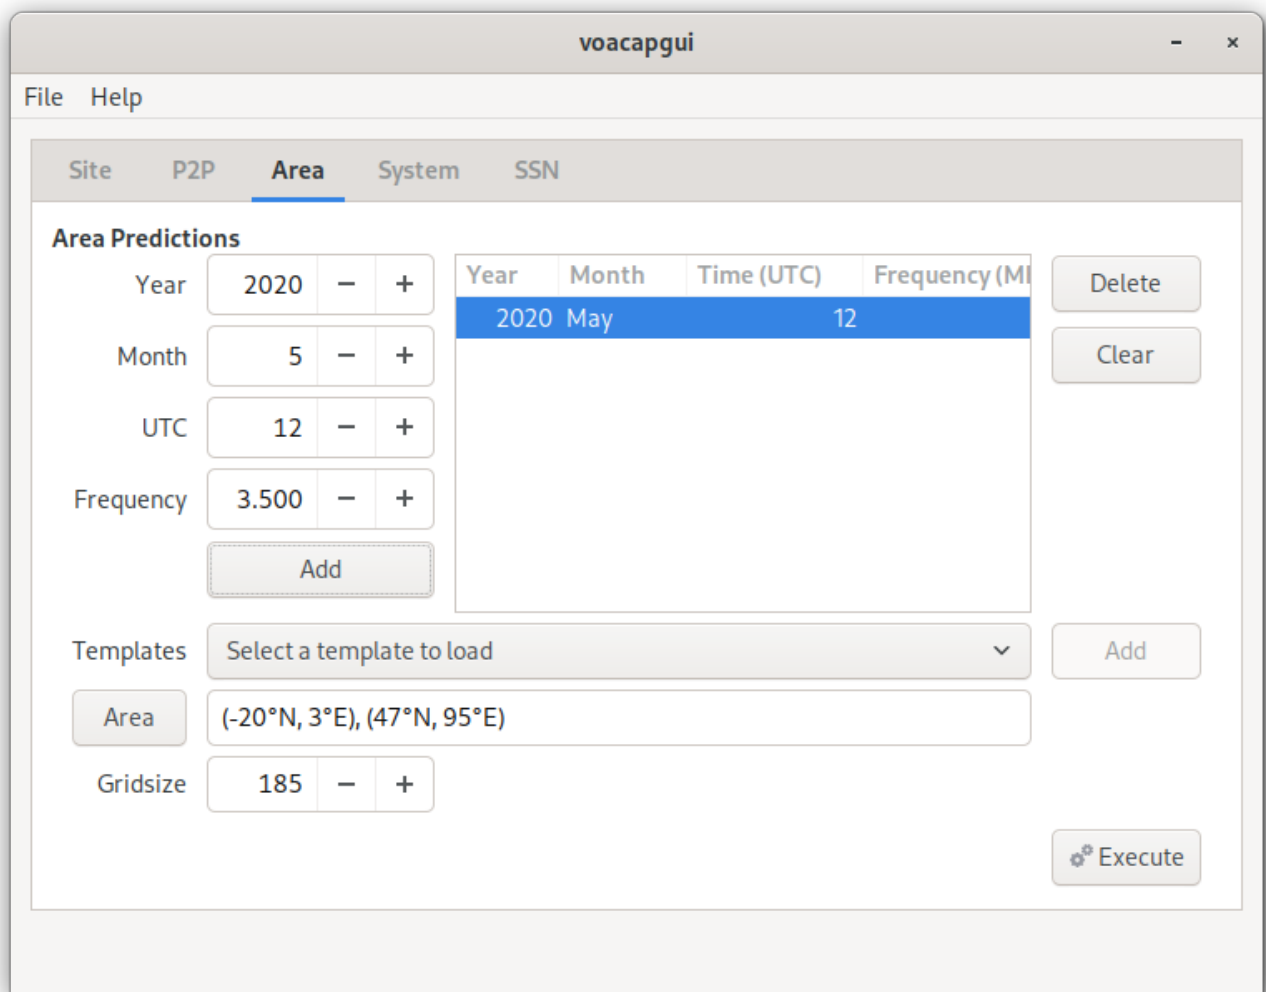


Figure 6: voacapgui Area Tab

Define the time for the prediction by specifying a year and month in the Year and Month entry fields respectively.

Define the frequency of operation for the prediction in the Freq text entry then click the Add button to add the selected values to the main panel. Additional plots may be defined by selecting required Year, Month UTC and Freq values and adding them to the main panel with the Add.

Click the Area button to open the Area Chooser dialog panel which supports defining the receive area in two ways;

- Dragging the cursor across the map.
- Entering values for the North East corner and South West corners directly into the entry fields.

Click the OK to accept the displayed values and return to the main window.

Select the required grid size from the Gridsize entry and start the prediction by clicking the Execute button.

#### Tip

The VOACAP GRID parameter specifies a grid overlayed onto the specified coverage area. Predictions are performed at each intersection within the grid. Large GRID values are used to produce print quality plots but at the expense of computing time. Users may find it better to specify a small grid size for initial runs to check that the inputs are correct prior to setting higher values for final printing.

## 4.4 Displaying the Area Results

The Plot Control dialog is opened as soon as the prediction calculations are complete and offers the following selections;

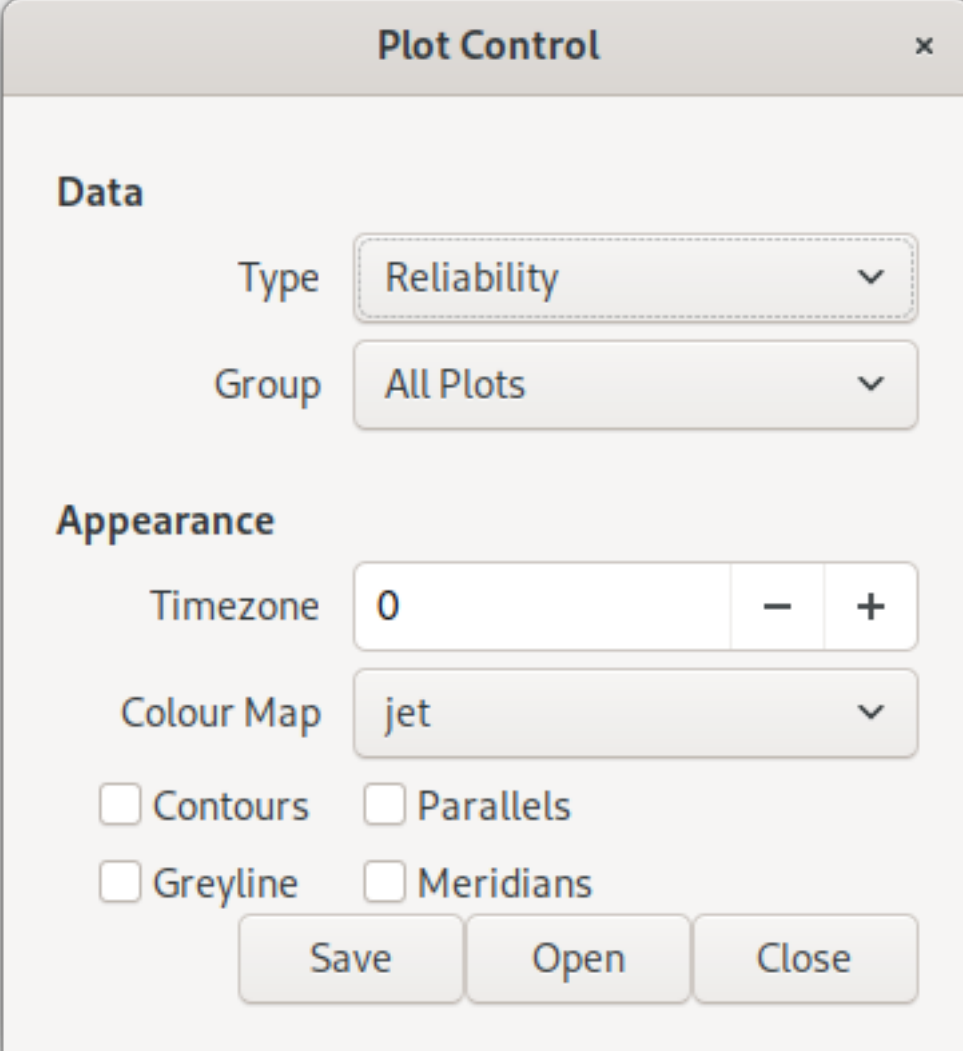
The image shows a 'Plot Control' dialog box with a title bar containing a close button (x). The dialog is divided into two main sections: 'Data' and 'Appearance'. In the 'Data' section, there are two dropdown menus: 'Type' set to 'Reliability' and 'Group' set to 'All Plots'. In the 'Appearance' section, there is a 'Timezone' input field with the value '0' and buttons for '-' and '+'. Below this is a 'Colour Map' dropdown menu set to 'jet'. There are four checkboxes: 'Contours', 'Parallels', 'Greyline', and 'Meridians', all of which are currently unchecked. At the bottom of the dialog are three buttons: 'Save', 'Open', and 'Close'.

Figure 7: voacapgui Area Plot Configuration

**Plot Type** Specify the data to be displayed behind the MUF / FOT curves. Available data sets are Reliability, MUFday, DBW, SNR and none.

**Group** Specify the SSN groups to plot

**Timezone** Specify a timezone to shift the plotted data to.

**Colour Map** Specify the colour map to use for plotting the background data set.

**Contours** Produces a filled contour plot.

**Greyline** Controls the plotting of a greyline on the area map.

**Parallels** Controls the plotting of parallels on the area map.

**Meridians** Controls the plotting of meridians on the area map.

Prediction data may be stored in a '.vgz' file; a zip file containing the source .voa file along with the output .vg\_ files. These files may be saved and retrieved using the File Open VGA File menu item.

Click the OK button to open the area plot image.

## 5 System Settings

- Section 5.1 System
- Section 5.2 SSN

### 5.1 System Settings

The System Notebook Tab is used to define a number of system side VOACAP parameters.

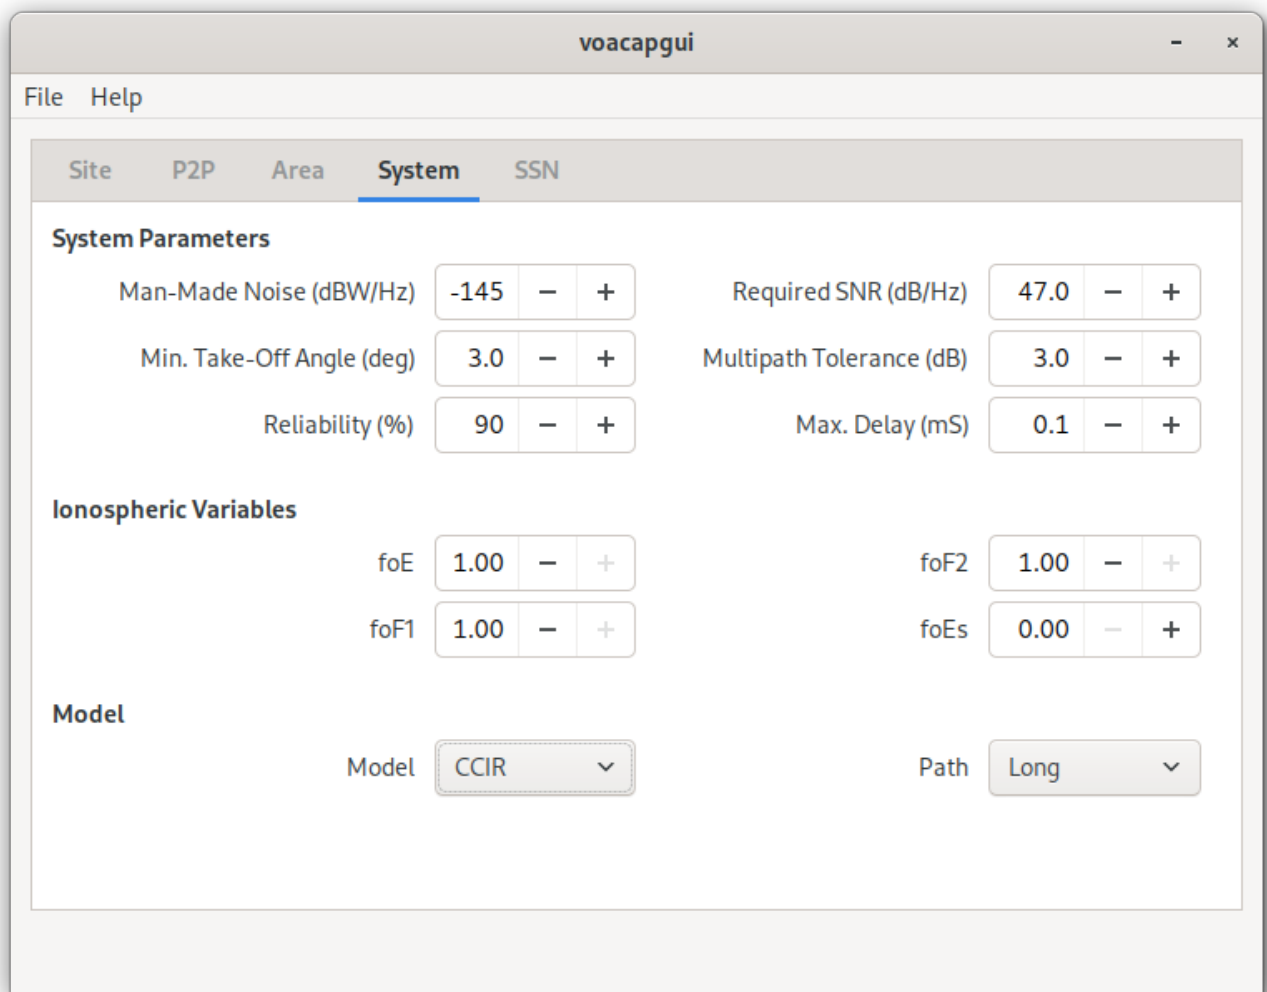


Figure 8: voacapgui System Tab

**Man-Made Noise** This is an important parameter, used to characterise the level of man-made noise at the receive location.

Valid values are in the range 100-200 -dBw/Hz

dBW/Hz	Environment
-164.1	Remote
-152.7	Quiet
-150.0	Rural
-144.7	Residential
-140.4	Industrial
-138.7	Noisy

**Min. Take-Off Angle** This value is normally very small unless antenna performance is anticipated to be so poor at low angles that these angles should not be used in the estimation of upper useful frequencies, or if the horizon is so obstructed that low take off angles and reception angles appear unlikely.

Valid values are in the range 0.1 - 90.0 degrees

**Reliability** An estimate of the percent of days within a month that the signal quality will meet the level defined by the Required SNR parameter.



**Required SNR (dB/Hz)** An important parameter used to specify the required Signal-to-Noise ratio of the hourly median power relative to the hourly median noise in a 1Hz bandwidth.

Typical values of Required SNR are;

dB/Hz	Traffic
45.0	Voice / 600bps Data
47.0	Voice / 1200bps Data
49.0	Voice / 2400bps Data
52.0	4800 bps MIL-STD-110B Data
63.0	9600 bps MIL-STD-110B Data

**Multipath Tolerance** Specifies the maximum difference in power between the sky-wave modes to permit satisfactory system performance in the presence of multiple signals. Modes weaker than the specified level are not considered multipath problems.

The valid range is 0-40dB (Default = 3.dB)

**Max Delay (mS)** Specifies the maximum tolerable delay in between sky-wave modes to permit satisfactory system performance in the presence of multiple signals. Modes within the specified limit are not considered multipath problems.

The valid range is 0-99.99 mSec (Default = 10.00 mSec)

**Ionospheric Variables foE, foF1, foF2, foEs** Multipliers that adjust the predicted critical frequency for the associated layer.

Default values for foE, foF1 & foF2 are 1.0, foEs = 0.0

**Model** Define the coefficients used for the calculations

Default is CCIR

**Path** Specifies if a long or short path calculation should be performed.

Default: Short

## 5.2 Sun Spot Numbers (SSN)

This tab is used to display the Sun Spot Numers (SSN) read by voacapgui and passed to VOACAP.

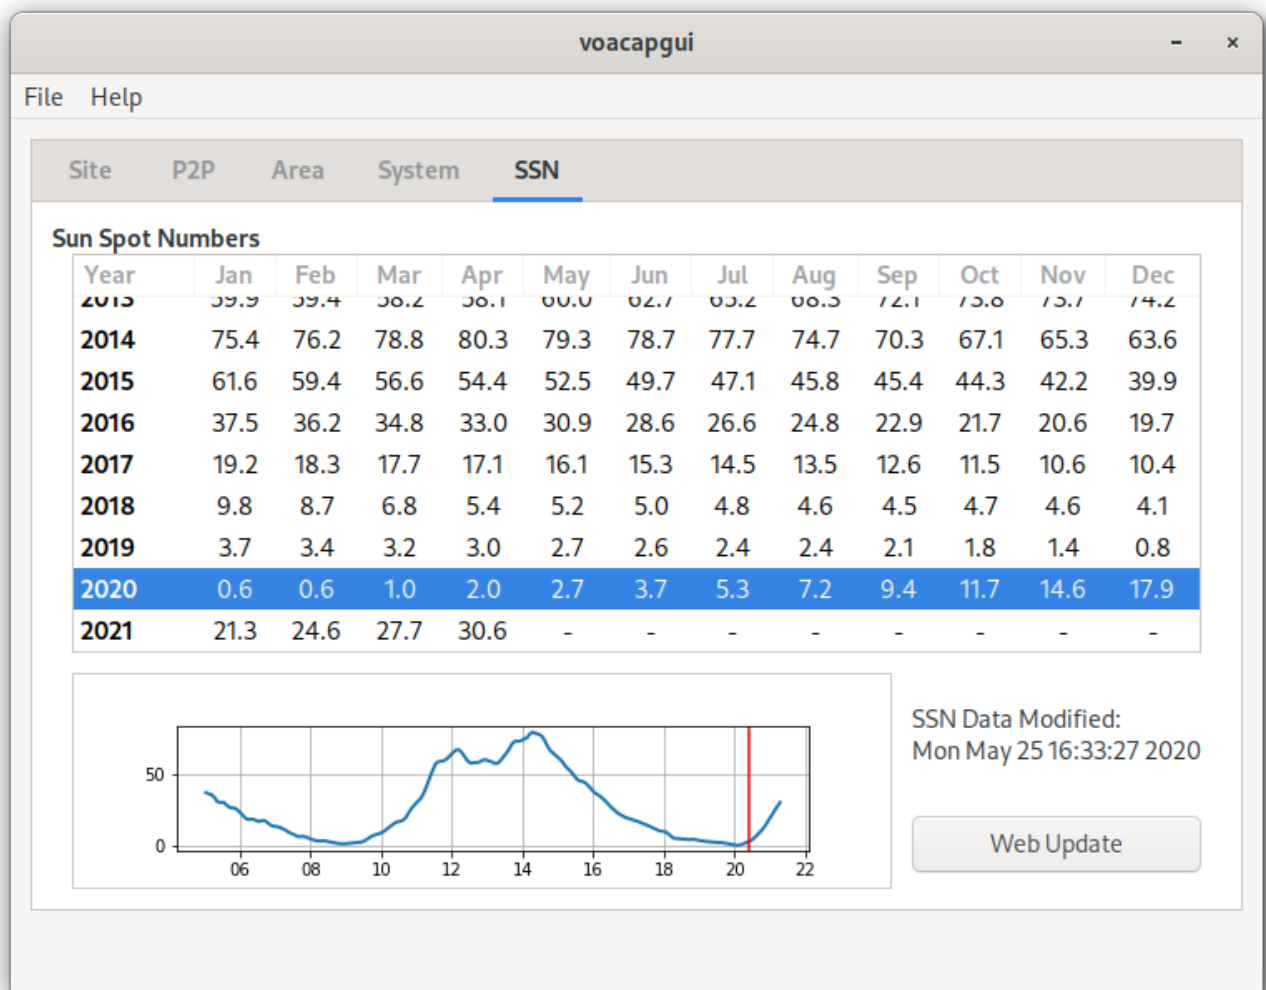


Figure 9: voacapgui SSN Tab

The information is derived from data published by NOAA and made available at [ftp://ftp.ngdc.noaa.gov/STP/space-weather/solar-data/solar-indices/sunspot-numbers/predicted/table\\_international-sunspot-numbers\\_monthly-predicted.txt](ftp://ftp.ngdc.noaa.gov/STP/space-weather/solar-data/solar-indices/sunspot-numbers/predicted/table_international-sunspot-numbers_monthly-predicted.txt).

The Web Update may be used to update the table (requires an Internet connection). Alternatively, a copy of the `table_international-sunspot-numbers_monthly-predicted.txt` file can be placed in the user's `~/.voacapgui` directory.

## 6 Templates

Voacapgui supports the use of templates to facilitate the preparation of repeated input data.

Each file must implement only one class named "templates" which can implement one or more templates.

The "templates" class has to define the following methods:

**\_\_init\_\_(self, parent)** parent is the parent window in case a dialog has to be used.

**get\_names(self)** return a list of the names of the templates

**get\_params(self)** Return a list of strings with properties the caller should set on the object. For example, for getting the parent property "prop" set in the templates object scope, this function must return ['prop'].

**load(self)** This is the last step performed by the caller prior to read the names of the templates implemented. This method should do the minimum amount of work because is always called in program start, not upon template usage.

**set\_ini(self, model)** The argument this method gets is the TreeModel object of the area plot tab as is at the moment the method is invoked. This method is called once before calling run(), so the model is actualized.

**run(self)** This method is called upon the object to let it build the template values. It should put the result in the self.ret\_templates dict, where the caller will retrieve the values. If a non zero value is returned to the caller, the procedure will be canceled, i.e. the template values will not be added to the model.

## 7 Known Bugs and Limitations

Apart from when starting the application for the very first time, voacapgui does not check for updated SSN values. The user is responsible for periodically checking / updating the SSN values using the Web Update button on the SSN tab.

## 8 About voacapgui

voacapgui was written by J.Watson(M0DNS / HZ1JW) and Fernando Maresca (LU2DFM) ([jwatson@neomailbox.ch](mailto:jwatson@neomailbox.ch)). To find more information about voacapgui, please visit the [pythonprop homepage](#).

To report a bug or make a suggestion regarding this application or this manual, please contact the author at the email address provided above.

This program is distributed under the terms of the GNU General Public license as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version. A [copy of this license](#) is included with this documentation; another can be found in the file COPYING included with the source code of this program.