
SphereOverburden

Release 0.1

Anon

May 19, 2023


CONTENTS

1	Getting Started	1
1.1	Overview	1
1.2	Installation	2
2	GUI Overview	3
2.1	Sphere-ob GUI	3
3	Modelling with Sphere-ob	9
3.1	Examples	9
3.2	Import tem/xyz data	11
3.3	Importing transmitter waveform data	12
4	Other Info	13
4.1	References	13
4.2	License	13

GETTING STARTED

1.1 Overview

Sphere-ob (sphere-overburden) is a python program developed to calculate and plot the airborne TDEM response of a sphere or “dipping sphere” underlying conductive overburden. The response is calculated using the semi-analytic solution set presented in Desmerais & Smith (2016), the solution assumes that the response due to the sphere interacting with conductive overburden may be written as the first order perturbation of the overburden field plus a sum of terms accounting for the inductive interaction between the sphere and overburden. This routine is utilized for its computation efficiency and ability to model a dipping plate or thin sheet in addition to a traditional sphere. To model a thin sheet, the sphere overburden algorithm restricts current flow to parallel planes within an anisotropic sphere. A simplified synthetic model of a sphere underlying conductive overburden is shown below.

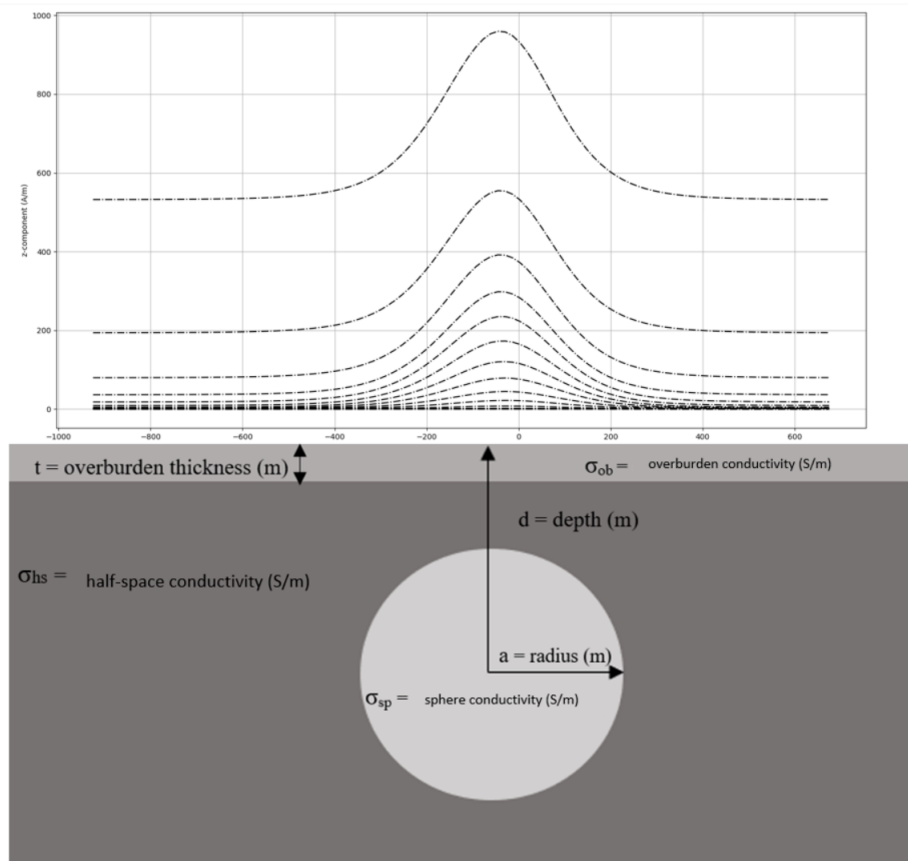

1.2 Installation

1.2.1 Installing Sphere-ob

If you have python added to path and are familiar with pip, Sphere-ob may be installed with pip + git by opening a comand prompt as administrator and using:

```
pip install git+https://github.com/anonseg2023/sphereob
```

Alternatively, the repository can be manually downloaded and installed using the install script, i.e., by navigating to the ShereOverburdenProject folder, opening a python / anaconda prompt in administrator and running:

```
python setup.py install
```

Once these steps have been completed the program can be launched from the command line using:

```
sphereob
```

For anaconda users or users who do not have python added to path, you may want to install sphere-ob into a separate Anaconda environment, this can be done easily by running the install_or_update.bat.

You can then switch to the newly installed environment using:

```
conda activate sphereob
```

Or, if using git-bash:

```
source activate sphereob
```

Note: By default, new terminals start in the 'base' environment, so you will have to enter the above command each time you open a new terminal. Alternatively, you may add the command to your ~/.bashrc file to have it run automatically. See the the [Anaconda Environemnent documentation](#) for more details.


Once the environment has been activated the user may then navigate to the project directory in an anaconda prompt then launch the program using:

```
python sphereob.py
```

GUI OVERVIEW

2.1 Sphere-ob GUI

The sphere-ob program was written in python and the PyQt5 framework was utilized to build the programs GUI. The sphere-ob program has 4 main areas that the user will interact with. Each area of the GUI is detailed below with a description of the use cases and different parameters included in each area:

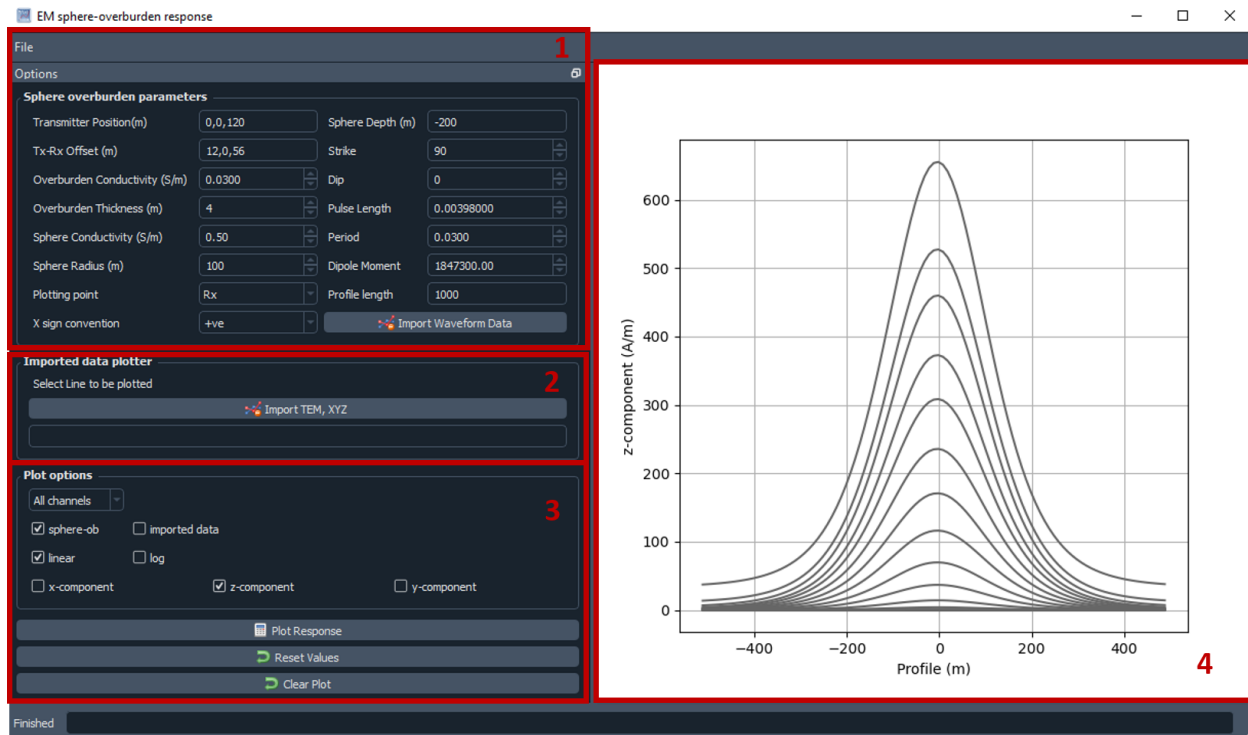

1. *Sphere overburden parameters*
2. *Imported Data*
3. *Plot Options*
4. *Plot Window*

2.1.1 Sphere overburden parameters


This section of the widget is where the user will input all the parameters of the sphere overburden model, a description of the parameter and the expected input format are listed below:

- Transmitter Position
 - The transmitter position in meters, z co-ord is positive for distance above ground. Input is three values for x,y,z seperated by commas (ie. 0,0,60 for a receiver 60m above ground with no offset in x,y).
- Tx-Rx Offset
 - The transmitter offset relative to the receiver, left & down are positive. Input is three values for x,y,z seperated by commas (ie. 12.5,0,25) for a transmitter that is 12.5m behind and 25m below the receiver).
- Overburden Conductivity
 - The conductivity of the overburden in Seimens per meter (S/m).
- Overburden Thickness
 - The thickness of the overburden in meters.
- Sphere Conductivity
 - The conductivity of the sphere in Seimens per meter (S/m).
- Sphere Radius
 - The radius of the sphere in meters.
- Plotting point
 - User can choose where the plotting point of the response coincides (at the transmitter, at the receiver or the midpoint).
- X sign convention
 - The sign convention of the x component may be flipped using this parameter if the flight lines are opposite the data.
- Sphere Depth
 - The depth of the sphere below ground surface in meters, up is considered positive.
- Strike & Dip
 - The strike & dip of the sphere in degrees, if this value is non zero the response will be representative of a dipping plate. The strike and dip positive counter clockwise.
- Pulse Length
 - The pulse length of the transmitter waveform in seconds.
- Period
 - The period of the transmitter waveform in seconds.
- Dipole Moment
 - The dipole moment of the transmitter (A/m)
- Profile Length
 - The dipole moment of the transmitter (A/m)

- Import Waveform Data
 - This button will open an instance of windows explorer for the user to navigate to the csv file containing transmitter waveform data, an example of the expected csv format is shown below and the file is provided in the example directory.

2.1.2 Imported Data

This section of the widget allows the user to import tдем for a given line in the form of a .tem file.

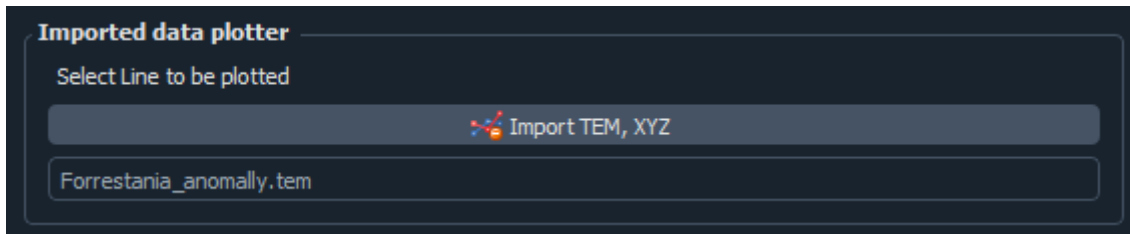

2.1.3 Plot Options

Here the user will determine what will be plotted in the plot window, there are options in this section of the widget to select the response components to be plotted, the y-axis scale and the data to be plotted(sphere-ob model, imported data or both).


The time channel dropdown box offers users the following options:

- When selected, “default” will plot all channels of the response.
- When selected, “early” will plot the earliest 1/3 of channels in the response.
- When selected, “middle” will plot the middle 1/3 of channels in the response.
- When selected, “late” will plot the latest 1/3 of channels in the response.


Underlying the time channel dropdown box is a set of checkboxes that allow the users to choose what is displayed in the plot windows

- If checked, the “sphere-ob” checkbox will plot all time windows in the tem file.
- If checked, the “imported data” checkbox will plot the response for the chosen line of imported data.
- The x,y and z checkboxes correspond to the components of the response to be plotted.
- The ‘log’ and ‘linear’ checkboxes allow the user to change the y-axis scale
- The ‘Plot response’ button will generate and plot the response for the given parameters that the user has outlined.
- The ‘Reset values’ button when clicked will reset the model parameters to the default values.
- The ‘Clear plot’ button will clear any existing plots in the plot window.

- It can be difficult to interpret data on specific channels if there is a large discrepancy in noise or amplitude between channels, interpretation can be made easier by selecting a specific group of time channels to be plotted. Below is an example of the sphere-ob program plotting user selected time channels.

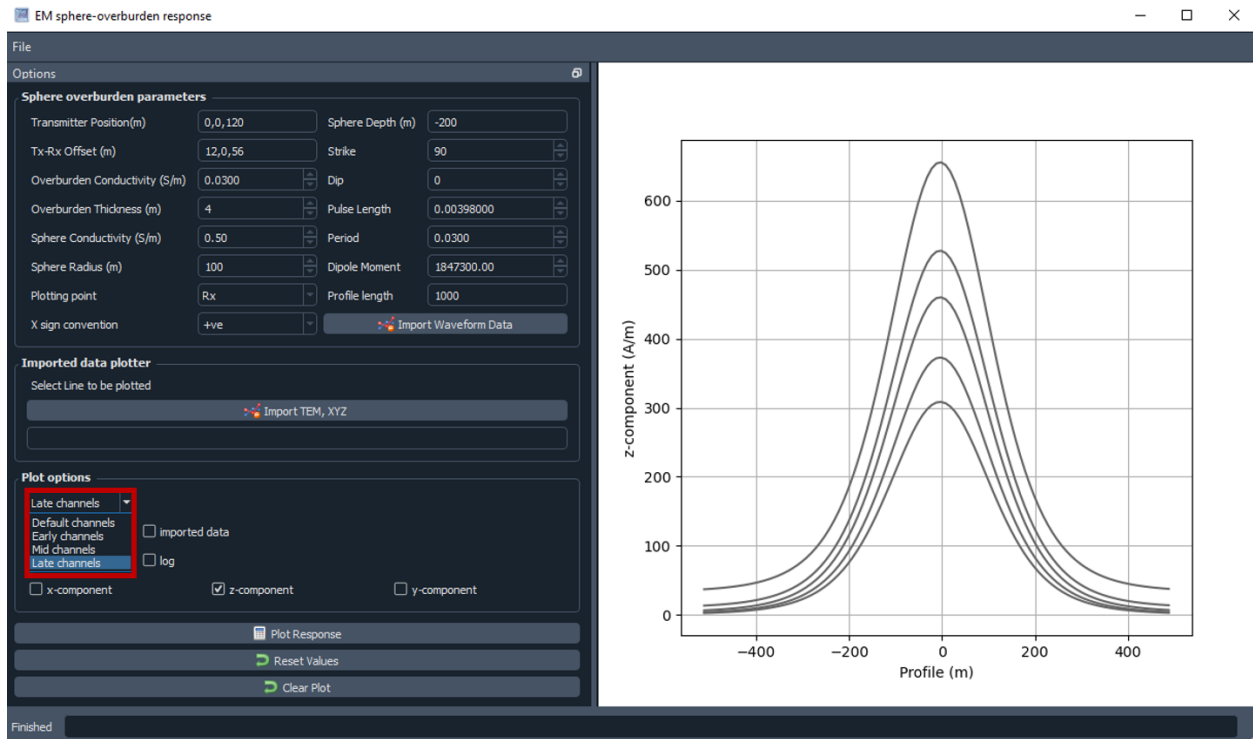


- This feature can be useful when using the sphere-ob program to model real data. You can read in the real data and plot it side by side with the modelled response when trying to achieve a fit to the data. Below is an example of the sphere-ob program plotting imported tem data (red) alongside the generated sphere-ob response (black).

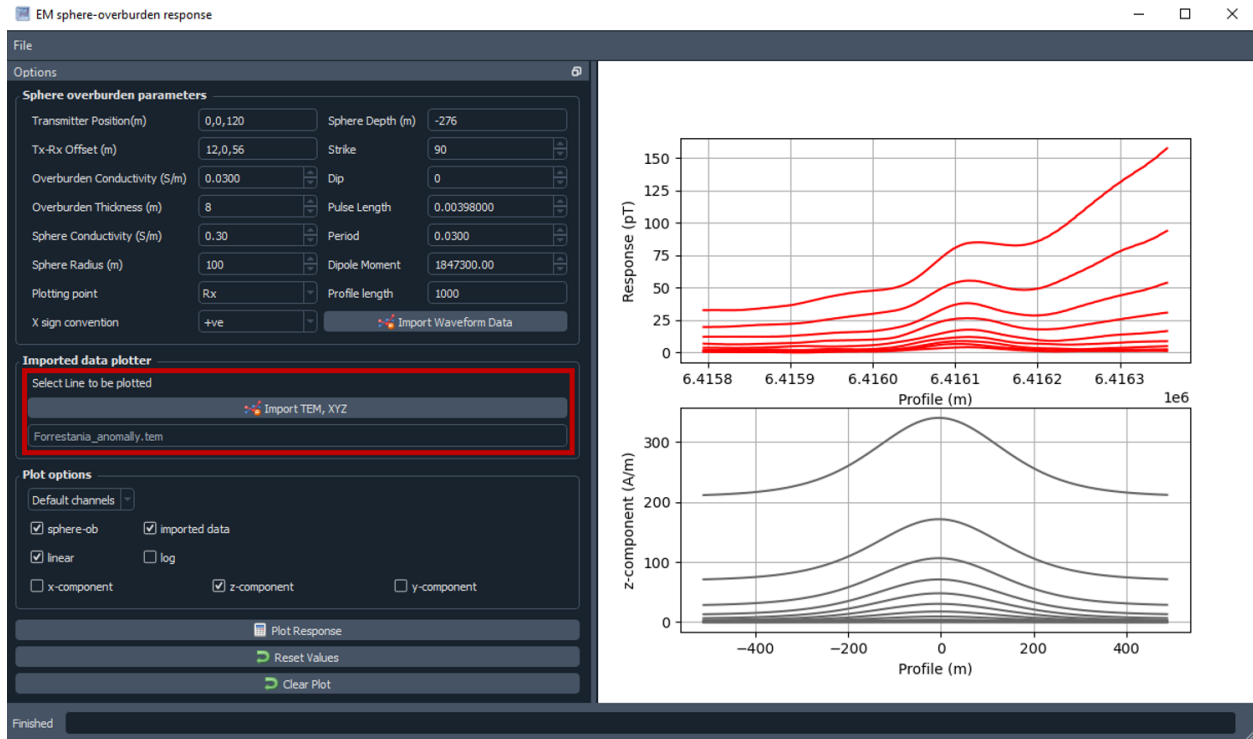

2.1.4 Plot Window

The plotting window is where all responses will be plotted, the plotting window can be cleared using the 'clear plot' button. It is also possible to 'undock' the parameters widget and maximize the plotting window for increased visibility as seen below.

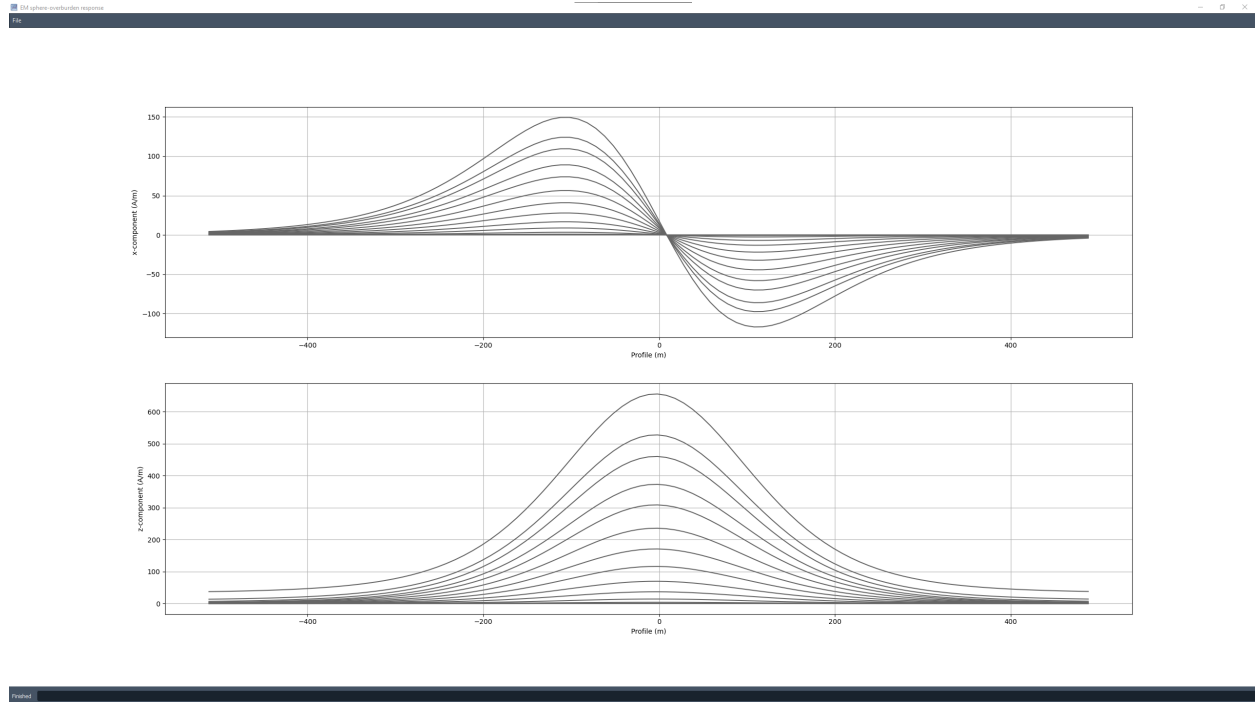


MODELLING WITH SPHERE-OB


3.1 Examples

Below are some sample EM responses generated with the sphere-ob program. The responses display the programs ability to account for conductive overburden and the ability to model both, sphere and plate responses.


- z component for a sphere 200m below surface with negligible overburden

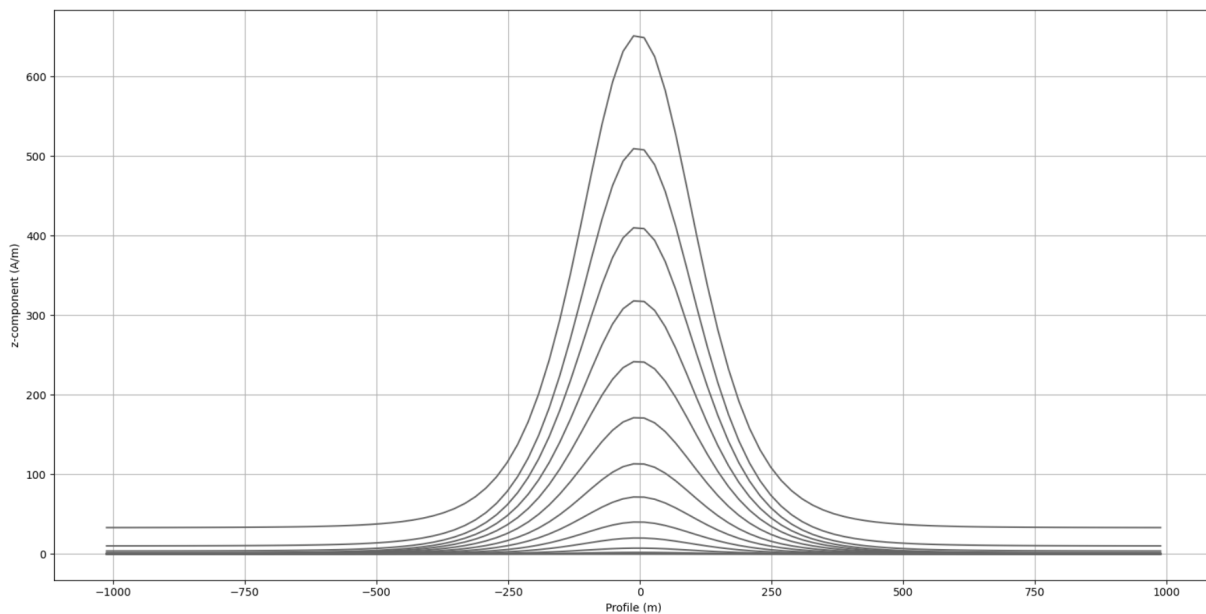

- z component for a sphere 200m below surface under 15m of conductive cover

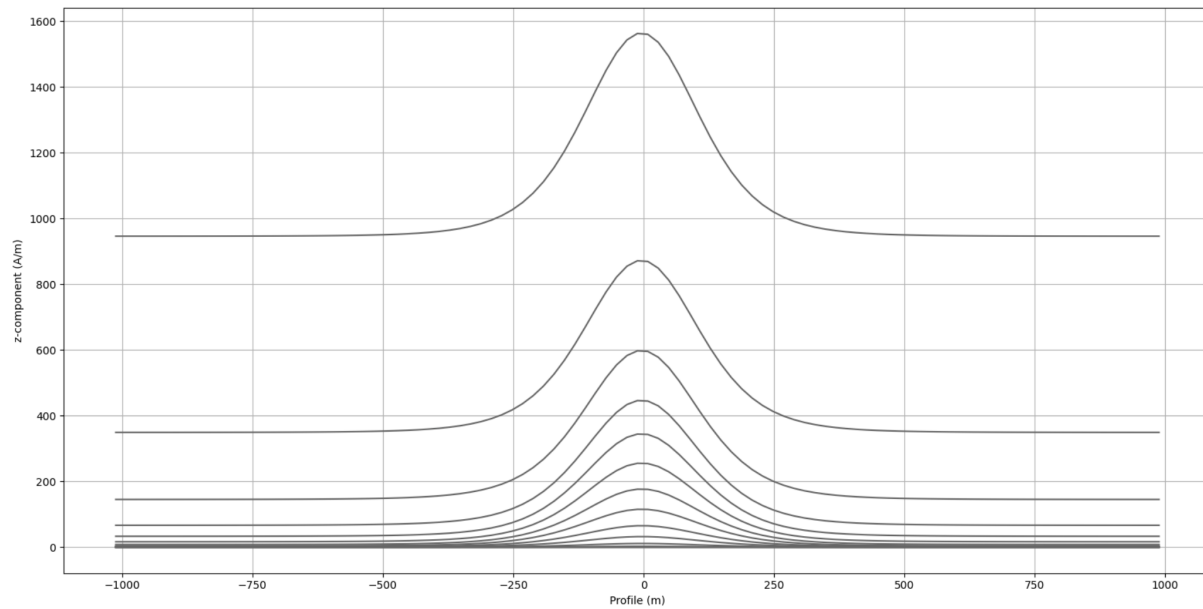


- x,z component for a plate 200m below surface dipping at 45 degrees with negligible overburden

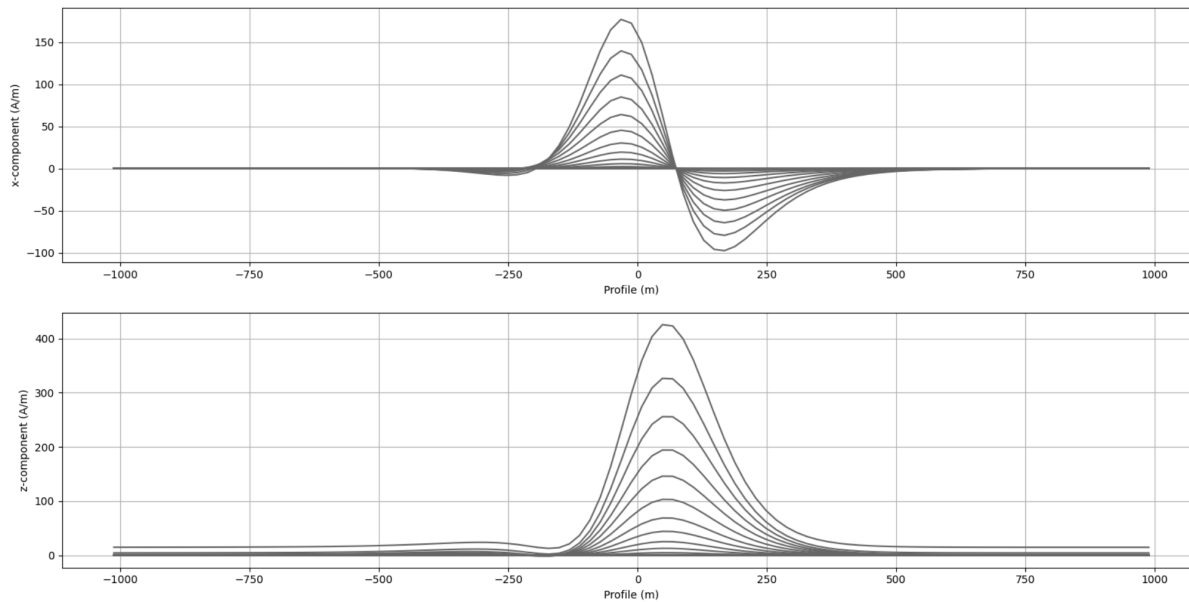

3.3 Importing transmitter waveform data

Importing transmitter waveform data and time windows is useful when modelling the response of specific types of TDEM systems. An example of the expected CSV formatting for the import of transmitter data, left column consists of window centers in seconds, right column is transmitter pulse data.

Window centers (Seconds) Transmitter pulse (current)



```

1  0.000146484,3.5300
2  0.000859375,3.5310
3  0.002124023,3.5300
4  0.003388672,3.5220
5  0.004165039,3.4390
6  0.004189453,3.4390
7  0.00421875,3.1800
8  0.004262695,3.6210
9  0.004306641,8.1120
10 0.004360352,13.2570
11 0.004428711,23.2440
12 0.004511719,34.6880
13 0.004604492,46.1600
14 0.004716797,57.7170
15 0.004858398,69.1700
16 0.005029297,80.8180
17 0.005234375,92.3170
18 0.005483398,103.8920
19 0.00578125,115.3760
20 0.006142578,126.8930
21 0.006577148,138.3750
22 0.007099609,149.8730
23 0.007734375,161.3230
24 0.008500977,172.7730
25 0.009423828,184.1880
26 0.010537109,195.6060
27 0.011884766,206.9990
28 0.013505859,218.3760
29 0.015463867,229.7280
30 0.018266602,241.0620
31 ,252.3730
32 ,263.6690
33 ,274.9390
34 ,286.1880
35 ,297.4110
36 ,308.6130
37 ,319.7890
38 ,330.9410
39 ,342.0650
40 ,353.1620
41 ,364.2340
42 ,375.2770

```

OTHER INFO

4.1 References

Desmarais, J. K., and Smith, R. S., 2016, Approximate semianalytical solutions for the electromagnetic response of a dipping-sphere interacting with conductive overburden: *Geophysics*, 81(4). DOI: 10.1190/geo2015-0597.1

4.2 License

The MIT License (MIT)

Copyright (c) 2021 GAMS Developers

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the “Software”), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED “AS IS”, WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.