

HP41UC

User-Code Utility for HP-41 Calculators

Version 2.10
June 19, 2016

HP41UC – User-Code Utility for HP-41 Calculators

Document History

Date	Version	Change
June 11, 2016	2.00	1) Port v1.30 16-bit DOS to Win32 console app 2) Fix compiler bug on {STO*, STO/, STO+, STO-} IND 3) Add better support for Esc-sequences in strings (see De-compiler Notes) 4) Update UsersGuide and License documents
June 19, 2016	2.10	1) Fix bug to allow compiling multiple files into a LIF file. 2) Add support for building with GNU tools, and create a statically-linked 32-bit x86 ELF executable for Linux.

HP41UC

Contents

Contents.....	3
Introduction	4
IMPORTANT NOTES.....	4
Brief Overview.....	5
LIF Format	6
P41 Format.....	7
RAW Format.....	8
BIN Format	9
DAT Format	10
TXT Format (Compiler).....	11
Compiler Rules	12
De-compiler Notes	13
Barcode Generator.....	14
Shuttle Disk Transfers	15
Direct Link Transfers	17
The PIL-Box, an HP-IL <-> PC link solution	18
Appendix A - 41UCC Compatibility.....	19
Appendix B - Listing of "WL"	20
Appendix C – References	21

HP41UC

Introduction

This utility provides means for editing and archiving code outside of the HP-41™ calculator, using file transfer and barcode scanning mechanisms. To that end, the utility provides the following functions:

- **File Converter**
The file format converter is used to package compiled code with wrappers compliant with various popular file formats. In some cases that may require preceding the code with a "header", appending a "checksum", or adding "filler" (don't care) bytes to satisfy file size requirements.
- **Compiler**
The compiler takes code in readable text format, and compiles it into one of the supported file formats.
- **De-compiler**
The de-compiler takes compiled code, packaged in any of the supported file formats, and creates a readable text file that can be edited or printed out.
- **Barcode Generator**
The barcode generator creates a printable file with raster graphics data for PCL3™, or Postscript™ compatible printers.

For sample descriptions of file transfer methods, see the [Shuttle Disk Transfers](#) and [Direct Link Transfers](#) sections in this document.

IMPORTANT NOTES

The HP-IL hardware and transfer software described in the [Shuttle Disk Transfers](#) and [Direct Link Transfers](#) sections is now obsolete. However, the HP41UC use-cases described in those sections may still be applicable while using other HP-IL transfer mechanisms. For an example of a modern HP-IL transfer mechanism, please refer to [The PIL-Box, an HP-IL <-> PC link solution](#).

Brief Overview

Supported File Formats

- LIF [/l]: transfer file for Trans41 and DOSLink
- P41 [/p]: archive file for HP-41 programs on ftp sites
- RAW [/r]: input/output file for LIFUTIL
- DAT [/d]: input/output file for EMU41 (using INP, OUTP)
- BIN [/b]: output file from 41UCC
- TXT [/t]: program listing (readable text)
- PCL [/h]: barcode printable file (HP PCL3™)
- PS [/s]: barcode printable file (Postscript™)
- WND [/w]: barcode hex-dump file (Wand)

Features

- File Converter
[LIF, P41, RAW, DAT, BIN] → [BIN, DAT, RAW, P41, LIF]
- Compiler
[TXT] → [LIF, P41, RAW, DAT, BIN]
- De-compiler
[LIF, P41, RAW, DAT, BIN] → [TXT]
- Barcode Generator
[RAW] → [WND, PCL, PS]

LIF Format

File format used by HP-IL mass-storage devices.

Description:

<https://www.finseth.com/hpdata/lif.php>

<http://www.hp9845.net/9845/projects/hpdir/>

Usage:

Optional parameters are surrounded by <>

- LIF file to P41 file
`/l=infile<.lif> /p<=outfile.p41> <name>`
 Search LIF for <name>, <outfile>, or [infile]
- LIF file to RAW file
`/l=infile<.lif> /r<=outfile.raw> <name> </k>`
 Search LIF for <name>, if specified
 Use /k option to exclude checksum and trailer bytes in RAW file.
- LIF file to BIN file
`/l=infile<.lif> /b<=outfile.bin> <name>`
 Search LIF for <name>, if specified
- LIF file to DAT file (hex digits in ASCII format)
`/l=infile<.lif> /d<=outfile.dat> <name>`
 Search LIF for <name>, if specified
- LIF directory listing
`/l=infile<.lif> <name>`
 Search LIF for <name> only, if specified
- LIF file to TXT file (De-compiler)
`/l=infile<.lif> /t<=outfile.txt> <name> </n> </x>`
 Search LIF for <name>, if specified

De-compiler Options:

```
/a - append text using: [ "|-text" ], instead of: [ ">text" ]
/n - generate line numbers
/x - use [ XROM mm,ff ] for all XROM Functions
/x23 - use [ XROM 23,ff ]: [ XROM 23,1 ], instead of [ COPYFL ]
/x25 - use [ XROM 25,ff ]: [ XROM 25,46 ], instead of [ X<>F ]
/x26 - use [ XROM 26,ff ]: [ XROM 26,10 ], instead of [ CLOCK ]
/x28 - use [ XROM 28,ff ]: [ XROM 28,27 ], instead of [ AUTOIO ]
```

P41 Format

Archiving format popular on FTP sites.

Description:

[32-byte header] + [compiled code] + [1-byte checksum] + [trailer]

- [32-byte header] - single LIF directory entry
- [1-byte checksum] - sum of all [compiled code] bytes
- [trailer] - filler bytes, so that filesize = 32 + multiple 256-byte blocks

Usage:

Optional parameters are surrounded by <>

- P41 file(s) to LIF file
/p=infile<.p41> /l=<outfile.lif>

If output file is specified, [infile] can be a directory of P41 files.

For example: /p=\p41dir*.p41 /l=hpil.lif

- P41 file to RAW file (remove 32-byte header)
/p=infile<.p41> /r=<outfile.raw> </k>

Use /k option to exclude checksum and trailer bytes in RAW file.

- P41 file to BIN file
/p=infile<.p41> /b=<outfile.bin>
- P41 file to DAT file (hex digits in ASCII format)
/p=infile<.p41> /d=<outfile.dat>
- P41 directory listing (from 32-byte header)
/p=infile<.p41>
- P41 file to TXT file (De-compiler)
/p=infile<.p41> /t=<outfile.txt> </n> </x>

De-compiler Options:

```
/a - append text using: [ "|-text" ], instead of: [ >"text" ]
/n - generate line numbers
/x - use [ XROM mm,ff ] for all XROM Functions
/x23 - use [ XROM 23,ff ]: [ XROM 23,1 ], instead of [ COPYFL ]
/x25 - use [ XROM 25,ff ]: [ XROM 25,46 ], instead of [ X<>F ]
/x26 - use [ XROM 26,ff ]: [ XROM 26,10 ], instead of [ CLOCK ]
/x28 - use [ XROM 28,ff ]: [ XROM 28,27 ], instead of [ AUTOIO ]
```

RAW Format

Description:

[compiled code] + [1-byte checksum] + [trailer]

- [1-byte checksum] - sum of all [compiled code] bytes
- [trailer] - filler bytes, so that filesize = multiple 256-byte blocks

Usage:

Optional parameters are surrounded by <>

- RAW file(s) to LIF file
`/r=infile<.raw> /l<=outfile.lif> <name>`

 LIF name = <name> or [infile]
 If output file is specified, [infile] can be a directory of RAW files.
 For example: `/r=\rawdir*.raw /l=hpil.lif`
- RAW file to P41 file
`/r=infile<.raw> /p<=outfile.p41> <name>`

 P41 name = <name> or [infile]
- RAW file to BIN file
`/r=infile<.raw> /b<=outfile.bin>`
- RAW file to DAT file (hex digits in ASCII format)
`/r=infile<.raw> /d<=outfile.dat>`
- RAW file to TXT file (De-compiler)
`/r=infile<.raw> /t<=outfile.txt> </n> </x>`

De-compiler Options:

```
/a - append text using: [ "|-text" ], instead of: [ ">text" ]
/n - generate line numbers
/x - use [ XROM mm,ff ] for all XROM Functions
/x23 - use [ XROM 23,ff ]: [ XROM 23,1 ], instead of [ COPYFL ]
/x25 - use [ XROM 25,ff ]: [ XROM 25,46 ], instead of [ X<>F ]
/x26 - use [ XROM 26,ff ]: [ XROM 26,10 ], instead of [ CLOCK ]
/x28 - use [ XROM 28,ff ]: [ XROM 28,27 ], instead of [ AUTOIO ]
```


BIN Format

Description:

[2-byte header] + [compiled code] + [1-byte checksum] + [trailer]

- [2-byte header] - size of [compiled code] in big-endian format
- [1-byte checksum] - sum of all [compiled code] bytes + [2-byte header]
- [trailer] - filler bytes, so that filesize = multiple 128-byte blocks

Usage:

Optional parameters are surrounded by <>

- BIN file(s) to LIF file
/b=infile<.bin> /l=<outfile.lif> <name>

LIF name = <name> or [infile]

If output file is specified, [infile] can be a directory of BIN files.

For example: /b=\bindir*.bin /l=hpil.lif

- BIN file to P41 file
/b=infile<.bin> /p=<outfile.p41> <name>

P41 name = <name> or [infile]

- BIN file to RAW file (remove 2-byte header)
/b=infile<.bin> /r=<outfile.raw> </k>

Use /k option to exclude checksum and trailer bytes in RAW file.

- BIN file to DAT file (hex digits in ASCII format)
/b=infile<.bin> /d=<outfile.dat>
- BIN file to TXT file (De-compiler)
/b=infile<.bin> /t=<outfile.txt> </n> </x>

De-compiler Options:

/a - append text using: ["|-text"], instead of: [">text"]

/n - generate line numbers

/x - use [XROM mm,ff] for all XROM Functions

/x23 - use [XROM 23,ff]: [XROM 23,1], instead of [COPYFL]

/x25 - use [XROM 25,ff]: [XROM 25,46], instead of [X<>F]

/x26 - use [XROM 26,ff]: [XROM 26,10], instead of [CLOCK]

/x28 - use [XROM 28,ff]: [XROM 28,27], instead of [AUTOIO]

DAT Format

Description:

[4-byte header] + [compiled code] + [2-byte checksum]

- [4-byte header] - size of [compiled code] in big-endian format
- [2-byte checksum] - sum of all [compiled code] bytes + [2-byte header]

All bytes are hex digits in ASCII format.

Usage:

Optional parameters are surrounded by <>

- DAT file(s) to LIF file
`/d=infile<.dat> /l<=outfile.lif> <name>`

 LIF name = <name> or [infile]
 If output file is specified, [infile] can be a directory of DAT files.
 For example: `/b=\datdir*.dat /l=hpil.lif`
- DAT file to P41 file
`/d=infile<.dat> /p<=outfile.p41> <name>`

 P41 name = <name> or [infile]
- DAT file to RAW file (remove 2-byte header)
`/d=infile<.dat> /r<=outfile.raw> </k>`

 Use /k option to exclude checksum and trailer bytes in RAW file.
- DAT file to BIN file
`/d=infile<.dat> /b<=outfile.bin>`
- DAT file to TXT file (De-compiler)
`/d=infile<.dat> /t<=outfile.txt> </n> </x>`

De-compiler Options:

```
/a - append text using: [ "|-text" ], instead of: [ ">text" ]
/n - generate line numbers
/x - use [ XROM mm,ff ] for all XROM Functions
/x23 - use [ XROM 23,ff ]: [ XROM 23,1 ], instead of [ COPYFL ]
/x25 - use [ XROM 25,ff ]: [ XROM 25,46 ], instead of [ X<>F ]
/x26 - use [ XROM 26,ff ]: [ XROM 26,10 ], instead of [ CLOCK ]
/x28 - use [ XROM 28,ff ]: [ XROM 28,27 ], instead of [ AUTOIO ]
```

TXT Format (Compiler)

Command-line Options:

- /n – ignore line numbers in text file: [100 STO 00]
- /g – global alpha label for ["A..J", "a..e"] if in quotes: [XEQ "A"]

Usage:

Optional parameters are surrounded by <>

- TXT file(s) to LIF file
 /t=infile<.txt> /l=<outfile.lif> <name>

 LIF name = <name> or [infile]
 If output file is specified, [infile] can be a directory of TXT files.
 For example: /t=\txtmdir*.txt /l=hpil.lif </n> </g>
- TXT file to P41 file
 /t=infile<.txt> /p=<outfile.p41> <name> </n> </g>

 P41 name = <name> or [infile]
- TXT file to RAW file (remove 2-byte header)
 /t=infile<.txt> /r=<outfile.raw> </k> </n> </g>

 Use /k option to exclude checksum and trailer bytes in RAW file.
- TXT file to BIN file
 /t=infile<.txt> /b=<outfile.bin> </n> </g>
- TXT file to DAT file (hex digits in ASCII format)
 /t=infile<.txt> /d=<outfile.dat> </n> </g>

HP41UC

Compiler Rules

- Prefixes are case-insensitive: [rcl 00] same as [RCL 00]
- Postfixes are case-sensitive: [lbl a] different from [lbl A]
- Append text is allowed with: [>"text"], ["-text"], or ["\-text"],
- Synthetic instructions are allowed: [rcl M], [sto R]
- Synthetic NOP (TEXT0) is allowed using an empty (just quotes) text line: [""]
- Synthetic text is allowed with C-style esc-sequences: ["\x0D\x0A"]
- Comments are allowed preceded by ";" or "#": [; comment]
- Functions from external modules recognized: ExtFunc/Time, HP-IL, ExtI/O, HP-IL Dev, Plotter, and Wand. All others supported with [XROM mm,ff]
- Key assignment for global labels are supported: [lbl "label" Key: 15]
- Multiple instructions per line are allowed if separated by comma+space: [RCL 00, STO 01]

Recognized C-style Escape Sequences within text, in quotes: [" ...\Esc..."]

Esc-Sequence	Code/Character	Description
\a	0x07	Alert Bell
\b	0x08	Backspace
\f	0x0C	Form Feed
\n	0x0A	Newline
\r	0x0D	Return
\t	0x09	Horizontal Tab
\v	0x0B	Vertical Tab
\?	?	Question Mark
\'	'	Single Quote
\"	"	Double Quote
\\	\	Backslash
\xhh, \hh	0xhh	h = Hex digit (0-9, A-F, a-f)

NOTE: For simplicity, the Octal ("\ooo") esc-sequence is not supported.

De-compiler Notes

- Empty alpha strings are commented for clarification:

```
"" ;F0 (single-byte synthetic NOP)
GTO "" ;1D F0
XEQ "" ;1E F0
```

- Spare instructions generate a comment-line showing the compiled hex codes:
;GTO IND __ (SPARE) ;AF,45
- Non-printable characters (0x00, 0x07..0x0A, 0x0D, 0x1A, 0x1B, 0xFF) within strings generate an esc-sequence, and a comment with a "J" symbol (0x04, ASCII <EOT>).
"Text\x0D\x0A" ; "TextJ"
LBL "abc\x07fg" ; "abcJfg"

Note: This allows the produced text to be re-compiled using the embedded esc-sequence.

- Global-alpha labels with key assignments generate a comment:
LBL "label" ; Key: -15 (label assigned to shift-LN key).

Barcode Generator

References:

HP document 85153-90019: *Creating Your Own HP-41 Barcode*

A HP-41 Bar Code Decoder:

<http://www.mh-aerotools.de/hp/bc-reader/BarcodeReader.pdf>

Usage:

Optional parameters are surrounded by <>

- RAW file to PCL (HP raster graphics) file
`/r=infile<.raw> /h=<outfile.pcl> <"Program Title">`

To print the barcode, copy the output file to the printer device; for example:

➤ `hp41uc /r=prog.raw /h "Program Title"`

On a DOS-compatible PC:

➤ `copy /b prog.pcl lpt1`

On a standard Windows PC:

➤ `copy /b prog.pcl "\\Computer Name\Printer Name"`

See [Printing Barcode Files on a Windows PC](#) below.

- RAW file to Postscript file
`/r=infile<.raw> /s=<outfile.ps> <"Program Title">`

To print the barcode, copy the output file to the printer device; for example:

➤ `hp41uc /r=prog.raw /s "Program Title"`

On a DOS-compatible PC:

➤ `copy /b prog.ps lpt1`

On a standard Windows PC:

➤ `copy /b prog.ps "\\Computer Name\Printer Name"`

See [Printing Barcode Files on a Windows PC](#) below.

- RAW file to Wand (barcode) file
`/r=infile<.raw> /w=<outfile.wnd> <"Program Title">`

The output file will be a 16-byte per row hex-dump in readable text format.

Printing Barcode Files on a Windows PC

- Enable "Sharing" on "Printer properties".
- Refer to the [Send PRN File to Printer](#) article on *Technipages*.
- Consider using the freeware [PrintFile](#) utility.

HP41UC

Shuttle Disk Transfers

Required Hardware

- HP-IL module for the HP-41
- 9114 HP-IL disc drive
- 720K (dual-density) diskettes

For more reliable results use single-sided, dual-density disks.

Required PC Software

- LIFUTIL

See [References](#) section at the end of this document.



Figure 1. Shuttle Disk Transfers

Notes on LIFUTIL

Since LIFUTIL expects a Volume label in the media, and the HP-41 format function (NEWM) does not create a volume label, it is recommended that disks be formatted on the PC using LIFUTIL. If you have problems reading a disk formatted on the PC try changing the BIOS setting for the drive from 1.44M to 720K.

An alternate solution is to format the disk from the calculator with the 9114 drive. In this case, you must create a volume label for the disk. This issue was addressed in the PPC Journal article: "The Volume Label", V14N2 Feb 1987, by Cristian Rusquelles. For more information, refer to the program listing included in [Appendix B](#) of this document.

HP41UC

PC to HP-41 Shuttle Transfer

Let's say you've downloaded some P41 files from the internet, and want to transfer the programs in those files to your calculator using a Shuttle Disk:

1. Remove the 32-byte header from each of the P41 files, and make a note of the LIF directory information in the header (name, size, etc):

➤ `hp41uc /p=infile.p41 /r=outfile.raw`

HP41UC will remove the 32-byte header, and will display the LIF directory information.

2. Transfer each program, to the Shuttle Disk using LIFUTIL. For more information, refer to Dan McDonald's article listed in the [References](#) section at the end of this document.
3. Insert the shuttle disk in the 9114 disc drive, and then read the program from the calculator using the READP function. Be sure to match the program name exactly as saved by LIFUTIL, as the name is case-sensitive.

HP-41 to PC Shuttle Transfer

Let's say you have a program on the calculator that you want to edit on a PC, and then transfer back to the calculator using the previous procedure:

1. Calculate the program size in bytes. On a HP-41CX, you can simply use the CATALOG 1 function, watching for the number listed at the "END" indicator of your program. For other machines refer to a discussion on this subject in Chapter 5 of "HP-41 Extended Functions Made Easy" by Keith Jarett. This is a well-documented subject covered by many other HP-41 books and articles.

2. Copy the program to the Shuttle Disk using the WRTP function.

3. Insert the Shuttle Disk on the PC diskette drive, and extract the program using LIFUTIL. The output file should be a RAW file with a size of multiple 256-byte blocks. For example, a 56-byte program will be extracted as a 256-byte RAW file.

4. If you're interested in sharing the program, you may convert the file to P41 format:
➤ `hp41uc /r=infile.raw /p=outfile.p41 NAME`

The optional [NAME] parameter will be the name used in creating the 32-byte LIF directory header. If [NAME] is not specified, the input (RAW) filename is used (with all CAPS).

5. To edit the program on the PC, you need to de-compile it:
➤ `hp41uc /r=infile.raw /t=outfile.txt`

If you'd like to print it, you may want to add the [/n] option to generate line numbers:

➤ `hp41uc /r=infile.raw /t=outfile.txt /n`

6. Compile the program to a RAW file that can be used by LIFUTIL:
➤ `hp41uc /t=infile.txt /r=outfile.raw`

HP41UC

HP41UC will display the LIF information required by LIFUTIL (name, size, etc).

Note: If you added line numbers to your de-compiled file, you must alert the compiler to ignore line numbers by using the [/n] option:

➤ `hp41uc /t=infile.txt /r=outfile.raw /n`

7. To transfer the compiled program to the calculator using LIFUTIL, simply go to step #2 of the previous [PC to HP-41 Shuttle Transfer](#) procedure.

Direct Link Transfers

Required Hardware

- HP-IL module for the HP-41
- 82973A (or compatible) - HP-IL Card for the PC

Required PC Software

- Trans41, DOSLink, or other HP-IL transfer software.
See [References](#) section at the end of this document.

Note: Contrary to popular belief, a fast PC can be used with an HP-IL card. The requirement for a slow PC, as the original IBM AT, is strictly a software limitation (timing loops that are CPU-speed dependent) with most HP-IL transfer programs, but it is not an issue with Trans41.

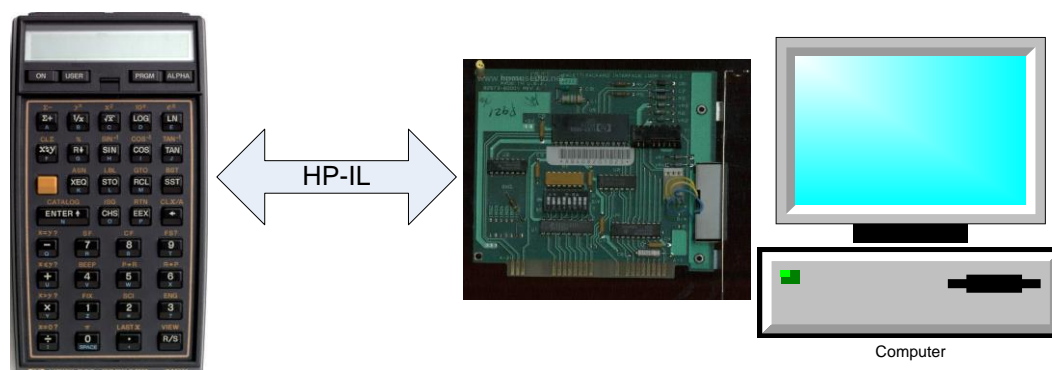


Figure 2. Direct Link Transfers

HP41UC

PC to HP-41 Trans41Transfer

Assuming that you have created a LIF file for your program (e.g., test.lif), you can transfer it to the calculator with the following procedure:

1. Over-write Trans41's transfer file with the created LIF file:

- `copy test.lif hpside1.pak`

You may also rename the existing transfer file to save its contents:

- `rename hpside1.pak backup1.pak`
- `rename test.lif hpside.pak`

Or you may simply over-write the transfer file in the compilation step:

- `hp41uc /t=test.txt /l=hpside1.pak`

2. Establish the HP-IL link in Trans41 using the HPSIDE1.PAK transfer file, and simply download the program using the READP function on the calculator!

PC to HP-41 Trans41 Transfer

Let's say you have a program on the calculator (e.g., TEST), that you want to edit on your PC, and later transfer back to the calculator.

1. Establish the HP-IL link with Trans41 using the HPSIDE1.PAK transfer file.
2. Upload the program to the PC using WRTP on the calculator. This will copy the program to HPSIDE1.PAK on the PC side.
3. Extract and de-compile the program from HPSIDE1.PAK:
 - `hp41uc /l=hpside1.pak /t=test.txt TEST`

Note: The program name is case-sensitive, and must match the ALPHA label used with WRTP.

4. Edit test.txt, and compile back it to a LIF file:
 - `hp41uc /t=test /l`

Note: In this case, HP41UC will create a default output file: test.lif, with a default LIF program name: TEST (input filename, with all CAPS).

The PIL-Box, an HP-IL <-> PC link solution

<http://www.jeffcalc.hp41.eu/hpil/index.html>

The PIL-Box is an HP-IL/USB translator. It uses NO OBSOLETE HP PARTS such as the HP-IL chip or the custom HP-IL pulse transformer. It aims to be an alternative to the old ISA HP-IL board (HP82973A) and to be compatible with most computers/OS that support USB.

HP41UC

Appendix A - 41UCC Compatibility

The following instructions are allowed by the HP41UC compiler for compatibility with 41UCC.

41UCC Format	HP41UC Format
10**X	10^X
APPEND, APPND, APND "Text"	>"Text"
CLSIGMA	CLS
D->R	D-R
E**X	E^X
E**X-1	E^X-1
ENTER^	ENTER
GOTO	GTO
P->R	P-R
R->D	R-D
R->P	R-P
SIGMA+	S+
SIGMA-	S-
SIGMAREG	SREG
STO*, STO/, STO+, STO-	ST*, ST/, ST+, ST-
T "Text String"	"Text String"
X!=0?, X<>0?	X#0?
X!=Y?, X<>Y?	X#Y?
X**2	X^2
Y**X	Y^X

Appendix B - Listing of "WL"

Copied from the PPC Journal article: "The Volume Label", V14N2 Feb 1987 - by Cristian Rusquelles.
Requires an Extended I/O module.

```
01 LBL "WL"
02 >"  " ; append 6 spaces
03 ASTO 00
04 LBL 00
05 AID
06 16
07 X=Y?
08 GTO 01
09 "NOT A DRIVE"
10 PROMPT
11 GTO 00
12 LBL 01
13 CLRDEV
14 3
15 DEVL
16 2
17 OUTXB
18 6
19 DEVL
20 "D"
21 ARCL 00
22 OUTAE
23 8
24 DEVL
25 END
```

Appendix C – References

Ulisse Quadri – For developing a user-friendly GUI for HP41UC

<http://www.ulisse.bs.it/museo/hp41/tutorial.htm>

Dan McDonald - For his article: "Ancient Data - Modern Machines:

Handling HP-IL Files on Today's PC", posted at the Museum of HP calculators under:

"HP-IL Files: Where, What, Why, How, etc.".

<http://www.hpmuseum.org/cgi-sys/cgiwrap/hpmuseum/articles.cgi>

Warren Furlow - For his work in support of the HP-41, and for his constructive feedback during the development of this project.

<http://www.hp41.org>.

LIFUTIL - Free-ware program provided by Hewlett Packard™.

See the [Shuttle Disk Transfers](#) section for a description of its use.

Distributed by Keysight Technologies:

<http://www.keysight.com/main/software.jsp?id=1000000786:epsg:sud&nid=-11143.0.00&lc=eng&cc=US>

Trans41 - HP-IL Transfer utility by Eclipse Logic Inc, and Tacit Logic Systems.

See the [Direct Link Transfers](#) section for a description of its use.

DOSLink - HP-IL Transfer utility by Southern Software.

Requires the use of a slow PC (AT compatible: 286/16MHz).

Can be used as described with Trans41, except it uses a transfer file called HPILDISC, instead of HPSIDE1.PAK.

41UCC - User-code compiler written by Leslie Brooks & Jim De Arras.

Distributed by Hand Held Products, Inc.

A Program Byte Counter - "HP-41 Extended Functions Made Easy", by Keith Jarett.

Chapter 5, page 97.

Listing of "WL" - PPC Journal article: "The Volume Label", V14N2 Feb 1987, by Cristian Rusquelles.

The PIL-Box, an HP-IL <-> PC link solution

<http://www.jeffcalc.hp41.eu/hpil/index.html>

Trademarks

HP-41 and PCL3 are trademarks of the Hewlett Packard Company.

Postscript is a trademark of Adobe Systems Incorporated.
