



R503Pro Fingerprint Module User Manual



Hangzhou Grow Technology Co., Ltd.

2023.08 Ver: 1.1

Preface & Declaration

Thank you for your selection of R503Pro Fingerprint Identification Module of GROW.

The Manual is targeted for hardware & software development engineer, covering module function, hardware and software interface etc. To ensure the developing process goes smoothly, it is highly recommended the Manual is read through carefully.

Because of the products constantly upgraded and improved, module and the manual content may be changed without prior notice. If you want to get the latest information, please visit our company website (www.hzgrow.com).

We have been trying our best to ensure you the correctness of the Manual. However, if you have any question or find error, feel free to contact us or the authorized agent. We would be very grateful.

The Manual contains proprietary information of Hangzhou Grow Technology Co., Ltd., which shall not be used by or disclosed to third parties without the permission of GROW, nor for any reproduction and alteration of information without any associated warranties, conditions, limitations, or notices.

No responsibility or liability is assumed by GROW for the application or use, nor for any infringements of patents or other intellectual property rights of third parties that may result from its use.

www.hzgrow.com

Revised Version

Version Number	Date	Revise Content	Modifier
V1.1	2023.08	Create a new version	Grow Tech

Catalog

I	Introduction	- 1 -
	Operation Principle	- 1 -
II	Hardware Interface	- 2 -
	Exterior Interface	- 2 -
	Serial Communication	- 3 -
	Hardware Connection	- 3 -
	Serial communication protocol	- 3 -
	Power-on delay time	- 4 -
	Power Supply Requirements	- 4 -
	Ripple noise	- 4 -
III	System Resources	- 5 -
	Notepad	- 5 -
	Buffer	- 5 -
	Fingerprint Library	- 5 -
	System Configuration Parameters	- 5 -
	Baud rate control (Parameter Number: 4)	- 6 -
	Security Level (Parameter Number: 5)	- 6 -
	Data package length (Parameter Number: 6)	- 6 -
	System status register	- 6 -
	Module password	- 6 -
	Module address	- 6 -
	Random number generator	- 7 -
	Features and templates	- 7 -
IV	Communication Protocol	- 8 -
	Data package format	- 8 -
	Instruction Table	- 9 -
	Check and acknowledgement of data package	- 9 -
V	Module Instruction System	- 11 -
	System-related instructions	- 11 -
	Verify password VfyPwd	- 11 -
	Set password SetPwd	- 11 -
	Set Module address SetAdder	- 12 -
	Set module system's basic parameter SetSysPara	- 12 -
	Read system Parameter ReadSysPara	- 13 -
	Read valid template number TemplateNum	- 13 -
	Read fingerprint template index table ReadIndexTable (0x1F)	- 14 -
	Get the algorithm library version GetAlgVer (0x39)	- 15 -
	Get the firmware version GetFwVer (0x3A)	- 15 -
	Fingerprint-processing instructions	- 16 -
	To collect finger image GetImg	- 16 -
	To upload image UpImage	- 16 -
	To download the image DownImage	- 17 -
	To generate character file from image GenChar	- 17 -
	To generate template RegModel	- 18 -

To upload template	UpChar	- 19 -
To download template	DownChar	- 19 -
To store template	Store	- 20 -
To read template from Flash library	LoadChar	- 21 -
To delete template	DeletChar	- 21 -
To empty finger library	Empty	- 22 -
To carry out precise matching of two finger templates	Match	- 22 -
To search finger library	Search	- 23 -
Cancel instruction	Cancel(0x30)	- 23 -
HandShake	HandShake (0x40)	- 24 -
Aura control	AuraLedConfig (0 x35)	- 24 -
Automatic registration template	AutoEnroll (0 x31)	- 25 -
Automatic fingerprint verification	AutoIdentify (0 x32)	- 28 -
Other instructions		- 30 -
To generate a random code	GetRandomCode	- 30 -
To read information page	ReadInfPage	- 30 -
To write note pad	WriteNotepad	- 31 -
To read note pad	ReadNotepad	- 31 -
VI Operation Process		- 33 -
6.1 Basic communication flow		- 33 -
6.1.1 Process of the UART command package		- 33 -
6.1.2 UART Packet Sending Process		- 34 -
6.1.3 UART packet receiving process		- 35 -
6.2 General instruction communication flow		- 36 -
6.2.1 General instruction register fingerprint process		- 36 -
6.2.2 General instruction verify fingerprint process		- 37 -
6.2.3 The fingerprint is obtained from the sensor and the feature is generated then upload to the main control		- 38 -
6.2.4 Read a specified template upload to Flash Fingerprint Database		- 39 -
6.2.5 The main control downloads a fingerprint feature and searches the fingerprint database based on the feature		- 40 -
6.3 Automatic Register Fingerprint		- 41 -
6.4 Automatic Fingerprint Verification(Search)		- 42 -
6.5 Low power standby		- 43 -
VII Reference Circuit		- 44 -

I Introduction

Power	R503Pro-UART: DC 3.3V R503Pro-USB: DC 5V	Interface	UART(3.3V TTL logical level)/USB
Working current (Fingerprint acquisition)	20mA	Matching Mode Matching Time	1:1 and 1:N 1:N<10ms/Fingerprint
Standby current (finger detection)	Typical touch standby voltage: 3.3V Average current: 2uA	Template size	512 bytes
Baud rate	(9600*N)bps, N=1~6 (default N=6)	Waterproof level	IP65
Image acquiring time	<0.2s	Image resolution	508dpi
Sensing Array	192*192 pixel	Detection Area	Diameter 15mm
Storage capacity	1500	Security level	3 (1, 2, 3, 4, 5(highest))
FAR	<0.001%	FRR	<1%
Generate feature point time	< 500ms	Starting time	≤50ms
Working environment	Temp: -20℃ - +60℃	Storage environment	Temp: -40℃ - +75℃
	RH: 10%-85%		RH: <85%

Operation Principle

Fingerprint processing includes two parts: fingerprint enrollment and fingerprint matching (the matching can be 1:1 or 1:N).

When enrolling, user needs to enter the finger two times. The system will process the two time finger images, generate a template of the finger based on processing results and store the template. When matching, user enters the finger through optical sensor and system will generate a template of the finger and compare it with templates of the finger library. For 1:1 matching, system will compare the live finger with specific template designated in the Module; for 1:N matching, or searching, system will search the whole finger library for the matching finger. In both circumstances, system will return the matching result, success or failure.

II Hardware Interface

Exterior Interface

Connector: SH1.0--6P

R503Pro have R503Pro-UART type and R503Pro-USB type.

R503Pro standard Size:

Thread:M25 Product external diameter: 28mm Inner diameter:25mm Height:19mm

Enclosure material: Zinc Alloy

(If need R503Pro-UART DC5V, M25-15mm size or M25-32mm size or M22-15mm size or black aluminium alloy enclosure, pls contact sales, support customized)




R503Pro-UART



R503Pro-USB

Serial Communication

Connector: SH1.0--6P

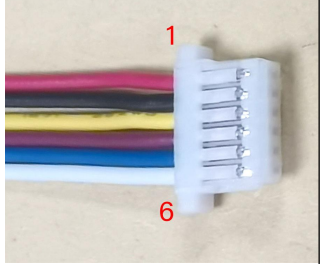Pin	Name	Description	Pic
1	Power Supply	R503Pro-UART: DC 3.3V	 <p>Note: The line order has nothing to do with color.</p>
2	GND	Signal ground. Connected to power ground.	
3	TXD	Data output. TTL logical level	
4	RXD	Data input. TTL logical level	
5	WAKEUP	Finger Detection Signal. Standby-high level, have finger-output low level.	
6	3.3VT	Touch induction power supply, DC3—5V	

Hardware Connection

The RX of the module is connected with the TX of the upper computer, and the TX of the module is connected with the RX of the upper computer. The IRQ signal can be connected with the middle fracture or IO port of the upper computer.

To reduce the system standby power consumption, when the upper computer needs to use the fingerprint module, then power on the main power supply of the fingerprint module. At this time, the fingerprint module is powered on, and complete the corresponding instructions sent by the upper computer. When the upper computer does not need to use the fingerprint module, disconnect the fingerprint module from the main power supply.


When the upper computer is in standby mode, in order to keep the finger touch detection, the touch power supply needs to be powered all the time. The working voltage of the touch power supply is 3V~5V, and the average current of the touch power supply is about 2uA. When there is no finger touch, the default touch sensing signal outputs high level; When a finger touches, the default touch sensing signal outputs low level. After detecting the touch sensing signal, the upper computer supplies power to the fingerprint module and the fingerprint module starts to work.

The maximum response time of the touch function is about 120ms @vt=3.3V. When the module is not touched, the recalibration period is about 4.0sec; the touch signal output is CMOS output, and the output voltage is roughly the same as the input voltage.

Serial communication protocol

The mode is semiduplex asynchronism serial communication. And the default baud rate is 57600bps. User may set the baud rate in 9600~115200bps.

Transferring frame format is 10 bit: the low-level starting bit, 8-bit data with the LSB first, and an ending bit. There is no check bit.

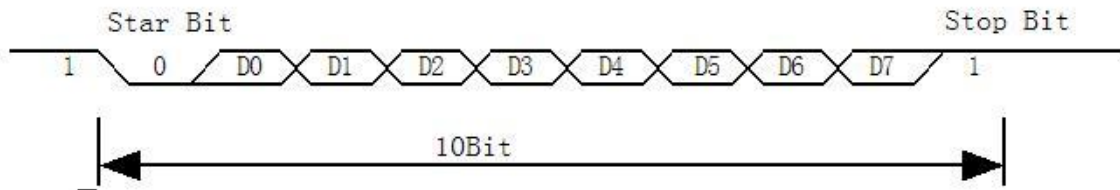

Power-on delay time

At power on, it takes about 50ms for initialization. During this period, the Module can't accept commands for upper computer. After completing the initialization, the module will immediately send a byte (0x55) to the upper computer, indicating that the module can work normally and receive instructions from the upper computer.

Power Supply Requirements

The power supply is DC +3.3V. The power input is allowed only after the R503Pro is properly connected.

Electrical components of the R503Pro may be damaged if you insert or remove the cable (with the electric plug) when the cable is live. Ensure that the power supply is switched off when you insert or remove the cable.

The R503Pro may not work properly due to poor power connections, short power off/on intervals, or excessive voltage drop pulses. So pls keep the power is stable. After the power is turned off, the power must be turned on at least two seconds later.

Ripple noise

Since the power input of R503Pro is directly supplied to the image sensor and decoding chip.

To ensure stable operation, pls use low ripple noise power input.

It is recommended that the ripple noise not exceed 50mV (peak-to-peak).

III System Resources

To address demands of different customer, Module system provides abundant resources at user's use.

Notepad

The system sets aside a 512-bytes memory (16 pages* 32 bytes) for user's notepad, where data requiring power-off protection can be stored. The host can access the page by instructions of PS_WriteNotepad and PS_Read Notepad.

Note: when write on one page of the pad, the entire 32 bytes will be written in wholly covering the original contents.

The user can run the module address or random number command to configure the unique matching between the module and the system. That is, the system identifies only the unique module. If a module of the same type is replaced, the system cannot access the system.

Buffer

The module RAM resources are as follows:

An ImageBuffer: ImageBuffer

6 feature buffers: CharBuffer[1:6]

All buffer contents are not saved without power.

The user can read and write any buffer by instruction. CharBuffer can be used to store normal feature files or store template feature files.

When uploading or downloading images through the UART port, only the high four bits of pixel bytes are used to speed up the transmission, that is, use gray level 16, two pixels are combined into one byte. (The high four bits are a pixel, the low four bits are a pixel in the next adjacent column of the same row, that is, two pixels are combined into one byte and transmitted)

Since the image has 16 gray levels, when it is uploaded to PC for display (corresponding to BMP format), the gray level should be extended (256 gray levels, that is, 8bit bitmap format).

Fingerprint Library

System sets aside a certain space within Flash for fingerprint template storage, that's fingerprint library. The contents of the fingerprint database are protected by power-off, and the serial number of the fingerprint database starts from 0.

Capacity of the library changes with the capacity of Flash, system will recognize the latter automatically. Fingerprint template's storage in Flash is in sequential order. Assume the fingerprint capacity N, then the serial number of template in library is 0, 1, 2, 3 ... N. User can only access library by template number.

System Configuration Parameters

The system allows the user to individually modify a specified parameter value (by parameter serial

number) by command. Refer to *SetSysPara*. After the upper computer sets the system parameter instructions, the system must be powered on again so that the module can work according to the new configuration.

Baud rate control (Parameter Number: 4)

The Parameter controls the UART communication speed of the Module. Its value is an integer N, $N = [1/2/4/6/12]$. Corresponding baud rate is $9600 * N$ bps.

Security Level (Parameter Number: 5)

The Parameter controls the matching threshold value of fingerprint searching and matching. Security level is divided into 5 grades, and corresponding value is 1, 2, 3, 4, 5. At level 1, FAR is the highest and FRR is the lowest; however at level 5, FAR is the lowest and FRR is the highest.

Data package length (Parameter Number: 6)

The parameter decides the max length of the transferring data package when communicating with upper computer. Its value is 0, 1, 2, 3, corresponding to 32 bytes, 64 bytes, **128 bytes**, 256 bytes respectively.

System status register

System status register indicates the current operation status of the Module. Its length is 1 word, and can be read via instruction *ReadSysPara*. Definition of the register is as follows:

Bit Num	15	4	3	2	1	0
Description	Reserved		ImgBufStat	PWD	Pass	Busy

Note:

Busy: 1 bit. 1: system is executing commands; 0: system is free;

Pass: 1 bit. 1: find the matching finger; 0: wrong finger;

PWD: 1 bit. 1: Verified device's handshaking password.

ImgBufStat: 1 bit. 1: image buffer contains valid image.

Module password

The default password of the module is 0x00000000. If the default password is modified, after the module is powered on, the first instruction of the upper computer to communicate with the module must be verify password. Only after the password verification is passed, the module will enter the normal working state and receive other instructions.

The new modified password is stored in Flash and remains at power off. (the modified password cannot be obtained through the communication instruction. If forgotten by mistake, the module cannot communicate, please use with caution)

Refer to instruction *SetPwd* and *VfyPwd*.

Module address

Each module has an identifying address. When communicating with upper computer, each instruction/data is transferred in data package form, which contains the address item. Module



system only responds to data package whose address item value is the same with its identifying address.

The address length is 4 bytes, and its default factory value is 0xFFFFFFFF. User may modify the address via instruction *SetAddr*. The new modified address remains at power off.

Random number generator

Module integrates a hardware 32-bit random number generator (RNG) (without seed). Via instruction *GetRandomCode*, system will generate a random number and upload it.

Features and templates

The chip has one image buffer and six feature file buffers, all buffer contents are not saved after power failure.

A template can be composed of 2-6 feature files. The more feature files in the synthesis template, the better the quality of the fingerprint template.

It is recommended to take at least four templates to synthesize features.

IV Communication Protocol

The protocol defines the data exchanging format when R503Pro series communicates with upper computer. The protocol and instruction sets applies for both UART communication mode.

Baud rate 57600, data bit 8, stop bit 1, parity bit none.

Data package format

When communicating, the transferring and receiving of command/data/result are all wrapped in data package format. For multi-bytes, the high byte precedes the low byte (for example, a 2 bytes 00 06 indicates 0006, not 0600).

Data package format

Header	Adder	Package identifier	Package length	Package content (instruction/data/Parameter)	Checksum
--------	-------	--------------------	----------------	--	----------

Definition of Data package

Name	Symbol	Length	Description	
Header	Start	2 bytes	Fixed value of 0xEF01; High byte transferred first.	
Adder	ADDER	4 bytes	Default value is 0xFFFFFFFF, which can be modified by command. High byte transferred first and at wrong adder value, module will reject to transfer.	
Package identifier	PID	1 byte	01H	Command packet;
			02H	Data packet; Data packet shall not appear alone in executing process, must follow command packet or acknowledge packet.
			07H	Acknowledge packet;
			08H	End of Data packet.
Package length	LENGTH	2 bytes	Refers to the length of package content (command packets and data packets) plus the length of Checksum(2 bytes). Unit is byte. Max length is 256 bytes. And high byte is transferred first.	
Package contents	DATA	—	It can be commands, data, command' s parameters, acknowledge result, etc. (fingerprint character value, template are all deemed as data);	
Checksum	SUM	2 bytes	The arithmetic sum of package identifier, package length and all package contents. Overflowing bits are omitted. high byte is transferred first.	

Instruction Table

Code	Identifier	Description	Code	Identifier	Description
01H	GenImg	Collect finger image	12H	SetPwd	To set password
02H	Img2Tz	To generate character file from image	13H	VfyPwd	To verify password
03H	Match	Carry out precise matching of two templates;	14H	GetRandomCode	to get random code
04H	Search	Search the finger library	15H	SetAdder	To set device address
05H	RegModel	To combine character files and generate template	16H	ReadInfPage	Read information page
06H	Store	To store template;	18H	WriteNotepad	to write note pad
07H	LoadChar	to read/load template	19H	ReadNotepad	To read note pad
08H	UpChar	to upload template	1DH	TemplateNum	To read finger template numbers
09H	DownChr	to download template	1FH	ReadIndexTable	Read-fingerprint template index table
0AH	UpImage	To upload image	0x30	Cancel	Cancel instruction
0BH	DownImage	To download image	0x40	HandShake	HandShake
0CH	DeletChar	to delete templates	0x39	GetAlgVer	Get the algorithm library version
0DH	Empty	to empty the library	0x3A	GetFwVer	Get the firmware version
0EH	SetSysPara	To set system Parameter	0x35	Aura control	AuraLedConfig
0FH	ReadSysPara	To read system Parameter	0x31	AutoEnroll	Automatic registration template
			0x32	AutoIdentify	Automatic fingerprint verification

Check and acknowledgement of data package

Note: Commands shall only be sent from upper computer to the Module, and the Module acknowledges the commands.

Upon receipt of commands, Module will report the commands execution status and results to upper computer through acknowledge packet. Acknowledge packet has parameters and may also have following data packet. Upper computer can't ascertain Module's package receiving status or command execution results unless through acknowledge packet sent from Module. Acknowledge packet includes 1 byte confirmation code and maybe also the returned parameter.

Confirmation code's definition is :

00h: command execution complete;

01h: error when receiving data package;

02h: no finger on the sensor;

03h: fail to enroll the finger;

06h: fail to generate character file due to the over-disorderly fingerprint image;

07h: fail to generate character file due to lackness of character point or over-smallness of

fingerprint image

08h: finger doesn't match;

09h: fail to find the matching finger;

0Ah: fail to combine the character files;

0Bh: addressing PageID is beyond the finger library;

0Ch: error when reading template from library or the template is invalid;

0Dh: error when uploading template;

0Eh: Module can't receive the following data packages.

0Fh: error when uploading image;

10h: fail to delete the template;

11h: fail to clear finger library;

13h: wrong password!

15h: fail to generate the image for the lackness of valid primary image;

18h: error when writing flash;

19h: No definition error;

20h: the address code is incorrect;

21h: password must be verified;

22h: fingerprint template is empty;

24h: fingerprint library is empty;

26h: timeout

27h: fingerprints already exist;

29h: sensor hardware error;

1Ah: invalid register number;

1Bh: incorrect configuration of register;

1Ch: wrong notepad page number;

1Dh: fail to operate the communication port;

1Fh: fingerprint library is full;

FCh: unsupported command;

FDh: hardware error;

FEh: command execution failure;

others: system reserved;

V Module Instruction System

System-related instructions

Verify password VfyPwd

Description: Verify Module's handshaking password.

Input Parameter: PassWord (4 bytes)

Return Parameter: Confirmation code (1 byte)

Instruction code: 13H

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	4 byte	2 bytes
Header	Module address	Package identifier	Package Length	Instruction code	Password	Checksum
0xEF01	xxxx	01H	0007H	13H	PassWord	sum

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package Length	Confirmation code	Checksum
0xEF01	xxxx	07H	0003H	xxH	sum

Note: Confirmation code = 00H: Correct password;

Confirmation code = 01H: error when receiving package;

Confirmation code = 13H: Wrong password;

Set password SetPwd

Description: Set Module's handshaking password.

Input Parameter: PassWord (4 bytes)

Return Parameter: Confirmation code (1 byte)

Instruction code: 12H

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	4 byte	2 bytes
Header	Module address	Package identifier	Package length	Instruction code	Password	Checksum
0xEF01	xxxx	01H	0007H	12H	PassWord	sum

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package Length	Confirmation code	Checksum
0xEF01	xxxx	07H	0003H	xxH	sum

Note: Confirmation code=00H: password setting complete;

Confirmation code=01H: error when receiving package;

Confirmation code=21H: have to verify password

Confirmation code=18H: error when write FLASH

Set Module address SetAdder

Description: Set Module address.

Input Parameter: Addr

Return Parameter: Confirmation code (1 byte)

Instruction code: 15H

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	4 bytes	2 bytes
Header	Original Module address	Package identifier	Package length	Instruction code	New Module address	Checksum
0xEF01	xxxx	01H	0007H	15H	Addr	sum

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	New Module address	Package identifier	Package length	Confirmation code	Checksum
0xEF01	xxxx	07H	0003H	xxH	Sum

Note: Confirmation code=00H: address setting complete;

Confirmation code=01H: error when receiving package;

Confirmation code=18H: error when write FLASH

Set module system's basic parameter SetSysPara

Description: Operation parameter settings.

Input Parameter: Parameter number+Contents

Return Parameter: Confirmation code (1 byte)

Instruction code: 0eH

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	1byte	1byte	2 bytes
Header	Module address	Package identifier	Package length	Instruction code	Parameter number	Contents	Checksum
0xEF01	Xxxx	01H	0005H	0eH	4/5/6	xx	sum

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Confirmation code	Checksum
0xEF01	Xxxx	07H	0003H	xxH	Sum

Note: Confirmation code=00H: parameter setting complete;

Confirmation code=01H: error when receiving package;

Confirmation code=1aH: wrong register number;

Confirmation code=18H: error when write FLASH

Name	Parameter number	Content
Baud rate	4	Data range:1, 2/4/6/12, indicates that baud rate is 9600 * N bps
Security level	5	Data range: 1, 2, 3, 4, 5
Packet content length	6	Data range: 0, 1, 2, 3 the corresponding lengths (bytes) are as follows: 32, 64, 128, 256

Read system Parameter ReadSysPara

Description: Read Module's status register and system basic configuration parameters;

Input Parameter: none

Return Parameter: Confirmation code (1 byte) + basic parameter (16bytes)

Instruction code: 0fH

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Instruction code	Checksum
0xEF01	Xxxx	01H	0003H	0fH	0013H

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	16 bytes	2 bytes
Header	Module address	Package identifier	Package length	Confirmation code	Basic parameter list	Checksum
0xEF01	xxxx	07H	0013H	xxH	See following table	sum

Note: Confirmation code=00H: read complete;

Confirmation code=01H: error when receiving package;

Confirmation code=18H: error when write FLASH

Name	Description	Offset (word)	Size (word)
Status register	Contents of system status register	0	2
System identifier code	Fixed value: 0x0000	1	2
Finger library size	Finger library size	2	2
Security level	Security level (1, 2, 3, 4, 5)	3	2
Device address	32-bit device address	4	4
Data packet size	Size code (0, 1, 2, 3)	6	2
Baud settings	N (baud = 9600*N bps)	7	2

Read valid template number TemplateNum

Description: read the current valid template number of the Module

Input Parameter: none

Return Parameter: Confirmation code (1 byte), template number:N

Instruction code: 1dH

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Instruction code	Checksum
0xEF01	xxxx	01H	0003H	1dH	0021H

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes	2 bytes
Header	Module address	Package identifier	Package length	Confirmation code	Template number	Checksum
0xEF01	xxxx	07H	0005H	xxH	Num	sum

Note: Confirmation code=0x00: read success;

Confirmation code=0x01: error when receiving package;

Read fingerprint template index table

ReadIndexTable (0x1F)

Description: Read the fingerprint template index table of the module, read the index table of the fingerprint template up to 256 at a time (32 bytes)

Input Parameter: Index page

Return Parameter: Confirmation code+Fingerprint template index table

Instruction code: 0x1F

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Instruction code	Index page	Checksum
0xEF01	xxxx	0x01	0x0004	0x1F	0/1/2/3	Sum

Index tables are read per page, 256 templates per page

Index page 0 means to read 0 ~ 255 fingerprint template index table

Index page 1 means to read 256 ~ 511 fingerprint template index table

Index page 2 means to read 512 ~ 767 fingerprint template index table

Index page 3 means to read 768 ~ 1023 fingerprint template index table

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	32 bytes	2 bytes
Header	Module address	Package identifier	Package length	Confirmation code	Index page	Check-sum
0xEF01	xxxx	0x07	0x0023	X	See the table below	sum

Note: Confirmation code=0x00: read complete;

Confirmation code=0x01: error when receiving package;

Index table structure: every 8 bits is a group, and each group is output starting from the high position.

transport order	The output is sequential from low byte to high byte, and each byte starts at a high byte.								
T[0]	Template number	7	6	5	4	3	2	1	0
	Index table data	0/1	0/1	0/1	0/1	0/1	0/1	0/1	0/1
T[1]	Template number	15	14	13	12	11	10	9	8

	Index table data	0/1	0/1	0/1	0/1	0/1	0/1	0/1	0/1
...	...								
T[31]	Template number	255	254	253	252	251	250	249	248
	Index table data	0/1	0/1	0/1	0/1	0/1	0/1	0/1	0/1

Data "0" in the index table means that there is no valid template in the corresponding position;"1" means that there is a valid template in the corresponding position.

Get the algorithm library version GetAlgVer (0x39)

Description: Get the algorithm library version

Input Parameter: none

Return Parameter: Confirmation code+AlgVer(algorithm library version string)

Instruction code: 0x39

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Instruction code	Checksum
0xEF01	xxxx	0x01	0x0003	0x39	003DH

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	32 byte	2 bytes
Header	Module address	Package identifier	Package length	Confirmation code	Algorithm library version	Checksum
0xEF01	xxxx	0x07	0x0023	X	AlgVer	sum

Note 1: Confirmation code=0x00: success;

Confirmation code=0x01: error when receiving package;

Get the firmware version GetFwVer (0x3A)

Description: Get the firmware version

Input Parameter: none

Return Parameter: Confirmation code+FwVer(Firmware version string)

Instruction code: 0x3A

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Instruction code	Checksum
0xEF01	xxxx	0x01	0x0003	0x3A	003EH

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	32 bytes	2 bytes
Header	Module address	Package identifier	Package length	Confirmation code	Firmware version	Checksum
0xEF01	xxxx	0x07	0x0023	X	FwVer	sum

Note 1: Confirmation code=0x00: success;

Confirmation code=0x01: error when receiving package;

Fingerprint-processing instructions

To collect finger image **GetImg**

Description: detecting finger and store the detected finger image in ImageBuffer while returning successfully confirmation code; If there is no finger, returned confirmation code would be “can’t detect finger”.

Input Parameter: none

Return Parameter: Confirmation code (1 byte)

Instruction code: 01H

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Instruction code	Checksum
0xEF01	Xxxx	01H	0003H	01H	0005H

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Confirmation code	Checksum
0xEF01	Xxxx	07H	0003H	xxH	Sum

Note: Confirmation code=00H: finger collection success;

Confirmation code=01H: error when receiving package;

Confirmation code=02H: can’t detect finger;

Confirmation code=03H: fail to collect finger;

To upload image **UpImage**

Description: to upload the image in Img_Buffer to upper computer.

Input Parameter: none

Return Parameter: Confirmation code (1 byte)

Instruction code: 0aH

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Instruction code	Checksum
0xEF01	Xxxx	01H	0003H	0aH	000eH

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Confirmation code	Checksum
0xEF01	Xxxx	07H	0003H	xxH	sum

Note 1: Confirmation code=00H: ready to transfer the following data packet;

Confirmation code=01H: error when receiving package;

Confirmation code=0fH: fail to transfer the following data packet;

2. The upper computer sends the command packet, the module sends the acknowledge packet first, and then sends several data packet.

3. Packet Bytes N is determined by Packet Length. The value is 128 Bytes before delivery.

Data package format:

2 bytes	4bytes	1 byte	2 bytes	N byte	2 bytes
Header	Module address	Package identifier	Package length	Package content	Checksum
0xEF01	xxxx	0x02- have following packet 0x08 - end packet	N+2	Image data	sum

To download the image DownImage

Description: to download image from upper computer to Img_Buffer.

Input Parameter: none

Return Parameter: Confirmation code (1 byte)

Instruction code: 0bH

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Instruction code	Checksum
0xEF01	Xxxx	01H	0003H	0bH	000fH

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Confirmation code	Checksum
0xEF01	Xxxx	07H	0003H	xxH	sum

Note: 1: Confirmation code=00H: ready to transfer the following data packet;

Confirmation code=01H: error when receiving package;

Confirmation code=0eH: fail to transfer the following data packet;

2.The upper computer sends the command packet, the module sends the acknowledge packet first, and then sends several data packet.

3.Packet Bytes N is determined by Packet Length. The value is 128 Bytes before delivery.

Data package format:

2 bytes	4bytes	1 byte	2 bytes	N byte	2 bytes
Header	Module address	Package identifier	Package length	Package content	Checksum
0xEF01	xxxx	0x02- have following packet 0x08 - end packet	N+2	Image data	sum

To generate character file from image GenChar

Description: to generate character file from the original finger image in ImageBuffer

Input Parameter: BufferID (character file buffer number)

Return Parameter: Confirmation code (1 byte)

Instruction code: 02H

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Instruction code	Buffer number	Checksum
0xEF01	xxxx	01H	0004H	02H	CharBuffer ID	sum

CharBufferID: Character buffer number, range 1-6.

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Confirmation code	Checksum
0xEF01	xxxx	07H	0003H	XxH	sum

Note: Confirmation code=00H: generate character file complete;

Confirmation code=01H: error when receiving package;

Confirmation code=06H: fail to generate character file due to the over-disorderly fingerprint image;

Confirmation code=07H: fail to generate character file due to lackness of character point or over-smallness of fingerprint image;

Confirmation code=15H: fail to generate the image for the lackness of valid primary image;

To generate template **RegModel**

Description: To combine information of character files from CharBuffer1 and CharBuffer2 and generate a template which is stored back in both CharBuffer1 and CharBuffer2.

Input Parameter: none

Return Parameter: Confirmation code (1 byte)

Instruction code: 05H

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Instruction code	Checksum
0xEF01	xxxx	01H	0003H	05H	0009H

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Confirmation code	Checksum
0xEF01	xxxx	07H	0003H	xxH	sum

Note: Confirmation code=00H: operation success;

Confirmation code=01H: error when receiving package;

Confirmation code=0aH: fail to combine the character files. That's, the character files don't belong to one finger.

To upload template UpChar

Description: Upload the data in the template buffer ModelBuffer to the upper computer.

Input Parameter: CharBufferID

Return Parameter: Confirmation code (1 byte)

Instruction code: 08H

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Instruction code	Buffer number	Checksum
0xEF01	xxxx	01H	0004H	08H	CharBuffer ID	sum

Note: This command don't need to use the CharBufferID, so the CharBufferID can be any value between 1 and 6.

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Confirmation code	Checksum
0xEF01	xxxx	07H	0003H	xxH	sum

Note 1: Confirmation code=00H: ready to transfer the following data packet;

Confirmation code=01H: error when receiving package;

Confirmation code=0dH: error when uploading template;

Confirmation code=0fH: can not receive the following data packet

4. The upper computer sends the command packet, the module sends the acknowledge packet first, and then sends several data packet.

5. Packet Bytes N is determined by Packet Length. The value is 128 Bytes before delivery.

6: The instruction doesn't affect buffer contents.

Data package format:

2 bytes	4bytes	1 byte	2 bytes	N byte	2 bytes
Header	Module address	Package identifier	Package length	Package content	Checksum
0xEF01	xxxx	0x02- have following packet 0x08 - end packet	N+2	Template data	sum

To download template DownChar

Description: upper computer download template to module buffer

Input Parameter: CharBufferID (Buffer number)

Return Parameter: Confirmation code (1 byte)

Instruction code: 09H

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	1 byte	2 bytes
Header	Module	Package	Package	Instruction	Buffer number	Checksum

	address	identifier	length	code		
0xEF01	xxxx	01H	0004H	09H	CharBufferID	sum

Note: This command don't need to use the CharBufferID, so the CharBufferID can be any value between 1 and 6.

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Confirmation code	Checksum
0xEF01	xxxx	07H	0003H	xxH	sum

Note 1: Confirmation code=00H: ready to transfer the following data packet;

Confirmation code=01H: error when receiving package;

Confirmation code=0eH: can not receive the following data packet

Data package format:

2 bytes	4bytes	1 byte	2 bytes	N byte	2 bytes
Header	Module address	Package identifier	Package length	Package content	Checksum
0xEF01	xxxx	0x02- have following packet 0x08 - end packet	N+2	Template data	sum

Note 2. The upper computer sends the command packet, the module sends the acknowledge packet first, and then sends several data packet.

3.Packet Bytes N is determined by Packet Length. The value is 128 Bytes before delivery.

4. The instruction doesn't affect buffer contents.

To store template Store

Description: to store the template of specified buffer (Buffer1/Buffer2) at the designated location of Flash library.

Input Parameter: CharBufferID, ModelID

Return Parameter: Confirmation code (1 byte)

Instruction code: 06H

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	1 byte	2 bytes	2 bytes
Header	Module address	Package identifier	Package length	Instruction code	buffer number	Location number	Checksum
0xEF01	xxxx	01H	0006H	06H	CharBuffer ID	ModelID	sum

Note: CharBufferID is filled with 0x01

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Confirmation code	Checksum
0xEF01	Xxxx	07H	0003H	xxH	sum

Note: Confirmation code=00H: storage success;
 Confirmation code=01H: error when receiving package;
 Confirmation code=0bH: addressing ModelID is beyond the finger library;
 Confirmation code=18H: error when writing Flash.

To read template from Flash library LoadChar

Description: to load template at the specified location (PageID) of Flash library to template buffer CharBuffer1/CharBuffer2

Input Parameter: CharBufferID, ModelID

Return Parameter: Confirmation code (1 byte)

Instruction code: 07H

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	1 byte	2 bytes	2 bytes
Header	Module address	Package identifier	Package length	Instruction code	buffer number	Page number	Checksum
0xEF01	xxxx	01H	0006H	07H	CharBuffer ID	ModelID	sum

Note: CharBufferID is filled with 0x01

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Confirmation code	Checksum
0xEF01	xxxx	07H	0003H	XxH	sum

Note: Confirmation code=00H: load success;
 Confirmation code=01H: error when receiving package;
 Confirmation code=0cH: error when reading template from library or the readout template is invalid;
 Confirmation code=0BH: addressing ModelID is beyond the finger library;

To delete template DeletChar

Description: to delete a segment (N) of templates of Flash library started from the specified location (or PageID);

Input Parameter: StartID + Num

Return Parameter: Confirmation code (1 byte)

Instruction code: 0cH

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes	2bytes	2 bytes
Header	Module address	Package identifier	Package length	Instruction code	Page number	number of templates to be deleted	Checksum
0xEF01	Xxxx	01H	0007H	0cH	StartID	Num	sum

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
---------	--------	--------	---------	--------	---------

Header	Module address	Package identifier	Package length	Confirmation code	Checksum
0xEF01	Xxxx	07H	0003H	xxH	sum

Note: Confirmation code=00H: delete success;

Confirmation code=01H: error when receiving package;

Confirmation code=10H: failed to delete templates;

Confirmation code=18H: error when write FLASH

To empty finger library Empty

Description: to delete all the templates in the Flash library

Input Parameter: none

Return Parameter: Confirmation code (1 byte)

Instruction code: 0dH

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Instruction code	Checksum
0xEF01	Xxxx	01H	0003H	0dH	0011H

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Confirmation code	Checksum
0xEF01	Xxxx	07H	0003H	xxH	sum

Note: Confirmation code=00H: empty success;

Confirmation code=01H: error when receiving package;

Confirmation code=11H: fail to clear finger library;

Confirmation code=18H: error when write FLASH

To carry out precise matching of two finger templates Match

Description: Compare the recently extracted character with the templates in the ModelBuffer, providing matching results.

Input Parameter: none

Return Parameter: Confirmation code (1 byte), matching score.

Instruction code: 03H

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Instruction code	Checksum
0xEF01	Xxxx	01H	0003H	03H	0007H

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes	2 bytes
Header	Module address	Package identifier	Package length	Confirmation code	Matching score	Checksum

0xEF01	Xxxx	07H	0005H	XxH	MatchScore	sum
--------	------	-----	-------	-----	------------	-----

Note 1: Confirmation code=00H: templates of the two buffers are matching!

Confirmation code=01H: error when receiving package;

Confirmation code=08H: templates of the two buffers aren't matching;

2: The instruction doesn't affect the contents of the buffers.

To search finger library Search

Description: to search the whole finger library for the template that matches the one in CharBuffer1 or CharBuffer2. When found, PageID will be returned.

Input Parameter: CharBufferID + StartID + Num

Return Parameter: Confirmation code+ModelID(template number)+ MatchScore

Instruction code: 04H

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	1 byte	2 bytes	2 bytes	2 bytes
Header	Module address	Package identifier	Package length	Instruction code	buffer number	Parameter	Parameter	Checksum
0xEF01	xxxx	01H	0008H	04H	CharBufferID	StartID	Num	sum

Note: CharBufferID is filled with 0x01

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes	2 bytes	2 bytes
Header	Module address	Package identifier	Package length	Confirmation code	Page	Score	Checksum
0xEF01	xxxx	07H	0007H	xxH	Model ID	MatchScore	sum

Note 1: Confirmation code=00H: found the matching finger;

Confirmation code=01H: error when receiving package;

Confirmation code=09H: No matching in the library (both the PageID and matching score are 0);

2: The instruction doesn't affect the contents of the buffers.

Cancel instruction Cancel(0x30)

Description: Cancel instruction

Input Parameter: none

Return Parameter: Confirmation code

Instruction code: 0x30

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Instruction code	Checksum
0xEF01	xxxx	0x01	0x0003	0x30	0034H

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Confirmation code	Checksum
0xEF01	xxxx	0x07	0x0003	X	sum

Note 1: Confirmation code=0x00: cancel setting successful

Confirmation code=other: cancel setting failed

HandShake HandShake (0x40)

Description: Send handshake instructions to the module. If the module works normally, the confirmation code 0x00 will be returned. The upper computer can continue to send instructions to the module. If the confirmation code is other or no reply, it means that the device is abnormal.

Input Parameter: none

Return Parameter: Confirmation code

Instruction code: 0x40

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Instruction code	Checksum
0xEF01	xxxx	0x01	0x0003	0x40	0044H

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Confirmation code	Checksum
0xEF01	xxxx	0x07	0x0003	X	sum

Note 1: Confirmation code=0x00: the device is normal and can receive instructions;

Confirmation code=other: the device is abnormal.

In addition, after the module is powered on, 0x55 will be automatically sent as a handshake sign. After the single-chip microcomputer detects 0x55, it can immediately send commands to enter the working state.

Aura control AuraLedConfig (0 x35)

Description: Aura LED control

Input Parameter: Control code:Ctrl; Speed; ColorIndex;Times

Return Parameter: Confirmation code

Instruction code: 0x35

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	1 byte	1 byte	1 byte	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Instruction code	Control code	Speed	Color Index	Times	Checksum

0xEF0 1	xxxx	0x01	0x0007	0x35	Ctrl	Speed	Color Index	Count	sum
------------	------	------	--------	------	------	-------	----------------	-------	-----

Control Code:

Control code	0x01	0x02	0x03	0x04	0x05	0x06
Function	breathing light	Flashing light	Light Always on	Light Always off	Light gradually on	Light gradually off

Speed: 0x00-0xff, 256 gears, Minimum 5s cycle.

It is effective for breathing lamp and flashing lamp, Light gradually on, Light gradually off.

ColorIndex:

Code	0x01	0x02	0x03	0x04	0x05	0x06	0x07	0x20	0x30
Color	Red	Blue	Purple	Green	Yellow	Cyan	White	3-Color (Red, Green, Blue)	7-color

Number of cycles: 0- infinite, 1-255.

It is effective for breathing lamp and flashing lamp, Light gradually on, Light gradually off.

3-color flashing sequence: Blue→Red→Green

7-color flashing sequence: Cyan→White→Red→Green→Yellow→Blue→Purple

Example: Set 7-Color breathing light:

EF 01 FF FF FF FF 01 00 07 35 01 50 30 00 00 BE (Speed 50)

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Confirmation code	Checksum
0xEF01	xxxx	0x07	0x0003	X	sum

Note 1: Confirmation code=0x00: success;

Confirmation code=0x01:error when receiving package;

Automatic registration template

AutoEnroll (0 x31)

When a fingerprint is recorded using an automatic registration template, the fingerprint image needs to be recorded six times for each fingerprint template. The blue light blinks when the fingerprint image is collected. The yellow light is on means the fingerprint image is collected successfully, the green light blinks means the fingerprint characteristic is generated successfully. If the finger is required to leave during image collection, the image will be collected again after the finger is lifted. During the process of waiting for the finger to leave, the white light flashes. After fingerprint images are collected for 6 times and features are generated successfully, features are synthesized and store fingerprint template. If the operation succeeds, the green light is on; if the operation fails, the red light is on. If the finger is away from the sensor for more than 10 seconds when in collecting the fingerprint image each time, it will automatically exits the automatic template registration process.

Input Parameter: ModelID- Fingerprint library location number



Config1: Whether to allow cover ID number

Config2: Whether to allow duplicate fingerprints

Config3: Whether the module return the status in the critical step

Config4: Whether to allow ask the finger to leave

Return Parameter: Confirmation code ModelID(Fingerprint library location number)

Instruction code: 0x31

Command (or instruction) package format:

2 bytes	4 bytes	1 byte	2 bytes	1 byte	2 bytes	1 byte	1 byte	1 byte	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Instruction code	Location ID	Whether Duplicate ID	Whether Duplicate Fingerprint	Whether return status in registration process	Whether ask finger to leave in registration process	Check sum
0xEF01	xxxx	0x01	0x0009	0x31	ID	Config1	Config2	Config3	Config4	sum

Model ID: Location ID : 0x0000 -0x05DB

0x05DC-0xFFFF is automatic filling(The ID number is assigned by the system. The system will be starting from template 0 to searches the empty templates.)

Whether to allow cover ID number: 0:Not allowed 1: Allow

Whether to allow register duplicate fingerprints: 0:Not allowed 1: Allow

Whether to return to the critical step status during registration: 0:Not allowed 1: Allow

Whether the finger is required to leave during the registration process in order to enter the next fingerprint image collection: 0: don't need to leave 1: have to leave

Example:

EF 01 FF FF FF FF 01 00 09 31 05 DC 00 01 01 01 01 1F (allow to return step status)

Response:

EF 01 FF FF FF FF 07 00 06 00 01 00 03 00 11 EF 01 FF FF FF FF 07 00 06 00 02 00 03 00 12 EF 01 FF FF FF FF 07 00 06 00 03 00 03 00 13 EF 01 FF FF FF FF 07 00 06 00 04 00 03 00 14 EF 01 FF FF FF FF 07 00 06 00 05 00 03 00 15 EF 01 FF FF FF FF 07 00 06 00 06 00 03 00 16 EF 01 FF FF FF FF 07 00 06 00 07 00 03 00 17 EF 01 FF FF FF FF 07 00 06 00 08 00 03 00 18 EF 01 FF FF FF FF 07 00 06 00 09 00 03 00 19 EF 01 FF FF FF FF 07 00 06 00 0A 00 03 00 1A EF 01 FF FF FF FF 07 00 06 00 0B 00 03 00 1B EF 01 FF FF FF FF 07 00 06 00 0C 00 03 00 1C EF 01 FF FF FF FF 07 00 06 00 0D 00 03 00 1D EF 01 FF FF FF FF 07 00 06 00 0E 00 03 00 1E EF 01 FF FF FF FF 07 00 06 00 0F 00 03 00 1F (Fingerprint ID)

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	1 bytes	2 bytes	2 bytes
Header	Module address	Package identifier	Package length	Confirmation code	Parameter 1	Parameter 2	Checksum
0xEF01	xxxx	0x07	0x0006	X	X	X	sum

Parameter 1: Step Process:

0x01: Collect image for the first time
 0x02: Generate Feature for the first time
 0x03: Collect image for the second time
 0x04: Generate Feature for the second time
 0x05: Collect image for the third time
 0x06: Generate Feature for the third time
 0x07: Collect image for the fourth time
 0x08: Generate Feature for the fourth time
 0x09: Collect image for the fifth time
 0x0A: Generate Feature for the fifth time
 0x0B: Collect image for the sixth time
 0x0C: Generate Feature for the sixth time
 0x0D: Repeat fingerprint check
 0x0E: Merge feature
 0x0F: Storage template

Parameter 2: fingerprint ID

Specific Acknowledge package format:

Header	Module address	Package identifier	Package length	Confirmation code	Step	Fingerprint ID	Check Sum	Note
2 Bytes	4 Bytes	1 Byte	2 Bytes	1 Byte	1 Byte	2 Bytes	2 Bytes	
0xEF01	XXXX	0x07	0x0006	X	0x01	0x0000	Sum	Collect image for the first time
0xEF01	XXXX	0x07	0x0006	X	0x02	0x0000	Sum	Generate Feature for the first time
0xEF01	XXXX	0x07	0x0006	X	0x03	0x0000	Sum	Collect image for the second time
0xEF01	XXXX	0x07	0x0006	X	0x04	0x0000	Sum	Generate Feature for the second time
0xEF01	XXXX	0x07	0x0006	X	0x05	0x0000	Sum	Collect image for the third time
0xEF01	XXXX	0x07	0x0006	X	0x06	0x0000	Sum	Generate Feature for the third time
0xEF01	XXXX	0x07	0x0006	X	0x07	0x0000	Sum	Collect image for the fourth time
0xEF01	XXXX	0x07	0x0006	X	0x08	0x0000	Sum	Generate Feature for the fourth time
0xEF01	XXXX	0x07	0x0006	X	0x09	0x0000	Sum	Collect image for the fifth time
0xEF01	XXXX	0x07	0x0006	X	0x0A	0x0000	Sum	Generate Feature for the fifth time
0xEF01	XXXX	0x07	0x0006	X	0x0B	0x0000	Sum	Collect image for

								the sixth time
0xEF01	XXXX	0x07	0x0006	X	0x0C	0x0000	Sum	Generate Feature for the sixth time
0xEF01	XXXX	0x07	0x0006	X	0x0D	0x0000	Sum	Repeat fingerprint check
0xEF01	XXXX	0x07	0x0006	X	0x0E	0x0000	Sum	Merge feature
0xEF01	XXXX	0x07	0x0006	X	0x0F	modelID	Sum	Storage template

If the status of return key step is set to 0 during registration, only returned the the last acknowledge packet.

Confirmation code=0x00 set successfully

Confirmation code=0x01 set fails

Confirmation code=0x07 failed to generate a feature

Confirmation code=0x0a failed to merge templates

Confirmation code=0x0b the ID is out of range

Confirmation code=0x1f fingerprint library is full

Confirmation code=0x22 fingerprint template is empty

Confirmation code=0x26 times out

Confirmation code=0x27 fingerprint already exists

Automatic fingerprint verification

AutoIdentify (0 x32)

When the automatic fingerprint verification command is used to search and verify a fingerprint, the system automatically collects a fingerprint image and generates features, and compares the image with the fingerprint template in the fingerprint database. If the comparison is successful, the system returns the template ID number and the comparison score. If the comparison fails, the system returns the corresponding error code.

When obtaining the fingerprint image, the fingerprint head will light up with a white breathing light. After the image collection is successful, the yellow light will light up, and the green light will light up after the comparison is successful. If there is a fingerprint image collection error or no fingerprint search, the red light will be on to prompt.

If the system does not detect the finger for more than 10 seconds after sending the command or collecting the fingerprint image again after reporting an error, it will automatically exit the command.

Input Parameter:

SafeGrade (1-5 level)

StartID

Num -Number of searches

Config1 Whether the module returns to the status in key steps

Config2 Number of fingerprint search error

Return Parameter:Confirmation code ModelID MarchScore

Instruction code: 0x32

Command (or instruction) package format:

2 bytes	4 bytes	1 byte	2 bytes	1 byte	1 byte	2 bytes	2 bytes	1 byte	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Instruction code	Security Level	Start Position	Number of searches	Whether return key step	Number of fingerprint search error	Checksum
0xEF01	xxxx	0x01	0x000A	0x32	Safe Grade	Start ID	num	Config 1	Config2	sum

Security level: 1-5

Starting position: 0-1499

End position: 1-1500

Return search steps: 0: not allowed 1: Allowed

Fingerprint search error times:

0-0xFF: 0: the operation of image collection and feature search is carried out all the time. If the same feature ID number is found in the fingerprint database, the operation will exit (0 means the cycle continues until the matching ID is found or the power is cut off).

1-0xFF: The generated features and fingerprint search were performed on the collected images. If the match is successful, the ID number and score of the match will be returned, and exit this instruction at the same time. If the match fails, repeat the previous operations for 1-0xff times. Exit after corresponding error times.

No matter what way, if the system does not detect the finger after sending the command or collecting the image again for more than 10 seconds, it will exit the command.

Example:

EF 01 FF FF FF FF 01 00 0A 32 03 00 00 05 DC 01 01 01 23 (Start at 0 and search for 1,500)

Response:

EF 01 FF FF FF FF 07 00 08 00 01 00 00 00 00 00 10 EF 01 FF FF FF FF 07 00 08 00 02 00 00 00 00 11 EF 01 FF FF FF FF 07 00 08 00 03 00 02 00 BD 00 D1 (Fingerprint ID and score)

Acknowledge package format:

2 bytes	4 bytes	1 byte	2 bytes	1 byte	1 byte	2 bytes	2 bytes	2 bytes	Note
Header	Module address	Package identifier	Package length	Confirmation code	Step	Position Number	Score	Check Sum	
0xEF01	xxxx	0x07	0x0008	X	1	0x0000	0x0000	Sum	Collect Image
0xEF01	xxxx	0x07	0x0008	X	2	0x0000	0x0000	Sum	Generate Feature
0xEF01	xxxx	0x07	0x0008	X	3	Model ID	Match score	Sum	Search

Confirmation code=0x00 set successfully

Confirmation code=0x01 set fails

Confirmation code=0x09 failed to search fingerprint

Confirmation code=0x0b the ID is out of range



Confirmation code=0x22 fingerprint template is empty

Confirmation code=0x24 fingerprint library is empty

Confirmation code=0x26 times out

Other instructions

To generate a random code **GetRandomCode**

Description: to command the Module to generate a random number and return it to upper computer;

Input Parameter: none

Return Parameter: Confirmation code (1 byte)+RandomCode

Instruction code: 14H

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Instruction code	Checksum
0xEF01	xxxx	01H	0003H	14H	0018H

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	4 bytes	2 bytes
Header	Module address	Package identifier	Package length	Confirmation code	Random number	Checksum
0xEF01	xxxx	07H	0007H	xxH	RandomCode	sum

Note: Confirmation code=00H: generation success;

Confirmation code=01H: error when receiving package;

To read information page **ReadInfPage**

Description: read information page(512bytes)

Input Parameter: none

Return Parameter: Confirmation code (1 byte)

Instruction code: 16H

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Instruction code	Checksum
0xEF01	xxxx	01H	0003H	16H	001AH

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Confirmation code	Checksum
0xEF01	xxxx	07H	0003H	xxH	sum

Note 1: Confirmation code=00H: ready to transfer the following data packet;

Confirmation code=01H: error when receiving package;

Confirmation code=0fH: can not transfer the following data packet;

2. The upper computer sends the command packet, the module sends the acknowledge packet first, and then sends several data packet.

3. Packet Bytes N is determined by Packet Length. The value is 128 Bytes before delivery.

4: The instruction doesn't affect buffer contents.

Data package format:

2 bytes	4bytes	1 byte	2 bytes	N byte	2 bytes
Header	Module address	Package identifier	Package length	Package content	Checksum
0xEF01	xxxx	0x02- have following packet 0x08 - end packet	N+2	Information page	sum

To write note pad WriteNotepad

Description: for upper computer to write data to the specified Flash page. Also see **ReadNotepad**;

Input Parameter: NotePageNum, user content (or data content)

Return Parameter: Confirmation code (1 byte)

Instruction code: 18H

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	1byte	32 bytes	2 bytes
Header	Module address	Package identifier	Package length	Instruction code	Page number	Data content	Checksum
0xEF01	xxxx	01H	0x0024	18H	0x00-0x0F	content	sum

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	2 bytes
Header	Module address	Package identifier	Package length	Confirmation code	Checksum
0xEF01	xxxx	07H	0003H	xxH	sum

Note: Confirmation code=00H: write success;

Confirmation code=01H: error when receiving package;

Confirmation code=18H: error when write FLASH

To read note pad ReadNotepad

Description: to read the specified page's data content; Also see **WriteNotepad**.

Input Parameter: NotePageNum

Return Parameter: Confirmation code (1 byte) + User content

Instruction code: 19H

Command (or instruction) package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	1byte	2 bytes
---------	--------	--------	---------	--------	-------	---------

Header	Module address	Package identifier	Package length	Instruction code	Page number	Checksum
0xEF01	xxxx	01H	0004H	19H	0x00-0x0F	Sum

Acknowledge package format:

2 bytes	4bytes	1 byte	2 bytes	1 byte	32bytes	2 bytes
Header	Module address	Package identifier	Package length	Confirmation code	User content	Checksum
0xEF01	xxxx	07H	0x0023	xxH	User content	sum


Note: Confirmation code=00H: read success;

Confirmation code=01H: error when receiving package;

VI Operation Process

6.1 Basic communication flow

6.1.1 Process of the UART command package

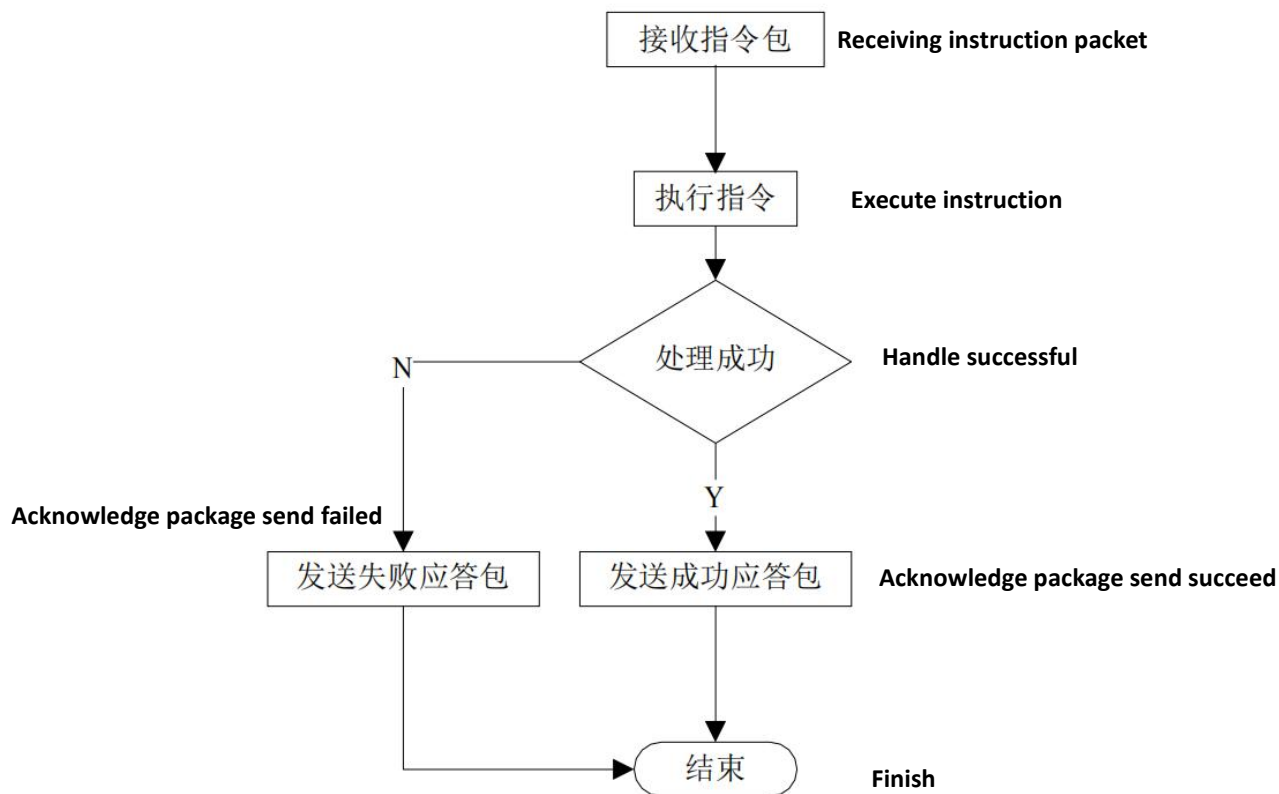

功能实现示例 1：UART命令包的处理过程


6.1.2 UART Packet Sending Process

Before transmitting data packets, the UART should be received the instruction packet for transmitting data packets first, makes preparations for transmission, then sends a successful response packet, and finally starts transmitting the data packets. Packet mainly includes: packet header, chip address, packet identity, packet length, data and checksum.

There are two types of packet identifiers: 02H and 08H. 02H: indicates the data packet and subsequent packets. 08H: indicates the last packet, that is, the end packet. Data length is pre-set, mainly divided into: 32, 64, 128, and 256 four types.

For example, if the length of the data to be transmitted is 1K bytes and the preset length of the data packet is 128 bytes, the 1K bytes of data must be divided into eight data packets. Each packet includes: 2 bytes header, 4 bytes chip address, 1 bytes packet identifier, 2 bytes packet length, 128 bytes data and 2 bytes check sum, each packet length is 139 bytes.

In addition, of the eight packets, the packet ID of the first seven packets is 02H and the packet ID of the last end data packet is 08H. Finally, note that if the end packet does not reach 139 bytes in length, it is transmitted at the actual length and is not otherwise expanded to 139 bytes.

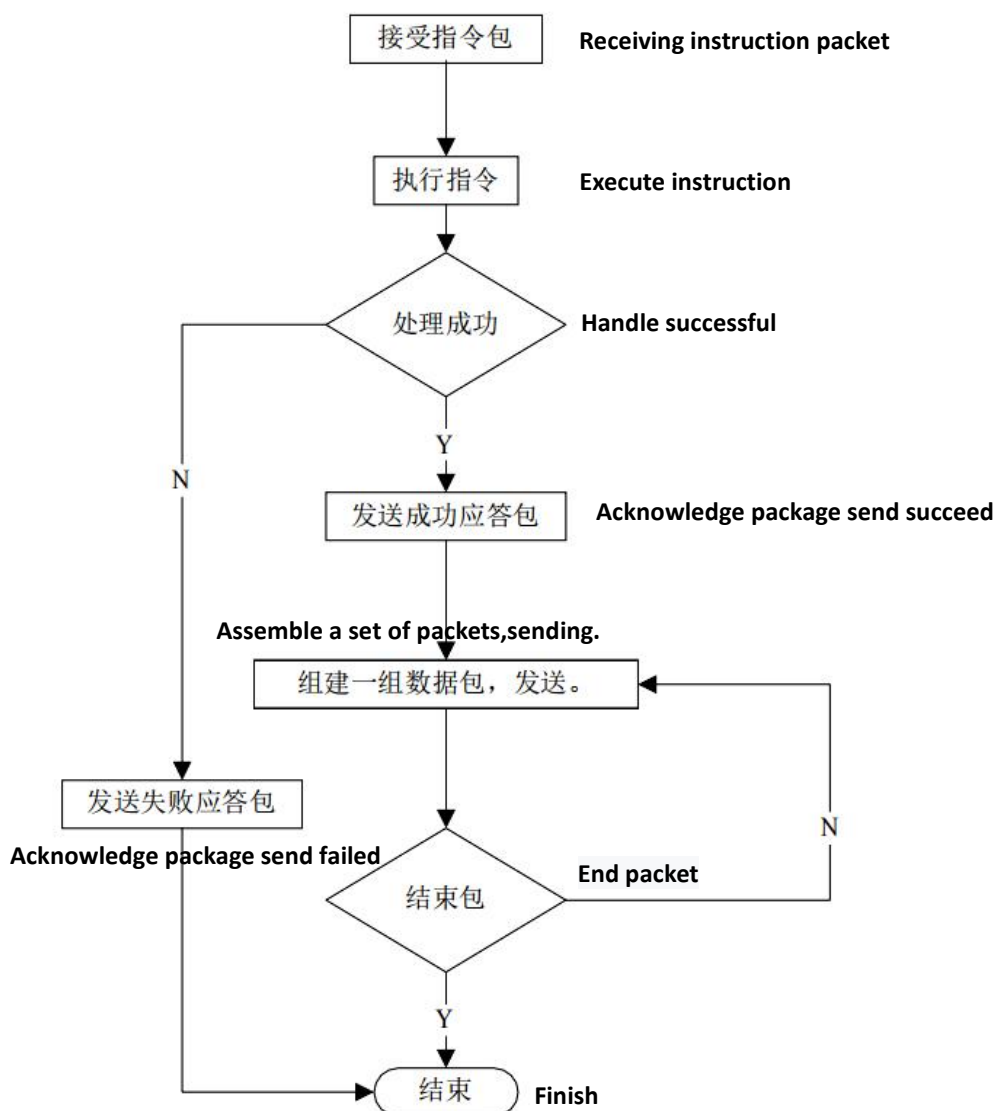


6.1.3 UART packet receiving process

Before transmitting data packets, the UART should be received the instruction packet for transmitting data packets first, makes preparations for transmission, then sends a successful response packet, and finally starts transmitting the data packets. Packet mainly includes: packet header, chip address, packet identity, packet length, data and checksum.

There are two types of packet identifiers: 02H and 08H. 02H: indicates the data packet and subsequent packets. 08H: indicates the last packet, that is, the end packet. Data length is pre-set, mainly divided into: 32, 64, 128, and 256 four types.

For example, if the length of the data to be transmitted is 1K bytes and the preset length of the data packet is 128 bytes, the 1K bytes of data must be divided into eight data packets. Each packet includes: 2 bytes header, 4 bytes chip address, 1 bytes packet identifier, 2 bytes packet length, 128 bytes data and 2 bytes check sum, each packet length is 139 bytes.

In addition, of the eight packets, the packet ID of the first seven packets is 02H and the packet ID of the last end data packet is 08H. Finally, note that if the end packet does not reach 139 bytes in length, it is transmitted at the actual length and is not otherwise expanded to 139 bytes.

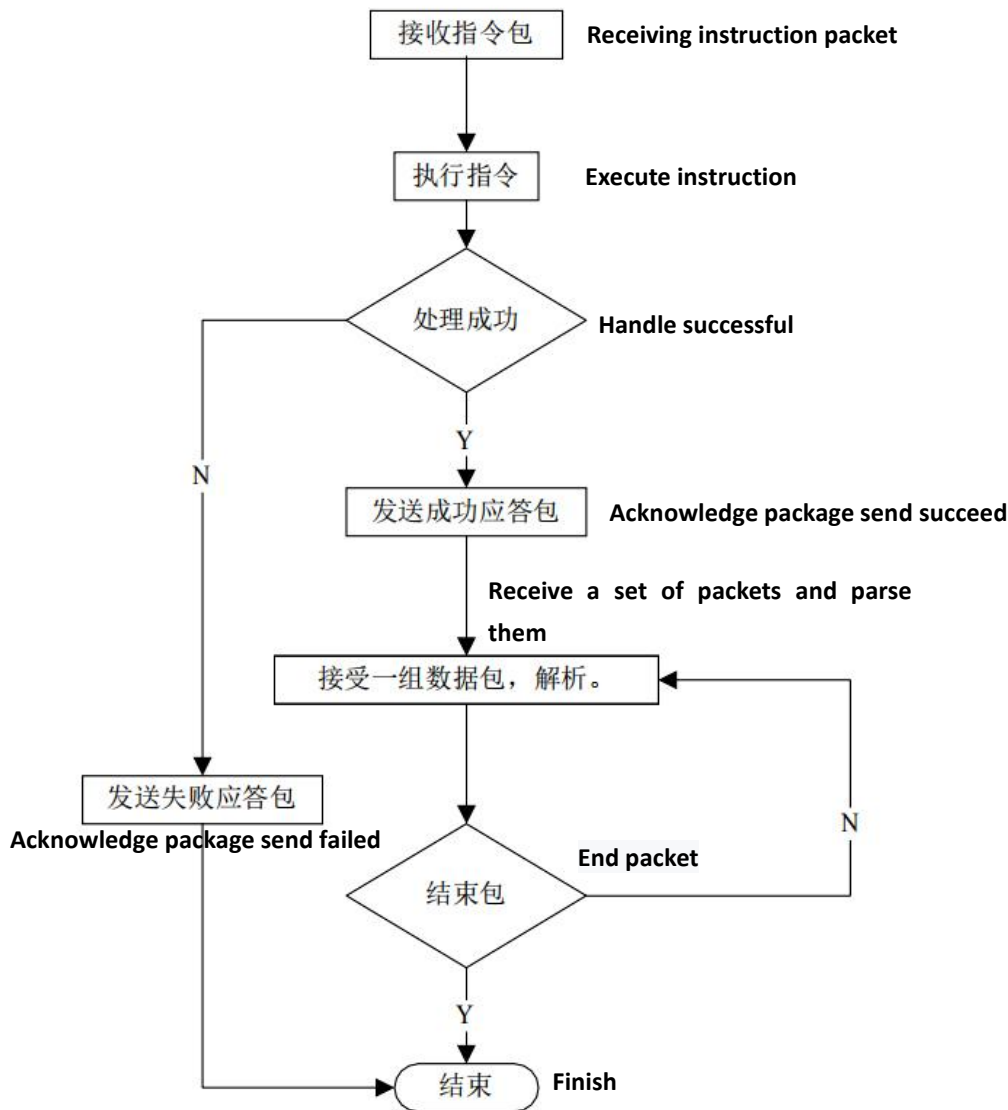


功能实现示例 3: UART 数据包的接收过程

6.2 General instruction communication flow

6.2.1 General instruction register fingerprint process

The fingerprint registration process mainly includes: obtaining images for registration, generating features, merging features and storing templates. Usually $N = 2$ times.

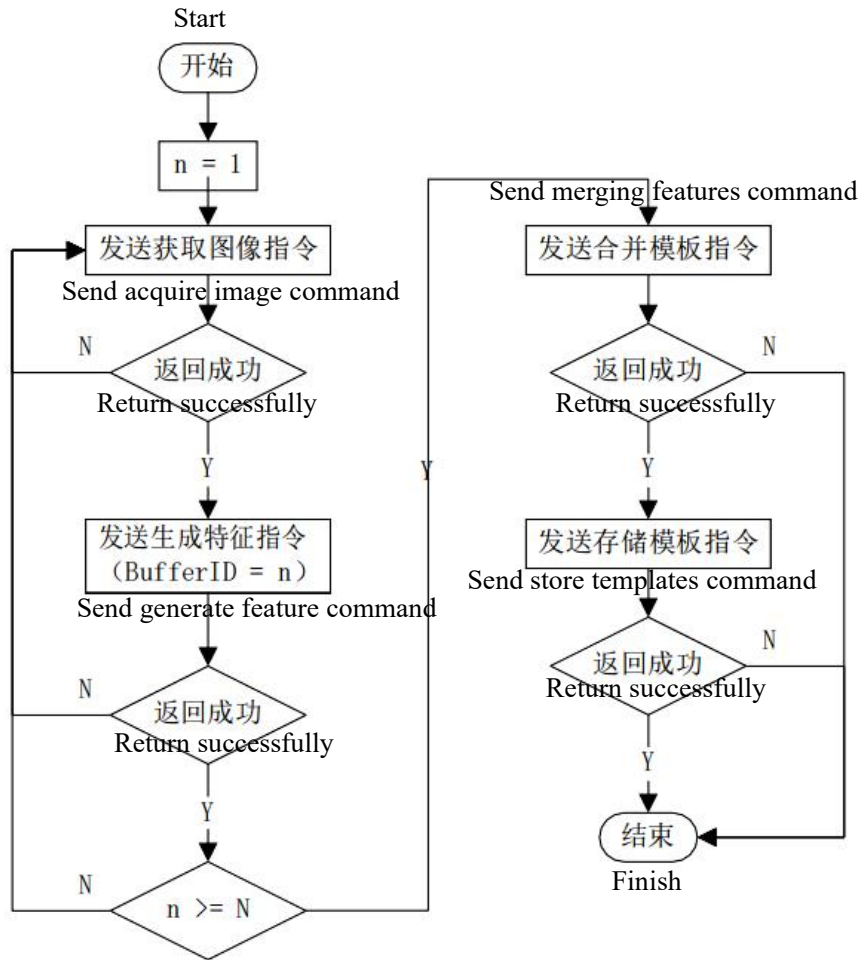

功能实现示例 4：通用指令注册流程


When the registration logic is set to 1, register fingerprint. If the current fingerprint is similar to the fingerprint that has been included before, the confirmation code in the response packet that generates the feature command does not show success, but returns 28H, indicating that there is a correlation between the current fingerprint feature and the previous feature. It should be noted that the mutual comparison correlation is limited to the fingerprints included in this registration process, and will not be compared with the fingerprints in the fingerprint library.

When the registration logic is set to 2, register fingerprint. If the current fingerprint is not similar to the fingerprint that has been included before, the confirmation code in the response packet that generates the feature command does not show success, but returns 08H, indicating that there is no correlation between the current fingerprint feature and the previous feature. It should be noted that the mutual comparison correlation is limited to the fingerprints included in this registration process, and will not be compared with the fingerprints in the fingerprint library.

Whether it returns 28H or 08H, the current fingerprint feature has been successfully extracted, you can take a new map and generate features without changing the BufferID, or you can skip the current BufferID and include the next round of fingerprints.

6.2.2 General instruction verify fingerprint process


The fingerprint verification process of general instructions mainly includes: obtaining images for verification, generating features and searching fingerprints. When sending generated features and searching for fingerprints, BufferID is set to 1 by default.

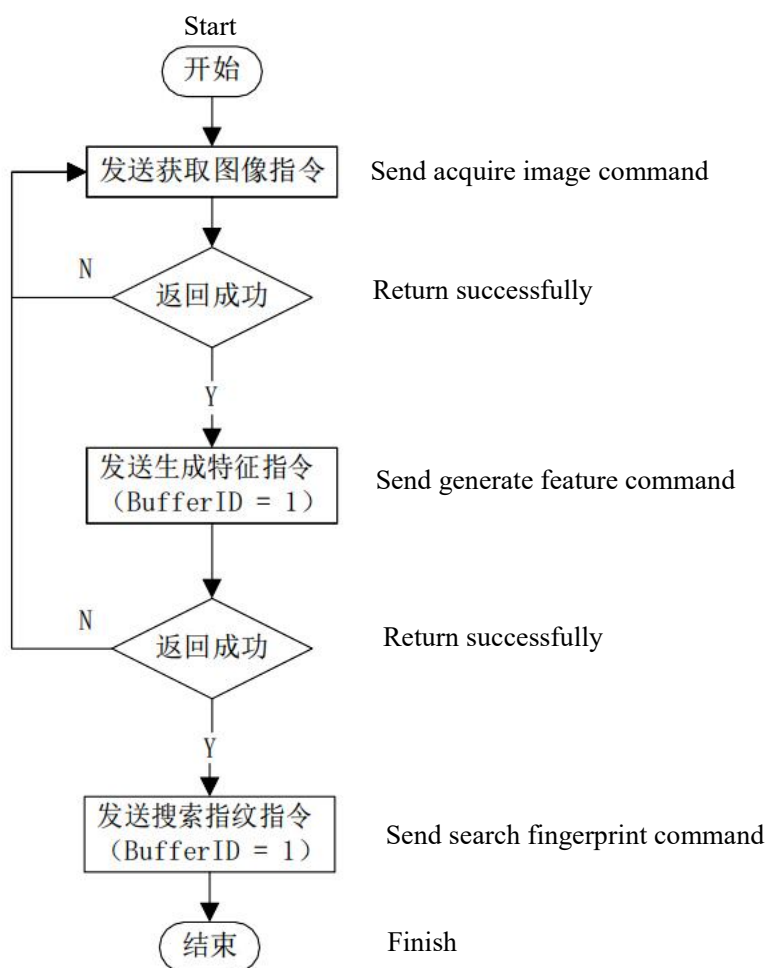

功能实现示例 5：通用指令验证流程

6.2.3 The fingerprint is obtained from the sensor and the feature is generated then upload to the main control

The whole process mainly includes: verify acquire image, generate features and upload features.
BufferID is set to the default value 1 when sending the generate feature and uploading features.

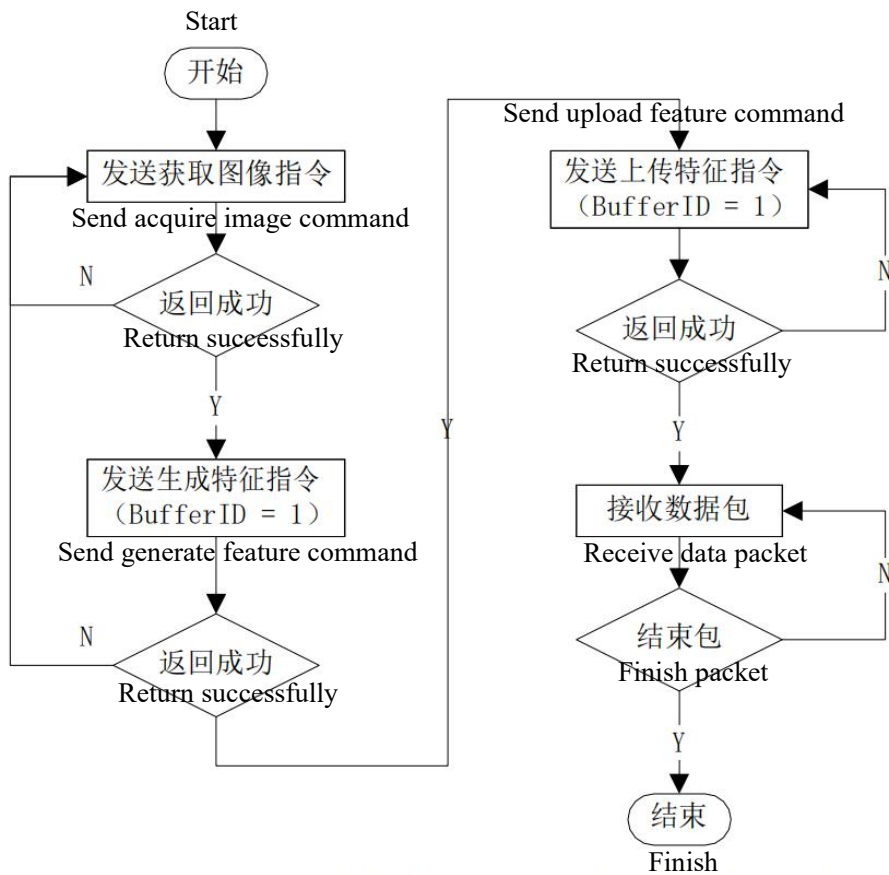


功能实现示例 6：从传感器获取指纹并生成特征后上传给主控

6.2.4 Read a specified template upload to Flash Fingerprint Database

The whole process mainly includes: read template and upload feature.

BufferID is set to the default value 2 when reading template and uploading feature.

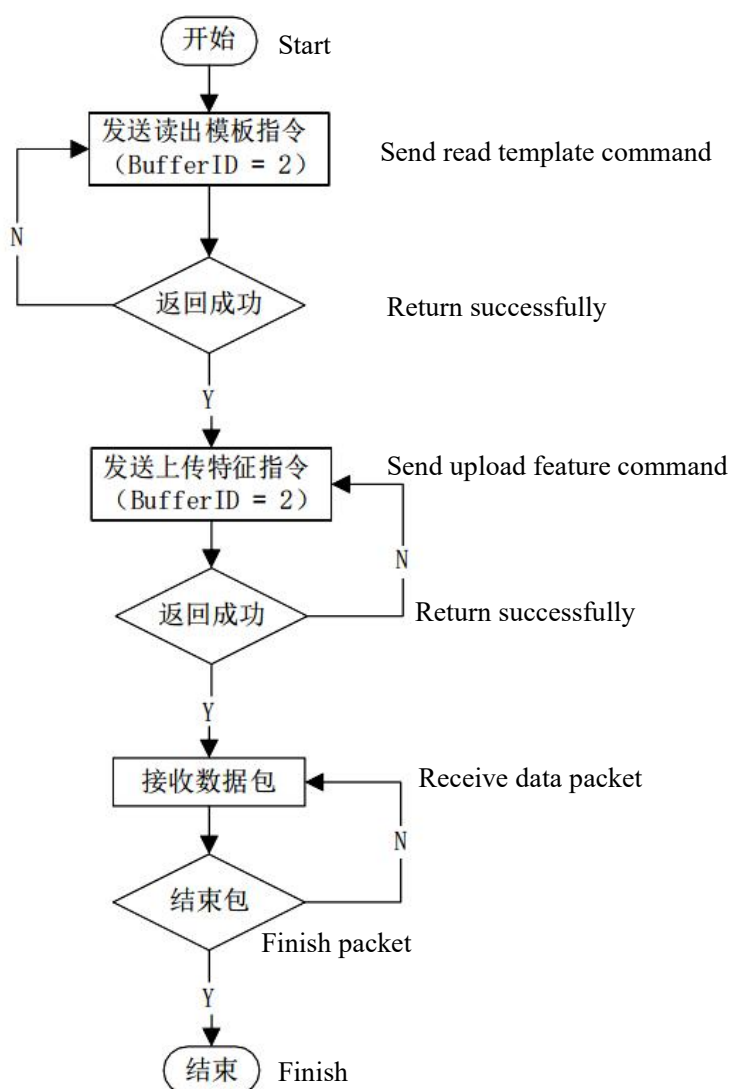


功能实现示例 7: 从 flash 指纹库中读取一个指定的模板上传

6.2.5 The main control downloads a fingerprint feature and searches the fingerprint database based on the feature


The whole process mainly includes: download template and search fingerprint.

BufferID is set to the default value 1 when downloading template and searching fingerprint.

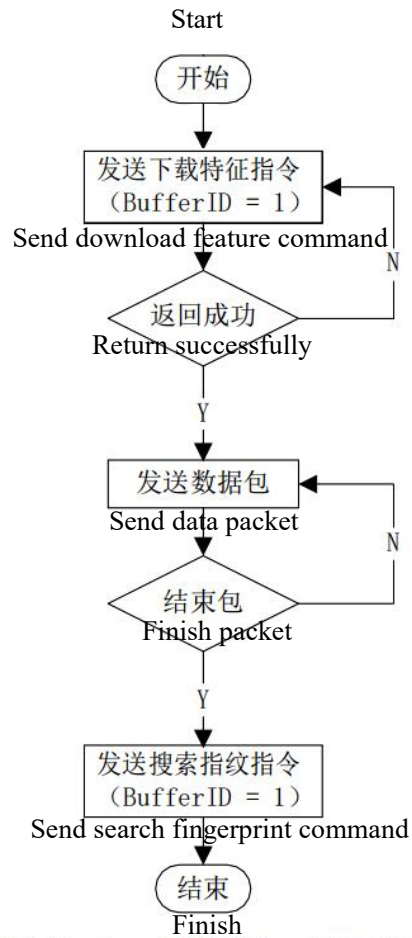


功能实现示例 8：主控下载一个指纹特征并以该特征搜索指纹库

6.3 Automatic Register Fingerprint

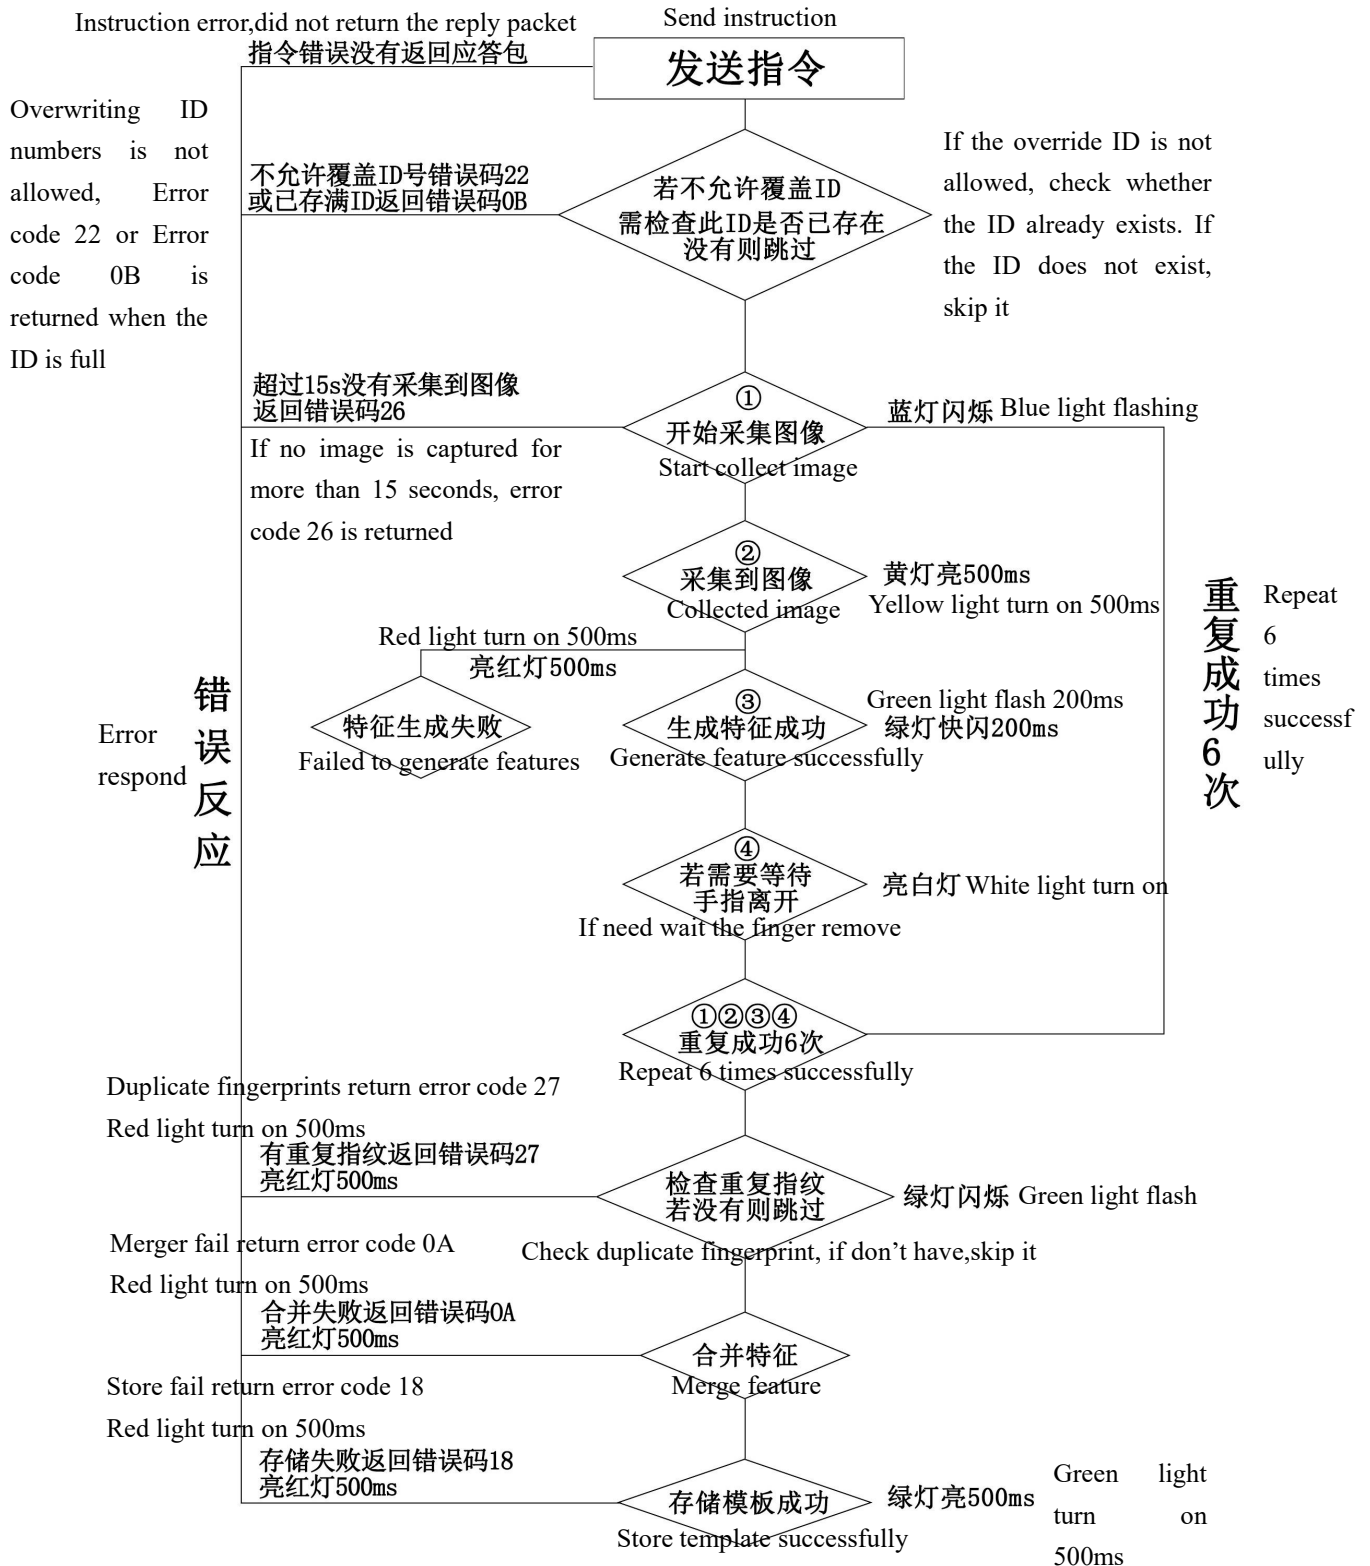


6.4 Automatic Fingerprint Verification(Search)

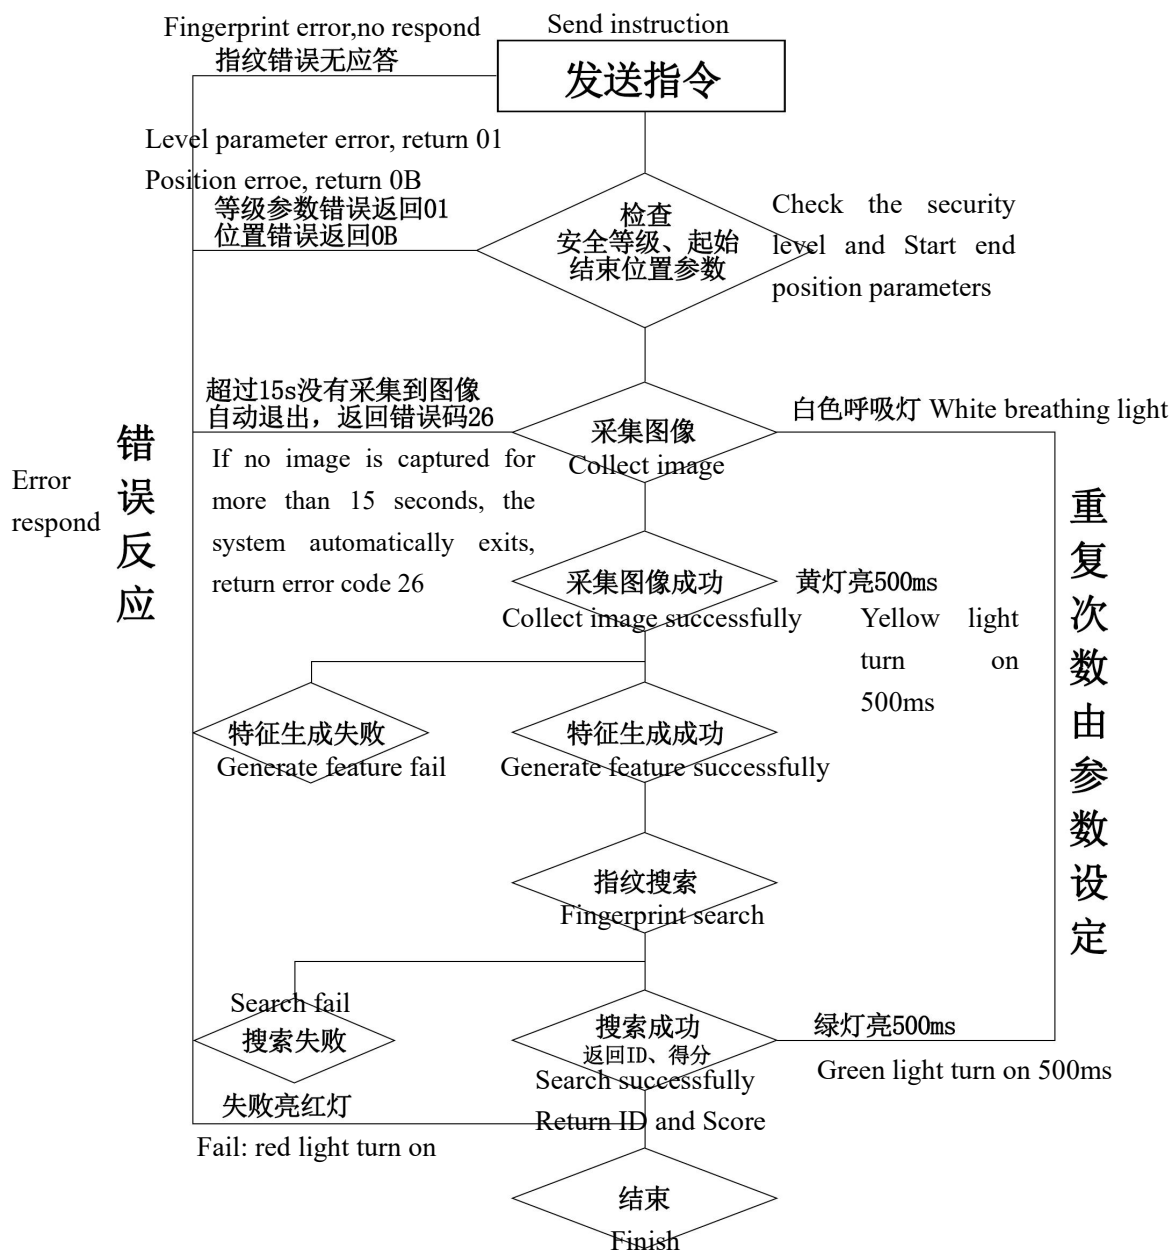

6.5 Low power standby

For low-power standby scenarios, the host can cut off the main power supply of the module (can not cut off the touch-sensitive power supply). Once the module detects a finger, it outputs a signal in the IRQ signal. Then the host can power on the module to perform fingerprint identification.

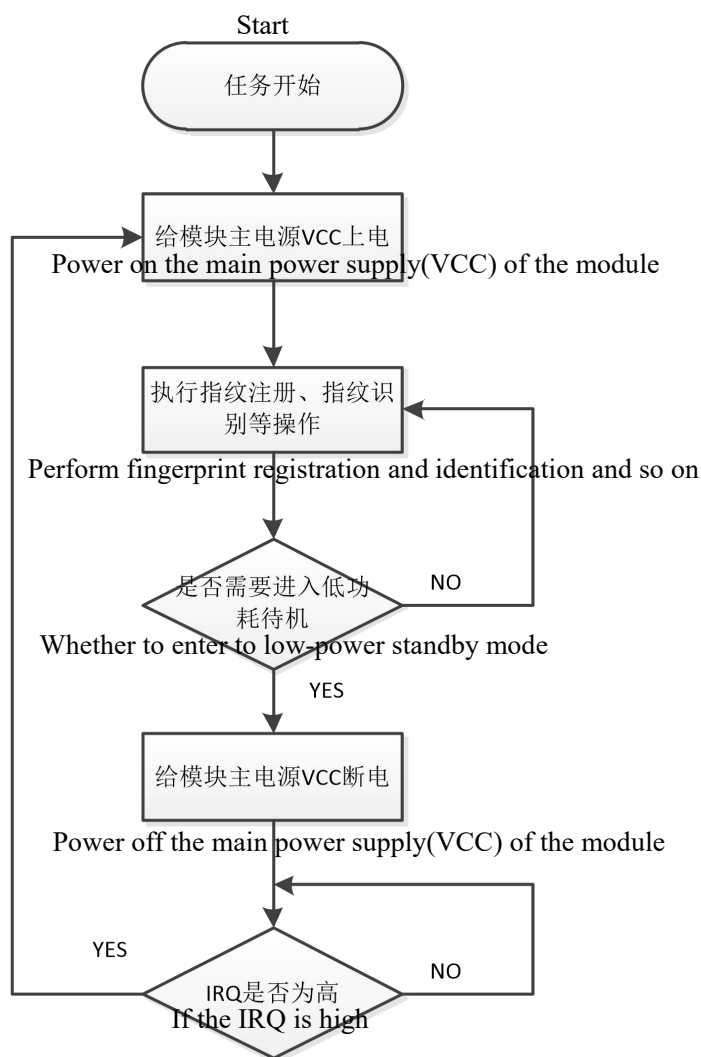

VII Reference Circuit

In low-power supply mode, the whole circuit is normally powered off. Use the finger detection function of the module to power on the whole machine. Please refer to the circuit form of **R307 (R307 is 5V power supply)**.

