

e-Tech Racing's Inverter Firmware

v0

Generated by Doxygen 1.10.0

1 Topic Index	1
1.1 Topics	1
2 Data Structure Index	3
2.1 Data Structures	3
3 File Index	5
3.1 File List	5
4 Topic Documentation	7
4.1 CMSIS	7
4.1.1 Detailed Description	8
4.1.2 Stm32f7xx_system	8
4.1.2.1 Detailed Description	9
4.1.2.2 STM32F7xx_System_Private_Includes	9
4.1.2.3 STM32F7xx_System_Private_TypesDefinitions	9
4.1.2.4 STM32F7xx_System_Private_Defines	10
4.1.2.5 STM32F7xx_System_Private_Macros	10
4.1.2.6 STM32F7xx_System_Private_Variables	10
4.1.2.7 STM32F7xx_System_Private_FunctionPrototypes	11
4.1.2.8 STM32F7xx_System_Private_Functions	11
5 Data Structure Documentation	15
5.1 angle_struct Struct Reference	15
5.1.1 Field Documentation	15
5.1.1.1 angle	15
5.1.1.2 calc	15
5.1.1.3 freq	15
5.1.1.4 Ts	15
5.2 avg_struct_10 Struct Reference	16
5.2.1 Field Documentation	16
5.2.1.1 in	16
5.2.1.2 out	16
5.3 clarke3F_struct Struct Reference	16
5.3.1 Field Documentation	16
5.3.1.1 a	16
5.3.1.2 b	16
5.3.1.3 calc	17
5.3.1.4 D	17
5.3.1.5 Q	17
5.4 datalog_struct Struct Reference	17
5.4.1 Field Documentation	17
5.4.1.1 calc	17
5.4.1.2 estat	17

5.4.1.3 i	17
5.4.1.4 j	18
5.4.1.5 log	18
5.4.1.6 prescaler	18
5.4.1.7 var	18
5.5 filtreLP_struct Struct Reference	18
5.5.1 Field Documentation	18
5.5.1.1 alfa	18
5.5.1.2 calc	18
5.5.1.3 enable	19
5.5.1.4 fc	19
5.5.1.5 in	19
5.5.1.6 init	19
5.5.1.7 out	19
5.5.1.8 Ts	19
5.6 iclarke3F_struct Struct Reference	19
5.6.1 Field Documentation	20
5.6.1.1 a	20
5.6.1.2 b	20
5.6.1.3 calc	20
5.6.1.4 D	20
5.6.1.5 Q	20
5.7 InverterOperation Struct Reference	20
5.7.1 Detailed Description	20
5.7.2 Field Documentation	21
5.7.2.1 enable_pin	21
5.7.2.2 enable_port	21
5.7.2.3 LED_pin	21
5.7.2.4 LED_port	21
5.7.2.5 state	21
5.8 irot_struct Struct Reference	21
5.8.1 Field Documentation	22
5.8.1.1 calc	22
5.8.1.2 cosFi	22
5.8.1.3 d	22
5.8.1.4 D	22
5.8.1.5 q	22
5.8.1.6 Q	22
5.8.1.7 sinFi	22
5.9 LED Struct Reference	22
5.9.1 Detailed Description	23
5.9.2 Field Documentation	23

5.9.2.1 mode	23
5.9.2.2 pin	23
5.9.2.3 port	23
5.10 pi_aw_struct Struct Reference	23
5.10.1 Field Documentation	24
5.10.1.1 calc	24
5.10.1.2 e	24
5.10.1.3 enable	24
5.10.1.4 Kaw	24
5.10.1.5 Ki	24
5.10.1.6 Kp	24
5.10.1.7 pi_consиг	25
5.10.1.8 pi_fdb	25
5.10.1.9 pi_ffw	25
5.10.1.10 pi_int	25
5.10.1.11 pi_out	25
5.10.1.12 pi_out_max	25
5.10.1.13 pi_out_min	25
5.10.1.14 pi_out_postsat	25
5.10.1.15 pi_out_presat	25
5.10.1.16 Ts	25
5.11 pi_struct Struct Reference	26
5.11.1 Field Documentation	26
5.11.1.1 calc	26
5.11.1.2 e	26
5.11.1.3 enable	26
5.11.1.4 init	26
5.11.1.5 K0	26
5.11.1.6 K1	27
5.11.1.7 Ki	27
5.11.1.8 Kp	27
5.11.1.9 pi_consиг	27
5.11.1.10 pi_fdb	27
5.11.1.11 pi_ffw	27
5.11.1.12 pi_out	27
5.11.1.13 pi_out_max	27
5.11.1.14 pi_out_min	27
5.11.1.15 Ts	27
5.12 rampa_dual_struct Struct Reference	28
5.12.1 Field Documentation	28
5.12.1.1 calc	28
5.12.1.2 Decr	28

5.12.1.3 enable	28
5.12.1.4 in	28
5.12.1.5 Incr	28
5.12.1.6 out	28
5.13 rampa_struct Struct Reference	29
5.13.1 Field Documentation	29
5.13.1.1 calc	29
5.13.1.2 enable	29
5.13.1.3 in	29
5.13.1.4 Incr	29
5.13.1.5 out	29
5.14 RMS_struct Struct Reference	29
5.14.1 Field Documentation	30
5.14.1.1 Angle	30
5.14.1.2 Angle_ant	30
5.14.1.3 Freq	30
5.14.1.4 Measure	30
5.14.1.5 Out_RMS	30
5.14.1.6 Sq_Sum	30
5.14.1.7 T_exec	30
5.15 rot_struct Struct Reference	31
5.15.1 Field Documentation	31
5.15.1.1 calc	31
5.15.1.2 cosFi	31
5.15.1.3 D	31
5.15.1.4 d	31
5.15.1.5 Q	31
5.15.1.6 q	31
5.15.1.7 sinFi	32
5.16 step_struct Struct Reference	32
5.16.1 Field Documentation	32
5.16.1.1 calc	32
5.16.1.2 Counter	32
5.16.1.3 enable	32
5.16.1.4 fs	32
5.16.1.5 In	33
5.16.1.6 Out	33
5.16.1.7 Pulses	33
5.16.1.8 Step	33
5.16.1.9 t_step	33
5.17 svpwm_struct Struct Reference	33
5.17.1 Field Documentation	33

5.17.1.1 calc	33
5.17.1.2 Ta	34
5.17.1.3 Tb	34
5.17.1.4 Tc	34
5.17.1.5 valfa	34
5.17.1.6 vbeta	34
6 File Documentation	35
6.1 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/adc.h File Reference	35
6.1.1 Detailed Description	36
6.1.2 Function Documentation	37
6.1.2.1 MX_ADC1_Init()	37
6.1.2.2 MX_ADC2_Init()	37
6.1.2.3 MX_ADC3_Init()	38
6.1.3 Variable Documentation	39
6.1.3.1 hadc1	39
6.1.3.2 hadc2	39
6.1.3.3 hadc3	39
6.2 adc.h	39
6.3 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/can.h File Reference	40
6.3.1 Detailed Description	41
6.3.2 Function Documentation	41
6.3.2.1 MX_CAN1_Init()	41
6.3.3 Variable Documentation	42
6.3.3.1 hcan1	42
6.4 can.h	42
6.5 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/dac.h File Reference	42
6.5.1 Detailed Description	44
6.5.2 Function Documentation	44
6.5.2.1 MX_DAC_Init()	44
6.5.3 Variable Documentation	44
6.5.3.1 hdac	44
6.6 dac.h	45
6.7 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/dma.h File Reference	45
6.7.1 Detailed Description	46
6.7.2 Function Documentation	46
6.7.2.1 MX_DMA_Init()	46
6.8 dma.h	47
6.9 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/FSM.h File Reference	47
6.9.1 Detailed Description	48
6.9.2 Enumeration Type Documentation	49
6.9.2.1 InverterOperationState	49

6.9.3 Function Documentation	49
6.9.3.1 inv_FSM()	49
6.9.3.2 inv_init()	49
6.10 FSM.h	50
6.11 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/gpio.h File Reference	50
6.11.1 Detailed Description	51
6.11.2 Function Documentation	52
6.11.2.1 MX_GPIO_Init()	52
6.12 gpio.h	52
6.13 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/i2c.h File Reference	53
6.13.1 Detailed Description	54
6.13.2 Function Documentation	54
6.13.2.1 MX_I2C1_Init()	54
6.13.3 Variable Documentation	55
6.13.3.1 hi2c1	55
6.14 i2c.h	55
6.15 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/main.h File Reference	55
6.15.1 Detailed Description	58
6.15.2 Macro Definition Documentation	58
6.15.2.1 A_L_GPIO_Port	58
6.15.2.2 A_L_Pin	58
6.15.2.3 A_R_GPIO_Port	58
6.15.2.4 A_R_Pin	58
6.15.2.5 B_L_GPIO_Port	59
6.15.2.6 B_L_Pin	59
6.15.2.7 B_R_GPIO_Port	59
6.15.2.8 B_R_Pin	59
6.15.2.9 DAC_GPIO_Port	59
6.15.2.10 DAC_Pin	59
6.15.2.11 DIR_GPIO_Port	59
6.15.2.12 DIR_Pin	59
6.15.2.13 ENABLE_L_GPIO_Port	59
6.15.2.14 ENABLE_L_Pin	59
6.15.2.15 ENABLE_R_GPIO_Port	60
6.15.2.16 ENABLE_R_Pin	60
6.15.2.17 ia_L_GPIO_Port	60
6.15.2.18 ia_L_Pin	60
6.15.2.19 ia_R_GPIO_Port	60
6.15.2.20 ia_R_Pin	60
6.15.2.21 ib_L_GPIO_Port	60
6.15.2.22 ib_L_Pin	60
6.15.2.23 ib_R_GPIO_Port	60

6.15.2.24 ib_R_Pin	60
6.15.2.25 ic_L_GPIO_Port	61
6.15.2.26 ic_L_Pin	61
6.15.2.27 ic_R_GPIO_Port	61
6.15.2.28 ic_R_Pin	61
6.15.2.29 LED_ERR_GPIO_Port	61
6.15.2.30 LED_ERR_Pin	61
6.15.2.31 LED_LEFT_GPIO_Port	61
6.15.2.32 LED_LEFT_Pin	61
6.15.2.33 LED_RIGHT_GPIO_Port	61
6.15.2.34 LED_RIGHT_Pin	61
6.15.2.35 PWM1_L_GPIO_Port	62
6.15.2.36 PWM1_L_Pin	62
6.15.2.37 PWM1_R_GPIO_Port	62
6.15.2.38 PWM1_R_Pin	62
6.15.2.39 PWM2_L_GPIO_Port	62
6.15.2.40 PWM2_L_Pin	62
6.15.2.41 PWM2_R_GPIO_Port	62
6.15.2.42 PWM2_R_Pin	62
6.15.2.43 PWM3_L_GPIO_Port	62
6.15.2.44 PWM3_L_Pin	62
6.15.2.45 PWM3_R_GPIO_Port	63
6.15.2.46 PWM3_R_Pin	63
6.15.2.47 PWM4_L_GPIO_Port	63
6.15.2.48 PWM4_L_Pin	63
6.15.2.49 PWM4_R_GPIO_Port	63
6.15.2.50 PWM4_R_Pin	63
6.15.2.51 PWM5_L_GPIO_Port	63
6.15.2.52 PWM5_L_Pin	63
6.15.2.53 PWM5_R_GPIO_Port	63
6.15.2.54 PWM5_R_Pin	63
6.15.2.55 PWM6_L_GPIO_Port	64
6.15.2.56 PWM6_L_Pin	64
6.15.2.57 PWM6_R_GPIO_Port	64
6.15.2.58 PWM6_R_Pin	64
6.15.2.59 SC_det_GPIO_Port	64
6.15.2.60 SC_det_Pin	64
6.15.2.61 Tinv_L_GPIO_Port	64
6.15.2.62 Tinv_L_Pin	64
6.15.2.63 Tinv_R_GPIO_Port	64
6.15.2.64 Tinv_R_Pin	64
6.15.2.65 Tmot_L_GPIO_Port	65

6.15.2.66 Tmot_L_Pin	65
6.15.2.67 Tmot_R_GPIO_Port	65
6.15.2.68 Tmot_R_Pin	65
6.15.2.69 TRIP_L_GPIO_Port	65
6.15.2.70 TRIP_L_Pin	65
6.15.2.71 TRIP_R_GPIO_Port	65
6.15.2.72 TRIP_R_Pin	65
6.15.2.73 VDC_L_GPIO_Port	65
6.15.2.74 VDC_L_Pin	65
6.15.2.75 VDC_R_GPIO_Port	66
6.15.2.76 VDC_R_Pin	66
6.15.2.77 WRN_L_GPIO_Port	66
6.15.2.78 WRN_L_Pin	66
6.15.2.79 WRN_R_GPIO_Port	66
6.15.2.80 WRN_R_Pin	66
6.15.2.81 Z_L_GPIO_Port	66
6.15.2.82 Z_L_Pin	66
6.15.2.83 Z_R_GPIO_Port	66
6.15.2.84 Z_R_Pin	66
6.15.3 Function Documentation	66
6.15.3.1 Error_Handler()	66
6.15.4 Variable Documentation	68
6.15.4.1 ADC2_raw	68
6.16 main.h	68
6.17 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/PCB_IO.h File Reference	69
6.17.1 Detailed Description	71
6.17.2 Macro Definition Documentation	71
6.17.2.1 DIR_STATE	71
6.17.2.2 DISABLE	71
6.17.2.3 ENABLE	71
6.17.2.4 SC_DET_STATE	71
6.17.2.5 WRN_STATE	72
6.17.3 Enumeration Type Documentation	72
6.17.3.1 LEDMode	72
6.17.4 Function Documentation	72
6.17.4.1 LED_handler()	72
6.17.5 Variable Documentation	73
6.17.5.1 led_error	73
6.17.5.2 led_left	73
6.17.5.3 led_right	73
6.18 PCB_IO.h	73
6.19 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/Pergamon_float.h File Reference	74

6.19.1 Macro Definition Documentation	76
6.19.1.1 ANGLE_DEFAULTS	76
6.19.1.2 AVG_DEFAULTS	76
6.19.1.3 CLARKE3F_DEFAULTS	76
6.19.1.4 DATALOG_DEFAULTS	77
6.19.1.5 DIV2	77
6.19.1.6 FILTRELP_DEFAULTS	77
6.19.1.7 ICLARKE3F_DEFAULTS	77
6.19.1.8 INV3	77
6.19.1.9 INV_DEG	77
6.19.1.10 IPI	77
6.19.1.11 IPI2	78
6.19.1.12 IROT_DEFAULTS	78
6.19.1.13 ISQ2	78
6.19.1.14 ISQ3	78
6.19.1.15 N_DATALOG	78
6.19.1.16 PI	78
6.19.1.17 PI2	78
6.19.1.18 PI_DEFAULTS	78
6.19.1.19 PI_DEFAULTS_AW	79
6.19.1.20 PI_EXTSAT_DEFAULTS	79
6.19.1.21 RAMPA_DEFAULTS	79
6.19.1.22 RAMPA_DUAL_DEFAULTS	79
6.19.1.23 RMS_DEFAULTS	80
6.19.1.24 ROT_DEFAULTS	80
6.19.1.25 SQ2	80
6.19.1.26 SQ3	80
6.19.1.27 STEP_DEFAULTS	80
6.19.1.28 SVPWM_DEFAULTS	80
6.19.2 Function Documentation	81
6.19.2.1 angle_calc()	81
6.19.2.2 avg_calc_10_samples()	81
6.19.2.3 clarke3F_calc()	81
6.19.2.4 datalog_calc()	81
6.19.2.5 filtreLP_calc()	81
6.19.2.6 filtreLP_init()	81
6.19.2.7 iclarke3F_calc()	81
6.19.2.8 irot_calc()	81
6.19.2.9 pi_aw_calc()	82
6.19.2.10 pi_calc()	82
6.19.2.11 pi_extsat_calc()	82
6.19.2.12 pi_init()	82

6.19.2.13 rampa_calc()	82
6.19.2.14 rampa_dual_calc()	82
6.19.2.15 RMS_calc()	82
6.19.2.16 rot_calc()	82
6.19.2.17 step_calc()	82
6.19.2.18 svpwm_calc()	83
6.20 Pergamon_float.h	83
6.21 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/stm32f7xx_hal_conf.h File Reference	88
6.21.1 Macro Definition Documentation	90
6.21.1.1 ART_ACCELERATOR_ENABLE	90
6.21.1.2 assert_param	90
6.21.1.3 DP83848_PHY_ADDRESS	91
6.21.1.4 ETH_RX_BUF_SIZE	91
6.21.1.5 ETH_RXBUFNB	91
6.21.1.6 ETH_TX_BUF_SIZE	91
6.21.1.7 ETH_TXBUFNB	91
6.21.1.8 EXTERNAL_CLOCK_VALUE	91
6.21.1.9 HAL_ADC_MODULE_ENABLED	91
6.21.1.10 HAL_CAN_MODULE_ENABLED	91
6.21.1.11 HAL_CORTEX_MODULE_ENABLED	91
6.21.1.12 HAL_DAC_MODULE_ENABLED	92
6.21.1.13 HAL_DMA_MODULE_ENABLED	92
6.21.1.14 HAL_EXTI_MODULE_ENABLED	92
6.21.1.15 HAL_FLASH_MODULE_ENABLED	92
6.21.1.16 HAL_GPIO_MODULE_ENABLED	92
6.21.1.17 HAL_I2C_MODULE_ENABLED	92
6.21.1.18 HAL_MODULE_ENABLED	92
6.21.1.19 HAL_PWR_MODULE_ENABLED	92
6.21.1.20 HAL_RCC_MODULE_ENABLED	92
6.21.1.21 HAL_TIM_MODULE_ENABLED	92
6.21.1.22 HSE_STARTUP_TIMEOUT	93
6.21.1.23 HSE_VALUE	93
6.21.1.24 HSI_VALUE	93
6.21.1.25 LSE_STARTUP_TIMEOUT	93
6.21.1.26 LSE_VALUE	93
6.21.1.27 LSI_VALUE	93
6.21.1.28 MAC_ADDR0	94
6.21.1.29 MAC_ADDR1	94
6.21.1.30 MAC_ADDR2	94
6.21.1.31 MAC_ADDR3	94
6.21.1.32 MAC_ADDR4	94
6.21.1.33 MAC_ADDR5	94

6.21.1.34 PHY_AUTONEGO_COMPLETE	94
6.21.1.35 PHY_AUTONEGOTIATION	94
6.21.1.36 PHY_BCR	94
6.21.1.37 PHY_BSR	95
6.21.1.38 PHY_CONFIG_DELAY	95
6.21.1.39 PHY_DUPLEX_STATUS	95
6.21.1.40 PHY_FULLDUPLEX_100M	95
6.21.1.41 PHY_FULLDUPLEX_10M	95
6.21.1.42 PHY_HALFDUPLEX_100M	95
6.21.1.43 PHY_HALFDUPLEX_10M	95
6.21.1.44 PHY_ISOLATE	96
6.21.1.45 PHY_JABBER_DETECTION	96
6.21.1.46 PHY_LINKED_STATUS	96
6.21.1.47 PHY_LOOPBACK	96
6.21.1.48 PHY_POWERDOWN	96
6.21.1.49 PHY_READ_TO	96
6.21.1.50 PHY_RESET	96
6.21.1.51 PHY_RESET_DELAY	97
6.21.1.52 PHY_RESTART_AUTONEGOTIATION	97
6.21.1.53 PHY_SPEED_STATUS	97
6.21.1.54 PHY_SR	97
6.21.1.55 PHY_WRITE_TO	97
6.21.1.56 PREFETCH_ENABLE	97
6.21.1.57 TICK_INT_PRIORITY	97
6.21.1.58 USE_HAL_ADC_REGISTER_CALLBACKS	97
6.21.1.59 USE_HAL_CAN_REGISTER_CALLBACKS	98
6.21.1.60 USE_HAL_CEC_REGISTER_CALLBACKS	98
6.21.1.61 USE_HAL_CRYP_REGISTER_CALLBACKS	98
6.21.1.62 USE_HAL_DAC_REGISTER_CALLBACKS	98
6.21.1.63 USE_HAL_DCMI_REGISTER_CALLBACKS	98
6.21.1.64 USE_HAL_DFSDM_REGISTER_CALLBACKS	98
6.21.1.65 USE_HAL_DMA2D_REGISTER_CALLBACKS	98
6.21.1.66 USE_HAL_DSI_REGISTER_CALLBACKS	98
6.21.1.67 USE_HAL_ETH_REGISTER_CALLBACKS	98
6.21.1.68 USE_HAL_HASH_REGISTER_CALLBACKS	98
6.21.1.69 USE_HAL_HCD_REGISTER_CALLBACKS	99
6.21.1.70 USE_HAL_I2C_REGISTER_CALLBACKS	99
6.21.1.71 USE_HAL_I2S_REGISTER_CALLBACKS	99
6.21.1.72 USE_HAL_IRDA_REGISTER_CALLBACKS	99
6.21.1.73 USE_HAL_JPEG_REGISTER_CALLBACKS	99
6.21.1.74 USE_HAL_LPTIM_REGISTER_CALLBACKS	99
6.21.1.75 USE_HAL_LTDC_REGISTER_CALLBACKS	99

6.21.1.76 USE_HAL_MDIOS_REGISTER_CALLBACKS	99
6.21.1.77 USE_HAL_MMC_REGISTER_CALLBACKS	99
6.21.1.78 USE_HAL_NAND_REGISTER_CALLBACKS	99
6.21.1.79 USE_HAL_NOR_REGISTER_CALLBACKS	100
6.21.1.80 USE_HAL_PCD_REGISTER_CALLBACKS	100
6.21.1.81 USE_HAL_QSPI_REGISTER_CALLBACKS	100
6.21.1.82 USE_HAL_RNG_REGISTER_CALLBACKS	100
6.21.1.83 USE_HAL_RTC_REGISTER_CALLBACKS	100
6.21.1.84 USE_HAL_SAI_REGISTER_CALLBACKS	100
6.21.1.85 USE_HAL_SD_REGISTER_CALLBACKS	100
6.21.1.86 USE_HAL_SDRAM_REGISTER_CALLBACKS	100
6.21.1.87 USE_HAL_SMARTCARD_REGISTER_CALLBACKS	100
6.21.1.88 USE_HAL_SMBUS_REGISTER_CALLBACKS	100
6.21.1.89 USE_HAL_SPDIFRX_REGISTER_CALLBACKS	101
6.21.1.90 USE_HAL_SPI_REGISTER_CALLBACKS	101
6.21.1.91 USE_HAL_SRAM_REGISTER_CALLBACKS	101
6.21.1.92 USE_HAL_TIM_REGISTER_CALLBACKS	101
6.21.1.93 USE_HAL_UART_REGISTER_CALLBACKS	101
6.21.1.94 USE_HAL_USART_REGISTER_CALLBACKS	101
6.21.1.95 USE_HAL_WWDG_REGISTER_CALLBACKS	101
6.21.1.96 USE_RTOS	101
6.21.1.97 USE_SPI_CRC	101
6.21.1.98 VDD_VALUE	101
6.22 stm32f7xx_hal_conf.h	102
6.23 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/stm32f7xx_it.h File Reference	106
6.23.1 Detailed Description	108
6.23.2 Function Documentation	108
6.23.2.1 BusFault_Handler()	108
6.23.2.2 CAN1_RX0_IRQHandler()	108
6.23.2.3 CAN1_RX1_IRQHandler()	108
6.23.2.4 DebugMon_Handler()	109
6.23.2.5 DMA2_Stream0_IRQHandler()	109
6.23.2.6 DMA2_Stream1_IRQHandler()	109
6.23.2.7 DMA2_Stream2_IRQHandler()	109
6.23.2.8 HardFault_Handler()	109
6.23.2.9 MemManage_Handler()	109
6.23.2.10 NMI_Handler()	109
6.23.2.11 PendSV_Handler()	110
6.23.2.12 SVC_Handler()	110
6.23.2.13 SysTick_Handler()	110
6.23.2.14 TIM1_BRK_TIM9_IRQHandler()	110
6.23.2.15 TIM1_CC_IRQHandler()	110

6.23.2.16 TIM1_TRG_COM_TIM11_IRQHandler()	110
6.23.2.17 TIM1_UP_TIM10_IRQHandler()	110
6.23.2.18 TIM6_DAC_IRQHandler()	111
6.23.2.19 UsageFault_Handler()	111
6.24 stm32f7xx_it.h	111
6.25 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/TASKS_1ms.h File Reference	112
6.25.1 Detailed Description	112
6.25.2 Function Documentation	113
6.25.2.1 tasks_1ms()	113
6.26 TASKS_1ms.h	113
6.27 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/tim.h File Reference	114
6.27.1 Detailed Description	115
6.27.2 Function Documentation	115
6.27.2.1 HAL_TIM_MspPostInit()	115
6.27.2.2 MX_TIM1_Init()	116
6.27.2.3 MX_TIM2_Init()	116
6.27.2.4 MX_TIM4_Init()	117
6.27.2.5 MX_TIM6_Init()	117
6.27.2.6 MX_TIM8_Init()	118
6.27.3 Variable Documentation	119
6.27.3.1 htim1	119
6.27.3.2 htim2	119
6.27.3.3 htim4	119
6.27.3.4 htim6	119
6.27.3.5 htim8	119
6.28 tim.h	119
6.29 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/usb_otg.h File Reference	120
6.29.1 Detailed Description	121
6.29.2 Function Documentation	121
6.29.2.1 MX_USB_OTG_FS_USB_Init()	121
6.30 usb_otg.h	122
6.31 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/adc.c File Reference	122
6.31.1 Detailed Description	123
6.31.2 Function Documentation	124
6.31.2.1 HAL_ADC_MspDeInit()	124
6.31.2.2 HAL_ADC_MspInit()	124
6.31.2.3 MX_ADC1_Init()	124
6.31.2.4 MX_ADC2_Init()	125
6.31.2.5 MX_ADC3_Init()	126
6.31.3 Variable Documentation	126
6.31.3.1 hadc1	126
6.31.3.2 hadc2	127

6.31.3.3	hadc3	127
6.31.3.4	hdma_adc1	127
6.31.3.5	hdma_adc2	127
6.31.3.6	hdma_adc3	127
6.32	C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/can.c File Reference	127
6.32.1	Detailed Description	128
6.32.2	Function Documentation	128
6.32.2.1	HAL_CAN_MspDeInit()	128
6.32.2.2	HAL_CAN_MspInit()	128
6.32.2.3	MX_CAN1_Init()	129
6.32.3	Variable Documentation	129
6.32.3.1	hcan1	129
6.33	C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/dac.c File Reference	129
6.33.1	Detailed Description	130
6.33.2	Function Documentation	131
6.33.2.1	HAL_DAC_MspDeInit()	131
6.33.2.2	HAL_DAC_MspInit()	131
6.33.2.3	MX_DAC_Init()	131
6.33.3	Variable Documentation	132
6.33.3.1	hdac	132
6.34	C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/dma.c File Reference	132
6.34.1	Detailed Description	132
6.34.2	Function Documentation	133
6.34.2.1	MX_DMA_Init()	133
6.35	C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/FSM.c File Reference	133
6.35.1	Detailed Description	134
6.35.2	Function Documentation	134
6.35.2.1	inv_FSM()	134
6.35.2.2	inv_init()	134
6.36	C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/gpio.c File Reference	135
6.36.1	Detailed Description	135
6.36.2	Function Documentation	136
6.36.2.1	MX_GPIO_Init()	136
6.37	C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/i2c.c File Reference	136
6.37.1	Detailed Description	137
6.37.2	Function Documentation	137
6.37.2.1	HAL_I2C_MspDeInit()	137
6.37.2.2	HAL_I2C_MspInit()	137
6.37.2.3	MX_I2C1_Init()	138
6.37.3	Variable Documentation	138
6.37.3.1	hi2c1	138
6.38	C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/main.c File Reference	138

6.38.1 Detailed Description	139
6.38.2 Function Documentation	139
6.38.2.1 Error_Handler()	139
6.38.2.2 main()	140
6.38.2.3 SystemClock_Config()	142
6.38.3 Variable Documentation	142
6.38.3.1 ADC2_raw	142
6.38.3.2 hadc2	142
6.38.3.3 invLeft	143
6.38.3.4 invRight	143
6.39 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/PCB_IO.c File Reference	143
6.39.1 Detailed Description	144
6.39.2 Function Documentation	144
6.39.2.1 LED_handler()	144
6.39.3 Variable Documentation	145
6.39.3.1 led_error	145
6.39.3.2 led_left	145
6.39.3.3 led_right	145
6.40 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/Pergamon_float.c File Reference	145
6.40.1 Function Documentation	146
6.40.1.1 angle_calc()	146
6.40.1.2 avg_calc_10_samples()	146
6.40.1.3 clarke3F_calc()	146
6.40.1.4 datalog_calc()	146
6.40.1.5 filtreLP_calc()	146
6.40.1.6 filtreLP_init()	147
6.40.1.7 iclarke3F_calc()	147
6.40.1.8 irot_calc()	147
6.40.1.9 pi_aw_calc()	147
6.40.1.10 pi_calc()	147
6.40.1.11 pi_extsat_calc()	147
6.40.1.12 pi_init()	147
6.40.1.13 rampa_calc()	147
6.40.1.14 rampa_dual_calc()	147
6.40.1.15 RMS_calc()	148
6.40.1.16 rot_calc()	148
6.40.1.17 step_calc()	148
6.40.1.18 svpwm_calc()	148
6.41 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/stm32f7xx_hal_msp.c File Reference	148
6.41.1 Detailed Description	149
6.41.2 Function Documentation	149
6.41.2.1 HAL_MspInit()	149

6.42 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/stm32f7xx_it.c File Reference	149
6.42.1 Detailed Description	151
6.42.2 Function Documentation	151
6.42.2.1 BusFault_Handler()	151
6.42.2.2 CAN1_RX0_IRQHandler()	151
6.42.2.3 CAN1_RX1_IRQHandler()	151
6.42.2.4 DebugMon_Handler()	151
6.42.2.5 DMA2_Stream0_IRQHandler()	151
6.42.2.6 DMA2_Stream1_IRQHandler()	152
6.42.2.7 DMA2_Stream2_IRQHandler()	152
6.42.2.8 HardFault_Handler()	152
6.42.2.9 MemManage_Handler()	152
6.42.2.10 NMI_Handler()	152
6.42.2.11 PendSV_Handler()	152
6.42.2.12 SVC_Handler()	152
6.42.2.13 SysTick_Handler()	153
6.42.2.14 TIM1_BRK_TIM9_IRQHandler()	153
6.42.2.15 TIM1_CC_IRQHandler()	153
6.42.2.16 TIM1_TRG_COM_TIM11_IRQHandler()	153
6.42.2.17 TIM1_UP_TIM10_IRQHandler()	153
6.42.2.18 TIM6_DAC_IRQHandler()	153
6.42.2.19 UsageFault_Handler()	154
6.42.3 Variable Documentation	154
6.42.3.1 hcan1	154
6.42.3.2 hdac	154
6.42.3.3 hdma_adc1	154
6.42.3.4 hdma_adc2	154
6.42.3.5 hdma_adc3	154
6.42.3.6 htim1	154
6.42.3.7 htim6	154
6.43 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/syscalls.c File Reference	155
6.43.1 Detailed Description	156
6.43.2 Function Documentation	156
6.43.2.1 __attribute__()	156
6.43.2.2 __io_getchar()	156
6.43.2.3 __io_putchar()	157
6.43.2.4 _close()	157
6.43.2.5 _execve()	157
6.43.2.6 _exit()	157
6.43.2.7 _fork()	157
6.43.2.8 _fstat()	157
6.43.2.9 _getpid()	158

6.43.2.10 _isatty()	158
6.43.2.11 _kill()	158
6.43.2.12 _link()	158
6.43.2.13 _lseek()	158
6.43.2.14 _open()	158
6.43.2.15 _stat()	159
6.43.2.16 _times()	159
6.43.2.17 _unlink()	159
6.43.2.18 _wait()	159
6.43.2.19 initialise_monitor_handles()	159
6.43.3 Variable Documentation	159
6.43.3.1 environ	159
6.44 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/systemem.c File Reference	159
6.44.1 Detailed Description	160
6.44.2 Function Documentation	161
6.44.2.1 _sbrk()	161
6.45 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/system_stm32f7xx.c File Reference	161
6.45.1 Detailed Description	162
6.46 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/TASKS_1ms.c File Reference	163
6.46.1 Detailed Description	163
6.46.2 Function Documentation	164
6.46.2.1 tasks_1ms()	164
6.47 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/tim.c File Reference	164
6.47.1 Detailed Description	166
6.47.2 Function Documentation	166
6.47.2.1 HAL_TIM_Base_MspDeInit()	166
6.47.2.2 HAL_TIM_Base_MspInit()	166
6.47.2.3 HAL_TIM_IC_MspDeInit()	166
6.47.2.4 HAL_TIM_IC_MspInit()	166
6.47.2.5 HAL_TIM_MspPostInit()	167
6.47.2.6 MX_TIM1_Init()	167
6.47.2.7 MX_TIM2_Init()	168
6.47.2.8 MX_TIM4_Init()	168
6.47.2.9 MX_TIM6_Init()	169
6.47.2.10 MX_TIM8_Init()	169
6.47.3 Variable Documentation	170
6.47.3.1 htim1	170
6.47.3.2 htim2	170
6.47.3.3 htim4	170
6.47.3.4 htim6	170
6.47.3.5 htim8	170
6.48 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/usb_otg.c File Reference	171

6.48.1 Detailed Description	171
6.48.2 Function Documentation	172
6.48.2.1 MX_USB_OTG_FS_USB_Init()	172
Index	173

Chapter 1

Topic Index

1.1 Topics

Here is a list of all topics with brief descriptions:

CMSIS	7
Stm32f7xx_system	8
STM32F7xx_System_Private_Includes	9
STM32F7xx_System_Private_TypesDefinitions	9
STM32F7xx_System_Private_Defines	10
STM32F7xx_System_Private_Macros	10
STM32F7xx_System_Private_Variables	10
STM32F7xx_System_Private_FunctionPrototypes	11
STM32F7xx_System_Private_Functions	11

Chapter 2

Data Structure Index

2.1 Data Structures

Here are the data structures with brief descriptions:

angle_struct	15
avg_struct_10	16
clarke3F_struct	16
datalog_struct	17
filtreLP_struct	18
iclarke3F_struct	19
InverterOperation	
Inverter operation structure	20
irotd_struct	21
LED	
LED structure	22
pi_aw_struct	23
pi_struct	26
rampa_dual_struct	28
rampa_struct	29
RMS_struct	29
rot_struct	31
step_struct	32
svpwm_struct	33

Chapter 3

File Index

3.1 File List

Here is a list of all files with brief descriptions:

C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/ adc.h	
This file contains all the function prototypes for the adc.c file	35
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/ can.h	
This file contains all the function prototypes for the can.c file	40
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/ dac.h	
This file contains all the function prototypes for the dac.c file	42
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/ dma.h	
This file contains all the function prototypes for the dma.c file	45
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/ FSM.h	
Header file for Finite State Machine (FSM) control	47
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/ gpio.h	
This file contains all the function prototypes for the gpio.c file	50
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/ i2c.h	
This file contains all the function prototypes for the i2c.c file	53
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/ main.h	
: Header for main.c file. This file contains the common defines of the application	55
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/ PCB_IO.h	
Header file for handling GPIOs and other low-priority tasks	69
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/ Pergamon_float.h	74
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/ stm32f7xx_hal_conf.h	88
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/ stm32f7xx_it.h	
This file contains the headers of the interrupt handlers	106
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/ TASKS_1ms.h	
Header file for functions related to tasks executed every 1ms	112
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/ tim.h	
This file contains all the function prototypes for the tim.c file	114
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/ usb_otg.h	
This file contains all the function prototypes for the usb_otg.c file	120
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/ adc.c	
This file provides code for the configuration of the ADC instances	122
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/ can.c	
This file provides code for the configuration of the CAN instances	127
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/ dac.c	
This file provides code for the configuration of the DAC instances	129


C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/ dma.c	
This file provides code for the configuration of all the requested memory to memory DMA transfers	132
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/ FSM.c	
This file provides code for Finite State Machine (FSM) control	133
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/ gpio.c	
This file provides code for the configuration of all used GPIO pins	135
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/ i2c.c	
This file provides code for the configuration of the I2C instances	136
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/ main.c	
: Main program body	138
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/ PCB_IO.c	
This file provides functions for handling GPIOs and other low-priority tasks	143
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/ Pergamon_float.c	145
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/ stm32f7xx_hal_msp.c	
This file provides code for the MSP Initialization and de-Initialization codes	148
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/ stm32f7xx_it.c	
Interrupt Service Routines	149
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/ syscalls.c	
STM32CubeIDE Minimal System calls file	155
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/ sysmem.c	
STM32CubeIDE System Memory calls file	159
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/ system_stm32f7xx.c	
CMSIS Cortex-M7 Device Peripheral Access Layer System Source File	161
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/ TASKS_1ms.c	
This file contains functions to execute tasks every 1ms	163
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/ tim.c	
This file provides code for the configuration of the TIM instances	164
C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/ usb_otg.c	
This file provides code for the configuration of the USB_OTG instances	171

Chapter 4

Topic Documentation

4.1 CMSIS

Collaboration diagram for CMSIS:




Topics

- [Stm32f7xx_system](#)

4.1.1 Detailed Description

4.1.2 Stm32f7xx_system

Collaboration diagram for Stm32f7xx_system:

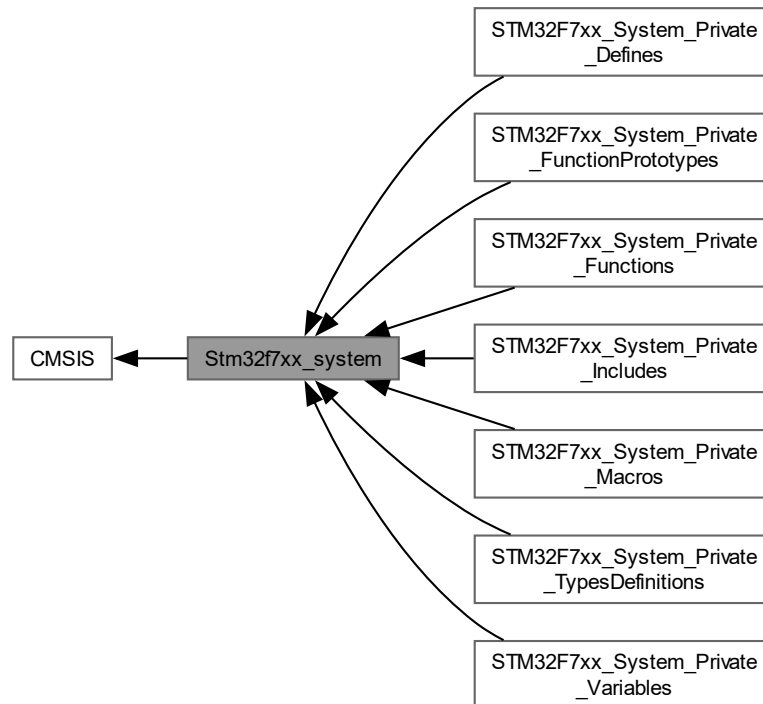


Topics

- [STM32F7xx_System_Private_Includes](#)
- [STM32F7xx_System_Private_TypesDefinitions](#)
- [STM32F7xx_System_Private_Defines](#)
- [STM32F7xx_System_Private_Macros](#)
- [STM32F7xx_System_Private_Variables](#)
- [STM32F7xx_System_Private_FunctionPrototypes](#)
- [STM32F7xx_System_Private_Functions](#)

4.1.2.1 Detailed Description

4.1.2.2 STM32F7xx_System_Private_Includes

Collaboration diagram for STM32F7xx_System_Private_Includes:



Macros

- #define [HSE_VALUE](#) ((uint32_t)25000000)
- #define [HSI_VALUE](#) ((uint32_t)16000000)

4.1.2.2.1 Detailed Description

4.1.2.2.2 Macro Definition Documentation

4.1.2.2.2.1 HSE_VALUE

```
#define HSE_VALUE ((uint32_t)25000000)
```

Default value of the External oscillator in Hz


4.1.2.2.2.2 HSI_VALUE

```
#define HSI_VALUE ((uint32_t)16000000)
```

Value of the Internal oscillator in Hz


4.1.2.3 STM32F7xx_System_Private_TypesDefinitions

Collaboration diagram for STM32F7xx_System_Private_TypesDefinitions:




4.1.2.4 STM32F7xx_System_Private_Defines

Collaboration diagram for STM32F7xx_System_Private_Defines:




4.1.2.5 STM32F7xx_System_Private_Macros

Collaboration diagram for STM32F7xx_System_Private_Macros:



4.1.2.6 STM32F7xx_System_Private_Variables

Collaboration diagram for STM32F7xx_System_Private_Variables:



Variables

- uint32_t [SystemCoreClock](#) = 16000000
- const uint8_t [AHBPrescTable](#) [16] = {0, 0, 0, 0, 0, 0, 0, 0, 1, 2, 3, 4, 6, 7, 8, 9}
- const uint8_t [APBPrescTable](#) [8] = {0, 0, 0, 0, 1, 2, 3, 4}

4.1.2.6.1 Detailed Description

4.1.2.6.2 Variable Documentation

4.1.2.6.2.1 AHBPrescTable

```
const uint8_t AHBPrescTable[16] = {0, 0, 0, 0, 0, 0, 0, 0, 0, 1, 2, 3, 4, 6, 7, 8, 9}
```

4.1.2.6.2.2 APBPrescTable


```
const uint8_t APBPrescTable[8] = {0, 0, 0, 0, 1, 2, 3, 4}
```

4.1.2.6.2.3 SystemCoreClock

```
uint32_t SystemCoreClock = 16000000
```


4.1.2.7 STM32F7xx_System_Private_FunctionPrototypes

Collaboration diagram for STM32F7xx_System_Private_FunctionPrototypes:



4.1.2.8 STM32F7xx_System_Private_Functions

Collaboration diagram for STM32F7xx_System_Private_Functions:



Functions

- void [SystemInit](#) (void)
Setup the microcontroller system Initialize the Embedded Flash Interface, the PLL and update the SystemFrequency variable.
- void [SystemCoreClockUpdate](#) (void)
Update SystemCoreClock variable according to Clock Register Values. The SystemCoreClock variable contains the core clock (HCLK), it can be used by the user application to setup the SysTick timer or configure other parameters.

4.1.2.8.1 Detailed Description

4.1.2.8.2 Function Documentation

4.1.2.8.2.1 SystemCoreClockUpdate()

```
void SystemCoreClockUpdate (
    void )
```

Update SystemCoreClock variable according to Clock Register Values. The SystemCoreClock variable contains the core clock (HCLK), it can be used by the user application to setup the SysTick timer or configure other parameters.

Note

Each time the core clock (HCLK) changes, this function must be called to update SystemCoreClock variable value. Otherwise, any configuration based on this variable will be incorrect.

- The system frequency computed by this function is not the real frequency in the chip. It is calculated based on the predefined constant and the selected clock source:

- If SYSCLK source is HSI, SystemCoreClock will contain the [HSI_VALUE\(*\)](#)
- If SYSCLK source is HSE, SystemCoreClock will contain the [HSE_VALUE\(**\)](#)
- If SYSCLK source is PLL, SystemCoreClock will contain the [HSE_VALUE\(**\)](#) or [HSI_VALUE\(*\)](#) multiplied/divided by the PLL factors.

(*) HSI_VALUE is a constant defined in [stm32f7xx_hal_conf.h](#) file (default value 16 MHz) but the real value may vary depending on the variations in voltage and temperature.

(**) HSE_VALUE is a constant defined in [stm32f7xx_hal_conf.h](#) file (default value 25 MHz), user has to ensure that HSE_VALUE is same as the real frequency of the crystal used. Otherwise, this function may have wrong result.

- The result of this function could be not correct when using fractional value for HSE crystal.

Parameters

None	
------	--

Return values

<i>None</i>	
-------------	--

4.1.2.8.2.2 SystemInit()

```
void SystemInit (  
    void )
```

Setup the microcontroller system Initialize the Embedded Flash Interface, the PLL and update the SystemFrequency variable.

Parameters

<i>None</i>	
-------------	--

Return values

<i>None</i>	
-------------	--

Chapter 5

Data Structure Documentation

5.1 angle_struct Struct Reference

```
#include <Pergamon_float.h>
```

Data Fields

- float [freq](#)
- float [Ts](#)
- float [angle](#)
- void(* [calc](#))()

5.1.1 Field Documentation

5.1.1.1 angle

```
float angle
```

5.1.1.2 calc

```
void(* calc) ()
```

5.1.1.3 freq

```
float freq
```

5.1.1.4 Ts

```
float Ts
```

The documentation for this struct was generated from the following file:

- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/[Pergamon_float.h](#)

5.2 avg_struct_10 Struct Reference

```
#include <Pergamon_float.h>
```

Data Fields

- float [out](#)
- float [in](#) [10]

5.2.1 Field Documentation

5.2.1.1 in

```
float in[10]
```

5.2.1.2 out

```
float out
```

The documentation for this struct was generated from the following file:

- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/[Pergamon_float.h](#)

5.3 clarke3F_struct Struct Reference

```
#include <Pergamon_float.h>
```

Data Fields

- float [a](#)
- float [b](#)
- float [D](#)
- float [Q](#)
- void(* [calc](#))()

5.3.1 Field Documentation

5.3.1.1 a

```
float a
```

5.3.1.2 b

```
float b
```

5.3.1.3 calc

```
void(* calc) ()
```

5.3.1.4 D

```
float D
```

5.3.1.5 Q

```
float Q
```

The documentation for this struct was generated from the following file:

- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/[Pergamon_float.h](#)

5.4 datalog_struct Struct Reference

```
#include <Pergamon_float.h>
```

Data Fields

- uint16_t [i](#)
- uint16_t [j](#)
- uint16_t [estat](#)
- uint16_t [prescaler](#)
- float * [var](#)
- void(* [calc](#))()
- float [log](#) [[N_DATALOG](#)]

5.4.1 Field Documentation

5.4.1.1 calc

```
void(* calc) ()
```

5.4.1.2 estat

```
uint16_t estat
```

5.4.1.3 i

```
uint16_t i
```

5.4.1.4 j

```
uint16_t j
```

5.4.1.5 log

```
float log[N_DATALOG]
```

5.4.1.6 prescaler

```
uint16_t prescaler
```

5.4.1.7 var

```
float* var
```

The documentation for this struct was generated from the following file:

- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/[Pergamon_float.h](#)

5.5 filtreLP_struct Struct Reference

```
#include <Pergamon_float.h>
```

Data Fields

- float [in](#)
- float [out](#)
- float [alfa](#)
- float [Ts](#)
- float [fc](#)
- uint16_t [enable](#)
- void(* [init](#))()
- void(* [calc](#))()

5.5.1 Field Documentation

5.5.1.1 alfa

```
float alfa
```

5.5.1.2 calc

```
void(* calc) ()
```

5.5.1.3 enable

```
uint16_t enable
```

5.5.1.4 fc

```
float fc
```

5.5.1.5 in

```
float in
```

5.5.1.6 init

```
void(* init) ()
```

5.5.1.7 out

```
float out
```

5.5.1.8 Ts

```
float Ts
```

The documentation for this struct was generated from the following file:

- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/[Pergamon_float.h](#)

5.6 iclarke3F_struct Struct Reference

```
#include <Pergamon_float.h>
```

Data Fields

- float [D](#)
- float [Q](#)
- float [a](#)
- float [b](#)
- void(* [calc](#))()

5.6.1 Field Documentation

5.6.1.1 a

```
float a
```

5.6.1.2 b

```
float b
```

5.6.1.3 calc

```
void(* calc) ()
```

5.6.1.4 D

```
float D
```

5.6.1.5 Q

```
float Q
```

The documentation for this struct was generated from the following file:

- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/[Pergamon_float.h](#)

5.7 InverterOperation Struct Reference

Inverter operation structure.

```
#include <FSM.h>
```

Data Fields

- [InverterOperationState](#) state
- GPIO_TypeDef * [LED_port](#)
- uint16_t [LED_pin](#)
- GPIO_TypeDef * [enable_port](#)
- uint16_t [enable_pin](#)

5.7.1 Detailed Description

Inverter operation structure.

5.7.2 Field Documentation

5.7.2.1 enable_pin

```
uint16_t enable_pin
```

Pin number for enabling/disabling the inverter

5.7.2.2 enable_port

```
GPIO_TypeDef* enable_port
```

GPIO port for enabling/disabling the inverter

5.7.2.3 LED_pin

```
uint16_t LED_pin
```

Pin number for controlling the [LED](#)

5.7.2.4 LED_port

```
GPIO_TypeDef* LED_port
```

GPIO port for controlling the [LED](#)

5.7.2.5 state

```
InverterOperationState state
```

Current state of the inverter operation

The documentation for this struct was generated from the following file:

- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/[FSM.h](#)

5.8 irot_struct Struct Reference

```
#include <Pergamon_float.h>
```

Data Fields

- float [d](#)
- float [q](#)
- float [sinFi](#)
- float [cosFi](#)
- float [D](#)
- float [Q](#)
- void(* [calc](#))()

5.8.1 Field Documentation

5.8.1.1 calc

```
void(* calc) ()
```

5.8.1.2 cosFi

```
float cosFi
```

5.8.1.3 d

```
float d
```

5.8.1.4 D

```
float D
```

5.8.1.5 q

```
float q
```

5.8.1.6 Q

```
float Q
```

5.8.1.7 sinFi

```
float sinFi
```

The documentation for this struct was generated from the following file:

- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/[Pergamon_float.h](#)

5.9 LED Struct Reference

[LED](#) structure.

```
#include <PCB_IO.h>
```

Data Fields

- GPIO_TypeDef * [port](#)
- uint16_t [pin](#)
- [LEDMode](#) [mode](#)

5.9.1 Detailed Description

[LED](#) structure.

5.9.2 Field Documentation

5.9.2.1 mode

[LEDMode](#) [mode](#)

Current [LED](#) mode

5.9.2.2 pin

uint16_t [pin](#)

Pin number for controlling the [LED](#)

5.9.2.3 port

GPIO_TypeDef* [port](#)

GPIO port for controlling the [LED](#)

The documentation for this struct was generated from the following file:

- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/[PCB_IO.h](#)

5.10 pi_aw_struct Struct Reference

```
#include <Pergamon_float.h>
```

Data Fields

- uint16_t [enable](#)
- float [Ts](#)
- float [Kp](#)
- float [Ki](#)
- float [Kaw](#)
- float [e](#) [2]
- float [pi_consig](#)
- float [pi_fdb](#)
- float [pi_out_max](#)
- float [pi_out_min](#)
- float [pi_out_presat](#)
- float [pi_out_postsat](#)
- float [pi_out](#)
- float [pi_int](#) [2]
- float [pi_ffw](#) [2]
- void(* [calc](#))()

5.10.1 Field Documentation

5.10.1.1 calc

```
void(* calc) ()
```

5.10.1.2 e

```
float e[2]
```

5.10.1.3 enable

```
uint16_t enable
```

5.10.1.4 Kaw

```
float Kaw
```

5.10.1.5 Ki

```
float Ki
```

5.10.1.6 Kp

```
float Kp
```

5.10.1.7 pi_consig

```
float pi_consig
```

5.10.1.8 pi_fdb

```
float pi_fdb
```

5.10.1.9 pi_ffw

```
float pi_ffw[2]
```

5.10.1.10 pi_int

```
float pi_int[2]
```

5.10.1.11 pi_out

```
float pi_out
```

5.10.1.12 pi_out_max

```
float pi_out_max
```

5.10.1.13 pi_out_min

```
float pi_out_min
```

5.10.1.14 pi_out_postsat

```
float pi_out_postsat
```

5.10.1.15 pi_out_presat

```
float pi_out_presat
```

5.10.1.16 Ts

```
float Ts
```

The documentation for this struct was generated from the following file:

- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/[Pergamon_float.h](#)

5.11 pi_struct Struct Reference

```
#include <Pergamon_float.h>
```

Data Fields

- uint16_t [enable](#)
- float [Ts](#)
- float [Kp](#)
- float [Ki](#)
- float [K0](#)
- float [K1](#)
- float [e](#) [2]
- float [pi_consig](#)
- float [pi_fdb](#)
- float [pi_out_max](#)
- float [pi_out_min](#)
- float [pi_out](#)
- float [pi_ffw](#) [2]
- void(* [init](#))()
- void(* [calc](#))()

5.11.1 Field Documentation

5.11.1.1 calc

```
void(* calc) ()
```

5.11.1.2 e

```
float e[2]
```

5.11.1.3 enable

```
uint16_t enable
```

5.11.1.4 init

```
void(* init) ()
```

5.11.1.5 K0

```
float K0
```

5.11.1.6 K1

float K1

5.11.1.7 Ki

float Ki

5.11.1.8 Kp

float Kp

5.11.1.9 pi_consig

float pi_consig

5.11.1.10 pi_fdb

float pi_fdb

5.11.1.11 pi_ffw

float pi_ffw[2]

5.11.1.12 pi_out

float pi_out

5.11.1.13 pi_out_max

float pi_out_max

5.11.1.14 pi_out_min

float pi_out_min

5.11.1.15 Ts

float Ts

The documentation for this struct was generated from the following file:

- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/[Pergamon_float.h](#)

5.12 rampa_dual_struct Struct Reference

```
#include <Pergamon_float.h>
```

Data Fields

- float [in](#)
- float [out](#)
- float [Incr](#)
- float [Decr](#)
- uint8_t [enable](#)
- void(* [calc](#))()

5.12.1 Field Documentation

5.12.1.1 calc

```
void(* calc) ()
```

5.12.1.2 Decr

```
float Decr
```

5.12.1.3 enable

```
uint8_t enable
```

5.12.1.4 in

```
float in
```

5.12.1.5 Incr

```
float Incr
```

5.12.1.6 out

```
float out
```

The documentation for this struct was generated from the following file:

- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/[Pergamon_float.h](#)

5.13 rampa_struct Struct Reference

```
#include <Pergamon_float.h>
```

Data Fields

- float [in](#)
- float [out](#)
- float [Incr](#)
- uint8_t [enable](#)
- void(* [calc](#))()

5.13.1 Field Documentation

5.13.1.1 calc

```
void(* calc) ()
```

5.13.1.2 enable

```
uint8_t enable
```

5.13.1.3 in

```
float in
```

5.13.1.4 Incr

```
float Incr
```

5.13.1.5 out

```
float out
```

The documentation for this struct was generated from the following file:

- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/[Pergamon_float.h](#)

5.14 RMS_struct Struct Reference

```
#include <Pergamon_float.h>
```

Data Fields

- float [T_exec](#)
- float [Measure](#)
- float [Sq_Sum](#)
- float [Out_RMS](#)
- float [Freq](#)
- float [Angle](#)
- float [Angle_ant](#)

5.14.1 Field Documentation

5.14.1.1 Angle

`float Angle`

5.14.1.2 Angle_ant

`float Angle_ant`

5.14.1.3 Freq

`float Freq`

5.14.1.4 Measure

`float Measure`

5.14.1.5 Out_RMS

`float Out_RMS`

5.14.1.6 Sq_Sum

`float Sq_Sum`

5.14.1.7 T_exec

`float T_exec`

The documentation for this struct was generated from the following file:

- [C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/Pergamon_float.h](#)

5.15 rot_struct Struct Reference

```
#include <Pergamon_float.h>
```

Data Fields

- float [D](#)
- float [Q](#)
- float [sinFi](#)
- float [cosFi](#)
- float [d](#)
- float [q](#)
- void(* [calc](#))()

5.15.1 Field Documentation

5.15.1.1 calc

```
void(* calc) ()
```

5.15.1.2 cosFi

```
float cosFi
```

5.15.1.3 D

```
float D
```

5.15.1.4 d

```
float d
```

5.15.1.5 Q

```
float Q
```

5.15.1.6 q

```
float q
```

5.15.1.7 sinFi

```
float sinFi
```

The documentation for this struct was generated from the following file:

- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/[Pergamon_float.h](#)

5.16 step_struct Struct Reference

```
#include <Pergamon_float.h>
```

Data Fields

- float [fs](#)
- float [In](#)
- float [Out](#)
- float [Step](#)
- float [t_step](#)
- uint32_t [Pulses](#)
- uint32_t [Counter](#)
- uint16_t [enable](#)
- void(* [calc](#))()

5.16.1 Field Documentation

5.16.1.1 calc

```
void(* calc) ()
```

5.16.1.2 Counter

```
uint32_t Counter
```

5.16.1.3 enable

```
uint16_t enable
```

5.16.1.4 fs

```
float fs
```

5.16.1.5 In

float In

5.16.1.6 Out

float Out

5.16.1.7 Pulses

uint32_t Pulses

5.16.1.8 Step

float Step

5.16.1.9 t_step

float t_step

The documentation for this struct was generated from the following file:

- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/[Pergamon_float.h](#)

5.17 svpwm_struct Struct Reference

```
#include <Pergamon_float.h>
```

Data Fields

- float [valfa](#)
- float [vbeta](#)
- float [Ta](#)
- float [Tb](#)
- float [Tc](#)
- void(* [calc](#))()

5.17.1 Field Documentation

5.17.1.1 calc

```
void(* calc) ()
```

5.17.1.2 Ta

`float Ta`

5.17.1.3 Tb

`float Tb`

5.17.1.4 Tc

`float Tc`

5.17.1.5 valfa

`float valfa`

5.17.1.6 vbeta

`float vbeta`

The documentation for this struct was generated from the following file:

- [C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/Pergamon_float.h](#)

Chapter 6


File Documentation

6.1 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/adc.h File Reference


This file contains all the function prototypes for the [adc.c](#) file.

```
#include "main.h"
```

Include dependency graph for adc.h:

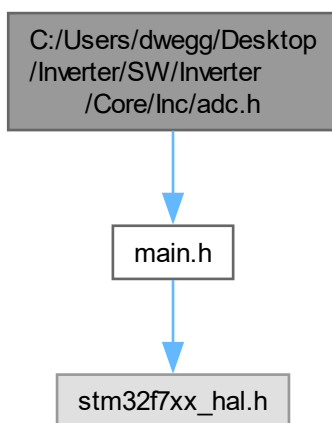

This graph shows which files directly or indirectly include this file:

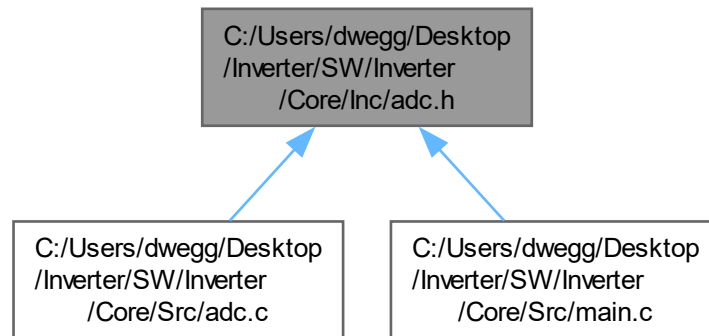

Functions

- void [MX_ADC1_Init](#) (void)
- void [MX_ADC2_Init](#) (void)
- void [MX_ADC3_Init](#) (void)

Variables

- ADC_HandleTypeDef [hadc1](#)
- ADC_HandleTypeDef [hadc2](#)
- ADC_HandleTypeDef [hadc3](#)

6.1.1 Detailed Description

This file contains all the function prototypes for the [adc.c](#) file.

Attention

Copyright (c) 2024 STMicroelectronics. All rights reserved.

This software is licensed under terms that can be found in the LICENSE file in the root directory of this software component. If no LICENSE file comes with this software, it is provided AS-IS.

6.1.2 Function Documentation

6.1.2.1 MX_ADC1_Init()

```
void MX_ADC1_Init (  
    void )
```

Configure the global features of the ADC (Clock, Resolution, Data Alignment and number of conversion)

Configure for the selected ADC regular channel its corresponding rank in the sequencer and its sample time.

Configure for the selected ADC regular channel its corresponding rank in the sequencer and its sample time.

Configure for the selected ADC regular channel its corresponding rank in the sequencer and its sample time. Here is the call graph for this function:



Here is the caller graph for this function:



6.1.2.2 MX_ADC2_Init()

```
void MX_ADC2_Init (  
    void )
```

Configure the global features of the ADC (Clock, Resolution, Data Alignment and number of conversion)

Configure for the selected ADC regular channel its corresponding rank in the sequencer and its sample time.

Configure for the selected ADC regular channel its corresponding rank in the sequencer and its sample time.

Configure for the selected ADC regular channel its corresponding rank in the sequencer and its sample time.

Configure for the selected ADC regular channel its corresponding rank in the sequencer and its sample time. Here is the call graph for this function:



Here is the caller graph for this function:



6.1.2.3 MX_ADC3_Init()

```
void MX_ADC3_Init (
    void )
```

Configure the global features of the ADC (Clock, Resolution, Data Alignment and number of conversion)

Configure for the selected ADC regular channel its corresponding rank in the sequencer and its sample time. Here is the call graph for this function:



Here is the caller graph for this function:



6.1.3 Variable Documentation

6.1.3.1 hadc1

```
ADC_HandleTypeDef hadc1 [extern]
```

6.1.3.2 hadc2

```
ADC_HandleTypeDef hadc2 [extern]
```

6.1.3.3 hadc3

```
ADC_HandleTypeDef hadc3 [extern]
```

6.2 adc.h

[Go to the documentation of this file.](#)


```
00001 /* USER CODE BEGIN Header */
00019 /* USER CODE END Header */
00020 /* Define to prevent recursive inclusion -----*/
00021 #ifndef __ADC_H__
00022 #define __ADC_H__
00023
00024 #ifdef __cplusplus
00025 extern "C" {
00026 #endif
00027
00028 /* Includes -----*/
00029 #include "main.h"
00030
00031 /* USER CODE BEGIN Includes */
00032
00033 /* USER CODE END Includes */
00034
00035 extern ADC_HandleTypeDef hadc1;
00036
00037 extern ADC_HandleTypeDef hadc2;
00038
00039 extern ADC_HandleTypeDef hadc3;
00040
00041 /* USER CODE BEGIN Private defines */
00042
00043 /* USER CODE END Private defines */
00044
00045 void MX_ADC1_Init(void);
00046 void MX_ADC2_Init(void);
00047 void MX_ADC3_Init(void);
00048
00049 /* USER CODE BEGIN Prototypes */
00050
00051 /* USER CODE END Prototypes */
00052
00053 #ifdef __cplusplus
00054 }
00055 #endif
00056
00057 #endif /* __ADC_H__ */
00058
```

6.3 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/can.h File Reference


This file contains all the function prototypes for the [can.c](#) file.

```
#include "main.h"
```

Include dependency graph for can.h:

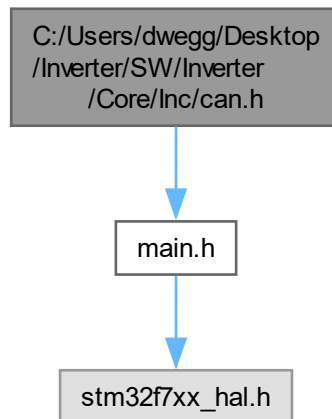

This graph shows which files directly or indirectly include this file:

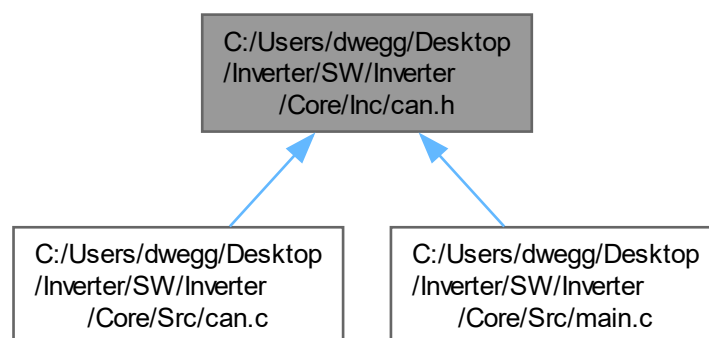

Functions

- void [MX_CAN1_Init](#) (void)

Variables

- CAN_HandleTypeDef [hcan1](#)

6.3.1 Detailed Description

This file contains all the function prototypes for the [can.c](#) file.

Attention

Copyright (c) 2024 STMicroelectronics. All rights reserved.

This software is licensed under terms that can be found in the LICENSE file in the root directory of this software component. If no LICENSE file comes with this software, it is provided AS-IS.

6.3.2 Function Documentation

6.3.2.1 MX_CAN1_Init()

```
void MX_CAN1_Init (  
    void )
```

Here is the call graph for this function:



Here is the caller graph for this function:



6.3.3 Variable Documentation

6.3.3.1 hcan1

CAN_HandleTypeDef hcan1 [extern]

6.4 can.h

[Go to the documentation of this file.](#)

```

00001 /* USER CODE BEGIN Header */
00019 /* USER CODE END Header */
00020 /* Define to prevent recursive inclusion -----*/
00021 #ifndef __CAN_H__
00022 #define __CAN_H__
00023
00024 #ifdef __cplusplus
00025 extern "C" {
00026 #endif
00027
00028 /* Includes -----*/
00029 #include "main.h"
00030
00031 /* USER CODE BEGIN Includes */
00032
00033 /* USER CODE END Includes */
00034
00035 extern CAN_HandleTypeDef hcan1;
00036
00037 /* USER CODE BEGIN Private defines */
00038
00039 /* USER CODE END Private defines */
00040
00041 void MX_CAN1_Init(void);
00042
00043 /* USER CODE BEGIN Prototypes */
00044
00045 /* USER CODE END Prototypes */
00046
00047 #ifdef __cplusplus
00048 }
00049 #endif
00050
00051 #endif /* __CAN_H__ */
00052


```

6.5 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/dac.h File Reference


This file contains all the function prototypes for the [dac.c](#) file.

```
#include "main.h"
```

Include dependency graph for dac.h:

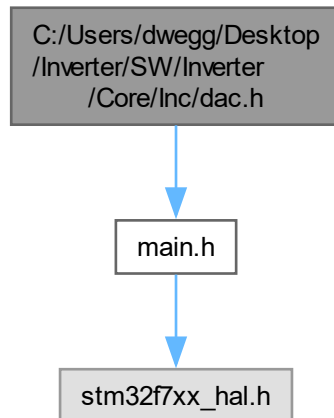

This graph shows which files directly or indirectly include this file:

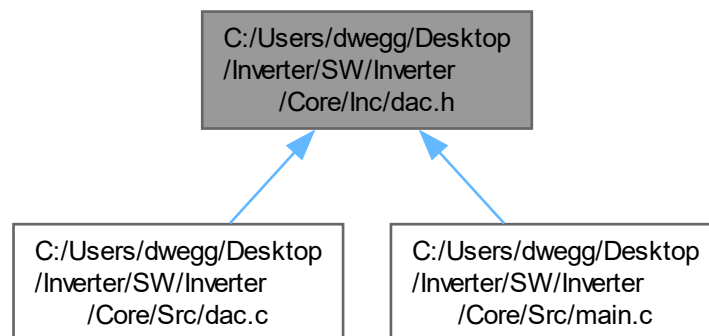

Functions

- void [MX_DAC_Init](#) (void)

Variables

- DAC_HandleTypeDef [hdac](#)

6.5.1 Detailed Description

This file contains all the function prototypes for the [dac.c](#) file.

Attention

Copyright (c) 2024 STMicroelectronics. All rights reserved.

This software is licensed under terms that can be found in the LICENSE file in the root directory of this software component. If no LICENSE file comes with this software, it is provided AS-IS.

6.5.2 Function Documentation

6.5.2.1 MX_DAC_Init()

```
void MX_DAC_Init (  
    void )
```

DAC Initialization

DAC channel OUT1 configHere is the call graph for this function:



Here is the caller graph for this function:



6.5.3 Variable Documentation

6.5.3.1 hdac

```
DAC_HandleTypeDef hdac [extern]
```


6.6 dac.h

[Go to the documentation of this file.](#)

```

00001 /* USER CODE BEGIN Header */
00019 /* USER CODE END Header */
00020 /* Define to prevent recursive inclusion -----*/
00021 #ifndef __DAC_H__
00022 #define __DAC_H__
00023
00024 #ifdef __cplusplus
00025 extern "C" {
00026 #endif
00027
00028 /* Includes -----*/
00029 #include "main.h"
00030
00031 /* USER CODE BEGIN Includes */
00032
00033 /* USER CODE END Includes */
00034
00035 extern DAC_HandleTypeDef hdac;
00036
00037 /* USER CODE BEGIN Private defines */
00038
00039 /* USER CODE END Private defines */
00040
00041 void MX_DAC_Init(void);
00042
00043 /* USER CODE BEGIN Prototypes */
00044
00045 /* USER CODE END Prototypes */
00046
00047 #ifdef __cplusplus
00048 }
00049 #endif
00050
00051 #endif /* __DAC_H__ */
00052


```

6.7 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/dma.h File Reference


This file contains all the function prototypes for the [dma.c](#) file.

```
#include "main.h"
```

Include dependency graph for dma.h:

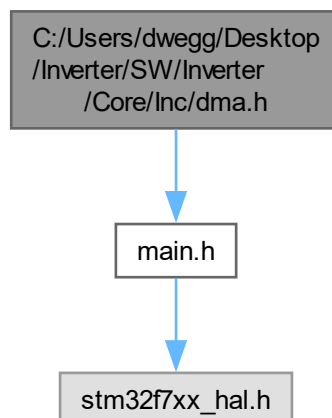

This graph shows which files directly or indirectly include this file:

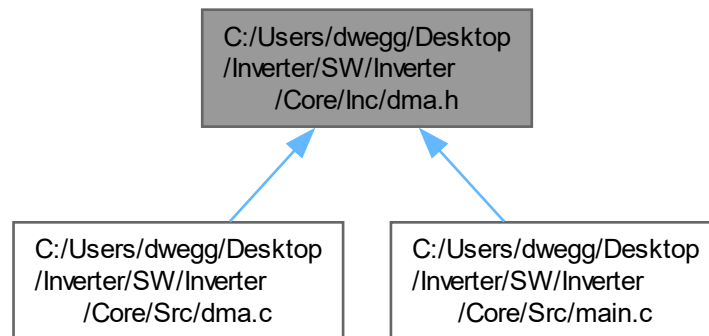

Functions

- void [MX_DMA_Init](#) (void)

6.7.1 Detailed Description

This file contains all the function prototypes for the [dma.c](#) file.

Attention

Copyright (c) 2024 STMicroelectronics. All rights reserved.

This software is licensed under terms that can be found in the LICENSE file in the root directory of this software component. If no LICENSE file comes with this software, it is provided AS-IS.

6.7.2 Function Documentation

6.7.2.1 MX_DMA_Init()

```
void MX_DMA_Init (
    void )
```

Enable DMA controller clock Here is the caller graph for this function:



6.8 dma.h

[Go to the documentation of this file.](#)

```

00001 /* USER CODE BEGIN Header */
00019 /* USER CODE END Header */
00020 /* Define to prevent recursive inclusion -----*/
00021 #ifndef __DMA_H__
00022 #define __DMA_H__
00023
00024 #ifdef __cplusplus
00025 extern "C" {
00026 #endif
00027
00028 /* Includes -----*/
00029 #include "main.h"
00030
00031 /* DMA memory to memory transfer handles -----*/
00032
00033 /* USER CODE BEGIN Includes */
00034
00035 /* USER CODE END Includes */
00036
00037 /* USER CODE BEGIN Private defines */
00038
00039 /* USER CODE END Private defines */
00040
00041 void MX_DMA_Init(void);
00042
00043 /* USER CODE BEGIN Prototypes */
00044
00045 /* USER CODE END Prototypes */
00046
00047 #ifdef __cplusplus
00048 }
00049 #endif
00050
00051 #endif /* __DMA_H__ */
00052

```

6.9 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/FSM.h File Reference


Header file for Finite State Machine (FSM) control.

```


#include "stm32f7xx_hal.h"
#include <stdbool.h>

```

Include dependency graph for FSM.h:

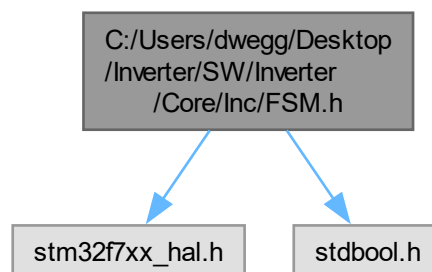

This graph shows which files directly or indirectly include this file:

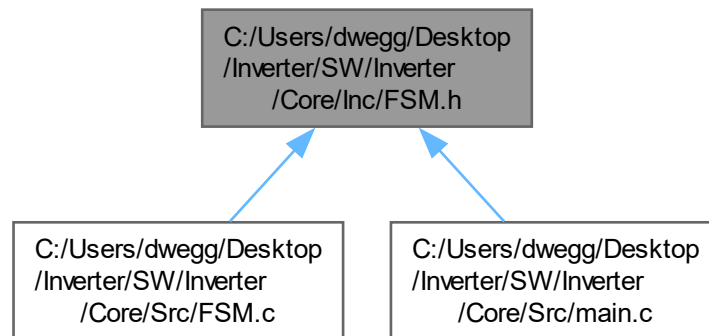

Data Structures

- struct `InverterOperation`
Inverter operation structure.

Enumerations

- enum `InverterOperationState` { `INV_STATE_IDLE` , `INV_STATE_STARTUP` , `INV_STATE_RUNNING` , `INV_STATE_FAULT` }
Enumeration of inverter operation states.

Functions

- void `inv_init` (`InverterOperation` *inv)
Initialize the inverter operation structure.
- void `inv_FSM` (`InverterOperation` *inv)
Run the Finite State Machine (FSM) for inverter operation control.

6.9.1 Detailed Description

Header file for Finite State Machine (FSM) control.

Attention

Copyright (c) 2024 David Redondo (@dweggg in GitHub). All rights reserved.

This software is licensed under the Attribution-NonCommercial-ShareAlike 4.0 International (CC BY-NC-SA 4.0) license. For more information, see: <https://creativecommons.org/licenses/by-nc-sa/4.0/legalcode>

6.9.2 Enumeration Type Documentation

6.9.2.1 InverterOperationState

```
enum InverterOperationState
```

Enumeration of inverter operation states.

Enumerator

INV_STATE_IDLE	Inverter idle state
INV_STATE_STARTUP	Inverter startup state
INV_STATE_RUNNING	Inverter running state
INV_STATE_FAULT	Inverter fault state

6.9.3 Function Documentation

6.9.3.1 inv_FSM()

```
void inv_FSM (  
    InverterOperation * inv )
```

Run the Finite State Machine (FSM) for inverter operation control.

Parameters

<i>inv</i>	Pointer to the inverter operation structure.
------------	--

Here is the caller graph for this function:



6.9.3.2 inv_init()

```
void inv_init (  
    InverterOperation * inv )
```

Initialize the inverter operation structure.

Parameters

<i>inv</i>	Pointer to the inverter operation structure.
------------	--

6.10 FSM.h

[Go to the documentation of this file.](#)

```

00001 /* USER CODE BEGIN Header */
00018 /* USER CODE END Header */
00019
00020 #ifndef FSM_H
00021 #define FSM_H
00022
00023 #include "stm32f7xx_hal.h"
00024 #include <stdbool.h>
00025
00029 typedef enum {
00030     INV_STATE_IDLE,
00031     INV_STATE_STARTUP,
00032     INV_STATE_RUNNING,
00033     INV_STATE_FAULT
00034 } InverterOperationState;
00035
00039 typedef struct {
00040     InverterOperationState state;
00042     // GPIO pins for LEDs
00043     GPIO_TypeDef *LED_port;
00044     uint16_t LED_pin;
00046     // GPIO pin for enable/disable
00047     GPIO_TypeDef *enable_port;
00048     uint16_t enable_pin;
00050     // Add any other inverter-specific variables here
00051 } InverterOperation;
00052
00058 void inv_init(InverterOperation *inv);
00059
00065 void inv_FSM(InverterOperation *inv);
00066
00067 #endif /* FSM_H */


```

6.11 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/gpio.h File Reference


This file contains all the function prototypes for the [gpio.c](#) file.

```
#include "main.h"
```

Include dependency graph for gpio.h:

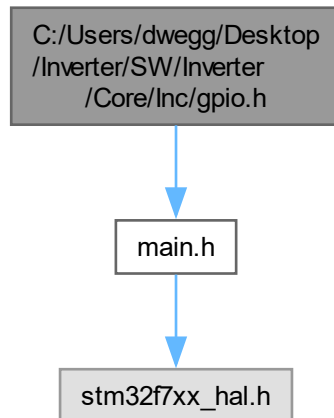

This graph shows which files directly or indirectly include this file:

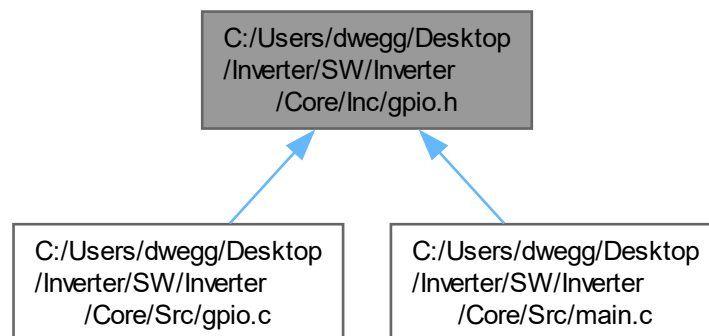

Functions

- void [MX_GPIO_Init](#) (void)

6.11.1 Detailed Description

This file contains all the function prototypes for the [gpio.c](#) file.

Attention

Copyright (c) 2024 STMicroelectronics. All rights reserved.

This software is licensed under terms that can be found in the LICENSE file in the root directory of this software component. If no LICENSE file comes with this software, it is provided AS-IS.

6.11.2 Function Documentation**6.11.2.1 MX_GPIO_Init()**

```
void MX_GPIO_Init (
    void )
```

Configure pins as Analog Input Output EVENT_OUT EXTI PA9 -----> USB_OTG_FS_VBUS PA10 -----> USB_OTG_FS_ID PA11 -----> USB_OTG_FS_DM PA12 -----> USB_OTG_FS_DP Here is the caller graph for this function:

**6.12 gpio.h**

[Go to the documentation of this file.](#)

```


00001 /* USER CODE BEGIN Header */
00019 /* USER CODE END Header */
00020 /* Define to prevent recursive inclusion -----*/
00021 #ifndef __GPIO_H__
00022 #define __GPIO_H__
00023
00024 #ifdef __cplusplus
00025 extern "C" {
00026 #endif
00027
00028 /* Includes -----*/
00029 #include "main.h"
00030
00031 /* USER CODE BEGIN Includes */
00032
00033 /* USER CODE END Includes */
00034
00035 /* USER CODE BEGIN Private defines */
00036
00037 /* USER CODE END Private defines */
00038
00039 void MX_GPIO_Init(void);
00040
00041 /* USER CODE BEGIN Prototypes */
00042
00043 /* USER CODE END Prototypes */
00044
00045 #ifdef __cplusplus
00046 }
00047 #endif
00048 #endif /*__ GPIO_H__ */
00049
```


6.13 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/i2c.h File Reference


This file contains all the function prototypes for the [i2c.c](#) file.

```
#include "main.h"
```

Include dependency graph for i2c.h:

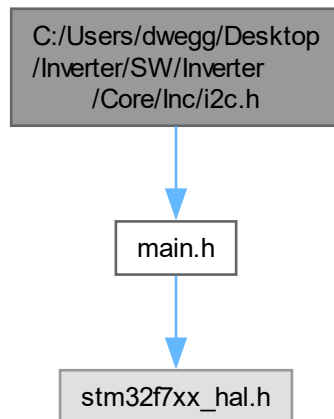

This graph shows which files directly or indirectly include this file:

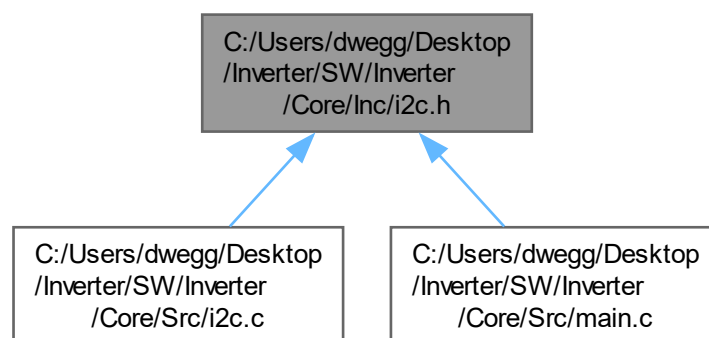

Functions

- void [MX_I2C1_Init](#) (void)

Variables

- I2C_HandleTypeDef [hi2c1](#)

6.13.1 Detailed Description

This file contains all the function prototypes for the [i2c.c](#) file.

Attention

Copyright (c) 2024 STMicroelectronics. All rights reserved.

This software is licensed under terms that can be found in the LICENSE file in the root directory of this software component. If no LICENSE file comes with this software, it is provided AS-IS.

6.13.2 Function Documentation

6.13.2.1 MX_I2C1_Init()

```
void MX_I2C1_Init (  
    void )
```

Configure Analogue filter

Configure Digital filterHere is the call graph for this function:



Here is the caller graph for this function:



6.13.3 Variable Documentation

6.13.3.1 hi2c1

I2C_HandleTypeDef hi2c1 [extern]

6.14 i2c.h

[Go to the documentation of this file.](#)

```

00001 /* USER CODE BEGIN Header */
00019 /* USER CODE END Header */
00020 /* Define to prevent recursive inclusion -----*/
00021 #ifndef __I2C_H__
00022 #define __I2C_H__
00023
00024 #ifdef __cplusplus
00025 extern "C" {
00026 #endif
00027
00028 /* Includes -----*/
00029 #include "main.h"
00030
00031 /* USER CODE BEGIN Includes */
00032
00033 /* USER CODE END Includes */
00034
00035 extern I2C_HandleTypeDef hi2c1;
00036
00037 /* USER CODE BEGIN Private defines */
00038
00039 /* USER CODE END Private defines */
00040
00041 void MX_I2C1_Init(void);
00042
00043 /* USER CODE BEGIN Prototypes */
00044
00045 /* USER CODE END Prototypes */
00046
00047 #ifdef __cplusplus
00048 }
00049 #endif
00050
00051 #endif /* __I2C_H__ */
00052

```

6.15 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/main.h File Reference

: Header for [main.c](#) file. This file contains the common defines of the application.

- #define SC_det_Pin GPIO_PIN_4
- #define SC_det_GPIO_Port GPIOC
- #define ic_R_Pin GPIO_PIN_0
- #define ic_R_GPIO_Port GPIOB
- #define VDC_R_Pin GPIO_PIN_1
- #define VDC_R_GPIO_Port GPIOB
- #define ENABLE_R_Pin GPIO_PIN_2
- #define ENABLE_R_GPIO_Port GPIOB
- #define ENABLE_L_Pin GPIO_PIN_7
- #define ENABLE_L_GPIO_Port GPIOE
- #define PWM1_L_Pin GPIO_PIN_8
- #define PWM1_L_GPIO_Port GPIOE
- #define PWM2_L_Pin GPIO_PIN_9
- #define PWM2_L_GPIO_Port GPIOE
- #define PWM3_L_Pin GPIO_PIN_10
- #define PWM3_L_GPIO_Port GPIOE
- #define PWM4_L_Pin GPIO_PIN_11
- #define PWM4_L_GPIO_Port GPIOE
- #define PWM5_L_Pin GPIO_PIN_12
- #define PWM5_L_GPIO_Port GPIOE
- #define PWM6_L_Pin GPIO_PIN_13
- #define PWM6_L_GPIO_Port GPIOE
- #define WRN_L_Pin GPIO_PIN_14
- #define WRN_L_GPIO_Port GPIOE
- #define WRN_R_Pin GPIO_PIN_15
- #define WRN_R_GPIO_Port GPIOE
- #define B_R_Pin GPIO_PIN_10
- #define B_R_GPIO_Port GPIOB
- #define Z_R_Pin GPIO_PIN_11
- #define Z_R_GPIO_Port GPIOB
- #define PWM3_R_Pin GPIO_PIN_14
- #define PWM3_R_GPIO_Port GPIOB
- #define PWM5_R_Pin GPIO_PIN_15
- #define PWM5_R_GPIO_Port GPIOB
- #define A_L_Pin GPIO_PIN_12
- #define A_L_GPIO_Port GPIOD
- #define B_L_Pin GPIO_PIN_14
- #define B_L_GPIO_Port GPIOD
- #define Z_L_Pin GPIO_PIN_15
- #define Z_L_GPIO_Port GPIOD
- #define PWM2_R_Pin GPIO_PIN_6
- #define PWM2_R_GPIO_Port GPIOC
- #define PWM4_R_Pin GPIO_PIN_7
- #define PWM4_R_GPIO_Port GPIOC
- #define PWM6_R_Pin GPIO_PIN_8
- #define PWM6_R_GPIO_Port GPIOC
- #define TRIP_R_Pin GPIO_PIN_9
- #define TRIP_R_GPIO_Port GPIOC
- #define TRIP_L_Pin GPIO_PIN_8
- #define TRIP_L_GPIO_Port GPIOA
- #define A_R_Pin GPIO_PIN_15
- #define A_R_GPIO_Port GPIOA
- #define DIR_Pin GPIO_PIN_3
- #define DIR_GPIO_Port GPIOD
- #define LED_LEFT_Pin GPIO_PIN_4

- `#define LED_LEFT_GPIO_Port GPIOD`
- `#define LED_RIGHT_Pin GPIO_PIN_5`
- `#define LED_RIGHT_GPIO_Port GPIOD`
- `#define LED_ERR_Pin GPIO_PIN_6`
- `#define LED_ERR_GPIO_Port GPIOD`

Functions

- void `Error_Handler` (void)
This function is executed in case of error occurrence.

Variables

- volatile uint32_t `ADC2_raw` [4]

6.15.1 Detailed Description

: Header for `main.c` file. This file contains the common defines of the application.

Attention

Copyright (c) 2023 STMicroelectronics. All rights reserved.

This software is licensed under terms that can be found in the LICENSE file in the root directory of this software component. If no LICENSE file comes with this software, it is provided AS-IS.

6.15.2 Macro Definition Documentation

6.15.2.1 A_L_GPIO_Port

```
#define A_L_GPIO_Port GPIOD
```

6.15.2.2 A_L_Pin

```
#define A_L_Pin GPIO_PIN_12
```

6.15.2.3 A_R_GPIO_Port

```
#define A_R_GPIO_Port GPIOA
```

6.15.2.4 A_R_Pin

```
#define A_R_Pin GPIO_PIN_15
```

6.15.2.5 B_L_GPIO_Port

```
#define B_L_GPIO_Port GPIOD
```

6.15.2.6 B_L_Pin

```
#define B_L_Pin GPIO_PIN_14
```

6.15.2.7 B_R_GPIO_Port

```
#define B_R_GPIO_Port GPIOB
```

6.15.2.8 B_R_Pin

```
#define B_R_Pin GPIO_PIN_10
```

6.15.2.9 DAC_GPIO_Port

```
#define DAC_GPIO_Port GPIOA
```

6.15.2.10 DAC_Pin

```
#define DAC_Pin GPIO_PIN_4
```

6.15.2.11 DIR_GPIO_Port

```
#define DIR_GPIO_Port GPIOD
```

6.15.2.12 DIR_Pin

```
#define DIR_Pin GPIO_PIN_3
```

6.15.2.13 ENABLE_L_GPIO_Port

```
#define ENABLE_L_GPIO_Port GPIOE
```

6.15.2.14 ENABLE_L_Pin

```
#define ENABLE_L_Pin GPIO_PIN_7
```

6.15.2.15 ENABLE_R_GPIO_Port

```
#define ENABLE_R_GPIO_Port GPIOB
```

6.15.2.16 ENABLE_R_Pin

```
#define ENABLE_R_Pin GPIO_PIN_2
```

6.15.2.17 ia_L_GPIO_Port

```
#define ia_L_GPIO_Port GPIOA
```

6.15.2.18 ia_L_Pin

```
#define ia_L_Pin GPIO_PIN_0
```

6.15.2.19 ia_R_GPIO_Port

```
#define ia_R_GPIO_Port GPIOA
```

6.15.2.20 ia_R_Pin

```
#define ia_R_Pin GPIO_PIN_6
```

6.15.2.21 ib_L_GPIO_Port

```
#define ib_L_GPIO_Port GPIOA
```

6.15.2.22 ib_L_Pin

```
#define ib_L_Pin GPIO_PIN_1
```

6.15.2.23 ib_R_GPIO_Port

```
#define ib_R_GPIO_Port GPIOA
```

6.15.2.24 ib_R_Pin

```
#define ib_R_Pin GPIO_PIN_7
```


6.15.2.25 ic_L_GPIO_Port

```
#define ic_L_GPIO_Port GPIOA
```

6.15.2.26 ic_L_Pin

```
#define ic_L_Pin GPIO_PIN_2
```

6.15.2.27 ic_R_GPIO_Port

```
#define ic_R_GPIO_Port GPIOB
```

6.15.2.28 ic_R_Pin

```
#define ic_R_Pin GPIO_PIN_0
```

6.15.2.29 LED_ERR_GPIO_Port

```
#define LED_ERR_GPIO_Port GPIOD
```

6.15.2.30 LED_ERR_Pin

```
#define LED_ERR_Pin GPIO_PIN_6
```

6.15.2.31 LED_LEFT_GPIO_Port

```
#define LED_LEFT_GPIO_Port GPIOD
```

6.15.2.32 LED_LEFT_Pin

```
#define LED_LEFT_Pin GPIO_PIN_4
```

6.15.2.33 LED_RIGHT_GPIO_Port

```
#define LED_RIGHT_GPIO_Port GPIOD
```

6.15.2.34 LED_RIGHT_Pin

```
#define LED_RIGHT_Pin GPIO_PIN_5
```

6.15.2.35 PWM1_L_GPIO_Port

```
#define PWM1_L_GPIO_Port GPIOE
```

6.15.2.36 PWM1_L_Pin

```
#define PWM1_L_Pin GPIO_PIN_8
```

6.15.2.37 PWM1_R_GPIO_Port

```
#define PWM1_R_GPIO_Port GPIOA
```

6.15.2.38 PWM1_R_Pin

```
#define PWM1_R_Pin GPIO_PIN_5
```

6.15.2.39 PWM2_L_GPIO_Port

```
#define PWM2_L_GPIO_Port GPIOE
```

6.15.2.40 PWM2_L_Pin

```
#define PWM2_L_Pin GPIO_PIN_9
```

6.15.2.41 PWM2_R_GPIO_Port

```
#define PWM2_R_GPIO_Port GPIOC
```

6.15.2.42 PWM2_R_Pin

```
#define PWM2_R_Pin GPIO_PIN_6
```

6.15.2.43 PWM3_L_GPIO_Port

```
#define PWM3_L_GPIO_Port GPIOE
```

6.15.2.44 PWM3_L_Pin

```
#define PWM3_L_Pin GPIO_PIN_10
```

6.15.2.45 PWM3_R_GPIO_Port

```
#define PWM3_R_GPIO_Port GPIOB
```

6.15.2.46 PWM3_R_Pin

```
#define PWM3_R_Pin GPIO_PIN_14
```

6.15.2.47 PWM4_L_GPIO_Port

```
#define PWM4_L_GPIO_Port GPIOE
```

6.15.2.48 PWM4_L_Pin

```
#define PWM4_L_Pin GPIO_PIN_11
```

6.15.2.49 PWM4_R_GPIO_Port

```
#define PWM4_R_GPIO_Port GPIOC
```

6.15.2.50 PWM4_R_Pin

```
#define PWM4_R_Pin GPIO_PIN_7
```

6.15.2.51 PWM5_L_GPIO_Port

```
#define PWM5_L_GPIO_Port GPIOE
```

6.15.2.52 PWM5_L_Pin

```
#define PWM5_L_Pin GPIO_PIN_12
```

6.15.2.53 PWM5_R_GPIO_Port

```
#define PWM5_R_GPIO_Port GPIOB
```

6.15.2.54 PWM5_R_Pin

```
#define PWM5_R_Pin GPIO_PIN_15
```

6.15.2.55 PWM6_L_GPIO_Port

```
#define PWM6_L_GPIO_Port GPIOE
```

6.15.2.56 PWM6_L_Pin

```
#define PWM6_L_Pin GPIO_PIN_13
```

6.15.2.57 PWM6_R_GPIO_Port

```
#define PWM6_R_GPIO_Port GPIOC
```

6.15.2.58 PWM6_R_Pin

```
#define PWM6_R_Pin GPIO_PIN_8
```

6.15.2.59 SC_det_GPIO_Port

```
#define SC_det_GPIO_Port GPIOC
```

6.15.2.60 SC_det_Pin

```
#define SC_det_Pin GPIO_PIN_4
```

6.15.2.61 Tinv_L_GPIO_Port

```
#define Tinv_L_GPIO_Port GPIOC
```

6.15.2.62 Tinv_L_Pin

```
#define Tinv_L_Pin GPIO_PIN_0
```

6.15.2.63 Tinv_R_GPIO_Port

```
#define Tinv_R_GPIO_Port GPIOC
```

6.15.2.64 Tinv_R_Pin

```
#define Tinv_R_Pin GPIO_PIN_1
```

6.15.2.65 Tmot_L_GPIO_Port

```
#define Tmot_L_GPIO_Port GPIOC
```

6.15.2.66 Tmot_L_Pin

```
#define Tmot_L_Pin GPIO_PIN_2
```

6.15.2.67 Tmot_R_GPIO_Port

```
#define Tmot_R_GPIO_Port GPIOC
```

6.15.2.68 Tmot_R_Pin

```
#define Tmot_R_Pin GPIO_PIN_3
```

6.15.2.69 TRIP_L_GPIO_Port

```
#define TRIP_L_GPIO_Port GPIOA
```

6.15.2.70 TRIP_L_Pin

```
#define TRIP_L_Pin GPIO_PIN_8
```

6.15.2.71 TRIP_R_GPIO_Port

```
#define TRIP_R_GPIO_Port GPIOC
```

6.15.2.72 TRIP_R_Pin

```
#define TRIP_R_Pin GPIO_PIN_9
```

6.15.2.73 VDC_L_GPIO_Port

```
#define VDC_L_GPIO_Port GPIOA
```

6.15.2.74 VDC_L_Pin

```
#define VDC_L_Pin GPIO_PIN_3
```

6.15.2.75 VDC_R_GPIO_Port

```
#define VDC_R_GPIO_Port GPIOB
```

6.15.2.76 VDC_R_Pin

```
#define VDC_R_Pin GPIO_PIN_1
```

6.15.2.77 WRN_L_GPIO_Port

```
#define WRN_L_GPIO_Port GPIOE
```

6.15.2.78 WRN_L_Pin

```
#define WRN_L_Pin GPIO_PIN_14
```

6.15.2.79 WRN_R_GPIO_Port

```
#define WRN_R_GPIO_Port GPIOE
```

6.15.2.80 WRN_R_Pin

```
#define WRN_R_Pin GPIO_PIN_15
```

6.15.2.81 Z_L_GPIO_Port

```
#define Z_L_GPIO_Port GPIOD
```

6.15.2.82 Z_L_Pin

```
#define Z_L_Pin GPIO_PIN_15
```

6.15.2.83 Z_R_GPIO_Port

```
#define Z_R_GPIO_Port GPIOB
```

6.15.2.84 Z_R_Pin

```
#define Z_R_Pin GPIO_PIN_11
```

6.15.3 Function Documentation

6.15.3.1 Error_Handler()


```
void Error_Handler (  
    void )
```

This function is executed in case of error occurrence.

Return values

None	
------	--

Here is the caller graph for this function:

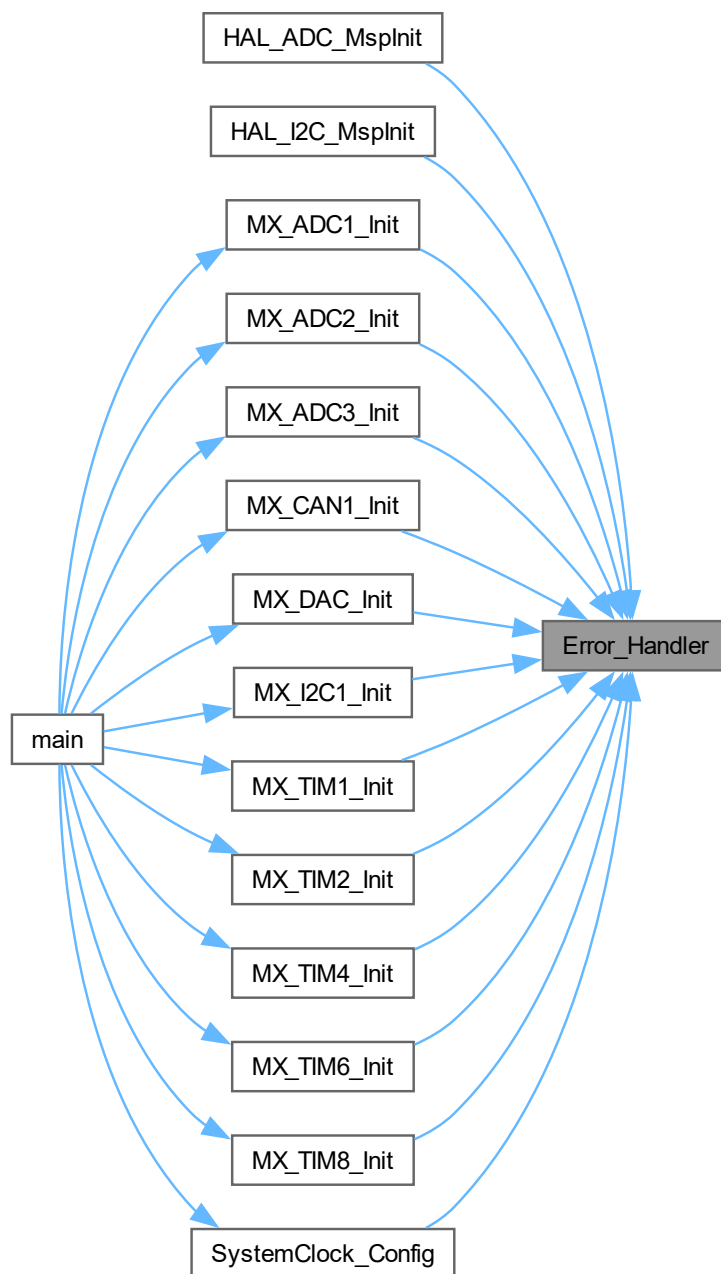

6.15.4 Variable Documentation

6.15.4.1 ADC2_raw

```
volatile uint32_t ADC2_raw[4] [extern]
```

6.16 main.h

[Go to the documentation of this file.](#)

```
00001 /* USER CODE BEGIN Header */
00019 /* USER CODE END Header */
00020
00021 /* Define to prevent recursive inclusion -----*/
00022 #ifndef __MAIN_H
00023 #define __MAIN_H
00024
00025 #ifdef __cplusplus
00026 extern "C" {
00027 #endif
00028
00029 /* Includes -----*/
00030 #include "stm32f7xx_hal.h"
00031
00032 /* Private includes -----*/
00033 /* USER CODE BEGIN Includes */
00034
00035 /* USER CODE END Includes */
00036
00037 /* Exported types -----*/
00038 /* USER CODE BEGIN ET */
00039
00040 /* USER CODE END ET */
00041
00042 /* Exported constants -----*/
00043 /* USER CODE BEGIN EC */
00044
00045 /* USER CODE END EC */
00046
00047 /* Exported macro -----*/
00048 /* USER CODE BEGIN EM */
00049
00050 /* USER CODE END EM */
00051
00052 /* Exported functions prototypes -----*/
00053 void Error_Handler(void);
00054
00055 /* USER CODE BEGIN EFP */
00056
00057 /* USER CODE END EFP */
00058
00059 /* Private defines -----*/
00060 #define Tinv_L_Pin GPIO_PIN_0
00061 #define Tinv_L_GPIO_Port GPIOC
00062 #define Tinv_R_Pin GPIO_PIN_1
00063 #define Tinv_R_GPIO_Port GPIOC
00064 #define Tmot_L_Pin GPIO_PIN_2
00065 #define Tmot_L_GPIO_Port GPIOC
00066 #define Tmot_R_Pin GPIO_PIN_3
00067 #define Tmot_R_GPIO_Port GPIOC
00068 #define ia_L_Pin GPIO_PIN_0
00069 #define ia_L_GPIO_Port GPIOA
00070 #define ib_L_Pin GPIO_PIN_1
00071 #define ib_L_GPIO_Port GPIOA
00072 #define ic_L_Pin GPIO_PIN_2
00073 #define ic_L_GPIO_Port GPIOA
00074 #define VDC_L_Pin GPIO_PIN_3
00075 #define VDC_L_GPIO_Port GPIOA
00076 #define DAC_Pin GPIO_PIN_4
00077 #define DAC_GPIO_Port GPIOA
00078 #define PWM1_R_Pin GPIO_PIN_5
00079 #define PWM1_R_GPIO_Port GPIOA
00080 #define ia_R_Pin GPIO_PIN_6
00081 #define ia_R_GPIO_Port GPIOA
00082 #define ib_R_Pin GPIO_PIN_7
00083 #define ib_R_GPIO_Port GPIOA
00084 #define SC_det_Pin GPIO_PIN_4
00085 #define SC_det_GPIO_Port GPIOC
```



```

00086 #define ic_R_Pin GPIO_PIN_0
00087 #define ic_R_GPIO_Port GPIOB
00088 #define VDC_R_Pin GPIO_PIN_1
00089 #define VDC_R_GPIO_Port GPIOB
00090 #define ENABLE_R_Pin GPIO_PIN_2
00091 #define ENABLE_R_GPIO_Port GPIOB
00092 #define ENABLE_L_Pin GPIO_PIN_7
00093 #define ENABLE_L_GPIO_Port GPIOE
00094 #define PWM1_L_Pin GPIO_PIN_8
00095 #define PWM1_L_GPIO_Port GPIOE
00096 #define PWM2_L_Pin GPIO_PIN_9
00097 #define PWM2_L_GPIO_Port GPIOE
00098 #define PWM3_L_Pin GPIO_PIN_10
00099 #define PWM3_L_GPIO_Port GPIOE
00100 #define PWM4_L_Pin GPIO_PIN_11
00101 #define PWM4_L_GPIO_Port GPIOE
00102 #define PWM5_L_Pin GPIO_PIN_12
00103 #define PWM5_L_GPIO_Port GPIOE
00104 #define PWM6_L_Pin GPIO_PIN_13
00105 #define PWM6_L_GPIO_Port GPIOE
00106 #define WRN_L_Pin GPIO_PIN_14
00107 #define WRN_L_GPIO_Port GPIOE
00108 #define WRN_R_Pin GPIO_PIN_15
00109 #define WRN_R_GPIO_Port GPIOE
00110 #define B_R_Pin GPIO_PIN_10
00111 #define B_R_GPIO_Port GPIOB
00112 #define Z_R_Pin GPIO_PIN_11
00113 #define Z_R_GPIO_Port GPIOB
00114 #define PWM3_R_Pin GPIO_PIN_14
00115 #define PWM3_R_GPIO_Port GPIOB
00116 #define PWM5_R_Pin GPIO_PIN_15
00117 #define PWM5_R_GPIO_Port GPIOB
00118 #define A_L_Pin GPIO_PIN_12
00119 #define A_L_GPIO_Port GPIOD
00120 #define B_L_Pin GPIO_PIN_14
00121 #define B_L_GPIO_Port GPIOD
00122 #define Z_L_Pin GPIO_PIN_15
00123 #define Z_L_GPIO_Port GPIOD
00124 #define PWM2_R_Pin GPIO_PIN_6
00125 #define PWM2_R_GPIO_Port GPIOC
00126 #define PWM4_R_Pin GPIO_PIN_7
00127 #define PWM4_R_GPIO_Port GPIOC
00128 #define PWM6_R_Pin GPIO_PIN_8
00129 #define PWM6_R_GPIO_Port GPIOC
00130 #define TRIP_R_Pin GPIO_PIN_9
00131 #define TRIP_R_GPIO_Port GPIOC
00132 #define TRIP_L_Pin GPIO_PIN_8
00133 #define TRIP_L_GPIO_Port GPIOA
00134 #define A_R_Pin GPIO_PIN_15
00135 #define A_R_GPIO_Port GPIOA
00136 #define DIR_Pin GPIO_PIN_3
00137 #define DIR_GPIO_Port GPIOD
00138 #define LED_LEFT_Pin GPIO_PIN_4
00139 #define LED_LEFT_GPIO_Port GPIOD
00140 #define LED_RIGHT_Pin GPIO_PIN_5
00141 #define LED_RIGHT_GPIO_Port GPIOD
00142 #define LED_ERR_Pin GPIO_PIN_6
00143 #define LED_ERR_GPIO_Port GPIOD
00144
00145 /* USER CODE BEGIN Private defines */
00146 extern volatile uint32_t ADC2_raw[4];
00147
00148 /* USER CODE END Private defines */
00149
00150 #ifndef __cplusplus
00151 }
00152 #endif
00153
00154 #endif /* __MAIN_H */


```

6.17 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/PCB_IO.h File Reference


Header file for handling GPIOs and other low-priority tasks.

```
#include "stm32f7xx_hal.h"
```

Include dependency graph for PCB_IO.h:

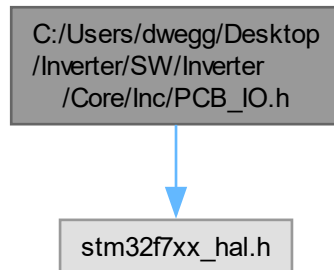

This graph shows which files directly or indirectly include this file:

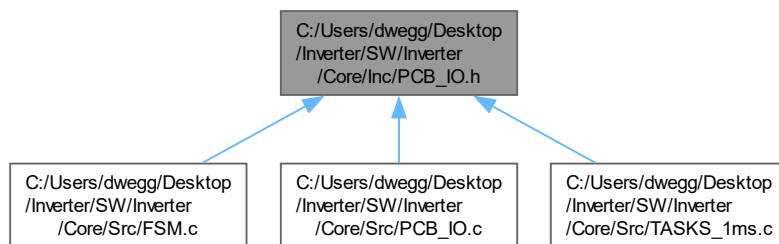

Data Structures

- struct [LED](#)
LED structure.

Macros

- #define [SC_DET_STATE\(\)](#) (HAL_GPIO_ReadPin(SC_det_GPIO_Port, SC_det_Pin))
- #define [DIR_STATE\(\)](#) (HAL_GPIO_ReadPin(DIR_GPIO_Port, DIR_Pin))
- #define [WRN_STATE](#)(port, pin) (HAL_GPIO_ReadPin(port, pin))
- #define [ENABLE](#)(port, pin) do { HAL_GPIO_WritePin(port, pin, GPIO_PIN_SET); } while(0)
- #define [DISABLE](#)(port, pin) do { HAL_GPIO_WritePin(port, pin, GPIO_PIN_RESET); } while(0)

Enumerations

- enum [LEDMode](#) { [LED_MODE_BLINK_FAST](#) , [LED_MODE_BLINK_SLOW](#) , [LED_MODE_ON](#) , [LED_MODE_OFF](#) }

Functions

- void `LED_handler` (`LED` *led, uint32_t ms_counter)
LED handler function.

Variables

- `LED led_left`
- `LED led_right`
- `LED led_error`

6.17.1 Detailed Description

Header file for handling GPIOs and other low-priority tasks.

Attention

Copyright (c) 2024 David Redondo (@dweggg in GitHub). All rights reserved.

This software is licensed under the Attribution-NonCommercial-ShareAlike 4.0 International (CC BY-NC-SA 4.0) license. For more information, see: <https://creativecommons.org/licenses/by-nc-sa/4.0/legalcode>

6.17.2 Macro Definition Documentation

6.17.2.1 DIR_STATE

```
#define DIR_STATE( ) (HAL_GPIO_ReadPin(DIR_GPIO_Port, DIR_Pin))
```

6.17.2.2 DISABLE

```
#define DISABLE(  
    port,  
    pin ) do { HAL_GPIO_WritePin(port, pin, GPIO_PIN_RESET); } while(0)
```

6.17.2.3 ENABLE

```
#define ENABLE(  
    port,  
    pin ) do { HAL_GPIO_WritePin(port, pin, GPIO_PIN_SET); } while(0)
```

6.17.2.4 SC_DET_STATE

```
#define SC_DET_STATE( ) (HAL_GPIO_ReadPin(SC_det_GPIO_Port, SC_det_Pin))
```

6.17.2.5 WRN_STATE

```
#define WRN_STATE(
    port,
    pin ) (HAL_GPIO_ReadPin(port, pin))
```

6.17.3 Enumeration Type Documentation

6.17.3.1 LEDMode

```
enum LEDMode
```

Enumerator

LED_MODE_BLINK_FAST	Fast blink mode
LED_MODE_BLINK_SLOW	Slow blink mode
LED_MODE_ON	LED on mode
LED_MODE_OFF	LED off mode

6.17.4 Function Documentation

6.17.4.1 LED_handler()

```
void LED_handler (
    LED * led,
    uint32_t ms_counter )
```

LED handler function.

This function handles the LED blinking modes based on the LED mode and current millisecond counter.

Parameters

<i>led</i>	Pointer to the LED structure.
<i>ms_counter</i>	Millisecond counter for timing.

This function handles the LED blinking modes based on the LED mode and current millisecond counter.

Parameters

<i>led</i>	Pointer to the LED structure.
<i>ms_counter</i>	Current millisecond counter.

Here is the caller graph for this function:



6.17.5 Variable Documentation

6.17.5.1 led_error

```
LED led_error [extern]
```

6.17.5.2 led_left

```
LED led_left [extern]
```

6.17.5.3 led_right

```
LED led_right [extern]
```

6.18 PCB_IO.h

[Go to the documentation of this file.](#)

```

00001 /* USER CODE BEGIN Header */
00018 /* USER CODE END Header */
00019
00020
00021 #ifndef PCB_IO_H
00022 #define PCB_IO_H
00023
00024 #include "stm32f7xx_hal.h"
00025
00026 // Read SC_det and DIR GPIOs
00027 #define SC_DET_STATE() (HAL_GPIO_ReadPin(SC_det_GPIO_Port, SC_det_Pin))
00028 #define DIR_STATE() (HAL_GPIO_ReadPin(DIR_GPIO_Port, DIR_Pin))
00029
00030 // Read WRN GPIOs
00031 #define WRN_STATE(port, pin) (HAL_GPIO_ReadPin(port, pin))
00032
00033 // Control ENABLE GPIOs
00034 #define ENABLE(port, pin) do { HAL_GPIO_WritePin(port, pin, GPIO_PIN_SET); } while(0)
00035 #define DISABLE(port, pin) do { HAL_GPIO_WritePin(port, pin, GPIO_PIN_RESET); } while(0)
00036
00037 // Define LED modes
00038 typedef enum {
00039     LED_MODE_BLINK_FAST,
00040     LED_MODE_BLINK_SLOW,
00041     LED_MODE_ON,
00042     LED_MODE_OFF
00043 } LEDMode;
00044
00048 typedef struct {
00049     GPIO_TypeDef *port;
00050     uint16_t pin;
00051     LEDMode mode;
  
```

```


00052 } LED;
00053
00054 // Declare LED variables as extern
00055 extern LED led_left;
00056 extern LED led_right;
00057 extern LED led_error;
00058
00059 // Function prototypes
00068 void LED_handler(LED *led, uint32_t ms_counter);
00069
00070 #endif /* PCB_IO_H */

```


6.19 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/Pergamon_float.h File Reference

```
#include "stdint.h"
```

Include dependency graph for Pergamon_float.h:

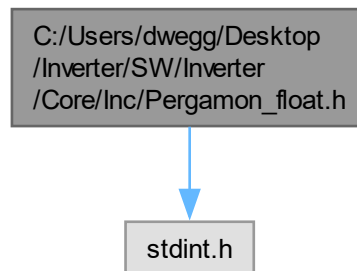

This graph shows which files directly or indirectly include this file:

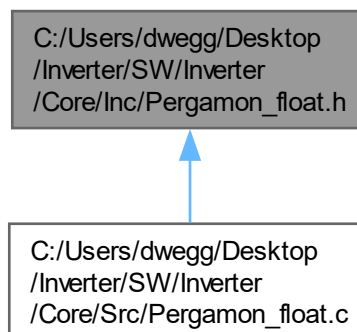

Data Structures

- struct [pi_aw_struct](#)
- struct [pi_struct](#)
- struct [clarke3F_struct](#)
- struct [iclarke3F_struct](#)
- struct [rot_struct](#)
- struct [irot_struct](#)
- struct [angle_struct](#)
- struct [svpwm_struct](#)
- struct [rampa_struct](#)
- struct [rampa_dual_struct](#)
- struct [datalog_struct](#)
- struct [avg_struct_10](#)
- struct [RMS_struct](#)
- struct [filtreLP_struct](#)
- struct [step_struct](#)

Macros

- #define [SQ2](#) 1.4142135624F
- #define [ISQ2](#) 0.7071067812F
- #define [SQ3](#) 1.7320508076F
- #define [ISQ3](#) 0.5773502692F
- #define [PI](#) 3.1415926536F
- #define [IPI](#) 0.3183098862F
- #define [PI2](#) 6.2831853072F
- #define [IPI2](#) 0.1591549431F
- #define [INV_DEG](#) 0.0027777778F
- #define [INV3](#) 0.3333333333F
- #define [DIV2](#) 0.5F
- #define [PI_DEFAULTS_AW](#)
- #define [PI_DEFAULTS](#)
- #define [PI_EXTSAT_DEFAULTS](#)
- #define [CLARKE3F_DEFAULTS](#)
- #define [ICLARKE3F_DEFAULTS](#)
- #define [ROT_DEFAULTS](#)
- #define [IROT_DEFAULTS](#)
- #define [ANGLE_DEFAULTS](#)
- #define [SVPWM_DEFAULTS](#)
- #define [RAMPA_DEFAULTS](#)
- #define [RAMPA_DUAL_DEFAULTS](#)
- #define [N_DATALOG](#) 512
- #define [DATALOG_DEFAULTS](#)
- #define [AVG_DEFAULTS](#)
- #define [RMS_DEFAULTS](#)
- #define [FILTRELP_DEFAULTS](#)
- #define [STEP_DEFAULTS](#)

Functions

- void [pi_aw_calc](#) (volatile [pi_aw_struct](#) *v) [__attribute__\(\(section\(".ccmram"\)\)\)](#)
- void [pi_init](#) (volatile [pi_struct](#) *v) [__attribute__\(\(section\(".ccmram"\)\)\)](#)
- void [pi_calc](#) (volatile [pi_struct](#) *v) [__attribute__\(\(section\(".ccmram"\)\)\)](#)
- void [pi_extsat_calc](#) (volatile [pi_struct](#) *v)
- void [clarke3F_calc](#) (volatile [clarke3F_struct](#) *v) [__attribute__\(\(section\(".ccmram"\)\)\)](#)
- void [iclarke3F_calc](#) (volatile [iclarke3F_struct](#) *v)
- void [rot_calc](#) (volatile [rot_struct](#) *v) [__attribute__\(\(section\(".ccmram"\)\)\)](#)
- void [irot_calc](#) (volatile [irot_struct](#) *v) [__attribute__\(\(section\(".ccmram"\)\)\)](#)
- void [angle_calc](#) (volatile [angle_struct](#) *p) [__attribute__\(\(section\(".ccmram"\)\)\)](#)
- void [svpwm_calc](#) (volatile [svpwm_struct](#) *v) [__attribute__\(\(section\(".ccmram"\)\)\)](#)
- void [rampa_calc](#) (volatile [rampa_struct](#) *v) [__attribute__\(\(section\(".ccmram"\)\)\)](#)
- void [rampa_dual_calc](#) (volatile [rampa_dual_struct](#) *v) [__attribute__\(\(section\(".ccmram"\)\)\)](#)
- void [datalog_calc](#) (volatile [datalog_struct](#) *dl)
- void [avg_calc_10_samples](#) (volatile [avg_struct_10](#) *v)
- void [RMS_calc](#) (volatile [RMS_struct](#) *v) [__attribute__\(\(section\(".ccmram"\)\)\)](#)
- void [filtreLP_init](#) (volatile [filtreLP_struct](#) *v)
- void [filtreLP_calc](#) (volatile [filtreLP_struct](#) *v) [__attribute__\(\(section\(".ccmram"\)\)\)](#)
- void [step_calc](#) (volatile [step_struct](#) *v) [__attribute__\(\(section\(".ccmram"\)\)\)](#)

6.19.1 Macro Definition Documentation

6.19.1.1 ANGLE_DEFAULTS

```
#define ANGLE_DEFAULTS
```

Value:

```
{ 0, \
0, \
0, \
(void (*)(int32_t))angle_calc }
```

6.19.1.2 AVG_DEFAULTS

```
#define AVG_DEFAULTS
```

Value:

```
{ 0, \
{0} }
```

6.19.1.3 CLARKE3F_DEFAULTS

```
#define CLARKE3F_DEFAULTS
```

Value:

```
{ 0, \
0, \
0, \
0, \
(void (*)(int32_t))clarke3F_calc }
```


6.19.1.4 DATALOG_DEFAULTS

```
#define DATALOG_DEFAULTS
```

Value:

```
{ 0, \
0, \
0, \
1, \
0x00000000, /**puntero a quien sabe donde?*/ \
(void (*)(int32_t))datalog_calc }
```

6.19.1.5 DIV2

```
#define DIV2 0.5F
```

6.19.1.6 FILTRELP_DEFAULTS

```
#define FILTRELP_DEFAULTS
```

Value:

```
{ 0, \
0, \
0, \
0, \
0, \
0, \
0, \
(void (*)(int32_t))filtreLP_init, \
(void (*)(int32_t))filtreLP_calc }
```

6.19.1.7 ICLARKE3F_DEFAULTS

```
#define ICLARKE3F_DEFAULTS
```

Value:

```
{ 0, \
0, \
0, \
0, \
(void (*)(int32_t))iclarke3F_calc }
```

6.19.1.8 INV3

```
#define INV3 0.3333333333F
```

6.19.1.9 INV_DEG

```
#define INV_DEG 0.00277777778F
```

6.19.1.10 IPI

```
#define IPI 0.3183098862F
```

6.19.1.11 IPI2

```
#define IPI2 0.1591549431F
```

6.19.1.12 IROT_DEFAULTS

```
#define IROT_DEFAULTS
```

Value:

```
{ 0, \
0, \
0, \
0, \
0, \
0, \
0, \
(void (*)(int32_t))irot_calc }
```

6.19.1.13 ISQ2

```
#define ISQ2 0.7071067812F
```

6.19.1.14 ISQ3

```
#define ISQ3 0.5773502692F
```

6.19.1.15 N_DATALOG

```
#define N_DATALOG 512
```

6.19.1.16 PI

```
#define PI 3.1415926536F
```

6.19.1.17 PI2

```
#define PI2 6.2831853072F
```

6.19.1.18 PI_DEFAULTS

```
#define PI_DEFAULTS
```

Value:

```
{ 0, \
0, \
0, \
0, \
0, \
0, \
{0,0}, \
0, \
0, \
0, \
0, \
0, \
{0,0}, \
(void (*)(int32_t))pi_init, \
(void (*)(int32_t))pi_calc }
```

6.19.1.19 PI_DEFAULTS_AW

```
#define PI_DEFAULTS_AW
```

Value:

```

{ 0, \
0, \
0, \
0, \
0, \
{0,0}, \
0, \
0, \
0, \
0, \
0, \
{0,0}, \
{0,0}, \
(void (*)(int32_t)) pi_aw_calc }

```

6.19.1.20 PI_EXTSAT_DEFAULTS

```
#define PI_EXTSAT_DEFAULTS
```

Value:

```

{ 0, \
0, \
0, \
0, \
0, \
0, \
{0,0}, \
0, \
0, \
0, \
0, \
0, \
{0,0}, \
(void (*)(int32_t)) pi_init, \
(void (*)(int32_t)) pi_extsat_calc }

```

6.19.1.21 RAMPA_DEFAULTS

```
#define RAMPA_DEFAULTS
```

Value:

```

{ 0, \
0, \
0, \
0, \
(void (*)(int32_t)) rampa_calc }

```

6.19.1.22 RAMPA_DUAL_DEFAULTS

```
#define RAMPA_DUAL_DEFAULTS
```

Value:

```

{ 0, \
0, \
0, \
0, \
0, \
(void (*)(int32_t)) rampa_dual_calc }

```

6.19.1.23 RMS_DEFAULTS

```
#define RMS_DEFAULTS
```

Value:

```
{ 0, \
0, \
0, \
0, \
0, \
0, \
0 }
```

6.19.1.24 ROT_DEFAULTS

```
#define ROT_DEFAULTS
```

Value:

```
{ 0, \
0, \
0, \
0, \
0, \
0, \
(void (*)(int32_t))rot_calc }
```

6.19.1.25 SQ2

```
#define SQ2 1.4142135624F
```

6.19.1.26 SQ3

```
#define SQ3 1.7320508076F
```

6.19.1.27 STEP_DEFAULTS

```
#define STEP_DEFAULTS
```

Value:

```
{ 0.0F, \
0.0F, \
0.0F, \
0.0F, \
0, \
0, \
0, \
(void (*)(int32_t))step_calc }
```

6.19.1.28 SVPWM_DEFAULTS

```
#define SVPWM_DEFAULTS
```

Value:

```
{ 0, \
0, \
0, \
0, \
0, \
(void (*)(int32_t))svpwm_calc }
```

6.19.2 Function Documentation

6.19.2.1 angle_calc()

```
void angle_calc (
    volatile angle_struct * p )
```

6.19.2.2 avg_calc_10_samples()

```
void avg_calc_10_samples (
    volatile avg_struct_10 * v )
```

6.19.2.3 clarke3F_calc()

```
void clarke3F_calc (
    volatile clarke3F_struct * v )
```

6.19.2.4 datalog_calc()

```
void datalog_calc (
    volatile datalog_struct * dl )
```

6.19.2.5 filtreLP_calc()

```
void filtreLP_calc (
    volatile filtreLP_struct * v )
```

6.19.2.6 filtreLP_init()

```
void filtreLP_init (
    volatile filtreLP_struct * v )
```

6.19.2.7 iclarke3F_calc()

```
void iclarke3F_calc (
    volatile iclarke3F_struct * v )
```

6.19.2.8 irot_calc()

```
void irot_calc (
    volatile irot_struct * v )
```

6.19.2.9 pi_aw_calc()

```
void pi_aw_calc (
    volatile pi_aw_struct * v )
```

6.19.2.10 pi_calc()

```
void pi_calc (
    volatile pi_struct * v )
```

6.19.2.11 pi_extsat_calc()

```
void pi_extsat_calc (
    volatile pi_struct * v )
```

6.19.2.12 pi_init()

```
void pi_init (
    volatile pi_struct * v )
```

6.19.2.13 rampa_calc()

```
void rampa_calc (
    volatile rampa_struct * v )
```

6.19.2.14 rampa_dual_calc()

```
void rampa_dual_calc (
    volatile rampa_dual_struct * v )
```

6.19.2.15 RMS_calc()

```
void RMS_calc (
    volatile RMS_struct * v )
```

6.19.2.16 rot_calc()

```
void rot_calc (
    volatile rot_struct * v )
```

6.19.2.17 step_calc()

```
void step_calc (
    volatile step_struct * v )
```

6.19.2.18 svpwm_calc()

```
void svpwm_calc (
    volatile svpwm_struct * v )
```

6.20 Pergamon_float.h

[Go to the documentation of this file.](#)

```
00001 /*
00002
00003
00004
00005
00006
00007
00008
00009
00010
00011 Arxiu que engloba totes les llibreries independents del hardware del CITCEA en una.
00012 Aquesta llibreria est❖ basada en l'Alexandria feta per en Gabriel Gross i en Quim L❖pez Mestre el
00013 Setembre del 2006
00014 Feta pel Gabriel Gross, Daniel Heredero i Tom❖s Lled❖ el desembre de 2015.
00015 Tradu❖da a floats per Lucas Bouz❖n el Mar❖ de 2020.
00016 */
00017 #include "stdint.h"
00018 #define SQ2      1.4142135624F // sqrt(2)
00019 #define ISQ2     0.7071067812F // 1/sqrt(2)
00020 #define SQ3      1.7320508076F // sqrt(3)
00021 #define ISQ3     0.5773502692F // 1/sqrt(3)
00022 #define PI       3.1415926536F // Pi
00023 #define IPI      0.3183098862F // 1/Pi
00024 #define PI2      6.2831853072F // 2*Pi
00025 #define IPI2     0.1591549431F // 1/(2*Pi)
00026 #define INV_DEG  0.0027777778F // 1/360
00027 #define INV3     0.3333333333F // 1/3
00028 #define DIV2     0.5F          // 1/2
00029
00030 //PI
00031 //=====
00032 // Inclou saturaci❖ interna amb antiwindup i ffw
00033
00034 #define PI_DEFAULTS_AW { 0, \
00035                        0, \
00036                        0, \
00037                        0, \
00038                        0, \
00039                        {0,0}, \
00040                        0, \
00041                        0, \
00042                        0, \
00043                        0, \
00044                        0, \
00045                        {0,0}, \
00046                        {0,0}, \
00047                        (void (*)(int32_t))pi_aw_calc  }
00048
00049
00050 typedef struct
00051 {
00052     uint16_t    enable;          // si enable=1 fa el pid, si no pid_out = 0
00053     float       Ts;              // Per❖ode d'execuci❖
00054     float       Kp;              // Kp
00055     float       Ki;              // Ki
00056     float       Kaw;             // Kaw
00057     float       e[2];            // Error k i k-1
00058     float       pi_consigt;      // consigna
00059     float       pi_fdb;          // realimentaci❖
00060     float       pi_out_max;      // Maximum output
00061     float       pi_out_min;      // Minimum output
00062     float       pi_out_presat;
00063     float       pi_out_postsat;
00064     float       pi_out;          // PID output
00065     float       pi_int[2];       // Integrator Part
00066     float       pi_ffw[2];       // feedforward k i k-1
00067     void(*calc)();              // Punter a la funci❖ calc
00068 } pi_aw_struct;
00069
```

```

00070 void pi_aw_calc(volatile pi_aw_struct *v) __attribute__((section( ".ccmram" ))); //__attribute__((
    (section( ".code_in_ram" )));
00071
00072 //PI
00073 //=====
00074 // Inclou saturaci  interna amb antiwindup i ffw
00075
00076 #define PI_DEFAULTS { 0, \
00077                     0, \
00078                     0, \
00079                     0, \
00080                     0, \
00081                     0, \
00082                     {0,0}, \
00083                     0, \
00084                     0, \
00085                     0, \
00086                     0, \
00087                     0, \
00088                     {0,0}, \
00089                     (void (*)(int32_t))pi_init, \
00090                     (void (*)(int32_t))pi_calc }
00091
00092 // Saturaci  externa, inclou ffw
00093 #define PI_EXTSAT_DEFAULTS { 0, \
00094                             0, \
00095                             0, \
00096                             0, \
00097                             0, \
00098                             0, \
00099                             {0,0}, \
00100                             0, \
00101                             0, \
00102                             0, \
00103                             0, \
00104                             0, \
00105                             {0,0}, \
00106                             (void (*)(int32_t))pi_init, \
00107                             (void (*)(int32_t))pi_extsat_calc }
00108
00109 typedef struct
00110 {
00111     uint16_t enable; // si enable=1 fa el pid, si no pid_out = 0
00112     float Ts; // Per ode d'execuci 
00113     float Kp; // Kp
00114     float Ki; // Ki
00115     float K0; // K0 = Kp + (Ts*Ki)/2
00116     float K1; // K0 = -Kp + (Ts*Ki)/2
00117     float e[2]; // Error k i k-1
00118     float pi_consig; // consigna
00119     float pi_fdb; // realimentaci 
00120     float pi_out_max; // Maximum output
00121     float pi_out_min; // Minimum output
00122     float pi_out; // PID output
00123     float pi_ffw[2]; // feedforward k i k-1
00124     void(*init)(); // Punter a la funci  init
00125     void(*calc)(); // Punter a la funci  calc
00126 } pi_struct;
00127
00128 void pi_init(volatile pi_struct *v) __attribute__((section( ".ccmram" ))); //__attribute__((
    section( ".code_in_ram" )));
00129 void pi_calc(volatile pi_struct *v) __attribute__((section( ".ccmram" ))); //__attribute__((
    section( ".code_in_ram" )));
00130 void pi_extsat_calc(volatile pi_struct *v);
00131
00132
00133 //CLARKE 3F
00134 //=====
00135 //La funci  Clarke3F projecta per un sistema trifasic sense neutre A i, B en el pla de Park
    Alfa(D)-Beta(Q)
00136 //Entrades amb components simples
00137
00138 #define CLARKE3F_DEFAULTS { 0, \
00139                             0, \
00140                             0, \
00141                             0, \
00142                             (void (*)(int32_t))clarke3F_calc }
00143
00144 typedef struct
00145 {
00146     float a; //entrada eix A
00147     float b; //entrada eix B
00148     float D; //sortida eix D
00149     float Q; //sortida eix Q
00150     void(*calc)();
00151 } clarke3F_struct;
00152 void clarke3F_calc(volatile clarke3F_struct *v) __attribute__((section( ".ccmram" )));

```



```

    __attribute__((section(".code_in_ram")));
00153
00154 //ICLARKE 3F
00155 //=====
00156 //La funció iClarke3F projecta per un sistema trifàsic sense neutre Alfa i Beta en el pla de natural
    ABC
00157 //Sortides amb components simples
00158
00159 #define ICLARKE3F_DEFAULTS {    0, \
00160                                0, \
00161                                0, \
00162                                0, \
00163                                (void (*)(int32_t))iClarke3F_calc }
00164
00165 typedef struct
00166 {
00167     float      D;           //entrada eix D
00168     float      Q;           //entrada eix Q
00169     float      a;           //sortida eix A
00170     float      b;           //sortida eix B
00171     void(*calc)();
00172 } iClarke3F_struct;
00173 void iClarke3F_calc(volatile iClarke3F_struct *v);
00174
00175 //Rotació (la negativa, ergo sentit horari) - PARKE??
00176 //=====
00177 //La funció Rotació fa rotar els eixos de Clarke Alfa (D) i Beta (Q) en funció de sinFi i cosFi
00178 //ens donen les coordenades estàtiques (referència sincrona) d i q
00179
00180 #define ROT_DEFAULTS    {    0, \
00181                                0, \
00182                                0, \
00183                                0, \
00184                                0, \
00185                                0, \
00186                                (void (*)(int32_t))rot_calc }
00187
00188 typedef struct
00189 {
00190     float      D;           //eix Alfa (D) d'entrada
00191     float      Q;           //eix Beta (Q) d'entrada
00192     float      sinFi;       //sinus de l'angle que es vol girar
00193     float      cosFi;       //cosinus de l'angle que es vol girar
00194     float      d;           //eix d girat
00195     float      q;           //eix q girat
00196     void(*calc)();
00197 } rot_struct;
00198 void rot_calc(volatile rot_struct *v) __attribute__((section(".ccmram"))); //__attribute__((
    section(".code_in_ram")));
00199
00200 //Rotació inversa (la positiva, ergo sentit antihorari) - IPARKE??
00201 //=====
00202 //La funció iPark defu la rotació dels eixos de Park a en funció de sinFi i cosFi
00203 //ens donen les coordenades rotatòries Alfa (D) - Beta (Q)
00204
00205 #define IROT_DEFAULTS    {    0, \
00206                                0, \
00207                                0, \
00208                                0, \
00209                                0, \
00210                                0, \
00211                                (void (*)(int32_t))irot_calc }
00212
00213 typedef struct
00214 {
00215     float      d;           //eix d d'entrada
00216     float      q;           //eix q d'entrada
00217     float      sinFi;       //sinus de l'angle que es vol girar
00218     float      cosFi;       //cosinus de l'angle que es vol girar
00219     float      D;           //eix Alfa (D) de sortida
00220     float      Q;           //eix Beta (Q) de sortida girat
00221     void(*calc)();
00222 } irot_struct;
00223 void irot_calc(volatile irot_struct *v) __attribute__((section(".ccmram"))); //__attribute__((
    section(".code_in_ram")));
00224
00225 //Generació angle
00226 //=====
00227 // Genera un angle a partir d'una freqüència fixa
00228
00229 #define ANGLE_DEFAULTS {    0, \
00230                                0, \
00231                                0, \
00232                                (void (*)(int32_t))angle_calc }
00233
00234 typedef struct {
00235     float      freq;        // freqüència de la xarxa. Sortida del 1er filtre de freqüència.

```

```

00236     float      Ts;                // freqüència d'execució de la integració de la freqüència
00237     float      angle;             // angle de la xarxa.
00238 // float      angle_iq32;         // angle de la xarxa.
00239     void(*calc)();                //Punter a la funció init
00240 } angle_struct;
00241 void angle_calc(volatile angle_struct *p) __attribute__((section( ".ccmram" ))); //__attribute__((
( section( ".code_in_ram" ) ));
00242
00243 //SVPWM
00244 //=====
00245 //Permet generar les 3 sortides SVPWM (Ta, Tb i Tc)
00246 //Partint de dues entrades en tant per 1 (Valfa, Ubeta)
00247
00248 #define SVPWM_DEFAULTS { 0, \
00249                          0, \
00250                          0, \
00251                          0, \
00252                          0, \
00253                          (void (*)(int32_t))svpwm_calc }
00254
00255 typedef struct
00256 {
00257     float      valfa;              //Entrada en tant per 1
00258     float      vbeta;             //Entrada en tant per 1
00259     float      Ta;                //Sortida 0-1
00260     float      Tb;                //Sortida 0-1
00261     float      Tc;                //Sortida 0-1
00262     void(*calc)();
00263 } svpwm_struct;
00264 void svpwm_calc(volatile svpwm_struct *v) __attribute__((section( ".ccmram" ))); //__attribute__((
( section( ".code_in_ram" ) ));
00265
00266 // RAMPA
00267 //=====
00268
00269 #define RAMPA_DEFAULTS { 0, \
00270                          0, \
00271                          0, \
00272                          0, \
00273                          (void (*)(int32_t))rampa_calc }
00274
00275 typedef struct
00276 {
00277     float      in;
00278     float      out;
00279     float      Incr;
00280     uint8_t    enable;
00281     void(*calc)();
00282 } rampa_struct;
00283
00284 #define RAMPA_DUAL_DEFAULTS { 0, \
00285                              0, \
00286                              0, \
00287                              0, \
00288                              (void (*)(int32_t))rampa_dual_calc }
00289
00290 typedef struct
00291 {
00292     float      in;
00293     float      out;
00294     float      Incr;
00295     float      Decr;
00296     uint8_t    enable;
00297     void(*calc)();
00298 } rampa_dual_struct;
00299 void rampa_calc(volatile rampa_struct *v) __attribute__((section( ".ccmram" ))); //__attribute__((
( section( ".code_in_ram" ) ));
00300 void rampa_dual_calc(volatile rampa_dual_struct *v) __attribute__((section( ".ccmram" )));
00301
00302 //DATALOG
00303 //=====
00304
00305 #define N_DATALOG 512
00306 #define DATALOG_DEFAULTS { 0, \
00307                          0, \
00308                          0, \
00309                          1, \
00310                          0x00000000, /*puntero a quien sabe donde?*/ \
00311                          (void (*)(int32_t))datalog_calc }
00312 // (!) no se inicializa el log
00313
00314 typedef struct
00315 {
00316     uint16_t    i;                //variable d'estat
00317     uint16_t    j;                //variable d'estat
00318     uint16_t    estat;            //0=parat, 1=inici, 2=running
00319     uint16_t    prescaler;

```

```

00320     float          *var;
00321     void(*calc)(); // (!) la funció calc no se pone lo último ya que en DATALOG_DEFAULTS lo
//ltimo tiene que ser el log (no se inicializa)
00322     float          log[N_DATALOG];
00323 } datalog_struct;
00324 void datalog_calc(volatile datalog_struct *dl); // __attribute__(( section ( ".ccmram" ) ));
//__attribute__(( section ( ".code_in_ram" ) ));

00325
00326 //AVG
00327 //=====
00328
00329 #define AVG_DEFAULTS { 0, \
00330                      {0} }
00331
00332 typedef struct
00333 {
00334     float out; // variable de sortida
00335     float in[10]; // variable d'entrada i anteriors
00336 }avg_struct_10;
00337
00338 void avg_calc_10_samples(volatile avg_struct_10 *v);
00339
00340 //RMS
00341 //=====
00342
00343 #define RMS_DEFAULTS { 0, \
00344                      0, \
00345                      0, \
00346                      0, \
00347                      0, \
00348                      0, \
00349                      0 }
00350
00351 typedef struct {
00352     float T_exec; //Cada quan executes la funció
00353     float Measure; //Senyal a RMSear
00354     float Sq_Sum; //Suma quadrats
00355     float Out_RMS; //Senyal RMSear
00356     float Freq; //Frecuència de sortida de la pll
00357     float Angle; //angle
00358     float Angle_ant; //angle anterior
00359 } RMS_struct;
00360 void RMS_calc(volatile RMS_struct *v) __attribute__(( section ( ".ccmram" ) ));
00361
00362 // Filtre 1er ordre
00363 //=====
00364
00365 #define FILTRELP_DEFAULTS { 0, \
00366                          0, \
00367                          0, \
00368                          0, \
00369                          0, \
00370                          0, \
00371                          (void (*)(int32_t)) filtreLP_init, \
00372                          (void (*)(int32_t)) filtreLP_calc }
00373 typedef struct
00374 {
00375     float in;
00376     float out;
00377     float alfa;
00378     float Ts;
00379     float fc;
00380     uint16_t enable;
00381     void(*init)();
00382     void(*calc)();
00383 } filtreLP_struct;
00384 void filtreLP_init(volatile filtreLP_struct *v);
00385 void filtreLP_calc(volatile filtreLP_struct *v) __attribute__(( section ( ".ccmram" ) ));
//__attribute__(( section ( ".code_in_ram" ) ));

00386
00387
00388 //Step
00389 //=====
00390 // Afegeix un step a una variable d'entrada amb l'ample i la duraci desitjada. Permet mes o menys 20 s
a 100 kHz
00391
00392 #define STEP_DEFAULTS { 0.0F, \
00393                      0.0F, \
00394                      0.0F, \
00395                      0.0F, \
00396                      0.0F, \
00397                      0, \
00398                      0, \
00399                      0, \
00400                      (void (*)(int32_t)) step_calc }
00401 typedef struct
00402 {

```

```

00403     float          fs;          // Freqncia d'execuci de la funci.
00404     float          In;          // Variable d'entrada
00405     float          Out;         // Variable de sortida (amb el step quan calgui)
00406     float          Step;       // Amplitud del step
00407     float          t_step;      // Duraci del step en segons.
00408     uint32_t       Pulses;      // Polsos peper comptar els segons
00409     uint32_t       Counter;     // Comptador pels polsos
00410     uint16_t       enable;      // Habilita el step.
00411     void(*calc)();
00412 } step_struct;
00413 void step_calc(volatile step_struct *v) __attribute__((section (".ccmram"))); //__attribute__((
    section (".code_in_ram")));

```

6.21 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/stm32f7xx_↵ hal_conf.h File Reference

```

#include "stm32f7xx_hal_rcc.h"
#include "stm32f7xx_hal_exti.h"
#include "stm32f7xx_hal_gpio.h"
#include "stm32f7xx_hal_dma.h"
#include "stm32f7xx_hal_cortex.h"
#include "stm32f7xx_hal_adc.h"
#include "stm32f7xx_hal_can.h"
#include "stm32f7xx_hal_dac.h"
#include "stm32f7xx_hal_flash.h"
#include "stm32f7xx_hal_i2c.h"
#include "stm32f7xx_hal_pwr.h"
#include "stm32f7xx_hal_tim.h"

```

Include dependency graph for stm32f7xx_hal_conf.h:



Macros

- #define HAL_MODULE_ENABLED

This is the list of modules to be used in the HAL driver.

- #define HAL_ADC_MODULE_ENABLED
- #define HAL_CAN_MODULE_ENABLED
- #define HAL_DAC_MODULE_ENABLED
- #define HAL_TIM_MODULE_ENABLED
- #define HAL_GPIO_MODULE_ENABLED
- #define HAL_EXTI_MODULE_ENABLED
- #define HAL_DMA_MODULE_ENABLED
- #define HAL_RCC_MODULE_ENABLED
- #define HAL_FLASH_MODULE_ENABLED
- #define HAL_PWR_MODULE_ENABLED
- #define HAL_I2C_MODULE_ENABLED
- #define HAL_CORTEX_MODULE_ENABLED
- #define HSE_VALUE ((uint32_t)20000000U)

Adjust the value of External High Speed oscillator (HSE) used in your application. This value is used by the RCC HAL module to compute the system frequency (when HSE is used as system clock source, directly or through the PLL).

- #define HSE_STARTUP_TIMEOUT ((uint32_t)100U)
- #define HSI_VALUE ((uint32_t)16000000U)

Internal High Speed oscillator (HSI) value. This value is used by the RCC HAL module to compute the system frequency (when HSI is used as system clock source, directly or through the PLL).

- #define LSI_VALUE ((uint32_t)32000U)

Internal Low Speed oscillator (LSI) value.

- #define LSE_VALUE ((uint32_t)32768U)

External Low Speed oscillator (LSE) value.

- #define LSE_STARTUP_TIMEOUT ((uint32_t)5000U)
- #define EXTERNAL_CLOCK_VALUE ((uint32_t)12288000U)

External clock source for I2S peripheral This value is used by the I2S HAL module to compute the I2S clock source frequency, this source is inserted directly through I2S_CKIN pad.

- #define VDD_VALUE 3300U

This is the HAL system configuration section.

- #define TICK_INT_PRIORITY ((uint32_t)15U)
- #define USE_RTOS 0U
- #define PREFETCH_ENABLE 0U
- #define ART_ACCELERATOR_ENABLE 0U /* To enable instruction cache and prefetch */
- #define USE_HAL_ADC_REGISTER_CALLBACKS 0U /* ADC register callback disabled */
- #define USE_HAL_CAN_REGISTER_CALLBACKS 0U /* CAN register callback disabled */
- #define USE_HAL_CEC_REGISTER_CALLBACKS 0U /* CEC register callback disabled */
- #define USE_HAL_CRYPT_REGISTER_CALLBACKS 0U /* CRYPT register callback disabled */
- #define USE_HAL_DAC_REGISTER_CALLBACKS 0U /* DAC register callback disabled */
- #define USE_HAL_DCMI_REGISTER_CALLBACKS 0U /* DCMI register callback disabled */
- #define USE_HAL_DFSDM_REGISTER_CALLBACKS 0U /* DFSDM register callback disabled */
- #define USE_HAL_DMA2D_REGISTER_CALLBACKS 0U /* DMA2D register callback disabled */
- #define USE_HAL_DSI_REGISTER_CALLBACKS 0U /* DSI register callback disabled */
- #define USE_HAL_ETH_REGISTER_CALLBACKS 0U /* ETH register callback disabled */
- #define USE_HAL_HASH_REGISTER_CALLBACKS 0U /* HASH register callback disabled */
- #define USE_HAL_HCD_REGISTER_CALLBACKS 0U /* HCD register callback disabled */
- #define USE_HAL_I2C_REGISTER_CALLBACKS 0U /* I2C register callback disabled */
- #define USE_HAL_I2S_REGISTER_CALLBACKS 0U /* I2S register callback disabled */
- #define USE_HAL_IRDA_REGISTER_CALLBACKS 0U /* IRDA register callback disabled */
- #define USE_HAL_JPEG_REGISTER_CALLBACKS 0U /* JPEG register callback disabled */
- #define USE_HAL_LPTIM_REGISTER_CALLBACKS 0U /* LPTIM register callback disabled */
- #define USE_HAL_LTDC_REGISTER_CALLBACKS 0U /* LTDC register callback disabled */
- #define USE_HAL_MDIOS_REGISTER_CALLBACKS 0U /* MDIOS register callback disabled */
- #define USE_HAL_MMC_REGISTER_CALLBACKS 0U /* MMC register callback disabled */
- #define USE_HAL_NAND_REGISTER_CALLBACKS 0U /* NAND register callback disabled */
- #define USE_HAL_NOR_REGISTER_CALLBACKS 0U /* NOR register callback disabled */
- #define USE_HAL_PCD_REGISTER_CALLBACKS 0U /* PCD register callback disabled */
- #define USE_HAL_QSPI_REGISTER_CALLBACKS 0U /* QSPI register callback disabled */
- #define USE_HAL_RNG_REGISTER_CALLBACKS 0U /* RNG register callback disabled */
- #define USE_HAL_RTC_REGISTER_CALLBACKS 0U /* RTC register callback disabled */
- #define USE_HAL_SAI_REGISTER_CALLBACKS 0U /* SAI register callback disabled */
- #define USE_HAL_SD_REGISTER_CALLBACKS 0U /* SD register callback disabled */
- #define USE_HAL_SMARTCARD_REGISTER_CALLBACKS 0U /* SMARTCARD register callback disabled */
- #define USE_HAL_SDRAM_REGISTER_CALLBACKS 0U /* SDRAM register callback disabled */
- #define USE_HAL_SRAM_REGISTER_CALLBACKS 0U /* SRAM register callback disabled */
- #define USE_HAL_SPDIFRX_REGISTER_CALLBACKS 0U /* SPDIFRX register callback disabled */
- #define USE_HAL_SMBUS_REGISTER_CALLBACKS 0U /* SMBUS register callback disabled */
- #define USE_HAL_SPI_REGISTER_CALLBACKS 0U /* SPI register callback disabled */
- #define USE_HAL_TIM_REGISTER_CALLBACKS 0U /* TIM register callback disabled */
- #define USE_HAL_UART_REGISTER_CALLBACKS 0U /* UART register callback disabled */
- #define USE_HAL_USART_REGISTER_CALLBACKS 0U /* USART register callback disabled */

- `#define USE_HAL_WWDG_REGISTER_CALLBACKS 0U /* WWDG register callback disabled */`
- `#define MAC_ADDR0 2U`

Uncomment the line below to expanse the "assert_param" macro in the HAL drivers code.

- `#define MAC_ADDR1 0U`
- `#define MAC_ADDR2 0U`
- `#define MAC_ADDR3 0U`
- `#define MAC_ADDR4 0U`
- `#define MAC_ADDR5 0U`
- `#define ETH_RX_BUF_SIZE ETH_MAX_PACKET_SIZE /* buffer size for receive */`
- `#define ETH_TX_BUF_SIZE ETH_MAX_PACKET_SIZE /* buffer size for transmit */`
- `#define ETH_RXBUFNB ((uint32_t)4U) /* 4 Rx buffers of size ETH_RX_BUF_SIZE */`
- `#define ETH_TXBUFNB ((uint32_t)4U) /* 4 Tx buffers of size ETH_TX_BUF_SIZE */`
- `#define DP83848_PHY_ADDRESS`
- `#define PHY_RESET_DELAY ((uint32_t)0x000000FFU)`
- `#define PHY_CONFIG_DELAY ((uint32_t)0x00000FFFU)`
- `#define PHY_READ_TO ((uint32_t)0x0000FFFFU)`
- `#define PHY_WRITE_TO ((uint32_t)0x0000FFFFU)`
- `#define PHY_BCR ((uint16_t)0x0000U)`
- `#define PHY_BSR ((uint16_t)0x0001U)`
- `#define PHY_RESET ((uint16_t)0x8000U)`
- `#define PHY_LOOPBACK ((uint16_t)0x4000U)`
- `#define PHY_FULLDUPLEX_100M ((uint16_t)0x2100U)`
- `#define PHY_HALFDUPLEX_100M ((uint16_t)0x2000U)`
- `#define PHY_FULLDUPLEX_10M ((uint16_t)0x0100U)`
- `#define PHY_HALFDUPLEX_10M ((uint16_t)0x0000U)`
- `#define PHY_AUTONEGOTIATION ((uint16_t)0x1000U)`
- `#define PHY_RESTART_AUTONEGOTIATION ((uint16_t)0x0200U)`
- `#define PHY_POWERDOWN ((uint16_t)0x0800U)`
- `#define PHY_ISOLATE ((uint16_t)0x0400U)`
- `#define PHY_AUTONEGO_COMPLETE ((uint16_t)0x0020U)`
- `#define PHY_LINKED_STATUS ((uint16_t)0x0004U)`
- `#define PHY_JABBER_DETECTION ((uint16_t)0x0002U)`
- `#define PHY_SR ((uint16_t))`
- `#define PHY_SPEED_STATUS ((uint16_t))`
- `#define PHY_DUPLEX_STATUS ((uint16_t))`
- `#define USE_SPI_CRC 0U`
- `#define assert_param(expr) ((void)0U)`

Include module's header file.

6.21.1 Macro Definition Documentation

6.21.1.1 ART_ACCELERATOR_ENABLE

```
#define ART_ACCELERATOR_ENABLE 0U /* To enable instruction cache and prefetch */
```

6.21.1.2 assert_param

```
#define assert_param(  
    expr ) ((void)0U)
```

Include module's header file.

6.21.1.3 DP83848_PHY_ADDRESS

```
#define DP83848_PHY_ADDRESS
```

6.21.1.4 ETH_RX_BUF_SIZE

```
#define ETH_RX_BUF_SIZE ETH_MAX_PACKET_SIZE /* buffer size for receive */
```

6.21.1.5 ETH_RXBUFNB

```
#define ETH_RXBUFNB ((uint32_t)4U) /* 4 Rx buffers of size ETH_RX_BUF_SIZE */
```

6.21.1.6 ETH_TX_BUF_SIZE

```
#define ETH_TX_BUF_SIZE ETH_MAX_PACKET_SIZE /* buffer size for transmit */
```

6.21.1.7 ETH_TXBUFNB

```
#define ETH_TXBUFNB ((uint32_t)4U) /* 4 Tx buffers of size ETH_TX_BUF_SIZE */
```

6.21.1.8 EXTERNAL_CLOCK_VALUE

```
#define EXTERNAL_CLOCK_VALUE ((uint32_t)12288000U)
```

External clock source for I2S peripheral This value is used by the I2S HAL module to compute the I2S clock source frequency, this source is inserted directly through I2S_CKIN pad.

Value of the Internal oscillator in Hz

6.21.1.9 HAL_ADC_MODULE_ENABLED

```
#define HAL_ADC_MODULE_ENABLED
```

6.21.1.10 HAL_CAN_MODULE_ENABLED

```
#define HAL_CAN_MODULE_ENABLED
```

6.21.1.11 HAL_CORTEX_MODULE_ENABLED

```
#define HAL_CORTEX_MODULE_ENABLED
```

6.21.1.12 HAL_DAC_MODULE_ENABLED

```
#define HAL_DAC_MODULE_ENABLED
```

6.21.1.13 HAL_DMA_MODULE_ENABLED

```
#define HAL_DMA_MODULE_ENABLED
```

6.21.1.14 HAL_EXTI_MODULE_ENABLED

```
#define HAL_EXTI_MODULE_ENABLED
```

6.21.1.15 HAL_FLASH_MODULE_ENABLED

```
#define HAL_FLASH_MODULE_ENABLED
```

6.21.1.16 HAL_GPIO_MODULE_ENABLED

```
#define HAL_GPIO_MODULE_ENABLED
```

6.21.1.17 HAL_I2C_MODULE_ENABLED

```
#define HAL_I2C_MODULE_ENABLED
```

6.21.1.18 HAL_MODULE_ENABLED

```
#define HAL_MODULE_ENABLED
```

This is the list of modules to be used in the HAL driver.

6.21.1.19 HAL_PWR_MODULE_ENABLED

```
#define HAL_PWR_MODULE_ENABLED
```

6.21.1.20 HAL_RCC_MODULE_ENABLED

```
#define HAL_RCC_MODULE_ENABLED
```

6.21.1.21 HAL_TIM_MODULE_ENABLED

```
#define HAL_TIM_MODULE_ENABLED
```


6.21.1.22 HSE_STARTUP_TIMEOUT

```
#define HSE_STARTUP_TIMEOUT ((uint32_t)100U)
```

Time out for HSE start up, in ms

6.21.1.23 HSE_VALUE

```
#define HSE_VALUE ((uint32_t)20000000U)
```

Adjust the value of External High Speed oscillator (HSE) used in your application. This value is used by the RCC HAL module to compute the system frequency (when HSE is used as system clock source, directly or through the PLL).

Value of the External oscillator in Hz

6.21.1.24 HSI_VALUE

```
#define HSI_VALUE ((uint32_t)16000000U)
```

Internal High Speed oscillator (HSI) value. This value is used by the RCC HAL module to compute the system frequency (when HSI is used as system clock source, directly or through the PLL).

Value of the Internal oscillator in Hz

6.21.1.25 LSE_STARTUP_TIMEOUT

```
#define LSE_STARTUP_TIMEOUT ((uint32_t)5000U)
```

Time out for LSE start up, in ms

6.21.1.26 LSE_VALUE

```
#define LSE_VALUE ((uint32_t)32768U)
```

External Low Speed oscillator (LSE) value.

< Value of the Internal Low Speed oscillator in Hz The real value may vary depending on the variations in voltage and temperature.

Value of the External Low Speed oscillator in Hz

6.21.1.27 LSI_VALUE

```
#define LSI_VALUE ((uint32_t)32000U)
```

Internal Low Speed oscillator (LSI) value.

LSI Typical Value in Hz

6.21.1.28 MAC_ADDR0

```
#define MAC_ADDR0 2U
```

Uncomment the line below to expanse the "assert_param" macro in the HAL drivers code.

6.21.1.29 MAC_ADDR1

```
#define MAC_ADDR1 0U
```

6.21.1.30 MAC_ADDR2

```
#define MAC_ADDR2 0U
```

6.21.1.31 MAC_ADDR3

```
#define MAC_ADDR3 0U
```

6.21.1.32 MAC_ADDR4

```
#define MAC_ADDR4 0U
```

6.21.1.33 MAC_ADDR5

```
#define MAC_ADDR5 0U
```

6.21.1.34 PHY_AUTONEGO_COMPLETE

```
#define PHY_AUTONEGO_COMPLETE ((uint16_t)0x0020U)
```

Auto-Negotiation process completed

6.21.1.35 PHY_AUTONEGOTIATION

```
#define PHY_AUTONEGOTIATION ((uint16_t)0x1000U)
```

Enable auto-negotiation function

6.21.1.36 PHY_BCR

```
#define PHY_BCR ((uint16_t)0x0000U)
```

Transceiver Basic Control Register

6.21.1.37 PHY_BSR

```
#define PHY_BSR ((uint16_t)0x0001U)
```

Transceiver Basic Status Register

6.21.1.38 PHY_CONFIG_DELAY

```
#define PHY_CONFIG_DELAY ((uint32_t)0x00000FFFU)
```

6.21.1.39 PHY_DUPLEX_STATUS

```
#define PHY_DUPLEX_STATUS ((uint16_t))
```

PHY Duplex mask

6.21.1.40 PHY_FULLDUPLEX_100M

```
#define PHY_FULLDUPLEX_100M ((uint16_t)0x2100U)
```

Set the full-duplex mode at 100 Mb/s

6.21.1.41 PHY_FULLDUPLEX_10M

```
#define PHY_FULLDUPLEX_10M ((uint16_t)0x0100U)
```

Set the full-duplex mode at 10 Mb/s

6.21.1.42 PHY_HALFDUPLEX_100M

```
#define PHY_HALFDUPLEX_100M ((uint16_t)0x2000U)
```

Set the half-duplex mode at 100 Mb/s

6.21.1.43 PHY_HALFDUPLEX_10M

```
#define PHY_HALFDUPLEX_10M ((uint16_t)0x0000U)
```

Set the half-duplex mode at 10 Mb/s

6.21.1.44 PHY_ISOLATE

```
#define PHY_ISOLATE ((uint16_t)0x0400U)
```

Isolate PHY from MII

6.21.1.45 PHY_JABBER_DETECTION

```
#define PHY_JABBER_DETECTION ((uint16_t)0x0002U)
```

Jabber condition detected

6.21.1.46 PHY_LINKED_STATUS

```
#define PHY_LINKED_STATUS ((uint16_t)0x0004U)
```

Valid link established

6.21.1.47 PHY_LOOPBACK

```
#define PHY_LOOPBACK ((uint16_t)0x4000U)
```

Select loop-back mode

6.21.1.48 PHY_POWERDOWN

```
#define PHY_POWERDOWN ((uint16_t)0x0800U)
```

Select the power down mode

6.21.1.49 PHY_READ_TO

```
#define PHY_READ_TO ((uint32_t)0x0000FFFFU)
```

6.21.1.50 PHY_RESET

```
#define PHY_RESET ((uint16_t)0x8000U)
```

PHY Reset

6.21.1.51 PHY_RESET_DELAY

```
#define PHY_RESET_DELAY ((uint32_t)0x000000FFU)
```

6.21.1.52 PHY_RESTART_AUTONEGOTIATION

```
#define PHY_RESTART_AUTONEGOTIATION ((uint16_t)0x0200U)
```

Restart auto-negotiation function

6.21.1.53 PHY_SPEED_STATUS

```
#define PHY_SPEED_STATUS ((uint16_t))
```

PHY Speed mask

6.21.1.54 PHY_SR

```
#define PHY_SR ((uint16_t))
```

PHY status register Offset

6.21.1.55 PHY_WRITE_TO

```
#define PHY_WRITE_TO ((uint32_t)0x0000FFFFU)
```

6.21.1.56 PREFETCH_ENABLE

```
#define PREFETCH_ENABLE 0U
```

6.21.1.57 TICK_INT_PRIORITY

```
#define TICK_INT_PRIORITY ((uint32_t)15U)
```

tick interrupt priority

6.21.1.58 USE_HAL_ADC_REGISTER_CALLBACKS

```
#define USE_HAL_ADC_REGISTER_CALLBACKS 0U /* ADC register callback disabled */
```

6.21.1.59 USE_HAL_CAN_REGISTER_CALLBACKS

```
#define USE_HAL_CAN_REGISTER_CALLBACKS 0U /* CAN register callback disabled */
```

6.21.1.60 USE_HAL_CEC_REGISTER_CALLBACKS

```
#define USE_HAL_CEC_REGISTER_CALLBACKS 0U /* CEC register callback disabled */
```

6.21.1.61 USE_HAL_Cryp_REGISTER_CALLBACKS

```
#define USE_HAL_Cryp_REGISTER_CALLBACKS 0U /* CRYP register callback disabled */
```

6.21.1.62 USE_HAL_DAC_REGISTER_CALLBACKS

```
#define USE_HAL_DAC_REGISTER_CALLBACKS 0U /* DAC register callback disabled */
```

6.21.1.63 USE_HAL_DCMI_REGISTER_CALLBACKS

```
#define USE_HAL_DCMI_REGISTER_CALLBACKS 0U /* DCMI register callback disabled */
```

6.21.1.64 USE_HAL_DFSDM_REGISTER_CALLBACKS

```
#define USE_HAL_DFSDM_REGISTER_CALLBACKS 0U /* DFSDM register callback disabled */
```

6.21.1.65 USE_HAL_DMA2D_REGISTER_CALLBACKS

```
#define USE_HAL_DMA2D_REGISTER_CALLBACKS 0U /* DMA2D register callback disabled */
```

6.21.1.66 USE_HAL_DSI_REGISTER_CALLBACKS

```
#define USE_HAL_DSI_REGISTER_CALLBACKS 0U /* DSI register callback disabled */
```

6.21.1.67 USE_HAL_ETH_REGISTER_CALLBACKS

```
#define USE_HAL_ETH_REGISTER_CALLBACKS 0U /* ETH register callback disabled */
```

6.21.1.68 USE_HAL_HASH_REGISTER_CALLBACKS

```
#define USE_HAL_HASH_REGISTER_CALLBACKS 0U /* HASH register callback disabled */
```

6.21.1.69 USE_HAL_HCD_REGISTER_CALLBACKS

```
#define USE_HAL_HCD_REGISTER_CALLBACKS 0U /* HCD register callback disabled */
```

6.21.1.70 USE_HAL_I2C_REGISTER_CALLBACKS

```
#define USE_HAL_I2C_REGISTER_CALLBACKS 0U /* I2C register callback disabled */
```

6.21.1.71 USE_HAL_I2S_REGISTER_CALLBACKS

```
#define USE_HAL_I2S_REGISTER_CALLBACKS 0U /* I2S register callback disabled */
```

6.21.1.72 USE_HAL_IRDA_REGISTER_CALLBACKS

```
#define USE_HAL_IRDA_REGISTER_CALLBACKS 0U /* IRDA register callback disabled */
```

6.21.1.73 USE_HAL_JPEG_REGISTER_CALLBACKS

```
#define USE_HAL_JPEG_REGISTER_CALLBACKS 0U /* JPEG register callback disabled */
```

6.21.1.74 USE_HAL_LPTIM_REGISTER_CALLBACKS

```
#define USE_HAL_LPTIM_REGISTER_CALLBACKS 0U /* LPTIM register callback disabled */
```

6.21.1.75 USE_HAL_LTDC_REGISTER_CALLBACKS

```
#define USE_HAL_LTDC_REGISTER_CALLBACKS 0U /* LTDC register callback disabled */
```

6.21.1.76 USE_HAL_MDIOS_REGISTER_CALLBACKS

```
#define USE_HAL_MDIOS_REGISTER_CALLBACKS 0U /* MDIOS register callback disabled */
```

6.21.1.77 USE_HAL_MMC_REGISTER_CALLBACKS

```
#define USE_HAL_MMC_REGISTER_CALLBACKS 0U /* MMC register callback disabled */
```

6.21.1.78 USE_HAL_NAND_REGISTER_CALLBACKS

```
#define USE_HAL_NAND_REGISTER_CALLBACKS 0U /* NAND register callback disabled */
```

6.21.1.79 USE_HAL_NOR_REGISTER_CALLBACKS

```
#define USE_HAL_NOR_REGISTER_CALLBACKS 0U /* NOR register callback disabled */
```

6.21.1.80 USE_HAL_PCD_REGISTER_CALLBACKS

```
#define USE_HAL_PCD_REGISTER_CALLBACKS 0U /* PCD register callback disabled */
```

6.21.1.81 USE_HAL_QSPI_REGISTER_CALLBACKS

```
#define USE_HAL_QSPI_REGISTER_CALLBACKS 0U /* QSPI register callback disabled */
```

6.21.1.82 USE_HAL_RNG_REGISTER_CALLBACKS

```
#define USE_HAL_RNG_REGISTER_CALLBACKS 0U /* RNG register callback disabled */
```

6.21.1.83 USE_HAL_RTC_REGISTER_CALLBACKS

```
#define USE_HAL_RTC_REGISTER_CALLBACKS 0U /* RTC register callback disabled */
```

6.21.1.84 USE_HAL_SAI_REGISTER_CALLBACKS

```
#define USE_HAL_SAI_REGISTER_CALLBACKS 0U /* SAI register callback disabled */
```

6.21.1.85 USE_HAL_SD_REGISTER_CALLBACKS

```
#define USE_HAL_SD_REGISTER_CALLBACKS 0U /* SD register callback disabled */
```

6.21.1.86 USE_HAL_SDRAM_REGISTER_CALLBACKS

```
#define USE_HAL_SDRAM_REGISTER_CALLBACKS 0U /* SDRAM register callback disabled */
```

6.21.1.87 USE_HAL_SMARTCARD_REGISTER_CALLBACKS

```
#define USE_HAL_SMARTCARD_REGISTER_CALLBACKS 0U /* SMARTCARD register callback disabled */
```

6.21.1.88 USE_HAL_SMBUS_REGISTER_CALLBACKS

```
#define USE_HAL_SMBUS_REGISTER_CALLBACKS 0U /* SMBUS register callback disabled */
```


6.21.1.89 USE_HAL_SPDIFRX_REGISTER_CALLBACKS

```
#define USE_HAL_SPDIFRX_REGISTER_CALLBACKS 0U /* SPDIFRX register callback disabled */
```

6.21.1.90 USE_HAL_SPI_REGISTER_CALLBACKS

```
#define USE_HAL_SPI_REGISTER_CALLBACKS 0U /* SPI register callback disabled */
```

6.21.1.91 USE_HAL_SRAM_REGISTER_CALLBACKS

```
#define USE_HAL_SRAM_REGISTER_CALLBACKS 0U /* SRAM register callback disabled */
```

6.21.1.92 USE_HAL_TIM_REGISTER_CALLBACKS

```
#define USE_HAL_TIM_REGISTER_CALLBACKS 0U /* TIM register callback disabled */
```

6.21.1.93 USE_HAL_UART_REGISTER_CALLBACKS

```
#define USE_HAL_UART_REGISTER_CALLBACKS 0U /* UART register callback disabled */
```

6.21.1.94 USE_HAL_USART_REGISTER_CALLBACKS

```
#define USE_HAL_USART_REGISTER_CALLBACKS 0U /* USART register callback disabled */
```

6.21.1.95 USE_HAL_WWDG_REGISTER_CALLBACKS

```
#define USE_HAL_WWDG_REGISTER_CALLBACKS 0U /* WWDG register callback disabled */
```

6.21.1.96 USE_RTOS

```
#define USE_RTOS 0U
```

6.21.1.97 USE_SPI_CRC

```
#define USE_SPI_CRC 0U
```

6.21.1.98 VDD_VALUE

```
#define VDD_VALUE 3300U
```

This is the HAL system configuration section.

Value of VDD in mv

6.22 stm32f7xx_hal_conf.h

[Go to the documentation of this file.](#)

```

00001 /* USER CODE BEGIN Header */
00021 /* USER CODE END Header */
00022
00023 /* Define to prevent recursive inclusion -----*/
00024 #ifndef __STM32F7xx_HAL_CONF_H
00025 #define __STM32F7xx_HAL_CONF_H
00026
00027 #ifdef __cplusplus
00028     extern "C" {
00029 #endif
00030
00031 /* Exported types -----*/
00032 /* Exported constants -----*/
00033
00034 /* ##### Module Selection ##### */
00038 #define HAL_MODULE_ENABLED
00039
00040 /* #define HAL_CRYPT_MODULE_ENABLED */
00041 #define HAL_ADC_MODULE_ENABLED
00042 #define HAL_CAN_MODULE_ENABLED
00043 /* #define HAL_CEC_MODULE_ENABLED */
00044 /* #define HAL_CRC_MODULE_ENABLED */
00045 #define HAL_DAC_MODULE_ENABLED
00046 /* #define HAL_DCMI_MODULE_ENABLED */
00047 /* #define HAL_DMA2D_MODULE_ENABLED */
00048 /* #define HAL_ETH_MODULE_ENABLED */
00049 /* #define HAL_ETH_LEGACY_MODULE_ENABLED */
00050 /* #define HAL_NAND_MODULE_ENABLED */
00051 /* #define HAL_NOR_MODULE_ENABLED */
00052 /* #define HAL_SRAM_MODULE_ENABLED */
00053 /* #define HAL_SDRAM_MODULE_ENABLED */
00054 /* #define HAL_HASH_MODULE_ENABLED */
00055 /* #define HAL_I2S_MODULE_ENABLED */
00056 /* #define HAL_IWDG_MODULE_ENABLED */
00057 /* #define HAL_LPTIM_MODULE_ENABLED */
00058 /* #define HAL_LTDC_MODULE_ENABLED */
00059 /* #define HAL_QSPI_MODULE_ENABLED */
00060 /* #define HAL_RNG_MODULE_ENABLED */
00061 /* #define HAL_RTC_MODULE_ENABLED */
00062 /* #define HAL_SAI_MODULE_ENABLED */
00063 /* #define HAL_SD_MODULE_ENABLED */
00064 /* #define HAL_MMC_MODULE_ENABLED */
00065 /* #define HAL_SPDIFRX_MODULE_ENABLED */
00066 /* #define HAL_SPI_MODULE_ENABLED */
00067 #define HAL_TIM_MODULE_ENABLED
00068 /* #define HAL_UART_MODULE_ENABLED */
00069 /* #define HAL_USART_MODULE_ENABLED */
00070 /* #define HAL_IRDA_MODULE_ENABLED */
00071 /* #define HAL_SMARTCARD_MODULE_ENABLED */
00072 /* #define HAL_WWDG_MODULE_ENABLED */
00073 /* #define HAL_PCD_MODULE_ENABLED */
00074 /* #define HAL_HCD_MODULE_ENABLED */
00075 /* #define HAL_DFSDM_MODULE_ENABLED */
00076 /* #define HAL_DSI_MODULE_ENABLED */
00077 /* #define HAL_JPEG_MODULE_ENABLED */
00078 /* #define HAL_MDIOS_MODULE_ENABLED */
00079 /* #define HAL_SMBUS_MODULE_ENABLED */
00080 /* #define HAL_EXTI_MODULE_ENABLED */
00081 #define HAL_GPIO_MODULE_ENABLED
00082 #define HAL_EXTI_MODULE_ENABLED
00083 #define HAL_DMA_MODULE_ENABLED
00084 #define HAL_RCC_MODULE_ENABLED
00085 #define HAL_FLASH_MODULE_ENABLED
00086 #define HAL_PWR_MODULE_ENABLED
00087 #define HAL_I2C_MODULE_ENABLED
00088 #define HAL_CORTEX_MODULE_ENABLED
00089
00090 /* ##### HSE/HSI Values adaptation ##### */
00096 #if !defined (HSE_VALUE)
00097     #define HSE_VALUE ((uint32_t)20000000U)
00098 #endif /* HSE_VALUE */
00099
00100 #if !defined (HSE_STARTUP_TIMEOUT)
00101     #define HSE_STARTUP_TIMEOUT ((uint32_t)100U)
00102 #endif /* HSE_STARTUP_TIMEOUT */
00103
00109 #if !defined (HSI_VALUE)
00110     #define HSI_VALUE ((uint32_t)16000000U)
00111 #endif /* HSI_VALUE */
00112
00116 #if !defined (LSI_VALUE)
00117     #define LSI_VALUE ((uint32_t)32000U)

```

```

00118 #endif /* LSI_VALUE */
00124 #if !defined (LSE_VALUE)
00125 #define LSE_VALUE ((uint32_t)32768U)
00126 #endif /* LSE_VALUE */
00127
00128 #if !defined (LSE_STARTUP_TIMEOUT)
00129 #define LSE_STARTUP_TIMEOUT ((uint32_t)5000U)
00130 #endif /* LSE_STARTUP_TIMEOUT */
00131
00137 #if !defined (EXTERNAL_CLOCK_VALUE)
00138 #define EXTERNAL_CLOCK_VALUE ((uint32_t)12288000U)
00139 #endif /* EXTERNAL_CLOCK_VALUE */
00140
00141 /* Tip: To avoid modifying this file each time you need to use different HSE,
00142 == you can define the HSE value in your toolchain compiler preprocessor. */
00143
00144 /* ##### System Configuration ##### */
00148 #define VDD_VALUE 3300U
00149 #define TICK_INT_PRIORITY ((uint32_t)15U)
00150 #define USE_RTOS 0U
00151 #define PREFETCH_ENABLE 0U
00152 #define ART_ACCELERATOR_ENABLE 0U /* To enable instruction cache and prefetch */
00153
00154 #define USE_HAL_ADC_REGISTER_CALLBACKS 0U /* ADC register callback disabled */
00155 #define USE_HAL_CAN_REGISTER_CALLBACKS 0U /* CAN register callback disabled */
00156 #define USE_HAL_CEC_REGISTER_CALLBACKS 0U /* CEC register callback disabled */
00157 #define USE_HAL_Cryp_REGISTER_CALLBACKS 0U /* CRYP register callback disabled */
00158 #define USE_HAL_DAC_REGISTER_CALLBACKS 0U /* DAC register callback disabled */
00159 #define USE_HAL_DCMI_REGISTER_CALLBACKS 0U /* DCMI register callback disabled */
00160 #define USE_HAL_DFSDM_REGISTER_CALLBACKS 0U /* DFSDM register callback disabled */
00161 #define USE_HAL_DMA2D_REGISTER_CALLBACKS 0U /* DMA2D register callback disabled */
00162 #define USE_HAL_DSI_REGISTER_CALLBACKS 0U /* DSI register callback disabled */
00163 #define USE_HAL_ETH_REGISTER_CALLBACKS 0U /* ETH register callback disabled */
00164 #define USE_HAL_HASH_REGISTER_CALLBACKS 0U /* HASH register callback disabled */
00165 #define USE_HAL_HCD_REGISTER_CALLBACKS 0U /* HCD register callback disabled */
00166 #define USE_HAL_I2C_REGISTER_CALLBACKS 0U /* I2C register callback disabled */
00167 #define USE_HAL_I2S_REGISTER_CALLBACKS 0U /* I2S register callback disabled */
00168 #define USE_HAL_IRDA_REGISTER_CALLBACKS 0U /* IRDA register callback disabled */
00169 #define USE_HAL_JPEG_REGISTER_CALLBACKS 0U /* JPEG register callback disabled */
00170 #define USE_HAL_LPTIM_REGISTER_CALLBACKS 0U /* LPTIM register callback disabled */
00171 #define USE_HAL_LTDC_REGISTER_CALLBACKS 0U /* LTDC register callback disabled */
00172 #define USE_HAL_MDIO_REGISTER_CALLBACKS 0U /* MDIO register callback disabled */
00173 #define USE_HAL_MMC_REGISTER_CALLBACKS 0U /* MMC register callback disabled */
00174 #define USE_HAL_NAND_REGISTER_CALLBACKS 0U /* NAND register callback disabled */
00175 #define USE_HAL_NOR_REGISTER_CALLBACKS 0U /* NOR register callback disabled */
00176 #define USE_HAL_PCD_REGISTER_CALLBACKS 0U /* PCD register callback disabled */
00177 #define USE_HAL_QSPI_REGISTER_CALLBACKS 0U /* QSPI register callback disabled */
00178 #define USE_HAL_RNG_REGISTER_CALLBACKS 0U /* RNG register callback disabled */
00179 #define USE_HAL_RTC_REGISTER_CALLBACKS 0U /* RTC register callback disabled */
00180 #define USE_HAL_SAI_REGISTER_CALLBACKS 0U /* SAI register callback disabled */
00181 #define USE_HAL_SD_REGISTER_CALLBACKS 0U /* SD register callback disabled */
00182 #define USE_HAL_SMARTCARD_REGISTER_CALLBACKS 0U /* SMARTCARD register callback disabled */
00183 #define USE_HAL_SDRAM_REGISTER_CALLBACKS 0U /* SDRAM register callback disabled */
00184 #define USE_HAL_SRAM_REGISTER_CALLBACKS 0U /* SRAM register callback disabled */
00185 #define USE_HAL_SPDIFRX_REGISTER_CALLBACKS 0U /* SPDIFRX register callback disabled */
00186 #define USE_HAL_SMBUS_REGISTER_CALLBACKS 0U /* SMBUS register callback disabled */
00187 #define USE_HAL_SPI_REGISTER_CALLBACKS 0U /* SPI register callback disabled */
00188 #define USE_HAL_TIM_REGISTER_CALLBACKS 0U /* TIM register callback disabled */
00189 #define USE_HAL_UART_REGISTER_CALLBACKS 0U /* UART register callback disabled */
00190 #define USE_HAL_USART_REGISTER_CALLBACKS 0U /* USART register callback disabled */
00191 #define USE_HAL_WWDG_REGISTER_CALLBACKS 0U /* WWDG register callback disabled */
00192
00193 /* ##### Assert Selection ##### */
00198 #define USE_FULL_ASSERT 1U
00199
00200 /* ##### Ethernet peripheral configuration ##### */
00201
00202 /* Section 1 : Ethernet peripheral configuration */
00203
00204 /* MAC ADDRESS: MAC_ADDR0:MAC_ADDR1:MAC_ADDR2:MAC_ADDR3:MAC_ADDR4:MAC_ADDR5 */
00205 #define MAC_ADDR0 2U
00206 #define MAC_ADDR1 0U
00207 #define MAC_ADDR2 0U
00208 #define MAC_ADDR3 0U
00209 #define MAC_ADDR4 0U
00210 #define MAC_ADDR5 0U
00211
00212 /* Definition of the Ethernet driver buffers size and count */
00213 #define ETH_RX_BUF_SIZE ETH_MAX_PACKET_SIZE /* buffer size for receive */
00214 #define ETH_TX_BUF_SIZE ETH_MAX_PACKET_SIZE /* buffer size for transmit */
00215 #define ETH_RXBUFNB ((uint32_t)4U) /* 4 Rx buffers of size ETH_RX_BUF_SIZE */
00216 #define ETH_TXBUFNB ((uint32_t)4U) /* 4 Tx buffers of size ETH_TX_BUF_SIZE */
00217
00218 /* Section 2: PHY configuration section */
00219

```

```

00220 /* DP83848_PHY_ADDRESS Address*/
00221 #define DP83848_PHY_ADDRESS
00222 /* PHY Reset delay these values are based on a 1 ms SysTick interrupt*/
00223 #define PHY_RESET_DELAY ((uint32_t)0x00000FFU)
00224 /* PHY Configuration delay */
00225 #define PHY_CONFIG_DELAY ((uint32_t)0x00000FFU)
00226
00227 #define PHY_READ_TO ((uint32_t)0x0000FFFFU)
00228 #define PHY_WRITE_TO ((uint32_t)0x0000FFFFU)
00229
00230 /* Section 3: Common PHY Registers */
00231
00232 #define PHY_BCR ((uint16_t)0x0000U)
00233 #define PHY_BSR ((uint16_t)0x0001U)
00235 #define PHY_RESET ((uint16_t)0x8000U)
00236 #define PHY_LOOPBACK ((uint16_t)0x4000U)
00237 #define PHY_FULLDUPLEX_100M ((uint16_t)0x2100U)
00238 #define PHY_HALFDUPLEX_100M ((uint16_t)0x2000U)
00239 #define PHY_FULLDUPLEX_10M ((uint16_t)0x0100U)
00240 #define PHY_HALFDUPLEX_10M ((uint16_t)0x0000U)
00241 #define PHY_AUTONEGOTIATION ((uint16_t)0x1000U)
00242 #define PHY_RESTART_AUTONEGOTIATION ((uint16_t)0x0200U)
00243 #define PHY_POWERDOWN ((uint16_t)0x0800U)
00244 #define PHY_ISOLATE ((uint16_t)0x0400U)
00246 #define PHY_AUTONEGO_COMPLETE ((uint16_t)0x0020U)
00247 #define PHY_LINKED_STATUS ((uint16_t)0x0004U)
00248 #define PHY_JABBER_DETECTION ((uint16_t)0x0002U)
00250 /* Section 4: Extended PHY Registers */
00251 #define PHY_SR ((uint16_t))
00253 #define PHY_SPEED_STATUS ((uint16_t))
00254 #define PHY_DUPLEX_STATUS ((uint16_t))
00256 /* ##### SPI peripheral configuration ##### */
00257
00258 /* CRC FEATURE: Use to activate CRC feature inside HAL SPI Driver
00259 * Activated: CRC code is present inside driver
00260 * Deactivated: CRC code cleaned from driver
00261 */
00262
00263 #define USE_SPI_CRC 0U
00264
00265 /* Includes -----*/
00270 #ifndef HAL_RCC_MODULE_ENABLED
00271 #include "stm32f7xx_hal_rcc.h"
00272 #endif /* HAL_RCC_MODULE_ENABLED */
00273
00274 #ifndef HAL_EXTI_MODULE_ENABLED
00275 #include "stm32f7xx_hal_exti.h"
00276 #endif /* HAL_EXTI_MODULE_ENABLED */
00277
00278 #ifndef HAL_GPIO_MODULE_ENABLED
00279 #include "stm32f7xx_hal_gpio.h"
00280 #endif /* HAL_GPIO_MODULE_ENABLED */
00281
00282 #ifndef HAL_DMA_MODULE_ENABLED
00283 #include "stm32f7xx_hal_dma.h"
00284 #endif /* HAL_DMA_MODULE_ENABLED */
00285
00286 #ifndef HAL_CORTEX_MODULE_ENABLED
00287 #include "stm32f7xx_hal_cortex.h"
00288 #endif /* HAL_CORTEX_MODULE_ENABLED */
00289
00290 #ifndef HAL_ADC_MODULE_ENABLED
00291 #include "stm32f7xx_hal_adc.h"
00292 #endif /* HAL_ADC_MODULE_ENABLED */
00293
00294 #ifndef HAL_CAN_MODULE_ENABLED
00295 #include "stm32f7xx_hal_can.h"
00296 #endif /* HAL_CAN_MODULE_ENABLED */
00297
00298 #ifndef HAL_CEC_MODULE_ENABLED
00299 #include "stm32f7xx_hal_cec.h"
00300 #endif /* HAL_CEC_MODULE_ENABLED */
00301
00302 #ifndef HAL_CRC_MODULE_ENABLED
00303 #include "stm32f7xx_hal_crc.h"
00304 #endif /* HAL_CRC_MODULE_ENABLED */
00305
00306 #ifndef HAL_CRYP_MODULE_ENABLED
00307 #include "stm32f7xx_hal_cryp.h"
00308 #endif /* HAL_CRYP_MODULE_ENABLED */
00309
00310 #ifndef HAL_DMA2D_MODULE_ENABLED
00311 #include "stm32f7xx_hal_dma2d.h"
00312 #endif /* HAL_DMA2D_MODULE_ENABLED */
00313
00314 #ifndef HAL_DAC_MODULE_ENABLED
00315 #include "stm32f7xx_hal_dac.h"

```

```
00316 #endif /* HAL_DAC_MODULE_ENABLED */
00317
00318 #ifdef HAL_DCMI_MODULE_ENABLED
00319     #include "stm32f7xx_hal_dcmi.h"
00320 #endif /* HAL_DCMI_MODULE_ENABLED */
00321
00322 #ifdef HAL_ETH_MODULE_ENABLED
00323     #include "stm32f7xx_hal_eth.h"
00324 #endif /* HAL_ETH_MODULE_ENABLED */
00325
00326 #ifdef HAL_ETH_LEGACY_MODULE_ENABLED
00327     #include "stm32f7xx_hal_eth_legacy.h"
00328 #endif /* HAL_ETH_LEGACY_MODULE_ENABLED */
00329
00330 #ifdef HAL_FLASH_MODULE_ENABLED
00331     #include "stm32f7xx_hal_flash.h"
00332 #endif /* HAL_FLASH_MODULE_ENABLED */
00333
00334 #ifdef HAL_SRAM_MODULE_ENABLED
00335     #include "stm32f7xx_hal_sram.h"
00336 #endif /* HAL_SRAM_MODULE_ENABLED */
00337
00338 #ifdef HAL_NOR_MODULE_ENABLED
00339     #include "stm32f7xx_hal_nor.h"
00340 #endif /* HAL_NOR_MODULE_ENABLED */
00341
00342 #ifdef HAL_NAND_MODULE_ENABLED
00343     #include "stm32f7xx_hal_nand.h"
00344 #endif /* HAL_NAND_MODULE_ENABLED */
00345
00346 #ifdef HAL_SDRAM_MODULE_ENABLED
00347     #include "stm32f7xx_hal_sdram.h"
00348 #endif /* HAL_SDRAM_MODULE_ENABLED */
00349
00350 #ifdef HAL_HASH_MODULE_ENABLED
00351     #include "stm32f7xx_hal_hash.h"
00352 #endif /* HAL_HASH_MODULE_ENABLED */
00353
00354 #ifdef HAL_I2C_MODULE_ENABLED
00355     #include "stm32f7xx_hal_i2c.h"
00356 #endif /* HAL_I2C_MODULE_ENABLED */
00357
00358 #ifdef HAL_I2S_MODULE_ENABLED
00359     #include "stm32f7xx_hal_i2s.h"
00360 #endif /* HAL_I2S_MODULE_ENABLED */
00361
00362 #ifdef HAL_IWDG_MODULE_ENABLED
00363     #include "stm32f7xx_hal_iwdg.h"
00364 #endif /* HAL_IWDG_MODULE_ENABLED */
00365
00366 #ifdef HAL_LPTIM_MODULE_ENABLED
00367     #include "stm32f7xx_hal_lptim.h"
00368 #endif /* HAL_LPTIM_MODULE_ENABLED */
00369
00370 #ifdef HAL_LTDC_MODULE_ENABLED
00371     #include "stm32f7xx_hal_ltdc.h"
00372 #endif /* HAL_LTDC_MODULE_ENABLED */
00373
00374 #ifdef HAL_PWR_MODULE_ENABLED
00375     #include "stm32f7xx_hal_pwr.h"
00376 #endif /* HAL_PWR_MODULE_ENABLED */
00377
00378 #ifdef HAL_QSPI_MODULE_ENABLED
00379     #include "stm32f7xx_hal_qspi.h"
00380 #endif /* HAL_QSPI_MODULE_ENABLED */
00381
00382 #ifdef HAL_RNG_MODULE_ENABLED
00383     #include "stm32f7xx_hal_rng.h"
00384 #endif /* HAL_RNG_MODULE_ENABLED */
00385
00386 #ifdef HAL_RTC_MODULE_ENABLED
00387     #include "stm32f7xx_hal_rtc.h"
00388 #endif /* HAL_RTC_MODULE_ENABLED */
00389
00390 #ifdef HAL_SAI_MODULE_ENABLED
00391     #include "stm32f7xx_hal_sai.h"
00392 #endif /* HAL_SAI_MODULE_ENABLED */
00393
00394 #ifdef HAL_SD_MODULE_ENABLED
00395     #include "stm32f7xx_hal_sd.h"
00396 #endif /* HAL_SD_MODULE_ENABLED */
00397
00398 #ifdef HAL_MMC_MODULE_ENABLED
00399     #include "stm32f7xx_hal_mmc.h"
00400 #endif /* HAL_MMC_MODULE_ENABLED */
00401
00402 #ifdef HAL_SPDIFRX_MODULE_ENABLED
```

```


00403 #include "stm32f7xx_hal_spdifrx.h"
00404 #endif /* HAL_SPDIFRX_MODULE_ENABLED */
00405
00406 #ifdef HAL_SPI_MODULE_ENABLED
00407 #include "stm32f7xx_hal_spi.h"
00408 #endif /* HAL_SPI_MODULE_ENABLED */
00409
00410 #ifdef HAL_TIM_MODULE_ENABLED
00411 #include "stm32f7xx_hal_tim.h"
00412 #endif /* HAL_TIM_MODULE_ENABLED */
00413
00414 #ifdef HAL_UART_MODULE_ENABLED
00415 #include "stm32f7xx_hal_uart.h"
00416 #endif /* HAL_UART_MODULE_ENABLED */
00417
00418 #ifdef HAL_USART_MODULE_ENABLED
00419 #include "stm32f7xx_hal_usart.h"
00420 #endif /* HAL_USART_MODULE_ENABLED */
00421
00422 #ifdef HAL_IRDA_MODULE_ENABLED
00423 #include "stm32f7xx_hal_irda.h"
00424 #endif /* HAL_IRDA_MODULE_ENABLED */
00425
00426 #ifdef HAL_SMARTCARD_MODULE_ENABLED
00427 #include "stm32f7xx_hal_smartcard.h"
00428 #endif /* HAL_SMARTCARD_MODULE_ENABLED */
00429
00430 #ifdef HAL_WWDG_MODULE_ENABLED
00431 #include "stm32f7xx_hal_wwdg.h"
00432 #endif /* HAL_WWDG_MODULE_ENABLED */
00433
00434 #ifdef HAL_PCD_MODULE_ENABLED
00435 #include "stm32f7xx_hal_pcd.h"
00436 #endif /* HAL_PCD_MODULE_ENABLED */
00437
00438 #ifdef HAL_HCD_MODULE_ENABLED
00439 #include "stm32f7xx_hal_hcd.h"
00440 #endif /* HAL_HCD_MODULE_ENABLED */
00441
00442 #ifdef HAL_DFSDM_MODULE_ENABLED
00443 #include "stm32f7xx_hal_dfsdm.h"
00444 #endif /* HAL_DFSDM_MODULE_ENABLED */
00445
00446 #ifdef HAL_DSI_MODULE_ENABLED
00447 #include "stm32f7xx_hal_dsi.h"
00448 #endif /* HAL_DSI_MODULE_ENABLED */
00449
00450 #ifdef HAL_JPEG_MODULE_ENABLED
00451 #include "stm32f7xx_hal_jpeg.h"
00452 #endif /* HAL_JPEG_MODULE_ENABLED */
00453
00454 #ifdef HAL_MDIOS_MODULE_ENABLED
00455 #include "stm32f7xx_hal_mdios.h"
00456 #endif /* HAL_MDIOS_MODULE_ENABLED */
00457
00458 #ifdef HAL_SMBUS_MODULE_ENABLED
00459 #include "stm32f7xx_hal_smbus.h"
00460 #endif /* HAL_SMBUS_MODULE_ENABLED */
00461
00462 /* Exported macro -----*/
00463 #ifdef USE_FULL_ASSERT
00472 #define assert_param(expr) ((expr) ? (void)0U : assert_failed((uint8_t *)__FILE__, __LINE__))
00473 /* Exported functions ----- */
00474 void assert_failed(uint8_t* file, uint32_t line);
00475 #else
00476 #define assert_param(expr) ((void)0U)
00477 #endif /* USE_FULL_ASSERT */
00478
00479 #ifdef __cplusplus
00480 }
00481 #endif
00482
00483 #endif /* __STM32F7xx_HAL_CONF_H */
00484

```

6.23 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/stm32f7xx_↵ it.h File Reference

This file contains the headers of the interrupt handlers.

This graph shows which files directly or indirectly include this file:

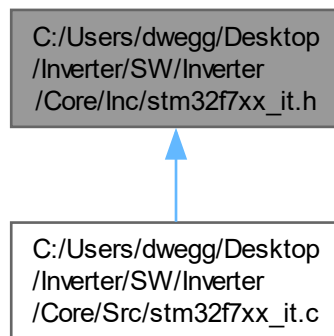

Functions

- void [NMI_Handler](#) (void)
This function handles Non maskable interrupt.
- void [HardFault_Handler](#) (void)
This function handles Hard fault interrupt.
- void [MemManage_Handler](#) (void)
This function handles Memory management fault.
- void [BusFault_Handler](#) (void)
This function handles Pre-fetch fault, memory access fault.
- void [UsageFault_Handler](#) (void)
This function handles Undefined instruction or illegal state.
- void [SVC_Handler](#) (void)
This function handles System service call via SWI instruction.
- void [DebugMon_Handler](#) (void)
This function handles Debug monitor.
- void [PendSV_Handler](#) (void)
This function handles Pendable request for system service.
- void [SysTick_Handler](#) (void)
This function handles System tick timer.
- void [CAN1_RX0_IRQHandler](#) (void)
This function handles CAN1 RX0 interrupts.
- void [CAN1_RX1_IRQHandler](#) (void)
This function handles CAN1 RX1 interrupt.
- void [TIM1_BRK_TIM9_IRQHandler](#) (void)
This function handles TIM1 break interrupt and TIM9 global interrupt.
- void [TIM1_UP_TIM10_IRQHandler](#) (void)
This function handles TIM1 update interrupt and TIM10 global interrupt.
- void [TIM1_TRG_COM_TIM11_IRQHandler](#) (void)
This function handles TIM1 trigger and commutation interrupts and TIM11 global interrupt.
- void [TIM1_CC_IRQHandler](#) (void)
This function handles TIM1 capture compare interrupt.

- void [TIM6_DAC_IRQHandler](#) (void)
This function handles TIM6 global interrupt, DAC1 and DAC2 underrun error interrupts.
- void [DMA2_Stream0_IRQHandler](#) (void)
This function handles DMA2 stream0 global interrupt.
- void [DMA2_Stream1_IRQHandler](#) (void)
This function handles DMA2 stream1 global interrupt.
- void [DMA2_Stream2_IRQHandler](#) (void)
This function handles DMA2 stream2 global interrupt.

6.23.1 Detailed Description

This file contains the headers of the interrupt handlers.

Attention

Copyright (c) 2023 STMicroelectronics. All rights reserved.

This software is licensed under terms that can be found in the LICENSE file in the root directory of this software component. If no LICENSE file comes with this software, it is provided AS-IS.

6.23.2 Function Documentation

6.23.2.1 BusFault_Handler()

```
void BusFault_Handler (  
    void )
```

This function handles Pre-fetch fault, memory access fault.

6.23.2.2 CAN1_RX0_IRQHandler()

```
void CAN1_RX0_IRQHandler (  
    void )
```

This function handles CAN1 RX0 interrupts.

6.23.2.3 CAN1_RX1_IRQHandler()

```
void CAN1_RX1_IRQHandler (  
    void )
```

This function handles CAN1 RX1 interrupt.

6.23.2.4 DebugMon_Handler()

```
void DebugMon_Handler (  
    void )
```

This function handles Debug monitor.

6.23.2.5 DMA2_Stream0_IRQHandler()

```
void DMA2_Stream0_IRQHandler (  
    void )
```

This function handles DMA2 stream0 global interrupt.

6.23.2.6 DMA2_Stream1_IRQHandler()

```
void DMA2_Stream1_IRQHandler (  
    void )
```

This function handles DMA2 stream1 global interrupt.

6.23.2.7 DMA2_Stream2_IRQHandler()

```
void DMA2_Stream2_IRQHandler (  
    void )
```

This function handles DMA2 stream2 global interrupt.

6.23.2.8 HardFault_Handler()

```
void HardFault_Handler (  
    void )
```

This function handles Hard fault interrupt.

6.23.2.9 MemManage_Handler()

```
void MemManage_Handler (  
    void )
```

This function handles Memory management fault.

6.23.2.10 NMI_Handler()

```
void NMI_Handler (  
    void )
```

This function handles Non maskable interrupt.

6.23.2.11 PendSV_Handler()

```
void PendSV_Handler (  
    void )
```

This function handles Pendable request for system service.

6.23.2.12 SVC_Handler()

```
void SVC_Handler (  
    void )
```

This function handles System service call via SWI instruction.

6.23.2.13 SysTick_Handler()

```
void SysTick_Handler (  
    void )
```

This function handles System tick timer.

6.23.2.14 TIM1_BRK_TIM9_IRQHandler()

```
void TIM1_BRK_TIM9_IRQHandler (  
    void )
```

This function handles TIM1 break interrupt and TIM9 global interrupt.

6.23.2.15 TIM1_CC_IRQHandler()

```
void TIM1_CC_IRQHandler (  
    void )
```

This function handles TIM1 capture compare interrupt.

6.23.2.16 TIM1_TRG_COM_TIM11_IRQHandler()

```
void TIM1_TRG_COM_TIM11_IRQHandler (  
    void )
```

This function handles TIM1 trigger and commutation interrupts and TIM11 global interrupt.

6.23.2.17 TIM1_UP_TIM10_IRQHandler()

```
void TIM1_UP_TIM10_IRQHandler (  
    void )
```

This function handles TIM1 update interrupt and TIM10 global interrupt.

6.23.2.18 TIM6_DAC_IRQHandler()

```
void TIM6_DAC_IRQHandler (
    void )
```

This function handles TIM6 global interrupt, DAC1 and DAC2 underrun error interrupts.

Here is the call graph for this function:



6.23.2.19 UsageFault_Handler()

```
void UsageFault_Handler (
    void )
```

This function handles Undefined instruction or illegal state.

6.24 stm32f7xx_it.h

[Go to the documentation of this file.](#)

```
00001 /* USER CODE BEGIN Header */
00018 /* USER CODE END Header */
00019
00020 /* Define to prevent recursive inclusion -----*/
00021 #ifndef __STM32F7xx_IT_H
00022 #define __STM32F7xx_IT_H
00023
00024 #ifdef __cplusplus
00025 extern "C" {
00026 #endif
00027
00028 /* Private includes -----*/
00029 /* USER CODE BEGIN Includes */
00030
00031 /* USER CODE END Includes */
00032
00033 /* Exported types -----*/
00034 /* USER CODE BEGIN ET */
00035
00036 /* USER CODE END ET */
00037
00038 /* Exported constants -----*/
00039 /* USER CODE BEGIN EC */
00040
00041 /* USER CODE END EC */
00042
00043 /* Exported macro -----*/
00044 /* USER CODE BEGIN EM */
00045
00046 /* USER CODE END EM */
00047
00048 /* Exported functions prototypes -----*/
00049 void NMI_Handler(void);
00050 void HardFault_Handler(void);
00051 void MemManage_Handler(void);
00052 void BusFault_Handler(void);
00053 void UsageFault_Handler(void);
```

```


00054 void SVC_Handler(void);
00055 void DebugMon_Handler(void);
00056 void PendSV_Handler(void);
00057 void SysTick_Handler(void);
00058 void CAN1_RX0_IRQHandler(void);
00059 void CAN1_RX1_IRQHandler(void);
00060 void TIM1_BRK_TIM9_IRQHandler(void);
00061 void TIM1_UP_TIM10_IRQHandler(void);
00062 void TIM1_TRG_COM_TIM11_IRQHandler(void);
00063 void TIM1_CC_IRQHandler(void);
00064 void TIM6_DAC_IRQHandler(void);
00065 void DMA2_Stream0_IRQHandler(void);
00066 void DMA2_Stream1_IRQHandler(void);
00067 void DMA2_Stream2_IRQHandler(void);
00068 /* USER CODE BEGIN EFP */
00069
00070 /* USER CODE END EFP */
00071
00072 #ifdef __cplusplus
00073 }
00074 #endif
00075
00076 #endif /* __STM32F7xx_IT_H */

```

6.25 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/TASKS_1ms.h File Reference

Header file for functions related to tasks executed every 1ms.

This graph shows which files directly or indirectly include this file:

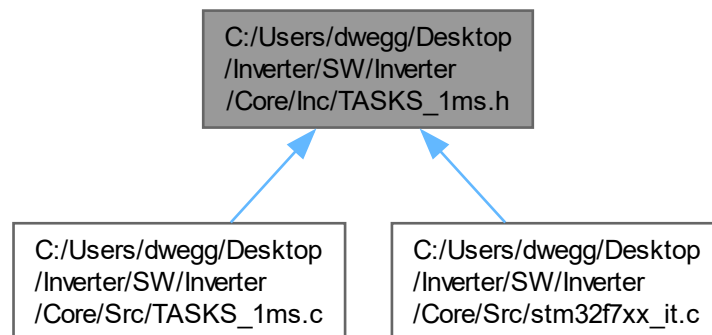

Functions

- void `tasks_1ms` (void)

Function to be executed every 1ms.

6.25.1 Detailed Description

Header file for functions related to tasks executed every 1ms.

Attention

Copyright (c) 2024 David Redondo (@dweggg in GitHub). All rights reserved.

This software is licensed under the Attribution-NonCommercial-ShareAlike 4.0 International (CC BY-NC-SA 4.0) license. For more information, see: <https://creativecommons.org/licenses/by-nc-sa/4.0/legalcode>

6.25.2 Function Documentation**6.25.2.1 tasks_1ms()**

```
void tasks_1ms (
    void )
```


Function to be executed every 1ms.

This function is called by the TIM6 IRQ handler every millisecond.

This function is called by the TIM6 IRQ handler every millisecond. It increments the millisecond counter and calls the [LED](#) handler for left, right, and error LEDs. Here is the call graph for this function:



Here is the caller graph for this function:

**6.26 TASKS_1ms.h**

[Go to the documentation of this file.](#)


```
00001 /* USER CODE BEGIN Header */
00018 /* USER CODE END Header */
00019
00020
00021 #ifndef TASKS_1MS_H
00022 #define TASKS_1MS_H
00023
00029 void tasks_1ms(void);
00030
00031 #endif /* TASKS_1MS_H */
```

6.27 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/tim.h File Reference


This file contains all the function prototypes for the [tim.c](#) file.

```
#include "main.h"
```

Include dependency graph for tim.h:

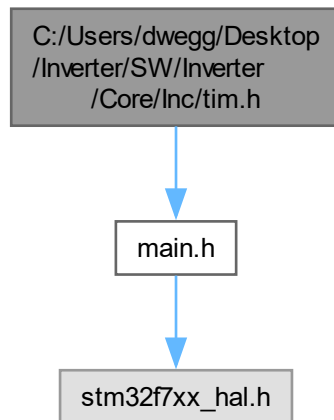

This graph shows which files directly or indirectly include this file:

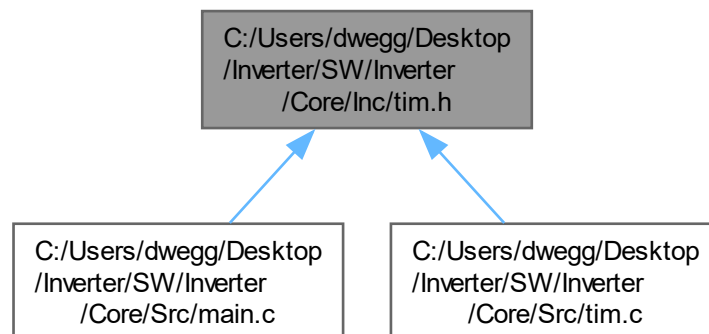

Functions

- void [MX_TIM1_Init](#) (void)
- void [MX_TIM2_Init](#) (void)
- void [MX_TIM4_Init](#) (void)
- void [MX_TIM6_Init](#) (void)
- void [MX_TIM8_Init](#) (void)
- void [HAL_TIM_MspPostInit](#) (TIM_HandleTypeDef *htim)

Variables

- TIM_HandleTypeDef [htim1](#)
- TIM_HandleTypeDef [htim2](#)
- TIM_HandleTypeDef [htim4](#)
- TIM_HandleTypeDef [htim6](#)
- TIM_HandleTypeDef [htim8](#)

6.27.1 Detailed Description

This file contains all the function prototypes for the [tim.c](#) file.

Attention

Copyright (c) 2024 STMicroelectronics. All rights reserved.

This software is licensed under terms that can be found in the LICENSE file in the root directory of this software component. If no LICENSE file comes with this software, it is provided AS-IS.

6.27.2 Function Documentation


6.27.2.1 HAL_TIM_MspPostInit()

```
void HAL_TIM_MspPostInit (
    TIM_HandleTypeDef * htim )
```

TIM1 GPIO Configuration PE8 -----> TIM1_CH1N PE9 -----> TIM1_CH1 PE10 -----> TIM1_CH2N PE11 -----> TIM1_CH2 PE12 -----> TIM1_CH3N PE13 -----> TIM1_CH3

TIM8 GPIO Configuration PA5 -----> TIM8_CH1N PB14 -----> TIM8_CH2N PB15 -----> TIM8_CH3N PC6 -----> TIM8_CH1 PC7 -----> TIM8_CH2 PC8 -----> TIM8_CH3


Here is the caller graph for this function:

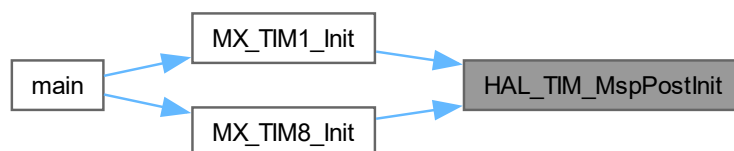

6.27.2.2 MX_TIM1_Init()

```
void MX_TIM1_Init (  
    void )
```

Here is the call graph for this function:

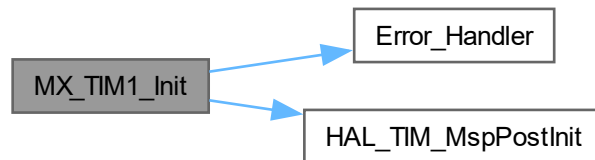

Here is the caller graph for this function:



6.27.2.3 MX_TIM2_Init()

```
void MX_TIM2_Init (  
    void )
```

Here is the call graph for this function:



Here is the caller graph for this function:



6.27.2.4 MX_TIM4_Init()

```
void MX_TIM4_Init (
    void )
```

Here is the call graph for this function:



Here is the caller graph for this function:



6.27.2.5 MX_TIM6_Init()

```
void MX_TIM6_Init (
    void )
```

Here is the call graph for this function:




Here is the caller graph for this function:



6.27.2.6 MX_TIM8_Init()

```
void MX_TIM8_Init (  
    void )
```

Here is the call graph for this function:

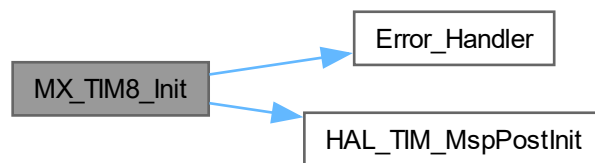

Here is the caller graph for this function:



6.27.3 Variable Documentation

6.27.3.1 htim1

```
TIM_HandleTypeDef htim1 [extern]
```

6.27.3.2 htim2

```
TIM_HandleTypeDef htim2 [extern]
```

6.27.3.3 htim4

```
TIM_HandleTypeDef htim4 [extern]
```

6.27.3.4 htim6

```
TIM_HandleTypeDef htim6 [extern]
```

6.27.3.5 htim8

```
TIM_HandleTypeDef htim8 [extern]
```

6.28 tim.h

[Go to the documentation of this file.](#)

```
00001 /* USER CODE BEGIN Header */
00019 /* USER CODE END Header */
00020 /* Define to prevent recursive inclusion -----*/
00021 #ifndef __TIM_H__
00022 #define __TIM_H__
00023
00024 #ifdef __cplusplus
00025 extern "C" {
00026 #endif
00027
00028 /* Includes -----*/
00029 #include "main.h"
00030
00031 /* USER CODE BEGIN Includes */
00032
00033 /* USER CODE END Includes */
00034
00035 extern TIM_HandleTypeDef htim1;
00036
00037 extern TIM_HandleTypeDef htim2;
00038
00039 extern TIM_HandleTypeDef htim4;
00040
00041 extern TIM_HandleTypeDef htim6;
00042
00043 extern TIM_HandleTypeDef htim8;
00044
00045 /* USER CODE BEGIN Private defines */
00046
00047 /* USER CODE END Private defines */
00048
00049 void MX_TIM1_Init(void);
00050 void MX_TIM2_Init(void);
00051 void MX_TIM4_Init(void);
```


```
00052 void MX_TIM6_Init(void);
00053 void MX_TIM8_Init(void);
00054
00055 void HAL_TIM_MspPostInit(TIM_HandleTypeDef *htim);
00056
00057 /* USER CODE BEGIN Prototypes */
00058
00059 /* USER CODE END Prototypes */
00060
00061 #ifdef __cplusplus
00062 }
00063 #endif
00064
00065 #endif /* __TIM_H__ */
00066
```

6.29 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/usb_otg.h File Reference


This file contains all the function prototypes for the [usb_otg.c](#) file.

```
#include "main.h"
```

Include dependency graph for usb_otg.h:

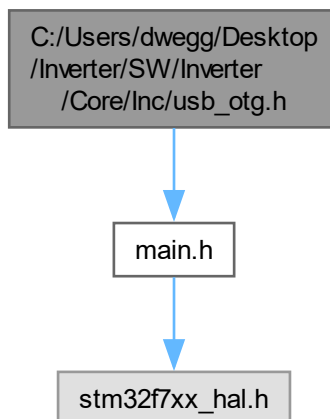

This graph shows which files directly or indirectly include this file:

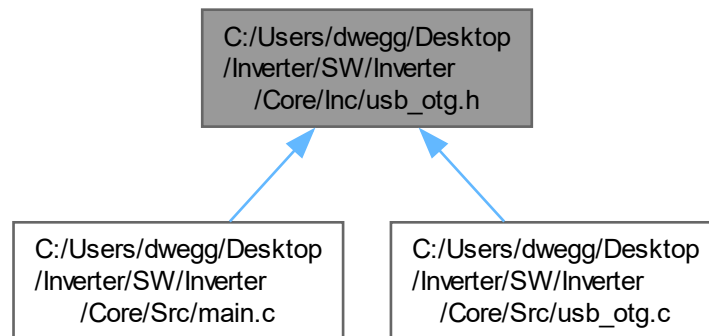

Functions

- void `MX_USB_OTG_FS_USB_Init` (void)

6.29.1 Detailed Description

This file contains all the function prototypes for the `usb_otg.c` file.

Attention

Copyright (c) 2024 STMicroelectronics. All rights reserved.

This software is licensed under terms that can be found in the LICENSE file in the root directory of this software component. If no LICENSE file comes with this software, it is provided AS-IS.

6.29.2 Function Documentation

6.29.2.1 MX_USB_OTG_FS_USB_Init()

```
void MX_USB_OTG_FS_USB_Init (  
    void )
```

Here is the caller graph for this function:



6.30 usb_otg.h

[Go to the documentation of this file.](#)

```

00001 /* USER CODE BEGIN Header */
00019 /* USER CODE END Header */
00020 /* Define to prevent recursive inclusion -----*/
00021 #ifndef __USB_OTG_H__
00022 #define __USB_OTG_H__
00023
00024 #ifdef __cplusplus
00025 extern "C" {
00026 #endif
00027
00028 /* Includes -----*/
00029 #include "main.h"
00030
00031 /* USER CODE BEGIN Includes */
00032
00033 /* USER CODE END Includes */
00034
00035 /* USER CODE BEGIN Private defines */
00036
00037 /* USER CODE END Private defines */
00038
00039 void MX_USB_OTG_FS_USB_Init(void);
00040
00041 /* USER CODE BEGIN Prototypes */
00042
00043 /* USER CODE END Prototypes */
00044
00045 #ifdef __cplusplus
00046 }
00047 #endif
00048
00049 #endif /* __USB_OTG_H__ */
00050


```

6.31 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/adc.c File Reference

This file provides code for the configuration of the ADC instances.

```
#include "adc.h"
```

Include dependency graph for adc.c:

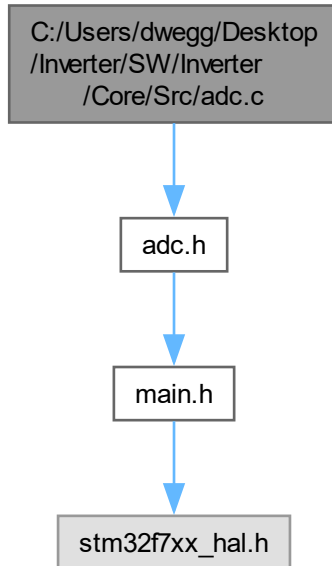

Functions

- void [MX_ADC1_Init](#) (void)
- void [MX_ADC2_Init](#) (void)
- void [MX_ADC3_Init](#) (void)
- void [HAL_ADC_MspInit](#) (ADC_HandleTypeDef *adcHandle)
- void [HAL_ADC_MspDeInit](#) (ADC_HandleTypeDef *adcHandle)

Variables

- ADC_HandleTypeDef [hadc1](#)
- ADC_HandleTypeDef [hadc2](#)
- ADC_HandleTypeDef [hadc3](#)
- DMA_HandleTypeDef [hdma_adc1](#)
- DMA_HandleTypeDef [hdma_adc2](#)
- DMA_HandleTypeDef [hdma_adc3](#)

6.31.1 Detailed Description

This file provides code for the configuration of the ADC instances.

Attention

Copyright (c) 2024 STMicroelectronics. All rights reserved.

This software is licensed under terms that can be found in the LICENSE file in the root directory of this software component. If no LICENSE file comes with this software, it is provided AS-IS.

6.31.2 Function Documentation

6.31.2.1 HAL_ADC_MspDeInit()

```
void HAL_ADC_MspDeInit (
    ADC_HandleTypeDef * adcHandle )
```

ADC1 GPIO Configuration PA0/WKUP -----> ADC1_IN0 PA1 -----> ADC1_IN1 PA2 -----> ADC1_IN2 PA3 -----> ADC1_IN3

ADC2 GPIO Configuration PA6 -----> ADC2_IN6 PA7 -----> ADC2_IN7 PB0 -----> ADC2_IN8 PB1 -----> ADC2_IN9

ADC3 GPIO Configuration PC0 -----> ADC3_IN10 PC1 -----> ADC3_IN11 PC2 -----> ADC3_IN12 PC3 -----> ADC3_IN13

6.31.2.2 HAL_ADC_MspInit()

```
void HAL_ADC_MspInit (
    ADC_HandleTypeDef * adcHandle )
```

ADC1 GPIO Configuration PA0/WKUP -----> ADC1_IN0 PA1 -----> ADC1_IN1 PA2 -----> ADC1_IN2 PA3 -----> ADC1_IN3

ADC2 GPIO Configuration PA6 -----> ADC2_IN6 PA7 -----> ADC2_IN7 PB0 -----> ADC2_IN8 PB1 -----> ADC2_IN9

ADC3 GPIO Configuration PC0 -----> ADC3_IN10 PC1 -----> ADC3_IN11 PC2 -----> ADC3_IN12 PC3 -----> ADC3_IN13
Here is the call graph for this function:



6.31.2.3 MX_ADC1_Init()

```
void MX_ADC1_Init (
    void )
```

Configure the global features of the ADC (Clock, Resolution, Data Alignment and number of conversion)

Configure for the selected ADC regular channel its corresponding rank in the sequencer and its sample time.

Configure for the selected ADC regular channel its corresponding rank in the sequencer and its sample time.

Configure for the selected ADC regular channel its corresponding rank in the sequencer and its sample time. Here is the call graph for this function:



Here is the caller graph for this function:



6.31.2.4 MX_ADC2_Init()

```
void MX_ADC2_Init (  
    void )
```

Configure the global features of the ADC (Clock, Resolution, Data Alignment and number of conversion)

Configure for the selected ADC regular channel its corresponding rank in the sequencer and its sample time.

Configure for the selected ADC regular channel its corresponding rank in the sequencer and its sample time.

Configure for the selected ADC regular channel its corresponding rank in the sequencer and its sample time.

Configure for the selected ADC regular channel its corresponding rank in the sequencer and its sample time. Here is the call graph for this function:



Here is the caller graph for this function:



6.31.2.5 MX_ADC3_Init()

```
void MX_ADC3_Init (  
    void )
```

Configure the global features of the ADC (Clock, Resolution, Data Alignment and number of conversion)

Configure for the selected ADC regular channel its corresponding rank in the sequencer and its sample time. Here is the call graph for this function:



Here is the caller graph for this function:



6.31.3 Variable Documentation

6.31.3.1 hadc1

```
ADC_HandleTypeDef hadc1
```

6.31.3.2 hadc2

```
ADC_HandleTypeDef hadc2
```

6.31.3.3 hadc3

```
ADC_HandleTypeDef hadc3
```

6.31.3.4 hdma_adc1

```
DMA_HandleTypeDef hdma_adc1
```

6.31.3.5 hdma_adc2

```
DMA_HandleTypeDef hdma_adc2
```

6.31.3.6 hdma_adc3


```
DMA_HandleTypeDef hdma_adc3
```

6.32 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/can.c File Reference

This file provides code for the configuration of the CAN instances.

```
#include "can.h"
```

Include dependency graph for can.c:

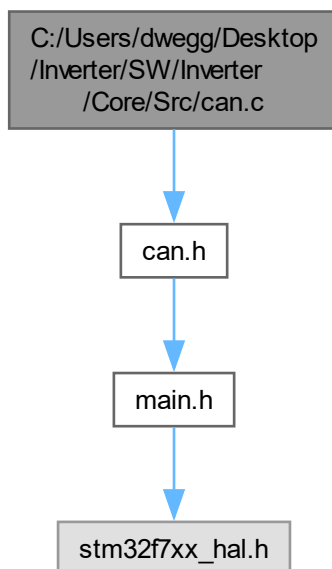

Functions

- void [MX_CAN1_Init](#) (void)
- void [HAL_CAN_MspInit](#) (CAN_HandleTypeDef *canHandle)
- void [HAL_CAN_MspDeInit](#) (CAN_HandleTypeDef *canHandle)

Variables

- CAN_HandleTypeDef [hcan1](#)

6.32.1 Detailed Description

This file provides code for the configuration of the CAN instances.

Attention

Copyright (c) 2024 STMicroelectronics. All rights reserved.

This software is licensed under terms that can be found in the LICENSE file in the root directory of this software component. If no LICENSE file comes with this software, it is provided AS-IS.

6.32.2 Function Documentation

6.32.2.1 HAL_CAN_MspDeInit()

```
void HAL_CAN_MspDeInit (
    CAN_HandleTypeDef * canHandle )
```

CAN1 GPIO Configuration PD0 -----> CAN1_RX PD1 -----> CAN1_TX

6.32.2.2 HAL_CAN_MspInit()

```
void HAL_CAN_MspInit (
    CAN_HandleTypeDef * canHandle )
```

CAN1 GPIO Configuration PD0 -----> CAN1_RX PD1 -----> CAN1_TX

6.32.2.3 MX_CAN1_Init()

```
void MX_CAN1_Init (
    void )
```

Here is the call graph for this function:



Here is the caller graph for this function:



6.32.3 Variable Documentation

6.32.3.1 hcan1


```
CAN_HandleTypeDef hcan1
```

6.33 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/dac.c File Reference

This file provides code for the configuration of the DAC instances.

```
#include "dac.h"
```

Include dependency graph for dac.c:

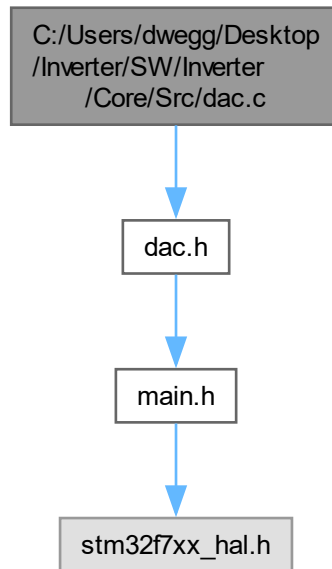

Functions

- void [MX_DAC_Init](#) (void)
- void [HAL_DAC_MspInit](#) (DAC_HandleTypeDef *dacHandle)
- void [HAL_DAC_MspDeInit](#) (DAC_HandleTypeDef *dacHandle)

Variables

- DAC_HandleTypeDef [hdac](#)

6.33.1 Detailed Description

This file provides code for the configuration of the DAC instances.

Attention

Copyright (c) 2024 STMicroelectronics. All rights reserved.

This software is licensed under terms that can be found in the LICENSE file in the root directory of this software component. If no LICENSE file comes with this software, it is provided AS-IS.

6.33.2 Function Documentation

6.33.2.1 HAL_DAC_MspDeInit()

```
void HAL_DAC_MspDeInit (
    DAC_HandleTypeDef * dacHandle )
```

DAC GPIO Configuration PA4 -----> DAC_OUT1

Uncomment the line below to disable the "TIM6_DAC_IRQn" interrupt Be aware, disabling shared interrupt may affect other IPs

6.33.2.2 HAL_DAC_MspInit()

```
void HAL_DAC_MspInit (
    DAC_HandleTypeDef * dacHandle )
```

DAC GPIO Configuration PA4 -----> DAC_OUT1

6.33.2.3 MX_DAC_Init()

```
void MX_DAC_Init (
    void )
```

DAC Initialization

DAC channel OUT1 configHere is the call graph for this function:



Here is the caller graph for this function:



6.33.3 Variable Documentation

6.33.3.1 hdac


DAC_HandleTypeDef hdac

6.34 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/dma.c File Reference

This file provides code for the configuration of all the requested memory to memory DMA transfers.

```
#include "dma.h"
```

Include dependency graph for dma.c:

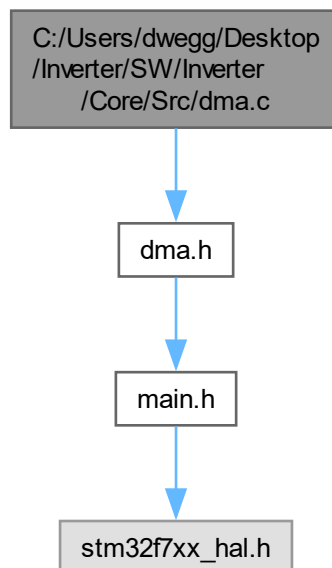

Functions

- void [MX_DMA_Init](#) (void)

6.34.1 Detailed Description

This file provides code for the configuration of all the requested memory to memory DMA transfers.

Attention

Copyright (c) 2024 STMicroelectronics. All rights reserved.

This software is licensed under terms that can be found in the LICENSE file in the root directory of this software component. If no LICENSE file comes with this software, it is provided AS-IS.

6.34.2 Function Documentation

6.34.2.1 MX_DMA_Init()

```
void MX_DMA_Init (
    void )
```


Enable DMA controller clock Here is the caller graph for this function:



6.35 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/FSM.c File Reference

This file provides code for Finite State Machine (FSM) control.

```
#include "FSM.h"
#include "PCB_IO.h"
Include dependency graph for FSM.c:
```

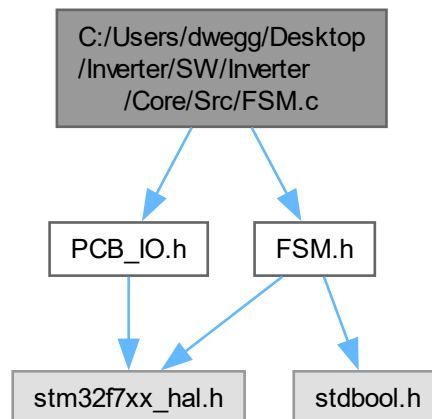

Functions

- void `inv_init` (`InverterOperation` *inv)
Initialize the inverter operation structure.
- void `inv_FSM` (`InverterOperation` *inv)
Run the Finite State Machine (FSM) for inverter operation control.

6.35.1 Detailed Description

This file provides code for Finite State Machine (FSM) control.

Attention

Copyright (c) 2024 David Redondo (@dweggg in GitHub). All rights reserved.

This software is licensed under the Attribution-NonCommercial-ShareAlike 4.0 International (CC BY-NC-SA 4.0) license. For more information, see: <https://creativecommons.org/licenses/by-nc-sa/4.0/legalcode>

6.35.2 Function Documentation

6.35.2.1 inv_FSM()

```
void inv_FSM (  
    InverterOperation * inv )
```

Run the Finite State Machine (FSM) for inverter operation control.

Parameters

<i>inv</i>	Pointer to the inverter operation structure.
------------	--

Here is the caller graph for this function:



6.35.2.2 inv_init()

```
void inv_init (  
    InverterOperation * inv )
```

Initialize the inverter operation structure.

Parameters


<i>inv</i>	Pointer to the inverter operation structure.
------------	--

6.36 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/gpio.c File Reference

This file provides code for the configuration of all used GPIO pins.

```
#include "gpio.h"
```

Include dependency graph for gpio.c:

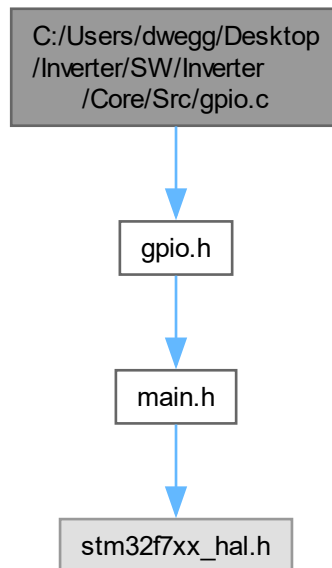

Functions

- void [MX_GPIO_Init](#) (void)

6.36.1 Detailed Description

This file provides code for the configuration of all used GPIO pins.

Attention

Copyright (c) 2024 STMicroelectronics. All rights reserved.

This software is licensed under terms that can be found in the LICENSE file in the root directory of this software component. If no LICENSE file comes with this software, it is provided AS-IS.

6.36.2 Function Documentation

6.36.2.1 MX_GPIO_Init()

```
void MX_GPIO_Init (
    void )
```

Configure pins as Analog Input Output EVENT_OUT EXTI PA9 -----> USB_OTG_FS_VBUS PA10 -----> USB_OTG_FS_ID PA11 -----> USB_OTG_FS_DM PA12 -----> USB_OTG_FS_DP Here is the caller graph for this function:




6.37 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/i2c.c File Reference

This file provides code for the configuration of the I2C instances.

```
#include "i2c.h"
```

Include dependency graph for i2c.c:

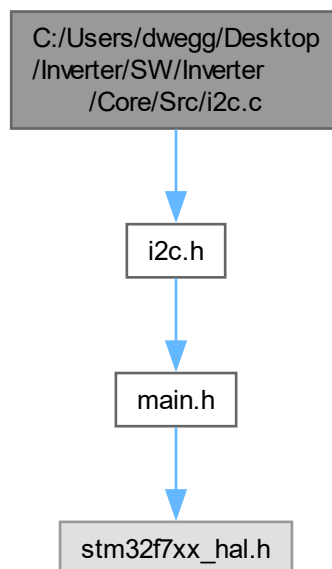

Functions

- void [MX_I2C1_Init](#) (void)
- void [HAL_I2C_MspInit](#) (I2C_HandleTypeDef *i2cHandle)
- void [HAL_I2C_MspDeInit](#) (I2C_HandleTypeDef *i2cHandle)

Variables

- I2C_HandleTypeDef [hi2c1](#)

6.37.1 Detailed Description

This file provides code for the configuration of the I2C instances.

Attention

Copyright (c) 2024 STMicroelectronics. All rights reserved.

This software is licensed under terms that can be found in the LICENSE file in the root directory of this software component. If no LICENSE file comes with this software, it is provided AS-IS.

6.37.2 Function Documentation

6.37.2.1 HAL_I2C_MspDeInit()

```
void HAL_I2C_MspDeInit (  
    I2C_HandleTypeDef * i2cHandle )
```

I2C1 GPIO Configuration PB6 -----> I2C1_SCL PB7 -----> I2C1_SDA

6.37.2.2 HAL_I2C_MspInit()

```
void HAL_I2C_MspInit (  
    I2C_HandleTypeDef * i2cHandle )
```

Initializes the peripherals clock

I2C1 GPIO Configuration PB6 -----> I2C1_SCL PB7 -----> I2C1_SDAHere is the call graph for this function:



6.37.2.3 MX_I2C1_Init()

```
void MX_I2C1_Init (
    void )
```

Configure Analogue filter

Configure Digital filterHere is the call graph for this function:



Here is the caller graph for this function:



6.37.3 Variable Documentation

6.37.3.1 hi2c1

```
I2C_HandleTypeDef hi2c1
```

6.38 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/main.c File Reference


: Main program body

```
#include "main.h"
#include "adc.h"
#include "can.h"
#include "dac.h"
#include "dma.h"
#include "i2c.h"
#include "tim.h"
#include "usb_otg.h"
```

```
#include "gpio.h"
```

```
#include "FSM.h"
```

Include dependency graph for main.c:

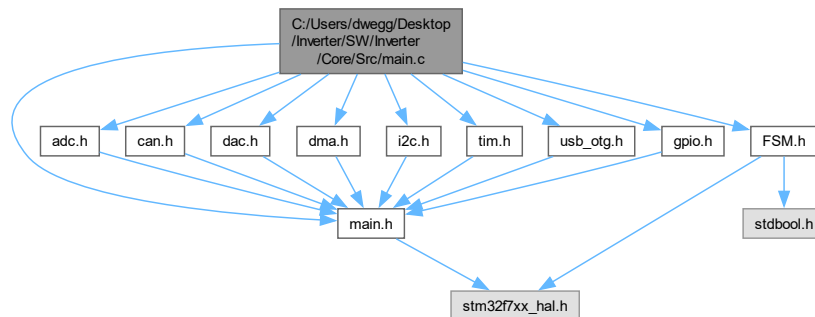

Functions

- void [SystemClock_Config](#) (void)
System Clock Configuration.
- int [main](#) (void)
The application entry point.
- void [Error_Handler](#) (void)
This function is executed in case of error occurrence.

Variables

- ADC_HandleTypeDef [hadc2](#)
- volatile uint32_t [ADC2_raw](#) [4] = {0}
- [InverterOperation](#) [invLeft](#)
- [InverterOperation](#) [invRight](#)

6.38.1 Detailed Description

: Main program body

Attention

Copyright (c) 2023 STMicroelectronics. All rights reserved.

This software is licensed under terms that can be found in the LICENSE file in the root directory of this software component. If no LICENSE file comes with this software, it is provided AS-IS.

6.38.2 Function Documentation

6.38.2.1 Error_Handler()


```
void Error_Handler (
    void )
```

This function is executed in case of error occurrence.

Return values

<i>None</i>	
-------------	--

Here is the caller graph for this function:

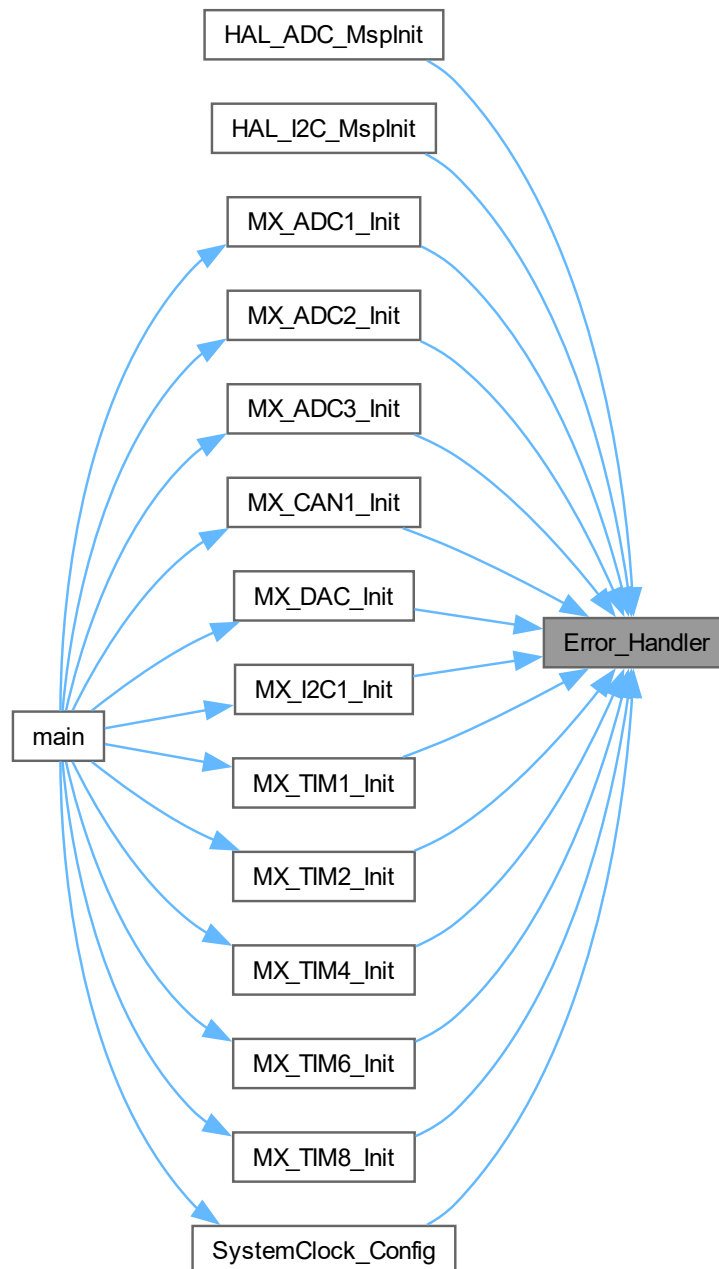

6.38.2.2 main()

```
int main (
```




```
void )
```

The application entry point.

Return values

<i>int</i>	
------------	--

Here is the call graph for this function:

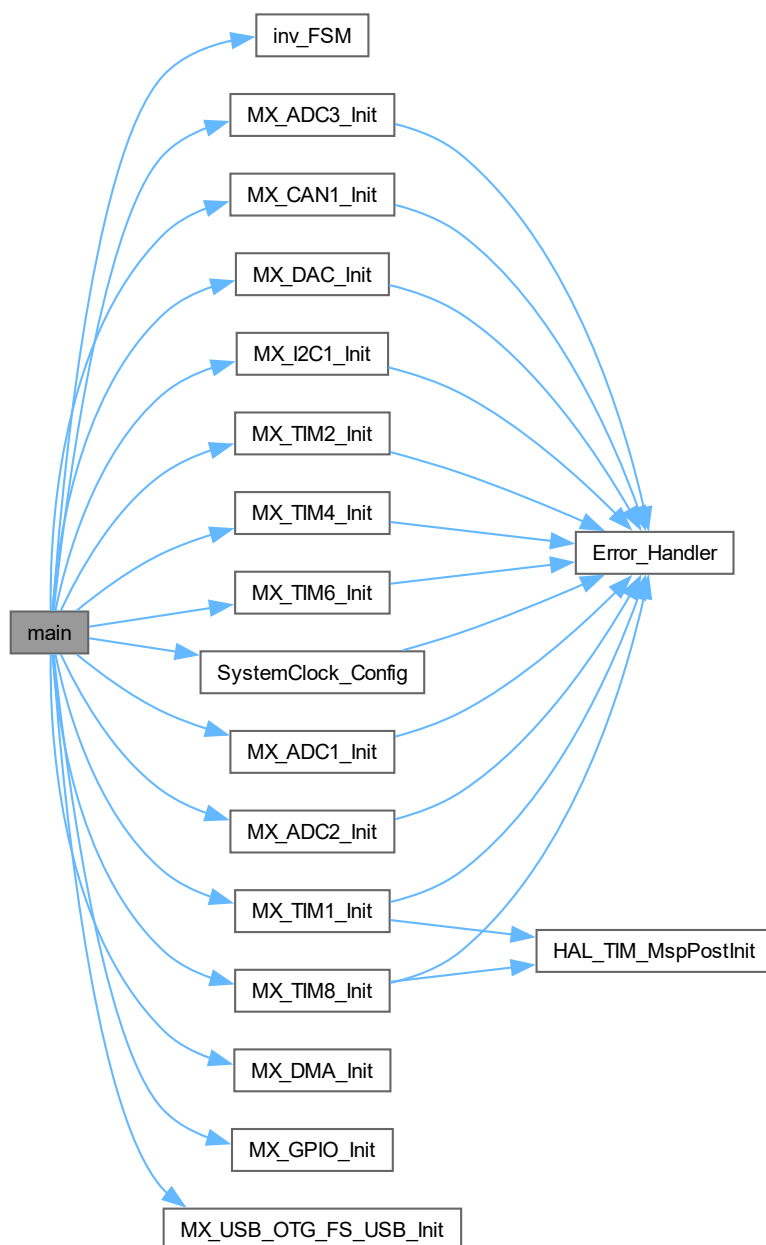

6.38.2.3 SystemClock_Config()

```
void SystemClock_Config (
    void )
```

System Clock Configuration.

Return values


<i>None</i>	
-------------	--

Configure the main internal regulator output voltage


Initializes the RCC Oscillators according to the specified parameters in the RCC_OscInitTypeDef structure.

Activate the Over-Drive mode

Initializes the CPU, AHB and APB buses clocksHere is the call graph for this function:



Here is the caller graph for this function:



6.38.3 Variable Documentation

6.38.3.1 ADC2_raw

```
volatile uint32_t ADC2_raw[4] = {0}
```

6.38.3.2 hadc2

```
ADC_HandleTypeDef hadc2 [extern]
```

6.38.3.3 invLeft

```
InverterOperation invLeft
```

Initial value:

```
= {  
    .state = INV_STATE_STARTUP,  
    .LED_port = LED_LEFT_GPIO_Port,  
    .LED_pin = LED_LEFT_Pin,  
    .enable_port = ENABLE_L_GPIO_Port,  
    .enable_pin = ENABLE_L_Pin  
}
```

6.38.3.4 invRight

```
InverterOperation invRight
```


Initial value:

```
= {  
    .state = INV_STATE_STARTUP,  
    .LED_port = LED_RIGHT_GPIO_Port,  
    .LED_pin = LED_RIGHT_Pin,  
    .enable_port = ENABLE_R_GPIO_Port,  
    .enable_pin = ENABLE_R_Pin  
}
```

6.39 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/PCB_IO.c File Reference

This file provides functions for handling GPIOs and other low-priority tasks.

```
#include "PCB_IO.h"  
#include "main.h"  
Include dependency graph for PCB_IO.c:
```

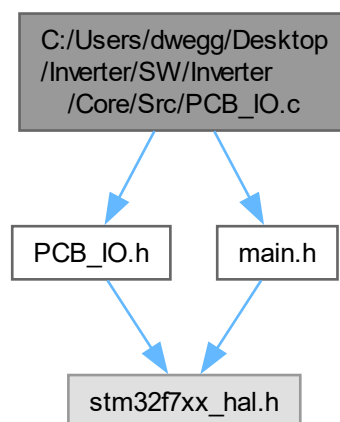

Functions

- void `LED_handler` (`LED *led`, `uint32_t ms_counter`)
LED handler function.

Variables

- `LED led_left` = { `.port = LED_LEFT_GPIO_Port`, `.pin = LED_LEFT_Pin`, `.mode = LED_MODE_OFF` }
- `LED led_right` = { `.port = LED_RIGHT_GPIO_Port`, `.pin = LED_RIGHT_Pin`, `.mode = LED_MODE_OFF` }
- `LED led_error` = { `.port = LED_ERR_GPIO_Port`, `.pin = LED_ERR_Pin`, `.mode = LED_MODE_OFF` }

6.39.1 Detailed Description

This file provides functions for handling GPIOs and other low-priority tasks.

Attention

Copyright (c) 2024 David Redondo (@dweggg in GitHub). All rights reserved.

This software is licensed under the Attribution-NonCommercial-ShareAlike 4.0 International (CC BY-NC-SA 4.0) license. For more information, see: <https://creativecommons.org/licenses/by-nc-sa/4.0/legalcode>

6.39.2 Function Documentation

6.39.2.1 LED_handler()

```
void LED_handler (
    LED * led,
    uint32_t ms_counter )
```


LED handler function.

This function handles the LED blinking modes based on the LED mode and current millisecond counter.

Parameters

<i>led</i>	Pointer to the LED structure.
<i>ms_counter</i>	Current millisecond counter.

Here is the caller graph for this function:



6.39.3 Variable Documentation

6.39.3.1 `led_error`

```
LED led_error = { .port = LED_ERR_GPIO_Port, .pin = LED_ERR_Pin, .mode = LED_MODE_OFF }
```

6.39.3.2 `led_left`

```
LED led_left = { .port = LED_LEFT_GPIO_Port, .pin = LED_LEFT_Pin, .mode = LED_MODE_OFF }
```

6.39.3.3 `led_right`


```
LED led_right = { .port = LED_RIGHT_GPIO_Port, .pin = LED_RIGHT_Pin, .mode = LED_MODE_OFF }
```

6.40 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/Pergamon_float.c File Reference

```
#include "Pergamon_float.h"
```

```
#include <math.h>
```

Include dependency graph for Pergamon_float.c:

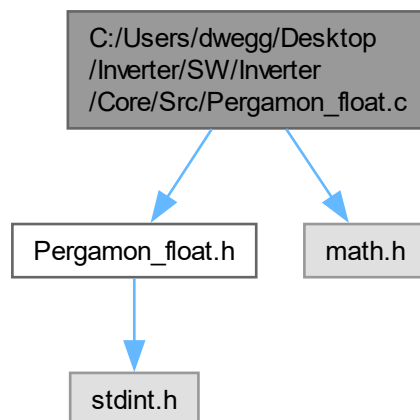

Functions

- void [pi_aw_calc](#) (volatile [pi_aw_struct](#) *v)
- void [pi_init](#) (volatile [pi_struct](#) *v)
- void [pi_calc](#) (volatile [pi_struct](#) *v)
- void [pi_extsat_calc](#) (volatile [pi_struct](#) *v)
- void [clarke3F_calc](#) (volatile [clarke3F_struct](#) *v)
- void [iclarke3F_calc](#) (volatile [iclarke3F_struct](#) *v)
- void [rot_calc](#) (volatile [rot_struct](#) *v)
- void [irot_calc](#) (volatile [irot_struct](#) *v)
- void [angle_calc](#) (volatile [angle_struct](#) *v)
- void [svpwm_calc](#) (volatile [svpwm_struct](#) *v)
- void [rampa_calc](#) (volatile [rampa_struct](#) *v)
- void [rampa_dual_calc](#) (volatile [rampa_dual_struct](#) *v)
- void [datalog_calc](#) (volatile [datalog_struct](#) *dl)
- void [filtreLP_init](#) (volatile [filtreLP_struct](#) *v)
- void [filtreLP_calc](#) (volatile [filtreLP_struct](#) *v)
- void [avg_calc_10_samples](#) (volatile [avg_struct_10](#) *v)
- void [RMS_calc](#) (volatile [RMS_struct](#) *v)
- void [step_calc](#) (volatile [step_struct](#) *v)

6.40.1 Function Documentation

6.40.1.1 [angle_calc\(\)](#)

```
void angle_calc (
    volatile angle\_struct * v )
```

6.40.1.2 [avg_calc_10_samples\(\)](#)

```
void avg_calc_10_samples (
    volatile avg\_struct\_10 * v )
```

6.40.1.3 [clarke3F_calc\(\)](#)

```
void clarke3F_calc (
    volatile clarke3F\_struct * v )
```

6.40.1.4 [datalog_calc\(\)](#)

```
void datalog_calc (
    volatile datalog\_struct * dl )
```

6.40.1.5 [filtreLP_calc\(\)](#)

```
void filtreLP_calc (
    volatile filtreLP\_struct * v )
```

6.40.1.6 filtreLP_init()

```
void filtreLP_init (
    volatile filtreLP_struct * v )
```

6.40.1.7 iclarke3F_calc()

```
void iclarke3F_calc (
    volatile iclarke3F_struct * v )
```

6.40.1.8 irot_calc()

```
void irot_calc (
    volatile irot_struct * v )
```

6.40.1.9 pi_aw_calc()

```
void pi_aw_calc (
    volatile pi_aw_struct * v )
```

6.40.1.10 pi_calc()

```
void pi_calc (
    volatile pi_struct * v )
```

6.40.1.11 pi_extsat_calc()

```
void pi_extsat_calc (
    volatile pi_struct * v )
```

6.40.1.12 pi_init()

```
void pi_init (
    volatile pi_struct * v )
```

6.40.1.13 rampa_calc()

```
void rampa_calc (
    volatile rampa_struct * v )
```

6.40.1.14 rampa_dual_calc()

```
void rampa_dual_calc (
    volatile rampa_dual_struct * v )
```

6.40.1.15 RMS_calc()

```
void RMS_calc (
    volatile RMS_struct * v )
```

6.40.1.16 rot_calc()

```
void rot_calc (
    volatile rot_struct * v )
```

6.40.1.17 step_calc()

```
void step_calc (
    volatile step_struct * v )
```

6.40.1.18 svpwm_calc()


```
void svpwm_calc (
    volatile svpwm_struct * v )
```

6.41 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/stm32f7xx_hal_msp.c File Reference

This file provides code for the MSP Initialization and de-Initialization codes.

```
#include "main.h"
```

Include dependency graph for stm32f7xx_hal_msp.c:

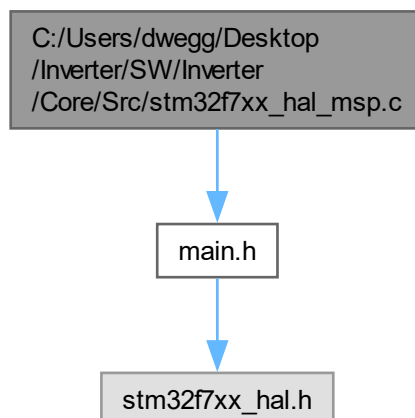

Functions

- void [HAL_MspInit](#) (void)

6.41.1 Detailed Description

This file provides code for the MSP Initialization and de-Initialization codes.

Attention

Copyright (c) 2023 STMicroelectronics. All rights reserved.

This software is licensed under terms that can be found in the LICENSE file in the root directory of this software component. If no LICENSE file comes with this software, it is provided AS-IS.

6.41.2 Function Documentation

6.41.2.1 HAL_MspInit()

```
void HAL_MspInit (  
    void )
```


Initializes the Global MSP.

6.42 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/stm32f7xx_it.c File Reference

Interrupt Service Routines.

```
#include "main.h"  
#include "stm32f7xx_it.h"  
#include "TASKS_1ms.h"
```

Include dependency graph for stm32f7xx_it.c:

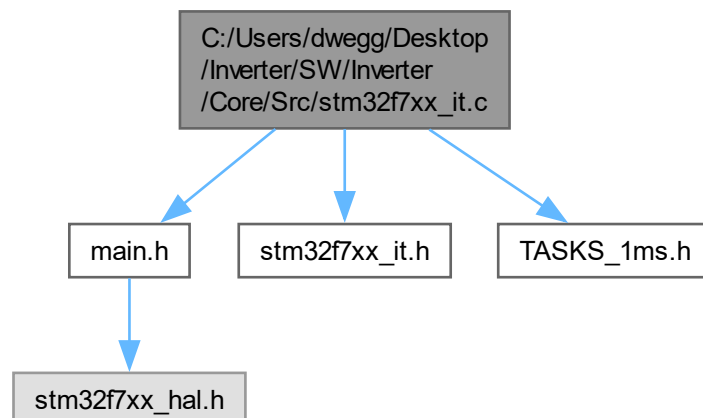

Functions

- void [NMI_Handler](#) (void)
This function handles Non maskable interrupt.
- void [HardFault_Handler](#) (void)
This function handles Hard fault interrupt.
- void [MemManage_Handler](#) (void)
This function handles Memory management fault.
- void [BusFault_Handler](#) (void)
This function handles Pre-fetch fault, memory access fault.
- void [UsageFault_Handler](#) (void)
This function handles Undefined instruction or illegal state.
- void [SVC_Handler](#) (void)
This function handles System service call via SWI instruction.
- void [DebugMon_Handler](#) (void)
This function handles Debug monitor.
- void [PendSV_Handler](#) (void)
This function handles Pendable request for system service.
- void [SysTick_Handler](#) (void)
This function handles System tick timer.
- void [CAN1_RX0_IRQHandler](#) (void)
This function handles CAN1 RX0 interrupts.
- void [CAN1_RX1_IRQHandler](#) (void)
This function handles CAN1 RX1 interrupt.
- void [TIM1_BRK_TIM9_IRQHandler](#) (void)
This function handles TIM1 break interrupt and TIM9 global interrupt.
- void [TIM1_UP_TIM10_IRQHandler](#) (void)
This function handles TIM1 update interrupt and TIM10 global interrupt.
- void [TIM1_TRG_COM_TIM11_IRQHandler](#) (void)
This function handles TIM1 trigger and commutation interrupts and TIM11 global interrupt.
- void [TIM1_CC_IRQHandler](#) (void)
This function handles TIM1 capture compare interrupt.
- void [TIM6_DAC_IRQHandler](#) (void)
This function handles TIM6 global interrupt, DAC1 and DAC2 underrun error interrupts.
- void [DMA2_Stream0_IRQHandler](#) (void)
This function handles DMA2 stream0 global interrupt.
- void [DMA2_Stream1_IRQHandler](#) (void)
This function handles DMA2 stream1 global interrupt.
- void [DMA2_Stream2_IRQHandler](#) (void)
This function handles DMA2 stream2 global interrupt.

Variables

- DMA_HandleTypeDef [hdma_adc1](#)
- DMA_HandleTypeDef [hdma_adc2](#)
- DMA_HandleTypeDef [hdma_adc3](#)
- CAN_HandleTypeDef [hcan1](#)
- DAC_HandleTypeDef [hdac](#)
- TIM_HandleTypeDef [htim1](#)
- TIM_HandleTypeDef [htim6](#)

6.42.1 Detailed Description

Interrupt Service Routines.

Attention

Copyright (c) 2023 STMicroelectronics. All rights reserved.

This software is licensed under terms that can be found in the LICENSE file in the root directory of this software component. If no LICENSE file comes with this software, it is provided AS-IS.

6.42.2 Function Documentation

6.42.2.1 BusFault_Handler()

```
void BusFault_Handler (
    void )
```

This function handles Pre-fetch fault, memory access fault.

6.42.2.2 CAN1_RX0_IRQHandler()

```
void CAN1_RX0_IRQHandler (
    void )
```

This function handles CAN1 RX0 interrupts.

6.42.2.3 CAN1_RX1_IRQHandler()

```
void CAN1_RX1_IRQHandler (
    void )
```

This function handles CAN1 RX1 interrupt.

6.42.2.4 DebugMon_Handler()

```
void DebugMon_Handler (
    void )
```

This function handles Debug monitor.

6.42.2.5 DMA2_Stream0_IRQHandler()

```
void DMA2_Stream0_IRQHandler (
    void )
```

This function handles DMA2 stream0 global interrupt.

6.42.2.6 DMA2_Stream1_IRQHandler()

```
void DMA2_Stream1_IRQHandler (
    void )
```

This function handles DMA2 stream1 global interrupt.

6.42.2.7 DMA2_Stream2_IRQHandler()

```
void DMA2_Stream2_IRQHandler (
    void )
```

This function handles DMA2 stream2 global interrupt.

6.42.2.8 HardFault_Handler()

```
void HardFault_Handler (
    void )
```

This function handles Hard fault interrupt.

6.42.2.9 MemManage_Handler()

```
void MemManage_Handler (
    void )
```

This function handles Memory management fault.

6.42.2.10 NMI_Handler()

```
void NMI_Handler (
    void )
```

This function handles Non maskable interrupt.

6.42.2.11 PendSV_Handler()

```
void PendSV_Handler (
    void )
```

This function handles Pendable request for system service.

6.42.2.12 SVC_Handler()

```
void SVC_Handler (
    void )
```

This function handles System service call via SWI instruction.

6.42.2.13 SysTick_Handler()

```
void SysTick_Handler (  
    void )
```

This function handles System tick timer.

6.42.2.14 TIM1_BRK_TIM9_IRQHandler()

```
void TIM1_BRK_TIM9_IRQHandler (  
    void )
```

This function handles TIM1 break interrupt and TIM9 global interrupt.

6.42.2.15 TIM1_CC_IRQHandler()

```
void TIM1_CC_IRQHandler (  
    void )
```

This function handles TIM1 capture compare interrupt.

6.42.2.16 TIM1_TRG_COM_TIM11_IRQHandler()

```
void TIM1_TRG_COM_TIM11_IRQHandler (  
    void )
```

This function handles TIM1 trigger and commutation interrupts and TIM11 global interrupt.

6.42.2.17 TIM1_UP_TIM10_IRQHandler()

```
void TIM1_UP_TIM10_IRQHandler (  
    void )
```

This function handles TIM1 update interrupt and TIM10 global interrupt.

6.42.2.18 TIM6_DAC_IRQHandler()

```
void TIM6_DAC_IRQHandler (  
    void )
```

This function handles TIM6 global interrupt, DAC1 and DAC2 underrun error interrupts.

Here is the call graph for this function:



6.42.2.19 UsageFault_Handler()

```
void UsageFault_Handler (  
    void )
```

This function handles Undefined instruction or illegal state.

6.42.3 Variable Documentation

6.42.3.1 hcan1

```
CAN_HandleTypeDef hcan1 [extern]
```

6.42.3.2 hdac

```
DAC_HandleTypeDef hdac [extern]
```

6.42.3.3 hdma_adc1

```
DMA_HandleTypeDef hdma_adc1 [extern]
```

6.42.3.4 hdma_adc2

```
DMA_HandleTypeDef hdma_adc2 [extern]
```

6.42.3.5 hdma_adc3

```
DMA_HandleTypeDef hdma_adc3 [extern]
```

6.42.3.6 htim1

```
TIM_HandleTypeDef htim1 [extern]
```

6.42.3.7 htim6


```
TIM_HandleTypeDef htim6 [extern]
```

6.43 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/syscalls.c File Reference

STM32CubeIDE Minimal System calls file.

```
#include <sys/stat.h>
#include <stdlib.h>
#include <errno.h>
#include <stdio.h>
#include <signal.h>
#include <time.h>
#include <sys/time.h>
#include <sys/times.h>
```

Include dependency graph for syscalls.c:

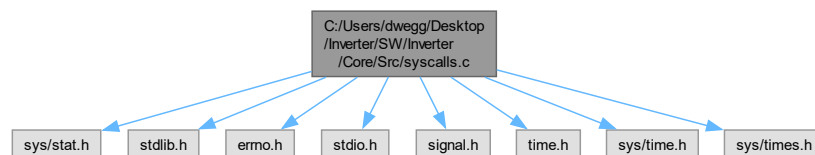

Functions

- `int __io_putchar (int ch) __attribute__((weak))`
- `int __io_getchar (void)`
- `void initialise_monitor_handles ()`
- `int _getpid (void)`
- `int _kill (int pid, int sig)`
- `void _exit (int status)`
- `__attribute__((weak))`
- `int _close (int file)`
- `int _fstat (int file, struct stat *st)`
- `int _isatty (int file)`
- `int _lseek (int file, int ptr, int dir)`
- `int _open (char *path, int flags,...)`
- `int _wait (int *status)`
- `int _unlink (char *name)`
- `int _times (struct tms *buf)`
- `int _stat (char *file, struct stat *st)`
- `int _link (char *old, char *new)`
- `int _fork (void)`
- `int _execve (char *name, char **argv, char **env)`

Variables

- `char ** environ = __env`

6.43.1 Detailed Description

STM32CubeIDE Minimal System calls file.

Author

Auto-generated by STM32CubeIDE

```
For more information about which c-functions
need which of these lowlevel functions
please consult the Newlib libc-manual
```

Attention

Copyright (c) 2020-2023 STMicroelectronics. All rights reserved.

This software is licensed under terms that can be found in the LICENSE file in the root directory of this software component. If no LICENSE file comes with this software, it is provided AS-IS.

6.43.2 Function Documentation

6.43.2.1 __attribute__()

```
__attribute__ (
    (weak) )
```

Here is the call graph for this function:



6.43.2.2 __io_getchar()

```
int __io_getchar (
    void ) [extern]
```

Here is the caller graph for this function:



6.43.2.3 __io_putchar()

```
int __io_putchar (
    int ch ) [extern]
```

6.43.2.4 _close()

```
int _close (
    int file )
```

6.43.2.5 _execve()

```
int _execve (
    char * name,
    char ** argv,
    char ** env )
```

6.43.2.6 _exit()

```
void _exit (
    int status )
```

Here is the call graph for this function:



6.43.2.7 _fork()

```
int _fork (
    void )
```

6.43.2.8 _fstat()

```
int _fstat (
    int file,
    struct stat * st )
```

6.43.2.9 `_getpid()`

```
int _getpid (
    void )
```

6.43.2.10 `_isatty()`

```
int _isatty (
    int file )
```

6.43.2.11 `_kill()`

```
int _kill (
    int pid,
    int sig )
```

Here is the caller graph for this function:



6.43.2.12 `_link()`

```
int _link (
    char * old,
    char * new )
```

6.43.2.13 `_lseek()`

```
int _lseek (
    int file,
    int ptr,
    int dir )
```

6.43.2.14 `_open()`

```
int _open (
    char * path,
    int flags,
    ... )
```

6.43.2.15 `_stat()`

```
int _stat (
    char * file,
    struct stat * st )
```

6.43.2.16 `_times()`

```
int _times (
    struct tms * buf )
```

6.43.2.17 `_unlink()`

```
int _unlink (
    char * name )
```

6.43.2.18 `_wait()`

```
int _wait (
    int * status )
```

6.43.2.19 `initialise_monitor_handles()`

```
void initialise_monitor_handles ( )
```

6.43.3 Variable Documentation


6.43.3.1 `environ`

```
char** environ = __env
```

6.44 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/sysmem.c File Reference

STM32CubeIDE System Memory calls file.

```
#include <errno.h>
#include <stdint.h>
Include dependency graph for sysmem.c:
```

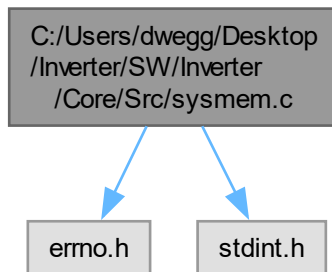

Functions

- void * [_sbrk](#) (ptrdiff_t incr)
[_sbrk\(\)](#) allocates memory to the newlib heap and is used by malloc and others from the C library

6.44.1 Detailed Description

STM32CubeIDE System Memory calls file.

Author

Generated by STM32CubeIDE

For more information about which C functions
need which of these lowlevel functions
please consult the newlib libc manual

Attention

Copyright (c) 2023 STMicroelectronics. All rights reserved.

This software is licensed under terms that can be found in the LICENSE file in the root directory of this software component. If no LICENSE file comes with this software, it is provided AS-IS.

6.44.2 Function Documentation

6.44.2.1 _sbrk()

```
void * _sbrk (
    ptrdiff_t incr )
```

[_sbrk\(\)](#) allocates memory to the newlib heap and is used by malloc and others from the C library

```
* #####
* # .data # .bss #          newlib heap          #          MSP stack          #
* #          #          #          #          # Reserved by _Min_Stack_Size #
* #####
* ^-- RAM start          ^-- _end                      _estack, RAM end --^
*
```

This implementation starts allocating at the '_end' linker symbol The '_Min_Stack_Size' linker symbol reserves a memory for the MSP stack The implementation considers '_estack' linker symbol to be RAM end NOTE: If the MSP stack, at any point during execution, grows larger than the reserved size, please increase the '_Min_Stack_Size'.

Parameters

<i>incr</i>	Memory size
-------------	-------------

Returns


Pointer to allocated memory

6.45 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/system_stm32f7xx.c File Reference

CMSIS Cortex-M7 Device Peripheral Access Layer System Source File.

```
#include "stm32f7xx.h"
```

Include dependency graph for system_stm32f7xx.c:

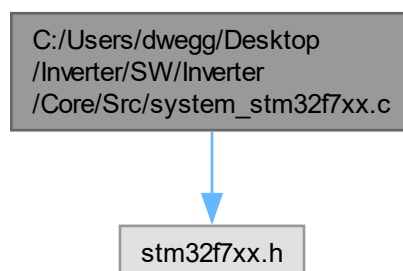

Macros

- `#define HSE_VALUE ((uint32_t)25000000)`
- `#define HSI_VALUE ((uint32_t)16000000)`

Functions

- void `SystemInit` (void)
Setup the microcontroller system Initialize the Embedded Flash Interface, the PLL and update the SystemFrequency variable.
- void `SystemCoreClockUpdate` (void)
Update SystemCoreClock variable according to Clock Register Values. The SystemCoreClock variable contains the core clock (HCLK), it can be used by the user application to setup the SysTick timer or configure other parameters.

Variables

- `uint32_t SystemCoreClock` = 16000000
- `const uint8_t AHBPrescTable` [16] = {0, 0, 0, 0, 0, 0, 0, 0, 1, 2, 3, 4, 6, 7, 8, 9}
- `const uint8_t APBPrescTable` [8] = {0, 0, 0, 0, 1, 2, 3, 4}

6.45.1 Detailed Description

CMSIS Cortex-M7 Device Peripheral Access Layer System Source File.

Author

MCD Application Team

This file provides two functions and one global variable to be called from user application:

- `SystemInit()`: This function is called at startup just after reset and before branch to main program. This call is made inside the "startup_stm32f7xx.s" file.
- `SystemCoreClock` variable: Contains the core clock (HCLK), it can be used by the user application to setup the SysTick timer or configure other parameters.
- `SystemCoreClockUpdate()`: Updates the variable `SystemCoreClock` and must be called whenever the core clock is changed during program execution.

Attention


Copyright (c) 2016 STMicroelectronics. All rights reserved.

This software is licensed under terms that can be found in the LICENSE file in the root directory of this software component. If no LICENSE file comes with this software, it is provided AS-IS.

6.46 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/TASKS_1ms.c File Reference

This file contains functions to execute tasks every 1ms.

```
#include "TASKS_1ms.h"
#include "PCB_IO.h"
Include dependency graph for TASKS_1ms.c:
```

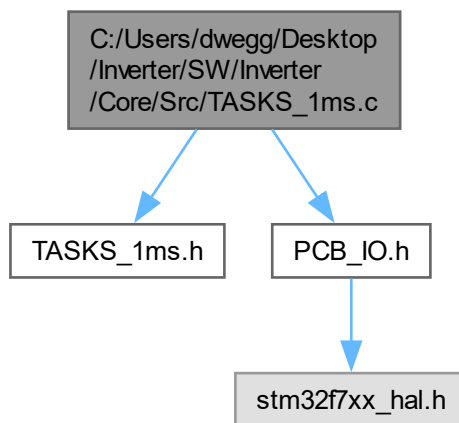

Functions

- void `tasks_1ms` (void)
Function to be executed every 1ms.

6.46.1 Detailed Description

This file contains functions to execute tasks every 1ms.

Attention

Copyright (c) 2024 David Redondo (@dweggg in GitHub). All rights reserved.

This software is licensed under the Attribution-NonCommercial-ShareAlike 4.0 International (CC BY-NC-SA 4.0) license. For more information, see: <https://creativecommons.org/licenses/by-nc-sa/4.0/legalcode>


6.46.2 Function Documentation

6.46.2.1 tasks_1ms()


```
void tasks_1ms (  
    void )
```

Function to be executed every 1ms.

This function is called by the TIM6 IRQ handler every millisecond. It increments the millisecond counter and calls the [LED](#) handler for left, right, and error LEDs. Here is the call graph for this function:



Here is the caller graph for this function:




6.47 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/tim.c File Reference

This file provides code for the configuration of the TIM instances.


```
#include "tim.h"
```

Include dependency graph for tim.c:

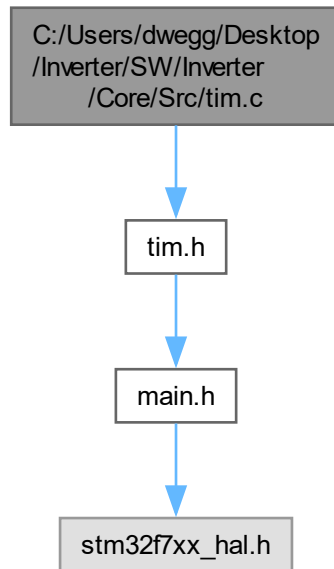

Functions

- void [MX_TIM1_Init](#) (void)
- void [MX_TIM2_Init](#) (void)
- void [MX_TIM4_Init](#) (void)
- void [MX_TIM6_Init](#) (void)
- void [MX_TIM8_Init](#) (void)
- void [HAL_TIM_Base_MspInit](#) (TIM_HandleTypeDef *tim_baseHandle)
- void [HAL_TIM_IC_MspInit](#) (TIM_HandleTypeDef *tim_icHandle)
- void [HAL_TIM_MspPostInit](#) (TIM_HandleTypeDef *timHandle)
- void [HAL_TIM_Base_MspDeInit](#) (TIM_HandleTypeDef *tim_baseHandle)
- void [HAL_TIM_IC_MspDeInit](#) (TIM_HandleTypeDef *tim_icHandle)

Variables

- TIM_HandleTypeDef [htim1](#)
- TIM_HandleTypeDef [htim2](#)
- TIM_HandleTypeDef [htim4](#)
- TIM_HandleTypeDef [htim6](#)
- TIM_HandleTypeDef [htim8](#)

6.47.1 Detailed Description

This file provides code for the configuration of the TIM instances.

Attention

Copyright (c) 2024 STMicroelectronics. All rights reserved.

This software is licensed under terms that can be found in the LICENSE file in the root directory of this software component. If no LICENSE file comes with this software, it is provided AS-IS.

6.47.2 Function Documentation

6.47.2.1 HAL_TIM_Base_MspDeInit()

```
void HAL_TIM_Base_MspDeInit (
    TIM_HandleTypeDef * tim_baseHandle )
```

Uncomment the line below to disable the "TIM6_DAC_IRQn" interrupt Be aware, disabling shared interrupt may affect other IPs

6.47.2.2 HAL_TIM_Base_MspInit()

```
void HAL_TIM_Base_MspInit (
    TIM_HandleTypeDef * tim_baseHandle )
```

6.47.2.3 HAL_TIM_IC_MspDeInit()

```
void HAL_TIM_IC_MspDeInit (
    TIM_HandleTypeDef * tim_icHandle )
```

TIM2 GPIO Configuration PB10 -----> TIM2_CH3 PB11 -----> TIM2_CH4 PA15 -----> TIM2_CH1

TIM4 GPIO Configuration PD12 -----> TIM4_CH1 PD14 -----> TIM4_CH3 PD15 -----> TIM4_CH4

6.47.2.4 HAL_TIM_IC_MspInit()

```
void HAL_TIM_IC_MspInit (
    TIM_HandleTypeDef * tim_icHandle )
```

TIM2 GPIO Configuration PB10 -----> TIM2_CH3 PB11 -----> TIM2_CH4 PA15 -----> TIM2_CH1

TIM4 GPIO Configuration PD12 -----> TIM4_CH1 PD14 -----> TIM4_CH3 PD15 -----> TIM4_CH4


6.47.2.5 HAL_TIM_MspPostInit()

```
void HAL_TIM_MspPostInit (
    TIM_HandleTypeDef * timHandle )
```

TIM1 GPIO Configuration PE8 -----> TIM1_CH1N PE9 -----> TIM1_CH1 PE10 -----> TIM1_CH2N PE11 -----> TIM1_CH2 PE12 -----> TIM1_CH3N PE13 -----> TIM1_CH3

TIM8 GPIO Configuration PA5 -----> TIM8_CH1N PB14 -----> TIM8_CH2N PB15 -----> TIM8_CH3N PC6 -----> TIM8_CH1 PC7 -----> TIM8_CH2 PC8 -----> TIM8_CH3


Here is the caller graph for this function:

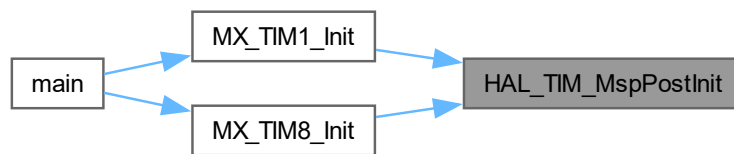

6.47.2.6 MX_TIM1_Init()

```
void MX_TIM1_Init (
    void )
```

Here is the call graph for this function:

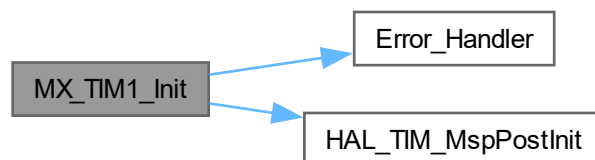

Here is the caller graph for this function:



6.47.2.7 MX_TIM2_Init()

```
void MX_TIM2_Init (  
    void )
```

Here is the call graph for this function:



Here is the caller graph for this function:



6.47.2.8 MX_TIM4_Init()

```
void MX_TIM4_Init (  
    void )
```

Here is the call graph for this function:



Here is the caller graph for this function:



6.47.2.9 MX_TIM6_Init()

```
void MX_TIM6_Init (  
    void )
```

Here is the call graph for this function:




Here is the caller graph for this function:



6.47.2.10 MX_TIM8_Init()

```
void MX_TIM8_Init (  
    void )
```

Here is the call graph for this function:

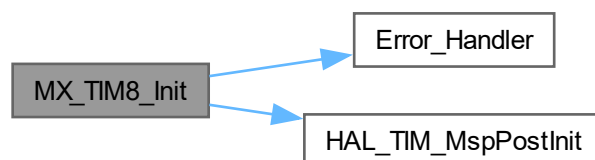

Here is the caller graph for this function:



6.47.3 Variable Documentation

6.47.3.1 htim1

```
TIM_HandleTypeDef htim1
```

6.47.3.2 htim2

```
TIM_HandleTypeDef htim2
```

6.47.3.3 htim4

```
TIM_HandleTypeDef htim4
```

6.47.3.4 htim6

```
TIM_HandleTypeDef htim6
```


6.47.3.5 htim8

```
TIM_HandleTypeDef htim8
```

6.48 C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/usb_otg.c File Reference

This file provides code for the configuration of the USB_OTG instances.

```
#include "usb_otg.h"
Include dependency graph for usb_otg.c:
```

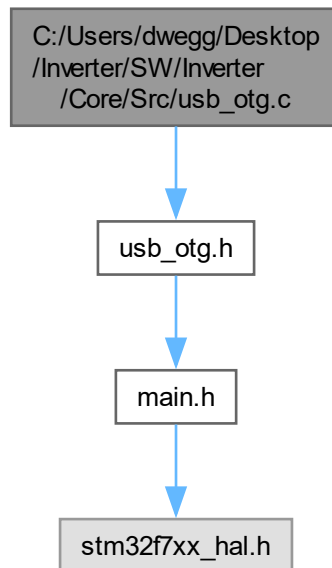

Functions

- void [MX_USB_OTG_FS_USB_Init](#) (void)

6.48.1 Detailed Description

This file provides code for the configuration of the USB_OTG instances.

Attention

Copyright (c) 2024 STMicroelectronics. All rights reserved.

This software is licensed under terms that can be found in the LICENSE file in the root directory of this software component. If no LICENSE file comes with this software, it is provided AS-IS.

6.48.2 Function Documentation

6.48.2.1 MX_USB_OTG_FS_USB_Init()

```
void MX_USB_OTG_FS_USB_Init (  
    void )
```

Here is the caller graph for this function:



Index

- `__attribute__`
 - `syscalls.c`, [156](#)
 - `__io_getchar`
 - `syscalls.c`, [156](#)
 - `__io_putchar`
 - `syscalls.c`, [156](#)
 - `_close`
 - `syscalls.c`, [157](#)
 - `_execve`
 - `syscalls.c`, [157](#)
 - `_exit`
 - `syscalls.c`, [157](#)
 - `_fork`
 - `syscalls.c`, [157](#)
 - `_fstat`
 - `syscalls.c`, [157](#)
 - `_getpid`
 - `syscalls.c`, [157](#)
 - `_isatty`
 - `syscalls.c`, [158](#)
 - `_kill`
 - `syscalls.c`, [158](#)
 - `_link`
 - `syscalls.c`, [158](#)
 - `_lseek`
 - `syscalls.c`, [158](#)
 - `_open`
 - `syscalls.c`, [158](#)
 - `_sbrk`
 - `sysmem.c`, [161](#)
 - `_stat`
 - `syscalls.c`, [158](#)
 - `_times`
 - `syscalls.c`, [159](#)
 - `_unlink`
 - `syscalls.c`, [159](#)
 - `_wait`
 - `syscalls.c`, [159](#)
- a
 - `clarke3F_struct`, [16](#)
 - `iclarke3F_struct`, [20](#)
- A_L_GPIO_Port
 - `main.h`, [58](#)
- A_L_Pin
 - `main.h`, [58](#)
- A_R_GPIO_Port
 - `main.h`, [58](#)
- A_R_Pin
 - `main.h`, [58](#)
- adc.c
 - `hadc1`, [126](#)
 - `hadc2`, [126](#)
 - `hadc3`, [127](#)
 - `HAL_ADC_MspDeInit`, [124](#)
 - `HAL_ADC_MspInit`, [124](#)
 - `hdma_adc1`, [127](#)
 - `hdma_adc2`, [127](#)
 - `hdma_adc3`, [127](#)
 - `MX_ADC1_Init`, [124](#)
 - `MX_ADC2_Init`, [125](#)
 - `MX_ADC3_Init`, [126](#)
- adc.h
 - `hadc1`, [39](#)
 - `hadc2`, [39](#)
 - `hadc3`, [39](#)
 - `MX_ADC1_Init`, [37](#)
 - `MX_ADC2_Init`, [37](#)
 - `MX_ADC3_Init`, [38](#)
- ADC2_raw
 - `main.c`, [142](#)
 - `main.h`, [68](#)
- AHBPrescTable
 - `STM32F7xx_System_Private_Variables`, [11](#)
- alfa
 - `filtreLP_struct`, [18](#)
- Angle
 - `RMS_struct`, [30](#)
- angle
 - `angle_struct`, [15](#)
- Angle_ant
 - `RMS_struct`, [30](#)
- angle_calc
 - `Pergamon_float.c`, [146](#)
 - `Pergamon_float.h`, [81](#)
- ANGLE_DEFAULTS
 - `Pergamon_float.h`, [76](#)
- angle_struct, [15](#)
 - `angle`, [15](#)
 - `calc`, [15](#)
 - `freq`, [15](#)
 - `Ts`, [15](#)
- APBPrescTable
 - `STM32F7xx_System_Private_Variables`, [11](#)
- ART_ACCELERATOR_ENABLE
 - `stm32f7xx_hal_conf.h`, [90](#)
- assert_param
 - `stm32f7xx_hal_conf.h`, [90](#)
- avg_calc_10_samples

- Pergamon_float.c, 146
- Pergamon_float.h, 81
- AVG_DEFAULTS
 - Pergamon_float.h, 76
- avg_struct_10, 16
 - in, 16
 - out, 16
- b
 - clarke3F_struct, 16
 - iclarke3F_struct, 20
- B_L_GPIO_Port
 - main.h, 58
- B_L_Pin
 - main.h, 59
- B_R_GPIO_Port
 - main.h, 59
- B_R_Pin
 - main.h, 59
- BusFault_Handler
 - stm32f7xx_it.c, 151
 - stm32f7xx_it.h, 108
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/adc.h, 35, 39
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/can.h, 40, 42
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/dac.h, 42, 45
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/dma.h, 45, 47
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/FSM.h, 47, 50
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/gpio.h, 50, 52
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/i2c.h, 53, 55
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/main.h, 55, 68
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/PCB_IO.h, 69, 73
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/Pergamon_float.h, 74, 83
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/stm32f7xx_hal_conf.h, 88, 102
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/stm32f7xx_it.h, 106, 111
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/TASKS_1ms.h, 112, 113
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/tim.h, 114, 119
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Inc/usb_otg.h, 120, 122
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/adc.c, 122
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/can.c, 127
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/dac.c, 129
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/dma.c, 132
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/FSM.c, 133
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/gpio.c, 135
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/i2c.c, 136
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/main.c, 138
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/PCB_IO.c, 143
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/Pergamon_float.c, 145
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/stm32f7xx_hal_msp.c, 148
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/stm32f7xx_it.c, 149
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/syscalls.c, 155
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/systemem.c, 159
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/system_stm32f7xx.c, 161
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/TASKS_1ms.c, 163
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/tim.c, 164
- C:/Users/dwegg/Desktop/Inverter/SW/Inverter/Core/Src/usb_otg.c, 171
- calc
 - angle_struct, 15
 - clarke3F_struct, 16
 - datalog_struct, 17
 - filtreLP_struct, 18
 - iclarke3F_struct, 20
 - irod_struct, 22
 - pi_aw_struct, 24
 - pi_struct, 26
 - rampa_dual_struct, 28
 - rampa_struct, 29
 - rot_struct, 31
 - step_struct, 32
 - svpwm_struct, 33
- can.c
 - HAL_CAN_MspDeInit, 128
 - HAL_CAN_MspInit, 128
 - hcan1, 129
 - MX_CAN1_Init, 128
- can.h
 - hcan1, 42
 - MX_CAN1_Init, 41
 - CAN1_RX0_IRQHandler, 151
 - stm32f7xx_it.c, 151
 - stm32f7xx_it.h, 108
 - CAN1_RX1_IRQHandler, 151
 - stm32f7xx_it.c, 151
 - stm32f7xx_it.h, 108

- clarke3F_calc
 - Pergamon_float.c, [146](#)
 - Pergamon_float.h, [81](#)
- CLARKE3F_DEFAULTS
 - Pergamon_float.h, [76](#)
- clarke3F_struct, [16](#)
 - a, [16](#)
 - b, [16](#)
 - calc, [16](#)
 - D, [17](#)
 - Q, [17](#)
- CMSIS, [7](#)
- cosFi
 - irotn_struct, [22](#)
 - rotn_struct, [31](#)
- Counter
 - step_struct, [32](#)
- D
 - clarke3F_struct, [17](#)
 - iclarke3F_struct, [20](#)
 - irotn_struct, [22](#)
 - rotn_struct, [31](#)
- d
 - irotn_struct, [22](#)
 - rotn_struct, [31](#)
- dac.c
 - HAL_DAC_MspDelnit, [131](#)
 - HAL_DAC_Msplnit, [131](#)
 - hdac, [132](#)
 - MX_DAC_Init, [131](#)
- dac.h
 - hdac, [44](#)
 - MX_DAC_Init, [44](#)
- DAC_GPIO_Port
 - main.h, [59](#)
- DAC_Pin
 - main.h, [59](#)
- datalog_calc
 - Pergamon_float.c, [146](#)
 - Pergamon_float.h, [81](#)
- DATALOG_DEFAULTS
 - Pergamon_float.h, [76](#)
- datalog_struct, [17](#)
 - calc, [17](#)
 - estat, [17](#)
 - i, [17](#)
 - j, [17](#)
 - log, [18](#)
 - prescaler, [18](#)
 - var, [18](#)
- DebugMon_Handler
 - stm32f7xx_it.c, [151](#)
 - stm32f7xx_it.h, [108](#)
- Decr
 - rampa_dual_struct, [28](#)
- DIR_GPIO_Port
 - main.h, [59](#)
- DIR_Pin
 - main.h, [59](#)
- DIR_STATE
 - PCB_IO.h, [71](#)
- DISABLE
 - PCB_IO.h, [71](#)
- DIV2
 - Pergamon_float.h, [77](#)
- dma.c
 - MX_DMA_Init, [133](#)
- dma.h
 - MX_DMA_Init, [46](#)
- DMA2_Stream0_IRQHandler
 - stm32f7xx_it.c, [151](#)
 - stm32f7xx_it.h, [109](#)
- DMA2_Stream1_IRQHandler
 - stm32f7xx_it.c, [151](#)
 - stm32f7xx_it.h, [109](#)
- DMA2_Stream2_IRQHandler
 - stm32f7xx_it.c, [152](#)
 - stm32f7xx_it.h, [109](#)
- DP83848_PHY_ADDRESS
 - stm32f7xx_hal_conf.h, [90](#)
- e
 - pi_aw_struct, [24](#)
 - pi_struct, [26](#)
- ENABLE
 - PCB_IO.h, [71](#)
- enable
 - filtreLP_struct, [18](#)
 - pi_aw_struct, [24](#)
 - pi_struct, [26](#)
 - rampa_dual_struct, [28](#)
 - rampa_struct, [29](#)
 - step_struct, [32](#)
- ENABLE_L_GPIO_Port
 - main.h, [59](#)
- ENABLE_L_Pin
 - main.h, [59](#)
- enable_pin
 - InverterOperation, [21](#)
- enable_port
 - InverterOperation, [21](#)
- ENABLE_R_GPIO_Port
 - main.h, [59](#)
- ENABLE_R_Pin
 - main.h, [60](#)
- environ
 - syscalls.c, [159](#)
- Error_Handler
 - main.c, [139](#)
 - main.h, [66](#)
- estat
 - datalog_struct, [17](#)
- ETH_RX_BUF_SIZE
 - stm32f7xx_hal_conf.h, [91](#)
- ETH_RXBUFNB
 - stm32f7xx_hal_conf.h, [91](#)
- ETH_TX_BUF_SIZE

- stm32f7xx_hal_conf.h, [91](#)
- ETH_TXBUFNB
 - stm32f7xx_hal_conf.h, [91](#)
- EXTERNAL_CLOCK_VALUE
 - stm32f7xx_hal_conf.h, [91](#)
- fc
 - filtreLP_struct, [19](#)
- filtreLP_calc
 - Pergamon_float.c, [146](#)
 - Pergamon_float.h, [81](#)
- FILTRELP_DEFAULTS
 - Pergamon_float.h, [77](#)
- filtreLP_init
 - Pergamon_float.c, [146](#)
 - Pergamon_float.h, [81](#)
- filtreLP_struct, [18](#)
 - alfa, [18](#)
 - calc, [18](#)
 - enable, [18](#)
 - fc, [19](#)
 - in, [19](#)
 - init, [19](#)
 - out, [19](#)
 - Ts, [19](#)
- Freq
 - RMS_struct, [30](#)
- freq
 - angle_struct, [15](#)
- fs
 - step_struct, [32](#)
- FSM.c
 - inv_FSM, [134](#)
 - inv_init, [134](#)
- FSM.h
 - inv_FSM, [49](#)
 - inv_init, [49](#)
 - INV_STATE_FAULT, [49](#)
 - INV_STATE_IDLE, [49](#)
 - INV_STATE_RUNNING, [49](#)
 - INV_STATE_STARTUP, [49](#)
 - InverterOperationState, [49](#)
- gpio.c
 - MX_GPIO_Init, [136](#)
- gpio.h
 - MX_GPIO_Init, [52](#)
- hadc1
 - adc.c, [126](#)
 - adc.h, [39](#)
- hadc2
 - adc.c, [126](#)
 - adc.h, [39](#)
 - main.c, [142](#)
- hadc3
 - adc.c, [127](#)
 - adc.h, [39](#)
- HAL_ADC_MODULE_ENABLED
 - stm32f7xx_hal_conf.h, [91](#)
- HAL_ADC_MspDeInit
 - adc.c, [124](#)
- HAL_ADC_MspInit
 - adc.c, [124](#)
- HAL_CAN_MODULE_ENABLED
 - stm32f7xx_hal_conf.h, [91](#)
- HAL_CAN_MspDeInit
 - can.c, [128](#)
- HAL_CAN_MspInit
 - can.c, [128](#)
- HAL_CORTEX_MODULE_ENABLED
 - stm32f7xx_hal_conf.h, [91](#)
- HAL_DAC_MODULE_ENABLED
 - stm32f7xx_hal_conf.h, [91](#)
- HAL_DAC_MspDeInit
 - dac.c, [131](#)
- HAL_DAC_MspInit
 - dac.c, [131](#)
- HAL_DMA_MODULE_ENABLED
 - stm32f7xx_hal_conf.h, [92](#)
- HAL_EXTI_MODULE_ENABLED
 - stm32f7xx_hal_conf.h, [92](#)
- HAL_FLASH_MODULE_ENABLED
 - stm32f7xx_hal_conf.h, [92](#)
- HAL_GPIO_MODULE_ENABLED
 - stm32f7xx_hal_conf.h, [92](#)
- HAL_I2C_MODULE_ENABLED
 - stm32f7xx_hal_conf.h, [92](#)
- HAL_I2C_MspDeInit
 - i2c.c, [137](#)
- HAL_I2C_MspInit
 - i2c.c, [137](#)
- HAL_MODULE_ENABLED
 - stm32f7xx_hal_conf.h, [92](#)
- HAL_MspInit
 - stm32f7xx_hal_msp.c, [149](#)
- HAL_PWR_MODULE_ENABLED
 - stm32f7xx_hal_conf.h, [92](#)
- HAL_RCC_MODULE_ENABLED
 - stm32f7xx_hal_conf.h, [92](#)
- HAL_TIM_Base_MspDeInit
 - tim.c, [166](#)
- HAL_TIM_Base_MspInit
 - tim.c, [166](#)
- HAL_TIM_IC_MspDeInit
 - tim.c, [166](#)
- HAL_TIM_IC_MspInit
 - tim.c, [166](#)
- HAL_TIM_MODULE_ENABLED
 - stm32f7xx_hal_conf.h, [92](#)
- HAL_TIM_MspPostInit
 - tim.c, [166](#)
 - tim.h, [115](#)
- HardFault_Handler
 - stm32f7xx_it.c, [152](#)
 - stm32f7xx_it.h, [109](#)
- hcan1

- can.c, [129](#)
- can.h, [42](#)
- stm32f7xx_it.c, [154](#)
- hdac
 - dac.c, [132](#)
 - dac.h, [44](#)
 - stm32f7xx_it.c, [154](#)
- hdma_adc1
 - adc.c, [127](#)
 - stm32f7xx_it.c, [154](#)
- hdma_adc2
 - adc.c, [127](#)
 - stm32f7xx_it.c, [154](#)
- hdma_adc3
 - adc.c, [127](#)
 - stm32f7xx_it.c, [154](#)
- hi2c1
 - i2c.c, [138](#)
 - i2c.h, [55](#)
- HSE_STARTUP_TIMEOUT
 - stm32f7xx_hal_conf.h, [92](#)
- HSE_VALUE
 - stm32f7xx_hal_conf.h, [93](#)
 - STM32F7xx_System_Private_Includes, [9](#)
- HSI_VALUE
 - stm32f7xx_hal_conf.h, [93](#)
 - STM32F7xx_System_Private_Includes, [9](#)
- htim1
 - stm32f7xx_it.c, [154](#)
 - tim.c, [170](#)
 - tim.h, [119](#)
- htim2
 - tim.c, [170](#)
 - tim.h, [119](#)
- htim4
 - tim.c, [170](#)
 - tim.h, [119](#)
- htim6
 - stm32f7xx_it.c, [154](#)
 - tim.c, [170](#)
 - tim.h, [119](#)
- htim8
 - tim.c, [170](#)
 - tim.h, [119](#)
- i
 - datalog_struct, [17](#)
- i2c.c
 - HAL_I2C_MspDeInit, [137](#)
 - HAL_I2C_MspInit, [137](#)
 - hi2c1, [138](#)
 - MX_I2C1_Init, [137](#)
- i2c.h
 - hi2c1, [55](#)
 - MX_I2C1_Init, [54](#)
- ia_L_GPIO_Port
 - main.h, [60](#)
- ia_L_Pin
 - main.h, [60](#)
- ia_R_GPIO_Port
 - main.h, [60](#)
- ia_R_Pin
 - main.h, [60](#)
- ib_L_GPIO_Port
 - main.h, [60](#)
- ib_L_Pin
 - main.h, [60](#)
- ib_R_GPIO_Port
 - main.h, [60](#)
- ib_R_Pin
 - main.h, [60](#)
- ic_L_GPIO_Port
 - main.h, [60](#)
- ic_L_Pin
 - main.h, [61](#)
- ic_R_GPIO_Port
 - main.h, [61](#)
- ic_R_Pin
 - main.h, [61](#)
- iclarke3F_calc
 - Pergamon_float.c, [147](#)
 - Pergamon_float.h, [81](#)
- ICLARKE3F_DEFAULTS
 - Pergamon_float.h, [77](#)
- iclarke3F_struct, [19](#)
 - a, [20](#)
 - b, [20](#)
 - calc, [20](#)
 - D, [20](#)
 - Q, [20](#)
- In
 - step_struct, [32](#)
- in
 - avg_struct_10, [16](#)
 - filtreLP_struct, [19](#)
 - rampa_dual_struct, [28](#)
 - rampa_struct, [29](#)
- Incr
 - rampa_dual_struct, [28](#)
 - rampa_struct, [29](#)
- init
 - filtreLP_struct, [19](#)
 - pi_struct, [26](#)
- initialise_monitor_handles
 - syscalls.c, [159](#)
- INV3
 - Pergamon_float.h, [77](#)
- INV_DEG
 - Pergamon_float.h, [77](#)
- inv_FSM
 - FSM.c, [134](#)
 - FSM.h, [49](#)
- inv_init
 - FSM.c, [134](#)
 - FSM.h, [49](#)
- INV_STATE_FAULT
 - FSM.h, [49](#)

- INV_STATE_IDLE
 - FSM.h, [49](#)
- INV_STATE_RUNNING
 - FSM.h, [49](#)
- INV_STATE_STARTUP
 - FSM.h, [49](#)
- InverterOperation, [20](#)
 - enable_pin, [21](#)
 - enable_port, [21](#)
 - LED_pin, [21](#)
 - LED_port, [21](#)
 - state, [21](#)
- InverterOperationState
 - FSM.h, [49](#)
- invLeft
 - main.c, [142](#)
- invRight
 - main.c, [143](#)
- IPI
 - Pergamon_float.h, [77](#)
- IPI2
 - Pergamon_float.h, [77](#)
- irod_calc
 - Pergamon_float.c, [147](#)
 - Pergamon_float.h, [81](#)
- IROT_DEFAULTS
 - Pergamon_float.h, [78](#)
- irod_struct, [21](#)
 - calc, [22](#)
 - cosFi, [22](#)
 - D, [22](#)
 - d, [22](#)
 - Q, [22](#)
 - q, [22](#)
 - sinFi, [22](#)
- ISQ2
 - Pergamon_float.h, [78](#)
- ISQ3
 - Pergamon_float.h, [78](#)
- j
 - datalog_struct, [17](#)
- K0
 - pi_struct, [26](#)
- K1
 - pi_struct, [26](#)
- Kaw
 - pi_aw_struct, [24](#)
- Ki
 - pi_aw_struct, [24](#)
 - pi_struct, [27](#)
- Kp
 - pi_aw_struct, [24](#)
 - pi_struct, [27](#)
- LED, [22](#)
 - mode, [23](#)
 - pin, [23](#)
 - port, [23](#)
- LED_ERR_GPIO_Port
 - main.h, [61](#)
- LED_ERR_Pin
 - main.h, [61](#)
- led_error
 - PCB_IO.c, [145](#)
 - PCB_IO.h, [73](#)
- LED_handler
 - PCB_IO.c, [144](#)
 - PCB_IO.h, [72](#)
- led_left
 - PCB_IO.c, [145](#)
 - PCB_IO.h, [73](#)
- LED_LEFT_GPIO_Port
 - main.h, [61](#)
- LED_LEFT_Pin
 - main.h, [61](#)
- LED_MODE_BLINK_FAST
 - PCB_IO.h, [72](#)
- LED_MODE_BLINK_SLOW
 - PCB_IO.h, [72](#)
- LED_MODE_OFF
 - PCB_IO.h, [72](#)
- LED_MODE_ON
 - PCB_IO.h, [72](#)
- LED_pin
 - InverterOperation, [21](#)
- LED_port
 - InverterOperation, [21](#)
- led_right
 - PCB_IO.c, [145](#)
 - PCB_IO.h, [73](#)
- LED_RIGHT_GPIO_Port
 - main.h, [61](#)
- LED_RIGHT_Pin
 - main.h, [61](#)
- LEDMode
 - PCB_IO.h, [72](#)
- log
 - datalog_struct, [18](#)
- LSE_STARTUP_TIMEOUT
 - stm32f7xx_hal_conf.h, [93](#)
- LSE_VALUE
 - stm32f7xx_hal_conf.h, [93](#)
- LSI_VALUE
 - stm32f7xx_hal_conf.h, [93](#)
- MAC_ADDR0
 - stm32f7xx_hal_conf.h, [93](#)
- MAC_ADDR1
 - stm32f7xx_hal_conf.h, [94](#)
- MAC_ADDR2
 - stm32f7xx_hal_conf.h, [94](#)
- MAC_ADDR3
 - stm32f7xx_hal_conf.h, [94](#)
- MAC_ADDR4
 - stm32f7xx_hal_conf.h, [94](#)
- MAC_ADDR5

- stm32f7xx_hal_conf.h, [94](#)
- main
 - main.c, [140](#)
- main.c
 - ADC2_raw, [142](#)
 - Error_Handler, [139](#)
 - hadc2, [142](#)
 - invLeft, [142](#)
 - invRight, [143](#)
 - main, [140](#)
 - SystemClock_Config, [141](#)
- main.h
 - A_L_GPIO_Port, [58](#)
 - A_L_Pin, [58](#)
 - A_R_GPIO_Port, [58](#)
 - A_R_Pin, [58](#)
 - ADC2_raw, [68](#)
 - B_L_GPIO_Port, [58](#)
 - B_L_Pin, [59](#)
 - B_R_GPIO_Port, [59](#)
 - B_R_Pin, [59](#)
 - DAC_GPIO_Port, [59](#)
 - DAC_Pin, [59](#)
 - DIR_GPIO_Port, [59](#)
 - DIR_Pin, [59](#)
 - ENABLE_L_GPIO_Port, [59](#)
 - ENABLE_L_Pin, [59](#)
 - ENABLE_R_GPIO_Port, [59](#)
 - ENABLE_R_Pin, [60](#)
 - Error_Handler, [66](#)
 - ia_L_GPIO_Port, [60](#)
 - ia_L_Pin, [60](#)
 - ia_R_GPIO_Port, [60](#)
 - ia_R_Pin, [60](#)
 - ib_L_GPIO_Port, [60](#)
 - ib_L_Pin, [60](#)
 - ib_R_GPIO_Port, [60](#)
 - ib_R_Pin, [60](#)
 - ic_L_GPIO_Port, [60](#)
 - ic_L_Pin, [61](#)
 - ic_R_GPIO_Port, [61](#)
 - ic_R_Pin, [61](#)
 - LED_ERR_GPIO_Port, [61](#)
 - LED_ERR_Pin, [61](#)
 - LED_LEFT_GPIO_Port, [61](#)
 - LED_LEFT_Pin, [61](#)
 - LED_RIGHT_GPIO_Port, [61](#)
 - LED_RIGHT_Pin, [61](#)
 - PWM1_L_GPIO_Port, [61](#)
 - PWM1_L_Pin, [62](#)
 - PWM1_R_GPIO_Port, [62](#)
 - PWM1_R_Pin, [62](#)
 - PWM2_L_GPIO_Port, [62](#)
 - PWM2_L_Pin, [62](#)
 - PWM2_R_GPIO_Port, [62](#)
 - PWM2_R_Pin, [62](#)
 - PWM3_L_GPIO_Port, [62](#)
 - PWM3_L_Pin, [62](#)
 - PWM3_R_GPIO_Port, [62](#)
 - PWM3_R_Pin, [63](#)
 - PWM4_L_GPIO_Port, [63](#)
 - PWM4_L_Pin, [63](#)
 - PWM4_R_GPIO_Port, [63](#)
 - PWM4_R_Pin, [63](#)
 - PWM5_L_GPIO_Port, [63](#)
 - PWM5_L_Pin, [63](#)
 - PWM5_R_GPIO_Port, [63](#)
 - PWM5_R_Pin, [63](#)
 - PWM6_L_GPIO_Port, [63](#)
 - PWM6_L_Pin, [64](#)
 - PWM6_R_GPIO_Port, [64](#)
 - PWM6_R_Pin, [64](#)
 - SC_det_GPIO_Port, [64](#)
 - SC_det_Pin, [64](#)
 - Tinv_L_GPIO_Port, [64](#)
 - Tinv_L_Pin, [64](#)
 - Tinv_R_GPIO_Port, [64](#)
 - Tinv_R_Pin, [64](#)
 - Tmot_L_GPIO_Port, [64](#)
 - Tmot_L_Pin, [65](#)
 - Tmot_R_GPIO_Port, [65](#)
 - Tmot_R_Pin, [65](#)
 - TRIP_L_GPIO_Port, [65](#)
 - TRIP_L_Pin, [65](#)
 - TRIP_R_GPIO_Port, [65](#)
 - TRIP_R_Pin, [65](#)
 - VDC_L_GPIO_Port, [65](#)
 - VDC_L_Pin, [65](#)
 - VDC_R_GPIO_Port, [65](#)
 - VDC_R_Pin, [66](#)
 - WRN_L_GPIO_Port, [66](#)
 - WRN_L_Pin, [66](#)
 - WRN_R_GPIO_Port, [66](#)
 - WRN_R_Pin, [66](#)
 - Z_L_GPIO_Port, [66](#)
 - Z_L_Pin, [66](#)
 - Z_R_GPIO_Port, [66](#)
 - Z_R_Pin, [66](#)
- Measure
 - RMS_struct, [30](#)
- MemManage_Handler
 - stm32f7xx_it.c, [152](#)
 - stm32f7xx_it.h, [109](#)
- mode
 - LED, [23](#)
- MX_ADC1_Init
 - adc.c, [124](#)
 - adc.h, [37](#)
- MX_ADC2_Init
 - adc.c, [125](#)
 - adc.h, [37](#)
- MX_ADC3_Init
 - adc.c, [126](#)
 - adc.h, [38](#)
- MX_CAN1_Init
 - can.c, [128](#)

- can.h, 41
- MX_DAC_Init
 - dac.c, 131
 - dac.h, 44
- MX_DMA_Init
 - dma.c, 133
 - dma.h, 46
- MX_GPIO_Init
 - gpio.c, 136
 - gpio.h, 52
- MX_I2C1_Init
 - i2c.c, 137
 - i2c.h, 54
- MX_TIM1_Init
 - tim.c, 167
 - tim.h, 115
- MX_TIM2_Init
 - tim.c, 167
 - tim.h, 116
- MX_TIM4_Init
 - tim.c, 168
 - tim.h, 117
- MX_TIM6_Init
 - tim.c, 169
 - tim.h, 117
- MX_TIM8_Init
 - tim.c, 169
 - tim.h, 118
- MX_USB_OTG_FS_USB_Init
 - usb_otg.c, 172
 - usb_otg.h, 121
- N_DATALOG
 - Pergamon_float.h, 78
- NMI_Handler
 - stm32f7xx_it.c, 152
 - stm32f7xx_it.h, 109
- Out
 - step_struct, 33
- out
 - avg_struct_10, 16
 - filtreLP_struct, 19
 - rampa_dual_struct, 28
 - rampa_struct, 29
- Out_RMS
 - RMS_struct, 30
- PCB_IO.c
 - led_error, 145
 - LED_handler, 144
 - led_left, 145
 - led_right, 145
- PCB_IO.h
 - DIR_STATE, 71
 - DISABLE, 71
 - ENABLE, 71
 - led_error, 73
 - LED_handler, 72
 - led_left, 73
 - LED_MODE_BLINK_FAST, 72
 - LED_MODE_BLINK_SLOW, 72
 - LED_MODE_OFF, 72
 - LED_MODE_ON, 72
 - led_right, 73
 - LEDMode, 72
 - SC_DET_STATE, 71
 - WRN_STATE, 71
- PendSV_Handler
 - stm32f7xx_it.c, 152
 - stm32f7xx_it.h, 109
- Pergamon_float.c
 - angle_calc, 146
 - avg_calc_10_samples, 146
 - clarke3F_calc, 146
 - datalog_calc, 146
 - filtreLP_calc, 146
 - filtreLP_init, 146
 - iclarke3F_calc, 147
 - irod_calc, 147
 - pi_aw_calc, 147
 - pi_calc, 147
 - pi_extsat_calc, 147
 - pi_init, 147
 - rampa_calc, 147
 - rampa_dual_calc, 147
 - RMS_calc, 147
 - rot_calc, 148
 - step_calc, 148
 - svpwm_calc, 148
- Pergamon_float.h
 - angle_calc, 81
 - ANGLE_DEFAULTS, 76
 - avg_calc_10_samples, 81
 - AVG_DEFAULTS, 76
 - clarke3F_calc, 81
 - CLARKE3F_DEFAULTS, 76
 - datalog_calc, 81
 - DATALOG_DEFAULTS, 76
 - DIV2, 77
 - filtreLP_calc, 81
 - FILTRELP_DEFAULTS, 77
 - filtreLP_init, 81
 - iclarke3F_calc, 81
 - ICLARKE3F_DEFAULTS, 77
 - INV3, 77
 - INV_DEG, 77
 - IPI, 77
 - IPI2, 77
 - irod_calc, 81
 - IROT_DEFAULTS, 78
 - ISQ2, 78
 - ISQ3, 78
 - N_DATALOG, 78
 - PI, 78
 - PI2, 78
 - pi_aw_calc, 81

- pi_calc, [82](#)
- PI_DEFAULTS, [78](#)
- PI_DEFAULTS_AW, [78](#)
- pi_extsat_calc, [82](#)
- PI_EXTSAT_DEFAULTS, [79](#)
- pi_init, [82](#)
- rampa_calc, [82](#)
- RAMPA_DEFAULTS, [79](#)
- rampa_dual_calc, [82](#)
- RAMPA_DUAL_DEFAULTS, [79](#)
- RMS_calc, [82](#)
- RMS_DEFAULTS, [79](#)
- rot_calc, [82](#)
- ROT_DEFAULTS, [80](#)
- SQ2, [80](#)
- SQ3, [80](#)
- step_calc, [82](#)
- STEP_DEFAULTS, [80](#)
- svpwm_calc, [82](#)
- SVPWM_DEFAULTS, [80](#)
- PHY_AUTONEGO_COMPLETE
 - stm32f7xx_hal_conf.h, [94](#)
- PHY_AUTONEGOTIATION
 - stm32f7xx_hal_conf.h, [94](#)
- PHY_BCR
 - stm32f7xx_hal_conf.h, [94](#)
- PHY_BSR
 - stm32f7xx_hal_conf.h, [94](#)
- PHY_CONFIG_DELAY
 - stm32f7xx_hal_conf.h, [95](#)
- PHY_DUPLEX_STATUS
 - stm32f7xx_hal_conf.h, [95](#)
- PHY_FULLDUPLEX_100M
 - stm32f7xx_hal_conf.h, [95](#)
- PHY_FULLDUPLEX_10M
 - stm32f7xx_hal_conf.h, [95](#)
- PHY_HALFDUPLEX_100M
 - stm32f7xx_hal_conf.h, [95](#)
- PHY_HALFDUPLEX_10M
 - stm32f7xx_hal_conf.h, [95](#)
- PHY_ISOLATE
 - stm32f7xx_hal_conf.h, [95](#)
- PHY_JABBER_DETECTION
 - stm32f7xx_hal_conf.h, [96](#)
- PHY_LINKED_STATUS
 - stm32f7xx_hal_conf.h, [96](#)
- PHY_LOOPBACK
 - stm32f7xx_hal_conf.h, [96](#)
- PHY_POWERDOWN
 - stm32f7xx_hal_conf.h, [96](#)
- PHY_READ_TO
 - stm32f7xx_hal_conf.h, [96](#)
- PHY_RESET
 - stm32f7xx_hal_conf.h, [96](#)
- PHY_RESET_DELAY
 - stm32f7xx_hal_conf.h, [96](#)
- PHY_RESTART_AUTONEGOTIATION
 - stm32f7xx_hal_conf.h, [97](#)
- PHY_SPEED_STATUS
 - stm32f7xx_hal_conf.h, [97](#)
- PHY_SR
 - stm32f7xx_hal_conf.h, [97](#)
- PHY_WRITE_TO
 - stm32f7xx_hal_conf.h, [97](#)
- PI
 - Pergamon_float.h, [78](#)
- PI2
 - Pergamon_float.h, [78](#)
- pi_aw_calc
 - Pergamon_float.c, [147](#)
 - Pergamon_float.h, [81](#)
- pi_aw_struct, [23](#)
 - calc, [24](#)
 - e, [24](#)
 - enable, [24](#)
 - Kaw, [24](#)
 - Ki, [24](#)
 - Kp, [24](#)
 - pi_consig, [24](#)
 - pi_fdb, [25](#)
 - pi_ffw, [25](#)
 - pi_int, [25](#)
 - pi_out, [25](#)
 - pi_out_max, [25](#)
 - pi_out_min, [25](#)
 - pi_out_postsat, [25](#)
 - pi_out_presat, [25](#)
 - Ts, [25](#)
- pi_calc
 - Pergamon_float.c, [147](#)
 - Pergamon_float.h, [82](#)
- pi_consig
 - pi_aw_struct, [24](#)
 - pi_struct, [27](#)
- PI_DEFAULTS
 - Pergamon_float.h, [78](#)
- PI_DEFAULTS_AW
 - Pergamon_float.h, [78](#)
- pi_extsat_calc
 - Pergamon_float.c, [147](#)
 - Pergamon_float.h, [82](#)
- PI_EXTSAT_DEFAULTS
 - Pergamon_float.h, [79](#)
- pi_fdb
 - pi_aw_struct, [25](#)
 - pi_struct, [27](#)
- pi_ffw
 - pi_aw_struct, [25](#)
 - pi_struct, [27](#)
- pi_init
 - Pergamon_float.c, [147](#)
 - Pergamon_float.h, [82](#)
- pi_int
 - pi_aw_struct, [25](#)
- pi_out
 - pi_aw_struct, [25](#)

- pi_struct, [27](#)
- pi_out_max
 - pi_aw_struct, [25](#)
 - pi_struct, [27](#)
- pi_out_min
 - pi_aw_struct, [25](#)
 - pi_struct, [27](#)
- pi_out_postsat
 - pi_aw_struct, [25](#)
- pi_out_presat
 - pi_aw_struct, [25](#)
- pi_struct, [26](#)
 - calc, [26](#)
 - e, [26](#)
 - enable, [26](#)
 - init, [26](#)
 - K0, [26](#)
 - K1, [26](#)
 - Ki, [27](#)
 - Kp, [27](#)
 - pi_consigt, [27](#)
 - pi_fdb, [27](#)
 - pi_ffw, [27](#)
 - pi_out, [27](#)
 - pi_out_max, [27](#)
 - pi_out_min, [27](#)
 - Ts, [27](#)
- pin
 - LED, [23](#)
- port
 - LED, [23](#)
- PREFETCH_ENABLE
 - stm32f7xx_hal_conf.h, [97](#)
- prescaler
 - datalog_struct, [18](#)
- Pulses
 - step_struct, [33](#)
- PWM1_L_GPIO_Port
 - main.h, [61](#)
- PWM1_L_Pin
 - main.h, [62](#)
- PWM1_R_GPIO_Port
 - main.h, [62](#)
- PWM1_R_Pin
 - main.h, [62](#)
- PWM2_L_GPIO_Port
 - main.h, [62](#)
- PWM2_L_Pin
 - main.h, [62](#)
- PWM2_R_GPIO_Port
 - main.h, [62](#)
- PWM2_R_Pin
 - main.h, [62](#)
- PWM3_L_GPIO_Port
 - main.h, [62](#)
- PWM3_L_Pin
 - main.h, [62](#)
- PWM3_R_GPIO_Port

- main.h, [62](#)
- PWM3_R_Pin
 - main.h, [63](#)
- PWM4_L_GPIO_Port
 - main.h, [63](#)
- PWM4_L_Pin
 - main.h, [63](#)
- PWM4_R_GPIO_Port
 - main.h, [63](#)
- PWM4_R_Pin
 - main.h, [63](#)
- PWM5_L_GPIO_Port
 - main.h, [63](#)
- PWM5_L_Pin
 - main.h, [63](#)
- PWM5_R_GPIO_Port
 - main.h, [63](#)
- PWM5_R_Pin
 - main.h, [63](#)
- PWM6_L_GPIO_Port
 - main.h, [63](#)
- PWM6_L_Pin
 - main.h, [64](#)
- PWM6_R_GPIO_Port
 - main.h, [64](#)
- PWM6_R_Pin
 - main.h, [64](#)

Q

- clarke3F_struct, [17](#)
- iclarke3F_struct, [20](#)
- irotd_struct, [22](#)
- rotd_struct, [31](#)

q

- irotd_struct, [22](#)
- rotd_struct, [31](#)

rampa_calc

- Pergamon_float.c, [147](#)
- Pergamon_float.h, [82](#)

RAMPA_DEFAULTS

- Pergamon_float.h, [79](#)

rampa_dual_calc

- Pergamon_float.c, [147](#)
- Pergamon_float.h, [82](#)

RAMPA_DUAL_DEFAULTS

- Pergamon_float.h, [79](#)

rampa_dual_struct, [28](#)

- calc, [28](#)
- Decr, [28](#)
- enable, [28](#)
- in, [28](#)
- Incr, [28](#)
- out, [28](#)

rampa_struct, [29](#)

- calc, [29](#)
- enable, [29](#)
- in, [29](#)
- Incr, [29](#)

- out, [29](#)
- RMS_calc
 - Pergamon_float.c, [147](#)
 - Pergamon_float.h, [82](#)
- RMS_DEFAULTS
 - Pergamon_float.h, [79](#)
- RMS_struct, [29](#)
 - Angle, [30](#)
 - Angle_ant, [30](#)
 - Freq, [30](#)
 - Measure, [30](#)
 - Out_RMS, [30](#)
 - Sq_Sum, [30](#)
 - T_exec, [30](#)
- rot_calc
 - Pergamon_float.c, [148](#)
 - Pergamon_float.h, [82](#)
- ROT_DEFAULTS
 - Pergamon_float.h, [80](#)
- rot_struct, [31](#)
 - calc, [31](#)
 - cosFi, [31](#)
 - D, [31](#)
 - d, [31](#)
 - Q, [31](#)
 - q, [31](#)
 - sinFi, [31](#)
- SC_det_GPIO_Port
 - main.h, [64](#)
- SC_det_Pin
 - main.h, [64](#)
- SC_DET_STATE
 - PCB_IO.h, [71](#)
- sinFi
 - irots_struct, [22](#)
 - rots_struct, [31](#)
- SQ2
 - Pergamon_float.h, [80](#)
- SQ3
 - Pergamon_float.h, [80](#)
- Sq_Sum
 - RMS_struct, [30](#)
- state
 - InverterOperation, [21](#)
- Step
 - step_struct, [33](#)
- step_calc
 - Pergamon_float.c, [148](#)
 - Pergamon_float.h, [82](#)
- STEP_DEFAULTS
 - Pergamon_float.h, [80](#)
- step_struct, [32](#)
 - calc, [32](#)
 - Counter, [32](#)
 - enable, [32](#)
 - fs, [32](#)
 - In, [32](#)
 - Out, [33](#)
 - Pulses, [33](#)
 - Step, [33](#)
 - t_step, [33](#)
- stm32f7xx_hal_conf.h
 - ART_ACCELERATOR_ENABLE, [90](#)
 - assert_param, [90](#)
 - DP83848_PHY_ADDRESS, [90](#)
 - ETH_RX_BUF_SIZE, [91](#)
 - ETH_RXBUFNB, [91](#)
 - ETH_TX_BUF_SIZE, [91](#)
 - ETH_TXBUFNB, [91](#)
 - EXTERNAL_CLOCK_VALUE, [91](#)
 - HAL_ADC_MODULE_ENABLED, [91](#)
 - HAL_CAN_MODULE_ENABLED, [91](#)
 - HAL_CORTEX_MODULE_ENABLED, [91](#)
 - HAL_DAC_MODULE_ENABLED, [91](#)
 - HAL_DMA_MODULE_ENABLED, [92](#)
 - HAL_EXTI_MODULE_ENABLED, [92](#)
 - HAL_FLASH_MODULE_ENABLED, [92](#)
 - HAL_GPIO_MODULE_ENABLED, [92](#)
 - HAL_I2C_MODULE_ENABLED, [92](#)
 - HAL_MODULE_ENABLED, [92](#)
 - HAL_PWR_MODULE_ENABLED, [92](#)
 - HAL_RCC_MODULE_ENABLED, [92](#)
 - HAL_TIM_MODULE_ENABLED, [92](#)
 - HSE_STARTUP_TIMEOUT, [92](#)
 - HSE_VALUE, [93](#)
 - HSI_VALUE, [93](#)
 - LSE_STARTUP_TIMEOUT, [93](#)
 - LSE_VALUE, [93](#)
 - LSI_VALUE, [93](#)
 - MAC_ADDR0, [93](#)
 - MAC_ADDR1, [94](#)
 - MAC_ADDR2, [94](#)
 - MAC_ADDR3, [94](#)
 - MAC_ADDR4, [94](#)
 - MAC_ADDR5, [94](#)
 - PHY_AUTONEGO_COMPLETE, [94](#)
 - PHY_AUTONEGOTIATION, [94](#)
 - PHY_BCR, [94](#)
 - PHY_BSR, [94](#)
 - PHY_CONFIG_DELAY, [95](#)
 - PHY_DUPLEX_STATUS, [95](#)
 - PHY_FULLDUPLEX_100M, [95](#)
 - PHY_FULLDUPLEX_10M, [95](#)
 - PHY_HALFDUPLEX_100M, [95](#)
 - PHY_HALFDUPLEX_10M, [95](#)
 - PHY_ISOLATE, [95](#)
 - PHY_JABBER_DETECTION, [96](#)
 - PHY_LINKED_STATUS, [96](#)
 - PHY_LOOPBACK, [96](#)
 - PHY_POWERDOWN, [96](#)
 - PHY_READ_TO, [96](#)
 - PHY_RESET, [96](#)
 - PHY_RESET_DELAY, [96](#)
 - PHY_RESTART_AUTONEGOTIATION, [97](#)
 - PHY_SPEED_STATUS, [97](#)
 - PHY_SR, [97](#)

- PHY_WRITE_TO, [97](#)
- PREFETCH_ENABLE, [97](#)
- TICK_INT_PRIORITY, [97](#)
- USE_HAL_ADC_REGISTER_CALLBACKS, [97](#)
- USE_HAL_CAN_REGISTER_CALLBACKS, [97](#)
- USE_HAL_CEC_REGISTER_CALLBACKS, [98](#)
- USE_HAL_CRYPT_REGISTER_CALLBACKS, [98](#)
- USE_HAL_DAC_REGISTER_CALLBACKS, [98](#)
- USE_HAL_DCMI_REGISTER_CALLBACKS, [98](#)
- USE_HAL_DFSDM_REGISTER_CALLBACKS, [98](#)
- USE_HAL_DMA2D_REGISTER_CALLBACKS, [98](#)
- USE_HAL_DSI_REGISTER_CALLBACKS, [98](#)
- USE_HAL_ETH_REGISTER_CALLBACKS, [98](#)
- USE_HAL_HASH_REGISTER_CALLBACKS, [98](#)
- USE_HAL_HCD_REGISTER_CALLBACKS, [98](#)
- USE_HAL_I2C_REGISTER_CALLBACKS, [99](#)
- USE_HAL_I2S_REGISTER_CALLBACKS, [99](#)
- USE_HAL_IRDA_REGISTER_CALLBACKS, [99](#)
- USE_HAL_JPEG_REGISTER_CALLBACKS, [99](#)
- USE_HAL_LPTIM_REGISTER_CALLBACKS, [99](#)
- USE_HAL_LTDC_REGISTER_CALLBACKS, [99](#)
- USE_HAL_MDIOS_REGISTER_CALLBACKS, [99](#)
- USE_HAL_MMC_REGISTER_CALLBACKS, [99](#)
- USE_HAL_NAND_REGISTER_CALLBACKS, [99](#)
- USE_HAL_NOR_REGISTER_CALLBACKS, [99](#)
- USE_HAL_PCD_REGISTER_CALLBACKS, [100](#)
- USE_HAL_QSPI_REGISTER_CALLBACKS, [100](#)
- USE_HAL_RNG_REGISTER_CALLBACKS, [100](#)
- USE_HAL_RTC_REGISTER_CALLBACKS, [100](#)
- USE_HAL_SAI_REGISTER_CALLBACKS, [100](#)
- USE_HAL_SD_REGISTER_CALLBACKS, [100](#)
- USE_HAL_SDRAM_REGISTER_CALLBACKS, [100](#)
- USE_HAL_SMARTCARD_REGISTER_CALLBACKS, [100](#)
- USE_HAL_SMBUS_REGISTER_CALLBACKS, [100](#)
- USE_HAL_SPDIFRX_REGISTER_CALLBACKS, [100](#)
- USE_HAL_SPI_REGISTER_CALLBACKS, [101](#)
- USE_HAL_SRAM_REGISTER_CALLBACKS, [101](#)
- USE_HAL_TIM_REGISTER_CALLBACKS, [101](#)
- USE_HAL_UART_REGISTER_CALLBACKS, [101](#)
- USE_HAL_USART_REGISTER_CALLBACKS, [101](#)
- USE_HAL_WWDG_REGISTER_CALLBACKS, [101](#)
- USE_RTOS, [101](#)
- USE_SPI_CRC, [101](#)
- VDD_VALUE, [101](#)
- stm32f7xx_hal_msp.c
 - HAL_MspInit, [149](#)
- stm32f7xx_it.c
 - BusFault_Handler, [151](#)
 - CAN1_RX0_IRQHandler, [151](#)
 - CAN1_RX1_IRQHandler, [151](#)
 - DebugMon_Handler, [151](#)
 - DMA2_Stream0_IRQHandler, [151](#)
 - DMA2_Stream1_IRQHandler, [151](#)
 - DMA2_Stream2_IRQHandler, [152](#)
 - HardFault_Handler, [152](#)
 - hcan1, [154](#)
 - hdac, [154](#)
 - hdma_adc1, [154](#)
 - hdma_adc2, [154](#)
 - hdma_adc3, [154](#)
 - htim1, [154](#)
 - htim6, [154](#)
 - MemManage_Handler, [152](#)
 - NMI_Handler, [152](#)
 - PendSV_Handler, [152](#)
 - SVC_Handler, [152](#)
 - SysTick_Handler, [152](#)
 - TIM1_BRK_TIM9_IRQHandler, [153](#)
 - TIM1_CC_IRQHandler, [153](#)
 - TIM1_TRG_COM_TIM11_IRQHandler, [153](#)
 - TIM1_UP_TIM10_IRQHandler, [153](#)
 - TIM6_DAC_IRQHandler, [153](#)
 - UsageFault_Handler, [153](#)
- stm32f7xx_it.h
 - BusFault_Handler, [108](#)
 - CAN1_RX0_IRQHandler, [108](#)
 - CAN1_RX1_IRQHandler, [108](#)
 - DebugMon_Handler, [108](#)
 - DMA2_Stream0_IRQHandler, [109](#)
 - DMA2_Stream1_IRQHandler, [109](#)
 - DMA2_Stream2_IRQHandler, [109](#)
 - HardFault_Handler, [109](#)
 - MemManage_Handler, [109](#)
 - NMI_Handler, [109](#)
 - PendSV_Handler, [109](#)
 - SVC_Handler, [110](#)
 - SysTick_Handler, [110](#)
 - TIM1_BRK_TIM9_IRQHandler, [110](#)
 - TIM1_CC_IRQHandler, [110](#)
 - TIM1_TRG_COM_TIM11_IRQHandler, [110](#)
 - TIM1_UP_TIM10_IRQHandler, [110](#)
 - TIM6_DAC_IRQHandler, [110](#)
 - UsageFault_Handler, [111](#)
- Stm32f7xx_system, [8](#)
- STM32F7xx_System_Private_Defines, [10](#)
- STM32F7xx_System_Private_FunctionPrototypes, [11](#)
- STM32F7xx_System_Private_Functions, [11](#)
 - SystemCoreClockUpdate, [12](#)
 - SystemInit, [13](#)
- STM32F7xx_System_Private_Includes, [9](#)
 - HSE_VALUE, [9](#)
 - HSI_VALUE, [9](#)
- STM32F7xx_System_Private_Macros, [10](#)
- STM32F7xx_System_Private_TypesDefinitions, [9](#)
- STM32F7xx_System_Private_Variables, [10](#)
 - AHBPrescTable, [11](#)
 - APBPrescTable, [11](#)
 - SystemCoreClock, [11](#)
- SVC_Handler
 - stm32f7xx_it.c, [152](#)

- stm32f7xx_it.h, 110
- svpwm_calc
 - Pergamon_float.c, 148
 - Pergamon_float.h, 82
- SVPWM_DEFAULTS
 - Pergamon_float.h, 80
- svpwm_struct, 33
 - calc, 33
 - Ta, 33
 - Tb, 34
 - Tc, 34
 - valfa, 34
 - vbeta, 34
- syscalls.c
 - __attribute__, 156
 - __io_getchar, 156
 - __io_putchar, 156
 - _close, 157
 - _execve, 157
 - _exit, 157
 - _fork, 157
 - _fstat, 157
 - _getpid, 157
 - _isatty, 158
 - _kill, 158
 - _link, 158
 - _lseek, 158
 - _open, 158
 - _stat, 158
 - _times, 159
 - _unlink, 159
 - _wait, 159
 - environ, 159
 - initialise_monitor_handles, 159
- sysmem.c
 - _sbrk, 161
- SystemClock_Config
 - main.c, 141
- SystemCoreClock
 - STM32F7xx_System_Private_Variables, 11
- SystemCoreClockUpdate
 - STM32F7xx_System_Private_Functions, 12
- SystemInit
 - STM32F7xx_System_Private_Functions, 13
- SysTick_Handler
 - stm32f7xx_it.c, 152
 - stm32f7xx_it.h, 110
- T_exec
 - RMS_struct, 30
- t_step
 - step_struct, 33
- Ta
 - svpwm_struct, 33
- tasks_1ms
 - TASKS_1ms.c, 164
 - TASKS_1ms.h, 113
- TASKS_1ms.c
 - tasks_1ms, 164
- TASKS_1ms.h
 - tasks_1ms, 113
- Tb
 - svpwm_struct, 34
- Tc
 - svpwm_struct, 34
- TICK_INT_PRIORITY
 - stm32f7xx_hal_conf.h, 97
- tim.c
 - HAL_TIM_Base_MspDeInit, 166
 - HAL_TIM_Base_MspInit, 166
 - HAL_TIM_IC_MspDeInit, 166
 - HAL_TIM_IC_MspInit, 166
 - HAL_TIM_MspPostInit, 166
 - htim1, 170
 - htim2, 170
 - htim4, 170
 - htim6, 170
 - htim8, 170
 - MX_TIM1_Init, 167
 - MX_TIM2_Init, 167
 - MX_TIM4_Init, 168
 - MX_TIM6_Init, 169
 - MX_TIM8_Init, 169
- tim.h
 - HAL_TIM_MspPostInit, 115
 - htim1, 119
 - htim2, 119
 - htim4, 119
 - htim6, 119
 - htim8, 119
 - MX_TIM1_Init, 115
 - MX_TIM2_Init, 116
 - MX_TIM4_Init, 117
 - MX_TIM6_Init, 117
 - MX_TIM8_Init, 118
- TIM1_BRK_TIM9_IRQHandler
 - stm32f7xx_it.c, 153
 - stm32f7xx_it.h, 110
- TIM1_CC_IRQHandler
 - stm32f7xx_it.c, 153
 - stm32f7xx_it.h, 110
- TIM1_TRG_COM_TIM11_IRQHandler
 - stm32f7xx_it.c, 153
 - stm32f7xx_it.h, 110
- TIM1_UP_TIM10_IRQHandler
 - stm32f7xx_it.c, 153
 - stm32f7xx_it.h, 110
- TIM6_DAC_IRQHandler
 - stm32f7xx_it.c, 153
 - stm32f7xx_it.h, 110
- Tinv_L_GPIO_Port
 - main.h, 64
- Tinv_L_Pin
 - main.h, 64
- Tinv_R_GPIO_Port
 - main.h, 64
- Tinv_R_Pin

- main.h, [64](#)
- Tmot_L_GPIO_Port
 - main.h, [64](#)
- Tmot_L_Pin
 - main.h, [65](#)
- Tmot_R_GPIO_Port
 - main.h, [65](#)
- Tmot_R_Pin
 - main.h, [65](#)
- TRIP_L_GPIO_Port
 - main.h, [65](#)
- TRIP_L_Pin
 - main.h, [65](#)
- TRIP_R_GPIO_Port
 - main.h, [65](#)
- TRIP_R_Pin
 - main.h, [65](#)
- Ts
 - angle_struct, [15](#)
 - filtreLP_struct, [19](#)
 - pi_aw_struct, [25](#)
 - pi_struct, [27](#)
- UsageFault_Handler
 - stm32f7xx_it.c, [153](#)
 - stm32f7xx_it.h, [111](#)
- usb_otg.c
 - MX_USB_OTG_FS_USB_Init, [172](#)
- usb_otg.h
 - MX_USB_OTG_FS_USB_Init, [121](#)
- USE_HAL_ADC_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [97](#)
- USE_HAL_CAN_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [97](#)
- USE_HAL_CEC_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [98](#)
- USE_HAL_Cryp_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [98](#)
- USE_HAL_DAC_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [98](#)
- USE_HAL_DcMi_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [98](#)
- USE_HAL_DFSDM_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [98](#)
- USE_HAL_DMA2D_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [98](#)
- USE_HAL_DSI_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [98](#)
- USE_HAL_ETH_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [98](#)
- USE_HAL_HASH_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [98](#)
- USE_HAL_HCD_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [98](#)
- USE_HAL_I2C_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [99](#)
- USE_HAL_I2S_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [99](#)
- USE_HAL_IRDA_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [99](#)
- USE_HAL_JPEG_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [99](#)
- USE_HAL_LPTIM_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [99](#)
- USE_HAL_LTDC_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [99](#)
- USE_HAL_MDIOS_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [99](#)
- USE_HAL_MMC_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [99](#)
- USE_HAL_NAND_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [99](#)
- USE_HAL_NOR_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [99](#)
- USE_HAL_PCD_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [100](#)
- USE_HAL_QSPI_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [100](#)
- USE_HAL_RNG_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [100](#)
- USE_HAL_RTC_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [100](#)
- USE_HAL_SAI_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [100](#)
- USE_HAL_SD_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [100](#)
- USE_HAL_SDRAM_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [100](#)
- USE_HAL_SMARTCARD_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [100](#)
- USE_HAL_SMBUS_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [100](#)
- USE_HAL_SPDIFRX_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [100](#)
- USE_HAL_SPI_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [101](#)
- USE_HAL_SRAM_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [101](#)
- USE_HAL_TIM_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [101](#)
- USE_HAL_UART_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [101](#)
- USE_HAL_USART_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [101](#)
- USE_HAL_WWDG_REGISTER_CALLBACKS
 - stm32f7xx_hal_conf.h, [101](#)
- USE_RTOS
 - stm32f7xx_hal_conf.h, [101](#)
- USE_SPI_CRC
 - stm32f7xx_hal_conf.h, [101](#)
- valfa
 - svpwm_struct, [34](#)
- var
 - datalog_struct, [18](#)
- vbeta
 - svpwm_struct, [34](#)
- VDC_L_GPIO_Port

- main.h, [65](#)
- VDC_L_Pin
 - main.h, [65](#)
- VDC_R_GPIO_Port
 - main.h, [65](#)
- VDC_R_Pin
 - main.h, [66](#)
- VDD_VALUE
 - stm32f7xx_hal_conf.h, [101](#)
- WRN_L_GPIO_Port
 - main.h, [66](#)
- WRN_L_Pin
 - main.h, [66](#)
- WRN_R_GPIO_Port
 - main.h, [66](#)
- WRN_R_Pin
 - main.h, [66](#)
- WRN_STATE
 - PCB_IO.h, [71](#)
- Z_L_GPIO_Port
 - main.h, [66](#)
- Z_L_Pin
 - main.h, [66](#)
- Z_R_GPIO_Port
 - main.h, [66](#)
- Z_R_Pin
 - main.h, [66](#)