
pymadx Documentation

Release 1.2

Royal Holloway

May 23, 2018

CONTENTS

1	Licence & Disclaimer	3
1.1	CERN MADX	3
1.2	Licence	3
2	Authorship	5
3	Installation	7
3.1	Requirements	7
3.2	Installation	7
4	TFS File Loading & Manipulation	9
4.1	Tfs Class Features	9
4.2	Loading	9
4.3	Twiss File Preparation	10
4.4	Querying	10
5	Plotting	13
5.1	Plotting Features	13
5.2	Optics Plots	13
5.3	Colour Coding	14
5.4	Plot Interactivity	14
6	Model Preparation	15
7	Conversion	17
7.1	Mad8ToMadx	17
7.2	TfsToPtc	17
8	Module Contents	19
8.1	pymadx.Beam module	19
8.2	pymadx.Builder module	20
8.3	pymadx.Data module	21
8.4	pymadx.Plot module	26
8.5	pymadx.Ptc module	27
8.6	pymadx.PtcAnalysis module	28
9	Version History	29
9.1	v 1.2 - 2018 / 05 / 23	29
9.2	v 1.1 - 2018 / 04 / 10	29
9.3	v 1.0 - 2017 / 12 / 05	30

10 Indices and tables	31
Python Module Index	33
Index	35

pymadx is a set of classes and functions to load MADX output as well as prepare MADX models. The package overall functions as a holder for any code required to load and manipulate MADX output data as well as prepare MADX and PTC models programmatically.

LICENCE & DISCLAIMER

pymadx Copyright (C) Royal Holloway, University of London 2017.

1.1 CERN MADX

This software is not officially endorsed by the MADX team at CERN and is not related to any similarly named software provided by CERN. It has been developed purely as a utility for BDSIM.

1.2 Licence

pymadx is free software: you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation version 3 of the License.

pymadx is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with pymadx. If not, see <http://www.gnu.org/licenses/>.

AUTHORSHIP

The following people have contributed to pymadx:

- Laurie Nevay
- Andrey Abramov
- Stewart Boogert
- William Shields
- Jochem Snuverink
- Stuart Walker

INSTALLATION

3.1 Requirements

- pymadx is developed exclusively for Python 2.7.
- Matplotlib
- Numpy

3.2 Installation

To install pymadx, simply run `make install` from the root pymadx directory.:

```
cd /my/path/to/repositories/  
git clone http://bitbucket.org/jairhul/pymadx  
cd pymadx  
make install
```

Alternatively, run `make develop` from the same directory to ensure that any local changes are picked up.

TFS FILE LOADING & MANIPULATION

MADX outputs Twiss information as well as PTC tracking data in their own Table File System (TFS). This is the only format used by MADX. `pymadx` includes a class called `Tfs` for the purpose of loading and manipulating this data.

The TFS format is described in the MADX manual available from [the madx website](#). The format roughly is described as a text file. The file contains first a header with key and value pairs for one-off definitions. This is proceeded by a line with column names and a line with the data type of each column. After this each line typically represents the values of the lattice for a particular element with each new line containing the values at a subsequent element in the lattice. We maintain the concept of this table and refer to ‘rows’ and ‘columns’.

4.1 Tfs Class Features

- Loading of TFS files.
- Loading of TFS files compressed and archived with `.tar.gz` suffix without decompressing.
- Report a count of all different element types.
- Get a particular column.
- Get a particular row.
- Get elements of a particular type.
- Get a numerical index from the name of the element.
- Find the curvilinear S coordinate of an element by name.
- Find the name of the nearest element at a given S coordinate.
- Plot an optics diagram.
- Roll a lattice to start from a different point.
- Calculate a beam size given the Twiss parameters, dispersion and emittance (in the header).
- Determining whether a given component perturbs the beam.
- Extract a ‘segment’ if PTC data is present.
- Slice a lattice (in the Python sense) with new S coordinates.

4.2 Loading

A file may be loading by constructing a `Tfs` instance from a file name.

```
>>> import pymadx
>>> a = pymadx.Data.Tfs("myTwissFile.tfs")
```

Note: The import will be assumed from now on in examples.

A file compressed using tar and gzip may also be loaded without first uncompressing without any difference in functionality. Not temporary files are created:

```
tar -czf myTwissFile.tar.gz myTwissFile.fs
```

```
>>> import pymadx
>>> a = pymadx.Data.Tfs("myTwissFile.tar.gz")
```

Note: The detection of a compressed file is based on ‘tar’ or ‘gz’ existing in the file name.

4.3 Twiss File Preparation

You may export twiss data from MADX with a choice of columns. We often find it beneficial to not specify any columns at all, which results in all available columns being written. This large number (~70) makes the file less human-readable but ensures no information is omitted. Such an export will also increase the file size, however, we recommend compressing the file with tar and gzip as the ASCII files compress very well with a typically compression ratio of over 10:1.

The following MADX syntax in a MADX input script will prepare a Tfs file with all columns where “SEQUENCE-NAME” is the name of the sequence in MADX.:

```
select,flag=twiss, clear;
twiss,sequence=SEQUENCENAME, file=outputfilename.tfs;
```

4.4 Querying

The Tfs class can be used to query the data in various ways.

4.4.1 Basic Information

- All data is stored in the **data** object inside the class
- The header information is stored in **header**.
- The names of all elements in order is stored in **sequence**.
- The names of all columns in the file is stored in **columns**

Generally, members beginning with small letters are objects and capital letters are functions.

A nice summary of the file can be provided with the *ReportPopulations* function.:

```
a = pymadx.Data.Tfs("mytwissfile.tar.gz")
a.ReportPopulations()
```

```
Filename > twiss_v5.2.tfs
Total number of items > 1032
Type..... Population
MULTIPOLE..... 516
DRIFT..... 201
QUADRUPOLE..... 102
MARKER..... 78
MONITOR..... 64
SBEND..... 24
SEXTUPOLE..... 18
HKICKER..... 15
VKICKER..... 14
```

4.4.2 Indexing and Slicing

The instance may be indexed like a normal Python iterable structure such as a list or a tuple. Square brackets with a number i will return the i th element in the sequence. A Python ‘slice’ may also be used where a range of elements may be selected. If only one element is indexed a Python dictionary is returned for that element. If a range is required, another Tfs instance is returned:

```
a = pymadx.Data.Tfs("mytwissfile.tar.gz")
a[3]          # 4th element in sequence (0,1,2,3!)
a[3:10]       # 4th to 11th elements (tfs instance returned)
a['IP1':300]  # find element named IP1 (exactly) and start from that until the #301th_
               ↪ element
a['IP3'::]    # find element named IP3 (exactly) and take from there to the end of the_
               ↪ file
a['L230A']    # returns a Python dictionary for element named L230A
```

If you know the name of an element you can search for it and get the index from that.:

```
a.IndexFromName('L230A')
>>> 995
```

You can also search by nearest curvilinear S coordinate along the beam line.:

```
a.IndexFromNearestS(34.4)
>>> 225
a[225]['NAME']
```

4.4.3 Row or Element

A row of data is an entry for a particular element. The Tfs class is conceptually a list of elements. Each element is represented by a Python dictionary that has a key for each column. The list of acceptable keys (ie names of columns) can be found in the member named ‘columns’.:

```
a.columns #prints out list of column names
```

If a single element is indexed, a dictionary is returned and can be accessed - even in one step.:

```
d = a[123]
d['NAME']
>>> 'MQD8X'
a[123]['NAME'] # equivalent
```

4.4.4 Looping & Iterating

The Tfs class may be iterated over like a list in Python. For each iteration a dictionary for that element is returned.:

```
for el in a:
    print(el['NAME'])
```

4.4.5 Beam Sizes

For convenience the beam size is calculated from the Beta amplitude functions, the emittance and dispersion if they are present. The emittance is defined by 'EX' and 'EY' in the header. These are calculated according to

$$\sigma_x = \sqrt{\beta_x \epsilon_x + D(S)^2 \frac{\sigma_E^2}{\beta_{\text{Lorentz}}^2}}$$
$$\sigma_y = \sqrt{\beta_y \epsilon_y + D(S)^2 \frac{\sigma_E^2}{\beta_{\text{Lorentz}}^2}}$$

σ_E in MADX is fractional. Here we use the relation

$$\sigma_E = \frac{\Delta E}{E} = \beta_{\text{Lorentz}}^2 \frac{\Delta p}{p}$$

Note: MADX input files often don't have a sensible emittance defined as it is not always required. Ensure the emittance is what you intended it to be in the Tfs file.

4.4.6 Modification

It is not recommended to modify the data structures inside the Tfs class. Of course one can, but one must be careful of Python's copying behaviour. Often a 'deep copy' is required or care must be taken to modify the original and not a reference to a particular variable.

PLOTTING

The *pymadx.Plot* module provides various plotting utilities.

5.1 Plotting Features


- Make default optics plots.
- Add a machine lattice to any pre-existing plot.
- Interactive plots with the machine diagram following the mouse zooming.
- Interactive plots with searching for nearest element.

5.2 Optics Plots

A simple optics plot may be made with the following syntax:

```
a = pymadx.Data.Tfs("mytwissfile.tar.gz")
a.Plot()
```

This creates a plot of the Beta amplitude functions against curvilinear S position. A colour diagram representing the machine is also produced above the graph as shown below.

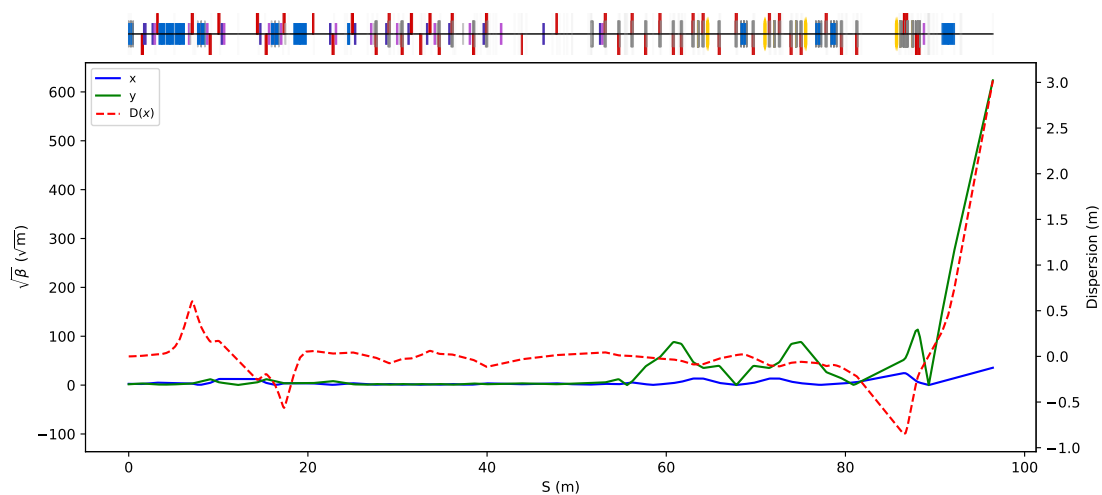

The command has optional arguments such as a title string to be put at the top of the graph and whether to also plot the horizontal dispersion function. This function is provided as a quick utility and not the ultimate plotting script. The user can make their own plot and then append a machine diagram at the end if they wish.:

```
f = matplotlib.pyplot.figure()
# user plotting commands here
pymadx.Plot.AddMachineLatticeToFigure(f, "mytwissfile.tar.gz")
```

`gcf()` is a matplotlib.pyplot function to get a reference to the current matplotlib figure and can be used as the first argument.:

```
pymadx.Plot.AddMachineLatticeToFigure(gcf(), "mytwissfile.tar.gz")
```

Note: It becomes difficult to adjust the axes and layout of the graph after adding the machine description. It is therefore strongly recommended to do this last.

5.3 Colour Coding

Each magnet is colour coded and positioned depending on its type and strength.

Type	Shape	Colour	Vertical Position
drift	N/A	Not shown	N/A
sbend	Rectangle	Blue	Central always
rbend	Rectangle	Blue	Central always
hkicker	Rectangle	Purple	Central always
vkicker	Rectangle	Pink	Central always
quadrupole	Rectangle	Red	Top half for $K1L > 0$; Bottom half for $K1L < 0$
sextupole	Hexagon	Yellow	Central always
octupole	Hexagon	Green	Central always
multiple	Hexagon	Light grey	Central always
rcollimator	Rectangle	Black	Central always
ecollimator	Rectangle	Black	Central always
any other	Rectangle / Line	Light Grey	Central always

Note: In all cases if the element is a magnet and the appropriate strength is zero, it is shown as a grey line.

5.4 Plot Interactivity

With the addition of the machine axes, some extra interactivity is included to the matplotlib figures.

- zooming - if the 'right-click and drag' zoom feature is used on the machine diagram, the graph will automatically update and follow the machine diagram.
- xlim - setting the horizontal graph limits with the 'xlim' command will update both the machine diagram and the graph.
- querying - right-clicking anywhere on the graph will print out the name of the nearest element in the terminal.

MODEL PREPARATION

`pymadx` contains a series of classes that can be used to programmatically construct a MADX model. The main class is `pymadx.Builder.Machine`.

```
a = pymadx.Builder.Machine()
a.AddDrift('drift1', 1.3)
a.AddQuadrupole('qf1', 0.2, 1.3454)
a.Write('lattice1')
```

The functions available are documented in `pymadx.Builder module`, but can also easily be found with the built in documentation:

```
a = pymadx.Builder.Machine()
a <tab>
```

to see the list of available functions. Each has a short description and signature that can be viewed with a question mark.

```
a = pymadx.Builder.Machine()
a.AddQuadrupole?
Signature: a.AddQuadrupole(name='qd', length=0.1, k1=0.0, **kwargs)
Docstring: <no docstring>
File:      ~/physics/refs/pymadx/pymadx/Builder.py
Type:      instancemethod
```

Aside from the lattice elements available, a `pymadx.Beam.Beam` instance can be associated with the machine.

```
b = pymadx.Beam.Beam()
a.AddBeam(b)
```


CONVERSION

pymadx provides the ability to convert a MADX model into another format. These are detailed in the sections below.

For conversion of MADX to BDSIM GMAD format, please see the pybdsim documentation <http://www.pp.rhul.ac.uk/bdsim/pybdsim/convert.html#madxtfs2gmad>.

7.1 Mad8ToMadx

A MAD8 model can be converted to MADX. This relies on the pymad8 package and the conversion is performed there.

7.2 TfsToPtc

A MADX model as described by a full twiss table in a TFS file can be prepared into a new MADX / PTC model suitable for tracking with PTC immediately.

MODULE CONTENTS

This documentation is automatically generated by scanning all the source code. Parts may be incomplete.

pymadx - Royal Holloway utility to manipulate MADX data and models.

Authors:

- Laurie Nevay
- Andrey Abramov
- Stewart Boogert
- William Shields
- Jochem Snuverink
- Stuart Walker

Copyright Royal Holloway, University of London 2017.

8.1 pymadx.Beam module

Class to create a MADX beam definition.

```
class pymadx.Beam.Beam (particletype='e-', energy=1.0, distrtype='reference', *args, **kwargs)  
    Bases: dict
```

A class that extends a dictionary for the specific parameters in a MADX beam definition. This class can return a string representation of itself that is valid MADX syntax.

Setter methods are dynamically added based on the distribution selected.

GetItemStr (*key*)

ReturnBeamString ()

ReturnPtcString ()

ReturnTwissString (*basefilename='output'*)

SetDistributionType (*distrtype='reference'*)

SetEnergy (*energy=1.0, unitsstring='GeV'*)

SetParticleType (*particletype='e-'*)

SetT0 (*t0=0.0, unitsstring='s'*)

SetX0 (*x0=0.0*)

```

SetXP0 (xp0=0.0)
SetY0 (y0=0.0)
SetYP0 (yp0=0.0)
WriteToFile (filename)

```

8.2 pymadx.Builder module

Builder

Classes for programmatically constructing and writing out a MADX lattice. You can create a lattice using one of the predefined simple lattices or by instantiating the Machine class and adding many elements to it using its various Add methods. This instance may be written out to a MADX input text file using the WriteMachine method.

Classes:

Element - beam line element that always has name and type Line - a list of elements Machine - a sequence of elements and associated options and beam etc.

```
class pymadx.Builder.Element (name, category, **kwargs)
```

Bases: dict

Element - a beam element class - inherits dict

Element(*name,type,**kwargs*)

A beam line element must ALWAYS have a name, and type. The keyword arguments are specific to the type and are up to the user to specify.

Numbers are converted to a python Decimal type to provide higher accuracy in the representation of numbers - 15 decimal places are used.

keysextra ()

```
class pymadx.Builder.Line (name, *args)
```

Bases: list

DefineConstituentElements ()

```
class pymadx.Builder.Machine (verbose=False)
```

Bases: object

AddBeam (*beam=None*)

AddDecapole (*name='dd', length=0.1, k4=0.0, **kwargs*)

AddDipole (*category='sbend'*)

category - 'sbend' or 'rbend' - sector or rectangular bend

AddDrift (*name='dr', length=0.1, **kwargs*)

AddHKicker (*name='hk', hkick=0, length=0, **kwargs*)

AddMarker (*name='mk', **kwargs*)

AddMultipole (*name='mp', knl=0, ksl=0, **kwargs*)

AddOctupole (*name='oc', length=0.1, k3=0.0, **kwargs*)

AddOptions (**args, **kwargs*)

AddPTCTrackAperture (*aperture=[]*)

Add a PTC 6D max aperture for ptc_track command.


```

AddQuadrupole (name='qd', length=0.1, k1=0.0, **kwargs)
AddSampler (*elementnames)
AddSextupole (name='sd', length=0.1, k2=0.0, **kwargs)
AddSolenoid (name='sl', length=0.1, ks=0.0, **kwargs)
AddVKicker (name='vk', vkick=0, length=0, **kwargs)
Append (object)
Write (filename, verbose=False)
    Write the machine to a series of gmad files.

next ()

class pymadx.Builder.Sampler (name)
    Bases: object

    Class that can return the appropriate sampler syntax if required.

pymadx.Builder.WriteMachine (machine(machine), filename(string), verbose(bool))
    Write a lattice to disk. This writes several files to make the machine, namely:

```

- filename_components.madx - component files (max 10k per file)
- filename_sequence.madx - lattice definition
- filename_samplers.madx - sampler definitions (max 10k per file)
- **filename.gmad - suitable main file with all sub** files in correct order

These are prefixed with the specified filename / path.

8.3 pymadx.Data module

Classes to load and manipulate data from MADX.

```

class pymadx.Data.Aperture (*args, **kwargs)
    Bases: pymadx.Data.Tfs

    A class based on (ie inherits) the Tfs class for reading aperture information. This allows madx aperture information in Tfs format to be loaded, filtered and queried. This also provides the ability to suggest whether an element should be split and therefore what the aperture should be.

    This class maintains a cache of aperture information as a function of S position.

    'quiet' being defined in kwargs will silence a warning about unknown aperture types.

CheckKnownApertureTypes ()

GetApertureAtS (sposition)
    Return a dictionary of the aperture information specified at the closest S position to that requested - may be before or after that point.

GetApertureForElementNamed (name)
    Return a dictionary of the aperture information by the name of the element.

GetEntriesBelow (value=8, keys='all')

GetExtent (name)
    Get the x and y maximum +ve extent (assumed symmetric) for a given entry by name. Calls GetApertureForElementNamed and then GetApertureExtent.

```

GetExtentAll ()

Get the x and y maximum +ve extent (assumed symmetric) for the full aperture instance.

returns x,y where x and y are 1D numpy arrays

GetExtentAtS (*sposition*)

Get the x and y maximum +ve extent (assumed symmetric) for a given s position. Calls GetApertureAtS and then GetApertureExtent.

GetNonZeroItems ()

Return a copy of this class with all non-zero items removed.

GetUniqueSPositions ()
Plot (*machine=None, outputfilename=None, plot='xy', plotapertype=True*)

This plots the aperture extent in x and y.

This replaces the base class Tfs Plot method.

Inputs: title (str) - The title of the resultant plot (default: None) outputfilename (str) - Name without extension of the output file if desired (default: None) machine (str or pymadx.Data.Tfs) - TFS file or TFS instance to plot a machine lattice from (default: None) plot (str) - Indicates which aperture to plot - 'x' for X, 'y' for Y and 'xy' for both (default: 'xy') plotapertype (bool) - If enabled plots the aperture type at every defined aperture point as a color-coded dot (default: False)

PlotN1 (*machine=None, outputfilename=None*)

Plot the N1 aperture value from MADX.

Requires N1 and S column.

Optional "machine" argument is string to or pymadx.Data.Tfs instance for twiss description to provide a machine diagram on top.

RemoveAboveValue (*limits=8, keys='all'*)
RemoveBelowValue (*limits, keys='all'*)

Return a copy of the aperture instance with all entries where any of the aperture values are below value. The default is the tolerance as defined by SetZeroTolerance().

RemoveDuplicatesSPositions ()

Takes the first aperture value for entries with degenerate S positions and removes the others.

RemoveNoApertureTypeEntries ()

Return a copy of this instance with any null aperture types removed.

Aperture type of "" will be removed.

ReplaceType (*existingType, replacementType*)
SetZeroTolerance (*tolerance*)

Set the value below which aperture values are considered 0.

ShouldSplit (*rowDictionary*)

Suggest whether a given element should be split as the aperture information in this class suggests multiple aperture changes within the element.

Returns bool, [], []

which are in order:

bool - whether to split or not [] - list of lengths of each suggested split [] - list of the aperture dictionaries for each one

pymadx.Data.CheckItsTfs (*tfsfile*)

Ensure the provided file is a Tfs instance. If it's a string, ie path to a tfs file, open it and return the Tfs instance.

tfsfile can be either a tfs instance or a string.

`pymadx.Data.CheckItsTfsAperture(tfsfile)`

Ensure the provided file is an Aperture instance. If it's a string, ie path to a tfs file, open it and return the Tfs instance.

tfsfile can be either a tfs instance or a string.

`pymadx.Data.GetApertureExtent(aper1, aper2, aper3, aper4, aper_type)`

Get the maximum +ve half extent in x and y for a given aperture model and (up to) four aperture parameters.

returns x,y

`pymadx.Data.GetApertureExtents(aperture)`

Loop over a pymadx.Aperture.Aperture instance and calculate the maximum +ve extent (assumed symmetric) in x and y.

returns x,y where x and y are 1D numpy arrays

`pymadx.Data.NonZeroAperture(item)`

`pymadx.Data.PrintMADXApertureTypes()`

class `pymadx.Data.Tfs(filename=None, **kwargs)`

Bases: object

MADX Tfs file reader

```
>>> a = Tfs()
>>> a.Load('myfile.tfs')
>>> a.Load('myfile.tar.gz') -> extracts from tar file
```

or

```
>>> a = Tfs("myfile.tfs")
>>> b = Tfs("myfile.tar.gz")
```

a has data members:

header - dictionary of header items

columns - list of column names

formats - list of format strings for each column

data - dictionary of entries in tfs file by name string

sequence - list of names in the order they appear in the file

nitems - number of items in sequence

NOTE: if no column "NAME" is found, integer indices are used instead

See the various methods inside *a* to get different bits of information:

```
>>> a.ReportPopulations?
```

Examples:

```
>>> a['IP.1'] #returns dict for element named "IP.1"
>>> a[:30]    #returns list of dicts for elements up to number 30
>>> a[345]    #returns dict for element number 345 in sequence
```

Clear()

Empties all data structures in this instance.

ColumnIndex (*columnstring*)

Return the index to the column matching the name

REMEMBER: excludes the first column NAME 0 counting

ComponentPerturbs (*indexInSequence, terse=True*)

Returns names of variables which would perturb a particle. Some components written out in TFS are redundant, so it's useful to know which components perturb a particle's motion. This is likely not an exhaustive check so refer to source if unsure.

Checks integrated strengths (but not if L=0), HKICK and VKICK

indexInSequence - index of component to be checked. terse - print out the parameters which perturb if False

ConcatenateMachine (**args*)

This is used to concatenate machines.

EditComponent (*index, variable, value*)

Edits variable of component at index and sets it to value. Can only take indices as every single element in the sequence has a unique definition, and components which may appear degenerate/reused are in fact not in this data model.

ElementPerturbs (*component, terse=True*)

Search an individual dictionary representing a row in the TFS file for as to whether it perturbs.

GetCollimators ()

Returns a Tfs instance containing any type of collimator (including COLLIMATOR, RCOLLIMATOR and ECOLLIMATOR).

GetColumn (*columnstring*)

Return a numpy array of the values in columnstring in order as they appear in the beamline

GetColumnDict (*columnstring*)

return all data from one column in a dictionary

note not in order

GetElementNamesOfType (*typename*)

Returns a list of the names of elements of a certain type. Typename can be a single string or a tuple or list of strings.

Examples:

```
>>> GetElementsOfType('SBEND')
>>> GetElementsOfType(['SBEND', 'RBEND'])
>>> GetElementsOfType(('SBEND', 'RBEND', 'QUADRUPOLE'))
```

GetElementsOfType (*typename*)

Returns a Tfs instance containing only the elements of a certain type. Typename can be a single string or a tuple or list of strings.

This returns a Tfs instance with all the same capabilities as this one.

GetElementsWithTextInName (*text*)

Returns a Tfs instance containing only the elements with the string in text in their name.

This returns a Tfs instance with all the same capabilities as this one.

GetRow (*elementname*)

Return all data from one row as a list

GetRowDict (*elementname*)

Return a dictionary of all parameters for a specific element given by element name.

note not in order

GetSegment (*segmentnumber*)**IndexFromGmadName** (*gmadname*, *verbose=False*)

Returns the indices of elements which match the supplied gmad name. Useful because tfs2gmad strips punctuation from the component names, and irritating otherwise to work back. When multiple elements of the name match, returns the indices of all the components in a list. Arguments: gmadname : The gmad name of a component to search for. verbose : prints out matching name indices and S locations. Useful for discriminating between identical names.

IndexFromName (*namestring*)

Return the index of the element named namestring. Raises ValueError if not found.

IndexFromNearestS (*S*)

return the index of the beamline element which CONTAINS the position S.

Note: For small values beyond smax, the index returned will be -1 (i.e. the last element).

InterrogateItem (*itemname*)

Print out all the parameters and their names for a particular element in the sequence identified by name.

Load (*filename*, *verbose=False*)

```
>>> a = Tfs()
>>> a.Load('filename.tfs')
```

Read the tfs file and prepare data structures. If 'tar' or 'gz' are in the filename, the file will be opened still compressed.

NameFromIndex (*integerindex*)

return the name of the beamline element at index

NameFromNearestS (*S*)

return the name of the beamline element closest to S

Plot (*title="*, *outputfilename=None*, *machine=True*, *dispersion=False*, *squareroot=True*)

Plot the Beta amplitude functions from the file if they exist.

squareroot -> whether to square root the beta functions or not (default = True)

PlotCentroids (*title="*, *outputfilename=None*, *machine=True*)

Plot the centroid in the horizontal and vertical from the file if they exist.

PlotSigma (*title="*, *outputfilename=None*, *machine=True*, *dispersion=False*)

Plot the beam size.

RenameElement (*index*, *new*)

Rename indexed element.

ReportPopulations ()

Print out all the population of each type of element in the beam line (sequence)

SplitElement (*SSplit*)

Splits the element found at SSplit given, performs the necessary operations on the lattice to leave the model functionally identical and returns the indices of the first and second component. Element new name

will be the same as the original except appended with a number corresponding to its location in the list of previously identically defined components used in the sequence and either “split_1” or “split_2” depending on which side of the split it is located. It is necessary to append both of these numbers to ensure robust name mangling.

WARNING: DO NOT SPLIT THE ELEMENT WHICH MARKS THE BEGINNING OF YOUR LATTICE. YOUR OPTICS WILL BE WRONG!

WrapAroundElement (*item*)

Define new starting point for lattice. The arg *item* can be either the name of the element or its index and will become the new beginning of the lattice, and elements that came before the new start are appended to the end. S and SMID are updated as necessary.

next ()

`pymadx.Data.ZeroAperture` (*item*)

8.4 pymadx.Plot module

Plotting script for madx TFS files using the pymadx Tfs class

`pymadx.Plot.AddMachineLatticeToFigure` (*figure*, *tfsfile*, *tightLayout=True*)

Add a diagram above the current graph in the figure that represents the accelerator based on a madx twiss file in tfs format.

Note you can use matplotlib’s `gcf()` ‘get current figure’ as an argument.

```
>>> pymadx.Plot.AddMachineLatticeToFigure(gcf(), 'afile.tfs')
```

A `pymadx.Tfs` class instance or a string specifying a tfs file can be supplied as the second argument interchangeably.

`pymadx.Plot.Aperture` (*aperture*, *machine=None*, *outputfilename=None*, *plot='xy'*, *plotapertype=True*)

Plots the aperture extents vs. S from a `pymadx.Data.Aperture` instance.

Inputs: *aperture* (`pymadx.Data.Aperture`) - the aperture model to plot from *machine* (str or `pymadx.Data.Tfs`) - TFS file or TFS instance to plot a machine lattice from (default: None) *outputfilename* (str) - Name without extension of the output file if desired (default: None) *plot* (str) - Indicates which aperture to plot - ‘x’ for X, ‘y’ for Y and ‘xy’ for both (default: ‘xy’) *plotapertype* (bool) - If enabled plots the aperture type at every defined aperture point as a color-coded dot (default: False)

`pymadx.Plot.ApertureN1` (*aperture*, *machine=None*, *outputfilename=None*)

Plot the N1 aperture value from MADX.

Requires N1 and S column.

Optional “machine” argument is string to or `pymadx.Data.Tfs` instance for twiss description to provide a machine diagram on top.

`pymadx.Plot.Beta` (*tfsfile*, *title=""*, *outputfilename=None*, *machine=True*, *dispersion=False*, *square-root=True*)

Plot $\sqrt{\beta(x,y)}$ as a function of S. By default, a machine diagram is shown at the top of the plot.

Optionally set *dispersion=True* to plot x dispersion as second axis. Optionally turn off machine overlay at top with *machine=False* Specify *outputfilename* (without extension) to save the plot as both pdf and png.

`pymadx.Plot.Centroids` (*tfsfile*, *title=""*, *outputfilename=None*, *machine=True*)

Plot the centroid (mean) x and y from the a Tfs file or `pymadx.Tfs` instance.

tfsfile - can be either a string or a pymadx.Tfs instance. title - optional title for plot outputfilename - optional name to save file to (extension determines format) machine - if True (default) add machine diagram to top of plot

`pymadx.Plot.Sigma` (tfsfile, title="", outputfilename=None, machine=True, dispersion=False)

Plot $\sqrt{\beta x, y}$ as a function of S. By default, a machine diagram is shown at the top of the plot.

Optionally set dispersion=True to plot x dispersion as second axis. Optionally turn off machine overlay at top with machine=False Specify outputfilename (without extension) to save the plot as both pdf and png.

`pymadx.Plot.Survey` (tfsfile, title="", outputfilename=None)

Plot the x and z coordinates from a tfs file.

8.5 pymadx.Ptc module

Classes to handle PTC runs and data.

class `pymadx.Ptc.FlatGenerator` (mux=0.0, widthx=0.001, mupx=0.0, widthpx=0.001, muy=0.0, widthy=0.001, mupy=0.0, widthpy=0.001)

Bases: object

Simple ptc inray file generator - even distribution

Generate (nToGenerate=100, fileName='inrays.madx')
returns an Inrays structure

class `pymadx.Ptc.GaussGenerator` (gemx=1e-10, betax=0.1, alfx=0.0, gemy=1e-10, betay=0.1, alfy=0.0, sigmat=1e-12, sigmap=1e-12)

Bases: object

Simple ptx inray file generator

Generate (nToGenerate=1000, fileName='inrays.madx')
returns an Inrays structure

class `pymadx.Ptc.Inray` (x=0.0, px=0.0, y=0.0, py=0.0, t=0.0, pt=0.0)

Bases: object

Class for a madx ptc input ray x : horizontal position [m] px : horizontal canonical momentum p_x/p_0 y : vertical position [m] py : vertical canonical momentum p_y/p_0 t : $c*(t-t_0)$ [m] pt : $(\Delta E)/(pc)$

use str(Inray) to get the representation for file writing

class `pymadx.Ptc.Inrays`

Bases: list

Class based on python list for Inray class

AddParticle (x=0.0, px=0.0, y=0.0, py=0.0, t=0.0, pt=0.0)

Clear ()

Plot ()

Statistics ()

Write (filename)

`pymadx.Ptc.LoadInrays` (fileName)

Load input rays from file fileName : inrays.madx return : Inrays instance

`pymadx.Ptc.PlotInrays` (i)

Plot Inrays instance, if input is a sting the instance is created from the file

`pymadx.Ptc.WriteInrays (fileName, inrays)`

8.6 pymadx.PtcAnalysis module

Analysis utilities for PTC data.

class `pymadx.PtcAnalysis.PtcAnalysis (ptcInput=None, ptcOutput=None)`

Bases: `object`

Deprecated.

Optical function calculation for PTC tracking data.

This has be reimplemented and replaced by C++ implementation in rebdsim.

CalculateOpticalFunctions (*output*)

Calculates optical functions from a PTC output file

output - the name of the output file

SamplerLoop ()

VERSION HISTORY

9.1 v 1.2 - 2018 / 05 / 23

9.1.1 New Features

- Write a beam class instance to a separate file.
- Add ptc_track maximum aperture to a model.
- Concatenate TFS instances.
- N1 aperture plot as well as physical aperture plot.
- Output file naming for plots for MADX MADX comparison.
- MADX Transport comparison plots.

9.1.2 General

- Changes to some plot arguments.
- ‘Plot’ removed from plot functions name as redundant.
- Transport conversion moved to pytransport.

9.1.3 Bug Fixes

- Machine plot now deals with ‘COLLIMATOR’ type correctly.

9.2 v 1.1 - 2018 / 04 / 10

9.2.1 New Features

- Improved options for writing PTC job for accurate comparison.
- Support for subrelativistic machines - correct MADX definition of dispersion.
- Plots for beam size including dispersion.
- MADX MADX Twiss comparison plots.

9.2.2 Bug Fixes

- Removal of reverse slicing as it didn't work and is very difficult to support as MADX typically returns optical functions at the end of an element. Some columns however are element specific (such as L).
- Fixed exception catching.
- Fix beam size for subrelativistic machines. MADX really provides Dx/Beta.
- Fix index searching from S location.
- Fix PTC analysis.
- Fix conversion to PTC for fringe fields.

9.3 v 1.0 - 2017 / 12 / 05

9.3.1 New Features

- GPL3 licence introduced.
- Compatability with PIP install system.
- Manual.
- Testing suite.

INDICES AND TABLES

- `genindex`
- `modindex`
- `search`

PYTHON MODULE INDEX

p

- `pymadx`, [19](#)
- `pymadx.Beam`, [19](#)
- `pymadx.Builder`, [20](#)
- `pymadx.Data`, [21](#)
- `pymadx.Plot`, [26](#)
- `pymadx.Ptc`, [27](#)
- `pymadx.PtcAnalysis`, [28](#)

A

AddBeam() (pymadx.Builder.Machine method), 20
 AddDecapole() (pymadx.Builder.Machine method), 20
 AddDipole() (pymadx.Builder.Machine method), 20
 AddDrift() (pymadx.Builder.Machine method), 20
 AddHKicker() (pymadx.Builder.Machine method), 20
 AddMachineLatticeToFigure() (in module pymadx.Plot), 26
 AddMarker() (pymadx.Builder.Machine method), 20
 AddMultipole() (pymadx.Builder.Machine method), 20
 AddOctupole() (pymadx.Builder.Machine method), 20
 AddOptions() (pymadx.Builder.Machine method), 20
 AddParticle() (pymadx.Ptc.Inrays method), 27
 AddPTCTrackAperture() (pymadx.Builder.Machine method), 20
 AddQuadrupole() (pymadx.Builder.Machine method), 20
 AddSampler() (pymadx.Builder.Machine method), 21
 AddSextupole() (pymadx.Builder.Machine method), 21
 AddSolenoid() (pymadx.Builder.Machine method), 21
 AddVKicker() (pymadx.Builder.Machine method), 21
 Aperture (class in pymadx.Data), 21
 Aperture() (in module pymadx.Plot), 26
 ApertureN1() (in module pymadx.Plot), 26
 Append() (pymadx.Builder.Machine method), 21

B

Beam (class in pymadx.Beam), 19
 Beta() (in module pymadx.Plot), 26

C

CalculateOpticalFunctions() (pymadx.PtcAnalysis.PtcAnalysis method), 28
 Centroids() (in module pymadx.Plot), 26
 CheckItsTfs() (in module pymadx.Data), 22
 CheckItsTfsAperture() (in module pymadx.Data), 23
 CheckKnownApertureTypes() (pymadx.Data.Aperture method), 21
 Clear() (pymadx.Data.Tfs method), 23
 Clear() (pymadx.Ptc.Inrays method), 27
 ColumnIndex() (pymadx.Data.Tfs method), 24
 ComponentPerturbs() (pymadx.Data.Tfs method), 24

ConcatenateMachine() (pymadx.Data.Tfs method), 24

D

DefineConstituentElements() (pymadx.Builder.Line method), 20

E

EditComponent() (pymadx.Data.Tfs method), 24
 Element (class in pymadx.Builder), 20
 ElementPerturbs() (pymadx.Data.Tfs method), 24

F

FlatGenerator (class in pymadx.Ptc), 27

G

GaussGenerator (class in pymadx.Ptc), 27
 Generate() (pymadx.Ptc.FlatGenerator method), 27
 Generate() (pymadx.Ptc.GaussGenerator method), 27
 GetApertureAtS() (pymadx.Data.Aperture method), 21
 GetApertureExtent() (in module pymadx.Data), 23
 GetApertureExtents() (in module pymadx.Data), 23
 GetApertureForElementNamed() (pymadx.Data.Aperture method), 21
 GetCollimators() (pymadx.Data.Tfs method), 24
 GetColumn() (pymadx.Data.Tfs method), 24
 GetColumnDict() (pymadx.Data.Tfs method), 24
 GetElementNamesOfType() (pymadx.Data.Tfs method), 24
 GetElementsOfType() (pymadx.Data.Tfs method), 24
 GetElementsWithTextInName() (pymadx.Data.Tfs method), 24
 GetEntriesBelow() (pymadx.Data.Aperture method), 21
 GetExtent() (pymadx.Data.Aperture method), 21
 GetExtentAll() (pymadx.Data.Aperture method), 21
 GetExtentAtS() (pymadx.Data.Aperture method), 22
 GetItemStr() (pymadx.Beam.Beam method), 19
 GetNonZeroItems() (pymadx.Data.Aperture method), 22
 GetRow() (pymadx.Data.Tfs method), 24
 GetRowDict() (pymadx.Data.Tfs method), 25
 GetSegment() (pymadx.Data.Tfs method), 25
 GetUniqueSPositions() (pymadx.Data.Aperture method), 22

I

IndexFromGmadName() (pymadx.Data.Tfs method), 25
 IndexFromName() (pymadx.Data.Tfs method), 25
 IndexFromNearestS() (pymadx.Data.Tfs method), 25
 Inray (class in pymadx.Ptc), 27
 Inrays (class in pymadx.Ptc), 27
 InterrogateItem() (pymadx.Data.Tfs method), 25

K

keysextra() (pymadx.Builder.Element method), 20

L

Line (class in pymadx.Builder), 20
 Load() (pymadx.Data.Tfs method), 25
 LoadInrays() (in module pymadx.Ptc), 27

M

Machine (class in pymadx.Builder), 20

N

NameFromIndex() (pymadx.Data.Tfs method), 25
 NameFromNearestS() (pymadx.Data.Tfs method), 25
 next() (pymadx.Builder.Machine method), 21
 next() (pymadx.Data.Tfs method), 26
 NonZeroAperture() (in module pymadx.Data), 23

P

Plot() (pymadx.Data.Aperture method), 22
 Plot() (pymadx.Data.Tfs method), 25
 Plot() (pymadx.Ptc.Inrays method), 27
 PlotCentroids() (pymadx.Data.Tfs method), 25
 PlotInrays() (in module pymadx.Ptc), 27
 PlotN1() (pymadx.Data.Aperture method), 22
 PlotSigma() (pymadx.Data.Tfs method), 25
 PrintMADXApertureTypes() (in module pymadx.Data), 23
 PtcAnalysis (class in pymadx.PtcAnalysis), 28
 pymadx (module), 19
 pymadx.Beam (module), 19
 pymadx.Builder (module), 20
 pymadx.Data (module), 21
 pymadx.Plot (module), 26
 pymadx.Ptc (module), 27
 pymadx.PtcAnalysis (module), 28

R

RemoveAboveValue() (pymadx.Data.Aperture method), 22
 RemoveBelowValue() (pymadx.Data.Aperture method), 22
 RemoveDuplicateSPositions() (pymadx.Data.Aperture method), 22

RemoveNoApertureTypeEntries() (pymadx.Data.Aperture method), 22
 RenameElement() (pymadx.Data.Tfs method), 25
 ReplaceType() (pymadx.Data.Aperture method), 22
 ReportPopulations() (pymadx.Data.Tfs method), 25
 ReturnBeamString() (pymadx.Beam.Beam method), 19
 ReturnPtcString() (pymadx.Beam.Beam method), 19
 ReturnTwissString() (pymadx.Beam.Beam method), 19

S

Sampler (class in pymadx.Builder), 21
 SamplerLoop() (pymadx.PtcAnalysis.PtcAnalysis method), 28
 SetDistributionType() (pymadx.Beam.Beam method), 19
 SetEnergy() (pymadx.Beam.Beam method), 19
 SetParticleType() (pymadx.Beam.Beam method), 19
 SetT0() (pymadx.Beam.Beam method), 19
 SetX0() (pymadx.Beam.Beam method), 19
 SetXP0() (pymadx.Beam.Beam method), 19
 SetY0() (pymadx.Beam.Beam method), 20
 SetYP0() (pymadx.Beam.Beam method), 20
 SetZeroTolerance() (pymadx.Data.Aperture method), 22
 ShouldSplit() (pymadx.Data.Aperture method), 22
 Sigma() (in module pymadx.Plot), 27
 SplitElement() (pymadx.Data.Tfs method), 25
 Statistics() (pymadx.Ptc.Inrays method), 27
 Survey() (in module pymadx.Plot), 27

T

Tfs (class in pymadx.Data), 23

W

WrapAroundElement() (pymadx.Data.Tfs method), 26
 Write() (pymadx.Builder.Machine method), 21
 Write() (pymadx.Ptc.Inrays method), 27
 WriteInrays() (in module pymadx.Ptc), 27
 WriteMachine() (in module pymadx.Builder), 21
 WriteToFile() (pymadx.Beam.Beam method), 20

Z

ZeroAperture() (in module pymadx.Data), 26