



EQUIPMENT AUTOMATION PHASES

RELEASE 10.01.00

FUNCTIONAL REQUIREMENT SPECIFICATION

PUBLICATION PSFRSEA-RM006A-EN-E-MARCH-2021

Supersedes publication PSFRSEA-RM005B-EN-E



Contact Rockwell See contact information provided in your maintenance contract.

Copyright Notice © 2021 Rockwell Automation Technologies, Inc. All rights reserved.
This document and any accompanying Rockwell Software products are copyrighted by Rockwell Automation Technologies, Inc. Any reproduction and/or distribution without prior written consent from Rockwell Automation Technologies, Inc. is strictly prohibited. Please refer to the license agreement for details.

Trademark Notices FactoryTalk, PharmaSuite, Rockwell Automation, Rockwell Software, and the Rockwell Software logo are registered trademarks of Rockwell Automation, Inc.

The following logos and products are trademarks of Rockwell Automation, Inc.:

FactoryTalk Shop Operations Server, FactoryTalk ProductionCentre, FactoryTalk Administration Console, FactoryTalk Automation Platform, and FactoryTalk Security.
Operational Data Store, ODS, Plant Operations, Process Designer, Shop Operations, Rockwell Software CPGSuite, and Rockwell Software AutoSuite.

Other Trademarks ActiveX, Microsoft, Microsoft Access, SQL Server, Visual Basic, Visual C++, Visual SourceSafe, Windows, Windows 7 Professional, Windows 10, Windows Server 2008, Windows Server 2012, and Windows Server 2016 are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Adobe, Acrobat, and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

ControlNet is a registered trademark of ControlNet International.

DeviceNet is a trademark of the Open DeviceNet Vendor Association, Inc. (ODVA).

Ethernet is a registered trademark of Digital Equipment Corporation, Intel, and Xerox Corporation.

OLE for Process Control (OPC) is a registered trademark of the OPC Foundation.

Oracle, SQL*Net, and SQL*Plus are registered trademarks of Oracle Corporation.

All other trademarks are the property of their respective holders and are hereby acknowledged.

Warranty This product is warranted in accordance with the product license. The product's performance may be affected by system configuration, the application being performed, operator control, maintenance, and other related factors. Rockwell Automation is not responsible for these intervening factors. The instructions in this document do not cover all the details or variations in the equipment, procedure, or process described, nor do they provide directions for meeting every possible contingency during installation, operation, or maintenance. This product's implementation may vary among users.

This document is current as of the time of release of the product; however, the accompanying software may have changed since the release. Rockwell Automation, Inc. reserves the right to change any information contained in this document or the software at any time without prior notice. It is your responsibility to obtain the most current information available from Rockwell when installing or using this product.

-
-
- FT PharmaSuite® 10.01.00 - Functional Requirement Specification Equipment Automation Phases
-
-

Chapter 1	Introduction	1
	Typographical Conventions	1
Chapter 2	Get OPC Values Phase (SR0341+)	3
	Layout	4
	Representation during Execution (SR0341.1+)	4
	Representation in Navigator (SR0341.4+).....	7
	Representation in Sub-report (SR0341.5+)	7
	Business Logic (SR0341.2+).....	8
	Phase Mode	8
	Main Path	9
	Process Parameters (SR0341.8+)	12
	Boolean Property Bundle	15
	Numeric Property Bundle	17
	String Property Bundle.....	19
	Exceptions (SR0341.3+).....	21
	System-triggered Exceptions (SR0341.3.2+).....	21
	User-triggered Exceptions (SR0341.3.1+)	23
	Post-completion Exceptions	28
	Information Messages (SR0341.3.4+)	29
	Questions	29
	Decisions	29
	Error Messages (SR0341.3.6+)	30
	Get Property-specific Error Messages (Pre-reading)	30
	Get Property-specific Error Messages (Reading).....	31

Phase Completion-specific Error Messages	32
User-triggered Exception-specific Error Messages	32
Output Variables (SR0341.9+)	33
Boolean Property Bundle	34
Numeric Property Bundle	35
String Property Bundle.....	36
Performance (SR0341.12+).....	36
Performance of Get Activity (SR0341.12.1)	36
Chapter 3 Set OPC Values Phase (SR0342+).....	37
Layout	38
Representation during Execution (SR0342.1+)	38
Representation in Navigator (SR0342.4+).....	41
Representation in Sub-report (SR0342.5+)	41
Business Logic (SR0342.2+).....	42
Phase Mode	42
Main Path	44
Process Parameters (SR0342.8+)	47
Boolean Property Bundle	50
Numeric Property Bundle	51
String Property Bundle.....	52
Exceptions (SR0342.3+).....	52
System-triggered Exceptions	52
User-triggered Exceptions (SR0342.3.1+)	52
Post-completion Exceptions	57
Information Messages	58
Questions	58
Decisions	58
Error Messages (SR0342.3.6+)	58
Set Property-specific Error Messages (Pre-writing)	58
Set Property-specific Error Messages (Writing)	60
Phase Completion-specific Error Messages	61

User-triggered Exception-specific Error Messages	62
Output Variables (SR0342.9+)	63
Boolean Property Bundle	64
Numeric Property Bundle	65
String Property Bundle.....	66
Performance (SR0342.12+).....	66
Performance of Set Activity (SR0342.12.1).....	66
Chapter 4 Monitor Numeric Value Phase (SR0360+).....	67
Layout	68
Representation during Execution (SR0360.1+)	68
Representation in Navigator (SR0360.4+).....	70
Representation in Sub-report (SR0360.5+)	70
Business Logic (SR0360.2+).....	71
Process Parameters (SR0360.8+)	72
Exceptions (SR0360.3+).....	78
System-triggered Exceptions (SR0360.3.2+).....	78
User-triggered Exceptions (SR0360.3.1+).....	80
Post-completion Exceptions	81
Information Messages	81
Questions	81
Decisions	81
Error Messages (SR0360.3.6+)	82
Output Variables (SR0360.9+)	83
Chapter 5 Get Alarms Phase (SR0365+)	85
Layout	86
Representation during Execution (SR0365.1+)	86
Representation in Navigator (SR0365.4+).....	88
Representation in Sub-report (SR0365.5+)	88
Business Logic (SR0365.2+).....	89
Process Parameters (SR0365.8+)	90

Exceptions (SR0365.3+).....	95
System-triggered Exceptions (SR0365.3.2+).....	95
User-triggered Exceptions.....	97
Post-completion Exceptions	97
Information Messages	97
Questions	97
Decisions	97
Error Messages (SR0365.3.6+)	97
Output Variables (SR0365.9+)	99
Chapter 6 Show Historical Data Chart Phase (SR0110+)	101
Layout	102
Representation during Execution (SR0110.1+)	102
Representation in Navigator (SR0110.4+).....	103
Representation in Sub-report (SR0110.5+)	104
Business Logic (SR0110.2+).....	105
Process Parameters (SR0110.8+)	107
Exceptions (SR0110.3+).....	113
System-triggered Exceptions	113
User-triggered Exceptions (SR0110.3.1+)	113
Post-completion Exceptions	114
Information Messages	114
Questions	114
Decisions	114
Error Messages (SR0110.3.6+)	114
Output Variables (SR0110.9+)	116
Configuration Keys (SR0110.11+)	117
Performance (SR0110.12+).....	121
Performance of Chart Rendering (SR0110.12.1)	121

Chapter 7	Reference Documents	123
Chapter 8	Document Information	125
	Approval	125
	Version Information	125
	Revision History	126
Index	129

-
-
- FT PharmaSuite® 10.01.00 - Functional Requirement Specification Equipment Automation Phases
-
-

Figure 1: Get OPC values during execution	4
Figure 2: Set OPC values during execution.....	38
Figure 3: Monitor numeric value during execution	68
Figure 4: Get alarms during execution	86
Figure 5: Show historical data chart during execution.....	102

-
-
- FT PharmaSuite® 10.01.00 - Functional Requirement Specification Equipment Automation Phases
-
-

Introduction

This document details the requirements of the functions implemented by the phases specific to equipment automation integration. The phases are executed in the Production Execution Client of PharmaSuite.

Each requirement is composed of a name and a unique identifier (e.g. Instruction (SR0341.8.1)). If a requirement's meaning is for requirement grouping only, the identifier is appended by a plus sign (e.g. Process parameters (SR0341.8+)).

For requirements with **Framework capability** as identifier, see "Functional Requirement Specification Execution Framework" for their unique identifier, [A1] (page 123).

The revision history (page 126) lists the changes made to the document with PharmaSuite 9.1 as the comparison baseline. Changes related to a requirement are marked as "Editorial", "Update", "New", or "Deleted", changes to the additional context information are marked as "Context information-related".

Typographical Conventions

This documentation uses typographical conventions to enhance the readability of the information it presents. The following kinds of formatting indicate specific information:

Bold typeface	Designates user interface texts, such as <ul style="list-style-type: none">■ window and dialog titles■ menu functions■ panel, tab, and button names■ box labels■ object properties and their values (e.g. status).
Monospaced typeface	Designates code examples.

-
-
- FT PharmaSuite® 10.01.00 - Functional Requirement Specification Equipment Automation Phases
-
-

Get OPC Values Phase (SR0341+)

The **Get OPC values** phase allows to read up to 50 tag values of one equipment entity from the automation layer. It supports the following data types:

- BigDecimal Value (Double, Float, Integer),
- Boolean Value: choice between Yes and No (`true` and `false`), and
- String Value.

An example use case is:

- Verify parameters of a mixer
With one button tap, an operator can retrieve the values of all relevant set points of a mixer from the automation layer to check them against defined limits. Any violation can be tracked as an exception. Finally, the mixer speed is passed on to a subsequent phase for calculation or decision purposes.
 - Mixer speed should range between 400 rpm and 1000 rpm.
 - HeatingControl should be set to Yes.
 - HeatingTargetTemp should be 55 °C.
 - HeatingProfile should be 7.
 - HMI_InstructionText1 should be "Control visual foam situation".

Different phase modes enable the usage in various situations that can occur during processing:

- In the **Manual completion** mode, the operator manually triggers reading the values.
- In the **Automatic completion** mode, the phase reads the values and is completed automatically without any operator interaction.

The affected equipment entity, the affected properties, their values, and their timestamps are stored in the batch record, thereby becoming available for documentation purposes in the sub-report and batch report (page 7).

Anomalies that occur during processing are covered by the phase exception handling (page 21) (e.g. equipment entity is not available).


After completion the phase displays the affected properties and their values in the Execution Window.

The Navigator displays the identifier of the affected equipment entity.

Retrieve the process values from the tablet press.

Entity: **TabletPress_AM / Automated Tablet Press**

Property	Expected	Limits (LL L	Value	Limits (H HH)	UoM	Timestamp
Compressing Force		65 ---	71	--- 75		04/14/2016 12:18:32 PM CEST
Tablet Dimensions		8.8 8.9	9.1	9.2 9.3 mm		04/14/2016 12:18:32 PM CEST
Tablet Form	Yes		Yes			04/14/2016 12:18:32 PM CEST
Batch ID (TP)	BX2		BX2			04/14/2016 12:18:32 PM CEST

Get



Confirm


Figure 1: Get OPC values during execution

Layout

The phase provides individual layouts for its representation during execution (page 4), in the Navigator (page 7), and in the sub-report (page 7).

Representation during Execution (SR0341.1+)

The representation during execution depends on the phase mode.

Preview mode (SR0341.1.1)

1. **<Instruction text>**
(taken from **Instruction (SR0341.8.1)** process parameter (page 14))
2. **Entity:**
3. List of up to 50 property types in the order of the property-specific process parameters:
 - **Boolean Property Bundle:**
List of boolean properties
(taken from **Boolean property - Master (bundle identifier) (SR0341.8.12)** process parameter (page 15))
 - **Numeric Property Bundle:**
List of numeric properties
(taken from **Numeric property - Master (bundle identifier) (SR0341.8.5)** process parameter (page 17))
 - **String Property Bundle:**
List of string properties
(taken from **String property - Master (bundle identifier) (SR0341.8.9)** process parameter (page 20))
4. **Get** button (disabled).
5. **Confirm** button (disabled).

Active mode (SR0341.1.2)

1. Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
2. <Instruction text>
(taken from **Instruction (SR0341.8.1)** process parameter (page 14))
3. Entity: <equipment entity identifier> / <equipment entity short description>
(taken from **Identified equipment entity (SR0341.8.2)** process parameter (page 14))
4. List of up to 50 property types in the order of the property-specific process parameters:
 - **Boolean Property Bundle:**
List of boolean properties
(taken from **Boolean property - Master (bundle identifier) (SR0341.8.12)** process parameter (page 15))
 - For the representation of the value, see **Get values (SR0341.2.3)** function (page 9).
 - Last change timestamp per tag from automation layer or **Manual** in case a value has been overridden by using the **Override recorded value (SR0341.3.1.3)** user-triggered exception (page 23).
 - **Numeric Property Bundle:**
List of numeric properties
(taken from **Numeric property - Master (bundle identifier) (SR0341.8.5)** process parameter (page 17))
 - For the representation of the value, see **Get values (SR0341.2.3)** function (page 9).
 - Last change timestamp per tag from automation layer or **Manual** in case a value has been overridden by using the **Override recorded value (SR0341.3.1.1)** user-triggered exception (page 25).
 - **String Property Bundle:**
List of string properties
(taken from **String property - Master (bundle identifier) (SR0341.8.9)** process parameter (page 20))
 - For the representation of the value, see **Get values (SR0341.2.3)** function (page 9).
 - Last change timestamp per tag from automation layer or **Manual** in case a value has been overridden by using the **Override recorded value (SR0341.3.1.2)** user-triggered exception (page 26).

5. **Get** button.
6. **Confirm** button.

Completed mode (SR0341.1.3)

1. Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
2. <Instruction text>
(taken from **Instruction (SR0341.8.1)** process parameter (page 14))
3. Entity: <equipment entity identifier> / <equipment entity short description>
(taken from **Identified equipment entity (SR0341.8.2)** process parameter (page 14))
4. List of up to 50 property types in the order of the property-specific process parameters:
 - **Boolean Property Bundle:**
List of boolean properties
(taken from **Boolean property - Master (bundle identifier) (SR0341.8.12)** process parameter (page 15))
 - Last change timestamp per tag from automation layer or **Manual** in case a value has been overridden by using the **Override recorded value (SR0341.3.1.3)** user-triggered exception (page 23).
 - **Numeric Property Bundle:**
List of numeric properties
(taken from **Numeric property - Master (bundle identifier) (SR0341.8.5)** process parameter (page 17))
 - Last change timestamp per tag from automation layer or **Manual** in case a value has been overridden by using the **Override recorded value (SR0341.3.1.1)** user-triggered exception (page 25).
 - **String Property Bundle:**
List of string properties
(taken from **String property - Master (bundle identifier) (SR0341.8.9)** process parameter (page 20))
 - Last change timestamp per tag from automation layer or **Manual** in case a value has been overridden by using the **Override recorded value (SR0341.3.1.2)** user-triggered exception (page 26).
5. **Get** button (disabled).
6. **Confirm** button (completed).

Representation in Navigator (SR0341.4+)

The Navigator provides the following details:

Phase column (Framework capability)

- <Phase name>
- Example:
Get mixer values

Information column (SR0341.4.1)

- <Identifier of affected equipment entity>
- Example: MixerA12

Action column

- There are no actions available.

Representation in Sub-report (SR0341.5+)

The sub-report contains the following information:

Common sub-report elements (Framework capability)

- <Start time>
- <Completion time>
- <Unit procedure> / <operation> / <phase>
- <Work center> / <station> / <device> - <phase completion user>

Sub-report elements (SR0341.5.1)

- Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
- Instruction text
- Entity (identifier and short description)
- Table of values that have been read during execution (in the order of the property-specific process parameters).
 - List of boolean properties
 - Identifier
 - Expected value
 - Timestamp

- List of numeric properties
 - Identifier
 - Limits (LL | L)
 - Value
 - Limits (H | HH)
 - UoM
 - Timestamp
- List of string properties
 - Identifier
 - Expected value
 - Value
 - Timestamp

In the grid, the phase displays "N/A" for those entries that cannot be provided due to their context (e.g. a unit of measure for a boolean value) or that have not been defined during recipe or workflow design (e.g. a lower limit for a numeric value).

Business Logic (SR0341.2+)

The phase implements the following business logic.

Phase Mode

Business logic related to phase modes.

Manual completion mode (SR0341.2.1)

- Function: **Manual completion** mode of phase
- Type: Phase mode
- Trigger: Phase becomes active
- Postcondition: Phase is active

Step	#	Description
Phase activation	10	Phase displays its user interface according to the Active mode (SR0341.1.2) layout (page 5).
Operator interaction	20	The Get button reads the tag values, see Get values (SR0341.2.3) function (page 9). Each time the Get button is used, all of the tag values are read unless they have already been read or overridden.

Step	#	Description
Phase completion	30	See Confirm phase (SR0341.2.4) function (page 11).

Automatic completion mode (SR0341.2.2)

- Function: **Automatic completion** mode of phase
- Type: Phase mode
- Trigger: Phase becomes active
- Postcondition: Phase is active

Step	#	Description
Phase activation	10	Phase displays its user interface according to the Active mode (SR0341.1.2) layout (page 5).
Phase gets values	20	See Get values (SR0341.2.3) function (page 9). <ul style="list-style-type: none"> ■ If no error has occurred, continue with the Confirm phase (SR0341.2.4) function (page 11). ■ If an error or warning has occurred, phase must be completed manually. See Manual completion (SR0341.2.1) mode (page 8).

Main Path

Business logic related to the main path:

Get values (SR0341.2.3)

- Function: Read tag values
- Type: Main path
- Trigger: Operator gets values or **Automatic completion (SR0341.2.2)** mode (page 9) is active
- Postcondition: Phase is active

Step	#	Description
Phase checks manual override	10	If a value has been overridden with the Override recorded value (Boolean property) (SR0341.3.1.3) user-triggered exception (page 23), Override recorded value (Numeric property) (SR0341.3.1.1) user-triggered exception (page 25), or Override recorded value (String property) (SR0341.3.1.2) user-triggered exception (page 26) and the exception has been signed, the Get action cannot be executed for such a value; phase displays Override value recorded (SR0341.3.4.1) information message (page 29).

Step	#	Description
Phase checks for read tag values	15	If a tag value has already been read from the automation layer, the Get action is not executed for the value.
Phase gets values	20	<p>Phase reads the remaining tag values and disables the Get button as soon as there are no tag values that have not yet been read or overridden.</p> <p>The order of the Boolean property - Master (bundle identifier) (SR0341.8.12) process parameters (page 15), Numeric property - Master (bundle identifier) (SR0341.8.5) process parameters (page 17), and String property - Master (bundle identifier) (SR0341.8.9) process parameters (page 20) defines the read sequence of property tag values. Process parameters without property types are skipped.</p> <p>If one of the following issues occurs, phase behavior is as follows:</p>
Property cannot be read due to a pre-reading issue	20.1	<ul style="list-style-type: none"> ■ Phase does not display a value, ■ changes cell background to red, ■ appends "(X)" to the "empty value", and ■ displays Invalid configuration error (SR0341.3.6.1) error message (page 30).
Property cannot be read due to an automation integration issue or tag data quality is rated as bad	20.2	<ul style="list-style-type: none"> ■ Phase does not display a value, ■ changes cell background to red, ■ appends "(X)" to the "empty value", and ■ displays System error (SR0341.3.6.4) error message (page 31), No get result error (SR0341.3.6.5) error message (page 31), or Automation error (SR0341.3.6.3) error message (page 30).

Step	#	Description
Validation	20.3	<p>➤ Boolean Property Bundle Phase checks the boolean value against the settings of the Expected value definition (SR0341.8.14) process parameter (page 16). If the check is violated, phase creates the Limit violation (SR0341.3.2.1) system-triggered exception (page 21) for a boolean value.</p> <p>➤ Numeric Property Bundle Phase checks the numeric value against the settings of the Limit definition (SR0341.8.8) process parameter (page 19). Limits are checked in the following order: LL/HH » L/H. If the check is violated, phase creates the Limit violation (SR0341.3.2.1) system-triggered exception (page 21) for a numeric value.</p> <p>➤ String Property Bundle Phase checks the string value against the settings of the Expected value definition (SR0341.8.11) process parameter (page 21). If the check is violated, phase creates the Limit violation (SR0341.3.2.1) system-triggered exception (page 21) for a string value.</p> <p>If a check is violated, phase changes cell background to yellow. After the exception has been signed, phase changes cell background to the default and adds the exception marker to the value's cell.</p> <p>If no check is violated, phase returns to the Active mode (SR0341.1.2) layout (page 5).</p>
	30	<p>If applicable, continue with the Override recorded value (Boolean property) (SR0341.3.1.3) user-triggered exception (page 23), Override recorded value (Numeric property) (SR0341.3.1.1) user-triggered exception (page 25), or Override recorded value (String property) (SR0341.3.1.2) user-triggered exception (page 26).</p> <p>Phase can be completed with the Confirm phase (SR0341.2.4) function (page 11).</p>

Confirm phase (SR0341.2.4)

- Function: Completion of phase
- Type: Main path
- Trigger: Operator confirms phase or **Automatic completion (SR0341.2.2)** mode (page 9) is active
- Postcondition: Phase is completed

Step	#	Description
In Manual completion (SR0341.2.1) mode (page 8): Operator confirms phase	10	Operator confirms the tag values.
Phase performs completion checks	20	<p>If one of the following issues occurs, phase cannot be completed:</p> <ul style="list-style-type: none"> ■ In Manual completion (SR0341.2.1) mode (page 8), the Get button has not been used. ■ Not all values whose tags are enabled have been read. <p>Phase displays Recorded values incomplete (SR0341.3.6.7) error message (page 32).</p> <p>If a validation check fails, phase creates the Limit violation (SR0341.3.2.1) system-triggered exception (page 21).</p>
Phase completion	30	Phase is completed.

Process Parameters (SR0341.8+)

The following process parameters define the behavior of the phase.

INSTRUCTION TABLE-SPECIFIC PARAMETERS

Instruction table definition (Framework capability)

Attribute	Type	Comment
Table layout	Choice list	Defines the layout of the instruction table holding the instruction texts. Available settings: 1 column, 2 columns, 3 columns, 4 columns, 5 columns . Default setting: 1 column .
First column narrow	Boolean	Defines if the first column of the table shall be narrow.
Show all borders	Boolean	Defines if the borders of the table shall be visible.

Instruction table text (Framework capability)

Attribute	Type	Comment
Column 1	HTML text	Instruction text to be displayed in a column. Restriction: Maximum length is 2000 characters (including HTML tags).
Column 2	HTML text	
Column 3	HTML text	
Column 4	HTML text	
Column 5	HTML text	

INSTRUCTION LINK-SPECIFIC PARAMETERS

Instruction text with links (Framework capability)

Attribute	Type	Comment
Instruction text	HTML text	Instruction text to be displayed. For any text enclosed in curly brackets you can define a hyperlink with the Instruction link definition process parameter (page 13). Example: Refer to {SOP1270} for guidance. Maximum length is 2000 characters (including HTML tags).

Instruction link definition (Framework capability)

Attribute	Type	Comment
Link text	Text	Text to be used as link. For any text enclosed in curly brackets within the instruction text you can define a link with the Link URL attribute. Including the brackets in the link text is optional. Maximum length is 80 characters.

Attribute	Type	Comment
Link URL	Text	URL of the file to be displayed. The link opens the external application assigned to the file type by the operating system. Maximum length is 256 characters.

BASIC PARAMETERS

Instruction (SR0341.8.1)

Attribute	Type	Comment
Text	HTML text	Instruction text to be displayed. Restriction: Maximum length is 2000 characters (including HTML tags).

Identified equipment entity (SR0341.8.2)

Attribute	Type	Comment
Equipment object	Reference	Reference to the output of a preceding phase that provides an identified equipment entity.

Mode (SR0341.8.3)

Attribute	Type	Comment
Mode	Choice list	Defines the processing mode. Manual completion (default): Operator confirms the phase. Automatic completion: Phase automatically gets the property values and is completed.

CONFIGURATION OF USER-TRIGGERED EXCEPTIONS

Override recorded value (SR0341.8.4)

Attribute	Type	Comment
Risk assessment	Choice list	Defines the risk level of the exception and thus controls the related signature privilege. Available settings: None , Low , Low (mandatory comment) , Medium , Medium (mandatory comment) , High , High (mandatory comment) . Default setting: High .
Exception text	Text	Defines the exception description used during exception handling and within the batch record. Maximum length is 250 characters.

See also **Override recorded value (Numeric property bundle) (SR0341.3.1.1)** user-triggered exception (page 25), **Override recorded value (Boolean property bundle) (SR0341.3.1.3)** user-triggered exception (page 23), and **Override recorded value (String property bundle) (SR0341.3.1.2)** user-triggered exception (page 26).

Boolean Property Bundle**Bundle process parameters (Framework capability)**

For the master process parameter of a bundle, its internal identifier is populated from the bundle identifier.

For all other process parameters of the bundle, their internal identifier is a concatenation of the bundle identifier and the process parameter name.

This framework capability refers to **Bundle Process Parameters (SR3146.9.7.4.1)** in "Functional Requirement Specification Recipe and Workflow Management" [A2] (page 123).

Master (Bundle identifier) (SR0341.8.12)

Attribute	Type	Comment
Property	String	Equipment property to be read.

Property Selection editor (Framework capability)

The system provides a Property Selection editor for selecting an equipment property based on its data type (numeric, string, boolean).

CONFIGURATION OF SYSTEM-TRIGGERED EXCEPTIONS

Expected value configuration (SR0341.8.13)

Attribute	Type	Comment
Enabled	Flag	Controls if a check is performed. If so, ensure that the Value attribute of the Expected value definition process parameter (page 16) is set. If it is not set, the validation will fail. Default setting: No .
Risk assessment	Choice list	Defines the risk level of the exception and thus controls the related signature privilege. Available settings: None , Low , Low (mandatory comment) , Medium , Medium (mandatory comment) , High , High (mandatory comment) . Default setting: High .
Exception text	Text	Defines the exception description used during exception handling and within the batch record. Maximum length is 250 characters.

See also **Override recorded value (SR0341.3.1.3)** user-triggered exception (page 23) and **Limit violation (SR0341.3.2.1)** system-triggered exception (page 21).

Expected value definition (SR0341.8.14)

Attribute	Type	Comment
Value	Choice list	Defines the expected value. Available settings: N/A , Yes , No . Default setting: N/A .

See also **Override recorded value (SR0341.3.1.3)** user-triggered exception (page 23) and **Limit violation (SR0341.3.2.1)** system-triggered exception (page 21).

Numeric Property Bundle

Bundle process parameters (Framework capability)

For the master process parameter of a bundle, its internal identifier is populated from the bundle identifier.

For all other process parameters of the bundle, their internal identifier is a concatenation of the bundle identifier and the process parameter name.

This framework capability refers to **Bundle Process Parameters (SR3146.9.7.4.1)** in "Functional Requirement Specification Recipe and Workflow Management" [A2] (page 123).

Master (Bundle identifier) (SR0341.8.5)

Attribute	Type	Comment
Property	String	Equipment property to be read.

Property Selection editor (Framework capability)

The system provides a Property Selection editor for selecting an equipment property based on its data type (numeric, string, boolean).

CONFIGURATION OF SYSTEM-TRIGGERED EXCEPTIONS

L-H configuration (SR0341.8.6)

If the checks are activated for the available limit ranges, the checks are performed in the following order:

1. LL-HH (defined with the **LL-HH configuration (SR0341.8.7)** process parameter (page 18))
2. L-H

Attribute	Type	Comment
Enabled	Flag	Controls if a check is performed. If so, ensure that the L limit or H limit attributes of the Limit definition process parameter (page 19) are set. If they are not set, the validation will fail. Default setting: No .

Attribute	Type	Comment
Risk assessment	Choice list	Defines the risk level of the exception and thus controls the related signature privilege. Available settings: None , Low , Low (mandatory comment) , Medium , Medium (mandatory comment) , High , High (mandatory comment) . Default setting: High .
Exception text	Text	Defines the exception description used during exception handling and within the batch record. Maximum length is 250 characters.

See also **Override recorded value (SR0341.3.1.1)** user-triggered exception (page [25](#)) and **Limit violation (SR0341.3.2.1)** system-triggered exception (page [21](#)).

LL-HH configuration (SR0341.8.7)

If the checks are activated for the available limit ranges, the checks are performed in the following order:

1. LL-HH
2. L-H (defined with the **L-H configuration (SR0341.8.6)** process parameter (page [17](#)))

Attribute	Type	Comment
Enabled	Flag	Controls if a check is performed. If so, ensure that the LL limit or HH limit attributes of the Limit definition process parameter (page 19) are set. If they are not set, the validation will fail. Default setting: No .
Risk assessment	Choice list	Defines the risk level of the exception and thus controls the related signature privilege. Available settings: None , Low , Low (mandatory comment) , Medium , Medium (mandatory comment) , High , High (mandatory comment) . Default setting: High .

Attribute	Type	Comment
Exception text	Text	Defines the exception description used during exception handling and within the batch record. Maximum length is 250 characters.

See also **Override recorded value (SR0341.3.1.1)** user-triggered exception (page 25) and **Limit violation (SR0341.3.2.1)** system-triggered exception (page 21).

Limit definition (SR0341.8.8)

The following rule applies to the attributes:

- $LL\ limit < L\ limit < H\ limit < HH\ limit$

Attribute	Type	Comment
LL limit	BigDecimal (Double, Float, Integer)	Define the values of the lower limits (including the values themselves).
L limit	BigDecimal (Double, Float, Integer)	
H limit	BigDecimal (Double, Float, Integer)	Define the values of the upper limits (including the values themselves).
HH limit	BigDecimal (Double, Float, Integer)	

See also **Override recorded value (SR0341.3.1.1)** user-triggered exception (page 25) and **Limit violation (SR0341.3.2.1)** system-triggered exception (page 21).

String Property Bundle

Bundle process parameters (Framework capability)

For the master process parameter of a bundle, its internal identifier is populated from the bundle identifier.

For all other process parameters of the bundle, their internal identifier is a concatenation of the bundle identifier and the process parameter name.

This framework capability refers to **Bundle Process Parameters (SR3146.9.7.4.1)** in "Functional Requirement Specification Recipe and Workflow Management" [A2] (page 123).

Master (Bundle identifier) (SR0341.8.9)

Attribute	Type	Comment
Property	String	Equipment property to be read.

Property Selection editor (Framework capability)

The system provides a Property Selection editor for selecting an equipment property based on its data type (numeric, string, boolean).

CONFIGURATION OF SYSTEM-TRIGGERED EXCEPTIONS

Expected value configuration (SR0341.8.10)

Attribute	Type	Comment
Enabled	Flag	Controls if a check is performed. If so, ensure that the Value attribute of the Expected value definition process parameter (page 21) is set. If it is not set, the validation will fail. Default setting: No .
Risk assessment	Choice list	Defines the risk level of the exception and thus controls the related signature privilege. Available settings: None , Low , Low (mandatory comment) , Medium , Medium (mandatory comment) , High , High (mandatory comment) . Default setting: High .
Exception text	Text	Defines the exception description used during exception handling and within the batch record. Maximum length is 250 characters.

See also **Override recorded value (SR0341.3.1.2)** user-triggered exception (page 26) and **Limit violation (SR0341.3.2.1)** system-triggered exception (page 21).

Expected value definition (SR0341.8.11)

Attribute	Type	Comment
Value	Text	Defines the expected value. Maximum length is 2000 characters.

See also **Override recorded value (SR0341.3.1.2)** user-triggered exception (page 26) and **Limit violation (SR0341.3.2.1)** system-triggered exception (page 21).

Exceptions (SR0341.3+)

The phase supports user-defined, user-triggered (page 23), system-triggered (page 21), and post-completion exceptions (page 28) and their configuration by means of process parameters (page 12).

User-defined exceptions cannot be configured by process parameters since they are provided by the framework and independent of phases.

System-triggered Exceptions (SR0341.3.2+)

A system-triggered exception is represented in a message dialog along with an **Exception** button, in the Exception Window as the read-only description of the exception, and in the batch report.

The following system-triggered exceptions are available.

Limit violation (SR0341.3.2.1)

If several checks fail during the execution of the **Get** action, the exceptions are combined and displayed in a single exception. The highest risk assessment of all related exceptions and its related signature privilege apply.

Representation of the exception:

- A violation of limits or expected values has occurred.
- List of up to 50 property types in the order of the property-specific process parameters:
 - **Boolean Property Bundle:**
 Exception text:
 <Exception text>
 (taken from **Expected value configuration (SR0341.8.13)** process parameter (page 16))
 Property: <property identifier>
 Expected value <expected value>

(taken from **Expected value definition (SR0341.8.14)** process parameter (page 16))

Actual value: <OPC value>

- Example:
Expected value violation confirmed.
Property: HeatingPerformed
Expected value: Yes
Actual value: No

- **Numeric Property Bundle:**

Exception text:

<Exception text>

(taken from **L-H configuration (SR0341.8.6)** process parameter (page 17) or **LL-HH configuration (SR0341.8.7)** process parameter (page 18))

Property: <property identifier>

<Affected limit, L, LL, H, HH>: <limit value>

(taken from **Limit definition (SR0341.8.8)** process parameter (page 19))

Actual value: <OPC value>

- Example:
Limit violation confirmed.
Property: AgitatorSpeed
LL limit: 300 rpm
Actual value: 200 rpm

- **String Property Bundle:**

Exception text:

<Exception text>

(taken from **Expected value configuration (SR0341.8.10)** process parameter (page 20))

Property: <property identifier>

Expected value: <expected value>

(taken from **Expected value definition (SR0341.8.11)** process parameter (page 21))

Actual value: <OPC value>

- Example:
Expected value violation confirmed.
Property: VisualCheckResult
Expected value: Dark blue
Actual value: Light blue

Limit violation - Logic (SR0341.3.2.1.1)

- Trigger: Check has failed
- Postcondition: Exception is recorded

Step	#	Description
Operator accepts exceptional situation	10	Phase shows exception description to be signed.
Operator signs exception	20	Phase records the exception.

Multiple system-triggered exceptions (SR0341.3.2.2)

In case multiple system-triggered exceptions occur, only one combined exception (system-triggered exception) is recorded including information about all exceptions. The highest risk assessment of all related exceptions and its related signature privilege apply.

User-triggered Exceptions (SR0341.3.1+)

A user-triggered exception is represented in the list of available user-triggered exceptions in the Exception Window, as the description of the exception, and in the batch report.

The following user-triggered exceptions are available.

BOOLEAN PROPERTY BUNDLE

Override recorded value (SR0341.3.1.3)

The **Override recorded value** exception allows an operator to override the boolean value read from the entity.

There is one exception per boolean property.

Properties for which an error has been detected are displayed at the top of the list properties.

Representation during exception handling:

- Instruction:
 Override recorded value
 Current value: <current value>
 Override value: <value>
Confirm button.
- Exception text:
 <Exception text>
 (taken from **Override recorded value (SR0341.8.4)** process parameter (page 15))
 Property: <property identifier>
 Old value: <old value>
 New value: <new value>

- Example:
Value overridden.
Property: Infrared sensor on
Old value: True
New value: False

Override recorded value - Logic (SR0341.3.1.3.1)

- Trigger: Exception is selected
- Postcondition: Boolean value is set

Step	#	Description
Operator triggers exception	10	Phase displays Exception Window.
	20	Operator selects value.
Operator confirms exception	30	If the check is enabled, phase checks the boolean value against the settings of the Expected value definition (SR0341.8.14) process parameter (page 16).
	30.1	If the expected value is violated, phase displays a corresponding message dialog with an Exception button, the exception text (taken from Expected value configuration (SR0341.8.13) process parameter (page 16)), the property identifier, the affected limit, and the actual value.
Operator accepts exceptional situation	30.1.1	Phase displays only one combined exception (user-triggered exception), including both exception texts from the override-value-exception and from the violation of the expected value (see Limit violation (SR0341.3.2.1) system-triggered exception (page 21) for a boolean value).
Operator cancels exceptional situation	30.1.2	Phase requires the operator to sign an Exception canceled exception and then allows the operator to return to the user-triggered exception view (Step 20).
	30.2	If the expected value is not violated or no check applies, the override value-related exception is displayed.
	30.3	If the following issue occurs, phase displays an error message: <ul style="list-style-type: none"> ■ Override value is missing, No value overridden (SR0342.3.6.11) error message (page 32). Phase shows exception description to be signed according to Override recorded value (SR0341.8.4) process parameter (page 15).
Operator signs exception	40	Phase records the exception. Additionally, phase adds the exception marker to the value's cell in the Active mode (SR0341.1.2) layout (page 5).

NUMERIC PROPERTY BUNDLE

Override recorded value (SR0341.3.1.1)

The **Override recorded value** exception allows an operator to override the numeric value read from the entity.

There is one exception per numeric property.

Properties for which an error has been detected are displayed at the top of the list properties.

Representation during exception handling:

- Instruction:
 Override recorded values:
 Current value: <current value> <UoM>
 Override value: <new value> <UoM>
Confirm button.
- Exception text:
 <Exception text>
 (taken from **Override recorded value (SR0341.8.4)** process parameter (page 15))
 Property: <property identifier>
 Old value: <value> <UoM>
 New value: <value> <UoM>
- Example:
 Value overridden.
 Property: AgitatorSpeed
 Old value: 12.43 rpm
 New value: 12.93 rpm

Override recorded value - Logic (SR0341.3.1.1.1)

- Trigger: Exception is selected
- Postcondition: Numeric value is set

Step	#	Description
Operator triggers exception	10	Phase displays Exception Window.
	20	Operator enters values. If the following issue occurs, phase displays an error message: <ul style="list-style-type: none"> ■ Data format does not match, Invalid data format error (SR0341.3.6.8) error message (page 32).

Step	#	Description
Operator confirms exception	30	If the related check is enabled, phase checks the numeric value against the settings of the Limit definition (SR0341.8.8) process parameter (page 19). Limits are checked in the following order: LL/HH » L/H.
	30.1	If a limit is violated, phase displays a corresponding message dialog with an Exception button, the exception text (taken from L-H configuration (SR0341.8.6) process parameter (page 17) or LL-HH configuration (SR0341.8.7) process parameter (page 18)), the property identifier, the affected limit, and the actual value.
Operator accepts exceptional situation	30.1.1	Phase displays only one combined exception (user-triggered exception), including both exception texts from the override-value-exception and from the limit violation (see Limit violation (SR0341.3.2.1) system-triggered exception (page 21) for a numeric value).
Operator cancels exceptional situation	30.1.2	Phase requires the operator to sign an Exception canceled exception and then allows the operator to return to the user-triggered exception view (Step 20).
	30.2	If no limit is violated or no check applies, the override value-related exception is displayed.
	30.3	If the following issue occurs, phase displays an error message: <div> <div>■</div> <div>Override value is missing, No value overridden (SR0341.3.6.9) error message (page 33).</div> </div> Phase shows exception description to be signed according to Override recorded value (SR0341.8.4) process parameter (page 15).
Operator signs exception	40	Phase records the exception. Additionally, phase adds the exception marker to the value's cell in the Active mode (SR0341.1.2) layout (page 5).

STRING PROPERTY BUNDLE

Override recorded value (SR0341.3.1.2)

The **Override recorded value** exception allows an operator to override the string value read from the entity.

There is one exception per string property.

Properties for which an error has been detected are displayed at the top of the list properties.

Representation during exception handling:

- Instruction:
Override recorded value
Current value: <current value>
Override value: <value>
Confirm button.
- Exception text:
<Exception text>
(taken from **Override recorded value (SR0341.8.4)** process parameter (page 15))
Property: <property identifier>
Old value: <old value>
New value: <new value>
- Example:
Value overridden.
Property: HeatingPerformed
Old value: Temperature alarm
New value: High temperature alarm

Override recorded value - Logic (SR0341.3.1.2.1)

- Trigger: Exception is selected
- Postcondition: String value is set

Step	#	Description
Operator triggers exception	10	Phase displays Exception Window.
	20	Operator enters value.
Operator confirms exception	30	If the related check is enabled, phase checks the string value against the settings of the Expected value definition (SR0341.8.11) process parameter (page 21).
	30.1	If the expected value is violated, phase displays a corresponding message dialog with an Exception button, the exception text (taken from Expected value configuration (SR0341.8.10) process parameter (page 20)), the property identifier, the affected limit, and the actual value.
Operator accepts exceptional situation	30.1.1	Phase displays only one combined exception (user-triggered exception), including both exception texts from the override-value-exception and from the violation of the expected value (see Limit violation (SR0341.3.2.1) system-triggered exception (page 21) for a string value).

Step	#	Description
Operator cancels exceptional situation	30.1.2	Phase requires the operator to sign an Exception canceled exception and then allows the operator to return to the user-triggered exception view (Step 20).
	30.2	If the expected value is not violated or no check applies, the override value-related exception is displayed.
	30.3	If the following issue occurs, phase displays an error message: <div> <div>■</div> <div>Override value is missing, No value overridden (SR0341.3.6.10) error message (page 33).</div> </div> Phase shows exception description to be signed according to Override recorded value (SR0341.8.4) process parameter (page 15).
Operator signs exception	40	Phase records the exception. Additionally, phase adds the exception marker to the value's cell in the Active mode (SR0341.1.2) layout (page 5).

NOT BUNDLE-SPECIFIC

Multiple exceptions (SR0341.3.1.4)

In case an **Override recorded value (Numeric property) (SR0341.3.1.1)** user-triggered exception (page 25), **Override recorded value (String property) (SR0341.3.1.2)** user-triggered exception (page 26), or **Override recorded value (Boolean property) (SR0341.3.1.3)** user-triggered exception (page 23) coincides with the **Limit violation (SR0341.3.2.1)** system-triggered exception (page 21), only one combined exception (user-triggered exception) is recorded including information about all related exceptions. The highest risk assessment of all related exceptions and its related signature privilege apply.

Post-completion Exceptions

There are no post-completion exceptions available.

Information Messages (SR0341.3.4+)

Information messages are represented in an information dialog containing a message type-specific icon, the information message, and an **OK** button.

The following information messages are available to inform the operator about how to proceed.

Override value recorded (SR0341.3.4.1)

UI text	Comment
1. The Get action was not successful.	1. Message pack: PhaseEqmAIGetOPCValues<version> Message ID: ExecutionError_HeaderMsg
2. <empty string>	2. Message pack: PhaseEqmAIGetOPCValues<version> Message ID: BusinessLogic_ErrorCategory
3. Values have already been overridden manually.	3. Message pack: PhaseEqmAIGetOPCValues<version> Message ID: ValuesOverridden_WarningCategory
4. <list of tags>	4. Message pack: PhaseEqmAIGetOPCValues<version> Message ID: ReadPostcheck_NoGetAfterOverride_ErrorMsg Potential error cause: Get button is used after the Override recorded value (Boolean property) (SR0341.3.1.3) user-triggered exception (page 23), Override recorded value (Numeric property) (SR0341.3.1.1) user-triggered exception (page 25), or Override recorded value (String property) (SR0341.3.1.2) user-triggered exception (page 26) has been signed.

The **Details** button provides access to more specific technical information.

Questions

There are no questions available.

Decisions

There are no decisions available.

Error Messages (SR0341.3.6+)

Error messages are represented in an error message dialog containing a message type-specific icon, the error message, and an **OK** button.

They are composed of up to three levels:

1. header,
2. category, and
3. details (not always used).

The following error messages are available to inform the operator about error conditions.

Get Property-specific Error Messages (Pre-reading)

Invalid configuration error (SR0341.3.6.1)

UI text	Comment
<ol style="list-style-type: none"> 1. The Get action was not successful. 2. Please record the values manually. 	<ol style="list-style-type: none"> 1. Message pack: PhaseEqmAIGetOPCValues<version> Message ID: CheckBeforeExecuteError_HeaderMsg 2. Message pack: PhaseEqmAIGetOPCValues<version> Message ID: IrreparableExecution_ErrorCategory <p>Potential error cause:</p> <ul style="list-style-type: none"> ■ Tag is enabled, but the tag path is undefined. ■ The property to be read is not defined for the identified equipment entity.

The **Details** button provides access to more specific technical information.

Automation error (SR0341.3.6.3)

UI text	Comment
<ol style="list-style-type: none"> 1. The Get action was not successful. 2. Please record the values manually. 	<ol style="list-style-type: none"> 1. Message pack: PhaseEqmAIGetOPCValues<version> Message ID: ExecutionError_HeaderMsg 2. Message pack: PhaseEqmAIGetOPCValues<version> Message ID: IrreparableExecution_ErrorCategory <p>Potential error cause:</p> <ul style="list-style-type: none"> ■ Referenced equipment entity is undefined (Null). ■ The quality of the read tag value is rated as bad.

The **Details** button provides access to more specific technical information.

Get Property-specific Error Messages (Reading)

System error (SR0341.3.6.4)

UI text	Comment
1. The Get action was not successful. 2. Please record the values manually.	1. Message pack: PhaseEqmAIGetOPCValues<version> Message ID: ExecutionError_HeaderMsg 2. Message pack: PhaseEqmAIGetOPCValues<version> Message ID: Other_ErrorCategory Potential error cause: <ul style="list-style-type: none"> ■ Automation Integration server cannot be reached. ■ Automation Integration server read failure. ■ Live Data server read failure. ■ The quality of the read tag value is rated as bad.

The **Details** button provides access to more specific technical information.

No get result error (SR0341.3.6.5)

UI text	Comment
1. The Get action was not successful. 2. Please record the values manually.	1. Message pack: PhaseEqmAIGetOPCValues<version> Message ID: ExecutionError_HeaderMsg 2. Message pack: PhaseEqmAIGetOPCValues<version> Message ID: IrreparableExecution_ErrorCategory Potential error cause: <ul style="list-style-type: none"> ■ The return value of the Automation Integration server does not contain an entry for at least one defined and valid property tag path. ■ The quality of the read tag value is rated as bad. ■ Health, simulation, or maintenance verification failed.

The **Details** button provides access to more specific technical information.

Phase Completion-specific Error Messages

Recorded values incomplete (SR0341.3.6.7)

UI text	Comment
1. Cannot confirm. 2. Not all expected values have been recorded. Please record the values manually.	1. Message pack: PhaseEqmAIGetOPCValues<version> Message ID: CompletionError_HeaderMsg 2. Message pack: PhaseEqmAIGetOPCValues<version> Message ID: ReparableConfirm_ErrorCategory Potential error cause: The values of the enabled tags were not read successfully or overridden. Expected values are still missing.

The **Details** button provides access to more specific technical information.

User-triggered Exception-specific Error Messages

Invalid data format error (SR0341.3.6.8)

➤ Applies to **Numeric Property Bundle** only

UI text	Comment
1. Cannot confirm the overridden values. 2. <empty string>	1. Message pack: PhaseEqmAIGetOPCValues<version> Message ID: OverrideExceptionConfirmationError_HeaderMsg 2. Message pack: PhaseEqmAIGetOPCValues<version> Message ID: Other_ErrorCategory Potential error cause: The entered text value cannot be converted to a numeric value of the targeted numeric data type.

BOOLEAN PROPERTY BUNDLE

No value overridden (SR0341.3.6.11)

UI text	Comment
1. You have to select a value before you can confirm.	1. Message pack: PhaseEqmAIGetOPCValues<version> Message ID: OverrideBooleanValueNotSet_ErrorMsg Potential error cause: No override value was selected before the user-triggered exception was confirmed.

NUMERIC PROPERTY BUNDLE

No value overridden (SR0341.3.6.9)

UI text	Comment
1. Enter an override value.	1. Message pack: PhaseEqmA1<version> Message ID: OverrideNumericValueNotSet_ErrorMsg Potential error cause: No override value was entered before the user-triggered exception was confirmed.

STRING PROPERTY BUNDLE

No value overridden (SR0341.3.6.10)

UI text	Comment
1. You have to enter an override value before you can confirm.	1. Message pack: PhaseEqmA1<version> Message ID: OverrideStringValueNotSet_ErrorMsg Potential error cause: No override value was entered before the user-triggered exception was confirmed.

Output Variables (SR0341.9+)

The following output variables are available to reference the phase's output.

Instance count (Framework capability)

- Data type: Long
- Usage: The output variable provides the count of the number of instances the phase has been processed, for example in a loop. The count is also increased when the phase is skipped from an operator's perspective, since the phase is still executed, but as a hidden phase.
The count variable of a phase that has not been executed provides 0 as output value.

Start time (Framework capability)

- Data type: Timestamp
- Usage: The output variable provides the start time of the phase.

Completion time (Framework capability)

- Data type: Timestamp
- Usage: The output variable provides the completion time of the phase.

Identifier (Framework capability)

- Data type: String
- Usage: The output variable provides the identifier of the phase.

Automation get successful (SR0341.9.1)

- Data type: Boolean
- Values: `true`, `false`
- Usage: The output variable states if the get operation from the automation layer was successful.
 - The value is `true` if all property values have been read successfully.
 - The value is `false` if at least one of the property values could not be read from the automation layer or has been overridden by using the **Override recorded value (Numeric property) (SR0341.3.1.1)** user-triggered exception (page 25), **Override recorded value (String property) (SR0341.3.1.2)** user-triggered exception (page 26), or **Override recorded value (Boolean property) (SR0341.3.1.3)** user-triggered exception (page 23).

Boolean Property Bundle

Bundle output variable (Framework capability)

For all output variables of the same bundle, the output variable identifier is a concatenation of the bundle identifier and the output variable name.

This framework capability refers to **Bundle Output Variable (SR3146.9.7.4.2)** in "Functional Requirement Specification Recipe and Workflow Management" [A2] (page 123).

Value (SR0341.9.9)

- Data type: Boolean
- Usage: The output variable provides the value of the boolean property tag. The value is Null if N/A is the phase result.

Automation get successful (SR0341.9.10)

- Data type: Boolean
- Values: `true`, `false`
- Usage: The output variable states if the get operation from the automation layer was successful.

- The value is `true` if the property value of the boolean property has been read successfully.
- The value is `false` if the property value of the boolean property could not be read from the automation layer or has been overridden by using the **Override recorded value (SR0341.3.1.3)** user-triggered exception (page 23).

Numeric Property Bundle

Bundle output variable (Framework capability)

For all output variables of the same bundle, the output variable identifier is a concatenation of the bundle identifier and the output variable name.

This framework capability refers to **Bundle Output Variable (SR3146.9.7.4.2)** in "Functional Requirement Specification Recipe and Workflow Management" [A2] (page 123).

Value (SR0341.9.2)

- Data type: `BigDecimal`
- Usage: The output variable provides the actual value of the numeric property tag as a **BigDecimal** value. The value is Null if N/A is the phase result.

Unit of measure (SR0341.9.3)

- Data type: `String`
- Usage: The output variable provides the unit of measure of the numeric property tag. The value is Null if N/A is the phase result.

Automation get successful (SR0341.9.4)

- Data type: `Boolean`
- Values: `true`, `false`
- Usage: The output variable states if the get operation from the automation layer was successful.
 - The value is `true` if the property value of the numeric property has been read successfully.
 - The value is `false` if the property value of the numeric property could not be read from the automation layer or has been overridden by using the **Override recorded value (SR0341.3.1.1)** user-triggered exception (page 25).

String Property Bundle

Bundle output variable (Framework capability)

For all output variables of the same bundle, the output variable identifier is a concatenation of the bundle identifier and the output variable name.

This framework capability refers to **Bundle Output Variable (SR3146.9.7.4.2)** in "Functional Requirement Specification Recipe and Workflow Management" [A2] (page [123](#)).

Value (SR0341.9.6)

- Data type: String
- Usage: The output variable provides the value of the string property tag. The value is Null if N/A is the phase result.

Automation get successful (SR0341.9.7)

- Data type: Boolean
- Values: `true`, `false`
- Usage: The output variable states if the get operation from the automation layer was successful.
 - The value is `true` if the property value of the string property has been read successfully.
 - The value is `false` if the property value of the string property could not be read from the automation layer or has been overridden by using the **Override recorded value (SR0341.3.1.2)** user-triggered exception (page [26](#)).

Performance (SR0341.12+)

Performance of Get Activity (SR0341.12.1)

The time for getting the OPC values on the automation layer does not take longer than 5 seconds. Any potential delay by the OPC server or the PLC communication is not considered.

Set OPC Values Phase (SR0342+)

The **Set OPC values** phase allows to write up to 50 tag values of one equipment entity to the automation layer. It supports the following data types:

- BigDecimal Value (Double, Float, Integer) with low and high limits,
- Boolean Value: choice between Yes and No (`true` and `false`), and
- String Value.

An example use cases is:

- Set up parameters of a mixer
With one button tap, an operator can transfer the values of all relevant set points of a mixer to the automation layer:
 - Mixer speed = 500 (rpm), specification limit low = 400 rpm, specification limit high = 1000 rpm
 - HeatingControl = Yes
 - HeatingTargetTemp = 55 °C
 - HeatingProfile = 7
 - HMI_InstructionText1 = Control visual foam situation

Different phase modes enable the usage in various situations that can occur during processing:

- In the **Manual completion** mode, the operator manually sets the values.
- In the **Automatic completion** mode, the phase sets the values and is completed automatically without any operator interaction.

The affected equipment entity, the affected properties, and their values are stored in the batch record, thereby becoming available for documentation purposes in the sub-report and batch report (page [41](#)).

Anomalies that occur during processing are covered by the phase exception handling (page [52](#)) (e.g. equipment entity is not available).


After completion the phase displays the affected properties and their values in the Execution Window.

The Navigator displays the identifier of the affected equipment entity.

Download the setpoints to the tablet press.

Entity: **TabletPress_AM / Automated Tablet Press**

Property	Low	Value	High	UoM	Automation set
Compressing Force	65	70	75		<input checked="" type="checkbox"/>
Tablet Dimensions	8.8	9	9.2 mm		<input checked="" type="checkbox"/>
Tablet Form		Yes			<input checked="" type="checkbox"/>
Batch ID (TP)		BX57			<input checked="" type="checkbox"/>

Set



Confirm


Figure 2: Set OPC values during execution

Layout

The phase provides individual layouts for its representation during execution (page 38), in the Navigator (page 41), and in the sub-report (page 41).

Representation during Execution (SR0342.1+)

The representation during execution depends on the phase mode.

Preview mode (SR0342.1.1)

1. <Instruction text>
(taken from **Instruction (SR0342.8.1)** process parameter (page 48))
2. Entity:
3. List of up to 50 property types in the order of the property-specific process parameters:
 - **Boolean Property Bundle:**
List of boolean properties
(taken from **Boolean property - Master (bundle identifier) (SR0342.8.8)** process parameter (page 50))
 - Read-only checkbox to indicate if the values have been successfully set on the automation layer.
 - **Numeric Property Bundle:**
List of numeric properties
(taken from **Numeric property - Master (bundle identifier) (SR0342.8.6)** process parameter (page 51))
 - Read-only checkbox to indicate if the values have been successfully set on the automation layer.

■ **String Property Bundle:**

List of string properties

(taken from **String property - Master (bundle identifier) (SR0342.8.7)** process parameter (page 52))

- Read-only checkbox to indicate if the values have been successfully set on the automation layer.

4. **Set** button (disabled).
5. **Confirm** button (disabled).

Active mode (SR0342.1.2)

1. Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
2. <Instruction text>
(taken from **Instruction (SR0342.8.1)** process parameter (page 48))
3. Entity: <equipment entity identifier> / <equipment entity short description>
(taken from **Identified equipment entity (SR0342.8.2)** process parameter (page 49))
4. List of up to 50 property types in the order of the property-specific process parameters:

■ **Boolean Property Bundle:**

List of boolean properties

(taken from **Boolean property - Master (bundle identifier) (SR0342.8.8)** process parameter (page 50))

- For the representation of the value, see **Set values (SR0342.2.3)** function (page 44).
- Read-only checkbox to indicate if the values have been successfully set on the automation layer.

■ **Numeric Property Bundle:**

List of numeric properties

(taken from **Numeric property - Master (bundle identifier) (SR0342.8.6)** process parameter (page 51))

- For the representation of the value, see **Set values (SR0342.2.3)** function (page 44).
- Read-only checkbox to indicate if the values have been successfully set on the automation layer.

■ **String Property Bundle:**

List of string properties

(taken from **String property - Master (bundle identifier)** (SR0342.8.7) process parameter (page 52))

■ For the representation of the value, see **Set values** (SR0342.2.3) function (page 44).

■ Read-only checkbox to indicate if the values have been successfully set on the automation layer.

5. **Set** button.

6. **Confirm** button.

Completed mode (SR0342.1.3)

1. Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)

2. <Instruction text>
(taken from **Instruction** (SR0342.8.1) process parameter (page 48))

3. Entity: <equipment entity identifier> / <equipment entity short description>
(taken from **Identified equipment entity** (SR0342.8.2) process parameter (page 49))

4. List of up to 50 property types in the order of the property-specific process parameters:

■ **Boolean Property Bundle:**

List of boolean properties

(taken from **Boolean property - Master (bundle identifier)** (SR0342.8.8) process parameter (page 50))

■ Read-only checkbox to indicate if the values have been successfully set on the automation layer.

■ **Numeric Property Bundle:**

List of numeric properties

(taken from **Numeric property - Master (bundle identifier)** (SR0342.8.6) process parameter (page 51))

■ Read-only checkbox to indicate if the values have been successfully set on the automation layer.

- **String Property Bundle:**

List of string properties

(taken from **String property - Master (bundle identifier) (SR0342.8.7)** process parameter (page 52))

- Read-only checkbox to indicate if the values have been successfully set on the automation layer.

5. **Set** button (disabled).
6. **Confirm** button (completed).

Representation in Navigator (SR0342.4+)

The Navigator provides the following details:

Phase column (Framework capability)

- <Phase name>
- Example:
Set up mixer

Information column (SR0342.4.1)

- <Identifier of affected equipment entity>
- Example: MixerA12

Action column

- There are no actions available.

Representation in Sub-report (SR0342.5+)

The sub-report contains the following information:

Common sub-report elements (Framework capability)

- <Start time>
- <Completion time>
- <Unit procedure> / <operation> / <phase>
- <Work center> / <station> / <device> - <phase completion user>

Sub-report elements (SR0342.5.1)

- Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
- Instruction text
- Entity (identifier and short description)
- Table of values that have been set during execution (in the order of the property-specific process parameters).
 - List of boolean properties
 - Identifier
 - Value
 - Value successfully set on the automation layer (yes, no)
 - List of numeric properties
 - Identifier
 - Low
 - Value
 - High
 - UoM
 - Value successfully set on the automation layer (yes, no)
 - List of string properties
 - Identifier
 - Value
 - Value successfully set on the automation layer (yes, no)

In the grid, the phase displays "N/A" for those entries that cannot be provided due to their context (e.g. a unit of measure for a boolean value) or that have not been defined during recipe or workflow design (e.g. a lower limit for a numeric value).

Business Logic (SR0342.2+)

The phase implements the following business logic.

Phase Mode

Business logic related to phase modes.

Manual completion mode (SR0342.2.1)

- Function: **Manual completion** mode of phase
- Type: Phase mode
- Trigger: Phase becomes active
- Postcondition: Phase is active

Step	#	Description
Phase activation	10	Phase displays its user interface according to the Active mode (SR0342.1.2) layout (page 39). If any issue related to automation is detected during phase activation, <ul style="list-style-type: none"> ■ phase changes the cell background to red and ■ appends "(X)" to the "empty value".
Operator interaction	20	The Set button writes the tag values, see Set values (SR0342.2.3) function (page 44). Each time the Set button is used, all of the tag values are written.
Phase completion	30	See Confirm phase (SR0342.2.4) function (page 46).

Automatic completion mode (SR0342.2.2)

- Function: **Automatic completion** mode of phase
- Type: Phase mode
- Trigger: Phase becomes active
- Postcondition: Phase is active

Step	#	Description
Phase activation	10	Phase displays its user interface according to the Active mode (SR0342.1.2) layout (page 39). If any issue related to automation is detected during phase activation, <ul style="list-style-type: none"> ■ phase changes the cell background to red and ■ appends "(X)" to the "empty value".

Step	#	Description
Phase sets values	20	<p>See Set values (SR0342.2.3) function (page 44).</p> <ul style="list-style-type: none"> ■ If no error has occurred, continue with the Confirm phase (SR0342.2.4) function (page 46). ■ If at least one of the values could not be set automatically, phase must be completed manually. See Manual completion (SR0342.2.1) mode (page 43).

Main Path

Business logic related to the main path:

Set values (SR0342.2.3)

- Function: Write tag values
- Type: Main path
- Trigger: Operator sets values or **Automatic completion (SR0342.2.2)** mode (page 43) is active
- Postcondition: Phase is active

Step	#	Description
Phase checks for "input at equipment"	10	If the Input at equipment (SR0342.3.1.1) user-triggered exception (page 53) has been signed before, the Set action cannot be executed; phase displays Input at equipment recorded (SR0342.3.6.2) error message (page 59).
Phase sets values	20	<p>Phase writes the tag values.</p> <p>The order of the Boolean property - Master (bundle identifier) (SR0342.8.8) process parameters (page 50), Numeric property - Master (bundle identifier) (SR0342.8.6) process parameters (page 51), and String property - Master (bundle identifier) (SR0342.8.7) process parameters (page 52) defines the write sequence of property tag values. Process parameters without property types are skipped.</p> <p>If one of the following issues occurs, phase behavior is as follows:</p>
Tag not enabled	20.1	<ul style="list-style-type: none"> ➤ Boolean Property Bundle Phase changes cell background to gray. ➤ Numeric Property Bundle Phase sets the value to N/A. ➤ String Property Bundle Phase changes cell background to gray.

Step	#	Description
Not all defined automation properties have a value to be set (value is empty or null)	20.2	<ul style="list-style-type: none"> ■ Phase does not display a value, ■ changes cell background to red, and ■ appends "(X)" to the "empty value". <p>If the Set button is used,</p> <ul style="list-style-type: none"> ■ phase displays Defined values incomplete (SR0342.3.6.3) error message (page 59) and ■ does not perform a tag write operation.
Tag write operation fails due to an automation integration issue	20.3	<ul style="list-style-type: none"> ■ Phase does not display a value, ■ does not select read-only checkbox to indicate if the values have been successfully set on the automation layer, ■ changes cell background of checkbox to red, ■ appends "(X)" to the "empty value", and ■ displays System error (SR0342.3.6.4) error message (page 60), Automation error (SR0342.3.6.5) error message (page 60), or combined error message (Error message grouping (SR0342.3.6.6) error message (page 60)).
	30	<p>When the operator has confirmed an error message with OK, phase returns to the Active mode (SR0342.1.2) layout (page 39).</p> <p>If applicable, continue with the Override value definition (Boolean property) (SR0342.3.1.4) user-triggered exception (page 53), Override value definition (Numeric property) (SR0342.3.1.2) user-triggered exception (page 55), Override value definition (String property) (SR0342.3.1.3) user-triggered exception (page 56), or the Input at equipment (SR0342.3.1.1) user-triggered exception (page 53).</p>

Confirm phase (SR0342.2.4)

- Function: Completion of phase
- Type: Main path
- Trigger: Operator confirms phase or **Automatic completion (SR0342.2.2)** mode (page 43) is active
- Postcondition: Phase is completed

Step	#	Description
In Manual completion (SR0342.2.1) mode (page 43): Operator confirms phase	10	Operator confirms the tag values.
Phase performs completion checks	20	<p>If one of the following issues occurs, phase displays an error message:</p> <ul style="list-style-type: none"> ■ Defined property values have not been set, Defined values not set (SR0342.3.6.7) error message (page 61). ■ Defined property values have not been set and defined property values are incomplete, combined error message (Error message grouping - Confirmed (SR0342.3.6.8) error message (page 61)). <p>When the operator has confirmed an error message with OK, phase returns to the Active mode (SR0342.1.2) layout (page 39).</p> <p>If applicable, continue with the Input at equipment (SR0342.3.1.1) user-triggered exception (page 53).</p>
Phase completion	30	Phase is completed.

Process Parameters (SR0342.8+)

The following process parameters define the behavior of the phase.

INSTRUCTION TABLE-SPECIFIC PARAMETERS

Instruction table definition (Framework capability)

Attribute	Type	Comment
Table layout	Choice list	Defines the layout of the instruction table holding the instruction texts. Available settings: 1 column, 2 columns, 3 columns, 4 columns, 5 columns. Default setting: 1 column.
First column narrow	Boolean	Defines if the first column of the table shall be narrow.
Show all borders	Boolean	Defines if the borders of the table shall be visible.

Instruction table text (Framework capability)

Attribute	Type	Comment
Column 1	HTML text	Instruction text to be displayed in a column. Restriction: Maximum length is 2000 characters (including HTML tags).
Column 2	HTML text	
Column 3	HTML text	
Column 4	HTML text	
Column 5	HTML text	

INSTRUCTION LINK-SPECIFIC PARAMETERS

Instruction text with links (Framework capability)

Attribute	Type	Comment
Instruction text	HTML text	<p>Instruction text to be displayed.</p> <p>For any text enclosed in curly brackets you can define a hyperlink with the Instruction link definition process parameter. (page 48)</p> <p>Example: Refer to {SOP1270} for guidance.</p> <p>Maximum length is 2000 characters (including HTML tags).</p>

Instruction link definition (Framework capability)

Attribute	Type	Comment
Link text	Text	<p>Text to be used as link.</p> <p>For any text enclosed in curly brackets within the instruction text you can define a link with the Link URL attribute.</p> <p>Including the brackets in the link text is optional.</p> <p>Maximum length is 80 characters.</p>
Link URL	Text	<p>URL of the file to be displayed. The link opens the external application assigned to the file type by the operating system.</p> <p>Maximum length is 256 characters.</p>

BASIC PARAMETERS

Instruction (SR0342.8.1)

Attribute	Type	Comment
Text	HTML text	<p>Instruction text to be displayed.</p> <p>Restriction: Maximum length is 2000 characters (including HTML tags).</p>

Identified equipment entity (SR0342.8.2)

Attribute	Type	Comment
Equipment object	Reference	Reference to the output of a preceding phase that provides an identified equipment entity.

Mode (SR0342.8.3)

Attribute	Type	Comment
Mode	Choice list	Defines the processing mode. Manual completion (default): Operator confirms the phase. Automatic completion : Phase automatically sets the property values and is completed.

CONFIGURATION OF USER-TRIGGERED EXCEPTIONS**Override value definition (SR0342.8.4)**

Attribute	Type	Comment
Risk assessment	Choice list	Defines the risk level of the exception and thus controls the related signature privilege. Available settings: None , Low , Low (mandatory comment) , Medium , Medium (mandatory comment) , High , High (mandatory comment) . Default setting: High .
Exception text	Text	Defines the exception description used during exception handling and within the batch record. Maximum length is 250 characters.

See also **Override value definition (Numeric property bundle) (SR0342.3.1.2)** user-triggered exception (page 55), **Override value definition (String property bundle) (SR0342.3.1.3)** user-triggered exception (page 56), and **Override value definition (Boolean property bundle) (SR0342.3.21.4)** user-triggered exception (page 53).

Input at equipment (SR0342.8.5)

Attribute	Type	Comment
Risk assessment	Choice list	Defines the risk level of the exception and thus controls the related signature privilege. Available settings: None , Low , Low (mandatory comment) , Medium , Medium (mandatory comment) , High , High (mandatory comment) . Default setting: High .
Exception text	Text	Defines the exception description used during exception handling and within the batch record. Maximum length is 250 characters.

See also **Input at equipment (SR0342.3.1.1)** user-triggered exception (page [53](#)).

Boolean Property Bundle

Bundle process parameters (Framework capability)

For the master process parameter of a bundle, its internal identifier is populated from the bundle identifier.

For all other process parameters of the bundle, their internal identifier is a concatenation of the bundle identifier and the process parameter name.

This framework capability refers to **Bundle Process Parameters (SR3146.9.7.4.1)** in "Functional Requirement Specification Recipe and Workflow Management" [A2] (page [123](#)).

Master (Bundle identifier) (SR0342.8.8)

Attribute	Type	Comment
Property	String	Equipment property to be written.
Value	Boolean	Value to be set.
Source	Choice list	Defines if the value definition is taken from the process parameter or the equipment entity. Default setting: Process parameter .

Property Selection editor (Framework capability)

The system provides a Property Selection editor for selecting an equipment property based on its data type (numeric, string, boolean).

Numeric Property Bundle

Bundle process parameters (Framework capability)

For the master process parameter of a bundle, its internal identifier is populated from the bundle identifier.

For all other process parameters of the bundle, their internal identifier is a concatenation of the bundle identifier and the process parameter name.

This framework capability refers to **Bundle Process Parameters (SR3146.9.7.4.1)** in "Functional Requirement Specification Recipe and Workflow Management" [A2] (page 123).

Master (Bundle identifier) (SR0342.8.6)

Attribute	Type	Comment
Property	String	Equipment property to be written.
Low	BigDecimal (Double, Float, Integer)	Value to be set.
Value	BigDecimal (Double, Float, Integer)	Value to be set.
High	BigDecimal (Double, Float, Integer)	Value to be set.
Source	Choice list	Defines if the value definition is taken from the process parameter or the equipment entity. Default setting: Process parameter .

Property Selection editor (Framework capability)

The system provides a Property Selection editor for selecting an equipment property based on its data type (numeric, string, boolean).

String Property Bundle

Bundle process parameters (Framework capability)

For the master process parameter of a bundle, its internal identifier is populated from the bundle identifier.

For all other process parameters of the bundle, their internal identifier is a concatenation of the bundle identifier and the process parameter name.

This framework capability refers to **Bundle Process Parameters (SR3146.9.7.4.1)** in "Functional Requirement Specification Recipe and Workflow Management" [A2] (page 123).

Master (Bundle identifier) (SR0342.8.7)

Attribute	Type	Comment
Property	String	Equipment property to be written.
Value	String	Value to be set.
Source	Choice list	Defines if the value definition is taken from the process parameter or the equipment entity. Default setting: Process parameter .

Property Selection editor (Framework capability)

The system provides a Property Selection editor for selecting an equipment property based on its data type (numeric, string, boolean).

Exceptions (SR0342.3+)

The phase supports user-defined, user-triggered (page 52), system-triggered (page 52), and post-completion exceptions (page 57) and their configuration by means of process parameters (page 47).

User-defined exceptions cannot be configured by process parameters since they are provided by the framework and independent of phases.

System-triggered Exceptions

There are no system-triggered exceptions available.

User-triggered Exceptions (SR0342.3.1+)

A user-triggered exception is represented in the list of available user-triggered exceptions in the Exception Window, as the description of the exception, and in the batch report.

The following user-triggered exceptions are available.

Input at equipment (SR0342.3.1.1)

The **Input at equipment** exception allows an operator to document that property values have been set manually with an interface connected to the physical equipment. With the exception the operator confirms that the values have been set as documented by this phase.

Representation during exception handling:

- Instruction:
Values set directly at equipment.
Confirm button.
- Exception text:
<Exception text>
(taken from **Input at equipment (SR0342.8.5)** process parameter (page 50))
Property: <property identifier>
- Example:
Value was set manually at the HMI.
Property: AgitatorSpeed

Input at equipment - Logic (SR0342.3.1.1.1)

- Trigger: Exception is selected
- Postcondition: Value of property is set

Step	#	Description
Operator confirms exception	10	Phase shows exception description to be signed according to Input at equipment (SR0342.8.5) process parameter (page 50).
Operator signs exception	20	Phase records the exception. Additionally, phase adds the exception marker to each cell in the Automation set column of the Active mode (SR0342.1.2) layout (page 39).

BOOLEAN PROPERTY BUNDLE

Override value definition (SR0342.3.1.4)

The **Override value definition** exception allows an operator to override the boolean value defined by the process parameter or the entity (see **Boolean property - Master (bundle identifier) (SR0342.8.8)** process parameter (page 50)).

There is one exception per boolean property.

Properties for which an error has been detected are displayed at the top of the list properties.

Representation during exception handling:

- Instruction:
Override recorded value
Current value: <current value from process parameter or entity>
Override value: <available values>
Confirm button.
- Exception text:
<Exception text>
(taken from **Override value definition (SR0342.8.4)** process parameter (page 49))
Property: <property identifier>
Old value: <old value>
New value: <new value>
- Example:
Value overridden.
Property: Infrared sensor on
Old value: True
New value: False

Override value definition - Logic (SR0342.3.1.4.1)

- Trigger: Exception is selected
- Postcondition: Boolean value is set

Step	#	Description
Operator triggers exception	10	Phase displays Exception Window.
	20	Operator selects value.
Operator confirms exception	30	<p>If the following issue occurs, phase displays an error message:</p> <ul style="list-style-type: none"> ■ Override value is missing, No value overridden (SR0342.3.6.12) error message (page 62). <p>Phase shows exception description to be signed according to Override value definition (SR0342.8.4) process parameter (page 49).</p>
Operator signs exception	40	<p>Phase sets the value, resets the "set on automation layer" indicator, and records the exception.</p> <p>Additionally, phase adds the exception marker to the value's cell in the Active mode (SR0342.1.2) layout (page 39).</p>

NUMERIC PROPERTY BUNDLE

Override value definition (SR0342.3.1.2)

The **Override value definition** exception allows an operator to override the numeric value defined by the process parameter or the entity (see **Numeric property - Master (bundle identifier) (SR0342.8.6)** process parameter (page 51)).

There is one exception per numeric property.

Properties for which an error has been detected are displayed at the top of the list properties.

Representation during exception handling:

- **Instruction:**
 Override recorded values
 Current values (low, value, high): <current values from process parameter or entity> <UoM>
 Override values (low, value, high): <new values> <UoM>
Confirm button.
- **Exception text:**
 <Exception text>
 (taken from **Override value definition (SR0342.8.4)** process parameter (page 49))
 Property: <property identifier>
 Old values (low, value, high):
 <value> <UoM>
 <value> <UoM>
 <value> <UoM>
 New values (low, value, high):
 <value> <UoM>
 <value> <UoM>
 <value> <UoM>
- **Example:**
 Values overridden.
 Property: AgitatorSpeed
 Old values (low, value, high):
 12.11 rpm
 12.43 rpm
 13.43 rpm
 New values (low, value, high):
 12.61 rpm
 12.93 rpm
 13.93 rpm

Override value definition - Logic (SR0342.3.1.2.1)

- Trigger: Exception is selected
- Postcondition: Numeric value is set

Step	#	Description
Operator triggers exception	10	Phase displays Exception Window.
	20	Operator enters values. If the following issue occurs, phase displays an error message: <ul style="list-style-type: none"> ■ Data format does not match, Invalid data format error (SR0342.3.6.9) error message (page 62).
Operator confirms exception	30	If the following issue occurs, phase displays an error message: <ul style="list-style-type: none"> ■ Override value is missing, No value overridden (SR0342.3.6.10) error message (page 63). Phase shows exception description to be signed according to Override value definition (SR0342.8.4) process parameter (page 49).
Operator signs exception	40	Phase sets the value, resets the "set on automation layer" indicator, and records the exception. Additionally, phase adds the exception marker to the value's cell in the Active mode (SR0342.1.2) layout (page 39).

STRING PROPERTY BUNDLE

Override value definition (SR0342.3.1.3)

The **Override value definition** exception allows an operator to override the string value defined by the process parameter or the entity (see **String property - Master (bundle identifier) (SR0342.8.8)** process parameter (page 52)).

There is one exception per string property.

Properties for which an error has been detected are displayed at the top of the list properties.

Representation during exception handling:

- Instruction:
 Override recorded value
 Current value: <current value from process parameter or entity>
 Override value: <value>
Confirm button.

- Exception text:
 <Exception text>
 (taken from **Override value definition (SR0342.8.4)** process parameter (page 49))
 Property: <property identifier>
 Old value: <old value>
 New value: <new value>
- Example:
 Value overridden.
 Property: HeatingPerformed
 Old value: Temperature alarm
 New value: High temperature alarm

Override value definition - Logic (SR0342.3.1.3.1)

- Trigger: Exception is selected
- Postcondition: String value is set

Step	#	Description
Operator triggers exception	10	Phase displays Exception Window.
	20	Operator enters value.
Operator confirms exception	30	If the following issue occurs, phase displays an error message: <ul style="list-style-type: none"> ■ Override value is missing, No value overridden (SR0342.3.6.11) error message (page 63). Phase shows exception description to be signed according to Override value definition (SR0342.8.4) process parameter (page 49).
Operator signs exception	40	Phase sets the value, resets the "set on automation layer" indicator, and records the exception. Additionally, phase adds the exception marker to the value's cell in the Active mode (SR0342.1.2) layout (page 39).

Post-completion Exceptions

There are no post-completion exceptions available.

Information Messages

There are no information messages available.

Questions

There are no questions available.

Decisions

There are no decisions available.

Error Messages (SR0342.3.6+)

Error messages are represented in an error message dialog containing a message type-specific icon, the error message, and an **OK** button.

They are composed of up to three levels:

1. header,
2. category, and
3. details (not always used).

The following error messages are available to inform the operator about error conditions.

Set Property-specific Error Messages (Pre-writing)

Invalid configuration error (SR0342.3.6.1)

UI text	Comment
1. The Set action was not successful.	1. Message pack: PhaseEqmAISetOPCValues<version> Message ID: CheckBeforeExecuteError_HeaderMsg
2. Please set the values directly at the equipment.	2. Message pack: PhaseEqmAISetOPCValues<version> Message ID: IrreparableExecution_ErrorCategory Potential error cause: ■ Referenced equipment entity is undefined (Null).

The **Details** button provides access to more specific technical information.

Input at equipment recorded (SR0342.3.6.2)

UI text	Comment
1. The Set action was not successful.	1. Message pack: PhaseEqmAISetOPCValues<version> Message ID: CheckBeforeExecuteError_HeaderMsg
2. <empty string>	2. Message pack: PhaseEqmAISetOPCValues<version> Message ID: BusinessLogic_ErrorCategory
3. The input at equipment exception has already been recorded.	3. Message pack: PhaseEqmAISetOPCValues<version> Message ID: WritePrecheck_NoSetAfterInputAtEquipment_ErrorMsg Potential error cause: Set button is used after the Input at equipment (SR0342.3.1.1) user-triggered exception (page 53) has been signed.

The **Details** button provides access to more specific technical information.

Defined values incomplete (SR0342.3.6.3)

UI text	Comment
1. The Set action was not successful.	1. Message pack: PhaseEqmAISetOPCValues<version> Message ID: CheckBeforeExecuteError_HeaderMsg
2. Please define the missing values manually.	2. Message pack: PhaseEqmAISetOPCValues<version> Message ID: MissingValues_ErrorCategory Potential error cause: One or more values that should be written are not defined.
1. The Set action was not successful.	1. Message pack: PhaseEqmAISetOPCValues<version> Message ID: CheckBeforeExecuteError_HeaderMsg
2. Retry the Set action or set the values directly at the equipment.	2. Message pack: PhaseEqmAISetOPCValues<version> Message ID: ReparableExecution_ErrorCategory Potential error cause: Due to a configuration error one or more values could not be written.

The **Details** button provides access to more specific technical information.

Set Property-specific Error Messages (Writing)

System error (SR0342.3.6.4)

UI text	Comment
1. The Set action was not successful.	1. Message pack: PhaseEqmAISetOPCValues<version> Message ID: ExecutionError_HeaderMsg
2. <empty string>	2. Message pack: PhaseEqmAISetOPCValues<version> Message ID: Other_ErrorCategory Potential error cause: <ul style="list-style-type: none"> ■ Automation Integration server cannot be reached. ■ Automation Integration server write failure.

The **Details** button provides access to more specific technical information.

Automation error (SR0342.3.6.5)

UI text	Comment
1. The Set action was not successful.	1. Message pack: PhaseEqmAISetOPCValues<version> Message ID: ExecutionError_HeaderMsg
2. Please set the values directly at the equipment.	2. Message pack: PhaseEqmAISetOPCValues<version> Message ID: IrreparableExecution_ErrorCategory Potential error cause: <ul style="list-style-type: none"> ■ Tag is enabled but the tag path is undefined. ■ The property to be written is not defined for the identified equipment entity. ■ Live Data server write failure.

The **Details** button provides access to more specific technical information.

Error message grouping (SR0342.3.6.6)

If several errors occur during the execution of the Set action, the error messages are combined and displayed in a single error dialog. The three error levels specified in the **Error Messages (SR0342.3.6+)** description (page 58) are used as follows.

The combined error message consists of:

1. One header message,
2. one or more category messages, and
3. one or more detail messages.

UI text	Comment
<ol style="list-style-type: none"> 1. The Set action was not successful. 2. <List of category messages> 	<ol style="list-style-type: none"> 1. Message pack: PhaseEqmAISetOPCValues<version> Message ID: ExecutionError_HeaderMsg 2. Category of System error (SR0342.3.6.4) error message (page 60) and/or Automation error (SR0342.3.6.5) error message (page 60). <p>Potential error cause: If there are several errors related to the execution of the Set button, the displayed error message contains all error categories and details that apply.</p>

The **Details** button provides access to more specific technical information.

Phase Completion-specific Error Messages

Defined values not set (SR0342.3.6.7)

UI text	Comment
<ol style="list-style-type: none"> 1. Cannot confirm 2. Not all values were set successfully at the entity. Retry the Set action or set the values directly at the equipment. 	<ol style="list-style-type: none"> 1. Message pack: PhaseEqmAISetOPCValues<version> Message ID: CompletionError_HeaderMsg 2. Message pack: PhaseEqmAISetOPCValues<version> Message ID: ReparableConfirm_ErrorCategory <p>Potential error cause:</p> <ul style="list-style-type: none"> ■ One or more values that should be written are not defined. ■ One or more values that should be written cannot be set on the automation layer.

The **Details** button provides access to more specific technical information.

Error message grouping - Confirm (SR0342.3.6.8)

If several errors occur when the phase is confirmed, the error messages are combined and displayed in a single error dialog. The three error levels specified in the **Error Messages (SR0342.3.6+)** description (page 58) are used as follows.

The combined error message consists of:

1. One header message,
2. one or more category messages, and
3. one or more detail messages.

UI text	Comment
<ol style="list-style-type: none"> Cannot confirm <List of category messages> 	<ol style="list-style-type: none"> Message pack: PhaseEqmAISetOPCValues<version> Message ID: CompletionError_HeaderMsg Category of System error (SR0342.3.6.4) error message (page 60) and/or Automation error (SR0342.3.6.5) error message (page 60). <p>Potential error cause: If there are several errors related to phase completion, the displayed error message contains all error categories and details that apply.</p>

The **Details** button provides access to more specific technical information.

User-triggered Exception-specific Error Messages

Invalid data format error (SR0342.3.6.9)

UI text	Comment
<ol style="list-style-type: none"> Cannot confirm the overridden values. <empty string> The value entered for <attribute name> has an unsuitable format. Please enter a value that is valid for the <data type name> data type. 	<ol style="list-style-type: none"> Message pack: PhaseEqmAISetOPCValues<version> Message ID: OverrideExceptionConfirmationError_HeaderMsg Message pack: PhaseEqmAISetOPCValues<version> Message ID: Other_ErrorCategory Message pack: PhaseEqmAISetOPCValues<version> Message ID: OverrideInvalidDataFormat_ErrorMsg <p>Potential error cause: The entered text value cannot be converted to a numeric value of the targeted numeric data type.</p>

The **Details** button provides access to more specific technical information.

BOOLEAN PROPERTY BUNDLE

No value overridden (SR0342.3.6.12)

UI text	Comment
<ol style="list-style-type: none"> You have to select a value before you can confirm. 	<ol style="list-style-type: none"> Message pack: PhaseEqmAISetOPCValues<version> Message ID: OverrideBooleanValueNotSet_ErrorMsg <p>Potential error cause: No override value was entered before the user-triggered exception was confirmed.</p>

NUMERIC PROPERTY BUNDLE

No value overridden (SR0342.3.6.10)

UI text	Comment
1. Enter an override value.	1. Message pack: PhaseEqmA1<version> Message ID: OverrideNumericValueNotSet_ErrorMsg Potential error cause: No override value was entered before the user-triggered exception was confirmed.

STRING PROPERTY BUNDLE

No value overridden (SR0342.3.6.11)

UI text	Comment
1. You have to enter an override value before you can confirm.	1. Message pack: PhaseEqmA1<version> Message ID: OverrideStringValueNotSet_ErrorMsg Potential error cause: No override value was entered before the user-triggered exception was confirmed.

Output Variables (SR0342.9+)

The following output variables are available to reference the phase's output.

Instance count (Framework capability)

- Data type: Long
- Usage: The output variable provides the count of the number of instances the phase has been processed, for example in a loop. The count is also increased when the phase is skipped from an operator's perspective, since the phase is still executed, but as a hidden phase.
The count variable of a phase that has not been executed provides 0 as output value.

Start time (Framework capability)

- Data type: Timestamp
- Usage: The output variable provides the start time of the phase.

Completion time (Framework capability)

- Data type: Timestamp
- Usage: The output variable provides the completion time of the phase.

Identifier (Framework capability)

- Data type: String
- Usage: The output variable provides the identifier of the phase.

Automation set successful (SR0342.9.1)

- Data type: Boolean
- Values: `true`, `false`
- Usage: The output variable states if the set operation on the automation layer was successful.
 - The value is `true` if all property values have been set.
 - The value is `false` if at least one of the property values could not be set.

Boolean Property Bundle

Bundle output variable (Framework capability)

For all output variables of the same bundle, the output variable identifier is a concatenation of the bundle identifier and the output variable name.

This framework capability refers to **Bundle Output Variable (SR3146.9.7.4.2)** in "Functional Requirement Specification Recipe and Workflow Management" [A2] (page 123).

Value (SR0342.9.9)

- Data type: Boolean
- Usage: The output variable provides the value of the boolean property tag. The value is Null if N/A is the phase result.

Automation set successful (SR0342.9.10)

- Data type: Boolean
- Values: `true`, `false`
- Usage: The output variable states if the set operation on the automation layer was successful.
 - The value is `true` if the property value of the boolean property tag has been set.
 - The value is `false` if the property values of the boolean property tag could not be set.

Numeric Property Bundle

Bundle output variable (Framework capability)

For all output variables of the same bundle, the output variable identifier is a concatenation of the bundle identifier and the output variable name.

This framework capability refers to **Bundle Output Variable (SR3146.9.7.4.2)** in "Functional Requirement Specification Recipe and Workflow Management" [A2] (page 123).

Value (SR0342.9.2)

- Data type: BigDecimal
- Usage: The output variable provides the actual value of the numeric property tag as a **BigDecimal** value. The value is Null if N/A is the phase result.

Low (SR0342.9.3)

- Data type: BigDecimal
- Usage: The output variable provides the value of the numeric property tag as a **BigDecimal** value. The value is Null if N/A is the phase result.

High (SR0342.9.4)

- Data type: BigDecimal
- Usage: The output variable provides the value of the numeric property tag as a **BigDecimal** value. The value is Null if N/A is the phase result.

Unit of measure (SR0342.9.5)

- Data type: String
- Usage: The output variable provides the unit of measure of the numeric property tag. The value is Null if N/A is the phase result.

Automation set successful (SR0342.9.6)

- Data type: Boolean
- Values: `true`, `false`
- Usage: The output variable states if the set operation on the automation layer was successful.

- The value is `true` if all property values of the numeric property tag have been set.
- The value is `false` if at least one of the property values of the numeric property tag could not be set.

String Property Bundle

Bundle output variable (Framework capability)

For all output variables of the same bundle, the output variable identifier is a concatenation of the bundle identifier and the output variable name.

This framework capability refers to **Bundle Output Variable (SR3146.9.7.4.2)** in "Functional Requirement Specification Recipe and Workflow Management" [A2] (page 123).

Value (SR0342.9.7)

- Data type: String
- Usage: The output variable provides the value of the string property tag. The value is Null if N/A is the phase result.

Automation set successful (SR0342.9.8)

- Data type: Boolean
- Values: `true`, `false`
- Usage: The output variable states if the set operation on the automation layer was successful.
 - The value is `true` if the property value of the string property tag has been set.
 - The value is `false` if the property values of the string property tag could not be set.

Performance (SR0342.12+)

Performance of Set Activity (SR0342.12.1)

The time for setting the OPC values on the automation layer does not take longer than 5 seconds. Any potential delay by the OPC server or the PLC communication is not considered.

Monitor Numeric Value Phase (SR0360+)

The **Monitor numeric value** phase reads a numeric value within a defined monitoring period and compares the value with a pre-defined condition.

An example use case is:

- Waiting for a specific numeric value to reach a certain value before processing can continue
An agitator needs several minutes to reach the speed set-point of 50 rpm. The phase evaluates the speed value every 5 seconds and if 50 rpm is reached within a pre-defined monitoring period, the agitator is ready for use.
- Assuring that a specific numeric value does not exceed a pre-defined limit
Within a given monitoring period of 30 minutes, the phase evaluates the temperature every 10 seconds. If the temperature exceeds 30 °C, an exception is recorded.

Different phase modes enable the usage in various situations that can occur during processing:

- In the **Manual completion** mode, the operator manually completes the phase.
- In the **Automatic completion** mode, under certain conditions, the phase is automatically completed without any operator interaction.

The affected equipment entity, monitoring period, condition string, and the timestamp when the condition is met are stored in the batch record, thereby becoming available for documentation purposes in the sub-report and batch report (page 70).

The condition will be considered to be met if the value matches its requirements and the corresponding tag quality is **Good**.

Both the monitoring period and the tag update rate are configurable; the tag update rate in Data Manager on equipment property level, the monitoring period in Recipe and Workflow Designer on process parameter level.

TIP

- Changes of a value that fulfill the condition only temporarily between two read-cycles are not detected.
- Due to technical reasons, the accuracy of the **Double** or **Float** numeric data type cannot be guaranteed. Hence, the result of the **Value == 13.4** condition can be unexpected if the value is of the **Double** or **Float** numeric data type.

Anomalies that occur during processing are covered by the phase exception handling (page 78) (e.g. condition not fulfilled within monitor period).

After completion the phase displays the affected equipment entity, condition string, monitor duration and the phase result in the Execution Window.

The Navigator displays the identifier of the affected equipment entity.



Figure 3: Monitor numeric value during execution

Layout

The phase provides individual layouts for its representation during execution (page 68), in the Navigator (page 70), and in the sub-report (page 70).

Representation during Execution (SR0360.1+)

The representation during execution depends on the phase mode.

Preview mode (SR0360.1.1)

1. <Instruction text>
(taken from **Instruction (SR0360.8.1)** process parameter (page 74))
2. Equipment entity:
Condition: [<value> <comparator>] <property identifier> <comparator> <value>
(<meaning of "condition met">)
Duration: <d hh mm ss>
(taken from **Numeric property (SR0360.8.4)** process parameter (page 75))
Result:
Value:
3. **Confirm** button (disabled).

Active mode (SR0360.1.2)

1. Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
2. <Instruction text>
(taken from **Instruction (SR0360.8.1)** process parameter (page 74))
3. Equipment entity: <equipment entity identifier>/<equipment entity short description>
(taken from **Identified equipment entity (SR0360.8.2)** process parameter (page 74))
Condition: [<value> <comparator>] <property identifier> <comparator> <value>
(<meaning of "condition met">)
Duration: <d hh mm ss> (until end time <end time>)
(taken from **Numeric property (SR0360.8.4)** process parameter (page 75))
Result: **Condition met** or **Condition not met**
Value: <value> <UoM> (<tag timestamp> or N/A)

 - Tag timestamp: e.g. 02/22/2013 12:49:09 PM CET
 - Manual in case a value has been overridden by using the **Stop monitoring and record result (SR0360.3.1.1)** user-triggered exception (page 80).
4. For the representation, see **Monitor a numeric value (SR0360.2.1)** function (page 71).
5. **Confirm** button.

Completed mode (SR0360.1.3)

1. Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
2. <Instruction text>
(taken from **Instruction (SR0360.8.1)** process parameter (page 74))
3. Equipment entity: <equipment entity identifier>/<equipment entity short description>
(taken from **Identified equipment entity (SR0360.8.2)** process parameter (page 74))
Condition: [<value> <comparator>] <property identifier> <comparator> <value>
(<meaning of "condition met">)
Duration: <d hh mm ss>
(taken from **Numeric property (SR0360.8.4)** process parameter (page 75))
Result: **Condition met** or **Condition not met**
Value: <value> <UoM> (<tag timestamp> or N/A)

- Tag timestamp: e.g. 02/22/2013 12:49:09 PM CET
- Manual in case a value has been overridden by using the **Stop monitoring and record result (SR0360.3.1.1)** user-triggered exception (page 80).
- 4. For the representation, see **Monitor a numeric value (SR0360.2.1)** function (page 71).
- 5. **Confirm** button (completed).

Representation in Navigator (SR0360.4+)

The Navigator provides the following details:

Phase column (Framework capability)

- <Phase name>
- Example:
Monitor mixer value

Information column (SR0360.4.1)

- <Identifier of affected equipment entity>
- Example: MixerA12

Action column

- There are no actions available.

Representation in Sub-report (SR0360.5+)

The sub-report contains the following information:

Common sub-report elements (Framework capability)

- <Start time>
- <Completion time>
- <Unit procedure> / <operation> / <phase>
- <Work center> / <station> / <device> - <phase completion user>

Sub-report elements (SR0360.5.1)

- Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
- Instruction text
- Entity (identifier and short description)

- Duration
- Condition string ([<value>] <comparator> <value> <meaning of "condition met">)
- Result
- Value
- Timestamp of tag value

Business Logic (SR0360.2+)

The phase implements the following business logic.

Monitor a numeric value (SR0360.2.1)

- Function: Monitor a numeric value of affected equipment entity and property
- Trigger: Phase becomes active
- Postcondition: Monitoring is completed

Step	#	Description
Phase activation	10	Phase displays its user interface according to the Active mode (SR0360.1.2) layout (page 69). If monitoring could not be activated, phase displays Automation error (SR0360.3.6.1) error message (page 82).
Phase monitors value	20	Within the defined period (Numeric property (SR0360.8.4) process parameter (page 75)), phase monitors the numeric value and updates phase representation. As long as the value is monitored, phase displays end time to the right of the duration. Monitoring is terminated when <ul style="list-style-type: none"> ■ condition is fulfilled (see step 30) or ■ monitoring duration has expired (see step 40).

Step	#	Description
Phase behavior when condition is fulfilled	30	<p>Values are only evaluated against the pre-defined condition if the tag quality is Good. Bad quality tags are not evaluated.</p> <ul style="list-style-type: none"> ■ Phase displays the result as Condition met. Phase displays the read value and its timestamp. ■ If Mode (SR0360.8.3) process parameter (page 93) is set to Automatic completion and Meaning of "condition met" attribute of Numeric property (SR0360.8.4) process parameter (page 75) is set to Good, phase is completed. ■ If Meaning of "condition met" of Numeric property (SR0360.8.4) process parameter (page 75) is set to Exception: Phase creates Monitoring exception (SR0360.3.2.1) system-triggered exception (page 78) and must be completed manually.
Phase behavior when monitoring duration has expired	40	<ul style="list-style-type: none"> ■ Phase displays the result as Condition not met. Phase displays the values as N/A with N/A as timestamp. ■ If Meaning of "condition met" attribute of Numeric property (SR0360.8.4) process parameter (page 75) is set to Good: Phase creates Monitoring exception (SR0360.3.2.1) system-triggered exception (page 78) and must be completed manually. ■ If Mode (SR0360.8.3) process parameter (page 93) is set to Automatic completion and Meaning of "condition met" attribute of Numeric property (SR0360.8.4) process parameter (page 75) is set to Exception, phase is completed.
Operator confirms phase	50	<ul style="list-style-type: none"> ■ If monitoring is active, phase displays Monitoring in progress (SR0360.3.6.2) error message (page 82). In this case, the Stop monitoring and record result (SR0360.3.1.1) user-triggered exception (page 80) needs to be recorded before the phase can be completed. ■ If a system-triggered exception has been raised before, it needs to be recorded before the phase can be completed. ■ Otherwise, phase is completed.

Process Parameters (SR0360.8+)

The following process parameters define the behavior of the phase.

INSTRUCTION TABLE-SPECIFIC PARAMETERS

Instruction table definition (Framework capability)

Attribute	Type	Comment
Table layout	Choice list	Defines the layout of the instruction table holding the instruction texts. Available settings: 1 column, 2 columns, 3 columns, 4 columns, 5 columns . Default setting: 1 column .
First column narrow	Boolean	Defines if the first column of the table shall be narrow.
Show all borders	Boolean	Defines if the borders of the table shall be visible.

Instruction table text (Framework capability)

Attribute	Type	Comment
Column 1	HTML text	Instruction text to be displayed in a column. Restriction: Maximum length is 2000 characters (including HTML tags).
Column 2	HTML text	
Column 3	HTML text	
Column 4	HTML text	
Column 5	HTML text	

INSTRUCTION LINK-SPECIFIC PARAMETERS

Instruction text with links (Framework capability)

Attribute	Type	Comment
Instruction text	HTML text	Instruction text to be displayed. For any text enclosed in curly brackets you can define a hyperlink with the Instruction link definition process parameter (page 74). Example: Refer to {SOP1270} for guidance. Maximum length is 2000 characters (including HTML tags).

Instruction link definition (Framework capability)

Attribute	Type	Comment
Link text	Text	Text to be used as link. For any text enclosed in curly brackets within the instruction text you can define a link with the Link URL attribute. Including the brackets in the link text is optional. Maximum length is 80 characters.
Link URL	Text	URL of the file to be displayed. The link opens the external application assigned to the file type by the operating system. Maximum length is 256 characters.

BASIC PARAMETERS

Instruction (SR0360.8.1)

Attribute	Type	Comment
Column 1	HTML text	Instruction text to be displayed. Restriction: Maximum length is 2000 characters (including HTML tags).
Column 2	HTML text	Not used.
Column 3	HTML text	

Identified equipment entity (SR0360.8.2)

Attribute	Type	Comment
Equipment object	Reference	Reference to the output of a preceding phase that provides an identified equipment entity.

Mode (SR0360.8.3)

Attribute	Type	Comment
Mode	Choice list	Defines the processing mode. Manual completion (default): Operator confirms the phase. Automatic completion : Phase automatically gets the property value and is completed.

PROPERTY TYPE PARAMETERS

Numeric property (SR0360.8.4)

Attribute	Type	Comment
Property	String	Equipment property to be read.
Comparator	Choice list	Defines the comparison, where x is the monitored value. x == value1: equal to x != value1: not equal to x < value1: less than x <= value 1: less than or equal to x >= value1: greater than or equal to x > value1: greater than value1 <= x <= value2: closed interval value1 < x < value2: open interval Default setting: x >= value1
Value1	BigDecimal	Defines the first value of the comparison.
Value2	BigDecimal	Defines the second value of the comparison, if applicable.
Meaning of "condition met"	Choice list	Defines the string to be displayed as result of the comparison. Available settings: Good , Exception . Default setting: Good

Attribute	Type	Comment
Monitor duration	Duration	Defines the monitoring period in hh:mm:ss. The minimum duration is one second. Specified milliseconds are not displayed in the phase user interface. Note: The duration must always be longer than the tag update rate that is configured on equipment property level.

Property Selection editor (Framework capability)

The system provides a Property Selection editor for selecting an equipment property based on its data type (numeric, string, boolean).

CONFIGURATION OF SYSTEM-TRIGGERED EXCEPTIONS

Monitoring exception (SR0360.8.5)

Attribute	Type	Comment
Risk assessment	Choice list	Defines the risk level of the exception and thus controls the related signature privilege. Available settings: None , Low , Low (mandatory comment) , Medium , Medium (mandatory comment) , High , High (mandatory comment) . Default setting: High .
Exception text	Text	Defines the exception description used during exception handling and within the batch record. Maximum length is 250 characters.

See also **Monitoring exception (SR0360.3.2.1)** system-triggered exception (page 78).

Unforeseen resume (SR0360.8.7)

Attribute	Type	Comment
Risk assessment	Choice list	Defines the risk level of the exception and thus controls the related signature privilege. Available settings: None , Low , Low (mandatory comment) , Medium , Medium (mandatory comment) , High , High (mandatory comment) . Default setting: High .
Exception text	Text	Defines the exception description used during exception handling and within the batch record. Maximum length is 250 characters.

See also **Unforeseen resume (SR0360.3.2.2)** system-triggered exception (page 79).

CONFIGURATION OF USER-TRIGGERED EXCEPTIONS

Stop monitoring and record result (SR0360.8.6)

Attribute	Type	Comment
Risk assessment	Choice list	Defines the risk level of the exception and thus controls the related signature privilege. Available settings: None , Low , Low (mandatory comment) , Medium , Medium (mandatory comment) , High , High (mandatory comment) . Default setting: High .
Exception text	Text	Defines the exception description used during exception handling and within the batch record. Maximum length is 250 characters.

See also **Stop monitoring and record result (SR0360.3.1.1)** user-triggered exception (page 80).

Exceptions (SR0360.3+)

The phase supports user-defined, user-triggered (page 80), system-triggered (page 78), and post-completion exceptions (page 81) and their configuration by means of process parameters (page 72).

User-defined exceptions cannot be configured by process parameters since they are provided by the framework and independent of phases.

System-triggered Exceptions (SR0360.3.2+)

A system-triggered exception is represented in a message dialog along with an **Exception** button, in the Exception Window as the read-only description of the exception, and in the batch report.

The following system-triggered exceptions are available.

Monitoring exception (SR0360.3.2.1)

The exception text is extended by messages specific to the current situation.

Representation of the exception:

- <Exception text>
(taken from **Monitoring exception (SR0360.8.5)** process parameter (page 76))
 - Condition <property identifier> <comparator> <value> (<meaning of exception>) met by [<monitoring result value> | N/A]
 - Condition <property identifier> <comparator> <value> (<meaning of exception>) not met by [<monitoring result value> | N/A]
 - Example:
Monitoring exception occurred:
Condition Speed >= 50 rpm (Good) met by 51.4 rpm

Monitoring exception - Logic (SR0360.3.2.1.1)

- Trigger: Either the condition is fulfilled and defined as **Exception** or the condition is defined as **Good** and the monitor duration has expired.
For the settings, see **Comparator**, **Meaning of "condition met"**, and **Monitor duration** attributes of the **Numeric property (SR0360.8.4)** process parameter (page 75).
- Postcondition: Exception is recorded

Step	#	Description
Operator triggers exception	10	Phase records the exception.
	20	Phase returns to Active mode (SR0360.1.2) layout (page 69).

Unforeseen resume (SR0360.3.2.2)

Representation of the exception:

- <Exception text>
(taken from **Unforeseen resume (SR0360.8.7)** process parameter (page 77))
The system has been resumed while monitoring a numeric value of <property identifier>. It must be ensured that the data recorded so far matches the physical situation on the shop floor.
Consider to stop monitoring and record an exception with the monitoring result.
- Example:
A critical resume situation has occurred. Contact your supervisor before proceeding.
The system has been resumed while monitoring a numeric value of speed. It must be ensured that the data recorded so far matches the physical situation on the shop floor.
Consider to stop monitoring and record an exception with the monitoring result.

Unforeseen resume - Logic (SR0360.3.2.2.1)

- Trigger: Monitoring a numeric value has been interrupted while the phase was active so that the system needs to be resumed
- Postcondition: Phase is back in active mode

Step	#	Description
Phase activation	10	Phase displays the Unforeseen resume (SR0360.3.2.2) system-triggered exception.
Operator triggers exception	20	Phase records the exception.
	30	Phase restarts monitoring again with the full monitor duration configured (taken from Numeric property (SR0360.8.4) process parameter (page 75)).
	40	Phase returns to Active mode (SR0365.1.2) layout (page 86).

User-triggered Exceptions (SR0360.3.1+)

A user-triggered exception is represented in the list of available user-triggered exceptions in the Exception Window, as the description of the exception, and in the batch report.

The following user-triggered exceptions are available.

Stop monitoring and record result (SR0360.3.1.1)

The **Stop monitoring and record result** exception allows an operator to terminate monitoring before the monitoring duration has expired and to record the monitoring result value manually.

The exception is only enabled if monitoring is active.

Representation during exception handling:

- Instruction:
Stop and record the monitoring value of <property identifier>
Value: <value><UoM>
Confirm button.
- Exception text:
<Exception text>
(taken from **Stop monitoring and record result (SR0360.8.6)** process parameter (page 77))
Property: <property identifier>
Recorded value: <value> <UoM>
- Example:
Monitoring stopped manually.
Property: temperature
Recorded value: 33 °C

Stop monitoring - Logic (SR0360.3.1.1.1)

- Trigger: Exception is selected
- Postcondition: Monitoring of numeric value is stopped and value is recorded

Step	#	Description
Operator triggers exception	10	Phase shows exception description to be signed according to Stop monitoring and record result (SR0360.8.6) process parameter (page 77).

Step	#	Description
Operator provides value	20	<p>If the following issue occurs, phase displays an error message:</p> <ul style="list-style-type: none"> Value is entered and data format does not match, Invalid data format error (SR0360.3.6.3) error message (page 82).
Operator signs exception	30	Phase records the exception.
Phase activation	40	Phase returns to the Active mode (SR0360.1.2) layout (page 69).
Phase behavior when a value is provided	50	<p>Phase evaluates the condition and displays the result correspondingly: Condition met or Condition not met.</p> <ul style="list-style-type: none"> If Meaning of "condition met" attribute of Numeric property (SR0360.8.4) process parameter (page 75) is set to Good: Phase displays the entered value and N/A as timestamp. If Mode (SR0360.8.3) process parameter (page 93) is set to Automatic completion, phase is completed. If Meaning of "condition met" of Numeric property (SR0360.8.4) process parameter (page 75) is set to Exception: Phase displays the entered value and Manual as timestamp. Phase creates Monitoring exception (SR0360.3.2.1) system-triggered exception (page 78) and must be completed manually.

Post-completion Exceptions

There are no post-completion exceptions available.

Information Messages

There are no information messages available.

Questions

There are no questions available.

Decisions

There are no decisions available.

Error Messages (SR0360.3.6+)

Error messages are represented in an error message dialog containing a message type-specific icon, the error message, and an **OK** button.

The following error messages are available to inform the operator about error conditions.

Automation error (SR0360.3.6.1)

UI text	Comment
Cannot monitor the value of the <property identifier> property. Please verify your system configuration and try again or override. System errors: <automation-related message>.	Message pack: EQAIMonNumeric<version> Message ID: AutomationErrorMsg

Monitoring in progress (SR0360.3.6.2)

UI text	Comment
Cannot confirm, since monitoring is in progress.	Message pack: EQAIMonNumeric<version> Message ID: CannotComplete_ErrorMsg

Invalid data format error (SR0360.3.6.3)

UI text	Comment
<ol style="list-style-type: none"> Cannot confirm the overridden values. <empty string> The value entered for <attribute name> has an unsuitable format. Please enter a value that is valid for the <data type name> data type. 	<ol style="list-style-type: none"> Message pack: PhaseEqmAISetManager<version> Message ID: OverrideExceptionConfirmationError_HeaderMsg Message pack: PhaseEqmAISetManager<version> Message ID: Other_ErrorCategory Message pack: PhaseEqmAI<version> Message ID: OverrideInvalidDataFormat_ErrorMsg <p>Potential error cause: The entered text value cannot be converted to a numeric value of the targeted numeric data type.</p>

Output Variables (SR0360.9+)

The following output variables are available to reference the phase's output.

Instance count (Framework capability)

- Data type: Long
- Usage: The output variable provides the count of the number of instances the phase has been processed, for example in a loop. The count is also increased when the phase is skipped from an operator's perspective, since the phase is still executed, but as a hidden phase.
The count variable of a phase that has not been executed provides 0 as output value.

Start time (Framework capability)

- Data type: Timestamp
- Usage: The output variable provides the start time of the phase.

Completion time (Framework capability)

- Data type: Timestamp
- Usage: The output variable provides the completion time of the phase.

Identifier (Framework capability)

- Data type: String
- Usage: The output variable provides the identifier of the phase.

Monitoring exception occurred (SR0360.9.1)

- Data type: Boolean
- Values: `true`, `false`
- Usage: The output variable states if an exception has occurred while the phase was active.

Value (SR0360.9.3)

- Data type: `MeasuredValue`
- Usage: The output variable provides the value and its unit of measure as a **MeasuredValue** object. The value is Null if N/A is the phase result.

Timestamp of tag (SR0360.9.2)

- Data type: Timestamp
- Usage: The output variable provides the timestamp when the value was read.

Get Alarms Phase (SR0365+)

The **Get alarms** phase polls alarm tags within a defined interval of a single equipment entity on the automation layer.

An example use case is:

- **Recording alarms and follow-up actions**
The status of alarm tags is polled every five seconds. In case an alarm has occurred, the alarm itself is documented and, according to the recipe design, related follow-up actions can be executed before the **Get alarms** phase is activated again.

The phase supports up to 20 alarm tags.

The tag quality is not evaluated while determining if an alarm or error condition has been reached.

Different phase modes enable the usage in various situations that can occur during processing:

- In the **Manual completion** mode, the operator manually completes the phase.
- In the **Automatic completion** mode, under certain conditions, the phase is automatically completed without any operator interaction.

The affected equipment entity, the affected alarm property, its alarm identifier, statuses, and timestamps are stored in the batch record, thereby becoming available for documentation purposes in the sub-report and batch report (page 88).

Anomalies that occur during processing are covered by the phase exception handling (page 95) (e.g. tag cannot be read).

The list of occurred alarms is available as phase output. Depending on the recipe design, this list of alarms can be evaluated within a transition condition in order to control related follow-up production steps.

After completion the phase displays the affected alarm property, its tags, and their statuses in the Execution Window.

The Navigator displays the identifier of the affected equipment entity.



Figure 4: Get alarms during execution

Layout

The phase provides individual layouts for its representation during execution (page 86), in the Navigator (page 88), and in the sub-report (page 88).

Representation during Execution (SR0365.1+)

The representation during execution depends on the phase mode.

Preview mode (SR0365.1.1)

1. <Instruction text>
(taken from **Instruction (SR0365.8.1)** process parameter (page 92))
2. Entity:
Property: <property identifier> / <property short description>
(taken from **Alarm property (SR0365.8.4)** process parameter (page 93))
3. Status: N/A
4. List of alarms (with status and identifier)
(taken from **Alarm property (SR0365.8.4)** process parameter (page 93))
5. **Confirm** button (disabled).

Active mode (SR0365.1.2)

1. Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
2. <Instruction text>
(taken from **Instruction (SR0365.8.1)** process parameter (page 92))

3. Entity: <equipment entity identifier>/<equipment entity short description>
(taken from **Identified equipment entity (SR0365.8.2)** process parameter (page 92))
Property: <property identifier> / <property short description>
(taken from **Alarm property (SR0365.8.4)** process parameter (page 93))
4. Status: <status of tag reading>
 - If reading has been stopped: Stopped at <timestamp>
 - If reading is ongoing: Update every: <hh:mm:ss> / Next update: <timestamp>
(taken from **Alarm property (SR0365.8.4)** process parameter (page 93))
5. Overall status <icon>
 - Checkmark, if no alarm has been raised, no error has occurred, and all tags have been read successfully.
 - Alarm symbol, if at least one alarm has been raised, regardless of the statuses of all other tags.
 - Error symbol, if at least one error has occurred and no alarms have been raised, regardless of whether all other alarm tags have been read successfully.
6. List of alarms (with status and identifier)
(taken from **Alarm property (SR0365.8.4)** process parameter (page 93))
 - Checkmark
 - Alarm symbol
 - Error symbol
7. **Confirm** button.

Completed mode (SR0365.1.3)

1. Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
2. <Instruction text>
(taken from **Instruction (SR0365.8.1)** process parameter (page 92))
3. Entity: <equipment entity identifier>/<equipment entity short description>
(taken from **Identified equipment entity (SR0365.8.2)** process parameter (page 92))
Property: <property identifier> / <property short description>
(taken from **Alarm property (SR0365.8.4)** process parameter (page 93))
4. Status: Stopped at <timestamp>
5. Overall status <icon>

- Checkmark, if no alarm has been raised, no error has occurred, and all tags have been read successfully.
 - Alarm symbol, if at least one alarm has been raised, regardless of the statuses of all other tags.
 - Error symbol, if at least one error has occurred and no alarms have been raised, regardless of whether all other alarm tags have been read successfully.
6. List of alarms (with status and identifier)
(taken from **Alarm property (SR0365.8.4)** process parameter (page 93))
- Checkmark
 - Alarm symbol
 - Error symbol
7. **Confirm** button (completed).

Representation in Navigator (SR0365.4+)

The Navigator provides the following details:

Phase column (Framework capability)

- <Phase name>
- Example:
Get mixer alarms

Information column (SR0365.4.1)

- <Identifier of affected equipment entity>
- Example: MixerA12

Action column

- There are no actions available.

Representation in Sub-report (SR0365.5+)

The sub-report contains the following information:

Common sub-report elements (Framework capability)

- <Start time>
- <Completion time>
- <Unit procedure> / <operation> / <phase>
- <Work center> / <station> / <device> - <phase completion user>

Sub-report elements (SR0365.5.1)

- Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
- Instruction text
- Entity (identifier and short description)
- Alarm property (identifier and short description)
- Overall status
- List of alarms
 - Identifier
 - Status (Good, Alarm, Error)
 - Timestamp

Business Logic (SR0365.2+)

The phase implements the following business logic.

Check for alarms (SR0365.2.1)

- Function: Check for alarms of affected equipment entity and property
- Trigger: Phase becomes active
- Postcondition: Check for alarms is completed

Step	#	Description
Phase activation	10	<p>Phase displays its user interface according to the Active mode (SR0365.1.2) layout (page 86).</p> <p>If the alarm check cannot be started, phase displays Invalid property configuration error (SR0365.3.6.2) error message (page 98) or Invalid entity configuration error (SR0365.3.6.3) error message (page 98).</p>
Phase polls tags	20	<p>Within the defined interval (Alarm property (SR0365.8.4) process parameter (page 93)), phase polls alarms tags for their status and updates phase representation.</p> <p>Polling is terminated when</p> <ul style="list-style-type: none"> ■ at least one alarm is raised (see step 30), ■ at least one error has occurred, or ■ the operator confirms the phase (see step 50).

Step	#	Description
Phase behavior when at least one alarm or one error is raised	30	<ul style="list-style-type: none"> ■ Enabled attribute of Alarm exception (SR0365.8.5) process parameter (page 93) is set to Yes: Phase creates Alarm exception (SR0365.3.2.1) system-triggered exception (page 95) and must be completed manually. ■ Enabled attribute of Alarm exception (SR0365.8.5) process parameter (page 93) is set to No: Phase checks setting of Mode (SR0365.8.3) process parameter (page 93) (see step 40).
Phase checks setting of Mode (SR0365.8.3) process parameter (page 93)	40	<ul style="list-style-type: none"> ■ Mode is set to Manual completion: Phase stops checking for alarms. ■ Mode is set to Automatic completion: Phase stops checking for alarms and is completed.
Operator confirms phase	50	<ul style="list-style-type: none"> ■ If value retrieval is in progress, phase cannot perform the Confirm action and displays Value retrieval in progress (SR0365.3.6.1) error message (page 97). ■ Phase checks for not yet recorded Alarm exception (SR0365.3.2.1) system-triggered exceptions (page 95). If no exception has been recorded, at least one alarm is raised, and Enabled attribute of Alarm exception (SR0365.8.5) process parameter (page 93) is set to Yes, phase creates Alarm exception (SR0365.3.2.1) system-triggered exception (page 95) again. ■ Phase is completed.

Process Parameters (SR0365.8+)

The following process parameters define the behavior of the phase.

INSTRUCTION TABLE-SPECIFIC PARAMETERS

Instruction table definition (Framework capability)

Attribute	Type	Comment
Table layout	Choice list	Defines the layout of the instruction table holding the instruction texts. Available settings: 1 column , 2 columns , 3 columns , 4 columns , 5 columns . Default setting: 1 column .

Attribute	Type	Comment
First column narrow	Boolean	Defines if the first column of the table shall be narrow.
Show all borders	Boolean	Defines if the borders of the table shall be visible.

Instruction table text (Framework capability)

Attribute	Type	Comment
Column 1	HTML text	Instruction text to be displayed in a column. Restriction: Maximum length is 2000 characters (including HTML tags).
Column 2	HTML text	
Column 3	HTML text	
Column 4	HTML text	
Column 5	HTML text	

INSTRUCTION LINK-SPECIFIC PARAMETERS

Instruction text with links (Framework capability)

Attribute	Type	Comment
Instruction text	HTML text	Instruction text to be displayed. For any text enclosed in curly brackets you can define a hyperlink with the Instruction link definition process parameter (page 92). Example: Refer to {SOP1270} for guidance. Maximum length is 2000 characters (including HTML tags).

Instruction link definition (Framework capability)

Attribute	Type	Comment
Link text	Text	Text to be used as link. For any text enclosed in curly brackets within the instruction text you can define a link with the Link URL attribute. Including the brackets in the link text is optional. Maximum length is 80 characters.
Link URL	Text	URL of the file to be displayed. The link opens the external application assigned to the file type by the operating system. Maximum length is 256 characters.

BASIC PARAMETERS

Instruction (SR0365.8.1)

Attribute	Type	Comment
Column 1	HTML text	Instruction text to be displayed. Restriction: Maximum length is 2000 characters (including HTML tags).
Column 2	HTML text	Not used.
Column 3	HTML text	

Identified equipment entity (SR0365.8.2)

Attribute	Type	Comment
Equipment object	Reference	Reference to the output of a preceding phase that provides an identified equipment entity.

Mode (SR0365.8.3)

Attribute	Type	Comment
Mode	Choice list	Defines the processing mode. Manual completion (default): Operator confirms the phase. Automatic completion : Phase automatically gets the property value and is completed. In this mode, avoid infinite looping by properly resetting alarms before re-entering the phase.

PROPERTY TYPE PARAMETERS**Alarm property (SR0365.8.4)**

Attribute	Type	Comment
Property	String	Equipment property to be read. Supported property data type: FlexibleTagDefinition with tags of boolean Live Data type.
Update interval	Duration	Defines the interval in hh:mm:ss between read operations. The minimum interval is set to 1 second if the interval is not defined at all or configured to be less than that.

Property Selection editor (Framework capability)

The system provides a Property Selection editor for selecting an equipment property based on its data type (numeric, string, boolean).

CONFIGURATION OF SYSTEM-TRIGGERED EXCEPTIONS**Alarm exception (SR0365.8.5)**

Attribute	Type	Comment
Enabled	Flag	Controls if a check is performed. If so, the phase creates a system-triggered exception when an alarm is raised. Default setting: Yes .

Attribute	Type	Comment
Risk assessment	Choice list	Defines the risk level of the exception and thus controls the related signature privilege. Available settings: None , Low , Low (mandatory comment) , Medium , Medium (mandatory comment) , High , High (mandatory comment) . Default setting: High .
Exception text	Text	Defines the exception description used during exception handling and within the batch record. Maximum length is 250 characters.

See also **Alarm exception (SR0365.3.2.1)** system-triggered exception (page [95](#)).

Unforeseen resume (SR0365.8.6)

Attribute	Type	Comment
Risk assessment	Choice list	Defines the risk level of the exception and thus controls the related signature privilege. Available settings: None , Low , Low (mandatory comment) , Medium , Medium (mandatory comment) , High , High (mandatory comment) . Default setting: High .
Exception text	Text	Defines the exception description used during exception handling and within the batch record. Maximum length is 250 characters.

See also **Unforeseen resume (SR0365.3.2.2)** system-triggered exception (page [96](#)).

Exceptions (SR0365.3+)

The phase supports user-defined, user-triggered (page 97), system-triggered (page 95), and post-completion exceptions (page 97) and their configuration by means of process parameters (page 90).

User-defined exceptions cannot be configured by process parameters since they are provided by the framework and independent of phases.

System-triggered Exceptions (SR0365.3.2+)

A system-triggered exception is represented in a message dialog along with an **Exception** button, in the Exception Window as the read-only description of the exception, and in the batch report.

The following system-triggered exceptions are available.

Alarm exception (SR0365.3.2.1)

Representation of the exception:

- <Exception text>
(taken from **Alarm exception (SR0365.8.5)** process parameter (page 93))
The exception text is extended by additional information specific to the exception case:
 - Alarms and errors:
Received: <alarm identifier 1>; <alarm identifier 2>
Not readable: <alarm identifier 3, non-boolean>;<alarm identifier 4, non-boolean>
 - Alarms:
Received: <alarm identifier 1>; <alarm identifier 2>
 - Errors:
Not readable: <alarm identifier 3, non-boolean>;<alarm identifier 4, non-boolean>
 - Example:
Alarm exception occurred:
Received: AlarmTagSensor1; AlarmTagLidOpen13
Not readable: AlarmTagVessels17

Alarm exception - Logic (SR0365.3.2.1.1)

- Trigger: At least one alarm has been raised or one error has occurred
- Postcondition: Exception is recorded

Step	#	Description
Operator triggers exception	10	Phase records the exception.
	20	Phase returns to Active mode (SR0365.1.2) layout (page 86).

Unforeseen resume (SR0365.3.2.2)

Representation of the exception:

- <Exception text>
(taken from **Unforeseen resume (SR0365.8.6)** process parameter (page 94))
The system has been resumed while monitoring <property identifier>. It must be ensured that the data recorded so far matches the physical situation on the shop floor.
Consider to stop monitoring.
- Example:
A critical resume situation has occurred. Contact your supervisor before proceeding.
The system has been resumed while monitoring AlarmsTagsMixer. It must be ensured that the data recorded so far matches the physical situation on the shop floor.
Consider to stop monitoring.

Unforeseen resume - Logic (SR0365.3.2.2.1)

- Trigger: Monitoring alarms has been interrupted while the phase was active so that the system needs to be resumed
- Postcondition: Phase is back in active mode and alarm monitoring is restarted

Step	#	Description
Phase activation	10	Phase displays the Unforeseen resume (SR0365.3.2.2) system-triggered exception.
Operator triggers exception	20	Phase records the exception.
	30	Phase returns to Active mode (SR0365.1.2) layout (page 86).
	40	Phase restarts alarm monitoring.

User-triggered Exceptions

There are no user-triggered exceptions available.

Post-completion Exceptions

There are no post-completion exceptions available.

Information Messages

There are no information messages available.

Questions

There are no questions available.

Decisions

There are no decisions available.

Error Messages (SR0365.3.6+)

Error messages are represented in an error message dialog containing a message type-specific icon, the error message, and an **OK** button.

They are composed of up to three levels:

1. header,
2. category, and
3. details (not always used).

The following error messages are available to inform the operator about error conditions.

Value retrieval in progress (SR0365.3.6.1)

UI text	Comment
1. Cannot confirm. Please wait while the values are being retrieved.	1. Message pack: PhaseEqmAIGetAlarms<version> Message ID: alarmStatusNotSet_ErrorMsg

Invalid property configuration error (SR0365.3.6.2)

UI text	Comment
<ol style="list-style-type: none"> Cannot start the alert monitoring. <empty string> The <entity identifier> entity does not have a <property identifier> property. 	<ol style="list-style-type: none"> Message pack: PhaseEqmAIGetAlarms<version> Message ID: CheckBeforeExecuteError_HeaderMsg Message pack: PhaseEqmAIGetAlarms<version> Message ID: IrreparableExecution_ErrorCategory Message pack: PhaseEqmAIGetAlarms<version> Message ID: PropertyNotFulfilled_ErrorMsg <p>Potential error cause:</p> <ul style="list-style-type: none"> ■ The property to be read is not defined for the identified equipment entity.

Invalid entity configuration error (SR0365.3.6.3)

UI text	Comment
<ol style="list-style-type: none"> Cannot start the alert monitoring. <empty string> Cannot find the expected entity. 	<ol style="list-style-type: none"> Message pack: PhaseEqmAIGetAlarms<version> Message ID: CheckBeforeExecuteError_HeaderMsg Message pack: PhaseEqmAIGetAlarms<version> Message ID: IrreparableExecution_ErrorCategory Message pack: PhaseEqmAIGetAlarms<version> Message ID: IdentifiedEquipmentNull_ErrorMsg <p>Potential error cause:</p> <ul style="list-style-type: none"> ■ The equipment entity to be used cannot be found. Potentially the recipe parameter is not defined.

Output Variables (SR0365.9+)

The following output variables are available to reference the phase's output.

Instance count (Framework capability)

- Data type: Long
- Usage: The output variable provides the count of the number of instances the phase has been processed, for example in a loop. The count is also increased when the phase is skipped from an operator's perspective, since the phase is still executed, but as a hidden phase.
The count variable of a phase that has not been executed provides 0 as output value.

Start time (Framework capability)

- Data type: Timestamp
- Usage: The output variable provides the start time of the phase.

Completion time (Framework capability)

- Data type: Timestamp
- Usage: The output variable provides the completion time of the phase.

Identifier (Framework capability)

- Data type: String
- Usage: The output variable provides the identifier of the phase.

Alarm tags (SR0365.9.1)

- Data type: String
- Usage: The output variable provides a semicolon-separated list of the tag identifiers for which an alarm has been set. The list is empty if no alarm has occurred.

Overall status (SR0365.9.2)

- Data type: String
- Values: GOOD, ALARM, ERROR
- Usage: The output variable provides the overall status of the alarm tags.
 - The value is GOOD if no alarm has been raised, no error has occurred, and all tags have been read successfully.
 - The value is ALARM if at least one alarm has been raised, regardless of the statuses of all other tags.
 - The value is ERROR if at least one error has occurred and no alarms have been raised, regardless of whether all other alarm tags have been read successfully.

Show Historical Data Chart Phase (SR0110+)

The **Show historical data chart** phase allows to show a time series chart for historical data.

Example use cases are:

- History of a full process run
Display an overview of a full process run with various process parameters. This can be used as a trigger for further analysis with other tools if required.
- History of a specific timeframe
Display a detailed process view of a specific timeframe with one or more process parameters to see if unexpected or irregular values have occurred.

The phase supports FactoryTalk Historian.

TIP

Chart rendering will fail if negative values are to be rendered on a logarithmic scale. Values are only rendered in the chart when they exist at the specific point of time and lie within the configured period and y-axis values of the plot.

The affected equipment entity, the query template, and the time series chart are stored in the batch record, thereby becoming available for documentation purposes in the sub-report and batch report (page 104).

Anomalies that occur during processing are covered by the phase exception handling (page 113) (e.g. no chart available).

After completion the phase displays the affected equipment entity and the time series chart in the Execution Window.

The Navigator displays the identifier of the affected equipment entity.

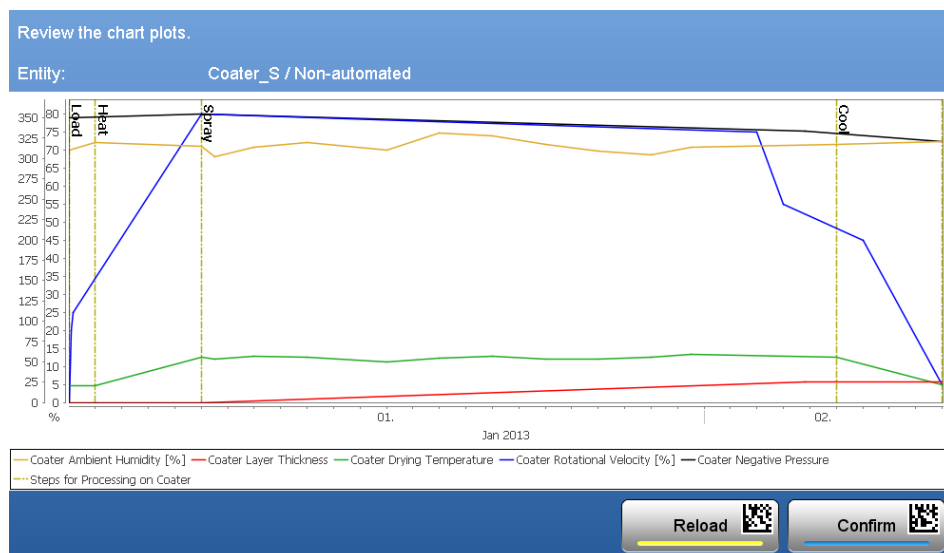


Figure 5: Show historical data chart during execution

Layout

The phase provides individual layouts for its representation during execution (page 102), in the Navigator (page 103), and in the sub-report (page 104).

Representation during Execution (SR0110.1+)

The representation during execution depends on the phase mode.

Preview mode (SR0110.1.1)

1. <Instruction text>
(taken from **Instruction (SR0110.8.1)** process parameter (page 109))
2. Entity:
3. **Reload** button (disabled).
4. **Confirm** button (disabled).

Active mode (SR0110.1.2)

1. Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
2. <Instruction text>
(taken from **Instruction (SR0110.8.1)** process parameter (page 109))
3. Entity: <equipment entity identifier>
(taken from **Identified equipment entity (SR0110.8.2)** process parameter (page 109))
4. Time series chart
(configuration taken from **Chart plot (SR0110.8.3)** process parameter (page 110) and **Chart axis (SR0110.8.4)** process parameter (page 111))
5. **Reload** button.
6. **Confirm** button.

Completed mode (SR0110.1.3)

1. Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
2. <Instruction text>
(taken from **Instruction (SR0110.8.1)** process parameter (page 109))
3. Entity: <equipment entity identifier>
(taken from **Identified equipment entity (SR0110.8.2)** process parameter (page 109))
4. Time series chart
(configuration taken from **Chart plot (SR0110.8.3)** process parameter (page 110) and **Chart axis (SR0110.8.4)** process parameter (page 111))
5. **Reload** button (disabled).
6. **Confirm** button (completed).

Representation in Navigator (SR0110.4+)

The Navigator provides the following details:

Phase column (Framework capability)

- <Phase name>
- Example:
Review Data Chart

Information column (SR0110.4.1)

- <Identifier of affected equipment entity>
- Example: Coater_S

Action column

- There are no actions available.

Representation in Sub-report (SR0110.5+)

The sub-report contains the following information:

Common sub-report elements (Framework capability)

- <Start time>
- <Completion time>
- <Unit procedure> / <operation> / <phase>
- <Work center> / <station> / <device> - <phase completion user>

Sub-report elements (SR0110.5.1)

- Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
- Time series chart
- Instruction text
- Entity (identifier)
- Queries
 - Property (identifier)
 - Query template (identifier)
 - Executed query (symbolic notation with input values represented as string;
not necessarily directly executable due to potentially required data type
conversion functions when executed on SQL layer)

Business Logic (SR0110.2+)

The phase implements the following business logic.

Display chart (SR0110.2.1)

- Function: Display a chart with values from the Historian system
- Trigger: Phase becomes active
- Postcondition: Chart is displayed

Step	#	Description
Check configuration	10	<p>Phase displays its user interface according to the Active mode (SR0110.1.2) layout (page 103) with the chart image placeholder and the embedded text No chart generated.</p> <p>Phase evaluates the configuration of the Identified equipment entity (SR0110.8.2) process parameter (page 109), Chart plot (SR0110.8.3) process parameter (page 110), and Chart axis (SR0110.8.4) process parameter (page 111) for consistency.</p> <p>If one of the following issues occurs, phase displays the Invalid configuration error (SR0110.3.6.1) error message (page 114):</p> <ul style="list-style-type: none"> ■ Identified equipment entity is not defined. ■ Configured chart plot property is not defined for the entity. ■ No Y-axis with a corresponding unit of measure is defined for chart plot property. ■ There are more properties with different units of measure than corresponding y-axes. ■ There are several Y-axes defined with the same unit of measure (duplicate). ■ No query template has been selected for an enabled chart plot. ■ No property has been selected for an enabled chart plot. ■ No plot format has been selected for an enabled chart plot. ■ No Y-axes range values have been defined if Autorange is disabled for an enabled chart axis.
Data retrieval	20	<p>Phase retrieves data from the Historian system based on the parameterized query template.</p> <p>Phase displays chart image placeholder with loading data indicator while retrieving data.</p> <p>If the data cannot be loaded, phase displays the Data retrieval error (SR0110.3.6.2) error message (page 115).</p>

Step	#	Description
Display chart	30	<ul style="list-style-type: none"> ■ If data retrieval was successful, phase saves the generated chart image and displays it. ■ Otherwise, phase displays chart image placeholder with the embedded text No chart generated.

Reload chart (SR0110.2.2)

- Function: Execute data retrieval and update the displayed chart
- Trigger: Operator reloads chart data
- Postcondition: Reloaded chart is displayed

Step	#	Description
Check configuration	10	<p>Phase evaluates the configuration of the Identified equipment entity (SR0110.8.2) process parameter (page 109), Chart plot (SR0110.8.3) process parameter (page 110), and Chart axis (SR0110.8.4) process parameter (page 111) for consistency.</p> <p>If one of the following issues occurs, phase displays the Invalid configuration error (SR0110.3.6.1) error message (page 114):</p> <ul style="list-style-type: none"> ■ Identified equipment entity is not defined. ■ Configured chart plot property is not defined for the entity. ■ No Y-axis with a corresponding unit of measure is defined for chart plot property. ■ There are more properties with different units of measure than corresponding y-axes. ■ There are several Y-axes defined with the same unit of measure (duplicate). ■ No query template has been selected for an enabled chart plot. ■ No property has been selected for an enabled chart plot. ■ No plot format has been selected for an enabled chart plot. ■ No Y-axes range values have been defined if Autorange is disabled for an enabled chart axis.
Data retrieval	20	<p>Phase retrieves data from the Historian system based on the parameterized query template.</p> <p>Phase displays chart image placeholder with loading data indicator while retrieving data.</p> <p>If the data cannot be loaded, phase displays the Data retrieval error (SR0110.3.6.2) error message (page 115).</p>

Step	#	Description
Display chart	30	<ul style="list-style-type: none"> ■ If data retrieval was successful, phase saves the generated chart image and displays it. ■ Otherwise, phase displays chart image placeholder with the embedded text No chart generated.

Confirm phase (SR0110.2.3)

- Function: Completion of phase
- Trigger: Operator confirms phase
- Postcondition: Phase is completed

Step	#	Description
Operator confirms phase	10	<ul style="list-style-type: none"> ■ If no chart is displayed and the Chart unavailable (SR0110.3.1.1) user-triggered exception (page 113) has not been signed, phase displays Chart unavailable error (SR0110.3.6.2) error message (page 116). In this case, the Chart unavailable (SR0110.3.1.1) user-triggered exception (page 113) needs to be recorded before the phase can be completed. ■ Otherwise, phase is completed.

Resume phase (SR0110.2.4)

- Function: Resuming of phase
The phase was in the **Active mode (SR0110.1.2)** status (page 103) when the Production Execution Client was shut down.
- Trigger: At restart of the Production Execution Client, phase is resumed.
- Postcondition: Phase is active

Step	#	Description
System resumes phase	10	Phase displays the chart image placeholder with the embedded text No chart generated.
Display saved chart	20	If the chart has been generated and stored before, phase loads and displays the saved chart image.

Process Parameters (SR0110.8+)

The following process parameters define the behavior of the phase.

INSTRUCTION TABLE-SPECIFIC PARAMETERS

Instruction table definition (Framework capability)

Attribute	Type	Comment
Table layout	Choice list	Defines the layout of the instruction table holding the instruction texts. Available settings: 1 column, 2 columns, 3 columns, 4 columns, 5 columns. Default setting: 1 column.
First column narrow	Boolean	Defines if the first column of the table shall be narrow.
Show all borders	Boolean	Defines if the borders of the table shall be visible.

Instruction table text (Framework capability)

Attribute	Type	Comment
Column 1	HTML text	Instruction text to be displayed in a column. Restriction: Maximum length is 2000 characters (including HTML tags).
Column 2	HTML text	
Column 3	HTML text	
Column 4	HTML text	
Column 5	HTML text	

INSTRUCTION LINK-SPECIFIC PARAMETERS

Instruction text with links (Framework capability)

Attribute	Type	Comment
Instruction text	HTML text	Instruction text to be displayed. For any text enclosed in curly brackets you can define a hyperlink with the Instruction link definition process parameter (page 109). Example: Refer to {SOP1270} for guidance. Maximum length is 2000 characters (including HTML tags).

Instruction link definition (Framework capability)

Attribute	Type	Comment
Link text	Text	Text to be used as link. For any text enclosed in curly brackets within the instruction text you can define a link with the Link URL attribute. Including the brackets in the link text is optional. Maximum length is 80 characters.
Link URL	Text	URL of the file to be displayed. The link opens the external application assigned to the file type by the operating system. Maximum length is 256 characters.

BASIC PARAMETERS**Instruction (SR0110.8.1)**

Attribute	Type	Comment
Column 1	HTML text	Instruction text to be displayed. Restriction: Maximum length is 2000 characters (including HTML tags).
Column 2	HTML text	Not used.
Column 3	HTML text	

Identified equipment entity (SR0110.8.2)

Attribute	Type	Comment
Equipment object	Reference	Reference to the output of a preceding phase that provides an identified equipment entity.

CHART PARAMETERS

Chart plot (SR0110.8.3)

The attributes are available for each of the 16 **Chart plot** process parameters (Plot 1 - Plot 16).

Attribute	Type	Comment
Enabled	Flag	Controls if the plot configuration is used to draw a plot.
Property	String	Historian point to be read.
Query template	Choice list	Defines the template to be used for data retrieval. By default, the system provides three templates: Raw archive data provides all archived data for the history period. Plot data provides the data dedicated to plotting (trending) applications within the history period. Marker (DigitalState) provides the string values within the history period that are available for use as segment markers.
Plot format	Choice list	Defines the plot drawing to be used with regard to line color, thickness, and line pattern.
Timestamp 1	Timestamp	Optional parameter to be passed to the query template for query-specific usage. Evaluated as data retrieval start date and time for system-defined query templates (Raw archive data , Plot data , Marker (DigitalState)).
Timestamp 2	Timestamp	Optional parameter to be passed to the query template for query-specific usage. Evaluated as data retrieval end date and time for system-defined query templates (Raw archive data , Plot data , Marker (DigitalState)).
String 1	String	Optional parameter to be passed to the query template for query-specific usage.

Attribute	Type	Comment
String 2	String	Optional parameter to be passed to the query template for query-specific usage.
Duration	Duration	Optional parameter to be passed to the query template for query-specific usage.
Long	Long	Optional parameter to be passed to the query template for query-specific usage.
MeasuredValue 1	MeasuredValue	Optional parameter to be passed to the query template for query-specific usage.
MeasuredValue 2	MeasuredValue	Optional parameter to be passed to the query template for query-specific usage.

Property Selection editor (Framework capability)

The system provides a Property Selection editor for selecting an equipment property based on its data type (numeric, string, boolean).

Chart axis (SR0110.8.4)

The attributes are available for each of the 4 **Chart axis** process parameters (Axis 1 - Axis 4).

Attribute	Type	Comment
Enabled	Flag	Controls if the axis configuration is used to draw an axis.
Unit of measure	Choice list	Defines the unit of measure for the axis and thus its label.
Minimum	Numeric	The minimum value shown on the y-axis. A value is required if Autorange is disabled.
Maximum	Numeric	The maximum value shown on the y-axis. A value is required if Autorange is disabled.

Attribute	Type	Comment
Autorange	Flag	Defines if the minimum and maximum values of the y-axis are to be determined automatically. If so, the values defined for the Minimum and Maximum attributes are ignored. Default setting: Yes
Scaling mode	Choice list	Defines the scaling mode. Available settings: Linear , Logarithmic . Default setting: Linear .
Number format	String	Defines the format pattern for numeric values. Examples: 0 : Integer portion of a number. 0.0 : Integer portion and one fractional digit. 0.00 : Integer portion and two fractional digits. Default setting: 0 .

CONFIGURATION OF USER-TRIGGERED EXCEPTIONS

Chart unavailable (SR0110.8.5)

Attribute	Type	Comment
Risk assessment	Choice list	Defines the risk level of the exception and thus controls the related signature privilege. Available settings: None , Low , Low (mandatory comment) , Medium , Medium (mandatory comment) , High , High (mandatory comment) . Default setting: High .
Exception text	Text	Defines the exception description used during exception handling and within the batch record. Maximum length is 250 characters.

See also **Chart unavailable (SR0110.3.1.1)** user-triggered exception (page [113](#)).

Exceptions (SR0110.3+)

The phase supports user-defined, user-triggered (page 113), system-triggered (page 113), and post-completion exceptions (page 114) and their configuration by means of process parameters (page 107).

User-defined exceptions cannot be configured by process parameters since they are provided by the framework and independent of phases.

System-triggered Exceptions

There are no system-triggered exceptions available.

User-triggered Exceptions (SR0110.3.1+)

A user-triggered exception is represented in the list of available user-triggered exceptions in the Exception Window, as the description of the exception, and in the batch report.

The following user-triggered exceptions are available.

Chart unavailable (SR0110.3.1.1)

The **Chart unavailable** exception allows an operator to confirm the phase without a chart.

Representation during exception handling:

- Instruction:
Confirm without chart.
Confirm button.
- Exception text:
<Exception text>
(taken from **Chart unavailable (SR0110.8.5)** process parameter (page 112))
- Example:
Confirmed without chart.

Chart unavailable - Logic (SR0110.3.1.1.1)

- Trigger: Exception is selected
- Postcondition: Phase can be confirmed

Step	#	Description
Operator confirms exception	10	Phase shows exception description to be signed according to Chart unavailable (SR0110.8.5) process parameter (page 112).
Operator signs exception	20	Phase records the exception.

Step	#	Description
Phase activation	30	Phase returns to the Active mode (SR0110.1.2) layout (page 103) and disables the Reload button.

Post-completion Exceptions

There are no post-completion exceptions available.

Information Messages

There are no information messages available.

Questions

There are no questions available.

Decisions

There are no decisions available.

Error Messages (SR0110.3.6+)

Error messages are represented in an error message dialog containing a message type-specific icon, the error message, and an **OK** button.

The following error messages are available to inform the operator about error conditions.

Invalid configuration error (SR0110.3.6.1)

UI text	Comment
One or more configuration errors have occurred:	Message pack: PhaseShwHstDatChrt<version> Message ID: InvalidConfigurationError_Category
Entity not defined.	Message pack: PhaseShwHstDatChrt<version> Message ID: EntityUndefined_ErrorMsg
<entity identifier> entity has no <property identifier> property. (<parameter ID>) ... <entity identifier> entity has no <property identifier> property. (<parameter ID>)	Message pack: PhaseShwHstDatChrt<version> Message ID: EntityHasNoProperty_ErrorMsg

UI text	Comment
No Y-axis for <UoM> defined for <property identifier> property. (<parameter ID>) ... No Y-axis for <UoM> defined for <property identifier> property. (<parameter ID>)	Message pack: PhaseShwHstDatChrt<version> Message ID: UOMUndefinedForYAxis_ErrorMsg
No Y-axis without unit of measure defined for <property identifier> property. (<parameter ID>) ... No Y-axis without unit of measure defined for <property identifier> property. (<parameter ID>)	Message pack: PhaseShwHstDatChrt<version> Message ID: NoUOMUndefinedForYAxis_ErrorMsg
Too many different units of measure defined to be displayed on available Y-axes.	Message pack: PhaseShwHstDatChrt<version> Message ID: TooManyUOMsDefined_ErrorMsg
A unit of measure has been defined more than once for the Y-axes.	Message pack: PhaseShwHstDatChrt<version> Message ID: DuplicatedUOMForYAxis_ErrorMsg
Query template not defined. (<parameter ID>, ...)	Message pack: PhaseShwHstDatChrt<version> Message ID: UndefinedQueryTemplate_ErrorMsg
Property not defined. (<parameter ID>, ...)	Message pack: PhaseShwHstDatChrt<version> Message ID: UndefinedPropertyType_ErrorMsg
Plot format not defined. (<parameter ID>, ...)	Message pack: PhaseShwHstDatChrt<version> Message ID: UndefinedPlotFormat_ErrorMsg
Range not defined. (<parameter ID>, ...)	Message pack: PhaseShwHstDatChrt<version> Message ID: UndefinedRange_ErrorMsg

Data retrieval error (SR0110.3.6.2)

UI text	Comment
Cannot retrieve the requested data. Please contact your system administrator.	Message pack: PhaseShwHstDatChrt<version> Message ID: ChartGeneration_ErrorMsg

Chart unavailable error (SR0110.3.6.3)

UI text	Comment
Cannot complete the phase, since there is no chart available.	Message pack: PhaseShwHstDatChrt<version> Message ID: ChartUnavailable_ErrorMsg

Output Variables (SR0110.9+)

The following output variables are available to reference the phase's output.

Instance count (Framework capability)

- Data type: Long
- Usage: The output variable provides the count of the number of instances the phase has been processed, for example in a loop. The count is also increased when the phase is skipped from an operator's perspective, since the phase is still executed, but as a hidden phase.
The count variable of a phase that has not been executed provides 0 as output value.

Start time (Framework capability)

- Data type: Timestamp
- Usage: The output variable provides the start time of the phase.

Completion time (Framework capability)

- Data type: Timestamp
- Usage: The output variable provides the completion time of the phase.

Identifier (Framework capability)

- Data type: String
- Usage: The output variable provides the identifier of the phase.

Chart available (SR0110.9.1)

- Data type: Boolean
- Usage: The output variable states if the chart is available (TRUE) or not (FALSE).

Configuration Keys (SR0110.11+)

The following configuration keys are available to configure the phase's behavior.

Chart resolution (SR0110.11.1)

- **Phase/ShowHistoricalDataChartPhase/HistoricalDataChartReportResolution**
- **Type:** String
- **Value:** 300
- **Description:** Defines the chart resolution in DPI for batch report printout.
- **Range:** N/A

Anti-aliasing for plots (SR0110.11.4)

- **Phase/ShowHistoricalDataChartPhase/HistoricalDataChartsetPlotAntiAlias**
- **Type:** Boolean
- **Value:** True
- **Description:** If the value is set to **true**, anti-aliasing is enabled for plots.
- **Range:** N/A

Anti-aliasing for text (SR0110.11.5)

- **Phase/ShowHistoricalDataChartPhase/HistoricalDataChartsetTextAntiAlias**
- **Type:** Boolean
- **Value:** False
- **Description:** If the value is set to **true**, anti-aliasing is enabled for text.
- **Range:** N/A

Plot renderers (SR0110.11.2)

- **Phase/ShowHistoricalDataChartPhase/PlotRenderers**
- **Type:** Object - List
- **Value:**

```
<?xml version="1.0" encoding="UTF-8"?>
<plotRenderers xmlns="http://www.rockwell.com/mes/commons/base/graph">
  <plotRenderer name="Black" description="Black solid 1.5pt">
    <paint red="0" green="0" blue="0"/>
    <stroke/>
  </plotRenderer>
  <plotRenderer name="Red" description="Red solid 1.5pt">
    <paint red="255" green="0" blue="0"/>
  </plotRenderer>
</plotRenderers>
```

```

    <stroke/>
  </plotRenderer>
  <plotRenderer name="Green" description="Green solid 1.5pt">
    <paint red="32" green="172" blue="32"/>
    <stroke/>
  </plotRenderer>
  <plotRenderer name="Blue" description="Blue solid 1.5pt">
    <paint red="0" green="0" blue="255"/>
    <stroke/>
  </plotRenderer>
  <plotRenderer name="Magenta" description="Magenta solid 1.5pt">
    <paint red="255" green="0" blue="255"/>
    <stroke/>
  </plotRenderer>
  <plotRenderer name="Cyan" description="Cyan solid 1.5pt">
    <paint red="0" green="223" blue="218"/>
    <stroke/>
  </plotRenderer>
  <plotRenderer name="Orange" description="Orange solid 1.5pt">
    <paint red="225" green="170" blue="40"/>
    <stroke/>
  </plotRenderer>
  <plotRenderer name="Light green" description="Light green solid 1.5pt">
    <paint red="0" green="226" blue="0"/>
    <stroke/>
  </plotRenderer>
  <plotRenderer name="Light blue" description="Light blue solid 1.5pt">
    <paint red="33" green="160" blue="223"/>
    <stroke/>
  </plotRenderer>
  <plotRenderer name="Purple" description="Purple solid 1.5pt">
    <paint red="161" green="67" blue="255"/>
    <stroke/>
  </plotRenderer>
  <plotRenderer name="Light red" description="Light red solid 1.5pt">
    <paint red="255" green="125" blue="125"/>
    <stroke/>
  </plotRenderer>
  <plotRenderer name="Petrol" description="Petrol solid 1.5pt">
    <paint red="18" green="157" blue="140"/>
    <stroke/>
  </plotRenderer>
  <plotRenderer name="Brown" description="Brown solid 1.5pt">
    <paint red="124" green="90" blue="76"/>
    <stroke/>
  </plotRenderer>
  <plotRenderer name="Tan" description="Tan solid 1.5pt">
    <paint red="179" green="175" blue="13"/>
    <stroke/>
  </plotRenderer>
  <plotRenderer name="Livid" description="Livid solid 1.5pt">
    <paint red="113" green="135" blue="199"/>
    <stroke/>
  </plotRenderer>
  <plotRenderer name="Dark red" description="Dark red solid 1.5pt">
    <paint red="192" green="80" blue="77"/>
    <stroke/>
  </plotRenderer>
  <plotRenderer name="Tan dash dot" description="Tan dash-dotted 1.5pt">
    <paint red="179" green="175" blue="13"/>
    <stroke lineJoin="1" miterLimit="3.0">
      <dashArray>6.0</dashArray>
    </stroke>
  </plotRenderer>

```

```

    <dashArray>3.0</dashArray>
    <dashArray>1.0</dashArray>
    <dashArray>3.0</dashArray>
  </stroke>
</plotRenderer>
<plotRenderer name="Black dashed" description="Black dashed 1.5">
  <paint red="0" green="0" blue="0"/>
  <stroke>
    <dashArray>6.0</dashArray>
    <dashArray>3.0</dashArray>
  </stroke>
</plotRenderer>
</plotRenderers>

```

- **Description:** Specifies the list of plot renderers available for the plot-related process parameters of the **Show historical data chart** phase.
For more information, please refer to section "Configuring Plot Styles for Historical Data Charts", chapter "Administration" in "Technical Manual Phases of the Equipment Automation Package" [A4] (page 123).

- **Range:** N/A

Query templates (SR0110.11.3)

- **Phase/ShowHistoricalDataChartPhase/QueryTemplates**
- **Type:** Object - List
- **Value:**

```

<QueryTemplates xmlns="http://www.rockwell.com/mes/commons/base/query">
  <QueryTemplate name="Raw archive data" description="All raw archive values within defined
    period." usage="chart">
    <Parameters>
      <Parameter name="Property" description="pi-point" datatype="String"
        systemdefined="true"/>
      <Parameter name="Timestamp1" description="start-time" datatype="DateTime"/>
      <Parameter name="Timestamp2" description="end-time" datatype="DateTime"/>
    </Parameters>
    <Outputs>
      <Parameter name="value" description="numeric tag value" datatype="Float"
        systemdefined="true"/>
      <Parameter name="time" description="time stamp" datatype="DateTime"
        systemdefined="true"/>
    </Outputs>
    <Query provider="OSI PI">SELECT if status = 0 THEN value ELSE null "value", time FROM
      piarchive..picomp WHERE tag=%Property% AND time BETWEEN %Timestamp1% AND
      %Timestamp2%</Query>
    </QueryTemplate>
  <QueryTemplate name="Plot data" description="Data dedicated to plotting (trending)
    applications within defined period." usage="chart">
    <Parameters>
      <Parameter name="Property" description="pi-point" datatype="String"
        systemdefined="true"/>
      <Parameter name="Timestamp1" description="start-time" datatype="DateTime"/>
      <Parameter name="Timestamp2" description="end-time" datatype="DateTime"/>
      <Parameter name="intervalCount" description="#ofPixels" datatype="Long"
        systemdefined="true"/>
    </Parameters>

```

```

<Outputs>
  <Parameter name="value" description="numeric tag value" datatype="Float"
    systemdefined="true"/>
  <Parameter name="time" description="time stamp" datatype="DateTime"
    systemdefined="true"/>
</Outputs>
<Query provider="OSI_PI">SELECT if status = 0 THEN value ELSE null "value", time FROM
  piarchive..piplot WHERE tag=%Property% AND time BETWEEN %Timestamp1% AND
  %Timestamp2% AND intervalCount = %intervalCount%</Query>
</QueryTemplate>
<QueryTemplate name="Marker (DigitalState)" description="All digital state string values
  for chart within defined period used as segment markers." usage="chart">
  <Parameters>
    <Parameter name="Property" description="pi-point" datatype="String"
      systemdefined="true"/>
    <Parameter name="Timestamp1" description="start-time" datatype="DateTime"/>
    <Parameter name="Timestamp2" description="end-time" datatype="DateTime"/>
  </Parameters>
  <Outputs>
    <Parameter name="value" description="string tag value" datatype="String"
      systemdefined="true"/>
    <Parameter name="time" description="time stamp" datatype="DateTime"
      systemdefined="true"/>
  </Outputs>
  <Query provider="OSI_PI">SELECT DIGSTRING(status) "value", time FROM piarchive..picomp
    WHERE tag=%Property% AND time BETWEEN %Timestamp1% AND %Timestamp2%</Query>
</QueryTemplate>
</QueryTemplates>

```

- **Description:** Specifies the list of query templates available for the plot-related process parameters of the **Show historical data chart** phase.
For more information, please refer to section "Configuring Query Templates for Historical Data Charts", chapter "Administration" in "Technical Manual Phases of the Equipment Automation Package" [A4] (page [123](#)).
- **Range:** N/A

Provide shortcuts (SR0110.11.6)

- **Phase/ShowHistoricalDataChartPhase/ProviderShortcuts**
- **Type:** List
- **Value:** (PiConnector=OSI_PI,
PiMockConnector=CSV MOCK)
- **Description:** Defines shortcuts for providers. The shortcuts can be used within QueryTemplateXML, e.g. <Query provider="OSI_PI">.
Each entry must be formatted as follows: key=value, e.g. PiConnector=OSI_PI
- **Range:** N/A

Performance (SR0110.12+)

Reference scenario

The reference scenario holds a total of:

- 16 Historian properties

Data volume perspective:

- 4 properties with less than 100 data points retrieved
- 5 properties with more than 2,000 data points retrieved
- 3 properties with more than 4,000 data points retrieved
- 4 properties with more than 20,000 data points retrieved

Query template perspective:

- 8 properties using the **Raw archive data** query template
- 6 properties using the **Plot data** query template
- 2 properties using the **Marker (DigitalState)** query template
- 3 different query templates for data retrieval (**Raw archive data**, **Plot data**, **Marker (DigitalState)**)

Example for **Raw archive data** query template:

- ```
SELECT if status = 0 THEN value ELSE null "value", time FROM
piarchive..picomp WHERE tag=%Property% AND time BETWEEN
%Timestamp1% AND %Timestamp2%
```

Each: 3 subsequent operations

- 14 days as duration for data retrieval

The setup of the Historian Infrastructure for PharmaSuite is performed using the normal access topology as defined in Automation Integration Configuration Scenarios (see "Technical Manual Installation" [A3] (page [123](#))).

### Performance of Chart Rendering (SR0110.12.1)

Based on the Reference scenario (page [121](#)), the rendering of a trend chart does not take longer than 10 seconds in the PharmaSuite system test environment. The duration is measured between activation of the phase and displaying the chart image.

- 
- 
- FT PharmaSuite® 10.01.00 - Functional Requirement Specification Equipment Automation Phases
- 
-

## Reference Documents

The following documents are available from the Rockwell Automation Download Site.

| No. | Document Title                                                                  | Part Number         |
|-----|---------------------------------------------------------------------------------|---------------------|
| A1  | PharmaSuite Functional Requirement Specification Execution Framework            | PSFRSEF-RM006B-EN-E |
| A2  | PharmaSuite Functional Requirement Specification Recipe and Workflow Management | PSFRSRD-RM010B-EN-E |
| A3  | PharmaSuite Technical Manual Installation                                       | PSES-IN010B-EN-E    |
| A4  | PharmaSuite Technical Manual Phases of the Equipment Automation Package         | PSEA-PM004B-EN-E    |

**TIP**

To access the Rockwell Automation Download Site, you need to acquire a user account from Rockwell Automation Sales or Support.

- 
- 
- FT PharmaSuite® 10.01.00 - Functional Requirement Specification Equipment Automation Phases
- 
-



## Document Information

The document information covers various data related to the document.

### Approval

This document has been approved electronically via the Rockwell Automation Document Management System (DMS). The required approvers of this document include the following:

| Name          | Role           |
|---------------|----------------|
| Norbert Ern   | Product Owner  |
| Fabian Hofsäß | Technical Lead |
| Ignaz Wangler | Test Lead      |

### Version Information

| Object                               | Version  |
|--------------------------------------|----------|
| PharmaSuite                          | 10.01.00 |
| Get OPC values                       | 1.0 MR4  |
| Set OPC values                       | 1.0 MR4  |
| Monitor numeric value                | 1.0 MR4  |
| Get alarms                           | 1.0 MR4  |
| Show historical data chart           | 1.0 MR6  |
| Functional Requirement Specification | 1.0      |

## Revision History

The following tables describe the history of this document.

Changes related to the document:

| Object | Description | Document |
|--------|-------------|----------|
| ---    | ---         | ---      |

Changes related to "Get OPC Values Phase" (page 3):

| Object                                                          | Description                             | Document |
|-----------------------------------------------------------------|-----------------------------------------|----------|
| Active Mode (SR0341.1.2)<br>(page 5)                            | Update<br>Instruction link panel added. | 1.0      |
| Completed Mode (SR0341.1.3)<br>(page 6)                         | Update<br>Instruction link panel added. | 1.0      |
| Instruction Text with Links<br>(Framework Capability) (page 13) | New process parameter.                  | 1.0      |
| Instruction Link Definition<br>(Framework Capability) (page 13) | New process parameter.                  | 1.0      |

Changes related to "Set OPC Values Phase" (page 37):

| Object                                                          | Description                             | Document |
|-----------------------------------------------------------------|-----------------------------------------|----------|
| Active Mode (SR0342.1.2)<br>(page 39)                           | Update<br>Instruction link panel added. | 1.0      |
| Completed Mode (SR0342.1.3)<br>(page 40)                        | Update<br>Instruction link panel added. | 1.0      |
| Instruction Text with Links<br>(Framework Capability) (page 48) | New process parameter.                  | 1.0      |
| Instruction Link Definition<br>(Framework Capability) (page 48) | New process parameter.                  | 1.0      |

Changes related to "Monitor Numeric Value Phase" (page 67):

| Object                                                          | Description                             | Document |
|-----------------------------------------------------------------|-----------------------------------------|----------|
| Active Mode (SR0360.1.2)<br>(page 69)                           | Update<br>Instruction link panel added. | 1.0      |
| Completed Mode (SR0360.1.3)<br>(page 69)                        | Update<br>Instruction link panel added. | 1.0      |
| Instruction Text with Links<br>(Framework Capability) (page 73) | New process parameter.                  | 1.0      |
| Instruction Link Definition<br>(Framework Capability) (page 74) | New process parameter.                  | 1.0      |

Changes related to "Get Alarms Phase" (page 85):

| Object                                                          | Description                             | Document |
|-----------------------------------------------------------------|-----------------------------------------|----------|
| Active Mode (SR0365.1.2)<br>(page 86)                           | Update<br>Instruction link panel added. | 1.0      |
| Completed Mode (SR0365.1.3)<br>(page 87)                        | Update<br>Instruction link panel added. | 1.0      |
| Instruction Text with Links<br>(Framework Capability) (page 91) | New process parameter.                  | 1.0      |
| Instruction Link Definition<br>(Framework Capability) (page 92) | New process parameter.                  | 1.0      |

Changes related to "Show Historical Data Chart Phase" (page 101):

| Object                                                           | Description                             | Document |
|------------------------------------------------------------------|-----------------------------------------|----------|
| Active Mode (SR0110.1.2)<br>(page 103)                           | Update<br>Instruction link panel added. | 1.0      |
| Completed Mode (SR0110.1.3)<br>(page 103)                        | Update<br>Instruction link panel added. | 1.0      |
| Instruction Text with Links<br>(Framework Capability) (page 108) | New process parameter.                  | 1.0      |

- 
- 
- FT PharmaSuite® 10.01.00 - Functional Requirement Specification Equipment Automation Phases
- 
- 

| Object                                                                               | Description            | Document |
|--------------------------------------------------------------------------------------|------------------------|----------|
| Instruction Link Definition<br>(Framework Capability) (page<br><a href="#">109</a> ) | New process parameter. | 1.0      |

**C**

## Compliance-related

- SR0110.3+ - Exceptions (Show historical data chart) • 113
- SR0341.3+ - Exceptions (Get OPC values) • 21
- SR0342.3+ - Exceptions (Set OPC values) • 52
- SR0360.3+ - Exceptions (Monitor numeric value) • 78
- SR0365.3+ - Exceptions (Get alarms) • 95

## Conventions (typographical) • 1

**F**

## Framework capability

- Bundle output variable (Get OPC values, Boolean property) • 34
- Bundle output variable (Get OPC values, Numeric property) • 35
- Bundle output variable (Get OPC values, String property) • 36
- Bundle output variable (Set OPC values, Boolean property) • 64
- Bundle output variable (Set OPC values, Numeric property) • 65
- Bundle output variable (Set OPC values, String property) • 66
- Bundle process parameters (Get OPC values, Boolean property) • 15
- Bundle process parameters (Get OPC values, Numeric property) • 17
- Bundle process parameters (Get OPC values, String property) • 19
- Bundle process parameters (Set OPC values, Boolean property) • 50
- Bundle process parameters (Set OPC values, Numeric property) • 51
- Bundle process parameters (Set OPC values, String property) • 52
- Common sub-report elements (Get alarms) • 88

- Common sub-report elements (Get OPC values) • 7
- Common sub-report elements (Monitor numeric value) • 70
- Common sub-report elements (Set OPC values) • 41
- Common sub-report elements (Show historical data chart) • 104
- Completion time (Get alarms) • 99
- Completion time (Get OPC values) • 33
- Completion time (Monitor numeric value) • 83
- Completion time (Set OPC values) • 63
- Completion time (Show historical data chart) • 116
- Identifier (Get alarms) • 99
- Identifier (Get OPC values) • 34
- Identifier (Monitor numeric value) • 83
- Identifier (Set OPC values) • 64
- Identifier (Show historical data chart) • 116
- Instance count (Get alarms) • 99
- Instance count (Get OPC values) • 33
- Instance count (Monitor numeric value) • 83
- Instance count (Set OPC values) • 63
- Instance count (Show historical data chart) • 116
- Instruction link definition (Get alarms) • 92
- Instruction link definition (Get OPC values) • 13
- Instruction link definition (Monitor numeric value) • 74
- Instruction link definition (Set OPC values) • 48
- Instruction link definition (Show historical data chart) • 109
- Instruction table definition (Get alarms) • 90
- Instruction table definition (Get OPC values) • 12
- Instruction table definition (Monitor numeric value) • 73
- Instruction table definition (Set OPC values) • 47
- Instruction table definition (Show historical data chart) • 108
- Instruction table text (Get alarms) • 91
- Instruction table text (Get OPC values) • 13
- Instruction table text (Monitor numeric value) • 73
- Instruction table text (Set OPC values) • 47

Instruction table text (Show historical data chart) • 108  
Instruction text with links (Get alarms) • 91  
Instruction text with links (Get OPC values) • 13  
Instruction text with links (Monitor numeric value) • 73  
Instruction text with links (Set OPC values) • 48  
Instruction text with links (Show historical data chart) • 108  
Phase column (Get alarms) • 88  
Phase column (Get OPC values) • 7  
Phase column (Monitor numeric value) • 70  
Phase column (Set OPC values) • 41  
Phase column (Show historical data chart) • 103  
Property Selection editor (Get alarms) • 93  
Property Selection editor (Get OPC values, Boolean property) • 15  
Property Selection editor (Get OPC values, Numeric property) • 17  
Property Selection editor (Get OPC values, String property) • 20  
Property Selection editor (Monitor numeric value) • 75  
Property Selection editor (Set OPC values, Boolean property) • 50  
Property Selection editor (Set OPC values, Numeric property) • 51  
Property Selection editor (Set OPC values, String property) • 52  
Property selection editor (Show historical data) • 110  
Start time (Get alarms) • 99  
Start time (Get OPC values) • 33  
Start time (Monitor numeric value) • 83  
Start time (Set OPC values) • 63  
Start time (Show historical data chart) • 116

## G

Get alarms (SR0365+) • 85  
Action column • 88  
Active mode (SR0365.1.2) • 86  
Alarm exception - Logic (SR0365.3.2.1.1) • 95  
Alarm exception (SR0365.3.2.1) • 95  
Alarm exception (SR0365.8.5) • 93  
Alarm property (SR0365.8.4) • 93

Alarm tags (SR0365.9.1) • 99  
Business logic (SR0365.2+) • 89  
Check for alarms (SR0365.2.1) • 89  
Common sub-report elements (Framework capability) • 88  
Completed mode (SR0365.1.3) • 87  
Completion time (Framework capability) • 99  
Decisions • 97  
Error messages (SR0365.3.6+) • 97  
Exceptions (SR0365.3+) • 95  
Identified equipment entity (SR0365.8.2) • 92  
Identifier (Framework capability) • 99  
Information column (SR0365.4.1) • 88  
Information messages • 97  
Instance count (Framework capability) • 99  
Instruction (SR0365.8.1) • 92  
Instruction link definition (Framework capability) • 92  
Instruction table definition (Framework capability) • 90  
Instruction table text (Framework capability) • 91  
Instruction text with links (Framework capability) • 91  
Invalid entity configuration error (SR0365.3.6.3) • 98  
Invalid property configuration error (SR0365.3.6.2) • 98  
Mode (SR0365.8.3) • 93  
Output variables (SR0365.9+) • 99  
Overall status (SR0365.9.2) • 100  
Phase column • 88  
Post-completion exceptions • 97  
Preview mode (SR0365.1.1) • 86  
Process parameters (SR0365.8+) • 90  
Property Selection editor (Framework capability) • 93  
Questions • 97  
Representation during execution (SR0365.1+) • 86  
Representation in Navigator (SR0365.4+) • 88  
Representation in sub-report (SR0365.5+) • 88  
Start time (Framework capability) • 99  
Sub-report elements (SR0365.5.1) • 89  
System-triggered exceptions (SR0365.3.2+) • 95  
Unforeseen resume - Logic (SR0365.3.2.2.1) • 96  
Unforeseen resume (SR0365.3.2.2) • 96  
Unforeseen resume (SR0365.8.6) • 94  
User-triggered exceptions • 97

- Value retrieval in progress (SR0365.3.6.1) • 97
- Get OPC values (SR0341+) • 3
  - Action column • 7
  - Active mode (SR0341.1.2) • 5
  - Automatic completion mode (SR0341.2.2) • 9
  - Automation error (SR0341.3.6.3) • 30
  - Automation get successful (Boolean property) (SR0341.9.10) • 34
  - Automation get successful (Numeric property) (SR0341.9.4) • 35
  - Automation get successful (SR0341.9.1) • 34
  - Automation get successful (String property) (SR0341.9.7) • 36
  - Bundle output variable (Boolean property, Framework capability) • 34
  - Bundle output variable (Numeric property, Framework capability) • 35
  - Bundle output variable (String property, Framework capability) • 36
  - Bundle process parameters (Boolean property, Framework capability) • 15
  - Bundle process parameters (Numeric property, Framework capability) • 17
  - Bundle process parameters (String property, Framework capability) • 19
  - Business logic (SR0341.2+) • 8
  - Common sub-report elements (Framework capability) • 7
  - Completed mode (SR0341.1.3) • 6
  - Completion time (Framework capability) • 33
  - Confirm phase (SR0341.2.4) • 11
  - Decisions • 29
  - Error messages (SR0341.3.6+) • 30
  - Exceptions (SR0341.3+) • 21
  - Expected value configuration (Boolean property) (SR0341.8.13) • 16
  - Expected value configuration (String property) (SR0341.8.10) • 20
  - Expected value definition (Boolean property) (SR0341.8.14) • 16
  - Expected value definition (String property) (SR0341.8.11) • 21
  - Get OPC values phase - Performance (SR0341.12+) • 36
  - Get values (SR0341.2.3) • 9
  - Identified equipment entity (SR0341.8.2) • 14
  - Identifier (Framework capability) • 34
  - Information column (SR0341.4.1) • 7
  - Information messages (Sr034.3.4+) • 29
  - Instance count (Framework capability) • 33
  - Instruction (SR0341.8.1) • 14
  - Instruction link definition (Framework capability) • 13
  - Instruction table definition (Framework capability) • 12
  - Instruction table text (Framework capability) • 13
  - Instruction text with links (Framework capability) • 13
  - Invalid configuration error (SR0341.3.6.1) • 30
  - Invalid data format error (SR0341.3.6.8) • 32
  - L-H configuration (SR0341.8.6) • 17
  - Limit definition (SR0341.8.8) • 19
  - Limit violation - Logic (SR0341.3.2.1.1) • 21
  - Limit violation (SR0341.3.2.1) • 21
  - LL-HH configuration (SR0341.8.7) • 18
  - Manual completion mode (SR0341.2.1) • 8
  - Master (Bundle identifier) (Boolean property) (SR0341.8.12) • 15
  - Master (Bundle identifier) (Numeric property) (SR0341.8.5) • 17
  - Master (Bundle identifier) (String property) (SR0341.8.9) • 20
  - Mode (SR0341.8.3) • 14
  - Multiple exceptions (SR0341.3.1.4) • 28
  - Multiple system-triggered exceptions (SR0341.3.2.2) • 23
  - No get result error (SR0341.3.6.5) • 31
  - No value overridden (Boolean property) (SR0341.3.6.11) • 32
  - No value overridden (Numeric property) (SR0341.3.6.9) • 33
  - No value overridden (String property) (SR0341.3.6.10) • 33
  - Output variables (SR0341.9+) • 33

Override recorded value - Logic (Boolean property)  
(SR0341.3.1.3.1) • 23

Override recorded value - Logic (Numeric property)  
(SR0341.3.1.1.1) • 25

Override recorded value - Logic (String property)  
(SR0341.3.1.2.1) • 26

Override recorded value (Boolean property)  
(SR0341.3.1.3) • 23

Override recorded value (Numeric property)  
(SR0341.3.1.1) • 25

Override recorded value (SR0341.8.4) • 15

Override recorded value (String property)  
(SR0341.3.1.2) • 26

Override value recorded (SR0341.3.4.1) • 29

Performance of get activity (SR0341.12.1) • 36

Phase column (Framework capability) • 7

Post-completion exceptions • 28

Preview mode (SR0341.1.1) • 4

Process parameters (SR0341.8+) • 12

Property Selection editor (Boolean property,  
Framework capability) • 15

Property Selection editor (Numeric property,  
Framework capability) • 17

Property Selection editor (String property, Framework  
capability) • 20

Questions • 29

Recorded values incomplete (SR0341.3.6.7) • 32

Representation during execution (SR0341.1+) • 4

Representation in Navigator (SR0341.4+) • 7

Representation in sub-report (SR0341.5+) • 7

Start time (Framework capability) • 33

Sub-report elements (SR0341.5.1) • 7

System error (SR0341.3.6.4) • 31

System-triggered exceptions (SR0341.3.2+) • 21

Unit of measure (Numeric property) (SR0341.9.3) • 35

User-triggered exceptions (SR0341.3.1+) • 23

Value (Boolean property) (SR0341.9.9) • 34

Value (Numeric property) (SR0341.9.2) • 35

Value (String property) (SR0341.9.6) • 36

## M

Monitor numeric value (SR0360+) • 67

Action column • 70

Active mode (SR0360.1.2) • 69

Automation error (SR0360.3.6.1) • 82

Business logic (SR0360.2+) • 71

Common sub-report elements (Framework capability) •  
70

Completed mode (SR0360.1.3) • 69

Completion time (Framework capability) • 83

Decisions • 81

Error messages (SR0360.3.6+) • 82

Exceptions (SR0360.3+) • 78

Identified equipment entity (SR0360.8.2) • 74

Identifier (Framework capability) • 83

Information column (SR0360.4.1) • 70

Information messages • 81

Instance count (Framework capability) • 83

Instruction (SR0360.8.1) • 74

Instruction link definition (Framework capability) • 74

Instruction table definition (Framework capability) • 73

Instruction table text (Framework capability) • 73

Instruction text with links (Framework capability) • 73

Invalid data format error (SR0360.3.6.3) • 82

Mode (SR0360.8.3) • 75

Monitor a numeric value (SR0360.2.1) • 71

Monitoring exception - Logic (SR0360.3.2.1.1) • 78

Monitoring exception (SR0360.3.2.1) • 78

Monitoring exception (SR0360.8.5) • 76

Monitoring exception occurred (SR0360.9.1) • 83

Monitoring in progress (SR0360.3.6.2) • 82

Numeric property (SR0360.8.4) • 75

Output variables (SR0360.9+) • 83

Phase column (Framework capability) • 70

Post-completion exceptions • 81

Preview mode (SR0360.1.1) • 68

Process parameters (SR0360.8+) • 72

Property Selection editor (Framework capability) • 75

Questions • 81

Representation during execution (SR0360.1+) • 68

Representation in Navigator (SR0360.4+) • 70



Representation in sub-report (SR0360.5+) • 70  
 Start time (Framework capability) • 83  
 Stop monitoring and record result - Logic  
   (SR0360.3.1.1.1) • 80  
 Stop monitoring and record result (SR0360.3.1.1) • 80  
 Stop monitoring and record result (SR0360.8.6) • 77  
 Sub-report elements (SR0360.5.1) • 70  
 System-triggered exceptions (SR0360.3.2+) • 78  
 Timestamp of tag (SR0360.9.2) • 84  
 Unforeseen resume - Logic (SR0360.3.2.2.1) • 79  
 Unforeseen resume (SR0360.3.2.2) • 79  
 Unforeseen resume (SR0360.8.7) • 77  
 User-triggered exceptions (SR0360.3.1+) • 80  
 Value (SR0360.9.3) • 83

## S

Set OPC values (SR0342+) • 37  
 Action column • 41  
 Active mode (SR0342.1.2) • 39  
 Automatic completion mode (SR0342.2.2) • 43  
 Automation error (SR0342.3.6.5) • 60  
 Automation set successful (Boolean property)  
   (SR0342.9.10) • 64  
 Automation set successful (Numeric property)  
   (SR0342.9.6) • 65  
 Automation set successful (SR0342.9.1) • 64  
 Automation set successful (String property)  
   (SR0342.9.8) • 66  
 Bundle output variable (Boolean property, Framework  
   capability) • 64  
 Bundle output variable (Numeric property, Framework  
   capability) • 65  
 Bundle output variable (String property, Framework  
   capability) • 66  
 Bundle process parameters (Boolean property,  
   Framework capability) • 50  
 Bundle process parameters (Numeric property,  
   Framework capability) • 51  
 Bundle process parameters (String property, Framework  
   capability) • 52  
 Business logic (SR0342.2+) • 42

Common sub-report elements (Framework capability) •  
 41  
 Completed mode (SR0342.1.3) • 40  
 Completion time (Framework capability) • 63  
 Confirm phase (SR0342.2.4) • 46  
 Decisions • 58  
 Defined values incomplete (SR0342.3.6.3) • 59  
 Defined values not set (SR0342.3.6.7) • 61  
 Error message grouping - Confirm (SR0342.3.6.8) • 61  
 Error message grouping (SR0342.3.6.6) • 60  
 Error messages (SR0342.3.6+) • 58  
 Exceptions (SR0342.3+) • 52  
 High (Numeric property) (SR0342.9.4) • 65  
 Identified equipment entity (SR0342.8.2) • 49  
 Identifier (Framework capability) • 64  
 Information column (SR0342.4.1) • 41  
 Information messages • 58  
 Input at equipment - Logic (SR0342.3.1.1.1) • 53  
 Input at equipment (SR0342.3.1.1) • 53  
 Input at equipment (SR0342.8.5) • 50  
 Input at equipment recorded (SR0342.3.6.2) • 59  
 Instance count (Framework capability) • 63  
 Instruction (SR0342.8.1) • 48  
 Instruction link definition (Framework capability) • 48  
 Instruction table definition (Framework capability) • 47  
 Instruction table text (Framework capability) • 47  
 Instruction text with links (Framework capability) • 48  
 Invalid configuration error (SR0342.3.6.1) • 58  
 Invalid data format error (SR0342.3.6.9) • 62  
 Low (Numeric property) (SR0342.9.3) • 65  
 Manual completion mode (SR0342.2.1) • 43  
 Master (Bundle identifier) (Boolean property)  
   (SR0342.8.8) • 50  
 Master (Bundle identifier) (Numeric property)  
   (SR0342.8.6) • 51  
 Master (Bundle identifier) (String property)  
   (SR0342.8.7) • 52  
 Mode (SR0342.8.3) • 49  
 No value overridden (Boolean property)  
   (SR0342.3.6.12) • 62

|                                                                               |                                                              |
|-------------------------------------------------------------------------------|--------------------------------------------------------------|
| No value overridden (Numeric property)<br>(SR0342.3.6.10) • 63                | Value (Boolean property) (SR0342.9.9) • 64                   |
| No value overridden (String property) (SR0342.3.6.11)<br>• 63                 | Value (Numeric property) (SR0342.9.2) • 65                   |
| Output variables (SR0342.9+) • 63                                             | Value (String property) (SR0342.9.7) • 66                    |
| Override value definition - Logic (Boolean property)<br>(SR0342.3.1.4.1) • 53 | Show historical data chart (SR0110+) • 101                   |
| Override value definition - Logic (Numeric property)<br>(SR0342.3.1.2.1) • 55 | Action column • 104                                          |
| Override value definition - Logic (String property)<br>(SR0342.3.1.3.1) • 56  | Active mode (SR0110.1.2) • 103                               |
| Override value definition (Boolean property)<br>(SR0342.3.1.4) • 53           | Anti-aliasing for plots (SR0110.11.4) • 117                  |
| Override value definition (Numeric property)<br>(SR0342.3.1.2) • 55           | Anti-aliasing for text (SR0110.11.5) • 117                   |
| Override value definition (SR0342.8.4) • 49                                   | Business logic (SR0110.2+) • 105                             |
| Override value definition (String property)<br>(SR0342.3.1.3) • 56            | Chart available (SR0110.9.1) • 116                           |
| Performance of set activity (SR0342.12.1) • 66                                | Chart axis (SR0110.8.4) • 111                                |
| Phase column (Framework capability) • 41                                      | Chart plot (SR0110.8.3) • 110                                |
| Post-completion exceptions • 57                                               | Chart resolution (SR0110.11.1) • 117                         |
| Preview mode (SR0342.1.1) • 38                                                | Chart unavailable - Logic (SR0110.3.1.1.1) • 113             |
| Process parameters (SR0342.8+) • 47                                           | Chart unavailable (SR0110.3.1.1) • 113                       |
| Property Selection editor (Boolean property,<br>Framework capability) • 50    | Chart unavailable (SR0110.8.5) • 112                         |
| Property Selection editor (Numeric property,<br>Framework capability) • 51    | Chart unavailable error (SR0110.3.6.3) • 116                 |
| Property Selection editor (String property, Framework<br>capability) • 52     | Common sub-report elements (Framework capability) •<br>104   |
| Questions • 58                                                                | Completed mode (SR0110.1.3) • 103                            |
| Representation during execution (SR0342.1+) • 38                              | Completion time (Framework capability) • 116                 |
| Representation in Navigator (SR0342.4+) • 41                                  | Configuration keys (SR0110.11+) • 117                        |
| Representation in sub-report (SR0342.5+) • 41                                 | Confirm phase (SR0110.2.3) • 107                             |
| Set OPC values phase - Performance (SR0342.12+) • 66                          | Data retrieval error (SR0110.3.6.2) • 115                    |
| Set values (SR0342.2.3) • 44                                                  | Decisions • 114                                              |
| Start time (Framework capability) • 63                                        | Display chart (SR0110.2.1) • 105                             |
| Sub-report elements (SR0342.5.1) • 42                                         | Error messages (SR0110.3.6+) • 114                           |
| System error (SR0342.3.6.4) • 60                                              | Exceptions (SR0110.3+) • 113                                 |
| System-triggered exceptions • 52                                              | Identified equipment entity (SR0110.8.2) • 109               |
| Unit of measure (Numeric property) (SR0342.9.5) • 65                          | Identifier (Framework capability) • 116                      |
| User-triggered exceptions (SR0342.3.1+) • 52                                  | Information column (SR0110.4.1) • 104                        |
|                                                                               | Information messages • 114                                   |
|                                                                               | Instance count (Framework capability) • 116                  |
|                                                                               | Instruction (SR0110.8.1) • 109                               |
|                                                                               | Instruction link definition (Framework capability) • 109     |
|                                                                               | Instruction table definition (Framework capability) •<br>108 |
|                                                                               | Instruction table text (Framework capability) • 108          |
|                                                                               | Instruction text with links (Framework capability) • 108     |
|                                                                               | Invalid configuration error (SR0110.3.6.1) • 114             |
|                                                                               | Output variables (SR0110.9+) • 116                           |

- Performance of chart rendering (SR0110.12.1) • 121
- Phase column (Framework capability) • 103
- Plot renderers (SR0110.11.2) • 117
- Post-completion exceptions • 114
- Preview mode (SR0110.1.1) • 102
- Process parameters (SR0110.8+) • 107
- Property selection editor (Framework capability) • 110
- Provider shortcuts (SR0110.11.6) • 120
- Query templates (SR0110.11.3) • 119
- Questions • 114
- Reload chart (SR0110.2.2) • 106
- Representation during execution (SR0110.1+) • 102
- Representation in Navigator (SR0110.4+) • 103
- Representation in sub-report (SR0110.5+) • 104
- Resume phase (SR0110.2.4) • 107
- Show historical data chart phase - Performance (SR0110.12+) • 121
- Start time (Framework capability) • 116
- Sub-report elements (SR0110.5.1) • 104
- System-triggered exceptions • 113
- User-triggered exceptions (SR0110.3.1+) • 113
- SR0110.1.1 - Preview mode (Show historical data chart) • 102
- SR0110.1.2 - Active mode (Show historical data chart) • 103
- SR0110.1.3 - Completed mode (Show historical data chart) • 103
- SR0110.1+ - Representation during execution (Show historical data chart) • 102
- SR0110.11.1 - Chart resolution (Show historical data chart) • 117
- SR0110.11.2 - Plot renderers (Show historical data chart) • 117
- SR0110.11.3 - Query templates (Show historical data chart) • 119
- SR0110.11.4 - Anti-aliasing for plots (Show historical data chart) • 117
- SR0110.11.5 - Anti-aliasing for text (Show historical data chart) • 117
- SR0110.11.6 - Provider shortcuts (Show historical data chart) • 120
- SR0110.11+ - Configuration keys (Show historical data chart) • 117
- SR0110.12.1 - Performance of chart rendering • 121
- SR0110.12+ - Show historical data chart phase - Performance • 121
- SR0110.2.1 - Display chart • 105
- SR0110.2.2 - Reload chart (Show historical data chart) • 106
- SR0110.2.3 - Confirm phase (Show historical data chart) • 107
- SR0110.2.4 - Resume phase (Show historical data chart) • 107
- SR0110.2+ - Business logic (Show historical data chart) • 105
- SR0110.3.1.1 - Chart unavailable (Show historical data chart) • 113
- SR0110.3.1.1.1 - Chart unavailable - Logic (Show historical data chart) • 113
- SR0110.3.1+ - User-triggered exceptions (Show historical data chart) • 113
- SR0110.3.6.1 - Invalid configuration error (Show historical data chart) • 114
- SR0110.3.6.2 - Data retrieval error (Show historical data chart) • 115
- SR0110.3.6.3 - Chart unavailable error (Show historical data chart) • 116
- SR0110.3.6+ - Error messages (Show historical data chart) • 114
- SR0110.3+ - Exceptions (Show historical data chart) • 113
- SR0110.4.1 - Information column (Show historical data chart) • 104
- SR0110.4+ - Representation in Navigator (Show historical data chart) • 103
- SR0110.5.1 - Sub-report elements (Show historical data chart) • 104
- SR0110.5+ - Representation in sub-report (Show historical data chart) • 104
- SR0110.8.1 - Instruction (Show historical data chart) • 109
- SR0110.8.2 - Identified equipment entity (Show historical data chart) • 109
- SR0110.8.3 - Chart plot (Show historical data chart) • 110

|                                                                                          |                                                                                   |
|------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| SR0110.8.4 - Chart axis (Show historical data chart) • 111                               | SR0341.3.2.1.1 - Limit violation - Logic (Get OPC values) • 21                    |
| SR0110.8.5 - Chart unavailable (Show historical data chart) • 112                        | SR0341.3.2.2 - Multiple system-triggered exceptions (Get OPC values) • 23         |
| SR0110.8+ - Process parameters (Show historical data chart) • 107                        | SR0341.3.2+ - System-triggered exceptions (Get OPC values) • 21                   |
| SR0110.9.1 - Chart available (Show historical data chart) • 116                          | SR0341.3.4.1 - Override value recorded (Get OPC values) • 29                      |
| SR0110.9+ - Output variables (Show historical data chart) • 116                          | SR0341.3.4+ - Information messages (Get OPC values) • 29                          |
| SR0110+ - Show historical data chart • 101                                               | SR0341.3.6.1 - Invalid configuration error (Get OPC values) • 30                  |
| SR0341.1.1 - Preview mode (Get OPC values) • 4                                           | SR0341.3.6.10 - No value overridden (Get OPC values, String property) • 33        |
| SR0341.1.2 - Active mode (Get OPC values) • 5                                            | SR0341.3.6.11 - No value overridden (Get OPC values, Boolean property) • 32       |
| SR0341.1.3 - Completed mode (Get OPC values) • 6                                         | SR0341.3.6.3 - Automation error (Get OPC values) • 30                             |
| SR0341.1+ - Representation during execution (Get OPC values) • 4                         | SR0341.3.6.4 - System error (Get OPC values) • 31                                 |
| SR0341.12.1 - Performance of get activity • 36                                           | SR0341.3.6.5 - No get result error (Get OPC values) • 31                          |
| SR0341.12+ - Get OPC values phase - Performance • 36                                     | SR0341.3.6.7 - Recorded values incomplete (Get OPC values) • 32                   |
| SR0341.2.1 - Manual completion mode (Get OPC values) • 8                                 | SR0341.3.6.8 - Invalid data format error (Get OPC values) • 32                    |
| SR0341.2.2 - Automatic completion mode (Get OPC values) • 9                              | SR0341.3.6.9 - No value overridden (Get OPC values, Numeric property) • 33        |
| SR0341.2.3 - Get values (Get OPC values) • 9                                             | SR0341.3.6+ - Error messages (Get OPC values) • 30                                |
| SR0341.2.4 - Confirm phase (Get OPC values) • 11                                         | SR0341.3+ - Exceptions (Get OPC values) • 21                                      |
| SR0341.2+ - Business logic (Get OPC values) • 8                                          | SR0341.4.1 - Information column (Get OPC values) • 7                              |
| SR0341.3.1.1 - Override recorded value (Get OPC values, Numeric property) • 25           | SR0341.4+ - Representation in Navigator (Get OPC values) • 7                      |
| SR0341.3.1.1.1 - Override recorded value - Logic (Get OPC values, Numeric property) • 25 | SR0341.5.1 - Sub-report elements (Get OPC values) • 7                             |
| SR0341.3.1.2 - Override recorded value (Get OPC values, String property) • 26            | SR0341.5+ - Representation in sub-report (Get OPC values) • 7                     |
| SR0341.3.1.2.1 - Override recorded value - Logic (Get OPC values, String property) • 26  | SR0341.8.1 - Instruction (Get OPC values) • 14                                    |
| SR0341.3.1.3 - Override recorded value (Get OPC values, Boolean property) • 23           | SR0341.8.10 - Expected value configuration (Get OPC values, String property) • 20 |
| SR0341.3.1.3.1 - Override recorded value - Logic (Get OPC values, Boolean property) • 23 | SR0341.8.11 - Expected value definition (Get OPC values, String property) • 21    |
| SR0341.3.1.4 - Multiple exceptions (Get OPC values) • 28                                 | SR0341.8.12 - Master (Bundle identifier) (Get OPC values, Boolean property) • 15  |
| SR0341.3.1+ - User-triggered exceptions (Get OPC values) • 23                            |                                                                                   |
| SR0341.3.2.1 - Limit violation (Get OPC values) • 21                                     |                                                                                   |

- SR0341.8.13 - Expected value configuration (Get OPC values, Boolean property) • 16
- SR0341.8.14 - Expected value definition (Get OPC values, Boolean property) • 16
- SR0341.8.2 - Identified equipment entity (Get OPC values) • 14
- SR0341.8.3 - Mode (Get OPC values) • 14
- SR0341.8.4 - Override recorded value (Get OPC values) • 15
- SR0341.8.5 - Master (Bundle identifier) (Get OPC values, Numeric property) • 17
- SR0341.8.6 - L-H configuration (Get OPC values) • 17
- SR0341.8.7 - LL-HH configuration (Get OPC values) • 18
- SR0341.8.8 - Limit definition (Get OPC values) • 19
- SR0341.8.9 - Master (Bundle identifier) (Get OPC values, String property) • 20
- SR0341.8+ - Process parameters (Get OPC values) • 12
- SR0341.9.1 - Automation get successful (Get OPC values) • 34
- SR0341.9.10 - Automation get successful (Get OPC values, Boolean property) • 34
- SR0341.9.2 - Value (Get OPC values, Numeric property) • 35
- SR0341.9.3 - Unit of measure (Get OPC values, Numeric property) • 35
- SR0341.9.4 - Automation get successful (Get OPC values, Numeric property) • 35
- SR0341.9.6 - Value (Get OPC values, String property) • 36
- SR0341.9.7 - Automation get successful (Get OPC values, String property) • 36
- SR0341.9.9 - Value (Get OPC values, Boolean property) • 34
- SR0341.9+ - Output variables (Get OPC values) • 33
- SR0341+ - Get OPC values • 3
- SR0342.1.1 - Preview mode (Set OPC values) • 38
- SR0342.1.2 - Active mode (Set OPC values) • 39
- SR0342.1.3 - Completed mode (Set OPC values) • 40
- SR0342.1+ - Representation during execution (Set OPC values) • 38
- SR0342.12.1 - Performance of set activity • 66
- SR0342.12+ - Set OPC values phase - Performance • 66
- SR0342.2.1 - Manual completion mode (Set OPC values) • 43
- SR0342.2.2 - Automatic completion mode (Set OPC values) • 43
- SR0342.2.3 - Set values (Set OPC values) • 44
- SR0342.2.4 - Confirm phase (Set OPC values) • 46
- SR0342.2+ - Business logic (Set OPC values) • 42
- SR0342.3.1.1 - Input at equipment (Set OPC values) • 53
- SR0342.3.1.1.1 - Input at equipment - Logic (Set OPC values) • 53
- SR0342.3.1.2 - Override value definition (Set OPC values, Numeric property) • 55
- SR0342.3.1.2.1 - Override value definition - Logic (Set OPC values, Numeric property) • 55
- SR0342.3.1.3 - Override value definition (Set OPC values, String property) • 56
- SR0342.3.1.3.1 - Override value definition - Logic (Set OPC values, String property) • 56
- SR0342.3.1.4 - Override value definition (Set OPC values, Boolean property) • 53
- SR0342.3.1.4.1 - Override value definition - Logic (Set OPC values, Boolean property) • 53
- SR0342.3.1+ - User-triggered exceptions (Set OPC values) • 52
- SR0342.3.6.1 - Invalid configuration error (Set OPC values) • 58
- SR0342.3.6.10 - No value overridden (Set automation property, Numeric property) • 63
- SR0342.3.6.11 - No value overridden (String property) • 63
- SR0342.3.6.12 - No value overridden (Boolean property) • 62
- SR0342.3.6.2 - Input at equipment recorded (Set OPC values) • 59
- SR0342.3.6.3 - Defined values incomplete (Set OPC values) • 59
- SR0342.3.6.4 - System error (Set OPC values) • 60
- SR0342.3.6.5 - Automation error (Set OPC values) • 60
- SR0342.3.6.6 - Error message grouping (Set OPC values) • 60

|                                                                                 |                                                                                         |
|---------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|
| SR0342.3.6.7 - Defined values not set (Set OPC values) • 61                     | SR0342.9.6 - Automation set successful (Set OPC values, Numeric property) • 65          |
| SR0342.3.6.8 - Error message grouping - Confirm (Set OPC values) • 61           | SR0342.9.7 - Value (Set OPC values, String property) • 66                               |
| SR0342.3.6.9 - Invalid data format error (Set OPC values) • 62                  | SR0342.9.8 - Automation set successful (Set OPC values, String property) • 66           |
| SR0342.3.6+ - Error messages (Set OPC values) • 58                              | SR0342.9.9 - Value (Set OPC values, Boolean property) • 64                              |
| SR0342.3+ - Exceptions (Set OPC values) • 52                                    | SR0342.9+ - Output variables (Set OPC values) • 63                                      |
| SR0342.4.1 - Information column (Set OPC values) • 41                           | SR0342+ - Set OPC values • 37                                                           |
| SR0342.4+ - Representation in Navigator (Set OPC values) • 41                   | SR0360.1.1 - Preview mode (Monitor numeric value) • 68                                  |
| SR0342.5.1 - Sub-report elements (Set OPC values) • 42                          | SR0360.1.2 - Active mode (Monitor numeric value) • 69                                   |
| SR0342.5+ - Representation in sub-report (Set OPC values) • 41                  | SR0360.1.3 - Completed mode (Monitor numeric value) • 69                                |
| SR0342.8.1 - Instruction (Set OPC values) • 48                                  | SR0360.1+ - Representation during execution (Monitor numeric value) • 68                |
| SR0342.8.2 - Identified equipment entity (Set OPC values) • 49                  | SR0360.2.1 - Monitor a numeric value (Monitor numeric value) • 71                       |
| SR0342.8.3 - Mode (Set OPC values) • 49                                         | SR0360.2+ - Business logic (Monitor numeric value) • 71                                 |
| SR0342.8.4 - Override value definition (Set OPC values) • 49                    | SR0360.3.1.1 - Stop monitoring and record result (Monitor numeric value) • 80           |
| SR0342.8.5 - Input at equipment (Set OPC values) • 50                           | SR0360.3.1.1.1 - Stop monitoring and record result - Logic (Monitor numeric value) • 80 |
| SR0342.8.6 - Master (Bundle identifier) (Set OPC values, Numeric property) • 51 | SR0360.3.1+ - User-triggered exceptions (Monitor numeric value) • 80                    |
| SR0342.8.7 - Master (Bundle identifier) (Set OPC values, String property) • 52  | SR0360.3.2.1 - Monitoring exception (Monitor numeric value) • 78                        |
| SR0342.8.8 - Master (Bundle identifier) (Set OPC values, Boolean property) • 50 | SR0360.3.2.1.1 - Monitoring exception - Logic (Monitor numeric value) • 78              |
| SR0342.8+ - Process parameters (Set OPC values) • 47                            | SR0360.3.2.2 - Unforeseen resume (Monitor numeric value) • 79                           |
| SR0342.9.1 - Automation set successful (Set OPC values) • 64                    | SR0360.3.2.2.1 - Unforeseen resume - Logic (Monitor numeric value) • 79                 |
| SR0342.9.10 - Automation set successful (Set OPC values, Boolean property) • 64 | SR0360.3.2+ - System-triggered exceptions (Monitor numeric value) • 78                  |
| SR0342.9.2 - Value (Set OPC values, Numeric property) • 65                      | SR0360.3.6.1 - Automation error (Monitor numeric value) • 82                            |
| SR0342.9.3 - Low (Set OPC values, Numeric property) • 65                        | SR0360.3.6.2 - Monitoring in progress (Monitor numeric value) • 82                      |
| SR0342.9.4 - High (Set OPC values, Numeric property) • 65                       | SR0360.3.6.3 - Invalid data format error (Monitor numeric value) • 82                   |
| SR0342.9.5 - Unit of measure (Set OPC values, Numeric property) • 65            |                                                                                         |

- SR0360.3.6+ - Error messages (Monitor numeric value) • 82
- SR0360.3+ - Exceptions (Monitor numeric value) • 78
- SR0360.4.1 - Information column (Monitor numeric value) • 70
- SR0360.4+ - Representation in Navigator (Monitor numeric value) • 70
- SR0360.5.1 - Sub-report elements (Monitor numeric value) • 70
- SR0360.5+ - Representation in sub-report (Monitor numeric value) • 70
- SR0360.8.1 - Instruction (Monitor numeric value) • 74
- SR0360.8.2 - Identified equipment entity (Monitor numeric value) • 74
- SR0360.8.3 - Mode (Monitor numeric value) • 75
- SR0360.8.4 - Numeric property (Monitor numeric value) • 75
- SR0360.8.5 - Monitoring exception (Monitor numeric value) • 76
- SR0360.8.6 - Stop monitoring and record result (Monitor numeric value) • 77
- SR0360.8.7 - Unforeseen resume (Monitor numeric value) • 77
- SR0360.8+ - Process parameters (Monitor numeric value) • 72
- SR0360.9.1 - Monitoring exception occurred (Monitor numeric value) • 83
- SR0360.9.2 - Timestamp of tag (Monitor numeric value) • 84
- SR0360.9.3 - Value (Monitor numeric value) • 83
- SR0360.9+ - Output variables (Monitor numeric value) • 83
- SR0360+ - Monitor numeric value • 67
- SR0365.1.1 - Preview mode (Get alarms) • 86
- SR0365.1.2 - Active mode (Get alarms) • 86
- SR0365.1.3 - Completed mode (Get alarms) • 87
- SR0365.1+ - Representation during execution (Get alarms) • 86
- SR0365.2.1 - Check for alarms (Get alarms) • 89
- SR0365.2+ - Business logic (Get alarms) • 89
- SR0365.3.2.1 - Alarm exception (Get alarms) • 95
- SR0365.3.2.1.1 - Alarm exception - Logic (Get alarms) • 95
- SR0365.3.2.2 - Unforeseen resume (Get alarms) • 96
- SR0365.3.2.2.1 - Unforeseen resume - Logic (Get alarms) • 96
- SR0365.3.2+ - System-triggered exceptions (Get alarms) • 95
- SR0365.3.6.1 - Value retrieval in progress (Get alarms) • 97
- SR0365.3.6.2 - Invalid property configuration error (Get alarms) • 98
- SR0365.3.6.3 - Invalid entity configuration error (Get alarms) • 98
- SR0365.3.6+ - Error messages (Get alarms) • 97
- SR0365.3+ - Exceptions (Get alarms) • 95
- SR0365.4.1 - Information column (Get alarms) • 88
- SR0365.4+ - Representation in Navigator (Get alarms) • 88
- SR0365.5.1 - Sub-report elements (Get alarms) • 89
- SR0365.5+ - Representation in sub-report (Get alarms) • 88
- SR0365.8.1 - Instruction (Get alarms) • 92
- SR0365.8.2 - Identified equipment entity (Get alarms) • 92
- SR0365.8.3 - Mode (Get alarms) • 93
- SR0365.8.4 - Alarm property (Get alarms) • 93
- SR0365.8.5 - Alarm exception (Get alarms) • 93
- SR0365.8.6 - Unforeseen resume (Get alarms) • 94
- SR0365.8+ - Process parameters (Get alarms) • 90
- SR0365.9.1 - Alarm tags (Get alarms) • 99
- SR0365.9.2 - Overall status (Get alarms) • 100
- SR0365.9+ - Output variables (Get alarms) • 99
- SR0365+ - Get alarms • 85