



EQUIPMENT TRACKING PHASES

RELEASE 10.01.00

FUNCTIONAL REQUIREMENT SPECIFICATION

PUBLICATION PSFRSET-RM006B-EN-E-MARCH-2021

Supersedes publication PSFRSET-RM006A-EN-E



Contact Rockwell See contact information provided in your maintenance contract.

Copyright Notice © 2021 Rockwell Automation Technologies, Inc. All rights reserved.
This document and any accompanying Rockwell Software products are copyrighted by Rockwell Automation Technologies, Inc. Any reproduction and/or distribution without prior written consent from Rockwell Automation Technologies, Inc. is strictly prohibited. Please refer to the license agreement for details.

Trademark Notices FactoryTalk, PharmaSuite, Rockwell Automation, Rockwell Software, and the Rockwell Software logo are registered trademarks of Rockwell Automation, Inc.

The following logos and products are trademarks of Rockwell Automation, Inc.:

FactoryTalk Shop Operations Server, FactoryTalk ProductionCentre, FactoryTalk Administration Console, FactoryTalk Automation Platform, and FactoryTalk Security.
Operational Data Store, ODS, Plant Operations, Process Designer, Shop Operations, Rockwell Software CPGSuite, and Rockwell Software AutoSuite.

Other Trademarks ActiveX, Microsoft, Microsoft Access, SQL Server, Visual Basic, Visual C++, Visual SourceSafe, Windows, Windows 7 Professional, Windows 10, Windows Server 2008, Windows Server 2012, and Windows Server 2016 are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Adobe, Acrobat, and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

ControlNet is a registered trademark of ControlNet International.

DeviceNet is a trademark of the Open DeviceNet Vendor Association, Inc. (ODVA).

Ethernet is a registered trademark of Digital Equipment Corporation, Intel, and Xerox Corporation.

OLE for Process Control (OPC) is a registered trademark of the OPC Foundation.

Oracle, SQL*Net, and SQL*Plus are registered trademarks of Oracle Corporation.

All other trademarks are the property of their respective holders and are hereby acknowledged.

Warranty This product is warranted in accordance with the product license. The product's performance may be affected by system configuration, the application being performed, operator control, maintenance, and other related factors. Rockwell Automation is not responsible for these intervening factors. The instructions in this document do not cover all the details or variations in the equipment, procedure, or process described, nor do they provide directions for meeting every possible contingency during installation, operation, or maintenance. This product's implementation may vary among users.

This document is current as of the time of release of the product; however, the accompanying software may have changed since the release. Rockwell Automation, Inc. reserves the right to change any information contained in this document or the software at any time without prior notice. It is your responsibility to obtain the most current information available from Rockwell when installing or using this product.

-
-
- FT PharmaSuite® 10.01.00 - Functional Requirement Specification Equipment Tracking Phases
-
-

Chapter 1	Introduction	1
	Typographical Conventions	1
Chapter 2	Recipe and Workflow Configuration for Equipment Tracking	3
	Phases	3
	Binding of Equipment	4
	Grouping of Equipment	5
	Creating an Equipment Entity Group	6
	Identifying an Equipment Entity Group for Usage	8
	Re-identifying an Already Bound Equipment Entity or Group	8
	Triggering a Graph Transition on an Equipment Entity Group	9
	Separating an Equipment Entity Group	9
Chapter 3	Identify Equipment Phase (SR0300+)	13
	Layout	15
	Representation during Execution (SR0300.1+)	15
	Representation in Navigator (SR0300.4+)	17
	Representation in Sub-report (SR0300.5+)	18
	Business Logic (SR0300.2+)	19
	Phase Parameters	26
	Process Inputs (SR0300.6+)	26
	Process Parameters (SR0300.8+)	27
	Exceptions (SR0300.3+)	34
	System-triggered Exceptions (SR0300.3.2+)	34
	User-triggered Exceptions (SR0300.3.1+)	38
	Post-completion Exceptions	41

Information Messages	41
Questions	41
Decisions	41
Error Messages (SR0300.3.6+)	41
Output Variables (SR0300.9+)	46
Chapter 4 Change Equipment Status Phase (SR0310+)	49
Layout	50
Representation during Execution (SR0310.1+)	50
Representation in Navigator (SR0310.4+).....	51
Representation in Sub-report (SR0310.5+)	52
Business Logic (SR0310.2+).....	52
Process Parameters (SR0310.8+)	54
Exceptions (SR0310.3+).....	58
System-triggered Exceptions (SR0310.3.2+).....	58
User-triggered Exceptions (SR0310.3.1+)	59
Post-completion Exceptions	60
Information Messages	60
Questions	60
Decisions	60
Error Messages (SR0310.3.6+)	60
Output Variables (SR0310.9+)	61
Chapter 5 Trigger Graph Transition Phase (SR0311+).....	63
Layout	64
Representation during Execution (SR0311.1+)	64
Representation in Navigator (SR0311.4+).....	67
Representation in Sub-report (SR0311.5+)	67
Business Logic (SR0311.2+).....	68
Phase Mode	68
Main Path	70
Process Parameters (SR0311.8+)	73

Exceptions (SR0311.3+).....	77
System-triggered Exceptions (SR0311.3.2+).....	77
User-triggered Exceptions.....	80
Post-completion Exceptions	80
Information Messages	80
Questions	81
Decisions	81
Error Messages (SR0311.3.6+)	81
Output Variables (SR0311.9+)	82
Chapter 6 Separate Equipment Phase (SR0312+)	85
Layout	86
Representation during Execution (SR0312.1+)	86
Representation in Navigator (SR0312.4+).....	88
Representation in Sub-report (SR0312.5+)	89
Business Logic (SR0312.2+).....	90
Process Parameters (SR0312.8+)	93
Exceptions (SR0312.3+).....	97
System-triggered Exceptions	97
User-triggered Exceptions (SR0312.3.1+).....	97
Post-completion Exceptions	98
Information Messages	98
Questions	98
Decisions	99
Error Messages (SR0312.3.6+)	99
Output Variables (SR0310.9+)	100
Chapter 7 Unbind Equipment Phase (SR0320+)	101
Layout	102
Representation during Execution (SR0320.1+)	102
Representation in Navigator (SR0320.4+).....	103
Representation in Sub-report (SR0320.5+)	104

Business Logic (SR0320.2+).....	105
Process Parameters (SR0320.8+)	106
Exceptions (SR0320.3+).....	109
System-triggered Exceptions (SR0320.3.2+).....	109
User-triggered Exceptions.....	112
Post-completion Exceptions	112
Information Messages	112
Questions	112
Decisions	112
Error Messages	112
Output Variables.....	113
Chapter 8 Show Equipment List Phase (SR0305+)	115
Layout	115
Representation during Execution (SR0305.1+)	116
Representation in Navigator (SR0305.4+).....	117
Representation in Sub-report (SR0305.5+)	117
Business Logic (SR0305.2+).....	118
Phase Parameters	118
Process Inputs (SR0305.6+)	118
Process Parameters (SR0305.8+)	119
Exceptions (SR0305.3+).....	122
System-triggered Exceptions	122
User-triggered Exceptions.....	122
Post-completion Exceptions	122
Information Messages	122
Decisions	122
Questions	122
Error Messages	122
Output Variables (SR0305.9+)	123

Chapter 9	Generate Template-based Equipment Phase (SR0306+)	125
	Layout	126
	Representation during Execution (SR0306.1+)	126
	Representation in Navigator (SR0306.4+)	127
	Representation in Sub-report (SR0306.5+)	127
	Business Logic (SR0306.2+)	128
	Phase Parameters	130
	Process Parameters (SR0306.8+)	130
	Exceptions (SR0306.3+)	134
	System-triggered Exceptions (SR0306.3.2+)	134
	User-triggered Exceptions	135
	Post-completion Exceptions (SR0306.3.3+)	135
	Information Messages	136
	Decisions	136
	Questions	136
	Error Messages (SR0306.3.6+)	136
	Output Variables (SR0306.9+)	138
Chapter 10	Reference Documents	141
Chapter 11	Document Information	143
	Approval	143
	Version Information	143
	Revision History	144
Index	147

-
-
- FT PharmaSuite® 10.01.00 - Functional Requirement Specification Equipment Tracking Phases
-
-

Figure 1: Structure of an equipment entity group	5
Figure 2: Example configuration - group two equipment entities.....	6
Figure 3: Compactor - example equipment entity group with sub-group	7
Figure 4: Compactor - example configuration - group equipment entities and a sub-group	7
Figure 5: Compactor - example configuration - trigger a graph transition	9
Figure 6: Separate equipment scenarios	10
Figure 7: Compactor - example configuration - separate sub-groups	11
Figure 8: Compactor - example equipment entity group after separation	11
Figure 9: Identify equipment during execution	14
Figure 10: Identify equipment group during execution	14
Figure 11: Identify equipment group for grouping during execution	14
Figure 12: Identify equipment with property data during execution	14
Figure 13: Change equipment status during execution	49
Figure 14: Trigger graph transition during execution	64
Figure 15: Trigger graph transition of group during execution	64
Figure 16: Separate equipment (single entity) during execution.....	85
Figure 17: Separate equipment (entity group) during execution.....	86
Figure 18: Separate equipment (all entities) during execution.....	86
Figure 19: Separate equipment scenarios.....	93
Figure 20: Unbind equipment during execution.....	101
Figure 21: Unbind equipment group during execution	102
Figure 22: Show equipment list during execution	115
Figure 23: Generate template-based equipment during execution	125

-
-
- FT PharmaSuite® 10.01.00 - Functional Requirement Specification Equipment Tracking Phases
-
-

Introduction

This document details the requirements of the functions implemented by the phases specific to equipment tracking. The phases are executed in the Production Execution Client of PharmaSuite.

Each requirement is composed of a name and a unique identifier (e.g. Instruction (SR0300.8.1)). If a requirement's meaning is for requirement grouping only, the identifier is appended by a plus sign (e.g. Process parameters (SR0300.8+)).

For requirements with **Framework capability** as identifier, see "Functional Requirement Specification Execution Framework" for their unique identifier, [A1] (page 141).

The revision history (page 144) lists the changes made to the document with PharmaSuite 10.0 as the comparison baseline. Changes related to a requirement are marked as "Editorial", "Update", "New", or "Deleted", changes to the additional context information are marked as "Context information-related".

Typographical Conventions

This documentation uses typographical conventions to enhance the readability of the information it presents. The following kinds of formatting indicate specific information:

Bold typeface	Designates user interface texts, such as <ul style="list-style-type: none">■ window and dialog titles■ menu functions■ panel, tab, and button names■ box labels■ object properties and their values (e.g. status).
Monospaced typeface	Designates code examples.

-
-
- FT PharmaSuite® 10.01.00 - Functional Requirement Specification Equipment Tracking Phases
-
-

Recipe and Workflow Configuration for Equipment Tracking

This section provides an overview of equipment tracking within workflows and process orders.

Phases

The following phases are available for equipment tracking:

- **Identify equipment** (page [13](#))
The **Identify equipment** phase allows to identify an equipment entity or an equipment entity group and to bind the entity to the context in which it is being used (e.g. order, workflow). Additionally, the phase allows to build an equipment entity group. As a prerequisite for binding, the phase performs fit-for-purpose checks. For verification purposes, an already bound equipment entity can be re-scanned within the same unit procedure context.
- **Change equipment status**
The **Change equipment status** phase allows an operator to set an FSM-related status of a previously identified equipment entity.
The phase neither supports equipment graphs that are maintained in Data Manager - Equipment nor equipment entity groups.
- **Trigger graph transition** (page [63](#))
The **Trigger graph transition** phase allows an operator to change an equipment graph-related status of a previously identified equipment entity or equipment entity group (parent entity and its child entities) by executing a graph trigger.
- **Separate equipment** (page [85](#))
The **Separate equipment** phase allows an operator to separate an equipment entity group. Either the entire group is separated into single entities or a single entity or a sub-group is separated from a main group.
Based on the phase configuration, a separated equipment entity can keep its binding status and a separated sub-group can keep its grouping by retaining its relations to its own child entities.

- Unbind equipment (page [101](#))

The **Unbind equipment** phase allows an operator to release a previously bound equipment entity or all equipment entities of a group before a unit procedure is finished. Thus, the entity or entity group can be identified within another unit procedure context while the current unit procedure is still running.

- Show equipment list (page [115](#))

The **Show equipment list** phase allows to show a list of equipment entities with the current values of a defined set of their specification properties and their runtime data, such as runtime properties and graph-related data.

Binding of Equipment

An equipment entity or equipment entity group can only be used in the context of one unit procedure at any given time. To ensure the exclusive usage, the **Identify equipment** phase does not only identify an equipment entity, but also binds it to the current unit procedure if all relevant checks have passed successfully. As soon as an equipment entity has been identified (i.e. successfully scanned, but not yet bound) or bound, it is no longer available in the context of any other unit procedure.

Equipment entities are either released automatically upon completion of a unit procedure or they can be released explicitly with the **Unbind equipment** phase.

All binding- and release-related activities are tracked in the equipment logbook (if maintained).

Grouping of Equipment

An equipment entity group consists of a parent entity and one or more child entities. Thus, a child entity that has children is the sub-parent to a sub-group, which itself belongs to a main group that has its main parent.

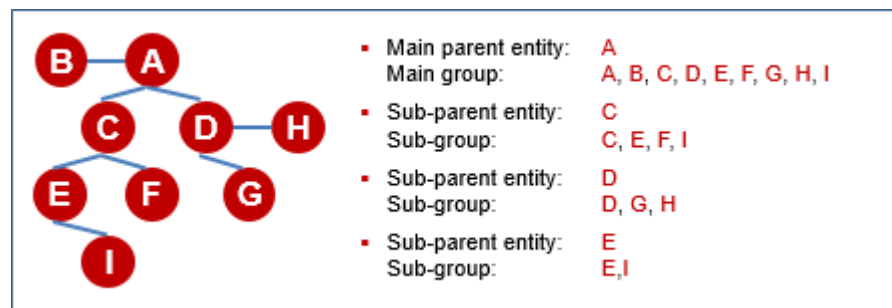


Figure 1: Structure of an equipment entity group

Equipment entity groups support different use cases on the shop floor:

- Setting up a production line or work center.
- Assembling and disassembling equipment.
- Grouping equipment entities that only share a loose connection (e.g. equipment entities that are placed on a tray to be sterilized in an autoclave).

In general, the grouping of equipment entities is considered to be runtime data that is primarily executed on the shop floor. All grouping-related actions are tracked within the logbook (if maintained) of the affected equipment entities.

In order to support ad-hoc repair use cases, the assignment between parent and child entities can also be updated by authorized users within Data Manager - Equipment. If the grouping is updated while a parent entity is already bound to a unit procedure, the system automatically records the update as an exception in the context of this unit procedure.

For examples how to configure the related equipment tracking phases in support of different grouping and separation scenarios, see

- create an equipment entity group (page 6),
- identify an equipment entity group for usage (page 8),
- re-identify an already bound equipment entity or entity group (page 8),
- trigger a graph transition on an equipment entity group (page 9), and
- separate an equipment entity group (page 9).

Creating an Equipment Entity Group

The **Identify equipment** phase supports two identification scenarios: identify a **parent entity** and identify the **child entities** that are added to the parent entity.

An equipment entity can only belong to one equipment entity group at a given point in time.

For creating of an equipment entity group, the following configuration rules apply to the process parameters of the **Identify equipment** phase:

- Parent entity of group (page 29) must only be defined to identify a child entity to be added.
- Identify in current binding context (page 29) must be set to **Yes** if the new child is already bound to the same unit procedure context, otherwise it must be set to **No**.
- Identification mode (page 30) can be set to **Entity or group** (if both is allowed), **Single entity required** (if only a single entity must be identified), or **Entity group required** (if only an entity group must be identified), but must not be set to **Child entity (already bound)**.

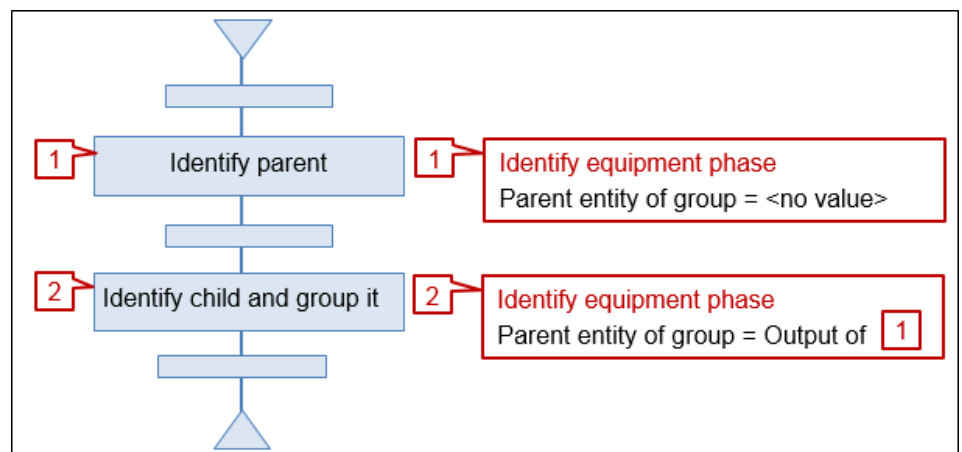


Figure 2: Example configuration - group two equipment entities

The subsequent figure shows the assembly of an equipment entity group (Compactor) that finally will contain a sub-group (Crusher).

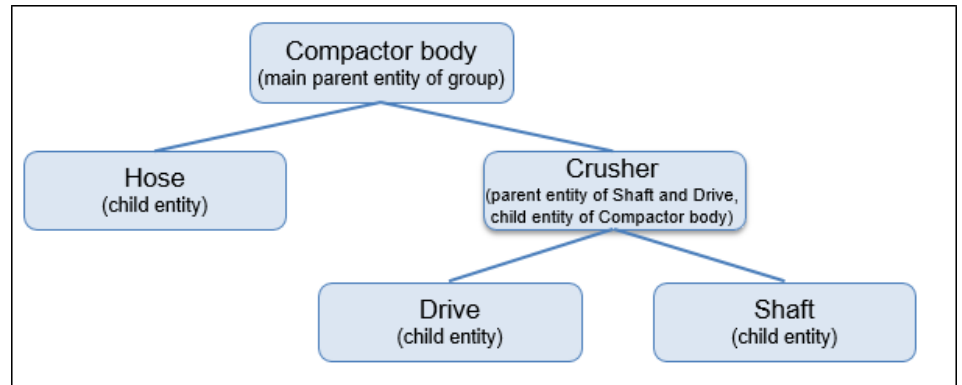


Figure 3: Compactor - example equipment entity group with sub-group

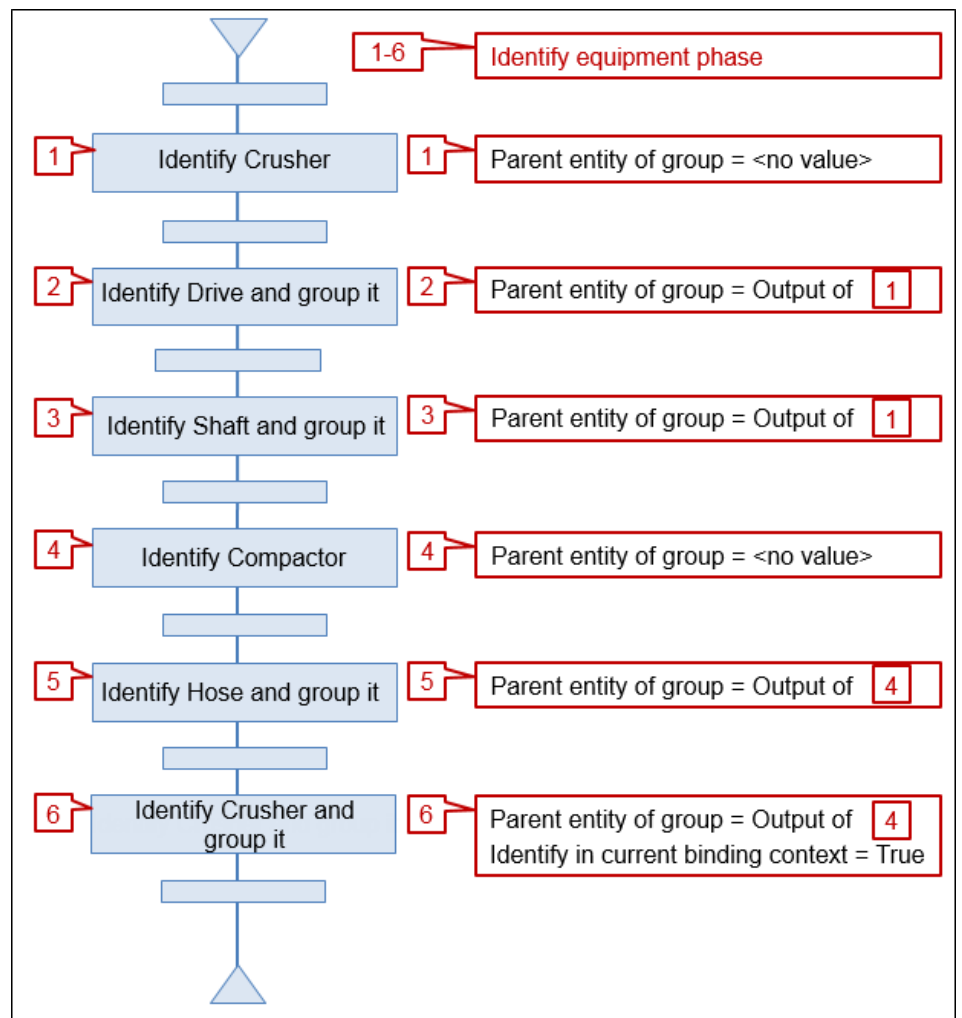


Figure 4: Compactor - example configuration - group equipment entities and a sub-group

Identifying an Equipment Entity Group for Usage

To use an equipment entity group for production, e.g. a Compactor, the group must be identified with the **Identify equipment** phase.

For identifying of an equipment entity group for usage, the following configuration rules apply to the process parameters of the **Identify equipment** phase:

- Parent entity of group (page 29) must not be set.
- Identify in current binding context (page 29) must be set to **No**.
- Identification mode (page 30) must be set to **Entity or group** (if the identification of an entity group is optional) or **Entity group required** (if only an entity group must be identified).

It is sufficient to identify any one entity of the group, its main parent entity or even any child entity, e.g. the Hose of the Compactor. After the successful identification, the **Identify equipment** phase determines the main parent entity as the identified entity, however, all of the entities of the group are bound to the current unit procedure context. For a successful identification, all defined equipment requirement rules must be fulfilled. The child entities of the group are checked with the group-enabled conditional rules. Other equipment requirements are only checked against the main parent entity of the group. In addition, the equipment graph status values of all entities are checked and refreshed, if expired.

Re-identifying an Already Bound Equipment Entity or Group

The **Identify equipment** phase also supports the re-identification of an already bound equipment entity or entity group.

A typical use case during execution is the re-identification of an equipment entity in a different room, but within the same unit procedure. Another use case is the disassembling of a group (see "Separating an Equipment Entity Group" (page 9)).

For re-identifying of an equipment entity or entity group, the following configuration rules apply to the process parameters of the **Identify equipment** phase:

- Parent entity of group (page 29) must not be set.
- Identify in current binding context (page 29) must be set to **Yes**.
- Identification mode (page 30) can be set to **Entity or group** (if both are allowed), **Single entity required** (if only a single entity must be identified), **Entity group required** (if only an entity group must be identified), or **Child entity (already bound)** (if the system shall not determine the related main parent entity, e.g., for separation).

Triggering a Graph Transition on an Equipment Entity Group

In order to support status transitions on many equipment entities that are assigned to a group, the **Trigger graph transition** phase performs the selected trigger on all entities of the group that hold an equipment graph of the configured purpose.

For triggering a graph transition on an equipment entity group, the following configuration rules apply to the process parameters of the **Trigger graph transition** phase:

- Identified equipment entity (page 75) must reference the main parent entity of the group.
- Allowed triggers (page 76) must be set to a purpose that at least one entity of the group holds.

Graphs with a different purpose are simply ignored. However, if none of the entities of the group holds a graph of the configured purpose, the result is a data mismatch system-triggered exception.

Depending on the graph configuration, the configured trigger may result in alternative status transitions, based on preconditions or different source statuses. For details, see "Functional Requirement Specification Data Management" [A3] (page 141).

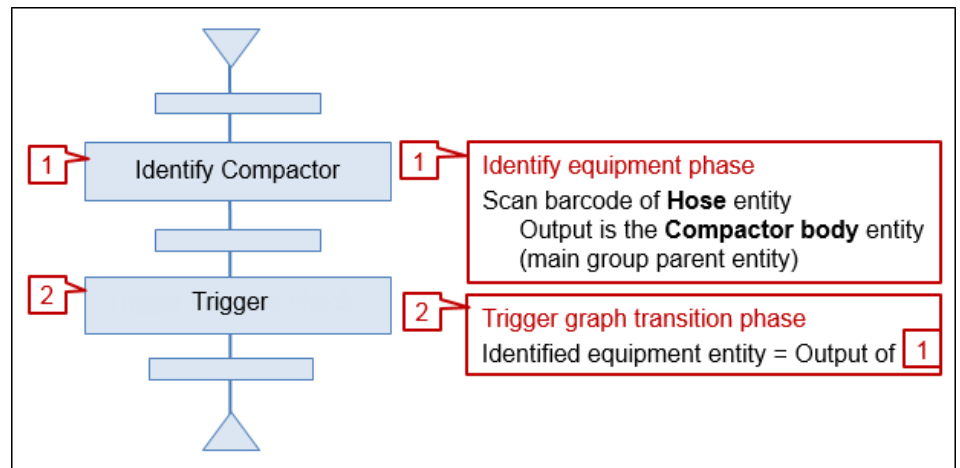


Figure 5: Compactor - example configuration - trigger a graph transition

Separating an Equipment Entity Group

In case of disassembly, the equipment entity or sub-group that has been disassembled physically also needs to be separated from the main group logically.

For this purpose, the **Separate equipment** phase supports the following key scenarios:

- Separating the entire group into all of its single entities, including the separation of all sub-groups (if applicable).

- Separating all child entities or sub-groups from the main parent entity, but keep all sub-groups (if applicable).
- Separating a specific child entity or sub-group from the main group (specific sub-group can be kept or completely separated, too).

In addition, the phase allows to configure if the separated entities or groups shall keep their binding status or shall be unbound from the current unit procedure.

For separating an equipment entity group, the following configuration rules apply to the process parameters of the **Separate equipment** phase (see also figure below):

- Parent entity of group (page 95) must reference the main parent entity of the group.
- Child entity to be separated (page 95) can reference the specific child entity or sub-group to be separated (see "Re-identifying an Already Bound Equipment Entity or Group" (page 8)). If no entity is referenced (null), all child entities and sub-groups are separated from the main parent entity.
- Keep sub-group (page 96) can be set to **Yes** (if separated sub-groups shall remain as a group) or **No**.
- Keep binding (page 96) can be set to **Yes** (if separated entities shall keep their binding status) or **No**.

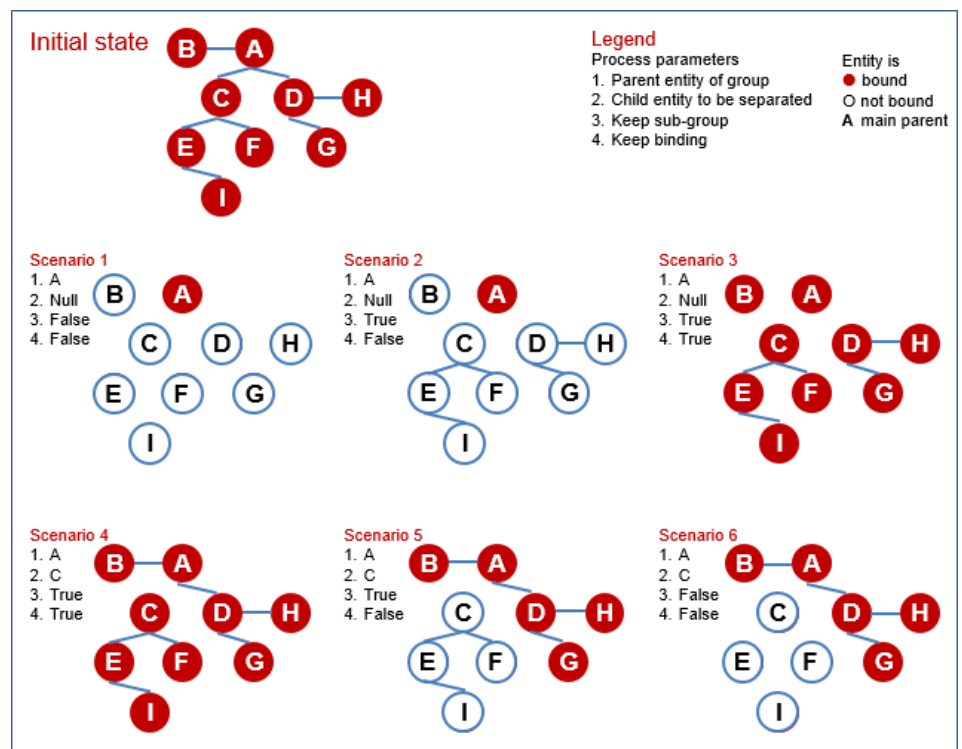


Figure 6: Separate equipment scenarios

The example configuration below shows a use case where a sub-group is separated from its main group and the sub-group remains as a group: The Compactor needs a special cleaning, but the Crusher of the Compactor can be reused unchanged with another compactor unit. For this reason, the Crusher sub-group shall be kept.

The Crusher and the Hose are separated from the Compactor body. The Drive and Shaft child entities remain grouped with the Crusher as their parent. All separated entities are unbound from the current unit procedure context.

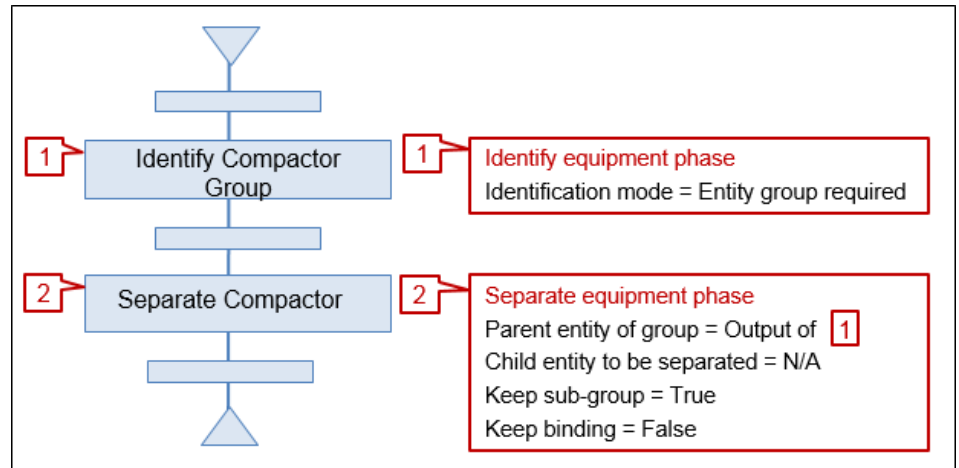


Figure 7: Compactor - example configuration - separate sub-groups

The given example results in the following parent-child relations of the original Compactor.

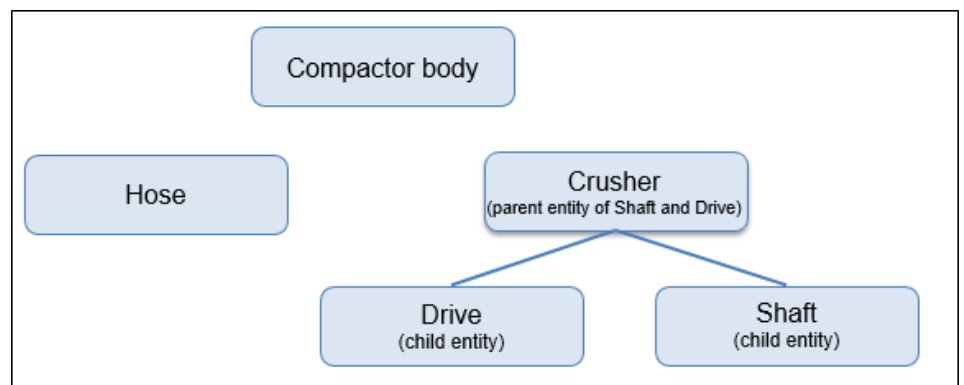


Figure 8: Compactor - example equipment entity group after separation

-
-
- FT PharmaSuite® 10.01.00 - Functional Requirement Specification Equipment Tracking Phases
-
-

Identify Equipment Phase (SR0300+)

The **Identify equipment** phase allows to identify an equipment entity or an equipment entity group and to bind the entity to the context in which it is being used (e.g. order, workflow). Additionally, the phase allows to build an equipment entity group. As a prerequisite for binding, the phase performs fit-for-purpose checks. For verification purposes, an already bound equipment entity can be re-scanned within the same unit procedure context.

Example use cases are:

- Verifying that an equipment entity or an equipment entity group (parent entity and its child entities) meets requirements
Equipment entities used during processing must meet various requirements. Prior to being used, an equipment entity is checked against the defined requirements (equipment class and additional properties). The ensuing results are documented in the entity's logbook.
- Exclusive usage of an equipment entity or equipment entity group for processing an order
In order to ensure the exclusive usage of a specific equipment entity or equipment entity group, the entity or entity group (including all of its child entities) is bound to a batch and unit. The binding itself is documented in the batch report and the entity's logbook.
- Identification of parent and child equipment entities either for grouping equipment entities or for separating equipment entity groups.

The identified equipment entity, its equipment class, grouping details (if applicable), and the equipment property values are stored in the batch record, thereby becoming available for documentation purposes in the sub-report and batch report (page 18).

Anomalies that occur during processing are covered by the phase exception handling (page 34) (e.g. requirements are not met).

After completion the phase displays the identified equipment entity with the following data in the Execution Window:

- Required class identifier and short description
- Additional requirements (property and rule level)
- Parent entity for grouping (if applicable)
- Actual entity identifier and short description

- Statuses of the identified entity
- List of child entities (if applicable)

The Navigator displays the identifier of the identified equipment entity and the scanned equipment entity (if applicable).

Scan a tableting unit label.			
Required class	Additional requirements	Actual entity	Statuses
TabletPresses-A / Automated Tablet Presses	- Tablet Count / Tablet Count: ea		
		TabletPress_AM / Automated Tablet Press	- Unit Cleaning Graph / Clean




Figure 9: Identify equipment during execution

Scan a tableting unit label.			
Required class	Additional requirements	Actual entity	Statuses
TabletPresses-A / Automated Tablet Presses	- Tablet Count / Tablet Count: ea		
		TabletPress_AM / Automated Tablet Press	- Unit Cleaning Graph / Clean

List of child entities of TabletPress_AM / Automated Tablet Press		
Identifier	Short description	Statuses
TabletDischargeChute	Discharge chute for Automated Tablet Press	- Unit Cleaning Graph / Clean
TabletPressFeeder	Feeder for Automated Tablet Press	- Unit Cleaning Graph / Clean
TabletPressFeederSeal	Feeder Seal for Automated Tablet Press	- Unit Cleaning Graph / Clean




Figure 10: Identify equipment group during execution

Scan a feeder label.			
Parent entity for grouping: TabletPress_AM / Automated Tablet Press			
Required class	Additional requirements	Actual entity	Statuses
TabletPresses-A / Automated Tablet Presses	- Rule-01 / Feeder group clean		
		TabletPressFeeder / Feeder for Automated Tablet Press	- Unit Cleaning Graph / Clean

List of child entities of TabletPressFeeder / Feeder for Automated Tablet Press		
Identifier	Short description	Statuses
TabletPressFeederSeal	Feeder Seal for Automated Tablet Press	- Unit Cleaning Graph / Clean




Figure 11: Identify equipment group for grouping during execution

Scan the feeder label.			
Required class	Additional requirements	Actual entity	Statuses
TabletPressFeeders / Feeders for Automated Tablet Press	- Rule-01 / Feeder clean		
		TabletPressFeeder-D / Feeder for Automated Tablet Press	- Unit Cleaning Graph / Clean

Property data		
Entity	Property	Value
TabletPressFeeder-D	Usage Counter	2
TabletPressFeeder-D	Max Usage Count	5
TabletPressFeeder-D	Unit Cleaning Graph (status)	Clean




Figure 12: Identify equipment with property data during execution

Layout

The phase provides individual layouts for its representation during execution (page 15), in the Navigator (page 17), and in the sub-report (page 18).

Representation during Execution (SR0300.1+)

The representation during execution depends on the phase mode.

Preview mode (SR0300.1.1)

1. <Instruction text>
(taken from **Instruction (SR0300.8.1)** process parameter (page 28))
2. Parent entity for grouping: /
 - Only if the **Parent entity of group (SR0300.8.6)** process parameter (page 29) is not null.
3. Table with list of equipment requirements required for identification
(taken from **Equipment parameters (SR0300.6.1)** process input (page 26))
4. Empty list of property data (Table of property data (SR0300.1.4) (page 17))
5. Empty list of child entities of the group
 - Only if the **Show children (SR0300.8.9)** process parameter (page 30) is set to **Yes**.
6. **Confirm** button (disabled).

Active mode (SR0300.1.2)

1. Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
2. <Instruction text>
(taken from **Instruction (SR0300.8.1)** process parameter (page 28))
3. Parent entity for grouping: <parent entity identifier> / <parent entity short description, if applicable>
 - Only if the **Parent entity of group (SR0300.8.6)** process parameter (page 29) is not null.
4. Table with list of equipment requirements required for identification
(taken from **Equipment parameters (SR0300.6.1)** process input (page 26))
 - Required class

- Additional requirements [rule identifier / description or rule expression (if description is empty)]
(This is related to properties, property values, and flexible rules.)
 - Actual entity (identified equipment)
 - If an entity group has been identified, the actual entity is the main parent entity of the group, which may not be the entity that was scanned.
 - Statuses (all actual statuses (available in the used FSM or graph) of the identified entity)
5. List of property data (Table of property data (SR0300.1.4) (page 17))
 6. List of child entities of the group <actual entity identifier> / <actual entity short description, if applicable>
 - Only if an entity group has been identified and the **Show children** (SR0300.8.9) process parameter (page 30) is set to **Yes**.
 - Details of child entity.

<Child entity identifier>	<Child entity short description>	<Entity graph status>
---------------------------	----------------------------------	-----------------------

7. **Confirm** button.

Completed mode (SR0300.1.3)

1. Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
2. <Instruction text>
(taken from **Instruction** (SR0300.8.1) process parameter (page 28))
3. Parent entity for grouping: <parent entity identifier> / <parent entity short description, if applicable>
 - Only if the **Parent entity of group** (SR0300.8.6) process parameter (page 29) is not null.
4. Table with list of equipment requirements required for identification
(taken from **Equipment parameters** (SR0300.6.1) process input (page 26))
5. List of child entities of the group <actual entity identifier> / <actual entity short description, if applicable>
 - Only if an entity group has been identified and the **Show children** (SR0300.8.9) process parameter (page 30) is set to **Yes**.

- Details of child entity.

<Child entity identifier>	<Child entity short description>	<Entity graph status>
---------------------------	----------------------------------	-----------------------

- List of property data (Table of property data (SR0300.1.4) (page 17))
- Confirm** button (completed).

Table of property data (SR0300.1.4)

Only if an **Equipment property list (SR0300.8.12)** bundle process parameter (page 30) is defined.

For all entities of the identified equipment or equipment group that match an **Equipment property list (SR0300.8.12)** bundle process parameter definition for an entity, the following data is displayed:

<Entity [identifier]>	<Property [identifier]>	<[Property] Value>
-----------------------	-------------------------	---------------------

The table is sorted first by entity identifier, secondly by property identifier.

If the **Equipment property list (SR0300.8.12)** bundle process parameter definition contains an equipment class definition, the entity with this attribute is only displayed if the entity is assigned to the defined equipment class.

If the property or equipment graph defined as attribute is not available at the entity, the table entry is omitted and not displayed.

Representation in Navigator (SR0300.4+)

The Navigator provides the following details:

Phase column (Framework capability)

- <Phase name>
- Example:
Identify mixer

Information column (SR0300.4.1)

- <Identifier of identified equipment entity>
- Example: 23480Compactor
- If an entity group has been identified:
 - <Identifier of identified equipment entity (main parent)>
<Identifier of the scanned entity>

- Example:
23480Compactor
23478Frame

- If the identification has been skipped, no data is displayed.

Action column

- There are no actions available.

Representation in Sub-report (SR0300.5+)

The sub-report contains the following information:

Common sub-report elements (Framework capability)

- <Start time>
- <Completion time>
- <Unit procedure> / <operation> / <phase>
- <Work center> / <station> / <device> - <phase completion user>

Sub-report elements (SR0300.5.1)

- Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
- Instruction text
- Parent entity for grouping: <parent entity identifier> / <parent entity short description>
 - Only if the **Parent entity of group (SR0300.8.6)** process parameter (page 29) is not null.
- Required equipment class (identifier and short description)
- Identified equipment entity (identifier and short description)
 - Represents the main parent entity if an entity group has been identified.
- Scanned equipment entity (identifier and short description)
 - Only if an entity group has been identified.
- Additional requirements [rule identifier / description or rule (if description is empty)]
- Actual property names and values (for additional non-status property type-based requirements of the identified equipment) and all status values (available in the used FSM or graph) of the identified equipment entity (e.g. cleaning status)

- If an equipment entity group has been identified, data of the parent entity is shown.
- For properties of the **Automation** type, the value is always N/A.
- List of property data (Table of property data (SR0300.1.4) (page 17))
- Child equipment entities (identifier and short description)
- All status values (available in the used graph) of child equipment entities (e.g. cleaning status)

Business Logic (SR0300.2+)

The phase implements the following business logic.

Identify and bind equipment entity (SR0300.2.1)

- Function: Identify equipment entity or equipment entity group
- Trigger: Phase becomes active
- Postcondition: Equipment entity or entity group is identified

Step	#	Description
Phase activation	10	Phase displays its user interface according to the Active mode (SR0300.1.2) layout (page 15).
Operator scans barcode	20	The Scan equipment entity barcode (SR0300.2.2) function (page 20) becomes active. For manual identification, see Enter identifier manually (SR0300.3.1.1) user-triggered exception (page 38).
Phase performs pre-identification checks	30	The Identify equipment entity (SR0300.2.3) function (page 21) becomes active.
Phase performs pre-binding checks	40	The Bind equipment entity (SR0300.2.4) function (page 23) becomes active.

Step	#	Description
Operator confirms phase	50	<ul style="list-style-type: none"> ■ If no equipment entity or entity group has been identified successfully, phase displays the Nothing identified (SR0300.3.6.5) error message (page 43). The phase cannot be completed. ■ If the checks have passed successfully and an equipment entity or entity group is bound, the operator confirms the identification of the equipment entity or entity group. ■ Phase sets the Result (SR0300.9.4) output variable (page 47) to IDENTIFIED. ■ Phase is completed.
Phase runs in Automatic completion mode	60	In case the entity or entity group has been identified and is bound without any exceptions and the Mode (SR0300.8.10) process parameter (page 29) is set to Automatic completion , phase sets the Result (SR0300.9.4) output variable (page 47) to IDENTIFIED and is completed automatically.

Scan equipment entity barcode (SR0300.2.2)

- Function: Scan an equipment entity barcode
- Trigger: Operator scans barcode
- Postcondition: Equipment entity barcode is scanned

Step	#	Description
Operator scans barcode	10	Phase reads scanned data.
Phase performs checks	20	<ul style="list-style-type: none"> ■ If barcode reading was technically successful, phase updates background color of phase representation according to style sheet in order to confirm the reading. ■ If barcode reading was technically not successful, phase remains in listening mode. ■ If barcode reading was not successful, phase displays the Cannot find entity (SR0300.3.6.1) error message (page 41).
		If the checks have passed successfully, phase continues with the Identify and bind equipment entity (SR0300.2.1) function (page 19).

Identify equipment entity (SR0300.2.3)

- Function: Identify a scanned equipment entity or equipment entity group
- Trigger: Equipment entity is scanned successfully
- Postcondition: Equipment entity or entity group is identified

Step	#	Description
Phase checks identification mode	05	<ul style="list-style-type: none"> ■ If the Identification mode (SR0300.8.8) process parameter (page 30) is set to Entity group required, but the scanned entity is not member of an entity group: Phase displays the Entity is not part of a group (SR0300.3.6.11) error message (page 45). ■ If the Identification mode (SR0300.8.8) process parameter (page 30) is set to Single entity required, but the scanned entity is member of a group: Phase displays the Entity is part of a group (SR0300.3.6.10) error message (page 44). ■ If the Identification mode (SR0300.8.8) process parameter (page 30) is set to Child entity (already bound), but one of the following items applies: the Parent entity of group (SR0300.8.6) process parameter (page 29) is not null, or the entity is not member of a group, or the entity is a main parent, or the Identify in current binding context (SR0300.8.7) process parameter (page 29) is not set to Yes: Phase displays the Not a child entity of bound group (SR0300.3.6.13) error message (page 45).
Phase determines main parent entity	10	If the scanned equipment entity is member of a group, phase determines, for the scanned entity, the main parent entity of its group and all child entities that belong to the same group.

Step	#	Description
Phase checks availability of equipment entity	15	<p>The following checks either apply to a single entity or to a main parent entity and to all of its child entities, respectively:</p> <ul style="list-style-type: none"> ■ If the Identify in current binding context (SR0300.8.7) process parameter (page 29) is set to Yes, phase expects and only allows entities that are already bound to the current unit procedure context. If the identification is done in a workflow that is appended to a unit procedure of an order, the phase also allows the entities that are bound to the unit procedure context of this order. In case an entity is not already bound to an allowed unit procedure context: Phase displays the Not available for usage (SR0300.3.6.4) error message (page 42). ■ If the Identify in current binding context (SR0300.8.7) process parameter is set to No, phase expects an unbound entity. In case an entity has already been identified or bound in the context of a different phase or even order: Phase displays the Not available for usage (SR0300.3.6.4) error message (page 42).
	20	<p>The following checks either apply to a single entity or to a main parent entity (not to all child entities of a group):</p> <ul style="list-style-type: none"> ■ If the entity has already been identified in the context of this phase: Phase displays the Already identified (SR0300.3.6.2) error message (page 42). ■ Only if the phase has been resumed and the entity has already been identified in the context of this phase: Phase continues with the Bind identified equipment entity (SR0300.2.4) function (page 23).
Phase performs grouping-related checks	25	<p>The following check applies if the Parent entity of group (SR0300.8.6) process parameter (page 29) is not null:</p> <ul style="list-style-type: none"> ■ If the Parent entity of group (SR0300.8.6) process parameter (page 29) is not null, but the referenced entity is not bound to the current unit procedure context: Phase displays the Parent entity not bound (SR0300.3.6.14) error message (page 45). ■ If the identified entity to be added to the group is the same as the pre-defined parent entity of the group according to the Parent entity of group (SR0300.8.6) process parameter (page 29): Phase displays the Group cycle error (SR0300.3.6.12) error message (page 45).

Step	#	Description
Phase sets binding status to Identified	30	<p>If all checks pass successfully, the following logic either applies to a single entity or to a main parent entity and to all of its child entities, respectively:</p> <ul style="list-style-type: none"> ■ If the Identify in current binding context (SR0300.8.7) process parameter (page 29) is set to Yes: Phase does not update the binding status because the equipment entity is already bound to a unit procedure context. Phase updates the logbook with the additional identification (if maintained). ■ If the Identify in current binding context (SR0300.8.7) process parameter (page 29) is set to No: Phase changes the binding status of the equipment entity to Identified, updates the logbook accordingly (if maintained), and continues with the Bind identified equipment entity (SR0300.2.4) function (page 23).

Bind identified equipment entity (SR0300.2.4)

- Function: Bind an identified equipment entity or equipment entity group
- Trigger: Equipment entity or entity group is identified successfully
- Postcondition: Equipment entity or entity group is bound

Step	#	Description
Phase checks if graph statuses are expired	5	<p>Only if the Identify in current binding context (SR0300.8.7) process parameter (page 29) is set to No: The Refresh expired equipment status (SR0300.2.5) function (page 25) becomes active.</p>
Phase checks class membership of equipment entity	10	<p>The following check either applies to a single entity or to a main parent entity (not to child entities of a group). However, the resulting action applies to all entities of an entity group (if applicable):</p> <ul style="list-style-type: none"> ■ If the identified entity is not member of the required class, phase resets the binding status of the equipment entity (all entities of the entity group) to Available, updates the logbook accordingly (if maintained), and displays the Not member of required class (SR0300.3.6.3) error message (page 42). ■ If the check passes successfully, phase continues with the next check.

Step	#	Description
Phase checks if class and entity fulfill the minimum required status	15	<p>The following check either applies to a single entity and its required class, or, in case of an entity group, to the main parent entity and its required class and to all child entities, respectively.</p> <p>In addition, it applies to all classes that are explicitly defined as an equipment requirement with a conditional rule and the equipmentIsMemberOfClass function. For details, see Expressions for Conditional Rules (SR3146.9.9.4.12) and Expression Editor - Runtime Context Data (SR3146.9.9.6) in "Functional Requirement Specification Recipe and Workflow Management" [A2] (page 141).</p> <ul style="list-style-type: none"> ■ Phase checks for the minimum class status and the minimum entity status according to the Equipment status check (SR0300.8.5) process parameter (page 31). If the check fails, phase creates the Equipment status check (SR0300.3.2.2) system-triggered exception (page 36). ■ If the check passes successfully, phase continues with the next check.
Phase checks if property values of equipment entity match and if rules are fulfilled	20	<p>The following checks either apply to a single entity or to a main parent entity (not to child entities of a group):</p> <ul style="list-style-type: none"> ■ If any of the property value-related or flexible rule-related checks fail, phase creates the Property value check (SR0300.3.2.1) system-triggered exception (page 34). <p>The following check either applies to a single entity or to a main parent entity and to all of its child entities, respectively:</p> <ul style="list-style-type: none"> ■ If the group-enabled conditional rule-related check fails, phase creates the Property value check (SR0300.3.2.1) system-triggered exception (page 34).
Phase sets binding status to Bound	30	<p>If all checks pass successfully or the exception is recorded, the following logic either applies to a single entity or to a main parent entity and to all of its child entities, respectively:</p> <ul style="list-style-type: none"> ■ If the Identify in current binding context (SR0300.8.7) process parameter (page 29) is set to Yes: Phase does not update the binding status because the equipment entity is already bound to a unit procedure context. ■ If the Identify in current binding context (SR0300.8.7) process parameter (page 29) is set to No: Phase sets the status of the equipment entity to Bound and updates the binding context in the Context tab of the equipment entity (not for workflows) and the logbook accordingly (if maintained).

Step	#	Description
Phase performs group assignment	40	<p>The following logic either applies to a single entity or to a main parent entity (not to child entities of a group):</p> <ul style="list-style-type: none"> ■ If the Parent entity of group (SR0300.8.6) process parameter (page 29) is not null: Phase assigns the identified equipment entity as new child entity to the pre-defined parent entity of the group according to the Parent entity of group (SR0300.8.6) process parameter (page 29). <p>(In case the identified equipment entity has been a main parent entity, it now becomes a sub-parent entity.)</p>

Refresh expired equipment status (SR0300.2.5)

- Function: Refresh the expired statuses of an equipment entity or equipment entity group
- Trigger: Equipment entity or entity group is identified successfully
- Postcondition: Expired equipment graph statuses of entity or entity group are updated

Step	#	Description
Phase checks if graph statuses are expired	10	<p>The following logic either applies to a single entity or to a main parent entity and to all of its child entities, respectively:</p> <p>Phase checks in a loop for all equipment graphs assigned to the entity if the current status of equipment graph has expired.</p> <ul style="list-style-type: none"> ■ If the status is not expired, phase checks the next equipment graph. ■ If the status is expired, phase performs the Expired (RS) equipment graph trigger and checks the next equipment graph.
	20	<p>The following logic either applies to a single entity or to a main parent entity and to all of its child entities, respectively:</p> <p>If the execution of any Expired (RS) equipment graph trigger fails, phase resets the binding status of the equipment entity to Available, updates the logbook accordingly (if maintained), and displays the Expired trigger execution failed (SR0300.3.6.9) error message (page 44).</p>
	30	<p>If the execution of all Expired (RS) equipment graph trigger passed successfully, the phase continues with further checks of the Bind identified equipment entity (SR0300.2.4) function (page 23).</p>

Phase Parameters

The phase provides equipment parameters as process inputs (page 26) and process parameters (page 27).

Process Inputs (SR0300.6+)

Equipment Parameters (SR0300.6.1)

Equipment parameters allow to define an equipment requirement as follows:

- by assigning an equipment class and
 - by assigning a specific property type (check against existence),
 - by setting specific property values (check against value, see **Technical Property Types and Editors (SR3071.8.7+)** in "Functional Requirement Specification Data Management" [A3] (page 141)),
 - by defining a flexible rule, or
 - by defining a conditional rule.

For properties of the following data types, the property values cannot be accessed within rules:

- Equipment type
- Flexible tag definition
- Ranges
- Room cleaning rules
- Scale configuration
- Work center assignment

For details about rules, see **Expressions for Flexible Rules (SR3146.9.9.4.10)** and **Expressions for Conditional Rules (SR3146.9.9.4.12)** in "Functional Requirement Specification Recipe and Workflow Management" [A2] (page 141).

Process Parameters (SR0300.8+)

The following process parameters define the behavior of the phase.

INSTRUCTION TABLE-SPECIFIC PARAMETERS

Instruction table definition (Framework capability)

Attribute	Type	Comment
Table layout	Choice list	Defines the layout of the instruction table holding the instruction texts. Available settings: 1 column, 2 columns, 3 columns, 4 columns, 5 columns. Default setting: 1 column.
First column narrow	Boolean	Defines if the first column of the table shall be narrow.
Show all borders	Boolean	Defines if the borders of the table shall be visible.

Instruction table text (Framework capability)

Attribute	Type	Comment
Column 1	HTML text	Instruction text to be displayed in a column. Restriction: Maximum length is 2000 characters (including HTML tags).
Column 2	HTML text	
Column 3	HTML text	
Column 4	HTML text	
Column 5	HTML text	

INSTRUCTION LINK-SPECIFIC PARAMETERS

Instruction text with links (Framework capability)

Attribute	Type	Comment
Instruction text	HTML text	<p>Instruction text to be displayed.</p> <p>For any text enclosed in curly brackets you can define a hyperlink with the Instruction link definition process parameter (page 28).</p> <p>Example: Refer to {SOP1270} for guidance.</p> <p>Maximum length is 2000 characters (including HTML tags).</p>

Instruction link definition (Framework capability)

Attribute	Type	Comment
Link text	Text	<p>Text to be used as link.</p> <p>For any text enclosed in curly brackets within the instruction text you can define a link with the Link URL attribute.</p> <p>Including the brackets in the link text is optional.</p> <p>Maximum length is 80 characters.</p>
Link URL	Text	<p>URL of the file to be displayed. The link opens the external application assigned to the file type by the operating system.</p> <p>Maximum length is 256 characters.</p>

BASIC PARAMETERS

Instruction (SR0300.8.1)

Attribute	Type	Comment
Text	HTML text	<p>Instruction text to be displayed.</p> <p>Restriction: Maximum length is 2000 characters (including HTML tags).</p>

Mode (SR0300.8.10)

Attribute	Type	Comment
Mode	Choice list	Defines the processing mode. Manual completion (default): Operator confirms phase manually. Automatic completion: Phase is completed automatically when the identified entity or entity group is bound without any exceptions.

Parent entity of group (SR0300.8.6)

Attribute	Type	Comment
Equipment object	Reference	Reference to the equipment object output variable of a preceding phase that defines the parent entity of the group. The identified equipment entity is added to the parent entity as a child entity.

Identify in current binding context (SR0300.8.7)

Attribute	Type	Comment
Enabled	Boolean	Controls if the identification is only possible if the entity or entity group is already bound to an allowed unit procedure context. If the identification is done in a workflow that is appended to a unit procedure of an order, the phase also allows the entities that are bound to the unit procedure context of this order. Default setting: No

By configuration, it is possible to restrict the allowed unit procedure context for identification to the unit procedure of the phase in order to support behavior as prior to PharmaSuite 9.2.

For configuration details on the **IdentifyAlreadyBoundEqmFromAppendedWorkflow** key, see chapter "Configuration Keys of PharmaSuite" in Volume 4 of the "Technical Manual Configuration and Extension" [A4] (page [141](#)).

Identification mode (SR0300.8.8)

Attribute	Type	Comment
Enabled	Choice list	Defines the identification mode. Available settings: Entity or group , Single entity required , Entity group required , Child entity (already bound) . Default setting: Entity or group .

Show children (SR0300.8.9)

Attribute	Type	Comment
Enabled	Boolean	Controls if the list of child entities is displayed during execution. Default setting: Yes

Equipment property list (SR0300.8.12)

The phase allows up to ten bundle process parameters of this type.

Attribute	Type	Comment
Equipment class	Equipment class object	Optional. Prefilled with the last value used. If defined, an attribute of the identified equipment entity is only then displayed during execution if the entity is assigned to this equipment class.
Attribute	String	Property type or equipment graph whose data shall be displayed.

Equipment Class Selection editor (Framework capability)

The system provides an Equipment Class Selection editor for selecting an equipment class from the Universe. Equipment classes in a **Retired** state (e.g. Archived) are not available for selection.

Attribute Selection editor (Framework capability)

The system provides an Attribute Selection editor for selecting a property type or an equipment graph property (status or expiry date).

If an equipment class has been defined with the Equipment Class Selection editor of the process parameter, only properties of the selected equipment class are displayed.

CONFIGURATION OF SYSTEM-TRIGGERED EXCEPTIONS

Property value check (SR0300.8.2)

Attribute	Type	Comment
Risk assessment	Choice list	Defines the risk level of the exception and thus controls the related signature privilege. Available settings: None , Low , Low (mandatory comment) , Medium , Medium (mandatory comment) , High , High (mandatory comment) . Default setting: High .
Exception text	Text	Defines the exception description used during exception handling and within the batch record. Maximum length is 250 characters.

See also **Property value check (SR0300.3.2.1)** system-triggered exception (page 34).

Equipment status check (SR0300.8.5)

Attribute	Type	Comment
Minimum class status	Choice list	Defines the minimum class status required for equipment identification. Available settings: Verification , Approved . Default setting: Approved .
Minimum entity status	Choice list	Defines the minimum entity status required for equipment identification. Available settings: Verification , Approved . Default setting: Approved .

Attribute	Type	Comment
Risk assessment	Choice list	Defines the risk level of the exception and thus controls the related signature privilege. Available settings: None , Low , Low (mandatory comment) , Medium , Medium (mandatory comment) , High , High (mandatory comment) . Default setting: High .
Exception text	Text	Defines the exception description used during exception handling and within the batch record. Maximum length is 250 characters.

See also **Equipment status check (SR0300.3.2.2)** system-triggered exception. (page [36](#))

CONFIGURATION OF USER-TRIGGERED EXCEPTIONS

Enter identifier manually (SR0300.8.3)

Attribute	Type	Comment
Risk assessment	Choice list	Defines the risk level of the exception and thus controls the related signature privilege. Available settings: None , Low , Low (mandatory comment) , Medium , Medium (mandatory comment) , High , High (mandatory comment) . Default setting: High .
Exception text	Text	Defines the exception description used during exception handling and within the batch record. Maximum length is 250 characters.

See also **Enter identifier manually (SR0300.3.2.1)** user-triggered exception (page [38](#)).

Undo identification (SR0300.8.4)

Attribute	Type	Comment
Risk assessment	Choice list	Defines the risk level of the exception and thus controls the related signature privilege. Available settings: None , Low , Low (mandatory comment) , Medium , Medium (mandatory comment) , High , High (mandatory comment) . Default setting: High .
Exception text	Text	Defines the exception description used during exception handling and within the batch record. Maximum length is 250 characters.

See also **Undo identification (SR0300.3.1.2)** user-triggered exception (page [39](#)).

Skip identification (SR0300.8.11)

Attribute	Type	Comment
Risk assessment	Choice list	Defines the risk level of the exception and thus controls the related signature privilege. Available settings: None , Low , Low (mandatory comment) , Medium , Medium (mandatory comment) , High , High (mandatory comment) . Default setting: High .
Exception text	Text	Defines the exception description used during exception handling and within the batch record. Maximum length is 250 characters.

See also **Skip identification (SR0300.3.1.3)** user-triggered exception (page [40](#)).

Exceptions (SR0300.3+)

The phase supports user-defined, user-triggered (page 38), system-triggered (page 34), and post-completion exceptions (page 41) and their configuration by means of process parameters (page 27).

User-defined exceptions cannot be configured by process parameters since they are provided by the framework and independent of phases.

System-triggered Exceptions (SR0300.3.2+)

A system-triggered exception is represented in a message dialog along with an **Exception** button, in the Exception Window as the read-only description of the exception, and in the batch report.

The following system-triggered exceptions are available.

Property value check (SR0300.3.2.1)

For each property that does not match, the exception lists the related rule identifier, the rule description (or the rule content, if the description is not maintained), the property identifier, and the expected and actual values.

For each flexible rule that is not fulfilled, the exception lists the related rule identifier, the rule description (or the rule expression, if the description is not maintained), and the expected and actual values of the expression.

For each conditional rule that is not fulfilled, the exception lists the related entity, the rule identifier, the rule description (or the rule expression, if the description is not maintained), and the expected and actual values of the expression.

Representation of the exception:

Exception dialog

- <Exception text>
(taken from **Property value check (SR0300.8.2)** process parameter (page 31))
Cannot identify the <Identifier of identified equipment entity> entity, since it does not meet the defined equipment requirements.

Exception Window

- <Exception text>
(taken from **Property value check (SR0300.8.2)** process parameter (page 31))
Cannot identify the <Identifier of identified equipment entity> entity, since it does not meet the defined equipment requirements.

Rule: <identifier>

Description: <rule description> (or <rule content/expression>, if the description is not maintained)

- For properties that do not match:
Equipment property: <identifier>
Expected value: <value>
Actual value: <value>
- For flexible rules that are not fulfilled:
Expected value: Yes
Actual value: No
- For conditional rules that are not fulfilled, same rule can apply to multiple entities:
Entities: <identifier of entity 1 to which the rule applies>, ..., <identifier of entity n>
Expected value: Yes
Actual value: No
- Example:
Equipment requirement violation
Cannot identify the AX67 entity, since it does not meet the defined equipment requirements.

Rule: Rule_01

Description: Check of cleaning status

Equipment property: Cleaning status

Expected value: Clean

Actual value: To be cleaned

Rule: Rule_02

Description: Required volume range

Equipment property: Volume

Expected value: 150 - 200 l

Actual value: 100 l

Rule: Rule_03

Description: Counter less or equal 5

Entities: Filter005

Expected value: Yes

Actual value: No

Property value check - Logic (SR0300.3.2.1.1)

- Trigger: Check has failed
- Postcondition: Exception is recorded

Step	#	Description
Operator accepts exceptional situation	1-10	Phase shows exception description to be signed.
Operator signs exception	1-20	Phase records the exception.
Operator does not accept exceptional situation	2-10	The following logic either applies to a single entity or to a main parent entity and to all of its child entities, respectively: Phase resets status of equipment entity to Available and updates the logbook accordingly (if maintained).

Equipment status check (SR0300.3.2.2)

The phase checks if the defined minimum statuses for the equipment class and entity are fulfilled according to the **Equipment status check (SR0300.8.5)** process parameter (page 31).

The check either applies to a single entity and its required class, or, in case of an entity group, to the main parent entity and its required class and to all child entities, respectively.

In addition, the check applies to all classes (incl. classes of child entities) that are explicitly defined as an equipment requirement with a conditional rule and the **equipmentIsMemberOfClass** function. For details, see **Expressions for Conditional Rules (SR3146.9.9.4.12)** and **Expression Editor - Runtime Context Data (SR3146.9.9.6)** in "Functional Requirement Specification Recipe and Workflow Management" [A2] (page 141).

Representation of the exception:

Exception dialog

- <Exception text>
(taken from **Equipment status check (SR0300.8.5)** process parameter (page 31))
 - If class status does not match:
Cannot identify the <entity identifier > equipment entity, since its required class (<class identifier>) is in the <status> status.
 - If entity status does not match:
Cannot identify the <identifier> equipment entity, since it is in the <status> status.

Exception Window

- <Exception text>
(taken from **Equipment status check (SR0300.8.5)** process parameter (page 31))
 - If class status does not match:
Cannot identify the <entity identifier > equipment entity, since its required class (<class identifier>) is in the <status> status.
Required minimum status: <status>
 - If entity status does not match:
Cannot identify the <identifier> equipment entity, since it is in the <status> status.
Required minimum status: <status>
 - Example:
Equipment status violation
Cannot identify the AX67 equipment entity, since its required class (CX14) is in the Verification status.
Required minimum status: Approved

Cannot identify the AX67 equipment entity, since it is in the Draft status.
Required minimum status: Approved

Equipment status check - Logic (SR0300.3.2.2.1)

- Trigger: Check has failed
- Postcondition: Exception is recorded

Step	#	Description
Operator accepts exceptional situation	1-10	Phase shows exception description to be signed.
Operator signs exception	1-20	Phase records the exception.
Operator does not accept exceptional situation	2-10	The following logic either applies to a single entity or to a main parent entity and to all of its child entities, respectively: Phase resets status of equipment entity to Available and updates the logbook accordingly (if maintained).

Multiple failed checks (SR0300.3.2.3)

In case multiple system-triggered exceptions occur, only one combined exception (system-triggered exception) is recorded including information about all exceptions. The highest risk assessment of all related exceptions and its related signature privilege apply.

After the exception has been recorded, the phase must be manually completed.

Representation in the message dialog:

1. Several exceptions have occurred.
For details navigate to the Exception Window.
2. **Exception** button

Representation during exception handling:

1. Exception text:
<Concatenation of multiple exception texts>.

User-triggered Exceptions (SR0300.3.1+)

A user-triggered exception is represented in the list of available user-triggered exceptions in the Exception Window, as the description of the exception, and in the batch report.

The following user-triggered exceptions are available.

Enter identifier manually (SR0300.3.1.1)

The **Enter identifier manually** exception allows an operator to enter the barcode of an equipment entity manually.

The exception is disabled, if the required equipment entity is already in the **Identified** or **Bound** status.

Representation during exception handling:

- Instruction:
Identify by typing the entity barcode.
Box for identifier input.
Confirm button.
- Exception text:
<Exception text>
(taken from **Enter identifier manually (SR0300.8.3)** process parameter (page 32))
Manual entry: <barcode string>
- Example:
Equipment entity barcode entered manually
Manual entry: 23478asUi

Enter identifier manually - Logic (SR0300.3.1.1.1)

- Trigger: Exception is selected
- Postcondition: Barcode string is entered manually

Step	#	Description
Operator confirms exception	10	If entered barcode string does not match an equipment entity, phase displays the Cannot find entity (SR0300.3.6.1) error message (page 41).
Operator signs exception	20	If equipment entity can be identified as an existing entity and exception is signed, phase continues with Identify equipment entity (SR0300.2.3) function (page 21) (see also Identify and bind equipment entity (SR0300.2.1) function (page 19)).

Undo identification (SR0300.3.1.2)

The **Undo identification** exception allows an operator to revoke the identification of an equipment entity or an equipment entity group.

In case an identified entity or entity group has been added to a pre-defined parent entity according to the **Parent entity of group (SR0300.8.6)** process parameter (page 29), the exception also revokes this grouping.

The exception is disabled, if the required equipment entity or entity group is not in the **Bound** status.

Representation during exception handling:

- Instruction:
Undo the identification of the entity.
Confirm button.
- Exception text:
<Exception text>
(taken from **Undo identification (SR0300.8.4)** process parameter (page 33))
Released entity (group): <Equipment (parent) entity identifier> / <Equipment (parent) entity short description>
- Example:
Undo of identification during identification process
Released entity (group): 23478H / Hose 45 cm

Undo identification - Logic (SR0300.3.1.2.1)

- Trigger: Exception is selected
- Postcondition: Equipment entity or entity group is no longer bound

Step	#	Description
Operator confirms exception	10	Phase shows exception description to be signed according to Undo identification (SR0300.8.4) process parameter (page 33).
Operator signs exception	20	<p>The following logic either applies to a single entity or to a main parent entity (not to child entities of a group):</p> <ul style="list-style-type: none"> ■ If the identified equipment entity has been assigned to the pre-defined parent entity according to the Parent entity of group (SR0300.8.6) process parameter (page 29): Phase separates the identified equipment entity from the pre-defined parent entity. <p>The following logic either applies to a single entity or to a main parent entity and to all of its child entities, respectively:</p> <ul style="list-style-type: none"> ■ Phase resets the binding status of equipment entity to Available and updates the binding context in the Context tab of the equipment entity (not for workflows) and the logbook accordingly (Unbind) (if maintained).

Skip identification (SR0300.3.1.3)

The **Skip identification** exception allows an operator to skip the identification of an equipment entity or an equipment entity group.

The exception is disabled, if the required equipment entity or entity group is in the **Identified** or **Bound** status.

Representation during exception handling:

- Instruction:
Skip the identification.
Confirm button.
- Exception text:
<Exception text>
(taken from **Skip identification (SR0300.8.11)** process parameter (page 33))
No equipment entity identified.
- Example:
Identification of further equipment entities to load autoclave has been skipped.
No equipment entity identified.

Skip identification - Logic (SR0300.3.1.3.1)

- Trigger: Exception is selected
- Postcondition: Phase can be completed without equipment entity identification

Step	#	Description
Operator confirms exception	10	Phase shows exception description to be signed according to Skip identification (SR0300.8.11) process parameter (page 33).
Operator signs exception	20	Phase returns to the Execution Window and can be completed without having identified an equipment entity. Phase sets the Result (SR0300.9.4) output variable (page 47) to SKIPPED .

Post-completion Exceptions

There are no post-completion exceptions available.

Information Messages

There are no information messages available.

Questions

There are no questions available.

Decisions

There are no decisions available.

Error Messages (SR0300.3.6+)

Error messages are represented in an error message dialog containing a message type-specific icon, the error message, and an **OK** button.

The following error messages are available to inform the operator about error conditions.

Cannot find entity (SR0300.3.6.1)

UI text	Comment
Cannot identify the <scanned identifier> entity, since it is not available in the system.	Message pack: PhaseEqmEqIdentification<version> Message ID: EqNotExist_ErrorMsg

Already identified (SR0300.3.6.2)

UI text	Comment
Cannot identify the <scanned identifier> entity, since you have already identified a suitable entity. To identify another entity, revoke the identification of the <currently identified identifier> entity first.	Message pack: PhaseEqmEqIdentification<version> Message ID: EqReqAlreadyIdent_ErrorMsg

Not member of required class (SR0300.3.6.3)

UI text	Comment
The <scanned entity or main parent identifier> equipment entity is not suitable, since it does not belong to the required class (<class identifier>).	Message pack: eqm.Validation Message ID: eqmClassNotMatch_ErrorMsg

Not available for usage (SR0300.3.6.4)

UI text	Comment
Cannot identify the <identifier> equipment entity, since it has already been identified or bound at the <identifier> work center for <workflow, order> (unit procedure: <identifier>, operation: <identifier>, phase: <identifier>).	If the Identify in current binding context (SR0300.8.7) process parameter (page 29) is set to No : Applies either to a single entity or to a main parent entity (not to child entities of a group). Message pack: fsm_S88EquipmentBinding Message ID: identifyNotAllowedOwnedByOther_ErrorMsg
Cannot identify the <parent identifier> equipment entity, since at least one of its child entities has already been identified or bound.	If the Identify in current binding context (SR0300.8.7) process parameter (page 29) is set to No : Applies if the check only fails for at least one child entity of a group. Message pack: fsm_S88EquipmentBinding Message ID: identifyDescendantNotAllowedOwnedByOther_ErrorMsg

UI text	Comment
Cannot identify the <identifier> equipment entity, since it is not yet bound to an allowed unit procedure context.	If the Identify in current binding context (SR0300.8.7) process parameter (page 29) is set to Yes : Applies either to a single entity or to a main parent entity (not to child entities of a group). Message pack: fsm_S88EquipmentBinding Message ID: identifyNotAllowedIncompatibleBindingContext_ErrorMsg
Cannot identify the <parent identifier> equipment entity, since at least one of its child entities is not yet bound to an allowed unit procedure context.	If the Identify in current binding context (SR0300.8.7) process parameter (page 29) is set to Yes : Applies if the check only fails for at least one child entity of a group. Message pack: fsm_S88EquipmentBinding Message ID: identifyDescendantNotAllowedIncompatibleBindingContext_ErrorMsg

Nothing identified (SR0300.3.6.5)

UI text	Comment
You have to identify an entity before you can confirm the phase.	Message pack: PhaseEqmEqIdentification<version> Message ID: EqNotIdentified_ErrorMsg

Expired trigger execution failed (SR0300.3.6.9)

UI text	Comment
<p>1. The <equipment identifier> entity is not suitable, since the update of at least one expired status failed.</p> <p>2. The <equipment identifier> entity group is not suitable, since the update of at least one expired status failed.</p>	<p>1. Message pack: pec_ExceptionMessage Message ID: cannotIdentifyExpiryTriggerFailure_ErrorMsg</p> <p>2. Message pack: pec_ExceptionMessage Message ID: cannotIdentifyExpiryTriggerGroupFailure_ErrorMsg</p> <p>The Details button provides access to more graph-specific information (for each entity of an entity group):</p> <p><the reason that applies></p> <p>Equipment: <equipment identifier> / <equipment short description></p> <p>Equipment type: <list of equipment types> (if available)</p> <p>Graph (ID): <graph display text> (<identifier>)</p> <p>Purpose: <purpose></p> <p>Current status (key): <display text> (<key>)</p> <p>Failed trigger (key): <display text> (<key>)</p> <p>The potential reasons for a failed status transition are:</p> <ul style="list-style-type: none"> ■ Cannot find a transition for the current status. ■ Cannot find a fulfillable transition condition for the current status. ■ There is more than one fulfillable transition condition available for the current status: <TR-ID; TR-ID; ...>. ■ Cannot evaluate the transition condition (<TR-ID>). ■ Cannot evaluate the transition action (<TR-Action ID>) from the current status to the new status (<display text (key)>).

Entity is part of a group (SR0300.3.6.10)

UI text	Comment
Cannot identify the <identifier> equipment entity, since it is a member or the parent of a group (<parent identifier>).	<p>Message pack: PhaseEqmEqIdentification<version></p> <p>Message ID: EqPartOfGroup_ErrorMsg</p>

Entity is not part of a group (SR0300.3.6.11)

UI text	Comment
Cannot identify the <identifier> equipment entity, since it is not a member of a group.	Message pack: PhaseEqmEqIdentification<version> Message ID: EqNotPartOfGroup_ErrorMsg

Group cycle error (SR0300.3.6.12)

UI text	Comment
Cannot add the <identifier> equipment entity to the group, since it already belongs to the group, either as member of a sub-group or as member of the main group.	Message pack: eqm.Validation Message ID: eqmGroupCycle_ErrorMsg

Not a child entity of bound group (SR0300.3.6.13)

UI text	Comment
Cannot identify the <identifier> equipment entity, since it is not a child entity of an already bound group or there is a configuration issue in the phase.	Message pack: PhaseEqmEqIdentification<version> Message ID: EqlsNotBoundChildOfGroup_ErrorMsg

Parent entity not bound (SR0300.3.6.14)

UI text	Comment
Cannot identify the child entity, since the parent of the group is not available.	Message pack: PhaseEqmEqIdentification<version> Message ID: EqParentDoesNotExistButIsRequired_ErrorMsg

Output Variables (SR0300.9+)

The following output variables are available to reference the phase's output.

Instance count (Framework capability)

- Data type: Long
- Usage: The output variable provides the count of the number of instances the phase has been processed, for example in a loop. The count is also increased when the phase is skipped from an operator's perspective, since the phase is still executed, but as a hidden phase.
The count variable of a phase that has not been executed provides 0 as output value.

Start time (Framework capability)

- Data type: Timestamp
- Usage: The output variable provides the start time of the phase.

Completion time (Framework capability)

- Data type: Timestamp
- Usage: The output variable provides the completion time of the phase.

Identifier (Framework capability)

- Data type: String
- Usage: The output variable provides the identifier of the phase.

Equipment object (SR0300.9.1)

- Data type: IMESS88Equipment
- Usage: The output variable provides the complete object of the identified equipment entity. This is the output to use in subsequent phases for accessing data of the equipment object, such as changing its status or writing a property.
In case an entity group has been identified, the main parent entity of the entity group is provided.

Equipment ID (SR0300.9.2)

- Data type: String
- Usage: The output variable provides the identifier of the identified equipment entity for displaying it as text.
In case an entity group has been identified, the main parent entity of the entity group is provided.

Equipment short description (SR0300.9.3)

- Data type: String
- Usage: The output variable provides the short description of the identified equipment entity for displaying it as text.
In case an entity group has been identified, the main parent entity of the entity group is provided.

Result (SR0200.9.4)

- Data type: String
- Values: SKIPPED, IDENTIFIED
- Usage: The output variable states if an equipment entity has been identified:
 - The value is SKIPPED if the phase has been completed without identifying an equipment entity.
 - The value is IDENTIFIED if an equipment entity has been identified and thus bound.

-
-
- FT PharmaSuite® 10.01.00 - Functional Requirement Specification Equipment Tracking Phases
-
-

Change Equipment Status Phase (SR0310+)

The **Change equipment status** phase allows an operator to set an FSM-related status of a previously identified equipment entity.

The phase neither supports equipment graphs that are maintained in Data Manager - Equipment nor equipment entity groups.

An example use case is:

- Need to set the equipment entity's status
Depending on the current process step, the status must be changed from **Clean** to **In use**.

The affected equipment entity, its FSM property, the performed action, and the old and new statuses are stored in the batch record, thereby becoming available for documentation purposes in the sub-report and batch report (page 52).

Anomalies that occur during processing are covered by the phase exception handling (page 58) (e.g. status change failed).

After completion the phase displays the affected equipment entity with the following data in the Execution Window:

- Entity identifier and short description
- Property identifier
- Performed action
- Old status
- New status

The Navigator displays the identifier of the affected equipment entity.

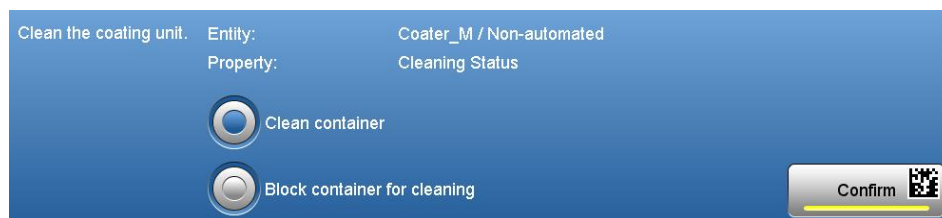


Figure 13: Change equipment status during execution

Layout

The phase provides individual layouts for its representation during execution (page 50), in the Navigator (page 51), and in the sub-report (page 52).

Representation during Execution (SR0310.1+)

The representation during execution depends on the phase mode.

Preview mode (SR0310.1.1)

1. <Instruction text>
(taken from **Instruction (SR0310.8.1)** process parameter (page 56))
2. Entity:
3. Property: <property identifier>
(taken from **Allowed change actions (SR0310.8.3)** process parameter (page 56))
4. List of allowed actions
(taken from **Allowed change actions (SR0310.8.3)** process parameter (page 56))
5. **Confirm** button (disabled).

Active mode (SR0310.1.2)

1. Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
2. <Instruction text>
(taken from **Instruction (SR0310.8.1)** process parameter (page 56))
3. Entity: <equipment entity identifier> / <equipment entity short description>
(taken from **Identified equipment entity (SR0310.8.2)** process parameter (page 56))
4. Property: <property identifier>
(taken from **Allowed change actions (SR0310.8.3)** process parameter (page 56))
5. List of available actions
(taken from **Allowed change actions (SR0310.8.3)** process parameter (page 56))
Based on the actual status of the identified equipment entity, the phase displays only the available actions from the list of allowed actions.
6. **Confirm** button.

Completed mode (SR0310.1.3)

1. Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
2. <Instruction text>
(taken from **Instruction (SR0310.8.1)** process parameter (page 56))
3. Entity: <equipment entity identifier> / <equipment entity short description>
(taken from **Identified equipment entity (SR0310.8.2)** process parameter (page 56))
4. Property: <property identifier>
(taken from **Allowed change actions (SR0310.8.3)** process parameter (page 56))
5. Performed action: <action>
6. New status: <status>
7. **Confirm** button (completed).

Representation in Navigator (SR0310.4+)

The Navigator provides the following details:

Phase column (Framework capability)

- <Phase name>
 - Example:
Set status of blender

Information column (SR0310.4.1)

- <Identifier of affected equipment entity>
 - Example: BlenderA12

Action column

- There are no actions available.

Representation in Sub-report (SR0310.5+)

The sub-report contains the following information:

Common sub-report elements (Framework capability)

- <Start time>
- <Completion time>
- <Unit procedure> / <operation> / <phase>
- <Work center> / <station> / <device> - <phase completion user>

Sub-report elements (SR0310.5.1)

- Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
- Instruction text
- Entity (identifier and short description)
- FSM property (identifier)
- Performed action
- Old status
- New status

Business Logic (SR0310.2+)

The phase implements the following business logic.

Determine available actions (SR0310.2.1)

- Function: Determine available actions of pre-defined FSM for affected equipment entity
- Trigger: Phase becomes active
- Postcondition: Available actions are displayed

Step	#	Description
Phase activation	10	Phase displays its user interface according to the Active mode (SR0310.1.2) layout (page 50).

Step	#	Description
Phase checks if the referenced equipment entity is available at runtime	20	If the check fails, phase creates the Equipment data mismatch (SR0310.3.2.1) system-triggered exception (page 58).
Phase checks if the property type fits the equipment entity	30	<ul style="list-style-type: none"> ■ If the check fails, phase creates the Equipment data mismatch (SR0310.3.2.1) system-triggered exception (page 58). ■ If the check passes successfully, phase continues with the next check.
Phase checks for available actions	40	<ul style="list-style-type: none"> ■ Based on the actual status of the identified equipment entity and the settings of the Allowed change actions (SR0310.8.3) process parameter (page 56), phase displays the list of all available actions. ■ Phase continues with the Perform status change (SR0310.2.2) function (page 53).

Perform status change (SR0310.2.2)

- Function: Perform a status change on the equipment entity
- Trigger: Operator confirms phase
- Postcondition: Status is set

Step	#	Description
Operator confirms phase without having selected an action	10	Phase displays the No action selected (SR0310.3.6.1) error message (page 60).
Operator selects action and confirms phase	20	<ul style="list-style-type: none"> ■ If previously executed checks still fail (e.g. system-triggered exception has been canceled), phase creates the Equipment data mismatch (SR0310.3.2.1) system-triggered exception (page 58). ■ If the action cannot be performed, phase displays the Change action failed (SR0310.3.6.2) error message (page 60). ■ If the action was successful, phase sets the new status of the equipment entity.

Process Parameters (SR0310.8+)

The following process parameters define the behavior of the phase.

INSTRUCTION TABLE-SPECIFIC PARAMETERS

Instruction table definition (Framework capability)

Attribute	Type	Comment
Table layout	Choice list	Defines the layout of the instruction table holding the instruction texts. Available settings: 1 column, 2 columns, 3 columns, 4 columns, 5 columns. Default setting: 1 column.
First column narrow	Boolean	Defines if the first column of the table shall be narrow.
Show all borders	Boolean	Defines if the borders of the table shall be visible.

Instruction table text (Framework capability)

Attribute	Type	Comment
Column 1	HTML text	Instruction text to be displayed in a column. Restriction: Maximum length is 2000 characters (including HTML tags).
Column 2	HTML text	
Column 3	HTML text	
Column 4	HTML text	
Column 5	HTML text	

INSTRUCTION LINK-SPECIFIC PARAMETERS

Instruction text with links (Framework capability)

Attribute	Type	Comment
Instruction text	HTML text	<p>Instruction text to be displayed.</p> <p>For any text enclosed in curly brackets you can define a hyperlink with the Instruction link definition process parameter (page 55).</p> <p>Example: Refer to {SOP1270} for guidance.</p> <p>Maximum length is 2000 characters (including HTML tags).</p>

Instruction link definition (Framework capability)

Attribute	Type	Comment
Link text	Text	<p>Text to be used as link.</p> <p>For any text enclosed in curly brackets within the instruction text you can define a link with the Link URL attribute.</p> <p>Including the brackets in the link text is optional.</p> <p>Maximum length is 80 characters.</p>
Link URL	Text	<p>URL of the file to be displayed. The link opens the external application assigned to the file type by the operating system.</p> <p>Maximum length is 256 characters.</p>

BASIC PARAMETERS

Instruction (SR0310.8.1)

Attribute	Type	Comment
Column 1	HTML text	Instruction text to be displayed. Restriction: Maximum length is 2000 characters (including HTML tags).
Column 2	HTML text	Not used.
Column 3	HTML text	

Identified equipment entity (SR0310.8.2)

Attribute	Type	Comment
Equipment object	Reference	Reference to the output of a preceding phase that provides an identified equipment entity.

PROPERTY TYPE PARAMETERS

Allowed change actions (SR0310.8.3)

Attribute	Type	Comment
Property and allowed change actions	Text (structured)	The property that needs to match the respective status property of the identified equipment entity on the shop floor and the allowed actions from the list of all supported actions of the selected property.

Change Action Selection Editor (SR0310.8.3.1)

The system provides a Change Action Selection editor for selecting change actions based on their property type.

CONFIGURATION OF SYSTEM-TRIGGERED EXCEPTIONS

Equipment data mismatch (SR0310.8.4)

Attribute	Type	Comment
Risk assessment	Choice list	Defines the risk level of the exception and thus controls the related signature privilege. Available settings: None , Low , Low (mandatory comment) , Medium , Medium (mandatory comment) , High , High (mandatory comment) . Default setting: High .
Exception text	Text	Defines the exception description used during exception handling and within the batch record. Maximum length is 250 characters.

See also **Equipment data mismatch (SR0310.3.2.1)** system-triggered exception (page 58).

CONFIGURATION OF USER-TRIGGERED EXCEPTIONS

Force status (SR0310.8.5)

Attribute	Type	Comment
Risk assessment	Choice list	Defines the risk level of the exception and thus controls the related signature privilege. Available settings: None , Low , Low (mandatory comment) , Medium , Medium (mandatory comment) , High , High (mandatory comment) . Default setting: High .
Exception text	Text	Defines the exception description used during exception handling and within the batch record. Maximum length is 250 characters.

See also **Force status (SR0310.3.1.1)** user-triggered exception (page 59).

Exceptions (SR0310.3+)

The phase supports user-defined, user-triggered (page 59), system-triggered (page 58), and post-completion exceptions (page 60) and their configuration by means of process parameters (page 54).

User-defined exceptions cannot be configured by process parameters since they are provided by the framework and independent of phases.

System-triggered Exceptions (SR0310.3.2+)

A system-triggered exception is represented in a message dialog along with an **Exception** button, in the Exception Window as the read-only description of the exception, and in the batch report.

The following system-triggered exceptions are available.

Equipment data mismatch (SR0310.3.2.1)

The exception text is extended by messages specific to the current situation.

Representation of the exception:

- <Exception text>
(taken from **Equipment data mismatch (SR0310.8.4)** process parameter (page 57))
- If the expected equipment is not available:
Cannot find the expected entity.
- If the property type check fails:
The <identifier> entity does not have a <property identifier> property or the property has no FlexibleStateModel.
- Example:
Equipment data configuration error.
The BlenderA12 entity does not have a CleaningBlender property.

Equipment data mismatch - Logic (SR0310.3.2.1.1)

- Trigger: Equipment entity or property type do not match
- Postcondition: Exception is recorded

Step	#	Description
Operator triggers exception	10	Phase records the exception.

User-triggered Exceptions (SR0310.3.1+)

A user-triggered exception is represented in the list of available user-triggered exceptions in the Exception Window, as the description of the exception, and in the batch report.

The following user-triggered exceptions are available.

Force status (SR0310.3.1.1)

The **Force status** exception allows an operator to force a status change or to keep the current status.

Representation during exception handling:

- Instruction:
Force status:
Display of possible target statuses and the **<current status> (keep current status)** option.
Confirm button.
- Exception text:
<Exception text>
(taken from **Force status (SR0310.8.5)** process parameter (page 57))
<Identifier> property of <identifier> entity was forced to <target status> status.
- Example:
Status change forced
CleaningBlender property of BlenderA12 entity was forced to Clean status.

Force status - Logic (SR0310.3.1.1.1)

- Trigger: Exception is selected
- Postcondition: Status of equipment entity is set

Step	#	Description
Operator selects status	10	Phase displays all available target statuses of the equipment entity, based on the list of allowed actions (see Allowed change actions (SR0310.8.3) process parameter (page 56). The selected status is marked.
Operator confirms exception	20	Phase shows exception description to be signed according to Force status (SR0310.8.5) process parameter (page 57).
Operator signs exception	30	Phase sets status of equipment entity to the selected one and records the exception.

Post-completion Exceptions

There are no post-completion exceptions available.

Information Messages

There are no information messages available.

Questions

There are no questions available.

Decisions

There are no decisions available.

Error Messages (SR0310.3.6+)

Error messages are represented in an error message dialog containing a message type-specific icon, the error message, and an **OK** button.

The following error messages are available to inform the operator about error conditions.

No action selected (SR0310.3.6.1)

UI text	Comment
You have to select an action before you can confirm.	Message pack: PhaseEqmEqChangeStatus<version> Message ID: HintUserSelectionRequired_ErrorMsg

Change action failed (SR0310.3.6.2)

UI text	Comment
<action> action failed for the <identifier> property of the <identifier> equipment. <details of failure>	Message pack: PhaseEqmEqChangeStatus<version> Message ID: TransitionFailed_ErrorMsg

Output Variables (SR0310.9+)

The following output variables are available to reference the phase's output.

Instance count (Framework capability)

- Data type: Long
- Usage: The output variable provides the count of the number of instances the phase has been processed, for example in a loop. The count is also increased when the phase is skipped from an operator's perspective, since the phase is still executed, but as a hidden phase.
The count variable of a phase that has not been executed provides 0 as output value.

Start time (Framework capability)

- Data type: Timestamp
- Usage: The output variable provides the start time of the phase.

Completion time (Framework capability)

- Data type: Timestamp
- Usage: The output variable provides the completion time of the phase.

Identifier (Framework capability)

- Data type: String
- Usage: The output variable provides the identifier of the phase.

Status change result (SR0310.9.1)

- Data type: String
- Values: PLANNED, FORCED, SKIPPED
- Usage: The output variable states the conditions under which the status change has been performed.
 - The value is `PLANNED` if the status change has been performed as defined in the phase.
 - The value is `FORCED` if the status change has been forced by the operator.
 - The value is `SKIPPED` if no status change has been performed at all (**Keep current status** option).

New status (SR0310.9.2)

- Data type: String
- Usage: The output variable provides the new status of the equipment entity.

Trigger Graph Transition Phase (SR0311+)

The **Trigger graph transition** phase allows an operator to change an equipment graph-related status of a previously identified equipment entity or equipment entity group (parent entity and its child entities) by executing a graph trigger.

An example use case is:

- Need to trigger a graph transition on the equipment entity
Depending on entity properties like counter, dates, and the current status, a trigger causes a status transition from **In use** to **Reusable** or **Uncleaned**.

The affected equipment entities, their equipment graphs, the performed trigger, and the old and new statuses are stored in the batch record, thereby becoming available for documentation purposes in the sub-report and batch report (page 67).

Anomalies that occur during processing are covered by the phase exception handling (page 77) (e.g. no transition exists for the current status).

After completion the phase displays the identified equipment entity with the following data in the Execution Window:

- Entity identifier and short description
(of a single entity or a main parent entity of a group)
- Equipment graph
- Performed trigger
- Old status
- New status
- List of child entities (if applicable)

The Navigator displays the identifier of the identified equipment entity and the number of child entities that hold an equipment graph of the configured purpose (if applicable).

Change the cleaning status of the room according to the performed cleaning procedure.

Entity: R-001 (D) / Weighing booth

Graph: Room Cleaning (RS) [General Cleaning Required]

☒ Cleaning (general)
☐ Cleaning (major)
☐ Cleaning (minor)


Confirm 

Figure 14: Trigger graph transition during execution

Set the cleaning status for the sterilized components.

Entity: SterilizationTray / Feeder for Automated Tablet Press

Graph: Unit Cleaning Graph [To be cleaned]

List of child entities of SterilizationTray / Feeder for Automated Tablet Press

Identifier	Short description	Statuses
TabletDischargeChute-AS	Discharge chute for Automated Tablet Press	- Unit Cleaning Graph / To be cleaned
TabletPressFeeder-AS	Feeder for Automated Tablet Press	- Unit Cleaning Graph / To be cleaned
TabletPressFeederSeal-AS	Feeder Seal for Automated Tablet Press	- Unit Cleaning Graph / To be cleaned

☒ Cleaned


Confirm 

Figure 15: Trigger graph transition of group during execution

Layout

The phase provides individual layouts for its representation during execution (page 64), in the Navigator (page 67), and in the sub-report (page 67).

Representation during Execution (SR0311.1+)

The representation during execution depends on the phase mode.

Preview mode (SR0311.1.1)

1. <Instruction text>
(taken from **Instruction (SR0311.8.1)** process parameter (page 74))
2. Entity:
3. Graph:
4. List of child entities of the group
 - Only if the **Show children (SR0311.8.7)** process parameter (page 75) is set to **Yes**.
5. List of allowed triggers
(taken from **Allowed triggers (SR3011.8.4)** process parameter (page 76))
The phase displays the complete list of allowed triggers with their key.
6. **Confirm** button (disabled).

Active mode (SR0311.1.2)

1. Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
2. <Instruction text>
(taken from **Instruction (SR0311.8.1)** process parameter (page 74))
3. Entity: <equipment entity identifier> / <equipment entity short description>
(taken from **Identified equipment entity (SR0311.8.2)** process parameter (page 75))
4. Graph: <equipment graph display text> [<equipment graph current status>]
(equipment graph is determined by the purpose taken from **Allowed triggers (SR0311.8.4)** process parameter (page 76), current status has to be stored at activation for later use as old status)
 - In case of an entity group, this is the graph of the main parent entity. If it does not exist, phase displays "N/A".
5. List of child entities
 - Only in case of an entity group and if the **Show children (SR0311.8.7)** process parameter (page 75) is set to **Yes**.
 - Only if the list is not empty: includes only entities that hold an equipment graph of the configured purpose.
 - Details of child entity.

<Child entity identifier>	<Child entity short description>	<equipment graph display text> [<equipment graph old status>]
---------------------------	----------------------------------	---

6. List of allowed triggers
(taken from **Allowed triggers (SR3011.8.4)** process parameter (page 76))
The phase displays the complete list of allowed triggers with their display text.
 - If the display text is not unique, phase displays the key of the trigger.
 - If the trigger is not available at any entity, phase displays "<trigger key> (N/A)".
 - If the trigger is not available at all entities to which the graph is assigned, phase displays "<trigger key/display text> (incomplete)".
7. **Confirm** button.

Completed mode (SR0311.1.3)

1. Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
2. <Instruction text>
(taken from **Instruction (SR0311.8.1)** process parameter (page 74))
3. Entity: <equipment entity identifier> / <equipment entity short description>
(taken from **Identified equipment entity (SR0311.8.2)** process parameter (page 75))
4. Graph: <equipment graph display text> [<equipment graph current status>]
(equipment graph is determined by the purpose taken from **Allowed triggers (SR0311.8.4)** process parameter (page 76))
 - In case of an entity group, this is the graph of the main parent entity. If it does not exist, phase displays "N/A".
5. Performed trigger: <trigger display text>
6. Old status: <equipment graph old status>
(old status is taken from value stored at **Active mode (SR0311.1.2)** layout (page 65))
 - In case of an entity group, this is the old status of the main parent entity. If it does not exist, phase displays "N/A".
7. New status: <equipment graph current status>
 - In case of an entity group, this is the new status of the main parent entity. If it does not exist, phase displays "N/A".
8. List of child entities
 - Only in case of an entity group and if the **Show children (SR0311.8.7)** process parameter (page 75) is set to **Yes**.
 - Only if the list is not empty: includes only entities that hold an equipment graph of the configured purpose.
 - Details of child entity.

<Child entity identifier>	<Child entity short description>	<equipment graph display text> [<equipment graph new status>]
---------------------------	----------------------------------	---

9. **Confirm** button (completed).

Representation in Navigator (SR0311.4+)

The Navigator provides the following details:

Phase column (Framework capability)

- <Phase name>
- Example:
Set container to cleaned

Information column (SR0311.4.1)

- <Identifier of affected equipment entity>
- Example: Gran0033
- Only in case of an entity group
 - <Identifier of affected equipment entity>
<Number of child entities that hold an equipment graph of the configured purpose> child entities
 - Example:
Gran0033
5 child entities

Action column

- There are no actions available.

Representation in Sub-report (SR0311.5+)

The sub-report contains the following information:

Common sub-report elements (Framework capability)

- <Start time>
- <Completion time>
- <Unit procedure> / <operation> / <phase>
- <Work center> / <station> / <device> - <phase completion user>

Sub-report elements (SR0311.5.1)

- Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
- Instruction text
- Entity: <identifier> / <short description>
- Equipment graph (ID): <display text> (key)
 - In case of an entity group, this is the graph of the main parent entity. If it does not exist, phase displays "N/A".
- Performed trigger (key): <display text> (key)
- Old status (key): <display text> (key)
 - In case of an entity group, this is the old status of the main parent entity. If it does not exist, phase displays "N/A".
- New status (key): <display text> (key)
 - In case of an entity group, this is the new status of the main parent entity. If it does not exist, phase displays "N/A".
- Child equipment entities (identifier, short description, graph display text [new status])
 - Only in case of an entity group.
 - Includes only entities that hold an equipment graph of the configured purpose.
- <Phase completion signature>
(only if a phase completion signature is assigned to the phase)

Business Logic (SR0311.2+)

The phase implements the following business logic.

Phase Mode

Business logic related to phase modes.

Manual completion mode (SR0311.2.1)

- Function: **Manual completion** mode of phase
- Type: Phase mode
- Trigger: Phase becomes active
- Postcondition: Phase is active

Step	#	Description
Phase activation	10	Phase displays its user interface according to the Active mode (SR0311.1.2) layout (page 65)
Operator interaction	20	Operator selects a trigger of the equipment graph (see Determine available triggers (SR0311.2.3) function (page 70)).
Phase completion	30	See Trigger graph transition (SR0311.2.4) function (page 71).

Automatic completion mode (SR0311.2.2)

- Function: **Automatic completion** mode of phase
- Type: Phase mode
- Trigger: Phase becomes active
- Postcondition: Phase is completed

Step	#	Description
Phase activation	10	Phase displays its user interface according to the Active mode (SR0311.1.2) layout (page 65).
Phase determines available trigger	20	See Determine available triggers (SR0311.2.3) function (page 70) <ul style="list-style-type: none"> ■ If more than one trigger is available, phase must be completed manually. See Manual completion (SR0311.2.1) mode (page 68). ■ If a phase completion signature is assigned, the phase must be completed manually. See Manual completion (SR0311.2.1) mode (page 68).
Phase performs trigger		See Trigger graph transition (SR0311.2.4) function (page 71). <ul style="list-style-type: none"> ■ If no error has occurred, phase is completed automatically. ■ If an error has occurred, phase must be completed manually. See Manual completion (SR0311.2.1) mode (page 68).

Main Path

Business logic related to the main path:

Determine available triggers (SR0311.2.3)

- Function: Determine available triggers of the pre-defined purpose for affected equipment entities
- Type: Main path
- Trigger: Phase becomes active
- Postcondition: Available triggers are displayed

Step	#	Description
Phase activation	10	<p>Phase displays its user interface according to the Active mode (SR0311.1.2) layout (page 65) and performs checks based on the settings of the Identified equipment entity (SR0311.8.3) process parameter (page 75) and the Allowed triggers (SR0311.8.4) process parameter (page 76).</p> <p>TIP If a check fails, phase displays an appropriate error message that has to be confirmed with OK. The system-triggered exception related to the failed check is created upon phase completion.</p>
Phase checks if the referenced equipment entity is available at runtime	20	<ul style="list-style-type: none"> ■ If the Identified equipment entity (SR0311.8.3) process parameter (page 75) is null, phase displays the Entity not available (SR0311.3.6.2) error message (page 81). ■ If the check passes successfully, phase continues with the next check.
Phase checks entity of group	25	<ul style="list-style-type: none"> ■ In case of an entity group and if the entity is not the main parent entity of the group, phase displays the Entity not main parent (SR0311.3.6.6) error message (page 81). ■ If the check passes successfully, phase continues with the next check.
Phase checks if the purpose fits the equipment entity	30	<p>The following check either applies to a single entity or to a main parent entity and to all of its child entities, respectively:</p> <ul style="list-style-type: none"> ■ If none of the graphs assigned to the equipment entities matches the pre-defined purpose according to the Allowed triggers (SR0311.8.4) process parameter (page 76), phase displays the Graph with purpose not assigned to entity (SR0311.3.6.3) error message (page 81). ■ If the check passes successfully, phase continues with the next check.

Step	#	Description
Phase checks for available triggers	40	<p>The following logic and check either applies to a single entity or to a main parent entity and to all of its child entities, respectively:</p> <ul style="list-style-type: none"> ■ Based on settings of the Allowed triggers (SR0311.8.4) process parameter (page 76), phase displays the list of all configured triggers. ■ If triggers are not available at any of the determined graphs, phase displays the key of the missing trigger and appends "(N/A)" to the key. ■ If triggers are not available at all of the determined graphs, phase displays the key/display text of the trigger and appends "(incomplete)". ■ If triggers are available, but their display text is not unique (within a graph or between graphs), phase displays the key of the trigger instead of any display text. ■ If only one trigger is available, phase automatically selects the trigger. ■ If no trigger is available, phase displays the No trigger is available (SR0311.3.6.4) error message (page 82).

Trigger graph transition (SR0311.2.4)

- Function: Trigger graph transition on the equipment entities
- Type: Main path
- Trigger: Operator confirms phase
- Postcondition: Graph status transition and graph transition actions are done and/or phase is completed

Step	#	Description
Operator confirms phase without having selected a trigger	10	Phase displays the No trigger selected (SR0311.3.6.1) error message (page 81).

Step	#	Description
Operator selects a trigger and confirms the phase	20	<p>The following logic either applies to a single entity or to a main parent entity and to all of its child entities, respectively:</p> <ul style="list-style-type: none"> ■ If a phase completion signature is assigned, the signature is requested. ■ If previously executed checks of the Determine available triggers (SR0311.2.3) function (page 70) still fail, phase creates the Equipment data mismatch (SR0311.3.2.1) system-triggered exception (page 78). ■ Phase triggers the status transitions at all entities that hold an equipment graph of the configured purpose. ■ If a status transition at any entity that holds an equipment graph of the configured purpose cannot be performed, phase creates the Status transition failed (SR0311.3.2.2) system-triggered exception (page 79). ■ If the status transitions were successful for all entities that hold an equipment graph of the configured purpose or the Status transition failed (SR0311.3.2.2) system-triggered exception (page 79) was confirmed, phase reads the new status of each equipment entity. <p>TIP A successful status transition depends on the transition configuration within the graph master data, including condition and action definitions. Properties of the equipment entity can be set along with the status transition, as defined at the transition actions.</p>
A system-triggered exception has been canceled	30	<p>The following logic either applies to a single entity or to a main parent entity and to all of its child entities, respectively:</p> <ul style="list-style-type: none"> ■ Phase cannot be completed without confirmation of created system-triggered exceptions. ■ If the Status transition failed (SR0311.3.2.2) system-triggered exception (page 79) is canceled: Phase is still active, no status transition has been performed for any entity that holds an equipment graph of the configured purpose, and the operator can continue with a different trigger (if available).

Process Parameters (SR0311.8+)

The following process parameters define the behavior of the phase.

INSTRUCTION TABLE-SPECIFIC PARAMETERS

Instruction table definition (Framework capability)

Attribute	Type	Comment
Table layout	Choice list	Defines the layout of the instruction table holding the instruction texts. Available settings: 1 column, 2 columns, 3 columns, 4 columns, 5 columns. Default setting: 1 column.
First column narrow	Boolean	Defines if the first column of the table shall be narrow.
Show all borders	Boolean	Defines if the borders of the table shall be visible.

Instruction table text (Framework capability)

Attribute	Type	Comment
Column 1	HTML text	Instruction text to be displayed in a column. Restriction: Maximum length is 2000 characters (including HTML tags).
Column 2	HTML text	
Column 3	HTML text	
Column 4	HTML text	
Column 5	HTML text	

INSTRUCTION LINK-SPECIFIC PARAMETERS

Instruction text with links (Framework capability)

Attribute	Type	Comment
Instruction text	HTML text	<p>Instruction text to be displayed.</p> <p>For any text enclosed in curly brackets you can define a hyperlink with the Instruction link definition process parameter (page 74).</p> <p>Example: Refer to {SOP1270} for guidance.</p> <p>Maximum length is 2000 characters (including HTML tags).</p>

Instruction link definition (Framework capability)

Attribute	Type	Comment
Link text	Text	<p>Text to be used as link.</p> <p>For any text enclosed in curly brackets within the instruction text you can define a link with the Link URL attribute.</p> <p>Including the brackets in the link text is optional.</p> <p>Maximum length is 80 characters.</p>
Link URL	Text	<p>URL of the file to be displayed. The link opens the external application assigned to the file type by the operating system.</p> <p>Maximum length is 256 characters.</p>

BASIC PARAMETERS

Instruction (SR0311.8.1)

Attribute	Type	Comment
Text	HTML text	<p>Instruction text to be displayed.</p> <p>Restriction: Maximum length is 2000 characters (including HTML tags).</p>

Mode (SR0311.8.2)

Attribute	Type	Comment
Mode	Choice list	Defines the processing mode. Manual completion (default): Operator confirms phase manually. Automatic completion: Phase is completed automatically if only one trigger is available.

Identified equipment entity (SR0311.8.3)

Attribute	Type	Comment
Equipment object	Reference	Reference to the output of a preceding phase that provides an identified equipment entity. In case of an entity group, the main parent entity of the group must be referenced.

Show children (SR0311.8.7)

Attribute	Type	Comment
Enabled	Boolean	In case of an entity group: controls if the list of child entities is displayed during execution. If so, only entities that hold an equipment graph of the configured purpose are displayed. Default setting: Yes

EQUIPMENT GRAPH PARAMETERS

Allowed triggers (SR0311.8.4)

Attribute	Type	Comment
Purpose and allowed triggers	Text (structured)	<p>Defines the equipment graph (based on its purpose) and the allowed triggers. The equipment graph needs to match an equipment graph of the identified equipment entity or entity group on the shop floor.</p> <p>All equipment graphs of the identified entity or entity group with this purpose are affected during execution by the selected transition trigger.</p>

Trigger Selection editor (Framework capability)

The system provides a Trigger Selection editor for selecting triggers based on their equipment graph. The graph purpose determines which triggers of which equipment graphs are available. System triggers and triggers of graphs in the **Archived** status are not available.

CONFIGURATION OF SYSTEM-TRIGGERED EXCEPTIONS

Equipment data mismatch (SR0311.8.5)

Attribute	Type	Comment
Risk assessment	Choice list	<p>Defines the risk level of the exception and thus controls the related signature privilege.</p> <p>Available settings: None, Low, Low (mandatory comment), Medium, Medium (mandatory comment), High, High (mandatory comment).</p> <p>Default setting: High.</p>
Exception text	Text	<p>Defines the exception description used during exception handling and within the batch record.</p> <p>Maximum length is 250 characters.</p>

See also **Equipment data mismatch (SR0311.3.2.1)** system-triggered exception (page 78).

Status transition failed (SR0311.8.6)

Attribute	Type	Comment
Risk assessment	Choice list	Defines the risk level of the exception and thus controls the related signature privilege. Available settings: None , Low , Low (mandatory comment) , Medium , Medium (mandatory comment) , High , High (mandatory comment) . Default setting: High .
Exception text	Text	Defines the exception description used during exception handling and within the batch record. Maximum length is 250 characters.

See also **Status transition failed (SR0311.3.2.2)** system-triggered exception (page 79).

Exceptions (SR0311.3+)

The phase supports user-defined, user-triggered (page 80), system-triggered (page 77), and post-completion exceptions (page 80) and their configuration by means of process parameters (page 73).

User-defined exceptions cannot be configured by process parameters since they are provided by the framework and independent of phases.

System-triggered Exceptions (SR0311.3.2+)

A system-triggered exception is represented in a message dialog along with an **Exception** button, in the Exception Window as the read-only description of the exception, and in the batch report.

The following system-triggered exceptions are available.

Equipment data mismatch (SR0311.3.2.1)

The exception text is extended by messages specific to the current situation.

Representation of the exception:

Exception dialog

- <Exception text>
(taken from **Equipment data mismatch (SR0311.8.5)** process parameter (page 76))
 - If the expected equipment is not available:
Cannot find the expected entity.
 - In case of a single equipment entity:
If an equipment graph of the purpose is not available at any entity:
The <identifier> entity does not hold an equipment graph of the <purpose> purpose.
 - In case of an equipment group:
If an equipment graph of the purpose is not available at all entities:
None of the entities of the <identifier> entity group holds an equipment graph of the <purpose> purpose.
 - If no trigger is configured:
No purpose or trigger available.
 - Example:
Equipment data configuration error.
The IBC0033 entity does not hold an equipment graph of the Container Cleaning (RS) purpose.

Equipment data mismatch - Logic (SR0311.3.2.1.1)

- Trigger: Equipment entity or equipment graph do not match or no trigger was configured.
- Postcondition: Exception is recorded and phase is completed

Step	#	Description
Operator accepts exceptional situation	1-10	Phase shows exception description to be signed.
Operator signs exception	1-20	<ul style="list-style-type: none"> ■ Phase records the exception. ■ Phase is completed automatically.

Status transition failed (SR0311.3.2.2)

The **Status transition failed** exception is displayed automatically if a certain status transition could not be performed based on the given graph purpose and trigger.

The potential reasons for a failed status transition are:

- Source status does not match.
- Condition cannot be fulfilled or is not unique (in case of multiple transition definitions per trigger).
- Error during condition evaluation.
- Error during action evaluation.

The exception either applies to a single entity or to a main parent entity and to all of its child entities, respectively.

Representation of the exception:

Exception dialog

- <Exception text>
(taken from **Status transition failed (SR0311.8.6)** process parameter (page 77))
 - In case of a single equipment entity:
<the reason that applies>
 - In case of an entity group:
<the reasons that apply>
 - List of potential reasons:
 - Cannot find the selected trigger.
 - Cannot find a transition for the current status.
 - Cannot find a fulfillable transition condition for the current status.
 - There is more than one fulfillable transition condition available for the current status: <TR-ID; TR-ID; ...>.
 - Cannot evaluate the transition condition (<TR-ID>).
 - Cannot evaluate the transition action (<TR-Action ID>) from the current status to the new status (<display text (key)>).

Exception Window

- <Exception text>
(taken from **Status transition failed (SR0311.8.6)** process parameter (page 77))
(Information is provided for each entity for which a transition fails)
<reason>
Equipment: <equipment identifier> / <equipment short description>
Equipment type: <list of equipment types> (if available)

Graph (ID): <graph display text> (<identifier>)

Purpose: <purpose>

Current status (key): <display text> (<key>)

Failed trigger (key): <display text> (<key>)

■ Example:

Status transition failed.

Cannot find a transition for the current status.

Equipment: IBC0033

Equipment type: Container (RS)

Graph (ID): IBC Cleaning (IBCCleaning01)

Purpose: Container Cleaning (RS)

Current status (key): Blocked (BLOCKED)

Failed trigger (key): In use (IN_USE)

Status transition failed - Logic (SR0311.3.2.2.1)

- Trigger: The trigger could not be performed on the entity with the equipment graph and the given purpose.
- Postcondition: Exception is recorded and phase is completed

Step	#	Description
Operator accepts exceptional situation	1-10	Phase shows exception description to be signed.
Operator signs exception	1-20	<ul style="list-style-type: none"> ■ Phase records the exception. ■ In case of an entity group and if any transition fails, none of the transitions are performed at all. ■ Phase is completed automatically.

User-triggered Exceptions

There are no user-triggered exceptions available.

Post-completion Exceptions

There are no post-completion exceptions available.

Information Messages

There are no information messages available.

Questions

There are no questions available.

Decisions

There are no decisions available.

Error Messages (SR0311.3.6+)

Error messages are represented in an error message dialog containing a message type-specific icon, the error message, and an **OK** button.

The following error messages are available to inform the operator about error conditions.

No trigger selected (SR0311.3.6.1)

UI text	Comment
You have to select a trigger before you can confirm.	Message pack: PhaseEqmEqTriggerTrans<version> Message ID: HintUserSelectionRequired_ErrorMsg

Entity not available (SR0311.3.6.2)

UI text	Comment
Cannot find the expected entity.	Message pack: PhaseEqmEqTriggerTrans<version> Message ID: IdentifiedEquipmentNull_ErrorMsg

Entity not main parent (SR0311.3.6.6)

UI text	Comment
The <identifier> entity is a member of a group, but not its main parent.	Message pack: PhaseEqmEqTriggerTrans<version> Message ID: "IdentifiedEquipmentIsASubgroup_Error"

Graph with purpose not assigned to entity (SR0311.3.6.3)

UI text	Comment
The <identifier> entity does not hold an equipment graph of the <purpose> purpose.	In case of a single equipment entity: Message pack: PhaseEqmEqTriggerTrans<version> Message ID: NoStatusGraphAssignedForPurpose_ErrorMsg

UI text	Comment
None of the entities of the <identifier> entity group holds an equipment graph of the <purpose> purpose.	In case of an entity group: Message pack: PhaseEqmEqTriggerTrans<version> Message ID: NoStatusGraphAssignedForPurposeOnGroup_ErrorMsg

No trigger available (SR0311.3.6.4)

UI text	Comment
No purpose or trigger available.	Message pack: PhaseEqmEqTriggerTrans<version> Message ID: NoPurposeOrTriggerConfigured_ErrorMsg

Output Variables (SR0311.9+)

The following output variables are available to reference the phase's output.

Instance count (Framework capability)

- Data type: Long
- Usage: The output variable provides the count of the number of instances the phase has been processed, for example in a loop. The count is also increased when the phase is skipped from an operator's perspective, since the phase is still executed, but as a hidden phase.
The count variable of a phase that has not been executed provides 0 as output value.

Start time (Framework capability)

- Data type: Timestamp
- Usage: The output variable provides the start time of the phase.

Completion time (Framework capability)

- Data type: Timestamp
- Usage: The output variable provides the completion time of the phase.

Identifier (Framework capability)

- Data type: String
- Usage: The output variable provides the identifier of the phase.

Trigger execution successful (SR0311.9.1)

- Data type: Boolean
- Values: `true`, `false`
- Usage: The output variable states if the result of the equipment graph trigger execution was successful.
 - The value is `true` if the graph transition with the selected trigger has been executed successfully.
 - The value is `false` if the phase is completed with an exception.

Graph (SR0311.9.2)

- Data type: String
- Usage: The output variable provides the identifier of the used equipment graph. It applies to a single entity or to a main parent entity; it does not represent the graph of a child entity.

Selected trigger (SR0311.9.3)

- Data type: String
- Usage: The output variable provides the trigger (key) of the used equipment graph.

Old status (SR0311.9.4)

- Data type: String
- Usage: The output variable provides the old status (key) of the equipment entity. It applies to a single entity or to a main parent entity; it does not represent the status of a child entity.

New status (SR0311.9.5)

- Data type: String
- Usage: The output variable provides the new status (key) of the equipment entity. It applies to a single entity or to a main parent entity. It does not represent the status of a child entity.

-
-
- FT PharmaSuite® 10.01.00 - Functional Requirement Specification Equipment Tracking Phases
-
-

Separate Equipment Phase (SR0312+)

The **Separate equipment** phase allows an operator to separate an equipment entity group. Either the entire group is separated into single entities or a single entity or a sub-group is separated from a main group.

Based on the phase configuration, a separated equipment entity can keep its binding status and a separated sub-group can keep its grouping by retaining its relations to its own child entities.

An example use case is:

- Need to separate a coater before cleaning
A coater has to be separated into single equipment entities to run specific cleaning processes for different parts.

The affected equipment entities are stored in the batch record, thereby becoming available for documentation purposes in the sub-report and batch report (page 89).

Anomalies that occur during processing are covered by the phase exception handling (page 97) (e.g. skip separation).

After completion the phase displays the affected equipment entities with their identifiers and short descriptions in the Execution Window.

The Navigator displays the identifier of the parent equipment entity and the equipment entity to be separated (if applicable).

Remove the feeder seal from the tablet press.

Parent entity of group: TabletPress_AM / Automated Tablet Press

Entity to be separated: TabletPressFeederSeal / Feeder Seal for Automated Tablet Press

Keep sub-group: No

Keep binding: No

Entities to be separated

Identifier	Short description
TabletPressFeederSeal	Feeder Seal for Automated Tablet Press


Confirm 

Figure 16: Separate equipment (single entity) during execution

Remove the feeder group from the tablet press.

Parent entity of group: TabletPress_AM / Automated Tablet Press

Entity to be separated: TabletPressFeeder / Feeder for Automated Tablet Press

Keep sub-group: Yes

Keep binding: No

Entities to be separated

Identifier	Short description
TabletPressFeeder	Feeder for Automated Tablet Press
TabletPressFeederSeal	Feeder Seal for Automated Tablet Press

Confirm 

Figure 17: Separate equipment (entity group) during execution

Disassemble the tablet press.

Parent entity of group: TabletPress_AM / Automated Tablet Press

Keep sub-group: No

Keep binding: No

Entities to be separated

Identifier	Short description
TabletDischargeChute	Discharge chute for Automated Tablet Press
TabletPressFeeder	Feeder for Automated Tablet Press
TabletPressFeederSeal	Feeder Seal for Automated Tablet Press

Confirm 

Figure 18: Separate equipment (all entities) during execution

Layout

The phase provides individual layouts for its representation during execution, (page 86) in the Navigator, (page 88) and in the sub-report (page 89).

Representation during Execution (SR0312.1+)

The representation during execution depends on the phase mode.

Preview mode (SR0312.1.1)

1. <Instruction text>
(taken from **Instruction (SR0312.8.1)** process parameter (page 95))
2. Parent entity of group:
3. Keep sub-group: <Yes/No>
(taken from **Keep defined sub-group (SR0312.8.9)** process parameter (page 96))
4. Keep binding: <Yes/No>
(taken from **Keep binding (SR0312.8.10)** process parameter (page 96))

5. List of child entities to be separated from the group:
 - Only if the **Show children (SR0320.8.4)** process parameter (page 96) is set to **Yes**.
6. **Confirm** button (disabled).

Active mode (SR0312.1.2)

1. Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
2. <Instruction text>
(taken from **Instruction (SR0312.8.1)** process parameter (page 95))
3. Parent entity of group: <parent entity identifier> / <parent entity short description>
(taken from **Parent entity of group (SR0312.8.2)** process parameter (page 95))
4. Entity to be separated: <equipment entity identifier> / <equipment entity short description>
(taken from **Child entity to be separated (SR0312.8.5)** process parameter (page 95))
 - Only if the **Child entity to be separated (SR0312.8.5)** process parameter (page 95) is not null.
5. Keep sub-group: <Yes/No>
(taken from **Keep defined sub-group (SR0312.8.9)** process parameter (page 96))
6. Keep binding: <Yes/No>
(taken from **Keep binding (SR0312.8.10)** process parameter (page 96))
7. List of child entities to be separated from the group:
 - Only if the **Show children (SR0320.8.4)** process parameter (page 96) is set to **Yes**.
 - Details of child entity.

<Child entity identifier>	<Child entity short description>
---------------------------	----------------------------------

8. **Confirm** button.

Completed mode (SR0312.1.3)

1. Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
2. <Instruction text>
(taken from **Instruction (SR0312.8.1)** process parameter (page 95))
3. Parent entity of group: <parent entity identifier> / <parent entity short description>
(taken from **Parent entity of group (SR0312.8.2)** process parameter (page 95))
4. Separated entity: <equipment entity identifier> / <equipment entity short description>
(taken from **Child entity to be separated (SR0312.8.5)** process parameter (page 95))
 - Only if the **Child entity to be separated (SR0312.8.5)** process parameter (page 95) is not null.
5. Keep sub-group: <Yes/No>
(taken from **Keep defined sub-group (SR0312.8.9)** process parameter (page 96))
6. Keep binding: <Yes/No>
(taken from **Keep binding (SR0312.8.10)** process parameter (page 96))
7. List of child entities that were separated from the group:
 - Only if the **Show children (SR0320.8.4)** process parameter (page 96) is set to **Yes**.
 - Details of child entity.

<Child entity identifier>	<Child entity short description>
---------------------------	----------------------------------

8. **Confirm** button (completed).

Representation in Navigator (SR0312.4+)

The Navigator provides the following details:

Phase column (Framework capability)

- <Phase name>
 - Example:
Separate coater

Information column (SR0312.4.1)

- <Identifier of parent equipment entity>
 - Example: CompactorC33
- Only if the **Child entity to be separated (SR0312.8.5)** process parameter (page 95) is not null.
 - <Identifier of parent equipment entity>
<Identifier of child equipment entity>
 - Example:
CompactorC33
CompactorCrusher01

Action column

- There are no actions available.

Representation in Sub-report (SR0312.5+)

The sub-report contains the following information:

Common sub-report elements (Framework capability)

- <Start time>
- <Completion time>
- <Unit procedure> / <operation> / <phase>
- <Work center> / <station> / <device> - <phase completion user>

Sub-report elements (SR0312.5.1)

- Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
- Instruction text
- Group parent entity: <parent entity identifier> / <parent entity short description>
- Separated entity: <equipment entity identifier> / <equipment entity short description>
 - Only if the **Child entity to be separated (SR0312.8.5)** process parameter (page 95) is not null.
- Defined sub-group kept: <Yes/No>

- Binding kept: <Yes/No>
- List of separated child entities (identifier and short description) that were separated from the group

Business Logic (SR0312.2+)

The phase implements the following business logic.

Separate a group (SR0312.2.1)

- Function: Separate equipment entities from a group
- Trigger: Phase becomes active
- Postcondition: Equipment entities are no longer grouped

Step	#	Description
Phase activation	10	Phase displays its user interface according to the Active mode (SR0312.1.2) layout (page 87).
Phase checks availability of parent entity definition	20	If the Parent entity of group (SR0312.8.2) process parameter (page 95) is null, phase displays the Parent entity of group not defined (SR0312.3.6.3) error message (page 99).
Phase checks that parent entity is main parent entity	30	If the entity defined with the Parent entity of group (SR0312.8.2) process parameter (page 95) is not a main parent entity: <ul style="list-style-type: none"> ■ Phase displays the Not main parent (SR0312.3.6.2) error message (page 99).
Phase checks parent-child relationship of referenced equipment entities	40	If the entity defined with the Child entity to be separated (SR0312.8.5) process parameter (page 95) is not member of the group defined with the Parent entity of group (SR0312.8.2) process parameter (page 95): <ul style="list-style-type: none"> ■ Phase displays the Not part of group (SR0312.3.6.1) error message (page 99). <p>(It is not necessary that the child entity to be separated is a direct child of the parent entity of group.)</p>
Phase checks the completion mode	50	If all checks have passed successfully, phase continues as follows: <ul style="list-style-type: none"> ■ Mode (SR0312.8.3) process parameter (page 96) is set to Manual completion: Phase continues with the next step upon phase confirmation by the operator. ■ Mode (SR0312.8.3) process parameter (page 96) is set to Automatic completion: Phase automatically continues with the next step.

Step	#	Description
Phase separates equipment entities completely	70.1	<p>If the Child entity to be separated (SR0312.8.5) process parameter (page 95) is null and the Keep sub-group (SR0312.8.9) process parameter (page 96) is set to No:</p> <ul style="list-style-type: none"> ■ Phase completely separates the group defined with the Parent entity of group (SR0312.8.2) process parameter (page 95), including all of its sub-groups (if available). ■ Example: Scenario 1 in figure "Separate equipment scenarios" (page 93).
Phase separates equipment entities partially	70.2	<p>If the Child entity to be separated (SR0312.8.5) process parameter (page 95) is null and the Keep sub-group (SR0312.8.9) process parameter (page 96) is set to Yes:</p> <ul style="list-style-type: none"> ■ Phase separates all direct child entities from the parent entity of group, but keeps all sub-groups (if applicable). ■ Example: Scenarios 2 and 3 in figure "Separate equipment scenarios" (page 93). <p>If the Child entity to be separated (SR0312.8.5) process parameter (page 95) is not null:</p> <ul style="list-style-type: none"> ■ Phase separates the child entity to be separated from its direct parent (which is not necessarily the main parent according to the Parent entity of group (SR0312.8.2) process parameter (page 95)). ■ If the Keep sub-group (SR0312.8.9) process parameter (page 96) is set to Yes: Phase keeps all sub-groups of the separated entity (if applicable). ■ Example: Scenarios 4 and 5 in figure "Separate equipment scenarios" (page 93). ■ If the Keep sub-group (SR0312.8.9) process parameter (page 96) is set to No: Phase separates all sub-groups of the separated entity (if applicable). ■ Example: Scenario 6 in figure "Separate equipment scenarios" (page 93).
	70.3	<p>If the separation of entities was successful, the logbooks of parent and child equipment entities are updated accordingly (if maintained).</p>

Step	#	Description
Phase handles binding status	80	<p>If the Keep binding (SR0312.8.10) process parameter (page 96) is set to No:</p> <ul style="list-style-type: none"> ■ For all separated equipment entities and sub-groups, phase resets binding status of each entity to Available and updates the binding context in the Context tab of the equipment entity (not for workflows) and the logbooks accordingly (Unbind) (if maintained). ■ Example: Scenarios 1, 5, and 6 in figure "Separate equipment scenarios" (page 93). <p>If the Keep binding (SR0312.8.10) process parameter (page 96) is set to Yes:</p> <ul style="list-style-type: none"> ■ For all separated equipment entities and sub-groups, phase keeps the current binding status of each entity. ■ Example: Scenarios 3 and 4 in figure "Separate equipment scenarios" (page 93).
	90	<p>In case an error has occurred during separation, phase displays the Equipment separation failed (SR0312.3.6.4) error message (page 99).</p> <p>In case an error has occurred during unbinding, phase displays the Equipment unbinding (SR0312.3.6.5) error message (page 100).</p> <p>In case of an error, all already executed separation or unbinding actions are undone.</p> <p>In case no error has occurred, phase is completed automatically.</p>

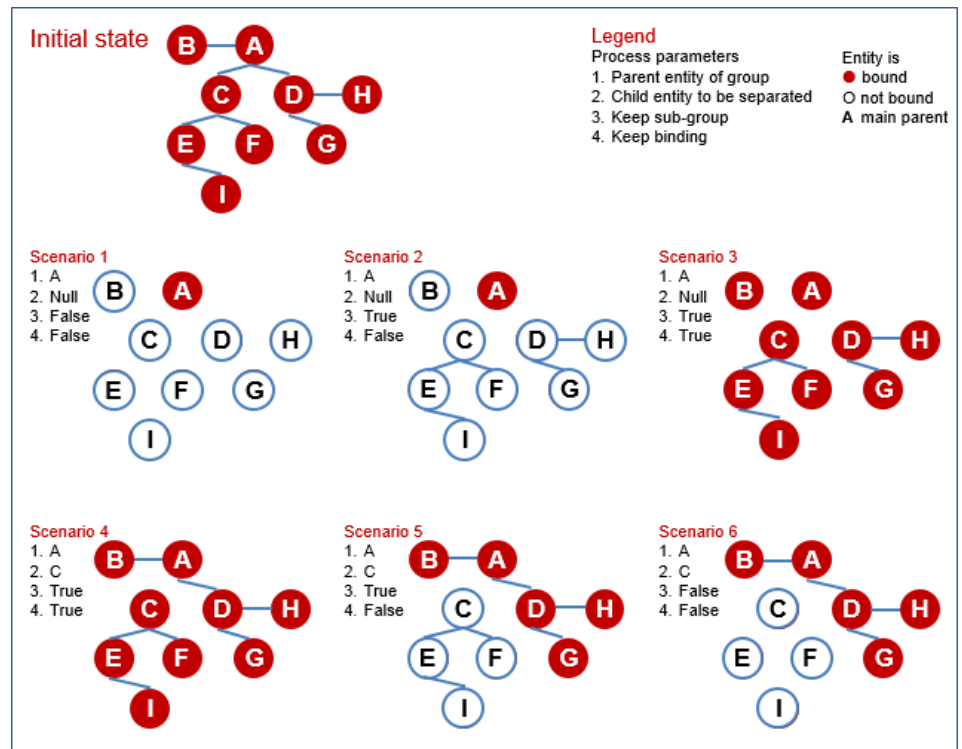


Figure 19: Separate equipment scenarios

Process Parameters (SR0312.8+)

The following process parameters define the behavior of the phase.

INSTRUCTION TABLE-SPECIFIC PARAMETERS

Instruction table definition (Framework capability)

Attribute	Type	Comment
Table layout	Choice list	Defines the layout of the instruction table holding the instruction texts. Available settings: 1 column, 2 columns, 3 columns, 4 columns, 5 columns. Default setting: 1 column.
First column narrow	Boolean	Defines if the first column of the table shall be narrow.
Show all borders	Boolean	Defines if the borders of the table shall be visible.

Instruction table text (Framework capability)

Attribute	Type	Comment
Column 1	HTML text	Instruction text to be displayed in a column. Restriction: Maximum length is 2000 characters (including HTML tags).
Column 2	HTML text	
Column 3	HTML text	
Column 4	HTML text	
Column 5	HTML text	

INSTRUCTION LINK-SPECIFIC PARAMETERS

Instruction text with links (Framework capability)

Attribute	Type	Comment
Instruction text	HTML text	Instruction text to be displayed. For any text enclosed in curly brackets you can define a hyperlink with the Instruction link definition process parameter (page 94). Example: Refer to {SOP1270} for guidance. Maximum length is 2000 characters (including HTML tags).

Instruction link definition (Framework capability)

Attribute	Type	Comment
Link text	Text	Text to be used as link. For any text enclosed in curly brackets within the instruction text you can define a link with the Link URL attribute. Including the brackets in the link text is optional. Maximum length is 80 characters.

Attribute	Type	Comment
Link URL	Text	URL of the file to be displayed. The link opens the external application assigned to the file type by the operating system. Maximum length is 256 characters.

BASIC PARAMETERS

Instruction (SR0312.8.1)

Attribute	Type	Comment
Text	HTML text	Instruction text to be displayed. Restriction: Maximum length is 2000 characters (including HTML tags).

Parent entity of group (SR0312.8.2)

Attribute	Type	Comment
Equipment object	Reference	Reference to the equipment object output variable of a preceding phase that provides the main parent entity of a group.

Child entity to be separated (SR0312.8.5)

Attribute	Type	Comment
Equipment object	Reference	Optional. Reference to the equipment object output variable of a preceding phase that provides the child entity to be separated from a group.

Mode (SR0312.8.3)

Attribute	Type	Comment
Mode	Choice list	Defines the processing mode. Manual completion (default): Operator confirms the phase. Automatic completion : Phase automatically separates the equipment entities and is completed.

Show children (SR0312.8.4)

Attribute	Type	Comment
Enabled	Boolean	Controls if the list of child entities that are separated is displayed during execution. Default setting: Yes

Keep sub-group (SR0312.8.9)

Attribute	Type	Comment
Enabled	Boolean	Controls if any sub-groups (if applicable) of a separated entity are kept. If not, all sub-groups of the separated entity are completely separated as well. Default setting: Yes

Keep binding (SR0312.8.10)

Attribute	Type	Comment
Enabled	Boolean	Controls if separated entities or sub-groups keep their binding status. If not, they are unbound along with the separation. Default setting: Yes

CONFIGURATION OF USER-TRIGGERED EXCEPTIONS

Skip separation (SR0312.8.8)

Attribute	Type	Comment
Risk assessment	Choice list	Defines the risk level of the exception and thus controls the related signature privilege. Available settings: None , Low , Low (mandatory comment) , Medium , Medium (mandatory comment) , High , High (mandatory comment) . Default setting: High .
Exception text	Text	Defines the exception description used during exception handling and within the batch record. Maximum length is 250 characters.

See also **Skip separation (SR0312.3.1.1)** user-triggered exception (page 97).

Exceptions (SR0312.3+)

The phase supports user-defined, user-triggered (page 97), system-triggered (page 97), and post-completion exceptions (page 98) and their configuration by means of process parameters (page 93).

User-defined exceptions cannot be configured by process parameters since they are provided by the framework and independent of phases.

System-triggered Exceptions

There are no system-triggered exceptions available.

User-triggered Exceptions (SR0312.3.1+)

A user-triggered exception is represented in the list of available user-triggered exceptions in the Exception Window, as the description of the exception, and in the batch report.

The following user-triggered exceptions are available.

Skip separation (SR0312.3.1.1)

The **Skip separation** exception allows an operator to skip the phase in order to pass an error situation. This may require the separation process to be performed in Data Manager [A3] (page 141).

Representation during exception handling:

- Instruction:
Skip the separation.
Confirm button.
- Exception text:
<Exception text>
(taken from **Skip separation (SR0312.8.8)** process parameter (page 97))
Parent entity: <identifier of parent equipment entity>
Child entity: <identifier of child equipment entity>

(If an entity is not available or not configured, phase displays "N/A" as identifier.)

- Example:
Separation has been skipped.
Parent entity: CompactorC33
Child entity: CompactorCrusher01

Skip separation - Logic (SR0312.3.1.1.1)

- Trigger: Exception is selected
- Postcondition: **Separate equipment** phase is skipped

Step	#	Description
Operator confirms exception	10	Phase shows exception description to be signed according to Skip separation (SR0312.8.8) process parameter (page 97).
Operator signs exception	20	<ul style="list-style-type: none"> ■ Phase records the exception. ■ Phase is completed automatically.

Post-completion Exceptions

There are no post-completion exceptions available.

Information Messages

There are no information messages available.

Questions

There are no questions available.

Decisions

There are no decisions available.

Error Messages (SR0312.3.6+)

Error messages are represented in an error message dialog containing a message type-specific icon, the error message, and an **OK** button.

The following error messages are available to inform the operator about error conditions.

Not part of group (SR0312.3.6.1)

UI text	Comment
The <child entity identifier> entity that is to be separated from the group is no child of the defined group (<parent entity identifier>).	Message pack: PhaseEqmEqSeparate<version> Message ID: ChildEntityNotPartOfGroup_ErrorMsg

Not main parent (SR0312.3.6.2)

UI text	Comment
Cannot perform the separation, since the <parent entity identifier> entity is not the main parent of the group.	Message pack: PhaseEqmEqSeparate<version> Message ID: NotRootEntity_ErrorMsg

Parent entity of group not defined (SR0312.3.6.3)

UI text	Comment
There is no parent entity of the group defined.	Message pack: PhaseEqmEqSeparate<version> Message ID: NoRootEntity_ErrorMsg

Equipment separation failed (SR0312.3.6.4)

UI text	Comment
An error has occurred while separating the <entity identifier> entity from its group.	Message pack: PhaseEqmEqSeparate<version> Message ID: SeparationFailed_ErrorMsg The Details button provides access to more specific information about the error.

Equipment unbinding failed (SR0312.3.6.5)

UI text	Comment
An error has occurred while unbinding the <entity identifier> entity.	<p>Message pack: PhaseEqmEqSeparate<version> Message ID: ReleaseFailed_ErrorMsg</p> <p>The Details button provides access to more specific information about the error and the entities that cause the error.</p>

Output Variables (SR0310.9+)

The following output variables are available to reference the phase's output.

Instance count (Framework capability)

- Data type: Long
- Usage: The output variable provides the count of the number of instances the phase has been processed, for example in a loop. The count is also increased when the phase is skipped from an operator's perspective, since the phase is still executed, but as a hidden phase.
The count variable of a phase that has not been executed provides 0 as output value.

Start time (Framework capability)

- Data type: Timestamp
- Usage: The output variable provides the start time of the phase.

Completion time (Framework capability)

- Data type: Timestamp
- Usage: The output variable provides the completion time of the phase.

Identifier (Framework capability)

- Data type: String
- Usage: The output variable provides the identifier of the phase.

Unbind Equipment Phase (SR0320+)

The **Unbind equipment** phase allows an operator to release a previously bound equipment entity or all equipment entities of a group before a unit procedure is finished. Thus, the entity or entity group can be identified within another unit procedure context while the current unit procedure is still running.

Example use cases are:

- Need to explicitly unbind an equipment entity.
A measuring tool needs to be used in multiple orders that run in parallel. It must be released from one order prior to the automatic release along with order step finish. Once released, it can again be identified and used in a different order.
- Need to explicitly unbind an equipment group
Cleaning of a used machine with all of its components has to be started before the current order step is completed. The machine can be unbound as soon as it is no longer used in the context of the current order step.

The affected equipment entities are stored in the batch record, thereby becoming available for documentation purposes in the sub-report and batch report (page 104).

Anomalies that occur during processing are covered by the phase exception handling (page 109) (e.g. equipment entity is not available).

After completion the phase displays the affected (parent) equipment entity and the child entities (if applicable) with their identifiers and short descriptions in the Execution Window.

The Navigator displays the identifier of the affect (parent) equipment entity and the number of child entities (if applicable).

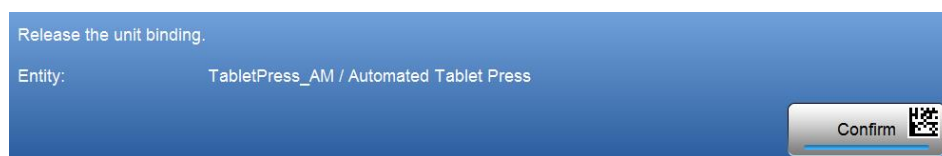


Figure 20: Unbind equipment during execution

Release the unit binding.

Entity: TabletPress_AM / Automated Tablet Press

List of child entities of TabletPress_AM / Automated Tablet Press

Identifier	Short description
TabletDischargeChute	Discharge chute for Automated Tablet Press
TabletPressFeeder	Feeder for Automated Tablet Press
TabletPressFeederSeal	Feeder Seal for Automated Tablet Press

Confirm 

Figure 21: Unbind equipment group during execution

Layout

The phase provides individual layouts for its representation during execution (page 102), in the Navigator (page 103), and in the sub-report (page 104).

Representation during Execution (SR0320.1+)

The representation during execution depends on the phase mode.

Preview mode (SR0320.1.1)

1. <Instruction text>
(taken from **Instruction (SR0320.8.1)** process parameter (page 107))
2. Entity:
3. List of child entities of the group
 - Only if the **Show children (SR0320.8.6)** process parameter (page 108) is set to **Yes**.
4. **Confirm** button (disabled).

Active mode (SR0320.1.2)

1. Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
2. <Instruction text>
(taken from **Instruction (SR0320.8.1)** process parameter (page 107))
3. Entity: <equipment entity identifier> / <equipment entity short description>
(taken from **Identified equipment entity (SR0320.8.2)** process parameter (page 108))

4. List of child entities:

- Only in case of an entity group and if the **Show children (SR0320.8.6)** process parameter (page 108) is set to **Yes**.
- Details of child entity.

<Child entity identifier>	<Child entity short description>
---------------------------	----------------------------------

5. **Confirm** button.**Completed mode (SR0320.1.3)**

1. Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
2. <Instruction text>
(taken from **Instruction (SR0320.8.1)** process parameter (page 107))
3. Entity: <equipment entity identifier> / <equipment entity short description>
(taken from **Identified equipment entity (SR0320.8.2)** process parameter (page 108))
4. List of child entities:
 - Only in case of an entity group and if the **Show children (SR0320.8.6)** process parameter (page 108) is set to **Yes**.
 - Details of child entity.

<Child entity identifier>	<Child entity short description>
---------------------------	----------------------------------

5. **Confirm** button (completed).**Representation in Navigator (SR0320.4+)**

The Navigator provides the following details:

Phase column (Framework capability)

- <Phase name>
- Example:
Unbind blender

Information column (SR0320.4.1)

- <Identifier of affected equipment entity>
 - Example: BlenderA12
- Only in case of an entity group
 - <Identifier of affected equipment entity>
<Number of child entities> child entities
 - Example:
BlenderA12
5 child entities

Action column

- There are no actions available.

Representation in Sub-report (SR0320.5+)

The sub-report contains the following information:

Common sub-report elements (Framework capability)

- <Start time>
- <Completion time>
- <Unit procedure> / <operation> / <phase>
- <Work center> / <station> / <device> - <phase completion user>

Sub-report elements (SR0320.5.1)

- Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
- Instruction text
- Entity <identifier and short description>
 - If the equipment entity is the main parent of a group, the list of its child entities (identifier and short description) is added to the report.

Business Logic (SR0320.2+)

The phase implements the following business logic.

Unbind equipment entity (SR0320.2.1)

- Function: Unbind affected equipment entities
- Trigger: Phase becomes active
- Postcondition: Equipment entities are no longer bound

Step	#	Description
Phase activation	10	Phase displays its user interface according to the Active mode (SR0320.1.2) layout (page 102).
Phase checks the completion mode	20	<ul style="list-style-type: none"> ■ Mode (SR0320.8.3) process parameter (page 108) is set to Manual completion: Phase continues with the next step upon phase confirmation by the operator. ■ Mode (SR0320.8.3) process parameter (page 108) is set to Automatic completion: Phase automatically continues with the next step.
Phase checks if the referenced equipment entity or entity group is available at runtime	30	<ul style="list-style-type: none"> ■ If no equipment entity is referenced, phase creates the Equipment data mismatch (SR0320.3.2.1) system-triggered exception (page 110). ■ If the equipment entity is member of a group, but not the main parent entity, phase creates the Equipment data mismatch (SR0320.3.2.1) system-triggered exception (page 110). <p>If the check passes successfully, phase continues with the next check.</p>
Phase checks if all entities are bound	40	<p>The following checks either apply to a single entity or to a main parent entity and to all of its child entities, respectively:</p> <ul style="list-style-type: none"> ■ If any equipment entity is not bound, phase creates the Equipment unbind failed (SR0320.3.2.2) system-triggered exception (page 110). ■ If any equipment entity is bound to a different unit procedure context, phase creates the Equipment unbind failed (SR0320.3.2.2) system-triggered exception (page 110). <p>If the check passes successfully, phase continues with the next check.</p>

Step	#	Description
Phase resets the status of the equipment entity or entity group to Available	50	<ul style="list-style-type: none"> ■ If a system-triggered exception has been recorded, phase does not change the binding status of any equipment. ■ If the binding status of all equipment entities can be set to Available, the binding context in the Context tab of the equipment entity (not for workflows) and the logbook of all entities is updated accordingly (Unbind) (if maintained) and phase is completed.

Process Parameters (SR0320.8+)

The following process parameters define the behavior of the phase.

INSTRUCTION TABLE-SPECIFIC PARAMETERS

Instruction table definition (Framework capability)

Attribute	Type	Comment
Table layout	Choice list	Defines the layout of the instruction table holding the instruction texts. Available settings: 1 column, 2 columns, 3 columns, 4 columns, 5 columns . Default setting: 1 column .
First column narrow	Boolean	Defines if the first column of the table shall be narrow.
Show all borders	Boolean	Defines if the borders of the table shall be visible.

Instruction table text (Framework capability)

Attribute	Type	Comment
Column 1	HTML text	Instruction text to be displayed in a column. Restriction: Maximum length is 2000 characters (including HTML tags).
Column 2	HTML text	
Column 3	HTML text	
Column 4	HTML text	
Column 5	HTML text	

INSTRUCTION LINK-SPECIFIC PARAMETERS

Instruction text with links (Framework capability)

Attribute	Type	Comment
Instruction text	HTML text	<p>Instruction text to be displayed.</p> <p>For any text enclosed in curly brackets you can define a hyperlink with the Instruction link definition process parameter (page 107).</p> <p>Example: Refer to {SOP1270} for guidance.</p> <p>Maximum length is 2000 characters (including HTML tags).</p>

Instruction link definition (Framework capability)

Attribute	Type	Comment
Link text	Text	<p>Text to be used as link.</p> <p>For any text enclosed in curly brackets within the instruction text you can define a link with the Link URL attribute.</p> <p>Including the brackets in the link text is optional.</p> <p>Maximum length is 80 characters.</p>
Link URL	Text	<p>URL of the file to be displayed. The link opens the external application assigned to the file type by the operating system.</p> <p>Maximum length is 256 characters.</p>

BASIC PARAMETERS

Instruction (SR0320.8.1)

Attribute	Type	Comment
Text	HTML text	<p>Instruction text to be displayed.</p> <p>Restriction: Maximum length is 2000 characters (including HTML tags).</p>

Identified equipment entity (SR0320.8.2)

Attribute	Type	Comment
Equipment object	Reference	Reference to the output of a preceding phase that provides an identified equipment entity.

Mode (SR0320.8.3)

Attribute	Type	Comment
Mode	Choice list	Defines the processing mode. Manual completion (default): Operator confirms the phase. Automatic completion : Phase automatically unbinds the equipment entities and is completed.

Show children (SR0320.8.6)

Attribute	Type	Comment
Enabled	Boolean	Controls if the list of child entities is displayed during execution. Default setting: Yes

CONFIGURATION OF SYSTEM-TRIGGERED EXCEPTIONS

Equipment data mismatch (SR0320.8.4)

Attribute	Type	Comment
Risk assessment	Choice list	Defines the risk level of the exception and thus controls the related signature privilege. Available settings: None , Low , Low (mandatory comment) , Medium , Medium (mandatory comment) , High , High (mandatory comment) . Default setting: High .
Exception text	Text	Defines the exception description used during exception handling and within the batch record. Maximum length is 250 characters.

See also **Equipment data mismatch (SR3220.3.2.1)** system-triggered exception (page 110).

Equipment unbind failed (SR0320.8.5)

Attribute	Type	Comment
Risk assessment	Choice list	Defines the risk level of the exception and thus controls the related signature privilege. Available settings: None , Low , Low (mandatory comment) , Medium , Medium (mandatory comment) , High , High (mandatory comment) . Default setting: High .
Exception text	Text	Defines the exception description used during exception handling and within the batch record. Maximum length is 250 characters.

See also **Equipment unbind failed (SR0320.3.2.2)** system-triggered exception (page 110).

Exceptions (SR0320.3+)

The phase supports user-defined, user-triggered (page 112), system-triggered (page 109), and post-completion exceptions (page 112) and their configuration by means of process parameters (page 106).

User-defined exceptions cannot be configured by process parameters since they are provided by the framework and independent of phases.

System-triggered Exceptions (SR0320.3.2+)

A system-triggered exception is represented in a message dialog along with an **Exception** button, in the Exception Window as the read-only description of the exception, and in the batch report.

The following system-triggered exceptions are available.

Equipment data mismatch (SR0320.3.2.1)

The exception text is extended by messages specific to the current situation.

Representation of the exception:

- <Exception text>
(taken from **Equipment data mismatch (SR0320.8.4)** process parameter (page 108))
- If the expected equipment is not available:
Cannot find the expected entity.
- If the expected equipment entity is member of a group, but not the main parent entity:
The <entity identifier> entity is only a member and not the main parent of the group (<parent entity identifier>).
- Example:
Equipment data configuration error.
The Hose047 entity is only a member and not the main parent of the group (Compactor-base).

Equipment data mismatch - Logic (SR0320.3.2.1.1)

- Trigger: Equipment entity or entity status do not match
- Postcondition: Exception is recorded

Step	#	Description
Operator triggers exception	10	Phase records the exception.

Equipment unbind failed (SR0320.3.2.2)

The exception text is extended by messages specific to the current situation.

Representation of the exception:

Exception dialog

- <Exception text>
(taken from **Equipment unbind failed (SR0320.8.5)** process parameter (page 109))
- If a single equipment entity is not in the **Bound** status:
The <entity identifier> entity is not bound.

- If a single equipment entity is bound within a different unit procedure context:
Cannot unbind the <entity identifier> entity.
Cannot unbind the <entity identifier> equipment entity here, since it has already been identified or bound at the <work center identifier> work center for <process order or workflow identifier> (unit procedure: <unit procedure identifier>, operation: <operation identifier>, phase: <phase identifier>).
- If any equipment entity of a group is not in the **Bound** status or bound within a different unit procedure context:
Unbind of <identifier of main parent entity> failed.

Exception Window

- <Exception text>
(taken from **Equipment unbind failed (SR0320.8.5)** process parameter (page 109))
- If a single equipment entity is not in the **Bound** status:
The <entity identifier> entity is not bound.
- If a single equipment entity is bound within a different unit procedure context:
Cannot unbind the <entity identifier> entity.
Cannot unbind the <entity identifier> equipment entity here, since it has already been identified or bound at the <work center identifier> work center for <process order or workflow identifier> (unit procedure: <unit procedure identifier>, operation: <operation identifier>, phase: <phase identifier>).
- If any equipment entity of a group is not in the **Bound** status or bound within a different unit procedure context:
Unbind of <identifier of main parent entity> failed.
- For each equipment entity of the group, the following details are listed:
Entity: <entity identifier>
Reason: The entity is not bound.
Entity: <entity identifier>
Reason: Cannot unbind the <identifier> equipment entity here, since it has already been identified or bound at the <work center identifier> work center for <process order or workflow identifier> (unit procedure: <unit procedure identifier>, operation: <operation identifier>, phase: <phase identifier>).

- Example:
Unbind failed.
Cannot unbind the BlenderA12 equipment entity.
Cannot unbind the BlenderA12 equipment entity here, since it has already been identified or bound at the WKC_Processing work center for WF_Blender (unit procedure: UP-01, operation: OP-01, phase: PH-Release-Blender).

Equipment unbind failed - Logic (SR0320.3.2.2.1)

- Trigger: Unbind of equipment entity or of an equipment entity of a group failed
- Postcondition: Exception is recorded

Step	#	Description
Operator triggers exception	10	Phase records the exception.

User-triggered Exceptions

There are no user-triggered exceptions available.

Post-completion Exceptions

There are no post-completion exceptions available.

Information Messages

There are no information messages available.

Questions

There are no questions available.

Decisions

There are no decisions available.

Error Messages

There are no error messages available.

Output Variables

The following output variables are available to reference the phase's output.

Instance count (Framework capability)

- Data type: Long
- Usage: The output variable provides the count of the number of instances the phase has been processed, for example in a loop. The count is also increased when the phase is skipped from an operator's perspective, since the phase is still executed, but as a hidden phase.
The count variable of a phase that has not been executed provides 0 as output value.

Start time (Framework capability)

- Data type: Timestamp
- Usage: The output variable provides the start time of the phase.

Completion time (Framework capability)

- Data type: Timestamp
- Usage: The output variable provides the completion time of the phase.

Identifier (Framework capability)

- Data type: String
- Usage: The output variable provides the identifier of the phase.

-
-
- FT PharmaSuite® 10.01.00 - Functional Requirement Specification Equipment Tracking Phases
-
-

Show Equipment List Phase (SR0305+)

The **Show equipment list** phase allows to show a list of equipment entities with the current values of a defined set of their specification properties and their runtime data, such as runtime properties and graph-related data.

Only equipment entities in an **Active** state (e.g. **Approved**) are included in the list. The system, however can be configured to include other states. In case of a group of entities, only the parent entity is considered.

An example use case is:


- Support the operator in his decision which vessel to use in the next processing step depending on the status and the temperature of the entity.

The instruction text is stored in the batch record, thereby becoming available for documentation purposes in the sub-report and batch report (page 117).

Anomalies that occur during processing are covered by the phase exception handling (page 122) (e.g. adding a user-defined exception).

After completion the phase displays the instruction text in the Execution Window.

The Navigator displays the beginning of the instruction text.

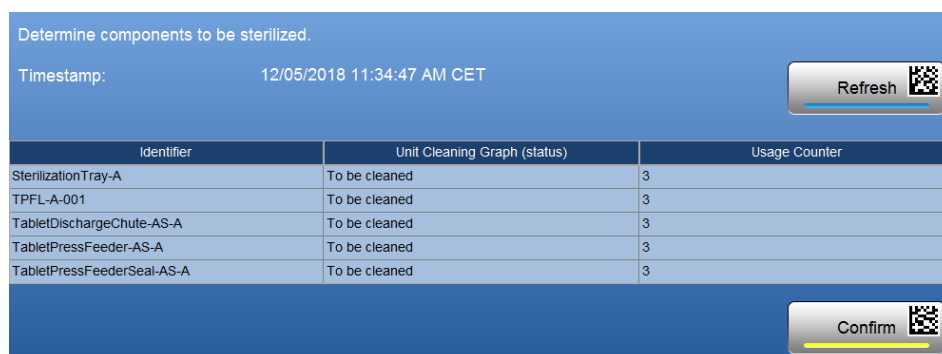

Identifier	Unit Cleaning Graph (status)	Usage Counter
SterilizationTray-A	To be cleaned	3
TPFL-A-001	To be cleaned	3
TabletDischargeChute-AS-A	To be cleaned	3
TabletPressFeeder-AS-A	To be cleaned	3
TabletPressFeederSeal-AS-A	To be cleaned	3

Figure 22: Show equipment list during execution

Layout

The phase provides individual layouts for its representation during execution (page 116), in the Navigator (page 117), and in the sub-report (page 117).

Representation during Execution (SR0305.1+)

The representation during execution depends on the phase mode.

Preview mode (SR0305.1.1)

1. <Instruction text>
(taken from **Instruction (SR0305.8.1)** process parameter (page 121))
2. No data loaded yet.
3. **Refresh** button (disabled)
4. List of equipment entities with the current values of the configured property types and equipment graphs
(taken from **Equipment parameters (SR0305.6.1)** process input (page 118) and **Column definition (SR0305.8.3)** process parameter (page 121))
 - Empty table.
5. **Confirm** button (disabled).

Active mode (SR0305.1.2)

1. Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
2. <Instruction text>
(taken from **Instruction (SR0305.8.1)** process parameter (page 121))
3. <Data reading timestamp>
4. **Refresh** button
5. List of equipment entities with the current values of the configured property types and equipment graphs
(taken from **Equipment parameters (SR0305.6.1)** process input (page 118) and **Column definition (SR0305.8.3)** process parameter (page 121))
 - 1st column: Equipment entity identifier
 - 2nd - 9th column: Data
 - For property types, the phase displays the identifier as column header and the current value as data.
 - For equipment graphs, the phase displays the display text as column header and the status / expiry date as data.
6. **Confirm** button.

Completed mode (SR0305.1.3)

1. Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
2. <Instruction text>
(taken from **Instruction (SR0305.8.1)** process parameter (page 121))
3. **Confirm** button (completed).

Representation in Navigator (SR0305.4+)

The Navigator provides the following details:

Phase column (Framework capability)

- <Phase name>
- Example:
Vessel details

Information column (SR0305.4.1)

- <Instruction text, 25 characters>
- Example: This list shows all clean IBCs ...
- Empty in case the instruction text is defined in HTML format

Action column

- There are no actions available.

Representation in Sub-report (SR0305.5+)

The sub-report contains the following information:

Common sub-report elements (Framework capability)

- <Start time>
- <Completion time>
- <Unit procedure> / <operation> / <phase>
- <Work center> / <station> / <device> - <phase completion user>

Sub-report elements (SR0305.5.1)

- Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
- Instruction text

Business Logic (SR0305.2+)

The phase implements the following business logic.

Show properties (SR0305.2.1)

- Function: Show property types and equipment graphs of equipment entities
- Trigger: Phase becomes active
- Postcondition: Property types and equipment graphs of equipment entities are displayed

Step	#	Description
Phase activation	10	Phase displays its user interface according to the Active mode (SR0305.1.2) layout (page 116).

Phase Parameters

The phase provides equipment parameters as process inputs (page [118](#)) and process parameters (page [119](#)).

Process Inputs (SR0305.6+)

Equipment Parameters (SR0305.6.1)

Equipment parameters allow to define an equipment requirement as follows:

- by assigning an equipment class and
 - by assigning a specific property type (check against existence),
 - by setting specific property values (check against value, see **Technical Property Types and Editors (SR3071.8.7+)** in "Functional Requirement Specification Data Management" [A3] (page [141](#))),
 - by defining a flexible rule, or
 - by defining a conditional rule.

For properties of the following data types, the property values cannot be accessed within rules:

- Equipment type
- Flexible tag definition
- Ranges
- Room cleaning rules
- Scale configuration
- Work center assignment

For details about rules, see **Expressions for Flexible Rules (SR3146.9.9.4.10)** and **Expressions for Conditional Rules (SR3146.9.9.4.12)** in "Functional Requirement Specification Recipe and Workflow Management" [A2] (page [141](#)).

Process Parameters (SR0305.8+)

The following process parameters define the behavior of the phase.

INSTRUCTION TABLE-SPECIFIC PARAMETERS

Instruction table definition (Framework capability)

Attribute	Type	Comment
Table layout	Choice list	Defines the layout of the instruction table holding the instruction texts. Available settings: 1 column , 2 columns , 3 columns , 4 columns , 5 columns . Default setting: 1 column .
First column narrow	Boolean	Defines if the first column of the table shall be narrow.
Show all borders	Boolean	Defines if the borders of the table shall be visible.

Instruction table text (Framework capability)

Attribute	Type	Comment
Column 1	HTML text	Instruction text to be displayed in a

Attribute	Type	Comment
Column 2	HTML text	
Column 3	HTML text	
Column 4	HTML text	
Column 5	HTML text	

INSTRUCTION LINK-SPECIFIC PARAMETERS

Instruction text with links (Framework capability)

Attribute	Type	Comment
Instruction text	HTML text	<p>Instruction text to be displayed.</p> <p>For any text enclosed in curly brackets you can define a hyperlink with the Instruction link definition process parameter (page 120).</p> <p>Example: Refer to {SOP1270} for guidance.</p> <p>Maximum length is 2000 characters (including HTML tags).</p>

Instruction link definition (Framework capability)

Attribute	Type	Comment
Link text	Text	<p>Text to be used as link.</p> <p>For any text enclosed in curly brackets within the instruction text you can define a link with the Link URL attribute.</p> <p>Including the brackets in the link text is optional.</p> <p>Maximum length is 80 characters.</p>
Link URL	Text	<p>URL of the file to be displayed. The link opens the external application assigned to the file type by the operating system.</p> <p>Maximum length is 256 characters.</p>

BASIC PARAMETERS

Instruction (SR0305.8.1)

Attribute	Type	Comment
Text	HTML text	Instruction text to be displayed. Restriction: Maximum length is 2000 characters (including HTML tags).

Maximum number of rows (SR0305.8.2)

Attribute	Type	Comment
Value	Long	Defines the number of rows (equipment entities and properties) to be displayed by the phase. Range: [1..50] Default setting: 10.

Column definition (SR0305.8.3)

The phase allows up to nine bundle process parameters of this type.

Attribute	Type	Comment
Attribute	String	Property type or equipment graph whose data shall be displayed.
Sorting order	Choice list	Defines the sorting order of the result list. In case different sorting orders are defined, the sorting order is evaluated from left to right. The equipment entity identifier is evaluated last. Available settings: No sorting, Ascending, Descending. Default setting: No sorting.
Position	Choice list	Defines the position of the column in the table. The options range between Position 2 and Position 10 , since an Identifier column that contains the identifier of the listed equipment entity is always the first column. Default setting: Position 2.

Attribute Selection editor (Framework capability)

The system provides an Attribute Selection editor for selecting a property type or an equipment graph property (status or expiry date).

Exceptions (SR0305.3+)

The phase supports user-defined, user-triggered (page 122), system-triggered (page 122), and post-completion exceptions (page 122) and their configuration by means of process parameters (page 119).

User-defined exceptions cannot be configured by process parameters since they are provided by the framework and independent of phases.

System-triggered Exceptions

There are no system-triggered exceptions available.

User-triggered Exceptions

There are no user-triggered exceptions available.

Post-completion Exceptions

There are no post-completion exceptions available.

Information Messages

There are no information messages available.

Decisions

There are no decisions available.

Questions

There are no questions available.

Error Messages

There are no error messages available.

Output Variables (SR0305.9+)

The following output variables are available to reference the phase's output.

Instance count (Framework capability)

- Data type: Long
- Usage: The output variable provides the count of the number of instances the phase has been processed, for example in a loop. The count is also increased when the phase is skipped from an operator's perspective, since the phase is still executed, but as a hidden phase.
The count variable of a phase that has not been executed provides 0 as output value.

Start time (Framework capability)

- Data type: Timestamp
- Usage: The output variable provides the start time of the phase.

Completion time (Framework capability)

- Data type: Timestamp
- Usage: The output variable provides the completion time of the phase.

Identifier (Framework capability)

- Data type: String
- Usage: The output variable provides the identifier of the phase.

-
-
- FT PharmaSuite® 10.01.00 - Functional Requirement Specification Equipment Tracking Phases
-
-

Generate Template-based Equipment Phase (SR0306+)

The **Generate template-based equipment** phase allows to generate one or more equipment entities with attributes, properties, and equipment graphs based on a configured template equipment entity.

The new generated equipment entities can inherit the **Approved** status of the template equipment entity and are thus immediately ready for use on the shop floor. The equipment entity can be identified by scanning its label, which is printed during the generation of the equipment entity.

Example use cases are:

- Generate an equipment entity for one-time use and track its lifecycle.
- Generate an equipment entity such as a prepared stamp for exclusive usage at a specific packaging step.

The instruction text is stored in the batch record, thereby becoming available for documentation purposes in the sub-report and batch report (page 127).

Anomalies that occur during processing are covered by the phase exception handling (page 134) (e.g. adding a user-defined exception).

After completion the phase displays the instruction text in the Execution Window.

The Navigator displays the number of generated equipment entities.



Figure 23: Generate template-based equipment during execution

Layout

The phase provides individual layouts for its representation during execution (page 126), in the Navigator (page 127), and in the sub-report (page 127).

Representation during Execution (SR0306.1+)

The representation during execution depends on the phase mode.

Preview mode (SR0306.1.1)

1. <Instruction text>
(taken from **Instruction (SR0306.8.1)** process parameter (page 131))
2. Template entity: <identifier taken from **Template entity (SR0306.8.3)** process parameter (page 132)>
3. Number of entities: <value taken from **Number of entities (SR0306.8.3)** process parameter (page 132)>
4. **Confirm** button (disabled).

Active mode (SR0306.1.2)

1. Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
2. <Instruction text>
(taken from **Instruction (SR0306.8.1)** process parameter (page 131))
3. Template entity: <identifier taken from **Template entity (SR0306.8.3)** process parameter (page 132)>
4. Number of entities: <value taken from **Number of entities (SR0306.8.3)** process parameter (page 132)>
5. **Confirm** button.

Completed mode (SR0305.1.3)

1. Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
2. <Instruction text>
(taken from **Instruction (SR0306.8.1)** process parameter (page 131))
3. Template entity: <identifier taken from **Template entity (SR0306.8.3)** process parameter (page 132)>
4. Number of entities: <value taken from **Number of entities (SR0306.8.3)** process parameter (page 132)>

5. In case of 1 generated entity:
Generated entity: <identifier of the generated entity>
In case of 2 generated entities:
Generated entities: <identifier of first generated entity, identifier of second generated entity>
In case of 3 and more generated entities:
Generated entities: <identifier of first generated entity, identifier of second generated entity, ...>
6. **Confirm** button (completed).

Representation in Navigator (SR0306.4+)

The Navigator provides the following details:

Phase column (Framework capability)

- <Phase name>
- Example:
Stamp generation

Information column (SR0306.4.1)

- <Number of entities generated>
- Example: 3

Action column

- Reprint. Reprints the entity label.
<identifier>

Representation in Sub-report (SR0306.5+)

The sub-report contains the following information:

Common sub-report elements (Framework capability)

- <Start time>
- <Completion time>
- <Unit procedure> / <operation> / <phase>
- <Work center> / <station> / <device> - <phase completion user>

Sub-report elements (SR0306.5.1)

- Instruction table panel and/or instruction link panel
(only if an instruction table and/or instruction link is defined for the phase)
- Instruction text
- Template entity
- Number of entities
- In case of 1 generated entity:
Generated entity: <identifier of the generated entity>
In case of 2 or more generated entities:
Generated entities: <all identifiers of the generated entities>

Business Logic (SR0306.2+)

The phase implements the following business logic.

Activate phase (SR0306.2.1)

- Function: Activate phase
- Trigger: Phase becomes active
- Postcondition: Phase is ready to be confirmed

Step	#	Description
Phase activation	10	Phase displays its user interface according to the Active mode (SR0306.1.2) layout (page 126).
Phase checks the completion mode	20	Mode (SR0306.8.2) process parameter is set to Automatic completion : Phase automatically continues with the Confirm Phase (SR0306.2.2) action (page 129).

Confirm phase (SR0306.2.2)

- Function: Confirm phase
- Trigger: Confirm button used or automatic completion
- Postcondition: Phase is completed

Step	#	Description
Phase checks number of entities to generate	10	If the number of entities according to the Number of entities (SR0306.8.4) process parameter (page 132) is not defined, phase displays the Number of entities to generate not defined (SR306.3.6.6) error message (page 137). If the defined number of entities according to the Number of entities (SR0306.8.4) process parameter (page 132) is defined but < 1, phase displays the Invalid number of entities to generate (SR306.3.6.1) error message (page 137).
Phase checks template entity definition	20	If no template entity is defined by the Template entity (SR0306.8.3) process parameter (page 132), phase displays the Not defined template entity (SR0306.3.6.4) error message (page 137).
Phase checks the existence of the template entity	30	If the template entity defined by the Template entity (SR0306.8.3) process parameter (page 132) does not exist, phase displays the Not existing template entity (SR0306.3.6.3) error message (page 137).
Phase checks template entity status	40	If the template entity status of the template defined by the Template entity (SR0306.8.3) process parameter (page 132) is not allowed to be used (e.g. Archived), phase displays the Not allowed template entity status (SR0306.3.6.2) error message (page 137).
	50	If any of the checks failed, the phase is not confirmed.
	60	If no check failed, the phase <ul style="list-style-type: none"> ■ generates the number of entities in the Draft status based on the template entity defined by the Template entity (SR0306.8.3) process parameter (page 132). ■ The new entity identifier is defined by the template entity configuration. ■ If the Inherit status from template (SR0306.8.5) process parameter (page 132) is enabled, the entity inherits the status of the template. ■ With each generated entity, its equipment label is printed. Phase is confirmed.

Phase Parameters

The phase provides process parameters (page [130](#)).

Process Parameters (SR0306.8+)

The following process parameters define the behavior of the phase.

INSTRUCTION TABLE-SPECIFIC PARAMETERS

Instruction table definition (Framework capability)

Attribute	Type	Comment
Table layout	Choice list	Defines the layout of the instruction table holding the instruction texts. Available settings: 1 column, 2 columns, 3 columns, 4 columns, 5 columns . Default setting: 1 column .
First column narrow	Boolean	Defines if the first column of the table shall be narrow.
Show all borders	Boolean	Defines if the borders of the table shall be visible.

Instruction table text (Framework capability)

Attribute	Type	Comment
Column 1	HTML text	Instruction text to be displayed in a column. Restriction: Maximum length is 2000 characters (including HTML tags).
Column 2	HTML text	
Column 3	HTML text	
Column 4	HTML text	
Column 5	HTML text	

INSTRUCTION LINK-SPECIFIC PARAMETERS

Instruction text with links (Framework capability)

Attribute	Type	Comment
Instruction text	HTML text	<p>Instruction text to be displayed.</p> <p>For any text enclosed in curly brackets you can define a hyperlink with the Instruction link definition process parameter (page 131).</p> <p>Example: Refer to {SOP1270} for guidance.</p> <p>Maximum length is 2000 characters (including HTML tags).</p>

Instruction link definition (Framework capability)

Attribute	Type	Comment
Link text	Text	<p>Text to be used as link.</p> <p>For any text enclosed in curly brackets within the instruction text you can define a link with the Link URL attribute.</p> <p>Including the brackets in the link text is optional.</p> <p>Maximum length is 80 characters.</p>
Link URL	Text	<p>URL of the file to be displayed. The link opens the external application assigned to the file type by the operating system.</p> <p>Maximum length is 256 characters.</p>

BASIC PARAMETERS

Instruction (SR0306.8.1)

Attribute	Type	Comment
Text	HTML text	<p>Instruction text to be displayed.</p> <p>Restriction: Maximum length is 2000 characters (including HTML tags).</p>

Mode (SR0306.8.2)

Attribute	Type	Comment
Mode	Choice list	Defines the processing mode. Manual completion (default): Operator confirms the phase. Automatic completion : Phase automatically generates the equipment entities and is completed.

Template entity (SR0306.8.3)

Attribute	Type	Comment
Template entity	Text	Defines the template equipment entity. The parameter retrieves and stores the identifier of the template equipment entity by selector or info flow.

Template Equipment Entity Selection editor (Framework capability)

The system provides a Template Equipment Entity Selection editor for selecting a template equipment entity.

Number of entities (SR0306.8.4)

Attribute	Type	Comment
Value	Long	Defines the number of equipment entities to be generated by the phase.

Inherit status from template (SR0306.8.5)

Attribute	Type	Comment
Enabled	Boolean	Controls if the status of the template equipment entity shall be inherited to the generated equipment entities. Default setting: Yes

CONFIGURATION OF SYSTEM-TRIGGERED EXCEPTIONS

Template entity status check (SR0306.8.6)

Attribute	Type	Comment
Minimum template entity status	Choice list	Defines the minimum template entity status required for the equipment entity generation. Available settings: Verification , Approved . Default setting: Approved .
Risk assessment	Choice list	Defines the risk level of the exception and thus controls the related signature privilege. Available settings: None , Low , Low (mandatory comment) , Medium , Medium (mandatory comment) , High , High (mandatory comment) . Default setting: High .
Exception text	Text	Defines the exception description used during exception handling and within the batch record. Maximum length is 250 characters.

See also **Template entity status check (SR0306.3.2.1)** system-triggered exception (page 134).

CONFIGURATION OF POST-COMPLETION EXCEPTIONS

Reprint entity label (SR0306.8.7)

Attribute	Type	Comment
Risk assessment	Choice list	Defines the risk level of the exception and thus controls the related signature privilege. Available settings: None , Low , Low (mandatory comment) , Medium , Medium (mandatory comment) , High , High (mandatory comment) . Default setting: High .
Exception text	Text	Defines the exception description used during exception handling and within the batch record. Maximum length is 250 characters.

See also **Reprint entity label (SR0306.3.3.1)** post-completion exception (page 135).

Exceptions (SR0306.3+)

The phase supports user-defined, user-triggered (page 135), system-triggered (page 134), and post-completion exceptions (page 135) and their configuration by means of process parameters (page 130).

User-defined exceptions cannot be configured by process parameters since they are provided by the framework and independent of phases.

System-triggered Exceptions (SR0306.3.2+)

A system-triggered exception is represented in a message dialog along with an **Exception** button, in the Exception Window as the read-only description of the exception, and in the batch report.

The following system-triggered exceptions are available.

Template entity status check (SR0306.3.2.1)

The phase checks if the defined minimum status for the template equipment entity is fulfilled according to the **Template entity status check (SR0306.8.6)** process parameter (page 133).

Representation of the exception:

Exception dialog

- <Exception text>
(taken from **Template entity status check (SR0306.8.6)** process parameter (page 133))
Cannot use the <template entity identifier > template equipment entity, since it is in the <status> status.
Required minimum status: <minimum status taken from **Template entity status check (SR0306.8.6)** process parameter (page 133)>

Exception Window

- <Exception text>
(taken from **Template entity status check (SR0306.8.6)** process parameter (page 133))
Cannot use the <template entity identifier > template equipment entity, since it is in the <status> status.
Required minimum status: <minimum status taken from **Template entity status check (SR0306.8.6)** process parameter (page 133)>

- Example:
Template equipment entity status violation.
Cannot use the Stamp_TPL_2 template equipment entity, since it is in the Verification status.
Required minimum status: Approved

Template entity status check - Logic (SR0306.3.2.1.1)

- Trigger: Check has failed
- Postcondition: Exception is recorded

Step	#	Description
Operator accepts exceptional situation	1-10	Phase shows exception description to be signed.
Operator signs exception	1-20	Phase records the exception.
Operator does not accept exceptional situation	2-10	Phase records the cancel exception.

User-triggered Exceptions

There are no user-triggered exceptions available.

Post-completion Exceptions (SR0306.3.3+)

A post-completion exception is accessible via the Navigator and represented in the list of available post-completion exceptions in the Exception Window, as the description of the exception, and in the batch report.

The following post-completion exceptions are available.

Reprint entity label (SR0230.3.3.1)

The **Reprint entity label** exception allows an operator to reprint an equipment label for a generated equipment entity from the Navigator after the completion of the phase.

Representation of the exception:

- Instruction:
To reprint an equipment label, enter the ID of the generated entity.
Box for identifier input.
Confirm button.

- <Exception text>
(taken from **Reprint entity label (SR0306.8.7)** process parameter) (page [133](#))
Label of <entity identifier> entity reprinted.
- Example:
Reprint of entity label required.
Label of EQ000004528 entity reprinted.

Reprint entity label - Logic (SR0306.3.3.1.1)

- Trigger: Phase is completed, a label has been printed before
- Postcondition: Label has been reprinted

Step	#	Description
Operator triggers action	10	Phase displays Exception Window.
Operator confirms exception	20	If no entity identifier was entered, phase displays the Entity for label reprint not defined (SR0306.3.6.7) error message (page 138). If the entity with the entered identifier was not generated with this phase instance, phase displays the Wrong entity for reprint (SR0306.3.6.5) error message (page 137). Otherwise phase reprints the label.

Information Messages

There are no information messages available.

Decisions

There are no decisions available.

Questions

There are no questions available.

Error Messages (SR0306.3.6+)

Error messages are represented in an error message dialog containing a message type-specific icon, the error message, and an **OK** button.

The following error messages are available to inform the operator about error conditions.

Invalid number of entities to generate (SR0306.3.6.1)

UI text	Comment
The number of generated entities must be greater than zero.	Message pack: PhaseEqmEqGenTemplateBased<version> Message ID: InvalidNumberOfGeneratedEntities_ErrorMsg

Not allowed template entity status (SR0306.3.6.2)

UI text	Comment
The template entity <identifier> cannot be used in the <template entity status> status.	Message pack: PhaseEqmEqGenTemplateBased<version> Message ID: TemplateEntityArchived_ErrorMsg

Not existing template entity (SR0306.3.6.3)

UI text	Comment
The template entity <identifier> does not exist.	Message pack: PhaseEqmEqGenTemplateBased<version> Message ID: TemplateEntityDoesNotExist_ErrorMsg

Not defined template entity (SR0306.3.6.4)

UI text	Comment
There is no template entity defined.	Message pack: PhaseEqmEqGenTemplateBased<version> Message ID: UndefinedTemplateEntity_ErrorMsg

Wrong entity for reprint (SR0306.3.6.5)

UI text	Comment
The entity <identifier> was not generated by this phase run.	Message pack: PhaseEqmEqGenTemplateBased<version> Message ID: EntityNotGeneratedByThisPhase_ErrorMsg

Number of entities to generate not defined (SR0306.3.6.6)

UI text	Comment
There is no number of entities defined.	Message pack: PhaseEqmEqGenTemplateBased<version> Message ID: UndefinedNumberOfGeneratedEntities_ErrorMsg

Entity for label reprint not defined (SR0306.3.6.7)

UI text	Comment
Please enter the entity identifier.	Message pack: PhaseEqmEqGenTemplateBased<version> Message ID: UndefinedEntity_ErrorMsg

Output Variables (SR0306.9+)

The following output variables are available to reference the phase's output.

Instance count (Framework capability)

- Data type: Long
- Usage: The output variable provides the count of the number of instances the phase has been processed, for example in a loop. The count is also increased when the phase is skipped from an operator's perspective, since the phase is still executed, but as a hidden phase.
The count variable of a phase that has not been executed provides 0 as output value.

Start time (Framework capability)

- Data type: Timestamp
- Usage: The output variable provides the start time of the phase.

Completion time (Framework capability)

- Data type: Timestamp
- Usage: The output variable provides the completion time of the phase.

Identifier (Framework capability)

- Data type: String
- Usage: The output variable provides the identifier of the phase.

Equipment object (SR0306.9.1)

- Data type: IMESS88Equipment
- Usage: The output variable provides the first generated equipment entity. This is the output to use in subsequent phases for accessing data of the equipment object, such as displaying its status or a property.

Equipment ID (SR0306.9.2)

- Data type: String
- Usage: The output variable provides the identifier of the identified equipment entity for displaying it as text.

Number of generated entities (SR0306.9.3)

- Data type: Long
- Usage: The output variable provides the number of generated equipment entities.

-
-
- FT PharmaSuite® 10.01.00 - Functional Requirement Specification Equipment Tracking Phases
-
-

Reference Documents

The following documents are available from the Rockwell Automation Download Site.

No.	Document Title	Part Number
A1	PharmaSuite Functional Requirement Specification Execution Framework	PSFRSEF-RM006B-EN-E
A2	PharmaSuite Functional Requirement Specification Recipe and Workflow Management	PSFRSRD-RM010B-EN-E
A3	PharmaSuite Functional Requirement Specification Data Management	PSFRSDM-RM006B-EN-E
A4	PharmaSuite Technical Manual Configuration & Extension - Volume 4	PSCEV4-GR010B-EN-E

TIP

To access the Rockwell Automation Download Site, you need to acquire a user account from Rockwell Automation Sales or Support.

-
-
- FT PharmaSuite® 10.01.00 - Functional Requirement Specification Equipment Tracking Phases
-
-

Document Information

The document information covers various data related to the document.

Approval

This document has been approved electronically via the Rockwell Automation Document Management System (DMS). The required approvers of this document include the following:

Name	Role
Norbert Ern	Product Owner
Wolfgang Schmitt	Technical Lead
Ignaz Wangler	Test Lead

Version Information

Object	Version
PharmaSuite	10.01.00
Identify equipment	2.1
Change equipment status	1.0 MR4
Trigger graph transition	2.0 MR1
Separate equipment	1.0
Unbind equipment	2.0 MR1
Generate template-based equipment	1.0
Show equipment list	1.0 MR2
Functional Requirement Specification	1.0

Revision History

The following tables describe the history of this document.

Changes related to the document:

Object	Description	Document
---	---	---

Changes related to "Recipe and Workflow Configuration for Equipment Tracking" (page [3](#)):

Object	Description	Document
---	---	---

Changes related to "Identify Equipment Phase" (page [13](#)):

Object	Description	Document
Active Mode (SR0300.1.2) (page 15)	Update Instruction link panel added.	1.0
Completed Mode (SR0300.1.3) (page 16)	Update Instruction link panel added.	1.0
Instruction Text with Links (Framework Capability) (page 28)	New process parameter.	1.0
Instruction Link Definition (Framework Capability) (page 28)	New process parameter.	1.0

Changes related to "Change Equipment Status Phase" (page [49](#)):

Object	Description	Document
Active Mode (SR0310.1.2) (page 50)	Update Instruction link panel added.	1.0
Completed Mode (SR0310.1.3) (page 51)	Update Instruction link panel added.	1.0
Instruction Text with Links (Framework Capability) (page 55)	New process parameter.	1.0

Object	Description	Document
Instruction Link Definition (Framework Capability) (page 55)	New process parameter.	1.0

Changes related to "Trigger Graph Transition Phase" (page 63):

Object	Description	Document
Active Mode (SR0311.1.2) (page 65)	Update Instruction link panel added.	1.0
Completed Mode (SR0311.1.3) (page 66)	Update Instruction link panel added.	1.0
Instruction Text with Links (Framework Capability) (page 74)	New process parameter.	1.0
Instruction Link Definition (Framework Capability) (page 74)	New process parameter.	1.0

Changes related to "Separate Equipment Phase" (page 85):

Object	Description	Document
Active Mode (SR0312.1.2) (page 87)	Update Instruction link panel added.	1.0
Completed Mode (SR0312.1.3) (page 88)	Update Instruction link panel added.	1.0
Instruction Text with Links (Framework Capability) (page 94)	New process parameter.	1.0
Instruction Link Definition (Framework Capability) (page 94)	New process parameter.	1.0

Changes related to "Unbind Equipment Phase" (page 101):

Object	Description	Document
Active Mode (SR0320.1.2) (page 102)	Update Instruction link panel added.	1.0
Completed Mode (SR0320.1.3) (page 103)	Update Instruction link panel added.	1.0

-
- FT PharmaSuite® 10.01.00 - Functional Requirement Specification Equipment Tracking Phases
-
-

Object	Description	Document
Instruction Text with Links (Framework Capability) (page 107)	New process parameter.	1.0
Instruction Link Definition (Framework Capability) (page 107)	New process parameter.	1.0

Changes related to "Show Equipment List Phase" (page [115](#)):

Object	Description	Document
Active Mode (SR0305.1.2) (page 116)	Update Instruction link panel added.	1.0
Completed Mode (SR0305.1.3) (page 117)	Update Instruction link panel added.	1.0
Instruction Text with Links (Framework Capability) (page 120)	New process parameter.	1.0
Instruction Link Definition (Framework Capability) (page 120)	New process parameter.	1.0

Changes related to "Generate Template-based Equipment Phase" (page [125](#)):

Object	Description	Document
Active Mode (SR0306.1.2) (page 126)	Update Instruction link panel added.	1.0
Completed Mode (SR0306.1.3) (page 126)	Update Instruction link panel added.	1.0
Instruction Text with Links (Framework Capability) (page 131)	New process parameter.	1.0
Instruction Link Definition (Framework Capability) (page 131)	New process parameter.	1.0

B

Binding • 4

C

Change equipment status (SR0310+) • 49

 Action column • 51

 Active mode (SR0310.1.2) • 50

 Allowed change actions (SR0310.8.3) • 56

 Business logic (SR0310.2+) • 52

 Change Action Selection editor (SR0310.8.3) • 56

 Common sub-report elements (Framework capability) • 52

 Completed mode (SR0310.1.3) • 51

 Completion time (Framework capability) • 61

 Decisions • 60

 Determine available actions (SR0310.2.1) • 52

 Equipment data mismatch - Logic (SR0310.3.2.1.1) • 58

 Equipment data mismatch (SR0310.3.2.1) • 58

 Equipment data mismatch (SR0310.8.4) • 57

 Error messages (SR0310.3.6+) • 60

 Exceptions (SR0310.3+) • 58

 Force status - Logic (SR0310.3.1.1.1) • 59

 Force status (SR0310.3.1.1) • 59

 Force status (SR0310.8.5) • 57

 Identified equipment entity (SR0310.8.2) • 56

 Identifier (Framework capability) • 61

 Information column (SR0310.4.1) • 51

 Information messages • 60

 Instance count (Framework capability) • 61

 Instruction (SR0310.8.1) • 56

 Instruction link definition (Framework capability) • 55

 Instruction table definition (Framework capability) • 54

 Instruction table text (Framework capability) • 54

 Instruction text with links (Framework capability) • 55

 New status (SR0310.9.2) • 62

 No action selected (SR0310.3.6.1) • 60

 Output variables (SR0310.9+) • 61

 Perform status change (SR0310.2.2) • 53

 Phase column (Framework capability) • 51

 Post-completion exceptions • 60

 Preview mode (SR0310.1.1) • 50

 Process parameters (SR0310.8+) • 54

 Questions • 60

 Representation during execution (SR0310.1+) • 50

 Representation in Navigator (SR0310.4+) • 51

 Representation in sub-report (SR0310.5+) • 52

 Start time (Framework capability) • 61

 Status change failed (SR0310.3.6.2) • 60

 Status change result (SR0310.9.1) • 61

 Sub-report elements (SR0310.5.1) • 52

 System-triggered exceptions (SR0310.3.2+) • 58

 User-triggered exceptions (SR0310.3.1+) • 59

Compliance-related

 SR0300.2.3 - Identify equipment entity (Identify equipment) • 21

 SR0300.2.4 - Bind identified equipment entity (Identify equipment) • 23

 SR0300.2.5 - Refresh expired equipment status (Identify equipment) • 25

 SR0300.3+ - Exceptions (Identify equipment) • 34

 SR0305.3+ - Exceptions (Show equipment list) • 122

 SR0306.3+ - Exceptions (Generate template-based equipment) • 134

 SR0310.3+ - Exceptions (Change equipment status) • 58

 SR0311.2.3 - Determine available triggers (Trigger graph transition) • 70

 SR0311.2.4 - Trigger graph transition (Trigger graph transition) • 71

 SR0311.3+ - Exceptions (Trigger graph transition) • 77

 SR0312.2.1 - Separate a group (Separate equipment) • 90

 SR0312.3+ - Exceptions (Separate equipment) • 97

SR0320.2.1 - Unbind equipment entity (Unbind equipment) • 105

SR0320.3+ - Exceptions (Unbind equipment) • 109

Conventions (typographical) • 1

E

Entity for label reprint not defined (SR0306.3.6.7) • 138

Equipment entity group

Create • 6

Identify • 8

Identify again • 8

Separate • 9

Trigger graph transition • 9

F

Framework capability

Attribute selection editor (Identify equipment) • 30

Attribute selection editor (Show equipment list) • 121

Common sub-report elements (Change equipment status) • 52

Common sub-report elements (Generate template-based equipment) • 127

Common sub-report elements (Identify equipment) • 18

Common sub-report elements (Separate equipment) • 89

Common sub-report elements (Show equipment list) • 117

Common sub-report elements (Trigger graph transition) • 67

Common sub-report elements (Unbind equipment) • 104

Completion time (Change equipment status) • 61

Completion time (Generate template-based equipment) • 138

Completion time (Identify equipment) • 46

Completion time (Separate equipment) • 100

Completion time (Show equipment list) • 123

Completion time (Trigger graph transition) • 82

Completion time (Unbind equipment) • 113

Equipment class selection editor (Identify equipment) • 30

Identifier (Change equipment status) • 61

Identifier (Generate template-based equipment) • 138

Identifier (Identify equipment) • 46

Identifier (Separate equipment) • 100

Identifier (Show equipment list) • 123

Identifier (Trigger graph transition) • 82

Identifier (Unbind equipment) • 113

Instruction link definition (Identify equipment) • 28

Instance count (Change equipment status) • 61

Instance count (Generate template-based equipment) • 138

Instance count (Identify equipment) • 46

Instance count (Separate equipment) • 100

Instance count (Show equipment list) • 123

Instance count (Trigger graph transition) • 82

Instance count (Unbind equipment) • 113

Instruction link definition (Change equipment status) • 55

Instruction link definition (Generate template-based equipment phase) • 131

Instruction link definition (Separate equipment) • 94

Instruction link definition (Show equipment list) • 120

Instruction link definition (Trigger graph transition) • 74

Instruction link definition (Unbind equipment) • 107

Instruction table definition (Change equipment status) • 54

Instruction table definition (Generate template-based equipment) • 130

Instruction table definition (Identify equipment) • 27

Instruction table definition (Separate equipment) • 93

Instruction table definition (Show equipment list) • 119

Instruction table definition (Trigger graph transition) • 73

Instruction table definition (Unbind equipment) • 106

Instruction table text (Change equipment status) • 54

Instruction table text (Generate template-based equipment) • 130

Instruction table text (Identify equipment) • 27

Instruction table text (Separate equipment) • 94

Instruction table text (Show equipment list) • 119

Instruction table text (Trigger graph transition) • 73

Instruction table text (Unbind equipment) • 106

Instruction text with links (Change equipment status) • 55

Instruction text with links (Generate template-based equipment phase) • 131

Instruction text with links (Identify equipment) • 28

Instruction text with links (Separate equipment) • 94

Instruction text with links (Show equipment list) • 120

Instruction text with links (Trigger graph transition) • 74

Instruction text with links (Unbind equipment) • 107

Phase column (Change equipment status) • 51

Phase column (Generate template-based equipment) • 127

Phase column (Identify equipment) • 17

Phase column (Separate equipment) • 88

Phase column (Show equipment list) • 117

Phase column (Trigger graph transition) • 67

Phase column (Unbind equipment) • 103

Start time (Change equipment status) • 61

Start time (Generate template-based equipment) • 138

Start time (Identify equipment) • 46

Start time (Separate equipment) • 100

Start time (Show equipment list) • 123

Start time (Trigger graph transition) • 82

Start time (Unbind equipment) • 113

Template equipment entity selection editor (Generate template-based equipment) • 132

Trigger selection editor (Trigger graph transition) • 76

G

Generate template-based equipment phase (SR0306+) • 125

Action column (SR0306.4.2) • 127

Activate phase (SR0306.2.1) • 128

Active mode (SR0306.1.2) • 126

Business logic (SR0306.2+) • 128

Common sub-report elements (Framework capability) • 127

Completed mode (SR0306.1.3) • 126

Completion time (Framework capability) • 138

Confirm phase (SR0306.2.2) • 129

Decisions • 136

Entity for label reprint not defined (SR0306.3.6.7) • 138

Equipment ID (SR0306.9.2) • 139

Equipment object (SR0306.9.1) • 138

Error messages (SR0306.3.6+) • 136

Exceptions (SR0306.3+) • 134

Identifier (Framework capability) • 138

Information column (SR0306.4.1) • 127

Information Messages • 136

Inherit status from template (SR0306.8.5) • 132

Instance count (Framework capability) • 138

Instruction (SR0306.8.1) • 131

Instruction link definition (Framework capability) • 131

Instruction table definition (Framework capability) • 130

Instruction table text (Framework capability) • 130

Instruction text with links (Framework capability) • 131

Invalid number of entities to generate (SR0306.3.6.1) • 137

Mode (SR0306.8.2) • 132

Not allowed template entity status (SR0306.3.6.2) • 137

Not defined template entity (SR0306.3.6.4) • 137

Not existing template entity (SR0306.3.6.3) • 137

Number of entities (SR0306.8.4) • 132

Number of entities to generate not defined (SR0306.3.6.6) • 137

Number of generated entities (SR0306.9.3) • 139

Output variables (SR0306.9+) • 138

Phase column (Framework capability) • 127

Post-completion exceptions (SR0306.3.3+) • 135

Preview mode (SR0306.1.1) • 126

Process parameters (SR0306.8+) • 130

Questions • 136

Representation during execution (SR0306.1+) • 126

Representation in Navigator (SR0306.4+) • 127

Representation in sub-report (SR0306.5+) • 127

Reprint entity label - Logic (SR0306.3.3.1) • 135

Reprint entity label (SR0306.3.3.1) • 135

Reprint entity label (SR0306.8.7) • 133

Start time (Framework capability) • 138

Sub-report elements (SR0306.5.1) • 128

System-triggered exceptions (SR0306.3.2+) • 134	Expired trigger execution failed (SR0300.3.6.9) • 44
Template entity (SR0306.8.3) • 132	Group cycle error (SR0300.3.6.12) • 45
Template entity status check - Logic (SR0306.3.2.1.1) • 134	Identification mode (SR0300.8.8) • 30
Template entity status check (SR0306.3.2.1) • 134	Identifier (Framework capability) • 46
Template entity status check (SR0306.8.6) • 133	Identify and bind equipment entity (SR0300.2.1) • 19
User-triggered Exceptions • 135	Identify equipment entity (SR0300.2.3) • 21
Wrong entity for reprint (SR0306.3.6.5) • 137	Identify in current binding context (SR0300.8.7) • 29
Grouping • 5	Information column (SR0300.4.1) • 17
	Information messages • 41
	Instance count (Framework capability) • 46
	Instruction (SR0300.8.1) • 28
	Instruction link definition (Framework capability) • 28
	Instruction table definition (Framework capability) • 27
	Instruction table text (Framework capability) • 27
	Instruction text with links (Framework capability) • 28
	Mode (SR0300.8.10) • 29
	Multiple failed checks (SR0300.3.2.3) • 38
	Not a child entity of bound group (SR0300.3.6.13) • 45
	Not available for usage (SR0300.3.6.4) • 42
	Not member of required class (SR0300.3.6.3) • 42
	Nothing identified (SR0300.3.6.5) • 43
	Output variables (SR0300.9+) • 46
	Parent entity not bound (SR0300.3.6.14) • 45
	Parent entity of group (SR0300.8.6) • 29
	Phase column (Framework capability) • 17
	Post-completion exceptions • 41
	Preview mode (SR0300.1.1) • 15
	Process inputs (SR0300.6+) • 26
	Process parameters (SR0300.8+) • 27
	Property value check - Logic (SR0300.3.2.1.1) • 34
	Property value check (SR0300.3.2.1) • 34
	Property value check (SR0300.8.2) • 31
	Questions • 41
	Refresh expired equipment status (SR0300.2.5) • 25
	Representation during execution (SR0300.1+) • 15
	Representation in Navigator (SR0300.4+) • 17
	Representation in sub-report (SR0300.5+) • 18
	Result (SR0300.9.4) • 47
	Scan equipment entity barcode (SR0300.2.2) • 20
	Show children (SR0300.8.9) • 30
	Skip identification - Logic (SR0300.3.1.3.1) • 40
Identify equipment (SR0300+) • 13	
Action column • 18	
Active mode (SR0300.1.2) • 15	
Already identified (SR0300.3.6.2) • 42	
Attribute selection editor (Framework capability) • 30	
Bind identified equipment entity (SR0300.2.4) • 23	
Business logic (SR0300.2+) • 19	
Cannot find entity (SR0300.3.6.1) • 41	
Common sub-report elements (Framework capability) • 18	
Completed mode (SR0300.1.3) • 16	
Completion time (Framework capability) • 46	
Decisions • 41	
Enter identifier manually - Logic (SR0300.3.1.1.1) • 38	
Enter identifier manually (SR0300.3.1.1) • 38	
Enter identifier manually (SR0300.8.3) • 32	
Entity is not part of a group (SR0300.3.6.11) • 45	
Entity is part of a group (SR0300.3.6.10) • 44	
Equipment class selection editor (Framework capability) • 30	
Equipment ID (SR0300.9.2) • 47	
Equipment object (SR0300.9.1) • 46	
Equipment parameters (SR0300.6.1) • 26	
Equipment property list (SR0300.8.12) • 30	
Equipment short description (SR0300.9.3) • 47	
Equipment status check - Logic (SR0300.3.2.2.1) • 36	
Equipment status check (SR0300.3.2.2) • 36	
Equipment status check (SR0300.8.5) • 31	
Error messages (SR0300.3.6+) • 41	
Exceptions (SR0300.3+) • 34	

Skip identification (SR0300.3.1.3) • 40
 Skip identification (SR0300.8.11) • 33
 Start time (Framework capability) • 46
 Sub-report elements (SR0300.5.1) • 18
 System-triggered exceptions (SR0300.3.2+) • 34
 Table of property data (SR0300.1.4) • 17
 Undo identification - Logic (SR0300.3.1.2.1) • 39
 Undo identification (SR0300.3.1.2) • 39
 Undo identification (SR0300.8.4) • 33
 User-triggered exceptions (SR0300.3.1+) • 38
 Identifying again • 8

P

Phase • 3

S

Separate equipment (SR0312+) • 85
 Action column • 89
 Active mode (SR0312.1.2) • 87
 Business logic (SR0312.2+) • 90
 Child entity to be separated (SR0312.8.5) • 95
 Common sub-report elements (Framework capability) • 89
 Completed mode (SR0312.1.3) • 88
 Completion time (Framework capability) • 100
 Equipment separation failed (SR0312.3.6.4) • 99
 Equipment unbinding failed (SR0312.3.6.5) • 100
 Error messages (SR0312.3.6+) • 99
 Exceptions (SR0312.3+) • 97
 Identifier (Framework capability) • 100
 Information column (SR0312.4.1) • 89
 Information messages • 98
 Instance count (Framework capability) • 100
 Instruction (SR0312.8.1) • 95
 Instruction link definition (Framework capability) • 94
 Instruction table definition (Framework capability) • 93
 Instruction table text (Framework capability) • 94
 Instruction text with links (Framework capability) • 94
 Keep binding (SR0312.8.10) • 96
 Keep sub-group (SR0312.8.9) • 96
 Mode (SR0312.8.3) • 96

Not main parent (SR0312.3.6.2) • 99
 Not part of group (SR0312.3.6.1) • 99
 Output variables • 100
 Parent entity of group (SR0312.8.2) • 95
 Parent entity of group not defined (SR0312.3.6.3) • 99
 Phase column (Framework capability) • 88
 Post-completion exceptions • 98
 Preview mode (SR0312.1.1) • 86
 Process parameters (SR0312.8+) • 93
 Questions • 98
 Representation during execution (SR0312.1+) • 86
 Representation in Navigator (SR0312.4+) • 88
 Representation in sub-report (SR0312.5+) • 89
 Separate a group (SR0312.2.1) • 90
 Separate equipment (SR0312+) _Decisions • 99
 Show children (SR0312.8.4) • 96
 Skip separation - Logic (SR0312.3.1.1.1) • 97
 Skip separation (SR0312.3.1.1) • 97
 Skip separation (SR0312.8.8) • 97
 Start time (Framework capability) • 100
 Sub-report elements (SR0312.5.1) • 89
 System-triggered exceptions • 97
 User-triggered exceptions (SR0312.3.1+) • 97
 Show equipment list (SR0305+) • 115
 Action column • 117
 Active mode (SR0305.1.2) • 116
 Attribute selection editor (Framework capability) • 121
 Business logic (SR0305.2+) • 118
 Column definition (SR0305.8.3) • 121
 Common sub-report elements (Framework capability) • 117
 Completed mode (SR0305.1.3) • 117
 Completion time (Framework capability) • 123
 Decisions • 122
 Equipment parameters (SR0305.6.1) • 26
 Error messages • 122
 Exceptions (SR0305.3+) • 122
 Identifier (Framework capability) • 123
 Information column (SR0305.4.1) • 117
 Information messages • 122
 Instance count (Framework capability) • 123

Instruction (SR0305.8.1) • 121	SR0300.3.1.1 - Enter identifier manually (Identify equipment) • 38
Instruction link definition (Framework capability) • 120	SR0300.3.1.1.1 - Enter identifier manually - Logic (Identify equipment) • 38
Instruction table definition (Framework capability) • 119	SR0300.3.1.2 - Undo identification (Identify equipment) • 39
Instruction table text (Framework capability) • 119	SR0300.3.1.2.1 - Undo identification - Logic (Identify equipment) • 39
Instruction text with links (Framework capability) • 120	SR0300.3.1.3 - Skip identification (Identify equipment) • 40
Maximum number of rows (SR0305.8.2) • 121	SR0300.3.1.3.1 - Skip identification - Logic (Identify equipment) • 40
Output variables (SR0305.9+) • 123	SR0300.3.1+ - User-triggered exceptions (Identify equipment) • 38
Phase column (Framework capability) • 117	SR0300.3.2.1 - Property value check (Identify equipment) • 34
Post-completion exceptions • 122	SR0300.3.2.1.1 - Property value check - Logic (Identify equipment) • 34
Preview mode (SR0305.1.1) • 116	SR0300.3.2.2 - Equipment status check (Identify equipment) • 36
Process inputs (SR0305.6+) • 118	SR0300.3.2.2.1 - Equipment status check - Logic (Identify equipment) • 36
Process parameters (SR0305.8+) • 119	SR0300.3.2.3 - Multiple failed checks (Identify equipment) • 38
Questions • 122	SR0300.3.2+ - System-triggered exceptions (Identify equipment) • 34
Representation during execution (SR0305.1+) • 116	SR0300.3.6.1 - Cannot find entity (Identify equipment) • 41
Representation in Navigator (SR0305.4+) • 117	SR0300.3.6.10 - Entity is part of a group (Identify equipment) • 44
Representation in sub-report (SR0305.5+) • 117	SR0300.3.6.11 - Entity is not part of a group (Identify equipment) • 45
Show properties (SR0305.2.1) • 118	SR0300.3.6.12 - Group cycle error (Identify equipment) • 45
Start time (Framework capability) • 123	SR0300.3.6.13 - Not a child entity of bound group (Identify equipment) • 45
Sub-report elements (SR0305.5.1) • 117	SR0300.3.6.14 - Parent entity not bound (Identify equipment) • 45
System-triggered exceptions • 122	SR0300.3.6.2 - Already identified (Identify equipment) • 42
User-triggered exceptions • 122	
SR0300.1.1 - Preview mode (Identify equipment) • 15	
SR0300.1.2 - Active mode (Identify equipment) • 15	
SR0300.1.3 - Completed mode (Identify equipment) • 16	
SR0300.1.4 - Table of property data (Identify equipment) • 17	
SR0300.1+ - Representation during execution (Identify equipment) • 15	
SR0300.2.1 - Identify and bind equipment entity (Identify equipment) • 19	
SR0300.2.2 - Scan equipment entity barcode (Identify equipment) • 20	
SR0300.2.3 - Identify equipment entity (Identify equipment) • 21	
SR0300.2.4 - Bind identified equipment entity (Identify equipment) • 23	
SR0300.2.5 - Refresh expired equipment status (Identify equipment) • 25	
SR0300.2+ - Business logic (Identify equipment) • 19	

- SR0300.3.6.3 - Not member of required class (Identify equipment) • 42
- SR0300.3.6.4 - Not available for usage (Identify equipment) • 42
- SR0300.3.6.5 - Nothing identified (Identify equipment) • 43
- SR0300.3.6.9 - Expired trigger execution failed (Identify equipment) • 44
- SR0300.3.6+ - Error messages (Identify equipment) • 41
- SR0300.3+ - Exceptions (Identify equipment) • 34
- SR0300.4.1 - Information column (Identify equipment) • 17
- SR0300.4+ - Representation in Navigator (Identify equipment) • 17
- SR0300.5.1 - Sub-report elements (Identify equipment) • 18
- SR0300.5+ - Representation in sub-report (Identify equipment) • 18
- SR0300.6.1 - Equipment parameters (Identify equipment) • 26
- SR0300.6+ - Process inputs (Identify equipment) • 26
- SR0300.8.1 - Instruction (Identify equipment) • 28
- SR0300.8.10 - Mode (Identify equipment) • 29
- SR0300.8.11 - Skip identification (Identify equipment) • 33
- SR0300.8.12 - Equipment property list • 30
- SR0300.8.2 - Property value check (Identify equipment) • 31
- SR0300.8.3 - Enter identifier manually (Identify equipment) • 32
- SR0300.8.4 - Undo identification (Identify equipment) • 33
- SR0300.8.5 - Equipment status check (Identify equipment) • 31
- SR0300.8.6 - Parent entity of group (Identify equipment) • 29
- SR0300.8.7 - Identify in current binding context (Identify equipment) • 29
- SR0300.8.8 - Identification mode (Identify equipment) • 30
- SR0300.8.9 - Show children (Identify equipment) • 30
- SR0300.8+ - Process parameters (Identify equipment) • 27
- SR0300.9.1 - Equipment object (Identify equipment) • 46
- SR0300.9.2 - Equipment ID (Identify equipment) • 47
- SR0300.9.3 - Equipment short description (Identify equipment) • 47
- SR0300.9.4 - Result (Identify equipment) • 47
- SR0300.9+ - Output variables (Identify equipment) • 46
- SR0300+ - Identify equipment • 13
- SR0305.1.1 - Preview mode (Show equipment list) • 116
- SR0305.1.2 - Active mode (Show equipment list) • 116
- SR0305.1.3 - Completed mode (Show equipment list) • 117
- SR0305.1+ - Representation during execution (Show equipment list) • 116
- SR0305.2.1 - Show Properties (Show equipment list) • 118
- SR0305.2+ - Business logic (Show equipment list) • 118
- SR0305.3+ - Exceptions (Show equipment list) • 122
- SR0305.4.1 - Information column (Show equipment list) • 117
- SR0305.4+ - Representation in Navigator (Show equipment list) • 117
- SR0305.5.1 - Sub-report elements (Show equipment list) • 117
- SR0305.5+ - Representation in sub-report (Show equipment list) • 117
- SR0305.6.1 - Equipment parameters (Show equipment list) • 118
- SR0305.6+ - Process inputs (Show equipment list) • 118
- SR0305.8.1 - Instruction (Show equipment list) • 121
- SR0305.8.2 - Maximum number of rows (Show equipment list) • 121
- SR0305.8.3 - Column definition (Show equipment list) • 121
- SR0305.8+ - Process parameters (Show equipment list) • 119
- SR0305.9+ - Output variables (Show equipment list) • 123
- SR0305+ - Show equipment list • 115
- SR0306.1.1 - Preview mode (Generate template-based equipment) • 126
- SR0306.1.2 - Active mode (Generate template-based equipment) • 126
- SR0306.1.3 - Completed mode (Generate template-based equipment) • 126

SR0306.1+ - Representation during execution (Generate template-based equipment) • 126	SR0306.4+ - Representation in Navigator (Generate template-based equipment) • 127
SR0306.2.1 - Activate phase (Generate template-based equipment) • 128	SR0306.5.1 - Sub-report elements (Generate template-based equipment) • 128
SR0306.2.2 - Confirm phase (Generate template-based equipment) • 129	SR0306.5+ - Representation in sub-report (Generate template-based equipment) • 127
SR0306.2+ - Business logic (Generate template-based equipment) • 128	SR0306.8.1 - Instruction (Generate template-based equipment) • 131
SR0306.3.2.1 - Template entity status check (Generate template-based equipment) • 134	SR0306.8.2 - Mode (Generate template-based equipment) • 132
SR0306.3.2.1.1 - Template entity status check - Logic (Generate template-based equipment) • 134	SR0306.8.3 - Template entity (Generate template-based equipment) • 132
SR0306.3.2+ - System-triggered exceptions (Generate template-based equipment) • 134	SR0306.8.4 - Number of entities (Generate template-based equipment) • 132
SR0306.3.3.1 - Reprint entity label - Logic (Generate template-based equipment) • 135	SR0306.8.5 - Inherit status from template (Generate template-based equipment) • 132
SR0306.3.3.1 - Reprint entity label (Generate template-based equipment) • 135	SR0306.8.6 - Template entity status check (Generate template-based equipment) • 133
SR0306.3.3+ - Post-completion exceptions (Generate template-based equipment) • 135	SR0306.8.7 - Reprint entity label (Generate template-based equipment) • 133
SR0306.3.6.1 - Invalid number of entities to generate (Generate template-based equipment) • 137	SR0306.8+ - Process parameters (Generate template-based equipment) • 130
SR0306.3.6.2 - Not allowed template entity status (Generate template-based equipment) • 137	SR0306.9.1 - Equipment object (Generate template-based equipment) • 138
SR0306.3.6.3 - Not existing template entity (Generate template-based equipment) • 137	SR0306.9.2 - Equipment ID (Generate template-based equipment) • 139
SR0306.3.6.4 - Not defined template entity (Generate template-based equipment) • 137	SR0306.9.3 - Number of generated entities (Generate template-based equipment) • 139
SR0306.3.6.5 - Wrong entity for reprint (Generate template-based equipment) • 137	SR0306.9+ - Output variables (Generate template-based equipment) • 138
SR0306.3.6.6 - Number of entities to generate not defined (Generate template-based equipment) • 137	SR0306+ - Generate template-based equipment phase • 125
SR0306.3.6+ - Error messages (Generate template-based equipment) • 136	SR0310.1.1 - Preview mode (Change equipment status) • 50
SR0306.3+ - Exceptions (Generate template-based equipment) • 134	SR0310.1.2 - Active mode (Change equipment status) • 50
SR0306.4.1 - Information column (Generate template-based equipment) • 127	SR0310.1.3 - Completed mode (Change equipment status) • 51
SR0306.4.2 - Action column (Generate template-based equipment) • 127	SR0310.1+ - Representation during execution (Change equipment status) • 50
	SR0310.2.1 - Determine available actions (Change equipment status) • 52

- SR0310.2.2 - Perform status change (Change equipment status) • 53
- SR0310.2+ - Business logic (Change equipment status) • 52
- SR0310.3.1.1 - Force status (Change equipment status) • 59
- SR0310.3.1.1.1 - Force status - Logic (Change equipment status) • 59
- SR0310.3.1+ - User-triggered exceptions (Change equipment status) • 59
- SR0310.3.2.1 - Equipment data mismatch (Change equipment status) • 58
- SR0310.3.2.1.1 - Equipment data mismatch - Logic (Change equipment status) • 58
- SR0310.3.2+ - System-triggered exceptions (Change equipment status) • 58
- SR0310.3.6.1 - No action selected (Change equipment status) • 60
- SR0310.3.6.2 - Change action failed (Change equipment status) • 60
- SR0310.3.6+ - Error messages (Change equipment status) • 60
- SR0310.3+ - Exceptions (Change equipment status) • 58
- SR0310.4.1 - Information column (Change equipment status) • 51
- SR0310.4+ - Representation in Navigator (Change equipment status) • 51
- SR0310.5.1 - Sub-report elements (Change equipment status) • 52
- SR0310.5+ - Representation in sub-report (Change equipment status) • 52
- SR0310.8.1 - Instruction (Change equipment status) • 56
- SR0310.8.2 - Identified equipment entity (Change equipment status) • 56
- SR0310.8.3 - Allowed change actions (Change equipment status) • 56
- SR0310.8.3.1 - Change Action Selection editor (Change equipment status) • 56
- SR0310.8.4 - Equipment data mismatch (Change equipment status) • 57
- SR0310.8.5 - Force status (Change equipment status) • 57
- SR0310.8+ - Process parameters (Change equipment status) • 54
- SR0310.9.1 - Status change result (Change equipment status) • 61
- SR0310.9.2 - New status (Change equipment status) • 62
- SR0310.9+ - Output variables (Change equipment status) • 61
- SR0310+ - Change equipment status • 49
- SR0311.1.1 - Preview mode (Trigger graph transition) • 64
- SR0311.1.2 - Active mode (Trigger graph transition) • 65
- SR0311.1.3 - Completed mode (Trigger graph transition) • 66
- SR0311.1+ - Representation during execution (Trigger graph transition) • 64
- SR0311.2.1 - Manual completion mode (Trigger graph transition) • 68
- SR0311.2.2 - Automatic completion mode (Trigger graph transition) • 69
- SR0311.2.3 - Determine available triggers (Trigger graph transition) • 70
- SR0311.2.4 - Trigger graph transition (Trigger graph transition) • 71
- SR0311.2+ - Business logic (Trigger graph transition) • 68
- SR0311.3.2.1 - Equipment data mismatch (Trigger graph transition) • 78
- SR0311.3.2.1.1 - Equipment data mismatch - Logic (Trigger graph transition) • 78
- SR0311.3.2.2 - Status transition failed (Trigger graph transition) • 79
- SR0311.3.2.2.1 - Status transition failed - Logic (Trigger graph transition) • 79
- SR0311.3.2+ - System-triggered exceptions (Trigger graph transition) • 77
- SR0311.3.6.1 - No trigger selected (Trigger graph transition) • 81
- SR0311.3.6.2 - Entity not available (Trigger graph transition) • 81
- SR0311.3.6.3 - Graph with purpose not assigned to entity (Trigger graph transition) • 81
- SR0311.3.6.4 - No trigger available (Trigger graph transition) • 82

SR0311.3.6.6 - Entity not main parent (Trigger graph transition) • 81	SR0312.2.1 - Separate a group (Separate equipment) • 90
SR0311.3.6+ - Error messages (Trigger graph transition) • 81	SR0312.2+ - Business logic (Separate equipment) • 90
SR0311.3+ - Exceptions (Trigger graph transition) • 77	SR0312.3.1.1 - Skip separation (Separate equipment) • 97
SR0311.4.1 - Information column (Trigger graph transition) • 67	SR0312.3.1.1.1 - Skip separation - Logic (Separate equipment) • 97
SR0311.4+ - Representation in Navigator (Trigger graph transition) • 67	SR0312.3.1+ - User-triggered exceptions (Separate equipment) • 97
SR0311.5.1 - Sub-report elements (Trigger graph transition) • 68	SR0312.3.6.1 - Not part of group (Separate equipment) • 99
SR0311.5+ - Representation in sub-report (Trigger graph transition) • 67	SR0312.3.6.2 - Not main parent (Separate equipment) • 99
SR0311.8.1 - Instruction (Trigger graph transition) • 74	SR0312.3.6.3 - Parent entity of group not defined (Separate equipment) • 99
SR0311.8.2 - Mode (Trigger graph transition) • 75	SR0312.3.6.4 - Equipment separation failed (Separate equipment) • 99
SR0311.8.3 - Identified equipment entity (Trigger graph transition) • 75	SR0312.3.6.5 - Equipment unbinding failed (Separate equipment) • 100
SR0311.8.4 - Allowed triggers (Trigger graph transition) • 76	SR0312.3.6+ - Error messages (Separate equipment) • 99
SR0311.8.5 - Equipment data mismatch (Trigger graph transition) • 76	SR0312.3+ - Exceptions (Separate equipment) • 97
SR0311.8.6 - Status transition failed (Trigger graph transition) • 77	SR0312.4.1 - Information column (Separate equipment) • 89
SR0311.8.7 - Show children (Trigger graph transition) • 75	SR0312.4+ - Representation in Navigator (Separate equipment) • 88
SR0311.8+ - Process parameters (Trigger graph transition) • 73	SR0312.5.1 - Sub-report elements (Separate equipment) • 89
SR0311.9.1 - Trigger execution successful (Trigger graph transition) • 83	SR0312.5+ - Representation in sub-report (Separate equipment) • 89
SR0311.9.2 - Graph (Identify equipment) • 83	SR0312.8.1 - Instruction (Separate equipment) • 95
SR0311.9.3 - Selected trigger (Trigger graph transition) • 83	SR0312.8.10 - Keep binding (Separate equipment) • 96
SR0311.9.4 - Old status (Trigger graph transition) • 83	SR0312.8.2 - Parent entity of group (Separate equipment) • 95
SR0311.9.5 - New status (Trigger graph transition) • 83	SR0312.8.3 - Mode (Separate equipment) • 96
SR0311.9+ - Output variables (Trigger graph transition) • 82	SR0312.8.4 - Show children (Separate equipment) • 96
SR0311+ - Trigger graph transition • 63	SR0312.8.5 - Child entity to be separated (Separate equipment) • 95
SR0312.1.1 - Preview mode (Separate equipment) • 86	SR0312.8.8 - Skip separation (Separate equipment) • 97
SR0312.1.2 - Active mode (Separate equipment) • 87	SR0312.8.9 - Keep sub-group (Separate equipment) • 96
SR0312.1.3 - Completed mode (Separate equipment) • 88	SR0312.8+ - Process parameters (Separate equipment) • 93
SR0312.1+ - Representation during execution (Separate equipment) • 86	SR0312+ - Separate equipment • 85
	SR0320.1.1 - Preview mode (Unbind equipment) • 102
	SR0320.1.2 - Active mode (Unbind equipment) • 102
	SR0320.1.3 - Completed mode (Unbind equipment) • 103

SR0320.1+ - Representation during execution (Unbind equipment) • 102

SR0320.2.1 - Unbind equipment entity (Unbind equipment) • 105

SR0320.2+ - Business logic (Unbind equipment) • 105

SR0320.3.2.1 - Equipment data mismatch (Unbind equipment) • 110

SR0320.3.2.1.1 - Equipment data mismatch - Logic (Unbind equipment) • 110

SR0320.3.2.2 - Equipment unbind failed (Unbind equipment) • 110

SR0320.3.2.2.1 - Equipment unbind failed - Logic (Unbind equipment) • 110

SR0320.3.2+ - System-triggered exceptions (Unbind equipment) • 109

SR0320.3+ - Exceptions (Unbind equipment) • 109

SR0320.4.1 - Information column (Unbind equipment) • 104

SR0320.4+ - Representation in Navigator (Unbind equipment) • 103

SR0320.5.1 - Sub-report elements (Unbind equipment) • 104

SR0320.5+ - Representation in sub-report (Unbind equipment) • 104

SR0320.8.1 - Instruction (Unbind equipment) • 107

SR0320.8.2 - Identified equipment entity (Unbind equipment) • 108

SR0320.8.3 - Mode (Unbind equipment) • 108

SR0320.8.4 - Equipment data mismatch (Unbind equipment) • 108

SR0320.8.5 - Equipment unbind failed (Unbind equipment) • 109

SR0320.8.6 - Show children (Unbind equipment) • 108

SR0320.8+ - Process parameters (Unbind equipment) • 106

SR0320+ - Unbind equipment • 101

T

Trigger graph transition (SR0311+) • 63

 Action column • 67

 Active mode (SR0311.1.2) • 65

 Allowed triggers (SR0311.8.4) • 76

Automatic completion mode (SR0311.2.2) • 69

Business logic (SR0311.2+) • 68

Common sub-report elements (Framework capability) • 67

Completed mode (SR0311.1.3) • 66

Completion time (Framework capability) • 82

Decisions • 81

Determine available triggers (SR0311.2.3) • 70

Entity not available (SR0311.3.6.2) • 81

Entity not main parent (SR0311.3.6.6) • 81

Equipment data mismatch - Logic (SR0311.3.2.1.1) • 78

Equipment data mismatch (SR0311.3.2.1) • 78

Equipment data mismatch (SR0311.8.5) • 76

Error messages (SR0311.3.6+) • 81

Exceptions (SR0311.3+) • 77

Graph (SR0311.9.2) • 83

Graph with purpose not assigned to entity (SR0311.3.6.3) • 81

Identified equipment entity (SR0311.8.3) • 75

Identifier (Framework capability) • 82

Information column (SR0311.4.1) • 67

Information messages • 80

Instance count (Framework capability) • 82

Instruction (SR0311.8.1) • 74

Instruction link definition (Framework capability) • 74

Instruction table definition (Framework capability) • 73

Instruction table text (Framework capability) • 73

Instruction text with links (Framework capability) • 74

Manual completion mode (SR0311.2.1) • 68

Mode (SR0311.8.2) • 75

New status (SR0311.9.5) • 83

No trigger available (SR0311.3.6.4) • 82

No trigger selected (SR0311.3.6.1) • 81

Old status (SR0311.9.4) • 83

Output variables (SR0311.9+) • 82

Phase column (Framework capability) • 67

Post-completion exceptions • 80

Preview mode (SR0311.1.1) • 64

Process parameters (SR0311.8+) • 73

Questions • 81

Representation during execution (SR0311.1+) • 64
Representation in Navigator (SR0311.4+) • 67
Representation in sub-report (SR0311.5+) • 67
Selected trigger (SR0311.9.3) • 83
Show children (SR0311.8.7) • 75
Start time (Framework capability) • 82
Status transition failed - Logic (SR0311.3.2.2.1) • 79
Status transition failed (SR0311.3.2.2) • 79
Status transition failed (SR0311.8.6) • 77
Sub-report elements (SR0311.5.1) • 68
System-triggered exceptions (SR0311.3.2+) • 77
Trigger execution successful (SR0311.9.1) • 83
Trigger graph transition (SR0311.2.4) • 71
Trigger selection editor (Framework capability) • 76
User-triggered exceptions • 80

U

Unbind equipment (SR0320+) • 101
Action column • 104
Active mode (SR0320.1.2) • 102
Business logic (SR0320.2+) • 105
Common sub-report elements (Framework capability) • 104
Completed mode (SR0320.1.3) • 103
Completion time (Framework capability) • 113
Decisions • 112
Equipment data mismatch - Logic (SR0320.3.2.1.1) • 110
Equipment data mismatch (SR0320.3.2.1) • 110
Equipment data mismatch (SR0320.8.4) • 108
Equipment unbind failed - Logic (SR0320.3.2.2.1) • 110
Equipment unbind failed (SR0320.3.2.2) • 110
Equipment unbind failed (SR0320.8.5) • 109
Error messages • 112
Exceptions (SR0320.3+) • 109
Identified equipment entity (SR0320.8.2) • 108
Identifier (Framework capability) • 113
Information column (SR0320.4.1) • 104
Information messages • 112
Instance count (Framework capability) • 113

Instruction (SR0320.8.1) • 107
Instruction link definition (Framework capability) • 107
Instruction table definition (Framework capability) • 106
Instruction table text (Framework capability) • 106
Instruction text with links (Framework capability) • 107
Mode (SR0320.8.3) • 108
Output variables • 113
Phase column (Framework capability) • 103
Post-completion exceptions • 112
Preview mode (SR0320.1.1) • 102
Process parameters (SR0320.8+) • 106
Questions • 112
Representation during execution (SR0320.1+) • 102
Representation in Navigator (SR0320.4+) • 103
Representation in sub-report (SR0320.5+) • 104
Show children (SR0320.8.6) • 108
Start time (Framework capability) • 113
Sub-report elements (SR0320.5.1) • 104
System-triggered exceptions (SR0320.3.2+) • 109
Unbind equipment entity (SR0320.2.1) • 105
User-triggered exceptions • 112