


Pocket DAQ manual (2014.7.15) rev.11619


Satoru Yamada

Connection between components

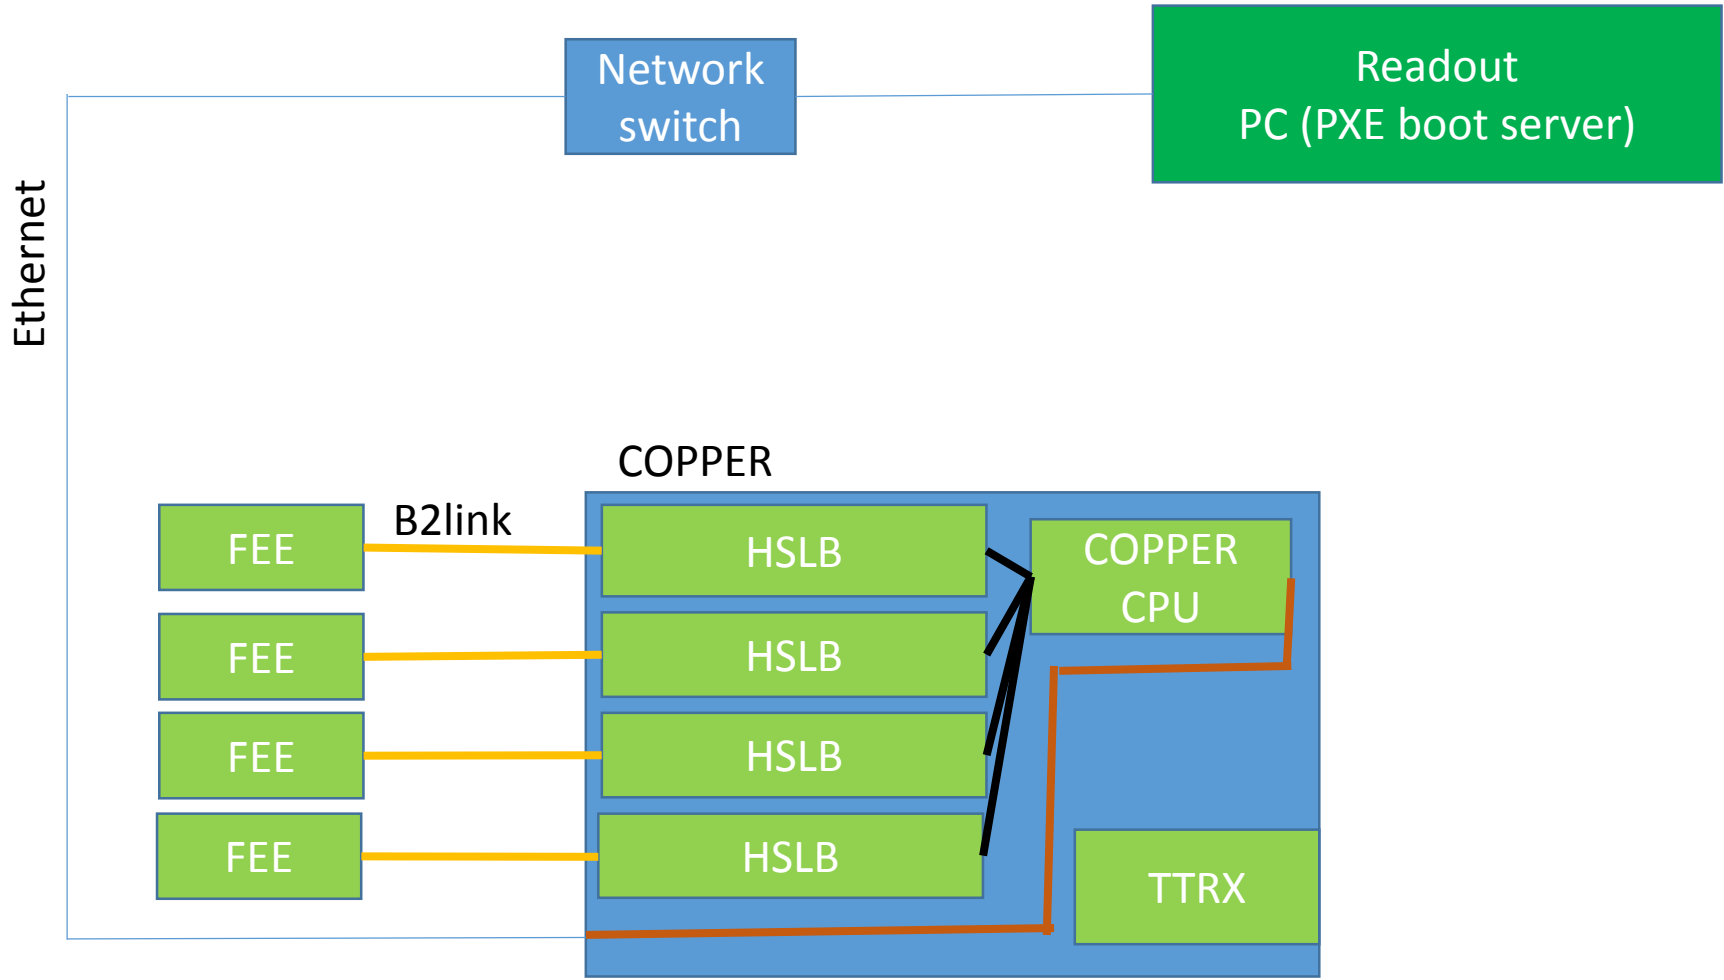

Software components

These are stored under <https://belle2.cc.kek.jp/svn/trunk/software/daq>

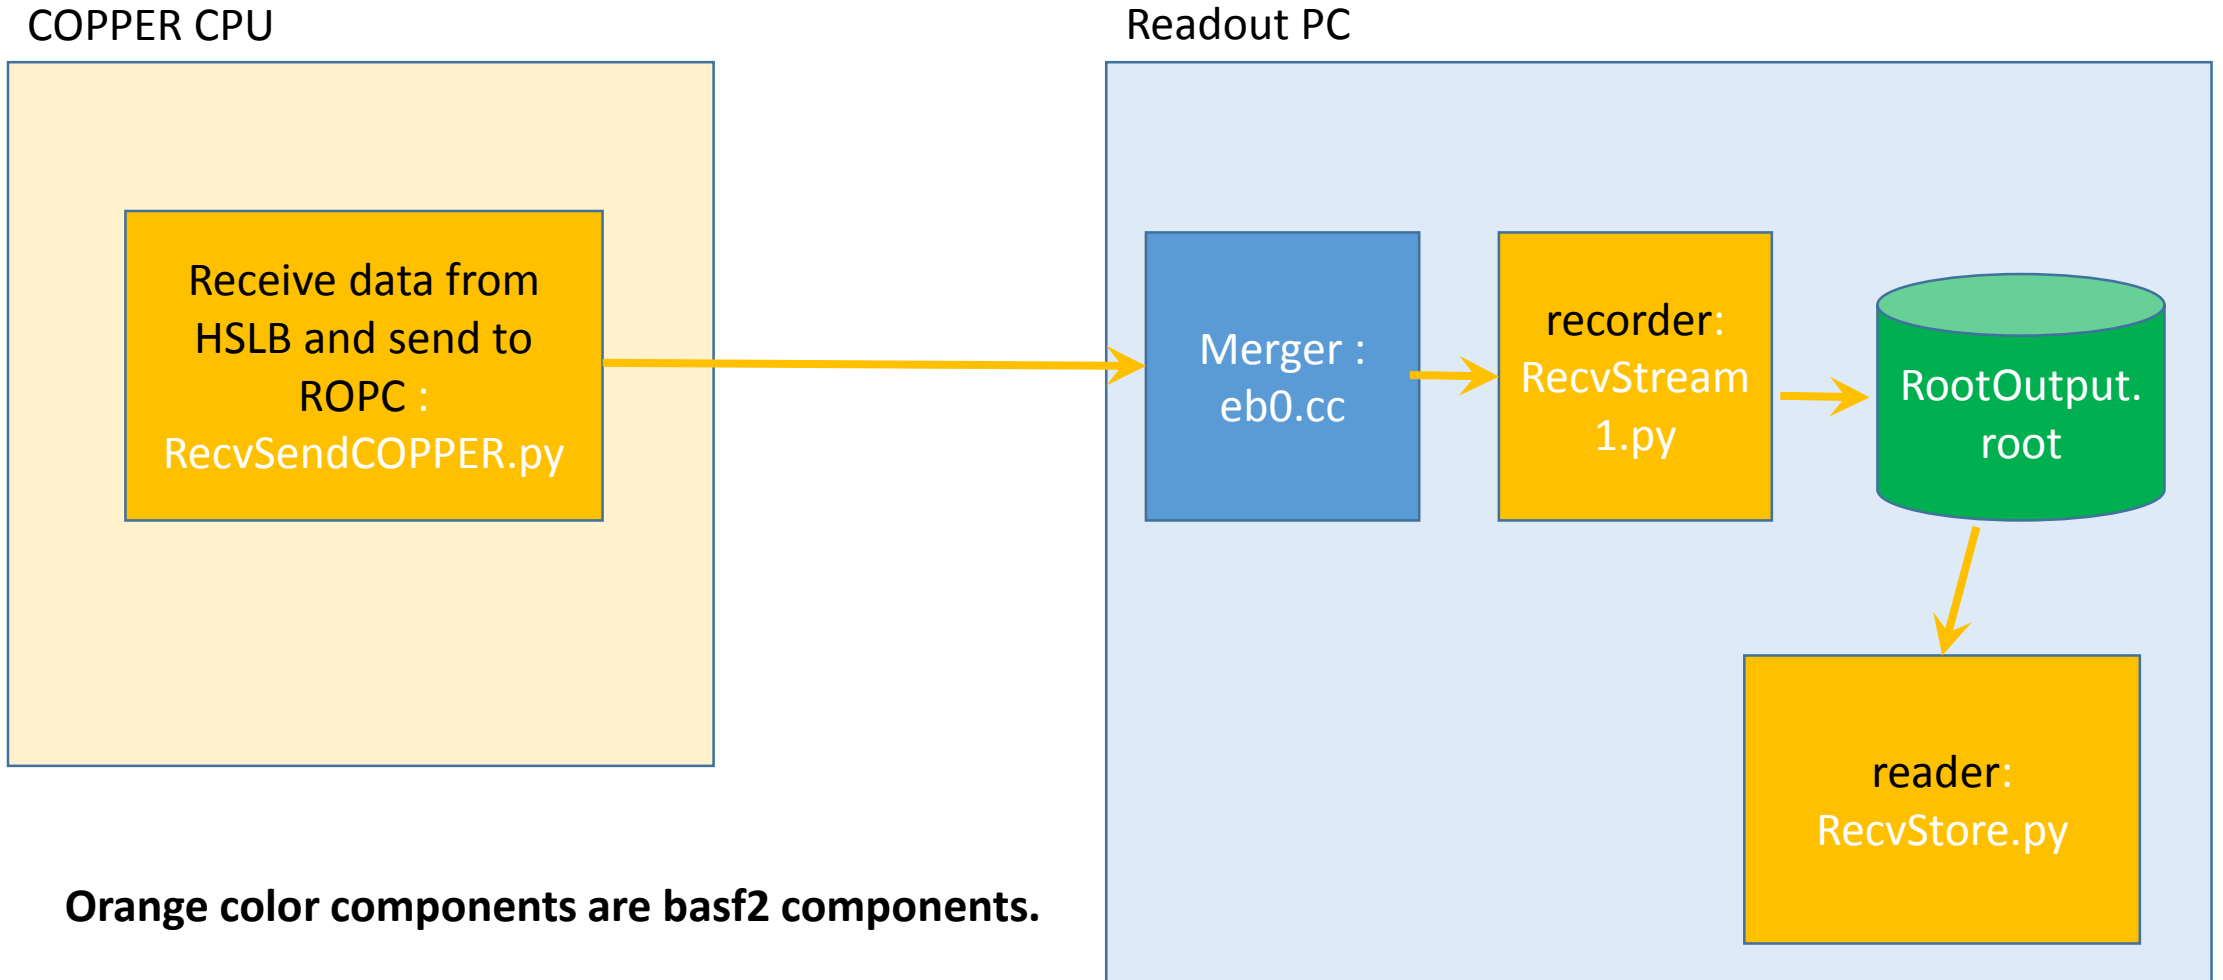

Pocket DAQ w/o slow
controller and GUI

0. Before using pocket DAQ

- Setup a PXE boot server for COPPER CPU and install driver for COPPER etc
 - See <https://belle2.cc.kek.jp/~twiki/bin/view/Detector/DAQ/PocketDAQ>
- Install basf2 on both COPPER CPU and Readout PC
 - See <https://belle2.cc.kek.jp/~twiki/bin/view/Computing/SoftwareInstallation>
- For a release/daq directory, checkout the latest revision.
 - Check daq/Sconscripts and check if env['CONTINUE'] = False is commented out.
 - Compile with scon.
- Compile eventbuilder
 - `cd ${BELLE2_LOCAL_DIR}/daq/eventbuilder/evb0/ ; gmake eb0`

Install GLEW for running basf2 program

After external ver.0.5.0?, basf2 requires GLEW(The OpenGL Extension Wrangler Library).

The following procedure worked fine.

1, install the yum epel repository.

```
ropc01$ wget http://ftp-srv2.kddilabs.jp/Linux/distributions/fedora/epel/5/i386/epel-release-5-4.noarch.rpm
```

```
ropc01$ ssh cpr** -lroot
```

```
cpr**# rpm -ivh epel-release-5-4.noarch.rpm
```

```
cpr**# ls -lrt /etc/yum.repos.d/
```

```
cpr**# exit
```

2, install glew on COPPER

```
ropc01$ sudo yum install glew --installroot=/tftpboot/copper/root
```

0.5 Set parameters(1)

```
[ROPC] % cd ${BELLE2_LOCAL_DIR}/daq/copper/daq_scripts
```

```
[ROPC] % emacs run_start.sh
```

Set arguments of start_copper.sh

Usage : start_copper.sh **<HOSTNAME> <COPPER node ID> <FINNESSE bit flag: A=1, B=2, C=4, D=8> <Use network shared memory : Yes=1, No=0> <node name>**

e.g.)

```
/usr/bin/xterm -fn 7x14 -geometry 102x10+0+642 -e ${BELLE2_LOCAL_DIR}/daq/copper/daq_scripts/start_copper.sh cpr006 1 1 0 0&
```

```
/usr/bin/xterm -fn 7x14 -geometry 102x10+750+642 -e ${BELLE2_LOCAL_DIR}/daq/copper/daq_scripts/start_copper.sh cpr007 2 3 0 0&
```

<COPPER node ID> will be attached to RawCOPPER header.

0.5 Set parameters(2)

NOTICE : Environment variables for basf2

In `${BELLE2_LOCAL_DIR}/daq/copper/daq_scripts/copper.sh`, a line, “source ~/.bash_profile”, is for setting up basf2 environment. You need to add basf2 setting commands in your `.bash_profile` (or other script file).

Please see "Setup of Software Tools" at <https://belle2.cc.kek.jp/~twiki/bin/view/Computing/SoftwareInstallation> for details.

```
[ ${BELLE2_LOCAL_DIR}/daq/copper/daq_scripts/copper.sh ]
```

```
#
```

```
# setup basf2 environment (See "Setup of Software Tools" at
```

```
https://belle2.cc.kek.jp/~twiki/bin/view/Computing/SoftwareInstallation
```

```
#
```

```
source ~/.bash_profile
```


0.5 Set parameters(3)

Specify whether communication with GUI via shared memory will be used or not :

1, Edit \${BELLE2_LOCAL_DIR}/daq/rawdata/examples/RecvStream1.py

If you use GUI, set 'UseShmFlag' = 1

```
receiver.param('UseShmFlag', 1)
```

If you don't use GUI set 'UseShmFlag' = 0

```
receiver.param('UseShmFlag', 0)
```

2, Edit \${BELLE2_LOCAL_DIR}/daq/rawdata/examples/RecvStream1.py

If you use GUI, set 'UseShmFlag' = 1

```
receiver.param('UseShmFlag', 1)
```

If you don't use GUI set 'UseShmFlag' = 0

```
receiver.param('UseShmFlag', 0)
```

0.75 Setting of merger (eb0)

1, compile

```
$ cd ${BELLE2_LOCAL_DIR}/daq/eventbuilder/evb0  
$ make
```

2, edit eb0.sh

If you want to read data from COPPERs with hostnames of cpr010, cpr011 and cpr012.
./eb0 cpr010:33000 cpr011:33000 cpr012:33000

3, Set link to eb-xinetd

```
# cd /etc/xinetd.d/  
# ln -s ${BELLE2_LOCAL_DIR}/eb-xinetd eb-xinetd  
# /sbin/service xinetd restart
```

The eb0 daemon will be automatically invoked when a basf2 program on a readout PC connects to a port specified in eb-xinetd.

1, How to start DAQ

```
[ROPC] % cd ${BELLE2_LOCAL_DIR}/release/daq/copper/daq_scripts
```

```
[ROPC] % ./run_start.sh
```

2, How to stop DAQ

- No stop button for now (If you use GUI, you have.)
- You need to specify max # of events or time to stop the run on a basf2 python file.

```
ROPC % cd ${BELLE2_LOCAL_DIR}/daq/rawdata/examples  
Edit RecvStream1.py
```

You can set following paramters to stop a run.

```
receiver.param('MaxTime', 300.)
```

```
receiver.param('MaxEventNum', 30.)
```

-1 means infinite.

3. Read an output file and extract FEE buffer

- Output file name
 - `${BELLE2_LOCAL_DIR}/daq/copper/daq_scripts/root_output.root`
 - You can change the filename by editing `${BELLE2_LOCAL_DIR}/daq/rawdata/examples/RecvStream1.py`
- Read the root file
 - Please see dataformat and unpacker manuals.
 - Data format
 - https://belle2.cc.kek.jp/svn/trunk/software/daq/copper/doc/SetupPocketDAQ_4p1_RawCOPPERDataHandling.pdf
 - Unpacker
 - https://belle2.cc.kek.jp/svn/trunk/software/daq/copper/doc/SetupPocketDAQ_4p5_RawDataUnpackerPacker.pdf

End

Revision history

- 2013/10/16
 - Change explanation about option of run_start.sh script
- 2014/7/15 (rev. 11619)
 - To specify FINESSE bit field, you need to use decimal value (not hexadecimal).
 - Add an argument of RecvSenDCOPPER.py
 - Update eb0 related issues.
 - About eb0.sh
 - About eb0-xinted

Test bench at Tsukuba B3

