


# Pocket DAQ manual (2013.09.10)


Satoru Yamada

# Connection between components

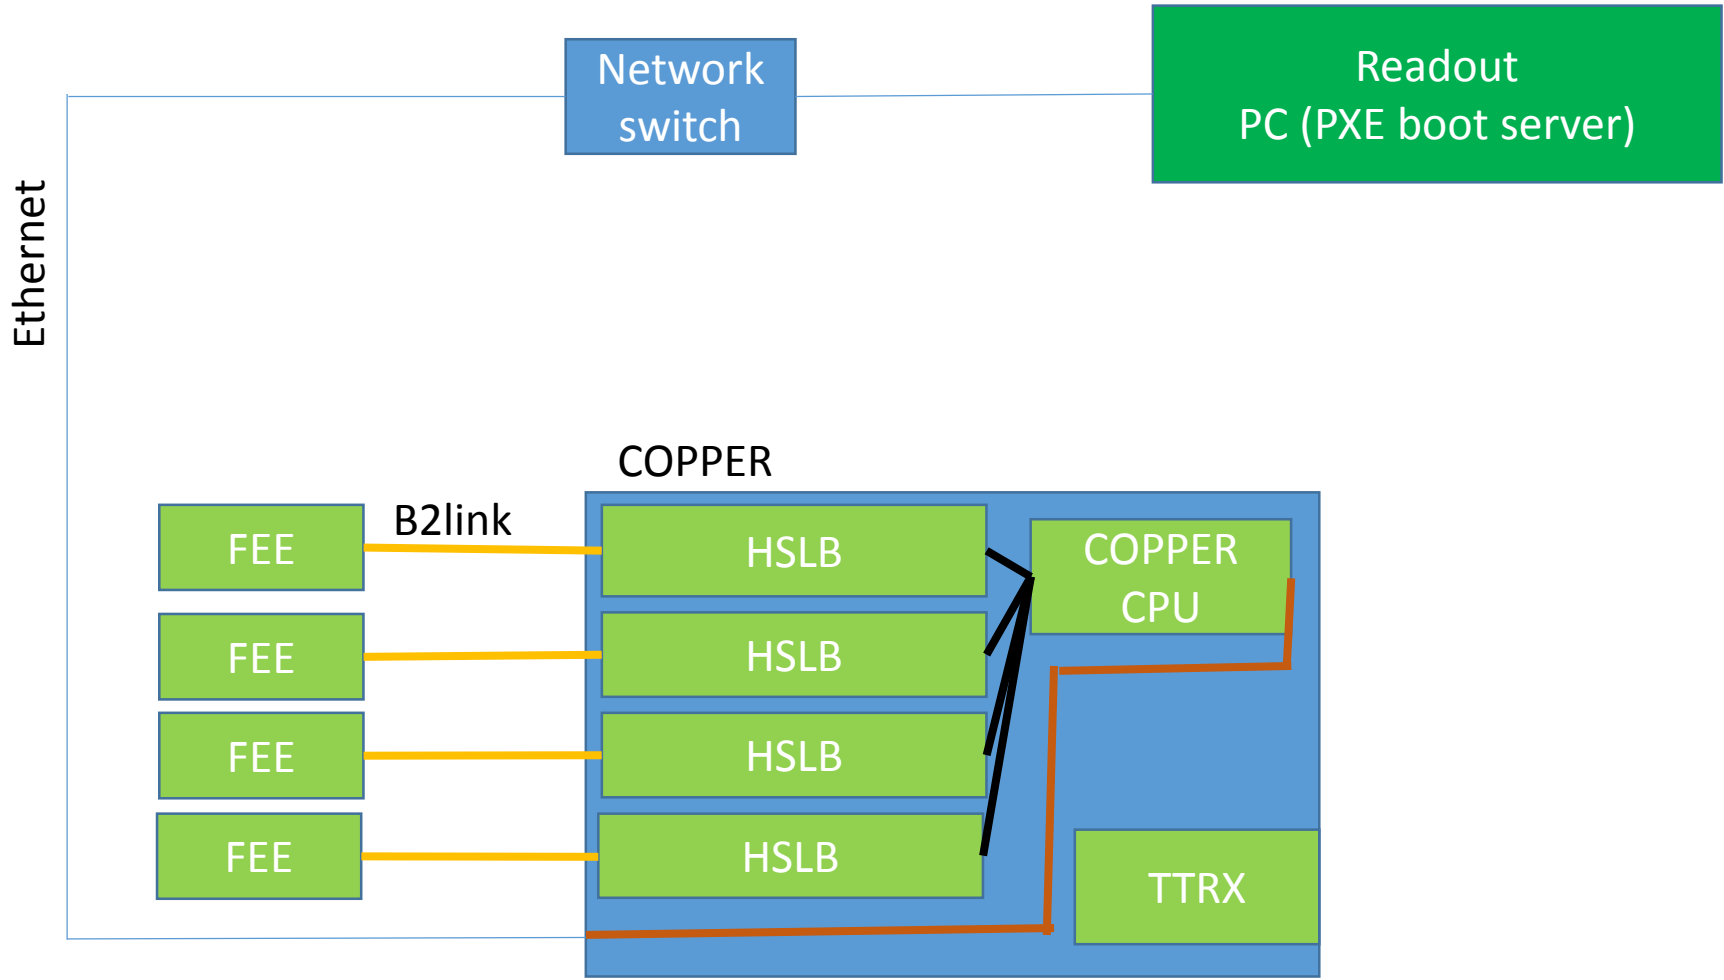

# Software components

These are stored under <https://belle2.cc.kek.jp/svn/trunk/software/daq>

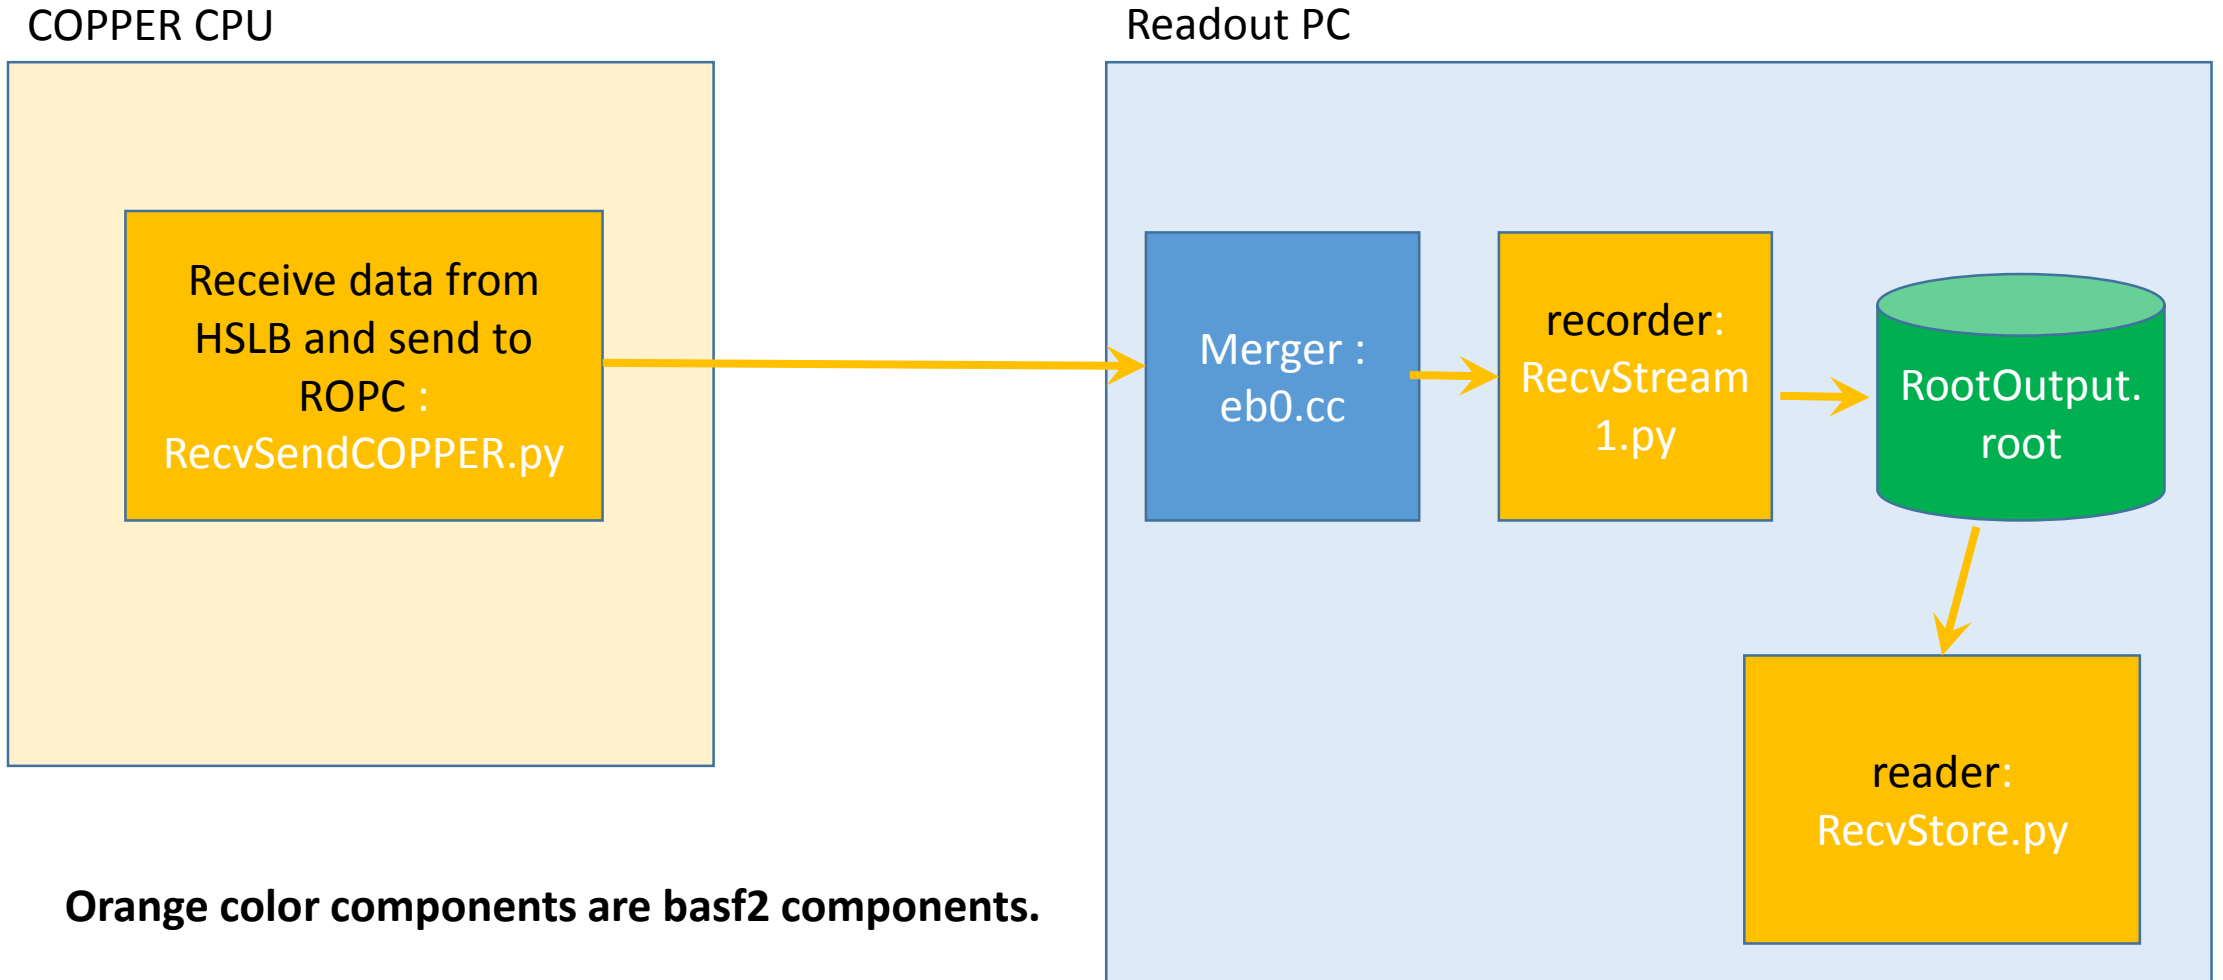

Pocket DAQ w/o slow  
controller and GUI

# 0. Before using pocket DAQ

- Setup a PXE boot server for COPPER CPU and install driver for COPPER etc
  - See <https://belle2.cc.kek.jp/~twiki/bin/view/Detector/DAQ/PocketDAQ>
- Install basf2 on both COPPER CPU and Readout PC
  - See <https://belle2.cc.kek.jp/~twiki/bin/view/Computing/SoftwareInstallation>
- For a release/daq directory, checkout revision **rev. 6449** for now.
  - Check daq/Sconscripts and check if `env['CONTINUE'] = False` is commented out.
  - Compile with `scons`.
- Compile eventbuilder
  - `cd ${BELLE2_LOCAL_DIR}/daq/eventbuilder/evb0/ ; gmake eb0`

## 0.5 Set parameters(1)

```
[ROPC] % cd ${BELLE2_LOCAL_DIR}/daq/copper/daq_scripts
```

```
[ROPC] % emacs run_start.sh
```

### Set arguments of start\_copper.sh

Usage : start\_copper.sh <HOSTNAME> <COPPER node ID> <FINNESSE bit flag: A=0x1, B=0x2, C=0x4, D=0x8>

```
/usr/bin/xterm -fn 7x14 -geometry 102x10+0+642 -e ${BELLE2_LOCAL_DIR}/daq/copper/daq_scripts/start_copper.sh cpr006 1 1&  
/usr/bin/xterm -fn 7x14 -geometry 102x10+750+642 -e ${BELLE2_LOCAL_DIR}/daq/copper/daq_scripts/start_copper.sh cpr007 2 3 &
```

<COPPER node ID> will be attached to RawCOPPER header.

```
[ROPC] % emacs start_eb0.sh
```

### Set arguments of start\_eb0

Usage : eb0 -n <# of COPPERs> <COPPER HOSTNAME1> <COPPER HOSTNAME2> ... <COPPER hostname n>

```
/usr/bin/xterm -fn 7x14 -geometry 102x10+0+342 -e ${BELLE2_LOCAL_DIR}/daq/eventbuilder/evb0/eb0 -n 2 cpr006 cpr007 -b -D
```

## 0.5 Set parameters(2)

### **NOTICE :**

In `${BELLE2_LOCAL_DIR}/daq/copper/daq_scripts/copper.sh`, a line, “source ~/.bash\_profile”, is for setting up basf2 environment. You need to add basf2 setting commands in your `.bash_profile` (or other script file).

**Please see "Setup of Software Tools" at <https://belle2.cc.kek.jp/~twiki/bin/view/Computing/SoftwareInstallation> for details.**

```
[ ${BELLE2_LOCAL_DIR}/daq/copper/daq_scripts/copper.sh ]
```

```
#
```

```
# setup basf2 environment (See "Setup of Software Tools" at  
https://belle2.cc.kek.jp/~twiki/bin/view/Computing/SoftwareInstallation
```

```
#
```

```
source ~/.bash_profile
```

# 1, How to start DAQ

```
[ROPC] % cd ${BELLE2_LOCAL_DIR}/release/daq/copper/daq_scripts
```

```
[ROPC] % ./run_start.sh
```



## 2, How to stop DAQ

- No stop button for now
- You need to specify max # of events or time to stop the run on a basf2 python file.

```
ROPC % cd ${BELLE2_LOCAL_DIR}/daq/rawdata/examples  
Edit RecvStream1.py
```

You can set following parameters to stop a run.

```
receiver.param('MaxTime', 300.)
```

```
receiver.param('MaxEventNum', 30.)
```

# 3. Read an output file and extract FEE buffer

- Output file name
  - `${BELLE2_LOCAL_DIR}/daq/copper/daq_scripts/root_output.root`
- Read the root file
  - `[ROPC] % cd ${BELLE2_LOCAL_DIR}/daq/copper/daq_scripts`
  - `[ROPC]% ./ReadStore.sh root_output.root`
  - Modify `${BELLE2_LOCAL_DIR}/daq/rawdata/modules/src/PrintData.cc` as you like.

You can obtain a pointer to FEE data like this in event() function of PrintData.cc.

```
int* fee_buf_1st;  
...  
int* fee_buf_4th;  
  
fee_buf_1st = rawcprarray[ j ]->Get1stFEEBuffer();  
...  
fee_buf_4th = rawcprarray[ j ]->Get4thFEEBuffer();
```

End

# Test bench at Tsukuba B3

