

Infonique

iSEB Expansion Board 1200 0012 V1.2

Prepared by	Date	Version
Bing Ran	06/10/2023	1.2

Abstract

This document provides detailed of Infonique iSEB Expansion Board 1200 0012 V1.1 specification.

Document History

Date	Rev	Modifier	Changes
15-July-2023	1.0	Bing Ran	First Draft
10-Sept-2023	1.1	Bing Ran	Further elaboratoin about WiFi and servo motor
06-Oct-2023	1.2	Bing Ran	Further elaboratoin & update naming

Contents

Abstract.....	2
Document History.....	2
Contents.....	3
1 Introduction.....	5
2 Hardware.....	6
2.1 Schematic.....	6
2.2 Pinout.....	7
2.2 PCB Layout.....	8
2.2.1 Label of legs.....	9
2.2.2 PWM control.....	10
2.2.2.1 PWM Control Servo Motor Connection.....	10
2.2.3 Battery Connector & RGB Led.....	12
2.2.4 Switch.....	13
2.2.5 MT3608 step-up converter.....	14
2.2.5 Buzzer.....	15
2.2.6 TP4056 module.....	16
2.2.7 Capacitor and resistor.....	17
2.3 Bom list.....	17
3 Firmware.....	18
3.1 Specification of the ESP32 DevKit V1.....	18
3.2 Environment set up.....	19
3.3 WiFi.....	24
3.3.1 How the WiFi Code works.....	24
3.3.2 WiFi server and control UI.....	25
3.4 Servo Motor.....	30
3.4.1 How the Servo Motor Code works.....	31
3.4.1.1 Setup.....	31
3.4.1.2 Code of motorInit function.....	32
3.4.1.3 Update duty cycle during runtime.....	33
3.4.1.4 Set_PWM_to_Servo.....	33

Table of Figures

Figure 1: Robot that controlled by iSEB Expansion Board 1200 0012 V1.0.....	5
Figure 2: Schemaitc of iSEB Expansion Board 1200 0012 V1.0.....	6
Figure 3: iSEB Expansion Board 1200 0012 V1.0 with ESP32 Module.....	8
Figure 4: iSEB Expansion Board 1200 0012 V1.0 without ESP32 Module.....	8
Figure 5: Classification of legs and arms.....	9
Figure 6: PWM control port.....	10
Figure 7: ports for robot's claws.....	11
Figure 8: Robot's femur.....	11
Figure 9: Switch , Battery connector & RGB led.....	12
Figure 10: Pinout of ESP32 DevKit V1.....	13
Figure 11: How servo's position controlled by PWM signal.....	25

Index of Tables

Table 1: Pinout.....	6
Table 2: Position vs GPIO vs Channel vs Connector matrix.....	25

1 Introduction

This document will discuss the details of the iSEB Expansion Board 1200 0012 V1.0. iSEB Expansion Board 1200 0012 V1.0 is design for a spider robot. It provide 8 rgb leds (red green blue leds) and 16 pwm output to control the servo motors. The following figure is one of the robot that control with iSEB Expansion Board 1200 0012 V1.0.

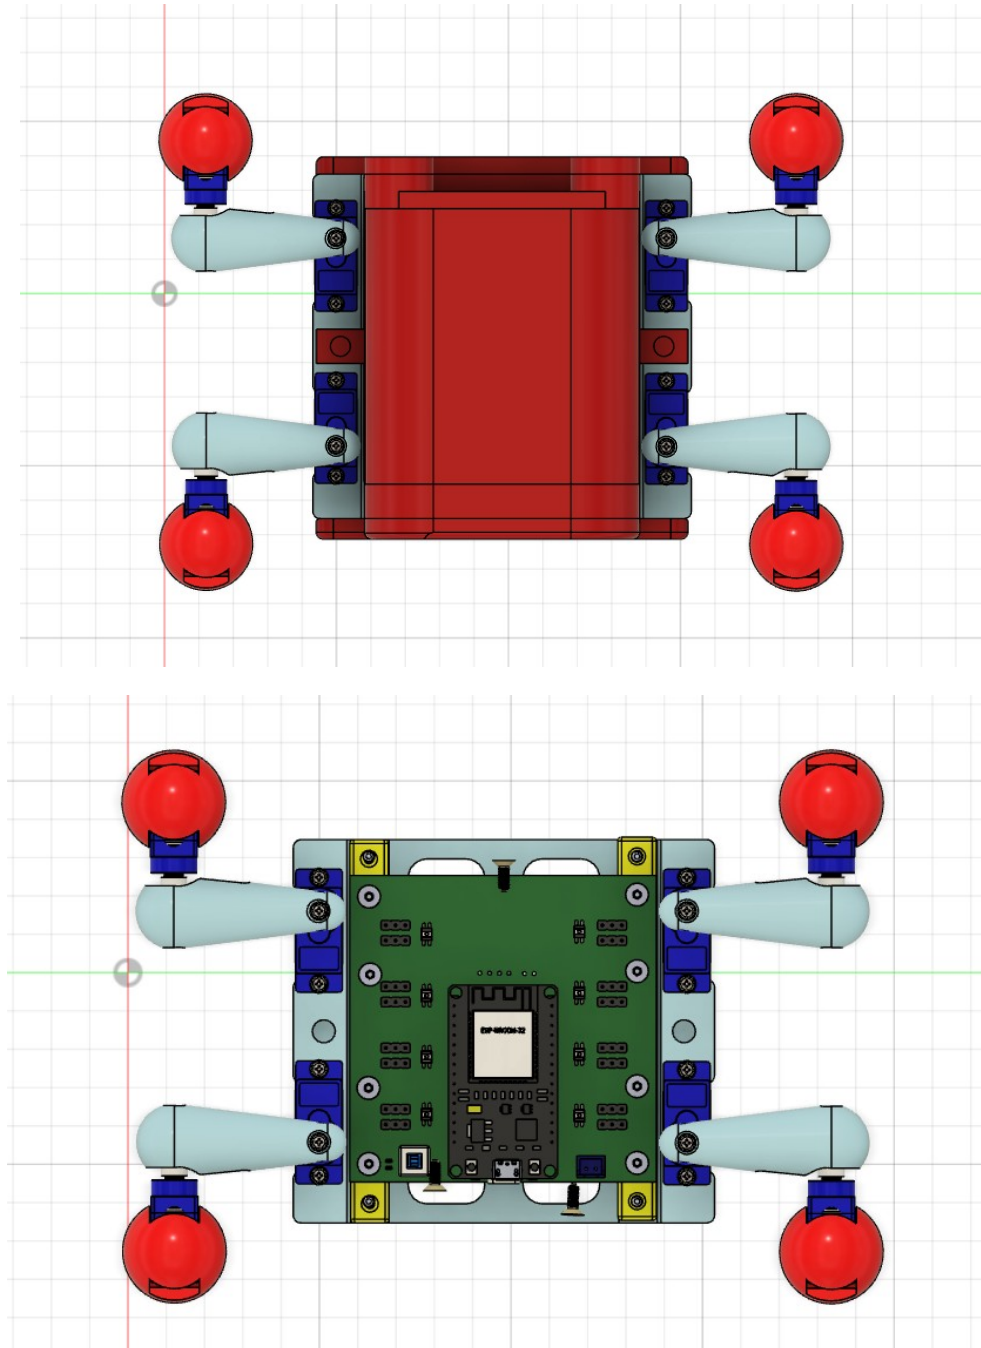


Figure 1: Robot that controlled by iSEB Expansion Board 1200 0012 V1.0.

2 Hardware

2.1 Schematic

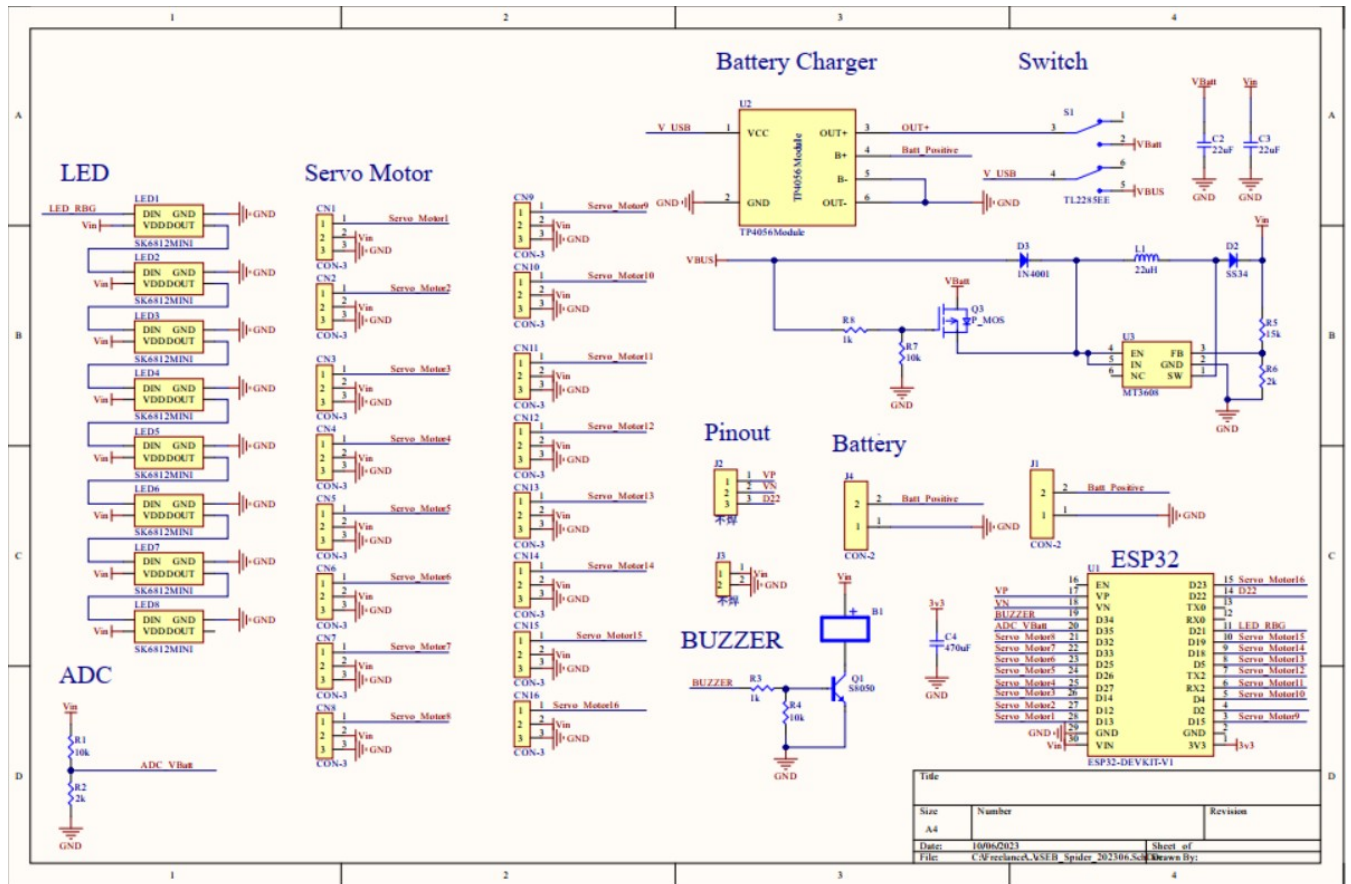


Figure 2: Schemaitc of iSEB Expansion Board 1200 0012 V1.0

2.2 Pinout


Pin	Function	Pin	Function
EN	Enable Pin	D23	PWM16
VP	Unused	D22	Unused
VN	Unused	TX0	TX0
D34	Unused	RX0	RX0
D35	ADC Vbatt	D21	RGB Led
D32	PWM8	D19	PWM15
D33	PWM7	D18	PWM14
D25	PWM6	D05	PWM13
D26	PWM5	D17	PWM12
D27	PWM4	D16	PWM11
D14	PWM3	D04	PWM10
D12	PWM2	D02	Buzzer
D13	PWM1	D15	PWM9

Table 1: Pinout

2.2.1 Label of legs


The following figure is labeling the legs of the robot.

Figure 5: Classification of legs and arms

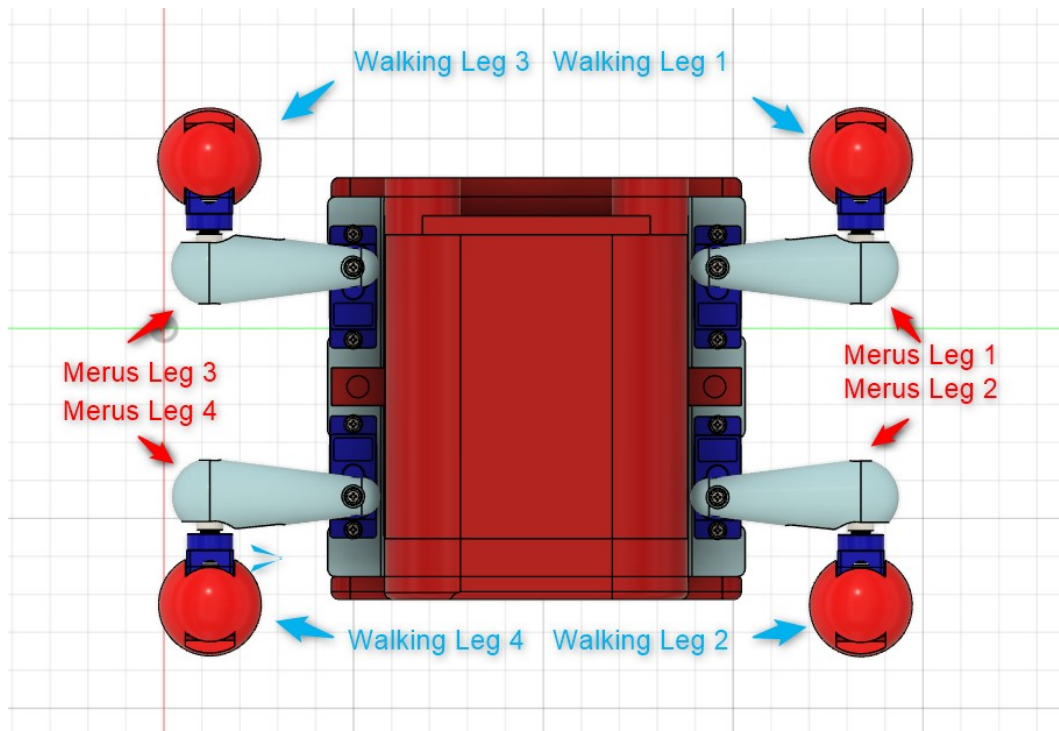


2.2.2 PWM control

There are 16 PWM control port in iSEB Expansion Board 1200 0012 V1.0. The figure below is showing the locaiton of the 16 PWM control port.

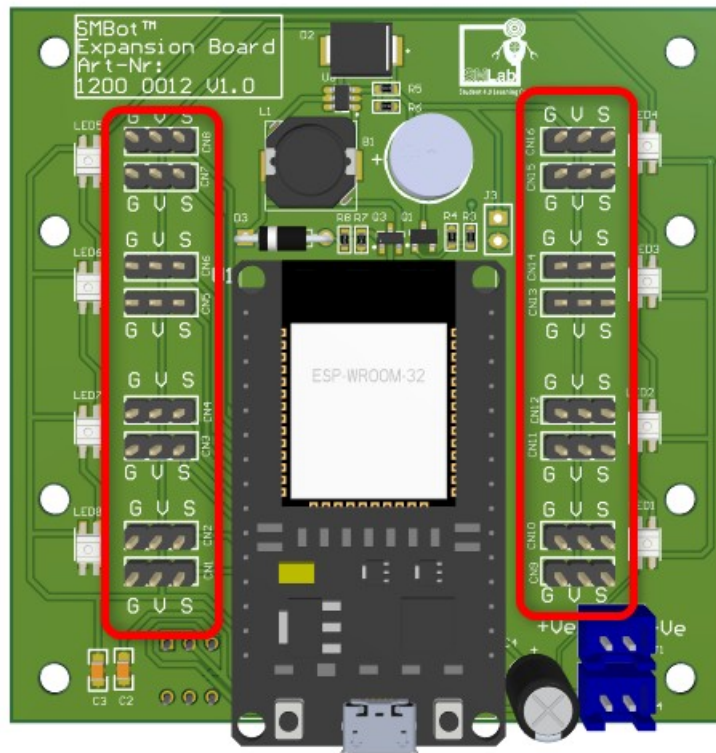


2.2.2.1 PWM Control Servo Motor Connection

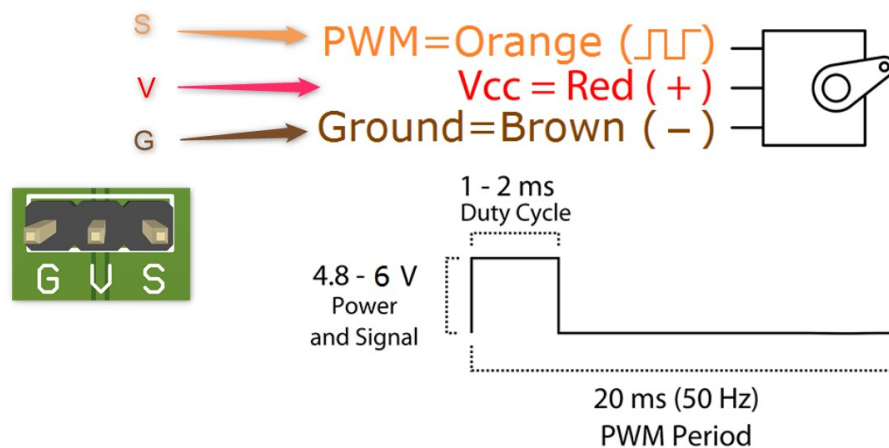


Position "0" (1.5 ms pulse) is middle, "90" (~2 ms pulse) is all the way to the right, "-90" (~1 ms pulse) is all the way to the left.

The figure below is specifying the port for each robot's claw.

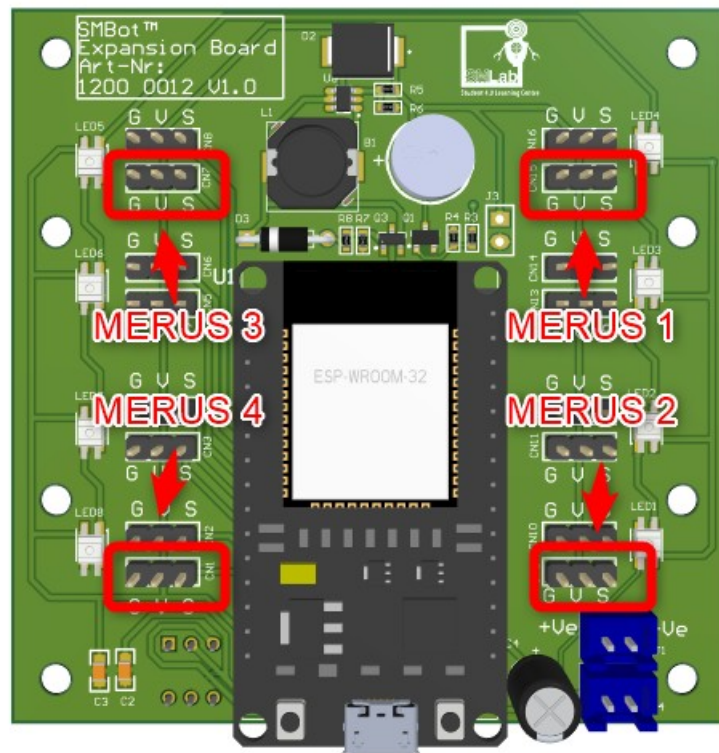

The figure below is specifying the port for each robot's femur.

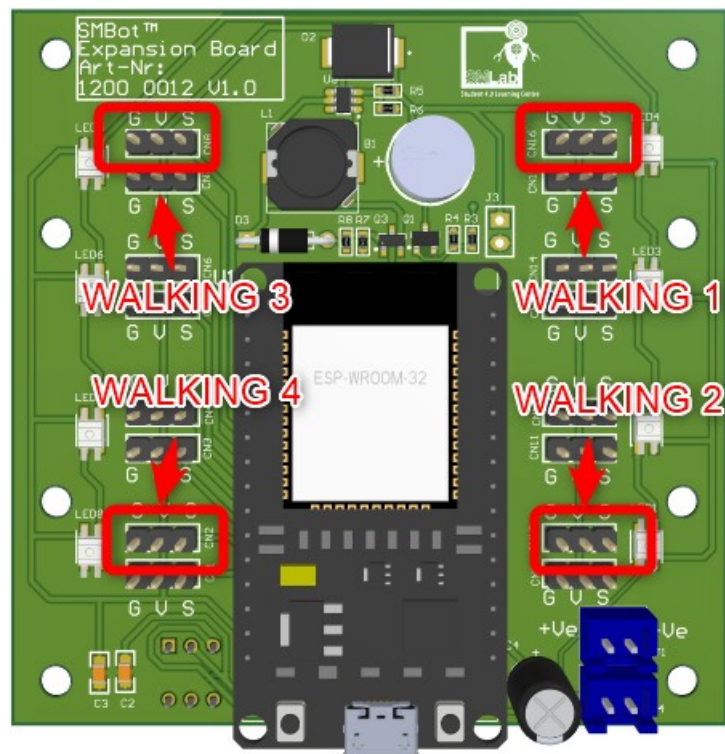

2.2.3 Battery Connector & RGB Led

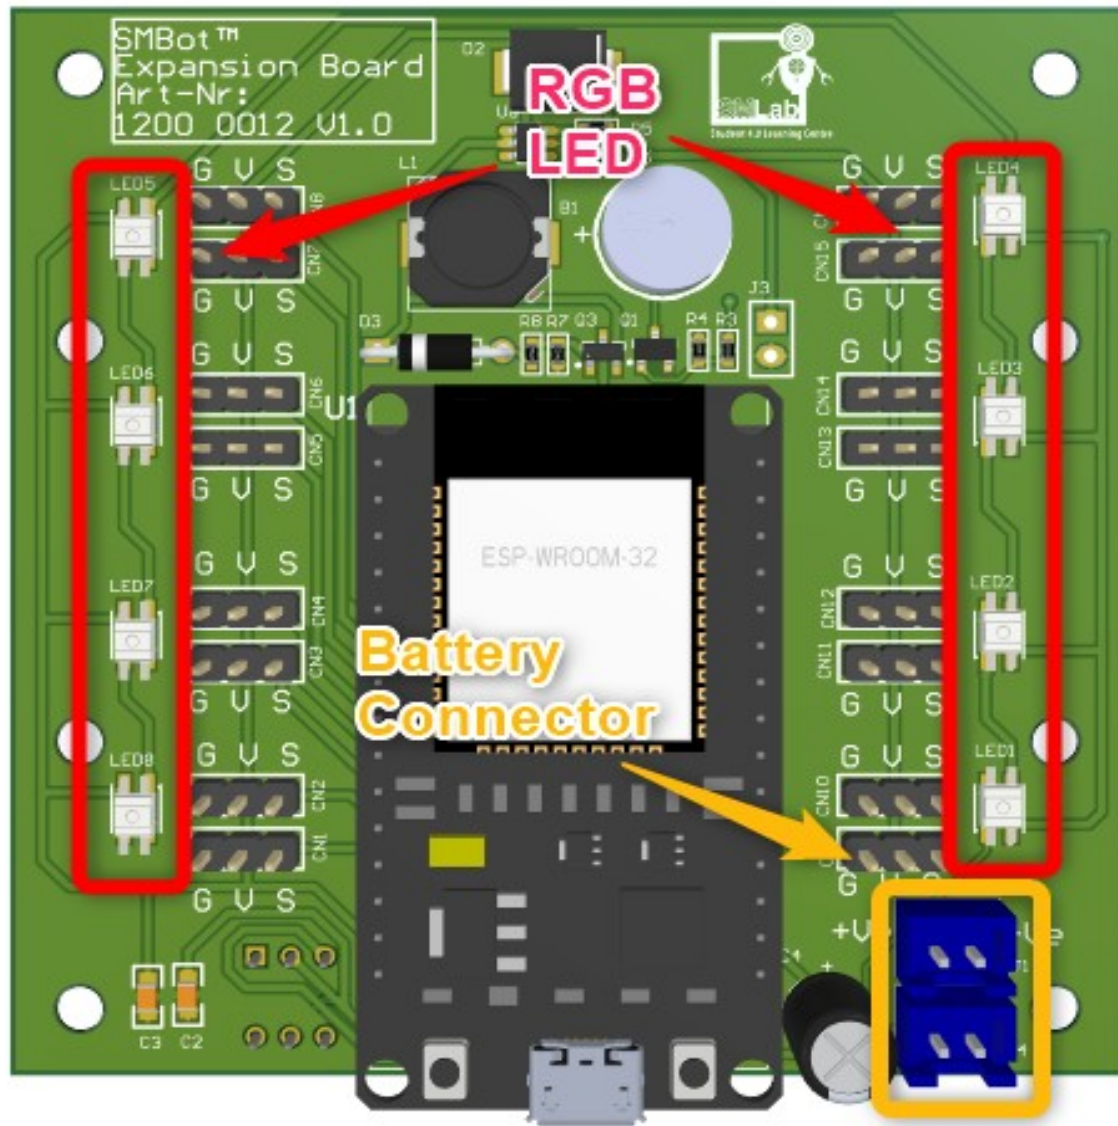


Figure 9: Battery connector & RGB led

The figure above showing Battery Connector and RGB Led. Battery connector is for battery to connect to provide power supply. The RGB led is SK6812MINI. It is a smart LED control circuit and light emitting circuit in one controller LED source. It able to display any color base on the combination of red , blue and green.

2.2.4 Switch

The figure below showing the switch . It able to cut of the battery supply. The switch's part number is TL2285EE from TE. It is a latching switch.

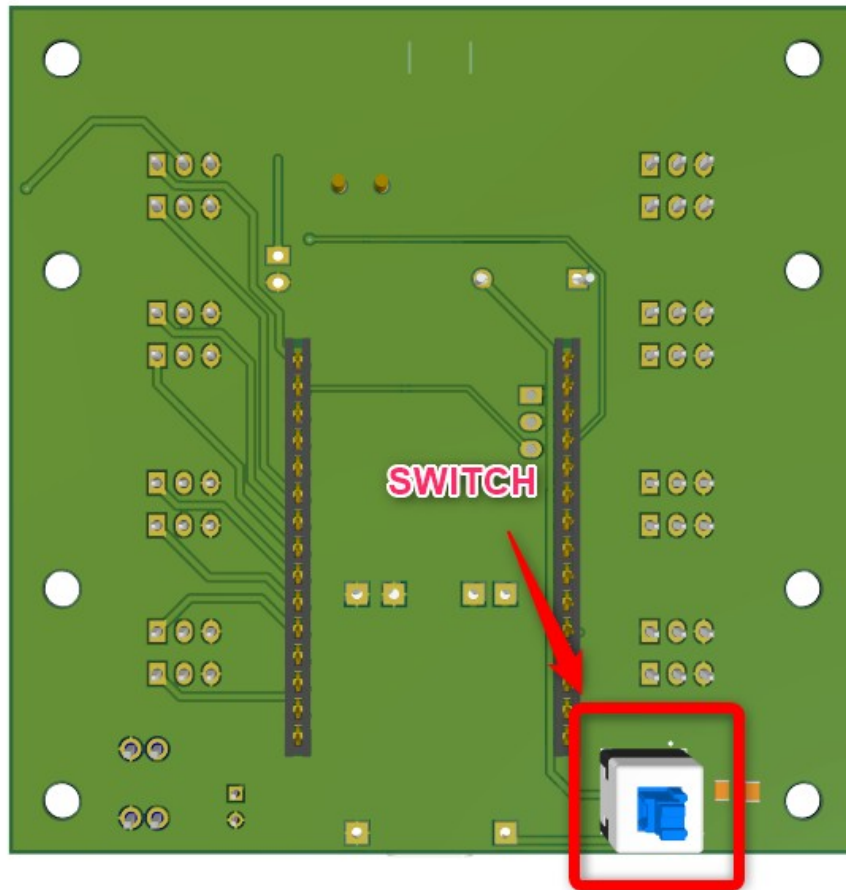


Figure 10: Battery Switch

2.2.5 MT3608 step-up converter

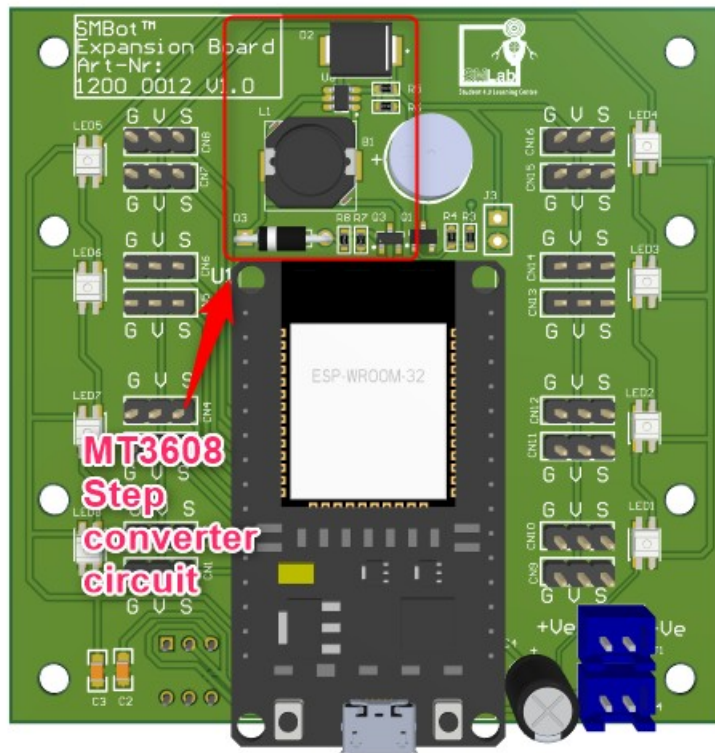


Figure 11: MT3608 Step-up Converter circuit

The figure above showing the MT3608 step converter circuit.

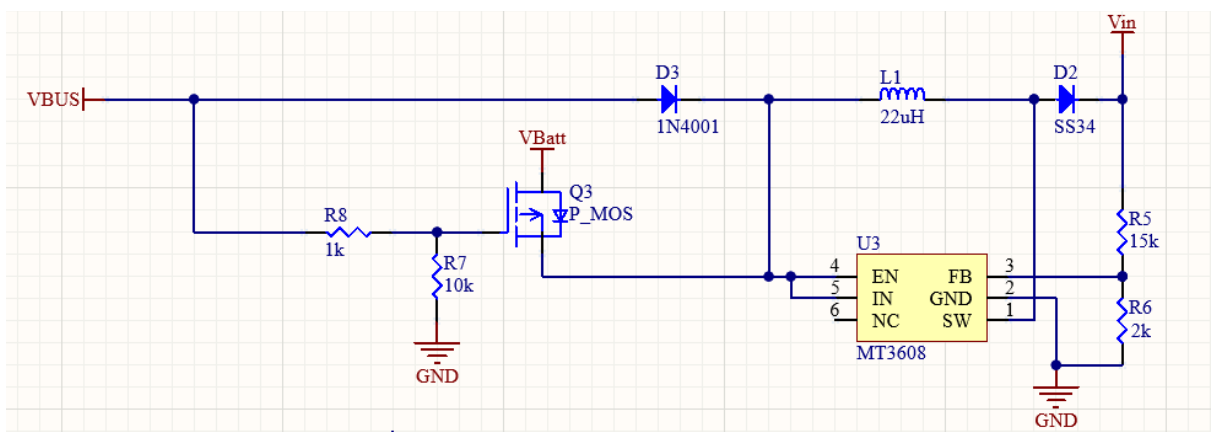


Figure 12: Schematic of MT3608 step up converter

The figure above showing the schematic of MT3608 step up converter circuit
MT3608 step up converter circuit convert lithium battery voltage (3.7v) to 5v.

2.2.5 Buzzer

The figure below showing the buzzer. It is a passive buzzer that able to have different tone with change the frequency of the PWM signal.


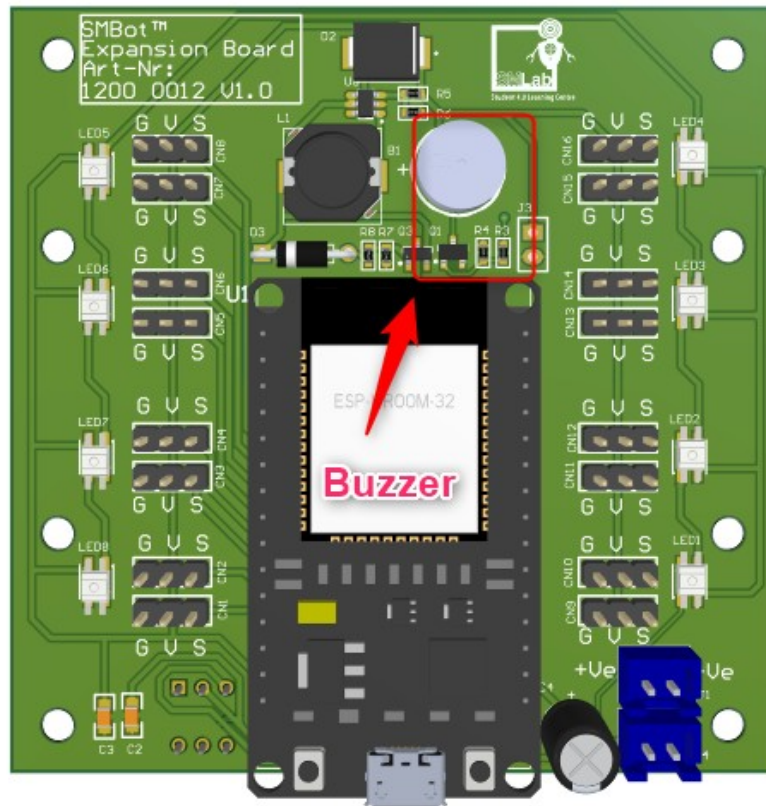


Figure 13: Buzzer

2.2.6 TP4056 module

The figure below showing the TP4056 module. The TP4056 is a complete constant-current/constant-voltage linear charger for single cell lithium-ion batteries. We are able to charge the lithium battery through USB type C.

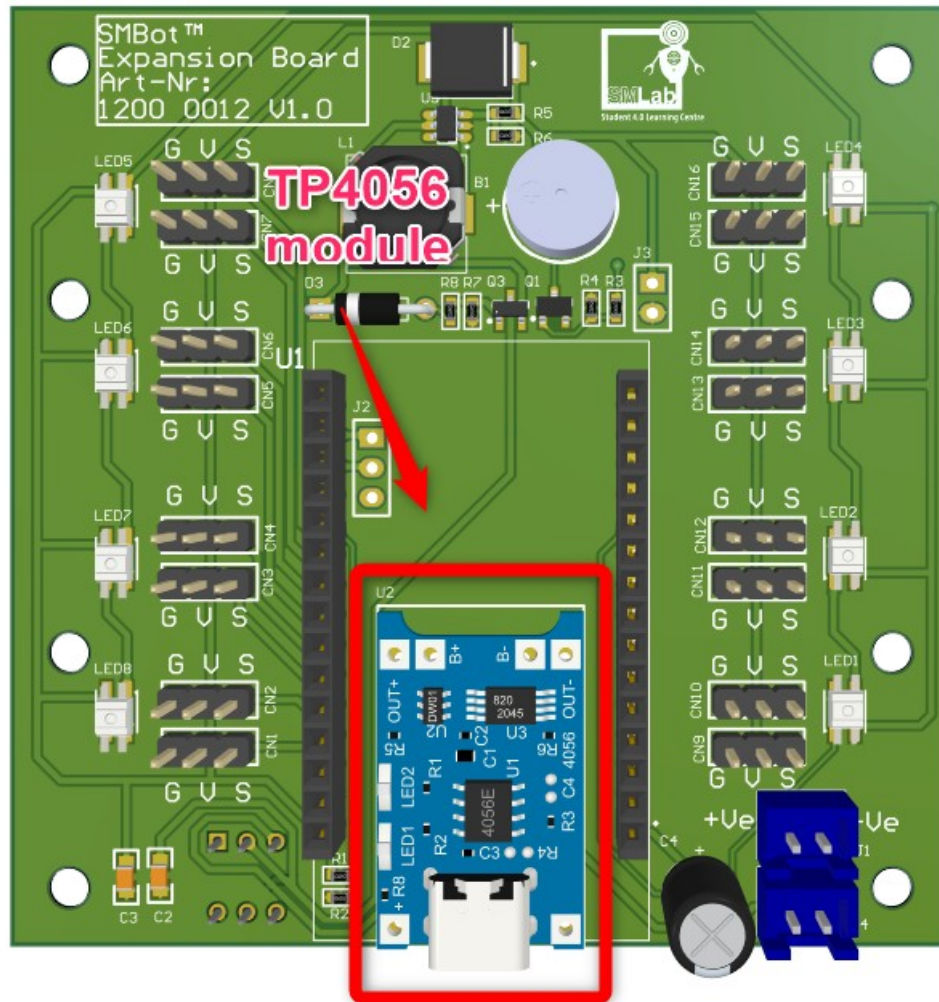

2.2.7 Capacitor and resistor

The figure below showing capacitor and resistor

The C1 is an electrolytic capacitor is a capacitor that uses an oxide film made of aluminum, tantalum or other oxidizable metal as a dielectric. The parameter of C1 is 10v 470uF . The C2 and C3 is a ceramic capacitor where the ceramic material acts as the dielectric The paramter of C2 and C3 are 25v 22uF. In this case capacitor is to prevent voltage drip and stablize the voltage.

The resistor R1 and R2 is acting as a voltage divider for ESP32 to measure the voltage of Battery through ADC. The value of R1 and R2 are 10k and 2k . We have to use resistor because ESP32 have a 12 bit ADC which only able to measure 0 to 3.3v (0 – 4095) . We add resistor to limit the current and also the voltage in order not to burn the esp32.

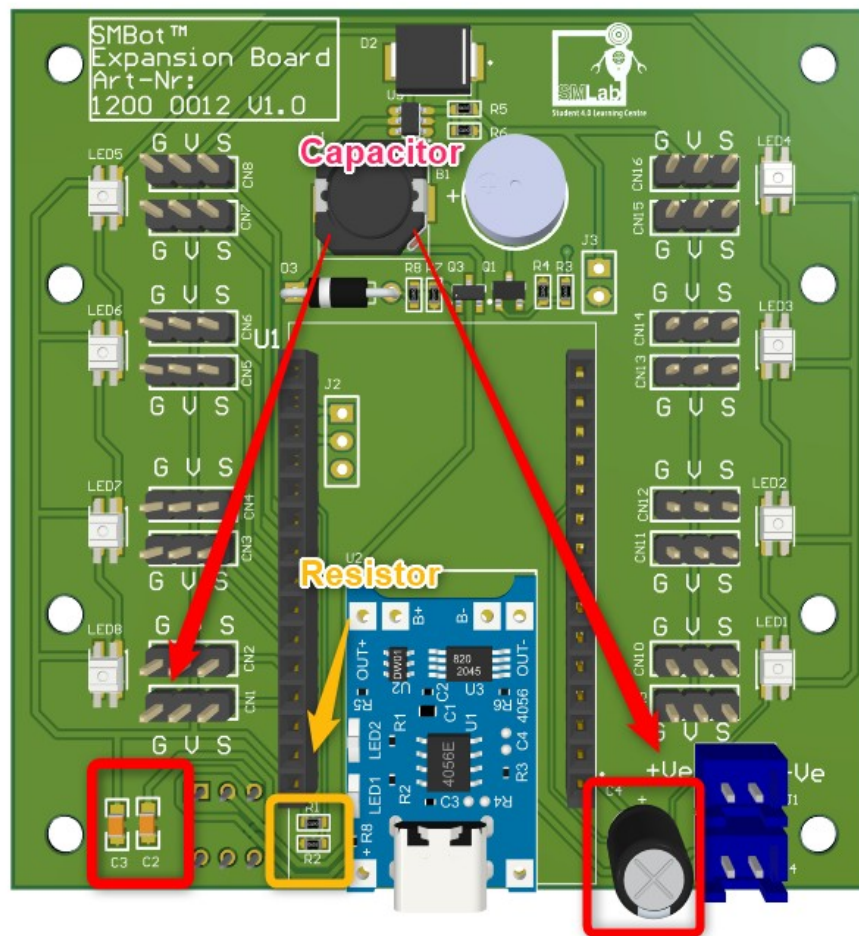


Figure 14: Capacitor and resistor

2.3 Bom list

- iSEB Expansion Board 1200 0012 V1.0 with ESP32 Module x 1
- 18650 Battery x 2
- ESP32-DEVKIT-V1 x 1
- Spider chassis set x 1

3 Firmware

The iSEB Expansion Board 1200 0012 V1.0 is using ESP32 DevKit V1. The figure is showing the pinout of ESP32 DevKit V1. The microcontroller is esp-wroom-32 module.

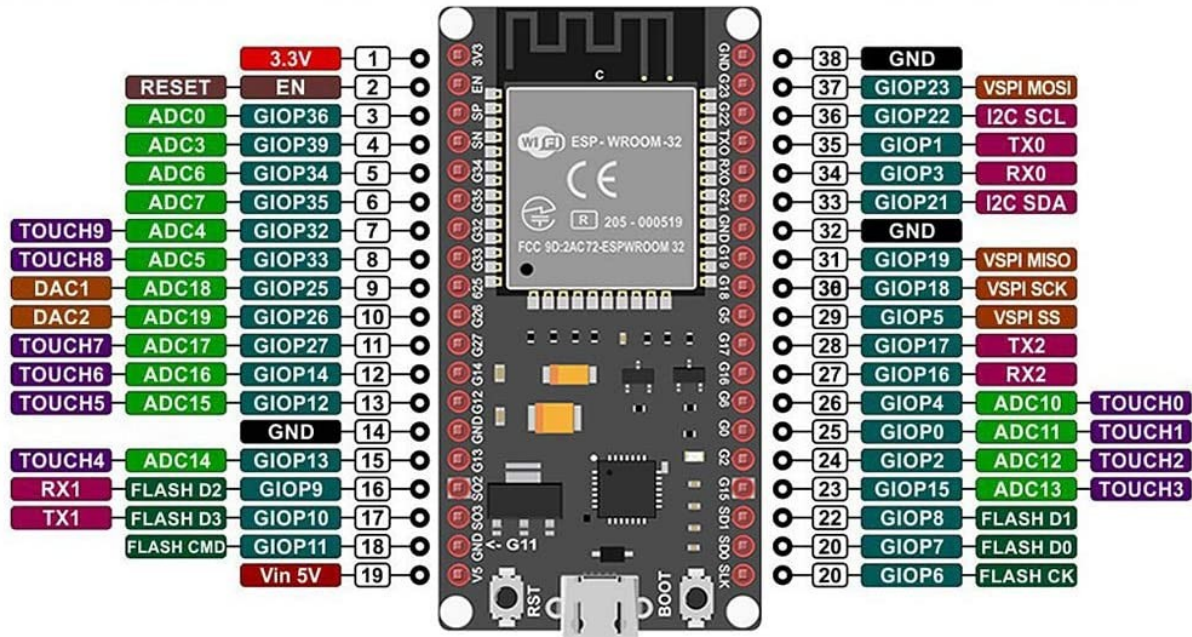


Figure 15: Pinout of ESP32 DevKit V1

3.1 Specification of the ESP32 DevKit V1


Microcontroller: Tensilica 32-bit Single-/Dual-core CPU Xtensa LX6

- Operating Voltage: 3.3V
- Input Voltage: 7-12V
- Digital I/O Pins (DIO): 25
- Analog Input Pins (ADC): 6
- Analog Outputs Pins (DAC): 2
- UARTs: 3
- SPIs: 2
- I2Cs: 3
- Flash Memory: 4 MB
- SRAM: 520 KB
- Clock Speed: 240 Mhz
- Wi-Fi: IEEE 802.11 b/g/n/e/i:
 - Integrated TR switch, balun, LNA, power amplifier and matching network
 - WEP or WPA/WPA2 authentication, or open networks
- Dimensions: 51.5x29x5mm

3.2 Environment set up

We need to set up the environment to flash the binary to ESP32 DevKit V1.

- Install Arduino IDE is required to install. (Snapshot is base on Arduino IDE 2.2.0)
- Add https://raw.githubusercontent.com/espressif/arduino-esp32/gh-pages/package_esp32_index.json to Board Managers and install ESP32 library.
 - Select Files-> Preferences and click on the icon

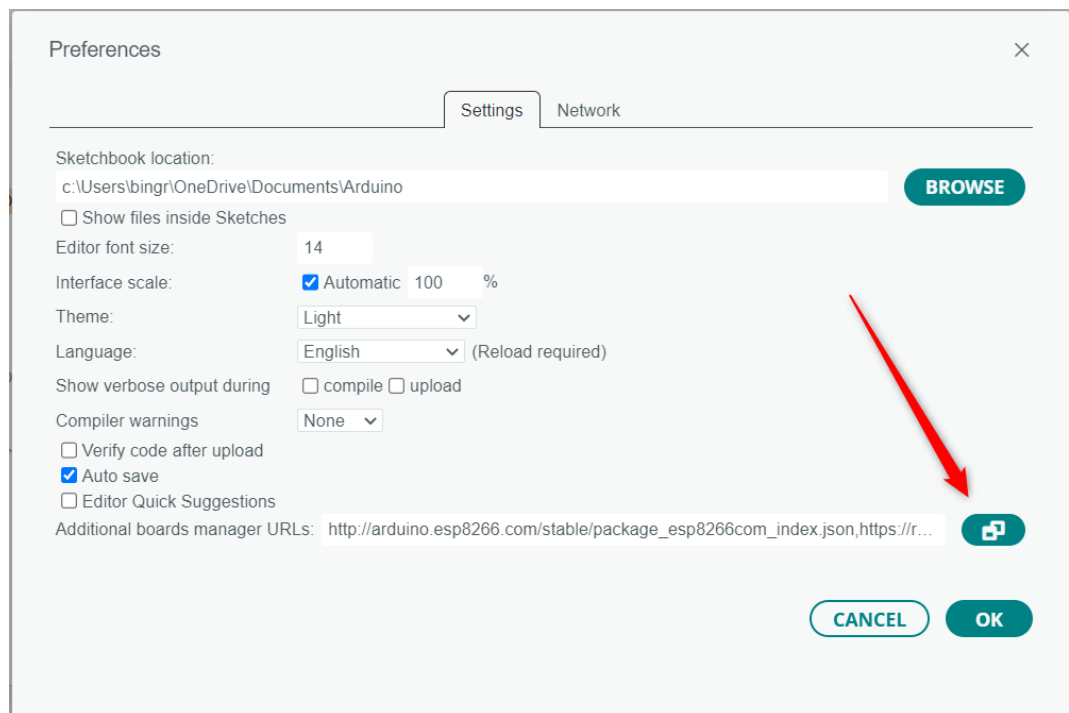

- Add Boards Manager URLs

Additional Boards Manager URLs


Enter additional URLs, one for each row

http://arduino.esp8266.com/stable/package_esp8266com_index.json
https://raw.githubusercontent.com/espressif/arduino-esp32/gh-pages/package_esp32_index.json


[Click for a list of unofficial board support URLs](#)

CANCEL OK


- Install ESP32 by Espressif Systems at Board Manager.

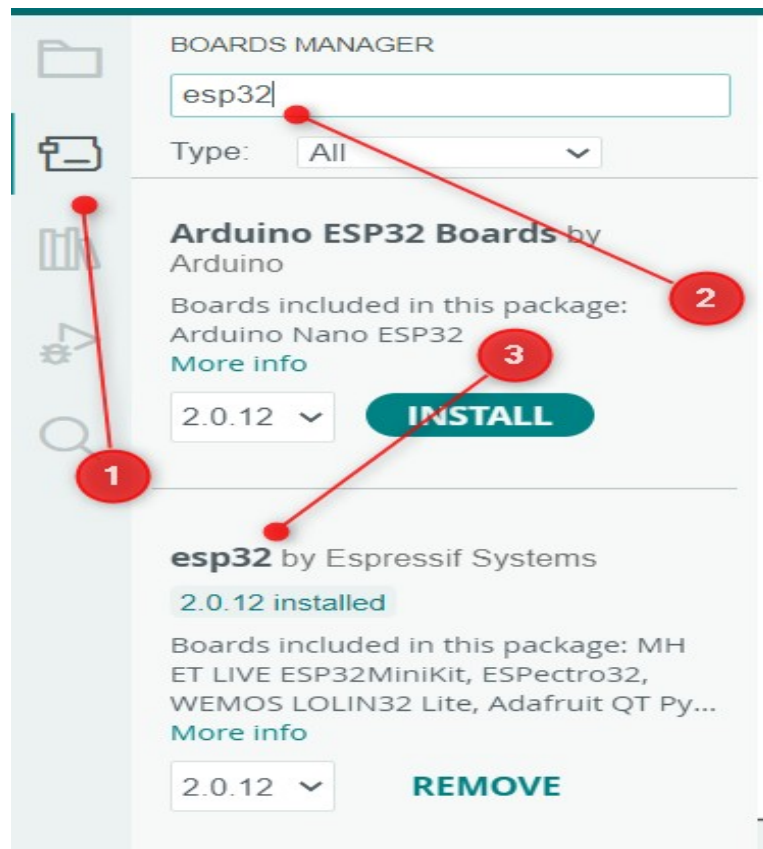


- Install WS2812FX by Harm Aldick (version 1.4.2) library.
 - Snapshot of install library

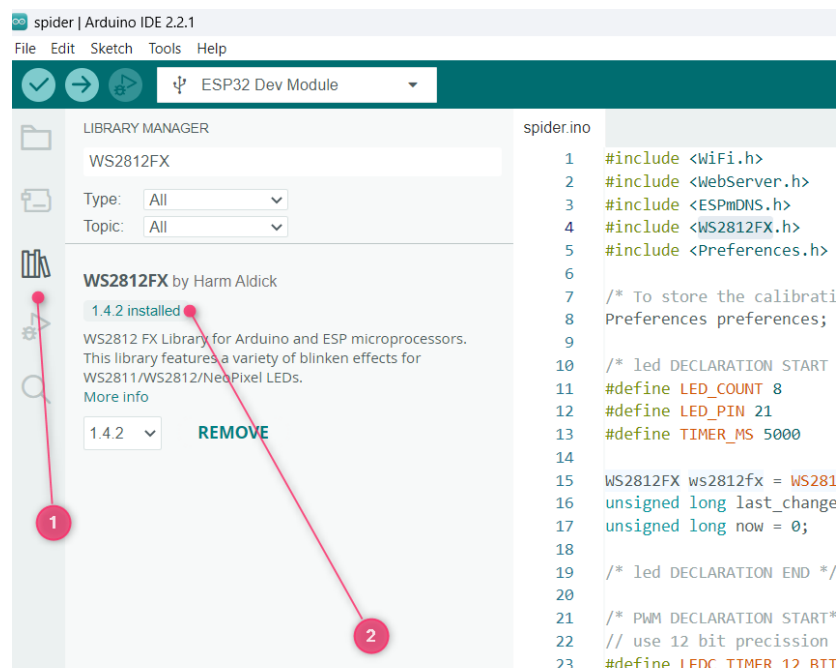

- Update the upload setting

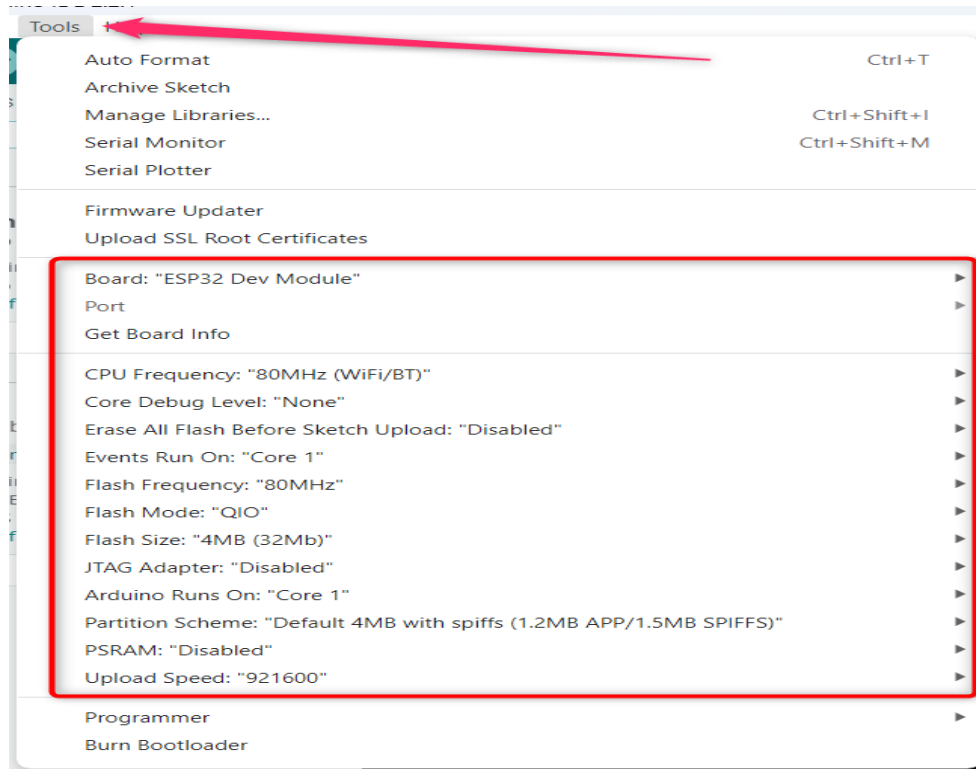

- Click upload button and the firmware will be flashed successfully if the snapshot below is seen.

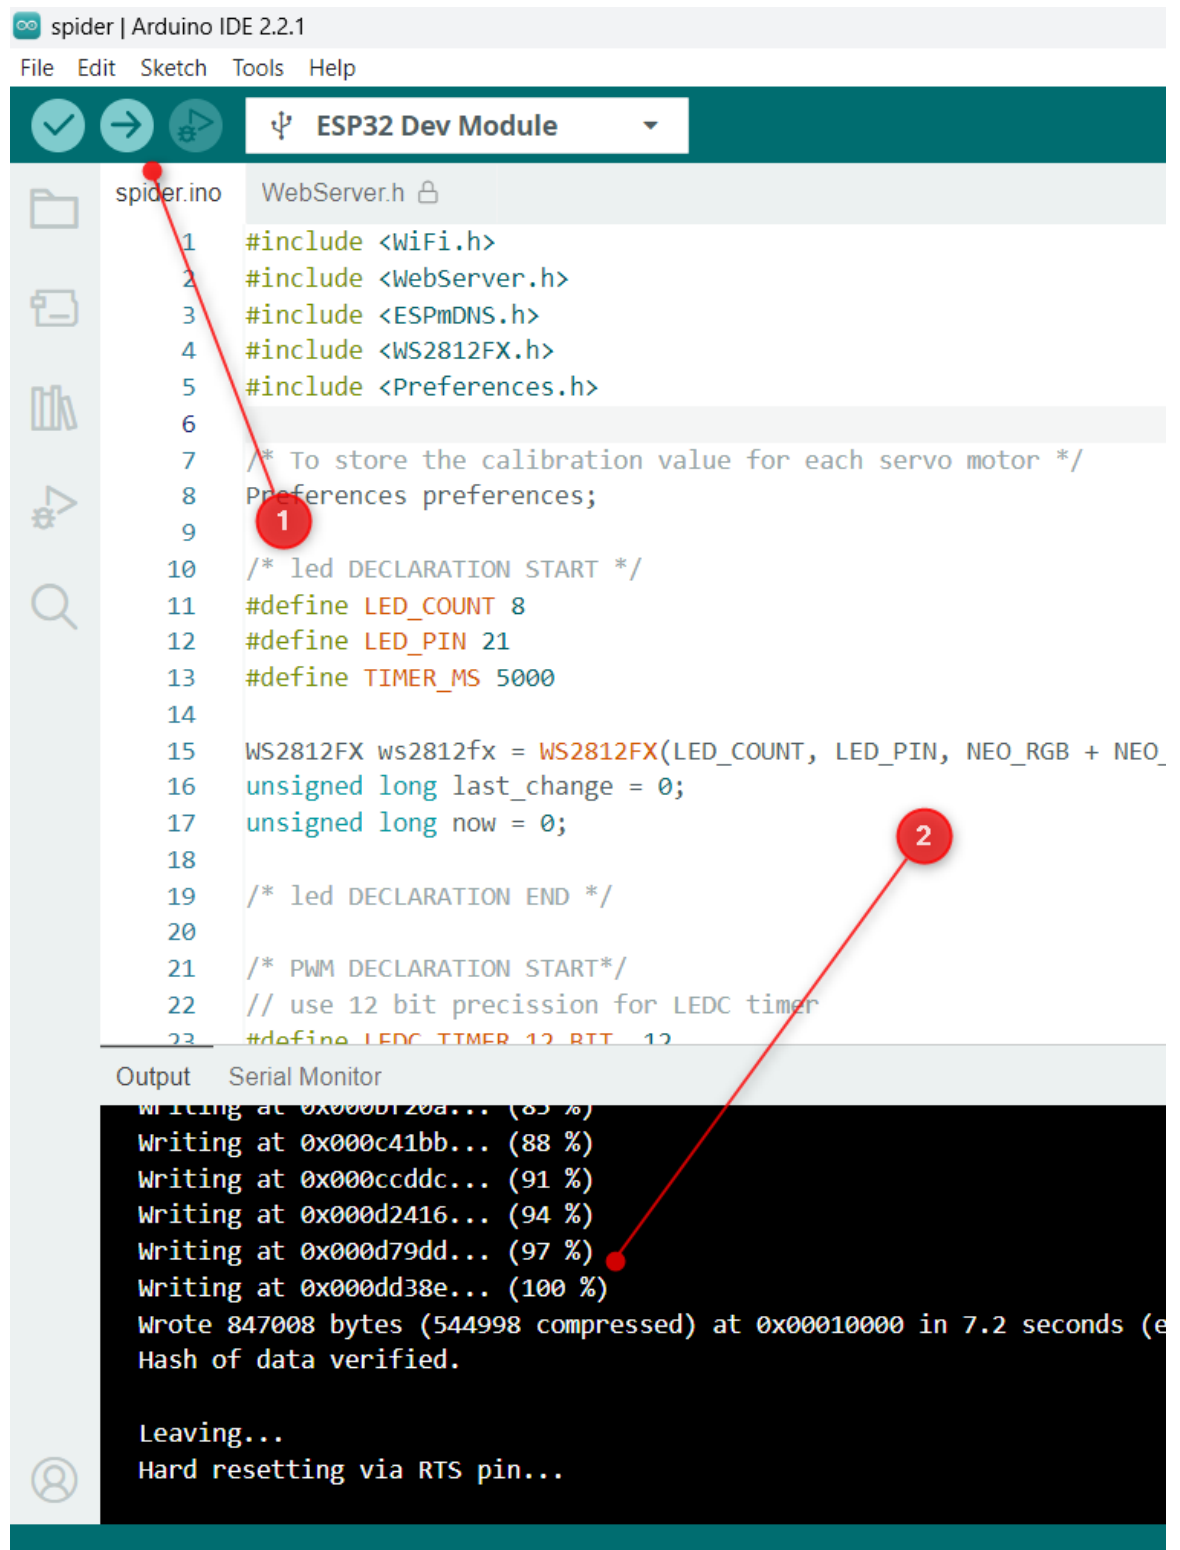

- The environment set up is done if the binary able to flash to ESP32 DevKit V1..


3.3 WiFi

3.3.1 How the WiFi Code works


- Firstly we need to include WiFi and WebServer library
 - `#include <WiFi.h>`
 - `WiFi.h` - esp32 Wifi support.
 - `#include <WebServer.h>`
 - `WebServer.h` - Dead simple web-server. Supports only one simultaneous client, knows how to handle GET and POST.
- Secondly we need to insert our ssid and password
 - `const char* ssid = "iSEB Crab"; // Enter SSID here`
 - `const char* password = "12345678"; //Enter Password here`
- Then we set our web server to port 80
 - `WebServer server(80);`
- We have to setup the WiFi in setup function
 - To start the Wi-Fi as an Access Point.
 - `WiFi.softAP(ssid);/* without password */`
 - `WiFi.softAP(ssid,password);/* with password */`
 - Function used to configure the IP as static (fixed) as well as the gateway and subnet.
 - `WiFi.softAPConfig(local_ip, gateway, subnet); /* to add exception to server */`
 - Set up handling of web page
 - `server.on("/",handleIndex);`
 - `server.on("/editor", handleEditor);`
 - `server.on("/controller", handleController);`
 - `server.on("/zero", handleZero);`
 - `server.on("/setting",handleSetting);`
 - `server.on("/save", handleSave);`
 - Enable the server
 - `server.begin();`
- We have to handle the user request in loop funtion
 - `server.handleClient();`

3.3.2 WiFi server and control UI


- After flash successfully, the iSEB Spider should be appear in the WiFi list. The figure below is showing the iSEB spider is appeared in the WiFi list.

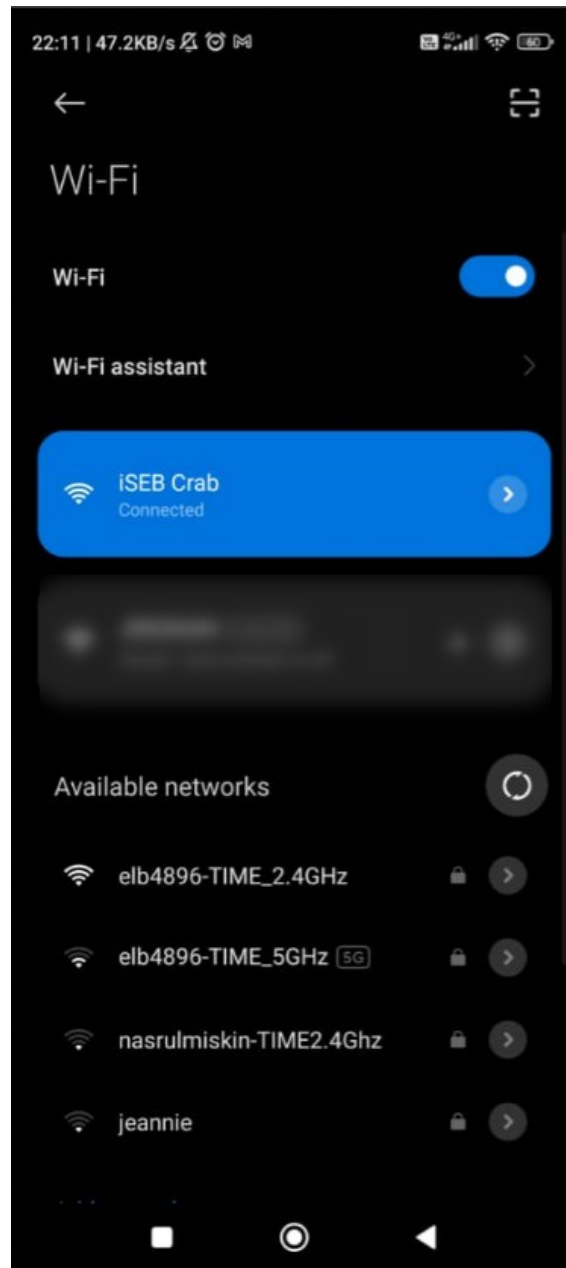


- Connect to the ISEB Spider and access 192.168.1.1

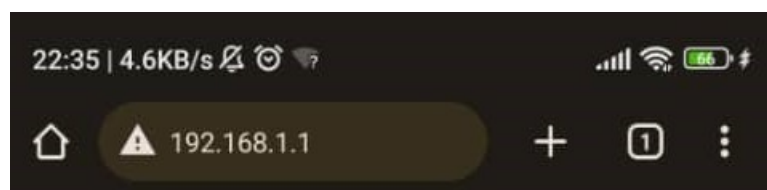


- The control page will be show as below

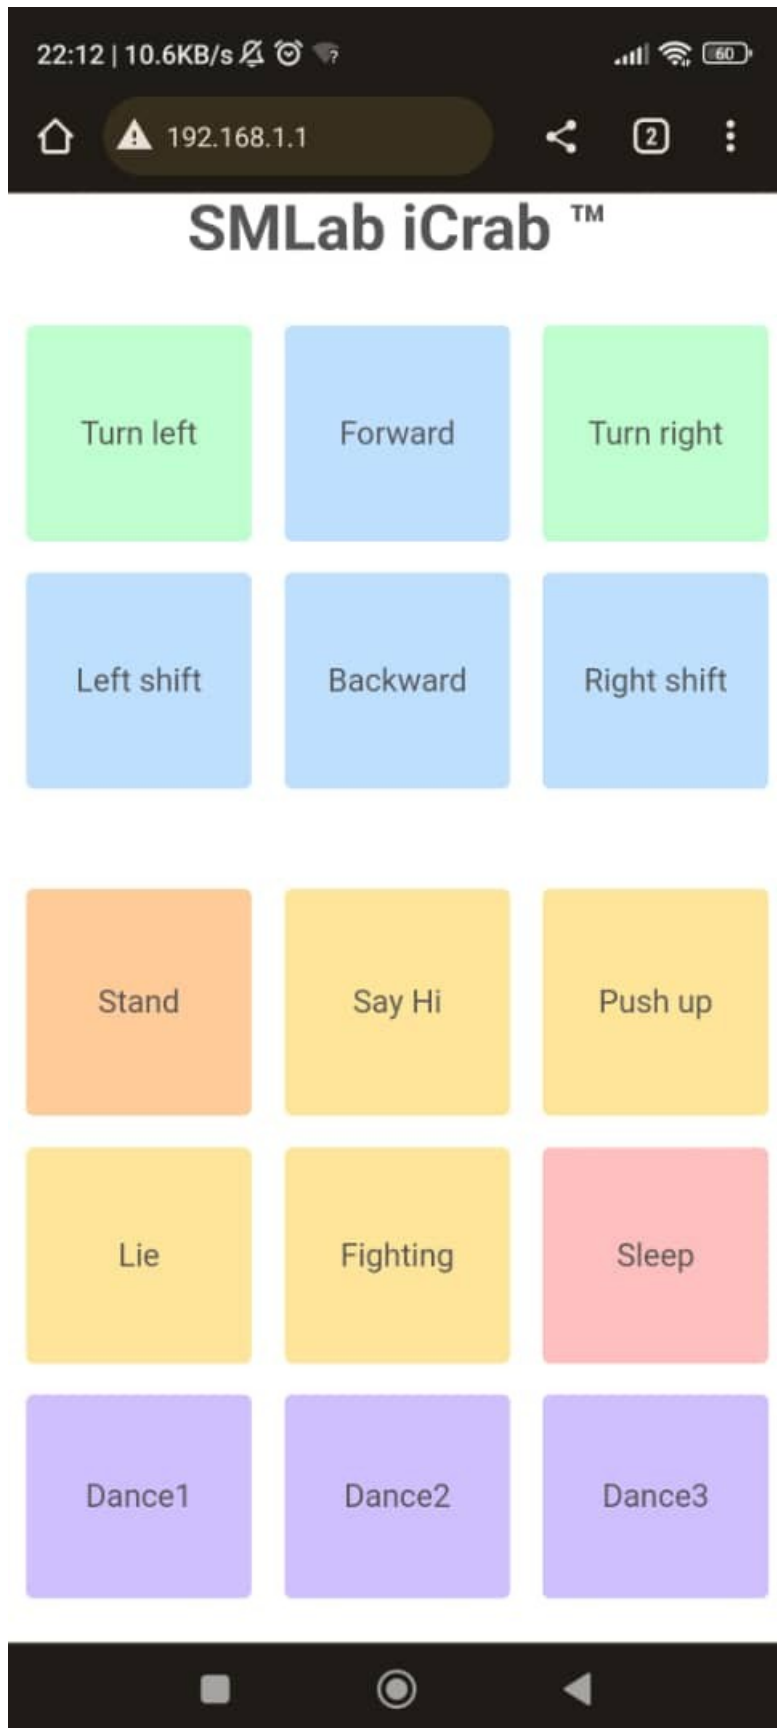


- The Motion Editor Page

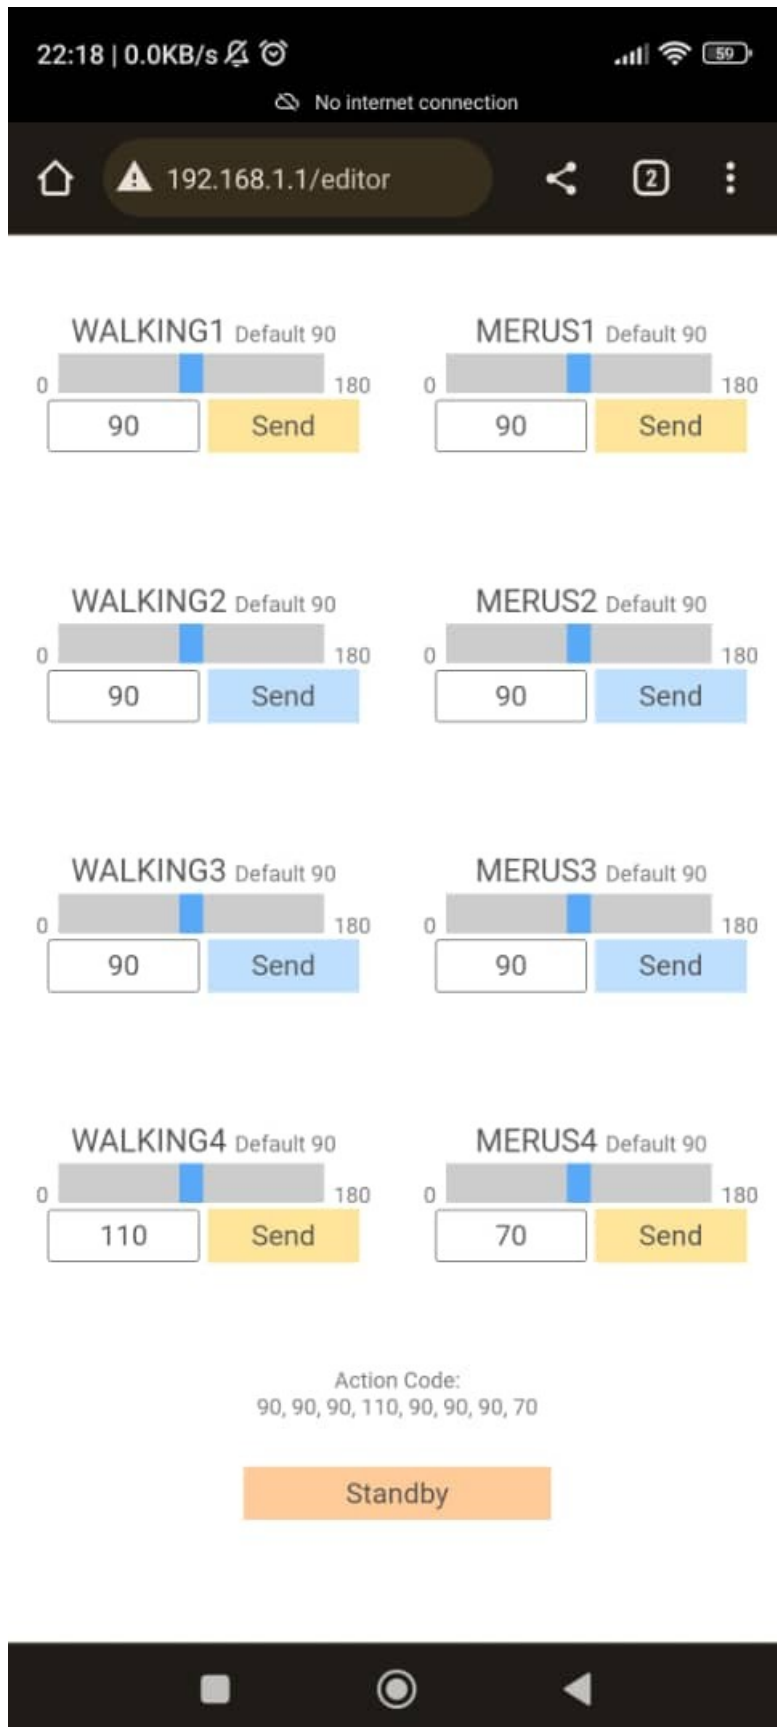

- The Zero Page

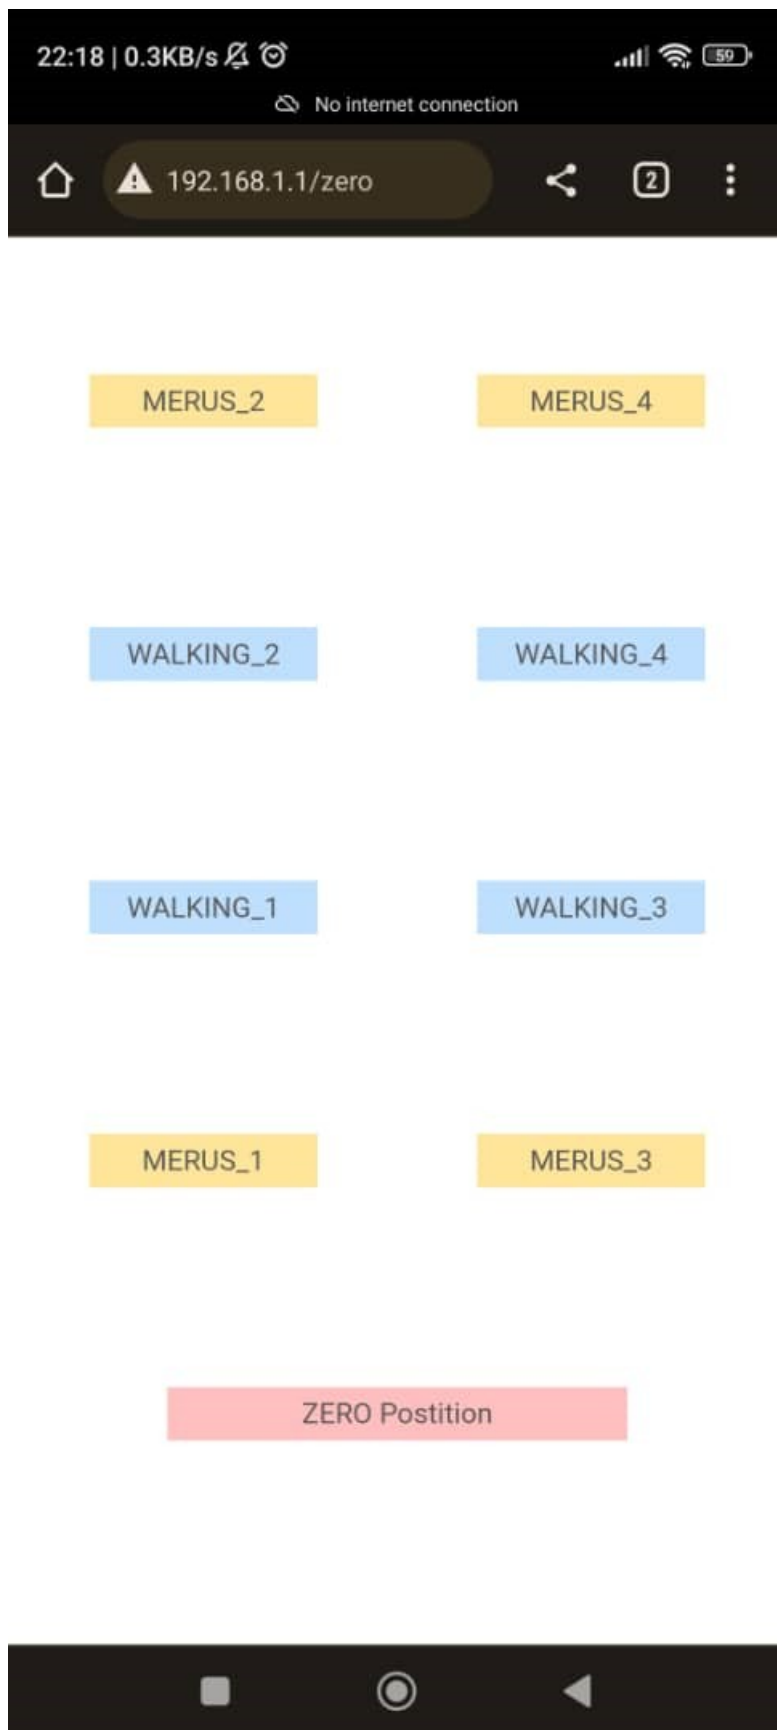

- The Setting page

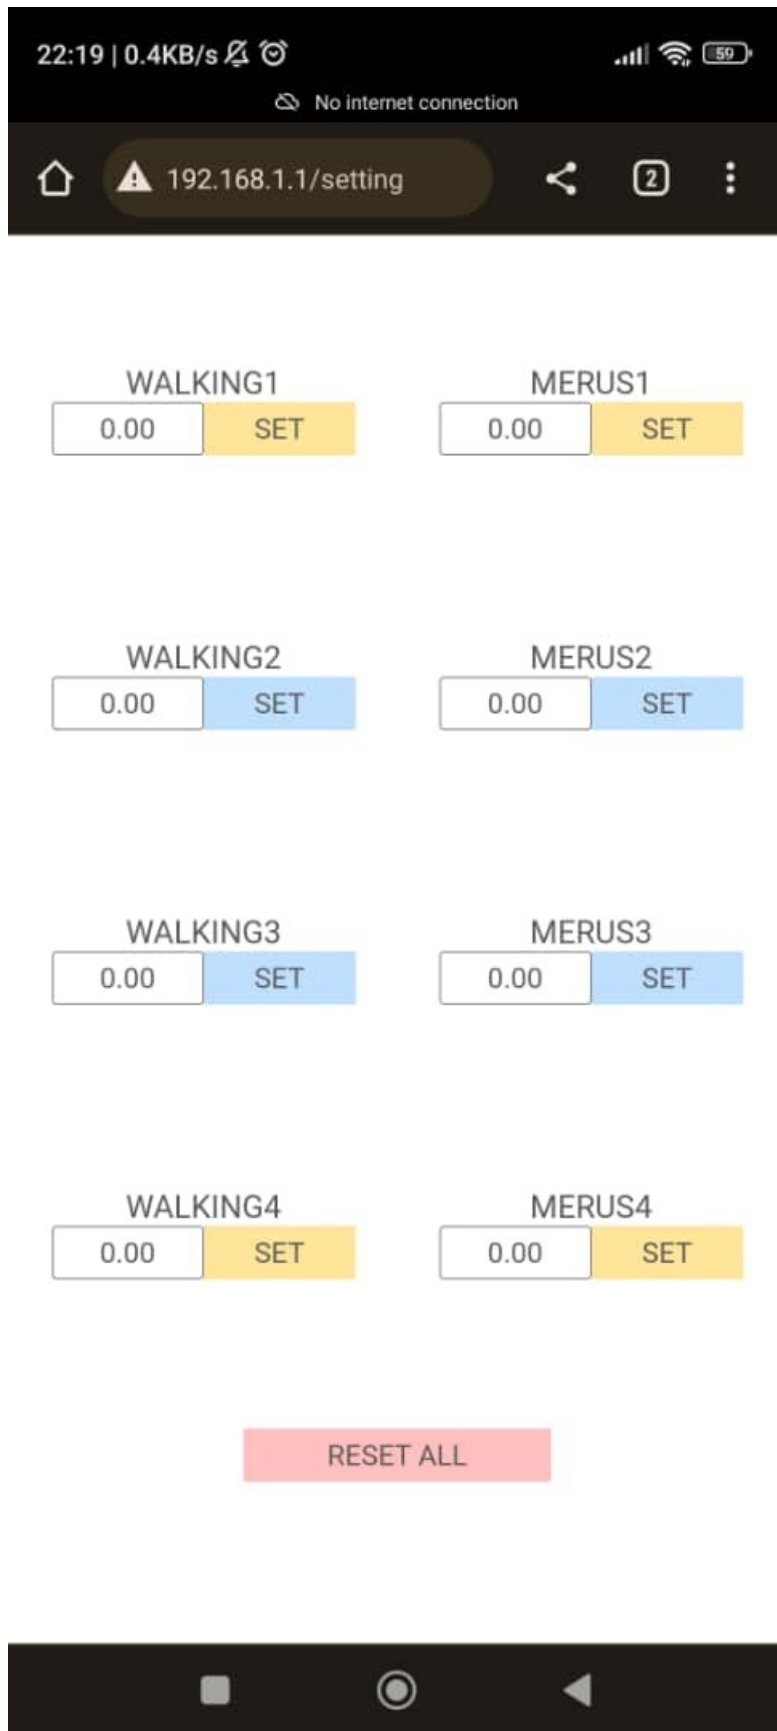

3.4 Servo Motor

- The servo motor used in the iSEB Crab is TowerPro SG90 servo .
- The wire colors are Red = Battery(+) Brown = Battery(-) Orange = Signal
- The figure below show how the servo motor angle control by pwm
- Servo motor control with 50 Hz pulse width modulated (PWM) signal, which produces a pulse every 20ms.

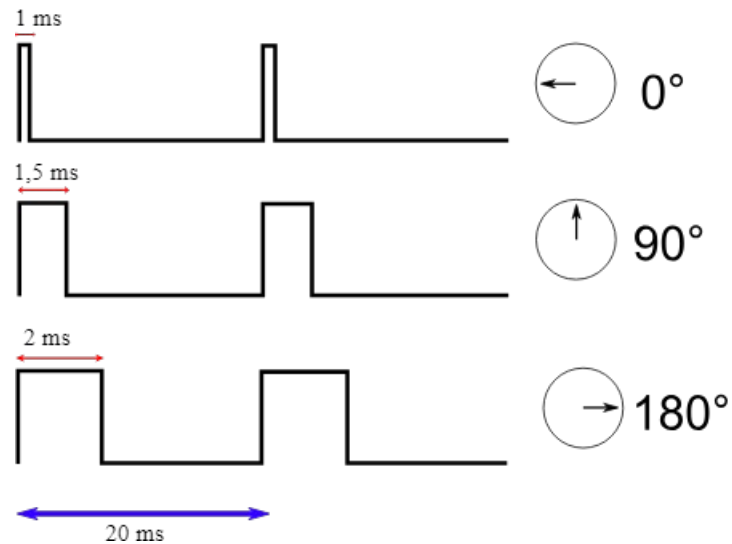


Figure 16: How servo's position controlled by PWM signal

3.4.1 How the Servo Motor Code works

3.4.1.1 Setup

- We are using the LED Control library from ESP32 hal library to control servo motor.
- The LED control (LEDC) peripheral is primarily designed to control the intensity of LEDs, although it can also be used to generate PWM signals for other purposes. .
- For more details of the LEDC library can refer to the link
 - <https://espressif-docs.readthedocs-hosted.com/projects/arduino-esp32/en/latest/api/ledc.html>
- We able to generate PWM signals to control the servo motor.
- We have a motorInit function in the setup function to call the setup.
- We are calling function ledcSetupledc and ledcAttachPin in function motorInit.
- Function ledcSetupledc is used to setup the LEDC channel frequency and resolution.
 - `uint32_t ledcSetup(uint8_t channel, uint32_t freq, uint8_t resolution_bits);`
 - channel select LEDC channel to config.
 - ESP32 have 16 channels
 - freq select frequency of pwm.
 - resolution_bits select resolution for ledc channel.
 - range is 1-14 bits (1-20 bits for ESP32)
- Function ledcAttachPin is used to attach the pin to the LEDC channel.
 - `void ledcAttachPin(uint8_t pin, uint8_t chan);`
 - pin select GPIO pin.
 - chan select LEDC channel.
- The follow table is showing the GPIO vs Channel vs Connector in the example code

Walking/Merus	GPIO	Channel	Connector
WALKING1	19	1	CN15
WALKING1	15	2	CN9
WALKING1	33	3	CN7
WALKING1	13	4	CN1
MERUS1	23	5	CN16
MERUS2	4	6	CN10
MERUS3	32	7	CN8
MERUS4	12	8	CN2

Table 2: Position vs GPIO vs Channel vs Connector matrix

3.4.1.2 Code of motorInit function

```
// use 12 bit precession for LEDC timer
#define LEDC_TIMER_12_BIT 12

// use 50 Hz as a LEDC base frequency
#define LEDC_BASE_FREQ 50

#define WALKING_1 0 /* Chane1 0 */
#define WALKING_2 1 /* Chane1 1 */
#define WALKING_3 2 /* Chane1 2 */
#define WALKING_4 3 /* Chane1 3 */
#define MERUS_1 4 /* Chane1 4 */
#define MERUS_2 5 /* Chane1 5 */
#define MERUS_3 6 /* Chane1 6 */
#define MERUS_4 7 /* Chane1 7 */

void motorInit()
{
    // Setup timer
    ledcSetup(WALKING_1, LEDC_BASE_FREQ, LEDC_TIMER_12_BIT);
    ledcSetup(WALKING_2, LEDC_BASE_FREQ, LEDC_TIMER_12_BIT);
    ledcSetup(WALKING_3, LEDC_BASE_FREQ, LEDC_TIMER_12_BIT);
    ledcSetup(WALKING_4, LEDC_BASE_FREQ, LEDC_TIMER_12_BIT);
    ledcSetup(MERUS_1, LEDC_BASE_FREQ, LEDC_TIMER_12_BIT);
    ledcSetup(MERUS_2, LEDC_BASE_FREQ, LEDC_TIMER_12_BIT);
    ledcSetup(MERUS_3, LEDC_BASE_FREQ, LEDC_TIMER_12_BIT);
    ledcSetup(MERUS_4, LEDC_BASE_FREQ, LEDC_TIMER_12_BIT);

    // Attach timer to a led pin
    ledcAttachPin(19, WALKING_1); /* WALKING_1 */ /* CN15 */ /* PIN 19 */
    ledcAttachPin(15, WALKING_2); /* WALKING_2 */ /* CN9 */ /* PIN 15 */
    ledcAttachPin(33, WALKING_3); /* WALKING_3 */ /* CN7 */ /* PIN 33 */
    ledcAttachPin(13, WALKING_4); /* WALKING_4 */ /* CN1 */ /* PIN 13 */
    ledcAttachPin(23, MERUS_1); /* MERUS_1 */ /* CN16 */ /* PIN 23 */
    ledcAttachPin(4, MERUS_2); /* MERUS_2 */ /* CN10 */ /* PIN 4 */
    ledcAttachPin(32, MERUS_3); /* MERUS_3 */ /* CN8 */ /* PIN 32 */
    ledcAttachPin(12, MERUS_4); /* MERUS_4 */ /* CN2 */ /* PIN 12 */
    delay(50);
}
```

- From the code above we have set up pwm channel 0 to 7 to 50hz frequency with resolution 12 bit with function ledcSetup
- We have assign GPIO pin to the pwm channel accordingly with function ledcAttachPin.

3.4.1.3 Update duty cycle during runtime

- ESP32 will output pwm signal after we configure the frequenc , resolutoin to the pwm channel and assign the GPIO pin to each pwm channel.
- We can call LEDCWrite to update the duty cycle of the particular pwm channel.
- By updating duty cycle we can control the positoin of servo motor mention chalter 3.4
- Functoin ledcWrite is used to set duty for the LEDC channel.
 - void ledcWrite(uint8_t chan, uint32_t duty);
 - chan select the LEDC channel for writing duty.
 - duty select duty to be set for selected channel.
- In the example code, we have set the resolution bit to 12 bit hence there are 4095 steps for the reoslution.
- By calculation we set 409 to acheive 1ms duty cycle and 819 to achieve 2ms duty cycle.
- However the example we set min to 50 min and maximum to 550 due to base on testing the servo motor only react between 50 and 550 (will further investigate on this issue suspect is due to servo motor but yet to confirm with scope).
- For the servo postion array such as Servo_Prg_X, the position is store as position therefore a positoin convert to duty cycle is needed.
- Function Set_PWM_to_Servo is to convert the position to duty cycle and update to the pwm channel
 - void Set_PWM_to_Servo(int iServo, int iValue)
 - iServo select the LEDC channel for writing duty.
 - Ivalue select the position to convert to duty tobe set for selected channel.

3.4.1.4 Set_PWM_to_Servo

```
/* MOTOR CODE START */
void Set_PWM_to_Servo(int iServo, int iValue)
{
  Serial.print(F("iServo: "));
  Serial.print(iServo);
  Serial.print(F(" iValue: "));
  Serial.println(iValue);
  // Read from EEPROM to fix zero error reading
  iValue = (iValue*MAX/180.0)+MIN; /* conversion to pwm value */
  double NewPWM = iValue + preferences.getDouble((String(iServo)).c_str(),0);

  /* 0 = zero degree 550 = 180 degree*/
  ledcWrite(iServo,NewPWM);
}
```

- We have printed the input parameter iServo and iValue for debug purpose.
- We have do conversion for iValue from position to duty cycle
- We have done the zero error calibration but currently not in use the value will always be zero.
- We will udpate the pwm channel value with ledcWrite.