

ACTi SDK-10000
C Library Edition
V1.2.40

Programming Guide



www.acti.com

ACTi SDK-10000

This document is copyrighted, 2003 - 2008 by ACTi Corporation. All rights are reserved. ACTi Corporation reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

All other product names or trademarks are properties of their respective owners.

V1.2.40 Edition May. 2009

Table of Contents

1	OVERVIEW	1-1
	Introduction	1-1
	SDK Function Groups	1-1
	Architecture	1-2
	Application Type	1-3
	Topics	1-4
	What's New?	1-5
	Compiling and Linking.....	1-10
	Include Files \${SDK DIR}\SDK\Include	1-10
	Library Files \${SDK DIR}\SDK\LIB	1-10
	Runtime DLL Files \${SDK DIR}\SDK\DLL	1-10
	Sample Codes \${SDK DIR}\SDK\Samples	1-12
	StreamSample Program	1-14
	DecodeSample Program	1-15
	PTZSample Program	1-16
	AbsolutePosition Program	1-17
	URLSample Program	1-18
	ArchivePlayer Program	1-19
	ArchivePlayerMultiFile Program	1-20
	SearchSample Program	1-21
	MediaConverter Program	1-22
	RTPSample Program	1-23
	SendAudio Program	1-24
2	SEARCH DEVICE	2-1
	Device Locator Architecture.....	2-1
	Search Device	2-1
	How to detect device.....	2-3
	System Information	2-3
	Sample:	2-3
	System Property	2-4
	Sample:	2-4
	Video Color Adjustments	2-5
	Hue, Brightness, Contrast Setting	2-5
	Sample: 2-5	

Video Setting Configuration	2-7
Setup Resolution, Frame Rate, Bit Rate	2-7
Sample:	2-7
Save and Reboot	2-9
Execute Save and Reboot Command	2-9
Sample:	2-9
3 PREVIEW / RECORD / PLAYBACK	3-1
Preview / Record Architecture	3-1
Register to IP devices	3-1
Dual stream devices and multi channel devices	3-2
Choose stream or channel number	3-2
Variable Frame Rate and Multi-Stream.....	3-3
Choose stream or channel number	3-3
Preview Operations	3-4
Preview with Unicast Mode	3-4
Preview with Audio	3-5
Preview with 2-way audio	3-6
Preview with I-Frame Decoding only	3-7
Draw your own information on the preview window	3-8
Record Operations.....	3-9
Background record with multicast mode	3-9
Alarm Recording with DI event	3-10
Playback Operations.....	3-11
Open and close a raw data file	3-11
Play forward, backward	3-12
Play frame by frame	3-13
Play multiple files seamlessly	3-14
4 EVENT HANDLING	4-1
Digital I/O Architecture	4-1
Receives Digital Input Event	4-1
Send Digital Output	4-2
Motion Detection Event Handling.....	4-3
Sets Motion Detection parameters	4-3
Gets Motion Detection Settings	4-4
Receives Motion Detection Trigger Event	4-5
Status Callback – video lost, recovery, disconnect event	4-6
5 PTZ INTEGRATION	5-1

PTZ Integration Architecture	5-1
PTZ Parser Source Code	5-2
PTZ Protocol Files \${SDK-DIR}\PTZ-Protocol	5-4
6 IP QUAD VIDEO SERVER INTEGRATION	6-1
IP Quad Architecture.....	6-1
IP Quad URL Commands	6-2
7 ADVANCED TOPICS	7-1
Callback Functions	7-1
Deals with RAW file format	7-2
Deal Raw File Header and Footer	7-2
Get the Header and Footer	7-3
Raw File Payload	7-3
Deals with Media Stream	7-4
Raw Data Format in TCP 2.0	7-4
Get Streaming Raw Data (Video + Audio)	7-5
Detect I-Frame (key frame)	7-7
Decode MPEG-4 Stream with Xvid	7-8
Get RGB Image Data.....	7-10
Get RGB Image Data with Image Callback Function	7-10
Save RGB Data into a BMP file	7-12
Save Recording to an AVI file	7-14
Save Recording to an AVI file with SDK Function.....	7-17
Register Control Connection Only	7-18
Display text on screen.....	7-19
Use IPP codec	7-20
8 ACTI MPEG-4 DATA STRUCTURE	8-1
Connection Type.....	8-1
Unicast Video and Control Connection	8-1
Multicast Video + Control connection	8-1
Multicast Video(Without Connection)	8-1
Unicast Video and Control	8-2
Connect to Video Server	8-2
Definition of B2 Frame	8-3
Mpeg4 Video Data Format.....	8-4
Video and Audio Frame	8-4
Video frame	8-4
I-Frame Data Structure	8-5
B2 Header for Video	8-5
Bitstream Data	8-7

I-Frame Data	8-8
P-Frame Data Structure.....	8-9
B2 Header for Video	8-9
P-Frame Data	8-11
Code Mapping in B2 Header	8-12
1.Time Zone	8-12
2.Resolution	8-13
3.Bitrate	8-14
Audio frame	8-15
Control Connect Session	8-16
Build a connection	8-16
TCP Authentication Request and Response Frame	8-17
Control Authentication Request and Response Frame	8-20
9 ACTI JPEG-COMPRESSED VIDEO DATA STRUCTURE	9-1
JPEG-compressed Video Data Format.....	9-1
Motion JPEG and Audio Frame	9-1
Motion JPEG frame In TCP Session	9-1
Motion JPEG frame In RTP Session	9-1
TCP/MJPEG Header.....	9-2
Example of TCP/MJPEG Header.....	9-2
RTP/MJPEG Header.....	9-4
Main header	9-4
Restart Marker header	9-5
Quantization Table header	9-5
Example of RTP/MJPEG Header.....	9-6
10 ACTI H.264 VIDEO DATA STRUCTURE	10-8
H.264-compressed Video Data Format.....	10-8
H.264 and Audio Frame	10-8
H.264 frame In TCP Session	10-8
H.264 frame In C SDK 10000 connection	10-8
H.264 frame In RTP Session	10-10
Sequence Header Pocket (type 1-23) :	10-12
FU-A(type 28) :	10-13
11 TCP AND RTP/RTSP PACKET FORMAT	11-16
TCP v1.0 Packet.....	11-16
TCP v1.0 Video Connect Flow	11-16
TCP v1.0 Video Packet Format	11-19

Multicast v1.0 Packet.....	11-20
Multicast v1.0 Video Connect Flow	11-20
Multicast v1.0 Video Packet Format	11-22
TCP v2.0 Packet.....	11-23
TCP 2.0 Video Connect Flow	11-23
TCP 2.0 Video Packet Format	11-25
Composition of data:	11-26
TCP of ACTi:	11-27
Multicast of ACTi :	11-28
Exported Struct	11-29
Media Connection Configuration :	11-29
Media Video Configuration :	11-29
Media Port Information :	11-30
Media Render Information	11-30
Media Motion Information	11-30
Raw File Record Information	11-30
Time Zone	11-31
DI Notify	11-31
Time Code Notify	11-31
Raw Data Refresh Notify	11-31
Video Status Notify	11-32
Network Loss Notify	11-32
Motion Detection Notify	11-32
Image Refresh Notify	11-32
After Render Notify	11-32
Resolution Change Notify	11-32
Resolution Map	11-33
RS232 Data Refresh Notify	11-33
Digital Input Default Value	11-33
Digital Output Value	11-33
RS232 Setting	11-34
Play Rate	11-34
Contact Type	11-34
RS232 Baud Rate	11-34
Bit Rate	11-35
Codec Type	11-35
File Write Type	11-35
Render Type	11-35
Device Type	11-36

TCP v2.0 Audio Packet Format	11-37
Multicast v2.0 Packet	11-38
Multicast v2.0 Video Connect Flow	11-38
Multicast v2.0 Video Packet Format	11-39
Multicast v2.0 Audio Packet Format	11-41
RTP Packet Format	11-42
RTP over UDP :	11-42
RTP over Multicast :	11-43
RTP Interface	11-44
SDP description :	11-44
RTSP request command :	11-45
[OPTIONS request]	11-45
[OPTIONS response]	11-45
[DESCRIBE request]	11-45
[DESCRIBE response]	11-45
[SETUP request]	11-46
[SETUP response]	11-46
[SETUP request]	11-46
[SETUP response]	11-47
[PLAY request]	11-47
[PLAY response]	11-47
[PAUSE request]	11-47
[PAUSE response]	11-48
[TEARDOWN request]	11-48
[TEARDOWN response]	11-48
RTP Protocol Flow	11-49
Establishment	11-49
TEARDOWN An Unicast RTP VIDEO STREAM	11-50
PLAY A Multicast RTP VIDEO STREAM (TRACK 1):	11-51
TEARDOWN A Multicast RTP VIDEO STREAM	11-52
12 MIGRATION PLAN FROM SDK-2000 TO SDK-10000	12-1
SDK-10000 New Features	12-1
SDK-2000 vs SDK-10000 Function Calls.....	12-2
Application Migration Guide	0
Application that uses MPEG-4 raw data only	0
Application that uses most function calls	0
13 APPANDIX A	1

1

Overview


Introduction

This material covers SDK architecture, data structure and procedures to illustrate the mechanisms to integrate the IP Surveillance devices. The content of this material is designed to lead the programmers go through the flow of the SDK and design their own application with supplied functions; they are organized in topics so that programmers may find the topics they want directly.

Please refer to Programming Guide for detailed API references.


SDK Function Groups

The whole SDK can be divided into following function groups.

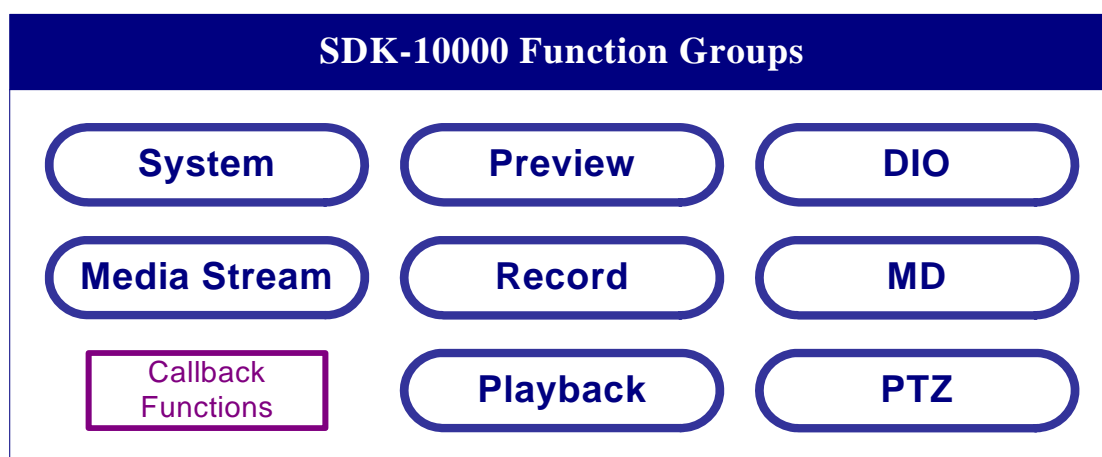

Architecture

SDK architecture and data flow is described as follow:

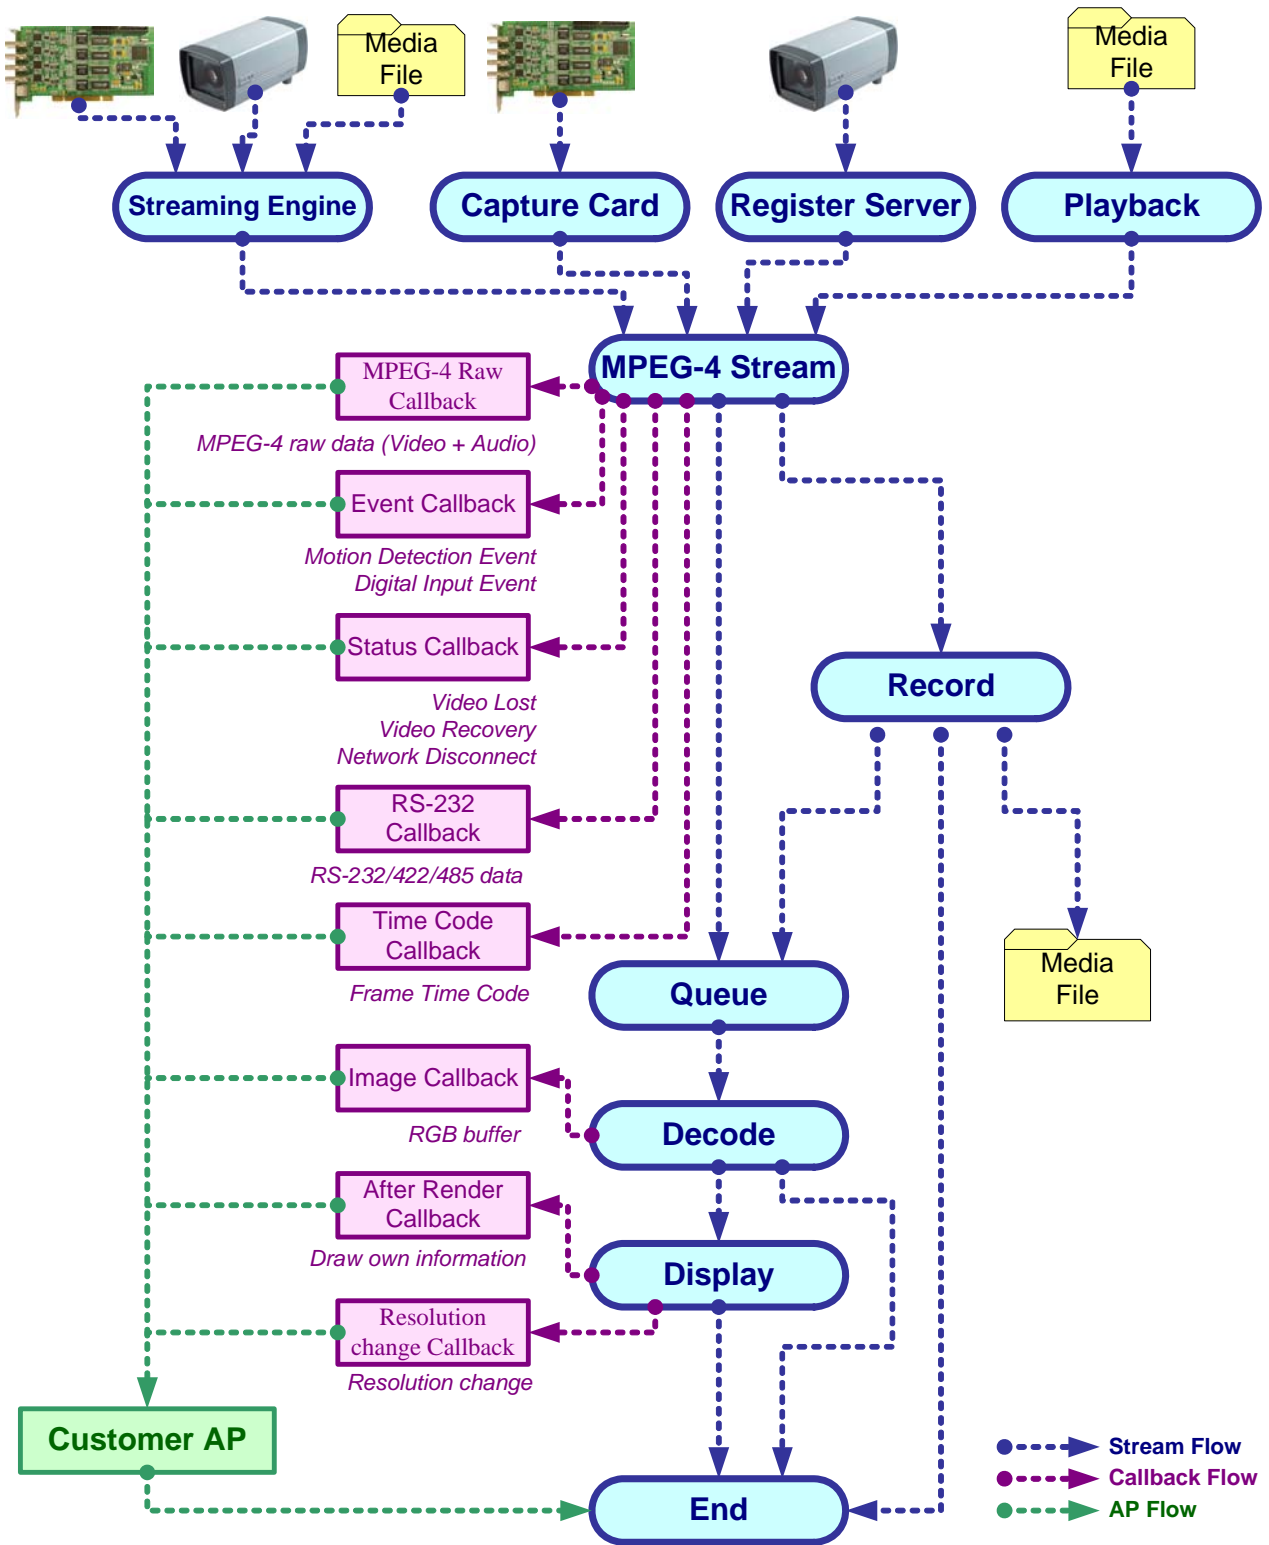

Application Type

Based on the architecture and data flow, users may develop following application type:

1. **Full-featured Surveillance system:** preview, record, playback, DIO event, MD event and PTZ functions
2. **Background recording:** record without preview. The stream can be configured as unicast or multicast mode
3. **Connection with event handling only:** connection only, wait for digital input or motion detection event; when the event triggered, then starts streaming and record the event
4. **Background recording with RGB buffer:** record without preview, receives RGB buffer to run user-defined motion detection algorithm at the same time
5. **Process MPEG-4/Motion JPEG/H.264 video stream:** advanced users may acquire video stream and process by themselves. Related video, audio and audio+video callback functions are provided
6. **User-defined information on screen:** user may use after render callback function to draw user-defined information on preview window, including OSD text, draw video intelligence information

Topics

Streaming Client Library is developed for MPEG-4/Motion JPEG/H.264 Video Network Streaming Application.

It contains following abilities:

- Registration with Unicast / Multicast
- Preview / Record / Playback
- DIO Event Handling
- Motion Detection Event Handling
- PTZ Integration
- Status Callback
- IP Quad Integration
- Advanced Topics
 - ◆ Gets Video data via Video callback function
 - ◆ Gets RGB via image callback function
 - ◆ ACTi Video Time code format
 - ◆ Decode I Frame Only
 - ◆ Save ACTi Video raw data into AVI format
 - ◆ Gets RGB via image callback function

What's New?

Following lists the new contents in this release:

v1.2

- ◆ Multiple-files playback.
- ◆ Fast file shuffle playback with index
- ◆ Auto frame rate by CPU thrash hole
- ◆ Inverse rendering image.
- ◆ New PTZ functions and absolute PTZ functions.
- ◆ Support Motion-JPEG
- ◆ Support H.264
- ◆ Support Mega-pixel mpeg4
- ◆ Jitter less function
- ◆ New Callback functions
- ◆ New Codec Type: IPP

v1.2sp1

- ◆ New chapter about H.264/RTP
- ◆ Delete all chapters about URL command. (Attach “URL Command Specification” to SDK folder instead)
- ◆ Support Dual-Stream connection.(Need Dual-Stream Devices)

SDK-10000 Key Features

Category	Function	Files	SDK-10000		
			v1.1	v1.2	v1.2 SP1
Connection	TCP v1.0	ATCP10.dll	v	v	v
	TCP v2.0	ATCP20.dll	v	v	v
	Multicast v1.0	AMCST10.dll	v	v	v
	Multicast v2.0	AMCST20.dll	v	v	v
	Streaming Engine	ASE.dll	v	v	v
	RTP over UDP	ARTP.dll		v	v
	RTP over MCST	ARTP.dll		v	v
Resolution	Megapixel	KMPEG4.dll		v	v
H.264 Decoder	Intel IPP	IPPCodec.dll		v	v
MPEG-4 Decoder	XviD	XVIDCodec.dll	v	v	v
	FFMPEG	FFMCodec.dll	v	v	v
	Intel IPP	IPPCodec.dll		v	v
MJPEG Decoder	MJPEG Decoder	MJPEGCodec.dll		v	v
Render	GDI	DGDI.dll	v	v	v
	DirectX	DxDraw.dll		v	v
Kernel	DIO	KMPEG4.dll	v	v	v
	Motino Detection	KMPEG4.dll	v	v	v
Live View	Decode I-Frame	KMPEG4.dll	v	v	v
	Auto Drop Frame	KMPEG4.dll		v	v
	Flip	KMPEG4.dll		v	v
	Mirror	KMPEG4.dll		v	v
	Privacy Mask	KMPEG4.dll		v	v
Record	RAW format	FRAW.dll	v	v	v
	AVI format	FAVI.dll	v	v	v
	RAW + IDX format	FRAW2.dll		v	v
	Record H.264	FRAW.dll , FRAW2.dll			v
	Record MJPEG	FRAW.dll , FRAW2.dll			v
Playback	RAW format	ARAW.dll	v	v	v
	Play multiple file	AMRAW.dll		v	v
	Play H.264	ARAW.dll,AMRAW.dll			v
	Play MJPEG	ARAW.dll,AMRAW.dll			v
PTZ	PTZ Operation	PTZParser.dll	v	v	v
	Absolute Position	PTZParser.dll		v	v

Details:

(v1.2.37) Add function of KSetVideoTransferConfig, KSetMotionInfoEx, KGetMotionInfoEx.

(v1.2.37) The function of KSetTextOut is work well.

(v1.2.36)

- a. Add TCPVideoStreamID to specify video track, value 0 to 255 for 1 to 256 video track.
- b. Add RTPVideoTrackNumber (set it to 0, ARTP will use 1st video track, 1 to 255 is for specify video track).
- c. Add RTPAudioTrackNumber (set it to 0, ARTP will use 1st audio track, 1 to 255 is for specify audio track).

(v1.2.35) ARAW has been supported time zone.

(v1.2.35) Removed VideoTrackIDOnRTP and AudioTrackIDOnRTP, and change ChannelNumber size to integer.

(v1.2.34) Removed StreamID and using ChannelNumber instead.

(v1.2.33) Handle H.264, Mjpeg resolution change.

(v1.2.33) Enable Mjpeg Decode I Only (1 Frame per second).

(v1.2.31) Add KSetSmoothFastPlayback for smooth fast forward playback.

(v1.2.30) Add KGetDIOStatusByHTTPEx to request DIO status from multi-channel Devices

(v1.2.28) Support full time zones.

(v1.2.27) Support H.264, Mpeg4, Mjpeg on preview, record and playback.

(v1.2.27) Support Dual-Stream connection.(Need Dual-Stream Devices).

(v1.2.27) Replace time code by local time (default setting), to use KReplaceTimeCodeByLocalTime to enable / disable the function.

(v1.2.27) Add KDropNextPFrameTillIframe for drop decoding of P-frames in a GOP.

(v1.2.19) Supporting 16ch preview (D1 @ 30 FPS 1.5MB bit rate)

(v1.2.18) Supporting preview, record and playback for H264 and Mjpeg.

(v1.2.17) Add contact type CONTACT_TYPE_MULTIPLE_PLAYBACK for multiple playback and remote multiple playback.

(v1.2.16) Add KSetAutoDropFrameByCUPerformance to enable auto drop frame mode. It enable a CPU thrash hole ensure dynamic frame rate.

(v1.2.16) Add KSetTimeCodeCallbackEx to call back time code in millisecond

(v1.2.16) Add KSetFirstB2Callback to call back first B2 packet

(v1.2.16) Rename KReverseImageLeftToRight to KMirrorImage.

(v1.2.16) Rename KReverseImageUpToDown to KFlipImage.

(v1.2.15) Add Multiple Files Playback functions

API :

- KSetMultipleMediaConfig
- KAddMultipleMedia
- KRemoveMultipleMedia
- KClearAllMultipleMedia
- KGetNthBeginTimeFromMultipleMedia
- KGetNthEndTimeFromMultipleMedia
- KGetTotalIFramesOfMultipleMedia
- KGetCurrentReadingFileIDFromMultipleMedia
- KGetCurrentReadingAbsTimeFromMultipleMedia

(v1.2.13) Add KPTZGetRequestAbsPTZCommand for get a PTZ command to request PTZ absolute position.

API :

- KPTZGetRequestAbsPTZCommand

(v1.2.13) Add KSetFirstB2Callabck for get the first B2 data.

API :

- KSetFirstB2Callabck

(v1.2.12) Modified the callback data of KSetDICallbackEx from int *32 to an array

(v1.2.12) Add absolute position of PTZ functions.
Two new samples demonstrate the new functions.

(v1.2.12) Add an error code value by 32 for streaming fail

(v1.2.10) Add KEnablePricavyMask for setup 3 region of privacy mask on preview

(v1.2.08) Add KSetDICallbackEx to notify DI on / off

API :

- KSetDICallbackEx

(v1.2.06) Support mega-pixel mpeg4 video.

(v1.2.06) Support mega-pixel motion jpeg video (preview only)

(v1.2.06) Add decoder mode in SDK10000, now you can use SDK10000 to decode the Mpeg4 video from IP camera.

API :

- KStartDecodeMode
- KDecodeFrame
- KStopDecodeMode.

(v1.2.06) Add Digital PTZ functions.

Digital PTZ functions.

API :

- KDigitalPTZEnable
- KDigitalPTZTo

(v1.2.06) Add Reverse image left to right function

Inverse the image while playing video stream.

API :

- KReverseImageLeftToRight
- KReverseImageUpToDown

(v1.2.06) Add Jitter less adjust function

Enable a buffer to keep down jitter of video stream.

API :

- KEnableJitterLessMode
- (v1.2.06) Increase connecting speed.

■

Compiling and Linking

This section describes the compiling and linking options.

Include Files `${SDK DIR}\SDK\Include`

File	Description
SDK10000. h	SDK 10000 include file.

Library Files `${SDK DIR}\SDK\LIB`

File	Description
KMpeg4. l i b	SDK 10000 library file.
PTZParser. l i b	PTZ command parser.

Runtime DLL Files `${SDK DIR}\SDK\DLL`

File	Description
KMpeg4. dl l	SDK Kernel dll.
ATCP10. dl l	AVC adaptor on networking module for TCP 10 data.
ATCP20. dl l	AVC adaptor on networking module for TCP 20 data.
AMCST10. dl l	AVC adaptor on networking module for Multicast 10 data.
AMCST20. dl l	AVC adaptor on networking module for Multicast 20 data.
ARTP. dl l	AVC adaptor on networking module for RTP data.
ARAW. dl l	AVC adaptor for playback.
AMRAW. dl l	AVC adaptor for multiple files playback
DGDI . dl l	GDI viewer
DxDraw. dl l	DirectX viewer
FRAW. dl l	File adaptor on raw data format
FAVI . dl l	File adaptor on avi data format
FRAW2. dl l	File adaptor on raw data format plus index
FFMCODEC. dl l	MPEG-4 software CODEC
XVI DCODEC. dl l	MPEG-4 software CODEC













P51CODEC. dl I	MPEG-4 software CODEC
WI SCODEC. dl I	MPEG-4 software CODEC
I H264CODEC. dl I	H.264 software CODEC
I PPCodec. dl I	IPP CODEC
i pp*. dl I	IPP related functions
MJPEGCODEC. dl I	Motion JPEG software CODEC
PTZParser. dl I	PTZ supporting functions

Sample Codes \${SDK DIR}\SDK\Samples

SDK-10000 v1.2 sample programs can be reached at \${SDK Directory}\SDK\Samples

SDK-10000 v1.2 provides several samples:

C Edition Sample Codes					
Sample Code	Description	VC6	VC2003	VC2005	VC2008
AbsolutePosition	Use absolute position to control PTZ Camera.	●	●	●	●
ArchivePlayer	Preview a RAW file with playback function.		●	●	●
ArchivePlayerMultiFile	Play multiple RAW file seamlessly		●	●	●
ControlSample	Setup control port connection and receive event from device directly	●	●	●	●
DecodeSample	Connects to the device receives media raw data decode MPEG4/H.264 to RGB buffer display RGB buffer Save to BMP file		●	●	●
MediaConverter	Convert RAW file to AVI format		●	●	●
PTZSample	Get PTZ command from PTZParser library Send PTZ command via URL command	●	●	●	●
RTPSample	Connects to device using RTP over UDP or RTP over Multicast Audio supported		●	●	●
StreamSample	Live view via TCP, Multicast, RTP 2-way audio, Record, Playback Motion Detection, DIO Get/Set device configuration	●	●	●	●

SearchSample	Search for connectable devices				
SendAudio	Send wave file to device.				
URLSample	Send URL request and receive URL response from device.				

StreamSample Program

StreamSample codes demonstrate following functions:


1. Search Server
2. Connection mode: unicast, multicast
3. Preview, Record
4. Motion Detection set up and trigger
5. DI trigger and sends DO
6. Audio functions

The screenshot displays the AdapterTester application window, which is divided into several functional panels. At the top, there are dropdown menus for 'Contact type' (set to CONTACT_TYPE_UNICAST_WOC_PREVIEW) and 'Streaming Engine' (set to Not using Streaming Engine). Below these are input fields for Unicast IP (172.16.1.42), Multicast IP (228.5.6.1), TCP Type (Auto Select By UniCast IP), and File name (c:\rec.raw). A central area contains fields for Channel No. (0), UID (Admin), PWD (123456), Register Port (6000), Control Port (6001), Streaming Port (6002), Multicast Port (5000), HTTP Port (80), RTSP Port (7070), S Port C2S (6005), S Port S2C (6006), and Timeout (0). To the right, a 'Select CODEC' section offers XVIDCODEC, WISCODEC, and IPPCODEC. Below this are 'Enable Decoder' and 'Enable Render' sections, each with 'Enable' and 'Disable' radio buttons. The 'Drawer Interface' section has 'DGD I' and 'DXDRAW' options. 'Decode Mode' includes 'Decode All Frame' and 'Decode I Frame Only'. 'Stretch Mode' has 'Enable' and 'Disable' options. A 'Play Rate' dropdown is set to 1.0. A control bar features buttons for Start, Stop, Exit, Fast, Smooth, and x. A 'Volume' section includes a 'Mute' button. The 'REC Type' section has 'RAW' and 'AVI' options. 'Start record' and 'Stop record' buttons are present. A 'File' field shows c:\rec.raw. 'Start Audio Transfer' and 'Stop Audio Transfer' buttons are also visible. 'Audio transferability Off' is indicated. A 'Variable Frame Rate' field is set to 0. A 'Save & Reboot' button is at the bottom right. The bottom left panel, 'Video Config', includes sliders for Brightness, Contrast, Saturation, and Hue, and dropdowns for Resolution, FPS, Bitrate, and TV STD. The 'Motion Setting' panel features three motion detection zones (Motion1, Motion2, Motion3) with X, Y, W, H, and Sensitivity parameters. The 'DI Status' panel shows 'Default' and 'DI1', 'DI2' buttons. The 'Send DO' panel includes 'DO Both', 'DO 1', and 'DO 2' buttons.

DecodeSample Program

PlaybackSample codes demonstrate following functions:

1. Decode MPEG-4/H.264 into RGB buffer
2. Display RGB buffer onto screen
3. Save RGB buffer to BMP file
4. Decode I-frame only

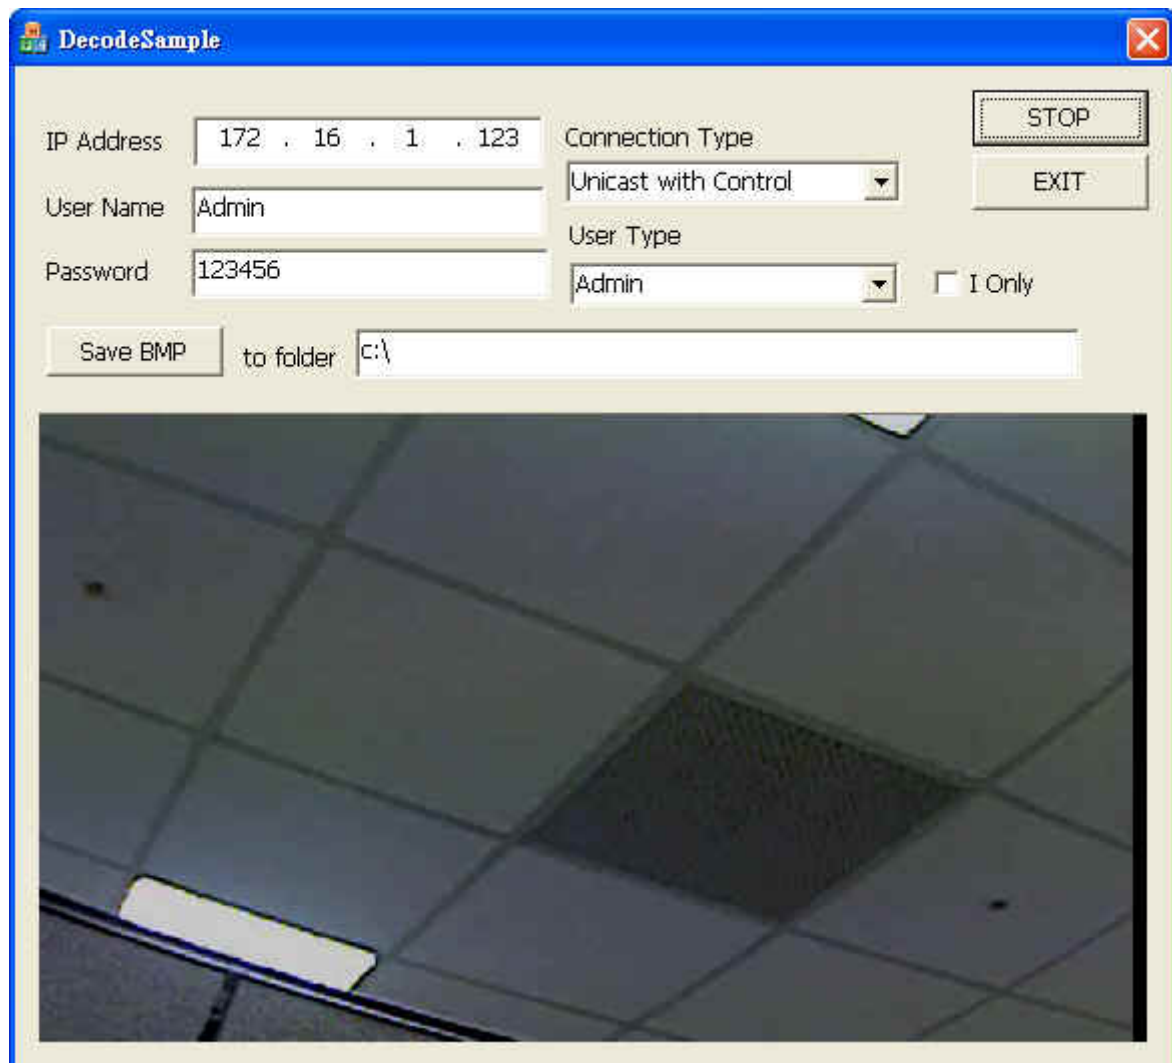

PTZSample Program

PTZSample codes demonstrate following functions:

1. Read PTZ protocol files
2. Operate PTZ functions.(Most PTZ functions were updated since V1.2)
3. Demonstrate Pan, Tilt, Zoom, Focus, Iris, Preset, OSD, and Absolute PTZ functions. (Absolute PTZ functions only work with DynaColor protocols now.)
4. URL Command to send PTZ commands.
5. Get PTZ command using PTZParser library. (PTZParser was integrated into SDK V1.2, so that is major change of PTZ APIs.).


The screenshot displays the PTZSample application window. It features a central video feed showing a camera view of a tiled floor. Surrounding the feed are several control panels:

- Connection Panel:** Includes fields for IP (172.16.1.123), ID (Admin), Password (*****), RS232 (N81), and Baudrate (9600). Buttons for Connect and Disconnect are present.
- Protocol Panel:** Includes Addr ID, Send Mode (RS232), File, and Build-in options.
- PTZ Cmd Panel:** Includes Command, Param1, Param2, and URL fields, along with TestStart, TestStop, Get URL Cmd, and Submit buttons.
- PAN/TILT Panel:** Includes a 3x3 grid of buttons (UL, U, UR, L, S, R, DL, D, DR) and a Speed (1~5) dropdown.
- Zoom Panel:** Includes Zoom In, Zoom Stop, and Zoom Out buttons.
- Focus Panel:** Includes Focus In, Stop, and Focus Out buttons.
- Iris Panel:** Includes Iris On and Iris Off buttons.
- OSD Panel:** Includes a 3x3 grid of buttons (U, L, S, R, D) and On, Off, Leave, and Stop buttons.
- Preset Panel:** Includes Set, Goto, and Clr buttons, each followed by a 16-position grid.
- Absolute PTZ Panel:** Includes Pan (0~360), Tilt (0~90), Zoom (0~100), Direction (CCW), and PT Speed (0~5) fields, along with SendAbsPTZcmd and SendAbsPTcmd buttons.
- Encoder Cmd Panel:** Includes Command, Param_Str, Param1, Param2, Param3, Param4, Get Encoder URL Cmd, Encoder URL Cmd, and Submit buttons.
- Return Value:** A large text area at the bottom for displaying the return value.

AbsolutePosition Program

AbsolutePosition codes demonstrate following functions:


1. Read PTZ protocol files
 2. Operate PTZ functions.(Demonstrate Pan, Tilt, and Zoom)
 3. Get current PTZ position.
- (This example works with Dynacolor protocol only.)

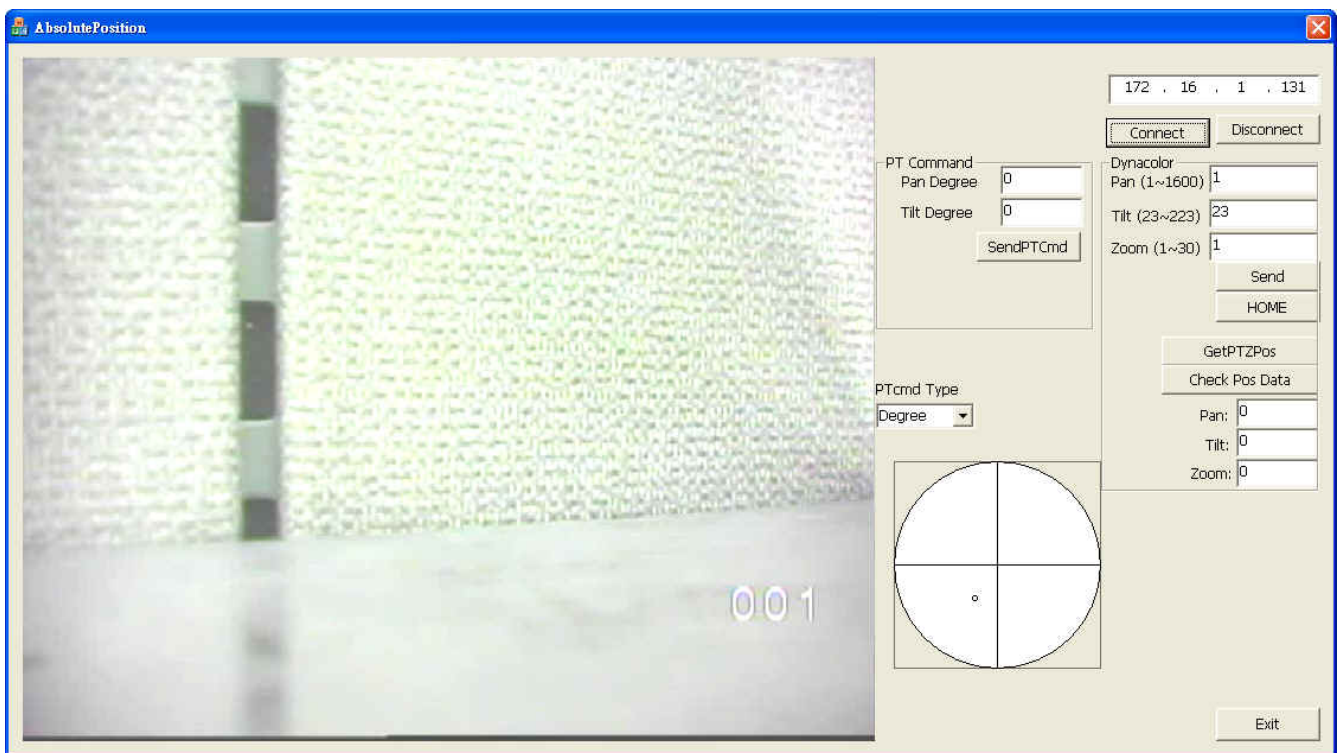

URLSample Program

URLSample codes demonstrate following functions:


1. Send URL command request.
2. Receive URL response

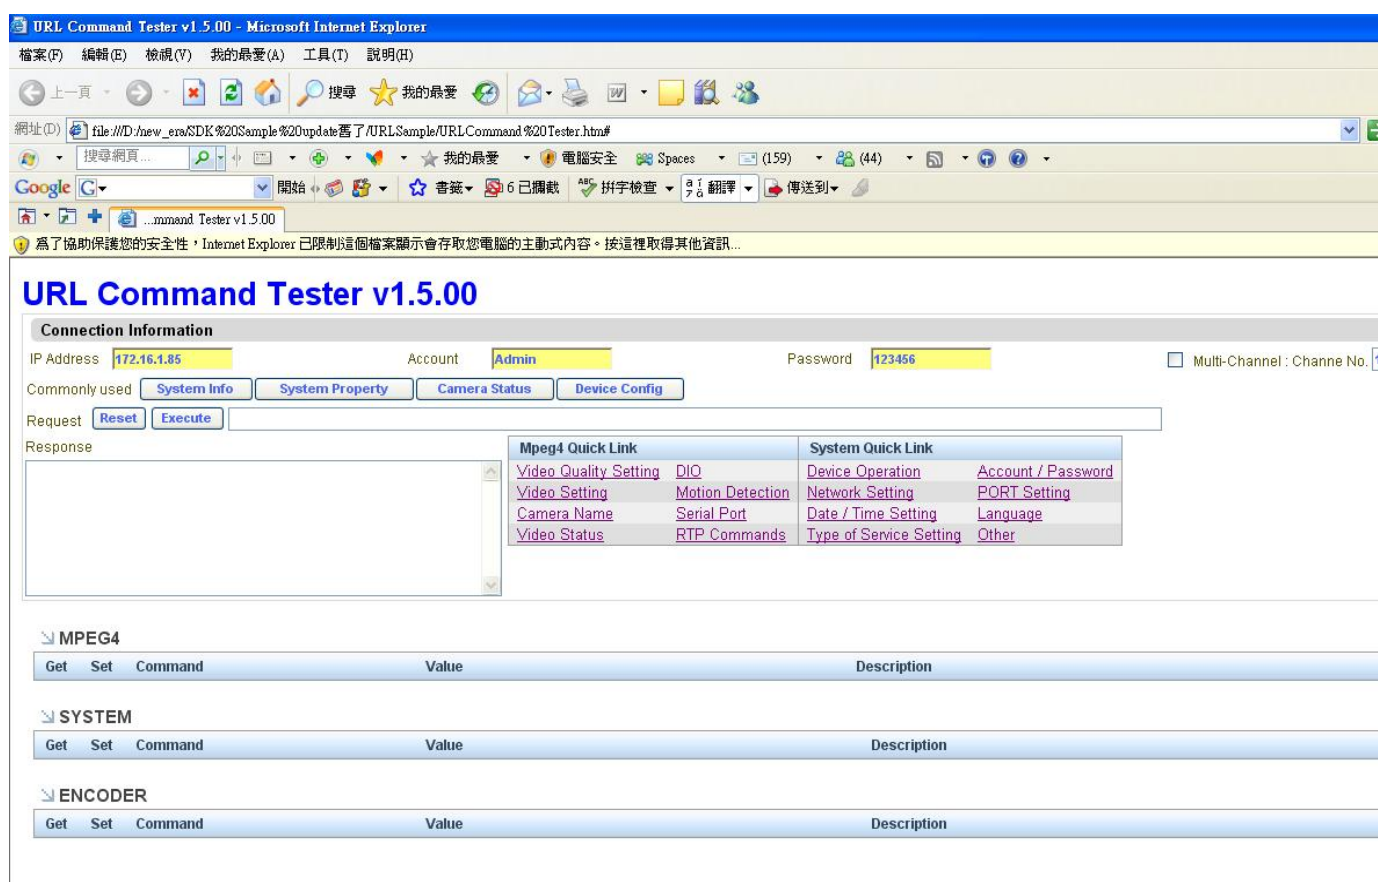

ArchivePlayer Program

ArchivePlayer codes demonstrate following functions:


1. Snapshot with JPG&BMP format.
2. Play with different speed.
3. Preview with frame by frame.
4. Pause.
5. Seek into random position.
6. Allow to play raw/mp4 file.
7. Display text on video frame.

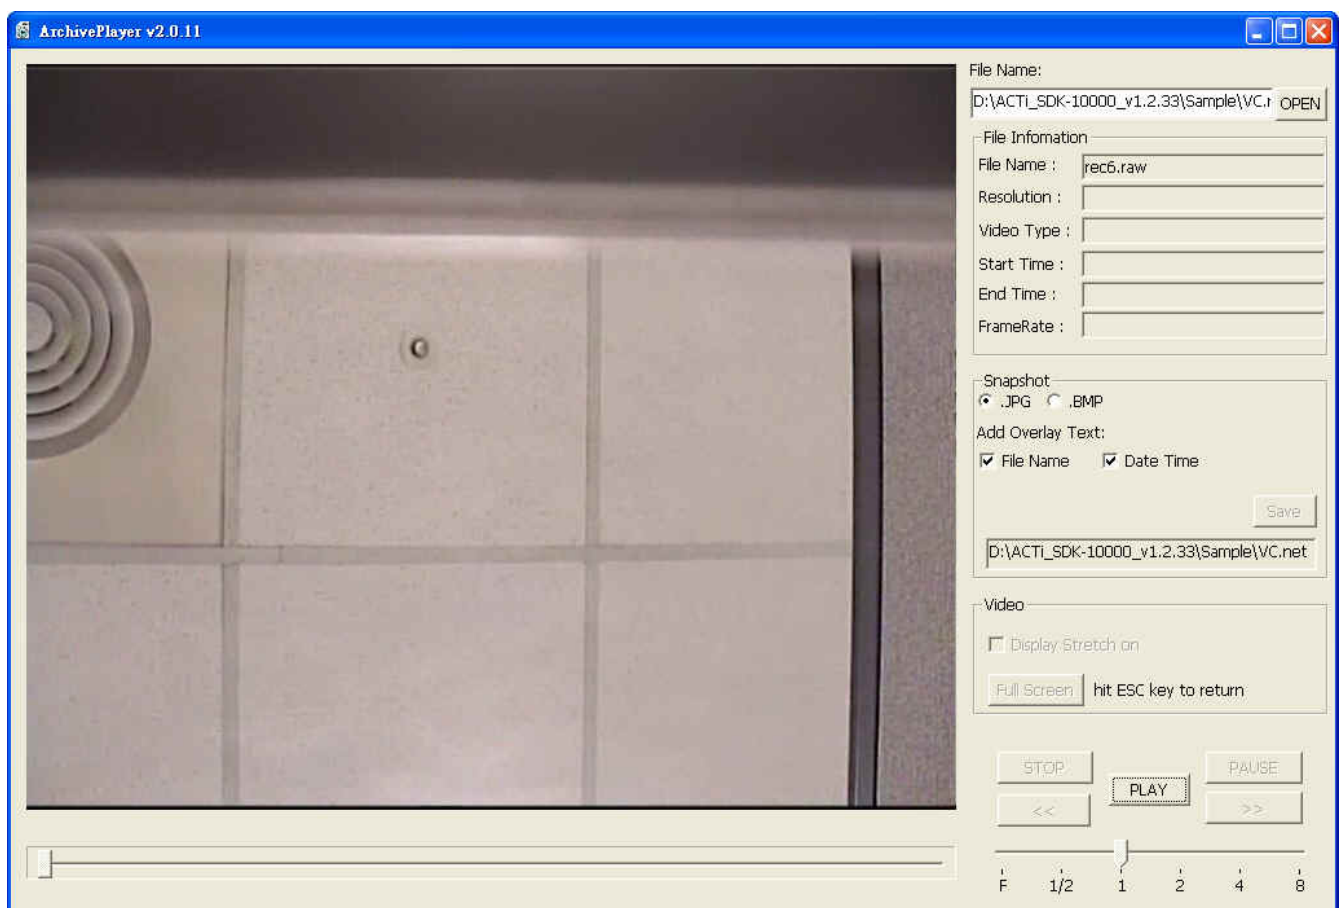

ArchivePlayerMultiFile Program

ArchivePlayerMultiFile codes demonstrate following functions:


1. Snapshot with JPG&BMP format.
2. Play with different speed.
3. Preview with frame by frame.
4. Pause.
5. Seek into random position.
6. Allow to play multiple raw files seamlessly.
7. Multiple files playback only work with “raw” file and “.idx” file in pairs by now.
8. The “.idx” files can be generated by FRAW2 or IDX generator in SDK utility.

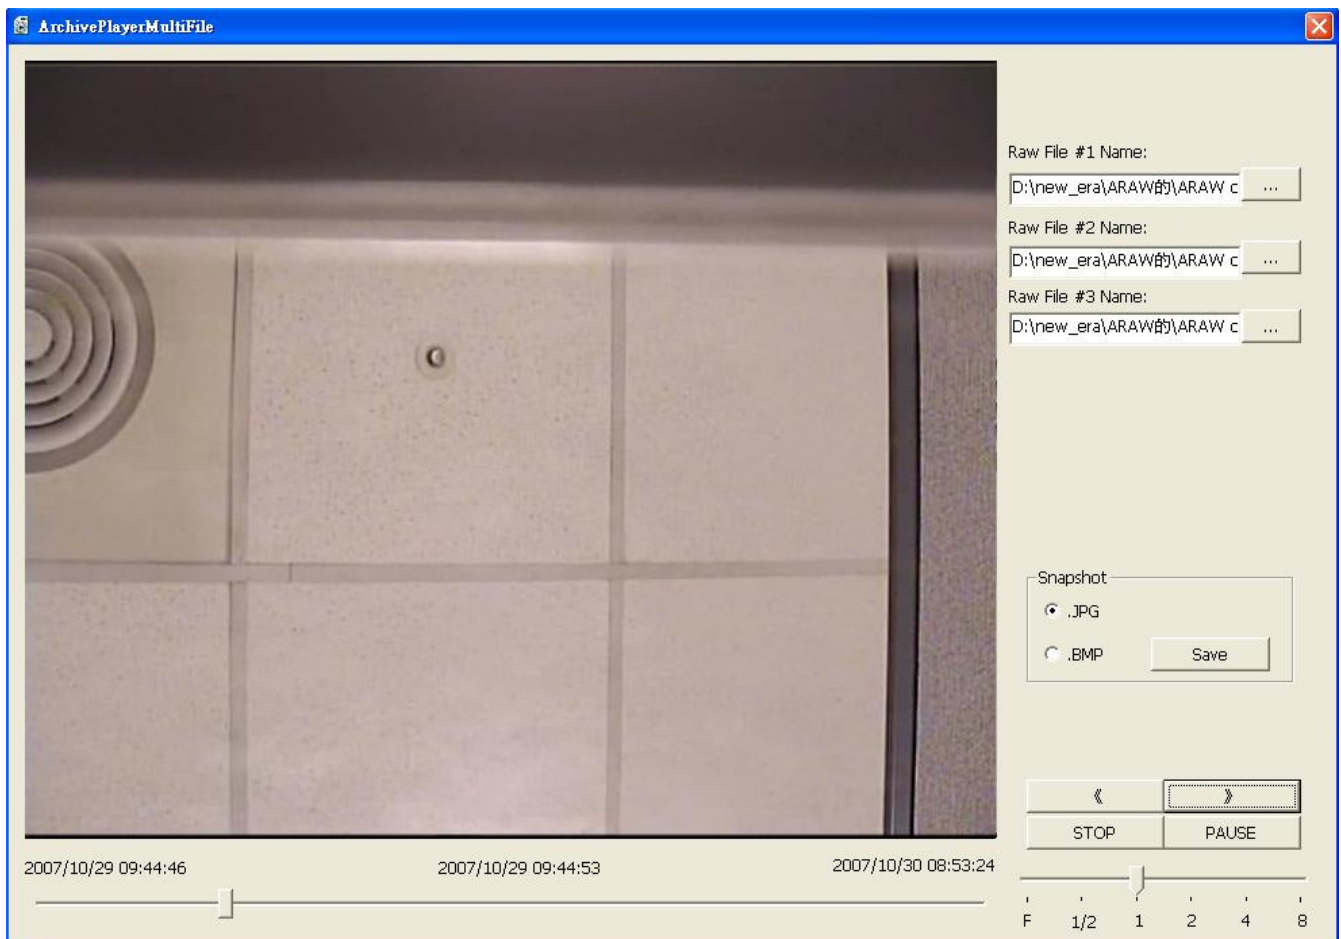

SearchSample Program

SearchSample codes demonstrate following functions:


1. Search for connectable devices..

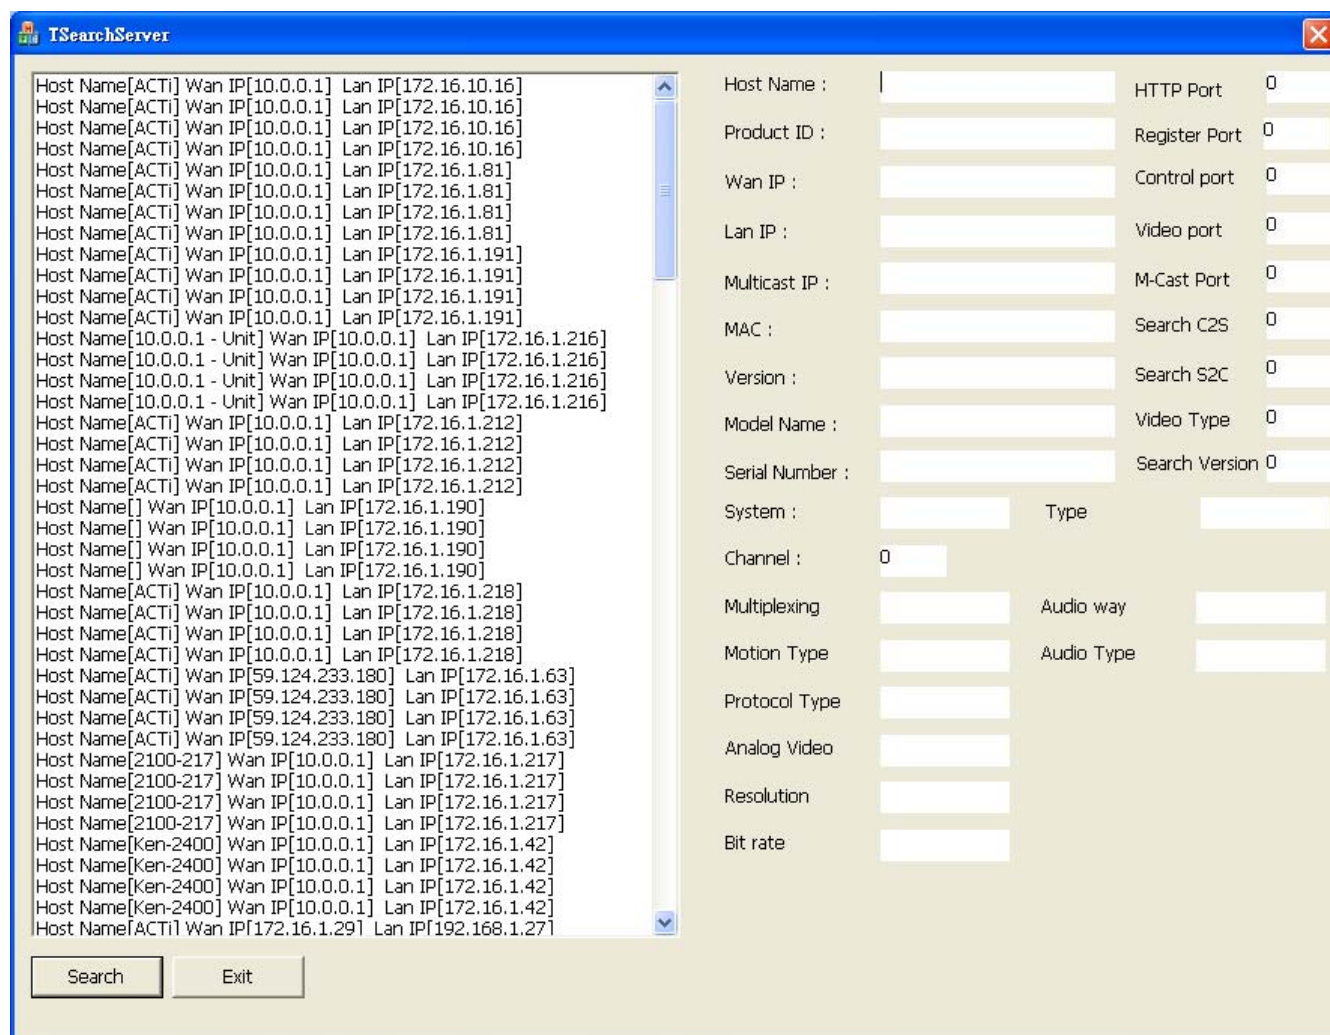

MediaConverter Program

MediaConverter codes demonstrate following functions:

1. Convert raw file to avi or multiple jpg.

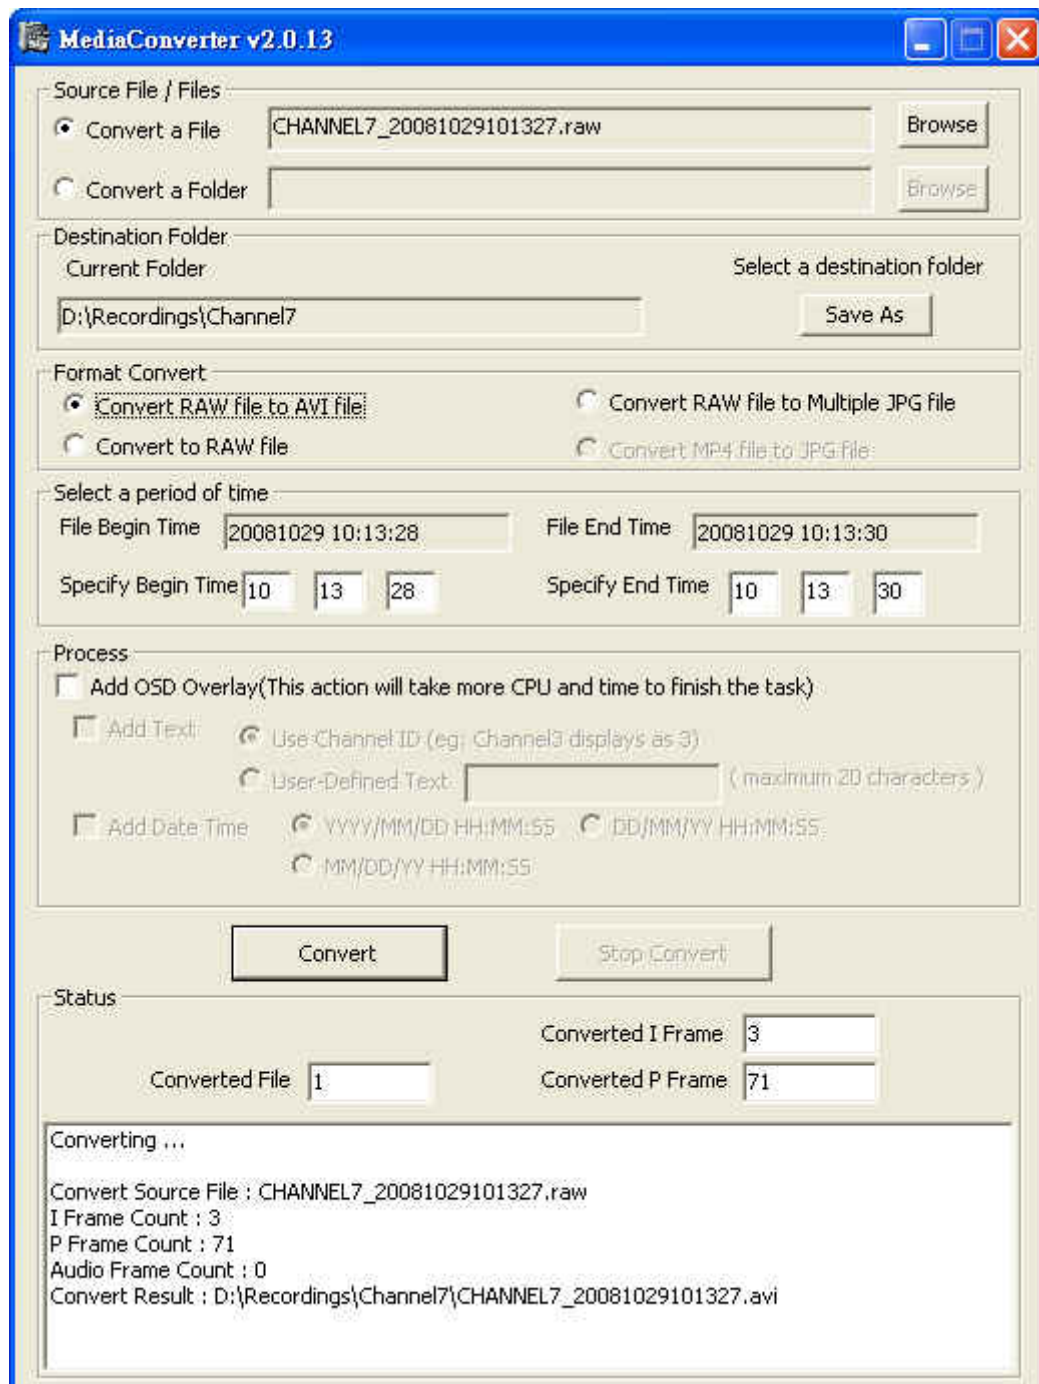

RTPSample Program


RTPSample codes demonstrate following functions:

1. Connect camera by RTP and RTSP
2. Show up RTP and RTSP transferring state.
3. Enabling “Only Test RTP Recv FPS” option will skip all pocket process.

ErrRRPKts : Show error packet number. (Including missed and wrong sequence)

RFPs : Received frames number by socket per second.


SCREEN : Processed frames number in a second.

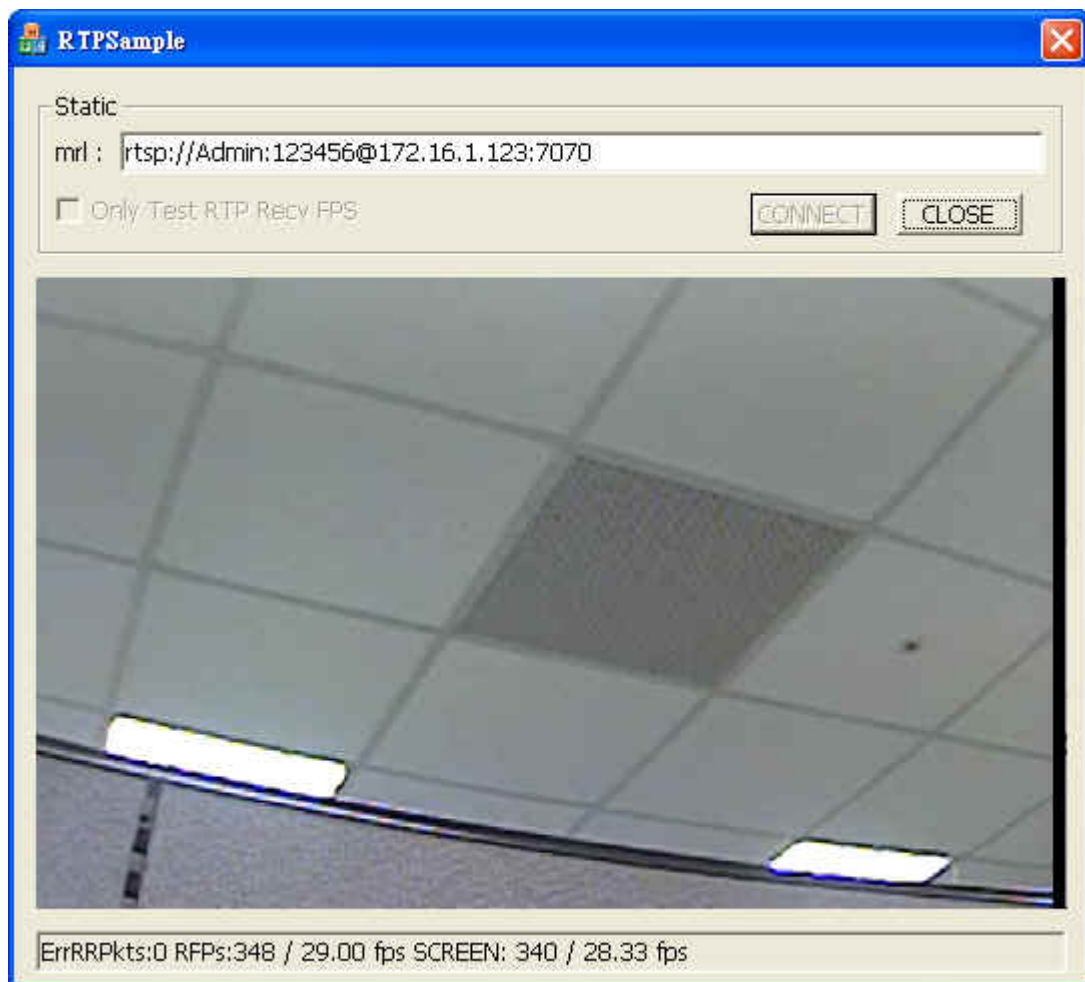

SendAudio Program

SendAudio codes demonstrate following functions:

1. Select a pcm of 8k wave file.
2. Press send button to send audio to device.

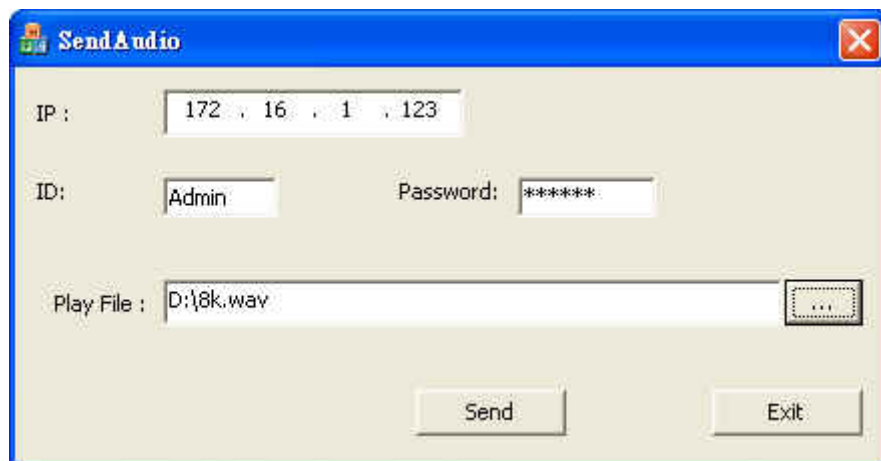

2

Search Device

Device Locator Architecture

The section describes the mechanism on how to search ACTi's IP surveillance products on network. With this mechanism, you can locate the devices on the network, then use URL commands to operate or manage those devices.

The function sends out a broadcast message, ACTi's devices respond with detailed information, application then parse the replied information and parse the content with `NET_SEARCHSERVER` data structure.

Search Device

Steps to detect ACTi IP Surveillance products are listed as follow:

1. Call `netSearchServer()`
2. Receive and decodes with `NET_SEARCHSERVER`



NOTE: The second parameter of `netSearchServer()` indicates the maximum total number to be reached in the network; for example, if this parameter is set to 10, and there are 20 devices in the same network, then this function returns when it reaches the first 10 devices in the network.

Default timeout value is 20 seconds

```
typedef struct tagSearchServer {
    char szHostName[24];           // [OUT] Host Name           : ASCII Z STRING
    char szProductID[8];           // [OUT] ProductID          : ASCII Z STRING
    char szWanIp[16];              // [OUT] WAN IP             : ASCII Z STRING
    char szLanIp[16];              // [OUT] LAN IP             : ASCII Z STRING
    char szMultiCastIp[16];        // [OUT] MULTICAST IP       : ASCII Z STRING
    char szMac[32];                // [OUT] MAC                : ASCII Z STRING
    char cType;                    // [OUT] Bit0~3             : 1: Composite, 2: S-Video
                                // [OUT] Bit4~7             : 1: Video Server, 2: IPCam

    char dummy1;
    char dummy2;
    char dummy3;
    char Version[32];
    WORD wHPort;
    WORD wSPortC2S;                // [IN] Search Port (Client to Server)
    WORD wSPortS2C;                // [IN] Search Port (Server to Client)
    WORD wRPort;                  // [IN] Register Port
```

```

WORD wCPort;           // [IN] Control Port
WORD wVPort;           // [IN] Video Port
WORD wMPort;           // [IN] MultiCastPort
WORD dummy4;

} NET_SEARCHSERVER;

WORD dwRet ;
NET_SEARCHSERVER ServerList[MAXSERVERLIST];
    // Receive data Structure

DWORD dwTotalNum = MAXSERVERLIST ;

dwRet = netSearchServer((char*) ServerList, &dwTotalNum);

for (DWORD i = 0; i < dwTotalNum; i++) {
    szHostName[i]      = ServerList[i].szHostName ;
        // Get the Host Name From Result Structure
    szProductID[i]      = ServerList[i].szProductID ;
        // Get the Product ID From Result Structure
    szWanIp[i]          = ServerList[i].szWanIp ;
        // Get the WanIp From Result Structure
    szLanIp[i]          = ServerList[i].szLanIp
        // Get the LanIp From Result Structure
    szMultiCastIp[i]    = ServerList[i].szMultiCastIp ;
        // Get the MultiCastIp From Result Structure
    szMac[i]            = ServerList[i].szMac ;
        // Get the Mac Address From Result Structure
    szVersion[i]        = ServerList[i].Version ;
        // Get the Firmware Version From Result Structure
    wRPort[i]           = ServerList[i].wRPort;
        // Get the Register Port From Result Structure
    wCPort[i]           = ServerList[i].wCPort;
        // Get the control Port From Result Structure
    wVPort[i]           = ServerList[i].wVPort;
        // Get the Streaming Port From Result Structure
    wMPort[i]           = ServerList[i].wMPort;
        // Get the Multicast Port From Result Structure
    wHPort[i]           = ServerList[i].wHPort;
        // Get the Http Port From Result Structure
}

```

How to detect device

This section describes how to detect, manage and configure IP devices. All commands are operated with URL Commands, you can use the functions we suggested (xmlhttp) or you can find HTTP-related functions by yourselves.

Please also refer to the Appendix for the complete ACTi URL Command listing.

System Information

Steps to detect product System Information are listed as follow:

Sample:

```
// you should get HANDLE by KOpenInterface before Preview
HANDLE hK = KOpenInterface();

// Prepare USER_INFO data structure by filling IP address, account, password.
MEDIA_CONNECTION_CONFIG mcc;
// Set your connection information into struct mcc.
...
KSetMediaConfig(hK, &mcc);
KConnect(hK);

strURL = 'http://192.168.1.100:80' ;
strURL = '/cgi-bin/system?USER=Admin&PWD=123456&SYSTEM_INFO' ;

char szResultBuf[1024] = {0};
DWORD dwResultLen;
KSendURLCommand( hK, strURL, szResultBuf, dwResultLen) ;

// Firmware Version = A1D-M2N-V2.03.02-NB
// MAC Address = 00:0F:7C:00:1A:47
// Production ID = SED2400-05I-1-00034
// Factory Default Type = NTSC, Composite, Two Ways Audio (0x71)
```

System Property

Steps to detect product System Property are listed as follow:

Sample:

```
// you should get HANDLE by KOpenInterface before Preview
HANDLE hK = KOpenInterface();

// Prepare USER_INFO data structure by filling IP address, account, password.
MEDIA_CONNECTION_CONFIG mcc;
// Set your connection information into struct mcc.
...
KSetMediaConfig(hK, &mcc);
KConnect(hK);

strURL = 'http://192.168.1.100:80' ;
strURL = '/cgi-bin/system?USER=Admin&PWD=123456& SYSTEM_PROPERTY ' ;

char szResultBuf[1024] = {0};
DWORD dwResultLen;
KSendURLCommand( hK, strURL, szResultBuf, dwResultLen) ;

// SYSTEM=' E'
// TYPE=' A'
// NO_OF_CHANNEL=' 01'
// MULTIPLEXING=' X'
// NO_OF_AUDIO_WAYS=' 2'
// AUDIO_TYPE=' PCM'
// MOTION_TYPE=' 0'
// PROTOCOL_TYPE=' 2'
```

Video Color Adjustments

This section describes on how to adjust video color using URL Commands.

Hue, Brightness, Contrast Setting

Steps to Gets/Sets product Video Property are listed as follow:

1. Initial **KMpeg4** Object
2. Gets color setting.
3. Set new setting

Sample:

```
typedef struct structural _MEDIA_VIDEO_CONFIG
{
    DWORD dwTvStander;          ///< 0: NTSC 1: PAL
    DWORD dwVideoResolution;    ///< See the definition above
    DWORD dwBitsRate;          ///< See the definition above
    DWORD dwVideoBrightness;    ///< 0 ~ 100 : Low ~ High
    DWORD dwVideoContrast;      ///< 0 ~ 100 : Low ~ High
    DWORD dwVideoSaturation;    ///< 0 ~ 100 : Low ~ High
    DWORD dwVideoHue;          ///< 0 ~ 100 : Low ~ High
    DWORD dwFps;                ///< 0 ~ 30 frame per second
} MEDIA_VIDEO_CONFIG;

// you should get HANDLE by KOpenInterface before Preview
HANDLE hK = KOpenInterface();

// Prepare USER_INFO data structure by filling IP address, account, password.
MEDIA_CONNECTION_CONFIG mcc;
// Set your connection information into struct mcc.
...

KSetMediaConfig(hK, &mcc);
KConnect(hK);

// Get current color setting
MEDIA_VIDEO_CONFIG mvc;
KGetVideoConfig(hK, &mvc);
```

```
// To Set the Video Property
KSetHue(hK, 10)
KSetBrightness(hK, 20);
KSetContrast(hK, 30);
```


Video Setting Configuration

Setup Resolution, Frame Rate, Bit Rate

Steps to Get/Set product Video Setting are listed as follow:

Sample:

```
enum BI TRATE_TYPES      /** Bi trate Types */
{
    BI TRATE_28K,          ///< #0# - 28K Bi ts per second
    BI TRATE_56K,          ///< #1# - 56K Bi ts per second
    ...
    BI TRATE_3000K         ///< #12# - 3M Bi ts per second
}

enum RESOLUTI ON_TYPES /** Resol uti on Types */
{
    NTSC_720x480,          ///< #0# - NTSC - 720 x 480
    NTSC_352x240,          ///< #1# - NTSC - 352 x 240
    ...
    PAL_176x144            ///< #5# - PAL - 176 x 144
}

typedef struct structural _MEDIA_VI DEO_CONFIG
{
    DWORD dwTvStander;      ///< 0: NTSC 1: PAL
    DWORD dwVi deoResol uti on; ///< See the defi niti on above
    DWORD dwBi tsRate;      ///< See the defi niti on above
    DWORD dwVi deoBri ghtness; ///< 0 ~ 100 : Low ~ Hi gh
    DWORD dwVi deoContrast;  ///< 0 ~ 100 : Low ~ Hi gh
    DWORD dwVi deoSaturati on; ///< 0 ~ 100 : Low ~ Hi gh
    DWORD dwVi deoHue;       ///< 0 ~ 100 : Low ~ Hi gh
    DWORD dwFps;             ///< 0 ~ 30 frame pre second
} MEDIA_VI DEO_CONFIG;

// you should get HANDLE by KOpenInterface before Preview
HANDLE hK = KOpenInterface();

// Prepare USER_INFO data structure by filling IP address, account, password.
MEDIA_CONNECTION_CONFIG mcc;
// Set your connection information into struct mcc.
...
KSetMedi aConfi g(hK, &mcc);
```

```
KConnect(hK);

// Get current color setting
MEDIA_VIDEO_CONFIG mvc;
KGetVideoConfig(hK, &mvc);

// To Set the Video Property
KSetResolution(hK, 10)    // 0~5
KSetFPS(hK, 30);
KSetBitRate(hK, 30);      // 0~12
```

Save and Reboot

The section describes the mechanism on how to search ACTi's IP surveillance products on network. With this mechanism, you can locate the devices on the network, then use URL commands to operate or manage those devices.

The function sends out a broadcast message, ACTi's devices respond with detailed information, application then parse the replied information and parse the content with **NET_SEARCHSERVER** data structure.

Execute Save and Reboot Command

Steps to execute Save and Reboot Video device are listed as follow:

Sample:

```
// you should get HANDLE by KOpenInterface before Preview
HANDLE hK = KOpenInterface();

// Prepare USER_INFO data structure by filling IP address, account, password.
MEDIA_CONNECTION_CONFIG mcc;
// Set your connection information into struct mcc.
...
KSetMediaConfig(hK, &mcc);
KConnect(hK);

KSaveReboot(hK);
```


3

Preview / Record / Playback

Preview / Record Architecture

This material covers SDK architecture, data structures and sample programs to illustrate the methods to integrate ACTi's IP Surveillance products.

Register to IP devices

Steps to register to ACTi's device:

1. Call `KOpenInterface()` to get KMpeg4 handle.
2. Prepare IP address, port number, account, password, contact type..
3. Call `KSetMediaConfig(HANDLE, MEDIA_CONNECTION_CONFIG)` to set connect config.
4. Call `KConnect(HANDLE)`.
5. Call `KStartStreaming(HANDLE)` to get ready to receive.

```
// you should get HANDLE by KOpenInterface before Preview
HANDLE hK = KOpenInterface();

// Set call back functions
KSetRawDataCallback(hK, id, fnRawCallback);

// Prepare USER_INFO data structure by filling IP address, account, password.
MEDIA_CONNECTION_CONFIG mcc;
// Set your connection information into struct mcc.
...
KSetMediaConfig(hK, &mcc);
KConnect(hK);

// Start Streaming
KStartStreaming(hK);
```

Dual stream devices and multi channel devices

Choose stream or channel number

Steps to register to ACTi's device:

1. Call `KOpenInterface()` to get KMpeg4 handle.
2. Prepare IP address, port number, account, password, contact type..
3. Set ChannelNumber in `MEDIA_CONNECTION_CONFIG` structure.
4. Call `KSetMediaConfig(HANDLE, MEDIA_CONNECTION_CONFIG)` to set connect config.
5. Call `KConnect(HANDLE)`.
6. Call `KStartStreaming(HANDLE)` to get ready to receive.

```
// you should get HANDLE by KOpenInterface before Preview
HANDLE hK = KOpenInterface();

// Set call back functions
KSetRawDataCallback(hK, id, fnRawCallback);

// Prepare USER_INFO data structure by filling IP address, account, password.
MEDIA_CONNECTION_CONFIG mcc;
// Set your connection information into struct mcc.
mcc.ChannelNumber = 3; //(Select channel no.4 in a multi channel device )
...
KSetMediaConfig(hK, &mcc);
KConnect(hK);

// Start Streaming
KStartStreaming(hK);
```

Variable Frame Rate and Multi-Stream

Choose stream or channel number

When the device is set on variable frame rate mode, the device is able to send variable frame rate with different TCP session.

Create multiple handles to connect devices:

1. Call `KOpenInterface()` to get KMpeg4 handles.
2. Prepare IP address, port number, account, password, contact type..
3. Set `ChannelNumber` in `MEDIA_CONNECTION_CONFIG` structure.
4. Call `KSetMediaConfig(HANDLE, MEDIA_CONNECTION_CONFIG)` to set connect config.
5. Call `KConnect(HANDLE)`.
6. Call `KStartStreaming(HANDLE)` to get ready to receive.
7. Call `KSetVariableFPS(HANDLE, dwFPS)` to set different streaming FPS.

```
// you should get HANDLES by KOpenInterface
HANDLE hK1 = KOpenInterface();
HANDLE hK2 = KOpenInterface();

// Prepare USER_INFO data structure by filling IP address, account, password.

// Set your connection information into struct mcc.
...

// Start Streaming
KStartStreaming(hK1);
KPlay(hK2);

KSetVariableFPS(hK1, 1);
KSetVariableFPS(hK2, 30);
```

Preview Operations

Preview with Unicast Mode

Steps to start preview with unicast mode include:

1. Set contact type as `CONTACT_TYPE_UNICAST_PREVIEW`;
2. Register to the IP devices
3. Call `KPlay(HANDLE)` to start receive data.

```
// you should get HANDLE by KOpenInterface before Preview
HANDLE hK = KOpenInterface();

// Set call back functions
KSetRawDataCallback(hK, id, fnRawCallback);

// Prepare USER_INFO data structure by filling IP address, account, password.
MEDIA_CONNECTION_CONFIG mcc;
// Set your connection information into struct mcc.
mcc.ContactType = CONTACT_TYPE_UNICAST_PREVIEW;
...
KSetMediaConfig(hK, &mcc);
KConnect(hK);

// Start Streaming
KStartStreaming(hK);
// Start receiving data from KMpeg4
KPlay(hK);
```


Preview with Audio

Steps to register to ACTi's device:

1. Call `KOpenInterface()` to get KMpeg4 handle.
2. Prepare IP address, port number, account, password, contact type..
3. Call `KSetMediaConfig(HANDLE, MEDIA_CONNECTION_CONFIG)` to set connect config.
4. Call `KConnect(HANDLE)`.
5. Call `KStartStreaming(HANDLE)` to get ready to receive.
6. Call `KPlay(HANDLE)` to start receive data.
7. Set mute mode to false with `KSetMute(HANDLE, BOOL)` function
8. Set audio volume with `KSetVolume(HANDLE, int, int)` function



NOTE:

```
/
// Register to the device
// Start Preview

//----- Set volume
KSetVolume( hK , ILeftVolume , IRightVolume ); // set volume

//----- set to mute
KSetMute(hK, true); // audio is off

//----- turn audio back on
KSetMute(hK, false); // audio is on
```

Preview with 2-way audio

Steps to preview with 2-way audio include:

1. Call `KOpenInterface()` to get `KMpeg4` handle.
2. Prepare IP address, port number, account, password, contact type..
3. Call `KSetMediaConfig(HANDLE, MEDIA_CONNECTION_CONFIG)` to set connect config.
4. Call `KConnect(HANDLE)`.
5. Call `KStartStreaming(HANDLE)` to get ready to receive.
6. Call `KPlay(HANDLE)` to start receive data.
7. Start preview
8. Get Audio Token
9. Send audio sound from PC side to the device with `KStartAudioTransfer(HANDLE)` function. This function opens the speaker connected on the PC, and grab sound from the speaker and transmit to the device
10. Stop sending audio sound from PC side to the device with `KStopAudioTransfer(HANDLE)` function



IMPORTANT: One IP device has only 1 audio token; if the token is taken by one application, then no other application may acquire the audio token again. Remember to free audio token after the 2-way audio function is done.

```
// Register to the device

// Get the Audio Token
bool bAudioToken = KGetAudioToken( hK );

// check the return value , if you get the audio token success.
if ( bAudioToken )
{
    KStartAudioTransfer(hK);
    // start sending audio from PC to the device
    // this function turns on speaker, the audio will be captured
    // and transferred to the devices
}
KStopAudioTransfer(hK);
// Free the Audio Token Before you close connection.
KFreeAudioToken(hK);
```

Preview with I-Frame Decoding only

This chapter describes a mechanism on how to decrease CPU loading. With this mechanism, MPEG-4 software decoder will decode I-Frame only and drops all P-Frame before decoding.

Steps to preview with I-Frame decoding only include:

1. Register to the IP device
2. Preview with `KPlay(HANDLE)`
3. Set to I-Frame decoding only with `KSetDecodeI FrameOnly(HANDLE, BOOL)` function



NOTE: With `KSetDecodeI FrameOnly(HANDLE, BOOL)` function, the CPU loading can be decreased dramatically.



IMPORTANT: `KSetDecodeI FrameOnly(HANDLE, BOOL)` function only affects preview and CPU loading; recording still records with I-frame and P-frame as setup.

```
// you should get HANDLE by KOpenInterface and Start Preview First
KPlay(hK);

// [1] If you are handling raw data yourself by using call back function then you
//      have to filter the frames and decide which frame your are going to process.
//      This is because KMpeg4 will pass all the frames to call back function.

// Determine the frame type I or P frame.

    If (!bDecodeI )
    {
        // Decode All of Frames you receive
    } else {
        // Check the frame type
        // Decode I Frame Only
    }

//-----

// [2] If KMpeg4 is handling the raw data for you then you can call
//      KSetDecodeI FrameOnly(HANDLE, BOOL) to decode I frame only
KSetDecodeI FrameOnly(hK, true);
```

Draw your own information on the preview window

This chapter describes a mechanism on how you can draw your own information on the preview window, including OSD information, timecode or video intelligence information.

Steps to draw your own information on the preview window:

1. Register to the IP device
2. Setup after render callback function (`KSetAfterRenderCallback()`)
3. When preview window is painted, SDK will call after render callback function
4. Draw your own information in the after render callback function



NOTE: When you hook up `KSetAfterRenderCallback()` function, the callback function will be called 30 times per second, if the frame rate is set to 30 FPS.

```
/
// register to the device

// Setup after render callback function
KSetAfterRenderCallback( hK, dwCallbackID, AfterRenderCallback );

AfterRenderCallback(DWORD dwCallbackID)
{
//---- draw your own information over here,
//    including OSD, time code or video intelligence information
}
```

Record Operations

Background record with multicast mode

Streaming Client Library is developed for Video Network Streaming Application.

Steps to start preview with multicast mode without preview include:

1. Set Contact type as `CONTACT_TYPE_MULTICAST_PREVIEW` or `CONTACT_TYPE_MULTICAST_WOC_PREVIEW`
2. Register to the IP devices
3. Start recording



NOTE: Application may start recording without preview.

```
/
// Get KMpeg4 handle
HANDLE hK = KOpenInterface();

// Prepare USER_INFO data structure by filling IP address, account, password.
MEDIA_CONNECTION_CONFIG mcc;
// Set your connection information into struct mcc.
mcc.ContactType = CONTACT_TYPE_MULTICAST_PREVIEW;
...
KSetMediaConfig(hK, &mcc);
KConnect(hK);

// Start Streaming
KStartStreaming(hK);
// Start receiving data from KMpeg4
KPlay(hK);

// Start recording with record file name.
KStartRecord(hK, "c:\\rec.raw");

// Finish recording
// You can retrieve the recording information by passing MP4FILE_RECORD_INFO
MP4FILE_RECORD_INFO mri;
KStopRecord(hK, &mri);
```

Alarm Recording with DI event

Steps to start alarm recording include:

1. Setup pre-event recording time and post-event recording time
2. Register to the IP devices
3. Setup event callback
4. Start alarm recording
5. Stop alarm recording

```
// Setup digital input callback function
KSetDICallback( hK, dwCallbackID, DI0Callback );

KSetPrerecordTime(hK, 5);          // set pre-event time as 5 seconds

// Register to the device

//----- in callback function

DI0Callback(DWORD dwCallbackID, bool bDI1, bool bDI2 )
{
    if ( bDI1 || bDI2 )              //----- DI 1 or DI 2 is on
    {
        KStartRecord (hK, "C:\\\\AlarmREC.raw" );
        Sleep( 10000 );              // records for 10 seconds
        KStopRecord( hK, NULL );     // in total it records 15 seconds
    }
}
```

Playback Operations

Steps to operate playback functions include:

1. Call `KOpenInterface()` to get KMpeg4 handle.
2. Prepare file name and set contact type to `CONTACT_TYPE_PLAYBACK`
3. Call `KSetMediaConfig(HANDLE, MEDIA_CONNECTION_CONFIG)` to set connect config.
4. Call `KConnect(HANDLE)`.
5. Call `KStartStreaming(HANDLE)` to get ready to receive.
6. Call `KPlay(HANDLE)` to start receive data.
7. Sets playback play speed
8. Calls playback operation, including play forward, play backward, seed operation
9. If you want to play multiple files seamlessly, Call `KSetMultipleMediaConfig(HANDLE, MEDIA_CONNECTION_CONFIG)` instead of step 3.

Open and close a raw data file

```
// Get KMpeg4 SDK handle
HANDLE hK = KOpenInterface();

// Prepare playback file name.
MEDIA_CONNECTION_CONFIG mcc;
// Set your connection information into struct mcc.
mcc.ContactType = CONTACT_TYPE_PLAYBACK;
strcpy(mcc.PlayFileName, "c:\\test.raw");
...
KSetMediaConfig(hK, &mcc);
// Open file.
KConnect(hK);
// Start Streaming
KStartStreaming(hK);

// Stop streaming
KStopStream( hK );
// Close file
KDisconnect( hK );
```

Play forward, backward

```
// Get KMpeg4 SDK handle
HANDLE hK = KOpenInterface();

// Set render information.
MEDIA_RENDER_INFO mri;
mri.RenderInterface = DGDI;
mri.hWnd = m_hWnd;           // Windows' handle to draw
mri.rec = m_rec;             // rec information.
KSetRenderInfo(hK, &mri);

// Prepare playback file name.
MEDIA_CONNECTION_CONFIG mcc;
// Set your connection information into struct mcc.
mcc.ContactType = CONTACT_TYPE_PLAYBACK;
strcpy(mcc.PlayFileName, "c:\\test.raw");
...
KSetMediaConfig(hK, &mcc);
// Open file.
KConnect( hK );
// Start Streaming
KStartStreaming(hK);
// Play forward
KPlay( hK );

// Play backward
KSetPlayDirection(hK, false);
```


Play frame by frame

```
// Play step by step

// Open file and play
...

// need to set play status pause for play step frame
    KPause(hK);

// Step to next frame
    KStepNextFrame(hK);

// Step to previous frame
    KStepPrevFrame(hK);
```

Play multiple files seamlessly

```
// Get KMpeg4 SDK handle
HANDLE hK = KOpenInterface();

// Prepare playback file name.
MEDIA_CONNECTION_CONFIG mcc;
// Set your connection information into struct mcc.
mcc.ContactType = CONTACT_TYPE_PLAYBACK;

...

//Use KSetMultipleMediaConfig() to enable "Multiple Media" functions.
KSetMultipleMediaConfig(m_hKMpeg4 , &m_mcc);

// add files.
KAddMultipleMedia( m_hKMpeg4, 1, filename)
KAddMultipleMedia( m_hKMpeg4, 3, filename2)
KAddMultipleMedia( m_hKMpeg4, 5, filename3)
...
KConnect(hK);
// Start Streaming
KStartStreaming(hK);

// Stop streaming
KStopStream( hK );
// Close file
KDisconnect( hK );
```

4

Event Handling

Digital I/O Architecture

This material covers SDK architecture, data structure and sample programs to illustrate the methods to integrate ACTi's IP Surveillance products.

Receives Digital Input Event

Steps to receive digital input event include:

1. Register to the IP devices
2. Setup digital event callback
3. Process digital input event in the callback function

```
// Get Mpeg4 SDK handle
// Setup digital input callback function
    KSetDICallback( hK, dwCallbackID, DICallback );

    KSetPrerecordTime(hK, 5);          // set pre-event time as 5 seconds

// Register to the device

//----- in callback function

DICallback( DWORD dwCallbackID, bool bDI1, bool bDI2 )
{
    if ( bDI1 || bDI2 )                //----- DI 1 or DI 2 is on
    {
        KStartRecord( hK, "C:\\\\AlarmREC.raw" );
        Sleep( 10000 );                // records for 10 seconds
        KStopRecord( hK, NULL );       // in total it records 15 seconds
    }
}
```

Send Digital Output

Steps to receive digital input event include:

1. Register to the IP devices
2. Call `KSendDO(HANDLE, BYTE)` function to send event to the digital output device

Send DO 1

```
// Register to device.  
  
#define DO_OUTPUT_1    0X01  
#define DO_OUTPUT_2    0X02  
  
// Send DO 1  
    KSendDO( hK, DO_OUTPUT_1);
```

Send DO 2

```
// Register to device.  
  
// Send DO 1  
    KSendDO( hK, DO_OUTPUT_2);
```

Motion Detection Event Handling

Sets Motion Detection parameters

Steps to setup motion detection parameters include:

1. Register to the IP devices
2. Setup motion detection callback function
3. Sets motion detection parameters
4. Process motion detection event in the callback function



NOTE: The parameter to set the range of the motion detection window has to be the multiplier of 16, if not, the number will be aligning to the multiplier of 16. For example, if the application set the range as 125, then it will be align to 128.

Set MD Range to Range1

```
typedef struct structural _MEDIA_MOTION_INFO
{
    DWORD dwEnable;
    DWORD dwRangeCount;
    DWORD dwRange[3][4];
    DWORD dwSensitive[3]; ///< 0 - 100
} MEDIA_MOTION_INFO;

// Register to the IP devices

// Prepare you own callback function

// Plug function after KOpenInterface()
KSetMotionDetectionCallback(hK, dwCallbackID, MDCallback);

// Set motion detection structure
MEDIA_MOTION_INFO mmi;
mmi.dwEnable = 1; // Enable MD
mmi.dwRangeCount = 1; // Just 1 range for MD
mmi.dwSensitive[0] = 100; // Sensitive of range 1
mmi.dwRange[0][0] = 0; // Left position
mmi.dwRange[0][1] = 0; // Top position
mmi.dwRange[0][2] = 128; // Width of range 1
mmi.dwRange[0][3] = 128; // Height of range 1

// Set motion detection information.
KSetMotionInfo(hK, mmi);
```

Gets Motion Detection Settings

Get MD Range Setting

```
//Prepare structure for get MD information
MEDIA_MOTION_INFO mmi;

// One function to get all data
KGetMotionInfo(hK, &mmi);
```

Receives Motion Detection Trigger Event

To Plug Your Own Callback Function for MD

```
Void MDCallBack(DWORD dwCallbackID, bool bMotion1, bool bMotion2, bool bMotion3)
{
    if( bMotion1 )
    {
        // Motion 1 Event occurring
    }

    if( bMotion2 )
    {
        // Motion 2 Event occurring
    }

    if( bMotion3 )
    {
        // Motion 3 Event occurring
    }
}
```

Status Callback – video lost, recovery, disconnect event

Status callback includes:

1. Video Lost event
2. Video Recovery event
3. Network disconnect event

Steps to implement status callback are listed as follow:

1. Register to the device
2. Setup appropriate callback function (`KSetVideoLossCallback()`, `KSetVideoRecoveryCallback()`, `KSetNetworkLossCallback()`)
3. Event handling in the status callback function

```
//---- prepare status callback here
// Video Lost
void VideoLossCallback(DWORD dwCallbackID)
{
    // To Do: Add your video loss handle code here.
}

// Video recovery
void VideoRecoveryCallback(DWORD dwCallbackID)
{
    // To Do: Add your video recovery handle code here.
}

// Disconnect
void NetworkLossCallback(DWORD dwCallbackID)
{
    // To Do: Add your network loss handle code here.
}

//---- register to the server
// Set video loss callback
KSetVideoLossCallback( hK, dwCallbackID, VideoLossCallback);
```



```
// Set video recovery call back
    KSetVideoRecoveryCallback( hK, dwCallbackID, VideoRecoveryCallback);

// Set network loss (disconnect) call back
    KSetNetworkLossCallback(hK, dwCallbackID, NetworkLossCallback);
```


5

PTZ Integration

PTZ Integration Architecture

This material covers how to integrate PTZ protocol with prepared information.

In the product architecture, the PTZ operation is defined as transparent tunnel; in this way, the PTZ protocol information does not keep in the firmware, and user's application has to parse and prepare PTZ commands in the application side.

To shorten the integration process, SDK provides implemented and tested PTZ protocol files, so that application may just utilize the PTZ protocols that has been prepared.




NOTE: Firmware does not contain PTZ protocol information. User's application has to prepare the PTZ command string and execute the string directly

The benefits of the PTZ Integration architecture are listed as follow:

- Utilize tested protocols
- Provides PTZ operation command strings
- Provides important commands like Day and Night switch, Patrol, Pattern, IR, etc
- Provides OSD operation

PTZ Parser Source Code


Please refer to `${SDK-DIR}\SDK\PTZSample` for sample source code. Also, ACTi provides integrated PTZ protocol files under `${SDK-DIR}\PTZ-Protocol`.

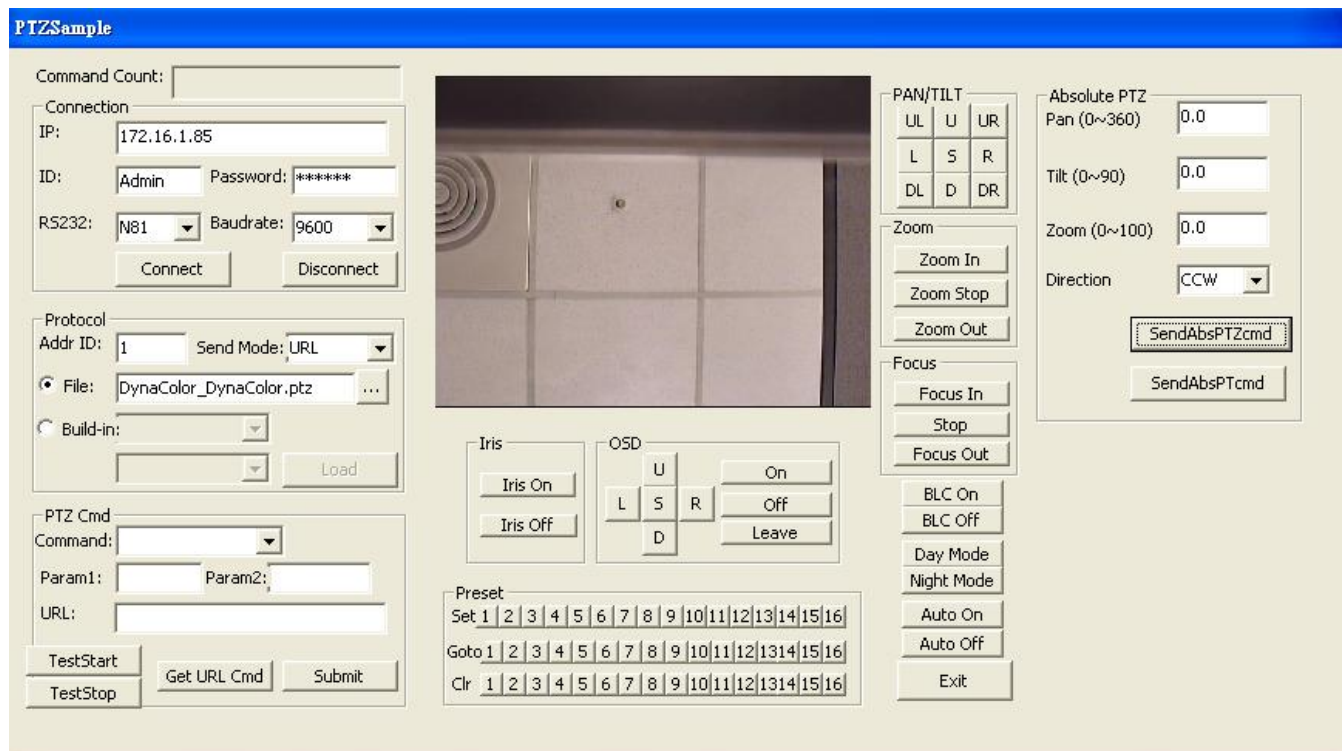

Steps to integrate a PTZ protocol include:

1. **Read PTZ File:** read PTZ protocol file specified
2. **Parse PTZ command:** parse the PTZ command rules, calculate the checksum and prepare the PTZ command
3. **Send Command:** sends PTZ command out with URL command or `netSend2ServerSerialPort()` function

(Most of new PTZ APIs in SDK 10000 V1.2 proceed step 1 and 2 at the same time)

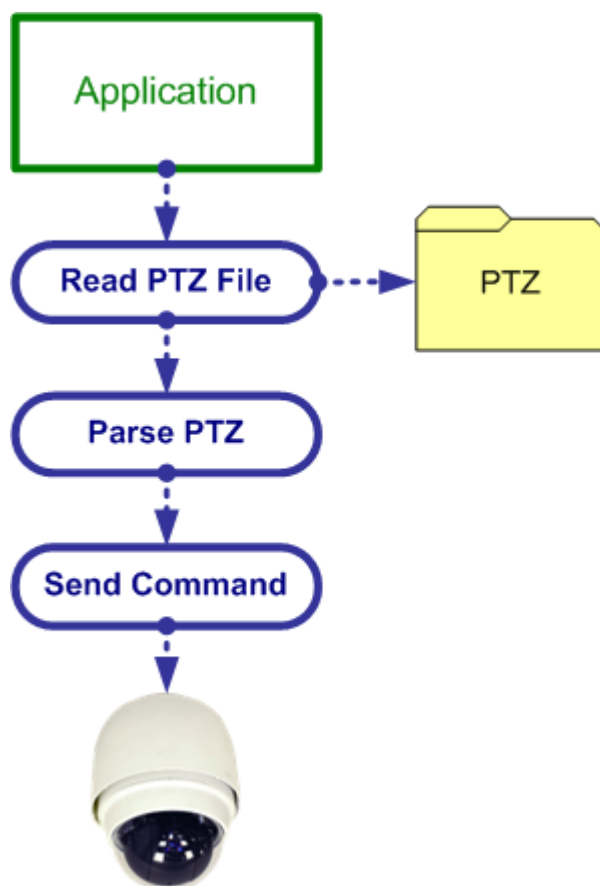

PTZ Protocol Files \${SDK-DIR}\PTZ-Protocol

This section describes the definition of PTZ protocol files. Please get these files from \${SDK-DIR}\PTZ-Protocol\ directory. A sample fragment of the protocol file looks like follow

```
ADDRIDSTART; 1; 0; ; ; ;
ADDRIDPOS; 2; 0; ; ; ;
CHECKSUM; $B7=$B2+$B3+$B4+$B5+$B6; ; ;
INTERVAL; 0; 0; ; ; ;
PANTILT; -5; -5; 0xFF, 0x01, 0x00, 0x14, 0x3F, 0x3F, 0x93; ; ;
OSDON; 0; 0; 0xFF, 0x01, 0x00, 0x03, 0x00, 0x5F, 0x63; ; ;
OSDUP; 0; 0; 0xFF, 0x01, 0x00, 0x08, 0x00, 0x0C, 0x15; ; ;
OSDENTER; 0; 0; 0xFF, 0x01, 0x02, 0x00, 0x00, 0x00, 0x03; ; ;
```

The protocol file contains following commands:

1. **ADDRIDSTART**: indicates the starting number of the address ID. Take above sample as an example (ADDRIDSTART; 1; 0; ; ; ;), if the application is set to address ID as 3, then it starts at 1, so the calculated address ID is 3 (0x03);
2. **ADDRIDPOS**: indicates the position to replace with calculated address ID. Take above sample as an example (ADDRIDPOS; 2; 0; ; ; ;), the address ID is at 2nd position of the command string. So, PANTILT; -5, -5 command (PANTILT; -5; -5; 0xFF, 0x01, 0x00, 0x14, 0x3F, 0x3F, 0x93; ; ;) will be replace as (PANTILT; -5; -5; 0xFF, 0x03, 0x00, 0x14, 0x3F, 0x3F, 0x93; ; ;)
3. **CHECKSUM**: indicates the checksum rule, + is to run **AND** operation, | is to run **OR** operation, ^ is to run **XOR** operation. Take above sample as an example (CHECKSUM; \$B7=\$B2+\$B3+\$B4+\$B5+\$B6; ; ;), the checksum rule is to run **AND** operation for byte 2, byte 3, byte 4, byte 5 and byte 6, and the result is placed at byte 7. Then this becomes a final **PTZ command string**
4. Application then sends the calculated **PTZ command string** out via normal serial port operation or URL command.


6

IP Quad Video Server Integration

IP Quad Architecture

IP Quad is a Quad processor which connects to 4 analog video sources then multiplexed by a quad processor; in this way, an IP Quad video server may generate 1 Full D1 video stream or 4 CIF video streams at the same time

IP Quad video server firmware contains URL commands, so that application may simply send out the URL command to control the behavior of it.

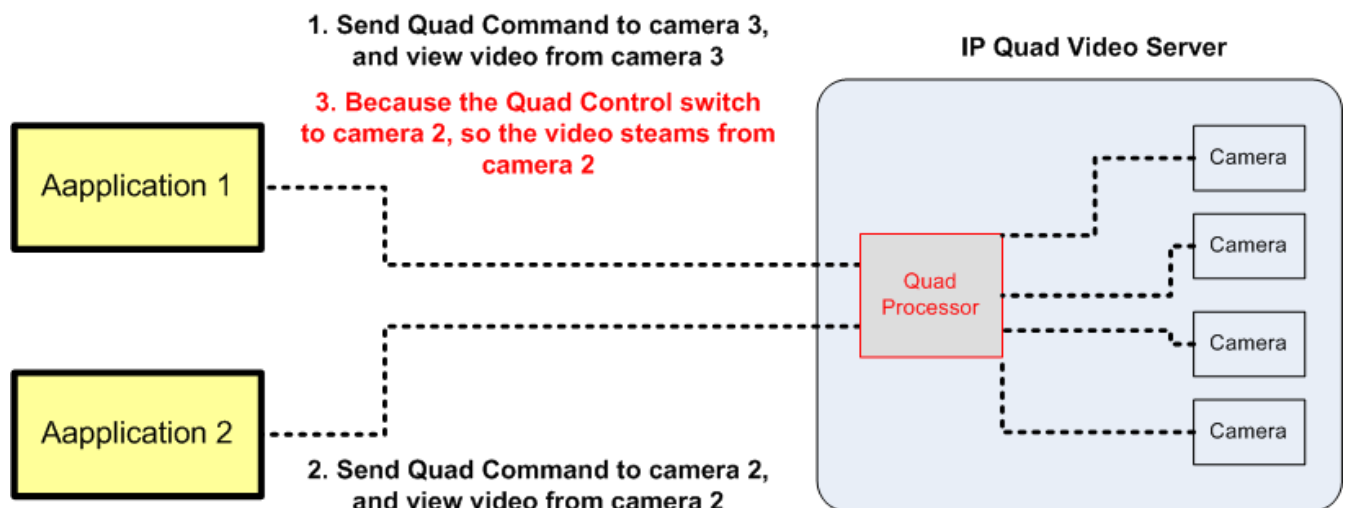

NOTE: There is only one quad processor in the device, so when an application sends a URL command to the IP Quad video server, then the quad processor will execute the commands specified, and all connected application will receive the same result from quad processor.

IP Quad URL Commands

Application may just use URL Command to perform these tasks to setup and control Quad Video Server; for information that needs to retrieve from Quad Video Server (e.g. Retrieve video stream, record to files, motion detection event, digital input event), the calling methods are all the same as SDK-2000 v1.0.

IP Quad's quad control is based on URL Command, which means that you need to send out the URL Command to IP Quad to set certain parameters.

HTTP Code Status

HTTP Code	HTTP Text	Description
200	OK	The request has succeeded, but an application error can still occur, which will be returned as an application error code.
204	No Content	The server has fulfilled the request, but there is no new information to send back.
400	Bad Request	The request had bad syntax or was inherently impossible to be satisfied.
401	Unauthorized	The request requires user authentication or the authorization has been refused.
404	Not Found	The server has not found anything matching the request.
409	Conflict	The request could not be completed due to a conflict with the current state of the resource.
500	Internal Error	The server encountered an unexpected condition which prevented it from fulfilling the request.
503	Service Unavailable	The server is unable to handle the request due to temporary overload.

Example :

Return success http context

```
HTTP/1.0 200 OK\r\n
Content-Type: text/plain\n
\n
```

Return failed http context

```
HTTP/1.0 200 OK\r\n
Content-Type: text/plain\n
\n
ERROR: error description
```

How to set display mode

Syntax	<code>http://192.168.1.1/cgi-bin/quad?DISPLAY=n</code>
---------------	--

How to get display mode

Syntax	http://192.168.1.1/cgi-bin/quad?DISPLAY
---------------	---

<parameter>	<values>	Description
DISPAY	n: 0~4	0: quad display 1: display channel 1 2: display channel 2 3: display channel 3 4: display channel 4

How to set OSD enabled

Syntax	http://192.168.1.1/cgi-bin/quad?OSD_ENABLED=0xnn
---------------	--

How to get OSD enabled status

Syntax	http://192.168.1.1/cgi-bin/quad?OSD_ENABLED
---------------	---

<parameter>	<values>	Description
OSD_ENABLED	0xnn : hexadecimal	BIT0: 1:title name enabled BIT1: 1:video loss enabled BIT2: 1:motion detect enabled BIT3: 1:date time enabled BIT4: 1:DIO status enabled BIT5: Reserved BIT6: Reserved BIT7: Reserved

How to set motion detect enabled

Syntax	http://192.168.1.1/cgi-bin/quad?MOTION_ENABLED=0xnn
---------------	---

How to get motion enabled status

Syntax	http://192.168.1.1/cgi-bin/quad?MOTION_ENABLED
---------------	--

<parameter>	<values>	Description
MOTION_ENABLED	0xnn : hexadecimal	BIT0: 1:channel 1 motion detect enabled BIT1: 1:channel 2 motion detect enabled BIT2: 1:channel 3 motion detect enabled BIT3: 1:channel 4 motion detect enabled BIT4: Reserved BIT5: Reserved BIT6: Reserved BIT7: Reserved

How to set sensitive for motion detect

Syntax	http://192.168.1.1/cgi-bin/quad?CHANNEL=n&SENSITIVE=m
---------------	---

How to get sensitive setting

Syntax	<code>http://192.168.1.1/cgi-bin/quad?CHANNEL=n&SENSITIVE</code>
---------------	--

<parameter>	<values>	Description
CHANNEL	n: 1~4	channel number
SENSITIVE	m: 0~15	0: more sensitive . .. 8: middle sensitive . .. 15: less sensitive

7

Advanced Topics

Callback Functions

This section lists the callback functions and its explanation for references.

Category	Function	Description
Decode	KSetImageCallback()	Callback functions to receive RGB buffer.
Event	KSetDICallback()	DI event triggers
Event	KSetMotionDetectionCallback()	Motion detection event triggers
MPEG-4	KSetRawDataCallback()	Streaming raw data including Video and Audio. All data are in TCP v2.0 format.
MPEG-4	KSetTimeCodeCallback()	Timecode is sent to this callback function every time a frame arrives
Preview	KSetAfterRenderCallback()	Callback functions are called every time a frame is drawn on the screen. This is useful when user wants to draw their own OSD, Text or video intelligence information overlay on the preview window
Preview	KSetResolutionChangeCallback()	Callback function is called when resolution is changed.
RS-232	KSetRS232DataCallback()	RS-232/RS-422/RS-485 data arrives
System	KSetVideoLossCallback()	Video loss event triggers.
System	KSetVideoRecoveryCallback()	Video recovery event triggers.
System	KSetNetworkLossCallback()	Network loss is sent if disconnect.

Deals with RAW file format

This section describes the ways to deal with “.raw” data format, which is a standard of ACTi products.

including:

- Raw file header
- Raw file footer
- Data payload. (Video and Audio)

Deal Raw File Header and Footer

Here is the sample of catching raw header and footer. The detail is described in marked section.

```
/** \brief Header of Raw file.
 *
 */
typedef struct
{
    DWORD dwFirstB2;           // '00' '00' '01' 'B2'
    DWORD dwStreamType;        // 11 : TCP-1.0; 22 TCP-2.0
    DWORD dwVideoType;         // 11 : ISO 14496; 22 : ...
    DWORD dwAudioType;         // 00 : NONE; 11 : PCM; ...
    DWORD dwControlType;       // 00 : NONE; 11 : TCP-2.0
    DWORD dwAudio2Type;        // Reserve
    DWORD dwControl2Type;      // Reserve
    DWORD dwBiteRate;          // Bite rate 0 - 15
    DWORD dwFps;               // FPS for the file
    DWORD dwResolution;        // Resolution :0 - 5
    DWORD dwReserve1;          // Reserve from 1 - 6 :FF
    DWORD dwReserve2;          // Reserve from 1 - 6 :FF
    DWORD dwReserve3;          // Reserve from 1 - 6 :FF
    DWORD dwReserve4;          // Reserve from 1 - 6 :FF
    DWORD dwReserve5;          // Reserve from 1 - 6 :FF
    DWORD dwReserve6;          // Reserve from 1 - 6 :FF
}RawFileHeader_t;
/** \brief Tail of Raw file.
 *
 */
typedef struct
{
    DWORD dwLastB2;            /**< '00' '00' '01' 'B2' */
    DWORD dwHeader;            /**< Must be 0xAC710517 (ACTi0517) */
    DWORD dwVersion;           /**< Must be 0x01000001 (1.0.0.1) */
    DWORD dwBeginTime;
    DWORD dwEndTime;
    DWORD dwGOP;
```

```

DWORD        dwGOPSize;
DWORD        dwFPS;
DWORD        dwWidth;
DWORD        dwHeight;
DWORD        dwFrameCount;
DWORD        dwReserve;           /**< Time Zone */    // New define in 20060829
DWORD        dwChecksumMethod;
DWORD        dwChecksum;         /**< Checksum value of header */
}RawFileTail_t;

```

Get the Header and Footer

```

// File open for read.
if((m_fp = fopen(m_MediaConfig.PlayFileName, "rb")) == NULL)
{
    return false;
}

// Set file size
SetFileSize();

// Read File header
if(!ReadData(&m_RawFileHeader, sizeof(RawFileHeader_t)))
{
    return false;
}

// Read File Tail
fseek(m_fp, m_dwFileSize - sizeof(RawFileTail_t), SEEK_SET);

if(!ReadData(&m_RawFileTail, sizeof(RawFileTail_t)))
{
    return false;
}

// Set file position to first data, the first I frame.
fseek(m_fp, sizeof(RawFileHeader_t), SEEK_SET);

```

Raw File Payload

The raw data format (video and audio) is described as follow:

Video Data: [I-Frame Data Structure](#) , [P-Frame Data Structure](#), [Motion JPEG frame](#),
[H.264 frame](#)

Audio Data: [Audio frame](#)

Deals with Media Stream

This section describes the ways to deal with media stream, including:

- The raw data callback (Video and Audio)
- How to detects I-Frame
- Decode I-Frame only

Raw Data Format in TCP 2.0

Please refer your request to our Sales representative for detailed protocol and MPEG-4 data format specification.

MPEG-4 stream raw data format (video and audio) is described as follow:

Video Data: [I-Frame Data Structure](#) , [P-Frame Data Structure](#) , [Motion JPEG frame, H.264 frame](#)

Audio Data: [Audio frame](#)

Get Streaming Raw Data (Video + Audio)

Steps to get streaming raw data include:

1. Register to the IP devices
2. Setup kmpeg4 callback function

```
//---- prepare callback function when MPEG-4 raw data arrives

//5 types are needed
// 1. mpeg4
// 2. Audio PCM (not always with time stamp)
// 3. Audio PCM must with time stamp
// 4. MJPEG
// 5. H.264
enum Raw_Data_Type
{
    EXCEPTION = 0,
    MPEG4_DATA = 1,
    AUDIO_PCM_DATA = 2,
    AUDIO_PCM_TIMESTAMP_DATA = 3,
    MJPEG_DATA = 4,
    H264_DATA = 5
};
void RawDataCallback(DWORD id, DWORD dwDataType, BYTE* buf, DWORD len)
{
    switch (dwDataType)
    {
        Case MPEG4_DATA:
            //do something for video stream
            break;

        Case AUDIO_PCM_DATA:
            //do something for audio stream
            break;

        Case AUDIO_PCM_TIMESTAMP_DATA:
            //do something for audio stream
            break;

        Case MJPEG_DATA:
            //do something for Motion JPEG stream
            break;

        Case H264_DATA:
```

```

//do something for H264 stream
    break:
}
}
// Prepare yourself callback function first

//---- register server
    HANDLE hK = KOpenInterface();
// you should get HANDLE by KOpenInterface before Preview

// Set callback functions
    KSetRawDataCallback(hK, id, RawDataCallback);

// Prepare USER_INFO data structure by filling IP address, account, password.
    MEDIA_CONNECTION_CONFIG mcc;
// Set your connection information into struct mcc.
    mcc.ContactType = CONTACT_TYPE_UNICAST_PREVIEW;
    strcpy(mcc.UserID, "Your ID");
    strcpy(mcc.Password, "Your Password");
    mcc.RegisterPort = 6000;
    mcc.ControlPort = 6001;
    mcc.StreamingPort = 6002;
    mcc.MulticastPort = 5000;
    mcc.HTTPPort = 80;
    strcpy(mcc.UnicastIP, "172.16.1.81");
    strcpy(mcc.MulticastIP, "225.5.6.81");

// Set media configuration file.
    KSetMediaConfig(hK, &mcc);
// Register
    KConnect(hK);
// Start Streaming
    KStartStreaming(hK);
// Start receiving data from KMpeg4
    KPlay(hK);

//---- below list some step if you need terminate whole process
    KStop(hK);
    KStopStreaming(hK);
    KDisconnect(hK);
    KCloseInterface(hK);

```

Detect I-Frame (key frame)

Steps to detect I-Frame in MPEG-4 raw data include:

1. Process in MPEG-4 raw data callback function
2. Check the MPEG-4 raw data format

Video data structure:

I Frame = User Data + Bitstream Data + I-Frame Data


```
// in C++ language example, here shows to know an I-Frame
// We suppose BYTE* buf is a continuous raw data for one frame
// compare 0xB3010000 with 4 bytes from the 75th byte in BYTE* buf
DWORD f;
CopyMemory( (BYTE*)&f, (buf+75), sizeof( DWORD ) );

// an I-Frame
if( f == 0xB3010000 )
{
}
else ; //---- P-Frame
```

Decode MPEG-4 Stream with Xvid

ACTi MPEG-4 stream complies with standard ISO-14496-2 format and can be decoded with open source MPEG-4 software decoders, including FFmpeg, Xvid, DivX, etc.

Please refer to `$(SDK-DIR)\SDK\Samples\DecodeSample` sample program.

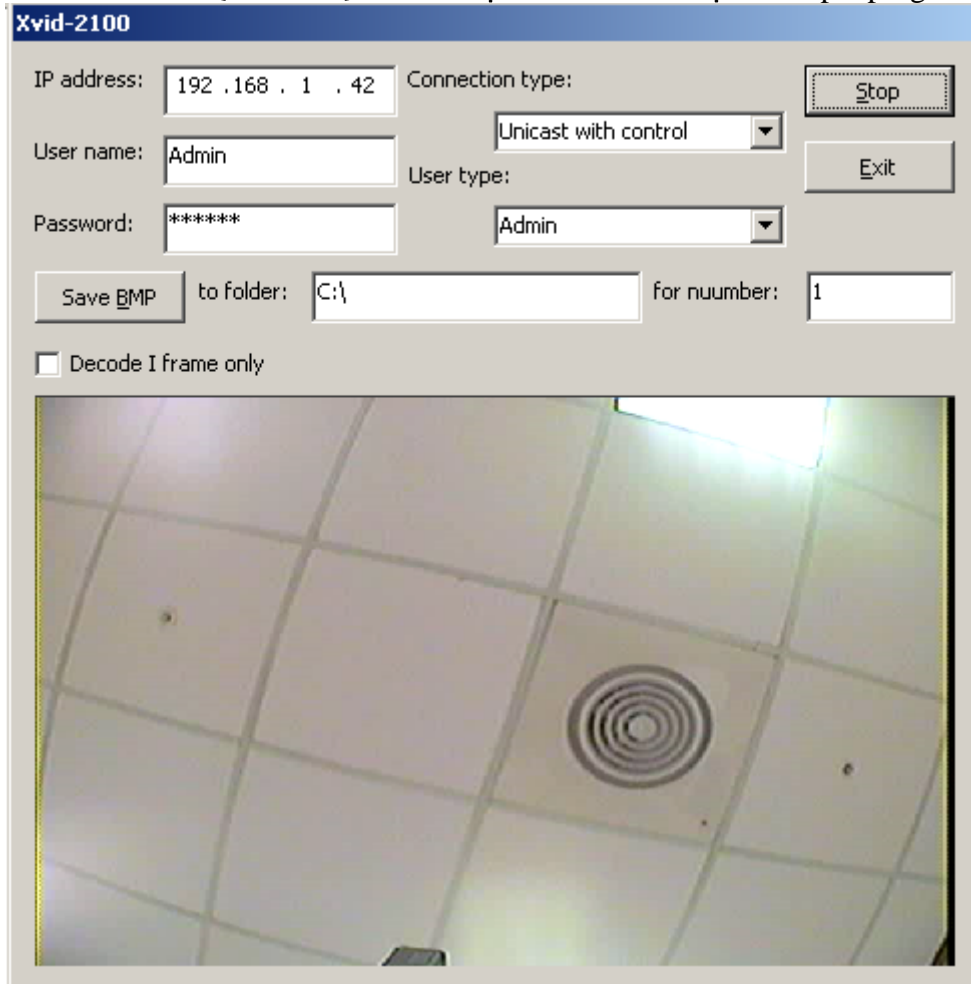

Steps to use `netSetMpeg4RawDataCallBack` and decode by XVID:

1. Link `libxvidcore.lib` as Import Lib
2. Put `xvidcore.dll` in the same directory
3. Include `xvid.h`
4. Provide following initialize, create, decode, close xvid code.

```
#include "xvid.h"
```

```
DWORD m_vWidth;
```

```
char pOutBuf[720*576*3];
```

```

xvi d_dec_create_t    m_xvi dDecHandl e;
xvi d_gbl _i ni t_t    xvi d_gbl _i ni t;
i nt                    xvi dret;

//-----
// XVID Decord Ini t and Create ==>

    memset(&xvi d_gbl _i ni t, 0, si zeof(xvi d_gbl _i ni t));
    memset (&m_xvi dDecHandl e, 0, si zeof(m_xvi dDecHandl e));
    m_xvi dDecHandl e. versi on = XVID_VERSI ON;
    m_xvi dDecHandl e. hei ght = 0;
    m_xvi dDecHandl e. wi dth = 0;
    xvi d_gbl _i ni t. versi on = XVID_VERSI ON;
    xvi dret = xvi d_gl obal (0, XVID_GBL_I NI T, &xvi d_gbl _i ni t, 0);
    xvi dret = xvi d_decore(NULL, XVID_DEC_CREATE, &m_xvi dDecHandl e, NULL);

//-----
// XVID Decord ==> Put the code i nto the netSetMpeg4RawCal l Back 's Cal l Back Functi on

    xvi dDecFrame. output. csp = XVID_CSP_BGR;
    xvi dDecFrame. general = XVID_LOWDELAY|XVID_DEBLOCKY|XVID_DEBLOCKUV;
    xvi dDecFrame. general = XVID_LOWDELAY;
    xvi dDecFrame. versi on = XVID_VERSI ON;
    xvi dDecFrame. output. pl ane[0] = pOutBuf; // <<<<<<<

//-----
// Output Buffer for the Decord out put

    // <<<<<<< The Vi deo's Wi dth Si ze => m_vWi dth * 3, (a Pi xel i s 3 Bytes (RGB))
    // <<<<<<< The m_vWi dth can get from the Mpeg4 Raw Data
    // <<<<<<< (In the input buffer that first time the call back be call ed)
    // <<<<<<< Or can assign by yoursel f i f you know what i s the vi deo's wi dth
    xvi dDecFrame. output. stri de[0] = m_vWi dth * 3;

    xvi dDecFrame. bi tstream = pl nBuf; // <<<<<<< The Mpeg4 Raw Data
    xvi dDecFrame. l ength = Len; // <<<<<<< Mpeg4 Raw Data's Length

    xvi dret = xvi d_decore(m_xvi dDecHandl e. handl e, XVID_DEC_DECODE,
&xvi dDecFrame, 0);
    // Todo : pOutBuf -> Di spl ay

//-----
// XVID Decord Cl ose ==>

xvi dret = xvi d_decore(m_xvi dDecHandl e. handl e, XVID_DEC_DESTROY, 0, 0);

```

Get RGB Image Data

Get RGB Image Data with Image Callback Function

Steps to get RGB image data with image callback function:

1. Register to the IP devices
2. Initialize stream
3. Start stream
4. Setup image callback function

```
//---- prepare image callback function

Void ImageCallback(DWORD id, BYTE* pBuf, DWORD len, long w, long h)
{
// list sample below for save BMP file to "save.bmp" after get RGB data
    LPBITMAPINFO lpbi = (LPBITMAPINFO)pBuf ;
    Long ImageLen=(lpbi->bmiHeader).biSize \ (lpbi->bmiHeader).biSizeImage ;

    BITMAPFILEHEADER oHeader ;
    oHeader.bfType = 0x4d42 ;
    oHeader.bfReserved1 = 0;
    oHeader.bfReserved2 = 0;
    oHeader.bfSize = (DWORD)(sizeof(BITMAPFILEHEADER) \ +
(lpbi->bmiHeader).biSize + (lpbi->bmiHeader).biSizeImage) ;
    oHeader.bfOffBits = (DWORD)(sizeof(BITMAPFILEHEADER) +
(lpbi->bmiHeader).biSize) ;

    CFile oImage ;
    oImage.Open("save.bmp", CFile::modeCreate | CFile::modeWrite) ;
    oImage.Write( &oHeader, sizeof(BITMAPFILEHEADER) );
    oImage.Write( pBuf, (lpbi->bmiHeader).biSize ) ;

    for(int i = lpbi->bmiHeader.biHeight-1 ; i >= 0 ; i--)
        oImage.Write( (pBuf+(lpbi->bmiHeader).biSize \ +
(i*lpbi->bmiHeader.biWidth*4)), lpbi->bmiHeader.biWidth*4) ;

    oImage.Close();
}

HANDLE hK = KOpenInterface();
```

```

// you should get HANDLE by KOpenInterface before Preview

// Set call back functions
    KSetRawDataCallback(hK, id, RawDataCallback);

// Set Display Information
    MEDIA_RENDER_INFO mri;
    mri.RenderInterface = DGD;
    mri.hWnd = m_hWnd;           // Windows' handle to draw
    mri.rec = m_rec;             // rec information.
    KSetRenderInfo(hK, &mri);

// Prepare USER_INFO data structure by filling IP address, account, password.
    MEDIA_CONNECTION_CONFIG mcc;
// Set your connection information into struct mcc.
    mcc.ContactType = CONTACT_TYPE_UNICAST_PREVIEW;
    strcpy(mcc.UserID, "Your ID");
    strcpy(mcc.Password, "Your Password");
    mcc.RegisterPort = 6000;
    mcc.ControlPort = 6001;
    mcc.StreamingPort = 6002;
    mcc.MulticastPort = 5000;
    mcc.HTTPPort = 80;
    strcpy(mcc.UnicastIP, "172.16.1.81");
    strcpy(mcc.MulticastIP, "225.5.6.81");

// Set media configuration file.
    KSetMediaConfig(hK, &mcc);
// Register
    KConnect(hK);
// Start Streaming
    KStartStreaming(hK);
// Start receiving data from KMpeg4
    KPlay(hK);

// Plug Image callback for get RGB Image
    KSetImageCallback(hK, dwCallbackID, ImageCallback);
    ...
    ...

// below list some step if you need terminate whole process
    Stop(hK);
    KStopStreaming(hK);
    KDisconnect(hK);
    KCloseInterface(hK);

```

Save RGB Data into a BMP file

We can get raw data and save to other file format e.g. if we want to save the current frame to Bitmap file for website image index. Just as like as general computer file format the Bitmap file has itself format. The Bitmap file format has a **BI TMAPFI LEHEADER**, **BI TMAPI NFOHEAR** and bitmap bits. Luckily we just have to prepare the header because the bitmap bits that we can get from MPEG-4 Callback function. Below is the 24 bit Bitmap file example.

Steps to save RGB data into a BMP file include:

1. Register to the IP devices
2. Initialize stream
3. Start stream
4. Setup image callback function
5. Create **BI TMAPFI LEHEADER** data structure and write to file



NOTE: Please refer to `/SDK/Samples/DecodeSample` sample program for full source codes.

F

First we have to create the **BI TMAPFI LEHEADER** struct and write to file.

```
// Save 24bit BMP
long BufferSize = 720*480*3;
// Write out the file header
//
BITMAPFILEHEADER bfh;
memset( &bfh, 0, sizeof( bfh ) );
bfh.bfType = 'MB';
bfh.bfSize = sizeof( bfh ) + BufferSize + sizeof( BITMAPINFOHEADER );
bfh.bfOffBits = sizeof( BITMAPINFOHEADER ) + sizeof( BITMAPFILEHEADER );

DWORD Written = 0;
WriteFile( hf, &bfh, sizeof( bfh ), &Written, NULL );
```

Second we have to create the **BI TMAPI NFOHEADER** struct and write to file.

```
// Write the bitmap format
//
BITMAPINFOHEADER bih;
memset( &bih, 0, sizeof( bih ) );
bih.biSize = sizeof( bih );
bih.biWidth = 720;
bih.biHeight = -480; //Save from down to up
bih.biPlanes = 1;
bih.biBitCount = 24;
Written = 0;
WriteFile( hf, &bih, sizeof( bih ), &Written, NULL );
```


Finally we only need to write the bitmap bits to file and close it.

```
// Write the bitmap bits
//
Written = 0;
WriteFile( hf, xvidDecFrame.output.plane[0], BufferSize, &Written, NULL );

// Close BMP file
CloseHandle( hf );
```

Save Recording to an AVI file

Steps to save recording data into an AVI file include:

1. Register to the IP devices
2. Sets MPEG-4 raw data callback
3. Sets FourCC type as “**vids**”
4. Sets FourCC handle as “**DX50**”
5. Calls AVI functions when receiving frames



NOTE: Please refer to **MSDN** sample or Microsoft web site for reference.

```
A
VIFileInit(); // initializes the AVIFile library

strcpy((char*)g_avi name, m_Normal SaveFile); // file name
g_avi framesize = (m_width * m_height * 3) / 2;

// Is the file exist?
FILE *fp = fopen(m_Normal SaveFile, "rb"); if (fp) {
    fclose(fp);
    DeleteFile(m_Normal SaveFile); // delete it.
}

AVI_STREAMINFO g_strhdr_out;
BITMAPINFO g_header;
// clear the struct
memset(&g_strhdr_out, 0, sizeof(g_strhdr_out));

g_strhdr_out.fccType           = mmioFOURCC('v', 'i', 'd', 's'); // stream type
g_strhdr_out.fccHandler       = mmioFOURCC('D', 'X', '5', '0');
g_strhdr_out.dwScale          = 1001;
g_strhdr_out.dwRate           = (DWORD)(m_theFps * 1001);
g_strhdr_out.dwSuggestedBufferSize = g_avi framesize;

g_header.biSize = 40;
g_header.biWidth = m_width;
g_header.biHeight = m_height;
g_header.biPlanes = 1;
g_header.biBitCount = 0;
g_header.biCompression = g_strhdr_out.fccHandler;
g_header.biSizeImage = g_avi framesize * 2;
```

```

g_header.biXPelsPerMeter = 0;
g_header.biYPelsPerMeter = 0;
g_header.biClrUsed = 0;
g_header.biClrImportant = 0;

    // Create a AVI file.
hr = AVIFileOpen(&m_pAviFile, (char*)g_aviname, OF_WRITE | OF_CREATE, NULL);
if (hr != AVIERR_OK) {
    AVIFileExit();
    return -1;
}

// Create a interface to the new stream.
hr = AVIFileCreateStream(m_pAviFile, &m_pAviVideo, &g_strhdr_out);
if (hr != AVIERR_OK) {
    AVIFileExit();
    return -1;
}

// sets the format of a stream at the specified position
hr = AVIStreamSetFormat(m_pAviVideo, 0, &g_header, sizeof(g_header));
if (hr != AVIERR_OK) {
    AVIFileExit();
    return -1;
}

m_AviFrameNo = 0;

if (IFrame)
    m_AviFlag = AVIIF_KEYFRAME; // I frame
else
    m_AviFlag = 0;

// write data to stream
hr = AVIStreamWrite(m_pAviVideo, m_AviFrameNo++, 1,
    (LPBYTE) (m_PreSaveFrame[j]),
    m_PreSaveFrameLen[j], m_AviFlag,
    NULL, NULL);

if (hr != AVIERR_OK) {
    return -1; // Record AVIStreamWrite Error6
}

// Release the Stream
AVIStreamRelease(m_pAviVideo);

```

```
        // Release the file  
        AVIFileRelease(m_pAVIFile);  
  
        // Release the AVIFile Library  
        AVIFileExit();
```

Save Recording to an AVI file with SDK Function

Steps to save recording data into a AVI file include:

1. Connect to the IP devices
2. Sets File Writer Type to AVI
3. Start record

```
// Create a interface to the new stream.  
HANDLE h = KopenInterface();  
KSetMediaConfig( h , cfg );  
...  
KConnect( h );  
KStartStreaming( h );  
...  
  
KSetFileWriterType( h, FAVI /* 1 */ ); // To record by AVI mode  
                                         // FAVI is a defined macro  
KStartRecord( h, "FileName.avi");
```

Register Control Connection Only

Register to control connection only if you only want to receive events from video server but not video data (for example: motion, DI). You can also send commands through control connection(for example: PTZ command, set motion...etc).

Steps to register with control connection only:

1. Call `KOpenInterface()` to get KMpeg4 handle.
2. Prepare IP address, port number, account, password, contact type..
3. Call `KSetMediaConfig(HANDLE, MEDIA_CONNECTION_CONFIG)` to set connect config.
4. Set Contact type to `CONTACT_TYPE_CONTROL_ONLY`.
5. Call `KConnect(HANDLE)`.
6. Call `KStartStreaming(HANDLE)` to get ready to receive.
7. Call `KPlay(HANDLE)` to start receive.

```
// you should get HANDLE by KOpenInterface before Preview
HANDLE hK = KOpenInterface();

// Set call back functions
KSetRawDataCallback(hK, id, fnRawCallback);

// Prepare USER_INFO data structure by filling IP address, account, password.
MEDIA_CONNECTION_CONFIG mcc;
// Set your connection information into struct mcc.
mcc.ContactType = CONTACT_TYPE_CONTROL_ONLY;
...
KSetMediaConfig(hK, &mcc);
KConnect(hK);

// Start Streaming
KStartStreaming(hK);

// Start Receive
KPlay(hk);
```

Display text on screen

Steps to display text on screen while previewing.

1. Call `KOpenInterface()` to get `KMpeg4` handle.
2. Prepare IP address, port number, account, password, contact type..
3. Call `KSetMediaConfig(HANDLE, MEDIA_CONNECTION_CONFIG)` to set connect config.
4. Set Contact type .
5. Call `KConnect(HANDLE)`.
6. Call `KStartStreaming(HANDLE)` to get ready to receive.
7. Call `KPlay(HANDLE)` to start receive.
8. Call `KSetTextOut()` to display text.

```
// you should get HANDLE by KOpenInterface before Preview
HANDLE hK = KOpenInterface();

// Set call back functions
KSetRawDataCallback(hK, id, fnRawCallback);

// Prepare USER_INFO data structure by filling IP address, account, password.
MEDIA_CONNECTION_CONFIG mcc;
// Set your connection information into struct mcc.
mcc.ContactType = CONTACT_TYPE_UNICAST_PREVIEW;
...
KSetMediaConfig(hK, &mcc);
// Set render info
MEDIA_RENDER_INFO mri;
KSetRenderInfo(h, &mri);

KConnect(hK);

// Start Streaming
KStartStreaming(hK);

// Start Receive
KPlay(hK);

// Display text
KSetTextOut(h, 0, 0, 0, "123456789\0", 9, true, false, false, "Arial", 100,
RGB(255, 255, 0), 2, RGB(0, 0, 255));
```

Use IPP codec

Steps to use IPP codec while previewing.

1. Call `KOpenInterface()` to get KMpeg4 handle.
2. Prepare IP address, port number, account, password, contact type..
3. Select codec by `KSetCODECType(HANDLE h, Int nType, Int nChannel);`
4. Call `KSetMediaConfig(HANDLE, MEDIA_CONNECTION_CONFIG)` to set connect config.
5. Set Contact type .
6. Call `KConnect(HANDLE)`.
7. Call `KStartStreaming(HANDLE)` to get ready to receive.
8. Call `KPlay(HANDLE)` to start receive.

```
// you should get HANDLE by KOpenInterface before Preview
HANDLE hK = KOpenInterface();

// Select codec
KSetCODECType(h, IPPCODEC, 0);
// Set call back functions
KSetRawDataCallback(hK, id, fnRawCallback);

// Prepare USER_INFO data structure by filling IP address, account, password.
MEDIA_CONNECTION_CONFIG mcc;
// Set your connection information into struct mcc.
mcc.ContactType = CONTACT_TYPE_UNICAST_PREVIEW;
...
KSetMediaConfig(hK, &mcc);

// Set render info
MEDIA_RENDER_INFO mri;
KSetRenderInfo(h, &mri);

KConnect(hK);

// Start Streaming
KStartStreaming(hK);

// Start Receive
KPlay(hK);
```


8

ACTi MPEG-4 Data Structure

Connection Type

Unicast Video and Control Connection

The section describes the mechanism on how to search ACTi's IP surveillance products on network. With this mechanism, you can locate the devices on the network, then use URL commands to operate or manage those devices.

The function sends out a broadcast message, ACTi's devices respond with detailed information, application then parse the replied information and parse the content with `NET_SEARCHSERVER` data structure.

Multicast Video + Control connection

The section describes the mechanism on how to search ACTi's IP surveillance products on network. With this mechanism, you can locate the devices on the network, then use URL commands to operate or manage those devices.

Multicast Video(Without Connection)


The section describes the mechanism on how to search ACTi's IP surveillance products on network. With this mechanism, you can locate the devices on the network, then use URL commands to operate or manage those devices.

Unicast Video and Control

Connect to Video Server

Here lists steps to build up the connection of getting audio/video streaming data.

1. Create a TCP socket connection that is needed to specific the IP and port. The default port is 6002.
2. Send a 128bytes command to video server. That includes User ID 64 bytes and Password 64 bytes.
3. Then we will get the response code. It are total 128 bytes code and includes a byte connect result.
4. Receive the data that will be audio/video streaming data.

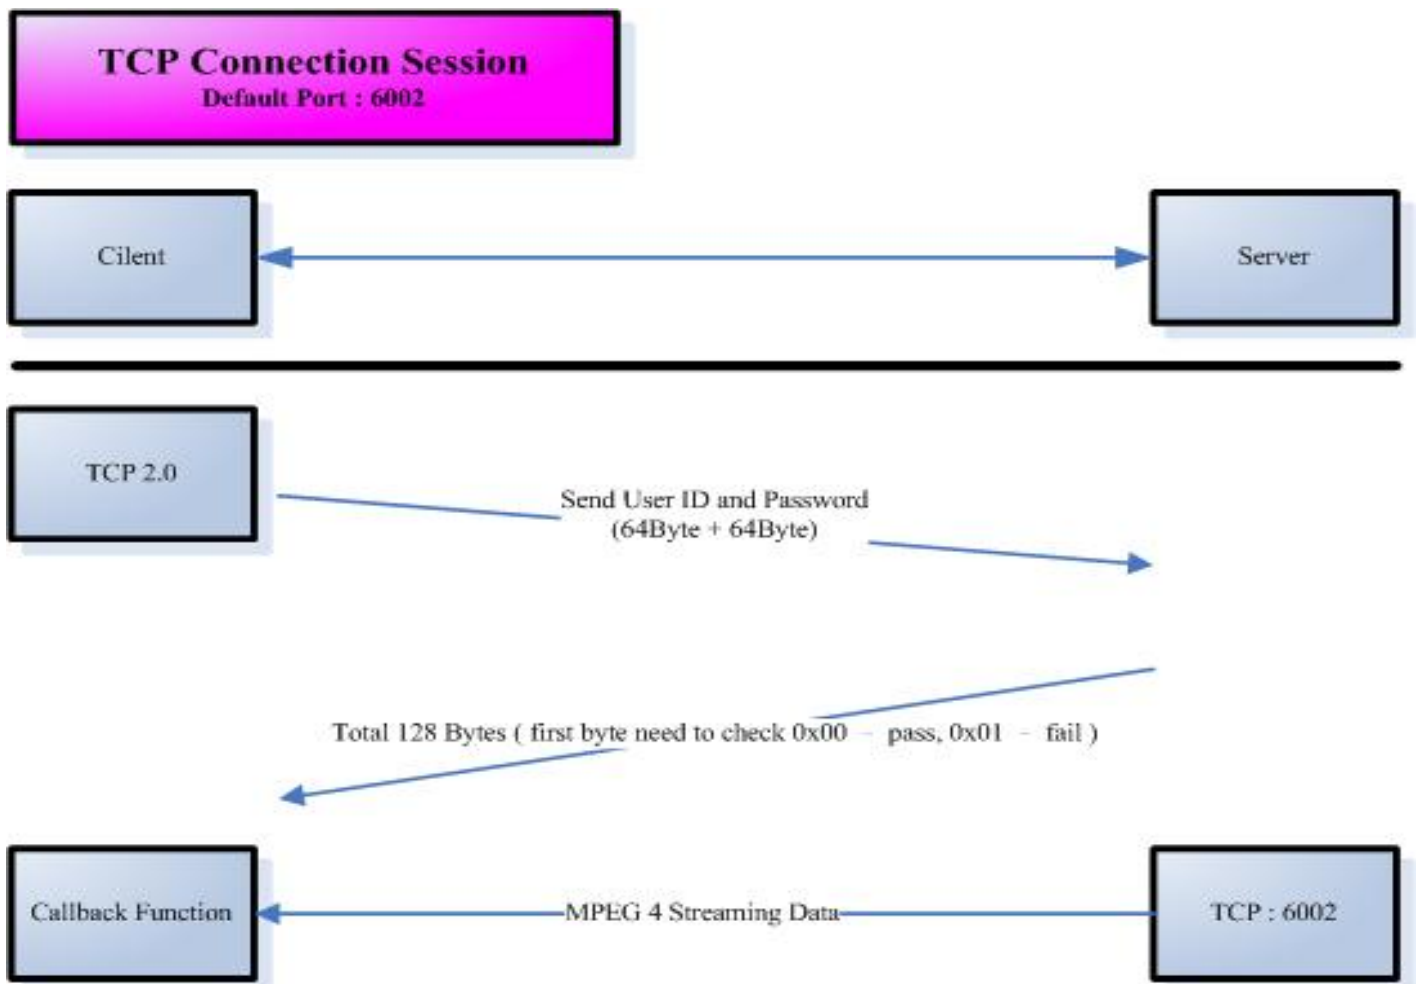

Definition of B2 Frame

The B2 Frame is composed of B2 Header and B2 Payload. The length of B2 Header is fixed to 12 bytes. The length of B2 payload is variable length depends on the B2 MsgType defined in the B2 Header.

B2 Header B2 Payload

There is two kind of B2 Frame for video and audio usage.

Video B2 Frame (44 Byte):

```
typedef struct {  
    B2_HEADER    header;  
    PRIVATE_DATA prdata;  
} VIDEO_B2_FRAME;
```

Audio B2 Frame (28 Byte):

```
typedef struct {  
    B2_HEADER header;  
    struct timeval timestamp;  
    unsigned char reserved[8];  
} AUDIO_B2;
```

These structures will be detailed in rest of this chapter.

Mpeg4 Video Data Format

Video and Audio Frame

After the connection is established, this section introduces how to get the streaming data from video Server.

We use the private data header(0x000001B2) to be the header tag. When we receive the data tag is the 0x000001B2 and the follow is the struct B2_HEADER. If the msg_type of the B2_HEADER is 1 and this frame is the video frame. Another 2 is the audio frame.

Video frame

Mpeg4 streaming data has two kind of video frame that is called I-Frame and P-Frame. There have some different. The I-Frame includes the sequence header that describe the information of decode(Bitstream data) like as below.

Header(0x000001B2) VIDEO_B2_FRAME	Bitstream Data (0x000001B0)	I-Frame data
---------------------------------------	------------------------------	--------------

The P-Frame is simple than I-Frame. It doesn't include the sequence header.

Header(0x000001B2) VIDEO_B2_FRAME	P-Frame data
---------------------------------------	--------------

I-Frame Data Structure

B2 Header for Video

```
typedef struct {
    B2_HEADER    header;
    PRIVATE_DATA  prdata;
} VIDEO_B2_FRAME;

#define HEAD_MSG_B2_VIDEO_MPEG4            0x01
#define HEAD_MSG_B2_AUDIO_8KPCM            0x02
#define HEAD_MSG_B2_AUDIO_TIMESTAMP_8KPCM  0x03
#define HEAD_MSG_B2_VIDEO_MJPEG            0x04
#define HEAD_MSG_B2_VIDEO_H264             0x05

typedef struct {
    unsigned char b2h[4]; /* 00 00 01 B2 */
    unsigned char msg_type;
    unsigned char stream_id; /* video streaming id */
    unsigned char ext_b2_len; /* 1: length of the ext. b2 private data appended
                                to B2 frame */

    unsigned char rsvd;
    unsigned int  len;
} B2_HEADER

typedef struct {
    DWORD          date_time; /*(time_t)
    unsigned char  time_zone; /* 0: -12, ..., 24: +13 */
    unsigned char  video_loss; /* 0: video loss, 1 : video ok */
    unsigned char  motion; /* 0x02: Motion 1 is active, 0x04: Motion 2 is
                                active, 0x08 Motion 3 is active */

    unsigned char  dio; /* for DIS, 0: DI triggered. 1: no triggered */
    unsigned int   count; /* frame counter */
    unsigned char  resolution; /* 0: N720x480, ... */
    unsigned char  bitrate; /* 0: 28K, ... */
    unsigned char  fps_mode; /* 0: MODE1(constant), 1: 0: MODE2 */
    unsigned char  fps_number; /* In constant FPS mode, it indicates the video
                                server's constant FPS number.
                                In variable FPS mode, it indicates the variable
                                FPS number which was requested by the TCP
                                host. If it is not in TCP, it indicates the
                                variable FPS number */
```

```

    struct timeval timestamp;
    unsigned short md_actives[3];    /* # of active microblocks in motion region
                                     */
    unsigned char reserved[2];
} PRIVATE_DATA_B2;

```

Name	Size
B2_HEADER	12 bytes (0x000001B2)
PRIVATE_DATA_B2	32 bytes

The user data segment total bytes : 44 bytes.

Bitstream Data

Name	Size
B0 Header	4 bytes (0x000001B0)
B0 Data	1 byte
B5 Header	4 bytes (0x000001B5)
B5 Data	1 byte
Sequence header	4 bytes (0x00000100)
Sequence data	17 bytes
	31 bytes

The Bitstream data segment total bytes : 31 bytes (B0 Header + B0 Data + B5 Header + B5 data + Sequence header + Sequence data).

I-Frame Data

Name	Size
B3 Header	4 bytes (0x000001B3)
B3 Data	3 bytes
B6 Header	4 bytes (0x000001B6)
Frame data	N bytes
	11 + N bytes

The I-Frame data segment total bytes : 11 bytes + N bytes(B3 Header + B3 Data + B6 Header + I-Frame data).

P-Frame Data Structure

B2 Header for Video

```
typedef struct {
    B2_HEADER    header;
    PRIVATE_DATA_B2 prdata;
} VIDEO_B2_FRAME;

#define HEAD_MSG_B2_VIDEO_MPEG4            0x01
#define HEAD_MSG_B2_AUDIO_8KPCM           0x02
#define HEAD_MSG_B2_AUDIO_TIMESTAMP_8KPCM 0x03
#define HEAD_MSG_B2_VIDEO_MJPEG           0x04
#define HEAD_MSG_B2_VIDEO_H264            0x05

typedef struct {
    unsigned char b2h[4]; /* 00 00 01 B2 */
    unsigned char msg_type;
    unsigned char stream_id; /* video streaming id */
    unsigned char ext_b2_len; /* 1: length of the ext. b2 private data appended
                                to B2 frame */

    unsigned char rsvd;
    unsigned int len;
} B2_HEADER

typedef struct {
    time_t      date_time;
    unsigned char time_zone; /* 0: -12, ..., 24: +13 */
    unsigned char video_loss; /* 0: video loss, 1: video ok */
    unsigned char motion; /* 0x02: Motion 1 is active, 0x04: Motion 2 is
                            active, 0x08 Motion 3 is active */

    unsigned char dio; /* for DIs, 0: DI triggered. 1: no triggered */
    unsigned int count; /* frame counter */
    unsigned char resolution; /* 0: N720x480, ... */
    unsigned char bitrate; /* 0: 28K, ... */
    unsigned char fps_mode; /* 0: MODE1(constant), 1: 0: MODE2 */
    unsigned char fps_number; /* In constant FPS mode, it indicates the video
                                server's constant FPS number.
                                In variable FPS mode, it indicates the variable
                                FPS number which was requested by the TCP
                                host. If it is not in TCP, it indicates the
                                variable FPS number */

    struct timeval timestamp;
    unsigned short md_actives[3]; /* # of active microblocks in motion region
```

```

        unsigned char reserved[2];
    } PRIVATE_DATA_B2;
*/

```

Name	Size
B2_HEADER	12 bytes (0x000001B2)
PRIVATE_DATA_B2	32 bytes

The user data segment total bytes : 44 bytes.

P-Frame Data

Name	Size
B6 Header	4 bytes (0x000001B6)
Frame data	N bytes
	4 + N bytes

The P-Frame data segment total bytes : 4 bytes + N bytes(B6 Header data + P-Frame data).

Code Mapping in B2 Header

1.Time Zone

Time Zone	time_zone in PRIVATE_DATA_NEW
-12	0
-11	1
-10	2
-09	3
-08	4
-07	5
-06	6
-05	7
-04	8
-03	9
-02	10
-01	11
+00	12
+01	13
+02	14
+03	15
+04	16
+05	17
+06	18
+07	19
+08	20
+09	21
+10	22
+11	23
+12	24
+13	25
other time zone setting 1	26
another time zone setting 2	27
...	...

2.Resolution

Video Resolution	resolution in PRIVATE_DATA_NEW	
	Binary Value	Hex Value
NTSC		
N160x120	01000111b	0x47
N320x240	01000110b	0x46
N1920x1080	01000101b	0x45
N1600x1200	01000100b	0x44
N1280x1024	01000011b	0x43
N1280x960	01000010b	0x42
N1280x720	01000001b	0x41
N720x480	00000000b	0x00
N640x480	01000000b	0x40
N352x240	00000001b	0x01
N160x112	00000010b	0x02
N176x120	00000110b	0x06
PAL		
P720x576	00000011b	0x03
P640x480	11000000b	0xC0
P352x288	00000100b	0x04
P176x144	00000101b	0x05

3.Bitrate

Video Bitrate	bitrate in PRIVATE_DATA_NEW
28K	0
56K	1
128K	2
256K	3
384K	4
500K	5
750K	6
1M	7
1. 2M	8
1. 5M	9
2M	10
2. 5M	11
3M	12
3. 5M	13
4M	14
4. 5M	15
5M	16
5. 5M	17
6M	18

Note: In MJPEG mode and Variable Bitrate mode, this bitrate setting in B2 is not valid. It will be fixed at the current encoder bitrate setting which is for constant bit rate mode with MPEG4 or H.264 encoding.

Audio frame

The data structure of audio frame is simpler than video frame. We can see as below.

AUDIO_B2(0x000001B2)

Audio Frame data (audio 8K pcm payload data)

```
#define HEAD_MSG_B2_VIDEO_MPEG4          0x01
#define HEAD_MSG_B2_AUDIO_8KPCM          0x02
#define HEAD_MSG_B2_AUDIO_TIMESTAMP_8KPCM 0x03
#define HEAD_MSG_B2_VIDEO_MJPEG          0x04
#define HEAD_MSG_B2_VIDEO_H264          0x05
typedef struct {
    unsigned char b2h[4]; /* 00 00 01 B2 */
    unsigned char msg_type;
    unsigned char stream_id; /* video streaming id */
    unsigned char ext_b2_len; /* 1: length of the ext. b2 private data appended
                                to B2 frame */

    unsigned char rsvd;
    unsigned int len;
} B2_HEADER

typedef struct {
    B2_HEADER header;
    struct timeval timestamp;
    unsigned char reserved[8];
} AUDIO_B2;
```

Name	Size
AUDIO_B2	28bytes (0x000001B2)
Audio Frame Data	N bytes
	28 + N bytes

The audio total bytes : AUDIO_B2 + FrameData (28 bytes + N)

Notice: The old version firmware send B2_HEADER(12 bytes) instead AUDIO_B2 (28 bytes)

Control Connect Session

Besides the video session we can get some of control from the control connection session.

Send a 128bytes command to the IP device.

Build a connection

When we connect to a video server by control session, we follow steps below to connect with video server.

1. Create a TCP socket connection that is needed to specific the IP and port. The default port is 6001.
2. Send a 128bytes command to video server. That includes User ID 32 bytes ,Token command and reserved bytes.
3. Then we will get the response code. It are total 128 bytes code and includes connect result, error code and reserve bytes
4. Receive the data that will be control data.

TCP Authentication Request and Response Frame

```
TCP Authentication Request and Response Frame
/* ##### definitions in msg_type in B2_HEADER ##### */
#define HEAD_MSG_VARIABLE_FPS_REQ 0x20
#define HEAD_MSG_PAUSE_ON_REQ 0x21
#define HEAD_MSG_PAUSE_OFF_REQ 0x22

/* ##### definitions in server_reply in B2_HEADER ##### */
#define HEAD_HOST_REQUEST 0
#define HEAD_SERVER_REPLY 1

typedef struct {
    unsigned char b2h[4]; /* A C T i */
    unsigned short msg_type; /* not used. reset to 0 */
    unsigned char server_reply; /* not used, reset to 0 */
    unsigned char stream_id; /* same definition as B2_HEADER */
    unsigned int len;
} B2_HEADER;

/* ##### definitions in encryption_type in TCP_AUTHEN_REQ ##### */
#define NAME_ENCODED_NONE 0
#define NAME_ENCODED_BASE64 1
typedef struct {
    char user_name[32];
    char rsvd[28];
    unsigned short stream_id; /* same definition as B2_HEADER */
    unsigned short encryption_type;
    int user_pwd[64];
} TCP_AUTHEN_REQ;
```

```

typedef struct {
    char status;
    char rsvd1;
    unsigned short stream_id;    /* same definition as B2_HEADER */
    int sock;
    char camera_name[32];
    char rsvd2[88];
} TCP_AUTHEN_REPLY;

```

```

typedef struct {
    B2_HEADER header;
    unsigned char    msg[1];    /* variable length */
} TCP_MSG;

```

In msg_type = HEAD_MSG_VARIABLE_FPS_REQ, the msg[0] in TCP_MSG is the variable FPS number



In msg_type = HEAD_MSG_PAUSE_ON_REQ or HEAD_MSG_PAUSE_OFF_REQ, there is no msg[].

In the reply packet, the msg[0] is the return code. The definition of the return code is listed below.

```

#define TCP_REPLY_CODE_OK        0x00
#define TCP_REPLY_CODE_ERR 0x01

```

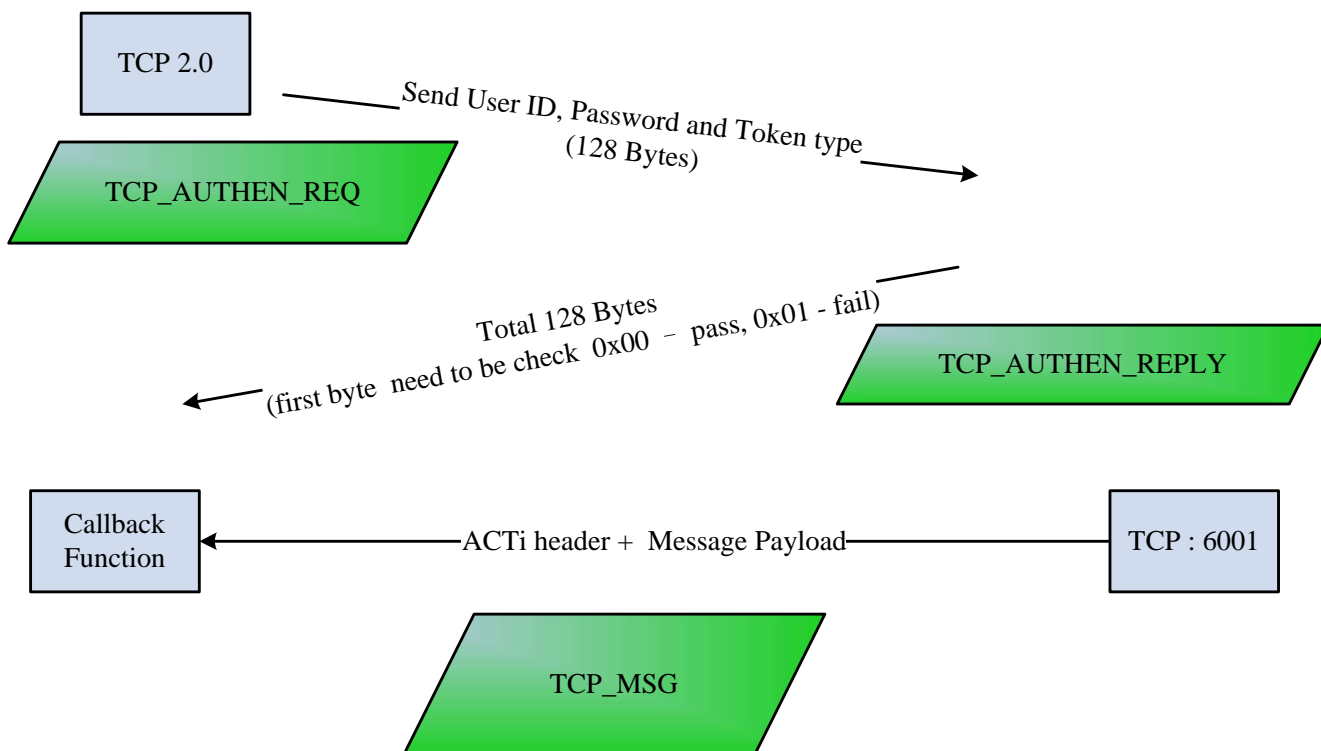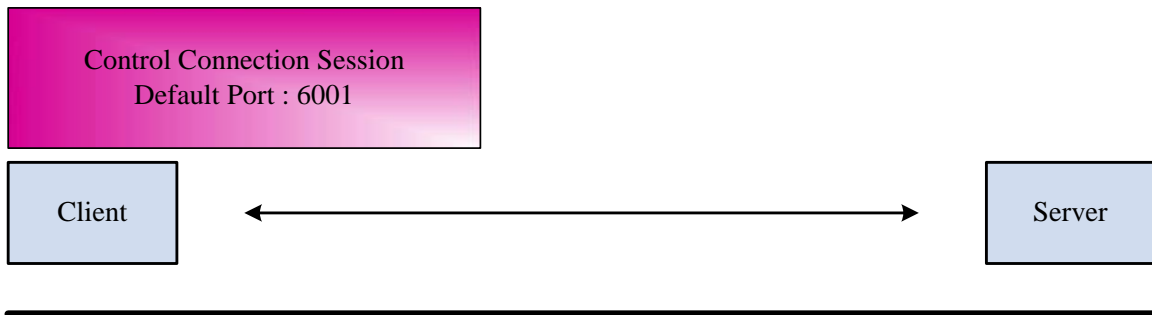

Control Authentication Request and Response Frame

```
/* ##### definitions in msg_type in B2_HEADER */
/* LIVE CHECK used in the control session */
#define HEAD_MSG_LIVE      0x30
#define HEAD_MSG_EXIT      0x31
/* DIOs used in the control session */
#define HEAD_MSG_DIO_OUT    0x32
#define HEAD_MSG_DIO_STATUS 0x33
#define HEAD_MSG_DIO_INPUT  0x34 /* not used */
/* RS485 used in the control session */
#define HEAD_MSG_SERIAL_RECV 0x35 /* not used */
#define HEAD_MSG_SERIAL_SEND 0x36
/* AUDIO_IN used in the control session */
#define HEAD_MSG_AUDIO_PLAY  0x37
/* VIDEO LOSS used in the control session */
#define HEAD_MSG_VIDEO_LOSS  0x38 /* not used */
/* MOTION used in the control session */
#define HEAD_MSG_MOTION_DETECT 0x39 /* not used */
/* CAMERA NAME in the control session */
#define HEAD_MSG_CAMERA_NAME 0x40
/* ##### definitions in server_reply in B2_HEADER */
#define HEAD_HOST_REQUEST  0
#define HEAD_SERVER_REPLY  1

typedef struct {
    unsigned char b2h[4]; /* A C T i */
    unsigned short msg_type; /* not used. reset to 0 */
    unsigned char server_reply; /* not used, reset to 0 */
    unsigned char stream_id; /* same definition as B2_HEADER */
    unsigned int len;
} B2_HEADER;
```

```

typedef struct {
    char user[32];
    int token;
    char reserved[24];
    unsigned short stream_id; /* same definition as B2_HEADER */
    unsigned short encryption_type; /* same definition as CP_AUTHEN_REQ */
    char pwd[64];
} CTRL_REQ;

/* ##### definitions in the result in CTRL_RSP ##### */
#define RSP_OK                0x00
#define RSP_ERR               0x01
/* ##### definitions in the err_code in CTRL_RSP ##### */
#define ERR_NO_ERROR          0x00000000
#define ERR_ACCOUNT           0x00010001
#define ERR_UNKNOWN_TOKEN     0x00010002
#define ERR_CTRL_TOKEN_BUSY   0x00010003
#define ERR_AUDIO_TOKEN_BUSY  0x00010004
#define ERR_AUDIO_NOT_SUPPORT 0x00010005

typedef struct {
    char result;
    char reserved1;
    unsigned short stream_id; /* same definition as B2_HEADER */
    char reserved1[3];
    int err_code;
    int ip_addr;
    char reserved2[116];
} CTRL_RSP;

```

```
typedef struct {
    B2_HEADER header;
    unsigned char  msg[1];    /* variable length */
} CTRL_MSG_FRAME;
```

DOs coding in the msg[0] (1byte):

Bit[4] : DO2, Bit[3] : DO1, Bit[1]=DI2, Bit[0]:DI1, where 1: high level of DO, 0: low level of DO.

RS485 coding in msg[] (variable length):

Data string of the RS485/RS422/RS232 data

Camera name coding in msg[] (max 31 bytes) :

Encoder's VIDEO_CAMERA_NAME setting

Audio data in msg[] (fixed to 4096 bytes):

Audio data in host

Motion coding in the msg[0] (1byte):

Bit[1]: motion region 1, Bit[2]: motion region 2, Bit[3]: motion region 3, where 0: no motion, 1: detected motion

Video Loss coding in the msg[0] (1byte):

0: Video Loss, 1: Video Lock

Control Connection Session
Default Port : 6001

Client



Server

TCP 2.0

CTRL_REQ

Send User ID, Password and Request

first byte need to be check
0x00 - pass, 0x01 - fail

CTRL_RSP

unsigned char msg[] is variable length

CTRL_MSG_FRAME

9

ACTi JPEG-compressed Video Data Structure

JPEG-compressed Video Data Format

We won't repeat most topics which described well in chap.8 . This chapter will concentrate on Motion JPEG data structure.

Motion JPEG and Audio Frame

After the connection is established, this section introduces how to get the streaming data from video Server.

We use the private data header(0x000001B2) to be the header tag. When we receive the data tag is the 0x000001B2 and the follow is the struct B2_HEADER. If the msg_type of the B2_HEADER is 4 and this frame is the Motion JPEG frame. Others 2 and 3 are the audio frame.

Motion JPEG frame In TCP Session

MJPEG streaming data is formed by JPEGs. The JPEG-Frame of TCP concept is described below. The JPEG header and JPEG data composite a complete JPEG picture, which can be easily decode by JPEG support library. (If you are looking for more information about B2 header, please refer to chap 8. [B2](#))

Header(0x000001B2) VIDEO_B2_FRAME	JPEG Header	JPEG data
---------------------------------------	-------------	-----------

Motion JPEG frame In RTP Session

The JPEG-Frame of RTP concept is described below. JPEG header is modified in RTP session, we will describe later. (If you are looking for more information about RTP Header, please refer to RFC 1889)

RTP Header	RTP/JPEG Header	JPEG QUANT Header	JPEG data	Header(0x000001B2) VIDEO_B2_FRAME
------------	-----------------	-------------------	-----------	---------------------------------------

TCP/MJPEG Header

We section a part of description from “**JPEG File Interchange Format**” document to describe composition in TCP/JPEG header. The document can be acquired on <http://www.jpeg.org/>.

There are 5 parts in TCP/MJPEG header: SOI, Quant, SOF, DRI, and SOS.

Example of TCP/MJPEG Header

TCP MJPEG FRAME :

MJPEG :

```
FF D8 FF E0 00 10 4A 46 49 46 00 01 01 00 00 01 00 01 00 00 00 FF DB 00 43 00 10 0B 0C 0E 0C 0A 10
0E 0D 0E 12 11 10 13 18 28 1A 18 16 16 18 31 23 25 1D 28 3A 33 3D 3C 39 33 38 37 40 48 5C 4E 40
44 57 45 37 38 50 6D 51 57 5F 62 67 68 67 3E 4D 71 79 70 64 78 5C 65 67 63 FF DB 00 43 01 11 12
12 18 15 18 2F 1A 1A 2F 63 42 38 42 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63
63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63
00 11 08 01 E0 02 80 03 01 22 00 02 11 01 03 11 01 FF DD 00 04 00 0A FF DA 00 0C 03 01 00 02 11
03 11 00 3F 00
```

JPEG SOI :

FF	D8	FF	E0	JPEG SOI
----	----	----	----	----------

length (2 bytes) Total APP0 field byte count, including the byte count value (2 bytes), but excluding the APP0 marker itself

identifier (5 bytes) = X'4A', X'46', X'49', X'46', X'00'
This zero terminated string (“JFIF”) uniquely identifies this APP0 marker. This string shall have zero parity (bit 7=0).

version (2 bytes) = X'0102'
The most significant byte is used for major revisions, the least significant byte for minor revisions. Version 1.02 is the current released revision.

units (1 byte) Units for the X and Y densities.
units = 0: no units, X and Y specify the pixel aspect ratio
units = 1: X and Y are dots per inch
units = 2: X and Y are dots per cm

Xdensity (2 bytes) Horizontal pixel density
Ydensity (2 bytes) Vertical pixel density
Xthumbnail (1 byte) Thumbnail horizontal pixel count
Ythumbnail (1 byte) Thumbnail vertical pixel count
(RGB)n (3n bytes) Packed (24-bit) RGB values for the thumbnail
 pixels, $n = X_{thumbnail} * Y_{thumbnail}$

JPEG QUANT :

FF	DB	2Bytes QUANT LEN	1Bytes JPEG QUANT ID	JPEG QUANT DATA
----	----	------------------------	-------------------------------	-----------------

JPEG SOF :

FF	CO	JPEG SOF
----	----	----------

length (2 bytes)
Precision (1 byte)
Height (2 bytes)
Width (2 bytes)
Type (1 byte) get the type, skip components, comp 0(1)

...

JPEG DRI :

FF	DD	JPEG DRI
----	----	----------

...

JPEG SOS :

FF	DA	JPEG SOS
----	----	----------

RTP/MJPEG Header

We section a part of description from “rfc2435-RTP” document to describe composition in RTP/MJPEG header.

Main header

Type-specific	Fragment Offset (24 bits)		
Type (8 bits)	Q (8 bits)	Width (8 bits)	Height (8 bits)

1. Type-specific: 8 bits

Interpretation depends on the value of the type field. If no interpretation is specified, this field **MUST** be zeroed on transmission and ignored on reception.

2. Fragment Offset: 24 bits

The Fragment Offset is the offset in bytes of the current packet in the JPEG frame data. This value is encoded in network byte order (most significant byte first). The Fragment Offset plus the length of the payload data in the packet **MUST NOT** exceed 2^{24} bytes.

3. Type: 8 bits

The type field specifies the information that would otherwise be present in a JPEG abbreviated table-specification as well as the additional JFIF-style parameters not defined by JPEG. Types 0-63 are reserved as fixed, well-known mappings to be defined by this document and future revisions of this document. Types 64-127 are the same as types 0-63, except that restart markers are present in the JPEG data and a Restart Marker header appears immediately following the main JPEG header. Types 128-255 are free to be dynamically defined by a session setup protocol.

4. Q: 8 bits

The Q field defines the quantization tables for this frame. Q values 0-127 indicate the quantization tables are computed using an algorithm determined by the Type field (see below). Q values 128-255 indicate that a Quantization Table header appears after the main JPEG header (and the Restart Marker header, if present) in the first packet of the frame (fragment offset 0). This header can be used to explicitly specify the quantization tables in-band.

5. Width: 8 bits

This field encodes the width of the image in 8-pixel multiples (e.g., a width of 40 denotes an image 320 pixels wide). The maximum width is 2040 pixels.

6. Height: 8 bits

This field encodes the height of the image in 8-pixel multiples (e.g., a height of 30 denotes an image 240 pixels tall). When encoding interlaced video, this is the height of a video field, since fields are individually JPEG encoded. The maximum height is 2040 pixels.

Restart Marker header

This header **MUST** be present immediately after the main JPEG header when using types 64-127.

Restart Interval (16 bi ts)	F (1 bi t)	L (1 bi t)	Restart Count (14 bi ts)
-----------------------------	------------	------------	--------------------------

Quantization Table header

This header **MUST** be present after the main JPEG header (and after the Restart Marker header, if present) when using Q values 128-255. It provides a way to specify the quantization tables associated with this Q value in-band.

MBZ(8 bi ts)	Preci si on (8 bi t)	Length (16 bi t)	Quantizati on Table Data (Length bi ts)
--------------	----------------------	------------------	--

Example of RTP/MJPEG Header

RTP Header :

```
/*
 * RTP data header from RFC1889
 */
typedef struct {
    unsigned int version:2; /* protocol version */
    unsigned int p:1; /* padding flag */
    unsigned int x:1; /* header extension flag */
    unsigned int cc:4; /* CSRC count */
    unsigned int m:1; /* marker bit */
    unsigned int pt:7; /* payload type */
    u_int16 seq; /* sequence number */
    u_int32 ts; /* timestamp */
    u_int32 ssrc; /* synchronization source */
    u_int32 csrc[1]; /* optional CSRC list */
} rtp_hdr_t;
```

RTP MJPEG FRAME :

```
00 00 00 00 41 FF 50 3C
00 0A FF FF
00 00 00 80
```

```
1A 18 16 16 18 31 23 25 1D 28 3A 33 3D 3C 39 33 38 37 40 48 5C 4E 40 44 57 45 37 38 50 6D 51 57
5F 62 67 68 67 3E 4D 71 79 70 64 78 5C 65 67 63 11 12 12 18 15 18 2F 1A 1A 2F 63 42 38 42 63 63
63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63
63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63
```

RTP JPEG HEADER :

```
00 00 00 00 41 FF 50 3C
```

```
// Annotations in this section describe how rtp/jpeg header be generated from normal JPEG
// header (TCP/MJPEG header).
//
struct jpeghdr
{
    unsigned int tspec:8;      // 0 not used
    unsigned int off:24;      // 0 not used
    unsigned char type;        // JPEG SOF [11]
                                // if SOF[11] == 0x21 Then type = 0;
                                // else Then type = 1;
                                // If jpeghdr_rst.dri Then type != 0x40;
    unsigned char q;           // 0xff
    unsigned char width;       // JPEG SOF[5]; JPEG SOF[6];
                                // (SOF[5]<<8 | SOF[6]) >>3
    unsigned char height;     // JPEG SOF[7]; JPEG SOF[8];
                                // (SOF[7]<<8 | SOF[8]) >>3
};
```

RTP RESTART MARKER HEADER :

```
00 0A FF FF
struct jpeghdr_rst
{
    unsigned short dri;          // (JPEG DRI[4]<<8) | JPEG DRI[5]
    unsigned short f:1;          // always 1
    unsigned short l:1;          // always 1
    unsigned short count:14;     // always 0x3fff
};
```

RTP QUANTIZATION TABLE HEADER :

```
00 00 00 80
struct jpeghdr_qtable
{
    u_int8 mbz;                  // not used
    u_int8 precision;            // JPEG SOF[4]
                                  // if SOF[4] < 8 then precision = 0
                                  // else then precision = (SOF[4]-8)/8
    u_int16 length;              // two byte after FF DB
};
```

RTP QUANTIZATION TABLE DATA :

The length of this table is “jpeghdr_qtable::length” ; The table length of ACTi MJPEG is 64*2.

```
1A 18 16 16 18 31 23 25 1D 28 3A 33 3D 3C 39 33 38 37 40 48 5C 4E 40 44 57 45 37 38 50 6D 51 57
5F 62 67 68 67 3E 4D 71 79 70 64 78 5C 65 67 63 11 12 12 18 15 18 2F 1A 1A 2F 63 42 38 42 63 63
63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63
63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 63 C9 B5 B7 6B 89 B9 CE D1 5B 91 A0 8D 00 50 29 D1
```

10

ACTi H.264 Video Data Structure

H.264-compressed Video Data Format

We won't repeat most topics which described well in chap.8 . This chapter will concentrate on H.264 data structure.

H.264 and Audio Frame

After the connection is established, this section introduces how to get the streaming data from video Server.

We use the private data header(0x000001B2) to be the header tag. When we receive the data tag is the 0x000001B2 and the follow is the struct B2_HEADER. If the msg_type of the B2_HEADER is 5 and this frame is the H.264 frame. Others 2 and 3 are the audio frame.

H.264 frame In TCP Session

The H264-Frame of TCP concept is described below. (If you are looking for more information about B2 header, please refer to chap 8. [B2](#))

If the H.264 Frame is an I Frame, there will be a H.264 Sequence Header behind VIDEO_B2_FRAME.



H.264 frame In C SDK 10000 connection

It's easy to connect a device which has H.264 ability, just like we mentioned in previous chapters. We can examine the streaming from device by raw data callback.

Steps to register to ACTi's device:

1. Prepare the callback function for raw data streaming.
2. Call `KOpenInterface()` to get KMpeg4 handle.
3. Set raw data callback by `KSetRawDataCallback()`
4. Prepare IP address, port number, account, password, contact type..

5. Call `KSetMediaConfig(HANDLE, MEDIA_CONNECTION_CONFIG)` to set connect config.
6. Call `KConnect(HANDLE)`.
7. Call `KStartStreaming(HANDLE)` to get ready to receive.

```
//---- prepare callback function when MPEG-4 raw data arrives

//5 types are needed
// 1. mpeg4
// 2. Audio PCM (not always with time stamp)
// 3. Audio PCM must with time stamp
// 4. MJPEG
// 5. H.264
enum Raw_Data_Type
{
    EXCEPTION = 0,
    MPEG4_DATA = 1,
    AUDIO_PCM_DATA = 2,
    AUDIO_PCM_TIMESTAMP_DATA = 3,
    MJPEG_DATA = 4,
    H264_DATA = 5
};

void RawDataCallback(DWORD id, DWORD dwDataType, BYTE* buf, DWORD len)
{
    switch (dwDataType)
    {
        Case MPEG4_DATA:
            //do something for video stream
            break;

        Case AUDIO_PCM_DATA:
            //do something for audio stream
            break;

        Case AUDIO_PCM_TIMESTAMP_DATA:
            //do something for audio stream
            break;

        Case MJPEG_DATA:
            //do something for Motion JPEG stream
            break;

        Case H264_DATA:
            //do something for H264 stream
            break;
    }
}
```

```

    }
}
// Prepare yourself callback function first

// you should get HANDLE by KOpenInterface before Preview
HANDLE hK = KOpenInterface();

// Set callback functions
KSetRawDataCallback(hK, id, fnRawCallback);

// Prepare USER_INFO data structure by filling IP address, account, password.
MEDIA_CONNECTION_CONFIG mcc;
// Set your connection information into struct mcc.
...
KSetMediaConfig(hK, &mcc);
KConnect(hK);

// Start Streaming
KStartStreaming(hK);

```

H.264 frame In RTP Session

The H.264-Frame of RTP concept is different from JPEG/RTP concept. The NAL (Network Abstraction Layer) unit in header indicates the type of the packet. (If you are looking for more information about H.264/RTP, please refer to RFC 3984)

NAL		
1 bits	2 bits	5 bits
F	NRI	TYPE

The NAL unit

The semantics of the components of the NAL unit type octet, as specified in the H.264 specification, are described briefly below.

F: 1 bit

forbidden_zero_bit. The H.264 specification declares a value of 1 as a syntax violation.

NRI: 2 bits

nal_ref_idc. A value of 00 indicates that the content of the NAL unit is not used to reconstruct reference pictures for inter picture prediction. Such NAL units can be discarded without risking the integrity of the reference pictures. Values greater than 00 indicate that the decoding of the NAL unit is required to maintain the integrity of the reference pictures.

Type: 5 bits

nal_unit_type. This component specifies the NAL unit payload type as defined below.

Type	Packet	Type name
1-23	NAL unit	Single NAL unit packet per H.264
24	STAP-A	Single-time aggregation packet
25	STAP-B	Single-time aggregation packet
26	MTAP16	Multi-time aggregation packet
27	MTAP24	Multi-time aggregation packet
28	FU-A	Fragmentation unit
29	FU-B	Fragmentation unit

Summary of NAL unit types and their payload structures

In current devices, we use 2 types of packet. One is the "Sequence Header", and the other is "FU-A"(Fragmentation Units).

Sequence Header Pocket (type 1-23) :

The sequence header pocket should be looked like this.

RTP Header (It's detailed in previous chapter.)	NAL (1 byte)	H. 264 Sequence Header (unprocessed)	Header(0x000001B2) VIDEO_B2_FRAME
--	--------------	---	---------------------------------------

When the “NAL” is 0x67 (type of NAL is 1 to 23), the received pocket is “Sequence Header Pocket”. We need further process to get complete “H.264 Sequence Header”.

We have to extend NAL first, then append “unprocessed H.264 Sequence Header” later. The result will be “Complete H.264 Sequence Header”.

Here is the concept code in C++.

```
if( h261_nal->TYPE >= 1 && h261_nal->TYPE <=23 )
{
    unsigned char header[5];
    unsigned char szCompleteH264SequenceHeader[2048];
    // NAL
    if( psz_buf[RTP_HEADER_LEN] == 0x67 )
    {
        header[0] = 0x00;
        header[1] = 0x00;
        header[2] = 0x00;
        header[3] = 0x01;
        header[4] = 0x67;

        memcpy( szCompleteH264SequenceHeader, header, 5);
        memcpy( szCompleteH264SequenceHeader,
            &psz_buf[RTP_HEADER_LEN+1],
            POCKET_length - RTP_HEADER_LEN - 1 - B2_HEADER_LENGTH);
    }
}
```

FU-A(type 28) :

The FU header has the following format:

FU header			
1 bi ts	1 bi ts	1 bi ts	5 bi ts
S	E	R	TYPE

S: 1 bit

When set to one, the Start bit indicates the start of a fragmented NAL unit. When the following FU payload is not the start of a fragmented NAL unit payload, the Start bit is set to zero.

E: 1 bit

When set to one, the End bit indicates the end of a fragmented NAL unit, i.e., the last byte of the payload is also the last byte of the fragmented NAL unit. When the following FU payload is not the last fragment of a fragmented NAL unit, the End bit is set to zero.

R: 1 bit

The Reserved bit **MUST** be equal to 0 and **MUST** be ignored by the receiver.

Type: 5 bits

The NAL unit payload type.

The “FU-A pocket” should look like this.

RTP Header (It's detailed in previous chapter.)	NAL (1 byte)	FU header (1 byte)	FU Payload	
			(unprocessed segment of H.264 frame)	Header(0x000001B2) VIDEO_B2_FRAME (This B2 is attached when it's the last segment of H.264 frame.)

When the type of NAL is 28, the received packet is “FU-A Packet”. We need further process to get complete “unprocessed segment of H.264 frame”.

We have to extend NAL and FU header first (bitwise operation), then append “unprocessed segment of H.264 frame” later. The result will be “Complete segment of H.264 frame”.

Here is the concept code in C++.

```

unsigned char szCompleteH264Segment[SEGMENT_SIZE];

if( h261_nal->TYPE == 28 )
{
    //copy fu header
    fuheader = (FU_HEADER *)&psz_buf[RTP_HEADER_LEN+1];
    ...
    // if the S of fu header is 1 , the segment is the first segment in this H.264 frame
    if( fuheader->S == 1 )
    {
        //first byte of this segment is 0x88, so it's a I frame
        if( (unsigned char)psz_buf[RTP_HEADER_LEN+2] == 0x88 )
        {
            // sometimes we put Sequence Header in front of I Frame for some decoder
            // I_Frame
            // Sequence + I Frame
            memcpy( frame.Buf+frame.Len, media.sequence_header, media.sequence_header_len);
            frame.Len += media.sequence_header_len;
        }
        else
        {
        }
    }
    //

```

```

        header[0] = 0x00;
        header[1] = 0x00;
        header[2] = 0x00;
        header[3] = 0x01;
        header[4] = (h261_nal->NRI & 0x03) << 5 | fuheader->TYPE & 0x2F;
        memcpy(szCompleteH264Segment,header,5);
        // nal and fu header = 2Bytes
        memcpy(szCompleteH264Segment,
                &psz_buf[RTP_HEADER_LEN+2],
                POCKET_length - RTP_HEADER_LEN - 2);

        ...
    }
    memcpy( frame.Buf+frame.Len, szCompleteH264Segment, POCKET_length - RTP_HEADER_LEN - 2 );
    frame.Len += (POCKET_length - RTP_HEADER_LEN - 2);

    //When Marker in RTP header is 1 , this is the last segment in H.264 frame
    if( rtp_header->Marker == 1 )
    {
        // Check If there is a ACTI B2 Header 00 00 01 B2
        if( GetRTPVideoFrameType( &frame.Buf[frame.Len-B2_FRAME_LEN]) == RTP_FRAME_B2 )
        {
        }
        else
        {
        }
    }
}


```



11

TCP and RTP/RTSP Packet Format

TCP v1.0 Packet

TCP v1.0 Video Connect Flow

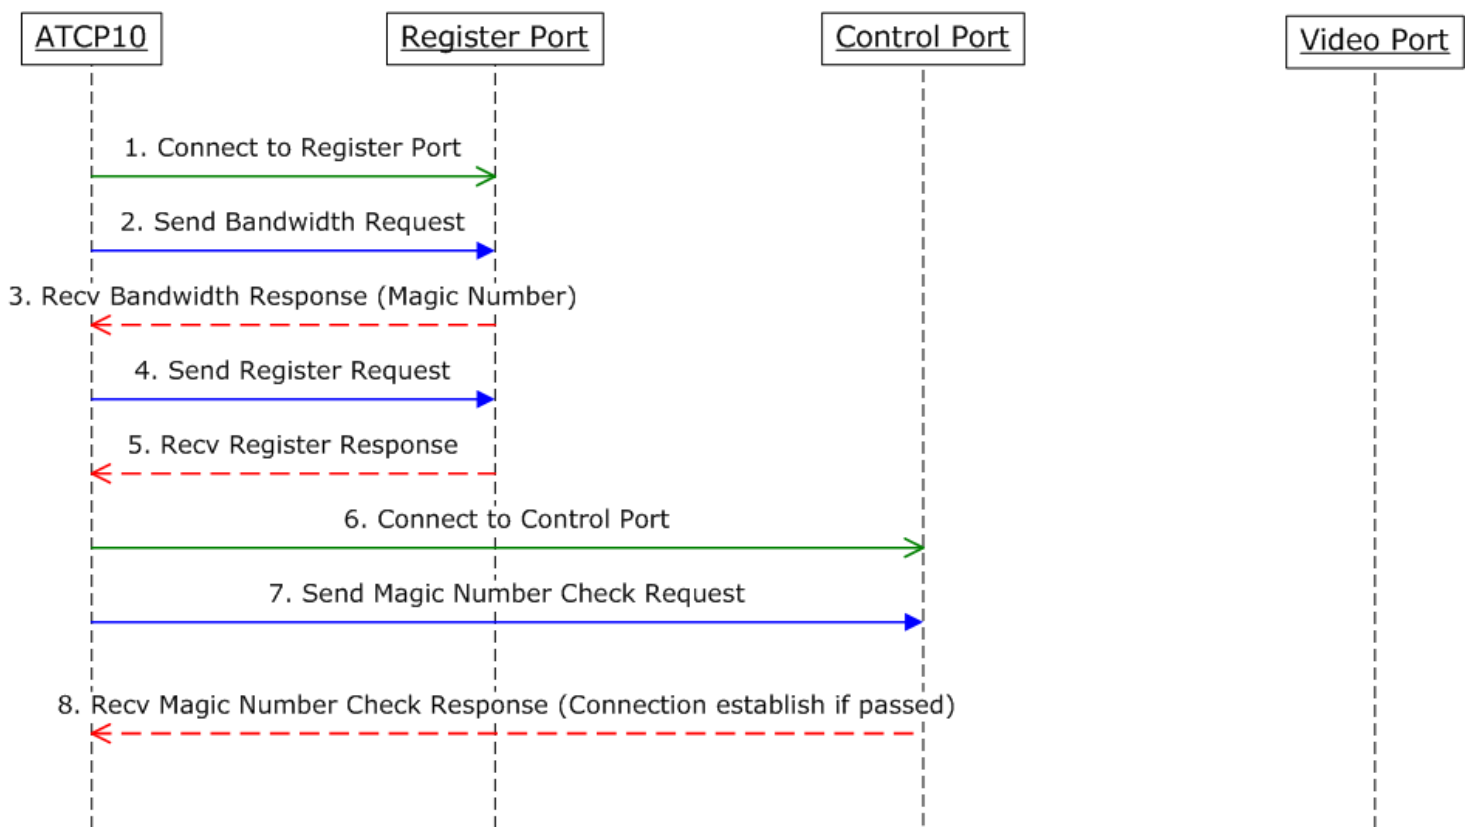

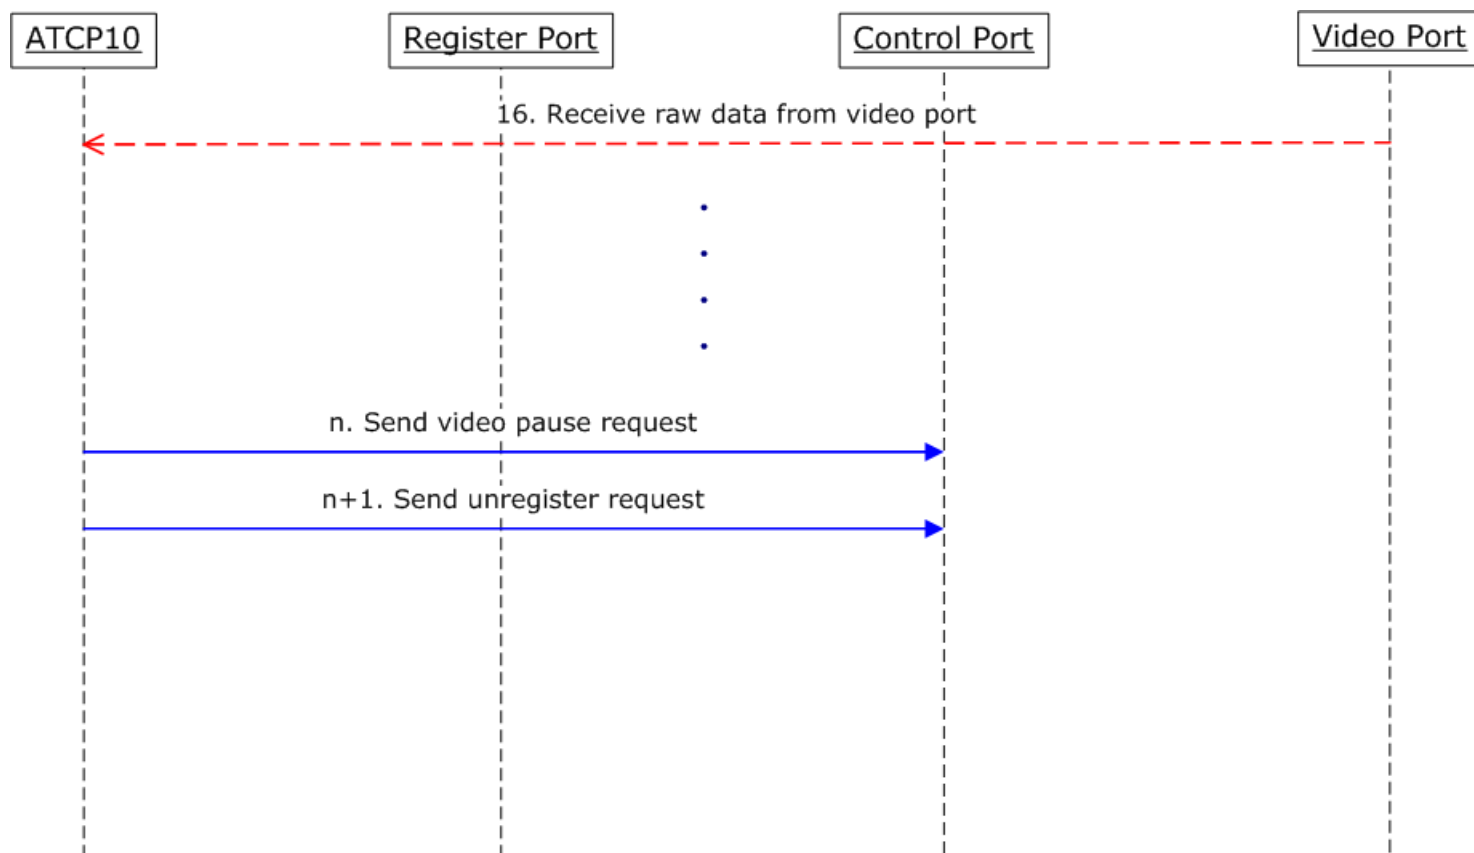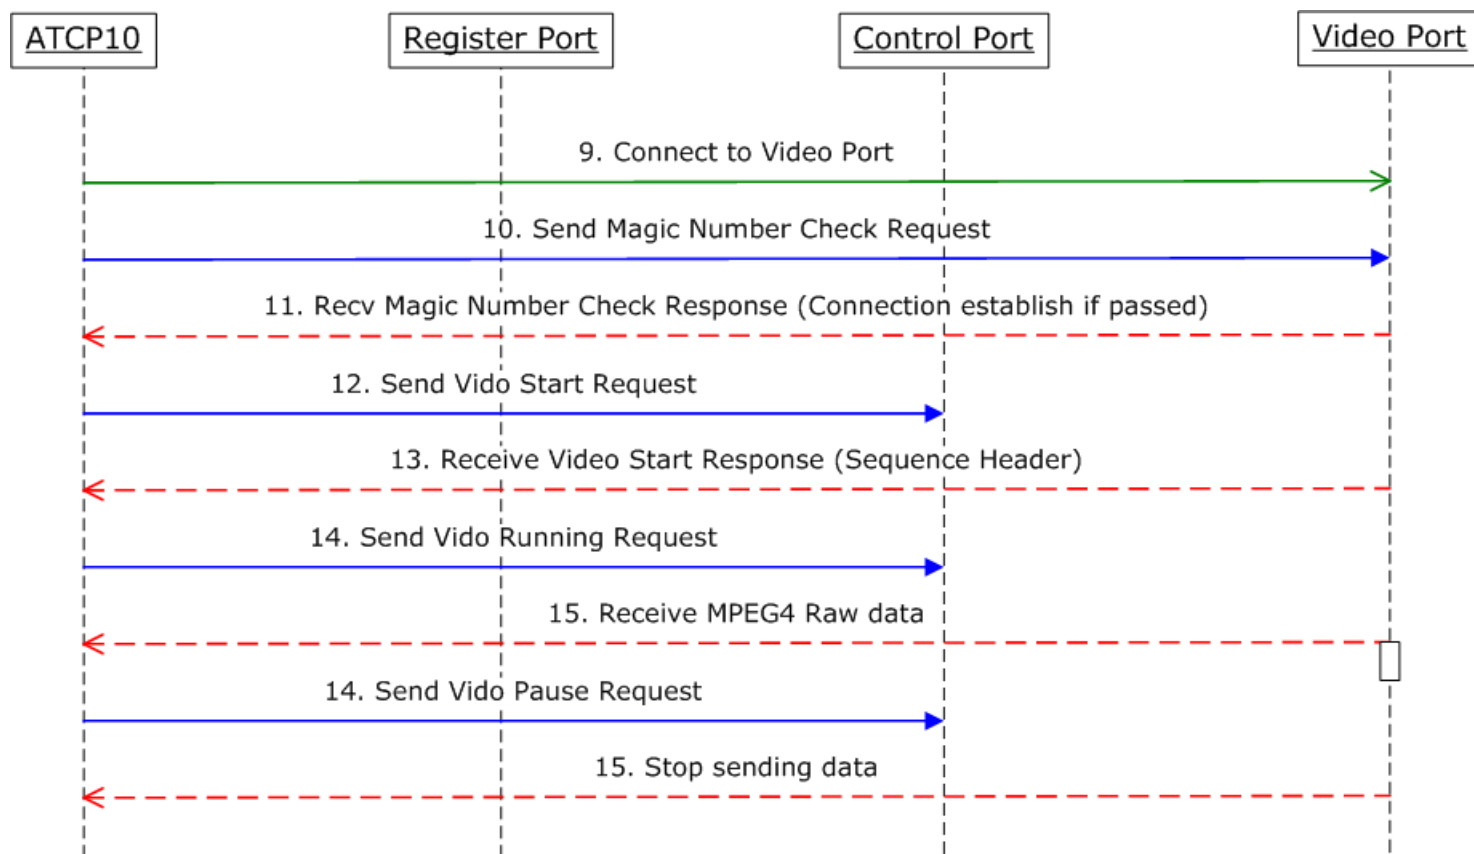


Note that:

1. Live check packet send between ATCP & Control port every constant time.

Disconnect steps

1. Disconnect register port
2. Do n and n+1 steps
3. Disconnect control port
4. Disconnect video port

TCP v1.0 Video Packet Format

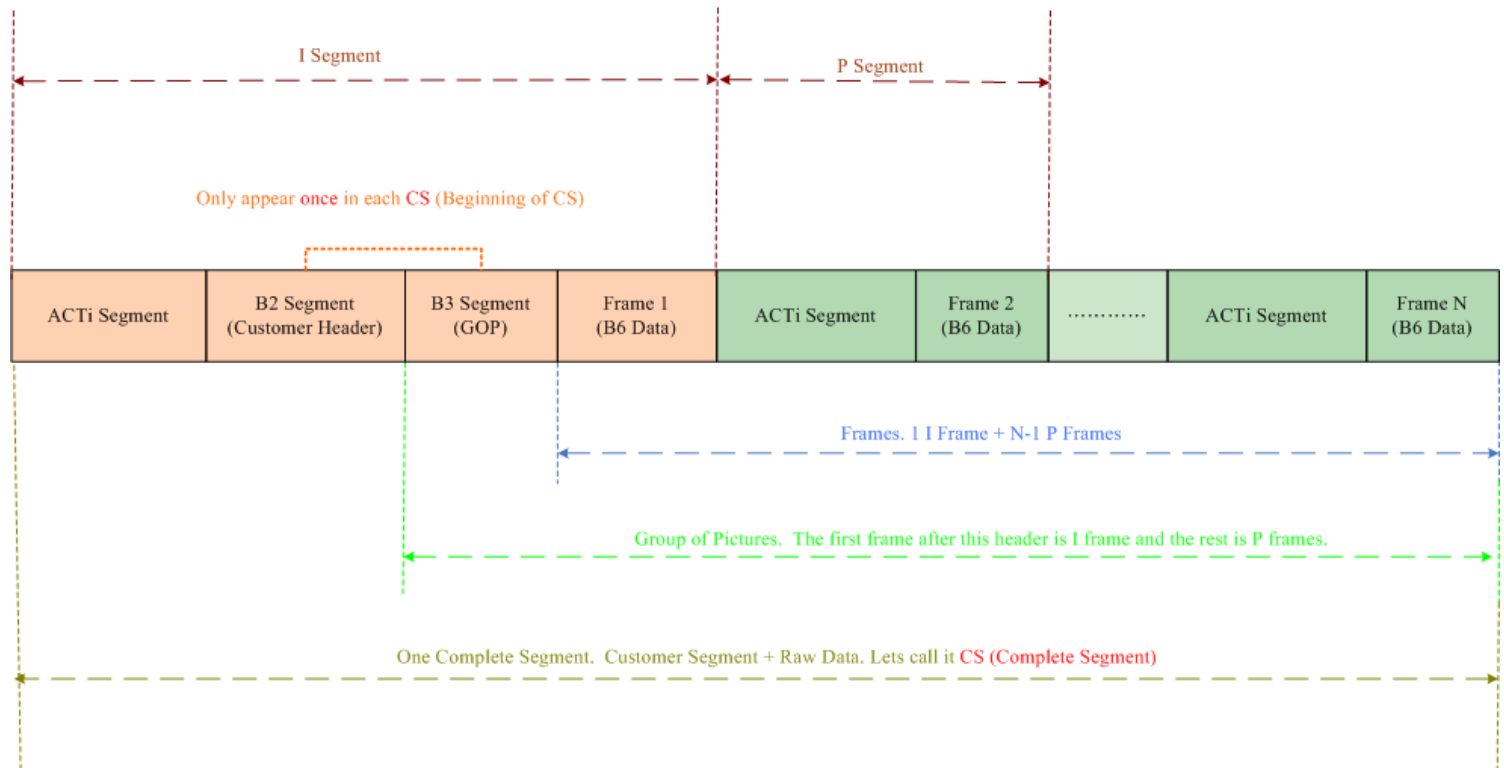


Note. No Audio data for TCP 10


```

ACTi Segment
{
char b2h[4]; // String "ACTi"
DWORD dwVersion; // 0x00010022
DWORD dwLength; // Data length
}
    
```

Multicast v1.0 Packet

Multicast v1.0 Video Connect Flow

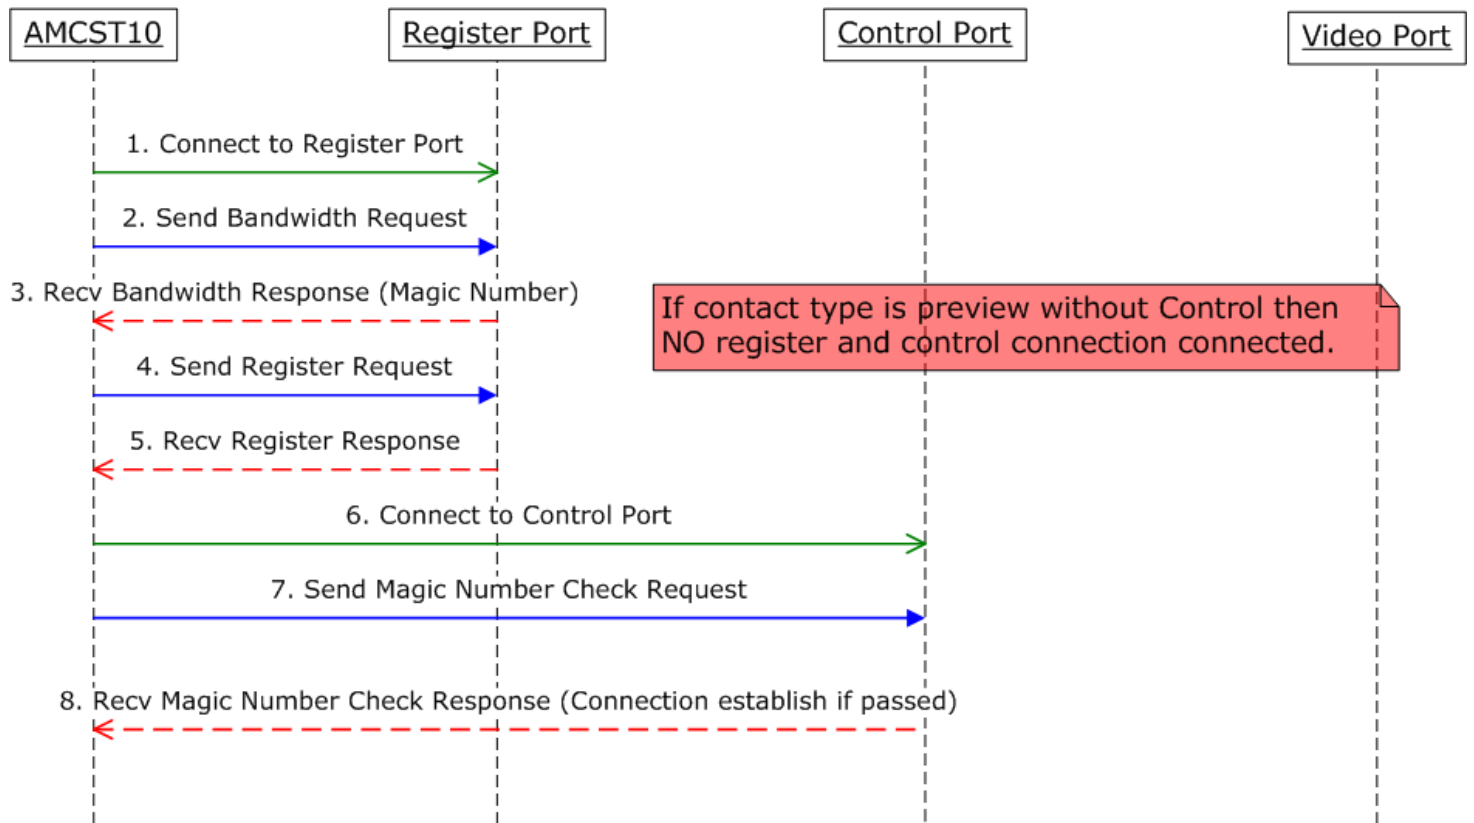

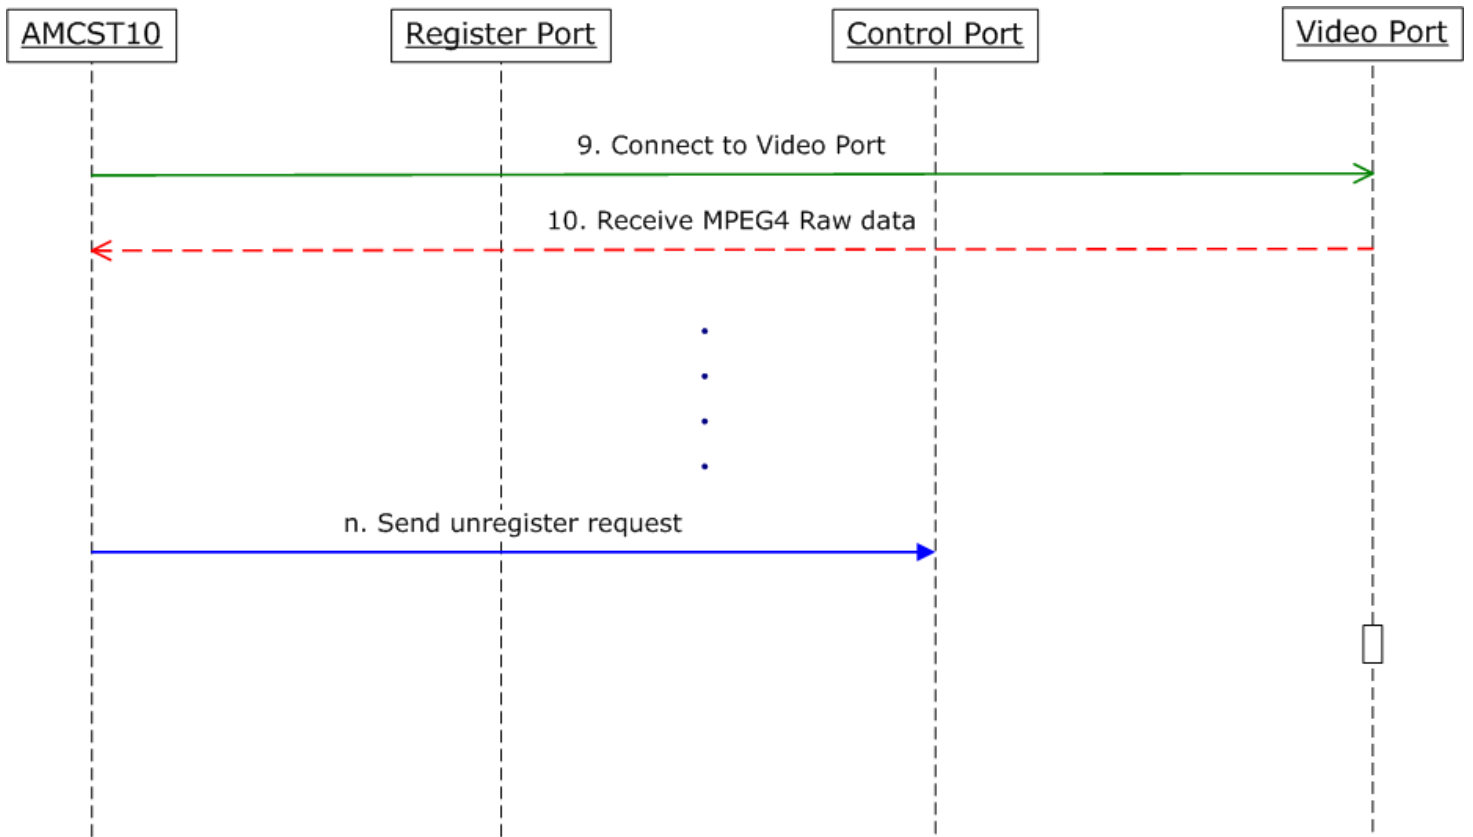


Note that:

Live check packet send between ATCP & Control port every constant time.

Disconnect steps

1. Disconnect register port
2. Do n.
3. Disconnect control port
4. Disconnect video port

Multicast v1.0 Video Packet Format

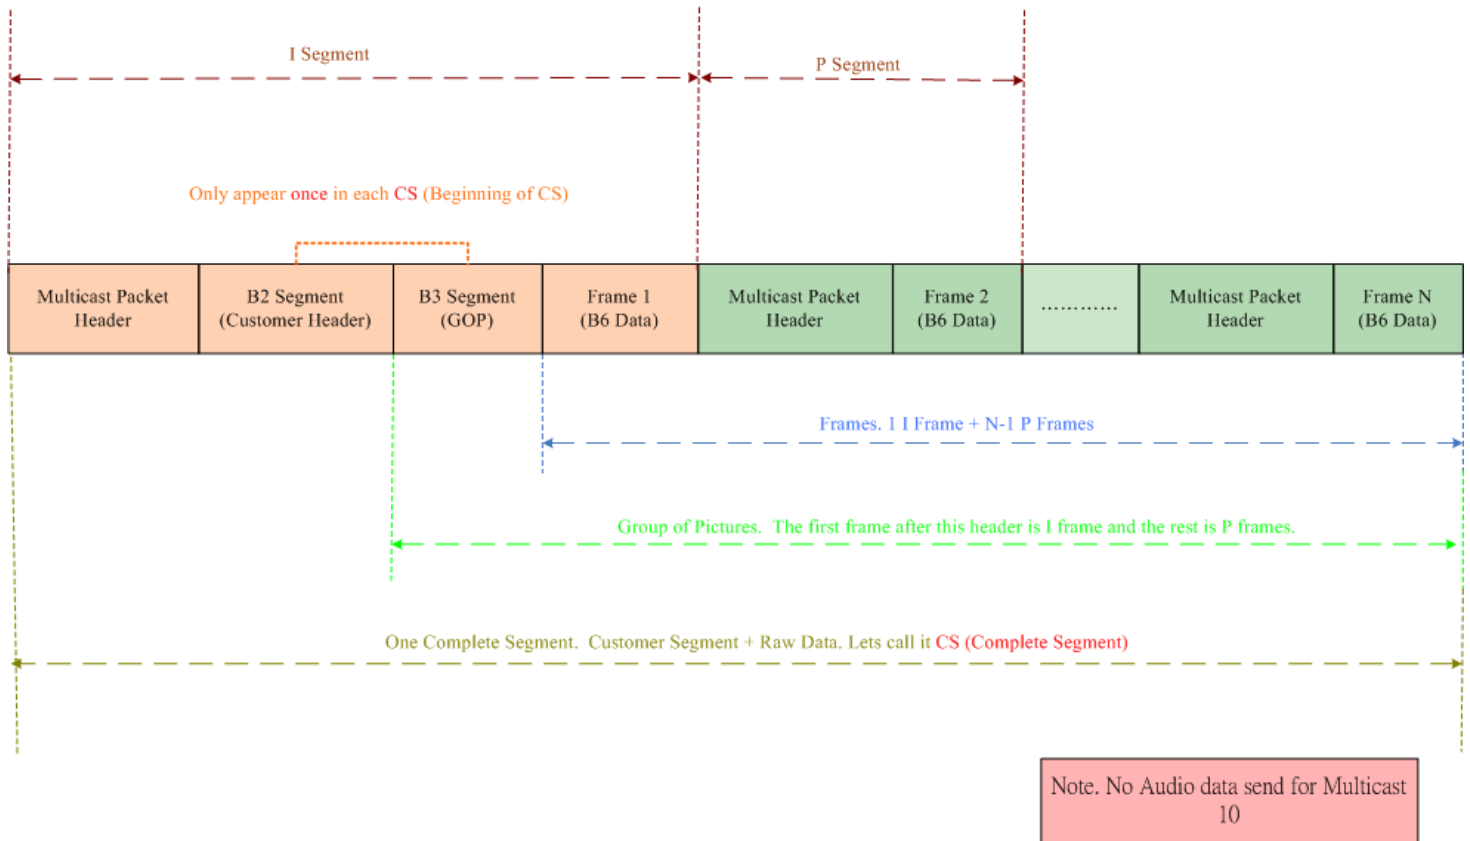


```
typedef struct tagMCPacketHead
{
    unsigned char StreamId;
    unsigned char StreamSubId;
    unsigned char KeyPacket;
    unsigned char TotalPacket;
    unsigned char PacketNum;
    unsigned char FrameChecksum;
    unsigned char Resolution;
    unsigned char Fps;
    unsigned int FrameNum;
    unsigned int FrameLen;
} MCPacketHead;
```


Important Note:

1. Key packet attribute is very important to determine the last packet of the frame.
2. Only key packet has both FPS and Resolution information.

TCP v2.0 Packet

TCP 2.0 Video Connect Flow

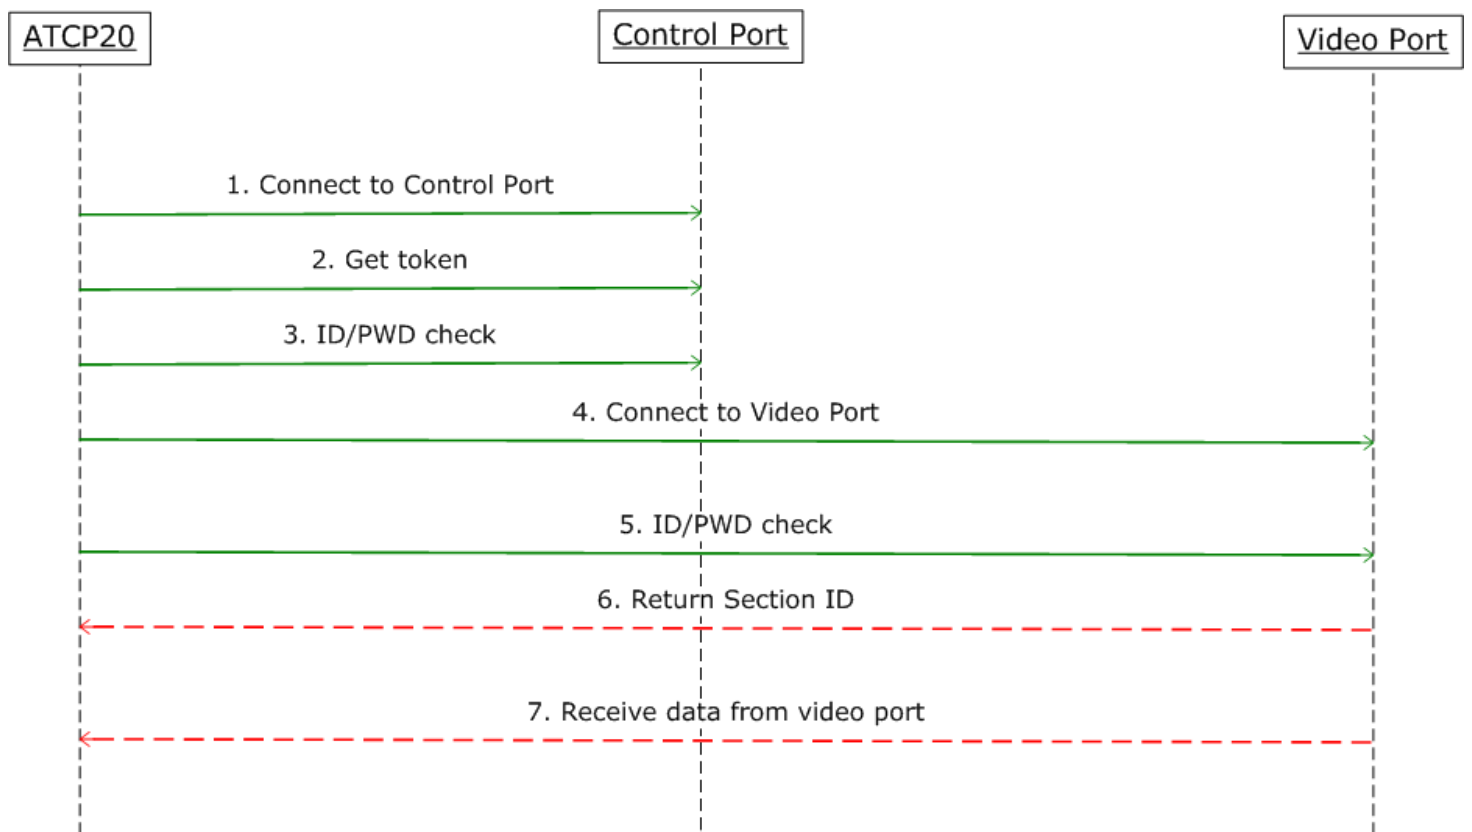


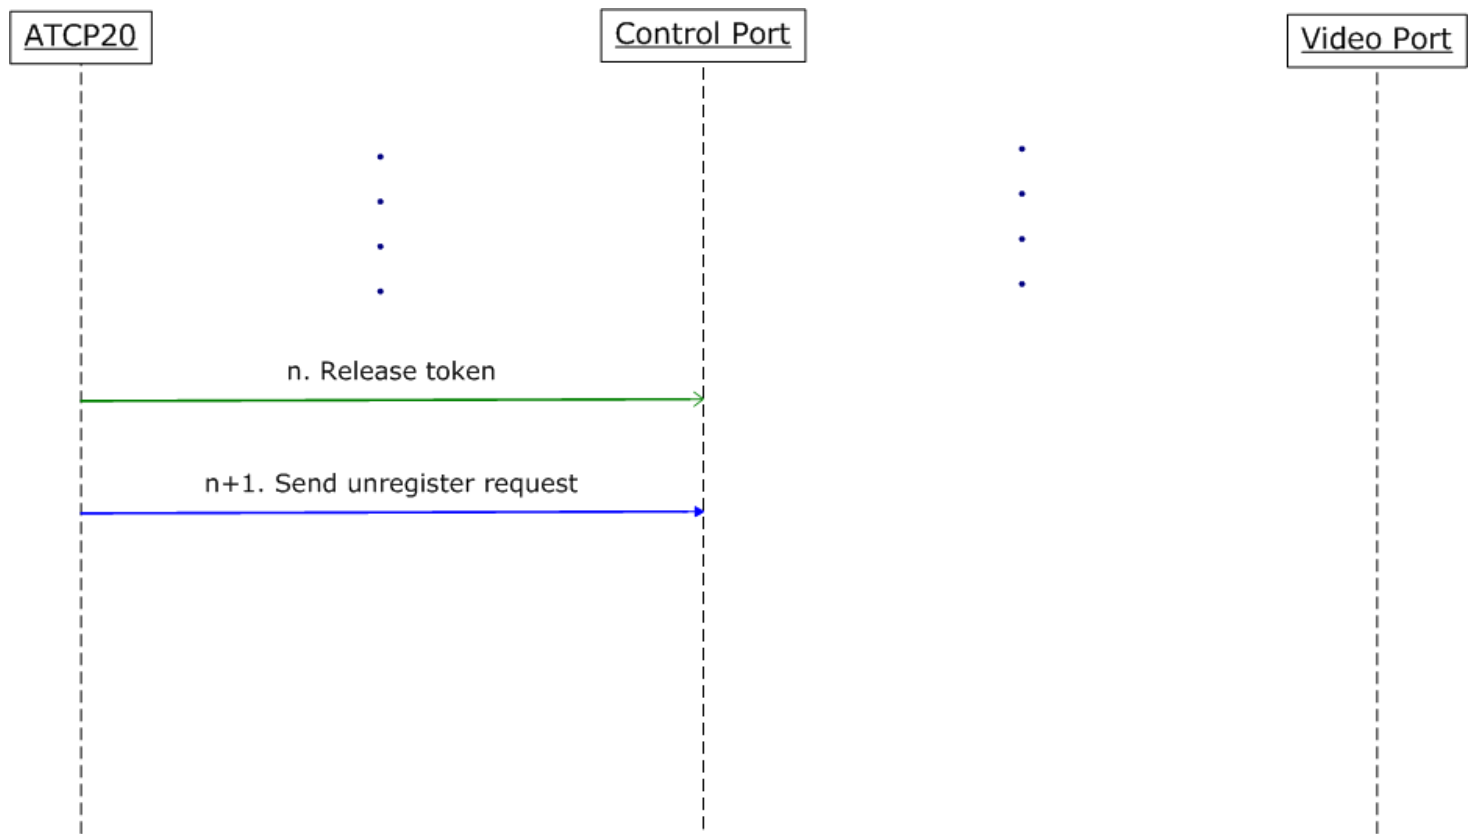

Disconnect steps

1. Do n and n+1 steps
2. Disconnect control port
3. Disconnect video port

TCP 2.0 Video Packet Format

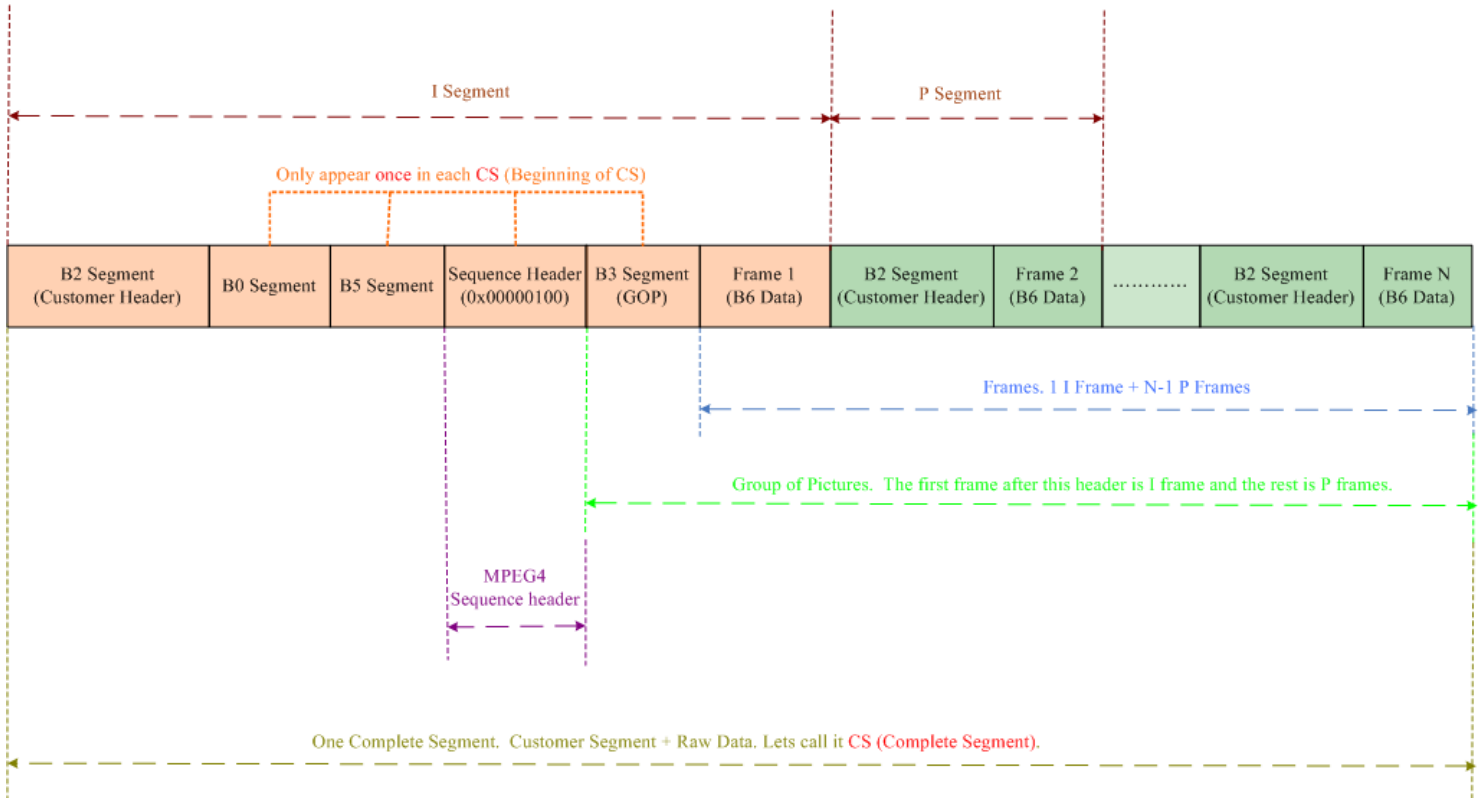

Composition of data:

B2 Frame (see the detail in chap.8)

(B2 header is 44 Byte for MPEG4/MJPEG/H264 Frames , AUDIO_B2 header is 28 Byte)

VIDEO_B2_FRAME	
B2_HEADER	
0x000001B2	User Data

```
typedef struct {  
    B2_HEADER    header;  
    PRIVATE_DATA prdata;  
} VIDEO_B2_FRAME; //44 bytes (details in chapter 8)
```

AUDIO_B2	
B2_HEADER	
0x000001B2	User Data

```
typedef struct {  
    B2_HEADER header;  
    struct timeval timestamp;  
    unsigned char reserved[8];  
} AUDIO_B2; //28 bytes (details in chapter 8)
```

Bitstream Data					
B0 Header	B0 Data	B5 Header	B5 Data	Sequence header	Sequence data
0x000001B0	1 Byte	0x000001B5	1 Byte	0x00000100	17 bytes

I-Frame Data			
B3 Header	B3 Data	B6 Header	Frame data
0x000001B3	3 bytes	0x000001B6	N Byte

P-Frame Data	
B6 Header	Frame data
0x000001B6	N Byte

Audio Data
(PCM data)
N Byte

TCP of ACTi:

(a) MPEG4 I Frame composite

VIDEO_B2_FRAME		Bitstream Data					I-Frame Data			
B2_HEADER		B0	data	B5	data	Sequence	B3	B3 Data	B6 Header	Frame data
0x000001B2	User Data	0x000001B0	1 Byte	0x000001B5	1 Byte	0x00000100	0x000001B3	3 bytes	0x000001B6	N Byte

(b) MPEG4 P Frame composite

VIDEO_B2_FRAME		P-Frame Data	
B2_HEADER		B6 Header	Frame data
0x000001B2	User Data	0x000001B6	N Byte

(c) Audio Frame composite

AUDIO_B2		Audio Data
B2_HEADER		(PCM data)
0x000001B2	User Data	N Byte

Multicast of ACTi :

(a) MPEG4 I Frame

Mul ti cast Header	VI DEO_B2_FRAME		Bi tstream Data					I -Frame Data			
	B2_HEADER		B0	data	B5	data	Sequence	B3	B3 Data	B6 Header	Frame data
	0x000001B2	User Data	0x000001B0	1 Byte	0x000001B5	1 Byte	0x00000100	0x000001B3	3 bytes	0x000001B6	N Byte

(b) MPEG4 P Frame

Mul ti cast Header	VI DEO_B2_FRAME		P-Frame Data	
	B2_HEADER		B6 Header	Frame data
	0x000001B2	User Data	0x000001B6	N Byte

(c) Audio Frame

Mul ti cast Header	AUDI O_B2		Audi o Data
	B2_HEADER		(PCM data)
	0x000001B2	User Data	N Byte

Exported Struct

Media Connection Configuration :

```
typedef struct structural _MEDIA_CONNECTION_CONFIG
{
    int ContactType;

    unsigned char Channel Number;
    unsigned char TCPVideoStreamID;
    unsigned char RTPVideoTrackNumber;
    unsigned char RTPAudioTrackNumber;

    char          UniCastIP[16];
    char          MultiCastIP[16];
    char          PlayFileName[256];
    char          UserID[64];
    char          Password[64];
    unsigned long RegisterPort;
    unsigned long StreamingPort;
    unsigned long ControlPort;
    unsigned long MultiCastPort;
    unsigned long SearchPortC2S;
    unsigned long SearchPortS2C;
    unsigned long HTTPPort;
    unsigned long RTSPPort;
    unsigned long Reserved1;
    unsigned long Reserved2;

    unsigned short ConnectTimeOut;
    unsigned short EncryptionType;
}MEDIA_CONNECTION_CONFIG;
```

Media Video Configuration :

```
typedef struct structural _MEDIA_VIDEO_CONFIG
{
    DWORD dwTvStander;           // 0: NTSC 1: PAL
    DWORD dwVideoResolution;     // See resolution definition
    DWORD dwBitsRate;           // See bit rate definition
    DWORD dwVideoBrightness;     // 0 ~ 100 : Low ~ High
    DWORD dwVideoContrast;       // 0 ~ 100 : Low ~ High
```

```

        DWORD dwVideoSaturation;    // 0 ~ 100 : Low ~ High
        DWORD dwVideoHue;           // 0 ~ 100 : Low ~ High
        DWORD dwFps;                // 0 ~ 30 frame per second
    } MEDIA_VIDEO_CONFIG;

```

Media Port Information :

```

typedef struct structural_MEDIA_PORT_INFO    // Device port info.
{
    unsigned long PORT_HTTP;                // HTTP Port
    unsigned long PORT_SearchPortC2S;       // Search Port 1
    unsigned long PORT_SearchPortS2C;       // Search Port 2
    unsigned long PORT_Register;            // Register Port
    unsigned long PORT_Control;             // Control Port
    unsigned long PORT_Streaming;           // Streaming Port
    unsigned long PORT_Multicast;           // Multicast Port
    unsigned long PORT_RTSP;               // RTSP Port
} MEDIA_PORT_INFO;

```

Media Render Information

```

typedef struct structural_MEDIA_RENDER_INFO
{
    int    RenderInterface;                // Reserve, in the future this
                                              // parameter meaning GDGI or DDRAW

    HWND   hWnd;                          // The handle of drawing window
    RECT   rect;                          // rect. info. of drawing window.
} MEDIA_RENDER_INFO;

```

Media Motion Information

```

typedef struct structural_MEDIA_MOTION_INFO
{
    DWORD dwEnable;                        // Enable flag
    DWORD dwRangeCount;                    // Number of range count
    DWORD dwRange[3][4];                  // Range information
    DWORD dwSensitive[3];                 // 0 - 100
} MEDIA_MOTION_INFO;

```

Raw File Record Information

```

typedef struct structural_MP4FILE_RECORD_INFO
{
    time_t      tBeginTime;                // Begin time of record file
    time_t      tEndTime;                  // End time of record file.
    BYTE        btTimeZone;                // Time zone

```

```

        DWORD          dwGOP;                // GOP
        DWORD          dwFrameCount;         // Number of frames
        ULONGLONG      FileSize;             // Size of record file
    } MP4FILE_RECORD_INFO;

```

Time Zone

0 : GMT-12	1 : GMT-11	2 : GMT-10	3 : GMT-09	4 : GMT-08
5 : GMT-07	6 : GMT-06	7 : GMT-05	8 : GMT-04	9 : GMT-03
10 : GMT-02	11 : GMT-01	12 : GMT+00	13 : GMT+01	14 : GMT+02
15 : GMT+03	16 : GMT+04	17 : GMT+05	18 : GMT+06	19 : GMT+07
20 : GMT+08	21 : GMT+09	22 : GMT+10	23 : GMT+11	24 : GMT+12
25 : GMT+13	32 : GMT-9: 30	33: GMT-4: 30	34: GMT-3: 30	35: GMT+3: 30
36: GMT+4: 30	37 : GMT+5: 30	38: GMT+5: 45	39: GMT+6: 30	40: GMT+9: 30
41: GMT+11: 30	42: GMT+12: 45			

DI Notify

```

typedef struct structural_NOTIFY_DI
{
    HANDLE    DIEvent;                // [IN] Event handle
    BYTE DI;                          // [OUT] Digital input
}NOTIFY_DI;

```

Time Code Notify

```

typedef struct structural_NOTIFY_TIMECODE
{
    HANDLE    TimeCodeEvent;          // [IN] Event handle
    DWORD     dwTimeCode;             // [OUT] Time code
}NOTIFY_TIMECODE;

```

Raw Data Refresh Notify

```

typedef struct structural_NOTIFY_RAWDATAREFRESH
{
    HANDLE    RawDataRefreshEvent;    // [IN] Event handle
    void*     pBuffer;                // [OUT] Buffer pointer
    int       nFillLength;            // [IN/OUT] Buffer length
}NOTIFY_RAWDATA_REFRESH;

```

Video Status Notify

```
typedef struct structural_NOTIFY_VIDEOSTATUS
{
    HANDLE    VideoLossEvent;           // [IN] Event handle
    HANDLE    VideoRecoveryEvent;       // [IN] Event handle
}NOTIFY_VIDEO_STATUS;
```

Network Loss Notify

```
typedef struct structural_NOTIFY_NETWORKLOSS
{
    HANDLE    NetworkLossEvent;         // [IN] Event handle
}NOTIFY_NETWORK_LOSS;
```

Motion Detection Notify

```
typedef struct structural_NOTIFY_MOTIONDETECTION
{
    HANDLE    MotionDetectionEvent;     // [IN] Event handle
    BYTE      MotionDetection;          // [OUT] Motion detection info.
}NOTIFY_MOTION_DETECTION;
```

Image Refresh Notify

```
typedef struct structural_NOTIFY_IMAGE_REFRESH
{
    HANDLE    ImageRefreshEvent;        // [IN] Event handle
    void*     pImage;                  // [OUT] Buffer pointer
    int       nFillLength;              // [IN/OUT] Buffer length
}NOTIFY_IMAGE_REFRESH;
```

After Render Notify

```
typedef struct structural_NOTIFY_AFTER_RENDER
{
    HANDLE    AfterRenderEvent;         // [IN] Event handle
}NOTIFY_AFTER_RENDER;
```

Resolution Change Notify

```
typedef struct structural_NOTIFY_RESOLUTION_CHANGE
{
    HANDLE    ResolutionChangeEvent;    // [IN] Event handle
    int       nResolution;              // [OUT] Resolution
}NOTIFY_RESOLUTION_CHANGE;
```


Resolution Map

In this chapter, new megapixel resolution has been added.

```
#define NTSC_720x480 0          ///< #0# - NTSC - 720 x 480
#define NTSC_352x240 1          ///< #1# - NTSC - 352 x 240
#define NTSC_160x112 2          ///< #2# - NTSC - 160 x 112
#define PAL_720x576 3           ///< #3# - PAL - 720 x 576
#define PAL_352x288 4           ///< #4# - PAL - 352 x 288
#define PAL_176x144 5           ///< #5# - PAL - 176 x 144
#define PAL_176x120 6           ///< #6# - PAL - 176 x 144
#define PAL_640x480 192         ///< #7# - NTSC - 160 x 112

#define NTSC_640x480 64          ///< #8# - NTSC - 160 x 112
#define NTSC_1280x720 65         ///< #9# - NTSC - 1280 x 720
#define NTSC_1280x900 66         ///< #10# - NTSC - 1280 x 960
#define NTSC_1280x1024 67        ///< #11# - NTSC - 1280 x 1024
#define NTSC_1920x1080 68        ///< #12# - NTSC - 1920 x 1080
#define NTSC_320x240 70          ///< #13# - NTSC - 320 x 240
#define NTSC_160x120 71          ///< #14# - NTSC - 160 x 120
```

RS232 Data Refresh Notify

```
typedef struct structural_NOTIFY_RS232DATA_REFRESH
{
    HANDLE    RS232DataRefreshEvent;    // Event handle
    void*     pBuffer;                  // [OUT] Buffer pointer
    int       nFILLLength;               // [IN/OUT] Buffer length
}NOTIFY_RS232DATA_REFRESH;
```

Digital Input Default Value

```
#define DI_DEFAULT_IS_LOW 0x00    // Digital Input Default is Low
#define DI_DEFAULT_IS_HIGH 0x03   // Digital Input Default is High
```

Digital Output Value

```
#define DO_OUTPUT_1 0x01          // Digital Output 1st
#define DO_OUTPUT_2 0x02          // Digital Output 2nd
#define DO_OUTPUT_BOTH 0x03       // Digital Output Both 1st & 2nd
#define DO_OUTPUT_CLEAN 0x00      // Clean up Digital Output
```

RS232 Setting

```
#define RS232_SET_N81      0x00      // RS232 Setting, N, 8, 1
#define RS232_SET_O81      0x08      // RS232 Setting, Odd, 8, 1
#define RS232_SET_E81      0x18      // RS232 Setting, Even, 8, 1
```

Play Rate

```
enum PLAY_RATES           // Play rate
{
    RATE_0_5,              // 1/2 Speed
    RATE_1_0,              // 1.0 Speed
    RATE_2_0,              // 2.0 Speed
    RATE_4_0,              // 4.0 Speed
    RATE_8_0               // 8.0 Speed
};
```

Contact Type

```
enum CONTACT_TYPE         // Contact Type
{
    CONTACT_TYPE_UNUSE,    // not used
    CONTACT_TYPE_UNICAST_WOCPREVIEW, // Preview - Unicast without control
    // port, using ATCP10 and ATCP20
    CONTACT_TYPE_MULTICAST_WOCPREVIEW, // Preview - Multicast without control
    // port, using AMCST10 and AMCST20
    CONTACT_TYPE_RTSP_PREVIEW, // Preview - RTSP, using ARTSP( not
    // release yet )
    CONTACT_TYPE_CONTROL_ONLY, // Control only - using ATCP10 and
    // ATCP20
    CONTACT_TYPE_UNICAST_PREVIEW, // Preview - Unicast, using ATCP10
    // and ATCP20
    CONTACT_TYPE_MULTICAST_PREVIEW, // Preview - Multicast, using AMCST10
    // and AMCST20
    CONTACT_TYPE_PLAYBACK, // Playback - Playback, using ARAW
    CONTACT_TYPE_CARD_PREVIEW // Preview - 4100 preview, using A4100
};
```

RS232 Baud Rate

```
enum RS232_BAUD_RATE      // RS232 BaudRate
{
    BAUD_RATE_1200BPS,    // 1200 BPS
    BAUD_RATE_2400BPS,    // 2400 BPS
    BAUD_RATE_4800BPS,    // 4800 BPS
    BAUD_RATE_9600BPS,    // 9600 BPS
    BAUD_RATE_19200BPS,   // 19200 BPS
};
```

```

        BAUD_RATE_38400BPS,           // 38400 BPS
        BAUD_RATE_57600BPS,          // 57600 BPS
        BAUD_RATE_115200BPS,         // 115200 BPS
        BAUD_RATE_230400BPS          // 230400 BPS
    };

```

Bit Rate

```

enum BI TRATE_TYPES                    // Bi trate Types
{
    BI TRATE_28K,                      // 28K Bi ts per second
    BI TRATE_56K,                      // 56K Bi ts per second
    BI TRATE_128K,                     // 128K Bi ts per second
    BI TRATE_256K,                     // 256K Bi ts per second
    BI TRATE_384K,                     // 384K Bi ts per second
    BI TRATE_500K,                     // 500K Bi ts per second
    BI TRATE_750K,                     // 750K Bi ts per second
    BI TRATE_1000K,                    // 1M Bi ts per second
    BI TRATE_1200K,                    // 1.2M Bi ts per second
    BI TRATE_1500K,                    // 1.5M Bi ts per second
    BI TRATE_2000K,                    // 2M Bi ts per second
    BI TRATE_2500K,                    // 2.5M Bi ts per second
    BI TRATE_3000K                     // 3M Bi ts per second
};

```

Codec Type

```

enum CODEC_TYPES                      // CODEC Types
{
    XVI DCODEC,                       // XVID - using XVIDCODEC
    FFMCODEC,                         // FFMpeg - using FFMCODEC
    P51CODEC                          // PCI 5100 - using P51CODEC
    I PPCODEC                         ///< #3# - I PPCODEC - using I PPCODEC
    MJPEGCODEC                       // using Motion JPEG
    I H264CODEC                      // H.264 codec
};

```

File Write Type

```

enum FILE_WRITER_TYPES               // File writer types
{
    FRAW,                             // Record by *.Raw File - using FRAW
    FAVI                              // Record by *.Avi File - using FAVI
};

```

Render Type

```

enum RENDER_TYPES                    // Render interface types

```

```

{
    DGDl ,
    DDDRAW
};

```

// Windows GDI for render
// Direct Draw for render

Device Type


```

enum DEVI CE_TYPE
{
    Type_None,
    Type_StandAl ong,
    Type_RackMount,
    Type_Bl ade
};

```

// Device Type
// None type
// Stand along
// Rack Mount
// Blade

TCP v2.0 Audio Packet Format

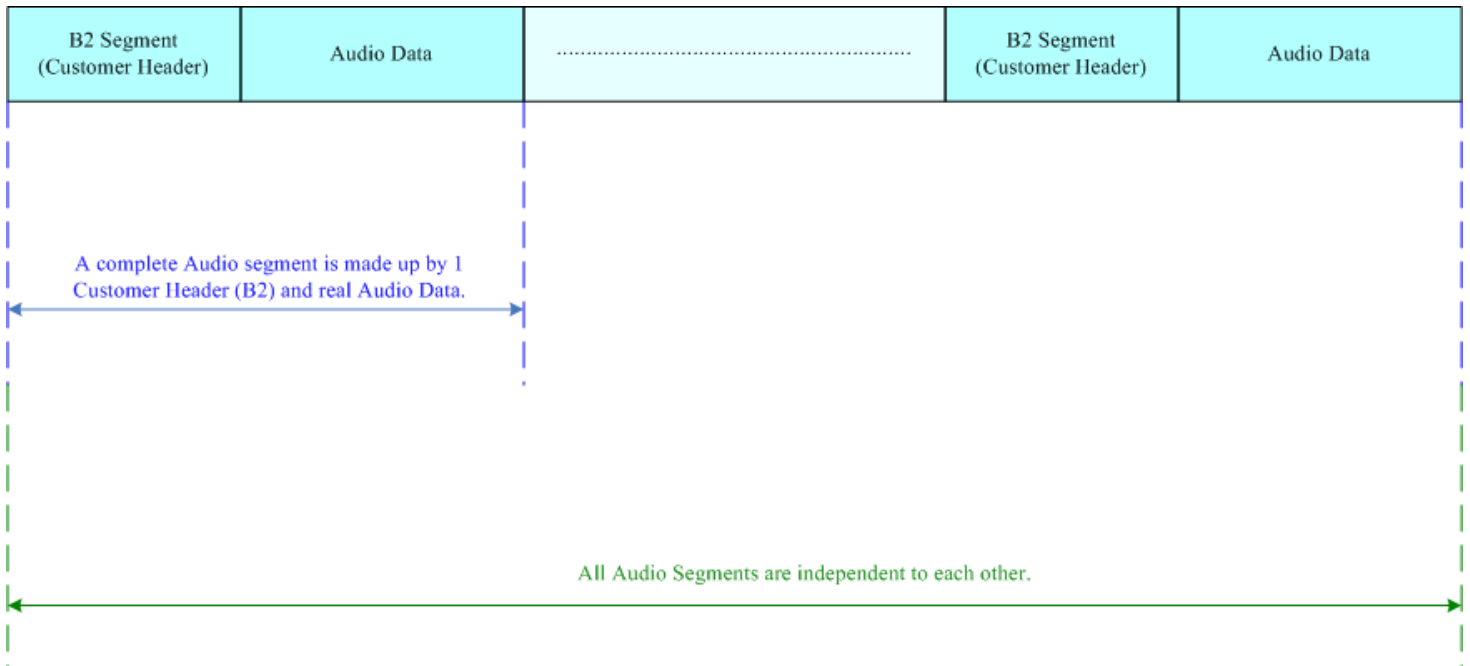


Note. Video server will send Audio & Video data in random order.

```
typedef struct {
    B2_HEADER header;
    struct timeval timestamp;
    unsigned char reserved[8];
} AUDIO_B2;    // 28 bytes (details in chapter 8)
```

Multicast v2.0 Packet


Multicast v2.0 Video Connect Flow

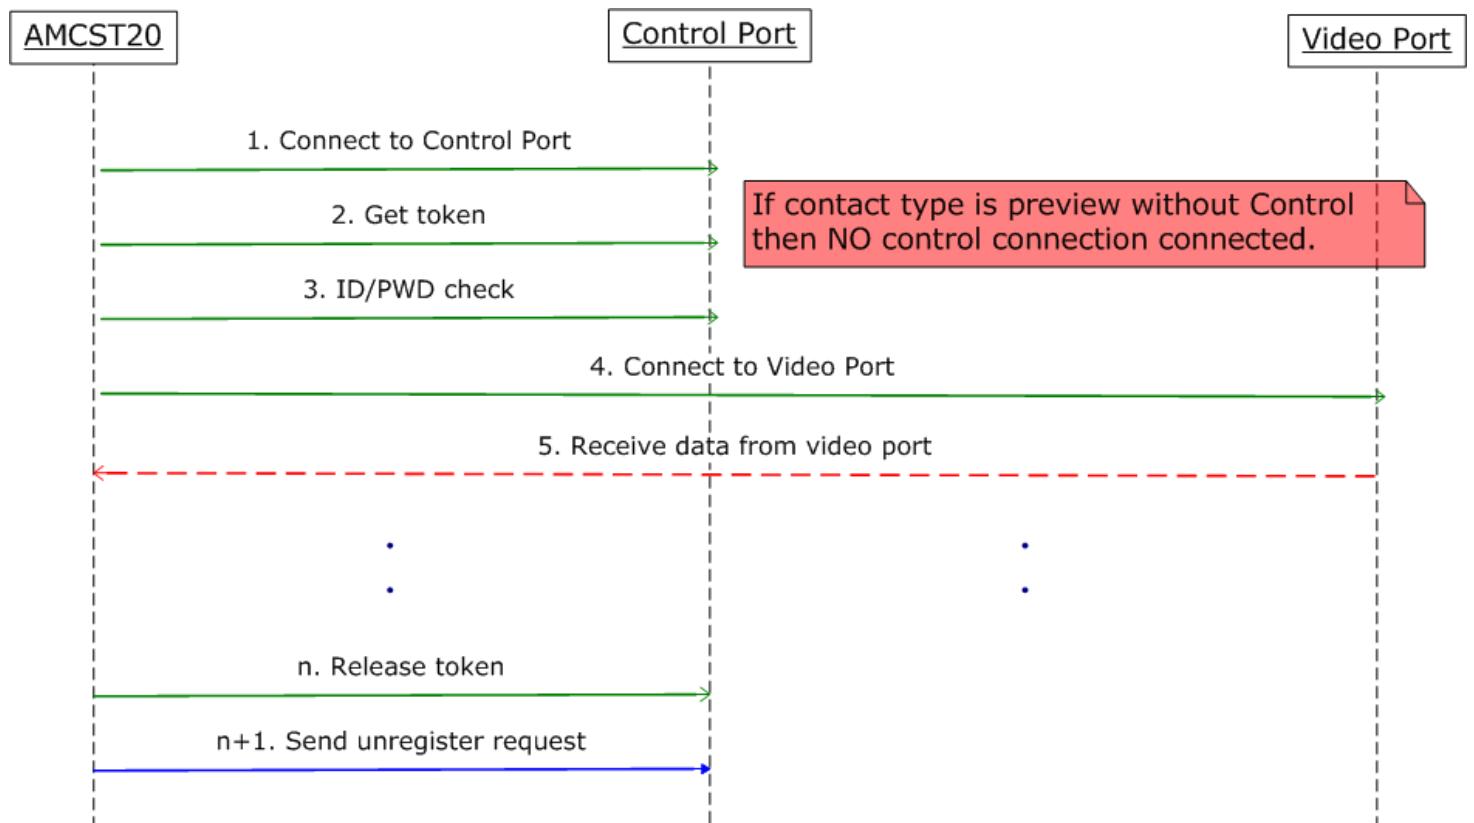

Disconnect steps

1. Do n.
2. Disconnect control port
3. Disconnect video port

Multicast v2.0 Video Packet Format

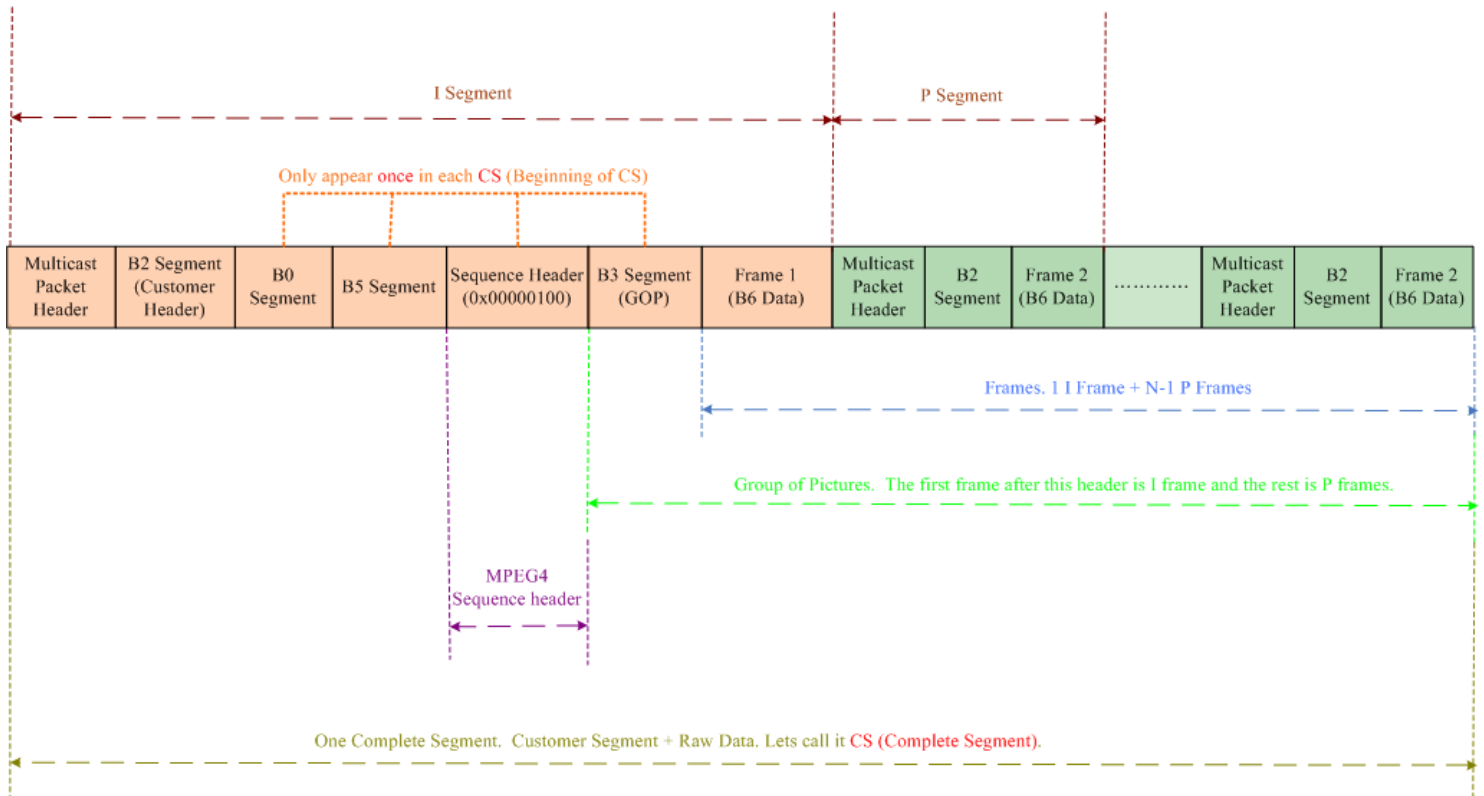

```
typedef struct _struct_NVDK_STRUCTURE_MULTICAST_HEADER
{
    unsigned char id;           /* Not used */
    unsigned char sub_id;       /* 0 -- video , 1 -- audio */
    unsigned char last;         /* 1: last packet of a frame. 0: otherwise */
    unsigned char packets;      /* This value is preserved, which is always 0 */
    unsigned char seq;          /* The sequence number in the fragmented UDP frames and
                                started from 1 (1 ~ N), which will restart from 1 again
                                when next frame arrived. */
    unsigned char checksum;      /* This value is preserved, which is always 0 */
    unsigned char fpsmode_res;   /* only for TCP1.0 where bit[7:4]: fps mode and
                                bit[3:0] resolution index.
                                for TCP2.0, this value is undefined */
    unsigned char fps_num;       /* only for TCP1.0 where bit[7:0]: fps number
```

```


        corresponding to the fps mode.
        for TCP2.0, this value is undefined. */
    unsigned int frame_num;    /* frame counter, increased by 1. the video and audio
                                has its own counter. */
    unsigned int frame_len;    /* length of payload in a fragmented UDP packet. The
                                Multicast Header is NOT included. */
} NVDK_STRUCT_MULTICAST_HEADER;

```

Important note:

1. Key packet attribute is very important to determine the last packet of the frame.
2. Need to find out Resolution and FPS from Sequence Header
3. 1(I or P frame) frame may divide into several multicast packets, each with a multicast packet header in front of it.

Multicast v2.0 Audio Packet Format

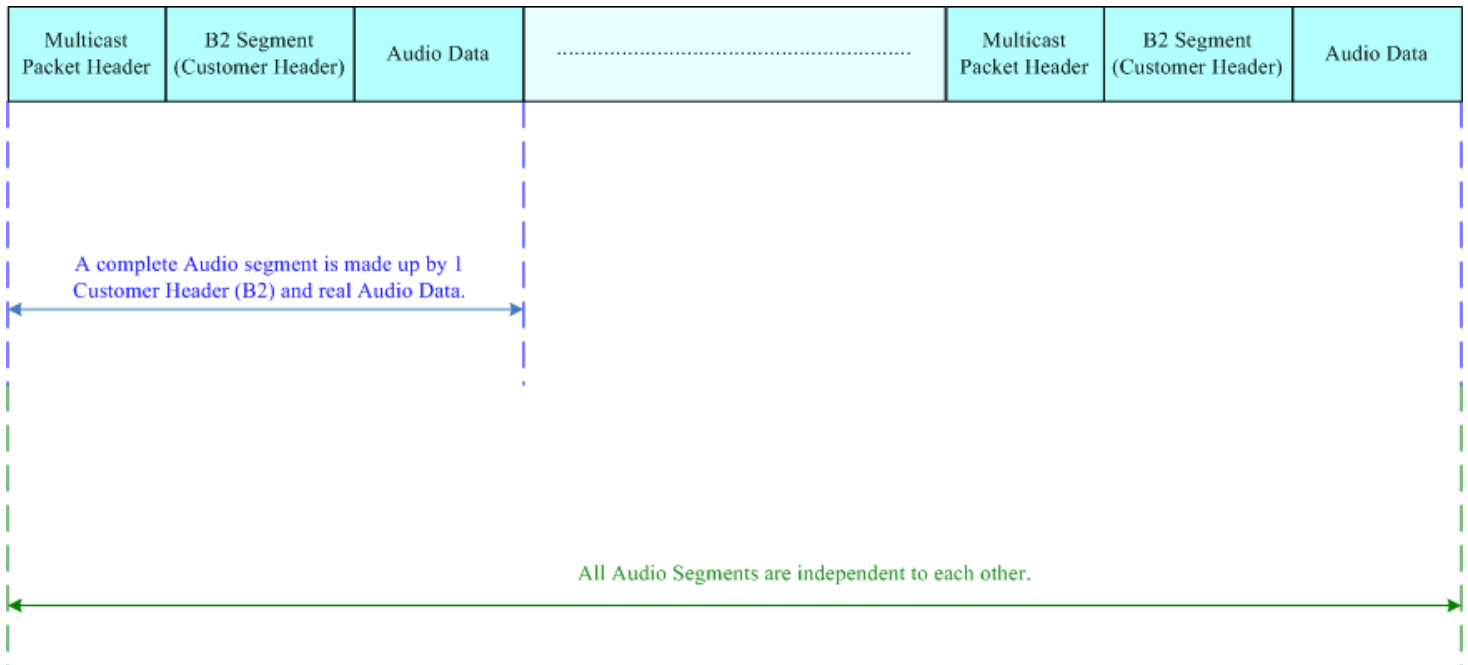

Note. Video server will send Audio & Video data in random order.

```
typedef struct tagMCPacketHead
{
    unsigned char StreamId;
    unsigned char StreamSubId;
    unsigned char KeyPacket;
    unsigned char TotalPacket;
    unsigned char PacketNum;
    unsigned char FrameChecksum;
    unsigned char Resolution;
    unsigned char Fps;
    unsigned int FrameNum;
    unsigned int FrameLen;
} MCPacketHead;
```

RTP Packet Format

RTP over UDP :

Video :

(a) MPEG4 I Frame

RTP Header	Bi tstream Data					I -Frame Data				VI DEO_B2_FRAME	
	B0	data	B5	data	Sequence	B3	B3 Data	B6 Header	Frame data	B2_HEADER	
	0x000001B0	1 Byte	0x000001B5	1 Byte	0x00000100	0x000001B3	3 bytes	0x000001B6	N Byte	0x000001B2	User Data

(b) MPEG4 P Frame

RTP Header	P-Frame Data		VI DEO_B2_FRAME	
	B6 Header	Frame data	B2_HEADER	
	0x000001B6	N Byte	0x000001B2	User Data

Audio:

(c) Audio Frame

RTP Header	AUDI O_B2		Audi o Data
	B2_HEADER		(PCM data)
	0x000001B2	User Data	N Byte

RTP over Multicast :

Video :

(a) I Frame

RTP Header	Bitstream Data					I -Frame Data				VIDEO_B2_FRAME	
	B0	data	B5	data	Sequence	B3	B3 Data	B6 Header	Frame data	B2_HEADER	
	0x000001B0	1 Byte	0x000001B5	1 Byte	0x00000100	0x000001B3	3 bytes	0x000001B6	N Byte	0x000001B2	User Data

(b) P Frame

RTP Header	P-Frame Data		VIDEO_B2_FRAME	
	B6 Header	Frame data	B2_HEADER	
	0x000001B6	N Byte	0x000001B2	User Data

Audio:

(c) Audio Frame

RTP Header	AUDIO_B2		Audio Data
	B2_HEADER		(PCM data)
	0x000001B2	User Data	N Byte

Note that RTP/RTSP protocol is implemented in TCP v2.0 compliant devices.
The details of RTP/RTSP protocol can be in RFC 2326 (RTSP) and RFC 3550 (RTP).

RTP Interface

SDP description :

```
v=0
o=- 1072886400760000 1 IN IP4 192.168.1.100
s=LIVE.COM Session streamed by a G07007SB WI Schip
i=LIVE.COM Streaming Media v
t=0 0
a=tool:LIVE.COM Streaming Media v2004.12.28
a=type:broadcast
a=control:*
a=range:npt=0-
a=x-qt-text-nam:LIVE.COM Session streamed by a G07007SB WI Schip
a=x-qt-text-inf:LIVE.COM Streaming Media v
m=video 0 RTP/AVP 96
c=IN IP4 0.0.0.0
a=rtpmap:96 MP4V-ES/90000
a=fmtp:96
profile-level-id=245; config=000001B0F5000001B509000001000000012000C888
BAA760FA62D087828307
a=control:track1
m=audio 0 RTP/AVP 111
c=IN IP4 0.0.0.0
a=rtpmap:111 L16/8000
a=control:track2
```

RTSP request command :

[OPTIONS request]

```
rtsp://192.168.1.254:7070/ RTSP/1.0
CSeq: 1
User-Agent: VLC Media Player (LIVE.COM Streaming Media v2004.11.11)
```

[OPTIONS response]

```
sending response: RTSP/1.0 200 OK
CSeq: 1
Public: OPTIONS, DESCRIBE, SETUP, TEARDOWN, PLAY, PAUSE
```

[DESCRIBE request]

```
DESCRIBE rtsp://192.168.1.100:7070 RTSP/1.0
CSeq: 1
Accept: application/sdp
Bandwidth: 384000
Accept-Language: en-GB
User-Agent: QuickTime/7.0.3 (qtver=7.0.3; os=Windows NT 5.1Service Pack 1)
```

[DESCRIBE response]

```
sending response: RTSP/1.0 200 OK
CSeq: 1
Date: Fri, Dec 02 2005 06:38:53 GMT
Content-Base: rtsp://192.168.1.100:7070/
Content-Type: application/sdp
Content-Length: 608

v=0
o=- 1133505497174429 1 IN IP4 192.168.1.100
s=LIVE.COM Session streamed by a G07007SB WISchip
i=LIVE.COM Streaming Media v
t=0 0
a=tool:LIVE.COM Streaming Media v2004.12.28
a=type:broadcast
a=control:*
```

```
a=range:npt=0-  
a=x-qt-text-nam: LIVE.COM Session streamed by a G07007SB WISchip  
a=x-qt-text-inf: LIVE.COM Streaming Media v  
m=video 0 RTP/AVP 96  
c=IN IP4 0.0.0.0  
a=rtpmap: 96 MP4V-ES/90000  
a=fmtp: 96  
profile-level-id=245; config=000001B0F5000001B509000001000000012000C888BAA760FA  
62D087828307  
a=control: track1  
m=audio 0 RTP/AVP 111  
c=IN IP4 0.0.0.0  
a=rtpmap: 111 L16/8000  
a=control: track2
```

[SETUP request]

```
SETUP rtsp://192.168.1.100:7070//track1 RTSP/1.0  
CSeq: 2  
Transport: RTP/AVP;unicast;client_port=6970-6971  
x-retransmit: our-retransmit  
x-dynamic-rate: 1  
x-transport-options: late-tolerance=2.900000  
User-Agent: QuickTime/7.0.3 (qtver=7.0.3;os=Windows NT 5.1Service Pack 1)  
Accept-Language: en-GB
```

[SETUP response]

```
sending response: RTSP/1.0 200 OK  
CSeq: 2  
Date: Fri, Dec 02 2005 06:38:54 GMT  
Transport:  
RTP/AVP;unicast;destination=192.168.1.3;client_port=6970-6971;server_port=1024-1025  
Session: 1
```

[SETUP request]

```
rtsp://192.168.1.100:7070//track2 RTSP/1.0  
CSeq: 3  
Transport: RTP/AVP;unicast;client_port=6972-6973  
x-retransmit: our-retransmit  
x-dynamic-rate: 1
```

x-transport-options: late-tolerance=2.900000
Session: 1
User-Agent: QuickTime/7.0.3 (qtver=7.0.3; os=Windows NT 5.1Service Pack 1)
Accept-Language: en-GB

[SETUP response]

sending response: RTSP/1.0 200 OK
CSeq: 3
Date: Fri, Dec 02 2005 06:38:54 GMT
Transport:
RTP/AVP;unicast;destination=192.168.1.3;client_port=6972-6973;server_port=1026-1027
Session: 1

[PLAY request]

rtsp://192.168.1.100:7070 RTSP/1.0
CSeq: 4
Range: npt=0.000000-
x-prebuffer: maxtime=2.000000
Session: 1
User-Agent: QuickTime/7.0.3 (qtver=7.0.3; os=Windows NT 5.1Service Pack 1)

[PLAY response]

sending response: RTSP/1.0 200 OK
CSeq: 4
Date: Fri, Dec 02 2005 06:38:54 GMT
Range: npt=0.000-
Session: 1
RTP-Info:
url=rtsp://192.168.1.100:7070//track1;seq=64955,url=rtsp://192.168.1.100:7070//track2;seq=39531

[PAUSE request]

PAUSE rtsp://192.168.1.100:7070 RTSP/1.0
CSeq: 5
Session: 1

```
User-Agent: QuickTime/7.0.3 (qtver=7.0.3; os=Windows NT 5.1Service Pack 1)
```

[PAUSE response]

```
sending response: RTSP/1.0 200 OK  
CSeq: 5  
Date: Fri, Dec 02 2005 06:39:36 GMT  
Session: 1
```

[TEARDOWN request]

```
rtsp://192.168.1.100:7070 RTSP/1.0  
CSeq: 6  
Session: 1  
User-Agent: QuickTime/7.0.3 (qtver=7.0.3; os=Windows NT 5.1Service Pack 1)
```


[TEARDOWN response]

```
sending response: RTSP/1.0 200 OK  
CSeq: 6  
Date: Fri, Dec 02 2005 06:39:36 GMT
```


Play an unicast RTP video stream (TRACK 1), while play an unicast audio stream (TRACK 2)

RTP Protocol Flow


Establishment

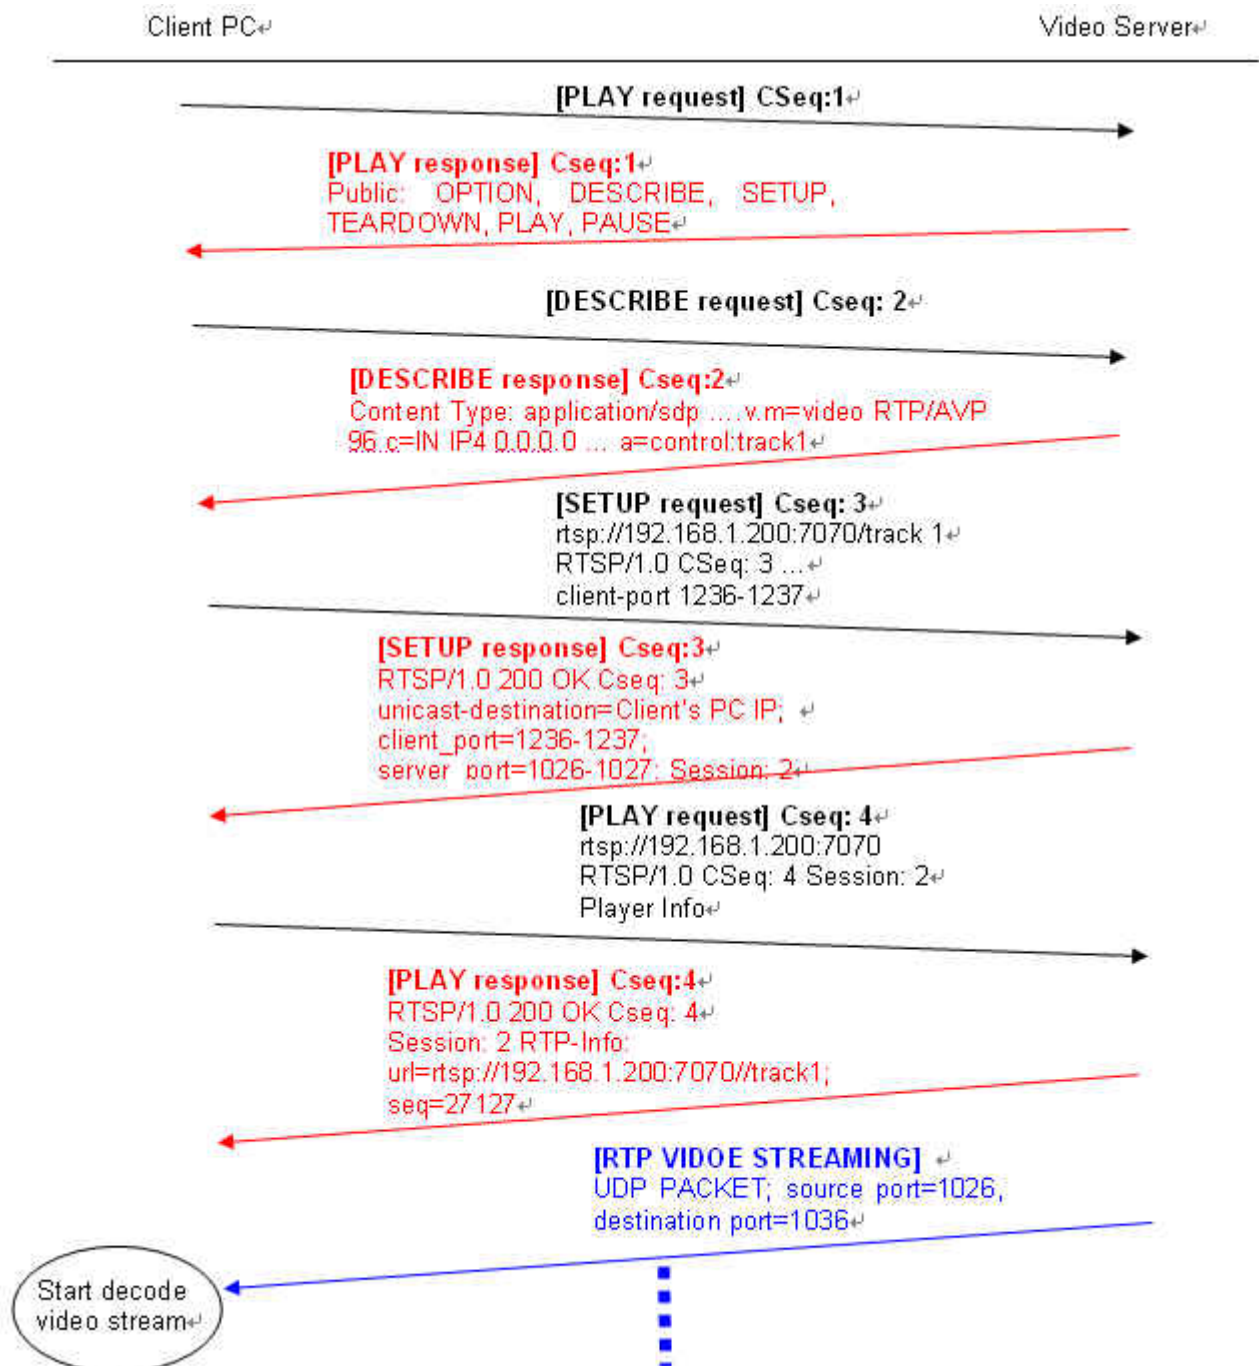


TEARDOWN An Unicast RTP VIDEO STREAM

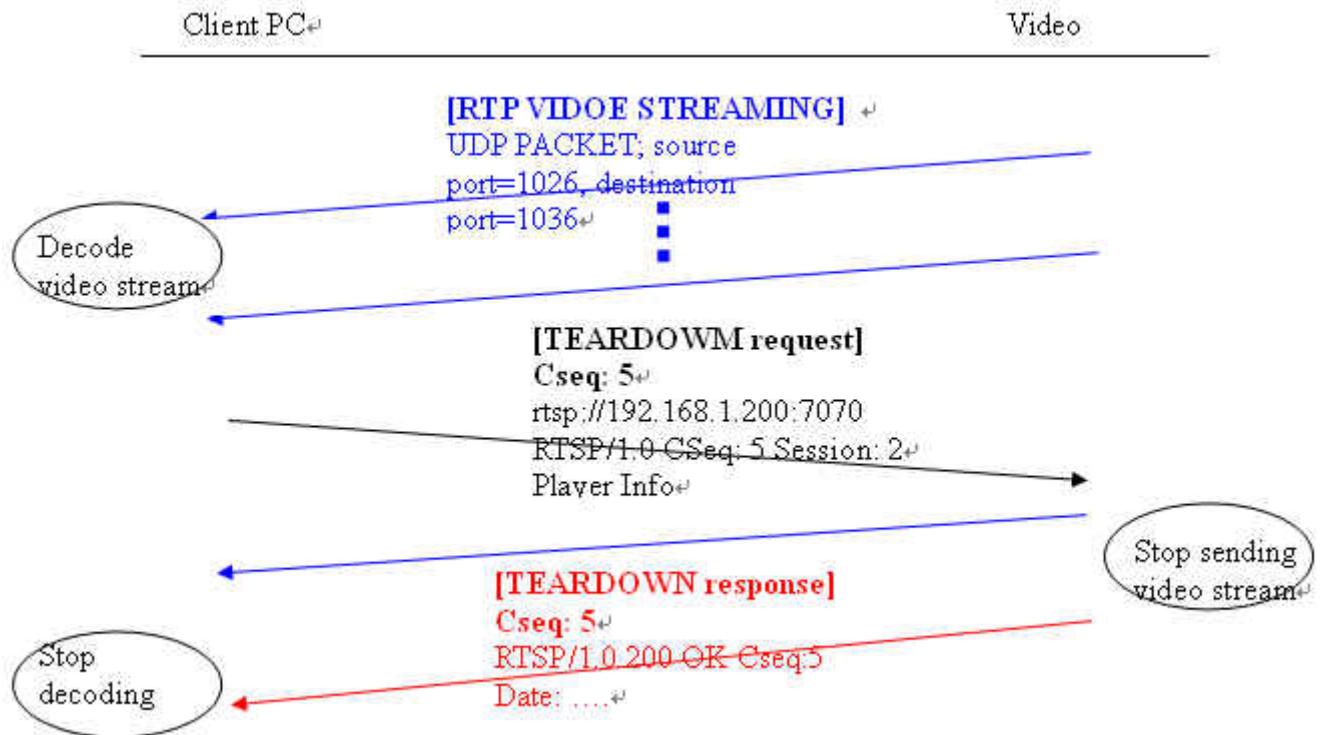

PLAY A Multicast RTP VIDEO STREAM (TRACK 1):

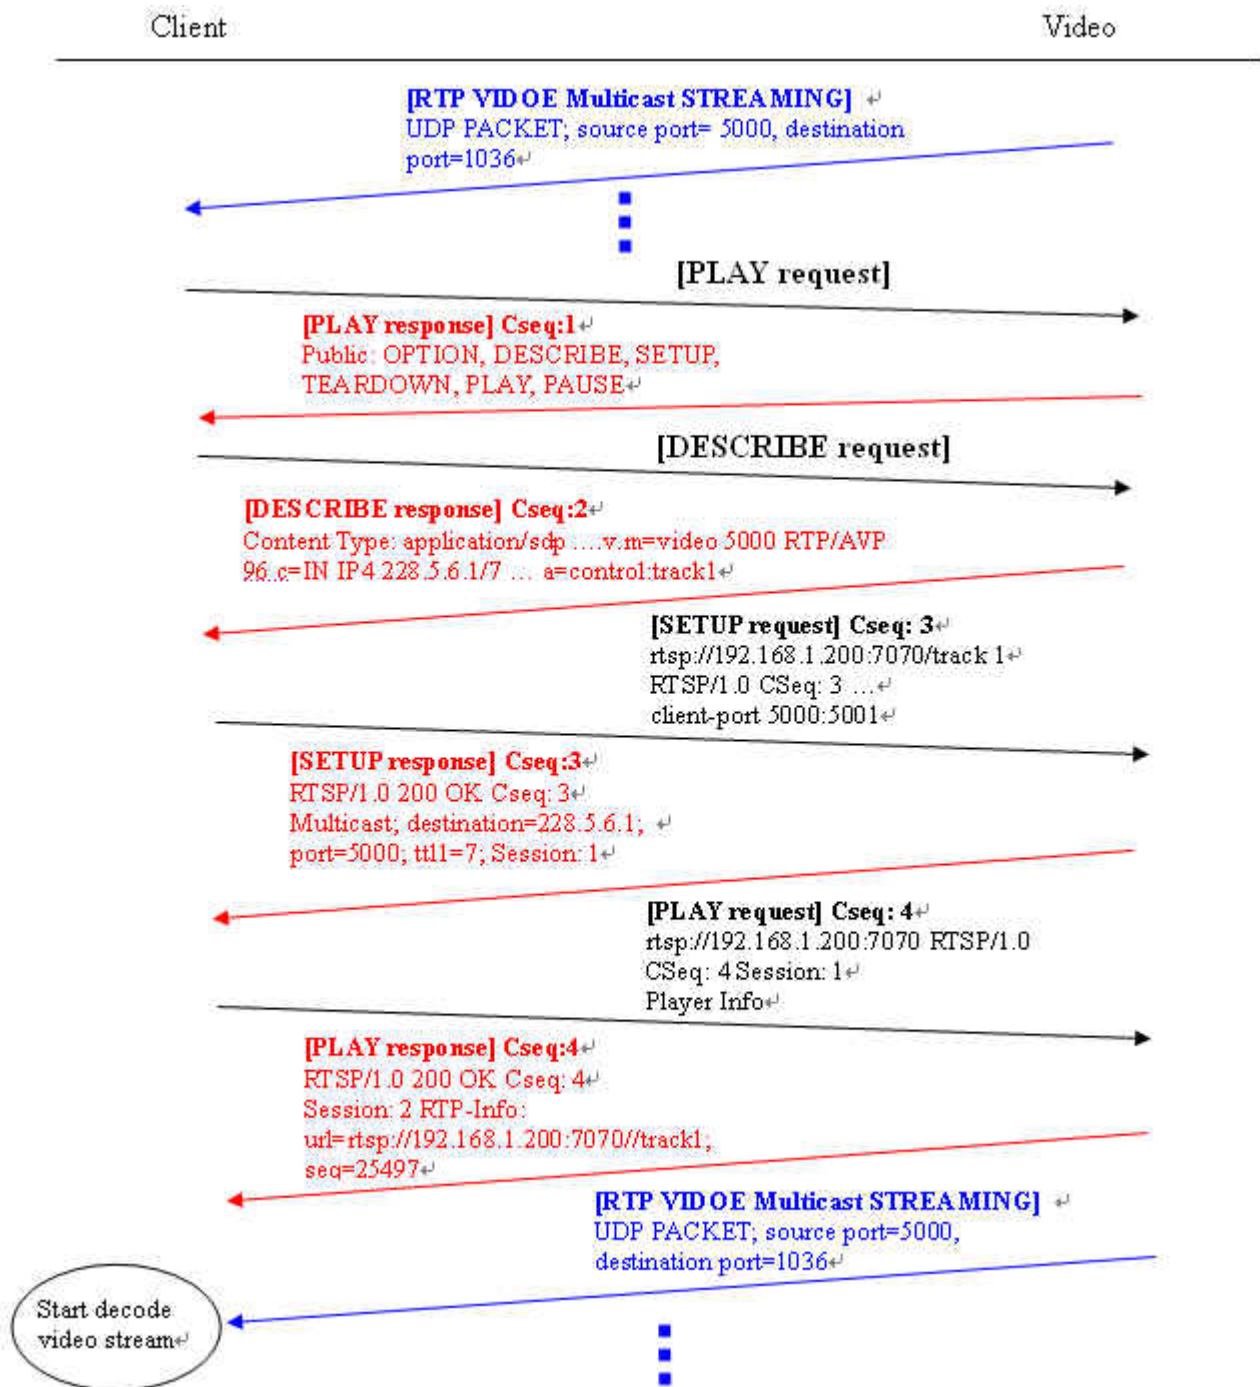

TEARDOWN A Multicast RTP VIDEO STREAM

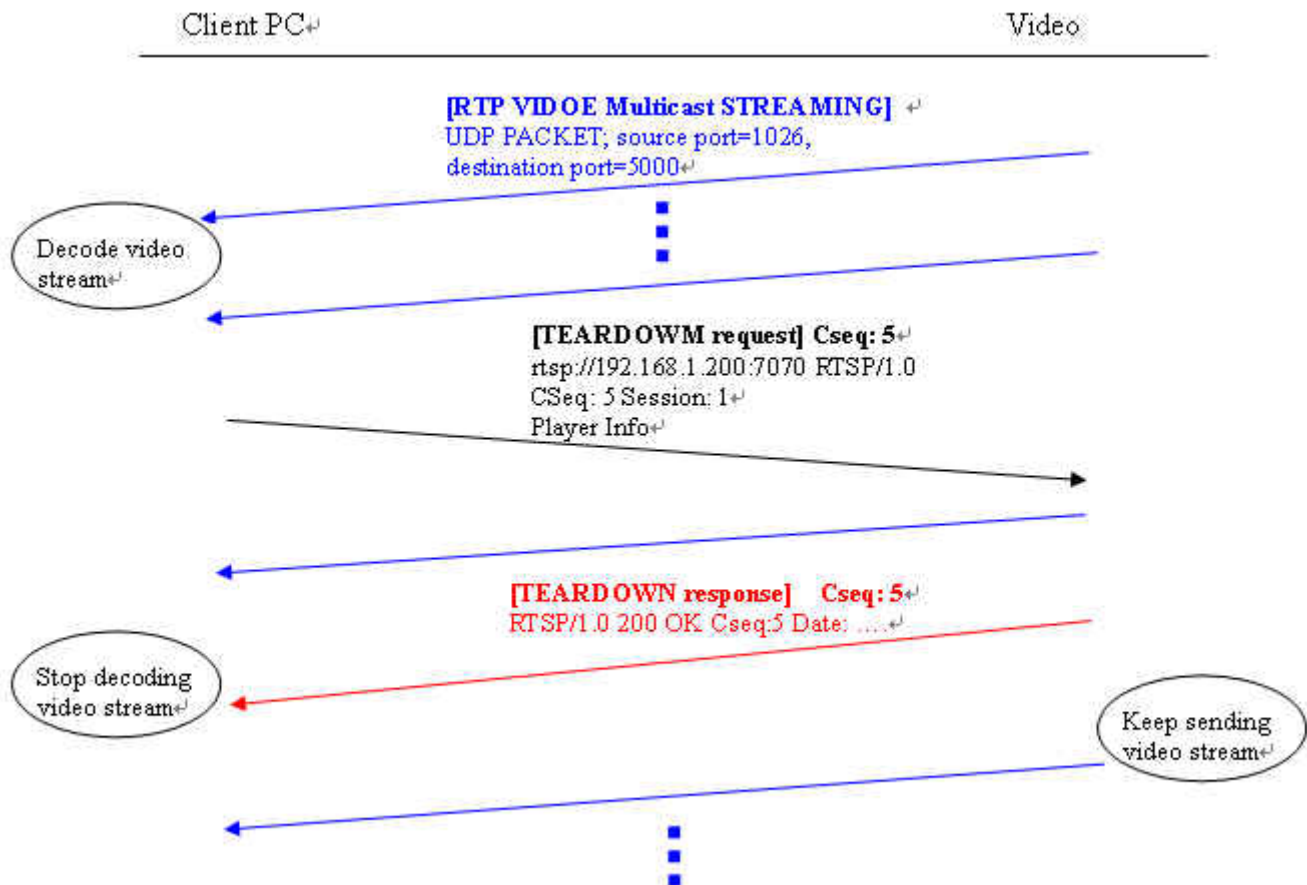

12

Migration Plan from SDK-2000 to SDK-10000

SDK-10000 New Features

SDK-10000 v1.0 series contains new design architecture with following features:

- Unified SDK for IP devices (IP Camera, Video Server, IP Speed Dome, and Quad Video Server), Capture Cards, Decoder Cards, Streaming Engine and File Playback. One programming can fit all above devices.
- Superset of SDK-2000, SDK-4000 and SDK-5000
- Scalable architecture: new adaptor can be added without changing codes
- Better performance: SDK-10000 has better performance and memory management over previous SDK. It also provide shorter video latency than previous SDK
- New adaptors: Direct Draw and FAVI (record to AVI file) adaptors provided
- Multi-channel Support: Supports multiple channel devices, 2/4/8-channel video server, 4-channel capture card

SDK-2000 vs SDK-10000 Function Calls

SDK – 2000	SDK – 10000	Remark
netGetTCPMode	KGetTCPTTypeByHTTP	
netOpenInterface	KOpenInterface	
netRegisterServer	KSetMediaConfig KConnect	
netInitStream	KSetRenderInfo	
netStartStream	KStartStreaming KPlay	
netSetStatusCallback	KSetVideoLossCallback KSetVideoRecoveryCallback KSetNetworkLossCallback	
netSetMDCallback	KSetMotionDetectionCallback	
netSetDIDefault	KSetDIDefaultValue	
netSetDIOCallback	KSetDICallback	
netSetTimeCodeCallback	KSetTimeCodeCallback	
netSetAfterFlushCallback		Not support in SDK-10000
netSetAfterRenderCallback	KSetAfterRenderCallback	
netSetImageCallback	KSetImageCallback	
netSetRS232Callback	KSetRS232DataCallback	
netSetServerSerialDataCallback	KSetRS232DataCallback	
netUnRegisterServer	KDisconnect	
netGetServerConfig	KGetVideoConfig	
netSetServerConfig	KSetVideoConfig	
netStopStream	KStopStreaming	
netSetAutoFrameRate		Not support in SDK-10000
netSetAlarmPreRecordingTime	KSetPrerecordTime	

ime		
netStartAlarmRecord	KStartRecord	
netStopAlarmRecord	KStopRecord	
netStopAlarmRecord2	KStopRecord	
netStartRecord	KStartRecord	
netStopRecord	KStopRecord	
netStopRecord2	KStopRecord	
netSend2ServerSerialPort	KSendRS232Command	
netSendKeyPadCommand	KSendPTZCommand	
netSendDI0	KSendD0	
netSetMotionRange	KSetMotionInfo	
netSetMotionSensitive	KGetMotionInfo KSetMotionInfo	
netGetLastError	KGetLastError	
netGetFrameReceived	KGetTotalReceivedVideoFrameCount	
netGetDataReceived	KGetTotalReceivedSize	
netGetDispWindowPos		Not support in SDK-10000
netSetDispWindowPos	KSetRenderInfo	
netSetRS232	KSendRS232Setting	
netSetServerSerialPort	KSendRS232Setting	
netSearchServer		Sample/SearchSample
netGetDioStatus	KGetDIDefaultValueByHTTP	
netGetMotionSetting	KGetMotionInfo	
netSetMpeg4RawCallback	KSetRawDataCallback	
netGetOnlineUser	KGetOnlineUser	
netGetSDKVersion	KGetVersion	
netGetServerVersion	KGetServerVersion	
netRegisterServerEx	KSetMediaConfig KConnect	
netSetCommunicationPort		Not support in SDK-10000

netDecodeI	KSetDecodeI FrameOnly	
netSendURL	KSendURLCommand	
netSendCMD		Not support in SDK-10000
netCl oseI nterface	KCl oseI nterface	
netGetCameraName	KGetCameraName	
netSaveReBoot	KSaveReboot	
netGetControl Token		Not support in SDK-10000
netGetAudi oToken	KGetAudi oToken	
netFreeControl Token		Not support in SDK-10000
netGi veOffSound		Not support in SDK-10000
netCl oseSound	KStopAudi oTransfer	
netFreeAudi oToken	KFreeAudi oToken	
netI sMute		Not support in SDK-10000
netSetVol ume	KSetVol ume	
netGetVol ume	KGetVol ume	
netSetPrevi ewBuffer		Not support in SDK-10000
netSendAudi o	KStartAudi oTransfer	
netSetMpeg4RawCal l Back2	KSetRawDataCal l back	
netSetAudi oRawCal l Back	KSetRawDataCal l back	
netSetStreamRawCal l Back	KSetRawDataCal l back	
netSend2StreamEngi ne	KSendCommandToStreami ngEngi ne	
netMute	KSetMute	
netSetSocketSi ze		Not support in SDK-10000
netRegi sterServerControl Onl y	KSetMedi aConfi g KConnect	Set Contact type to CONTACT_TYPE_CONTROL_ON LY
netStartWri tel nfo		Not support in SDK-10000
netStopWri tel nfo		Not support in SDK-10000
netGetDevi ceType	KGetDevi ceTypeByHTTP	
netSetHTTPPort		Not support in SDK-10000

netSetResol uti onChangeCa ll Back	KSetResol uti onChangeCal l bac k	
netSetChannel Number		Not support in SDK-10000
netSetConnectTi meOut		Not support in SDK-10000

Application Migration Guide

This section describes the steps for customers to port their application from SDK-2000 to SDK-10000.

We provide 2 different step-by-step guides for following applications:

- Application that uses MPEG-4 raw data only
- Application that uses most function calls

Application that uses MPEG-4 raw data only

Steps to migrate from SDK-2000 to SDK-10000:

1. Re-compile the source codes with SDK-10000
2. Use **KGetTCPTTypeByHTTP()** to detect if the device is compatible to TCP 1.0 format or TCP 2.0 (supports audio) format
3. Use **KSetRawDataCallback()** to receive both Raw-Video and Raw-Audio data.
4. Use **KSetImageCallback()** to get RGB buffer at the same time
5. Call **KSendPTZCommand()** to send PTZ commands.
6. Note that in SDK-10000, every I-Frame contains sequence header in the frame
7. Refer to Audio API for 1-way or 2-way audio functions
8. Refer to MPEG-4 data structure section for detailed MPEG-4 audio + video format

Application that uses most function calls

Steps to migrate from SDK-2000 to SDK-10000:

1. Re-compile the source codes with SDK-10000
2. Use **KGetTCPTTypeByHTTP()** to detect if the device is compatible to TCP 1.0 format or TCP 2.0 (supports audio) format
3. Use **KSetDecodeIFrameOnly()** function to decode I-Frame only to save CPU utilization; this will only affect on the decoding part, recording can still record with specified frame rate
4. Call **KSendPTZCommand()** to send PTZ commands.
5. Refer to Audio API for 1-way or 2-way audio functions.



APPENDIX A

How to custom a PTZ file

4.3.2008

Here we discuss how to custom a PTZ file for a camera device, and only those “important” commands are listed bellow. If you need some “minor” commands which are not described here, Please refer to the PTZ protocol files in SDK folder.

1. Attributes:

Example:

[ATTRIBUTES]

ADDRIDSTART; 0x01

ADDRIDPOS; 1

CHECKSUM; \$B6=\$B1^\$B2^\$B3^\$B4^\$B5

PANEL; PANTILT,MOVE,ZOOM,FOCUS,IRIS,BLC,PRESET

Description:

The “ADDRIDSTART” indicate the address ID in BYTE.

The “ADDRIDPOS” is address ID starting position. “1” is the first byte in PTZ command

The “CHECKSUM” is “HOW to calculate the checksum” and “WHERE to place the checksum”.

\$B6 indicates 6th position in PTZ command.

\$C5 indicates a constant ‘5’.

The defined operator is ‘+’ ‘-’ ‘*’ ‘/’ ‘^’ ‘|’ ‘&’.

If the “\$D” is found in checksum string, that means no checksum should be calculated.

The “PANEL” indicates which panel you need.

2. PANTILT

Example:

[PANTILT]

PANLEFT; 1; 0;0x01,0x00,0x18,0x01,0x01,0x18
PANLEFT; 2; 0;0x01,0x00,0x18,0x01,0x02,0x1C
PANLEFT; 3; 0;0x01,0x00,0x18,0x01,0x03,0x10
PANLEFT; 4; 0;0x01,0x00,0x18,0x01,0x05,0x14
PANLEFT; 5; 0;0x01,0x00,0x18,0x01,0x07,0x17
PANLEFT; 0; 0;0x01,0x00,0x13,0x00,0x00,0x12

PANRIGHT; 1; 0;0x01,0x00,0x18,0x00,0x01,0x19
PANRIGHT; 2; 0;0x01,0x00,0x18,0x00,0x02,0x1D
PANRIGHT; 3; 0;0x01,0x00,0x18,0x00,0x03,0x11
PANRIGHT; 4; 0;0x01,0x00,0x18,0x00,0x05,0x15
PANRIGHT; 5; 0;0x01,0x00,0x18,0x00,0x07,0x16
PANRIGHT; 0; 0;0x01,0x00,0x13,0x00,0x00,0x12

TILTUP; 1; 0;0x01,0x00,0x18,0x02,0x01,0x1B
TILTUP; 2; 0;0x01,0x00,0x18,0x02,0x02,0x1F
TILTUP; 3; 0;0x01,0x00,0x18,0x02,0x03,0x13
TILTUP; 4; 0;0x01,0x00,0x18,0x02,0x05,0x17
TILTUP; 5; 0;0x01,0x00,0x18,0x02,0x07,0x14
TILTUP; 0; 0;0x01,0x00,0x14,0x00,0x00,0x15

TILTDOWN; 1; 0;0x01,0x00,0x18,0x03,0x01,0x1A
TILTDOWN; 2; 0;0x01,0x00,0x18,0x03,0x02,0x1E
TILTDOWN; 3; 0;0x01,0x00,0x18,0x03,0x03,0x12
TILTDOWN; 4; 0;0x01,0x00,0x18,0x03,0x05,0x16
TILTDOWN; 5; 0;0x01,0x00,0x18,0x03,0x07,0x15
TILTDOWN; 0; 0;0x01,0x00,0x14,0x00,0x00,0x15

PANTILTSTOP; 0; 0;0x81,0x01,0x06,0x01,0x00,0x00,0x03,0x03,0xFF

Description:

The “PANLEFT”, “PANRIGHT”, “TILTUP”, and “TILTDOWN” commands should be described here. The first parameter is the “speed”, the second parameter is reserved (0). If there is no “PANTILTSTOP” command, speed 0 must be there instead.

3. ZOOM

Example:

[ZOOM]

ZOOMIN; 1; 0;0x01,0x00,0x24,0x01,0x00,0x24

#ZOOMIN; 0; 0;

ZOOMOUT; 1; 0;0x01,0x00,0x24,0x00,0x00,0x25

#ZOOMOUT; 0; 0;

ZOOMSTOP; 0; 0;0x01,0x00,0x24,0x04,0x00,0x21

Description:

The “ZOOMIN”, “ZOOMOUT”, and “ZOOMSTOP” commands should be described here. The first parameter is 1 for “ZOOMIN” and “ZOOMOUT”, 0 for “ZOOMSTOP”.

BTW: The ‘#’ mark the line disabled.

4. FOCUS

Example:

[FOCUS]

FOCUSIN; 1; 0;0x81,0x01,0x04,0x08,0x03,0xFF

FOCUSOUT; 1; 0;0x81,0x01,0x04,0x08,0x02,0xFF

FOCUSSTOP; 0; 0;0x81,0x01,0x04,0x08,0x00,0xFF

Description:

The “FOCUSIN”, “FOCUSOUT”, and “FOCUSSTOP” commands should be described here. The first parameter is 1 for “FOCUSIN” and “FOCUSOUT”, 0 for “FOCUSSTOP”.

5. IRIS

Example:

[IRIS]

IRISOPEN;1;0;0x81,0x01,0x04,0x0B,0x02,0xFF

IRISSTOP;0;0;0x81,0x01,0x04,0x0B,0x00,0xFF

IRISCLOSE;1;0;0x81,0x01,0x04,0x0B,0x03,0xFF

Description:

The “IRISOPEN”, “IRISCLOSE”, and “IRISSTOP” commands should be described here. The first parameter is 1 for “IRISOPEN” and “IRISCLOSE”, 0 for “IRISSTOP”.

6. PRESET

Example:

[PRESET]

PRESETGOTO;1;0;0x81,0x01,0x04,0x3F,0x02,0x00,0xFF

PRESETGOTO;2;0;0x81,0x01,0x04,0x3F,0x02,0x01,0xFF

PRESETGOTO;3;0;0x81,0x01,0x04,0x3F,0x02,0x02,0xFF

PRESETGOTO;4;0;0x81,0x01,0x04,0x3F,0x02,0x03,0xFF

PRESETGOTO;5;0;0x81,0x01,0x04,0x3F,0x02,0x04,0xFF

PRESETGOTO;6;0;0x81,0x01,0x04,0x3F,0x02,0x05,0xFF

PRESETSET;1;0;0x81,0x01,0x04,0x3F,0x01,0x00,0xFF

PRESETSET;2;0;0x81,0x01,0x04,0x3F,0x01,0x01,0xFF

PRESETSET;3;0;0x81,0x01,0x04,0x3F,0x01,0x02,0xFF

PRESETSET;4;0;0x81,0x01,0x04,0x3F,0x01,0x03,0xFF

PRESETSET;5;0;0x81,0x01,0x04,0x3F,0x01,0x04,0xFF

PRESETSET;6;0;0x81,0x01,0x04,0x3F,0x01,0x05,0xFF

PRESETCLEAR;1;0;0x81,0x01,0x04,0x3F,0x00,0x00,0xFF

PRESETCLEAR;2;0;0x81,0x01,0x04,0x3F,0x00,0x01,0xFF

PRESETCLEAR;3;0;0x81,0x01,0x04,0x3F,0x00,0x02,0xFF

PRESETCLEAR;4;0;0x81,0x01,0x04,0x3F,0x00,0x03,0xFF

PRESETCLEAR;5;0;0x81,0x01,0x04,0x3F,0x00,0x04,0xFF

PRESETCLEAR;6;0;0x81,0x01,0x04,0x3F,0x00,0x05,0xFF

PRESETTOUR;1;0;0x01,0x00,0x11,0x01,0x00,0x11

Description:

The “PRESETCLEAR”, “PRESETGOTO” and “PRESETSET” define preset positions. The

“PRESETSET” is adding a preset position. The “PRESETCLEAR” is removing a preset position. The “PRESETGOTO” make camera moving to one preset position. The first parameter is the ID of a preset position, second parameter is reserved (0). If there is a command to make camera touring every preset position, describe it behind “PRESETTOUR”.

7. OSD

Example:

[OSD]

OSDON; 0; 0;0x01,0x00,0x28,0x04,0x00,0x2D

#OSDOFF; 0; 0;0x01,0x00,0x28,0xFF,0x00,0xD6

OSDUP; 0; 0;0x01,0x00,0x28,0x00,0x00,0x29

OSDDOWN; 0; 0;0x01,0x00,0x28,0x01,0x00,0x28

OSDLEFT; 0; 0;0x01,0x00,0x28,0x02,0x00,0x2B

OSDRIGHT; 0; 0;0x01,0x00,0x28,0x03,0x00,0x2A

OSDENTER; 0; 0;0x01,0x00,0x28,0x04,0x00,0x2D

OSDLEAVE; 0; 0;0x01,0x00,0x28,0xFF,0x00,0xD6

#OSDSTOP; 0; 0;0xA0,0x00,0x00,0x00,0x00,0x00,0xAF,0x00

Description:

The [OSD] section defined how to operate OSD functions. There are 9 definitions for OSD actions.



APPENDIX B

Authentication Sample in RTP/RTSP

Notify: 1.The EOL of SDP header is \r\n

2.Every EOL of content is possible \r\n or \n. (Total length match with content-length)

#####

1. Digest Algorithm Authentication in RTSP

RTP Over UDP

#####

OPTIONS rtsp://Admin:123456@172.16.3.62:7070 RTSP/1.0

CSeq: 1

User-Agent: VLC media player (LIVE555 Streaming Media v2006.03.16)

RTSP/1.0 200 OK

CSeq: 1

Date: Thu, Jan 01 2004 00:02:11 GMT

Public: OPTIONS, DESCRIBE, SETUP, TEARDOWN, PLAY

DESCRIBE rtsp://Admin:123456@172.16.3.62:7070 RTSP/1.0

CSeq: 2

Accept: application/sdp

User-Agent: VLC media player (LIVE555 Streaming Media v2006.03.16)

RTSP/1.0 401 Unauthorized

CSeq: 2

Date: Thu, Jan 01 2004 00:02:11 GMT

WWW-Authenticate: Digest realm="Session streamed by RTP/RTSP server",
nonce="c25d8ee72e9e3ff654d9de6bb9f3efd5"

DESCRIBE rtsp://Admin:123456@172.16.3.62:7070 RTSP/1.0
CSeq: 3
Accept: application/sdp
Authorization: Digest username="Admin", realm="Session streamed by RTP/RTSP server",
nonce="c25d8ee72e9e3ff654d9de6bb9f3efd5",
uri="rtsp://Admin:123456@172.16.3.62:7070",
response="b0bf040dce84753d2e1e11c505b11a88"
User-Agent: VLC media player (LIVE555 Streaming Media v2006.03.16)

RTSP/1.0 200 OK
CSeq: 3
Date: Thu, Jan 01 2004 00:02:11 GMT
Content-Base: rtsp://Admin:123456@172.16.3.62:7070/
Content-Type: application/sdp
Content-Length: 563

v=0
o=- 107291533100310000 1 IN IP4 172.16.3.62
s=Session streamed by RTP/RTSP server
i=ACTi.COM Streaming Media v
t=0 0
a=tool: ACTi.COM Streaming Media v2006.10.22
a=type: broadcast
a=control: *
a=range: ntp=0-
a=x-qt-text-name: Session streamed by RTP/RTSP server
a=x-qt-text-inf: ACTi.COM Streaming Media v
m=video 0 RTP/AVP 96
c=IN IP4 0.0.0.0
a=rtpmap: 96 MP4V-ES/90000
a=fmtp: 96 profile-level-id=245; config=000001B0F5000001B50900000100000001200006
a=control: track1
m=audio 0 RTP/AVP 111

c=IN IP4 0.0.0.0

a=rtpmap: 111 L16/8000

a=control: track2

SETUP rtsp://Admin: 123456@172.16.3.62: 7070/track1 RTSP/1.0

CSeq: 4

Transport: RTP/AVP;unicast;client_port=1808-1809

Authorization: Digest username="Admin", realm="Session streamed by RTP/RTSP server",
nonce="c25d8ee72e9e3ff654d9de6bb9f3efd5",

uri="rtsp://Admin: 123456@172.16.3.62: 7070",

response="8b96c1f004f68f34e27003ff628eee58"

User-Agent: VLC media player (LIVE555 Streaming Media v2006.03.16)

RTSP/1.0 200 OK

CSeq: 4

Date: Thu, Jan 01 2004 00:02:11 GMT

Transport:

RTP/AVP;unicast;destination=172.16.3.45;client_port=1808-1809;server_port=1000-100

1

Session: 1

SETUP rtsp://Admin: 123456@172.16.3.62: 7070/track2 RTSP/1.0

CSeq: 5

Transport: RTP/AVP;unicast;client_port=1810-1811

Session: 1

Authorization: Digest username="Admin", realm="Session streamed by RTP/RTSP server",
nonce="c25d8ee72e9e3ff654d9de6bb9f3efd5",

uri="rtsp://Admin: 123456@172.16.3.62: 7070",

response="8b96c1f004f68f34e27003ff628eee58"

User-Agent: VLC media player (LIVE555 Streaming Media v2006.03.16)

RTSP/1.0 200 OK

CSeq: 5

Date: Thu, Jan 01 2004 00:02:11 GMT

Transport:

RTP/AVP; uni cast; desti nati on=172. 16. 3. 45; cl i ent_port=1810-1811; server_port=1002-1003

Sessi on: 1

PLAY rtsp: //Admi n: 123456@172. 16. 3. 62: 7070 RTSP/1. 0

CSeq: 6

Sessi on: 1

Range: npt=0. 000-

Authori zati on: Di gest username="Admi n", real m="Sessi on streamed by RTP/RTSP server",
nonce="c25d8ee72e9e3ff654d9de6bb9f3efd5",
uri ="rtsp: //Admi n: 123456@172. 16. 3. 62: 7070",
response="d2afe212004430fb0ef30db737423444"

User-Agent: VLC medi a pl ayer (LIVE555 Streami ng Medi a v2006. 03. 16)

RTSP/1. 0 200 OK

CSeq: 6

Date: Thu, Jan 01 2004 00:02:11 GMT

Range: npt=0. 000-

Sessi on: 1

RTP-Info:

url =rtsp: //172. 16. 3. 45: 7070//track1; seq=7793, url =rtsp: //172. 16. 3. 45: 7070//track2; s
eq=5386

TEARDOWN rtsp: //Admi n: 123456@172. 16. 3. 62: 7070 RTSP/1. 0

CSeq: 7

Sessi on: 1

Authori zati on: Di gest username="Admi n", real m="Sessi on streamed by RTP/RTSP server",
nonce="c25d8ee72e9e3ff654d9de6bb9f3efd5",
uri ="rtsp: //Admi n: 123456@172. 16. 3. 62: 7070",
response="018ee0e5539088e0218aee0cb1556283"

User-Agent: VLC medi a pl ayer (LIVE555 Streami ng Medi a v2006. 03. 16)

RTSP/1.0 200 OK

CSeq: 7

Date: Thu, Jan 01 2004 00:02:16 GMT

#####

1. Digest Algorithm Authentication in RTSP

RTP Over Multicast

#####

OPTIONS rtsp://Admin:123456@172.16.3.14:7070 RTSP/1.0

CSeq: 1

User-Agent: VLC media player (LIVE555 Streaming Media v2006.03.16)

RTSP/1.0 200 OK

CSeq: 1

Date: Thu, Jan 01 2004 00:37:39 GMT

Public: OPTIONS, DESCRIBE, SETUP, TEARDOWN, PLAY

DESCRIBE rtsp://Admin:123456@172.16.3.14:7070 RTSP/1.0

CSeq: 2

Accept: application/sdp

User-Agent: VLC media player (LIVE555 Streaming Media v2006.03.16)

RTSP/1.0 401 Unauthorized

CSeq: 2

Date: Thu, Jan 01 2004 00:37:39 GMT

WWW-Authenticate: Digest realm="Session streamed by RTP/RTSP server",
nonce="5269eb060e0385a667bb96c3562c542e"

DESCRIBE rtsp://Admin:123456@172.16.3.14:7070 RTSP/1.0

CSeq: 3

Accept: application/sdp

Authorization: Digest username="Admin", realm="Session streamed by RTP/RTSP server",
nonce="5269eb060e0385a667bb96c3562c542e",

uri="rtsp://Admin:123456@172.16.3.14:7070",
response="790baa56c992fdab991160da96a75445"
User-Agent: VLC media player (LIVE555 Streaming Media v2006.03.16)

RTSP/1.0 200 OK

CSeq: 3

Date: Thu, Jan 01 2004 00:37:39 GMT

Content-Base: rtsp://Admin:123456@172.16.3.14:7070/

Content-Type: application/sdp

Content-Length: 573

v=0

o=- 107291745900160000 1 IN IP4 172.16.3.14

s=Session streamed by RTP/RTSP server

i=ACTi.COM Streaming Media v

t=0 0

a=tool: ACTi.COM Streaming Media v2006.10.22

a=type: broadcast

a=control: *

a=range: ntp=0-

a=x-qt-text-name: Session streamed by RTP/RTSP server

a=x-qt-text-inf: ACTi.COM Streaming Media v

m=video 5000 RTP/AVP 96

c=IN IP4 228.5.6.1

a=rtpmap: 96 MP4V-ES/90000

a=fmtp: 96 profile-level-id=245; config=000001B0F5000001B50900000100000001200006

a=control: track1

m=audio 5002 RTP/AVP 111

c=IN IP4 228.5.6.1

a=rtpmap: 111 L16/8000

a=control: track2

SETUP rtsp://Admin:123456@172.16.3.14:7070/track1 RTSP/1.0

CSeq: 4

Transport: RTP/AVP; multicast; client_port=5000-5001

Authorization: Digest username="Admin", realm="Session streamed by RTP/RTSP server",

nonce="5269eb060e0385a667bb96c3562c542e",
uri="rtsp://Admin:123456@172.16.3.14:7070",
response="387a360cc9b70fc8c17f6e74bbfacd70"
User-Agent: VLC media player (LIVE555 Streaming Media v2006.03.16)

RTSP/1.0 200 OK

CSeq: 4

Date: Thu, Jan 01 2004 00:37:39 GMT

Transport: RTP/AVP; multicast; destination=228.5.6.1; port=5000; ttl=255

Session: 1

SETUP rtsp://Admin:123456@172.16.3.14:7070/track2 RTSP/1.0

CSeq: 5

Transport: RTP/AVP; multicast; client_port=5002-5003

Session: 1

Authorization: Digest username="Admin", realm="Session streamed by RTP/RTSP server",

nonce="5269eb060e0385a667bb96c3562c542e",

uri="rtsp://Admin:123456@172.16.3.14:7070",

response="387a360cc9b70fc8c17f6e74bbfacd70"

User-Agent: VLC media player (LIVE555 Streaming Media v2006.03.16)

RTSP/1.0 200 OK

CSeq: 5

Date: Thu, Jan 01 2004 00:37:39 GMT

Transport: RTP/AVP; multicast; destination=228.5.6.1; port=5002; ttl=255

Session: 1

PLAY rtsp://Admin:123456@172.16.3.14:7070 RTSP/1.0

CSeq: 6

Session: 1

Range: npt=0.000-

Authorization: Digest username="Admin", realm="Session streamed by RTP/RTSP server",

nonce="5269eb060e0385a667bb96c3562c542e",

uri="rtsp://Admin:123456@172.16.3.14:7070",

response="2aee9818580c78f0f53e3ee4ce2f6f71"

User-Agent: VLC media player (LIVE555 Streaming Media v2006.03.16)

RTSP/1.0 200 OK

CSeq: 6

Date: Thu, Jan 01 2004 00:37:39 GMT

Range: npt=0.000-

Session: 1

RTP-Info:

url=rtsp://172.16.3.45:7070//track1;seq=14339,url=rtsp://172.16.3.45:7070//track2;
seq=6211

TEARDOWN rtsp://Admin:123456@172.16.3.14:7070 RTSP/1.0

CSeq: 7

Session: 1

Authorization: Digest username="Admin", realm="Session streamed by RTP/RTSP server",
nonce="5269eb060e0385a667bb96c3562c542e",
uri="rtsp://Admin:123456@172.16.3.14:7070",
response="2ca566fc976ba0ef051ea5e215efafbb"

User-Agent: VLC media player (LIVE555 Streaming Media v2006.03.16)

RTSP/1.0 200 OK

CSeq: 7

Date: Thu, Jan 01 2004 00:37:44 GMT

#####

3. Base64 Algorithm Authentication in RTSP

RTP Over UDP

#####

DESCRIBE rtsp://172.16.3.14:7070/udp/track1 RTSP/1.0

CSeq: 10

Authorization: Basic QWRtaW46MTIzNDU2

RTSP/1.0 200 OK

CSeq: 10

Date: Thu, Jan 01 2004 00:28:38 GMT

Content-Base: /

Content-Type: application/sdp

Content-Length: 483

v=0

o=- 107291691800790000 1 IN IP4 192.168.0.100

s=Session streamed by RTP/RTSP server

i=ACTi.COM Streaming Media v

t=0 0

a=tool: ACTi.COM Streaming Media v2006.10.22

a=type: broadcast

a=control: *

a=range: ntp=0-

a=x-qt-text-name: Session streamed by RTP/RTSP server

a=x-qt-text-inf: ACTi.COM Streaming Media v

m=video 0 RTP/AVP 96

c=IN IP4 0.0.0.0

a=rtpmap: 96 MP4V-ES/90000

a=fmtp: 96 profile-level-id=245; config=000001B0F5000001B50900000100000001200006

a=control: track1

SETUP rtsp://172.16.3.14:7070/udp/track1/track1 RTSP/1.0

CSeq: 11

Transport: RTP/AVP;unicast;client_port=15000-15001

RTSP/1.0 200 OK

CSeq: 11

Date: Thu, Jan 01 2004 00:28:38 GMT

Transport:

RTP/AVP;unicast;destination=172.16.3.79;client_port=15000-15001;server_port=1006-1007

Session: 4

PLAY rtsp://172.16.3.14:7070/udp/track1 RTSP/1.0

CSeq: 12

Session: 4

Range: npt=0.000-

RTSP/1.0 200 OK

CSeq: 12

Date: Thu, Jan 01 2004 00:28:38 GMT

Range: npt=0.000-

Session: 4

RTP-Info: url=rtsp://172.16.3.79:7070//track1; seq=20059

TEARDOWN rtsp://Admin:123456@172.16.3.14:7070 RTSP/1.0

CSeq: 13

Session: 4

Authorization: Basic QWRtaW46MTIzNDU2

RTSP/1.0 200 OK

CSeq: 13

Date: Thu, Jan 01 2004 00:08:54 GMT