

# MSFS FlightBag V 0.57.0.57

See (new V0.57) indications for updates from the previous version (V0.55)

## Flight bag providing ...

- Standalone or Part of the MSFS HudBar Windows
- Shelf for image documents either JPG or PNG images for reference
- Airport centric Map display
- METAR retrieval
- Profile Calculator (new V0.57)
- Performance and Touchdown data
- Notepad

**MSFS\_FlightBag** is a standalone application but also integrated in the MSFS\_HudBar application.

Both are the same and share the same settings, data and configuration.

The integrated version attempts to gather the flight plan departure and arrival airports where the standalone version expects those to be entered in the Config. Tab – otherwise they are the same.



## IMPORTANT:

**MSFS\_FlightBag** makes extensive use of airport, runway and navigation data intended for the simulator.

As one cannot distribute MSFS and/or Navigraph data via the application package the user must initiate the data collection and consolidation.

There is a program provided in the application package which does this chore.

→ Below in the Appendix find the chapter **Data Loader** and proceed accordingly

# Content

<b>Flight bag providing .....</b>	<b>1</b>
<b>Standalone Installation and Usage.....</b>	<b>3</b>
<b>Limitations .....</b>	<b>3</b>
<b>What is shown.....</b>	<b>3</b>
<b>Shelf Tab .....</b>	<b>4</b>
<b>Map Tab .....</b>	<b>5</b>
Supported Map Providers .....	5
Map Display – Intentionally a zoomable but static map with decorations .....	5
Map – Ops.....	6
Airport / Area Information.....	7
Decorating the map .....	8
Aircraft tracking .....	8
Nav aids .....	9
Airport VFR Marks.....	10
Selecting a runway for VFR or IFR approach waypoints decoration .....	10
<b>METAR Tab .....</b>	<b>11</b>
<b>Perf. Tab .....</b>	<b>11</b>
<b>Profile Tab (new V0.57) .....</b>	<b>12</b>
<b>Notes Tab .....</b>	<b>13</b>
<b>METAR Data Retrieval: .....</b>	<b>14</b>
<b>Distributed Contents: .....</b>	<b>14</b>
<b>Appendix: .....</b>	<b>14</b>
File Storage .....	14
Settings Files and Reset Configuration .....	14
Map Data retrieval and storage disclaimer.....	14
Data Loader .....	15
Instances .....	15
Issue Reporting: .....	16

## Standalone Installation and Usage

- Deploy the release all zip content in a folder (no installer provided or needed)

**Best is to start MSFS first, then the Flight Bag (but the App should connect the sim in any case)**

- Start MSFS2020 first and once the Main Menu is shown
- Start FS20\_FlightBag.exe
- It attempts to connect to the Flight simulator in 5 sec intervals, but shows a red bar while it is not connected to MSFS
- Use the **Tabs** for Shelf, Map, METAR, Perf., Notes, and Config.
- To **Exit** and stop the program click the top right X mark




## Limitations

Some aircraft do not provide or do not synchronize data with the Simulator as expected.

Such aircrafts maintain their own internal models and act properly but do not share or interact well with the generic simulation where the FlightBag takes the data from to track aircraft and selected airports.

## What is shown

At startup there is an empty shelf, Map, METAR and Config. Tabs.

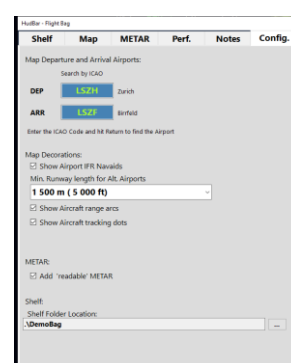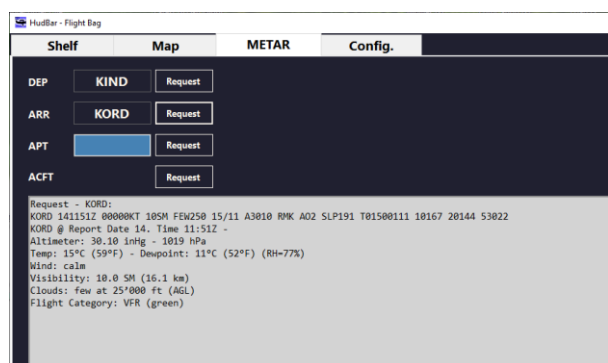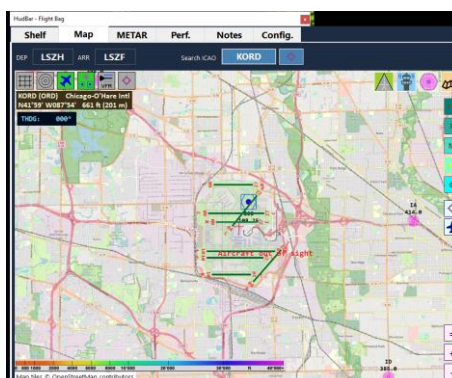

- Shelf provides a list of documents located in the selected folder
- Map shows a static map with various display options
- METAR allows to retrieve METAR information – if selected it translates the METAR string into something more readable.
- Perf. Lists Aircraft Performance numbers and Touchdown Data as reported from the Sim.
- Notes – a simple notepad area,
- Config. Allow to setup some options

See below for some of the items available


## Shelf Tab

- The Window allows to choose from image files contained in a folder.
- An image can be zoomed in or out and dragged within the window.
- Supported image file formats are PNG and JPG

Tip: scale the image in a way that the resolution is high enough to read it properly at the most used zoom level, usually this is around 1400 pix on the longer side – but you may try and find what works best.

### Configuration:

In order to use the Flight Bag you must select the folder where your images are located – go to **Config.** Tab

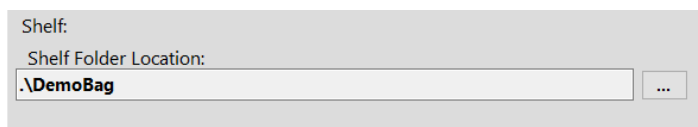

Default is the directory **DemoBag** in the App folder – supplied with some demo images in the App distribution.

Click ‘...’ and choose any directory to use.

### Usage:

The first time the window will open empty

– Click the **Book Shelf Icon** in the top left corner to load the documents (images)

From the list of documents **click** the one to display.

**Zoom** the document with the mouse **scroll wheel** or **click the +/- icons** in the bottom right corner.



Use the **left mouse click and drag** to move the document in the window.

**Click right** to reset the zoom and re-center the document.


Click the Book Shelf icon to select another document.

**Resize** the window as usual in Windows.

**Hide** the window with Hotkey, Context Menu or the X icon.

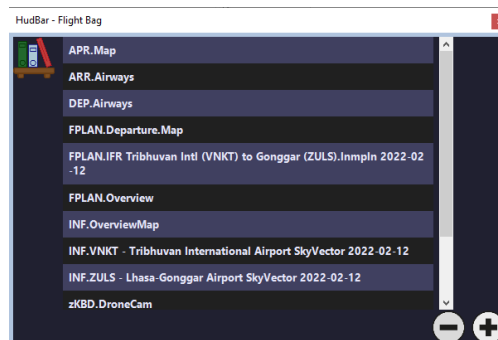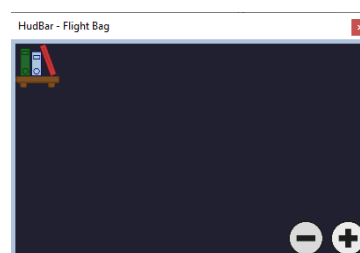

### Example from the Demo included

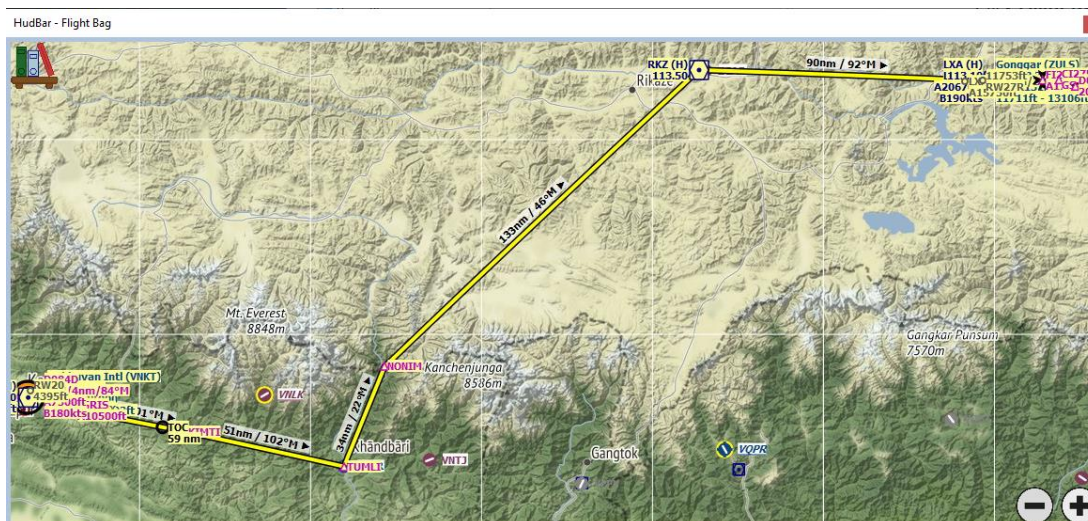

## Map Tab

### Supported Map Providers

**MapLib** supports a fixed number of Map Tile Providers as well as 3 user defined ones.

→ **ALWAYS consider the terms of use for any of the map providers**

**Free and open Tile services are at the time of writing** – enabled by default  
OpenStreetMap (OSM) and some derivatives

<https://www.openstreetmap.org>

OpenTopo, a 3d enhanced map from an open source project (usually rather slow to respond...).

<https://opentopomap.org>

Stamen 3d shaped terrain map (remote areas are rather slow to respond)

<http://maps.stamen.com>

**Tile Services which need either a key or are subject to licensing terms** – disabled by default

Bing Maps (Microsoft map service) needs a key and subject to licensing

<https://docs.microsoft.com/en-us/bingmaps/getting-started>

ESRI/ARCGIS Tile Services as part of their offering – subject to license, don't use if not licensed

<https://developers.arcgis.com/documentation/mapping-apis-and-services/data-hosting/services/image-tile-service/>

**Remark:**


**Don't ask for Google Map support – I don't have a key and they are rather complicated to work with...**

### User defined tile services

You may have an own tile service running on your NAS or know a tile service you like to use.

**Provider Configuration → Check the guide for MapLib (MapLib-Doc.pdf)**

### Map Display – Intentionally a zoomable but static map with decorations

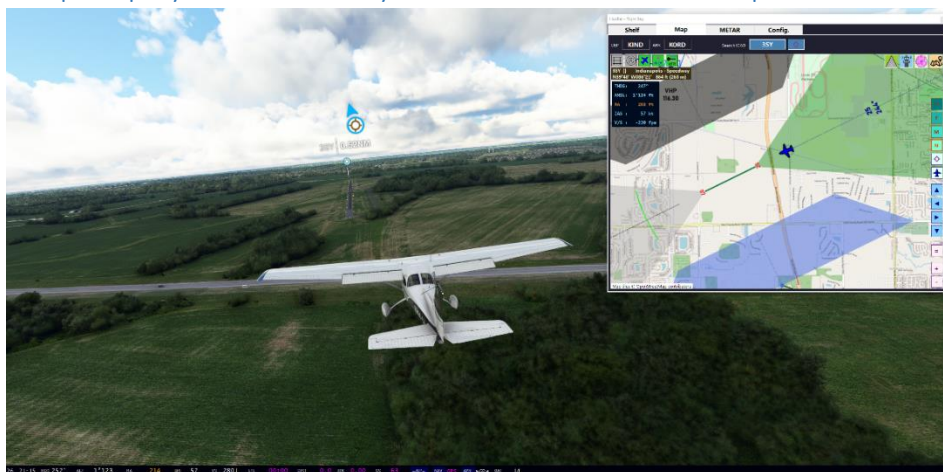

The Map display intends to minimize the performance footprint and will only request tiles on user request.

There are 5 predefined ranges (FF, F, M, N, C) which are loaded on demand and where the user can zoom in and out at discretion.


The map is intentionally NOT a moving map. The user may shift the mapped area if desired.

The map draws the selected airport runways if in sight and can be decorated with Nav aids, VFR patterns, Aircraft

The map displays the aircraft with some predefined essential data



## Map – Ops

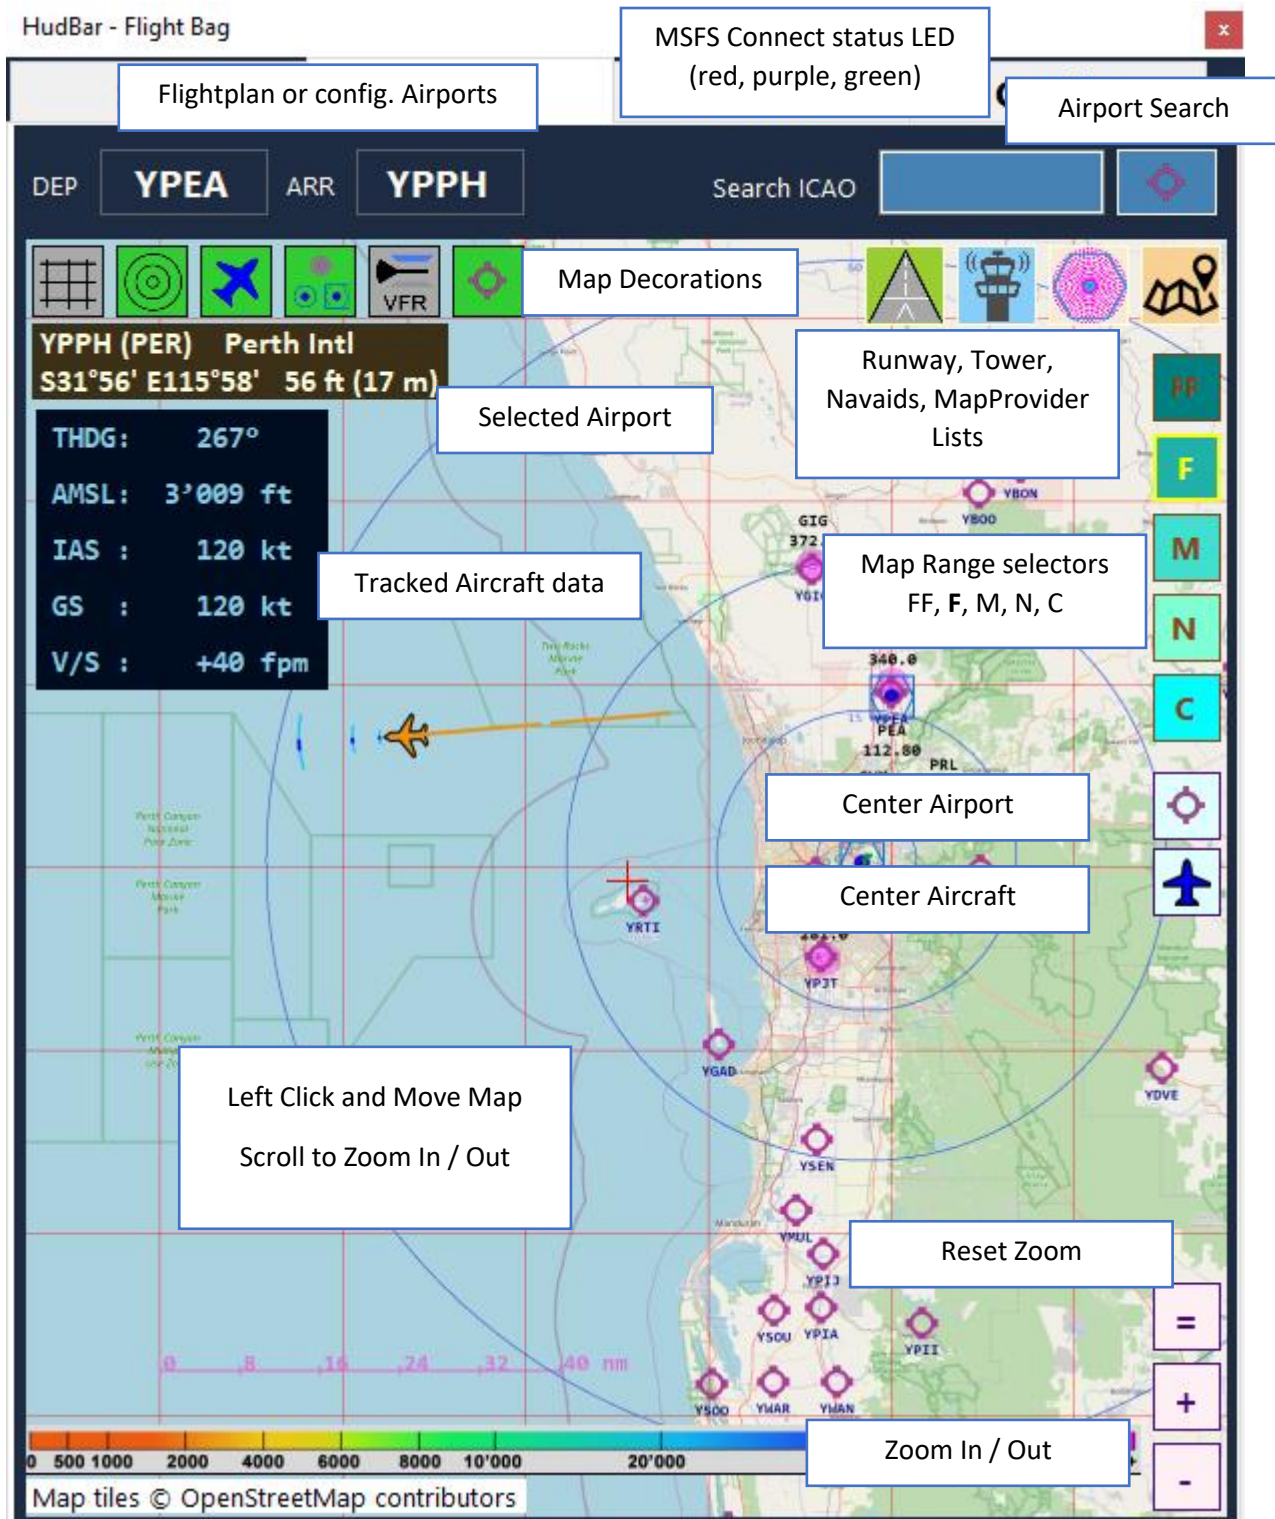

The map is Airport centric – i.e. usually you would have an airport selected.

Use Search Airport or click the DEP, ARR ICAO label to center the view on that airport (above it's YPPH)


While in flight you may move the shown map area using the mouse with left click or use the 'center aircraft' button once in a while to re-locate the map.

For the selected airport one can list runways, tower frequencies as well as the area nav aids.

*NOTE: for the time being the map may be a bit jumpy when moving it around rather fast. In the end it should show the expected area – if a yellow border remains, try to do a small move with the mouse.*

*(Work in progress to clean it up)*

## Airport / Area Information

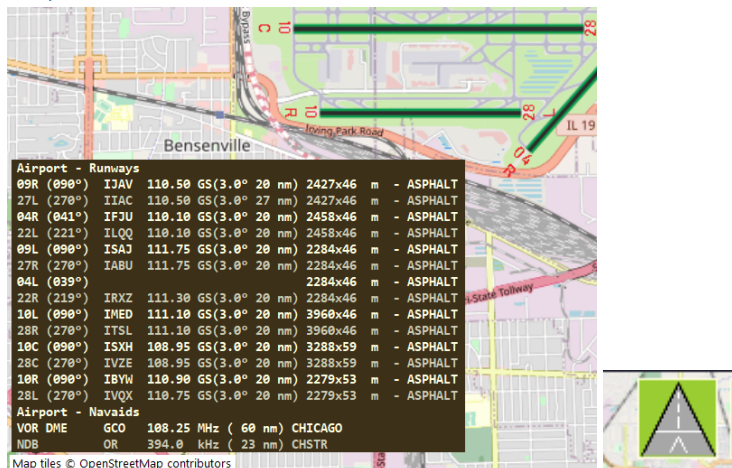

**Airport - Runways**


Runway	Identifier	Length (ft)	Width (ft)	Surface
09R (090°)	IJAV	110.50	2427x46	ASPHALT
27L (270°)	IIAC	110.50	2427x46	ASPHALT
04R (041°)	IFJU	110.10	2458x46	ASPHALT
22L (221°)	ILQQ	110.10	2458x46	ASPHALT
09L (090°)	ISAJ	111.75	2284x46	ASPHALT
27R (270°)	IABU	111.75	2284x46	ASPHALT
04L (039°)			2284x46	ASPHALT
22R (219°)	IRXZ	111.30	2284x46	ASPHALT
10L (090°)	IMED	111.10	3960x46	ASPHALT
28R (270°)	ITSL	111.10	3960x46	ASPHALT
10C (090°)	ISXH	108.95	3288x59	ASPHALT
28C (270°)	IVZE	108.95	3288x59	ASPHALT
10R (090°)	IBYW	110.90	2279x53	ASPHALT
28L (270°)	IVQX	110.75	2279x53	ASPHALT

**Airport - NavAids**

NavAid	Frequency	Range (nm)	Type
VOR DME	GCO 108.25 MHz	60 nm	CHICAGO
NDB	OR 394.0 kHz	23 nm	CHSTR

Map tiles © OpenStreetMap contributors

Clicking the Runway Icon will show/hide the list of airport runways found in the database.  
If there is an ILS located for the runway the ILS ID, Frequency, GS angle and range is shown.

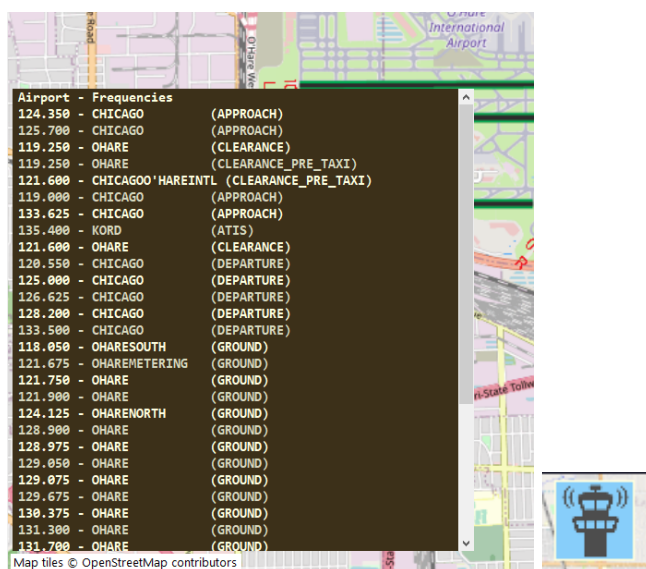


**Airport - Frequencies**

Frequency	Location	Type
124.350	CHICAGO	(APPROACH)
125.700	CHICAGO	(APPROACH)
119.250	OHARE	(CLEARANCE)
119.250	OHARE	(CLEARANCE_PRE_TAXI)
121.600	CHICAGO OHARE INTL	(CLEARANCE_PRE_TAXI)
119.000	CHICAGO	(APPROACH)
133.625	CHICAGO	(APPROACH)
135.400	KORD	(ATIS)
121.600	OHARE	(CLEARANCE)
120.550	CHICAGO	(DEPARTURE)
125.000	CHICAGO	(DEPARTURE)
126.625	CHICAGO	(DEPARTURE)
128.200	CHICAGO	(DEPARTURE)
133.500	CHICAGO	(DEPARTURE)
118.050	OHARE SOUTH	(GROUND)
121.675	OHARE METERING	(GROUND)
121.750	OHARE	(GROUND)
121.900	OHARE	(GROUND)
124.125	OHARE NORTH	(GROUND)
128.900	OHARE	(GROUND)
128.975	OHARE	(GROUND)
129.050	OHARE	(GROUND)
129.075	OHARE	(GROUND)
129.675	OHARE	(GROUND)
130.375	OHARE	(GROUND)
131.300	OHARE	(GROUND)
131.700	OHARE	(GROUND)

Map tiles © OpenStreetMap contributors

Clicking the Tower Icon will show/hide the list of airport communication frequencies found in the database.  
When there are many like at KORD it will turn into a scrollable list.

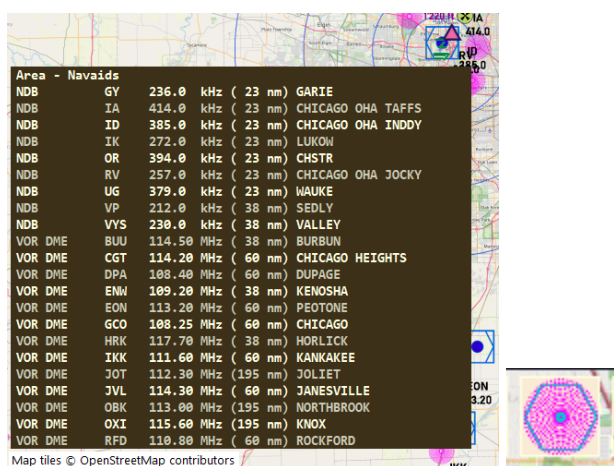

**Area - NavAids**

NavAid	Frequency	Range (nm)	Type
NDB	GY 236.0 kHz	23 nm	GARIE
NDB	IA 414.0 kHz	23 nm	CHICAGO OHA TAFFS
NDB	ID 385.0 kHz	23 nm	CHICAGO OHA INDDY
NDB	IK 272.0 kHz	23 nm	LUKOW
NDB	OR 394.0 kHz	23 nm	CHSTR
NDB	RV 257.0 kHz	23 nm	CHICAGO OHA JOCKY
NDB	UG 379.0 kHz	23 nm	WAUKE
NDB	VP 212.0 kHz	38 nm	SEDLY
NDB	VVS 230.0 kHz	38 nm	VALLEY
VOR DME	BUU 114.50 MHz	38 nm	BURBUN
VOR DME	CET 114.20 MHz	60 nm	CHICAGO HEIGHTS
VOR DME	DPA 108.40 MHz	60 nm	DUPAGE
VOR DME	ENW 109.20 MHz	38 nm	KENOSHA
VOR DME	EON 113.20 MHz	60 nm	PEOTONE
VOR DME	GCO 108.25 MHz	60 nm	CHICAGO
VOR DME	HRK 117.70 MHz	38 nm	HORLICK
VOR DME	IKK 111.60 MHz	60 nm	KANKAKEE
VOR DME	JOT 112.30 MHz	195 nm	JOLIET
VOR DME	JVL 114.30 MHz	60 nm	JANESVILLE
VOR DME	OBK 113.00 MHz	195 nm	NORTHBROOK
VOR DME	OXI 115.60 MHz	195 nm	KNOX
VOR DME	RFD 110.80 MHz	60 nm	ROCKFORD

Map tiles © OpenStreetMap contributors

Clicking the NavAids Icon will show/hide the list of the mapped FF Area VOR/NDBs and frequencies found in the database.

Note: Whether or not showing the NavAids on the map is part of decoration selection.


## Decorating the map

- Map Lat/Lon Grid – toggles the grid
- Airport range circles (5, 10, 30, 60 nm radius)
- Aircraft tracking with some data points
- Nav aids
- Airport VFR Markings
- Airports within the shown area (use Config. to select a minimum runway length)



Click to toggle visibility of the items

## Aircraft tracking

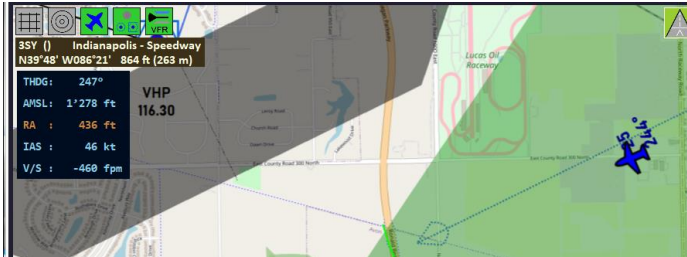


When visible it will show the aircraft on the map if in the shown area, else it says 'aircraft out of sight'.


Data points are:

- True Heading (THDG)
- Altitude above MSL in ft
- RA in ft (<1500)
- IAS in kt
- GS in kt
- V/S in fpm

The aircraft has a range feature which either shows 30° arcs at 2.5, 5, 10 nm out in light blue, the true ground track is marked with a 6° dark blue segment. These are TRUE degrees on the true north oriented map.

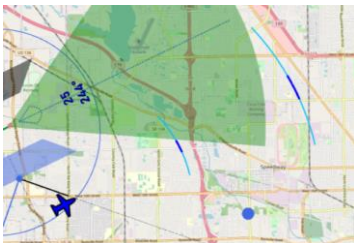


Under approach conditions the range marker changes to the expected ground contact at current IAS, VS and altitude which is shown as a green 20° arc (at the time of writing this feature needs some improvement...)

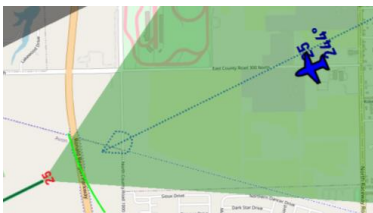




## Nav aids

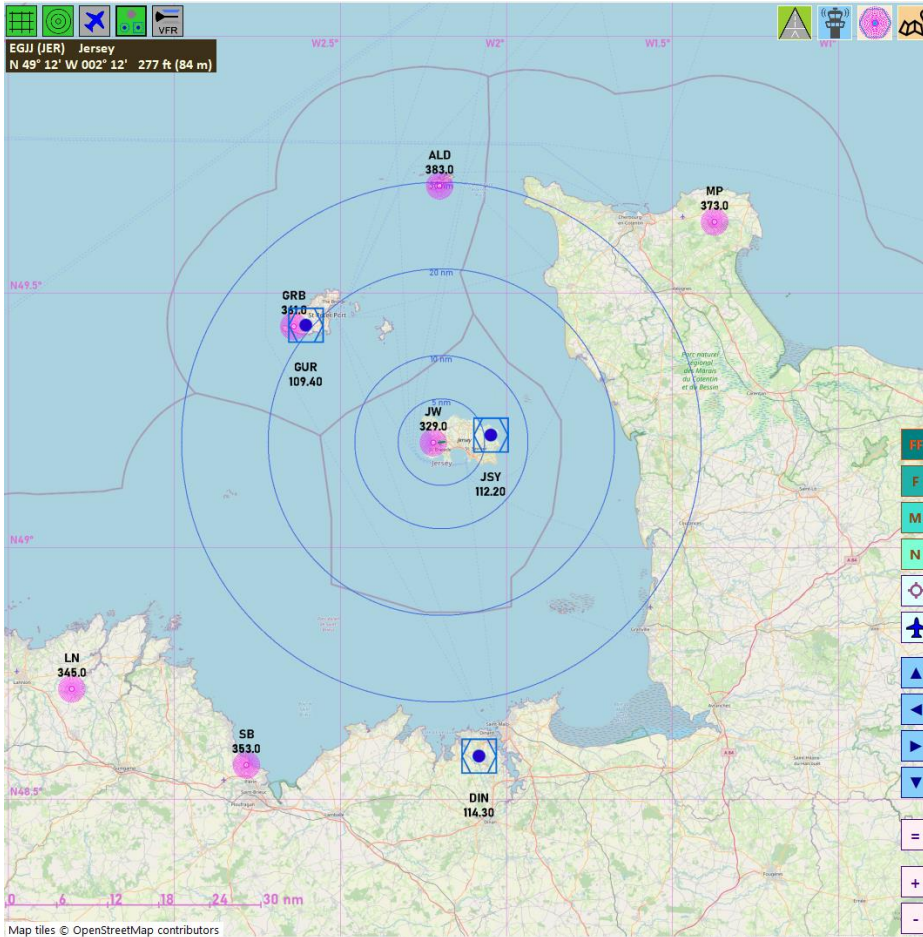

**VOR, DME, and NDB** nav aids are shown with ID and frequency at their location.  
There is no further interaction available.

**Waypoints** for runway approaches can be shown if a runway is selected from the runway list.

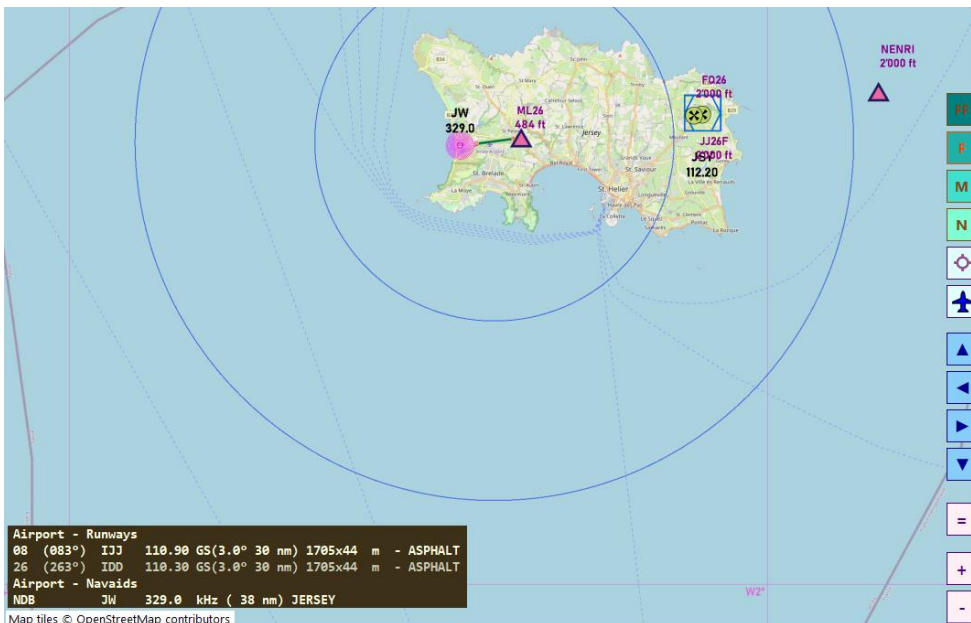

Above the runway 26 was selected (clicked), Approach waypoints with their assigned altitude found in the database are placed on the map if Navaid decoration is visible. If multiple approaches are found all of those waypoints are shown at once (above RW26 has actually 5 approaches sharing some waypoints)

## Airport VFR Marks

**Note:** this feature may or may not please all kind of pilots – please let me know ...


Selecting a runway for VFR or IFR approach waypoints decoration

To select a runway get the Runway list and **click** one of the runways.


To clear the selection, click the 'Airports – Runways' text (hand appears) and the decorations will go away.

Airport - Runways									
24	(239°)	IPH	GS(3.0° 27 nm)	2161x44	m	-	ASPHALT		
06	(059°)			2161x44	m	-	ASPHALT		
21	(194°)	IGD	109.50 GS(3.0° 27 nm)	3441x44	m	-	ASPHALT		
03	(014°)	IPN	110.10 GS(3.0° 27 nm)	3441x44	m	-	ASPHALT		
Airport - Nav aids									

For a selected runway VFR marks are shown.

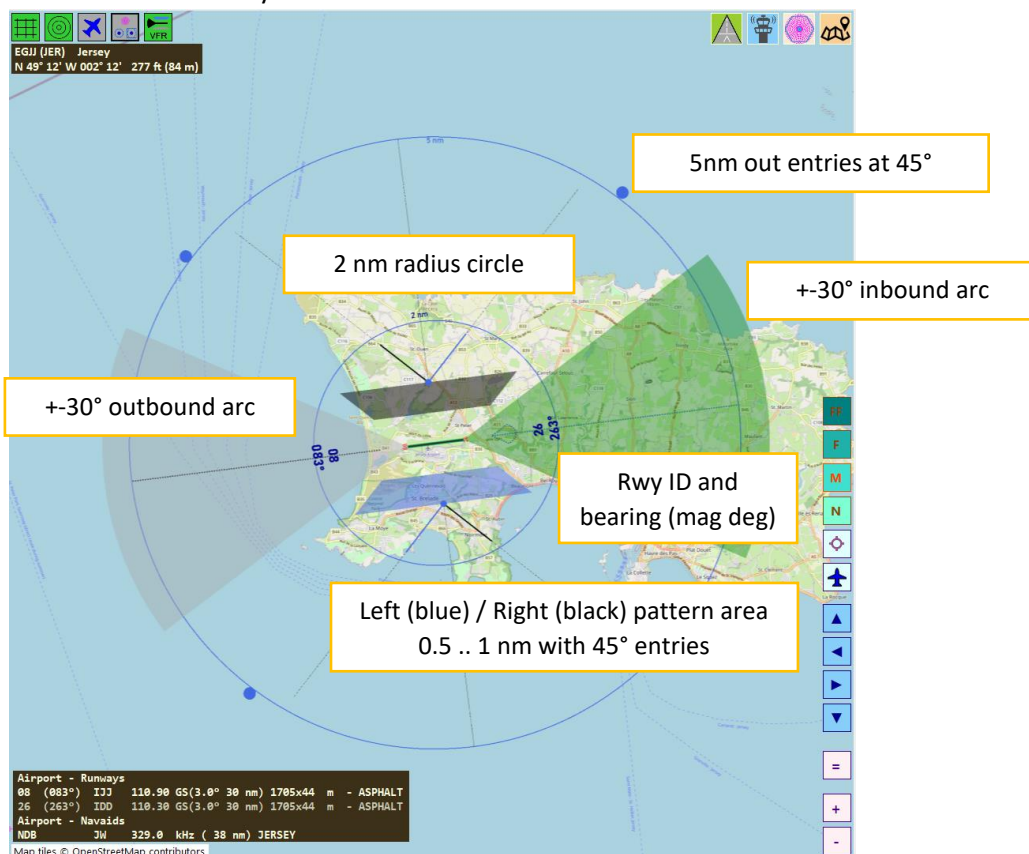

Above the runway 26 was selected (clicked)

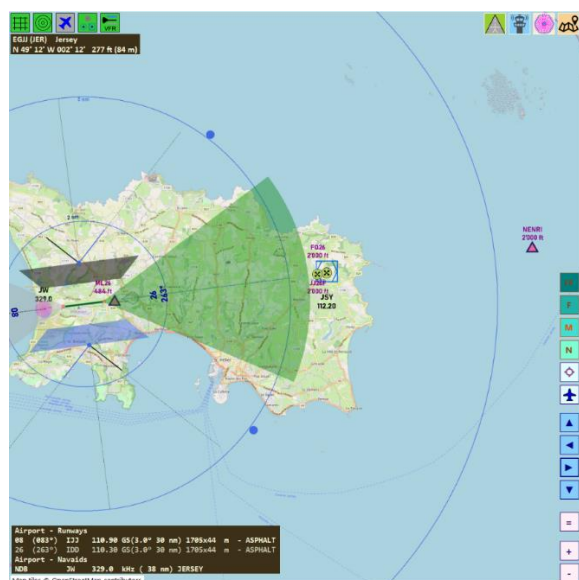

When Navaid decoration and VFR marks is on it looks like above.

## METAR Tab

This Tab will return METAR information for the station where the **Request** button was clicked.

HudBar - Flight Bag

Shelf	Map	METAR	Config.
DEP	KIND	Request	
ARR	KORD	Request	
APT		Request	
ACFT		Request	

Request - KORD:  
KORD 141151Z 00000KT 10SM FEW250 15/11 A3010 RMK A02 SLP191 T01500111 10167 20144 53022  
KORD @ Report Date 14. Time 11:51Z -  
Altimeter: 30.10 inHg - 1019 hPa  
Temp: 15°C (59°F) - Dewpoint: 11°C (52°F) (RH=77%)  
Wind: calm  
Visibility: 10.0 SM (16.1 km)  
Clouds: few at 25'000 ft (AGL)  
Flight Category: VFR (green)

If set in Config it will 'translate' the telegram into a more readable version as shown above.

If METAR does not provide data it might be that the service does not respond (try again in a few seconds) or the station is not available at all.

**The ACFT** will ask for a station based on the aircrafts LAT/LON position from the nearest weather station found within max. 500 Statute miles in direction of flight, the returned station is sometimes not really what one expects, but what the Metar server provides... (Cannot change it though).

**The Metar is real weather information at the location i.e. suitable when using Live Weather.**

– MSFS Sim weather cannot be retrieved outside the sim.

## Perf. Tab

Performance data as reported from the Simulator.

Touchdown data as reported from the Simulator.

There is a Touchdown log saved (MyDocuments\MSFS\_HudBarSave\TouchDownLog.csv) when using the FlightBag

	Aircraft	Callsign	Date_Time	VRate_fpm	Pitch_deg	Bank_deg	Hdg_deg	RwyLatDev_ft	RwyLonDev_ft
2	Cessna Skyhawk G1000 Asobo	BM98-CH	2022-10-16T18:25:06	4.8	0	0	274	NaN	NaN
3	Cessna Skyhawk G1000 Asobo	BM98-CH	2022-10-16T18:28:33	88.6	-2.7	-1.2	78	NaN	NaN
4	Cessna Skyhawk G1000 Asobo	BM98-CH	2022-10-18T01:09:36	5.7	0	0	274	2664.9	-15406.1
5	Cessna Skyhawk G1000 Asobo	BM98-CH	2022-10-18T01:11:49	144.8	-1.7	0.7	78	3.7	199.2
5	Cessna CJ4 Citation Asobo	BM98-CH	2022-10-18T01:33:04	8	-3.6	-0.3	152	NaN	NaN
7	Cessna CJ4 Citation Asobo	BM98-CH	2022-10-18T01:47:34	306.9	-2.7	0.6	94	-1.4	-909
3	Cessna CJ4 Citation Asobo	BM98-CH	2022-10-18T02:00:39	200.2	-2.4	-1.3	96	5.8	-848
3	Cessna Skyhawk G1000 Asobo	BM98-CH	2022-10-19T14:10:34	6	0	0	274	3307.9	-15702.9
0	HJET HA420 Dark Blue Stripes	BM98-CH	2022-10-19T14:50:42	0	0	0	318	2952.7	-15285.4

You may find Runway Deviation sometimes NaN or off by miles. The deviation is derived from the ATC assumed runway – which sometimes is just not set (NaN) or is still the starting runway (number is far off).

Also when you bump at the takeoff (happens...) you see most likely a separate line with a small number for the VRate (e.g. line 2)

## Profile Tab (new V0.57)

An interactive profile table – using the “Rule of 3” as base.



Above the tables are the current numbers as reported from the Simulator:

*FPA is the current flight path angle then IAS, TAS, GS, VS, and Altitude (in kts and Alt in ft)*

The current FPA, GS, and Altitude values are highlighted in the respective tables with a greenish color (for values in between row values for GS and Alt the higher one is marked in order to provide a safety margin).

Click a flight profile row in the left table - it will recalculate the 2<sup>nd</sup> and 3<sup>rd</sup> table.

The middle table shows the required vertical speed at a given **ground speed** (GS) in order to maintain the profile. E.g. above to maintain a 4.4° profile at GS of 260 kts it asks for 2000 ft/min vertical rate.

Clicking a row in the middle table serves only as mark or reminder and will not change any value.

The right table shows the distance which is flown to get to a certain altitude at the selected profile angle. E.g. starting from FL200 with a 4.4° profile it needs 23nm to get either down to FL100 or up to FL300.

**Note:** add a safety margin to the calculated distances!

Clicking a row in the right table will set this altitude as zero distance and calculate from there up and down.

There are no signed numbers in the tables, it's meant as either climb or descend.

Example:


We are at 26'000 ft with a GS of 480 as the greenish marks are showing, above the table are the real-time values from the Sim.

The plane is heading down at 2.4° and this profile is currently selected - showing a VS of ~2000 ft/min is required and flown.

Below the left screen has 26'000 ft selected as starting point and the distances are calculated up and down. To get down to 7'000 ft it shows we need about 79nm.

In the middle screen the new target altitude of 7'000 ft is selected and it shows the remaining distance as the green mark walks down while we descend. Also showing the needed distance to the airfield which is at about 1'000ft – it would be 25nm when flying at 2.4°.

In the right screen the approach profile of 3° is selected and now the VS has changed but also the distance from 7000 to 1000ft is back to 20nm for the steeper approach (now we only need to get our speed back in time and maintain the profiles..)

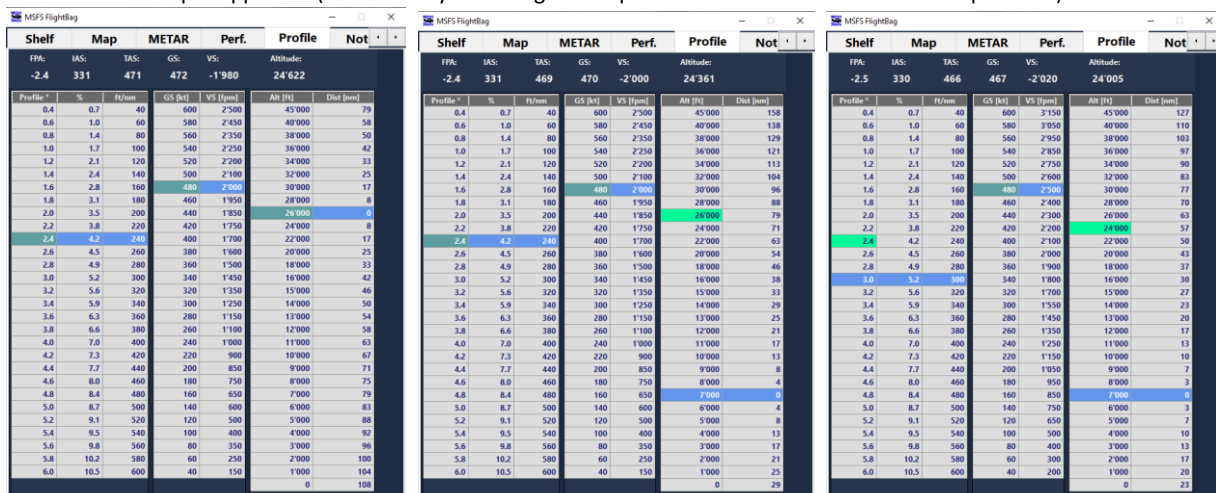


Can be used to estimate the TOD or to check if a constraint can be made with the current profile.



## Notes Tab

Just a notepad which is saved when closing the App

## Config Tab

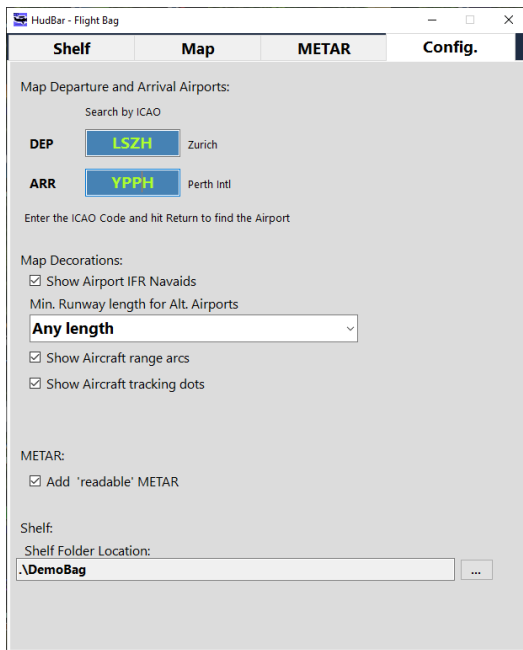

Set the desired **Departure** and **Arrival Airports**

Enter the ICAO code and hit the Enter key – if the airport is found it will turn green and the common name is shown right to it, else it will turn red, indicating that ICAO code was not found in the database.

Map Decorations:

Checked '**Show Airport IFR Nav aids**' will show all approach waypoints for the selected runway when Nav aids decoration is ON

Note: some labels will overlap when approach waypoints are close together (did not found a reasonable way to resolve this)

Min. **Runway length for Alt.Airports**' lets you select the minimum length for any runway an airport must have in order to be shown when Airports decoration is ON.

Choose from the drop down.

Checked '**Show Aircraft range arcs**' will show the leading arcs of the tracked aircraft when Aircraft decoration is ON

Checked '**Show Aircraft tracking dots**' will show the trailing dots of the current tracked aircraft when Aircraft decoration is ON

METAR

Checked 'Add 'readable' METAR will show the more readable METAR information along with the received telegram.

Shelf:

**Shelf Folder Location:** click the button <...> to select a folder where the images for the Shelf Tab can be found.

➡ The Configuration is shared for the standalone and the HudBar version of the FlightBag.

## METAR Data Retrieval:

Please note that the program will issue HTTP Requests to an external server to retrieve the latest METAR information.

The data for METAR is retrieved from: <https://aviationweather.gov>

Please make sure to comply with their terms and conditions when retrieving METAR data with this program.

See also: <https://aviationweather.gov/dataserver/example?datatype=metar>

## Distributed Contents:

My FlightSim Libraries (included in the release package)

SEE README.TXT FOR THE LIST

CoordLib is based on: <https://github.com/chrisveness/geodesy>

Translated to C# and partially modified

Original code license: The MIT License (MIT)

## Appendix:

### File Storage

Files are generally stored in the "<MyDocuments>\MSFS\_HudBarSave" folder

### Settings Files and Reset Configuration

The configuration is stored in using a Json AppSettings Library.

The configuration can be found here: <MyDocuments>\MSFS\_HudBarSave\settings\<APP>

For the Flight Bag, the settings file is: **FShelfAppSettings.json**

This file stores your configuration but I suggest to not edit it – unless you know what to change, it may prevent the program from starting if done wrongly.

If you find something really wrong – you may backup and delete the settings file and the program will use the defaults to start with.

### Map Data retrieval and storage disclaimer

Map cache files:

The map cache files can be found here: <MyDocuments>\MSFS\_HudBarSave\cache\<Provider>.dblite

**MapLib** retrieves tiles only for the user requested location and zoom level.

The visualization WinForms UserControl **bm98\_Map** requests tiles as a matrix of 8x8 tiles at zoom levels for the 4 different ranges: FF= 9, F=10, M= 12, N=13, C=15

**MapLib** stores tiles per provider in a computer local disk cache and will clean up tiles older than 100 days or when the providers cache exceeds ~64MB / ~2560 tiles at startup of the application.

**MapLib** maintains a memory cache for 400 tiles (about 10 MB RAM) while an application is running.


→ If you encounter incorrect tiles or other oddities – first delete the cache files and try again.

**Provider Configuration** → Check the guide for MapLib (MapLib-Doc.pdf – at the end of this document)

## Data Loader

Go for the application folder and then into the subfolder \dataLoader

Run FacilityDataLoader.exe:

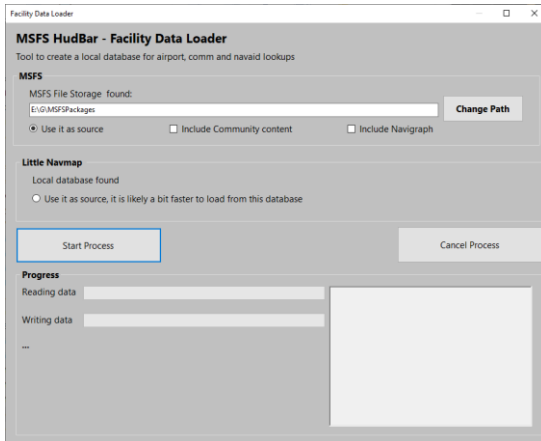

First check if the program finds the MSFS data path.  
It does follow the MS specs for Store and Steam but...

If not you may need to use Change Path.. to point it to the folder  
(where Community and Official folders can be found)

If the LittleNavMap database is found it will show it as well.

You may choose the source for the data, either collecting from the  
MS files where you may include Community content and/or  
Navigraph (if installed)  
Or from the LittleNavMap database which is usually faster.  
Check one of the sources.

Then hit Start Process and have some patience.

The program will report progress and once it finished its data collection it will tell you.

The database is stored at MyDocuments\MSFS\_HudBarSave\db\fs2020genApt.db1ite and is somewhat larger  
than 130MB.

REDO this process when either a new Navigraph version is out and when MS provides substantial updates.

## Instances

You may want to start the FlightBag more than once or get independent configurations and therefore programs  
running.

However they share the same Settings i.e. the location is saved from the last movement on any of the instances.  
In order to have truly independent instances with their own settings (all settings in Config and locations etc.) an  
Instance Name can be added to the Command Line when starting the FlightBag.

No command line parameter is considered and referred to as 'Default'

If you provide an Instance name to start the FlightBag it will be shown in the Window Title (Window Bar and  
Configuration)

You may start instances the easy way by creating a **Desktop Shortcut** and then modify the **Properties** of the  
**Shortcut** (right click) by adding an Instance name to the **Target** field:

This is the command line; add a space and the name at the end of the text field

Then may be rename the **Shortcut** in order to recognize it later.

### Issue Reporting:

In case you encounter a problem please include as much information as possible. Sometimes it is also relevant which aircraft you were using.

Issues can be reported directly via GitHub (or a Message in Flightsim.to)

[https://github.com/bm98/FS20\\_HudBar/issues](https://github.com/bm98/FS20_HudBar/issues)

<https://flightsim.to/file/16604/msfs-hudbar>

### Known Issues:

#### ***Settings are not stored or runtime exceptions***

We have seen issues when Windows Protected Folders are enabled.

(<https://www.tenforums.com/tutorials/87858-add-protected-folders-controlled-folder-access-windows-10-a.html>)

In such a case Windows may deny programs which are not installed via MSI Installer access to write or delete files in some places, among them is the MyDocuments folder.

There is a check at the very beginning of the App which is trying to elaborate if such protection exists or not.

If yes there is a MessageBox popping up related to Access Permission Error and the reason should be reported in the box.

Is such a case first try to find out if protected folders are enabled and then add the HudBar App to the list of allowed programs and start the program again to see if the problem persists – if it is still there head for Issue Reporting above.

(<https://support.microsoft.com/en-us/windows/allow-an-app-to-access-controlled-folders-b5b6627a-b008-2ca2-7931-7e51e912b034>)