


Raspberry Pi

Tutorial

Using RPi.GPIO calls on a Raspberry Pi
Model 5

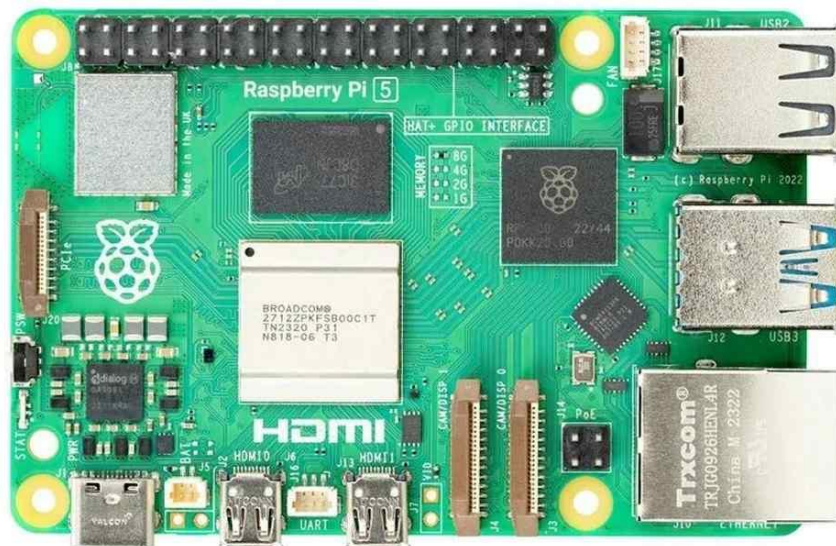

Bob Rathbone Computer Consultancy

www.bobrathbone.com

4th of January 2024

Contents

Introduction	3
GPIO Hardware Notes	4
Conventions used in this tutorial	5
What version of the OS works with my Raspberry Pi model	6
RPi/GPIO.py	6
Installation	6
Pre-requisites	6
Downloading GPIOconverter	6
Enabling GPIO.py	7
Known Issues	7
GPIO.setwarnings call ignored	7
Using GPIOconverter with Rotary Encoders	7
Support	7
Source files	8
Appendix B Licences	8
Acknowledgements	8
Glossary	9

Figures

Figure 1 The Raspberry Pi Model 5 RP1 I/O chip	3
Figure 2 GPIO and other Headers Information	4

Introduction

The Raspberry Pi Model 5 was introduced at the end of 2023. It only works with **Raspberry Pi Bookworm OS** or later

However, the biggest impact for most developers is that the **RPi.GPIO** input/output library does not work on the **Raspberry Pi model 5**. This is because the **RPi Model 5** now has a separate chip called **RP1** for controlling I/O including the pins on the GPIO header (**j8**). This means that hundreds of thousands of programs or maybe even millions of programs need to be modified to use one of the newer libraries such as **gpiod** or **lgpio**. The **RP1** chip also controls USB ports, Gigabyte Ethernet, MIPI Camera Controllers and Low Speed Peripherals compatible with earlier versions of the Raspberry Pi.

My own product, the **Raspberry Pi Internet Radio** is also such a program and would have meant a lot of work to convert all the GPIO routines to say **GPIOd** which does run on the RPi Model 5. So, I decided to write a simple interface called **GPIOconverter** which converts **RPi GPIO** calls to one of the newer GPIO interfaces. **GPIOd** was advocated as the best way forward however I found that **GPIOd** was poorly documented and there didn't seem to be any examples of how to handle interrupts. I eventually settled on using the excellent **python3-lgpio** library for the **GPIOconverter** software. The architecture of the interface is shown below:

OUTPUT: User Program --> GPIO calls --> GPIOconverter --> LGPIO

INPUT: LGPIO events --> GPIOconverter --> User Program

The following illustration shows the location of the RPP1 I/O chip.

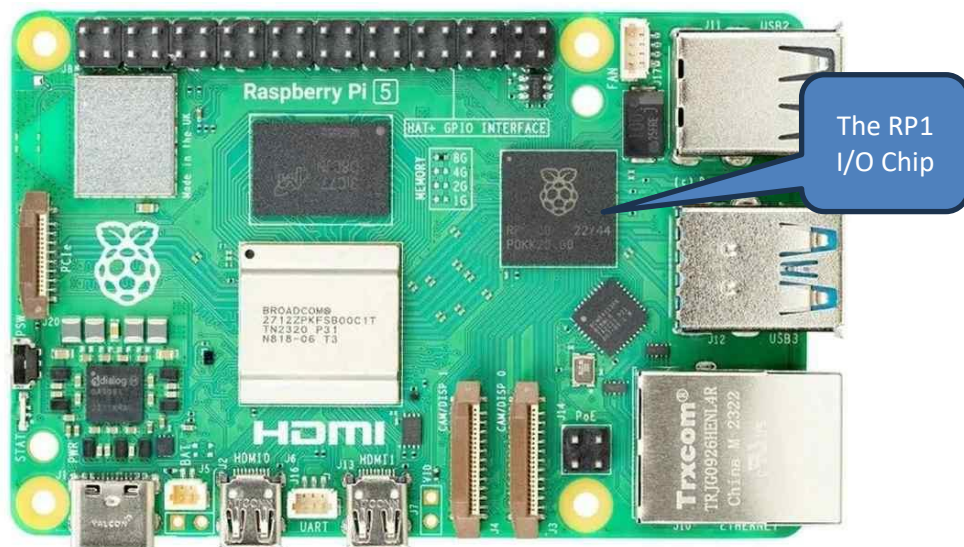


Figure 1 The Raspberry Pi Model 5 RP1 I/O chip

GPIO Hardware Notes

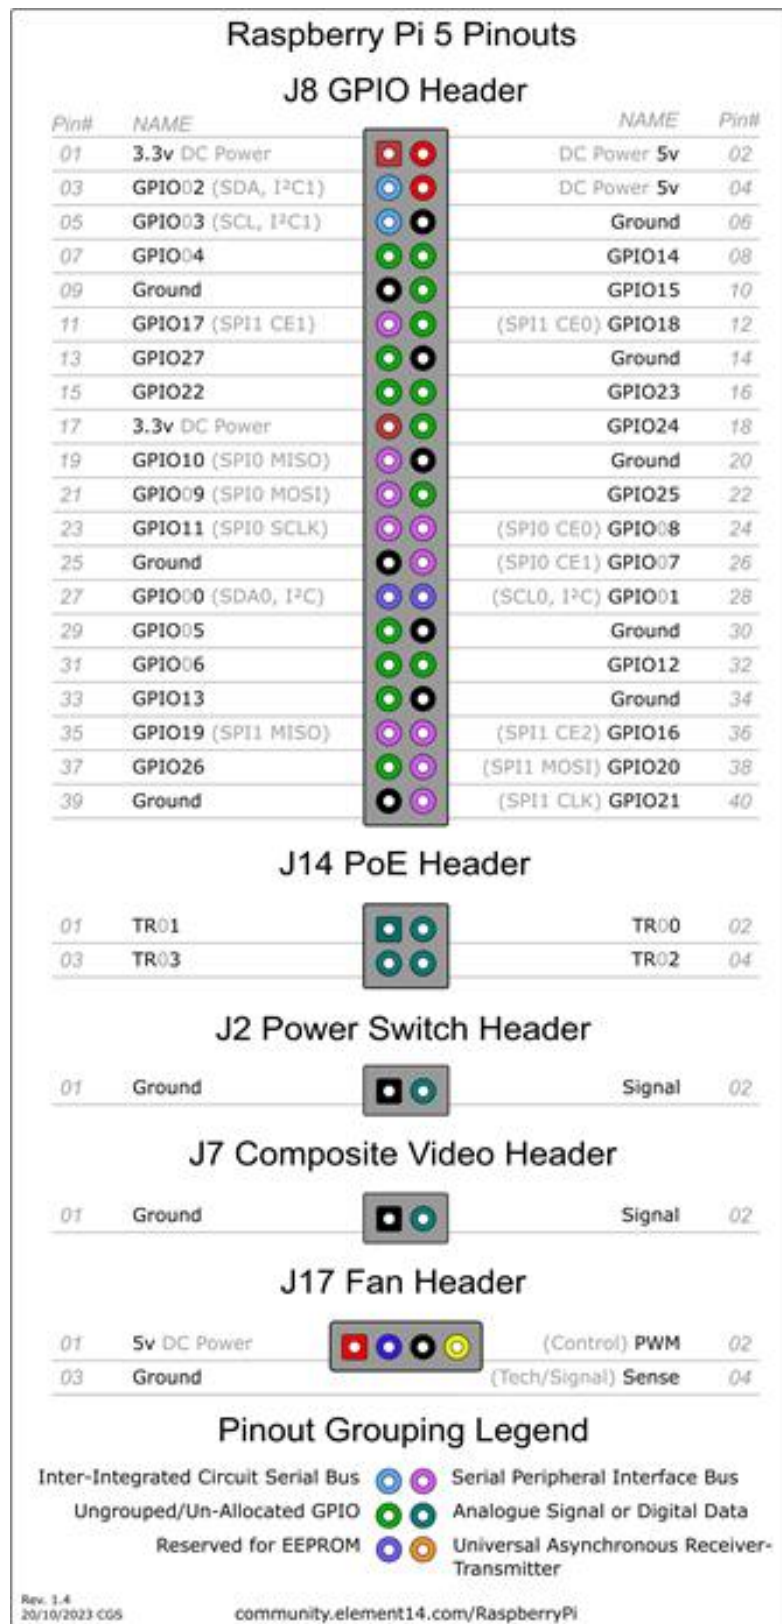


Figure 2 GPIO and other Headers Information

Conventions used in this tutorial

Installation of the radio program requires you to enter lines at the command line prompt. This requires you to log into the Raspberry PI as user '**pi**'. The default password is **raspberrypi**.



Note: Don't carry out any of the following commands just yet. They are just examples.

```
Raspberrypi login: pi
Password: raspberrypi
pi@raspberrypi:~$ Last login: Sun Apr  6 10:18:18 2014 from 192.168.2.100
pi@raspberrypi:~$
```

The prompt line is displayed ending with a \$ sign. The **pi@raspberrypi:~** string means user 'pi' on host machine called 'raspberrypi'. The ~ character means the user 'pi' home directory **/home/pi**. In this tutorial if you are required to do something as user **pi** then only the \$ sign will be shown followed by the command as shown in the example below:

```
$ pinout
```

Some commands produce output which does not need to be shown. In such a case a ':' is used to indicate that some output has been omitted.

```
$ pinout
Description      : Raspberry Pi 5B rev 1.0
Revision         : c04170
: {Output omitted}
J8:
  3V3  (1) (2)  5V
GPIO2  (3) (4)  5V
GPIO3  (5) (6)  GND
GPIO4  (7) (8)  GPIO14
GND    (9) (10) GPIO15
GPIO17 (11) (12) GPIO18
GPIO27 (13) (14) GND
GPIO22 (15) (16) GPIO23
3V3    (17) (18) GPIO24
GPIO10 (19) (20) GND
GPIO9  (21) (22) GPIO25
GPIO11 (23) (24) GPIO8
GND    (25) (26) GPIO7
GPIO0  (27) (28) GPIO1
GPIO5  (29) (30) GND
GPIO6  (31) (32) GPIO12
GPIO13 (33) (34) GND
GPIO19 (35) (36) GPIO16
GPIO26 (37) (38) GPIO20
GND    (39) (40) GPIO21
For further information, please refer to https://pinout.xyz/
```

END OF EXAMPLE COMMANDS.

What version of the OS works with my Raspberry Pi model

The following article contains a table showing which model Raspberry Pi's work with which Raspberry Pi OS:

https://en.wikipedia.org/wiki/Raspberry_Pi_OS

RPi/GPIO.py

The **GPIO.py code** is only for use with the **Raspberry Pi Model 5**. Do not use it for earlier models such as the Model 3B or 4. It is designed to intercept traditional GPIO calls and convert them to LGPIO calls. See: https://abyz.me.uk/lg/py_lgpio.html

Installation

Pre-requisites

Install package **python3-lgpio**

```
$ sudo apt install python3-lgpio
```

Don't include the "\$" sign in the command you enter.

Downloading GPIOconverter

Log into the Raspberry Pi Model 5 and clone the **GPIOconverter** software and run:

```
$ cd
$ git clone https://github.com/bobrathbone/GPIOconverter
```

Installation

Create a sub-directory called RPi in the directory where your GPIO code is installed. For example, for code in directory **/usr/share/radio**:

```
$ cd /usr/share/radio
$ mkdir RPi
```

Now copy **GPIO.py** to **/usr/share/radio**

```
$ cp <source>/GPIO.py /usr/share/radio/RPi/.
```

Enabling GPIO.py

For a Raspberry Pi model 5 only. For example, for code found in the `/usr/share/radio/` directory:

```
$ touch /usr/share/radio/RPi/__init__.py
```

The instruction above will cause the code using the GPIO calls to see directory RPi as a package.

For earlier models such as the 3B or 4B disable the package:

```
$ rm /usr/share/radio/RPi/__init__.py
```

Known Issues

GPIO.setwarnings call ignored

The call **GPIO.setwarnings(True|False)** is currently ignored.

Using GPIOconverter with Rotary Encoders

There is a lot of Python software for Rotary Encoders which was originally written by Ben Buxton in 2011. You may find that the Rotary Encoder is sluggish and misses a high number of turns. In the case of the Ben Buxton code this can be corrected by changing the **HALF_STEP** flag from **False** to **True**.

```
# Enable this to emit codes twice per step.  
# HALF_STEP == True: emits a code at 00 and 11  
# HALF_STEP == False: emits a code at 00 only  
HALF_STEP = True  
STATE_TAB = HALF_TAB if HALF_STEP else FULL_TAB
```

Fortunately the above change doesn't seem to affect operation when running the code using the standard RPi.GPIO calls on say a Raspberry Pi Model 4B.

Support

It is not possible to provide support for the standard GPIO library as literally hundreds of thousands of programs are using GPIO routines. The code is provided as is and without any warranties or "fit for purpose" etc. However, do contact bob@bobrahbone.com for any errors or missing features in **GPIOconverter on Raspberry Pi Model 5 only**.

Source files

The software is stored on **GitHub** at <https://github.com/bobrathbone/GPIOconverter> or is available as an archive (tar) for download from:

<https://bobrathbone.com/raspberrypi/packages/GPIOconverter.tar.gz>

The **GPIO.py** file uses the Python 3 LGPIO library (python3-lgpio) to handle calls to and from the RP1 i/o chip. More information on LGPIO see: https://abyz.me.uk/lg/py_lgpio.html

Python code examples will be found at: <https://abyz.me.uk/lg/examples.html#Python%20lgpio>

Appendix B Licences

The software and documentation for this project is released under the GNU General Public Licence.

The GNU General Public License (GNU GPL or GPL) is the most widely used free software license, which guarantees end users (individuals, organizations, companies) the freedoms to use, study, share (copy), and modify the software. Software that ensures that these rights are retained is called free software. The license was originally written by Richard Stallman of the Free Software Foundation (FSF) for the GNU project.

The GPL grants the recipients of a computer program the rights of the Free Software Definition and uses *copyleft* to ensure the freedoms are preserved whenever the work is distributed, even when the work is changed or added to. The GPL is a *copyleft* license, which means that derived works can only be distributed under the same license terms. This is in distinction to permissive free software licenses, of which the BSD licenses are the standard examples. GPL was the first *copyleft* license for general use.

See <http://www.gnu.org/licenses/#GPL> for further information on the GNU General Public License.

The licences for the source and documentation for this project are:

GNU General Public License.	See http://www.gnu.org/licenses/gpl.html
GNU AFFERO General Public License.	See http://www.gnu.org/licenses/agpl.html
GNU Free Documentation License.	See http://www.gnu.org/licenses/fdl.html

Acknowledgements

The people at <https://abyz.me.uk/lg/index.html>. No individuals are mentioned by name on their Web site but who ever they are, they have made an excellent product for General Purpose Input Output control on Linux Single Board Computers such as the Raspberry Pi Model 5 with extremely professional documentation. My compliments.

Glossary

GND Ground, 0 Volts

GPIO General Purpose IO (On the Raspberry Pi)

RP1 Input Output Controller Chip for Raspberry Pi Model 5 peripherals