

Raspberry Pi Internet Radio

A Beginners Guide



A simple guide to making an Internet radio with the Raspberry Pi

Bob Rathbone Computer Consultancy

www.bobrathbone.com

10 of October 2025

Radio Version 8.1

Contents

Chapter 1 - Introduction	1
Radio overview.....	1
Skills required.....	1
Front photograph.....	1
Chapter 2 - Hardware overview.....	2
Raspberry Pi computer	2
The HD44780U LCD display.....	2
Official RPi USB power supply.....	2
Arduino PCF8574 I2C backpack	3
SD Card.....	3
Enclosure.....	3
Cables and connectors	4
KY040 Rotary Encoders	5
The finished product.....	6
Chapter 3 - Wiring.....	7
Raspberry Pi 40-pin GPIO header	7
KY040 Rotary Encoder wiring.....	9
Parts list.....	9
Chapter 4 - Construction.....	10
Chapter 5 - System Software Installation	11
SD card creation using Raspberry Pi Imager	11
Creating the SD card	13
Useful tools	20
Finding the Raspberry Pi on a network using Fing.....	20
Bitvise and Putty	20
Booting the Raspberry Pi for the first time.....	21
Log into the Raspberry Pi for the first time	21
Logging in with the Raspberry Pi desktop.....	21
Logging in with SSH (Bitvise)	22
Updating the System Software	23
Update to the latest the packages.....	24
Chapter 6 - Radio software installation	25

Conventions used in this tutorial	25
Installing the Music player daemon.....	26
Installing the Radio Daemon.....	26
Radio program maintenance	30
Chapter 7 - Operation	32
Starting and stopping the radio	32
Radio operation	32
Menu operation	33
Playlist creation.....	34
The radio playlist.....	34
Creating media playlists	35
Playing media tracks from the USB stick.....	35
Chapter 8 - Troubleshooting	36
Boot problems.....	36
Newly created desktop version of Raspberry Pi OS will not boot	36
MPD fails to start	37
No output on LCD screen	37
Rotary encoders not working.....	38
No sound coming out of the on-board audio socket	39
MPD Logging	40
Radio program logging.....	40
Technical support.....	41
Chapter 9 - Licences, disclaimer and support.....	42
Licences.....	42
Disclaimer.....	42
Support	42
Acknowledgements and Copyrights	42
References	43
Glossary.....	43
Appendix A – Editing files with nano	44
Index.....	45


Figures

Figure 1 Raspberry PI Model 4B Computer	2
Figure 2 The HD44780U LCD display.....	2
Figure 3 Official USB power supply.....	2
Figure 4 Arduino PCF8574 I2C backpack.....	3
Figure 5 16 MB micro-SD card	3
Figure 6 ABS enclosure.....	3
Figure 7 Female to female connector cable	4
Figure 8 Single Inline Connectors (SIL).....	4
Figure 9 Female SIL connector	4
Figure 10 PC loud-speakers.....	4
Figure 11 KY-040 Rotary encoders.....	5
Figure 12 KY040 Missing 10K resistor	5
Figure 13 Radio Knobs	5
Figure 14 Finished Radio from Joaquin Perez.....	6
Figure 15 Fun radio using an old toaster (Courtesy Robert Knight)	6
Figure 16 GPIO Numbers.....	7
Figure 17 Wire LCD pin 1 (GND) and 5 (RW) together.....	8
Figure 18 The I2C backpack mounted on the back of the LCD	9
Figure 19 KY-040 Circuit Diagram	9
Figure 20 Soldering the LCD display header	10
Figure 21 LCD display header rear view.....	10
Figure 22 Wiring the rotary encoders.....	10
Figure 23 Windows Laptop with SD card reader	11
Figure 24 USB SD Card reader.....	11
Figure 25 Raspberry Pi desktop	21
Figure 26 Raspberry Pi Command Line	23
Figure 27 The radio-config menu.....	30
Figure 193 The additional radio software components menu	30
Figure 27 SD card boot partition	36
Figure 28 Adjusting the contrast.....	38

Tables

Table 1 Radio Rotary Encoder Wiring	8
Table 2 I2C Backpack connections	8
Table 3 Parts list.....	9
Table 4 Rotary Encoder Knob Operation	33

Chapter 1 - Introduction

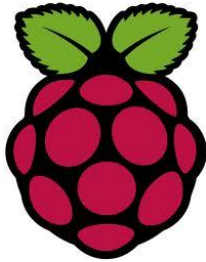

This guide describes how to create one of the most popular Internet Radios using the Raspberry Pi educational computer (RPI). This guide provides the very basics of how to construct a simple Internet radio and install the radio software.

The source and basic construction details are available from the following web site:

https://bobrathbone.com/raspberrypi/pi_internet_radio.html

The following sections describe how to construct a simple Raspberry Pi Internet radio with an LCD display and a volume and tuning knob.

The information in this guide has been extracted from the **Raspberry Pi Internet Radio Constructors Manual** which is available on the above web site or from the **docs** directory at <https://github.com/bobrathbone/piradio6>.

The full constructors guide is very comprehensive document with many different designs and extra features such as support for an IR remote control, Spotify etc. It is over 370 pages long and may be quite overwhelming for a beginner at first. For this reason, a single design has been extracted from the constructor's manual to provide this simple guide for beginners.

Radio overview

This project is for the construction of a simple Internet radio with a 2 or 4-line LCD display connected with an Arduino PCF8574 I2C backpack and two rotary encoders for volume control and channel/track change. The software is provided by the **radiod** (Radio Daemon) program available as a Debian package from the Bob Rathbone web site. The **radiod** software interfaces to the Music Player Daemon (MPD) from <https://www.musicpd.org>.

Skills required

The project is designed such that anyone from young to old can create their own radio. However, some soldering skills are required which limits the project to older children. It is necessary to solder a 16-pin male header to the LCD display card and also to add one wire to two pins on the display card. All other connections are push fit using jumper/ribbon cables.

If you have limited or no soldering skills then perhaps ask for help from someone who has these skills. If this is not possible, all is not lost, as the main **Raspberry Pi Internet radio constructors manual** on the Bob Rathbone web site shows several other solutions which do not require any soldering skills at all.

Front photograph

The photograph on the front cover is of a Raspberry Pi Internet Radio built thanks to Joaquin Perez. He is using a pair of PC speakers to amplify the audio output from

Chapter 2 - Hardware overview

The principal hardware required to build the radio consists of the following components:

- A Raspberry Pi model 3B or 4B (other models can also be used except the Raspberry Pi 5)
- A 16GByte micro-SD card with Raspberry Pi OS (Bookworm)
- An Official micro-USB 5-Volt 2.5A power adapter
- An LCD HD44780U 2x16-character or 4x20-character display
- An Adafruit PCF8574 I2C backpack
- Two KY040 rotary encoders
- Female to female ribbon cable

Raspberry Pi computer

The **Raspberry Pi** is a credit-card-sized single-board computer developed in the United Kingdom by the [Raspberry Pi Foundation](https://www.raspberrypi.org/). Use the Model 4B. The **Raspberry Pi Model 5** is not supported yet!



Figure 1 Raspberry Pi Model 4B Computer

The HD44780U LCD display



Figure 2 The HD44780U LCD display

The HD44780U LCD interface is an industry standard interface for many LCD displays. These can come in various sizes.

This project can use either a 2x16 or 4x20 character LCD display and is software configurable during installation.

Official RPi USB power supply



Figure 3 Official USB power supply

The USB supply has 100-240v input, 5.1V 2.5A output. There are two types of USB connector:

- USB C for Raspberry Pi model 4B
- USB Micro for Raspberry Pi model 3B/2B

They can be ordered for various mains sockets, for example UK, USA, European or Australasia. Make sure that you order the correct one for your Raspberry Pi.

Note: Telephone chargers are inadequate.

Arduino PCF8574 I2C backpack

This type of backpack is popular with Arduino users. It interfaces the Raspberry Pi using the **I2C** protocol. **I2C** a communication protocol developed by Philips Semiconductors.

In this application, it transfers of data between the Raspberry Pi and the LCD display using just two signal wires. The device address is usually hex 0x27. Another manufacture may use hex 0x37. This is configurable in the radio configuration program.



Figure 4 Arduino PCF8574 I2C backpack

The wiring From top to bottom is:

1. GND (0 volts) – GPIO header pin 6
2. VCC +5 volts – GPIO header pin 2
3. SDA I2C Data – GPIO 2 (pin 3)
4. SCL I2C Clock – GPIO 3 (pin 5)

The blue potentiometer on the right is the contrast adjustment.

SD Card



Figure 5 16 MB micro-SD card

The Raspberry Pi boots from a micro-SD card with the Raspberry Pi OS (Formerly Raspbian) burnt onto it. These come with or without a micro-SDHC adaptor. Various suppliers supply these with pre-loaded with the operating system.

A 16 or 32MB Class 10 micro-SD card is recommended for this project. A Class 10 SD card is a memory card that can transfer data at a minimum rate of 10 megabytes per second (MB/s).

Enclosure



Figure 6 ABS enclosure

A suitable case to house the radio is required. Typically, an ABS enclosure is very suitable solution. These come in various sizes and are made of plastic and are easy to work.

However, any other solution may be used but make sure that the enclosure has adequate ventilation holes to allow heat to escape.

Cables and connectors



Figure 7 Female to female connector cable

The female-to-female ribbon cable is used to connect the LCD display KY040 rotary encoders to the Raspberry Pi 40 pin GPIO header.

The cable can be separated into two smaller five-way ribbon cables for the rotary encoders and a four-way ribbon cable for the I2C backpack and LCD display.

This type of cable is available from various Raspberry Pi and Arduino suppliers.

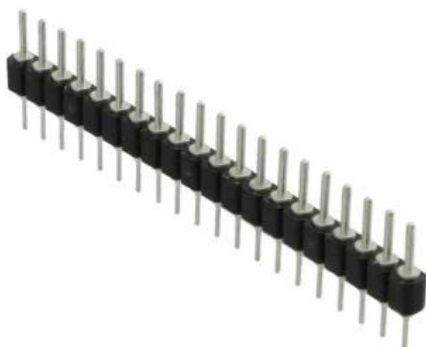


Figure 8 Single Inline Connectors (SIL)

This Single Inline Male Connector (SIL) is needed to be soldered onto the back of the LCD board. This will normally have 16 or 18 holes to take the connector. Only the first sixteen are used and then only eight of these are actually connected.

Buy the 'snap-off' type so that the correct length is easily attained.



Figure 9 Female SIL connector

The Single Inline Female Connector (SIL) is soldered onto the back of Arduino backpack so that it connects to LCD.

Again, buy the 'snap-off' type so that the correct length is easily attained.



Figure 10 PC loud-speakers

Any inexpensive PC speakers with either standard 3.5mm jack plug or USB input.

KY040 Rotary Encoders

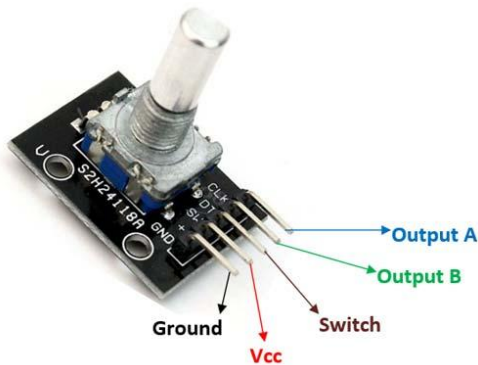


Figure 11 KY-040 Rotary encoders



Figure 12 KY040 Missing 10K resistor

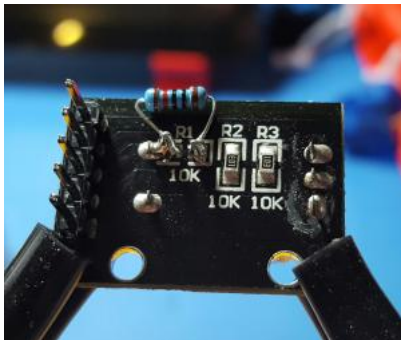


Figure 13 Radio Knobs

These cost-effective Rotary Encoders from HandsOn Technology originally designed for use with Arduino are now being used more and more by constructors. The KY-040 Rotary Encoder specification shows that these are powered by +5V to the VCC pin.

However, the Raspberry Pi uses a +3.3V supply and cannot tolerate +5V on the GPIO's so only connect VCC to +3.3V. These encoders work fine with VCC connected to +3.3V with this project.

Two encoders are required, one for the volume control and one for the station/track selector.

More recently manufacturers have been supplying KY040 encoders with the R1 10K pull-up resistor for the push-button missing. It is uncertain why suppliers aren't including this resistor. For the push button feature to work with these units, the missing 10K ohm resistor needs to be added or configure the pull-up resistors in with the Radio Configuration program described later. Try to order KY040 encoders with all three resistors fitted.

If you have the soldering skills, you can add a 10K resistor across the R1 pads. If you don't have the ability to use a soldering iron then don't worry as the pull-up resistors can be configured later with software.



You will need two standard radio knobs for the above Rotary Encoders. There is a wide selection of these to be found on the Internet. Ones with a grub screw are better than the push-fit type.

The finished product

A fine example of a Raspberry Pi Internet radio built by constructor Joaquin Perez using the design in this manual.



Figure 14 Finished Radio from Joaquin Perez

REMEMBER TO HAVE FUN DOING THIS PROJECT!



Figure 15 Fun radio using an old toaster (Courtesy Robert Knight)

Chapter 3 - Wiring

Raspberry Pi 40-pin GPIO header

The following shows the pin outs for the GPIO for models 2B, 3B and 4B
See: http://elinux.org/RPi_Low-level_peripherals. For more details.

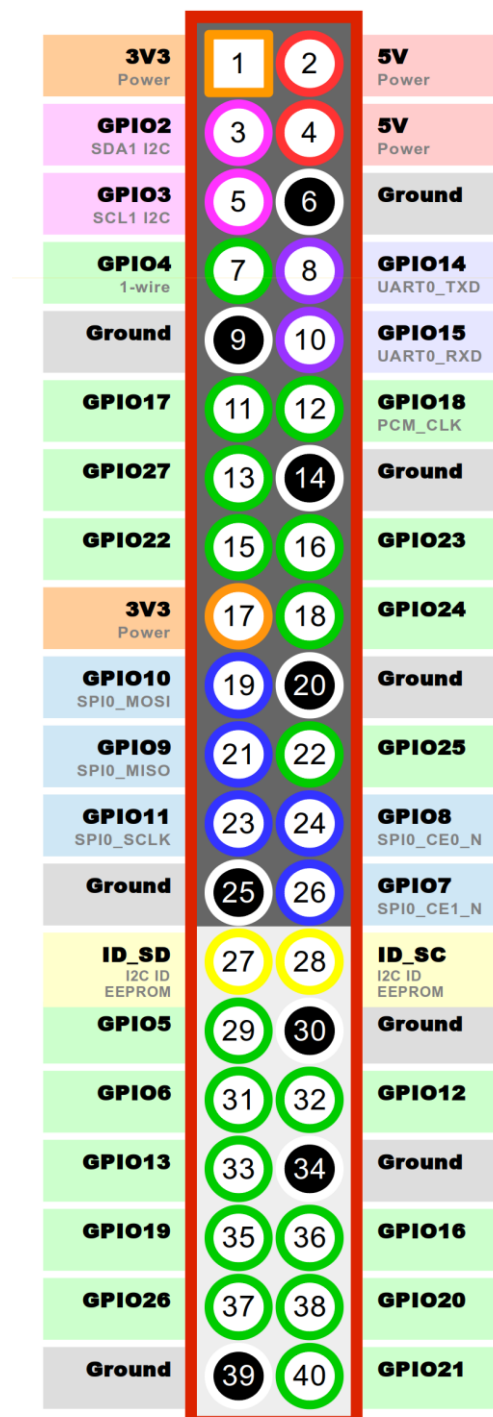


Figure 16 GPIO Numbers

The above diagram shows the GPIO 40 pin header viewed from above.

The following table shows how to wire up the rotary encoders.

Table 1 Radio Rotary Encoder Wiring

GPIO Pin	Description	Radio Function	Volume Rotary Encoder	Channel Rotary Encoder
1	3V3	+3.3V supply	+ (VCC 3.3V)	
6	GND	Zero volts	Common (GND)	
7	GPIO 4	Mute volume	Knob Switch (SW)	
8	GPIO 14	Volume up/down	Output A (CLK)	
10	GPIO 15	Volume up/down	Output B (DT)	
17	3V3	+3.3V supply		+ (VCC 3.3V)
9	GND	Zero volts		Common (GND)
11	GPIO 17	Menu switch		Knob Switch (SW)
16	GPIO 23	Channel up/down		Output A (CLK)
18	GPIO 24	Channel up/down		Output B (DT)

Note: Column one shows physical pin numbers.

Table 2 I2C Backpack connections

Backpack	Label	Description	GPIO	Physical Pin
1	GND	Zero volts	-	14
2	VCC	+5V supply	-	4
3	SDA	I2C Data	GPIO 2	3
4	SCL	I2C Clock	GPIO 3	5

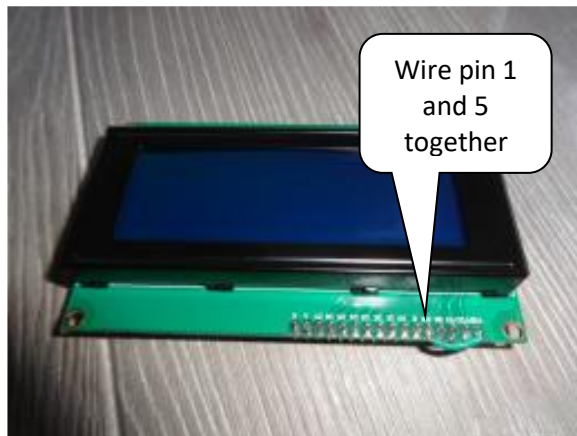


Figure 17 Wire LCD pin 1 (GND) and 5 (RW) together



The Read/Write (RW) pin 5 must be connected to pin 1 (0V). It is very important that this pin is grounded! If pin 5 is not grounded it will damage the Raspberry Pi. Always wire LCD pin 5 and 1 directly together. Do not rely on grounding pin 5 with a GND wire on the GPIO connector. If this wire drops off then the LCD data lines will be put into write mode putting +5V on the GPIO pins which will probably cause irreparable damage to the Raspberry Pi.



Figure 18 The I2C backpack mounted on the back of the LCD

The diagram on the left shows the Arduino I2C backpack mounted on the back of a 2x16 LCD using the SIL connectors.

The four pins on the right are for the power supply and I2C connections.

KY040 Rotary Encoder wiring

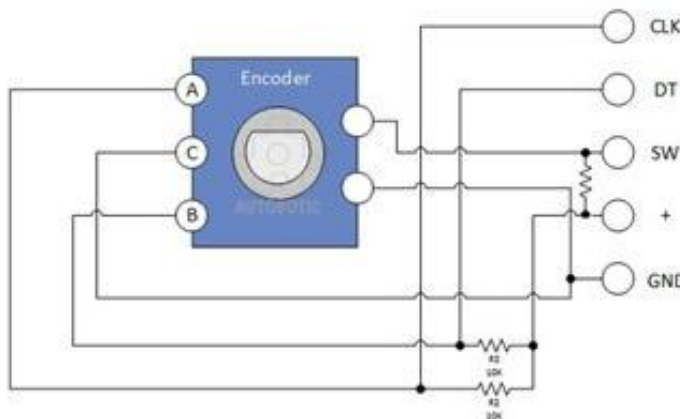


Figure 19 KY-040 Circuit Diagram

The specification shows the rotary encoders are labelled CLK(Clock), DT(Data) and + (VCC) however it is more usual to label these A, B and C. It has its own three 10K pull-up resistors.

Connect + to the +3.3V supply. Do **not** connect to +5V despite the fact that the KY040 specification states this.

Parts list

The following table shows the parts list for a basic Raspberry Pi Internet Radio. This list is for the version using the HD44780U LCD connected to the Raspberry Pi via an I2C backpack.

Table 3 Parts list

Qty	Part	Supplier
1	Raspberry Pi 4B Computer	PiHut
1	16 or 32 GByte Micro-SD Card	Any PC or Photographic supplier
1	Raspberry Pi Bookworm OS	Raspberry Pi foundation downloads
1	LCD HD44780U 2 x 16 Display	PiHut
1	Arduino PCF8574 I2C backpack	PiHut
2	KY040 Rotary encoders	PiHut
1	Official Raspberry Pi +5V 2.5A power supply	PiHut
2	Radio Knobs	PiHut
1	Set of PC speakers (Either USB or 3.5mm jack plug)	Any PC supplier

Chapter 4 - Construction

The main construction consists of soldering the SIL male header onto the LED board and wiring up the rotary encoders. There are numerous soldering tutorials on the Internet to help with this task.

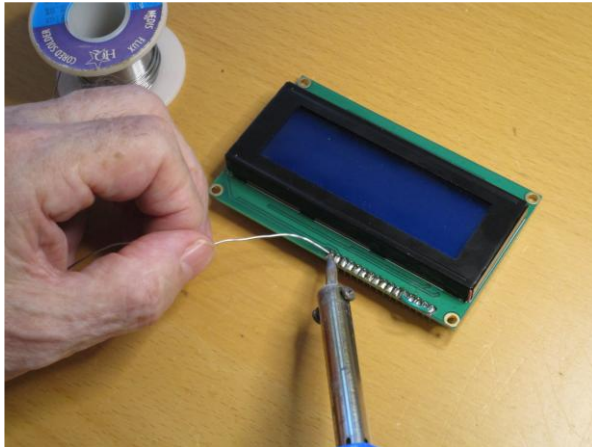


Figure 20 Soldering the LCD display header

The 16/18 pin SIL male header has to be soldered onto the LCD board so that the longer pins protrude out of the back of the LCD card.

Use a fine tipped soldering iron. Press the hot soldering iron onto the base of the pin to be soldered and then apply the solder. Once sufficient solder has melted onto the joint take away the solder wire but leave the soldering iron for two to three seconds to allow it to properly flow around the joint.

Do not apply too much solder to the joint

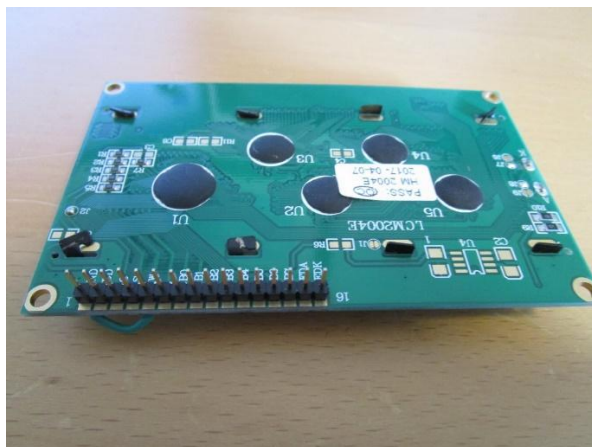


Figure 21 LCD display header rear view

The illustration on the left shows the 16-pin header mounted on the LCD card. Some LCDs have 18 pin headers to support a RGB backlight. Refer to the main Raspberry Pi Internet Radio Constructors manual for more information on these types of display.

Note the very important green jumper wire between pin 1 and 5 to hold the RW (Read/Write) line low. Do not connect the LCD without this wire in place or you will damage the Raspberry Pi.

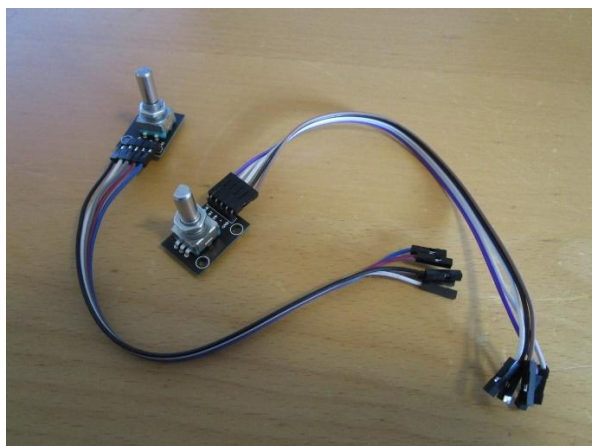


Figure 22 Wiring the rotary encoders

To wire up the KY040 rotary encoders, tear off five wires from the female-to-female ribbon cable.

Then gently push the cable one wire at a time onto the pins on the KY040 rotary encoder. They are quite stiff so take care not to damage the KY040 pins.

Chapter 5 - System Software Installation

SD card creation using Raspberry Pi Imager

Use at least a 16 Gigabyte Card for **Bookworm Lite** or 32 Gigabyte for **Bookworm Desktop/Full**. Create an SD card running the **32-bit** version of **Raspberry Pi Bookworm**. Do not use the 64-bit software as it has had limited testing. Only select the Lite version if you do not want a desktop.

There are a couple of ways of doing this, but in this tutorial, we are using the **Raspberry Pi Imager** software to create the SD card.

You will need a Windows PC or Laptop with a SD Card Reader as shown in Figure 23 below.



Figure 23 Windows Laptop with SD card reader




Figure 24 USB SD Card reader

If your PC does not have an SD Card Reader then you can use a USB SD Card reader as shown on the left. The Raspberry Pi Imager software can then be used to write the Raspberry Pi OS to SD Card.

An Apple Mac PC can also be used but will require that you download the Mac OS version of the software.

First insert the SD card into the SD card reader on your PC.

When you insert an SD Card that already has an OS other than Windows you may see the following:

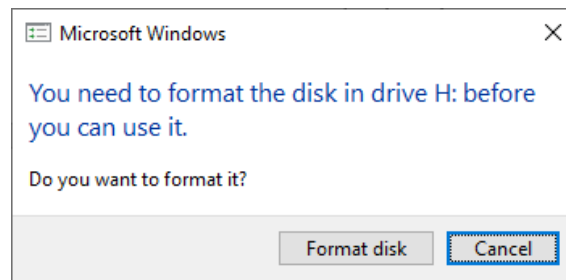

Ignore this message and close the above dialogue box. It may occur a number of times. There are two architectures supported in this version of the radio software:


- **64-Bit** for either **Bookworm** Operating Systems
- **64-Bit** for **Trixie** Operating System (Beta version of the Radio software only)




Note 1: If you chose the Raspberry Pi **Model 5** then version **1.9.6** onwards of the **Raspberry Pi** imager will only offer the **Trixie** Operating System and not **Bookworm**. Even if you are installing on a **Model 5** select the **4B**. This will allow you to select **Bookworm**. The **Raspberry Pi** with **Trixie** currently is in Beta testing. If you elect to use **Trixie**, you do so at your own risk.

Using a Web browser, go to <https://www.raspberrypi.org/software/> Download and install the **Raspberry Pi Imager** software for your PC Operating System (Normally Windows or Mac OS). Once installed you will see the Raspberry Pi Imager Icon on your desk-top. Click on the desktop Imager icon.

Insert the SD card into your card reader. Ignore any Windows messages to format the card as it isn't necessary. Click on "Choose Device"

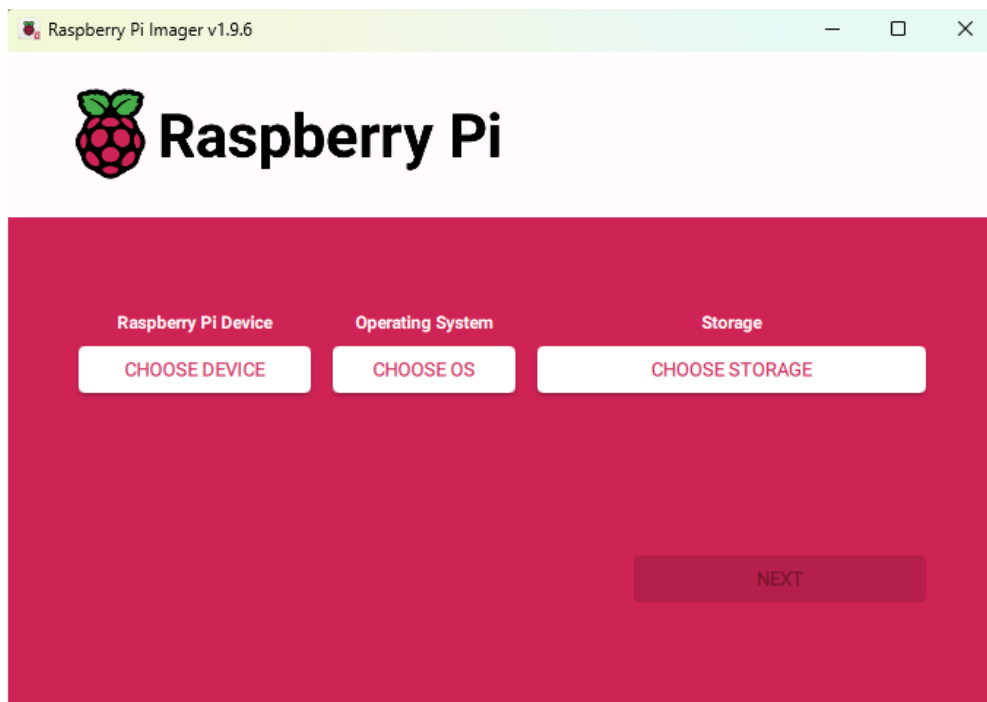


Insert the SD card into your card reader. Ignore any Windows messages to format the card as it isn't necessary. Click on "Choose Device"

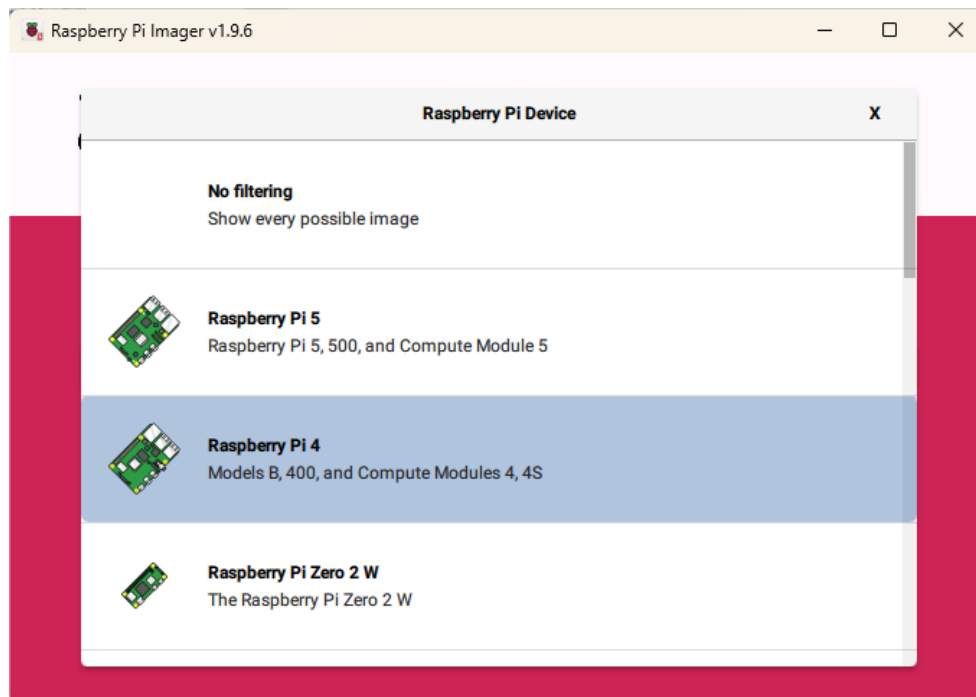


Select your device from the dropdown list. The program will then show the correct OS choices for your device. However, as **Trixie OS** is in Beta testing, select Raspberry Pi 4B even if you are installing on a **Model 5** so that you can select the **Bookworm OS**.

Creating the SD card


The OS versions for your RPi will be displayed. Select **Raspberry Pi OS (other)**

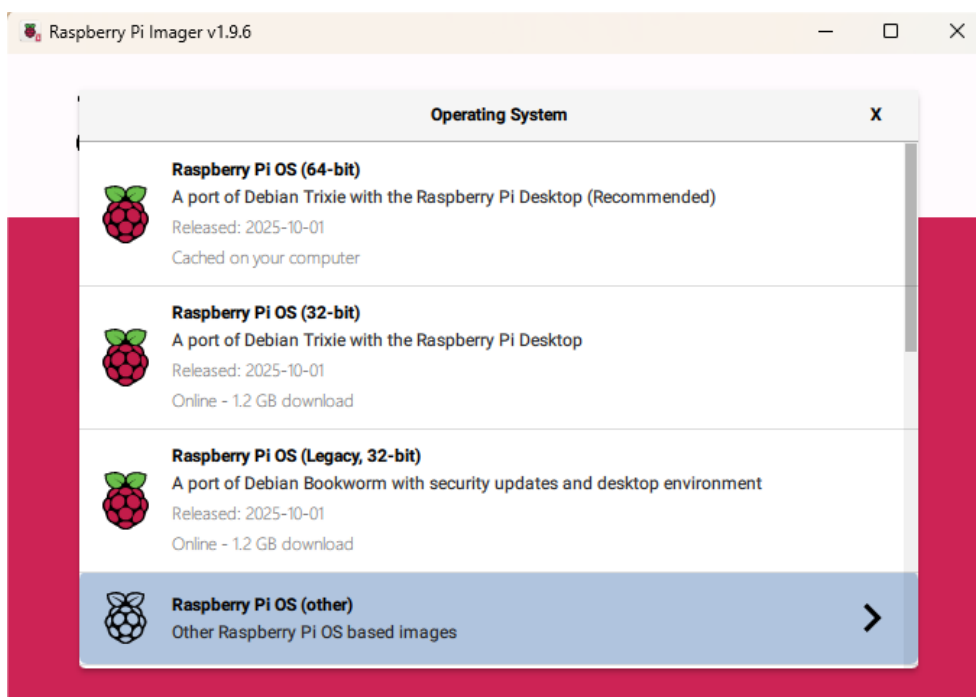

On the next screen scroll down to **Raspberry Pi OS (Legacy 64-bit)** which will select **Bookworm**.

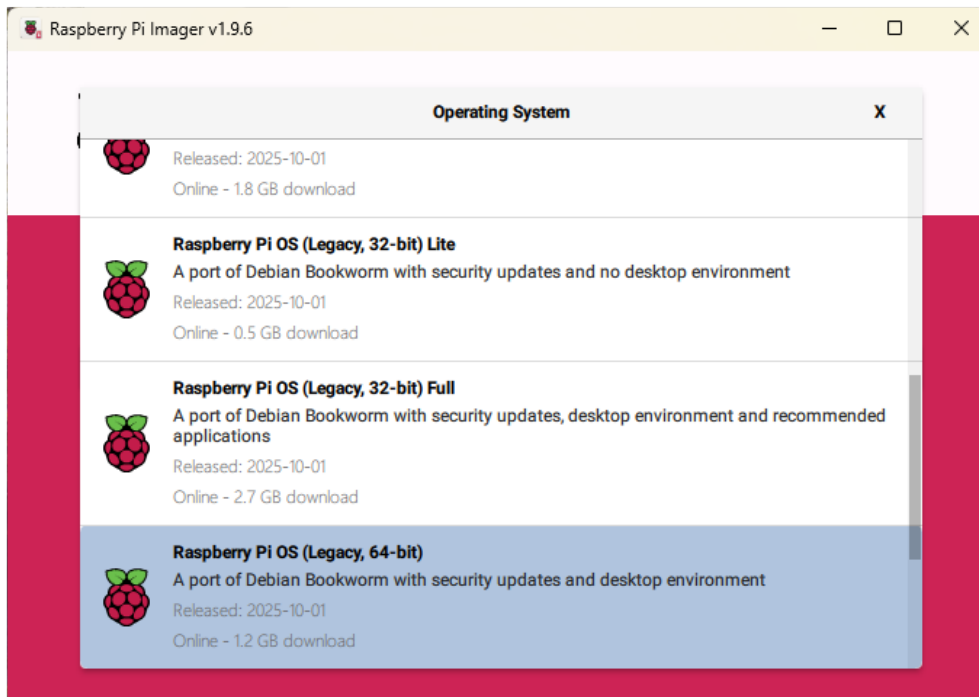

The program will return to the first screen. Select **CHOOSE STORAGE**. This will display the available USB devices. The actual drive letter shown will have been assigned by your PC. You should see something like the following. In this example it is drive **H:**. Select your SD card. The imager software should only display USB devices.

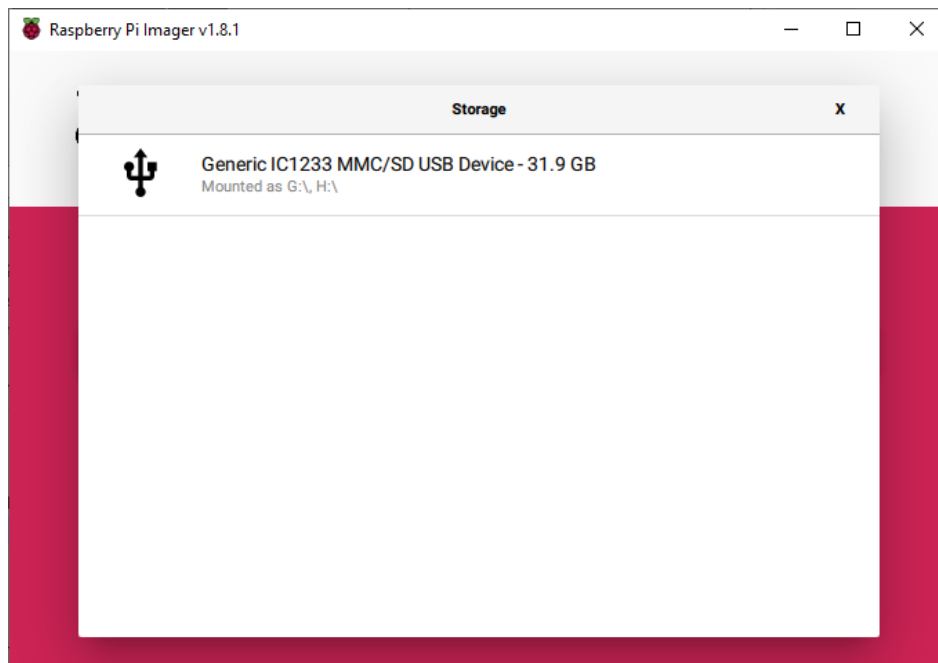


Note: If there are multiple choices of USB drives make sure that you select the correct one. Do not proceed until you are absolutely sure you are selecting the correct drive and not for example a USB backup drive.




Note: Do **not** press write at this stage as you need to set up SSH (Secure Shell login) and your Wi-Fi identifier (SSID) and password and other optional changes.


Once both the OS and USB drive have been selected the following screen is displayed:

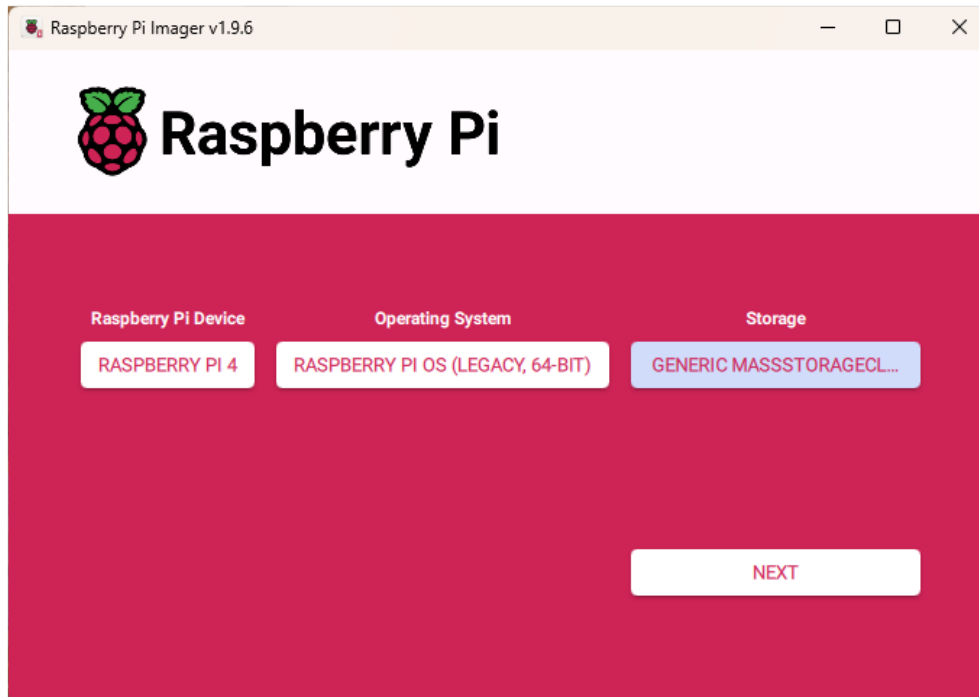

To select the customisation menu, press either the configuration icon (Gear wheel) in the bottom right or **CTRL, Shift** and **X** keys together. Clicking on WRITE will ask if you want to edit the parameters. The following Advanced Options screen will be displayed:

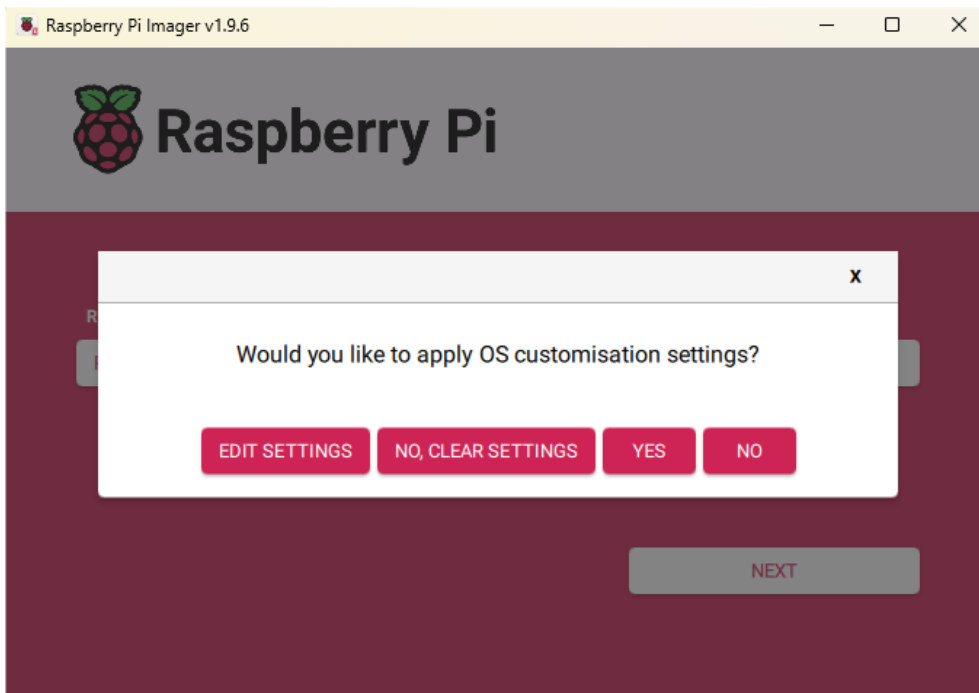

The following screen will be displayed. Initially the screen will show the **General** tab. Enter a hostname (such as **piradio**) and a username and password for user **pi**. You can change the username from **pi** but it is recommended to use user **pi**. Make a note of the username and password.

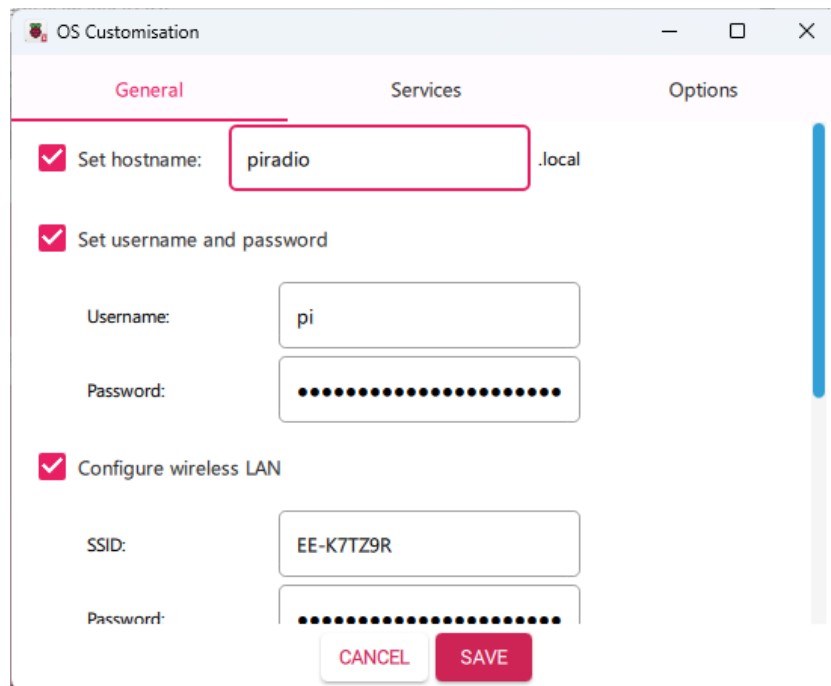


The image shows a window titled "OS Customisation" with three tabs: "General", "Services", and "Options". The "General" tab is selected. It contains the following fields and options:

- ☒ Set hostname: .local
- ☒ Set username and password
 - Username:
 - Password:
- ☒ Configure wireless LAN
 - SSID:
 - Password:

At the bottom are "CANCEL" and "SAVE" buttons.

Scroll down to the bottom of the screen. Enter the **SSID** and **Password** of your home router

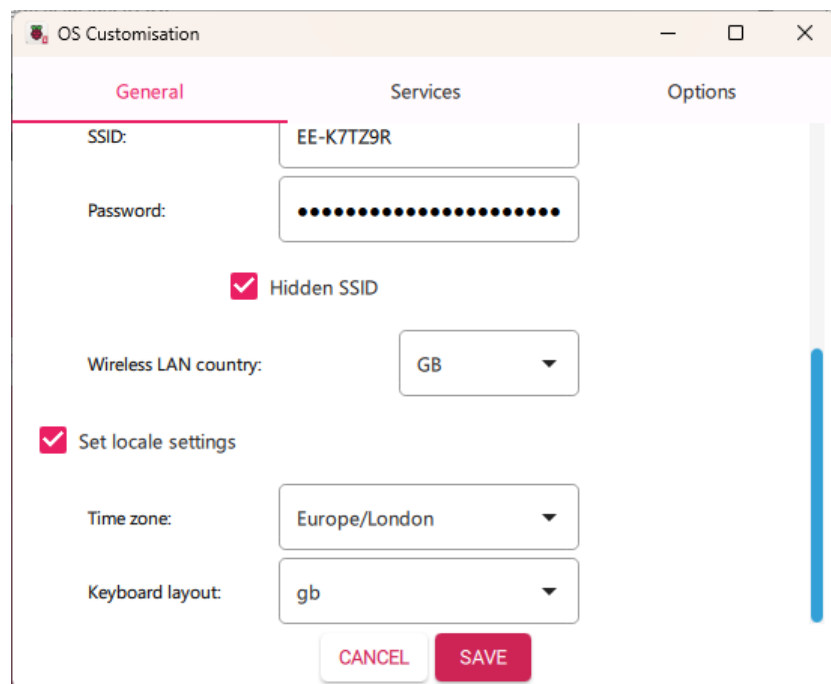


The image shows the same "OS Customisation" window, but scrolled down to show more options. The "General" tab is still selected. It contains the following fields and options:

- SSID:
- Password:
- ☒ Hidden SSID
- Wireless LAN country:
- ☒ Set locale settings
 - Time zone:
 - Keyboard layout:

At the bottom are "CANCEL" and "SAVE" buttons.


Set the Time Zone two-letter country code for your keyboard, for example GB (Great Britain), DE (Germany) or NL(Netherlands). It is required for correct set-up of Wi-Fi.

Next click on the **Services** tab. “Enable SSH” should be ticked and “Use password authentication” should be selected. Unless you want to use **Public-Key** authentication then press **Save**.

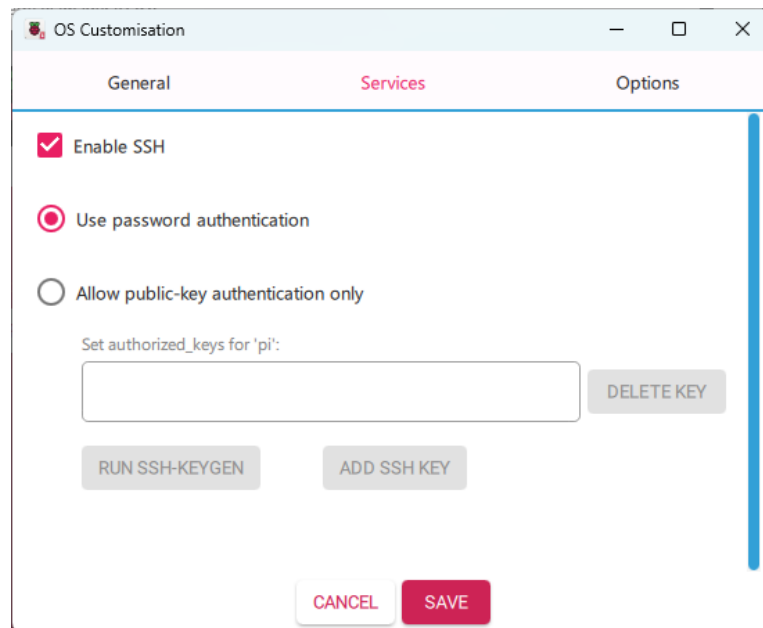


Important: Enable the SSH option “Use password authentication”. If you select “Allow public-key authentication only” you will have to set up SSH keys between the PC and the RPi which is more complicated and not covered yet in this manual.

Finally select the **OPTIONS** tab:

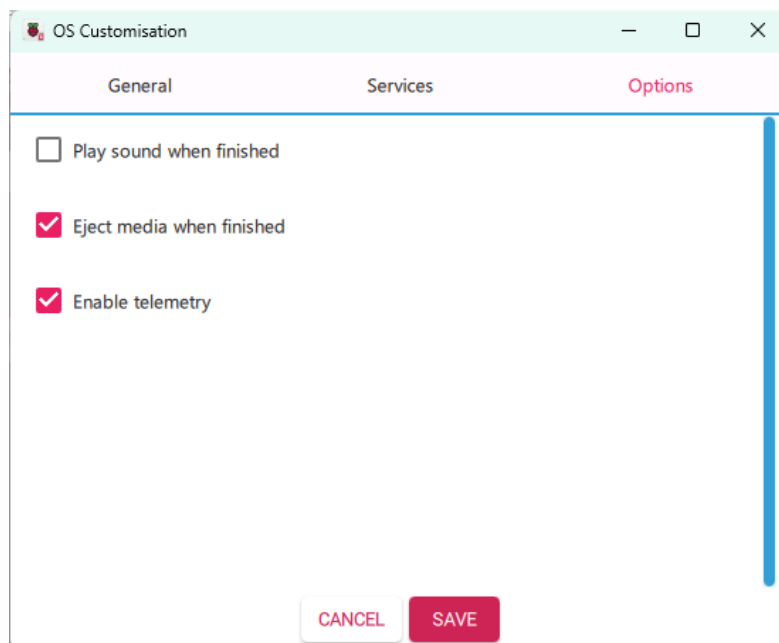


Click on “Save” followed by “Write” to continue.

Click “YES” to continue with writing to the new SD card.

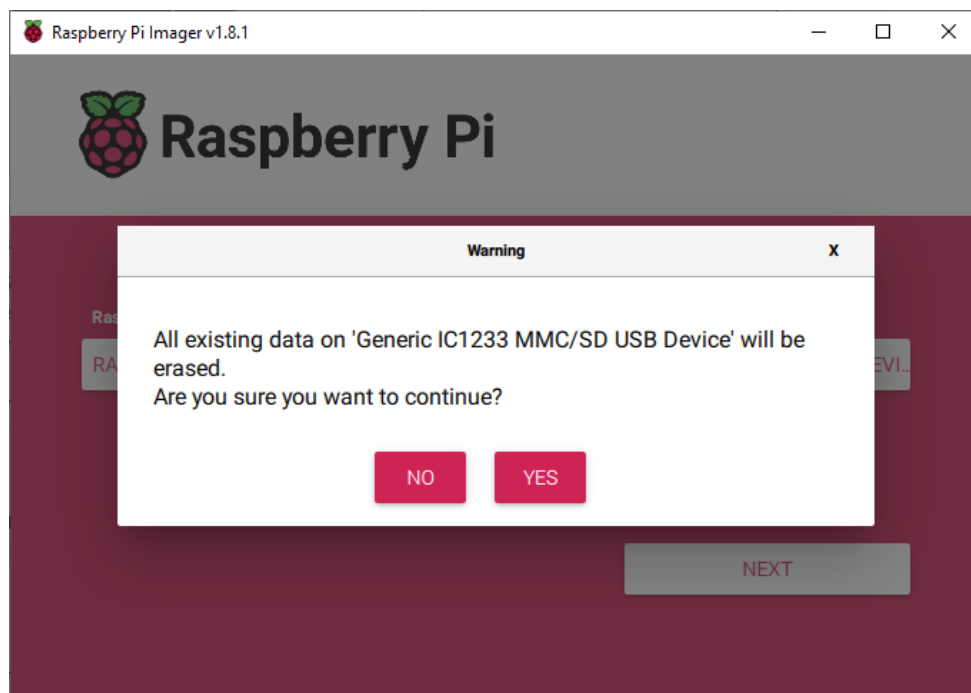


This is the point of no return. Pressing “YES” will continue to overwrite all existing on your USB device and replace it with the Operating System you selected.

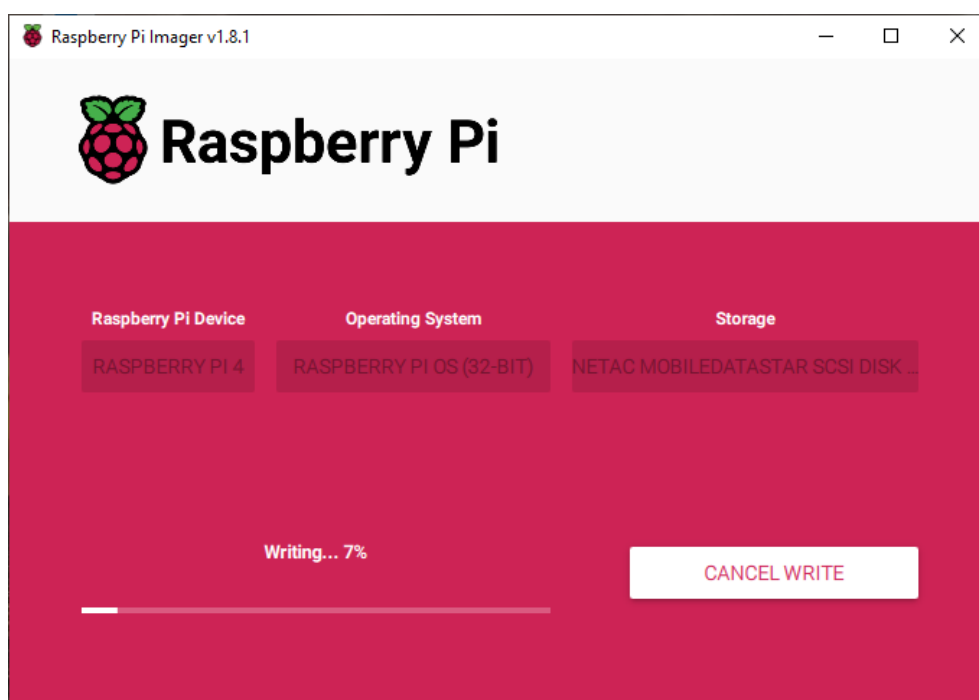

This will take about 5 minutes to complete including the verification stage.


When the write operation is complete you will see the following:

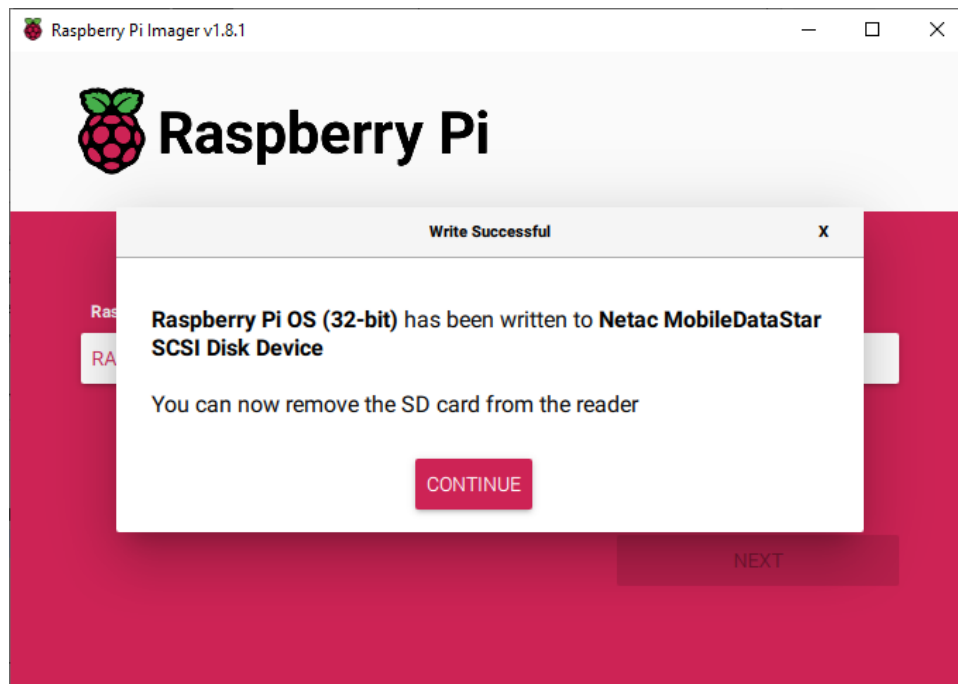

Press Remove the SD card from your computer and insert it into the Raspberry Pi (Remove power from the Raspberry Pi first). Press CONTINUE. The program will return to the first screen. Close the program by clicking X in the top right-hand corner.

Useful tools

Finding the Raspberry Pi on a network using Fing

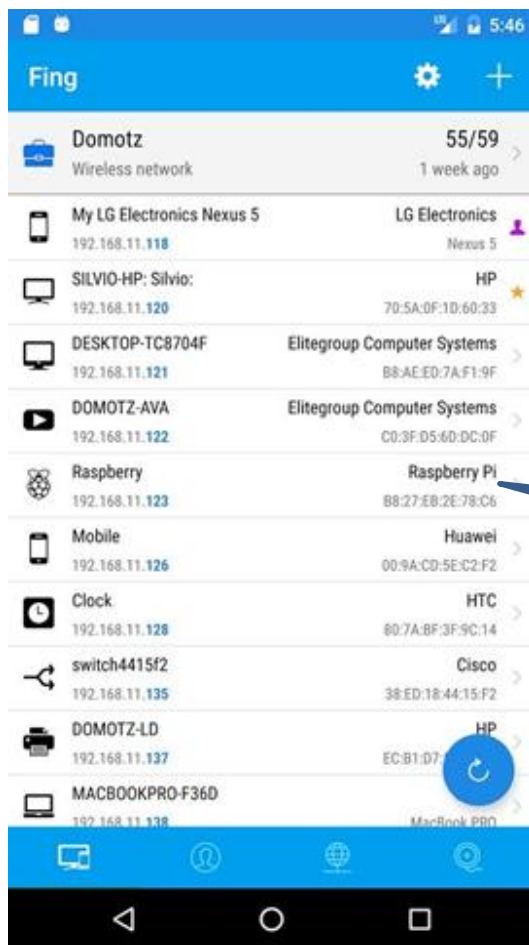

The **Fing** App is a free network toolkit and scanner for iOS (Apple) and Android. It will discover all the devices on your network, identify intruders and can also run Internet speed tests.

In this context it is very useful for finding out the IP address of any Raspberry Pi connected to the network. It will only see it of course once the Raspberry Pi has been set up first on the Wireless Network or hard-wired in. It scans both Wireless and hard-wired Ethernet devices.


Note: If you used the name 'piradio' then that is what will be displayed instead of raspberrypi.

Once detected it is possible to SSH to the Raspberry Pi using **Bitvise** or **Putty**.

See <https://www.fing.com/products/fing-app> for further information.

There are also a number of Wi-Fi scanner Apps that also display the devices connected to the local LAN which can be used instead of **Fing**.

Bitvise and Putty

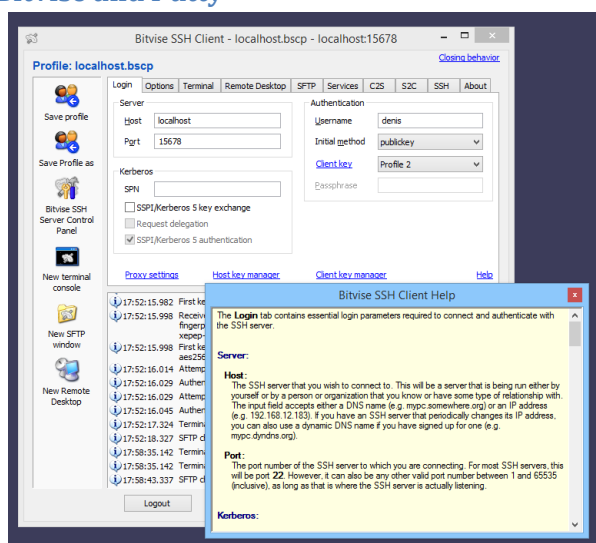

Bitvise is a free SSH client available for Windows or Mac to connect SSH server enabled Unix or Linux operating systems. It is a graphical based SSH client just like Putty with more features. It supports the File Transfer using SFTP Secure File Transfer Protocol). Once installed you can easily make a terminal connection to the Raspberry Pi using the IP address discovered by Fing above as well as easily transferring files.

See <https://www.bitvise.com/ssh-client> for more information.

Booting the Raspberry Pi for the first time

Power up the Raspberry Pi. The first boot will take a little longer as there are a few jobs that the OS must carry out, such as re-sizing the file system on the SD card.




BOOT PROBLEMS: If the Raspberry Pi will not boot up the first time see the section called *Boot problems* on page 36.

Log into the Raspberry Pi for the first time

There are two ways of logging into the Raspberry Pi:

1. Using the graphical Linux Windows desktop
2. Using SSH to log into the RPi over the network

Logging in with the Raspberry Pi desktop

If you installed the OS with the Linux desktop you will need an HDMI monitor, a USB keyboard and mouse. Boot up the Raspberry Pi with the new SD card with the **Raspberry Pi** Operating System (OS). If you have used the Desktop (instead of **Bookworm Lite**) then a graphical desktop will be displayed. Start a terminal session by clicking on the black terminal icon  on the top left of the screen to the left of the "Welcome" message. With **Raspberry Pi Lite** only a log in prompt will be displayed. In such a case log into the Raspberry Pi as user **pi** and using the password **raspberrypi** or the password you used when creating the SD card. Alternatively log in using SSH (See following section).

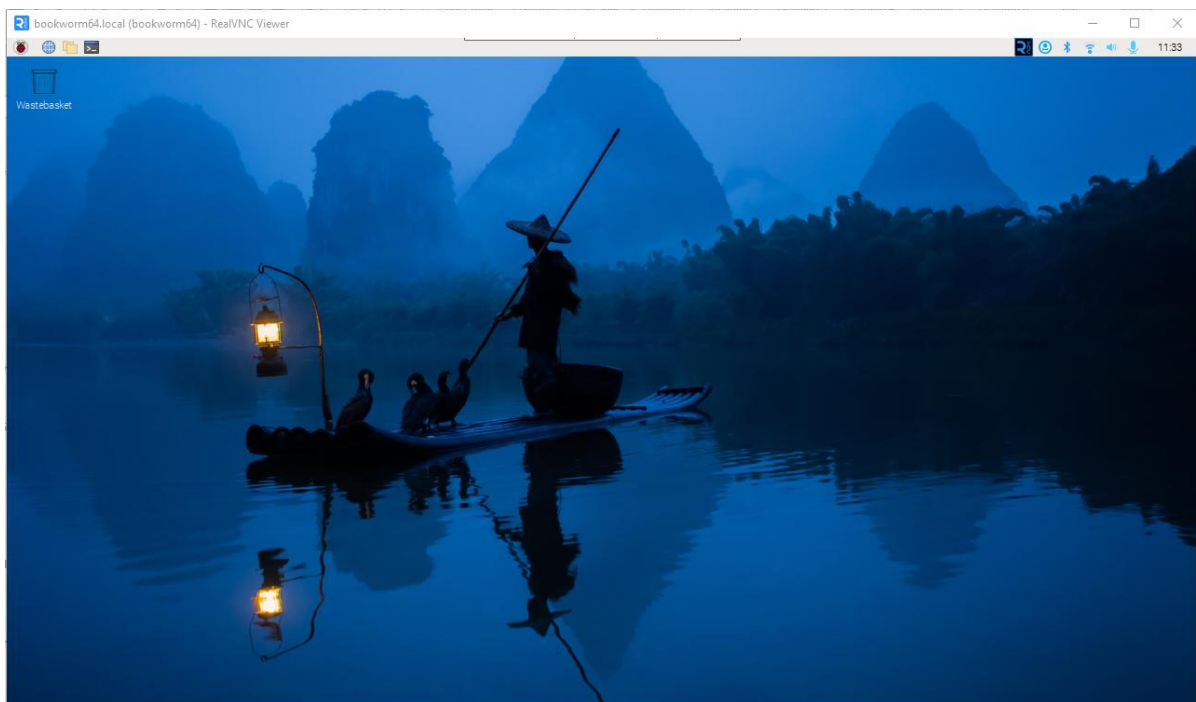


Figure 25 Raspberry Pi desktop


If you created the SD card with the **Lite** version of the OS then you will not see a desktop. Instead, you will see a terminal session which will allow you to carry out the next steps of the installation.

Logging in with SSH (Bitvise)

If you don't have a USB keyboard, mouse and screen then you can log into the RPi using the Bitvise or Putty utility running on a Personal Computer. Run the **Bitvise** interface and using **Fing** to find the IP address of the Raspberry Pi as shown in the section Finding the Raspberry Pi on a network using Fing on page 20. Enter the IP address from Fing into the Host field (192.168.1.56 in this example). Also enter the user name **pi** and the password you set up.




Note: You can also use the host name of the Raspberry Pi instead of its IP address. If you set the SD card up according to the instructions shown earlier. For example if the hostname was “raspberrypi” then try the name **raspberrypi** first. If that doesn't work then try **raspberrypi.lan**, **raspberrypi.local** or **raspberrypi.home** in the host field. If the hostname was “piradio” then try the names **piradio**, **piradio.lan**, **piradio.local** or **piradio.home**. If none of these work just use the IP address.

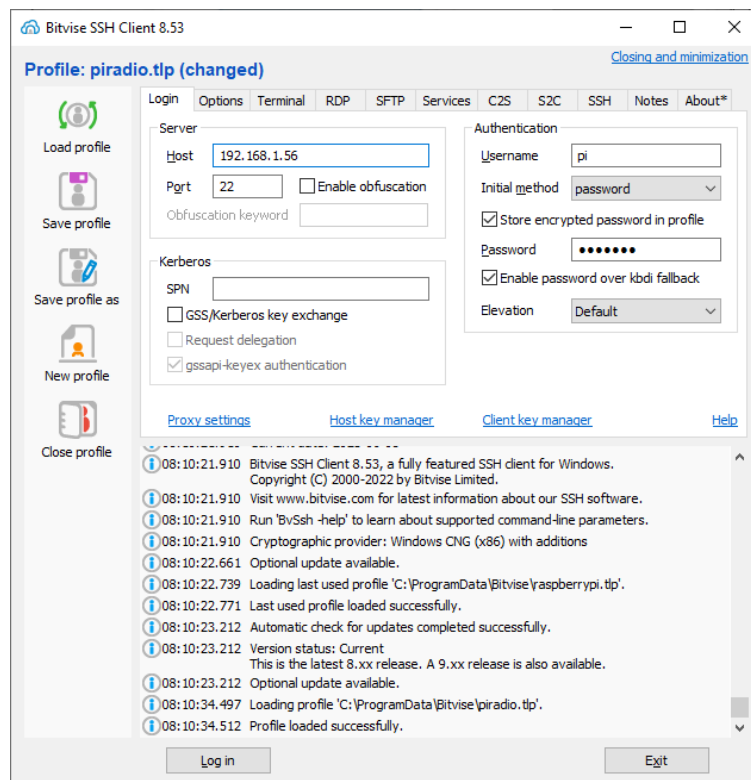

Updating the System Software

Log into the Raspberry Pi using **Bitvise** or **Putty** or if booting up using a keyboard mouse and HDMI monitor or TV run the terminal program (top left black icon).

If logging in using **Bitvise** you will need to know the IP address of the Raspberry Pi which can be found using **Fing**. See *Finding the Raspberry Pi on a network using Fing* on page 20. You can also try using **piradio**, **piradio.local** or **piradio.home** or **piradio.lan** as the hostname. The correct extension (local,home,lan etc.) will depend upon your router.

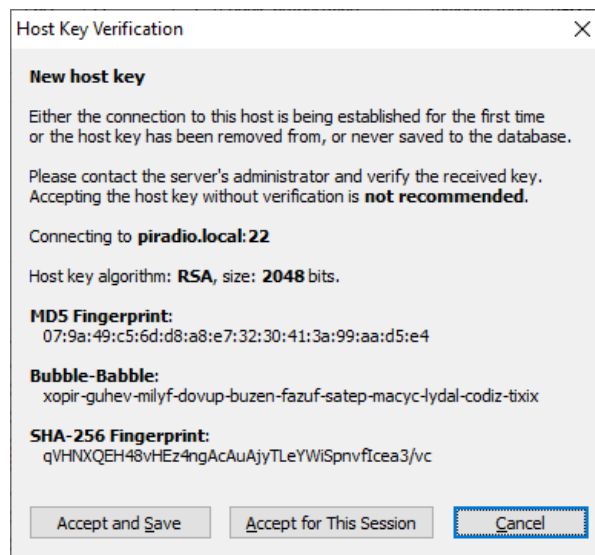

Once connected in click on “Accept and Save” to save the new host key (Used by SSH for encryption). The user’s name is **pi** and the default password is **raspberrypi** (Unless you changed the password). Once logged in the following screen will be displayed:

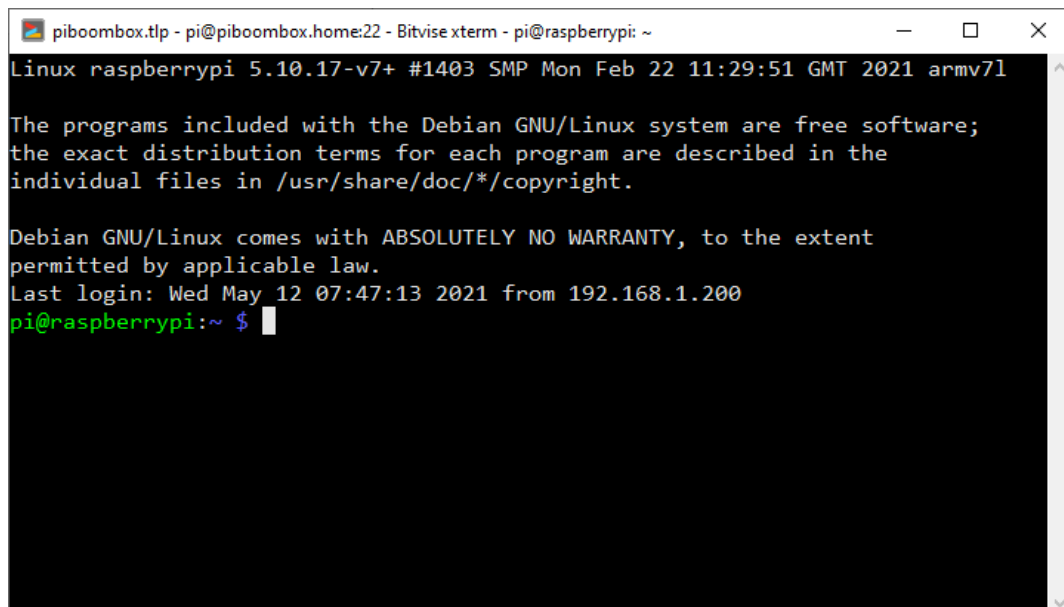


Figure 26 Raspberry Pi Command Line

You are now in the Raspberry Pi OS (Linux) command line. Linux is the Operating System that the Raspberry Pi OS is based upon. A guide to basic Linux commands can be found at:

<https://www.raspberrypi.org/documentation/linux/usage/commands.md>

Update to the latest the packages

Unless you did the OS installation via the Linux desktop and updated the packages already, run the following command to update the packages list. If in doubt run the following command anyway. Remember, don't copy the \$ sign in any of these commands. DO NOT SKIP THIS STEP.

```
$ sudo apt update
```

Run the following command to upgrade to the latest packages for this release.

```
$ sudo apt upgrade
```

This will take some time so be patient.

Chapter 6 - Radio software installation

Conventions used in this tutorial

Installation of the radio program requires you to enter lines at the command line prompt. This will require you to log into the Raspberry PI as user '**pi**' later on in this manual. The default password is **raspberrypi**.



Note: Don't try to carry out any of the following commands. They are just examples.

```
Raspberrypi login: pi
Password: raspberrypi
pi@raspberrypi:~$ Last login: Wed Sep  9 12:17:35 2020 from 192.168.1.200
pi@raspberrypi:~$
```

The prompt line is displayed ending with a \$ sign. The **pi@raspberrypi:~** string means user 'pi' on host machine called 'raspberrypi'. The ~ character means the user 'pi' home directory **/home/pi**. In this tutorial if you are required to do something as user **pi** then only the \$ sign will be shown followed by the command as shown in the example below:

```
$ mpc status
```

Copy and paste the **highlighted text** only to the command line. Don't copy the \$ sign.

Some commands produce a lot output which does not need to be shown. In such a case a colon (':') is used to indicate that some output has been omitted.

```
$ mpd -v
Music Player Daemon 0.23.17 (0.23.17)
Copyright 2003-2007 Warren Dukes <warren.dukes@gmail.com>
Copyright 2008-2018 Max Kellermann <max.kellermann@gmail.com>
:
Other features:
  avahi dbus udisks epoll icu inotify ipv6 systemd tcp un
```

Note that when a command is shown with the resulting output the command which was entered is shown in **bold**.

You will see a lot of commands with the word **sudo**, for example:

```
$ sudo systemctl start radiod
```

This gives the user pi permissions to carry out instructions normally only allowed by the root user.

END OF EXAMPLE COMMANDS.

Installing the Music player daemon

The radio software uses the Music Player Daemon (MPD). More information on MPD can be found at <https://www.musicpd.org/>

After booting up the RPi, install the Music Player Daemon (mpd) and its client (mpc) along with the Python3 and **python3-rpi.gpio** library.

```
$ sudo apt-get install mpd mpc python3-mpd python3-rpi.gpio
```

Answer yes 'y' when asked to continue.

Installing the Radio Daemon

The Raspberry PI Internet Radio software is distributed as a Debian package. This can be downloaded from http://www.bobrathbone.com/raspberrypi/pi_internet_radio.html

Either download it to your PC or Apple Mac and copy it to the **/home/pi** directory or get it directly using the **wget** facility.

```
$ wget http://www.bobrathbone.com/raspberrypi/packages/radiod_8.1_all.deb
```


Run **dpkg** to install the **radiod** package.

```
$ sudo dpkg -i radiod_8.1_all.deb
```


The **dpkg** program will install the files.

```
(Reading database ... 131542 files and directories currently
installed.Preparing to unpack radiod_8.1_armhf.deb ...
Raspberry PI internet radio installation
Stopping radiod service
Unpacking radiod (8.1)
```


When run the installation script detects if this is a software upgrade and displays the following screen. Normally select option 2 if to install the software. Option 1 allows you to upgrade the software without doing any configuration. You can run the configurator at a later time.

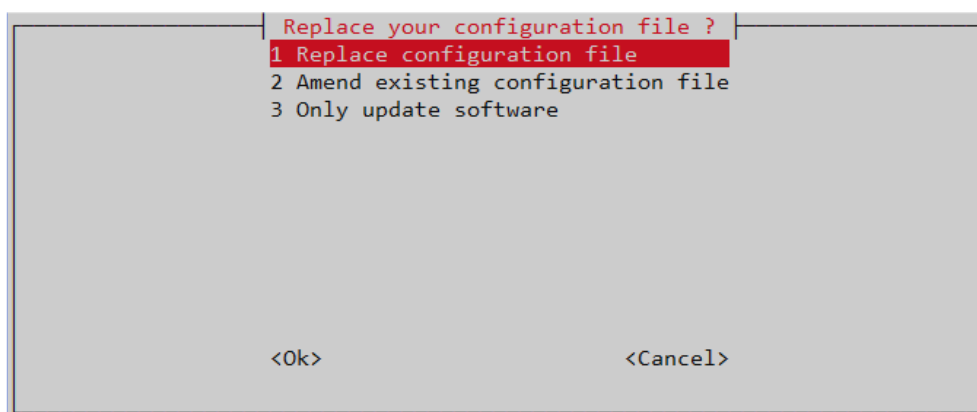


Select option 1.

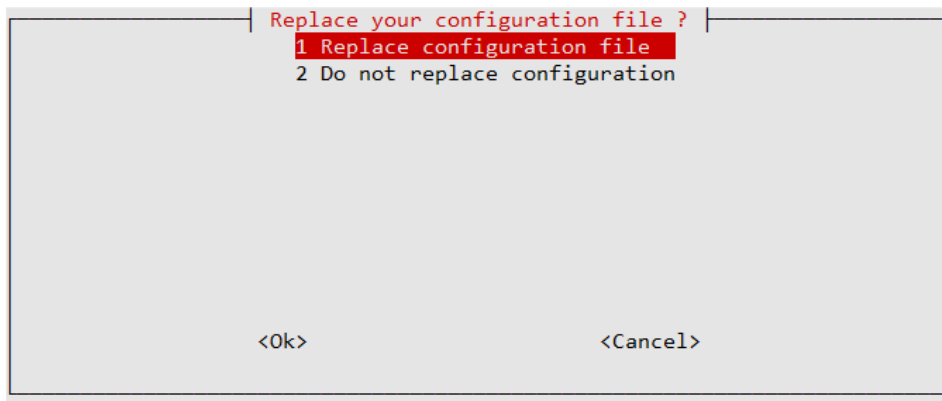

Select option 1 to replace the configuration file. A backup copy of the original configuration is written to `/etc/radiod.conf.save`. The following screen will then be displayed:

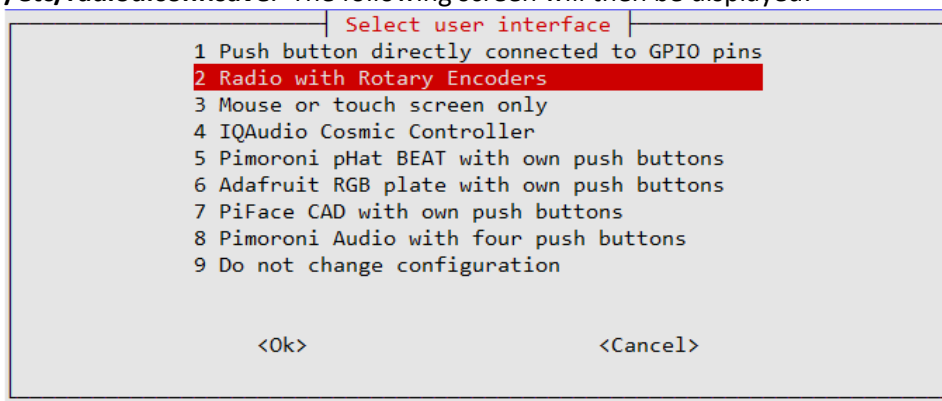



Select option 2 “Radio with rotary encoders” followed by “OK”. Confirm your choice on the next screen:

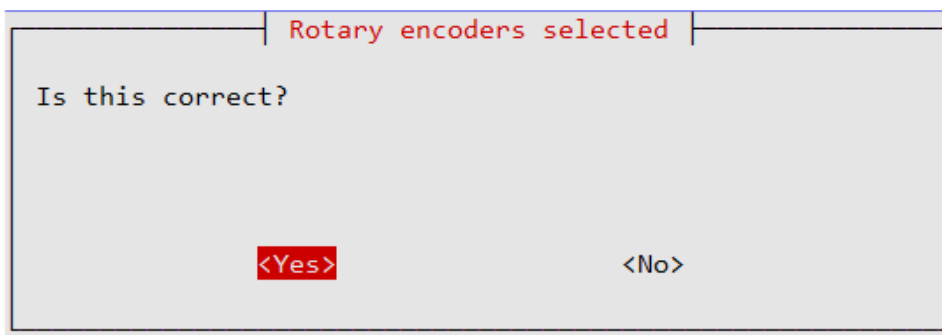

If you have used KY040 rotary encoders select option 2. You will be asked to confirm your choice.




If you are missing the push-button 10K resistor as shown in *Figure 12 KY040 Missing 10K resistor* on page 5 then select option 1 (Standard A, B and C inputs).

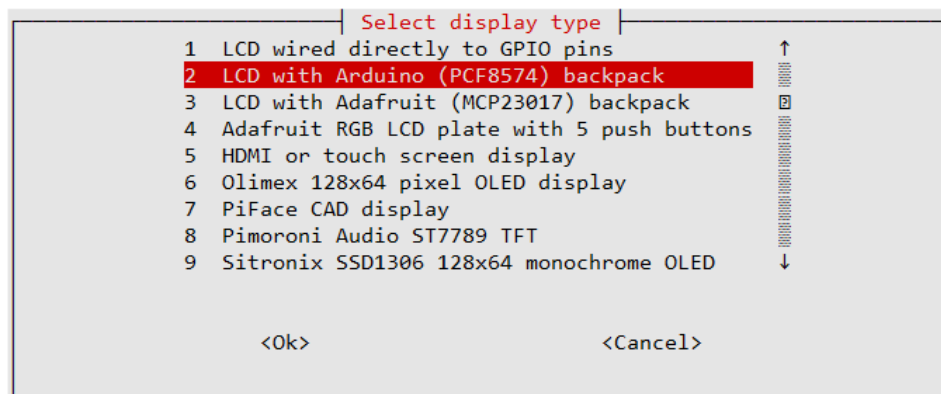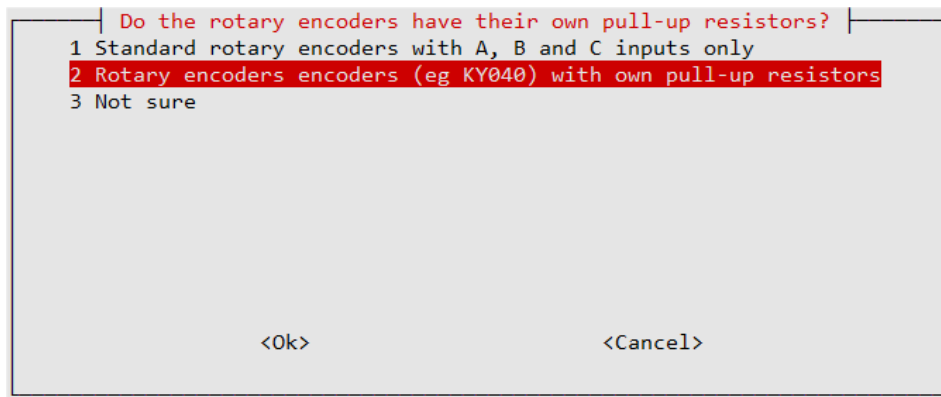

Select option 2 “LCD with Arduino (PCF8547) backpack.


Notice that there is a scroll bar to the right of the options. Use the Up/Down keys to scroll down to the remaining options.

Now select the hex address for the I2C backpack. This is option 2 0x27 (PCF8574 devices).

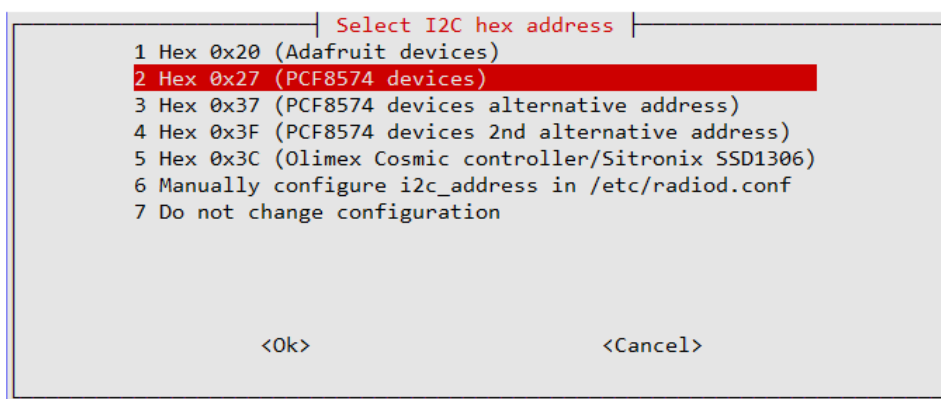


The installation program now configures the **I2C Device Overlay** (Driver software) to be loaded at boot time.

The program now asks you to select the display type.

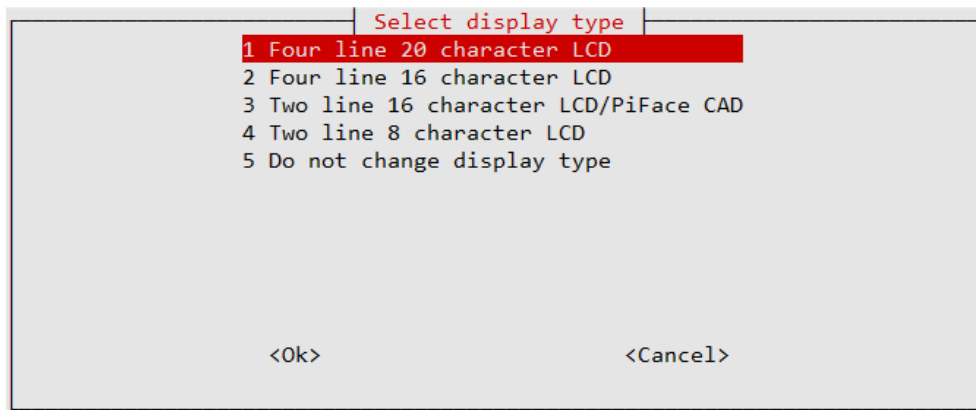


Select either option 1 or 2 for the type of display you are using.

The installation program will now ask you to configure the audio output. In this project we will be using the on-board audio output jack.

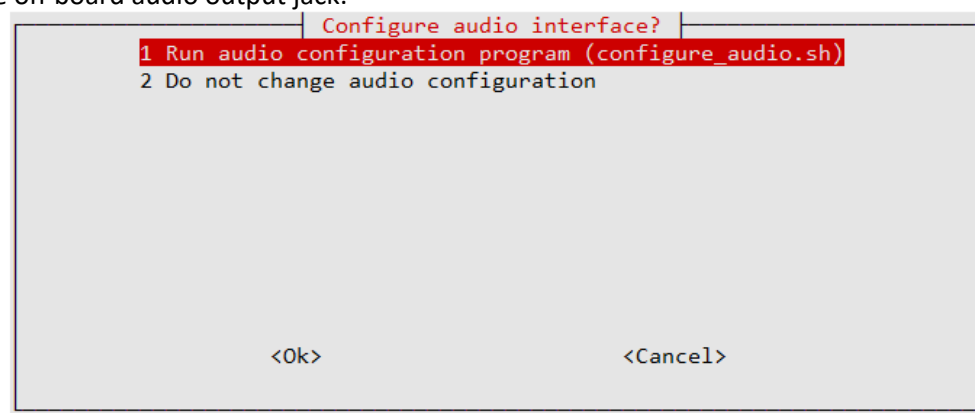

Select option 1 to configure the audio output.

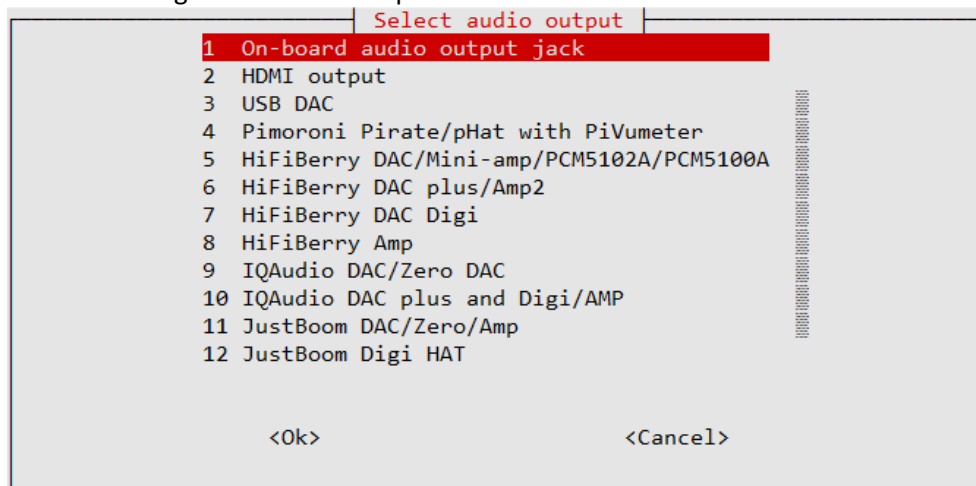

Select option 1: On-board audio output jack or option 3 for USB connected loud-speakers.

The installation program displays the following (Some output omitted).

```

PI Radio software successfully installed
See /usr/share/doc/radiod/README for release information

Installation complete
It is necessary to reboot the system to start the radio

```

Reboot the Raspberry Pi.

```
$ sudo reboot
```

Radio program maintenance

Version 8 onwards is maintained by a program called **radio-config**. This program can be run at any time. It can be used to start and stop the program, add or amend radio components such as the IR remote control or Web interface. It also provides a comprehensive set of diagnostics and tutorials.

Log into the Raspberry Pi then run **radio-config** from the command line. The following menu will be displayed:

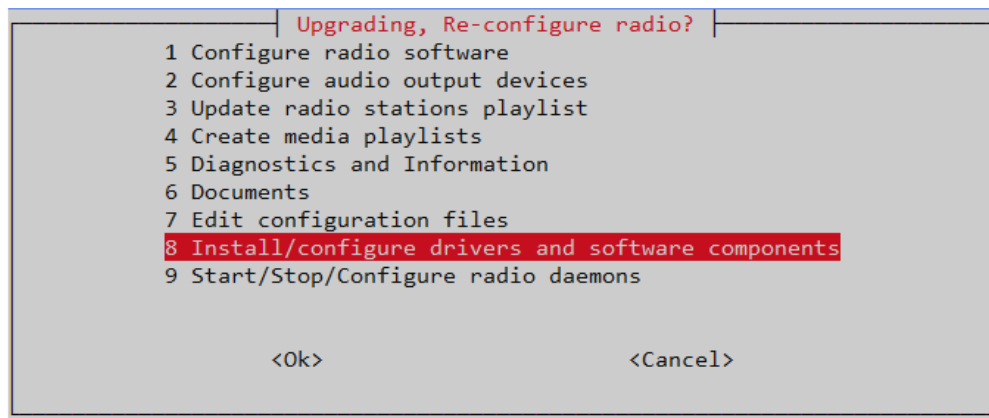


Figure 27 The radio-config menu

Select **8 Install/configure drivers and software components** from the radio-config menu

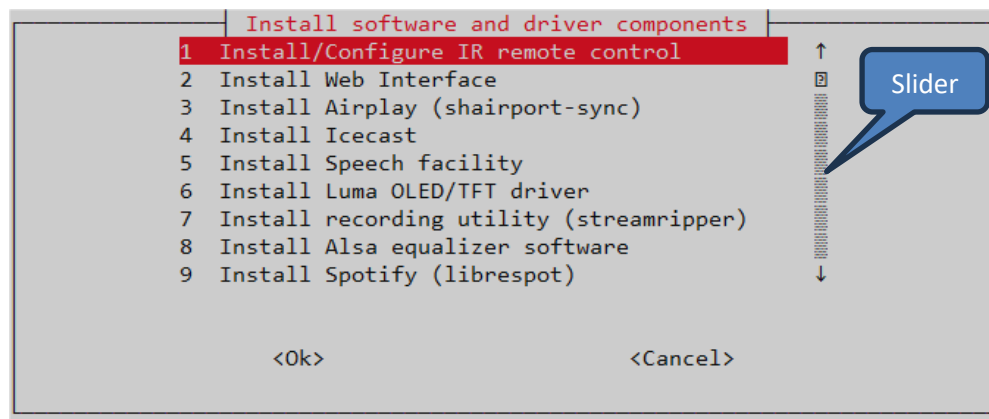


Figure 28 The additional radio software components menu

It should not be necessary to use the **radio-config** program just to get the basic radio going. However, if you want to add components or run any other tasks then refer to the main constructors guide available either on the Bob Rathbone Web site or GitHub pages.

<https://bobrathbone.com/raspberrypi/documents/Raspberry%20PI%20Radio.pdf>

<https://github.com/bobrathbone/piradio6/blob/master/docs/Raspberry%20PI%20Radio.pdf>

Keeping the Radio software up to date

Things are constantly changing with the software. These changes include updates to the Raspberry Pi OS, third-party products and libraries. Also new hardware solutions as well as old hardware being dropped are constantly changing the Raspberry Pi landscape. Things that used to work may be broken by one of these updates or need to be done differently.

Important news, changes and new releases will be announced on X (Formerly Twitter) at: https://twitter.com/bob_rathbone or https://x.com/bob_rathbone. For technical reasons the BR Web site will still use the original blue Twitter logo for the time being.

Follow this X (Formerly Twitter) feed for announcements about new versions. One of the main things to keep abreast of are the Release Notes which are the best place to view software updates. See http://www.bobrathbone.com/raspberrypi/pi_internet_radio.html

Chapter 7 - Operation

Starting and stopping the radio

The **radiod** program should start automatically after boot up.

To stop the radio from the command line (Log in first with SSH).

```
$ sudo systemctl stop radiod
```

To start the radio

```
$ sudo systemctl start radiod
```

To prevent the radio from starting up at boot time


```
$ sudo systemctl disable radiod
```

To re-enable it at boot time.

```
$ sudo systemctl enable radiod
```

Radio operation

The radio is operated using the two Rotary Encoder Knobs.

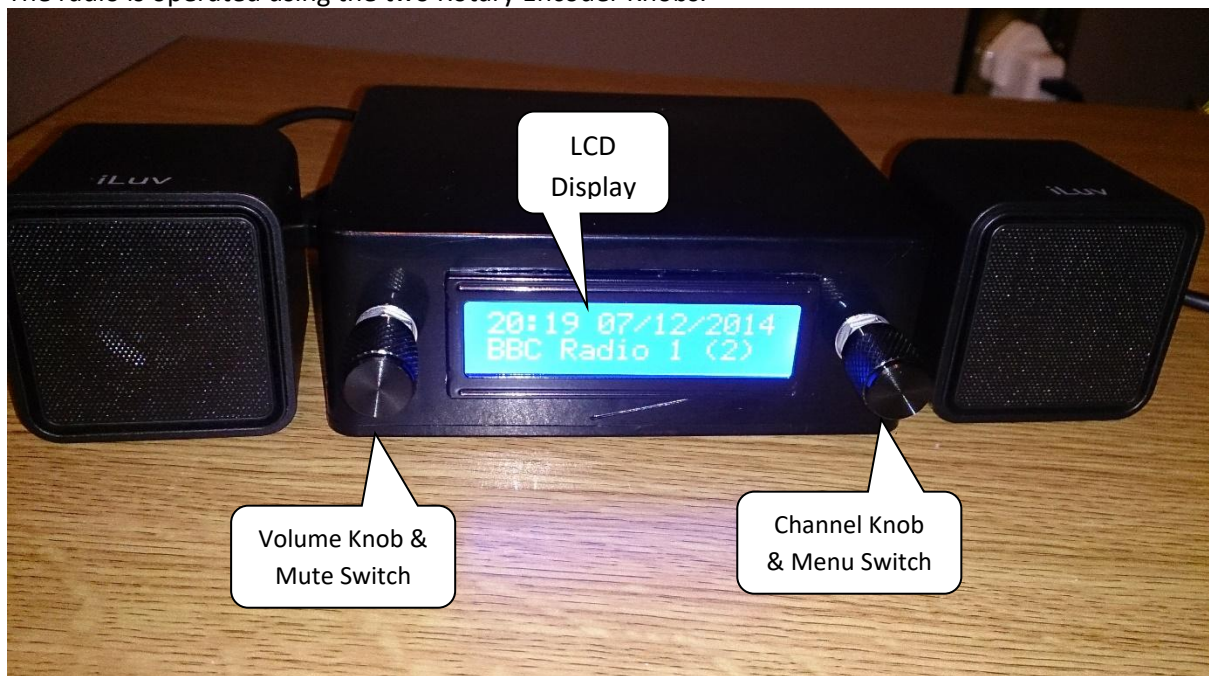

The left-hand knob controls volume. Pressing the knob inwards mutes and unmutes the radio. The right-hand knob changes stations/mp3 tracks. Pressing the knob inwards steps through the menu.

Menu operation

This option is for a radio with rotary encoders with push buttons. The volume knob when pushed in is the **Mute** sound function. Likewise, the tuner knob when pushed in is the **Menu** switch. The Menu button (Tuner knob depressed) changes the display mode and the functions of the clockwise and anti-clockwise operation of the knobs as shown in the following table.

Table 4 Rotary Encoder Knob Operation

LCD Display Mode	Volume knob		Tuner knob	
	Clockwise	Anti-clockwise	Clockwise	Anti-clockwise
Mode = TIME Line 1: Time Line 2: Station or Track	Volume Up	Volume Down	Station/Track up	Station/Track down
Mode = SEARCH If source = RADIO Line 1: Search: Line2: Radio Station	Volume Up	Volume Down	Scroll up radio station	Scroll down radio station
Mode = SEARCH If source = MUSIC LIBRARY Line 1: Search Line2: MusicTrack/Artist	Scroll up through artists	Scroll down through artists	Scroll up through track	Scroll down through track
Mode = SOURCE Line 1: Input Source: Line2: Radio or Media playlist or Airplay	Volume Up Mute	Volume Down Mute	Cycle up through Airplay, Radio and Media playlists	Cycle down through Airplay, Radio and Media playlists
Mode = OPTIONS Line 1: Menu Selection Line 2: <option> Options are Random, Consume, Repeat, Reload Music, Timer, Alarm and Alarm Time (Hours), Alarm Time (Minutes) set and Change colour (1), Streaming on/off.	Toggle selected mode on or off. Set timer and Alarm	Toggle selected mode on or off. Set timer and Alarm	Cycle through Random, Consume, Repeat, Reload Music, Timer, Alarm Time Set, Streaming and Background colour(1)	Cycle through Random, Consume, Repeat, Reload Music, Timer, Alarm , Alarm Time Set, Streaming and Background colour(1)
Mode = RSS (2) Line 1: Time Line 2: RSS feed	Volume Up	Volume Down	Station/Track up	Station/Track down
MODE = IP address Line 1: IP address Line 2: Station or Track	Volume Up	Volume Down	Scroll up through track or radio station	Scroll down through track or radio station

The above table shows operation for a two-line display. If using a four-line LCD then the following lines are used:

Line 1: Time display/Menu selection

Line 2: Station or artist name/Menu options

Line 3: Station information (song playing etc)/Track

Line 4: Volume display

Playlist creation

There are two types of playlists namely *Radio Streams* or *Media* (MP3) files. The both types of MPD playlist are stored in the `/var/lib/mpd/playlists` directory.

The radio playlist

The `/var/lib/radiod/stationlist` file is the file that should be maintained by you to create Radio playlists. When this `create_stations.py` program is first run it copies the distribution file `station.urls` to the `/var/lib/radiod/stationlist` file. You may then modify the `/var/lib/radiod/stationlist` file.

The format is: **(<playlist name>)**

Example: **(Radio)**

The above will create a playlist called **Radio.m3u** and will contain the title and URLs for each station. Now add or remove radio station definitions in the `stationlist` file. The first statement in the station definition is the name of the playlist in brackets:

The format is: **[<title>] http://<url>**

Example: **[BBC Radio 4 extra] http://www.bbc.co.uk/radio/listen/live/r4x.asx**

After modifying the `stationlist` file run the `create_stations.py` program to create the Music Player Daemon playlists.



Note: When installing the radio software for the first time a file called `station.urls` will be copied to the `stationlist` file. It will not be overwritten when upgrading or re-installing the software. The user is totally responsible for maintaining the `stationlist` file from then on.

Below is an example of part of a `stationlist` file stored in `/var/lib/radiod` directory. This file is the source of all radio playlists:

```
# Radio stations
(Radio)
# United Kingdom
# The following links are iPhone streams (m3u files)
[BBC Radio 1] http://www.radiofeeds.co.uk/bbcradio1.pls
[BBC Radio 2] http://www.radiofeeds.co.uk/bbcradio2.pls
[BBC Radio 3] http://www.radiofeeds.co.uk/bbcradio3.pls

# Dutch stations
[NPO Radio 1] http://icecast.omroep.nl/radio1-bb-mp3
[NPO Radio 2] http://icecast.omroep.nl/radio2-bb-mp3
[NPO Radio 3fm] http://icecast.omroep.nl/3fm-bb-mp3
```

In the above example the Radio playlist is defined by the name in round brackets namely; (Radio).

The `create_stations.py` program itself is very easy to use. Just run it with **sudo** in the `/usr/share/radio` directory:

```
$ cd /usr/share/radio
$ sudo ./create_stations.py
```

This will create the playlist files in the `/var/lib/mpd/playlists` directory. Using the example shown above this will produce a file called `_Radio.m3u` in the MPD playlists directory.

To edit the the **/var/lib/radiod/stationlist** file use the **nano** editor program. See *Appendix A – Editing files with nano* on page 44.

Creating media playlists

The radio software also allows you to play music (mp3) from a USB stick.

A playlist for the USB stick can be created using the **create_playlist.sh** program. First put your music onto a USB stick (MP3 and WMA files only) and put it into one of the USB ports on the Raspberry Pi. Then run:

```
$ cd /usr/share/radio
$ sudo ./create_playlist.sh
```

The **create_playlists.sh** program can create a playlist:

1. From a USB stick
2. From a network share
3. From an SD card
4. From a USB Disk Drive

Select option 1 to create the playlist for the USB stick.

Please refer to the main Raspberry Pi Radio Constructors Guide for further information about the other options.

Playing media tracks from the USB stick

Reboot the Raspberry PI. Once the Radio program is running again, push the Menu button until "Input source" is displayed. Press either the left or right button to change the source to "Music Library". Now press the Menu button again. The music on the USB stick will now be loaded and played.

Chapter 8 - Troubleshooting

There is an extensive troubleshooting guide in the Raspberry Pi Internet Radio Constructors Guide. See <https://bobrathbone.com/raspberrypi/documents/Raspberry%20PI%20Radio.pdf>

Boot problems

Newly created desktop version of Raspberry Pi OS will not boot

This is a very recent problem. After creating a new SD card using Raspberry Pi OS (32 bit) dated 1st January 2022 the Raspberry Pi will not boot.

This appears to have started in March 2022. It even seems to be trying to reboot several times. This has been experienced on the Raspberry Pi 4B. Other models may also be affected. This appears to be a problem with new DRM VC4 V3D screen driver (**vc4-kms-v3d**).

Insert the SD card into a PC. The PC will display a boot partition as shown in the example below:

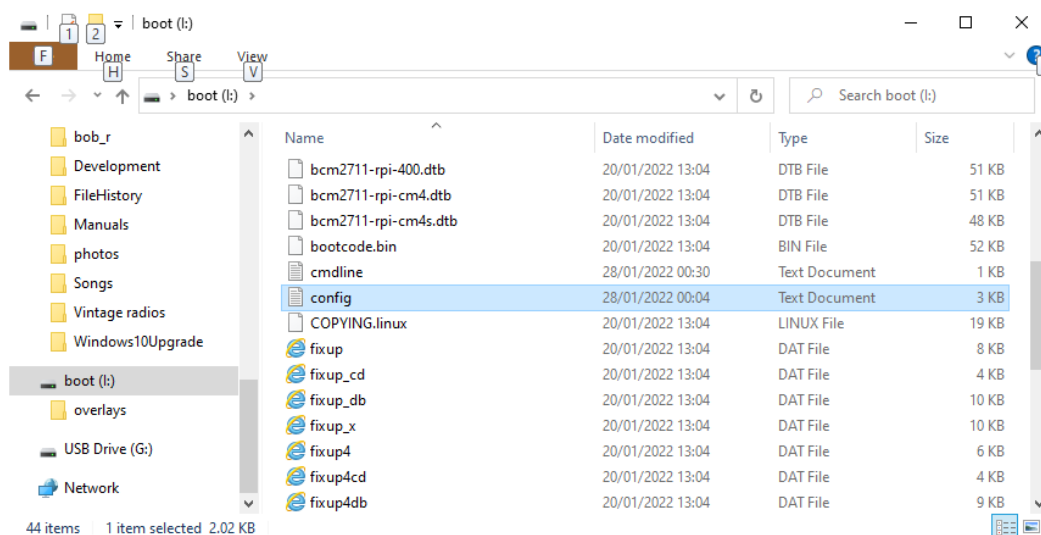


Figure 29 SD card boot partition

In the above example this is on drive I: but will most likely be different on your PC. Find the config file (config.txt) on the boot drive and open it with **Notepad** or any other text editor. Find the entry **dtoverlay=vc4-kms-v3d**.

```
# Enable DRM VC4 V3D driver
#dtoverlay=vc4-kms-v3d
max_framebuffers=2
```

Either disable the driver by putting a # character at the beginning of the line or use the older **vc4-fkms-v3d** dtoverlay as shown below

Using the older **vc4-fkms-v3d** dtoverlay:

```
dtoverlay=vc4-fkms-v3d
```

Save the file and try booting off the modified SD card. All being well it should reboot OK. If not look for other causes as shown in the rest of this section.

MPD fails to start

The MPD daemon logs to the `/var/log/mpd/mpd.log` file. Examine this file for errors. The MPD daemon is dependent on good M3U files so check that these are correct as described in the section called *Playlist creation* on page 34.

Run the following command to display the status of the MPD daemon.

```
$ systemctl status mpd
● mpd.service - Music Player Daemon
   Loaded: loaded (/usr/local/lib/systemd/system/mpd.service; disabled;
  vendor preset: enabled)
   Active: active (running) since Sat 2021-07-03 12:06:44 BST; 2 days ago
     Docs: man:mpd(1)
           man:mpd.conf(5)
  Process: 874 ExecStartPre=/bin/chown mpd:audio /var/run/mpd (code=exited,
 status=0/SUCCESS)
    Main PID: 875 (mpd)
       Tasks: 6 (limit: 1431)
    CGroup: /system.slice/mpd.service
            └─875 /usr/local/bin/mpd --no-daemon /etc/mpd.conf

Jul 03 12:06:43 raspberrypi systemd[1]: Starting Music Player Daemon...
Jul 03 12:06:44 raspberrypi mpd[875]: Jul 03 12:06 : exception: Decoder
plugin 'wildmidi' is unavailable
Jul 03 12:06:44 raspberrypi systemd[1]: Started Music Player Daemon.
```

If any errors occurred, they will be displayed by the status command.

No output on LCD screen

Check that the I2C driver sees the Adafruit I2C backpack. Run the `i2cdetect` program.

```
$ i2cdetect -y 1
```

The following output should be seen. In particular the device at address 0x27.

```
    0  1  2  3  4  5  6  7  8  9  a  b  c  d  e  f
00:  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --
10:  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --
20:  --  --  --  --  --  --  --  27  --  --  --  --  --  --  --  --
30:  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --
40:  --  --  --  --  --  --  --  --  --  --  --  UU  --  --  --  --
50:  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --
60:  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --
70:  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --
```

If not check that the i2c device driver is loaded.

```
$ ls -la /dev/i2c-1
crw-rw---- 1 root i2c 89, 1 Jul  3 11:17 /dev/i2c-1
```

If not found first check the backpack wiring, if OK re-run the radio configuration program.

```
$ cd /usr/share/radio
$ sudo ./configure_radio.sh
```

Check that I2C is configured in **/boot/config.txt**. Edit it with nano.

```
$ sudo nano /boot/config.txt
```

It should contain the following line without a # at the beginning.

```
dtoverlay=i2c-arms
```

Check that the I2C driver module is present in **/etc/modules**

```
$ cat /etc/modules
:
i2c-dev
```

Now run the test program **lcd_2c_pcf8574.py**.

```
$ cd /usr/share/radio
$ ./lcd_i2c_pcf8574.py
```

Output should be seen on the LCD. If not then it may be that the blue contrast adjustment is turned down low.



Figure 30 Adjusting the contrast

The first thing to do is to adjust the contrast potentiometer. Turn fully right and left to adjust the contrast.

Rotary encoders not working

Run the following:

```
$ cd /usr/share/radio
$ ./rotary_class.py
```

The following will be displayed:

```
Test rotary encoder Class
Left switch GPIO 14
Right switch GPIO 15
Up switch GPIO 24
Down switch GPIO 23
Mute switch GPIO 4
Menu switch GPIO 17
```

Now turn each of the rotary encoders and press the encoder knobs.

```
Tuner event 1 CLOCKWISE
Tuner event 1 CLOCKWISE
Tuner event 1 CLOCKWISE
Tuner event 1 CLOCKWISE
Tuner event 2 ANTICLOCKWISE
Tuner event 2 ANTICLOCKWISE
Tuner event 2 ANTICLOCKWISE
Tuner event 3 BUTTON DOWN
Volume event 1 CLOCKWISE
Volume event 1 CLOCKWISE
Volume event 1 CLOCKWISE
Volume event 2 ANTICLOCKWISE
Volume event 2 ANTICLOCKWISE
Volume event 2 ANTICLOCKWISE
Volume event 3 BUTTON DOWN
```

Press Ctrl and C to exit the program.

Correct any wiring faults, in particular jumper wires which have dropped off and re-test.

No sound coming out of the on-board audio socket

Have you got the Raspberry Pi plugged into the HDMI monitor? If so un-plug it and reboot.

Check that the on-board output jack is configured correctly.

```
$ aplay -l
**** List of PLAYBACK Hardware Devices ****
card 0: Headphones [bcm2835 Headphones], device 0: bcm2835 Headphones
[bcm2835 Headphones]
  Subdevices: 7/8
    Subdevice #0: subdevice #0
    Subdevice #1: subdevice #1
    Subdevice #2: subdevice #2
    Subdevice #3: subdevice #3
    Subdevice #4: subdevice #4
    Subdevice #5: subdevice #5
    Subdevice #6: subdevice #6
    Subdevice #7: subdevice #7
```

If the above isn't seen then run the audio configurator program.

```
$ cd /usr/share/radio
$ sudo ./configure_audio.sh
```

Reboot the radio:

```
$ sudo reboot
```

MPD Logging

All logging for the MPD daemon is to the `/var/log/mpd/mpd.log` file by default.

Radio program logging

The running Radio program logs to a file called `/var/log/radiod/radio.log`. You can observe it with the **tail** command. See example log below:

```
$ tail -f /var/log/radio.log
2024-09-16 09:33:30,455 INFO ===== Starting radio =====
2024-09-16 09:33:30,456 INFO Initialising radio pid 755
2024-09-16 09:33:30,456 INFO Login name pi
2024-09-16 09:33:30,457 INFO User:pi(1000) Group:pi(1000)
2024-09-16 09:33:33,378 INFO Python version 3
2024-09-16 09:33:33,381 INFO Translation code page in radiod.conf = 0
2024-09-16 09:33:33,740 INFO Display code page 0x1
2024-09-16 09:33:33,741 INFO Loaded 'codes.European'
2024-09-16 09:33:33,742 INFO Loaded 'codes.Russian'
2024-09-16 09:33:33,742 INFO Loaded 'codes.English'
2024-09-16 09:33:33,743 INFO Screen LCD Lines=4 Width=20
2024-09-16 09:33:38,480 INFO Romanize True
2024-09-16 09:33:38,481 INFO IP 192.168.1.252
2024-09-16 09:33:39,902 INFO Board revision 2
2024-09-16 09:33:40,064 INFO OS release: Raspbian GNU/Linux 12 (bookworm)
32bit
2024-09-16 09:33:40,069 INFO Linux bookworm32 6.6.31+rpt-rpi-v7l #1 SMP
Raspbian 1:6.6.31-1+rpt1 (2024-05-29) armv7l GNU/Linux
2024-09-16 09:33:41,088 INFO Connected to MPD port 6600
2024-09-16 09:33:41,209 INFO UDP Server listening on localhost port 5100
2024-09-16 09:33:41,210 INFO UDP listen:remote 0.0.0.0 port 5100
2024-09-16 09:33:42,093 INFO Radio ['/usr/share/radio/radiod.py',
'nodaemon'] Version 8.1
2024-09-16 09:33:42,093 INFO Radio running pid 755
```

There are six levels of logging namely CRITICAL, ERROR, WARNING, INFO, DEBUG or NONE. This is configured in the `/etc/radiod.conf` file. Use DEBUG for more information.

```
# loglevel is CRITICAL,ERROR,WARNING,INFO,DEBUG or NONE
loglevel=INFO
```

To switch on debugging change the **loglevel** statement in the `/etc/radiod.conf` file.

```
# loglevel is CRITICAL,ERROR,WARNING,INFO,DEBUG or NONE
loglevel=DEBUG
```

Technical support

Technical support is on a voluntary basis by e-mail only at bob@bobrathbone.com. If there are any problems with this email address then also CC r.h.rathbone@gmail.com. Before asking for support, please first consult the troubleshooting section on page 36. I will always respond to e-mails requesting help and will never ignore them. I only ask that you do the same (i.e. Did my suggestions help or not?). Be sure to provide the following information:

- A clear description of the fault.
- What you have already done to locate the problem?
- Is anything displayed on the LCD or Graphics screen?
- Did you run the test programs and what was the result?
- Switch on DEBUG logging as described on page 40, run the program and include the **/var/log/radiod/radio.log** file.
- Did you vary from the procedure in the manual or add any other software?
- Please supply any information requested.

Run the configuration display and send the **/usr/share/radio/config.log.tar.gz** that it produces to bob@bobrathbone.com. This will save a lot of questions about your configuration.

```
$ cd /usr/share/radio
$ ./display_config.sh
:
This configuration has been recorded in /usr/share/radio/config.log
A compressed tar file has been saved in /usr/share/radio/config.log.tar.gz
Send /usr/share/radio/config.log.tar.gz to bob@bobrathbone.com if required
```



Please note that support for general Raspberry PI problems is not provided. Only issues relating to the Radio software will be investigated.

For general Raspberry PI support see the following site:

<http://www.raspberrypi.org/forums/>

For support on Music Player Daemon issues see the help pages at the following link:

<http://www.musicpd.org/>

Chapter 9 - Licences, disclaimer and support

Licences

The software and documentation for this project is released under the GNU General Public Licence.

See <http://www.gnu.org/licenses> for up-to-date information on the GNU General Public License.

The licences for the source and documentation for this project are:

GNU General Public License. See <http://www.gnu.org/licenses/gpl.html>

GNU AFFERO General Public License. See <http://www.gnu.org/licenses/agpl.html>

GNU Free Documentation License. See <http://www.gnu.org/licenses/fdl.html>

MPD uses an older version of the license at <https://www.gnu.org/licenses/gpl-2.0.txt>

Disclaimer

THIS SOFTWARE AND DOCUMENTATION IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS 'AS IS' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE OR DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Support

The author does not directly support the Music Player Daemon software. You are advised to contact the MPD forum at <https://forum.musicpd.org/>. However, if you have any comments or feedback about this procedure or document, please contact bob@bovrathbone.com

Acknowledgements and Copyrights

Thanks to the Music Player Daemon (MPD) foundation for their excellent audio software. See <https://www.musicpd.org/>

To Luboš Ruckl for his work on the Rotary encoder class (adapted from code by Ben Buxton) and the PCF8574 LCD class (adapted from code by an unknown author but believed to be from the Arduino community).

Thanks to Joaquin Perez for the photograph of his Raspberry Pi Internet radio in the XXXXXXXX.
Ashley Yates for the photograph of his Raspberry Pi Internet radio in the instructions section.

To Andrew Romaine for the photograph of his Raspberry Pi Internet radio shown on the front page.

To all constructors of this project who have sent in photos of their radio's and their ideas for improvement and the many appreciative e-mails that I have received from them.

References

Raspberry Pi Internet Radio Constructor's manual.

<https://www.bobrathbone.com/raspberrypi/documents/Raspberry%20PI%20Radio.pdf>


Glossary

ABS	Acrylonitrile Butadiene Styrene plastic (for case)
HDMI	High-Definition Multimedia Interface – connection to HD monitors and TVs.
I2C	A two wire, multiple device communication protocol developed by Philips Industries
RPi	Raspberry Pi
SD	Secure Digital – Type of non-volatile memory card
SIL	Single in Line Header, either male or female.
SSH	Secure Shell – Encrypted terminal
SSID	Service Set Identifier. An SSID is the public name of a wireless network.

Appendix A – Editing files with nano

The program used in this tutorial is called **nano**. For example, editing `/etc/radiod.conf`.

```
$ sudo nano /etc/radiod.conf
```

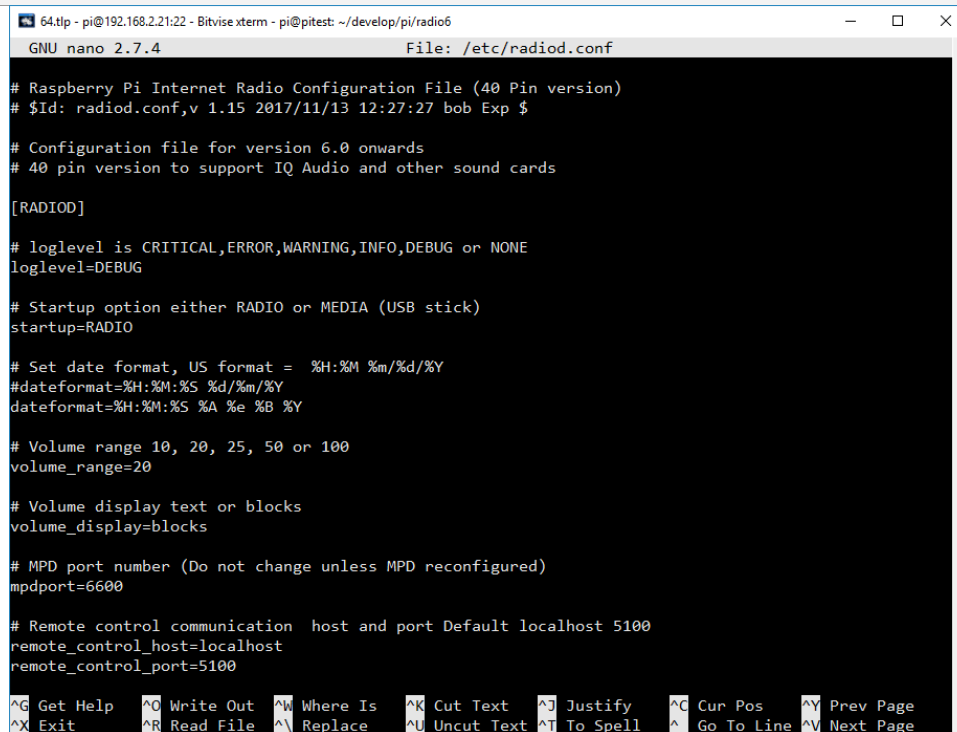

A screenshot of a terminal window showing the nano text editor editing the file `/etc/radiod.conf`. The terminal title bar indicates the session is on a Raspberry Pi. The nano editor's status bar at the top shows 'GNU nano 2.7.4' and the file path. The main editing area contains configuration text for the Raspberry Pi Internet Radio. At the bottom, a help menu is displayed with various shortcuts.

```
64.tlp - pi@192.168.2.21:22 - Bitvise xterm - pi@pitest: ~/develop/pi/radio6
GNU nano 2.7.4 File: /etc/radiod.conf

# Raspberry Pi Internet Radio Configuration File (40 Pin version)
# $Id: radiod.conf,v 1.15 2017/11/13 12:27:27 bob Exp $

# Configuration file for version 6.0 onwards
# 40 pin version to support IQ Audio and other sound cards

[RADIOD]

# LogLevel is CRITICAL,ERROR,WARNING,INFO,DEBUG or NONE
LogLevel=DEBUG

# Startup option either RADIO or MEDIA (USB stick)
startup=RADIO

# Set date format, US format = %H:%M %m/%d/%Y
#dateformat=%H:%M:%S %d/%m/%Y
dateformat=%H:%M:%S %A %e %B %Y

# Volume range 10, 20, 25, 50 or 100
volume_range=20


# Volume display text or blocks
volume_display=blocks

# MPD port number (Do not change unless MPD reconfigured)
mpdport=6600

# Remote control communication host and port Default localhost 5100
remote_control_host=localhost
remote_control_port=5100

^G Get Help ^O Write Out ^W Where Is ^K Cut Text ^J Justify ^C Cur Pos ^Y Prev Page
^X Exit ^R Read File ^\ Replace ^U Uncut Text ^T To Spell ^_ Go To Line ^V Next Page
```

Hold down the Ctrl key and press the letter G on the keyboard to display the help text. The following screen will be displayed:

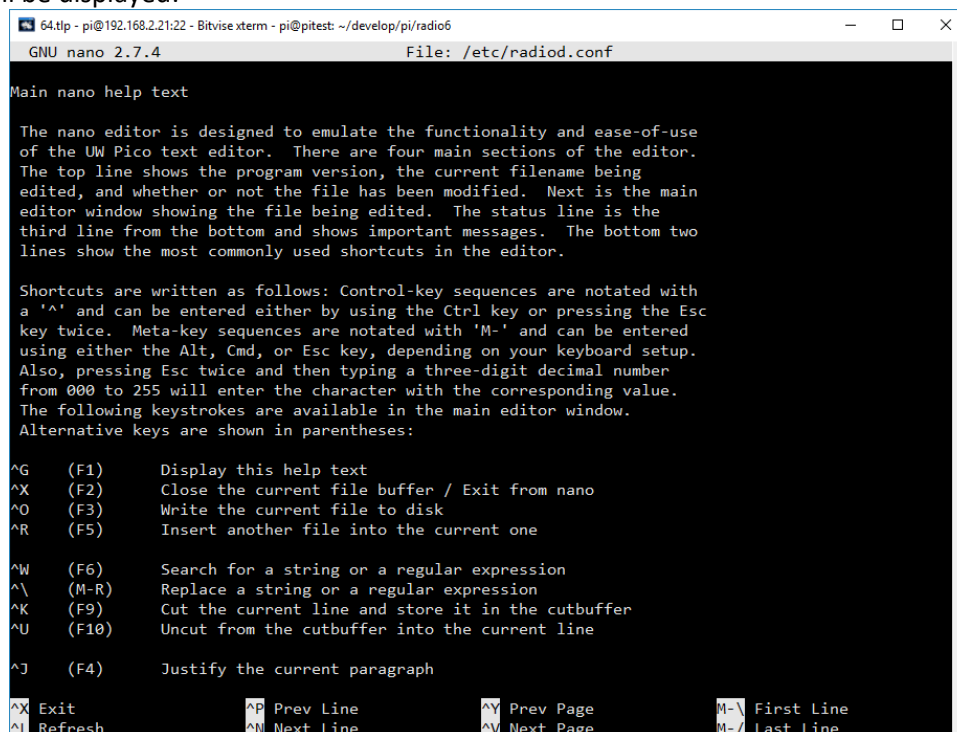

A screenshot of the nano text editor displaying the help text. The terminal window title and editor status bar are the same as in the previous image. The main editing area now shows the 'Main nano help text', which explains the editor's design and lists various keyboard shortcuts.

```
64.tlp - pi@192.168.2.21:22 - Bitvise xterm - pi@pitest: ~/develop/pi/radio6
GNU nano 2.7.4 File: /etc/radiod.conf

Main nano help text

The nano editor is designed to emulate the functionality and ease-of-use
of the UW Pico text editor. There are four main sections of the editor.
The top line shows the program version, the current filename being
edited, and whether or not the file has been modified. Next is the main
editor window showing the file being edited. The status line is the
third line from the bottom and shows important messages. The bottom two
lines show the most commonly used shortcuts in the editor.

Shortcuts are written as follows: Control-key sequences are notated with
a '^' and can be entered either by using the Ctrl key or pressing the Esc
key twice. Meta-key sequences are notated with 'M-' and can be entered
using either the Alt, Cmd, or Esc key, depending on your keyboard setup.
Also, pressing Esc twice and then typing a three-digit decimal number
from 000 to 255 will enter the character with the corresponding value.
The following keystrokes are available in the main editor window.
Alternative keys are shown in parentheses:

^G (F1) Display this help text
^X (F2) Close the current file buffer / Exit from nano
^O (F3) Write the current file to disk
^R (F5) Insert another file into the current one

^W (F6) Search for a string or a regular expression
^_ (M-R) Replace a string or a regular expression
^K (F9) Cut the current line and store it in the cutbuffer
^U (F10) Uncut from the cutbuffer into the current line

^J (F4) Justify the current paragraph

^X Exit ^P Prev Line ^Y Prev Page M-_ First Line
^L Refresh ^N Next Line ^V Next Page M-/ Last Line
```

The `^` character means the Control-key (Ctrl). So, for example `^O` above is Ctrl + O. For more information on **nano** see <https://www.nano-editor.org/dist/v2.0/nano.html>

Index

Alarm, 32
Arduino, 3
Bitvise, 20
Bookworm, 9, 21
Bookworm Lite, 11
daemon, 36, 39
dpkg, 26
Fing, 20
GPIO, 3, 7, 8
HD44870, 2, 9
I2C, 2, 3, 9
I2C backpack, 1, 2, 3, 4, 9, 28, 36
KY-040 Rotary Encoder, 5
LCD, 2, 9, 32, 40, 41
MP3, 34
mpd, 26, 33, 36, 39
MPD, 36, 39
nano, 43
OS, 9
PC, 9, 26
PCF8574, 3, 41
PLS, 36
potentiometer, 3
Putty, 20
radiod.conf, 39
Random, 32
Raspberry PI, 1, 2, 9, 25, 26, 40
Raspberry Pi Lite, 21
rotary encoder, 9, 32
RSS, 32
SSH, 21
wget, 26
wiring, 3
WMA, 34