



SLC™ 5/05 Processors Firmware/Operating System ControlFLASH™ Upgrade

(Catalog Number 1747-DU501)

Inside.....	Page
Important User Information	2
For More Information	3
System Requirements	3
Install ControlFLASH	3
Prior to Running ControlFLASH	4
Return the SLC 5/05 Processors to Initial Factory Conditions.....	5
Use ControlFLASH.....	6
After Successfully Updating Your SLC 5/05 Processor	18
ControlFLASH Error Messages	18

Important User Information

Solid state equipment has operational characteristics differing from those of electromechanical equipment. *Safety Guidelines for the Application, Installation and Maintenance of Solid State Controls* (Publication SGI-1.1 available from your local Rockwell Automation sales office or online at <http://www.ab.com/manuals/gi>) describes some important differences between solid state equipment and hard-wired electromechanical devices. Because of this difference, and also because of the wide variety of uses for solid state equipment, all persons responsible for applying this equipment must satisfy themselves that each intended application of this equipment is acceptable.





In no event will Rockwell Automation, Inc. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Rockwell Automation, Inc. cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Rockwell Automation, Inc. with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of Rockwell Automation, Inc. is prohibited.

Throughout this manual, when necessary we use notes to make you aware of safety considerations.

WARNING 	Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death, property damage, or economic loss.
IMPORTANT	Identifies information that is critical for successful application and understanding of the product.
ATTENTION 	Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss. Attentions help you: <ul style="list-style-type: none"> • identify a hazard • avoid a hazard • recognize the consequence
SHOCK HAZARD 	Labels may be located on or inside the equipment (e.g., drive or motor) to alert people that dangerous voltage may be present.
BURN HAZARD 	Labels may be located on or inside the equipment (e.g., drive or motor) to alert people that surfaces may be dangerous temperatures.

For More Information

Related Publications

For	Refer to this Document	Pub. No
A more detailed description on how to install and use your SLC 500 Modular Hardware Style Control System.	SLC™ 500 Modular Hardware Style User Manual	1747-UM011
A more detailed description on how to install your SLC 500 Modular Processors.	SLC™ 5/03, SLC 5/04, and SLC 5/05 Modular Processors Installation Instructions	1747-IN009

To view and download pdfs, go to Literature Library at <http://www.rockwellautomation.com/literature>.

To order printed copies, contact your Allen-Bradley® Distributor or Rockwell Automation® Sales Office.

System Requirements

- Personal computer with at least a 486 processor
- Windows® 9x, NT, 2000, or XP
- At least 16 MB memory or minimum required by operating system

Install ControlFLASH

Insert the CD-ROM of the ControlFLASH Firmware Upgrade Kit into your CD-ROM drive.

The Setup Wizard appears to guide you through the installation process.

If a ControlFLASH directory does not already exist, one is created in your Program Files directory.

Prior to Running ControlFLASH

For OS501 Series C FRN 9 and later, the SNMP Server must be enabled for the upgrade to occur. The ability to disable the SNMP Server that was added in Series C FRN 9 and later, requires RSLogix™ 500 version 6.30 or higher.

1. Save the current SLC 5/05 processor program.

IMPORTANT

The user program is cleared as part of the operating system upgrade process. You must restore your program after successfully loading the operating system upgrade.

2. Note the assigned IP address of the SLC 5/05 processor. The IP address may have been assigned via BOOTP or configured via software. The IP address may be read from the processor when you are online with RSLogix 500 software; in the Channel Configuration dialog box select the Chan. 1 – System tab. If BOOTP Enable is selected and the IP Address is 0.0.0.0, then note the Ethernet Hardware Address (located on the Ethernet Daughtercard) of the 5/05 processor, which begins with 00:00:BC.

IMPORTANT

Refer to the following Rockwell Automation publications for further information on the Ethernet Communication Protocol:

- SLC 500 Instruction Set Reference Manual, publication number 1747-RM001
 - SLC 500 Modular Hardware Style User Manual, publication number 1747-UM011
-

IMPORTANT

If you are not sure whether an IP address is assigned or cannot determine what the IP address is, return the 5/05 processor to initial factory conditions.

Return the SLC 5/05 Processors to Initial Factory Conditions

IMPORTANT

If you return the processor to the initial factory conditions, the user program and communication configurations are returned to their default settings.

To return the processor to initial factory conditions:


ATTENTION

Do not remove the processor from the SLC 500 chassis until all power is removed from the SLC 500 power supply.



1. Remove power from the SLC 500 power supply.
2. Remove the processor from the chassis.
3. Disconnect the battery by removing the battery connector from its socket.
4. Locate the VBB and GND connections on the back of the motherboard.
5. Place a small bladed screwdriver across the VBB and GND connections and hold for 60 seconds.

This returns the processor to the initial factory conditions.

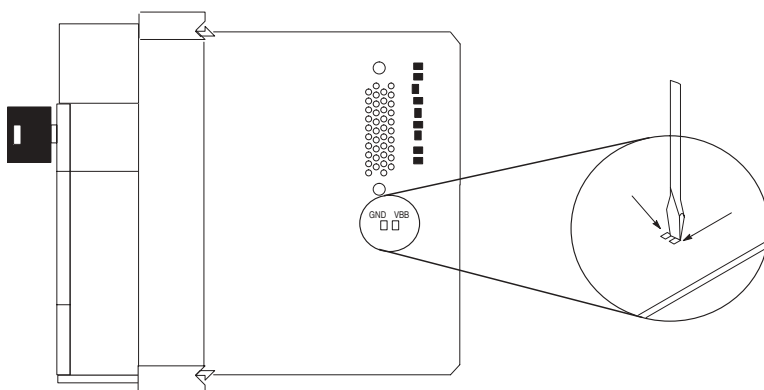

Use ControlFLASH


ATTENTION



Do not interrupt the flash procedure. Once you have begun to download the firmware for either the daughtercard (step 18) or the motherboard (step 25), the SLC 5/05 is put into an unrecoverable state if you lose power or communications for any reason.

1. Launch the ControlFLASH application under Programs>Flash Programming Tools.
2. Verify that the J4 jumper of the SLC 5/05 processor being upgraded is set to Protect.

The daughtercard firmware can only be updated when the J4 jumper is set to Protect.

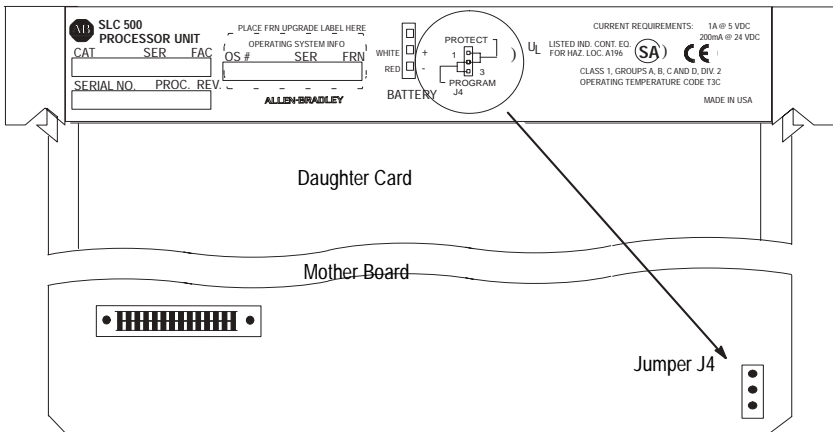


3. Insert the SLC 5/05 processor into an SLC chassis.
4. Attach an Ethernet cable to the processor from your computer (or a hub).


IMPORTANT

If you are connecting to the SLC 5/05 processor through a hub, you can use a standard Ethernet patch cable. If you are connecting directly to the SLC 5/05 processor from your computer, you need to use an Ethernet crossover cable.

5. Apply power to the chassis.
6. Verify that the SLC 5/05 processor's key switch is in the PROG or REM PROG (RUN LED indicator not illuminated) mode.
7. The Welcome to ControlFLASH dialog box is displayed. Click Next.

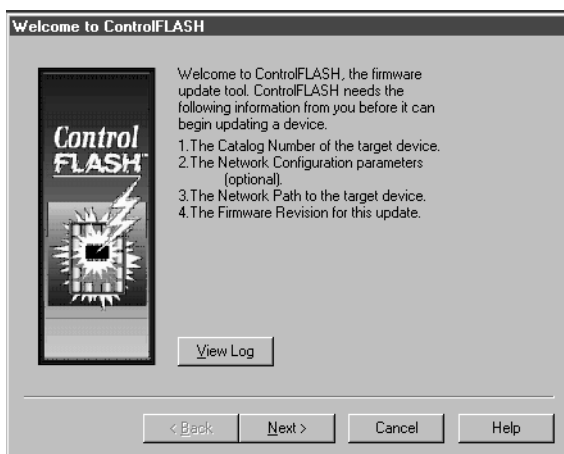

8. Select the appropriate catalog number from the Catalog Number dialog box and click Next. For Series C Processors, select between the catalog numbers followed by a '/C'.

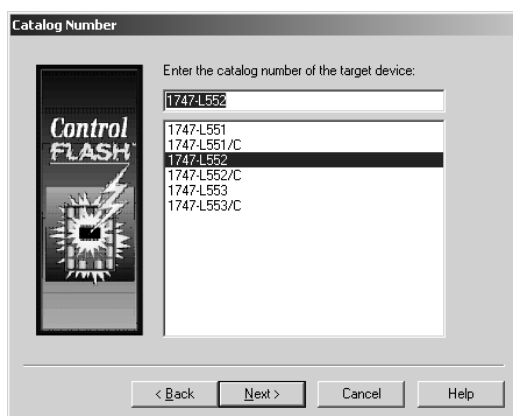

9. The AB_SNMP.DLL – Enter IP Address dialog box is displayed. Type in the IP address for the processor.


IMPORTANT

Use the IP address that was noted in step 2 of the Prior to Running ControlFLASH section, or if the processor has been reset to Initial Factory Conditions, use an available IP address assigned by your network administrator.


10. Click the Get Info button. If the IP address was previously configured into the processor, go to step 12.




The AB_SNMP – BOOTP Server dialog box is displayed, indicating that this IP address has not been configured into the processor.

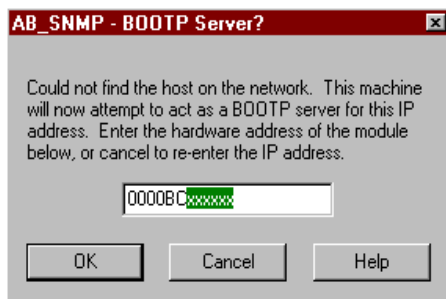


11. Enter the hardware address of the SLC 5/05 processor that is being upgraded (noted in step 2 of the Prior to Running ControlFLASH section) and click OK.

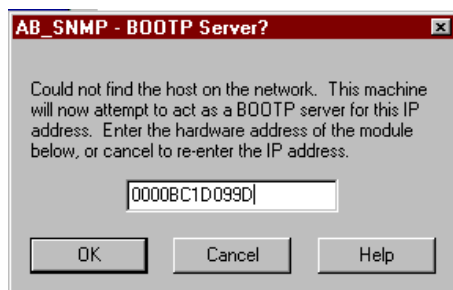


The AB_SNMP – BOOTP Server Running dialog box may take several seconds or minutes to appear.

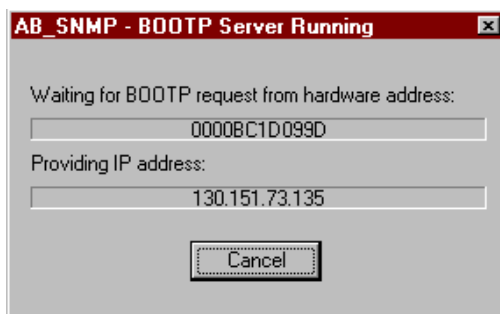


12. You may need to wait several seconds or minutes before you are returned to the AB_SNMP.DLL – Enter IP Address dialog box. Within a few seconds, the Device Identification box displays the processor's current revision information. Click OK.

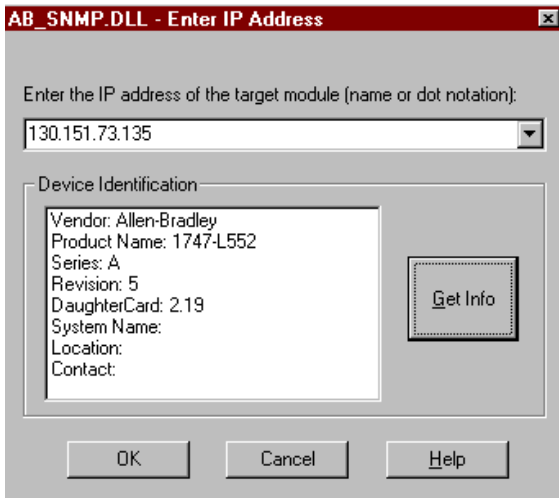


13. Select the appropriate revision from the Firmware Revision dialog box and click Next.

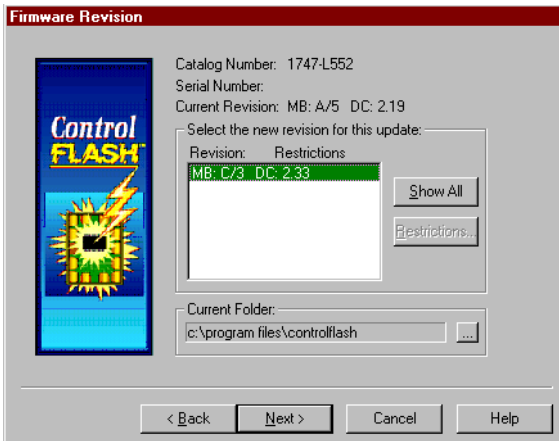


14. The Summary dialog box is displayed. Click Finish.

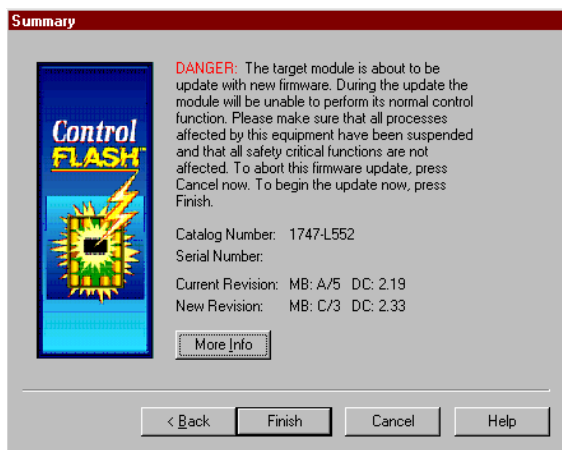

15. The ControlFLASH dialog box is displayed. Click Yes.



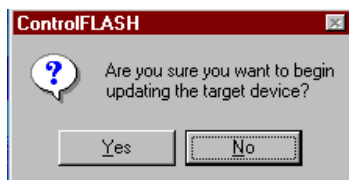


16. If your PC has more than one Ethernet interface installed, the following dialog box displays the assigned IP addresses of each of the listed Ethernet interfaces. Otherwise, go to step 18.

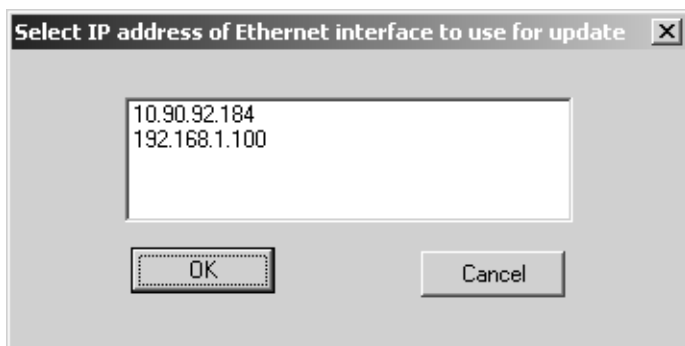

17. Highlight the IP address of the PC Ethernet interface that connects to the Ethernet network hosting the target processor. Click OK.

18. You may need to wait several seconds before the Progress dialog box is displayed. (A typical sequence is shown below). While the download is in progress, the ENET LED changes from a solid green to flashing green to solid red and then turns solid green again. When the daughtercard update is complete, the ENET LED is flashing green. The download process of the daughtercard firmware can take up to approximately two minutes.

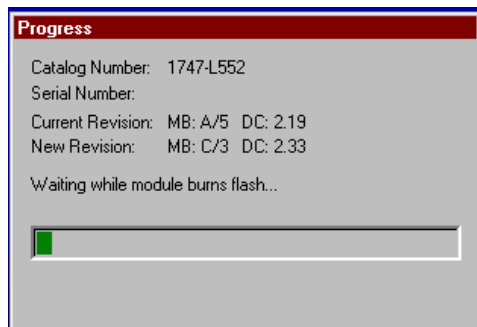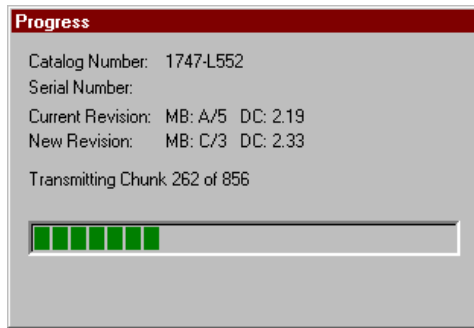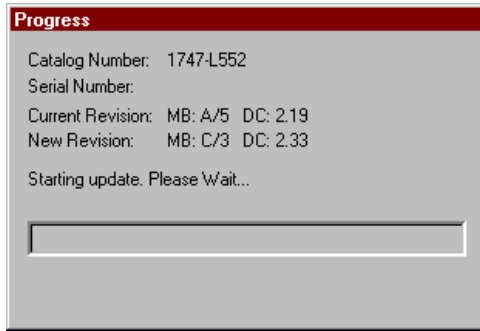

19. When the message 'Waiting while module burns flash...' and all progress bars are displayed, check the AB_SNMP dialog box (open it from your taskbar if it does not appear automatically). The AB_SNMP dialog box prompts you to turn off power, remove the processor, move the jumper to Program, re-insert the processor, and apply power.


ATTENTION

Do not remove the processor from the SLC 500 chassis until all power is removed from the SLC 500 power supply.

20. Wait for the ENET LED to turn solid green.
21. Click OK.




22. If your PC has more than one Ethernet interface installed, then the following dialog box displays the assigned IP addresses of each of the listed Ethernet interfaces. Otherwise, go to step 24.

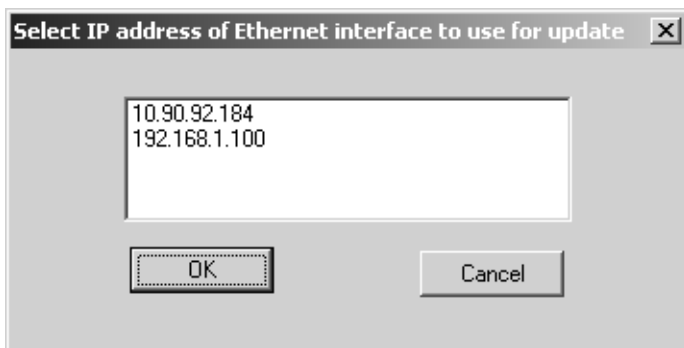




23. Highlight the IP address of the PC Ethernet interface that connects to the Ethernet network hosting the target processor. Click OK.

24. The AB_SNMP – BOOTP Server Running dialog box may appear.

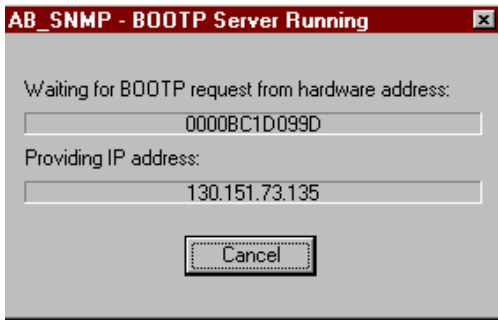

25. A Progress dialog box is displayed again. (A typical sequence is shown starting below). While the download is in progress, the RUN and FLT LED indicators remain off. The other four LED indicators – RS232, ENET, FORCE, and BATT – turn on and off in a walking bit sequence. When the update is complete, these four LED indicators remain on together. The download process of the firmware takes approximately 3 minutes.

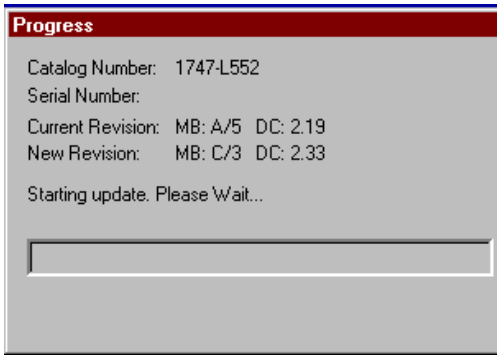

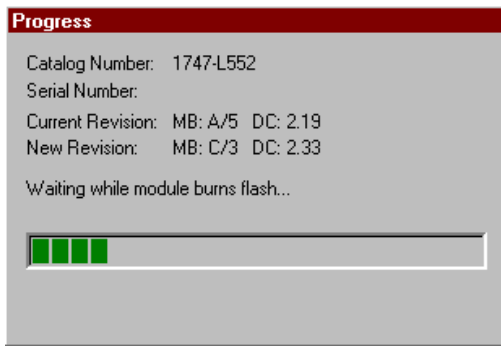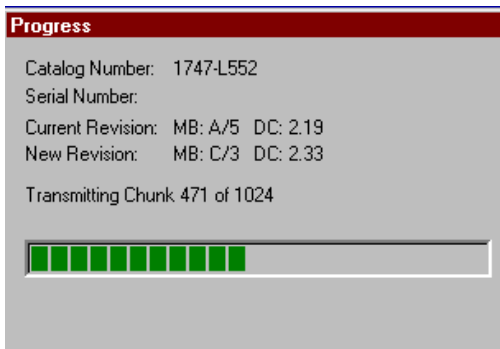

26. Open the AB_SNMP dialog box from the task bar if it does not appear automatically. Follow the dialog box prompts to verify the LEDs have stopped flashing, you have turned off power to the chassis and removed the processor, set the motherboard jumper J4 back to Protect, re-insert the processor and apply power to the chassis.


ATTENTION

Do not remove the processor from the SLC 500 chassis until all power is removed from the SLC 500 power supply.


27. Once you have re-applied power, wait for the ENET LED indicator to turn solid green. Click OK.




The AB_SNMP – BOOTP Server Running dialog box may appear.

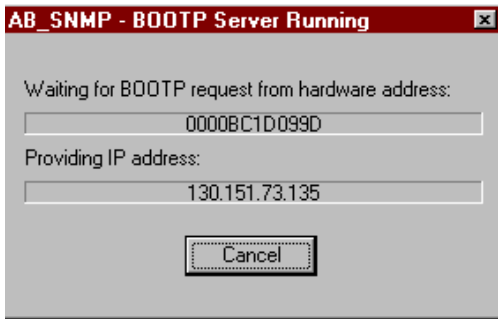


The Update Status dialog box is displayed. If the update was successful, the status text box is green and has an appropriate message.

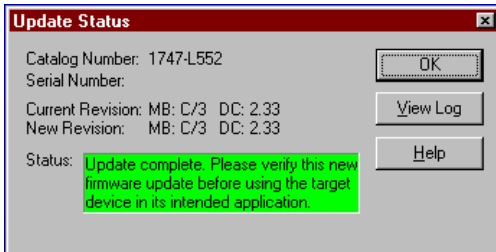


If the update was not successful, the status text box is red and has an appropriate message.

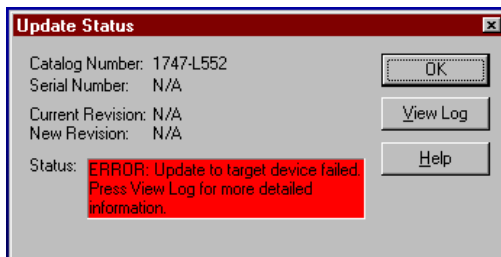

28. Click OK and you are returned to the Welcome to ControlFLASH dialog box.

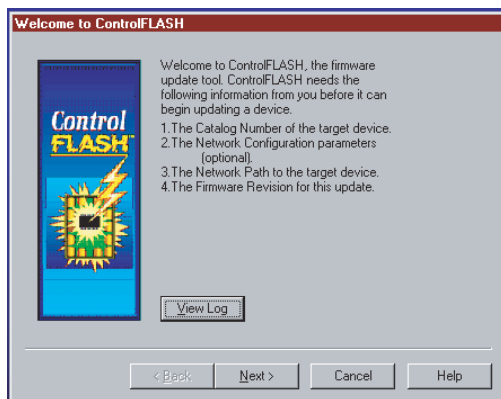

29. You may either continue upgrading additional SLC 5/05 processors by clicking Next, or you may exit the program by clicking Cancel. If you click cancel, you are asked to verify that you want to end the update session.

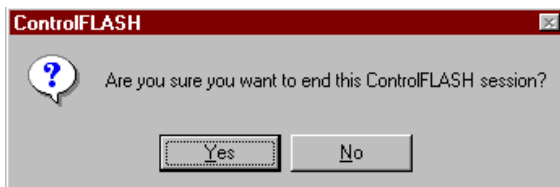

After Successfully Updating Your SLC 5/05 Processor

1. Remove power from the SLC 500 power supply and remove the processor from the chassis.

ATTENTION



Do not remove the processor from the SLC 500 chassis until all power is removed from the SLC 500 power supply.

2. Apply the enclosed operating system upgrade label to the SLC 5/05 processor nameplate.
3. Re-insert the processor into the chassis and apply power.
4. Restore your program to the processor.

ControlFLASH Error Messages


There are 3 error messages you can receive.

- Invalid Catalog Number
- Target Module Not in Proper State for Programming
- Failed to Receive Initial TFTP Request from Target

Invalid Catalog Number


The following error message is displayed if:

- the ControlFLASH tool is unable to match the processor to the catalog number that was selected in the catalog Number dialog box, or
- the tool is unable to identify the processor type selected because the J4 jumper is in the Program position.

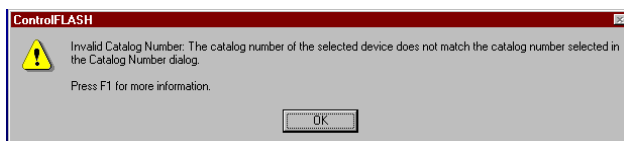

To clear this error:

1. Click the OK button.

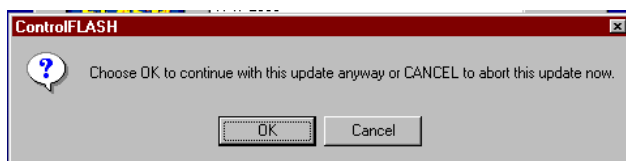

2. Click Cancel to go to the Catalog Number dialog box. You may either:
 - select the correct catalog number in the dialog box, and proceed with the update, or
 - power down the processor and check the J4 jumper position.


ATTENTION

Do not remove the processor from the SLC 500 chassis until all power is removed from the SLC 500 power supply.

3. Restart the firmware upgrade procedure at the section titled Use ControlFLASH.

Target Module Not in Proper State for Programming

The following dialog box is displayed when this error occurs:

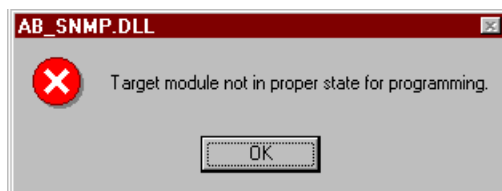



To clear this error:

1. Place the SLC 5/05 processor into PROG mode.

2. Restart the firmware upgrade process at the beginning of the Use ControlFLASH section. If the error occurs again, power-cycle the SLC 5/05 processor and restart the firmware upgrade process.

Failed to Receive Initial TFTP Request from Target

The following dialog box sequence is displayed when this error occurs:

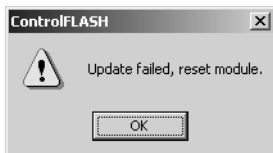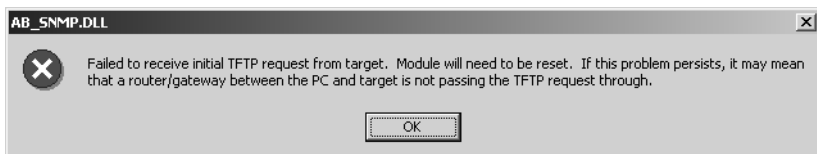

To clear this error:

1. Connect the processor's Ethernet port directly to the PC Ethernet port using a crossover cable, or disable or uninstall any firewall VPN or virus protection software running on the PC.
2. Power-cycle the processor.
3. Restart the firmware upgrade process.

Notes:

Rockwell Automation Support

Rockwell Automation provides technical information on the web to assist you in using its products. At <http://support.rockwellautomation.com>, you can find technical manuals, a knowledge base of FAQs, technical and application notes, sample code and links to software service packs, and a MySupport feature that you can customize to make the best use of these tools.

For an additional level of technical phone support for installation, configuration and troubleshooting, we offer TechConnect Support programs. For more information, contact your local distributor or Rockwell Automation representative, or visit <http://support.rockwellautomation.com>.

Installation Assistance

If you experience a problem with a hardware module within the first 24 hours of installation, please review the information that's contained in this manual. You can also contact a special Customer Support number for initial help in getting your module up and running:

United States	1.440.646.3223 Monday – Friday, 8am – 5pm EST
Outside United States	Please contact your local Rockwell Automation representative for any technical support issues.

New Product Satisfaction Return

Rockwell tests all of its products to ensure that they are fully operational when shipped from the manufacturing facility. However, if your product is not functioning and needs to be returned:

United States	Contact your distributor. You must provide a Customer Support case number (see phone number above to obtain one) to your distributor in order to complete the return process.
Outside United States	Please contact your local Rockwell Automation representative for return procedure.

SLC, SLC 500, RSLogix 500, and ControlFLASH are trademarks of Rockwell Automation.
Windows NT is a registered trademark of Microsoft Corporation.

www.rockwellautomation.com

Corporate Headquarters

Rockwell Automation, 777 East Wisconsin Avenue, Suite 1400, Milwaukee, WI, 53202-5302 USA, Tel: (1) 414.212.5200, Fax: (1) 414.212.5201

Headquarters for Allen-Bradley Products, Rockwell Software Products and Global Manufacturing Solutions

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444
Europe/Middle East/Africa: Rockwell Automation SA/NV, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640
Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Headquarters for Dodge and Reliance Electric Products

Americas: Rockwell Automation, 6040 Ponders Court, Greenville, SC 29615-4617 USA, Tel: (1) 864.297.4800, Fax: (1) 864.281.2433
Europe/Middle East/Africa: Rockwell Automation, Herman-Heinrich-Gossen-Strasse 3, 50858 Köln, Germany, Tel: 49 (0) 2234 379410, Fax: 49 (0) 2234 3794164
Asia Pacific: Rockwell Automation, 55 Newton Road, #11-01/02 Revenue House, Singapore 307987, Tel: (65) 6356 9077, Fax: (65) 6356 9011

Publication 1747-IN019D-EN-P - April 2005

PN 40071-111-01(4)

Supersedes Publication 1747-IN019C-EN-P - December 2001

Copyright © 2005 Rockwell Automation, Inc. All rights reserved. Printed in the U.S.A.