

BUELEC

100/1000Base-T1-TX-E
BUELEC 100/1000Base-T1 to RJ45
(100/1000Base-TX) Automotive
Ethernet Media Converter E Version

100/1000Base-T1-TX-E User Manual



Data	Version	Description
2024/11/1	V10	

1 Introduction

1.1 Low Cost Product Series

Product Name	T1 Interface	Power Supply	T1 Phy	Tx Phy	Size LxHxW(mm)
100/1000Base-T1-TX-E	15EDG3.81mm-2P MATENET Adapter MATENET Adapter	Type C	Marvell 88Q2112	RTL8211FI	50 × 20× 83
100/1000Base-T1-TX-TE	MATENET Male, 2302461-9	Type C DC Jack	Marvell 88Q2112	RTL8211FI	50 × 20× 83
100/1000Base-T1-TX-HMDT	H-MDT Male, E6S20A-40MT5-Z	Type C DC Jack	Marvell 88Q2112	RTL8211FI	50 × 20× 83

1.2 Product Description

The BUELEC 100/1000Base-T1-TX-E is a compact, high-performance media converter designed to bridge automotive single-pair Ethernet (100/1000BASE-T1) networks with standard twisted-pair Gigabit Ethernet (100/1000BASE-TX) infrastructure.

Utilizing the Marvell 88Q2112 PHY for T1 interface and Realtek RTL8211FI PHY for TX interface, this converter ensures seamless interoperability between modern automotive Ethernet systems and traditional IT/networking environments.

It is ideal for in-vehicle diagnostics (DoIP), smart cockpit domain controller flashing/upgrades, ADAS camera/radar development and debugging, industrial automation, and fleet management applications.

1.3 Product Features


- **Protocol Compliance:** Fully supports IEEE 802.3bw (1000BASE-T1) for automotive single-pair Ethernet and IEEE 802.3ab (1000BASE-T) for traditional Gigabit Ethernet, enabling reliable data transmission in mixed-network setups.
- **High-Speed Performance:** Delivers up to 1 Gbps full-duplex transmission rates over both T1 (single twisted pair) and TX (RJ45) interfaces, with auto-negotiation for 100/1000 Mbps compatibility and low-latency forwarding.

- **Robust Protection:** Integrated over-voltage, over-current, and ESD (electrostatic discharge) protection safeguards against electrical surges, meeting automotive-grade reliability standards.
- **Industrial-Grade Durability:** Engineered to industrial standards with a wide operating temperature range (-40°C to +85°C), humidity tolerance (0-95% RH non-condensing), vibration resistance, and EMI shielding, making it suitable for harsh environments like vehicles, factories, and outdoor installations.
- **Advanced Networking Support:** Includes IEEE 802.1Q VLAN tagging for traffic segmentation, QoS prioritization, and enhanced security in multi-device ecosystems.
- **Plug-and-Play Design:** Compact form factor (50mm x 20mm x 83mm) with standard T1 differential signal terminal (15EDG3.81mm-2P) on one side and RJ45 port on the other; powered via USB Type-C (DC 5V \pm 0.5V, \leq 355mA) for flexible deployment.

Released By Buelec

2 Hardware

2.1 Interfaces and Indicators (Detailed Description)

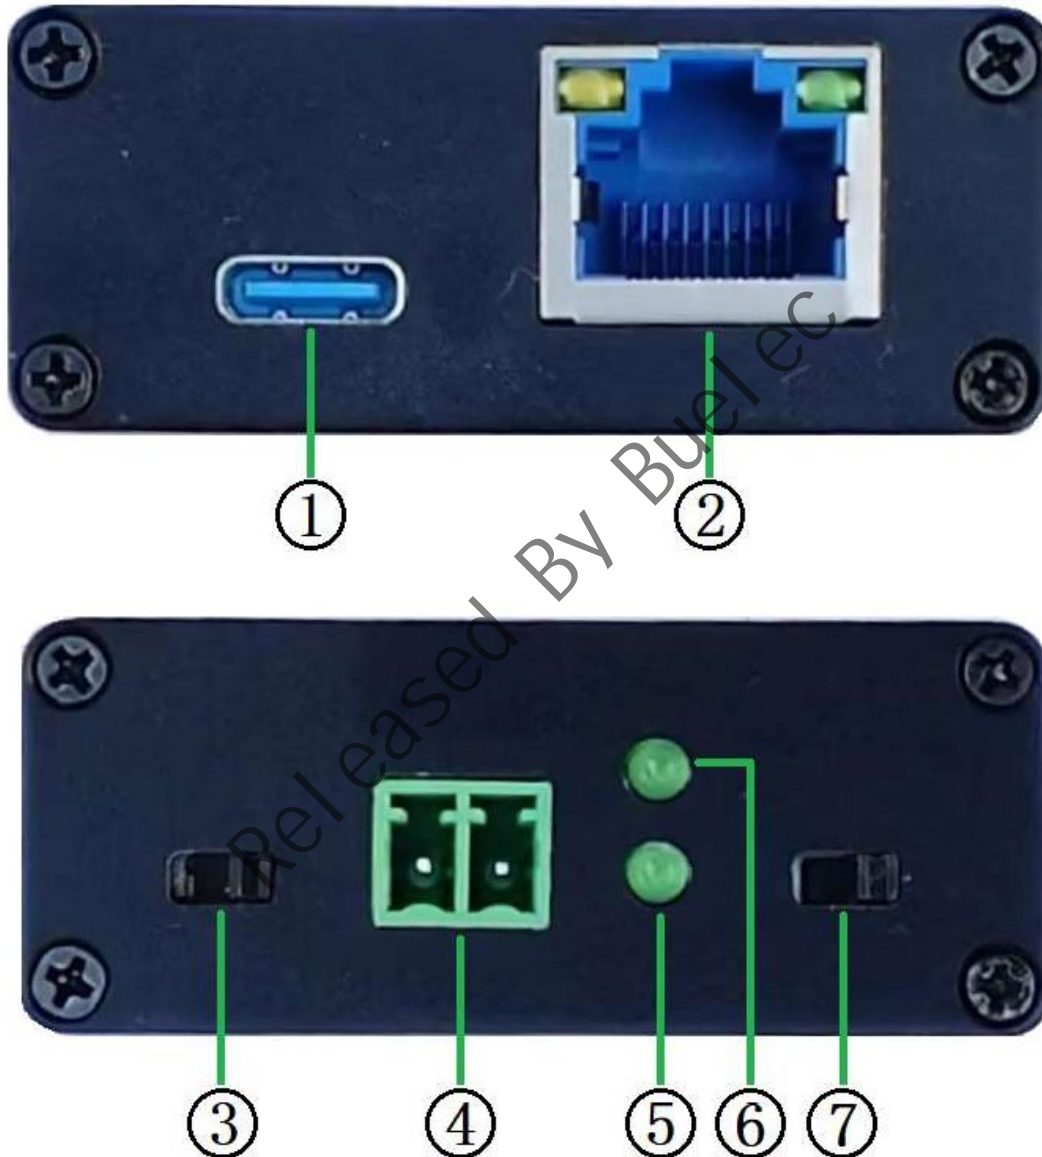

	Interface	Description
(1)	Power	USB Type-C power input (DC 5V). Connects via included Type-C USB cable for stable power supply.
(2)	RJ45	100/1000BASE-T Ethernet port. Connects to PCs, switches, or other network devices using 4 pairs of standard twisted-pair cable (CAT6 recommended).
(3)	Slave/Master Switch	Physical toggle switch for 100/1000BASE-T1 Master/Slave mode selection . Mode change takes effect immediately upon switching.
(5)	Status LED	Dual-function system and link/activity indicator: <ul style="list-style-type: none">• Solid Green: System self-test passed, and device is operating normally.
(6)	Status LED	<ul style="list-style-type: none">• Solid (T1 Link): 100/1000BASE-T1 link established.• Blinking: Data transmission/reception in progress on T1 interface.
(4)	+ / – (T1 Port)	100/1000BASE-T1 differential signal interface using 15EDG3.81mm-2P terminal block . Connects to ECU or other automotive Ethernet devices via a single twisted pair.
(7)	100M/1000M Switch	Physical toggle switch for selecting 100 Mbps or 1000 Mbps mode on the 100/1000BASE-T1 interface. Speed change takes effect immediately.

2.2 Typical Applications

PC/ARM ↔ RJ45 ↔ [1000BASE-T1-TX-E] ↔ Automotive Device / Network

Input Protocol	Output Protocol	Applications
100BASE-Tx	100BASE-T1	Vehicle diagnostics (DoIP), smart cockpit flashing, ADAS sensor debugging
1000BASE-Tx	1000BASE-T1	High-speed camera/radar data, ECU programming, R&D testing

The 1000BASE-T1-TX-E enables seamless conversion between industrial Ethernet and automotive single-pair Ethernet networks.


2.3 Product Specifications

Parameter	Specification
Input Voltage	5V ± 0.5V
Operating Current	≤ 355mA
Operating Temperature	-40°C to +85°C
Operating Humidity	0~95% RH (non-condensing)
Dimensions LxHxW	50mm × 20mm × 83mm

2.4 Automotive Ethernet Transmission Distance

T1 Speed Mode	Cable Type	Max Distance
100BASE-T1	Unshielded Twisted Pair (UTP)	20 m
100BASE-T1	Shielded Twisted Pair (STP)	50 m
1000BASE-T1	Unshielded Twisted Pair (UTP)	15 m
1000BASE-T1	Shielded Twisted Pair (STP)	40 m

3 Connection Diagram

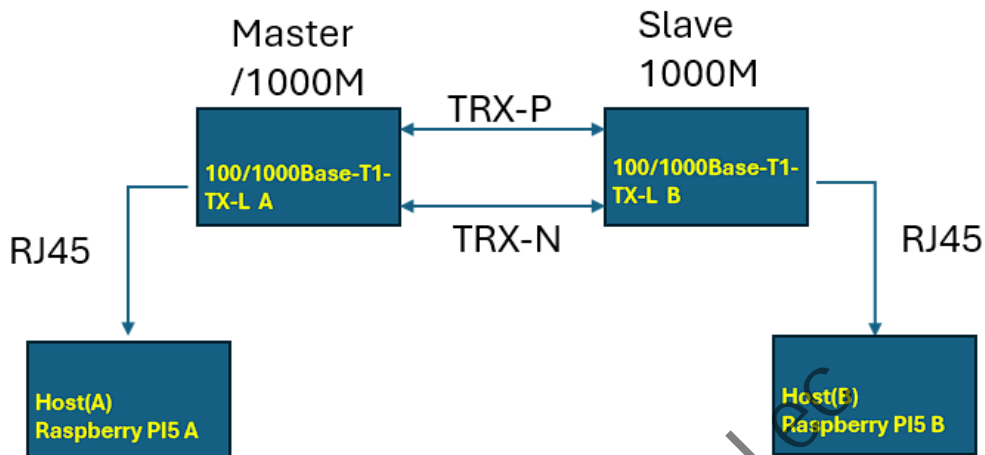

Note:

There must be one device set as Master, Another One set as Slave.
Both of the devices should set to the same Speed.

4 User Guide for Linux Os

We use 2 Raspberry PI5, one as client(Master) and one as server(Slave)

Hardware connection as chapter 3.

4.1 Install iperf3

Open terminal window of both raspberry pi5.

```
sudo apt-get install iperf3
```

**Note: Do not choose iperf3 as a daemon automatically.
Or it will fail when you run next boot.**

Download python scripts from our github.

```
sudo git clone https://github.com/buelec-tech/100-1000Base-T1-TX-L
```

4.2 Turn off WI-FI

4.3 Set IP And Ping

Host A As Client (190.19.1.9), Host B As Server (190.19.1.90)

Host A (Raspberry PI5 A), Client	Host B (Raspberry PI5 B), Server
<code>sudo ifconfig eth0 down</code> <code>sudo ifconfig eth0 190.19.1.9</code> <code>sudo ifconfig eth0 up</code>	<code>sudo ifconfig eth0 down</code> <code>sudo ifconfig eth0 190.19.1.90</code> <code>sudo ifconfig eth0 up</code>

Open **Host A** Terminal window, run below command check if network connected.

```
sudo ping eth0 -i 190.19.1.90
```

- If work, then go ahead with chapter 4.4
- If it does not work, re-check connection follow chapter3

4.4 TCP Test

Open Host B (190.19.1.90) Terminal, Set as server

```
sudo iperf3 -s
```

Note: if your system does not install iperf3, follow chapter 4.1

Open Host A (190.19.1.9) Terminal, send data.

```
sudo iperf3 -c 190.19.1.90 -n 8000M -i 30
```

```
Connecting to host 190.19.1.90, port 5201
[ 5] local 190.19.1.9 port 48790 connected to 190.19.1.90 port 5201
[ ID] Interval           Transfer     Bitrate      Retr  Cwnd
[ 5]  0.00-30.00 sec    3.27 GBytes  937 Mbits/sec    0   518 KBytes
[ 5] 30.00-60.00 sec    3.27 GBytes  936 Mbits/sec    0   518 KBytes
[ 5] 60.00-71.63 sec    1.27 GBytes  937 Mbits/sec    0   518 KBytes
- - - - -
[ ID] Interval           Transfer     Bitrate      Retr
[ 5]  0.00-71.63 sec    7.81 GBytes  937 Mbits/sec    0             sender
[ 5]  0.00-71.64 sec    7.81 GBytes  937 Mbits/sec             receiver
```

4.4 UDP Test

Open Host B (190.19.1.90) Terminal, Set as server


```
sudo iperf3 -s
```

Open Host A (190.19.1.9) Terminal , Set as client and send data.

```
sudo iperf3 -c 190.19.1.90 -u -b 8000M -l 8k -n 1000M
```

```
Connecting to host 190.19.1.90, port 5201
[ 5] local 190.19.1.9 port 38178 connected to 190.19.1.90 port 5201
[ ID] Interval      Transfer    Bitrate      Retr  Cwnd
[ 5]  0.00-30.00  sec  3.27 GBytes  937 Mbits/sec  0    544 KBytes
[ 5]  30.00-60.00  sec  3.27 GBytes  937 Mbits/sec  0    1.37 MBytes
[ 5]  60.00-71.63  sec  1.27 GBytes  936 Mbits/sec  0    1.37 MBytes
-----
[ ID] Interval      Transfer    Bitrate      Retr
[ 5]  0.00-71.63  sec  7.81 GBytes  937 Mbits/sec  0
[ 5]  0.00-71.63  sec  7.81 GBytes  936 Mbits/sec
sender
receiver
iperf Done.
```

5 User Guide for Windows

We use 2 windows computers, one as client(Master) and one as server(Slave)

Hardware connection as chapter 3.

5.1 Install iperf3

Download from our github link:

<https://github.com/buelec-tech/100-1000Base-T1-TX-L> unzip iperf3.6_64bit.zip

5.2 Turn off firewalls

5.3 Set IP And Ping

Computer A IP,Client	Computer B IP ,Server
----------------------	-----------------------

<p>General</p> <p>You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.</p> <p><input type="radio"/> Obtain an IP address automatically</p> <p><input checked="" type="radio"/> Use the following IP address:</p> <p>IP address: <input type="text" value="190 . 19 . 1 . 9"/></p> <p>Subnet mask: <input type="text" value="255 . 255 . 0 . 0"/></p> <p>Default gateway: <input type="text" value="190 . 19 . 1 . 1"/></p> <p><input type="radio"/> Obtain DNS server address automatically</p> <p><input checked="" type="radio"/> Use the following DNS server addresses:</p> <p>Preferred DNS server: <input type="text" value="8 . 8 . 8 . 8"/></p> <p>Alternate DNS server: <input type="text" value="8 . 8 . 4 . 4"/></p> <p><input type="checkbox"/> Validate settings upon exit</p> <p>Advanced...</p>	<p>General</p> <p>You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.</p> <p><input type="radio"/> Obtain an IP address automatically</p> <p><input checked="" type="radio"/> Use the following IP address:</p> <p>IP address: <input type="text" value="190 . 19 . 1 . 90"/></p> <p>Subnet mask: <input type="text" value="255 . 255 . 0 . 0"/></p> <p>Default gateway: <input type="text" value="190 . 19 . 1 . 1"/></p> <p><input type="radio"/> Obtain DNS server address automatically</p> <p><input checked="" type="radio"/> Use the following DNS server addresses:</p> <p>Preferred DNS server: <input type="text" value="8 . 8 . 8 . 8"/></p> <p>Alternate DNS server: <input type="text" value="8 . 8 . 4 . 4"/></p> <p><input type="checkbox"/> Validate settings upon exit</p> <p>Advanced...</p>
<p>190.19.1.9</p> <p>255.255.0.0</p> <p>190.19.1.1</p> <p>8.8.8.8</p> <p>8.8.4.4</p>	<p>190.19.1.90</p> <p>255.255.0.0</p> <p>190.19.1.1</p> <p>8.8.8.8</p> <p>8.8.4.4</p>

Open Terminal (Admin) on Computer A, Switch to the iperf3 directory

Terminal

Terminal (Admin)

```
cd F:\iperf3.6_64bit
```

```
ping -i 190.19.1.9 190.19.1.90 # ping from 190.19.1.9(client)
PS F:\iperf3.6_64bit> ping -i 190.19.1.9 190.19.1.90

Pinging 190.19.1.90 with 32 bytes of data:
Reply from 190.19.1.90: bytes=32 time=2ms TTL=128
Reply from 190.19.1.90: bytes=32 time=2ms TTL=128
Reply from 190.19.1.90: bytes=32 time=2ms TTL=128
Reply from 190.19.1.90: bytes=32 time=3ms TTL=128

Ping statistics for 190.19.1.90:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 2ms, Maximum = 3ms, Average = 2ms
```

5.4 100M Test

Open Host B (190.19.1.90) Terminal, Set as server

```
.\iperf3.exe -B 190.19.1.90 -s # Host B listen
```

Open Host A (190.19.1.9) Terminal, Set as client and send data.

```
.\iperf3.exe -c 190.19.1.90 -B 190.19.1.9 -w 100M -t 10 # Host A send data
```

```
PS F:\iperf3.6_64bit> .\iperf3.exe -c 190.19.1.90 -B 190.19.1.9 -w 100M -t 10
warning: Ignoring nonsense TCP MSS 0
Connecting to host 190.19.1.90, port 5201
[ 5] local 190.19.1.9 port 9557 connected to 190.19.1.90 port 5201
[ ID] Interval           Transfer     Bitrate
[ 5] 0.00-1.00 sec      111 MBytes  933 Mbits/sec
[ 5] 1.00-2.00 sec      11.2 MBytes  94.4 Mbits/sec
[ 5] 2.00-3.00 sec      11.4 MBytes  95.3 Mbits/sec
[ 5] 3.00-4.00 sec      11.4 MBytes  95.5 Mbits/sec
[ 5] 4.00-5.00 sec      11.2 MBytes  94.4 Mbits/sec
[ 5] 5.00-6.00 sec      11.4 MBytes  95.3 Mbits/sec
[ 5] 6.00-7.00 sec      11.2 MBytes  94.4 Mbits/sec
[ 5] 7.00-8.00 sec      11.4 MBytes  95.5 Mbits/sec
[ 5] 8.00-9.00 sec      11.2 MBytes  94.4 Mbits/sec
[ 5] 9.00-10.00 sec     11.4 MBytes  95.4 Mbits/sec
-----
[ ID] Interval           Transfer     Bitrate
[ 5] 0.00-10.00 sec     213 MBytes  179 Mbits/sec
[ 5] 0.00-10.13 sec     114 MBytes  94.6 Mbits/sec
sender
receiver
```

5.4 1000M Test

Open Host B (190.19.1.90) Terminal, Set as server

```
.\iperf3.exe -B 190.19.1.90 -s # Host B listen
```

Open Host A (190.19.1.9) Terminal, Set as client and send data.

```
.\iperf3.exe -c 190.19.1.90 -B 190.19.1.9 -w 100M -t 1
# -c <host address> ,-B <Client address >
```

6 Packing List

No.	Item	Quantity	Unit
1	1000BASE-T1-TX-E Converter	1	pcs
2	2-Pin Terminal Block (15EDG3.81mm-2P)	1	pcs
3	Type-C USB Power Cable	1	pcs
4	CAT6 Ethernet Cable	1	pcs
5	TE MATEnet (1x1) 150mm pigtail to terminal block 	1	pcs
6	Rosenberger HMD-T 150mm pigtail to terminal block 	1	pcs

6.1 Accessories Recommend

<https://www.buelec-tech.com/product/1000base-t1-cable-h-mdt/>

<https://www.buelec-tech.com/product/1000base-t1-cable-matenet-connector/>

BUELEC

100/1000Base-T1-TX-E

BUELEC 100/1000Base-T1 to RJ45
(100/1000Base-TX) Automotive
Ethernet Media Converter E Version

