

EZO-HUMTM

Embedded Humidity sensor with plastic body

Reads	Relative humidity (RH) Dew point Air temperature
Range	0 – 100% RH
Calibration	Factory calibrated
Response time	1 reading per second (UART mode) 1 reading per 300 milliseconds (I2C mode)
Accuracy	+/- 2% of reading from 5 – 95% RH
Body material	9000R – photosensitive resin
Connector	5 lead data cable
Cable length	1 meter
Data protocol	UART & I²C
Default I2C address	111 (0x6F)
Data format	ASCII
Operating voltage	3.3V – 5V
IP rating	IP67
NEMA rating	6P
Life expectancy	10 years

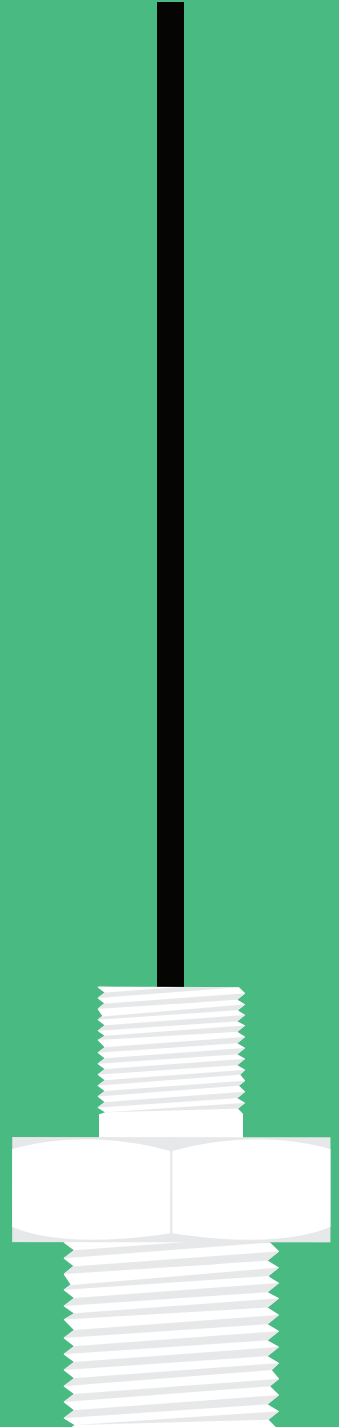


Table of contents

Physical properties	4	Absolute max ratings	5
Pin out	4	Calibration theory	6
Power consumption	5	Default state	7
		Available data protocols	8

UART

UART mode	10
Receiving data from device	11
Sending commands to device	12
LED color definition	13
UART quick command page	14
LED control	15
Find	16
Continuous mode	17
Single reading mode	18
Auto monitor	19
Enable/disable parameters	20
Temperature calibration	21
Naming device	22
Device information	23
Response codes	24
Reading device status	25
Sleep mode/low power	26
Change baud rate	27
Protocol lock	28
Factory reset	29
Change to I ² C mode	30
Manual switching to I ² C	31

I²C

I ² C mode	33
Sending commands	34
Requesting data	35
Response codes	36
Processing delay	36
LED color definition	37
I²C quick command page	38
LED control	39
Find	40
Taking reading	41
Auto monitor	42
Enable/disable parameters	43
Temperature calibration	44
Naming device	45
Device information	46
Reading device status	47
Sleep mode/low power	48
Protocol lock	49
I ² C address change	50
Factory reset	51
Change to UART mode	52
Manual switching to UART	53

Datasheet change log	54
Firmware updates	54
Warranty	55

Attention


Humidity readings are temperature dependent. A small temperature change can have a large affect on humidity. Calibrate the on-board temperature sensor if needed.

Direct sunlight will heat the sensor above the air temperature, making the readings incorrect.

Can the sensor get wet?





Don't do that

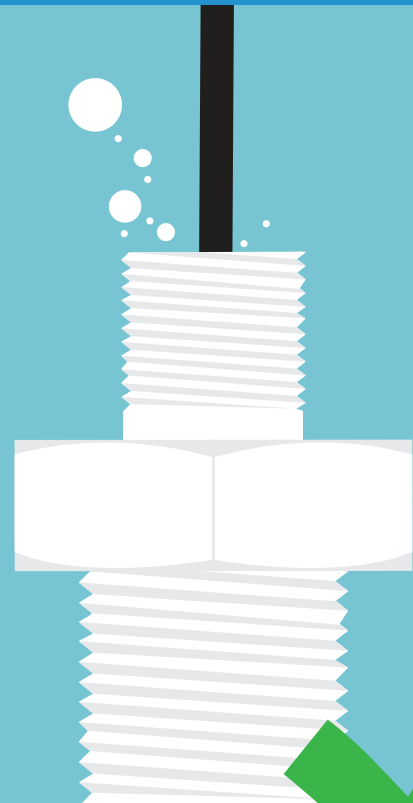

Yes, readings will be $>100\%$ when wet and will return to normal once dry.

Physical properties

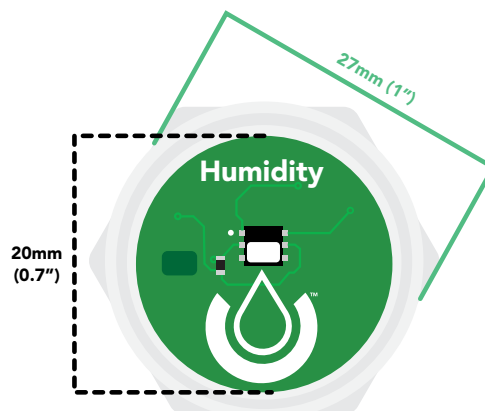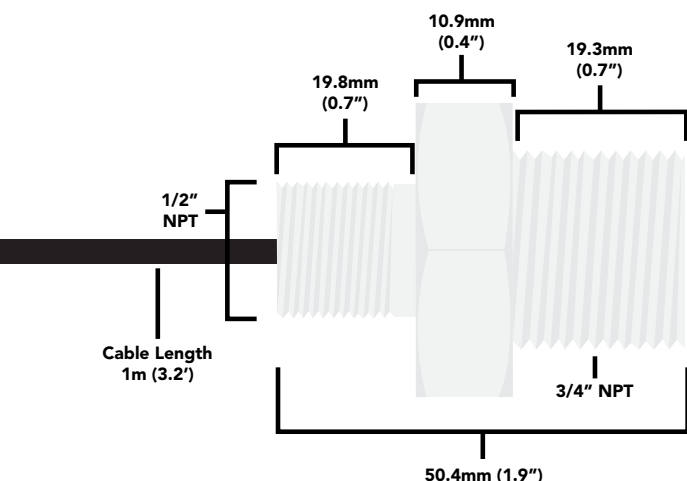

Weight 61g

IP rating IP67

NEMA rating 6P

Body 9000R – Photosensitive Resin

Pin out

1 1/16"
27mm




Data and power
cable pinout

White – RX/SCL
Green – TX/SDA
Black – GND
Red – VCC
Blue – AUTO



Should you need to remove this connector from the data cable, follow the provided illustration.

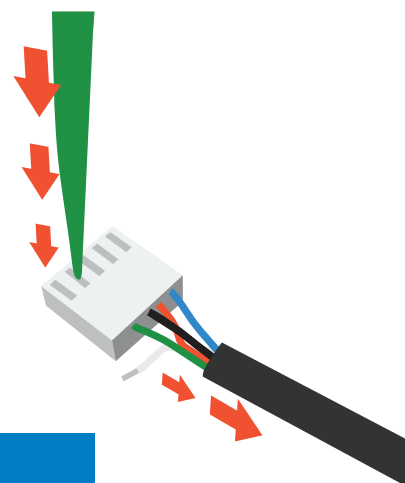

The auto monitor pin will go high when a set humidity has been reached.

57.38%

0V

VCC

*Auto monitor set to 57.38%

If unused leave **AUTO** floating. Do not connect **AUTO** to **VCC** or **GND**.

See page 19 to enable auto-monitoring in UART mode.
See page 42 to enable auto-monitoring in I2C mode.


Power consumption

	LED	MAX	SLEEP
5V	ON	2.6 mA	0.5 mA
	OFF	2.4 mA	
3.3V	ON	2.2. mA	0.3 mA
	OFF	2.0 mA	

Absolute max ratings

Parameter	MIN	TYP	MAX
Storage temperature	-30 °C		65 °C
Operational temperature	-20 °C	25 °C	65 °C
VCC	3.3V	3.3V	5.5V


Humidity

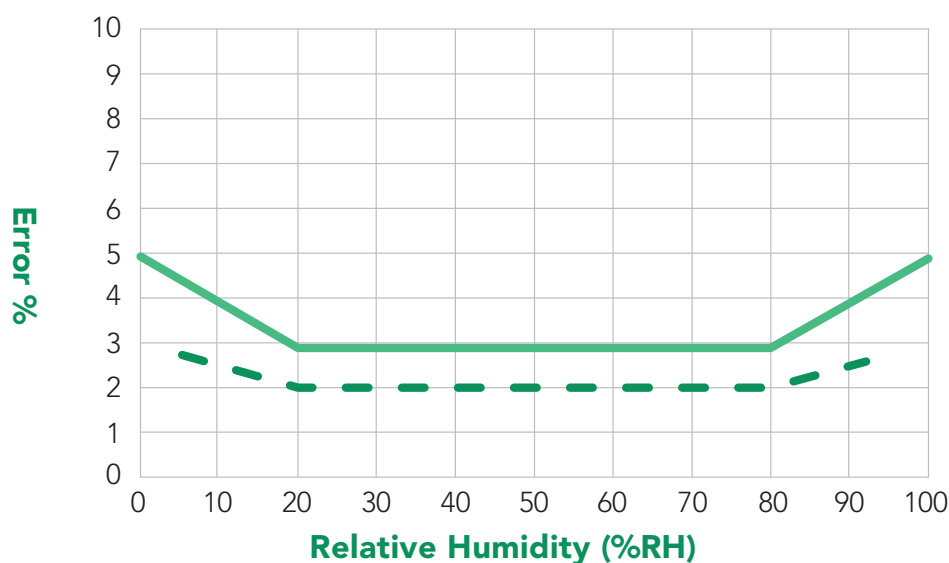

Accuracy decreases from 5% to 0% RH and from 100% to 95% RH. This means that some sensors may never reach 0% or 100% RH.

T90 = 10 Seconds

Air temperature

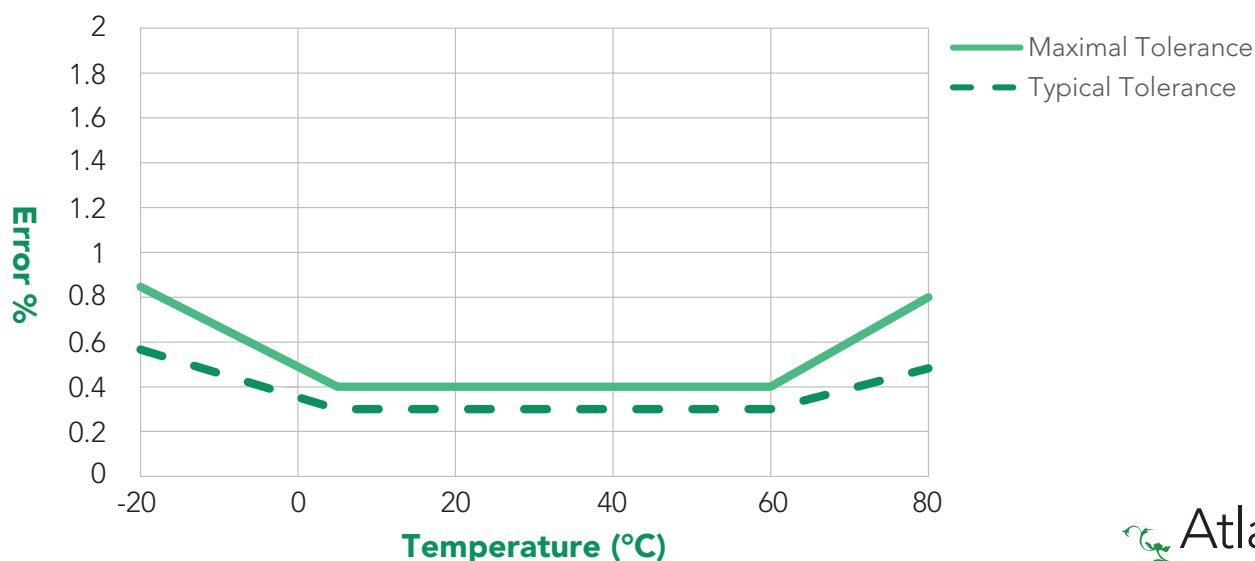


Calibration theory

Most humidity sensors do not need calibration. However, if your readings need an adjustment, use the “Tcal” command to calibrate the on-board temperature sensor.

Humidity readings are heavily dependent on temperature. Even a small discrepancy in temperature can have a large effect on humidity.

See page **21** for Temperature calibration in UART mode.

See page **44** for Temperature calibration in I2C mode.

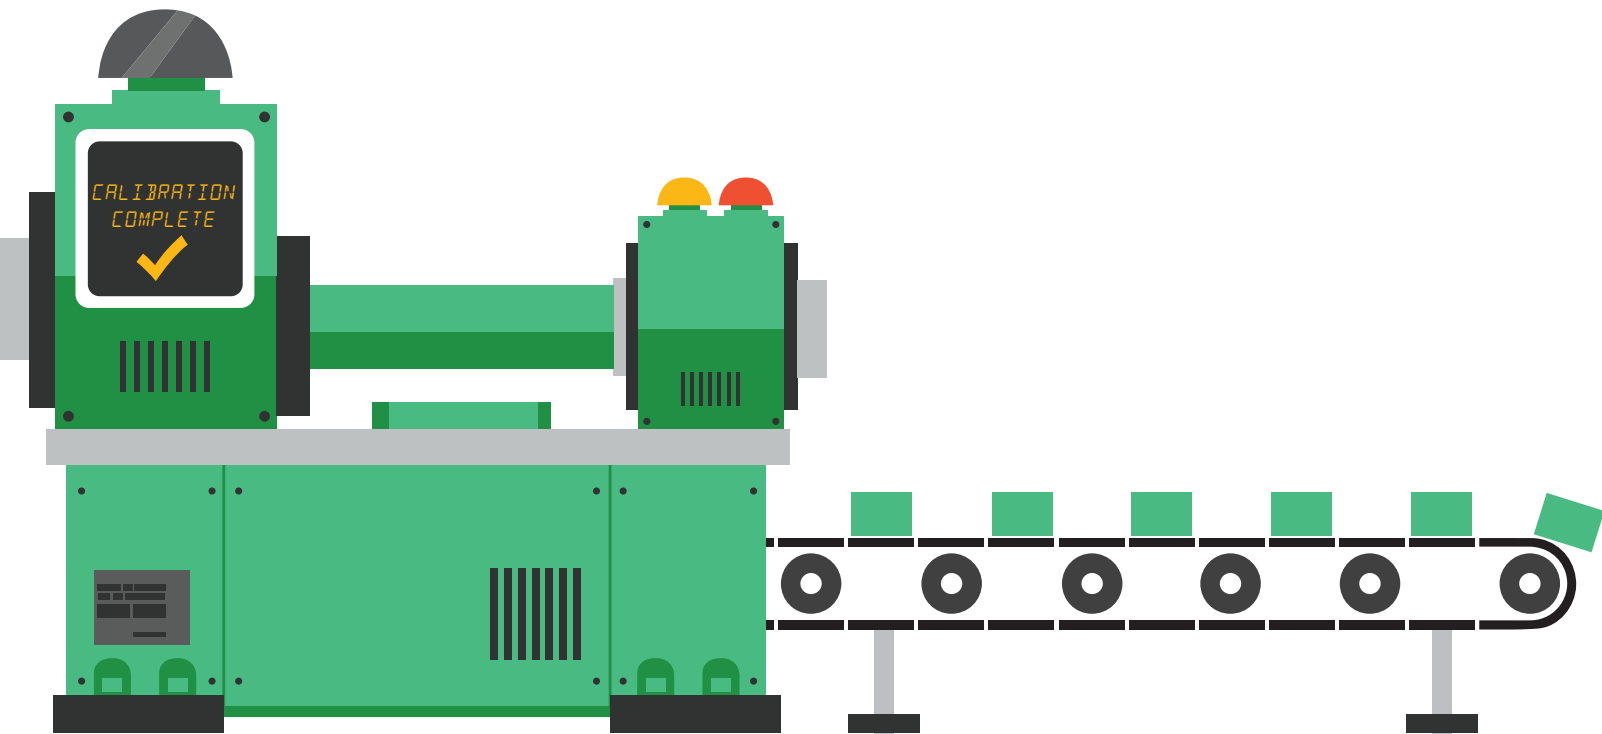

Default state

UART mode

Baud

9,600

Readings


continuous

Speed

1 second

LED

on

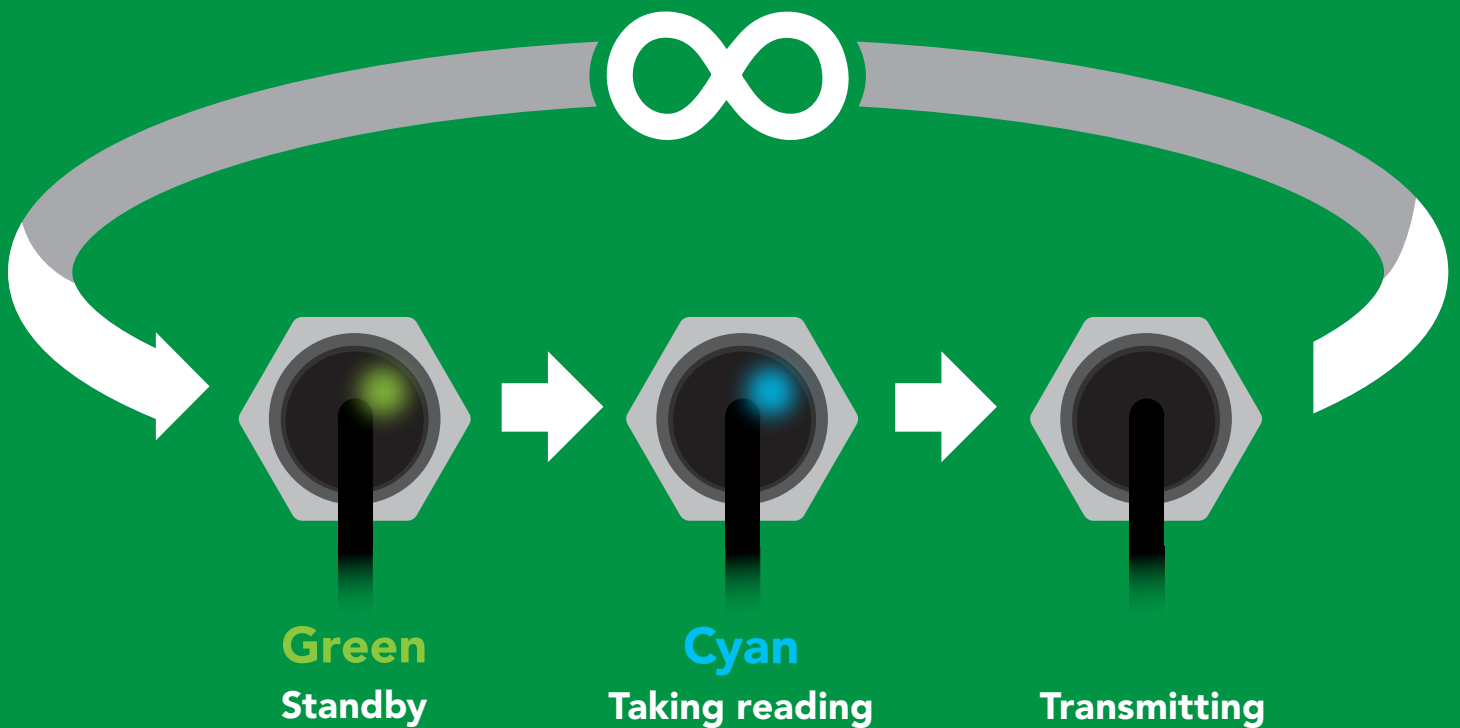

✓ Available data protocols

UART

default

I²C

✗ Unavailable data protocols

SPI

Analog

RS-485

Mod Bus

4–20mA

UART mode

Settings that are retained if power is cut

- Auto monitor
- Baud rate
- Continuous mode
- Device name
- Enable/disable parameters
- Enable/disable response codes
- Hardware switch to I2C mode
- LED control
- Protocol lock
- Software switch to I2C mode

Settings that are **NOT** retained if power is cut

- Sleep mode

UART mode

8 data bits
1 stop bit

no parity
no flow control

Baud 300
1,200
2,400
9,600 default
19,200
38,400
57,600
115,200

RX
Data in



TX
Data out




Vcc 3.3V – 5V

0V



0V

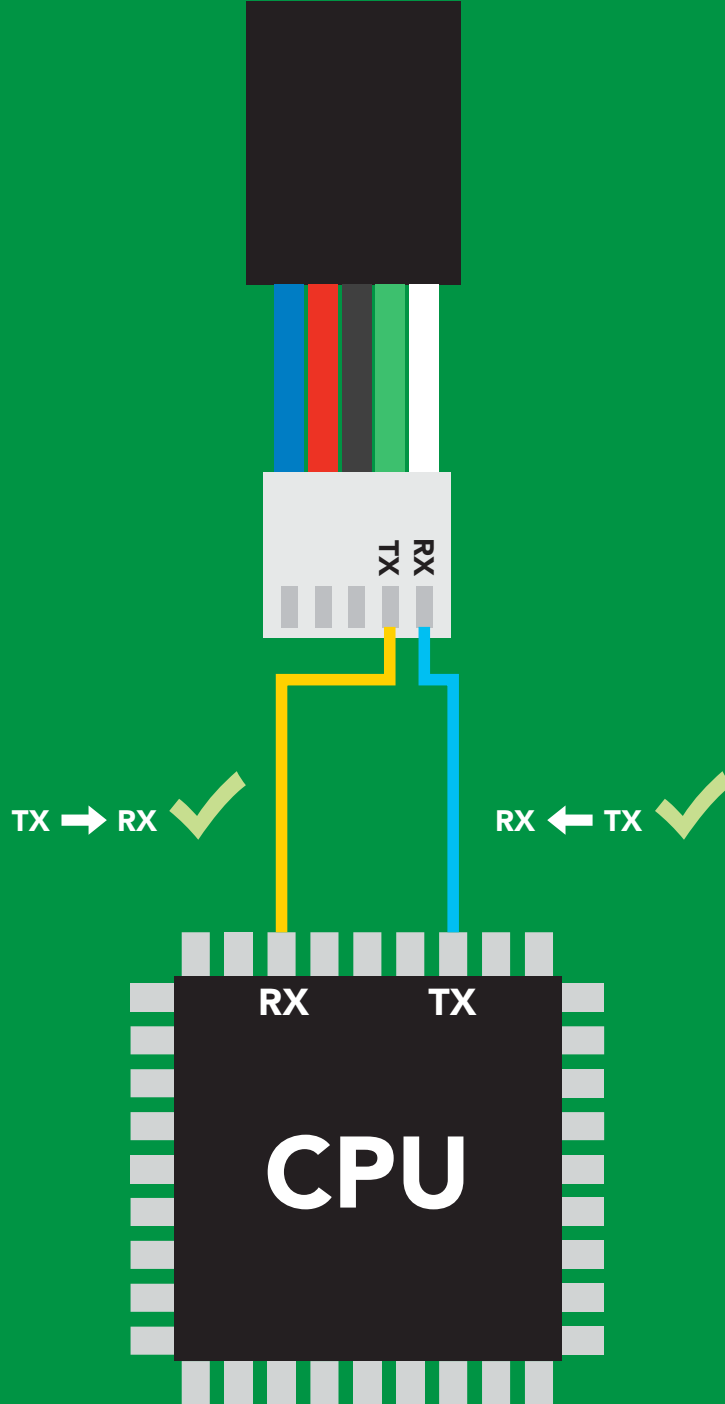

Data format

Reading Humidity
Air Temperature
Dew point

Units % Relative humidity
Air Temperature °C (when enabled)
Dew point Temperature °C (when enabled)

Encoding ASCII (CSV string if temp/
dew point enabled)

Terminator carriage return

Data type floating point

Decimal places 2

Smallest string 4 characters

Largest string 24 characters

Receiving data from device


2 parts

ASCII data string

Command

Carriage return <cr>

Terminator

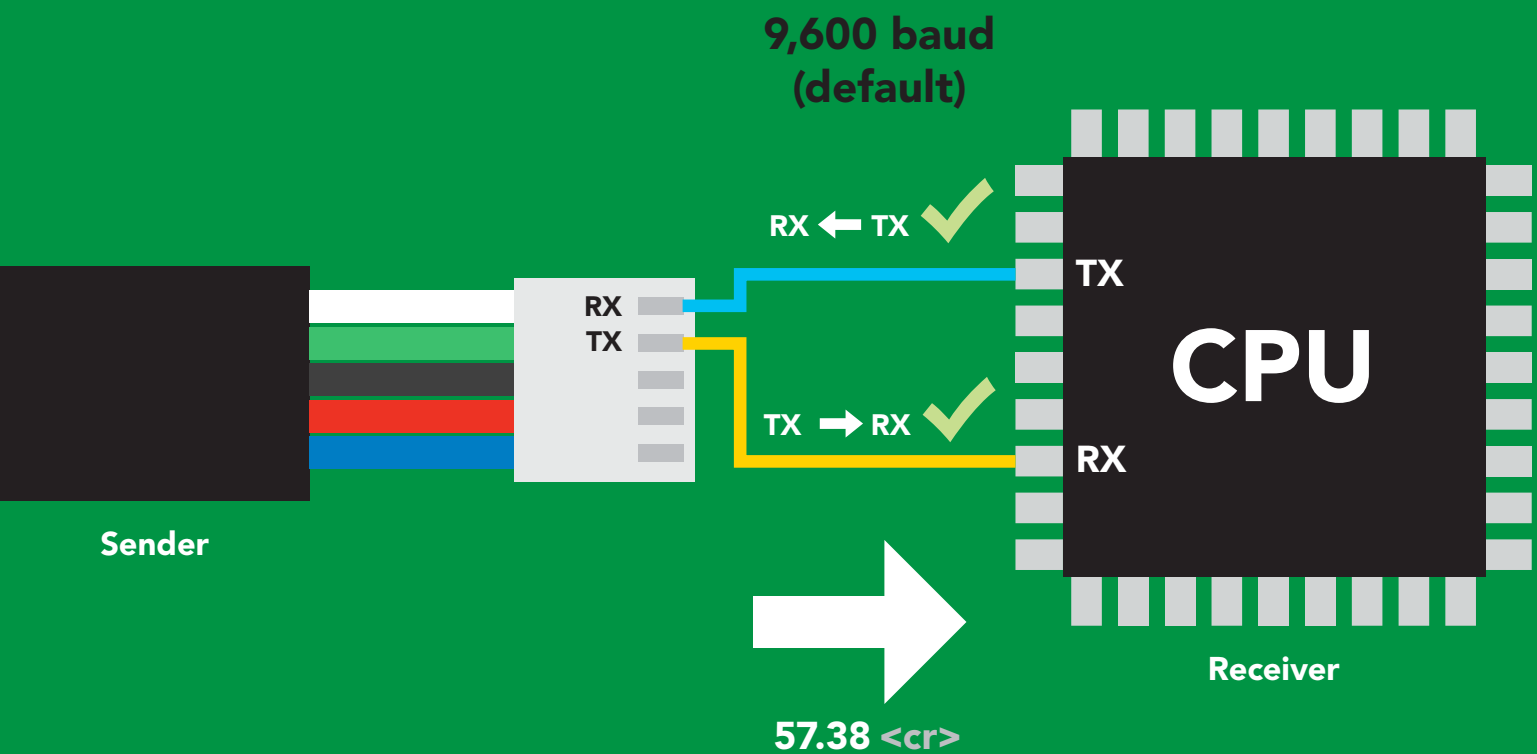

Advanced

ASCII: 5 7 . 3 8 <cr>

Hex: 35 37 2E 33 38 0D

Dec: 53 55 46 51 56 13

Sending commands to device


2 parts

Command (not case sensitive)

ASCII data string

Carriage return <cr>

Terminator

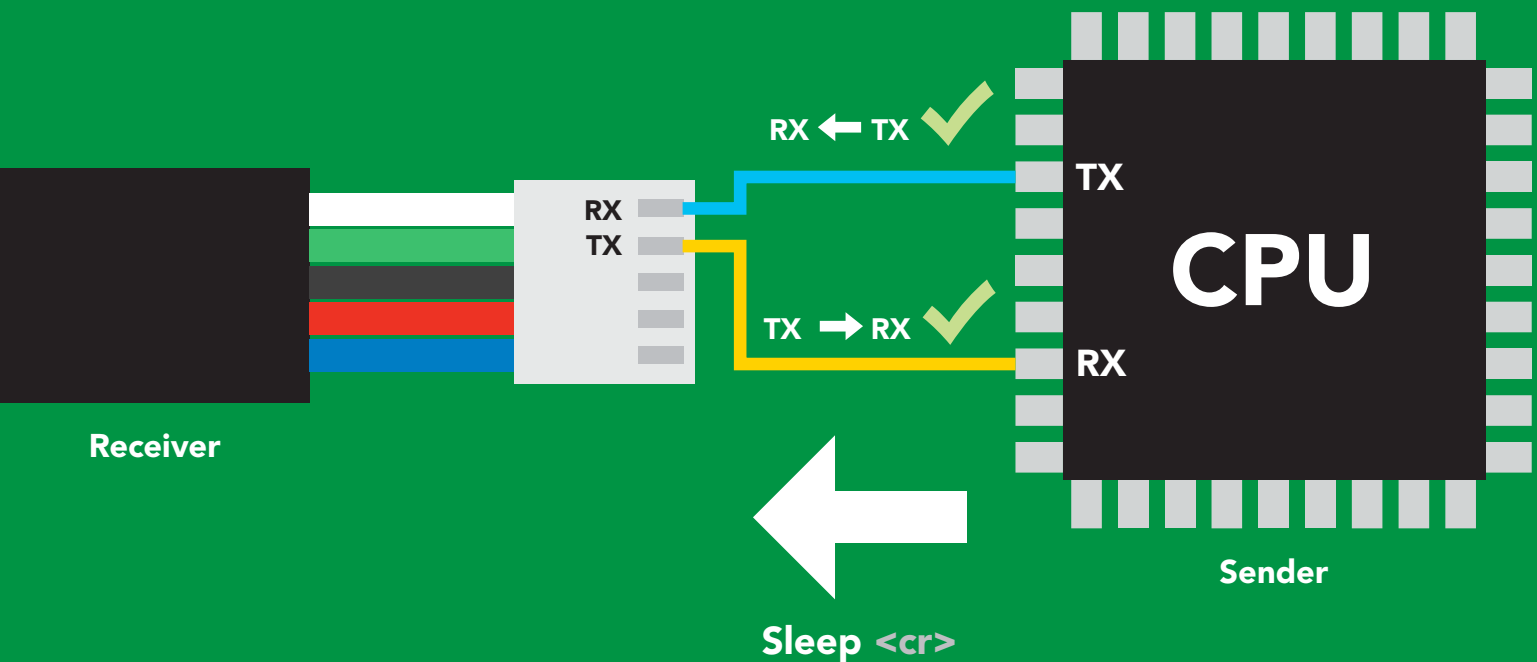

Advanced

ASCII: **S** **I** **e** **e** **p** **<cr>**

Hex: **53** **6C** **65** **65** **70** **0D**

Dec: **83** **108** **101** **101** **112** **13**

Indicator LED definition



Green

UART standby




Cyan

Taking reading



Purple

Changing
I²C address

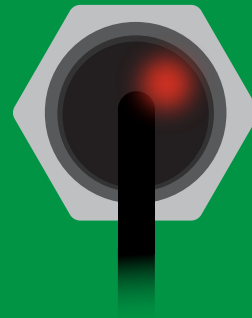

Red

Command
not understood



White

Find

5V

LED ON
+0.2 mA

3.3V

+0.2 mA

UART mode

command quick reference

All commands are ASCII strings or single ASCII characters.

Command	Function		Default state
Auto	enable/disable auto monitor	pg. 19	disabled
Baud	change baud rate	pg. 27	9,600
C	enable/disable continuous mode	pg. 17	enabled
Factory	enable factory reset	pg. 29	n/a
Find	finds device with blinking white LED	pg. 16	n/a
i	device information	pg. 23	n/a
I2C	change to I ² C mode	pg. 30	not set
L	enable/disable LED	pg. 15	enabled
Name	set/show name of device	pg. 22	not set
O	enable/disable parameters	pg. 20	HUM
Plock	enable/disable protocol lock	pg. 28	n/a
R	returns a single reading	pg. 18	n/a
Sleep	enter sleep mode/low power	pg. 26	n/a
Status	retrieve status information	pg. 25	n/a
Tcal	performs temperature calibration	pg. 21	n/a
*OK	enable/disable response codes	pg. 24	n/a

LED control

Command syntax

L,1 <cr> LED on **default**

L,0 <cr> LED off

L,? <cr> LED state on/off?

Example

Response

L,1 <cr>

*OK <cr>

L,0 <cr>

*OK <cr>

L,? <cr>

?L,1 <cr> **or** ?L,0 <cr>
*OK <cr>



L,1



L,0

Find

Command syntax

This command will disable continuous mode
Send any character or command to terminate find.


Find <cr> LED rapidly blinks white, used to help find device

Example

Find <cr>

Response

***OK** <cr>

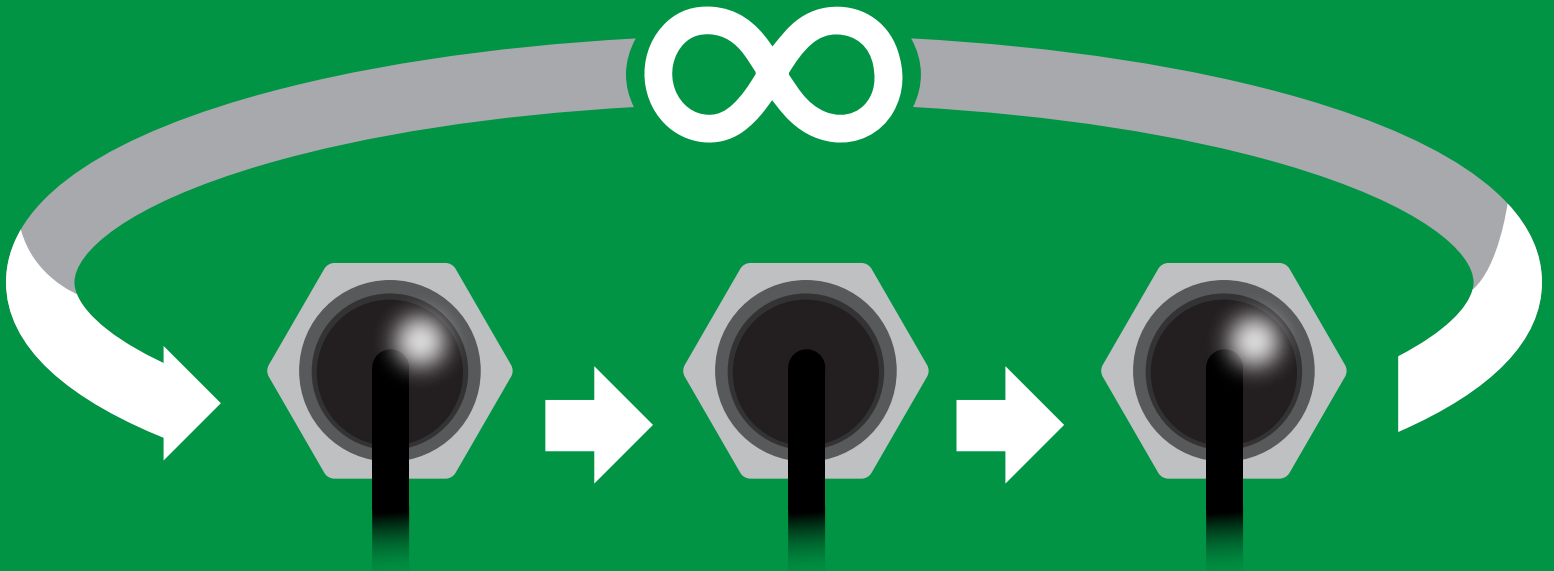

Continuous mode

Command syntax

- C,1 <cr>** enable continuous readings once per second **default**
- C,n <cr>** continuous readings every n seconds (n = 2 to 99 sec)
- C,0 <cr>** disable continuous readings
- C,? <cr>** continuous mode settings

Example	Response
C,1 <cr>	*OK <cr> HUM (1 sec) <cr> HUM (2 sec) <cr> HUM (n sec) <cr>
C,30 <cr>	*OK <cr> HUM (30 sec) <cr> HUM (60 sec) <cr> HUM (90 sec) <cr>
C,0 <cr>	*OK <cr>
C,? <cr>	?C,1 <cr> or ?C,0 <cr> or ?C,30 <cr> *OK <cr>

Single reading mode

Command syntax

R <cr> takes single reading

Example

R <cr>

Response


57.38 <cr>
*OK <cr>



Green
Standby



Cyan
Taking reading

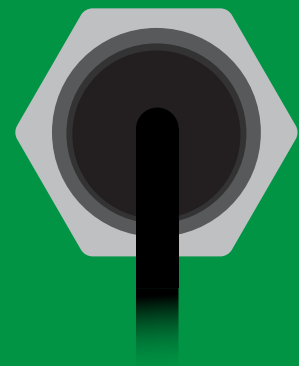

Transmitting



1 second

Auto monitor

Command syntax

When enabled, the sensor will continuously monitor the readings and set the auto monitor pin high when your value has been reached. When Auto Monitor is enabled, it is not necessary to actively take readings (continuous mode can be disabled).

Auto,en, [0,1,2] <cr> 0 = disable, 1= Enable for humidity, 2= Enable for dew point

Auto,n <cr> The value that will set the alarm pin

Auto,tol,n <cr> The value that will reset the alarm pin

Auto,? <cr> Auto monitor settings

Example

Response

Auto,en,1 <cr>

***OK <cr>** Enable humidity automonitoring

Auto,57.38 <cr>

***OK <cr>** Set alarm to go off at 57.38% humidity

Auto,tol,1.2 <cr>

***OK <cr>** The humidity must fall 1.2 percentage points below set point for alarm to reset.

Auto,? <cr>

?,auto,57.38,1.20,1 <cr> if all are enabled



Enable/disable parameters from output string

Command syntax

O, [parameter],[1,0] <cr> enable or disable output parameter
O,? <cr> enabled parameter?

Example

O,HUM,1 / O,HUM,0 <cr>

O,T,1 / O,T,0 <cr>

O,Dew,1 / O,Dew,0 <cr>

O,? <cr>

Response

*OK <cr> enable / disable humidity

*OK <cr> enable / disable temperature

*OK <cr> enable / disable dew point

?,O,HUM,T,Dew <cr> if all enabled

Parameters

Hum Humidity
T Air temperature in °C
Dew Dew point

Followed by 1 or 0

1 enabled
0 disabled

* If you disable all possible data types your readings will display "no output".

Temperature Calibration

Humidity readings are temperature dependent. A small temperature change can have a large affect on humidity. Calibrate the on-board temperature sensor if needed.

Command syntax

Tcal, t <cr> t = any temperature (-20°C to 80°C)
Tcal,clear <cr> delete calibration
Tcal,? <cr> device calibrated?

Example

Response

Tcal, 25.7 <cr>

*OK <cr>

Tcal,clear <cr>

*OK <cr>

Tcal,? <cr>

?Tcal,1 <cr> or ?Tcal,0 <cr>
*OK <cr>

Naming device

Command syntax

Do not use spaces in the name

Name,n <cr> set name

Name, <cr> clears name

Name,? <cr> show name

n =

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16

Up to 16 ASCII characters

Example

Response

Name, <cr>

*OK <cr> name has been cleared

Name,zzt <cr>

*OK <cr>

Name,? <cr>

?Name,zzt <cr>
*OK <cr>

Name,zzt <cr>



*OK <cr>

Name,? <cr>



?Name,zzt <cr>
*OK <cr>

Device information

Command syntax

i <cr> device information

Example

i <cr>

Response

?i,HUM,1.0 <cr>
*OK <cr>

Response breakdown

?i, HUM, 1.0
 ↑ ↑
 Device Firmware

Response codes

Command syntax

***OK,1** <cr> enable response **default**
***OK,0** <cr> disable response
***OK,?** <cr> response on/off?

Example

Response

R <cr>

57.38 <cr>
***OK** <cr>

***OK,0** <cr>

no response, ***OK** disabled

R <cr>

57.38 <cr> ***OK** disabled

***OK,?** <cr>

?*OK,1 <cr> or **?*OK,0** <cr>

Other response codes

***ER** unknown command
***OV** over volt ($VCC \geq 5.5V$)
***UV** under volt ($VCC \leq 3.1V$)
***RS** reset
***RE** boot up complete, ready
***SL** entering sleep mode
***WA** wake up

These response codes
cannot be disabled

Reading device status

Command syntax

Status <cr> voltage at Vcc pin and reason for last restart

Example

Status <cr>

Response

?Status,P,5.038 <cr>
*OK <cr>

Response breakdown

?Status,	P,	5.038
	↑	↑
	Reason for restart	Voltage at Vcc

Restart codes

P	powered off
S	software reset
B	brown out
W	watchdog
U	unknown

Sleep mode/low power

Command syntax

Send any character or command to awaken device.

Sleep <cr> enter sleep mode/low power

Example

Response

Sleep <cr>

***OK** <cr>

***SL** <cr>

Any command

***WA** <cr> wakes up device

5V


MAX
2.6 mA

SLEEP
0.5 mA

3.3V

2.2 mA

0.4 mA

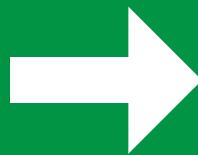

Sleep <cr>



Change baud rate

Command syntax

Baud,n <cr> change baud rate

Example

Baud,38400 <cr>

Response

*OK <cr>

Baud,? <cr>


?Baud,38400 <cr>

*OK <cr>

n = [300
1200
2400
9600 default
19200
38400
57600
115200]



Standby

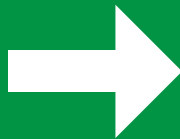


Baud,38400 <cr>



Changing
baud rate

*OK <cr>

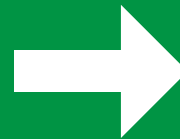

(reboot)



Standby

Protocol lock

Command syntax

Locks device to UART mode.

Plock,1 <cr> enable Plock

Plock,0 <cr> disable Plock **default**

Plock,? <cr> Plock on/off?

Example

Response

Plock,1 <cr>

*OK <cr>

Plock,0 <cr>

*OK <cr>

Plock,? <cr>

?Plock,1 <cr> or ?Plock,0 <cr>

Plock,1




*OK <cr>

I2C,100



cannot change to I²C
*ER <cr>

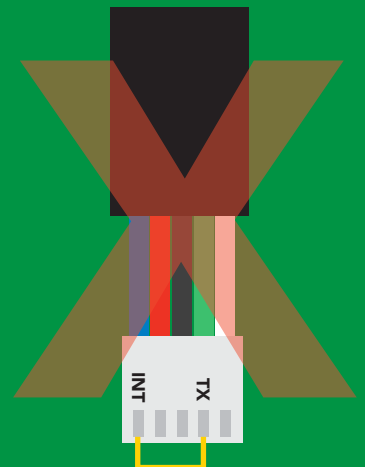

cannot change to I²C

Factory reset

Command syntax

Factory <cr> enable factory reset


Example

Factory <cr>

Response

***OK** <cr>

Factory <cr>

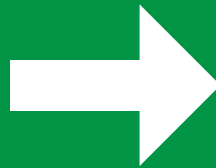

(reboot)



***OK** <cr>

***RS** <cr>

***RE** <cr>

Baud rate will not change

Change to I²C mode

Command syntax

Default I²C address 111 (0x6F)

I2C,n <cr> sets I²C address and reboots into I²C mode

n = any number 1 – 127

Example

Response

I2C,100 <cr>

*OK (reboot in I²C mode)


Wrong example

Response

I2C,139 <cr> n ≠ 127

*ER <cr>

I2C,100

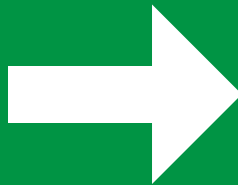

(reboot)



Green
*OK <cr>


Blue
now in I²C mode

Manual switching to I²C


- Disconnect ground (power off)
- Disconnect TX and RX
- Connect TX to INT
- Confirm RX is disconnected
- Connect ground (power on)
- Wait for LED to change from **Green** to **Blue**
- Disconnect ground (power off)
- Reconnect all data and power

Manually switching to I²C will set the I²C address to 111 (0x6F)

Example

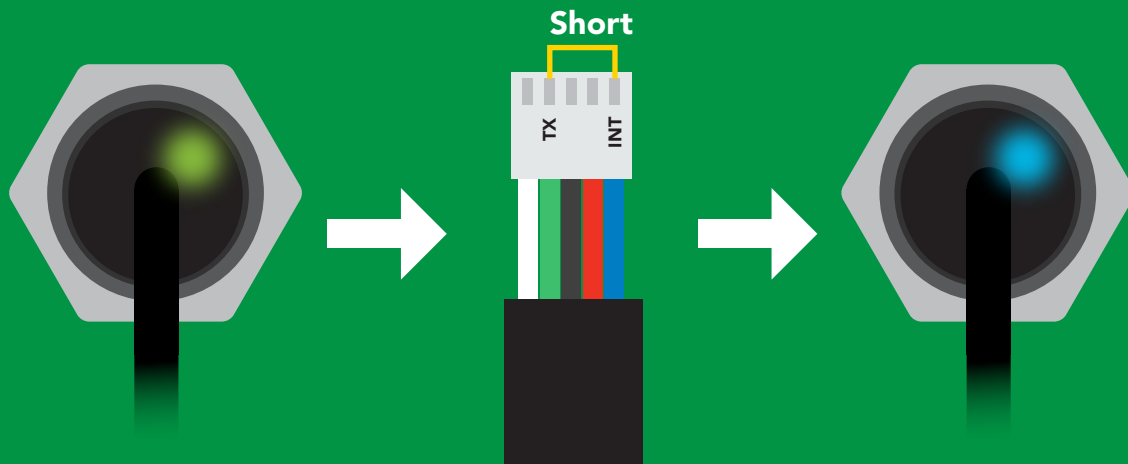

Wrong Example

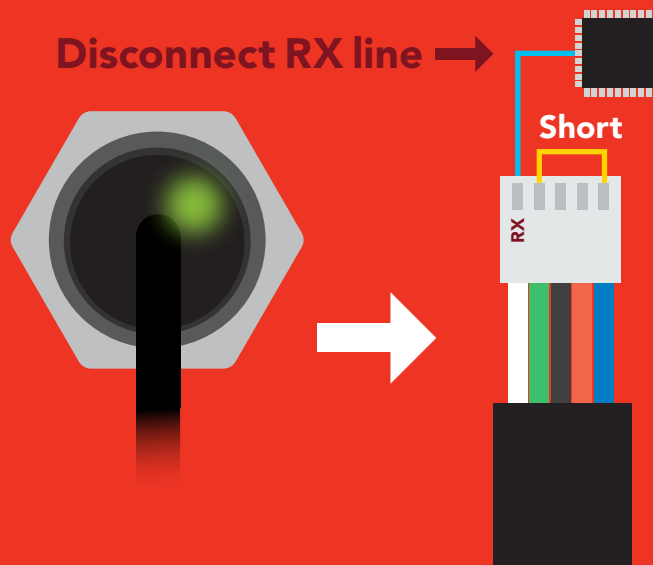

I²C mode

The I²C protocol is **considerably more complex** than the UART (RS-232) protocol. Atlas Scientific assumes the embedded systems engineer understands this protocol.

To set your EZO™ device into I²C mode [click here](#)

Settings that are retained if power is cut

- Calibration
- Change I²C address
- Hardware switch to UART mode
- LED control
- Protocol lock
- Software switch to UART mode

Settings that are **NOT** retained if power is cut

- Sleep mode

I²C mode

I²C address (0x01 – 0x7F)
111 (0x6F) default


Vcc 3.3V – 5.5V

Clock speed 100 – 400 kHz

SDA 

SCL 



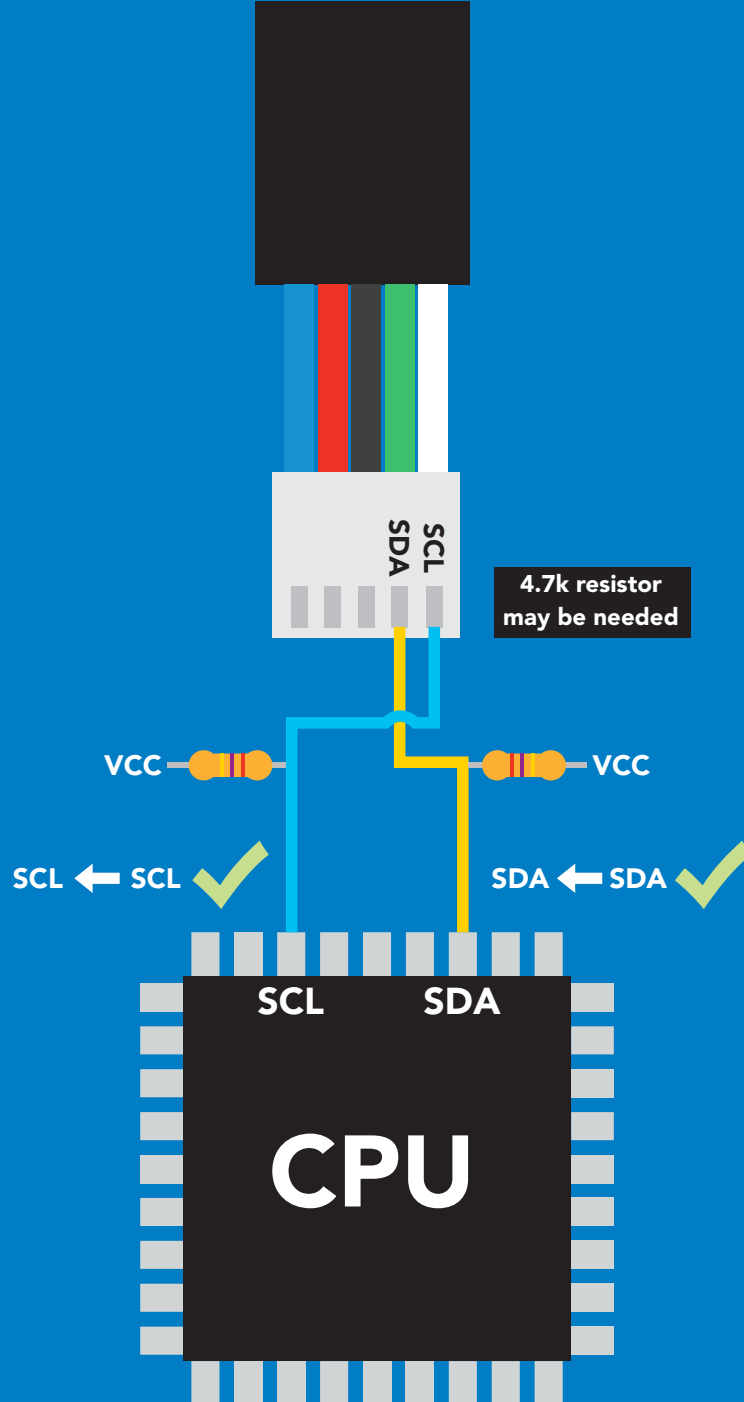

Data format

Reading Humidity
Air Temperature
Dew point

Units % Relative humidity
Air Temperature °C (when enabled)
Dew point Temperature °C (when enabled)

Encoding ASCII (CSV string if temp/
dew point enabled)

Data type floating point

Decimal places 2

Smallest string 4 characters


Largest string 24 characters

Sending commands to device


5 parts





Example

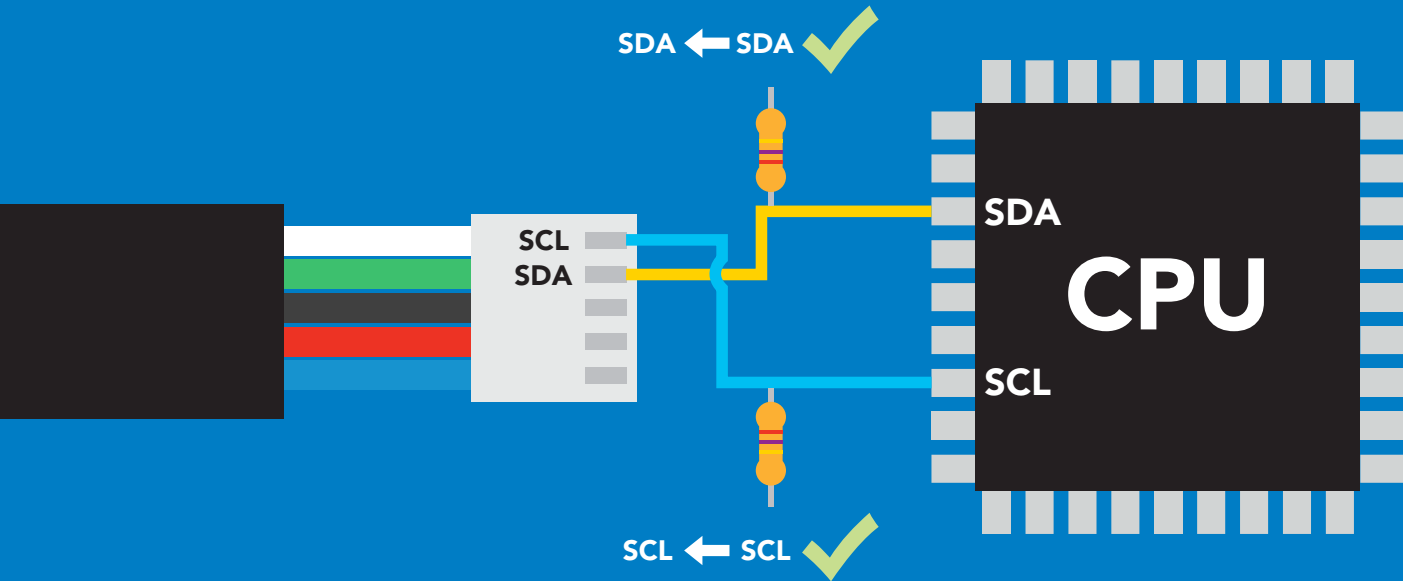



Advanced

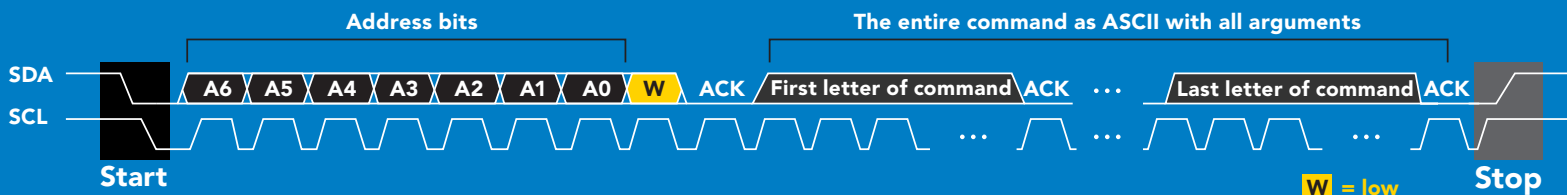

Requesting data from device

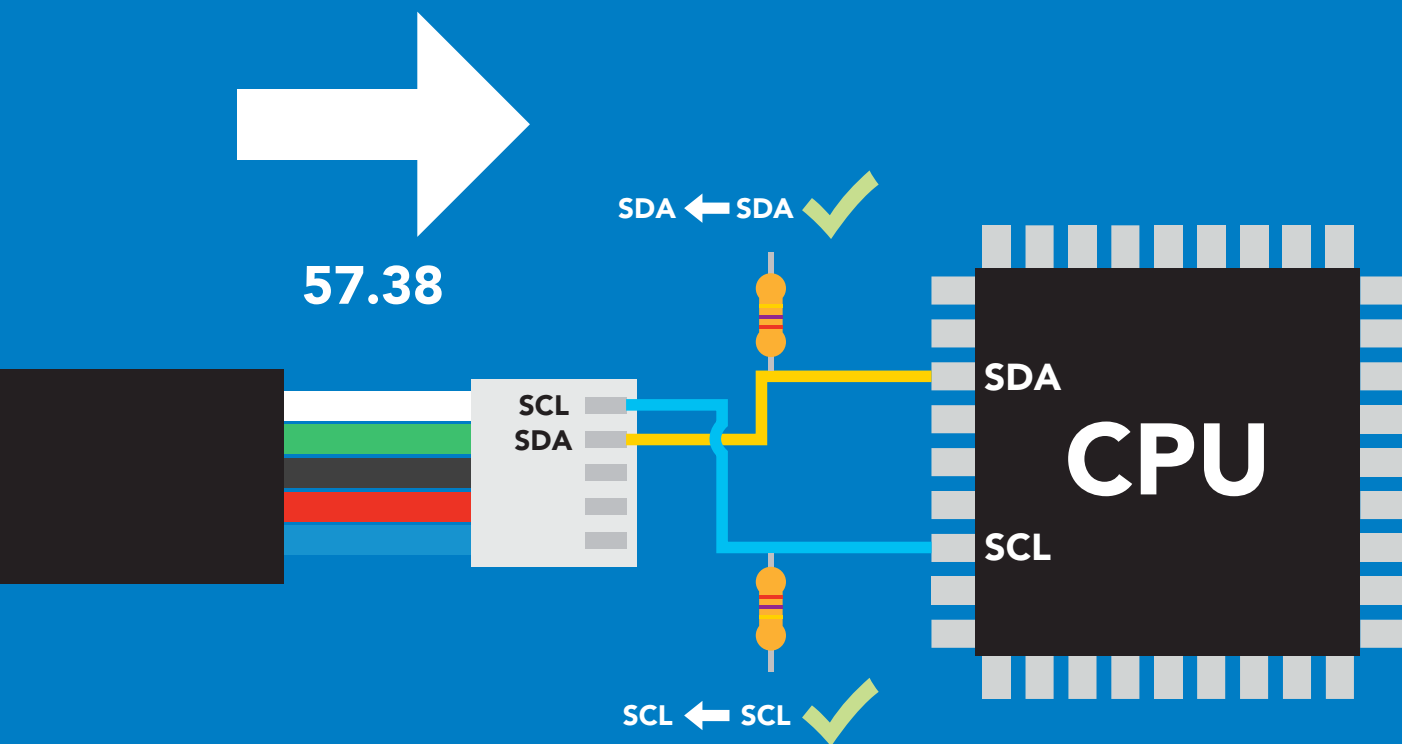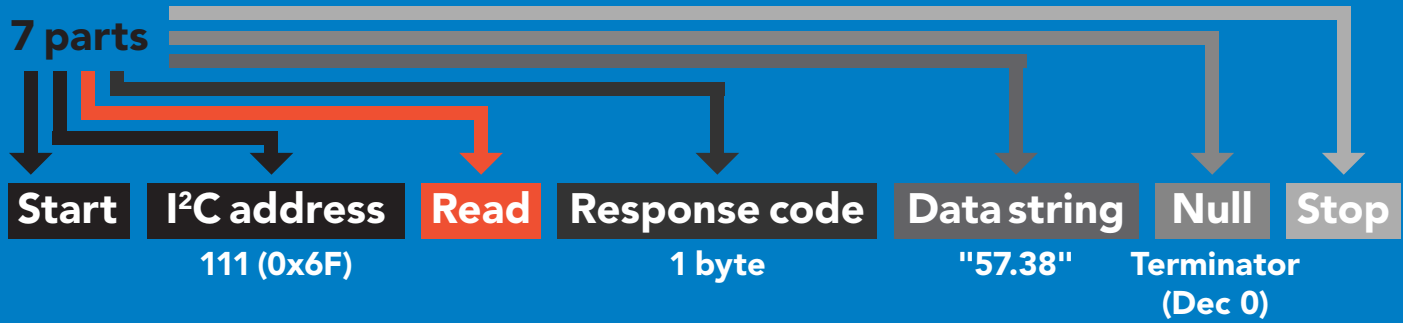


Advanced

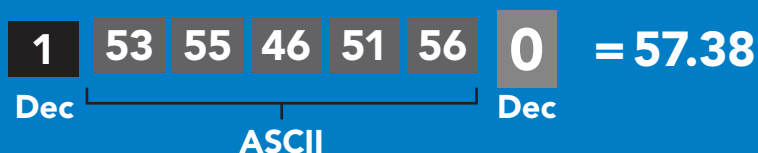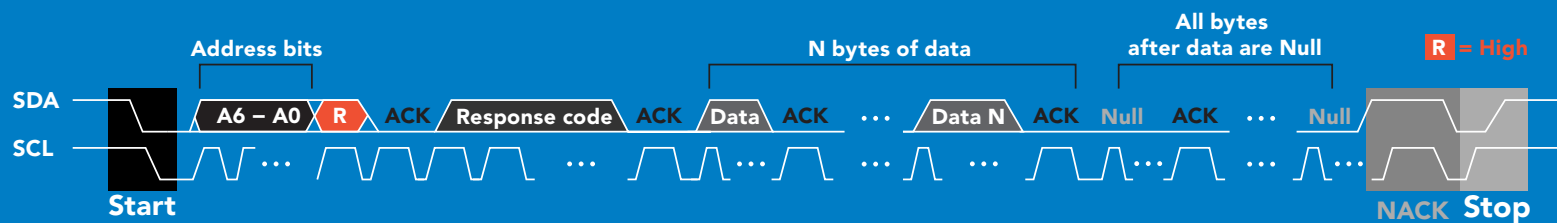

Response codes & processing delay

After a command has been issued, a 1 byte response code can be read in order to confirm that the command was processed successfully.

Reading back the response code is completely optional, and is not required for normal operation.

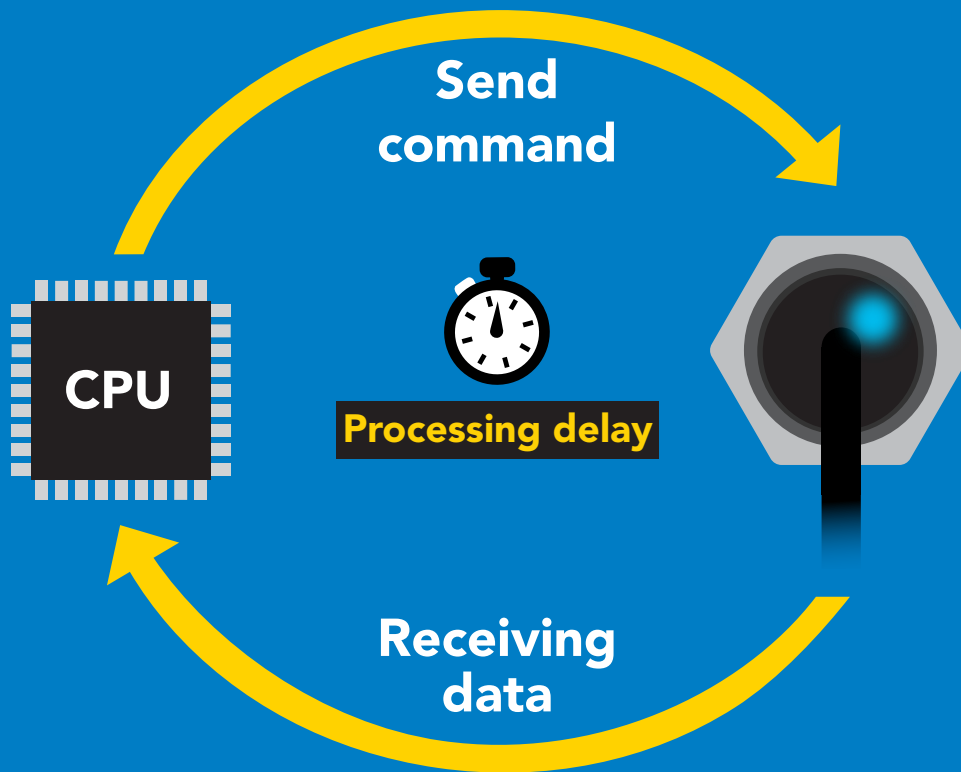

Example

```
I2C_start;  
I2C_address;  
I2C_write(EZO_command);  
I2C_stop;
```

delay(300);



Processing delay

```
I2C_start;  
I2C_address;  
Char[ ] = I2C_read;  
I2C_stop;
```


If there is no processing delay or the processing delay is too short, the response code will always be 254.

Response codes

Single byte, not string

255	no data to send
254	still processing, not ready
2	syntax error
1	successful request

Indicator LED control

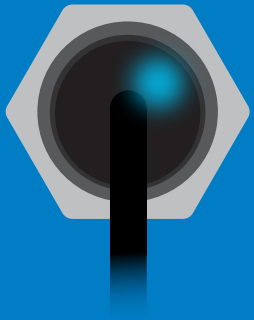


Blue

I²C standby




Green

Taking reading

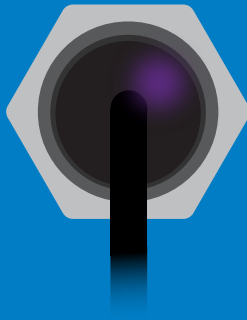


Purple

Changing
I²C address

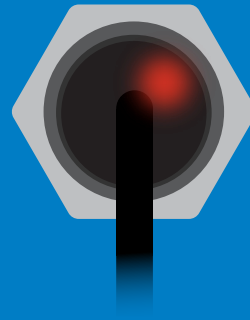

Red

Command
not understood

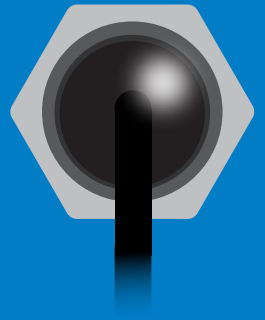

White

Find

5V

+0.2 mA

3.3V

+0.2 mA

I²C mode

command quick reference

All commands are ASCII strings or single ASCII characters.

Command	Function	
Auto	enable/disable auto monitor	pg. 42
Baud	switch back to UART mode	pg. 52
Factory	enable factory reset	pg. 51
Find	finds device with blinking white LED	pg. 40
i	device information	pg. 46
I2C	change I ² C address	pg. 50
L	enable/disable LED	pg. 39
Name	set/show name of device	pg. 45
O	enable/disable parameters	pg. 43
Plock	enable/disable protocol lock	pg. 49
R	returns a single reading	pg. 41
Sleep	enter sleep mode/low power	pg. 48
Status	retrieve status information	pg. 47
Tcal	performs temperature calibration	pg. 44

LED control

Command syntax

300ms  processing delay

L,1 LED on **default**

L,0 LED off

L,? LED state on/off?

Example

Response

L,1

 **Wait 300ms** **1** **0**
Dec Null

L,0


 **Wait 300ms** **1** **0**
Dec Null

L,?

 **Wait 300ms** **1** **?L,1** **0** or  **Wait 300ms** **1** **?L,0** **0**
Dec ASCII Null Dec ASCII Null



L,1

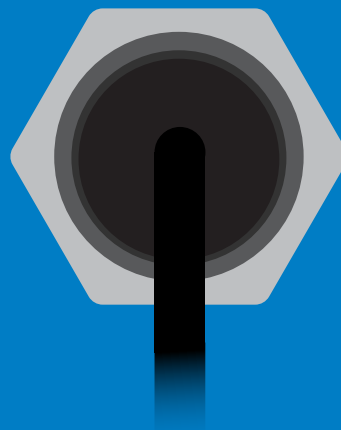

L,0

Find

Command syntax

300ms  processing delay


Find LED rapidly blinks white, used to help find device

Example

Response

Find

 **Wait 300ms** **1** **0**
Dec Null

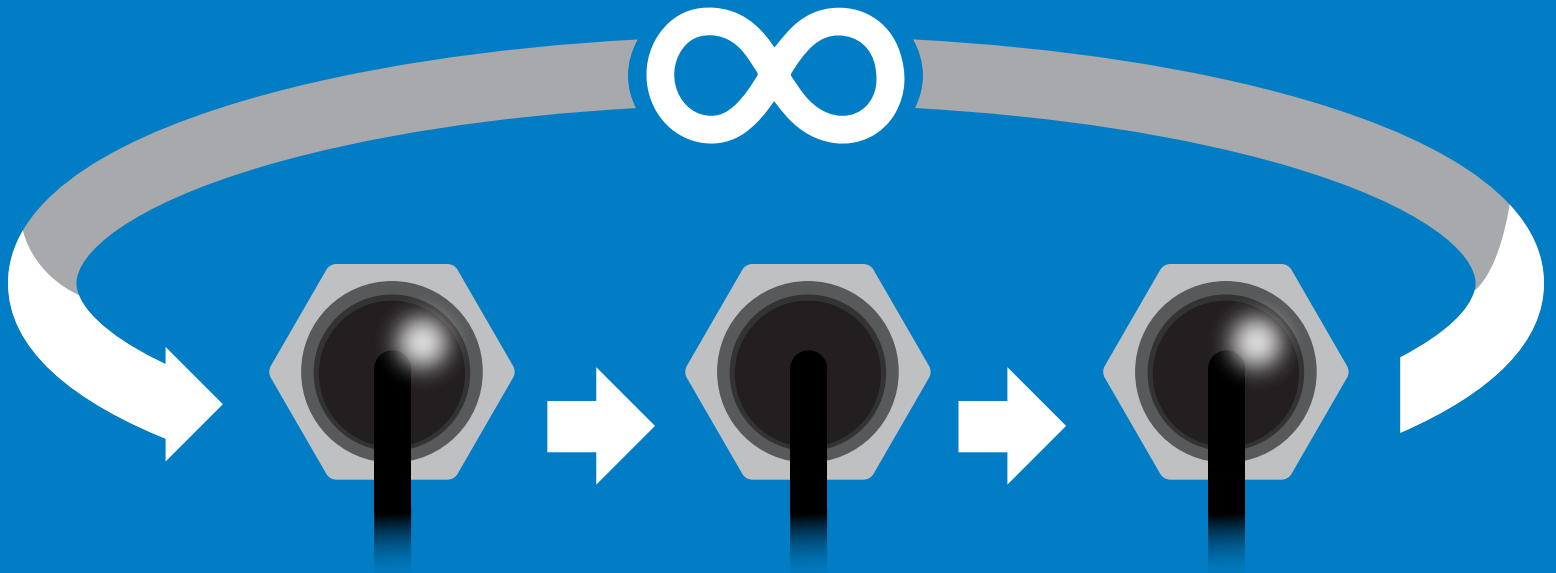

Taking reading

Command syntax

300ms  processing delay

R return 1 reading



Example

Response



R		1	57.38	0
	Wait 300ms	Dec	ASCII	Null



Green
Taking reading

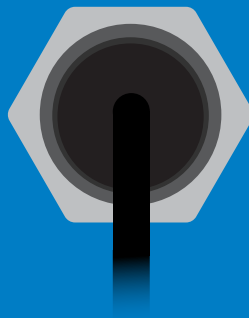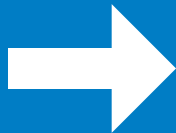

Transmitting

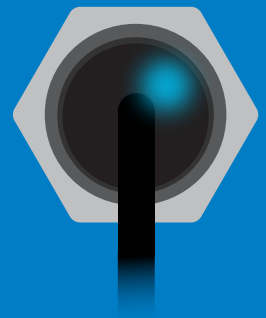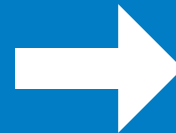

Cyan
Standby

Auto monitor

300ms  processing delay

Command syntax

When enabled, the sensor will continuously monitor the readings and set the auto monitor pin high when your value has been reached. When Auto Monitor is enabled, it is not necessary to actively take readings (continuous mode can be disabled).

Auto,en, [0,1,2]

0 = disable, 1= Enable for humidity, 2= Enable for dew point

Auto,n

The value that will set the alarm pin

Auto,tol,n

The value that will reset the alarm pin

Auto,?

Auto monitor settings

Example

Response

Auto,en,1



1 0
Dec Null

Enable humidity automonitoring

Auto,57.38



1 0
Dec Null

Set alarm to go off at 55.38% humidity

Auto,tol,1.2



1 0
Dec Null


The humidity must fall 1.2 percentage points below set point for alarm to reset.

Auto,?



1 ?,auto,57.38,1.20,1 0
Dec ASCII Null

if all are enabled

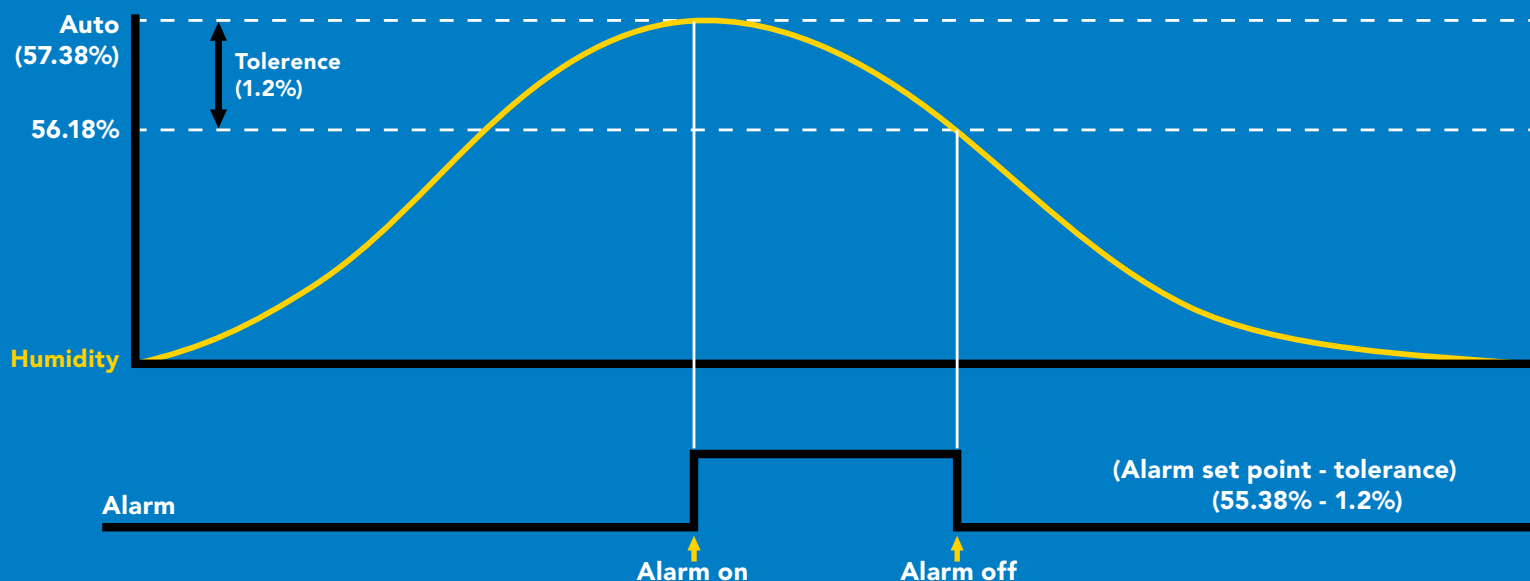

Enable/disable parameters from output string

Command syntax

O, [parameter],[1,0]

enable or disable output parameter

O,?

enabled parameter?

Example

O,HUM,1 / O,HUM,0



1

Dec

0

Null

enable / disable humidity

O,T,1 / O,T,0



1

Dec

0

Null

enable / disable temperature

O,Dew,1 / O,Dew,0



1

Dec

0

Null

enable / disable dew point

O,?



1

Dec

? ,O,HUM,T,Dew

ASCII

0

Null

if all enabled

Parameters

Hum Humidity
T Air temperature in °C
Dew Dew point

Followed by 1 or 0

1 enabled
0 disabled

*** If you disable all possible data types your readings will display "no output".**

Temperature Calibration

300ms  processing delay

Command syntax

Humidity readings are temperature dependent. A small temperature change can have a large affect on humidity. Calibrate the on-board temperature sensor if needed.

Tcal, t **t = any temperature (-20°C to 80°C)**
Tcal,clear **delete calibration**
Tcal,? **device calibrated?**

Example

Response

Tcal, 25.7

 **Wait 300ms** **1** **0**
Dec Null

Tcal,clear

 **Wait 300ms** **1** **0**
Dec Null

Tcal,?

 **Wait 300ms** **1** **?Tcal,1** **0** or  **Wait 300ms** **1** **?Tcal,0** **0**
Dec ASCII Null Dec ASCII Null

Naming device

300ms  processing delay

Command syntax

Do not use spaces in the name

Name,n set name

Name, clears name

Name,? show name

n =

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16

Up to 16 ASCII characters

Example

Response

Name,



Wait 300ms

1

Dec

0

Null

name has been cleared

Name,zzt



Wait 300ms

1

Dec

0

Null

Name,?



Wait 300ms

1

Dec

?Name,zzt



ASCII

0

Null

Name,zzt

Name,?

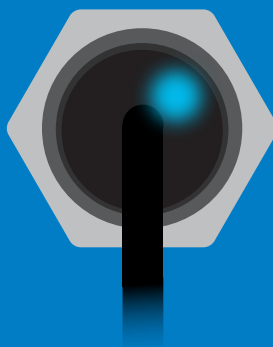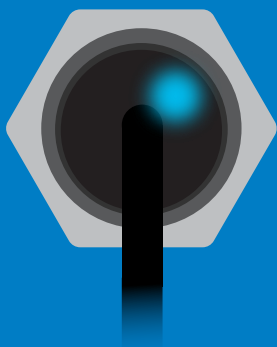

1

0

1

?Name,zzt

0

Device information

Command syntax

300ms  processing delay

i device information

Example

i

Response



Wait 300ms

1

Dec

?i,HUM,1.0

ASCII

0

Null

Response breakdown

?i, HUM, 1.0
 ↑ ↑
 Device Firmware

Reading device status

Command syntax

300ms  processing delay

Status voltage at Vcc pin and reason for last restart

Example

Response

Status



1
Dec

?Status,P,5.038
ASCII

0
Null

Response breakdown

?Status, P, 5.038
 ↑ ↑
 Reason for restart Voltage at Vcc

Restart codes

P	powered off
S	software reset
B	brown out
W	watchdog
U	unknown

Sleep mode/low power

Command syntax

Sleep enter sleep mode/low power

Send any character or command to awaken device.


Example	Response
---------	----------

Sleep	no response
-------	-------------


Do not read status byte after issuing sleep command.

Any command	wakes up device
-------------	-----------------


5V	MAX 2.6 mA	SLEEP 0.5 mA
3.3V	2.2 mA	0.4 mA

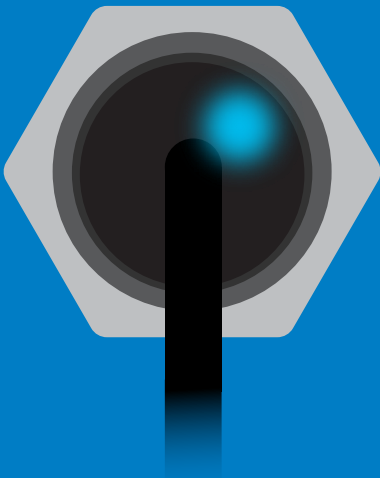

Standby

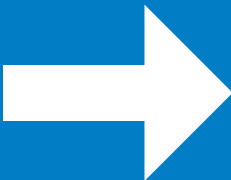

Sleep

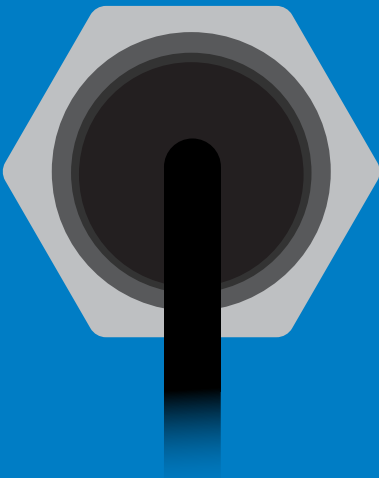

Sleep

Protocol lock

Command syntax

300ms  processing delay

Plock,1 enable Plock

Plock,0 disable Plock **default**

Plock,? Plock on/off?

Locks device to I²C mode.

Example

Response

Plock,1

 **Wait 300ms**
1 0
Dec Null

Plock,0


 **Wait 300ms**
1 0
Dec Null

Plock,?


 **Wait 300ms**
1 ?Plock,1 0
Dec ASCII Null

Plock,1

Baud, 9600

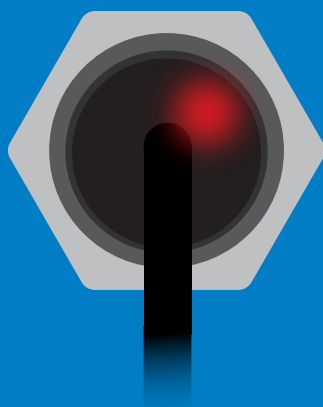

cannot change to UART

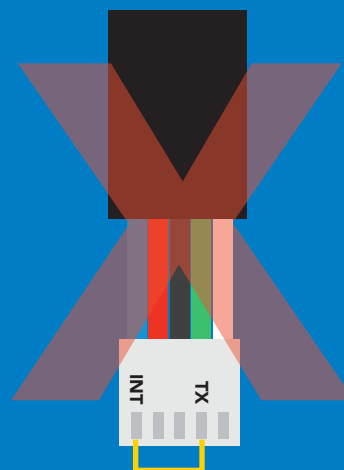

cannot change to UART

I²C address change

Command syntax

I2C,n sets I²C address and reboots into I²C mode

Example

I2C,101

Response

device reboot
(no response given)



Warning!

Changing the I²C address will prevent communication between the circuit and the CPU until the CPU is updated with the new I²C address.


Default I²C address is **111 (0x6F)**.

n = any number 1 – 127

I2C,101

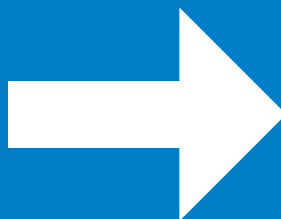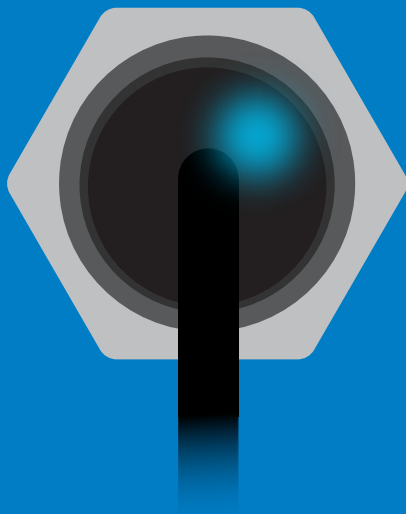

(reboot)

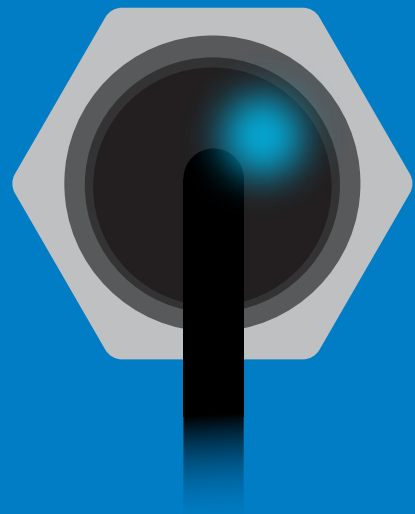

Factory reset

Command syntax

Factory reset will not take the device out of I²C mode.

Factory enable factory reset

I²C address will not change

Example



Response

Factory


device reboot
(no response given)

Clears custom calibration
LED on
Response codes enabled

Factory

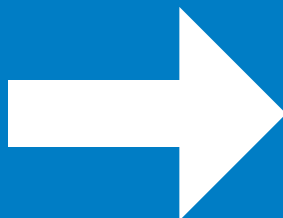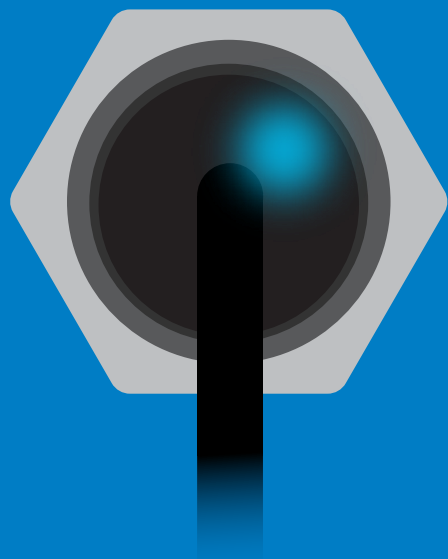

(reboot)

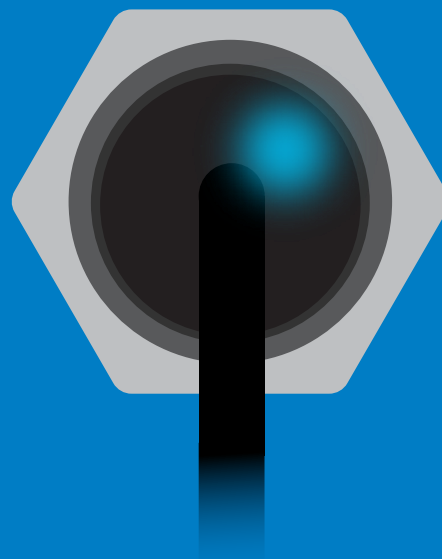

Change to UART mode

Command syntax

Baud,n switch from I²C to UART



Example

Baud,9600



Response

reboot in UART mode
(no response given)

n = [300
1200
2400
9600
19200
38400
57600
115200

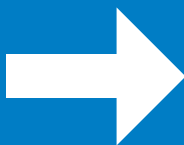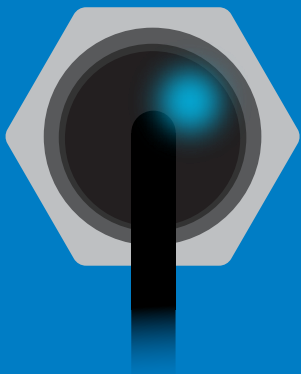

Baud,9600

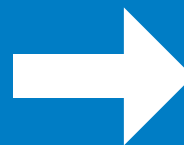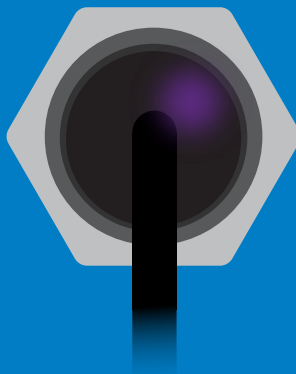

(reboot)




Changing to
UART mode


Manual switching to UART

- Disconnect ground (power off)
- Disconnect TX and RX
- Connect TX to INT
- Confirm RX is disconnected
- Connect ground (power on)
- Wait for LED to change from **Blue** to **Green**
- Disconnect ground (power off)
- Reconnect all data and power

Example

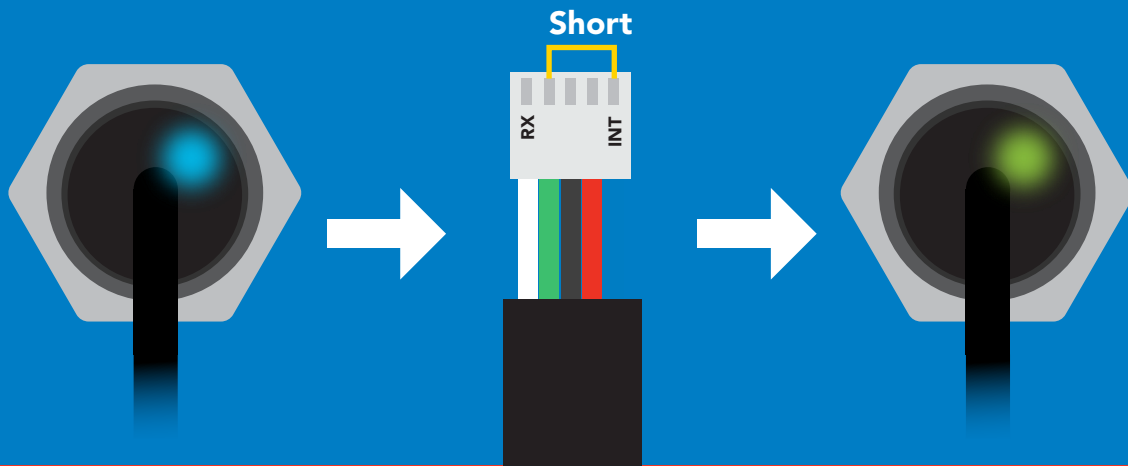

Wrong Example

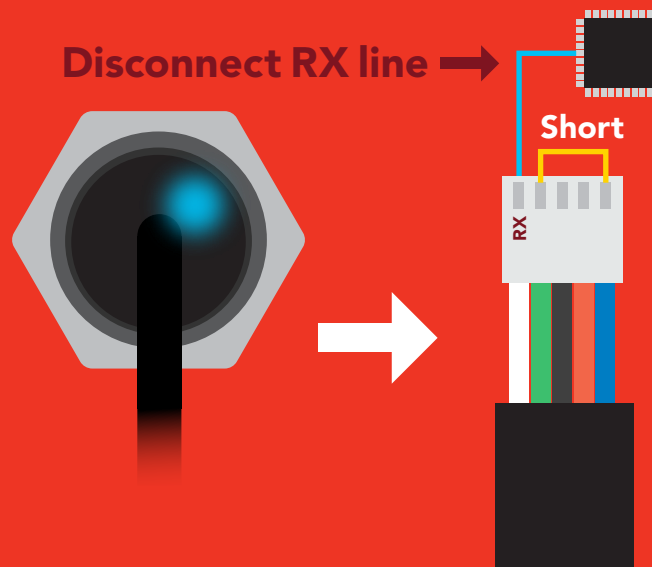

Datasheet change log

Datasheet V 1.7

Revised graphs and information on pg 5.

Datasheet V 1.6

Added the Tcal command on pages 21 & 44.

Datasheet V 1.5

Revised artwork on pg 4.

Datasheet V 1.4

Added Humidity chart on pg 5.

Datasheet V 1.3

Added Air Temperature chart on pg 5.

Datasheet V 1.2

Revised naming device info on pages 20 & 42.

Datasheet V 1.1

Revised the information on pg 3.

Datasheet V 1.0

New datasheet

Firmware updates

V1.01 – Tcal command added to firmware (March, 2024)

V1.0 – Initial release (August 14, 2020)

Warranty

Atlas Scientific™ Warranties the EZO-HUM™ Embedded Humidity Sensor to be free of defect during the debugging phase of device implementation, or 30 days after receiving the EZO-HUM™ Embedded Humidity Sensor (which ever comes first).

The debugging phase

The debugging phase as defined by Atlas Scientific™ is the time period when the EZO-HUM™ Embedded Humidity Sensor is connected into a bread board, or shield. If the EZO-HUM™ Embedded Humidity Sensor is being debugged in a bread board, the bread board must be devoid of other components. If the EZO-HUM™ Embedded Humidity Sensor is being connected to a microcontroller, the microcontroller must be running code that has been designed to drive the EZO-HUM™ Embedded Humidity Sensor exclusively and output the EZO-HUM™ Embedded Humidity Sensor data as a serial string.

It is important for the embedded systems engineer to keep in mind that the following activities will void the EZO-HUM™ Embedded Humidity Sensor warranty:

- **Soldering any part to the EZO-HUM™ Embedded Humidity Sensor.**
- **Running any code, that does not exclusively drive the EZO-HUM™ Embedded Color Sensor and output its data in a serial string.**
- **Embedding the EZO-HUM™ Embedded Humidity Sensor into a custom made device.**
- **Removing any potting compound.**

Reasoning behind this warranty

Because Atlas Scientific™ does not sell consumer electronics; once the device has been embedded into a custom made system, Atlas Scientific™ cannot possibly warranty the EZO-HUM™ Embedded Humidity Sensor, against the thousands of possible variables that may cause the EZO-HUM™ Embedded Humidity Sensor to no longer function properly.

Please keep this in mind:

- 1. All Atlas Scientific™ devices have been designed to be embedded into a custom made system by you, the embedded systems engineer.**
- 2. All Atlas Scientific™ devices have been designed to run indefinitely without failure in the field.**
- 3. All Atlas Scientific™ devices can be soldered into place, however you do so at your own risk.**

Atlas Scientific™ is simply stating that once the device is being used in your application, Atlas Scientific™ can no longer take responsibility for the EZO-HUM™ Embedded Humidity Sensor continued operation. This is because that would be equivalent to Atlas Scientific™ taking responsibility over the correct operation of your entire device.