

## 6 Detailed description of input data

The input entries for the Executive Control, Case Control and Bulk Data Sections are described in detail in the next three sections. In all of the sections, an entry with a \$ sign in column 1 is considered as a comment and is ignored. In addition, any blank entry is ignored. All other entries must be in upper case. Appendix A contains a sample problem input/output.

### 6.1 File Management

As mentioned earlier, the input data file consists of 3 sections: Executive Control, Case Control and Bulk Data. In order to make the most efficient use of resources, each of these can contain requests to include some defined file to be part (or all) of that portion of the input data file. This is accomplished through the use of an INCLUDE entry whose format is:

```
INCLUDE 'filename'
```

Where *filename* is the name of a file to include at the location where the INCLUDE entry exists. The INCLUDE entries can be used in any or all of the 3 sections of the input data file. In addition, multiple INCLUDE entries in any section are permitted. The quotes around *filename* are recommended but not required.

### 6.2 Executive Control

The Executive Control Section consists of only a few entries. Most are free field; that is they can begin in any column and the parts of an entry may be separated by any amount of columns within the confines of the 80 column physical entry. In addition, the fields of an entry may be delimited by tabs, as well as a white space. Some of the entries are required and some are not required but are recognized. Other entries are ignored with a warning message printed in the output. Any requirements on the order of the entries in the Executive Control Section are noted.

With the CHKPNT/RESTART feature, users may restart a previously run job to get additional outputs. In a restart the Bulk Data must remain the same except for a few PARAM and DEBUG entries. Case Control requests for additional displacements, element forces, stresses, etc will be processed.

Executive Control Entries required and/or recognized by MYSTRAN

Entry	Required (Y/N)	Format	Description
ID	N	Free Field	If input, it is generally the first entry in the Exec Control Section.
IN4	N		Defines a file containing element stiffness, mass and other data for a CUSERIN element
APP	N	Free Field	An entry of APP DISP is common if this entry is included
CHKPNT	Y/N	Free Field	Required if the user expects to restart the current job, at a later date, to obtain additional outputs
DEBUG	N	Fields of 8 chars like Bulk Data	These are the same as the Bulk Data DEBUG entries and are allowed here since some DEBUG values need to be used prior to reading the Bulk Data
OUTPUT4	N	Free Field	Requests for CB matrices to be written to unformatted files in the same format as NASTRAN uses. An example is shown below along with the allowable matrices that can be output
PARTN	N	Free Field	Requests to partition a previously defined OUTPUT4 matrix
RESTART	Y/N	Free Field	Required only if the current job is a restart of an earlier job in which the CHKPNT entry was present. The file name (w/ ext) of the CHKPNT'd original run must follow the command RESTART
SOL	Y	Free Field	SOL entry must have a value that designates what kind of problem this is: (1) SOL 1 or SOL STATICS designates the job as a statics problem (2) SOL 3 or SOL = MODAL or SOL MODES or SOL NORMAL MODES for eigenvalues (3) SOL 31 or SOL GEN CB MODEL for Craig-Bampton (CB) model generation (4) SOL 5 <sup>3</sup> or SOL BUCKLING for linear static buckling (5) SOL 4 or SOL DIFFEREN for static analysis with the same differential stiffness that is used in static buckling analyses
TIME	N	Free Field	TIME n, where n is the job estimated time in minutes.
CEND	Y	Free Field	The CEND entry has no other input required. It must be the last entry in the Exec Control Section

### 6.2.1 IN4 Exec Control command

The Exec Control command IN4 specifies binary files (NASTRAN INPUTT4 format) which contain the element matrices needed for CUSERIN Bulk Data element definition. The IN4 command has the following format:

IN4 i *filename*

Where i is the ID of the file and is what must appear in field 3 of the Bulk Data PUSERIN property entry for the CUSERIN element. *filename* is the name of the file that contains the matrices specified on the PUSERIN entry for the element. *filename* must contain the full path unless the file is in the current path where the program is being executed. An example is: **IN4 100 cb1\_example1.OP1**

<sup>3</sup> As of 1/1/2019 only the BAR element is coded for buckling (SOL 5) or differential stiffness (SOL 4)

## 6.2.2 OUTPUT4 and PARTN Exec Control commands

MYSTRAN allows output of selected matrices to binary files in the OUTPUT4 format that is the same as that currently used by NASTRAN. The form of the OUTPUT4 command is:

OUTPUT4 MAT1,MAT2,MAT3,MAT4,MAT5//ITAPE/IUNIT \$

From 1 to 5 matrices can be output per OUTPUT4 command. All 4 commas must be present even if fewer than 5 matrices are requested. The // followed by ITAPE value (must be 0 to -3 but is currently not used) must also be present. The final / followed by a file unit number (can be 21-27) is also required. A trailing \$ can exist but is not required. If present, it signifies the end of data read for the OUTPUT4 command.

These OUTPUT4 matrices can be partitioned, in some cases, using an Exec Control PARTN command. The resulting partitioned matrix will be the one output to the OUTPUT4 binary file. The partitioning vectors that define which columns and rows to partition from the original OUTPUT4 matrix are defined on Bulk Data PARVEC and PARVEC1 entries. These Bulk Data partitioning vector entries give the grid and component pairs of the columns and rows to partition. As such, the partitioning can only be done on OUTPUT4 matrices that have columns and/or rows that are part of a normal displacement set (the G-set, M-set, etc.). See section 3.6, "Displacement set notation", for a definition of all of the displacement sets. The general form for the PARTN command for MYSTRAN is:

PARTN MAT, CP, RP / \$

where MAT is an OUTPUT4 matrix previously requested for OUTPUT4 output and CP and RP are column and row partitioning vectors defined in the Bulk data using PARVEC and/or PARVEC1 Bulk Data entries.

If the input file for a MYSTRAN run is *filename.DAT*, the binary OUTPUT4 file names are *filename.OPi* where *i*=1,7 (corresponding to units 21-27 used as values for UNIT in the OUTPUT4 command). The format in which these files are written is the same as that for the NASTRAN OUTPUT4 matrices.

The table on the following page shows the matrices that are currently eligible for OUTPUT4 output. Note that there is a correspondence between MYSTRAN and NASTRAN matrix names. The OUTPUT4 commands can use either name as desired by the user. All matrix names must be no more than 16 characters long. An example of the use of the Exec Control commands OUTPUT4 and PARTN is given following the table.

**Table 6-1**  
**Matrices that can be written to OUTPUT4 files**  
**(and the correspondence between MYSTRAN matrix names, NASTRAN names**  
**and CB Equation Variables)**

	MYSTRAN Matrix Name (OUTPUT4 matrices)	NASTRAN DMAP Name	CB equation variable in Appendix D (where applicable)	Matrix size <sup>1</sup>	Partition rows and/or cols
1	CG_LTM		$LTM11_{6r} \quad LTM12_{6N} \quad 0$	$6 \times (2R+N)$	
2	DLR	DM	$D_{LR}$	$L \times R$	rows and cols
3	EIGEN_VAL	LAMA	$\begin{matrix} 2 \\ NN \end{matrix}$	$N \times N$	
4	EIGEN_VEC	PHIG	$\begin{matrix} GN \\ LN \end{matrix}, ( \quad \text{with rows expanded to G-set})$	$G \times N$	rows
5	GEN_MASS	MI	$m_{NN}$	$N \times 1$ vector of diag. terms	
6	IF_LTM		$LTM21_{RR} \quad LTM22_{RN} \quad LTM23_{RR}$	$R \times (2R+N)$	rows
7	KAA	KAA	$K_{AA}$	$A \times A$	rows and cols
8	KGG	KGG	$K_{GG}$	$G \times G$	rows and cols
9	KLL	KLL	$K_{LL}$	$L \times L$	rows and cols
10	KRL	KLR(t)	$K_{LR}$	$L \times R$	rows and cols
11	KRR	KRR	$K_{RR}$	$R \times R$	rows and cols
12	KRRcb	KBB	$k_{RR} \quad K_{RR} \quad K_{LR}^T D_{LR}$	$R \times R$	rows and cols
13	KXX	KRRGN	$K_{XX}$	$(R+N) \times (R+N)$	
14	LTM	LTM	CG_LTM and IF_LTM merged	$(6+R) \times (2R+N)$	
15	MCG	RBMCG	$m_{cg}$	$6 \times 6$	
16	MEFFMASS		Modal effective mass	$N \times 6$	
17	MPFACTOR		Modal participation factors	$N \times 6$ or $N \times R$	
18	MAA		$M_{AA}$	$A \times A$	rows and cols
19	MGG		$M_{GG}$	$G \times G$	rows and cols
20	MLL	MLL	$M_{LL}$	$L \times L$	rows and cols
21	MRL	MRL	$M_{RL}$	$R \times L$	rows and cols
22	MRN		$m_{RN} \quad m_{NR}^T$	$R \times N$	rows
23	MRR	MRR	$M_{RR}$	$R \times R$	rows and cols

**Table 6-1 (con't)**

	MYSTRAN Matrix Name (OUTPUT4 matrices)	NASTRAN DMAP Name	CB equation variable in Appendix D (where applicable)	Matrix size <sup>4</sup>	Partition rows and/or cols
24	MRRcb	MBB	$m_{RR} \quad M_{RR} \quad M_{LR}^T D_{LR} \quad (M_{LR}^T D_{LR})^T \quad D_{LR}^T M_{LL} D_{LR}$	RxR	rows and cols
25	MXX	MRRGN	$M_{XX} \quad \begin{matrix} m_{RR} & m_{NR}^T \\ m_{NR} & m_{NN} \end{matrix}$	(R+N)x(R+N)	
26	PA		(A-set static reduced loads - only used in statics)		Rows
27	PG		(G-set static loads - only used in statics)		Rows
28	PL		(L-set static reduced loads - only used in statics)		rows
29	PHIXG	PHIXG	$A_X, (A_X \text{ with rows expanded to G-set})$	Gx(R+N)	rows
30	PHIZG		The G-set displacement transformation matrix is written out in the F06 file under "C B D I S P L A C E M E N T O T M"	Gx(2R+N)	rows
31	RBM0		Rigid body mass matrix relative to the basic origin	6x6	
32	TR6_0	RBR	$T_{R6}$ : rigid body displacement matrix for R-set relative to the model basic coordinate system	Rx6	rows
33	TR6_CG	RBR CG	$T_{R6}$ : rigid body displacement matrix for R-set relative to the model CG	Rx6	rows

Note: (t) indicates matrix transposition

<sup>4</sup> Matrix size given in rows x columns where R means the size of the R-set, L is the size of the L-set, A is the size of the A-set, G is the size of the G-set and N is the number of eigenvectors. See section 3.6 for definition of the complete displacement set notation

### **Example of OUTPUT4 request in Exec Control**

#### **Format:**

OUTPUT4 MAT1, MAT2, MAT3, MAT4, MAT5 // ITAPE / IUNIT \$

#### **Example:**

OUTPUT4 PHIZG, KRRcb,,, // -1 / 22 \$

- a) The OUTPUT4 entry is free-field (except that there can be no blank characters in any of the names, including OUTPUT4).
- b) MATi can be any of the matrix names in the OUTPUT4 table above. There can be 1 to 5 matrices in any OUTPUT4 request but all 4 commas must be present.. If there is a name for the matrix in the column "NASTRAN DMAP Name", that name can be used in place of the MYSTRAN Matrix Name for OUTPUT4 purposes
- c) ITAPE (using NASTRAN notation) should be: -3 ITAPE 0 (but is currently not used in MYSTRAN),
- d) IUNIT must be: 21 IUNIT 28. Any number of the OUTPUT4 matrices can be sent to one IUNIT and more than one IUNIT can be used in one Exec Control section,
- e) The / characters must be present,
- f) Anything after the \$ character (if present) is ignored.

### **Example of PARTN request in Exec Control**

#### **Format:**

PARTN MAT, CP, RP/ \$

CP is the column partitioning vector and RP is the row partitioning vector

#### **Example:**

OUTPUT4 PHIZG,, RVEC1 / \$

- a) The PARTN entry is free-field (except that there can be no blank characters in any of the names, including PARTN).
- b) MAT is the name of the matrix to partition (with restrictions noted in Table 6-1 regarding whether rows and or column of this matrix are available for partitioning).
- c) RP (RVEC1 in the example) is the row partition vector which must be specified using either the PARVEC or PARVEC1 Bulk Data entry.
- d) The PARTN entry must have 2 and only 2 commas. Note that in the example above that CP is not specified (since PHIZG is only available for row partitioning) but the 2<sup>nd</sup> comma is present.
- e) The PARTN entry for MAT must follow (but not necessarily immediately) the mandatory OUTPUT4 request for it.

### 6.3 Case Control

The Case Control Section performs several functions outlined below. The entries for each of the major purposes are enumerated below. A detailed explanation of each is contained in the following section. A BEGIN BULK entry is considered as the last, and mandatory, entry in the Case Control Section. In addition, the fields of an entry may be delimited by tabs, as well as a white space.

The following entries specify the titles that will be printed in the output file, none of which are required:

TITLE	Specifies a line of text to be printed in the output file
SUBTITLE	Specifies a 2 <sup>nd</sup> line of text to be printed in the output file
LABEL	Specifies a 3 <sup>rd</sup> line of text to be printed in the output file

The following entries select items from the Bulk data to be used in the current job (loads, constraints, temperature sets, eigenvalue extraction ID):

ENFORCED	Specifies a file containing all grid displacements (all translations and rotations for all grids). With this command, users can run cases in which all displacements are known (as for example from test data) and can request any outputs based on these displacements.
LOAD	Selects FORCE, MOMENT, GRAV, PLOAD2, PLOAD4, RFORCE and LOAD sets from the Bulk Data Section that define loads for a statics solution.
METH	Selects an eigenvalue extraction set from the Bulk Data for a eigenvalue solution.
SPC	Selects SPC, SPC1 from the Bulk Data Section that define single point constraints (including enforced displacements) for the current job.
MPC	Selects MPC entries from the Bulk Data Section that define multi-point constraints for the current job.
TEMP	Selects TEMP, TEMPD and TEMPP1 sets from the Bulk Data Section that define temperature loads for a statics solution.

The following entries define output requests:

ACCEL	Requests output of accelerations.
DISPL	Requests output of displacements.
ECHO	Requests form of the input file echoed to the output file.
ELDATA	Requests element matrix generation output to the BUG file <sup>5</sup> .
ELFORCE	Requests output of element engineering and/or node forces.

---

<sup>5</sup> The various files (output and scratch) generated by MYSTRAN are described in a later section. BUG is the extension of one of those files.

GPFORCE	Requests output of grid point force balance showing all of the forces acting on a grid point and checking equilibrium of those forces.
MEFFMASS	Requests output of modal effective masses in eigenvalue analyses.
MPCFORCE	Requests output of multi point forces of constraint (due to MPC's as well as rigid elements).
MPFACTOR	Requests output of modal participation factors in eigenvalue analyses.
OLOAD	Requests output of applied loads.
SET	Specifies sets that define grid points and elements for which output is desired.
SPCFORCE	Requests output of single point forces of constraint.
STRESS	Requests output of element stresses.
STRAIN	Requests output of element strains for shell and solid elements

The following entry defines subcases for which solutions will be calculated in static analyses (SOL 1):

SUBCASE	A entry that indicates that the following entries (until another SUBCASE entry is encountered) define the conditions for one solution in the current job. A separate subcase must be used for each loading condition for which a solution is desired.
---------	---

### 6.3.1 Detailed Description of Case Control Entries

The following pages give the details for each of the Case Control Section entries listed above. The format of each is free field with the following conventions:

Upper case letters must be entered as shown.

Lower case letters indicate that a substitution must be made.

Parentheses shown must be entered.

Braces { } indicate that a choice, from the items listed, must be made.

Brackets [ ] indicate that the terms enclosed may be omitted, if desired. Braces within brackets indicate that if terms within the brackets are input a choice must be made of the portion within the braces.

Underlined values are the default values.

In addition, some of the entries have an acceptable abbreviation of the entry name. For example, the entry requesting displacement output can be DISPLACEMENT or at least the first four letters of the name. This is noted in the detailed description with brackets. Thus DISP[LACEMENT] indicates the acceptable forms of this Case Control entry.



# BEGIN BULK

## 6.3.1.1 BEGIN BULK

### Description:

Indicates the end of the Case Control section

### Format:

BEGIN BULK

# ACCELERATION

## 6.3.1.2 ACCELERATION

### Description:

Requests output of grid point accelerations in the global coordinate system for selected grids. For Craig-Bampton model generation, the output is of the columns of the acceleration transfer matrix (ATM).

### Format:

```
ACCE[LERATION] PRINT, PUNCH =    ALL
                                n
                                NONE
```

### Examples:

ACCELERATION = ALL (requests output of accelerations for all grid points)

ACCE = 45 (requests output of accelerations for grid points included in Case Control entry SET 45)

### Options:

Option	Meaning
ALL	Accelerations for all grid points in the model will be output.
n	ID of a SET Case Control entry previously defined. Accelerations for the grid points defined by SET n will be output. Integer > 0, no default value.
NONE	No accelerations will be output.
PRINT	The output will be sent to the printer
PUNCH	The output will go to the <i>filename</i> .PCH file

### Remarks:

1. NONE is used to override an overall output request made above the SUBCASE level.

# DISPLACEMENT

## 6.3.1.3 DISPLACEMENT

### Description:

Requests output of grid point displacements in the global coordinate system for selected grids. For eigenvalue analyses, the output is of eigenvectors.

### Format:

```
DISP[LACEMENT] PRINT, PUNCH =    ALL
                                n
                                NONE
```

### Examples:

DISPLACEMENT = ALL (requests output of displacements for all grid points)

DISP = 45 (requests output of displacements for grid points included in Case Control entry SET 45)

### Options:

Option	Meaning
ALL	Displacements for all grid points in the model will be output.
n	ID of a SET Case Control entry previously defined. Displacements for the grid points defined by SET n will be output. Integer > 0, no default value.
NONE	No displacements/ will be output.
PRINT	The output will be sent to the printer
PUNCH	The output will go to the <i>filename</i> .PCH file

### Remarks:

1. NONE is used to override an overall output request made above the SUBCASE level.

# ECHO

## 6.3.1.4 ECHO

### Description:

Requests that the input data file be echoed in the output file

### Format:

ECHO=    NONE  
         UNSORT

### Examples:

ECHO = NONE

### Options:

Option	Meaning
NONE	No echo of the input data file will be in the output file.
UNSORT	The echo of the data file in the output will be in the same entry order that the input data file is in.

# ELDATA

## 6.3.1.5 ELDATA

### Description:

Requests output of element data from the element matrix generation subroutines for selected elements. The data is written to files separate from the standard output file. Description of the data items that can be output is given in the table below. The output files that the data is written to are described in the MYSTRAN Installation and Run Manual.

### Format:

```
ELDA[TA] (m ,PRINT      ALL
           ,FIJFIL ) =    n
           ,BOTH      NONE
```

### Examples:

ELDATA(4,BOTH) = 2 (print to .BUG output file, and write to unformatted file, elem data item 4 for SET 2 elems).

ELDATA(3) = 9 (print to .BUG file the output of elem data item 3 for elems included in SET 9).

ELDATA(2,FIJFIL) = ALL (write elem data item 2 for all elems to unformatted file).

### Options:

Option	Meaning
m	Defines which element data items are to be output (see table below)
ALL	Data items m for all elements will be output.
n	ID of a SET Case Control entry previously defined. Element data for item m defined by SET n will be output. Integer > 0, no default value.
NONE	No element data items will be output.

### Remarks:

1. NONE is used to override an overall output request made above the SUBCASE level.
2. See table below for a description of the data items that can be output

Element Data Items Output for ELDATA Case Control Entry

m	Data Item(s) Output	Printed to Text File With Extension	Written To Unformatted File With Extension
0	Actual and internal grid points and their basic coordinates	BUG	
1	Array of element property data. Array of element material data. Bar element v vector in basic coordinates. Bar pin flag data. Bar offsets. TE coord transform matrix (transforms a vector from basic to local elem coords). Actual and internal grid points and local element coordinates.	BUG	
2	Element thermal and pressure loads in local element coordinates.	BUG	F21
3	Element mass matrix in local element coordinates.	BUG	F22
4	Element stiffness matrix in local element coordinates.	BUG	F23
5	Element stress and strain recovery matrices in local element coordinates.	BUG	F24
6	Element grid point displacements and loads. The coordinate system will be the one defined by Bulk data PARAM ELFORCEN.	BUG	F25
7	Data on isoparametric element shape functions and Jacobian matrices	BUG	
8	Isoparametric element shape functions	BUG	
9	Check isoparametric element strain-displ matrices for rigid body motion and constant strain. <b>NOTE: as of 03/07/2020 the check on strain-displacement matrices using Case Control ELDATA(9) suspended until an error in that calculation is found. This can be overridden with Bulk Data entry: DEBUG, 202, 1</b>	BUG	

Notes:

- 1) The filename will be the same as the input data file but with the extension given in the table.
- 2) See Appendix B for a description of some of these matrices that can be output.

# ELFORCE

## 6.3.1.6 ELFORCE

### Description:

Requests output of nodal or engineering forces for selected elements.

### Format:

	ENGR	ALL
ELFO[RCE] (NODE)	=	n
(BOTH)		NONE

### Examples:

ELFORCE = ALL (requests output of element engineering forces for all elements)

ELFO(NODE) = 125 (requests output of element nodal forces for elements included in SET 125)

### Options:

Option	Meaning
ALL	Element forces for all elements in the model will be output.
n	ID of a SET Case Control entry previously defined. Element forces for the elements defined by SET n will be output. Integer > 0, no default value.
NONE	No element forces will be output.

### Remarks:

1. NONE is used to override an overall output request made above the SUBCASE level
2. The forces can be output in local element, basic, or global coordinates. See Bulk Data PARAM ELFORCEN entry

# ELSTRAIN

## 6.3.1.7 ELSTRAIN

### Description:

Requests output of strains for selected elements. See STRAIN entry for description



# ELSTRESS

## 6.3.1.8 ELSTRESS

### Description:

Requests output of stresses for selected elements. See STRESS entry for description

# ENFORCED

## 6.3.1.9 ENFORCED

### Description:

Requests a run in which the displacements (all 3 translations and rotations) are specified in a file whose name is given as part of this command. The situation in which this might be useful is one in which all grid displacements are known from test data and the user would like to get other outputs (e.g. stresses) due to these displacements.

### Format:

ENFORCED = filename

### Examples:

ENFORCED = Case1-displacements-rotations.txt

### Remarks:

1. filename is a text file with NGRID+1 records (where NGRID are the number of grids in the model)

- a) Record 1 is a comment line

- b) Records 2 through NGRID+1 have the following in CSV format for each grid:

grid ID, T1, T2, T3, R1, R2, R3

2. An example of the ENFORCED file for 2 grids is:

```
Displacements and rotations for model A with 3 grids (101, 102)
101, 1.23456D-02, 2.34567D-02, 3.45678D-03, 0.00000D+00, 4.56789D-04, 3.67890D-05
102, 6.54321D-02, 7.65432D-03, 8.76543D-03, 9.87654D-05, 5.43210D-06, 0.00000D-05
```

3. All grids must have all 6 components specified in the file (i.e. all DOF's must be in the S-set)
4. Any Case Control requests for SPC's or MPC's will result in an error
5. Any Bulk Data ASET or OMIT entries will result in an error

# FORCE

## 6.3.1.10 FORCE

### Description:

Requests element engineering and/or node forces. See ELFORCE entry.

# GPFORCES

## 6.3.1.11 GPFORCES

### Description:

Requests output of grid point force balance in the global coordinate system for selected grids.

### Format:

GPFO[RCES] =        ALL  
                      n  
                      NONE

### Examples:

GPFO = ALL (requests output of grid point force balance for all grid points)

GPFO = 45 (requests output of grid point force balance for grid points included in SET 45)

### Options:

Option	Meaning
ALL	Grid point force balance for all grid points in the model will be output
n	ID of a SET Case Control entry. Grid point force balance for the grid points defined by this set will be output. Integer > 0, no default value.
NONE	No grid point force balance will be output

### Remarks:

1. NONE is used to override an overall output request made above the SUBCASE level.

# **LABEL**

## 6.3.1.12 LABEL

### Description:

Specifies a third text line to be printed in the output file.

### Format:

LABEL = [optional text material up to, and including, column 80]

### Remarks:

1. This line of text will be printed in the output file and can be different for each subcase

# LOAD

## 6.3.1.13 LOAD

### Description:

Indicates what applied loads (identified in the Bulk Data) are to be used for a solution.

### Format:

LOAD = n

### Examples:

LOAD = 98 (requests load set 98 be used)

### Options:

Option	Meaning
n	Set ID of a load (must be the ID of at least one of the following Bulk data entries: LOAD, FORCE, GRAV, MOMENT, PLOAD2). Integer > 0, no default value.

### Remarks:

1. If the Case Control LOAD entry identifies a Bulk Data LOAD entry (load combining entry), then n must not appear as a set ID on any of the Bulk Data FORCE, GRAV, MOMENT or PLOAD2 entries that are in the input data file.
2. The Case Control LOAD entry must be present if a static loading is desired in a solution.

# MEFFMASS

## 6.3.1.14 MEFFMASS

### Description:

Requests calculation and output of modal effective masses in an eigenvalue solution.

### Format:

MEFFMASS

### Remarks:

1. This entry may appear in the Case Control section for eigenvalue extraction solutions.
2. See Bulk Data PARAM MEFMLOC for the reference point to use in calculating effective masses in Craig-Bampton (SOL 31) analyses

# METHOD

## 6.3.1.15 METHOD

Description:

Indicates what eigenvalue extraction method (identified in the Bulk Data on an EIGR or EIGRL entry) is to be used for an eigenvalue solution.

Format:

METH[OD] = n

Examples:

METHOD = 18 (requests that eigenvalue extraction method 18 be used)

Options:

Option	Meaning
n	Set ID of a Bulk data EIGR entry. Integer > 0, no default value.

Remarks:

1. This entry must appear in the Case Control section for all eigenvalue extraction solutions.



## 6.3.1.16 MPC

### Description:

Indicates what multipoint constraints (identified in the Bulk Data) are to be used for a solution.

### Format:

MPC = n

### Examples:

MPC = 47 (requests multi point constraint set 47, defined in Bulk Data, be used)

### Options:

Option	Meaning
n	Set ID of an MPC and/or MPCADD Bulk data entry. Integer > 0, no default value.

### Remarks:

1. There can be only one Case Control MPC entry per solution. It should appear in the Case Control section above any SUBCASE definitions.

# MPCFORCES

## 6.3.1.17 MPCFORCES

### Description:

Requests output of multi point constraint forces in the global coordinate system for selected grids. Multi point constraint forces consist of forces due to directly defined MPC's and also due to rigid elements (which are automated, internally in MYSTRAN, as MPC's)

### Format:

```
MPCF[ORCES] PRINT, PUNCH =    ALL
                             n
                             NONE
```

### Examples:

MPCF = ALL (requests output of multi point constraint forces for all grid points)

MPCF = 45 (requests output of multi point constraint forces for grid points included in SET 45)

### Options:

Option	Meaning
ALL	Multi point constraint forces for all grid points in the model will be output
n	ID of a SET Case Control entry. Multi point constraint forces for the grid points defined by this set will be output. Integer > 0, no default value.
NONE	No MPC forces will be output.
PRINT	The output will be sent to the printer
PUNCH	The output will go to the <i>filename</i> .PCH file

### Remarks:

1. NONE is used to override an overall output request made above the SUBCASE level.

# MPFACTOR

## 6.3.1.18 MPFACTOR

### Description:

Requests calculation and output of modal participation factors in an eigenvalue solution.

### Format:

MPFACTOR

### Remarks:

1. This entry may appear in the Case Control section for eigenvalue extraction solutions.

# OLOAD

## 6.3.1.19 OLOAD

### Description:

Requests output of applied loads in the global coordinate system for selected grids.

### Format:

```
OLOAD[D] PRINT, PUNCH =    ALL
                           n
                           NONE
```

### Examples:

OLOAD = ALL (requests output of applied loads for all grid points)

OLOAD = 45 (requests output of applied loads for grid points included in SET 45)

### Options:

Option	Meaning
ALL	Applied loads for all grid points in the model will be output
n	ID of a SET Case Control entry previously defined. Applied loads for the grid points defined by this set will be output. Integer > 0, no default value.
NONE	No applied loads will be output.
PRINT	The output will be sent to the printer
PUNCH	The output will go to the <i>filename</i> .PCH file

### Remarks:

1. NONE is used to override an overall output request made above the SUBCASE level.

# SET

## 6.3.1.20 SET

### Description:

Defines sets of grid points or elements for which output is desired.

### Format:

SET n = {i<sub>1</sub> [, i<sub>2</sub>, i<sub>3</sub>, i<sub>4</sub> THRU i<sub>5</sub>, EXCEPT i<sub>6</sub>, i<sub>7</sub>, i<sub>8</sub> THRU i<sub>9</sub> ]}

### Examples:

SET 39 = 2998

SET 57 = 101 THRU 298

SET 12 = 301, 305, 491 THRU 672 EXCEPT 501

### Options:

Option	Meaning
n	Set ID number. Integer > 0, no default.
i <sub>1</sub> , i <sub>2</sub> , i <sub>3</sub> , etc.	Individual grid point or element numbers.
i <sub>4</sub> THRU i <sub>5</sub>	Inclusive group of grid or element numbers.
EXCEPT	Grid or element numbers following EXCEPT (but before next THRU) will be excluded from the previous THRU group.

### Remarks:

1. Any number of SETs can be defined as long as the ID numbers are unique integers. The SET logical entry can consist of multiple physical entries, each of 80 columns max. If a SET definition requires more than one physical entry each entry (except the last) must end with a “,”
2. Ranges in THRU statements must be increasing (that is, i<sub>4</sub> must be less than i<sub>5</sub> in the above example). It is acceptable that some grid or element numbers in the THRU range do not exist. However, all grids or elements that are in the THRU range will be included in the SET.
3. Whether the set indicates grids or elements is dependent on the context in which the SET is used. If DISP = 39 output is requested, then the integers in SET 39 will be interpreted as grid point numbers. If ELFORCE = 39 output is requested, then the integers in SET 39 will be interpreted as element numbers.

## 6.3.1.21 SPC

### Description:

Indicates what single point constraints (identified in the Bulk Data) are to be used for a solution.

### Format:

SPC = n

### Examples:

SPC = 74 (requests single point constraint set 74 be used)

### Options:

Option	Meaning
n	Set ID of at least one SPC, SPC1 and/or SPCADD Bulk data entries. Integer > 0, no default value.

### Remarks:

1. There can be only one Case Control SPC entry per solution. It should appear in the Case Control section above any SUBCASE definitions.

# SPCFORCES

## 6.3.1.22 SPCFORCES

### Description:

Requests output of single point constraint (SPC) forces in the global coordinate system for selected grids.

### Format:

```
SPCF[ORCES] PRINT, PUNCH =    ALL
                             n
                             NONE
```

### Examples:

SPCF = ALL (requests output of SPC forces for all grid points)

SPCFORCES = 45 (requests output of SPC forces for grid points included in SET 45)

### Options:

Option	Meaning
ALL	SPC forces for all grid points in the model will be output.
n	ID of a SET Case Control entry previously defined. SPC forces for the grid points defined by this set will be output. Integer > 0, no default value.
NONE	No SPC forces will be output.
PRINT	The output will be sent to the printer
PUNCH	The output will go to the <i>filename.PCH</i> file

### Remarks:

1, NONE is used to override an overall output request made above the SUBCASE level

# STRAIN

## 6.3.1.23 STRAIN

### Description:

Requests output of stresses for selected elements.

### Format:

STRA IN      VONMISES      CENTER      ALL  
                 MAXS or SHEAR      CORNER      =      n  
   NONE

### Examples:

### Options:

Option	Meaning
VONMISES	Requests von Miises strain (default)
MAXS or SHEAR	Requests maximum shear strain for shell elements and octrahedral strain for solid elements
CENTER	Requests strains at the center of shell and solid elements (default)
CORNER	Requests strains at the element corners for the QUAD4 and QUAD4K elements, in addition to strains at the element center
ALL	Strains for all elements in the model will be output.
n	ID of a SET Case Control entry previously defined. Strains for the elements defined by SET n will be output. Integer > 0, no default value.
NONE	No displacements will be output.

### Remarks:

1. NONE is used to override an overall output request made above the SUBCASE level
2. ELSTRAIN is an alternate form of this Case Control command
3. The options VONMISES, MASS (or SHEAR), CENTER and CORNER will apply for all subcases



# STRESS

## 6.3.1.24 STRESS

### Description:

Requests output of stresses for selected elements.

### Format:

STRE SS      VONMISES      CENTER      ALL  
                 MAXS or SHEAR      CORNER      =      n  
   NONE

### Examples:

### Options:

Option	Meaning
VONMISES	Requests von Miises stress (default)
MAXS or SHEAR	Requests maximum shear stress for shell elements and octrahedral stress for solid elements
CENTER	Requests stresses at the center of shell and solid elements (default)
CORNER	Requests stresses at the element corners for the QUAD4 and QUAD4K elements, in addition to stresses at the element center
ALL	Stresses for all elements in the model will be output.
n	ID of a SET Case Control entry previously defined. Stresses for the elements defined by SET n will be output. Integer > 0, no default value.
NONE	No displacements will be output.

### Remarks:

1. NONE is used to override an overall output request made above the SUBCASE level
2. ELSTRESS is an alternate form of this Case Control command
3. The options VONMISES, MASS (or SHEAR), CENTER and CORNER will apply for all subcases

# SUBCASE

## 6.3.1.25 SUBCASE

### Description:

Beginning of the portion of the Case Control section that defines the options to be used in one subcase. Multiple subcases must be used when solution with separate static loads in one run is desired.

### Format:

SUBC[ASE] = n

### Examples:

SUBCASE = 361

### Options:

Option	Meaning
n	Set ID of a subcase. Integer > 0, no default value.

### Remarks:

1. There can be multiple subcases and there is no restriction on the integer numbers used for subcase IDs
2. All Case Control entries following a SUBCASE entry (up to the next SUBCASE Case Control entry) identify the conditions for solution (loads and output) for this subcase. Case Control entries "above" the SUBCASE level will be used for all subcases unless specifically overridden in the subcase definition.

# SUBTITLE

## 6.3.1.26 SUBTITLE

### Description:

Specifies a second text line to be printed in the output file.

### Format:

SUBT[ITLE] = [optional text material up to, and including, column 80]

### Remarks:

1. This line of text will be printed in the output file and can be different for each subcase.

# TEMPERATURE

## 6.3.1.27 TEMPERATURE

### Description:

Indicates temperature distributions (identified in the Bulk Data) that are to be used for a statics solution.

### Format:

TEMP[ERATURE] = n

### Examples:

TEMP = 174 (requests temperature set 174 be used)

TEMPERATURE = 13 (requests temperature set 13 be used)

### Options:

Option	Meaning
n	Set ID of Bulk Data TEMP, TEMPD, TEMPRB and/or TEMPP1 cards. Integer > 0, no default value.

### Remarks:

1. Thermal loads can be used in combination with other static loads in any subcase but must be selected in Case Control with the TEMPERATURE = n card.

# TITLE

## 6.3.1.28 TITLE

### Description:

Specifies a text line to be printed in the output file.

### Format:

TITLE = [optional text material up to, and including, column 80]

### Remarks:

1. This line of text will be printed in the output file and can be different for each subcase

# VECTOR

## 6.3.1.29 VECTOR

### Description:

Requests eigenvector output. See DISPLACEMENT entry.

## 6.4 Bulk Data

The major function of the Bulk Data Section is to define the finite element model and the loading and constraints. In the case of loading and constraints, the Bulk Data entries have a set ID which must be chosen in Case Control for the particular load or constraint to be applied.

The entries for each of the major purposes are enumerated below. A detailed explanation of each is contained in the following section. An ENDDATA entry is considered as the last, and mandatory, entry in the Bulk data Section.

### Geometry/scalar point definition

GRID	Defines grid point ID and location, coordinate systems for the grid location and for the global coordinate system, and permanent single point constraints.
GRDSET	Defines default values for coordinate systems and permanent SPC's for GRID entries whose corresponding fields are blank.
SPOINT	Defines a scalar point to which elastic and mass elements may be attached.

### Grid point sequencing

SEQGP	Used to define the internal sequence order for grid points so as to obtain a banded stiffness matrix. If not input, then the grid order is set to, either: grid numerical order (default) or grid input order (using PARAM SEQUENCE)
-------	--

### Coordinate system definition (i = 1 or 2)

CORDiR	Defines a rectangular coordinate system.
CORDiC	Defines a cylindrical coordinate system.
CORDiS	Defines a spherical coordinate system.

### Element connection definition

#### Scalar and bushing elastic elements

CBUSH	Spring element with geometry definition
CELAS1	Defines a spring element ID, property ID and the grid/degrees of freedom to which the spring element is connected.
CELAS2	Defines a spring element ID, stiffness and the grid/degrees of freedom to which the spring element is connected.
CELAS3	Defines a spring element ID, property ID and the scalar points to which the spring element is connected.

CELAS4	Defines a spring element ID, stiffness and the scalar points to which the spring element is connected.
--------	--

#### 1D elastic elements

CBAR	Defines a bar (axial load, bending, torsion) element ID, property ID and the grid connections and v vector (which, together with the bar axis, defines the orientation of the bar cross-section in the model).
BAROR	Defines default values of property ID and v vector for the CBAR entry.
CROD,	Defines a rod (axial load and torsion) element ID, property ID and the grid connections. The bar element can be used to describe 1D element extension, as well.
CONROD	Alternate form of CROD

#### 2D elastic elements

CQUAD4K	Defines a thin quadrilateral plate (membrane, bending, twist) element ID, property ID and the grid points to which the quad element is connected.
CQUAD4	Defines a thick quadrilateral plate (membrane, bending, twist) element ID, property ID and the grid points to which the quad element is connected.
CTRIA3K	Defines a thin triangular plate (membrane, bending, twist) element ID, property ID and the grid points to which the triangular element is connected.
CTRIA3	Defines a thick triangular plate (membrane, bending, twist) element ID, property ID and the grid points to which the triangular element is connected.
CSHEAR	Defines a thin quadrilateral element that carries only in-plane shear

#### 3D elastic elements

CHEXA	Defines a hexahedron element with either 8 or 20 nodes.
CPENTA	Defines a pentahedron element with either 6 or 15 nodes.
CTETRA	Defines a tetrahedron element with either 4 or 10 nodes.



### R- elements

The R-elements (currently RBE2 and RBE3) are used to generate internal multi-point constraint equations (MPC's) that define a dependence of some degrees of freedom of the model with respect to the other degrees of freedom in the model.

RBE2	Defines a rigid portion of the finite element model by specifying an element ID plus a number of dependent grid points that will behave in a rigid fashion relative to the six components of motion at a specified independent grid point. The degrees of freedom for the dependent grids are also specified. In its most simplistic form, the RBE2 can be used to define, for instance, a rigid 1-D bar or a rigid 2-D element.
RBE3	Defines one dependent grid point (and the dependent degrees of freedom at that grid point) and one or more grids (and their degrees of freedom) that the dependent degrees of freedom depend on. The most common use of this element is to distribute loads or mass specified at the dependent grid to ones at the independent grid. This is very different than the RBE2 which is a rigid element. In general, the dependent grid on the RBE3 should not be connected via elastic or rigid elements to the rest of the structure except via the RBE3 element on which it is defined. There is also a provision for specifying weighting factors at the independent grids (which in many cases are just 1.0).
RSPLINE	Constraint element that defines interpolations of displacements between it's 2 ends. Displacements and rotations about a line between the 2 ends are interpolated linearly. Displacements perpendicular to the line are interpolated cubically. Rotations perpendicular to the line are interpolated quadratically.

### Scalar mass elements

CMASS1	Defines a mass element ID, property ID and the grid/degrees of freedom to which the mass element is connected.
CMASS2	Defines a mass element ID, stiffness and the grid/degrees of freedom to which the mass element is connected.
CMASS3	Defines a mass element ID, property ID and the scalar points to which the mass element is connected.
CMASS4	Defines a mass element ID, stiffness and the scalar points to which the mass element is connected.

### User defined elements

CUSERIN	Elements whose elastic properties will be defined via stiffness and mass matrices on disk files. The CUSERIN entry defines the degrees of freedom that the element is connected to. These elements are used in substructure analyses (primarily Craig-Bampton dynamic analyses).
---------	--

## Element property definition

### Scalar elastic element

PELAS	Defines a spring element property ID and the stiffness, damping and stress recovery values for a ELAS1 scalar spring element
PBUSH	Defines the elastic properties of a CBUSH element

### 1D elastic elements

PBAR, PBARL	Defines a bar property ID and material ID and the bar properties, including: cross-sectional area, area moments, and cross-products, of inertia, torsional constant, mass per unit length, stress recovery locations on the cross-section and area factors for shear flexibility.
PROD	Defines a rod property ID and material ID and the rod properties, including: cross-sectional area, torsional constant, torsion stress recovery coefficient and mass per unit length

### 2D elastic elements

PSHEAR	Defines the elastic properties of a CSHEAR element
PSHELL	Defines a 2D plate element property ID and material IDs and the plate properties, including: thickness, .bending moment of inertia ratio, shear thickness ratio, fiber distances for stress calculation, mass per unit length.
PCOMP, 1	Defines the properties of a 2D composite plate element with n plies.

### 3D elastic elements

PSOLID	Defines a 3D solid element property ID and material ID and integration parameters.
--------	--

### User elements

PUSERIN	Defines information needed to locate the matrices (specified on disk files) for CUSERIN elements.
---------	---

## Element material definition

MAT1	Defines a material ID and the material properties, including: Young's modulus, shear modulus, Poisson's ratio, material mass density, thermal expansion coefficient, reference temperature, and a damping coefficient.
------	--

MAT2	Defines a 2D anisotropic material.
MAT8	Defines an orthotropic material.
MAT9	Defines an anisotropic material.
PMASS	Defines scalar mass for elements defined on CMASS2,4 entries.
Grid point mass	
CONM2	Defines a concentrated mass at a grid point, including: mass ID, grid where mass is located, the mass value, the offsets from the grid to the mass center of gravity (c.g.), the six independent moments and products of inertia of the mass about its c.g., and the coordinate system in which the offsets and moments of inertia are specified.
Applied loads	
FORCE	Defines a concentrated force at a grid point, including: load ID, grid ID at which the force acts, coordinate system in which the force is specified, and the magnitude and direction of the force.
MOMENT	Defines a concentrated moment at a grid point, including: load ID, grid ID at which the moment acts, coordinate system in which the moment is specified, and the magnitude and direction of the moment.
GRAV	Defines an acceleration vector for the finite element model, including: load ID, coordinate system in which the acceleration vector is specified, and magnitude and direction of the acceleration vector. MYSTRAN creates a static load that is applied to a model to simulate a gravity type of loading but with rigid body motion restrained.
PLOAD2	Defines a pressure load for 2D elements, including: load ID, pressure magnitude, and element IDs for the elements that are to have the pressure load.
PLOAD4	Defines a pressure load for 2D elements, including: load ID, pressure magnitudes at up to 4 grids, and element IDs for the elements that are to have the pressure load.
LOAD	Defines a static load for the finite element model that is a linear combination of loads that are defined on FORCE, MOMENT, GRAV and PLOAD2 entries, including: ID of this load combination, a scale factor to be applied to all loads being combined, and load set IDs and magnitudes of the various load sets being combined.
RFORCE	Defines an angular velocity and optional angular acceleration of the finite element model about some defined grid point and in some defined coordinate system.
SLOAD	Defines a.

Thermal loads (all are used by MYSTRAN to calculate loads on the model)

TEMPD	Defines an overall constant temperature for the finite element model including: temperature set ID and the temperature value.
TEMP	Defines a temperature for a grid point including: temperature set ID, the grid ID, and the temperature value
TEMPRB	Defines a temperature field for the bar element including: temperature set ID, the average temperature of the cross-section at the two bar ends, the two temperature gradients through the bar cross-section at each of the two ends.
TEMPP1	Defines a temperature field for 2D elements including: temperature set ID, the average temperature of the element at its mid-plane, the temperature gradient through the element.

Single point constraints (SPC)

SPC	Defines a constraint for a single degree of freedom including: SPC set ID, the grid and degree of freedom component number, and the constraint value. If the constraint value is nonzero (that is, an enforced displacement), MYSTRAN calculates equivalent grid forces and applies them to the model.
SPC1	Defines degrees of freedom where displacement is zero. The definition Includes: the SPC set ID, the degree of freedom component number and the grids that are to be constrained.
SPCADD	Defines an SPC as a union of SPC's defined via SPC and/or SPC1 Bulk data entries.

Multi point constraints (MPC)

MPC	Defines a dependence of one degree of freedom on one or more other degrees of freedom.
MPCADD	Defines an MPC as a union of MPC's defined via MPC Bulk data entries.

Boundary degrees of freedom for Craig-Bampton (CB) analyses

SUPPORT	Defines degrees of freedom at the boundary of a CB model.
---------	---

Analysis degrees of freedom (only needed when Guyan reduction is employed)

ASET	Defines degrees of freedom that are to be included in the A-set by specifying pairs of component/grid IDs
ASET1	Defines degrees of freedom that are to be included in the A-set by specifying a component number and a list of grid IDs
OMIT	Defines degrees of freedom that are to be included in the O-set by specifying pairs of component/grid IDs
OMIT1	Defines degrees of freedom that are to be included in the O-set by specifying a component number and a list of grid IDs

## Eigenvalue extraction

EIGR	Defines the data needed during eigenvalue extraction by the Givens (GIV), modified Givens( MGIV) or Inverse Power (INV) method, including: eigenvalue extraction set ID, extraction method, frequency range to search, number of estimated and desired eigenvalues, the eigenvector orthogonality criteria, and method of eigenvector renormalization.
EIGRL	Defines the data needed during eigenvalue extraction by the Lanczos method, including: eigenvalue extraction set ID, desired number of eigenvalues, and method of eigenvector renormalization.

## Partitioning vectors (used in conjunction with the OUTPUT4 and PARTN Exec Control entries)

PARVEC	The format for this entry is similar to the Bulk Data SPC entry and gives the grid/component pairs of the degrees of freedom (in any of the allowable displacement sets <sup>6</sup> ) that define the rows or columns to be partitioned from the OUTPUT4 matrix.
PARVEC1	The format for this entry is similar to the Bulk Data SPC1 entry and gives the same information as for the PARVEC entry, only in a different format

## Degree of freedom set definition (requests output in a row format of a displacement set)

USET	The format for this entry is similar to the Bulk Data SPC entry and requests a tabular output of selected grid/component pairs, in internal sort, that are members of a named displacement set (e.g. the A-set).
USET1	The format for this entry is similar to the Bulk Data SPC1 entry and gives the same information as for the USET entry, only in a different format.

PARVEC The format for this entry is the same as that for the Bulk Data SPC entry  
Field 2 identifies the parameter name and subsequent fields define the Parameters (used to control solution options during execution)

PARAM	Field 2 identifies the parameter name and subsequent fields define the parts of the parameter either as character, integer or real data.
-------	--

## Debug (used to control debug options during execution)

DEBUG	The word DEBUG must be in field 1. The DEBUG number (I) goes in field 2 and the value of DEBUG(I) goes in field 3.
-------	--

## Plot elements (only for compatibility with NASTRAN input data files)

PLOTTEL

---

<sup>6</sup> see section 3.6 for a definition of displacement sets

A Bulk Data physical entry contains 80 columns of data in up to 10 fields of 8 columns each. As discussed in an earlier section, some Bulk data entries require more than the 10 fields in order to specify all of its data. Thus, a logical entry exists to describe all of the data required for one Bulk data entry. This logical entry can consist of more than one physical entry with the initial entry of 10 fields being called the “parent” and subsequent continuation entries called “child” entries. Whenever a logical entry requires continuation entries, or is capable of having continuation entries, this is noted.

Each of the Bulk Data entries is described with:

Name of the entry and a brief sentence describing its function.

Format of the entry with names of the data items that go in each of the (up to) 10 fields.

Numerical example(s).

Description of each fields’ contents, data type (i.e. character, integer, real) and default values.

Remarks regarding the entry.

An example of the format section for the PBAR Bulk Data entry is shown below with some explanation of the format. The data can be entered in the traditional way as shown with 10 fields of 8 columns each. Alternatively, the 10 fields can be separated by either commas (referred to as comma separated values, or CSV) or tabs (TSV)

**Format (small field entry with 8 columns for each of the 10 fields):**

1	2	3	4	5	6	7	8	9	10
PBAR	PID	MID	A	I1	I2	J	MPL		+CONT1
+CONT1	Y1	Z1	Y2	Z2	Y3	Z3	Y4	Z4	+CONT2
+CONT2	K1	K2	I12						

The format section for the PBAR has four rows of text. Note the following:

Row 1 of the format section (for all Bulk Data entry descriptions) is only to show the field number of the Bulk Data entry and is not part of the input for the Bulk Data entry. Each of the 10 fields is 8 columns wide.

Row 2 is the “parent” entry for the entry illustrated here (PBAR) and is always required.

The entry in field 1 is the name of the Bulk Data entry and must be entered exactly as shown, starting in column 1 of field 1.

Fields 2-9 in general (2-8 in the PBAR above), show names of the data items (in row 1) for the Bulk Data entry (e.g. PID is the property ID for this PBAR). The data names are to be replaced by actual data that can be placed anywhere in the field. The data for a specific field might call for a character or integer or real value and this requirement is noted for each field. The entry in field 10 is only required if there is a continuation entry. If no continuation entry will be used, field 10 could contain comments.

If continuation entries are required or optional for the parent entry, they will be shown in rows 3 and on as in the example above.

The entry in field 1 of a continuation must be the same as that in field 10 of the previous continuation (or parent, in the case of the first continuation).

The entry in fields 2-9, like those on the parent are to contain data that can be placed anywhere in the field.

The entry in field 10 is only required if there is to be another continuation entry to follow.

Continuation entries must contain a "+" sign in column 1 of field 10 of one entry and field 1 of the following entry and be the same otherwise. They do not have to be as shown in the example above (e.g. +CONT1 in field 10 of the parent and in field 1 of the first continuation entry)

Shaded fields (like field 9 of the parent entry, above, and fields 5-9 of the second continuation entry), must be left blank.

Data can be character, integer or real but must be of the type specified and with the following conventions:

Character data can be alphanumeric but must begin with an alpha character. No quotation marks are to be included. Character data that can go in fields 2-9 are always spelled out as to what the options are and must be entered exactly as shown (except that they may be placed anywhere in the field).

Integer data must contain no decimal point or imbedded blanks.

Real data must contain a decimal point and no imbedded blanks. Some examples of valid real entries are:

1.234567

2.57E-4 or 2.57-4 (i.e.  $2.57 \times 10^{-4}$ )

Each of the Bulk Data entries are described in detail on the following pages

There is also a large field Bulk data entry capability where data fields 2 through 9 of a Bulk Data entry can be 16 characters long, instead of just 8 characters. This is done in order to allow more precision in the input for real data fields. Recall that each small field physical entry has 10 fields of 8 characters each. In the large field entry, there are 2 physical entries required to specify all of the data from a small field entry. The following shows the correspondence between small and large field entries:

Small field PBAR parent entry (1 physical entry for the 10 fields of data):

1	2	3	4	5	6	7	8	9	10
PBAR	PID	MID	A	I1	I2	J	MPL		+CONT1

**Format (large field entry with 16 columns for each of fields 2 through 9):**

Large field PBAR parent entry (2 physical entries needed to specify the 10 fields of data)

1	2	3	4	5	link
PBAR*	PID	MID	A	I1	*
link	6	7	8	9	10
*	I2	J	MPL		

Note that an \* is used after PBAR to indicate that this is a large field entry. In addition, in order to link the 2 halves of the physical entry, an \* is placed in column 73 of the 1<sup>st</sup> part of the entry and in column 1 of the 2<sup>nd</sup> part of the entry. Fields 1 and 10, as well as the last field of the 1<sup>st</sup> part and the 1<sup>st</sup> field of the 2<sup>nd</sup> part, are 8 columns each. Fields 2 through 9 are 16 columns each.

Large field entries MUST come in pairs, even for continuation entries where the 2<sup>nd</sup> of the large field entry contains no data. For example, the large field entry for the PBAR, if all data is to be entered, would be:

PBAR*	PID	MID	A	I1	*P1
*P1	I2	I12	J	MPL	*P2
*P2	Y1	Z1	Y2	Z2	*P3
*P3	Y3	Z3	Y4	Z4	*P4
*P4	K1	K2	I12	CT	*P5
*P5					

Note the last entry, which would be fields 6-9 of the small field 2<sup>nd</sup> continuation for the PBAR, is empty but must be included or the entry before it will be ignored

#### 6.4.1 Detailed Description of Bulk Data Entries

The following sections describe the input required for each of the different Bulk Data entries.



# ASET

## 6.4.1.1 ASET

### Description:

Define degrees of freedom to go into the analysis set (A-set)

### Format:

ASET	G1	C1	G2	C2	G3	C3	G4	C4	
------	----	----	----	----	----	----	----	----	--

### Example:

ASET	19	1	28	2345	37	124	46	134	
------	----	---	----	------	----	-----	----	-----	--

### Data Description:

Field	Contents	Type	Default
Gi	ID numbers of grids	Integer > 0	None
Ci	Displacement component numbers	Integers 1-6	None

### Remarks:

1. The degrees of freedom defined by grids Gi, components Ci will be placed in the mutually exclusive A-set. These degrees of freedom cannot have been defined to be in any other mutually exclusive set (i.e.. M, S or O-sets).
2. If there are no ASET (or ASET1) and no OMIT (or OMIT1) entries, all degrees of freedom not in the M or S-set will be placed in the A-set
3. If ASET (or ASET1) entries are present in the input data file, then all degrees of freedom not specified on these entries and also not in the M or S-sets will be placed in the O-set.
4. If both ASET (or ASET1) and OMIT (or OMIT1) are present, then all degrees of freedom not in the M and S-sets must be explicitly defined on these ASET (or ASET1) and OMIT (or OMIT1) entries.
5. Up to four pairs of Gi, Ci can be specified on one ASET entry. For more pairs, use additional ASET entries (i.e. there is no continuation entry for ASET).

# ASET1

## 6.4.1.2 ASET1

### Description:

Define degrees of freedom to go into the analysis set (A-set)

### Format No. 1:

ASET1	C	G1	G2	G4	G4	G5	G6	G7	+Q001
+Q001	G8	G9	(etc)						

### Format No. 2:

ASET1	C	G1	THRU	G2					
-------	---	----	------	----	--	--	--	--	--

### Example:

ASET1	135	17934	THRU	19012					
-------	-----	-------	------	-------	--	--	--	--	--

### Data Description:

Field	Contents	Type	Default
Gi	ID numbers of grids. G2 > G1	Integer > 0	None
C	Displacement component numbers	Integers 1-6	None

### Remarks:

1. In Format No. 2, any grid whose ID is in the range G1 through G2 will have component C defined in the A-set.
2. The degrees of freedom defined by grids G1, components Ci will be placed in the mutually exclusive A-set. These degrees of freedom cannot have been defined to be in any other mutually exclusive set (i.e.. M, S or O-sets).
3. If there are no ASET (or ASET1) and no OMIT (or OMIT1) entries, all degrees of freedom not in the M or S-set will be placed in the A-set
4. If ASET (or ASET1) entries are present in the input data file, then all degrees of freedom not specified on these entries and also not in the M or S-sets will be placed in the O-set.
5. If both ASET (or ASET1) and OMIT (or OMIT1) are present, then all degrees of freedom not in the M and S sets must be explicitly defined on these ASET (or ASET1) and OMIT (or OMIT1) entries.
6. Up to four pairs of Gi, Ci can be specified on one ASET entry. For more pairs, use additional ASET entries (i.e. there is no continuation entry for ASET).

# BAROR

## 6.4.1.3 BAROR

### Description:

Define default values for the CBAR entry.

### Format No.1:

BAROR		PID			V1	V2	V3		
-------	--	-----	--	--	----	----	----	--	--

### Format No.2:

BAROR		PID			G0				
-------	--	-----	--	--	----	--	--	--	--

### Examples:

BAROR		57			1.3	3.5	0.7		
-------	--	----	--	--	-----	-----	-----	--	--

BAROR		57			1563				
-------	--	----	--	--	------	--	--	--	--

### Data Description:

Field	Contents	Type	Default
PID	ID number of a PBAR Bulk data entry	Integer > 0 or blank	None
G0	ID of a grid used to define the orientation v vector	Integer > 0 or blank	None
Vi	The three components of the orientation v vector specified in the global coordinate system for grid G1 on the CBAR entry.	Real or blank	None

### Remarks:

1. Only one BAROR entry is allowed in the input data file. Any data entered on a BAROR entry will be used unless overridden on a CBAR entry. If format 1 is used, all three components of the v vector must be entered.
2. The orientation v vector can be specified using either a grid point (G0) or the components Vi. Either one of these, in conjunction with the grid G1 on the CBAR entry, defines the orientation vector.
3. See CBAR entry for remarks concerning the v vector.

# CBAR

## 6.4.1.4 CBAR

### Description:

1D bar element for axial load, bending and torsion

### Format No. 1:

1	2	3	4	5	6	7	8	9	10
CBAR	EID	PID	G1	G2	G0				+CONT
+CONT	P1	P2	W11	W12	W13	W21	W22	W23	

### Format No. 2:

CBAR	EID	PID	GA	GB	V1	V2	V3		+CONT
+CONT	P1	P2	W11	W12	W13	W21	W22	W23	

### Examples:

CBAR	98	43	1234	56	78				+BAR98
+BAR98	456	13	0.0	0.2	0.3	0.1	0.05	0.10	

CBAR	98	43	1234	56	0.5	1.5	3.2		
------	----	----	------	----	-----	-----	-----	--	--

### Data Description:

Field	Contents	Type	Default
EID	Element ID number	Integer > 0	None
PID	ID number of a PBAR Bulk data entry	Integer > 0	EID
G1, G2	ID numbers of the grids to which the element is attached	Integer > 0	None
G0	ID of a grid used to define the orientation v vector	Integer > 0	None
Vi	Components of the orientation v vector	Real	None
P1, P2	Pin flags for bar ends 1 and 2 respectively	Integers 1-6	None
W1j	Components of the bar offset from grid G1	Real	None
W2j	Components of the bar offset from grid G2	Real	None

### Remarks:

1. No other element in the model may have the same element ID
2. The v vector is a vector from either: (a) grid G1 to grid G0, or (b) from grid G1 in the direction of the vector defined by V1, V2, V3. These components are measured in the global coordinate system of grid G1 (see GRID entry for definition of the global coordinate system for a grid). If format 1 is used, all three components of the v vector must be entered.

3. The local x axis of the element is a vector from G1 through G2 (see Figure 4-3)
4. The x axis and the v vector define a plane. On the PBAR entry, I1 is the bending moment of inertia in this plane.

# CBUSH

## 6.4.1.5 CBUSH

### Description:

Spring element

### Format No. 1:

1	2	3	4	5	6	7	8	9	10
CBUSH	EID	PID	G1	G2	G0			CID	+CONT
+CONT	S	OCID	S1	S2	S3				

### Format No. 2:

CBUSH	EID	PID	GA	GB	V1	V2	V3	CID	+CONT
+CONT	S	OCID	S1	S2	S3				

### Examples:

CBUSH	98	43	1234	56	78				+CONT
+CONT	456	13	0.0	0.2	0.3				


CBAR	98	43	1234	56	0.5	1.5	3.2		
------	----	----	------	----	-----	-----	-----	--	--

### Data Description:

Field	Contents	Type	Default
EID	Element ID number	Integer > 0	None
PID	ID number of a PBUSH Bulk data entry	Integer > 0	EID
G1, G2	ID numbers of the grids to which the element is attached	Integer > 0	None
G0	ID of a grid used to define the orientation v vector	Integer > 0	None
Vi	Components of the orientation v vector	Real	None
CID	Element coordinate system identification (0 is basic system) If blank, the element system is defined by G0 or Vi	Integer >= 0 or blank	None
S	Location of spring	0.< Real < 1.	0.5
OCID	ID of coordinate system used in defining the offsets. OCID = -1 indicates that the offsets are specified in the element coordinate system	Integer >= -1	-1
Si	Components of spring offset	Real	0.

Remarks:

1. No other element in the model may have the same element ID
2. If  $CID \geq 0$  the element x axis is along the x axis of coordinate system CID, etc.
3. A V vector must be specified. That is, fields 6-9 cannot all be blank
4. GB cannot be blank
5. The following pertains to OCID:
  - (a)  $OCID = -1$  (or blank) means S is used and  $S_i$  are ignored
  - (b)  $OCID \geq 0$  means S is ignored and  $S_i$  are used

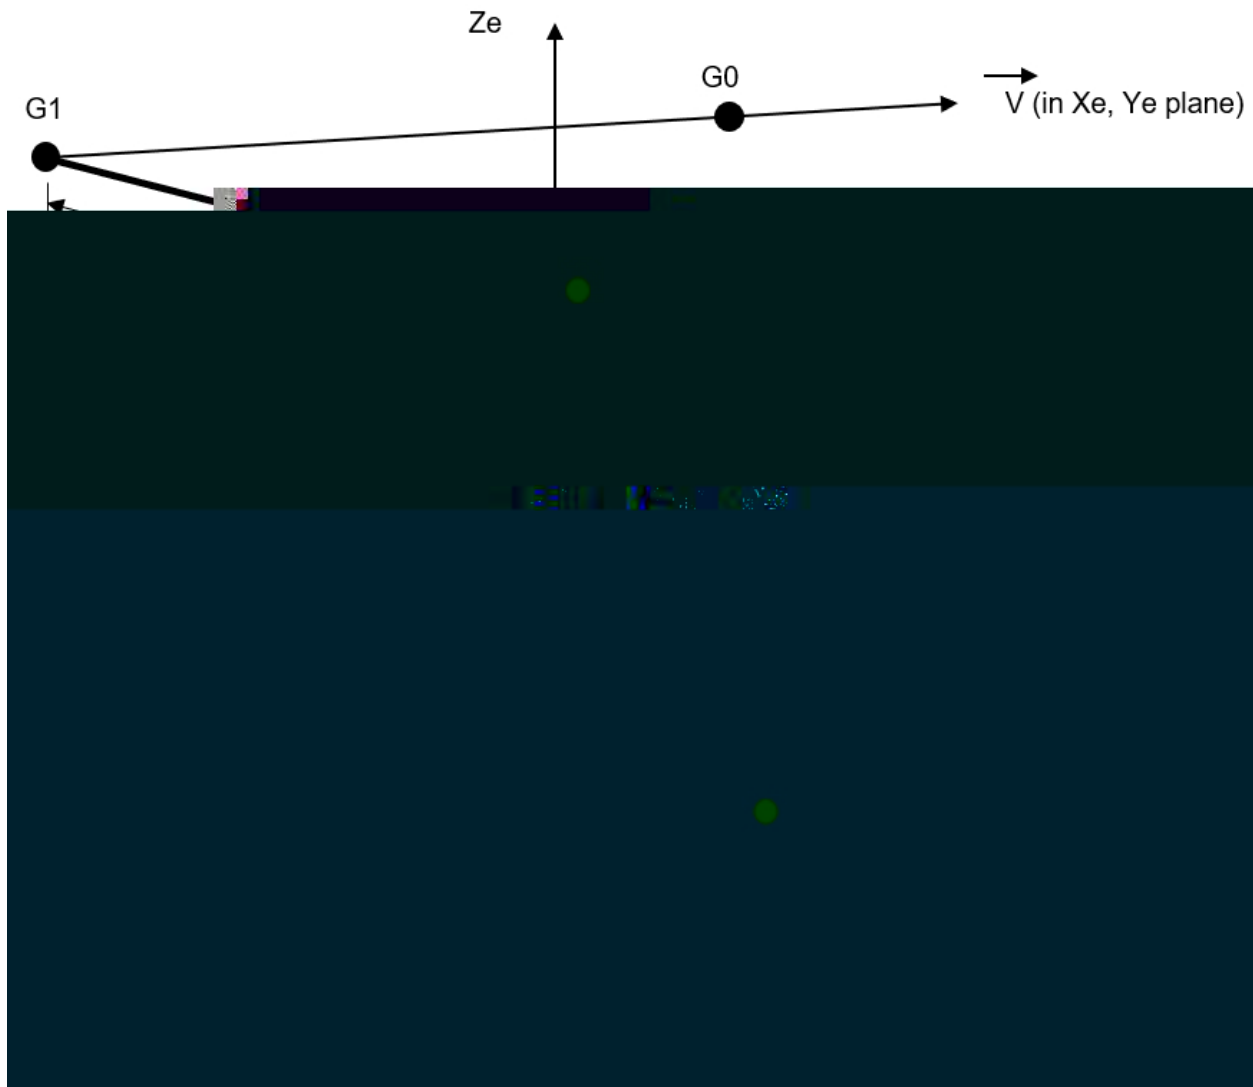

# CELAS1

## 6.4.1.6 CELAS1

### Description:

Scalar spring element connected to 2 grid points (GRID's) with reference to a PELAS entry to define the real values for the element

### Format:

1	2	3	4	5	6	7	8	9	10
CELAS1	EID	PID	G1	C1	G2	C2			

### Example:

CELAS1	789	32	3731	5	67	5			
--------	-----	----	------	---	----	---	--	--	--

### Data Description:

Field	Contents	Type	Default
EID	Unique element identification (ID) number	Integer > 0	None
PID	ID number of a PELAS Bulk data entry	Integer > 0	EID
Gi	ID numbers of the grids to which the element is attached	Integer > 0	None
Ci	Component number (1-6) of the degree of freedom, at Gi, to which the spring element is connected	Integer 1-6	None

### Remarks:

1. No other element in the model may have the same element ID
2. The degrees of freedom specified by Gi/Ci must be global degrees of freedom
3. Care must be exercised that rigid body motion of the model is not restrained when using scalar springs For example, connecting a scalar spring between two translational degrees of freedom that are not colinear may restrain rigid body motion and give erroneous results



## CELAS2

### 6.4.1.7 CELAS2

#### Description:

Scalar spring element connected to 2 grid points (GRID's) with the element stiffness defined

#### Format:

1	2	3	4	5	6	7	8	9	10
CELAS2	EID	K	G1	C1	G2	C2			

#### Example:

CELAS2	789	1.234+06	3731	5	67	5			
--------	-----	----------	------	---	----	---	--	--	--

#### Data Description:

Field	Contents	Type	Default
EID	Unique element identification (ID) number	Integer > 0	None
K	Stiffness value	Real	0.
Gi	ID numbers of the grids to which the element is attached	Integer > 0	None
Ci	Component number (1-6) of the degree of freedom, at Gi, to which the spring element is connected	Integer 1-6	None

#### Remarks:

1. No other element in the model may have the same element ID
2. The degrees of freedom specified by Gi/Ci must be global degrees of freedom
3. Care must be exercised that rigid body motion of the model is not restrained when using scalar springs For example, connecting a scalar spring between two translational degrees of freedom that are not colinear may restrain rigid body motion and give erroneous results

# CELAS3

## 6.4.1.8 CELAS3

### Description:

Scalar spring element connected to 2 scalar points (SPOINT's) with reference to a PELAS entry to define the real values for the element

### Format:

1	2	3	4	5	6	7	8	9	10
CELAS3	EID	PID	S1	S2					

### Example:

CELAS3	789	32	3731	5					
--------	-----	----	------	---	--	--	--	--	--

### Data Description:

Field	Contents	Type	Default
EID	Unique element identification (ID) number	Integer > 0	None
PID	ID number of a PELAS Bulk data entry	Integer > 0	EID
Si	ID numbers of the SPOINT's to which the element is attached	Integer > 0	None

### Remarks:

1. No other element in the model may have the same element ID
2. The degrees of freedom specified by Si must be global degrees of freedom
3. Care must be exercised that rigid body motion of the model is not restrained when using scalar springs For example, connecting a scalar spring between two translational degrees of freedom that are not colinear may restrain rigid body motion and give erroneous results

# CELAS4

## 6.4.1.9 CELAS4

### Description:

Scalar spring element connected to 2 scalar points (SPOINT's) with the element stiffness defined

### Format:

1	2	3	4	5	6	7	8	9	10
CELAS4	EID	K	S1	S2					

### Example:

CELAS4	789	32	3731	5					
--------	-----	----	------	---	--	--	--	--	--

### Data Description:

Field	Contents	Type	Default
EID	Unique element identification (ID) number	Integer > 0	None
K	Stiffness value	Real	0.
Si	ID numbers of the SPOINT's to which the element is attached	Integer > 0	None

### Remarks:

1. No other element in the model may have the same element ID
2. The degrees of freedom specified by Si must be global degrees of freedom
3. Care must be exercised that rigid body motion of the model is not restrained when using scalar springs For example, connecting a scalar spring between two translational degrees of freedom that are not colinear may restrain rigid body motion and give erroneous results

# CHEXA

## 6.4.1.10 CHEXA

### Description:

3D solid tetrahedron element

### Format No. 1:

1	2	3	4	5	6	7	8	9	10
CHEXA	EID	PID	G1	G2	G3	G4	G5	G6	+CH1
+CH1	G7	G8	G9	G10	G11	G12	G13	G14	+CH2
+CH2	G15	G16	G17	G18	G19	G20			

### Example:

CHEXA	98	43	101	123	254	12	621	8945	+CH1
+CH1	43	998							

### Data Description:

Field	Contents	Type	Default
EID	Unique element identification (ID) number	Integer > 0	None
PID	ID number of a PSOLID Bulk data entry	Integer > 0	None
G1-G20	ID numbers of the grids to which the element is attached. Specify G1-G8 for a 4 node HEXA and all 20 for a 20 node HEXA	Integer > 0	None

### Remarks:

1. No other element in the model may have the same element ID
2. The first continuation entry is required. The second is only needed for the 20 node element

# CMASS1

## 6.4.1.11 CMASS1

### Description:

Scalar mass element connected to 2 grid points (GRID's) with reference to a PMASS entry to define the real values for the element

### Format:

1	2	3	4	5	6	7	8	9	10
CMASS1	EID	PID	G1	C1					

### Example:

CMASS1	789	32	3731	5					
--------	-----	----	------	---	--	--	--	--	--

### Data Description:

Field	Contents	Type	Default
EID	Unique element identification (ID) number	Integer > 0	None
PID	ID number of a PMASS Bulk data entry	Integer > 0	EID
G1	ID number of the grid to which the element is attached	Integer > 0	None
C	Component number (1-6) of the degree of freedom, at G1, to which the mass element is connected	Integer 1-6	None

### Remarks:

1. No other element in the model may have the same element ID
2. The degrees of freedom specified by Gi/Ci must be global degrees of freedom.
3. For MYSTRAN, the mass can only be connected to 1 grid (not 2 as is allowed in NASTRAN)

# CMASS2

## 6.4.1.12 CMASS2

### Description:

Scalar mass element connected to 2 grid points (GRID's) with the element stiffness defined

### Format:

1	2	3	4	5	6	7	8	9	10
CMASS2	EID	K	G1	C1					

### Example:

CMASS2	789	1.234+06	3731	5					
--------	-----	----------	------	---	--	--	--	--	--

### Data Description:

Field	Contents	Type	Default
EID	Unique element identification (ID) number	Integer > 0	None
K	Stiffness value	Real	0.
Gi	ID numbers of the grids to which the element is attached	Integer > 0	None
Ci	Component number (1-6) of the degree of freedom, at Gi, to which the mass element is connected	Integer 1-6	None

### Remarks:

1. No other element in the model may have the same element ID
2. The degrees of freedom specified by Gi/Ci must be global degrees of freedom.
3. For MYSTRAN, the mass can only be connected to 1 grid (not 2 as is allowed in NASTRAN)

# CMASS3

## 6.4.1.13 CMASS3

### Description:

Scalar mass element connected to 2 scalar points (SPOINT's) with reference to a PMASS entry to define the real values for the element

### Format:

o

# CMASS4

## 6.4.1.14 CMASS4

### Description:

Scalar mass element connected to 2 scalar points (SPOINT's) with the element stiffness defined

### Format:

1	2	3	4	5	6	7	8	9	10
CMASS4	EID	K	S1						

### Example:

CMASS4	789	32	3731	5					
--------	-----	----	------	---	--	--	--	--	--

### Data Description:

Field	Contents	Type	Default
EID	Unique element identification (ID) number	Integer > 0	None
K	Stiffness value	Real	0.
Si	ID numbers of the SPOINT's to which the element is attached	Integer > 0	None

### Remarks:

1. No other element in the model may have the same element ID
2. The degrees of freedom specified by Si must be global degrees of freedom.
3. For MYSTRAN, the mass can only be connected to 1 scalar point (not 2 as is allowed in NASTRAN)



# CONM2

## 6.4.1.15 CONM2

### Description:

Concentrated mass at a grid point

### Format:

1	2	3	4	5	6	7	8	9	10
CONM2	EID	G	CID	M	X1	X2	X3		+CONT
+CONT	I11	I21	I22	I31	I32	I33			

### Example:

CONM2	98	354	29	0.5	0.3	1.2	0.65		+1002
+1002	123.	-45.	321.	12.	-43.	567.			

### Data Description:

Field	Contents	Type	Default
EID	Element identification (ID) number	Integer > 0	None
G	ID number of the grid to which the mass is attached	Integer > 0	None
CID	ID number of a coordinate system defined on a CORD2C, CORD2R or CORD2S Bulk Data entry	Integer > 0	0
M	Mass value	Real	0.
Xi	Offset distances from grid G to the center of gravity of M in coordinate system CID	Real	0.
Iij	The 6 independent moments of inertia of M about its center of gravity measured in coordinate system CID.	Real	0.

### Remarks:

1. EID must be unique among all CONM2 entries
2. The continuation entry is optional.
3. The moments of inertia I11, I22 and I33 (if entered) must be > 0.
4. A blank entry for CID implies the basic coordinate system.

# CONROD

## 6.4.1.16 CONROD

### Description:

1D elastic rod element for axial load and torsion with properties

### Format:

1	2	3	4	5	6	7	8	9	10
CROD	EID	G1	G2	MID	A	J	C	NSM	

### Example:

CROD	98	43	1234	56					
------	----	----	------	----	--	--	--	--	--

### Data Description:

Field	Contents	Type	Default
EID	Unique element identification (ID) number	Integer > 0	None
G1, G2	ID numbers of the grids to which the element is attached	Integer > 0	EID
MID	Material ID number	Integer > 0	None
A	Bar cross-sectional area	Real	0.
J	Torsional constant	Real	0.
C	Torsional stress recovery coefficient	Real	0.
MPL	Mass per unit length	Real	0.

### Remarks:

1. No other element in the model may have the same element ID
2. The local  $x_e$  axis of the element is a vector from G1 through G2 (see Figure 4-2)

# CORD1C

## 6.4.1.17 CORD1C

### Description:

Cylindrical coordinate system definition defined via 3 grid points. Two separate coordinate systems may be defined on one physical CORD1C entry.

### Format:

1	2	3	4	5	6	7	8	9	10
CORD1C	CIDA	G1A	G2A	G3A	CIDB	G1B	G2B	G3B	

### Example:

CORD1C									
--------	--	--	--	--	--	--	--	--	--

### Data Description:

Field	Contents	Type	Default
CID	Coordinate system ID number	Integer > 0	None
G1A, G1B	ID's of grid points at the origin of systems A, B respectively	Integer > 0	None
G2A, G2B	ID's of grid points along the z axis of systems A, B respectively	Integer > 0	None
G3A, G3B	ID's of grid points in the x-z plane of systems A, B respectively	Integer > 0	None

### Remarks:

1. See Figure 4-1 for the cylindrical coordinate system notation and the “defining” rectangular system
2. CIDA, CIDB must be unique over all coordinate systems defined in the model.
3. One or 2 coordinate systems may be defined on a single CORD1S entry.
4. The grid points on this entry must be defined in a system that does not involve the system being defined.
5. The location of a grid point using this coordinate system is defined by the  $r$ ,  $\theta$ ,  $z$  coordinates of a cylindrical coordinate system (see Figure 4-1).

# CORD1R

## 6.4.1.18 CORD1R

### Description:

Rectangular coordinate system definition defined via 3 grid points. Two separate coordinate systems may be defined on one physical CORD1C entry.

### Format:

1	2	3	4	5	6	7	8	9	10
CORD1C	CIDA	G1A	G2A	G3A	CIDB	G1B	G2B	G3B	

### Example:

CORD1C									
--------	--	--	--	--	--	--	--	--	--

### Data Description:

Field	Contents	Type	Default
CID	Coordinate system ID number	Integer > 0	None
G1A, G1B	ID's of grid points at the origin of systems A, B respectively	Integer > 0	None
G2A, G2B	ID's of grid points along the z axis of systems A, B respectively	Integer > 0	None
G3A, G3B	ID's of grid points in the x-z plane of systems A, B respectively	Integer > 0	None

### Remarks:

1. See Figure 4-1 for the rectangular coordinate system notation and the "defining" rectangular system
2. CIDA, CIDB must be unique over all coordinate systems defined in the model.
3. One or 2 coordinate systems may be defined on a single CORD1S entry.
4. The grid points on this entry must be defined in a system that does not involve the system being defined.
5. The location of a grid point using this coordinate system is defined by the x, y, z coordinates of a rectangular coordinate system (see Figure 4-1).

# CORD1S

## 6.4.1.19 CORD1S

### Description:

Spherical coordinate system definition defined via 3 grid points. Two separate coordinate systems may be defined on one physical CORD1C entry.

### Format:

1	2	3	4	5	6	7	8	9	10
CORD1C	CIDA	G1A	G2A	G3A	CIDB	G1B	G2B	G3B	

### Example:

CORD1C									
--------	--	--	--	--	--	--	--	--	--

### Data Description:

Field	Contents	Type	Default
CID	Coordinate system ID number	Integer > 0	None
G1A, G1B	ID's of grid points at the origin of systems A, B respectively	Integer > 0	None
G2A, G2B	ID's of grid points along the z axis of systems A, B respectively	Integer > 0	None
G3A, G3B	ID's of grid points in the x-z plane of systems A, B respectively	Integer > 0	None

### Remarks:

1. See Figure 4-1 for the spherical coordinate system notation and the "defining" rectangular system
2. CIDA, CIDB must be unique over all coordinate systems defined in the model.
3. One or 2 coordinate systems may be defined on a single CORD1S entry.
4. The grid points on this entry must be defined in a system that does not involve the system being defined.
5. The location of a grid point using this coordinate system is defined by the  $r$ ,  $\theta$ ,  $\phi$  coordinates of a spherical coordinate system (see Figure 4-1).

# CORD2C

## 6.4.1.20 CORD2C

### Description:

Cylindrical coordinate system definition

### Format:

1	2	3	4	5	6	7	8	9	10
CORD2R	CID	RID	A1	A2	A3	B1	B2	B3	+CONT
+CONT	C1	C2	C3						

### Example:

CORD2R	26	41	4.6	1.9	13.89	5.76	11.3	2.7	+01A
+01A	4.9	26.2	3.4						

### Data Description:

Field	Contents	Type	Default
CID	Coordinate system ID number	Integer > 0	None
RID	ID number of the reference coordinate system in which the points Ai, Bi, Ci are specified	Integer >= 0 or blank	0
Ai	Coordinates of the origin of CID (specified in RID coordinate system)	Real	None
Bi	Coordinates of a point on the z axis of the defining rectangular system of CID (specified in RID coordinate system)	Real	None
Ci	Coordinates of a point in the x-z plane of the defining rectangular system of CID (specified in RID coordinate system)	Real	None

### Remarks:

1. See Figure 4-1 for the cylindrical coordinate system notation and the “defining” rectangular system.
2. CID must be unique over all coordinate systems defined in the model.
3. The continuation entry is required.
4. RID = 0 or blank means that the reference coordinate system is the basic coordinate system.
5. CID must be able to be traced, through a chain of coordinate references, back to the basic system. For example, in the example above CID 26 is defined using system 46. Coordinate system 46 can be defined using some other coordinate system, and so on, until the final RID is 0 (basic).
6. The basic system need not be defined explicitly. Its axes are implied from the model (grid point coordinates on GRID entries and coordinate system definitions of all other systems)

# CORD2R

## 6.4.1.21 CORD2R

### Description:

Rectangular coordinate system definition

### Format:

1	2	3	4	5	6	7	8	9	10
CORD2R	CID	RID	A1	A2	A3	B1	B2	B3	+CONT
+CONT	C1	C2	C3						

### Example:

CORD2R	26	41	4.6	1.9	13.89	5.76	11.3	2.7	+01A
+01A	4.9	26.2	3.4						

### Data Description:

Field	Contents	Type	Default
CID	Coordinate system ID number	Integer > 0	None
RID	ID number of the reference coordinate system in which the points Ai, Bi, Ci are specified	Integer >= 0 or blank	0
Ai	Coordinates of the origin of CID (specified in RID coordinate system)	Real	None
Bi	Coordinates of a point on the z axis of the defining rectangular system of CID (specified in RID coordinate system)	Real	None
Ci	Coordinates of a point in the x-z plane of the defining rectangular system of CID (specified in RID coordinate system)	Real	None

### Remarks:

1. See Figure 4-1 for the rectangular coordinate system notation and the “defining” rectangular system.
2. CID must be unique over all coordinate systems defined in the model.
3. The continuation entry is required.
4. RID = 0 or blank means that the reference coordinate system is the basic coordinate system.
5. CID must be able to be traced, through a chain of coordinate references, back to the basic system. For example, in the example above CID 26 is defined using system 46. Coordinate system 46 can be defined using some other coordinate system, and so on, until the final RID is 0 (basic).
6. The basic system need not be defined explicitly. Its axes are implied from the model (grid point coordinates on GRID entries and coordinate system definitions of all other systems).

# CORD2S

## 6.4.1.22 CORD2S

### Description:

Spherical coordinate system definition

### Format:

1	2	3	4	5	6	7	8	9	10
CORD2S	CID	RID	A1	A2	A3	B1	B2	B3	+CONT
+CONT	C1	C2	C3						

### Example:

CORD2S	26	41	4.6	1.9	13.89	5.76	11.3	2.7	+01A
+01A	4.9	26.2	3.4						

### Data Description:

Field	Contents	Type	Default
CID	Coordinate system ID number	Integer > 0	None
RID	ID number of the reference coordinate system in which the points Ai, Bi, Ci are specified	Integer >= 0 or blank	0
Ai	Coordinates of the origin of CID (specified in RID coordinate system)	Real	None
Bi	Coordinates of a point on the z axis of the defining rectangular system of CID (specified in RID coordinate system)	Real	None
Ci	Coordinates of a point in the x-z plane of the defining rectangular system of CID (specified in RID coordinate system)	Real	None

### Remarks:

1. See Figure 4-1 for the spherical coordinate system notation and the “defining” rectangular system.
2. CID must be unique over all coordinate systems defined in the model.
3. The continuation entry is required.
4. RID = 0 or blank means that the reference coordinate system is the basic coordinate system.
5. CID must be able to be traced, through a chain of coordinate references, back to the basic system. For example, in the example above CID 26 is defined using system 46. Coordinate system 46 can be defined using some other coordinate system, and so on, until the final RID is 0 (basic).
6. The basic system need not be defined explicitly. Its axes are implied from the model (grid point coordinates on GRID entries and coordinate system definitions of all other systems).



# CPENTA

## 6.4.1.23 CPENTA

### Description:

3D solid pentahedron element

### Format No. 1:

1	2	3	4	5	6	7	8	9	10
CPENTA	EID	PID	G1	G2	G3	G4	G5	G6	+CP1
+CP1	G7	G8	G9	G10	G11	G12	G13	G14	+CP2
+CP2	G15								

### Example:

CPENTA	98	43	101	123	254	12	1002	98	
--------	----	----	-----	-----	-----	----	------	----	--

### Data Description:

Field	Contents	Type	Default
EID	Unique element identification (ID) number	Integer > 0	None
PID	ID number of a PSOLID Bulk data entry	Integer > 0	None
G1-G15	ID numbers of the grids to which the element is attached. Specify G1-G6 for a 6 node PENTA and all 15 for a 15 node PENTA	Integer > 0	None

### Remarks:

1. No other element in the model may have the same element ID
2. Continuation entries are only needed for the 15 node element

# CQUAD4

## 6.4.1.24 CQUAD4

### Description:

Thick quadrilateral plate element. This element has membrane and bending stiffness and can include flexibility for transverse shear deformations.

### Format:

1	2	3	4	5	6	7	8	9	10
CQUAD4	EID	PID	G1	G2	G3	G4	THETA	ZOFFS	

### Example:

CQUAD4	68	123	935	67	1357	2			
--------	----	-----	-----	----	------	---	--	--	--

### Data Description:

Field	Contents	Type	Default
EID	Unique element identification (ID) number	Integer > 0	None
PID	ID number of a PSHELL Bulk data entry	Integer > 0	EID
Gi	ID numbers of the grids to which the element is attached	Integer > 0	None
THETA	Material property orientation angle in degrees measured from axis connecting grids 1 and 2	Real	0.
ZOFFS	Offset of the grid plane to element reference plane	Real	0.

### Remarks:

1. No other element in the model may have the same element ID
2. The grids must be numbered in a clockwise or counter clockwise direction around the quadrilateral element.
3. The local  $z_e$  axis of the element is in the direction of the cross-product of the diagonal from G1 to G3 with the diagonal from G2 to G4. If the element is rectangular, the local  $x_e$  axis is the projection of the vector from G1 to G2 onto the mean plane. If not rectangular, this is rotated to split the angle between the diagonals. The local  $y_e$  axis is in the direction of  $z_e$  cross  $x_e$ . See Figure 4-5
4. See discussion in Section 3.2.2.4 about the 2 versions of the QUAD4 element

# CQUAD4K

## 6.4.1.25 CQUAD4K

### Description:

Thin quadrilateral plate element . This element has membrane and bending stiffness but does not include flexibility for transverse shear deformations.

### Format:

1	2	3	4	5	6	7	8	9	10
CQUAD4K	EID	PID	G1	G2	G3	G4			

### Example:

CQUAD4K	68	123	935	67	1357	2			
---------	----	-----	-----	----	------	---	--	--	--

### Data Description:

Field	Contents	Type	Default
EID	Unique element identification (ID) number	Integer > 0	None
PID	ID number of a PSHELL Bulk data entry	Integer > 0	EID
Gi	ID numbers of the grids to which the element is attached	Integer > 0	None

### Remarks:

1. No other element in the model may have the same element ID
2. The grids must be numbered in a clockwise or counter clockwise direction around the quadrilateral element.
3. The local  $z_e$  axis of the element is in the direction of the cross-product of the diagonal from G1 to G3 with the diagonal from G2 to G4. If the element is rectangular, the local  $x_e$  axis is the projection of the vector from G1 to G2 onto the mean plane. If not rectangular, this is rotated to split the angle between the diagonals. The local  $y_e$  axis is in the direction of  $z_e$  cross  $x_e$ . See Figure 4-5

# CROD

## 6.4.1.26 CROD

### Description:

1D elastic rod element for axial load and torsion

### Format:

1	2	3	4	5	6	7	8	9	10
CROD	EID	PID	G1	G2					

### Example:

CROD	98	43	1234	56					
------	----	----	------	----	--	--	--	--	--

### Data Description:

Field	Contents	Type	Default
EID	Unique element identification (ID) number	Integer > 0	None
PID	ID number of a PROD Bulk data entry	Integer > 0	EID
G1, G2	ID numbers of the grids to which the element is attached	Integer > 0	None

### Remarks:

1. No other element in the model may have the same element ID
2. The local  $x_e$  axis of the element is a vector from G1 through G2 (see Figure 4-2)

# CSHEAR

## 6.4.1.27 CSHEAR

### Description:

Defines a quadrilateral shell element that carries only in-plane shear

### Format:

1	2	3	4	5	6	7	8	9	10
CSHEAR	EID	PID	G1	G2	G3	G4			

### Example:

CSHEAR	98	43	978	564	94	465			
--------	----	----	-----	-----	----	-----	--	--	--

### Data Description:

Field	Contents	Type	Default
EID	Unique element identification (ID) number	Integer > 0	None
PID	ID number of a PROD Bulk data entry	Integer > 0	EID
Gi	ID numbers of the grids to which the element is attached	Integer > 0	None

### Remarks:

1. No other element in the model may have the same element ID
2. The local  $x_e$  axis of the element is defined the same as for the QUAD4 element

# CTETRA

## 6.4.1.28 CTETRA

### Description:

3D solid tetrahedron element

### Format No. 1:

1	2	3	4	5	6	7	8	9	10
CTETRA	EID	PID	G1	G2	G3	G4	G5	G6	+CT1
+CT1	G7	G8	G9	G10					

### Example:

CTETRA	98	43	101	123	254	12			
--------	----	----	-----	-----	-----	----	--	--	--

### Data Description:

Field	Contents	Type	Default
EID	Unique element identification (ID) number	Integer > 0	None
PID	ID number of a PSOLID Bulk data entry	Integer > 0	None
G1-G10	ID numbers of the grids to which the element is attached. Specify G1-G4 for a 4 node TETRA and all 10 for a 10 node TETRA	Integer > 0	None

### Remarks:

1. No other element in the model may have the same element ID
2. Continuation entries are only needed for the 15 node element

# CTRIA3

## 6.4.1.29 CTRIA3

### Description:

Thick triangular plate element . This element has membrane and bending stiffness and can include flexibility for transverse shear deformations

### Format:

1	2	3	4	5	6	7	8	9	10
CTRIA3	EID	PID	G1	G2	G3	THETA	ZOFFS		

### Example:

CTRIA3	68	123	935	67	1357				
--------	----	-----	-----	----	------	--	--	--	--

### Data Description:

Field	Contents	Type	Default
EID	Unique element identification (ID) number	Integer > 0	None
PID	ID number of a PSHELL Bulk data entry	Integer > 0	EID
Gi	ID numbers of the grids to which the element is attached	Integer > 0	None
THETA	Material property orientation angle in degrees measured from axis connecting grids 1 and 2	Real	0.
ZOFFS	Offset of the grid plane to element reference plane	Real	0.

### Remarks:

1. No other element in the model may have the same element ID
2. The local  $x_e$  axis of the element is in the direction from G1 to G2. The local  $z_e$  axis is in the direction of the cross product of the vector from G1 to G2 with the vector from G1 to G3. The local  $y_e$  axis is in the direction of  $z_e$  cross  $x_e$ . See Figure 4-5.

# CTRIA3K

## 6.4.1.30 CTRIA3K

### Description:

Thin triangular plate element . This element has membrane and bending stiffness but does not include flexibility for transverse shear deformations.

### Format:

1	2	3	4	5	6	7	8	9	10
CTRIA3K	EID	PID	G1	G2	G3				

### Example:

CTRIA3K	68	123	935	67	1357				
---------	----	-----	-----	----	------	--	--	--	--

### Data Description:

Field	Contents	Type	Default
EID	Element identification (ID) number	Integer > 0	None
PID	ID number of a PSHELL Bulk data entry	Integer > 0	EID
Gi	ID numbers of the grids to which the element is attached	Integer > 0	None

### Remarks:

1. No other element in the model may have the same element ID
2. The local  $x_e$  axis of the element is in the direction from G1 to G2. The local  $z_e$  axis is in the direction of the cross product of the vector from G1 to G2 with the vector from G1 to G3. The local  $y_e$  axis is in the direction of  $z_e$  cross  $x_e$ . See Figure 4-5.



# CUSERIN

## 6.4.1.31 CUSERIN

### Description:

User defined element for which the user will supply the mass and stiffness matrices via NASTRAN formatted INPUTT4 files.

### Format 1:

1	2	3	4	5	6	7	8	9	10
CUSERIN	EID	PID	NG	NS	CID0				+CU01
+CU01	G1	C1	G2	C2	etc				+CU11
+CU11	S1	S2	S3	etc					

### Format 2:

1	2	3	4	5	6	7	8	9	10
CUSERIN	EID	PID	NG	NS	CID0				+CU01
+CU01	G1	C1	G2	C2	etc				+CU11
+CU11	S1	THRU	S2						

### Example:

CUSERIN	32	123	3	8	198				+CU01
+CU01	201	123	202	13	203	3			+CU02
+CU02	20001	THRU	20008						

### Data Description:

Field	Contents	Type	Default
EID	Element identification (ID) number	Integer > 0	None
PID	ID number of a PUSERIN Bulk Data entry	Integer > 0	EID
NG	Number of grid points (GRID's) that the element is attached to	Integer >= 0	0
NS	Number of scalar points (SPOINT's) that the element is attached to	Integer >= 0	0
CID0	ID of the coordinate system that defines the basic coord system of this element relative to the basic coord system of the overall model	Integer >= 0	0
Gi, Ci	NG grid/component numbers for the grids and components that the element connects to (Ci have to be integers 1,2,3,4,5 and/or 6)	Integer > 0	None
Si	NS scalar points (Bulk Data SPOINT) that the element connects to	Integer > 0	None

### Remarks:

1. No other element in the model may have the same element ID
2. An example of how this element is used is in Craig-Bampton analyses where a system model is made up of one or more substructures (generated in CB model generation solution sequence, SOL 31).

Each CB model's connection information is described by a CUSERIN element. The PUSERIN Bulk Data entry is required.

# DEBUG

## 6.4.1.32 DEBUG

### Description:

Define debug parameters

### Format:

1	2	3	4	5	6	7	8	9	10
DEBUG	i	VALUE							

### Example:

DEBUG	31	1							
-------	----	---	--	--	--	--	--	--	--

### Data Description:

Field	Contents	Type	Default
i	Debug number (index in DEBUG array)	0 < Integer < 100	None
VALUE	The value for DEBUG(i)	Integer	0

### Remarks:

1. No other element in the model may have the same element ID
2. See table below for actions taken based on the various debug values. Unless otherwise stated, DEBUG(i) = 0 is the default and, for the "print" parameters, no printing is done.

# Action Taken For DEBUG(I) Values

I	DEBUG(I)	Action (NOTE: default values are zero)
1	1	Print KIND parameters defined in module PENTIUM_II_KIND to F06 file
2	1	Print constants (parameters) defined in module CONSTANTS_1
3	1	Print machine parameters as determined by LAPACK function DLAMCH
4	1	Do not use BMEAN when calculating membrane quad element stiffness for warped elements
5	1	Print Gauss quadrature abscissas and weight s for plate elements
6	1	Print some quad elem data to BUG file (over and above what is printed with Case Control ELDATA)
	2	Print some hexa elem data to BUG file (over and above what is printed with Case Control ELDATA)
7	1	Print arrays ESORT1, ESORT2, EPNT, ETYPE in subr ELESORT before/after sorting elems
8	1	Print grid temperature data in subr TEMPERATURE_DATA_PROC
	2	Print elem temperature data in subr TEMPERATURE_DATA_PROC
	3	Print both grid and elem temperature data in subr TEMPERATURE_DATA_PROC
9	> 0	Prints debug info on BAR pin flag processing
10	11 or 33 12 or 32 13 or 33 21 or 33 22 or 32	Print data on algorithm to create STF stiffness arrays in subr ESP Print detailed data on algorithm to create STF arrays in subr SPARSE Print template of nonzero terms in KGG if PARAM SETLTK = 1 or 2 Print data on algorithm to create EMS mass arrays in subr ESP Print detailed data on algorithm to create EMS mass arrays in subr SPARSE
11	1	Print individual 6x6 rigid body. displacement matrices in basic and global coordinates for each grid
	2	Print NGRID by 6 rigid body displacement matrix in global coordinates for the model
	3	Print both
12	1	Use area shear factors in computing BAR stiffness matrix regardless of I <sub>12</sub> value
13	1	Print grid sequence tables in subr SEQ
14	1	Print matrices generated in the rigid element generation subr's
15	1	Print concentrated mass data in subr CONM2_PROC_1
16	1	Use static equivalent instead of work equivalent pressure loads for the QUAD4, TRIA3
17	> 0	Print some info in subr KGG_SINGULARITY_PROC for grids that have AUTOSPC'd components
	> 1	Do above for all grids (not just ones that have AUTOSPC's)
18	> 0	Print diagnostics in subr QMEM1 regarding checks on the BMEAN matrix satisfying R.B. motion
19	1	Print debug output from subr STOKEN
20	0	Use simple solution for GMN if RMM is diagonal.
	1	Bypass the simple solution for GMN if RMM is diagonal and use subr SOLVE_GMN instead
21	0	Use MATMULT_SFF to multiply stiffness matrix times rigid body displs in STIFF_MAT_EQUIL_CHK
	1	Use LAPACK subroutine DSBMV
22	1	Print RBMAT in subr STIFF_MAT_EQUIL_CHK
23	> 0	Do equilibrium checks on stiffness matrix even though model has SPOINT's
24	1 or 3	Print KFSe matrix in subr REDUCE_KNN_TO_KFF
	2 or 3	Print KSSe matrix in subr REDUCE_KNN_TO_KFF
25	1 or 3	Print PFYS matrix in subr REDUCE_N_FS
	2 or 3	Print QSYS matrix in subr REDUCE_N_FS
26	1	Print YS matrix (S-set enforced displs) in LINK2 (LAPACK)
32	1	Print PL load matrix in LINK3-LAPACK
33	1	Print UL displacement matrix before refining solution in LINK3_LAPACK
34	1 or 3	Print ABAND matrix (KLL in band form) before equilibrating it in LINK3 (LAPACK)
	2 or 3	Print ABAND matrix after equilibrating it in LINK3 (LAPACK)
35	1	Print ABAND's decomp matrix (KLL triangular factor) in LINK3 (LAPACK)
36	1	Print grid 6x6 mass for every grid in LINK2



I	DEBUG(I)	Action (NOTE: default values are zero)
80	> 0	Print LAPACK_S scale factors, in subr EQUILIBRATE, used to equilibrate the stiffness matrices
81	1	Print data on how subr MATADD_SSS_NTERM determines no. terms to allocate for matrix add
	2	Print data on progress of matrix add in subr MATADD_SSS
	3	Print data from both subroutines
82	1	Print data on progress of matrix multiply in subr MATMULT_SFF
83	1	Print data on how subr MATMULT_SFS_NTERM determines no. terms to allocate for matrix multiply
	2	Print data on progress of matrix multiply in subr MATMULT_SFS
	3	Print data from both subroutines
84	1	Print data on how subr MATMULT_SSS_NTERM determines no. terms to allocate for matrix multiply
	2	Print data on progress of matrix multiply in subr MATMULT_SSS
	3	Print data from both subroutines
85	1	Print data on matrix transposition in subr MATTRNSP_SS
86	1	Print data on how subr PARTITION_SS_NTERM determines no. terms to allocate for matrix partition
	2	Print data on progress of matrix partition in subr PARTITION_SS
	3	Print data from both subroutines
87	1	Print data on algorithm to convert sparse CRS matrix to sparse CCS in subr SPARSE_CRS_SPARSE_CCS
88	1	Do not write separator line between grids several places(matrix diagonal output, equil check)
89	1	Write row numbers where there are zero diag terms in subroutine SPARSE_MAT_DIAG_ZEROS
91	1	Print Information on how the maximum number of requests for grid or element related outputs is determined. This controls the allocation of memory in LINK9
92	1	Print OLOAD, SPCF, MPCF totals even if global coordinate systems for all grids are not the same
100	> 0	Check allocation status of allocatable arrays.
	> 1	Also write memory allocated to all arrays to F06 file.
101	> 0	Write sparse I_MATOUT array in subroutine READ_MATRIX_1.
	> 1	Call subroutine to check I_MATOUT array to make sure that terms are nondecreasing
102	> 0	Print debug info in subroutine MERGE_MAT_COLS_SSS
103	> 0	Do not use MRL (or MLR) in calc of modal participation factors and effective mass
104	> 0	Check if KRRcb is singular
105	> 0	write KLLs matrix to unformatted file
106	> 0	write info on all files in subr WRITE_ALLOC_MEM_TABLE (if 0 only write for those arrays that have memory allocated to them)
107	> 0	Write allocated memory in F04 file with 6 decimal points (3 if DEBUG(107) = 0)
108	> 0	Write EDAT table
109	> 0	Write debug info in subr ELMDIS
110	> 0	Write debug info for BUSH elem in subrs ELMDAT1, ELMGM1
111	> 0	Write some debug info on RSPLINE
112	> 0	Write THETAM (plate element material angle) and the location in subr EMG where it was calculated
113	> 0	Write PBARL entries in a special format that has 1 line per PBAR entry
114	> 0	Write debug info in subr OU4_PARTVEC_PROC
115	> 0	Write debug info in subr READ_INCLUDE_FILNAM
116	= 1	Write debug info in Yale subr SFAC
	= 2	Write debug info in Yale subr NFAC
	= 3	Do both

I	DEBUG(I)	Action (NOTE: default values are zero)
172	> 0	Calc PHI_SQ for the MIN4T based on area weighting of the TRIA3's. Otherwise, use simple average
173	= 1	Write some debug info in subr PARSE_CSV_STRING
	= 2	Write some more detailed data
174	> 0	Print MPFACTOR, MEFFMASS values with 2 decimal places of accuracy rather than 6
175	> 0	Write debug output from subroutine SURFACE_FIT regarding the polynomial fit to obtain element corner stresses from Gauss point stresses
176	> 0	Calculate stresses using element SEi, STEi matrices and displacements rather than from BEi matrices and strains
177	> 0	Print BAR, ROD margins of safety whether or not they would otherwise be
178	= 1	Print info on user key if PROTECTED = 'N'
179	= 1	Print blank space at beg of lines of output for CUSERIN entries in the F06 file
180	> 0	Write debug info to F06 for USERIN elements
181	= 1	Include USERIN RB mass in subr GPWG even though user did not input 3rd matrix (RBM0) on IN4FIL
182	= 1	Print debug data in subr MGGS_MASS_MATRIX for scalar mass matrix
183	= 1	Write some debug data for generating TDOF array
184	> 0	Write L1M data to F06
185	> 0	Let eigen routines find and process all eigenval, vecs found even if NVEC > NDOFL - NUM_MLL_DIAG_ZEROS
186	> 0	Print debug info for pressure loads on faces of solid elements
187	> 0	Write list of the number of various elastic elements in the DAT file to the F06 file
188	> 0	Do not abort in QPLT3 if KOO is reported to be singular
189	1	Print messages in subroutine ESP for KE in local coords if element diagonal stiffness < 0
	2	Print these messages in subroutine ESP after transformation to global
	3	Do both
190	> 0	Do not round off FAILURE_INDEX to 0 in subr POLY_FAILURE_INDEX
191	= 0	Use temperatures at Gauss points for thermal loads in solid elements
192	> 0	Print some summary info for max abs value of GP force balance for each solution vector
193	= 1 = 2 = 3 = 4 = 5 = 6 = 9 = 100 = 999	call FILE_INQUIRE at end of LINK1 call FILE_INQUIRE at end of LINK2 call FILE_INQUIRE at end of LINK3 call FILE_INQUIRE at end of LINK4 call FILE_INQUIRE at end of LINK5 call FILE_INQUIRE at end of LINK6 call FILE_INQUIRE at end of LINK9 call FILE_INQUIRE at end of MAIN do all of the above
194	1 or 3 2 or 3 3	skip check on CW/CCW numbering of QUAD's 2 or 3 skip check on QUAD interior angles < 180 deg skip both
195	> 0	Print CB OTM matrices to F06 at end of LINK9
196	0 > 0	Matrix output filter SMALL = EPSIL(1) Matrix output filter SMALL = TINY (param defined by user with default = 0.D0)
197	> 0	Print debug info in subr EC_ENTRY_OUTPUT4 which reads Exec Control OUTPUT4 entries
198	> 0	Write debug info in subroutine QPLT3 (for QUAD4 element)
199	> 0	Check matrix times its inverse = identity matrix in several subroutines
200	> 0	Write problem answers (displs, etc) to filename.ANS as well as to filename.F06 (where filename is the name of the DAT data file submitted to MYSTRAN. This feature is generally only useful to the author when performing checkout of test problem answers)
201	> 0	Allow SOL = BUCKLING or DIFFEREN to run even if some elements are not coded for these soln's
202	> 0	Calculate rigid body and constant strain sanity checks on strain-displacement matrices
203	> 0	Print debug info in subroutine BAR1 (for the BAR element)
248	> 0	Override fatal error and continue with orthotropic material properties for MIN4T QUAD4
249	> 0	In subroutine BREL1 call code for Timoshenko (BART) instead of Euler (BAR1) BAR element

# EIGR

## 6.4.1.33 EIGR

### Description:

Eigenvalue extraction data

### Format:

1	2	3	4	5	6	7	8	9	10
EIGR	SID	METH	F1	F2	NE	ND		CRIT	+CONT
+CONT	NORM	G	C	SIGMA					

### Examples:

EIGR	98	GIV	0.1	20.				1.E-4	+ZZ02
+ZZ02	MAX								

EIGR	25	GIV	15.	20.				1.E-4	+ZZ02
+ZZ02	POINT	471	3						

### Data Description:

Field	Contents	Type	Default
SID	Eigenvalue extraction set number	Integer > 0	None
METH	Method for eigenvalue extraction: (GIV, MGIV, INV)	Character	None
F1, F2	Frequency range of interest	Real	0.
NE	Number of estimated eigenvalues in range (not used for GIV)	Integer	0
ND	Number of desired eigenvalues in range (not used for GIV)	Integer	0
CRIT	Orthogonality criteria	Real	0.
NORM	Method of eigenvector renormalization (POINT, MAX, MASS)	Character	None
G	If NORM = POINT, the grid to be used in normalizing eigenvector to 1.0	Integer > 0 or blank	0
C	If NORM = POINT, the component (1-6) at G to be used in normalizing the eigenvector = 1.0	Integer 1-6 or blank	0
SIGMA	Shift eigenvalue (only used for METH = INV. Better convergence is obtained if this is close to the fundamental mode	Real or blank	0.

### Remarks:

1. Givens (GIV) or Modified Givens (MGIV) methods of eigenvalue extraction are available. In addition, an Inverse Power (INV) method is also available, but only for the fundamental mode.
2. The EIGR set ID, SID, must be selected in Case Control with the entry METHOD = SID



3. The three methods of eigenvector renormalization are:

MASS: eigenvectors are normalized to unit generalized mass (1.0)

MAX: eigenvectors are normalized to 1.0 for the largest term

POINT: eigenvectors are normalized such that the value at grid G, component C is 1.0

4. For the GIV method the mass matrix must be positive definite (thus the mass matrix can have no zeros on its diagonal). For the MGIV method, the model must have the stiffness matrix positive definite (thus modes of a model that is not restrained from rigid body motion cannot be obtained)

# EIGRL

## 6.4.1.34 EIGRL

### Description:

Eigenvalue extraction data for Lanczos method

### Format:

1	2	3	4	5	6	7	8	9	10
EIGR	SID	F1	F2	N	MSGVLV	NCVFACL	SIGMA	NORM	+CONT
+CONT	MODE	TYPE							

### Examples:

EIGRL	98	0.	50.						
-------	----	----	-----	--	--	--	--	--	--

### Data Description:

Field	Contents	Type	Default
SID	Eigenvalue extraction set number	Integer > 0	None
F1, F2	Frequency range of interest	Real	0.
N	Number of desired eigenvalues	Integer	0
MSGVLV	Output message level (0 for none, or 1 or 2 for some messaging)	Integer	0
NCVFAC	Used to dimension several arrays in the Lanczos method. Must be > 1	Integer	2
SIGMA	Shift eigenvalue	Real	-10.
NORM	Method of eigenvector renormalization (MAX, MASS)	Character	None
Mode	Lanczos mode for calculating eigenvalues	Integer	2
Type	Lanczos matrix type (DPB, DGB)	Character	DPB

### Remarks:

1. The EIGRL set ID, SID, must be selected in Case Control with the entry METHOD = SID
2. Either F1 (and F2) or N must be specified. If both are specified, N will be used.
3. Mode refers to the Lanczos mode type to be used in the solution. In mode 3 the mass matrix,  $M_{aa}$ , must be nonsingular whereas in mode 2 the matrix  $K_{aa}$  must be nonsingular (where  $K_{aa} = SIGMA$ ). See Bulk Data PARAM ART\_MASS for use if the mass matrix is singular.
4. TYPE = DPB uses sym storage of the matrices (preferred) whereas DGB stores all nonzero terms.
5. SIGMA is the shift eigenvalue. It should generally be a small negative real number.

# FORCE

## 6.4.1.35 FORCE

### Description:

Static concentrated force at a grid point

### Format:

1	2	3	4	5	6	7	8	9	10
FORCE	SID	GID	CID	F	N1	N2	N3		

### Example:

FORCE	1234	567	89	1000.	1.5	2.5	3.5		
-------	------	-----	----	-------	-----	-----	-----	--	--

### Data Description:

Field	Contents	Type	Default
SID	Load set ID number	Integer > 0	None
GID	ID of the grid at which this concentrated force acts	Integer >0	None
CID	ID of the coordinate system in which the Ni are specified	Integer >= 0	0
F	An overall scale factor for the force	Real	0.
Ni	Components of a vector in the direction of the force	Real	0.

### Remarks:

1. The static concentrated force applied to the grid is the vector:

$$\bar{P} = F\bar{N}$$

with Ni in fields 6-8 the components of the vector N

2. In order for this load to be used in a static analysis the load set ID must either be selected in Case Control by LOAD = SID, or this load set ID must be referenced on a LOAD Bulk Data entry which itself is selected in Case Control.
3. A blank entry for CID implies the basic coordinate system.

# GRAV

## 6.4.1.36 GRAV

### Description:

Gravity load definition

### Format:

1	2	3	4	5	6	7	8	9	10
GRAV	SID	CID	A	N1	N2	N3			

### Example:

GRAV	975	246	386.	2.	3.	4.			
------	-----	-----	------	----	----	----	--	--	--

### Data Description:

Field	Contents	Type	Default
SID	Load set ID number	Integer > 0	None
CID	ID of the coordinate system in which the Ni are specified	Integer >= 0	0
A	Acceleration value	Real	0.
Ni	Components of a vector in the direction of the force	Real	0.

### Remarks:

1. GRAV causes a static load to be applied to the complete model that is calculated based on the acceleration vector on the GRAV entry and the mass properties of the model.
2. The acceleration vector applied to the model is the vector:
 
$$\bar{a} \quad A\bar{N}$$
 with Ni in fields 5-7 the components of the vector N
3. In order for this load to be used in a static analysis the load set ID must either be selected in Case Control by LOAD = SID, or this load set ID must be referenced on a LOAD Bulk Data entry which itself is selected in Case Control.
4. A blank entry for CID implies the basic coordinate system.

# GRDSET

## 6.4.1.37 GRDSET

### Description:

Default values for the GRID entry

### Format:

1	2	3	4	5	6	7	8	9	10
GRDSET		CID1				CID2	PSPC		

### Example:

GRDSET		12				42	245		
--------	--	----	--	--	--	----	-----	--	--

### Data Description:

Field	Contents	Type	Default
CID1	Default value for the coordinate system ID in which grids will be located for GRID entries which have a blank in this field	Integer $\geq 0$	0
CID2	Default value for the global coordinate system for GRID entries which have a blank in this field	Integer $\geq 0$	0
PSPC	Default value for permanent single point constraints for GRID entries which have a blank in this field	Integers 1-6	0

### Remarks:

1. Only one GRDSET entry is allowed in the data file. Any data entered on a GRDSET entry will be used for the corresponding field of any GRID entry that has that field blank. Thus, if the user desires to have CIDI be the basic system on a GRID entry, and a GRDSET entry is present with nonzero value for CIDI, the GRID entry in question must have 0 (not blank) for CIDI.
2. See the GRID entry for remarks on the above fields of this entry.
3. A blank entry for CIDI implies the basic coordinate system.

# GRID

## 6.4.1.38 GRID

### Description:

Grid point definition

### Format:

1	2	3	4	5	6	7	8	9	10
GRID	GID	CID1	X1	X2	X3	CID2	PSPC		

### Example:

GRID	58	12	10.	20.	30.	42	245		
------	----	----	-----	-----	-----	----	-----	--	--

### Data Description:

Field	Contents	Type	Default
GID	Grid point ID number	Integer > 0	None
CID1	ID of the coordinate system that the Xi are defined in	Integer >= 0	0
Xi	Coordinates of the grid defined in coordinate system CID1	Real	0.
CID2	ID of the global coordinate system for this grid point	Integer >= 0	0
PSPC	Permanent single point constraints at this grid point	Integers 1-6	Blank

### Remarks:

1. Grid IDs must be unique among all GRID entries.
2. The word "permanent" in regards to the single point constraints (SPC's) defined on the GRID entry is merely a designation given to SPC's defined on GRID entries. The PSPC field does not have to be used. Any, or all, of the zero value (i.e., not enforced displacement) single point constraints used in a model can be specified on Bulk Data SPC or SPC1 entries or as PSPC's on the GRID entry.
3. A blank entry for CIDi implies the basic coordinate system.

# LOAD

## 6.4.1.39 LOAD

### Description:

This entry combines loads defined on FORCE, MOMENT, PLOAD2, GRAV entries

### Format:

1	2	3	4	5	6	7	8	9	10
LOAD	SID	S	S1	L1	S2	L2	S3	L3	+CONT
+CONT	S4	L4	(etc)						

### Example:

LOAD	12345	1500.	151.5	25	290.2	33	780.3	24	+L002
+L002	2450.1	12							

### Data Description:

Field	Contents	Type	Default
SID	Load set ID number	Integer > 0	None
S	An overall scale factor for the load combination	Real	0.
Si	Scale factor for load set Li	Real	0.
Li	Load set ID number for loads defined on FORCE, MOMENT, PLOAD2, GRAV entries	Integer > 0	None

### Remarks:

1. The static load applied to the model is the vector:

$$\vec{P} = S \sum_i \vec{S}_i P_{Li}$$

where  $P_{Li}$  is the load defined on the FORCE, MOMENT, PLOAD2 or GRAV that has  $Li$  load set ID.

2. In order for this load to be used in a static analysis the load set ID must be selected in Case Control by the command LOAD = SID.
3. Any number of continuation entries may be included.

# MAT1

## 6.4.1.40 MAT1

### Description:

Linear isotropic material definition

### Format:

1	2	3	4	5	6	7	8	9	10
MAT1	MID	E	G	NU	RHO	ALPHA	TREF	GE	+CONT
+CONT	TA	CA	SA						

### Example:

MAT1	10	1.E7		0.33	0.1	2.E-5	21.		+MATL01
+MATL01	10000.	20000.	15000.						

### Data Description:

Field	Contents	Type	Default
MID	Material ID number	Integer > 0	None
E	Young's modulus	Real > 0. or blank	See remarks
G	Shear modulus	Real > 0. or blank	See remarks
NU	Poisson's ratio	Real > 0. or blank	See remarks
RHO	Material mass density	Real > 0. or blank	0.
ALPHA	Coefficient of thermal expansion	Real > 0. or blank	0.
TREF	Reference temperature	Real > 0. or blank	0.
GE	Damping coefficient	Real > 0. or blank	0.
TA	Tension allowable for the material	Real > 0. or blank	0.
CA	Compression allowable for the material	Real > 0. or blank	0.
SA	Shear allowable for the material	Real > 0. or blank	0.

### Remarks:

1. MID must be unique among all material property entries.
2. The continuation entry is not required.
3. The following action is taken if one or more of the fields E, G and NU are blank:
  - a) If one of E, G or NU is blank it will be calculated using the relationship  $E = 2(1 + \text{NU})G$
  - b) If E and NU are blank or if G and NU are blank, these two are set to 0.
  - c) If E and G are blank (or zero) a fatal error occurs



4. A warning is given if  $NU < 0$  or if  $NU > 0.5$ .

5. A warning is given if if E, G and NU are all input and do not satisfy the relationship:

$$\left| 1 - \frac{E}{2(1 - NU)G} \right| > 0.01$$

# MAT2

## 6.4.1.41 MAT2

### Description:

Linear anisothotropic material definition for 2D plate elements

### Format:

1	2	3	4	5	6	7	8	9	10
MAT2	MID	G11	G12	G13	G22	G23	G33	RHO	+CONT1
+CONT	A1	A2	A3	TREF	GE	ST	SC	SS	

### Example:

MAT2	10	9.9+6	3.+6	2.+6	10.1+6	3.2+6	8.9+6	.00025	+MAT21
+MAT21	2.-5	3.-5	1.5-5	21.	.001	30000.	20000.	25000	

### Data Description:

Field	Contents	Type	Default
MID	Material ID number	Integer > 0	None
Gij	Terms in the 3x3 material property matrix	Real	0.
RHO	Material mass density	Real	0.
Ai	Thermal expansion coefficients	Real	0.
TREF	Reference temperature	Real	0.
GE	Structural damping coefficient	Real	0.
ST	Tension stress limit	Real	0.
SC	Compression stress limit	Real	0.
SS	Shear stress limit	Real	0.

### Remarks:

1. MID must be unique among all material property entries.
2. The continuation entry is not required.
3. If this entry is used for the transverse shear properties (MID3 on PSHELL) then G13, G23 and G33 are ignored .

4. The stress strain relationship for an element using the MAT2 is:

$$\begin{matrix} 1 & G_{11} & G_{12} & G_{13} & 1 & 1 \\ 2 & G_{12} & G_{22} & G_{23} & 2 & (T \quad T_{ref}) & 2 \\ 3 & G_{13} & G_{23} & G_{33} & 3 & 3 \end{matrix}$$

and

$$\begin{matrix} xz & G_{11} & G_{12} & xz \\ yz & G_{12} & G_{22} & yz \end{matrix}$$

# MAT8

## 6.4.1.42 MAT8

### Description:

Linear orthotropic material definition for plate elements

### Format:

1	2	3	4	5	6	7	8	9	10
MAT8	MID	E1	E2	NU12	G12	G1Z	G2Z	RHO	+CONT1
+CONT1	A1	A2	TREF	Xt	Yc	Yt	Yc	S	+CONT2
+CONT2	GE	F12	STRN						

### Example:

MAT8	10	9.+6	11.+6	0.29	4.+6	3.+6	5.+6	.00258	+MATL01
+MATL01	20.-5	22.-5	21.0						+MATL02
+MATL02									

### Data Description:

Field	Contents	Type	Default
MID	Material ID number	Integer > 0	None
E1	Elastic modulus in longitudinal direction	Real > 0.	0.
E2	Elastic modulus in lateral direction	Real > 0.	0.
G12	In-plane shear modulus	Real >= 0.	0.
G1Z	Transverse shear modulus in the 1-Z plane	Real >= 0.	0.
G2Z	Transverse shear modulus in the 2-Z plane	Real >= 0.	0.
NU12	Poisson's ratio	Real >= 0.	0.
RHO	Material mass density	Real >= 0.	0.
A1	Coefficient of thermal expansion in the longitudinal direction	Real >= 0.	0.
A2	Coefficient of thermal expansion in the lateral direction	Real >= 0.	0.
TREF	Reference temperature	Real	0.
Xt		Real > 0.	0.
Xc		Real > 0.	0.
Yt		Real > 0.	0.
Yc		Real > 0.	0.
S		Real > 0.	0.
GE	Damping coefficient	Real > 0.	0.
F12		Real > 0.	0.
STRN	Compression allowable for the material	Real > 0.	0.

Remarks:

1. MID must be unique among all material property entries.
2. The continuation entries are not required.
3. If G1Z and G2Z are zero (or blank) transverse shear flexibility is zero (infinite transverse shear stiffness).

# MAT9

## 6.4.1.43 MAT9

### Description:

Linear anisotropic material definition for 3D solid elements

### Format:

1	2	3	4	5	6	7	8	9	10
MAT9	MID	G11	G12	G13	G14	G15	G16	G22	+CONT1
+CONT1	G23	G24	G25	G26	G33	G34	G35	G36	+CONT2
+CONT2	G44	G45	G46	G55	G56	G66	RHO	A1	+CONT3
+CONT3	A2	A3	A4	A5	A6	TREF	GE		

### Example:

MAT8	10	8.+6	4.+4	3.2+6	2.5+6			9.+6	+MATL01
+MATL01					10.+6				+MATL02
+MATL02	4.+6			5.+6		3.+6	.003	20.-5	+MATL03
+MATL03	22.-5	18.-5							

### Data Description:

Field	Contents	Type	Default
MID	Material ID number	Integer > 0	None
Gij	Elements of the 6x6 material matrix	Real > 0.	0.
RHO	Material mass density	Real >= 0.	0.
A1	Coefficients of thermal expansion	Real >= 0.	0.
TREF	Reference temperature	Real	0.
GE	Damping coefficient	Real > 0.	0.

### Remarks:

1. MID must be unique among all material property entries.
2. The first two continuation entries are required but the third continuation entry is not required.
3. The Gij are the transformation of strains to stresses as in:

x	G <sub>11</sub>	G <sub>12</sub>	G <sub>13</sub>	G <sub>14</sub>	G <sub>15</sub>	G <sub>16</sub>	x
y		G <sub>22</sub>	G <sub>23</sub>	G <sub>24</sub>	G <sub>25</sub>	G <sub>26</sub>	y
z			G <sub>33</sub>	G <sub>34</sub>	G <sub>35</sub>	G <sub>36</sub>	z
xy				G <sub>44</sub>	G <sub>45</sub>	G <sub>46</sub>	xy
yz					G <sub>55</sub>	G <sub>56</sub>	yz
zx						G <sub>66</sub>	zx

sym

# MOMENT

## 6.4.1.44 MOMENT

### Description:

Static concentrated moment at a grid point

### Format:

1	2	3	4	5	6	7	8	9	10
MOMENT	SID	GID	CID	M	N1	N2	N3		

### Example:

MOMENT	1234	567	89	1000.	1.5	2.5	3.5		
--------	------	-----	----	-------	-----	-----	-----	--	--

### Data Description:

Field	Contents	Type	Default
SID	Load set ID number	Integer > 0	None
GID	ID of the grid at which this concentrated moment acts	Integer >0	None
CID	ID of the coordinate system in which the Ni are specified	Integer >= 0	0
M	An overall scale factor for the moment	Real	0.
Ni	Components of a vector in the direction of the moment	Real	0.

### Remarks:

1. The static concentrated moment applied to the grid is the vector:

$$\vec{P} = M\vec{N}$$

with Ni in fields 6-8 the components of the vector N

2. In order for this load to be used in a static analysis the load set ID must either be selected in Case Control by LOAD = SID, or this load set ID must be referenced on a LOAD Bulk Data entry which itself is selected in Case Control.
3. A blank entry for CID implies the basic coordinate system.

# MPC

## 6.4.1.45 MPC

### Description:

Multi point constraints define a linear dependence of one degree of freedom (that becomes a member of the M-set) on other degrees of freedom.

### Format:

1	2	3	4	5	6	7	8	9	10
MPC	SID	G1	C1	D1	G2	C2	D2		+MPC1
+MPC1		G3	C3	S3	G4	C4	D4		+MPC2
+MPC2		G6	C5	D6	etc...				

### Example:

As an example consider the following equation relating several degrees of freedom (in global coordinates):

$$1.2w_{101} + 4.5v_{201} + 0.63y_{623} + 12.7z_{76} = 0$$

where  $w_{101}$  is the displacement in the global z direction at grid 101,  $v_{201}$  is the displacement in the global y direction at grid 201, and the remaining two terms are the rotation about the global y and z directions at grids 623 and 76 respectively. Assuming that  $w_{101}$  has been chosen as the M-set degree of freedom for this MPC equation, the input would be:

MPC	56	101	3	1.2	201	2	4.5		+M01
+M01		623	5	-.63	76	6	12.7		

### Data Description:

Field	Contents	Type	Default
SID	ID number of the multi point constraint set	Integer > 0	None
Gi	ID numbers of the grids involved in the constraint. Grid G1, component C1 is, by definition, the dependent (M-set) degree of freedom	Integer > 0	None
Ci	Component numbers at grids Gi involved in the MPC equation	Integers 1-6	None
Di	The value for coefficient D for grid Gi, component Ci	Real	0.

### Remarks:

1. Multi point constraint sets must be selected in Case Control with the entry MPC = SID in order for them to be applied.
2. Degrees of freedom defined as dependent on MPC entries will be members of the M-set and cannot be defined as being members of any other mutually exclusive set.
3. G1/C1 is the degree of freedom eliminated (M-set) due to the MPC equation and the remaining terms in the MPC equation can be for degrees of freedom belonging to any displacement set.



# MPCADD

## 6.4.1.46 MPCADD

### Description:

Combine multi-point constraint sets defined on MPC entries

### Format:

1	2	3	4	5	6	7	8	9	10
MPCADD	SID	S1	S2	S3	S4	S5	S6	S7	+CONT
+CONT	S8	S9	(etc)						

### Example:

SPCADD	283	11	74	123	564				
--------	-----	----	----	-----	-----	--	--	--	--

### Data Description:

Field	Contents	Type	Default
SID	Multi-point constraint set ID number	Integer > 0	None
Si	Set IDs of MPC Bulk Data entries	Integer > 0	None

### Remarks:

1. Multi-point constraint sets must be selected in Case Control with the entry MPC = SID in order for them to be applied.
2. All multi-point constraints specified on MPC entries whose set IDs are the Si on the MPCADD will be applied to the model if MPC = SID is in Case Control.

# OMIT

## 6.4.1.47 OMIT

### Description:

Define degrees of freedom to go into the omit set (O-set)

### Format:

1	2	3	4	5	6	7	8	9	10
OMIT	G1	C1	G2	C2	G3	C3	G4	C4	

### Example:

OMIT	19	1	28	2345	37	124	46	134	
------	----	---	----	------	----	-----	----	-----	--

### Data Description:

Field	Contents	Type	Default
Gi	ID numbers of grids	Integer > 0	None
Ci	Displacement component numbers	Integers 1-6	None

### Remarks:

1. The degrees of freedom defined by grids Gi, components Ci will be placed in the mutually exclusive O-set. These degrees of freedom cannot have been defined to be in any other mutually exclusive set (i.e.. M, S or A sets).
2. If OMIT or OMIT1 are present in the data file, then all degrees of freedom not specified on these entries and also not in the M or S sets will be placed in the A-set. If both ASET (or ASET1) and OMIT (or OMIT1) are present, then all degrees of freedom not in the M and S sets must be explicitly defined on ASET (or ASET1) and OMIT (or OMIT1).
3. Up to four pairs of Gi, Si can be specified on one OMIT entry. For more pairs, use additional OMIT entries (i.e. there is no continuation entry for OMIT).

# OMIT1

## 6.4.1.48 OMIT1

### Description:

Define degrees of freedom to go into the omit set (O-set)

### Format No. 1:

OMIT1	C	G1	G2	G4	G4	G5	G6	G7	+Q001
+Q001	G8	G9	(etc)						

### Format No. 2:

OMIT1	C	G1	THRU	G2					
-------	---	----	------	----	--	--	--	--	--

### Example:

OMIT1	135	17934	THRU	19012					
-------	-----	-------	------	-------	--	--	--	--	--

### Data Description:

Field	Contents	Type	Default
Gi	ID numbers of grids. $G2 > G1$	Integer > 0	None
C	Displacement component numbers	Integers 1-6	None

### Remarks:

1. In Format No. 2, all grids in the range G1 through G2 will have component C defined in the O-set.
2. The degrees of freedom defined by grids G1, components C will be placed in the mutually exclusive O-set. These degrees of freedom cannot have been defined to be in any other mutually exclusive set (i.e.. M, S or A sets).
3. If OMIT or OMIT1 are present in the data file, then all degrees of freedom not specified on these entries and also not in the M or S sets will be placed in the A-set. If both ASET (or ASET1) and OMIT (or OMIT1) are present, then all degrees of freedom not in the M and S sets must be explicitly defined on ASET (or ASET1) and OMIT (or OMIT1)

# PARAM

## 6.4.1.49 PARAM

### Description:

Provide values, other than default values, for parameters that control options during execution.

### Format:

1	2	3	4	5	6	7	8	9	10
PARAM	NAME	V1	V2	V3	V4				

### Example:

PARAM	PRTDOF	2							
-------	--------	---	--	--	--	--	--	--	--

### Data Description:

Field	Contents	Type	Default
NAME	Parameter name	Char	None
Vi	Values for the parts of the parameter	Char, Integer or real	Various

### Remarks:

1. See table below for a list of the various parameters and what action is taken based on their values. Unless otherwise stated, only value V1 is used. The parameter name always goes in field 2 and V1 always goes in field 3. When there is more than one Vi, the table explicitly states in what fields the Vi go.

## Parameters

Parameter Name	Data Type	Function of Parameter NOTE: Default values of parameters are: N for Char, 0 for Int and 0.0 for real
ARP_TOL	Real	Default = $1 \times 10^{-6}$ Tolerance to use in Lanczos eigenvalue extraction method for convergence
ART_KED (for diff stiffness – not fully implemented)	Char	Field 3: ART_KED, default = N. If Y add artificial stiff to diag of KED stiff matrix Field 4: ART_TRAN_MASS: value for translation degrees of freedom, default $1 \times 10^{-6}$ Field 5: ART_ROT_MASS: value for translation degrees of freedom, default $1 \times 10^{-6}$
ART_MASS	Char	Field 3: ART_MASS, default = N. If Y add artificial mass to diag of MGG mass matrix Field 4: ART_TRAN_MASS: value for translation degrees of freedom, default $1 \times 10^{-6}$ Field 5: ART_ROT_MASS: value for rotation degrees of freedom, default $1 \times 10^{-6}$
AUTOSPC	Char Real Int Char Char	Field 3: AUTOSPC value, default = Y (AUTOSPC), N turns AUTOSPC off. Field 4: AUTOSPC_RAT, default = $1 \times 10^{-8}$ (see Section 3.4.1.1) Field 5: AUTOSPC_NSET, default = 1 (see Section 3.4.1.1) Field 6: AUTOSPC_INFO, default = N. If Y then print messages about the AUTOSPC's Field 7: AUTOSPC_SPCF, default = N. If Y print AUTOSPC forces of constraint
BAILOUT	Int	Default = 1 If > 0 quit if a singularity in decomposing a matrix is detected. If <= 0 do not quit
CBMIN3	Real	Default = 2.0 CBMIN3 is the constant $C_B$ used in tuning the shear correction factor in Ref 3 for the TRIA3 plate element. The default 2.0 is the value suggested by the author.
CBMIN4	Real	Default = 3.6 CBMIN4 is the constant $C_B$ used in tuning the shear correction factor in Ref 4 for the QUAD4 plate element (QUAD4TYP = 'MIN4 '). See Ref 4
CBMIN4T	Real	Default = 3.6 CBMIN4T is the constant $C_B$ used in tuning the shear correction factor in Ref 4 for the QUAD4 plate element (QUAD4TYP = 'MIN4T').
CHKGRDS	Char	Default = Y. If N do not check that all grids for all elements exist
CRS_CCS	Char	Default = CRS (compressed row storage of matrices). Also can be CCS
CUSERIN	Char  Int Int Int Int Char Int	If this parameter is present, Bulk Data entries for Craig-Bampton (CB) reduced models will be written to the F06 file as a CUSERIN element (including grids, coord sys, etc) Field 3: element ID, default = 9999999 Field 4: property ID default = 9999999 Field 5: start index for SPOINT's to represent modes of the CB model, default = 1001 Field 6: IN4 file # on the PUSERIN entry for this CUSERIN elem, default = 9999999 Field 7: Set-ID for CUSERIN elem (typically the "R", or boundary, set), def is blank field Field 8: Format for how to write the comp numbers (1 thru 6) for each grid of the CUSERIN elem. If 0, write them in compact form (e.g. 1356). If > 0 write them in expanded form (1 3 56), default = 0
DARPACK	Int	Default = 2 how many extra modes to find above EIG_N2 on the EIGRL entry. These few highest mode are not used due to difficulty with getting good GP force balance.
DELBAN	Int	Default 0. If equal to 1 delete the bandit output files on exit
EIGESTL	Int	Default 5000 For eigenvalue problems by the Lanczos method, if the number of L-set DOF's exceed EIGESTL the method for specifying the search range will be changed from F1 to F2 to N (see EIGRL Bulk Data entry) to avoid excessive run times (since the code to estimate the number of eigens in the F1 to F2 range can be excessive).
EIGNORM2	Char	Default = N. if 'Y' then eigenvectors will be renormalized a last time by multiplying by a set of scale factors (1 per eigenvector) supplied in a file with the same name as the input file and extension 'EIN' (if it exists)

Parameters (continued)

Parameter Name	Data Type	Function of Parameter NOTE: Default values of parameters are: N for Char, 0 for Int and 0.0 for real
ELFORCEN	Char	Default = GLOBAL If ELFORCEN = GLOBAL, and nodal forces have been requested in Case Control, they will be output in the global coordinate system. If ELFORCEN = BASIC, and nodal forces have been requested in Case Control, they will be output in the basic coordinate system. If ELFORCEN = LOCAL, and nodal forces have been requested in Case Control, they will be output in the local element coordinate system.
EPSERR	Char	Default = Y. If N, do not calculate the NASTRAN like "epsilon error estimate"
EPSIL	Real	There are 3 EPSIL(i) values each of which requires a separate PAPAM EPSIL Bulk Data entry with the index (i) in field 3 and EPSIL(i) value in field 4. These are small numbers used in MYSTRAN for the purposes indicated below: 1) EPSIL(1) (default = $1 \times 10^{-15}$ ) is used in MYSTRAN such that, in any real number comparisons, any real number whose absolute magnitude is less than EPSIL(1) is considered to be zero. If no PARAM EPSIL 1 entry is in the data file then this value is reset (from the default) in LINK1 to a value based on machine precision calculated using LAPACK BLAS function DLAMCH. If the user has a PARAM EPSIL 1 entry, this value will be used for EPSIL(1) instead of the LAPACK machine precision. 2) Currently not used 3) EPSIL(3) is used in the Inverse Power method of eigenvalue extraction to test convergence of an eigenvalue. The default value (% change) is $1 \times 10^{-5}$ % 4) EPSIL(4) is used to calculate the maximum warp for quadrilateral plate elements, above which a warning message will be written. This maximum warp is EPSIL(2) times the average length of the quadrilateral's two diagonals. The default for EPSIL(2) is $1 \times 10^{-1}$ . 5) EPSIL(5) (default $1 \times 10^{-6}$ ) is used in BAR and ROD margin of safety calculations. If a stress magnitude is less than EPSIL(5) a $1 \times 10^{10}$ margin of safety will printed out for that stress (in other words, an infinite margin of safety) 6) EPSIL(6) (default $1 \times 10^{-15}$ ) is used in BAR margin of safety calculations
EQCHECK	Int Int Int Int Int Int Real Char	Field 3: Default = 0 (basic origin) or reference grid to use in calculating the rigid body displacement matrix for the equilibrium check Field 4: If nonzero, do equilibrium check on the G-set Field 5: If nonzero, do equilibrium check on the N-set Field 6: If nonzero, do equilibrium check on the F-set Field 7: If nonzero, do equilibrium check on the A-set Field 8: If nonzero, do equilibrium check on the L-set The value in fields 4-8 can be: 1: print loads due to rigid body displacements 2: print strain energy due to rigid body displacements 3: print both Field 9: EQCHK_TINY, default = $1 \times 10^{-5}$ . I Do not print grid forces smaller than this Field 10: Default = N. If Y, normalize the grid forces on diagonal stiffness
GRDPNT	Int	Default = -1. If not -1 then the value is interpreted as a grid number If GRDPNT $\neq$ 0, calculate total mass properties of the model relative to the basic coordinate system origin or relative to the specified grid.
GRIDSEQ	Char Char Char	Field 3: GRIDSEQ value (default = BANDIT). Other values are GRID and INPUT. BANDIT is automatic grid sequencing. GRID is sequencing in grid ID numerical order. INPUT is sequencing in the grid input order. Field 4: SEQUIT, default = N. If Y, then quit in the sequence processor if BANDIT did not run correctly. Field 5: SEQPRT, default = N. If Y, print SEQGP card images generated by BANDIT to the F06 output file

Parameters (continued)

Parameter Name	Data Type	Function of Parameter NOTE: Default values of parameters are: N for Char, 0 for Int and 0.0 for real
HEXAXIS	Char	'SIDE12', use side 1-2 as the local elem x axis. 'SPLITD' (default), use angle that splits the 2 diags to define the elem x axis
IORQ1M	Int	Default = 2 Gaussian integration order for membrane direct stress terms for the QUAD4, QUAD4K quadrilateral elements
IORQ1S	Int	Default = 1 Gaussian integration order for membrane shear stress terms for all quad elements
IORQ1B	Int	Default = 2 Gaussian integration order for bending stress terms for the QUAD4K element
IORQ2B	Int	Default = 2 Gaussian integration order for bending stress terms for the QUAD4 element
IORQ2T	Int	Default = 3 Gaussian integration order for transverse shear stress terms for the QUAD4 element
ITMAX	Int	Default = 5 Max number of iterations in refining the solution when parameter UREFINE = Y
KLLRAT	Char	Default = Y to tell whether to calc ratio of max/min KLL diagonal terms
KOORAT	Char	Default = Y to tell whether to calc ratio of max/min KOO diagonal terms
LANCMETH	Char	Procedure to use for Lanczos eigenvalue extraction (Currently only ARPACK is available but it does require matrices to be stored in band form which can require an excessive amount of memory for large problems)
MATSPARS	Char	If = Y (default), use sparse matrix routines for add/multiply in all matrix operations. If N, use full matrix add/multiply (not recommended)
MAXRATIO	Real	Default = $1 \times 10^7$ Max value of matrix diagonal to factor diagonal before messages are written and BAILOUT tested for aborting run
MEFMCORD	Int	Default = 0. The coordinate system in which to calculate modal mass and participation factors
MEFMLOC	Char	Reference location for calculating modal effective mass in Craig-Bampton (SOL 31) analyses. This only affects the rotational modal effective masses. Field 3 can be GRDPNT, GRID or CG: If field 3 = GRDPNT (default): ref point is the same as the one for PARAM GRDPNT If field 3 = CG: use the model center of gravity as the reference point If field 3 = GRID: use the grid point number in field 4 as the reference point Field 4: MEFMGRID (grid to use when field 3 is GRID)
MEMAFAC	Int	Default = 0.9. Factor to multiply the size request of memory to be allocated when looping to find an allowable amount of memory to allocate. Used when the initial request for memory (in subrs ESP or EMP) cannot be met and we know that the request is conservative.
MIN4TRED	Char	Default = STC. Defines the method for how the 5th node of the MIN4T element is reduced out (to get a 4 node quad element). STC (default) is static condensation. B54 (not implemented as of Version 3.0) uses a method developed by the element author (see Reference section, this manual for the element formulation paper)

Parameters (continued)

Parameter Name	Data Type	Function of Parameter
		NOTE: Default values of parameters are: N for Char, 0 for Int and 0.0 for real
MPFOUT	Char	(1) '6' (default) indicates to output modal participation factors (MPF) relative to the 6 DOF's at grid MEFMGRID (see PARAM MEFMLOC) (2) 'R' indicates to output MPF's for all of the R-set DOF's individually
MXALLOCA	Int	Default = 10. Max number of attempts to allow when trying to allocate memory in subroutine ALLOCATE_STF_ARRAYS
MXITERI	Int	Default = 50. Max number of iterations to use in the Inverse Power eigenvalue extraction method
MXITERL	Int	Default = 50. Max number of iterations to use in the Lanczos eigenvalue extraction method
OTMSKIP	Int	Number of lines to skip between segments of OTM text file descriptors
PBARLDEC	Int	Default = 5. Number of decimal digits when writing PBAR equivalents for PBARL entry real data
PBARLSHR	Char	Default = Y. Include K1, K2 for PBAR equiv to PBARL BAR properties
PCHSPC1	Char Int Char	Field 3: PCHSPC1 value (default = N, do not punch SPC1 card images for constraints generated by the AUTOSPC feature, use Y to punch these) Field 4: SPC1SID value (default = 9999999, the set ID to put on the SPC1 card images) Field 5: SPC1QUIT value (default = N, do not stop after SPC1's are punched, or Y to stop processing)
PCMPTSTM	Real	Factor to multiply composite ply thickness for effective shear thickness
PCOMPEQ	Int	Default = 0. Indicator to write equiv PSHELL, MAT2 to F06 for PCOMP's. If > 0, write the equivalent PSHELL and MAT2 Bulk Data entries for the PCOMP. If > 1 also write the data in a format with a greater number of digits of accuracy.
POST	Int	If = -1 then write FEMAP neutral file for post processing of MYSTRAN outputs
PRTBASIC	Int	If = 1 print grid coordinates in the basic coordinate system
PRTCGLTM	Int	If = 1 print CB matrix for C.G. LTM loads
PRTCONN	Int	If = 1, print table of elements connected to each grid. If 2, more detailed data
PRTCORD	Int	If PRTCORD = 1 print coordinate system transformation data
PRTDISP	Int	PRTDISP(I), I=1-5 go in fields 3-7 of the PARAM PRTDISP entry that prints displacement matrices for various displacement sets: V1 = PRTDISP(1) = 1 print UG V2 = PRTDISP(2) = 1 or 3 print UN, 2 or 3 print UM V3 = PRTDISP(3) = 1 or 3 print UF, 2 or 3 print US V4 = PRTDISP(4) = 1 or 3 print UA, 2 or 3 print UO V5 = PRTDISP(5) = 1 or 3 print UL, 2 or 3 print UR
PRTDLR	Int	If = 1, the DLR matrix will be printed
PRTDOF	Int	If PRTDOF = 1 or 3 print TDOF table, in grid point ID numerical order, which gives a list of the degree of freedom numbers for each displacement set (size is number of degrees of freedom x number of ddmM # PR e d point ID nrm d R n6 fix6 r



Parameters (continued)

Parameter Name	Data Type	Function of Parameter NOTE: Default values of parameters are: N for Char, 0 for Int and 0.0 for real
PRTHMN	Int	If = 1 print HMN constraint matrix
PRTIFLTM	Int	If = 1 print CB matrix for Interface Forces LTM
PRTKXX	Int	If = 1 print CB matrix KXX
PRTMASSD	Int	Same as PRTMASS, except only print diagonal terms
PRTMASS	Int	PRTMASS(I), I=1-5 go in fields 3-7 of the PARAM PRTMASS entry that prints sparse mass matrices for various displacement sets: V1 = PRTMASS(1) = 1 print sparse MGG V2 = PRTMASS(2) = 1 or 3 print sparse MNN, 2 or 3 print MNM, MMM V3 = PRTMASS(3) = 1 or 3 print sparse MFF, 2 or 3 print MFS, MSS V4 = PRTMASS(4) = 1 or 3 print sparse MAA, 2 or 3 print MAO, MOO V5 = PRTMASS(5) = 1 or 3 print sparse MLL, 2 or 3 print MLR, MRR
PRTMXX	Int	If = 1 print CB matrix MXX
PRTOU4	Int	If > 0 write all OU4 (OUTPUT4) matrices to F06 file
PRTPHIXA	Int	If = 1 print CB matrix PHIXA
PRTPHIZL	Int	If = 1 print CB matrix PHIZL
PRTPSET	Int	If > 0 print the OUTPUT4 matrix partitioning vector sets
PRTQSYS	Int	If = 1 print matrix QSYS
PRTRMG	Int	If PRTRMG = 1 or 3, print constraint matrix RMG If PRTRMG = 2 or 3, print partitions RMN and RMM of constraint matrix RMG
PRTSCP	Int	If PRTSCP = 1 print data generated in the subcase processor
PRTSTIFD	Int	Same as PRTSTIFF, except only print diagonal terms
PRTSTIFF	Int	Defaults = 0 for PRTSTIFF(I), I=1-5 which go in fields 3-7 of the PARAM PRTSTIFF entry that prints sparse stiffness matrices for various displacement sets: V1 = PRTSTIFF(1) = 1 print sparse KGG V2 = PRTSTIFF(2) = 1 or 3 print sparse KNN, 2 or 3 print KNM, KMM V3 = PRTSTIFF(3) = 1 or 3 print sparse KFF, 2 or 3 print KFS, KSS V4 = PRTSTIFF(4) = 1 or 3 print sparse KAA, 2 or 3 print KAO, KOO V5 = PRTSTIFF(5) = 1 or 3 print sparse KLL, 2 or 3 print KLR, KRR
PRTTSET	Int	If PRTSET = 1 print TSET table which gives the character name of the displacement sets that each degree of freedom belongs to (size is number of grids x 6)
PRTUO0	Int	If = 1 print UO0
PRTUSET	Int	If > 0 print the user defined set (U1 or U2) definitions
PRTYS	Int	If = 1 print matrix YS
Q4SURFIT	Int	Default = 6. Polynomial order for the surface fit of QUAD4 stress/strain when stresses are requested for other than corner locations
QUAD4TYP	Char	'MIN4T' ! Which element to use in MYSTRAN as the QUAD4 element 'MIN4T (default)': Use Tessler's MIN4T element made up of 4 MIN3 triangles 'MIN4 ': Use Tessler's MIN4 element
QUADAXIS	Char	Default = 'SIDE12' This determines how the quad element local x axis is defined. 'SIDE12' means that the axis between grids 1 and 2 of the quad define the local x axis. 'SPLITD' means that the axis is defined as the direction that splits the angle between the quad diagonals
RCONDK	Char	If RCONDK = Y, then LAPACK calculates the condition number of the A-set stiffness matrix. This is required if LAPACK error bounds on the A-set displacement solution are desired. This can require significant solution time.

### Parameters (continued)

Parameter Name	Data Type	Function of Parameter
RELINK3	Char	NOTE: Default values of parameters are: N for Char, 0 for Int and 0.0 for real 'Y' or 'N' to specify whether to rerun LINK3 and also LINK5 in a restart
SETLKTK	Int       Char  Int	Field 3: SETLKTK value. Default = 0. Method to estimate number of nonzeros in G-set stiffness matrix so array can be allocated. (1) If SETLKTK = 0, estimate LTERM_KGG based on full element stiffness matrices unconnected (most conservative but not time consuming). (2) If SETLKTK = 1, estimate LTERM_KGG based on KGG bandwidth. (3) If SETLKTK = 2, estimate LTERM_KGG based on KGG density of nonzero terms (4) If SETLKTK = 3, estimate LTERM_KGG based on actual element stiffness matrices unconnected. (5) If SETLKTK = 4, estimate LTERM_KGG on value input by user in field 5 of the PARAM SETLKTK entry (PARAM USR_LTERM_KGG). Field 4: ESP0_PAUSE value (default = N, do not pause after subr ESP0 to let user input LTERM_KGG, or pause if = Y Field 5: User input value of LTERM_KGG
SETLKTM		Same as SETLKTK but for the G-set mass matrix. Only the values for SETLKTM = 1, 3, 4 are available
SHRFXFAC	Real	Default = $1 \times 10^6$ . Factor used to adjust transverse shear stiffness when user has indicated zero shear flexibility for shell elements. The shear stiffness will be reset from infinite (zero flexibility) to SHRFXFAC times the average of the bending stiffnesses in the 2 planes
SKIPMGG	Char	Default = N. 'Y', 'N' indicator to say whether to skip calculation of MGG, KGG in which case MGG, KGG will be read from previously generated, and saved, files (LINK1L for KGG, LINK1R for MGG)
SOLLIB	Char	Field 3: Denotes which library to use for matrix decomposition and equation solution. Options are: 1) SPARSE: default (matrices stored with only nonzero terms) 2) Banded: (matrices stored in band form. Uses LAPACK/ARPACK routines) Field 4: (only if SPARSE SOLLIB) denotes which SPARSE library to use: 1. SUPERLU (default) uses the SuperLU method of sparse matrix decomp and solve.
SORT_MAX	Int	Default = 5 Max number of times to run algorithm when sorting arrays before fatal message.
SPARSTOR	Char	Default = SYM If SYM, symmetric matrices5] } non

Parameters (continued)

Parameter Name	Data Type	Function of Parameter NOTE: Default values of parameters are: N for Char, 0 for Int and 0.0 for real
TINY	Real	Do not print matrix values whose absolute value is less than this parameter value
TSTM_DEF	Real	Default = $5/6 = 0.833333$ Value for TS/TM on PSHELL Bulk data entry when that field on the PSHELL is blank
USETSTR	Char	Requests output of the internal sequence order for displacement sets (e.g. G-set, etc). See section 3.6 for a discussion of displacement sets. In addition to the sets in section 3.7, the user displacement sets U1 and U2 (see Bulk Data entry USET and USET1) can also have the internal sort order output to the F06 file. As an example, to obtain a row oriented tabular output of the internal sort order for the R-set, include the Bulk data entry: PARAM, USETSTR, R
USR_JCT	Int	User supplied value for JCT - used in shell sort subroutines. If USR_JCT = 0, internal values for JCT will be used in the shell sort.
WINAMEM	Real	Default = 2.0 GB. Max memory Windows allows for any array. If it is exceeded, a message is printed out and execution is aborted. This is used to avoid a failure which aborts MYSTRAN catastrophically (due to a system fault).
WTMASS	Real	Default = 1.0 Multiplier for mass matrix after the model total mass is output in the Grid Point Weight Generator (GPWG). This allows user to input mass terms as weight to get model mass properties in weight units and then to convert back to mass units after the GPWG has run. For example, if the model units are lb-sec <sup>2</sup> /inch for mass and inches for length and the input data file has lb for "mass" (read weight), then 1/386, or 0.002591 would be the value for WTMASS needed to convert the "mass" matrix from weight units to mass units.

# PARVEC

## 6.4.1.50 PARVEC

### Description:

Defines a partitioning vector to be used in partitioning an OUTPUT4 matrix. See the Exec Control statements OUTPUT4 and PARTN.

### Format:

1	2	3	4	5	6	7	8	9	10
PARVEC	NAME	G1	C1	G2	C2	G3	C3		

### Example:

PARVEC	COLVEC	101	3	201	2				
--------	--------	-----	---	-----	---	--	--	--	--

### Data Description:

Field	Contents	Type	Default
NAME	Name of a row or column partitioning vector specified in a PARTN Exec Control command	Char	None
GI	ID numbers of the grids that will be partitioned	Integer > 0	None
C	Component numbers at grids Gi that will be partitioned	Integers 1-6	None

### Remarks:

1. The Gi, Ci must be members of the displacement set for the matrix being partitioned. For example, if the OUTPUT4 matrix being partitioned is  $K_{RL}$  the row partitioning vector grid/component values must be members of the R-set and the column partitioning vector must be a member of the L-set.

# PARVEC1

## 6.4.1.51 PARVEC1

### Description:

Defines a partitioning vector to be used in partitioning an OUTPUT4 matrix. See the Exec Control statements OUTPUT4 and PARTN.

### Format No. 1:

1	2	3	4	5	6	7	8	9	10
PARVEC1	NAME	C	G1	G2	G3	G4	G5	G6	+CONT
+CONT	G7	G8	G9	(etc)					

### Format No. 2:

1	2	3	4	5	6	7	8	9	10
PARVEC1	U1	C	G1	THRU	G2				

### Examples:

PARVEC1	52	135	1001	1002	103	1004	2001	2002	+SZA
+SZA	2003	2004							

PARVEC1	52	135	1001	THRU	1004				
---------	----	-----	------	------	------	--	--	--	--

### Data Description:

Field	Contents	Type	Default
NAME	Name of a row or column partitioning vector specified in a PARTN Exec Control command	Char	None
Gi	ID numbers of the grids that will be partitioned	Integers 1-6	None
C	Component numbers at grids Gi that will be partitioned	Integer > 0	None

### Remarks:

1. The Gi, Ci must be members of the displacement set for the matrix being partitioned. For example, if the OUTPUT4 matrix being partitioned is  $K_{RL}$  the row partitioning vector grid/component values must be members of the R-set and the column partitioning vector must be a member of the L-set.

# PBAR

## 6.4.1.52 PBAR

### Description:

Property definition for BAR element

### Format:

1	2	3	4	5	6	7	8	9	10
PBAR	PID	MID	A	I1	I2	J	MPL		+CONT1
+CONT1	Y1	Z1	Y2	Z2	Y3	Z3	Y4	Z4	+CONT2
+CONT2	K1	K2	I12	CT					

### Example:

PBAR	5	2	1.44	.144	.1	.005	0.1		+P01
+P01	0.5	0.6	-0.5	0.6	-0.5	-0.6	0.5	-0.6	+P02
+P02	.833	.833							

### Data Description:

Field	Contents	Type	Default
PID	Property ID number	Integer > 0	None
MID	Material ID number	Integer > 0	None
A	Bar cross-sectional area	Real	0.
I1	Section moment of inertia about the element z axis (bending in element plane xy)	Real	0.
I2	Section moment of inertia about the element y axis (bending in element plane xz)	Real	0.
J	Torsional constant	Real	0.
MPL	Mass per unit length	Real	0.
Yi, Zi	Element y, z coordinates, in the bar cross-section, of four points at which to recover stresses	Real	0.
K1, K2	Area factors for shear in element planes xy and xz respectively	Real	0.
I12	Section cross-product of inertia	Real	0.
CT	Torsional stress recovery coefficient	Real	0

### Remarks:

1. PID must be unique among all PBAR, PBARL property ID's
2. Neither continuation entry is required
3. The shear center and neutral axis of the beam coincide.
4. See Figure 4-3 for bar element axes

5. Torsional stress is  $CT/J$  times the torsion load in the CBAR
4.  $K1$  and  $K2$  are used to calculate the transverse shear flexibility of the bar. For infinite shear stiffness (zero shear flexibility),  $K1$  and  $K2$  must be infinite by beam element theory. In order to implement this, and avoid dealing with very large numerical values for  $K1$  and  $K2$ , MYSTRAN interprets zero  $K1$  and  $K2$  to indicate zero transverse shear flexibility

# PBARL

## 6.4.1.53 PBARL

### Description:

Property definition for a CBAR element via reference to a cross-section shape (whose dimensions are specified)

### Format:

1	2	3	4	5	6	7	8	9	10
PBARL	PID	MID		TYPE					+CONT1
+CONT1	DIM1	DIM2	DIM3	DIM4	DIM5	DIM6	DIM7	DIM8	+CONT2
+CONT2	DIM9	etc	NSM						

### Example:

PBARL	5	2		CHAN					+P01
+P01	0.5	1.6	0.2	0.1					

### Data Description:

Field	Contents	Type	Default
PID	Property ID number	Integer > 0	None
MID	Material ID number	Integer > 0	None
TYPE	Cross section type	Real	0.
DIMi	Cross-section dimensions	Real	0.
NSM	Nonstructural mass per unit length	Real	0.







### Remarks:

- PID must be unique among all PBAR, PBARL property ID's
- If ECHO /= NONE the equivalent PBAR entries will be printed in the F06 file
- Allowable cross-section types are:







BAR	BOX	BOX1	CHAN	CHAN1	CHAN2
CROSS	H	HAT	HEXA	I	I1
ROD	T	T1	T2	TUBE	Z

- The figures on the following 3 pages show the above cross-section types along with the dimension variables (DIMi) and the cross-section axes. The axes are centered on the cross-section shear center. Points C, D E F are where stresses will be recovered.




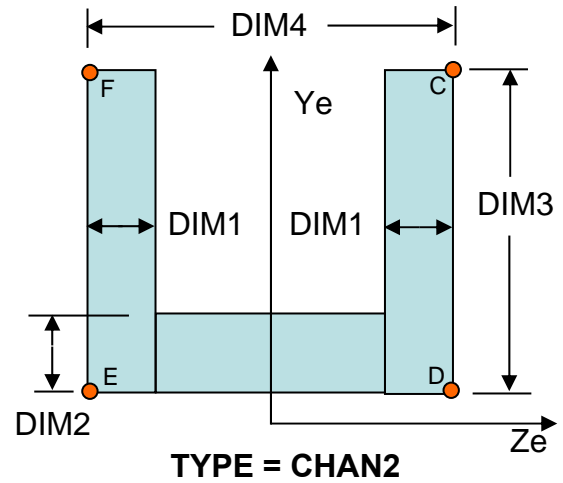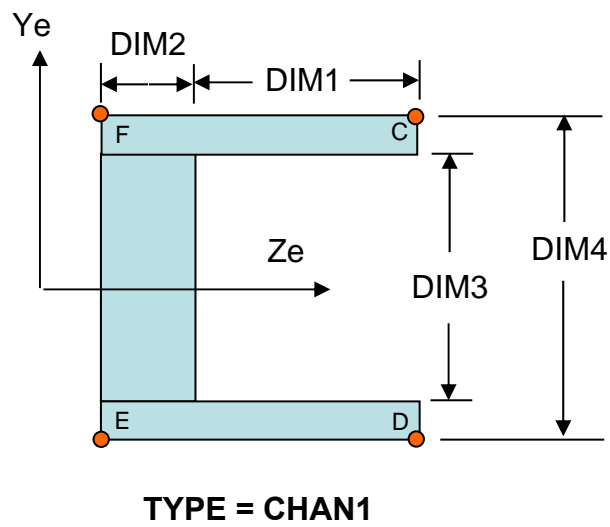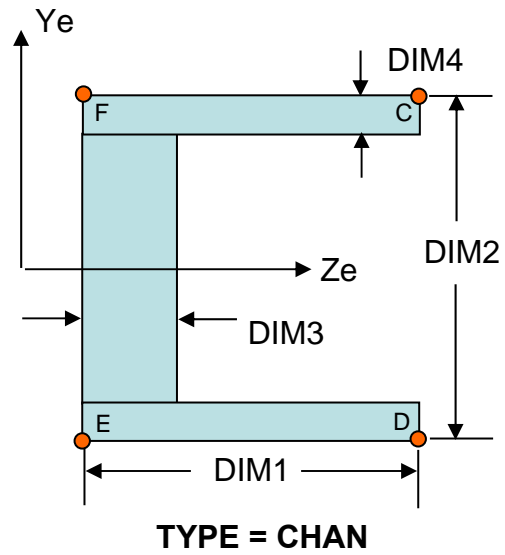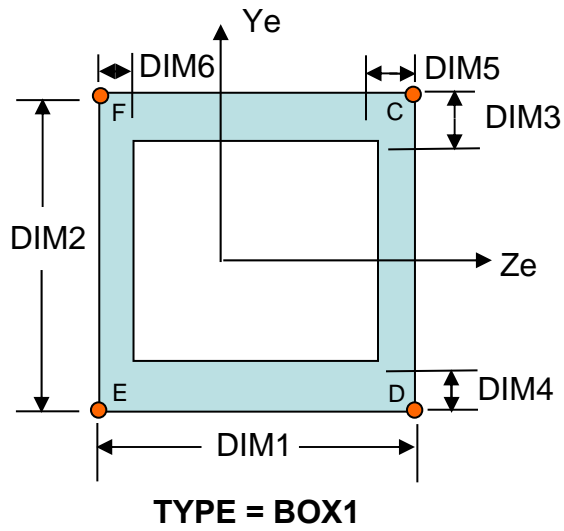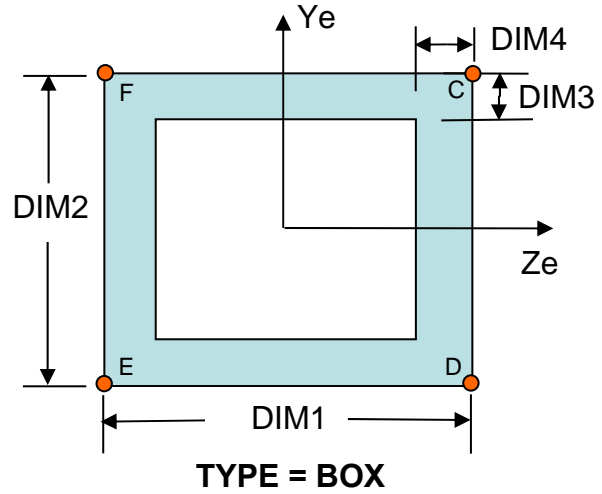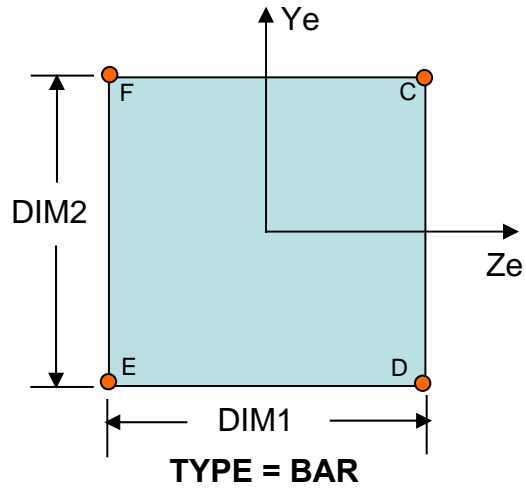

**PBARL cross-section types – Fig 1 of 3**

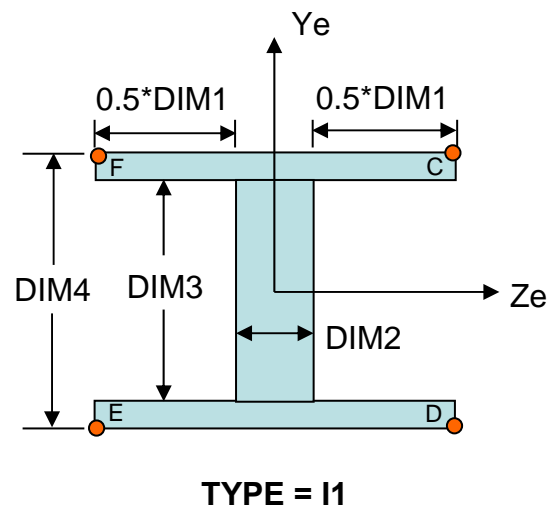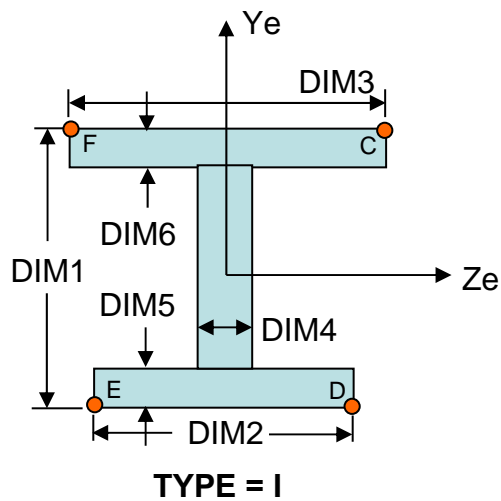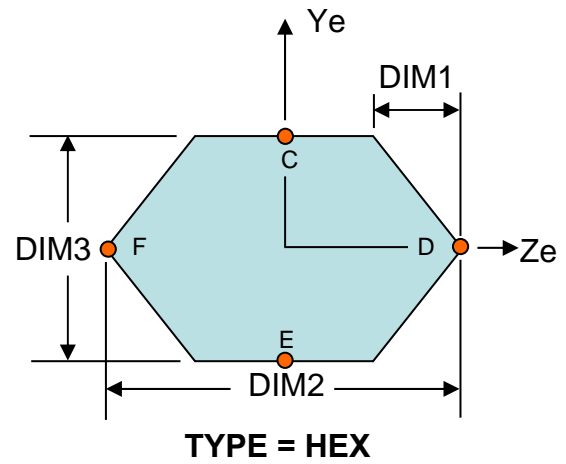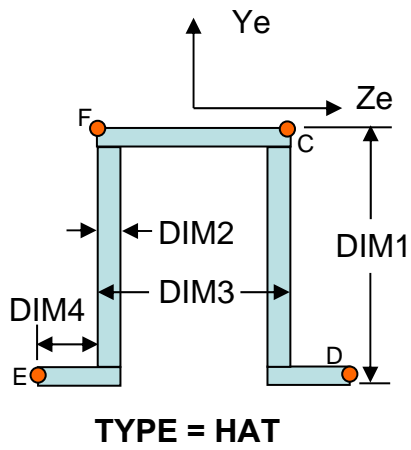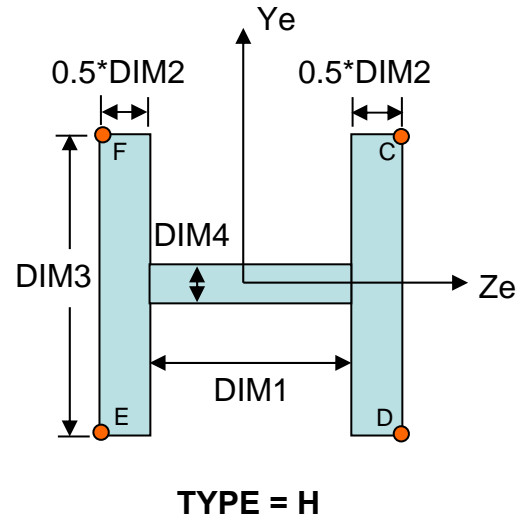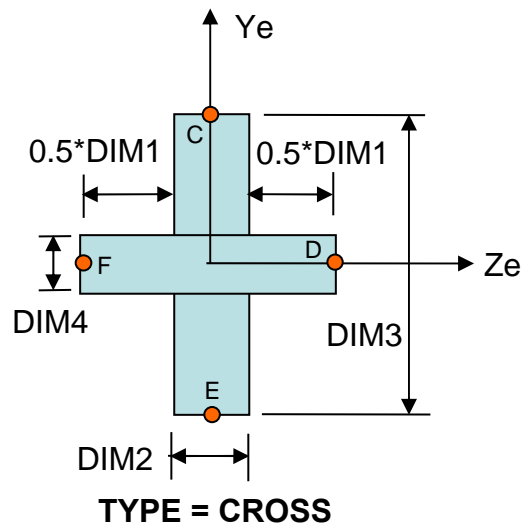

**PBARL cross-section types – Fig 2 of 3**

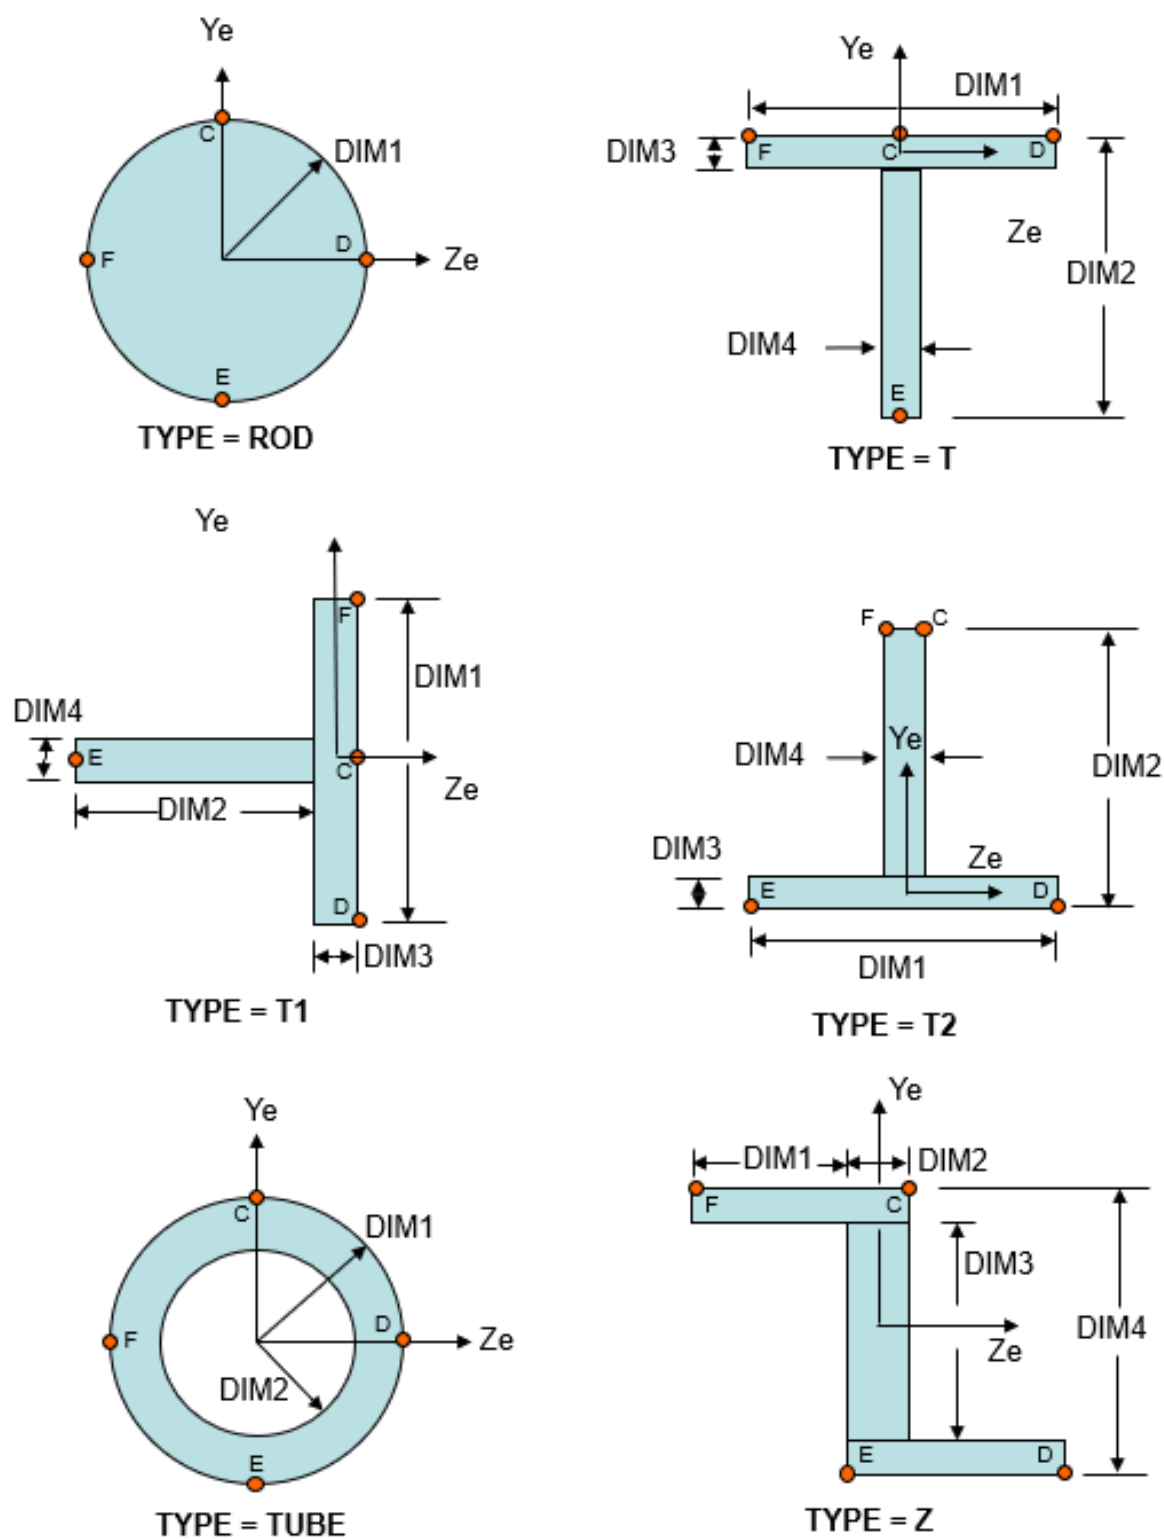

PBARL cross-section types – Fig 3 of 3

# PBUSH

## 6.4.1.54 PBUSH

### Description:

Property definition for a spring element defined by a CBUSH entry

### Format:

1	2	3	4	5	6	7	8	9	10
PBUSH	PID	"K"	K1	K2	K3	K4	K5	K6	+CONT1
+CONT1		"RCV"	SA	ST	EA	ET			

### Example:

PBUSH	136	K	10000.	20000.	30000.	4000.	50000.	60000.	+PB1
+PB1		RCV	30.	40.	.01	.02			

### Data Description:

Field	Contents	Type	Default
PID	Property ID number	Integer > 0	None
"K"	Indicates that the next 6 fields are stiffness values	Char	None
Ki	Stiffness values	Real	0.
"RCV"	Indicates that the next 4 values are stress/strain recovery coefficients	Real	0.
SA	Stress recovery coefficient in the 3 translational directions		
ST	Stress recovery coefficient in the 3 rotational directions		
EA	Strain recovery coefficient in the 3 translational directions		
ET	Strain recovery coefficient in the 3 rotational directions		

### Remarks:

1. Element stresses and strains are calculated by multiplying element engineering forces times the RCV coefficients

# PCOMP

## 6.4.1.55 PCOMP

### Description:

Property definition for a composite 2D plate/shell element made up of one or more plies

### Format:

1	2	3	4	5	6	7	8	9	10
PCOMP	PID	Z0	NSM	SB	FT	TREF	GE	LAM	+CONT1
+CONT1	MID1	T1	THETA1	SOUT1	MID2	T2	THETA2	SOUT2	+CONT2
+CONT2	MID3	(etc)							

### Example:

PCOMP	136	-1.02	.0003	30000	TSAI	21.	.002	SYM	+PC1
+PC1	91	.02	30.						

### Data Description:

Field	Contents	Type	Default
PID	Property ID number	Integer > 0	None
Z0	Distance from reference plane to bottom surface of the element	Real	Remark 2
NSM	Non structural mass	Real	0.
SB	Allowable interlaminar shear stress	Real	0.
FT	Failure theory	Char	None
TREF	Reference temperature	Real	0.
GE	Structural damping coefficient	Real	0.
LAM	Symmetric lamination option	Char	NONSYM
MIDi	Ply material ID (MID1 must be specified)	Integer	Last one
Ti	Ply thickness (T1 must be specified)	Real	Last one
THETAi	Material angle of ply relative to element material axis	Real	0.
SOUTi	Not currently used in MYSTRAN		

### Remarks:

1. PID must be unique among all PCOMP/PSHELL property entries
2. The default for Z0 is 0.5 times the laminate thickness
3. The failure index for the interlaminar shear is the maximum transverse shear stress divided by SB
4. The allowable failure theories are FT = HILL, HOFF, TSAI or STRN

5. If LAM = SYM only plies on one side of the laminate are to be specified. If an odd number of plies are desired with LAM = SYM then the center ply should have a thickness equal to one-half the actual thickness.
6. The default for MIDi is the previous defined MID. The same holds true for Ti.
7. In order for a ply to be defined, at least one of the 4 ply fields on continuation entries must be present.

# PCOMP1

## 6.4.1.56 PCOMP1

### Description:

Property definition for a composite 2D plate/shell element made up of one or more plies where all plies are the same thickness and same material

### Format:

1	2	3	4	5	6	7	8	9	10
PCOMP1	PID	Z0	NSM	SB	FT	MID	T	LAM	+CONT1
+CONT1	THETA1	THETA2	THETA3	etc					

### Example:

PCOMP	136	-1.02	.0003	30000	TSAI	21.	.002	SYM	+PC1
+PC1	91	.02	30.						

### Data Description:

Field	Contents	Type	Default
PID	Property ID number	Integer > 0	None
Z0	Distance from reference plane to bottom surface of the element	Real	Remark 2
NSM	Non structural mass	Real	0.
SB	Allowable interlaminar shear stress	Real	0.
FT	Failure theory	Char	None
MID	Material ID for all plies	Integer > 0	None
T	Thickness for all plies	Real	0.
LAM	Symmetric lamination option	Char	NONSYM
THETAi	Material angle of ply relative to element material axis	Real	0.

### Remarks:

1. PID must be unique among all PCOMP/PSHELL property entries
2. The default for Z0 is 0.5 times the laminate thickness
3. The failure index for the interlaminar shear is the maximum transverse shear stress divided by SB
4. The allowable failure theories are FT = HILL, HOFF, TSAI or STRN
5. If LAM = SYM only plies on one side of the laminate are to be specified. If an odd number of plies are desired with LAM = SYM then the center ply should have a thickness equal to one-half the actual thickness.

# PELAS

## 6.4.1.57 PELAS

### Description:

Stiffness definition for CELAS spring elements

### Format:

1	2	3	4	5	6	7	8	9	10
PELAS	PID	K	GE	S					

### Example:

PELAS	63	1.55E6		.015					
-------	----	--------	--	------	--	--	--	--	--

### Data Description:

Field	Contents	Type	Default
PID	Property ID number	Integer > 0	None
K	Spring stiffness	Real	0.
GE	Damping coefficient	Real	0.
S	Stress recovery coefficient	Real	0.

### Remarks:

1. PID must be unique among all PELAS property entries
2. Stress is output for this element as S times the elongation of the spring.



# PLOAD2

## 6.4.1.58 PLOAD2

### Description:

Uniform pressure load for 2D bending plate elements

### Format No. 1:

1	2	3	4	5	6	7	8	9	10
PLOAD2	SID	P	EID1	EID2	EID3	EID4	EID5	EID6	

### Format No. 2:

1	2	3	4	5	6	7	8	9	10
PLOAD2	SID	P	EID1	THRU	EID2				

### Examples:

PLOAD2	267	.05	12	23	56	124	9789		
--------	-----	-----	----	----	----	-----	------	--	--

PLOAD2	345	.167	269	THRU	9823				
--------	-----	------	-----	------	------	--	--	--	--

### Data Description:

Field	Contents	Type	Default
SID	Load set ID number	Integer > 0	None
P	Pressure value	Real	0.
EIDi	ID numbers of elements that are to have this pressure as a load	Integer > 0	None

### Remarks:

1. A positive value of P will result in a pressure being applied in the positive direction of the local z axis for the element (perpendicular to the elements' average midplane)
2. If the THRU option is used EID2 must be greater than EID1. All elements whose ID's are in the range EID1 through EID2 will have the pressure load (if SID selected in Case Control directly or via the load combining LOAD Bulk Data entry).
3. In order for this load to be used in a static analysis the load set ID must either be selected in Case Control by LOAD = SID, or this load set ID must be referenced on a LOAD Bulk Data entry which itself is selected in Case Control.
4. Up to six elements can have their pressure specified on one PLOAD2 entry in Format No 1. For more elements, use additional PLOAD2 entries (i.e. there is no continuation entry for PLOAD2).

# PLOAD4

## 6.4.1.59 PLOAD4

### Description:

Pressure load on the face of 2D bending plate elements, CTRIA3, CTRIA3K, CQUAD4, CQUAD4K

### Format No. 1:

1	2	3	4	5	6	7	8	9	10
PLOAD4	SID	EID	P1	P2	P3	P4			

### Format No. 2:

1	2	3	4	5	6	7	8	9	10
PLOAD4	SID	EID1	P1	P2	P3	P4	THRU	EID2	

### Examples:

PLOAD4	267	987	1.1	1.5	1.25	1.4			
PLOAD4	345	101	2.4	2.25	2.1	2.0	THRU	200	

### Data Description:

Field	Contents	Type	Default
SID	Load set ID number	Integer > 0	None
Pi	Pressure value at up to 4 grid locations	Real	0.
EIDi	ID numbers of elements that are to have this pressure as a load	Integer > 0	None

### Remarks:

1. A positive value of P will result in a pressure being applied in the positive direction of the local z axis for the element (perpendicular to the elements' average midplane)
2. If the THRU option is used EID2 must be greater than EID1. All elements whose ID's are in the range EID1 through EID2 will have the pressure load (if SID selected in Case Control directly or via the load combining LOAD Bulk Data entry).
3. In order for this load to be used in a static analysis the load set ID must either be selected in Case Control by LOAD = SID, or this load set ID must be referenced on a LOAD Bulk Data entry which itself is selected in Case Control.

5. If the fields for P2, P3 and/or P4 are blank that pressure is set equal to P1. P4 has no meaning for triangular elements.

# PLOTEL

## 6.4.1.60 PLOTEL

### Description:

1 dimensional dummy element that only serves the purpose of plotting a line. It has no elastic properties

### Format No. 1:

1	2	3	4	5	6	7	8	9	10
PLOTEL	EID	G1	G2						

### Example:

PLOTEL	63	1001	2365	.					
--------	----	------	------	---	--	--	--	--	--

### Data Description:

Field	Contents	Type	Default
EID	Element ID number	Integer > 0	None
Gi	Grid point ID's	Integer > 0	None

### Remarks:

1. EID must be unique among all element ID's
2. This element does not result in any stiffness or mass. It's purpose is only to plot a line between 2 grids

# PROD

## 6.4.1.61 PROD

### Description:

Property definition for ROD element

### Format:

1	2	3	4	5	6	7	8	9	10
PROD	PID	MID	A	J	C	MPL			

### Example:

PROD	49	2	.175	.093	1.5	0.0175			
------	----	---	------	------	-----	--------	--	--	--

### Data Description:

Field	Contents	Type	Default
PID	Property ID number	Integer > 0	None
MID	Material ID number	Integer > 0	None
A	Bar cross-sectional area	Real	0.
J	Torsional constant	Real	0.
C	Torsional stress recovery coefficient	Real	0.
MPL	Mass per unit length	Real	0.

### Remarks:

1. PID must be unique among all PROD property entries
2. The torsional stress is calculated as:

$$C \frac{M_t}{J}$$

where  $M_t$  is the torsional moment in the rod element.

# PSHEAR

## 6.4.1.62 PSHEAR

### Description:

Property definition for SHEAR element

### Format:

1	2	3	4	5	6	7	8	9	10
PSHEAR	PID	MID	T	NSM					

### Example:

PSHEAR	49	2	.175	.093					
--------	----	---	------	------	--	--	--	--	--

### Data Description:

Field	Contents	Type	Default
PID	Property ID number	Integer > 0	None
MID	Material ID number	Integer > 0	None
T	Shear panel thickness	Real > 0.	None
NSM	Nonstructural mass per unit area	Real	0.

### Remarks:

1. PID must be unique among all PSHEAR property entries

# PSHELL

## 6.4.1.63 PSHELL

### Description:

Property definition for 2D plate elements

### Format:

1	2	3	4	5	6	7	8	9	10
PSHELL	PID	MID1	TM	MID2	12I/TM**3	MID3	TS/TM	MPA	+CONT
+CONT	Z1	Z2							

### Examples:

PSHELL	987	234	0.10	123	125.	45	20.	.005	+ABC
+ABC	0.5	-0.5							

PSHELL	78	234	0.10	234		45			+ABC
--------	----	-----	------	-----	--	----	--	--	------

### Data Description:

Field	Contents	Type	Default
PID	Property ID number	Integer > 0	None
MID1	Material ID number for membrane material properties	Integer > 0 or blank	None
TM	Membrane thickness	Real or blank	0.
MID2	Material ID number for bending material properties	Integer > 0 or blank	None
12I/TM**3	Ratio of actual bending moment inertia (I) to bending inertia of a solid plate of thickness TM	Real or blank	1.0
MID3	Material ID number for transverse shear material properties	Integer > 0 or blank	None
TS/TM	Ratio of shear to membrane thickness	Real or blank	Remark 3
MPA	Mass per unit area	Real	0.
Z1, Z2	Distances from the neutral plane of the plate to locations where stress is calculated	Real	Remark 4

### Remarks:

1. PID must be unique among all PSHELL property entries
2. Continuation entry is not required. If Z1 and Z2 are not input, then stresses are calculated at +/-TM/2.
3. Default value for TS/TM is 5/6 = 0.83333 unless a PARAM Bulk data entry with parameter name TSTM\_DEF is in the data file, in which case the TSTM\_DEF value on the PARAM entry is used.

4. The following holds for the cases of MIDi blank:

If MID1 is blank, no membrane stiffness is calculated

If MID2 is blank, no bending or transverse shear stiffness is calculated

If MID3 is blank, no transverse shear flexibility is included (Kirchoff plate theory: plate is assumed infinitely stiff in transverse shear) so that normals to the mid-plane remain normal after bending)



# PSOLID

## 6.4.1.64 PSOLID

### Description:

Property definition for 3D solid elements

### Format:

1	2	3	4	5	6	7	8	9	10
PSOLID	PID	MID	CID	IN		ISOP			

### Examples:

PSOLID	987	234	23	3		FULL			
--------	-----	-----	----	---	--	------	--	--	--

### Data Description:

Field	Contents	Type	Default
PID	Property ID number	Integer > 0	None
MID1	Material ID number for membrane material properties	Integer > 0 or blank	None
CID	Material coordinate system ID	Integer or blank	0.
IN	Indicator for integration order (see table below)	Integer = 2,3	2
ISOP	Integration scheme (whether to use FULL or REDUCED integration)	Character	REDUCED

### Remarks:

1. See table below for values of IN and ISOP to use

**PSOLID entries IN and ISOP for solid elements – only use ones that have comment: OK**  
**(based on test runs by the author)**  
(bold, underline indicates default which can also be blank)

HEXA	Integration	IN	ISOP	Comments
8 node	<b><u>2x2x2 reduced shear</u></b>	<b><u>2</u></b>	<b><u>REDUCED</u></b>	OK
	2x2x2 standard isopar.	2	FULL or 1	(1)
	3x3x3 reduced shear	3	REDUCED	(1)
	3x3x3 standard isopar	3	FULL or 1	(1)
20 node	2x2x2 reduced shear	2	REDUCED	(2)
	2x2x2 standard isopar.	2	FULL or 1	OK
	<b><u>3x3x3 reduced shear</u></b>	<b><u>3</u></b>	<b><u>REDUCED</u></b>	OK
	3x3x3 standard isopar	3	FULL or 1	OK

PENTA	Integration	IN	ISOP	Comments
6 node	<b><u>2x3 reduced shear</u></b>	<b><u>2</u></b>	<b><u>REDUCED</u></b>	OK
	2x3 standard isopar.	2	FULL or 1	(1)
	3x7 reduced Shear	3	REDUCED	(1)
	3x7 standard isopar	3	FULL or 1	(1)
15 node	2x3 reduced shear	2	REDUCED	(2)
	2x3 standard isopar.	2	FULL or 1	OK
	<b><u>3x7 reduced shear</u></b>	<b><u>3</u></b>	<b><u>REDUCED</u></b>	OK
	3x7 standard isopar	3	FULL or 1	OK

TETRA	Integration	IN	ISOP	Comments
4 node	<b><u>1 point standard isopar</u></b>	<b><u>2</u></b>	<b><u>FULL</u></b>	(1)
	4 point standard isopar	3	FULL	(1)
10 node	1 point standard isopar		FULL	(2)
	<b><u>4 point standard isopar</u></b>	<b><u>3</u></b>	<b><u>FULL</u></b>	OK

Notes: (1) Answers degrade for aspect ratio (AR) above AR =1

(2) Answers are nonsense

OK means answers are good

Reduced integration is used for shear strains to avoid shear locking. For HEXA 2x2x2 and PENTA 2x3 integration it uses selective substitution. For HEXA 3x3x3 reduced integration it uses 2x2x2 for shear. For PENTA 3x7 reduced integration it uses 2x3 for shear

# PUSERIN

## 6.4.1.65 PUSERIN

### Description:

Property definition for CUSERIN elements

### Format:

1	2	3	4	5	6	7	8	9	10
PUSERIN	PID	IN4_ID	KNAME	MNAME	RBNAM	PNAME			

### Examples:

PUSERIN	101	95	KRRGN	MRRGN
---------	-----	----	-------	-------

### Data Description:

Field	Contents	Type	Default
PID	Property ID number	Integer > 0	None
IN4_ID	ID of an Exec Control IN4 entry that specifies the NASTRAN formatted INPUTT4 file containing the stiffness and mass matrices (whose name are KNAME, MNAME)	Integer > 0 or blank	None
KNAME	Name of the stiffness matrix which was written to the INPUTT4 file when it was created. This can be up to 8 characters long	Char	None
MNAME	Name of the mass matrix which was written to the INPUTT4 file when it was created. This can be up to 8 characters long	Char	None
RBNAM	Name of a 6x6 rigid body mass matrix which specifies the rigid body mass relative to the C.G. of the CUSERIN element in its basic coordinate system. This can be up to 8 characters long	Char	None
PNAME	Name of the load matrix which was written to the INPUTT4 file when it was created. This can be up to 8 characters long.	Char	None

### Remarks:

1. PID must be unique among all PUSERIN property entries
2. IN4\_ID is required. In the example above, an Exec Control entri IN4 with ID = 234 is required
3. The matrix whose name is RBNAM is not required. However, the rigid body mass properties (PARAM GRDPNT) for the overall model will be in error unless the element has the same basic coordinate system as the overall model.
4. The matrix whose name is PNAME is only used for statics solutions.

## RBE2

### 6.4.1.66 RBE2

#### Description:

Rigid element that has specified components at a number of grids dependent on the six degrees of freedom at one other grid.

#### Format:

1	2	3	4	5	6	7	8	9	10
RBE2	EID	GN	CM	GM1	GM2	GM3	GM4	GM5	+CONT
+CONT	GM6	GM7	(etc)						

#### Example:

RBE2	43	1021	346	1031	1033	1035	1041	1043	+REL01
+REL01	1045								

#### Data Description:

Field	Contents	Type	Default
EID	Element ID number	Integer > 0	None
GN	ID number of the grid that will have all 6 components as the 6 independent degrees of freedom for this rigid element	Integer > 0	None
CM	The component numbers of the dependent degrees of freedom at grid points GMi	Integers 1-6	None
GMi	The components CM at grids GMi are the dependent degrees of freedom that will be eliminated due to this rigid element	Integer > 0	None

#### Remarks:

1. No other element in the model may have the same element ID
2. All of the degrees of freedom defined by components CM at each of the grids GMi are made members of the M-set and their displacements will be rigidly dependent on the six degrees of freedom at grid GN.
6. Dependent degrees of freedom defined by RBE2 elements can not be defined as members of any other mutually exclusive set (i.e., cannot appear on SPC, SPC1, OMIT, OMIT1, ASET or ASET1 entries, nor can they appear as dependent degrees of freedom on other rigid elements)

# RBE3

## 6.4.1.67 RBE3

### Description:

Element used to distribute loads or mass from one grid point (denoted as the dependent grid) to other grids in the model. The element is defined based on the grids/components that it connects. The resulting multi-point constraints (MPC's) generated internally in MYSTRAN, will eliminate the dependent degrees of freedom and will distribute any loads or mass from the dependent grid to the remaining grids defined on the RBE3. Unlike the NASTRAN RBE3, the MYSTRAN RBE3 does not support the "UM" option at the current time

### Format:

1	2	3	4	5	6	7	8	9	10
RBE3	EID		REFGRID	REFC	WT1	C1	G1,1	G1,2	+1
+1	G1,3	WT2	C2	G2,1	G2,2	G2,3	G2,4	WT3	+2
+2	C3	G3,1	G3,2	etc					

### Example:

RBE3	43		9001	123456	1.0	123	1001	1002	+R1
+R1	1003	1004							

### Data Description:

Field	Contents	Type	Default
EID	Element ID number	Integer > 0	None
REFGRID	Grid that will be the dependent (or reference) grid	Integer > 0	None
REFC	The component numbers of the dependent degrees of freedom at grid point REFGRID	Integers 1-6	None
WTi	Weighting factors for the grids/components that follow	Real	None
Ci	Displacement components at the following Gi,j that have weighting factor WTi	Integers 1-6	None
Gi,j	Grids that REFGRID depend on	Integer > 0	None

### Remarks:

1. No other element in the model may have the same element ID
2. For most applications only the translation displacement components (1,2,3) should be defined for the Ci. If REFGRID and a Gi,j are coincident then rotation components (4,5,6) can be defined for Ci.
3. Dependent degrees of freedom defined by RBE3 elements can not be defined as members of any other mutually exclusive set (i.e., cannot appear on SPC, SPC1, OMIT, OMIT1, ASET or ASET1 entries, nor can they appear as dependent degrees of freedom on other rigid elements)

# RFORCE

## 6.4.1.68 RFORCE

### Description:

Defines rigid body rotational velocity, and optional rotational acceleration, of the model about some specified grid for the purpose of generating inertia forces on the finite element model.

### Format:

1	2	3	4	5	6	7	8	9	10
RFORCE	SID	GID	CID	V	N1	N2	N3		+RF1
+RF1	A								

### Example:

--	--	--	--	--	--	--	--	--	--

### Data Description:

Field	Contents	Type	Default
SID	Load set ID number (must be selected in Case Control)	Integer > 0	None
GID	ID of the grid at which this concentrated moment acts	Integer > 0	None
CID	ID of the coordinate system in which the Ni are specified	Integer >= 0	0
V	An overall scale factor for the angular velocity in revolutions per unit time	Real	0.
Ni	Components of a vector in the direction of the angular velocity and angular acceleration	Real	0.
A	An overall scale factor for the angular acceleration in revolutions per unit time squared	Real	0.

### Remarks:

- The force at grid i due to the angular velocity and acceleration is:

$$F_i = M_i \left( \ddot{r}_i + \ddot{r}_a \right)$$

where

$i$  = grid point

$M_i$  = 6x6 mass matrix at grid i

$\dot{\theta}$  = rigid body angular velocity of the model

$\ddot{\theta}$  = rigid body angular acceleration of the model

$r_i$  = distance from basic system origin to grid i

$r_a$  = distance from basic system origin to reference grid about which the model rotates

2. The load set ID (SID) is selected by the Case Control entry LOAD:
3. GID = 0 signifies that the rotation vector acts through the basic system origin.
4. CID = 0 indicates that the rotation vector is defined in the basic coordinate system

# RSPLINE

## 6.4.1.69 RSPLINE

### Description:

Interpolation element. A spline fit using the 2 independent end points (GI1, GI2) is applied to the locations of the dependent points (defined by GDi/CDi) to rigidly constrain the GDi/CDi

### Format:

1	2	3	4	5	6	7	8	9	10
RSPLINE	EID		GI1	GD1	CD1	GD2	CD2	GD3	+CONT
+CONT	CD3	GD4	CD4	etc	GI2				

### Example:

RBE2	43		1001	2001	123456	2002	123456	2003	+REL01
+REL01	123456	2004	123456	2005	123456	1002			

### Data Description:

Field	Contents	Type	Default
EID	Element ID number	Integer > 0	None
GIi	Grid numbers of the 2 independent end points	Integer > 0	None
GDi	Grid numbers of the dependent grtids	Integers > 0	None
CDi	Displacement component numbers at the GDi	Integer 1-6	None

### Remarks:

1. No other element in the model may have the same element ID
2. Displacements at the GDi are interpolated using the following rules applied to the line between the 2 end points:

Displacenment along the line and rotations about the line are linear

Displacements perpendicular to the line are cubic

Rotations normal to the line are quadratic



# SEQGP

## 6.4.1.70 SEQGP

### Description:

Manual re-sequencing of grids

### Format:

1	2	3	4	5	6	7	8	9	10
SEQGP	G1	S1	G2	S2	G3	S3	G4	S4	

### Example:

SEQGP	1001	1.5	1011	1.	1021	2.	1031	3.5	
-------	------	-----	------	----	------	----	------	-----	--

### Data Description:

Field	Contents	Type	Default
Gi	ID number of a grid point	Integer > 0	None
Si	The sequence number for Gi	Integer or Real > 0	None

### Remarks:

1. The SEQGP entry is used to manually re-sequence grids. See the Bulk Data PARAM GRIDSEQ entry for the starting sequence MYSTRAN uses in manual grid sequencing.
2. Either integer or real sequence numbers are allowed but all are converted to real internally. Thus, if the user has two grids sequenced consecutively, say with integer sequence numbers 10 and 11, then some other grid can be inserted in the sequence between the two with a real sequence number anywhere in the range:

$$10. < S_i < 11.$$

3. Up to four pairs of Gi, Si can be specified on one SEQGP entry. For more pairs, use additional SEQGP entries (i.e. there is no continuation entry for SEQGP).
4. If automatic grid point sequencing by BANDIT, any used defined SEQGP entries are ignored.

# SLOAD

## 6.4.1.71 SLOAD

### Description:

Defines the existence of a scalar load on a scalar point

### Format:

1	2	3	4	5	6	7	8	9	10	
SLOAD	SID	Si	FMAG							

### Example:

SPOINT	56	101	125.6						
--------	----	-----	-------	--	--	--	--	--	--

### Data Description:

Field	Contents	Type	Default
SID	Load set ID number	Integer > 0	None
Si	Scalar point ID	Integer > 0	None
FMAG	Magnitude of the force on scalar point Si	Real	0.

### Remarks:

1. In order for this load to be used in a static analysis the load set ID must either be selected in Case Control by LOAD = SID, or this load set ID must be referenced on a LOAD Bulk Data entry which itself is selected in Case Control.

# SPC

## 6.4.1.72 SPC

### Description:

Single point constraints that are defined by specifying the degree of freedom and its displacement (either zero or some enforced nonzero value)

### Format:

1	2	3	4	5	6	7	8	9	10
SPC	SID	G1	C1	D1	G2	C2	D2		

### Example:

SPC	56	101	3	1.2E-3	201	2	0.0		
-----	----	-----	---	--------	-----	---	-----	--	--

### Data Description:

Field	Contents	Type	Default
-------	----------	------	---------

# SPC1

## 6.4.1.73 SPC1

### Description:

Single point constraints that are defined by specifying the degree of freedom to be constrained to zero displacement.

### Format No. 1:

1	2	3	4	5	6	7	8	9	10
SPC1	SID	C	G1	G2	G3	G4	G5	G6	+CONT
+CONT	G7	G8	G9	(etc)					

### Format No. 2:

1	2	3	4	5	6	7	8	9	10
SPC1	SID	C	G1	THRU	G2				

### Examples:

SPC1	52	135	1001	1002	103	1004	2001	2002	+SZA
+SZA	2003	2004							

SPC1	52	135	1001	THRU	1004				
SPC1	52	135	2001	THRU	2004				

### Data Description:

Field	Contents	Type	Default
SID	ID number of the single point constraint set	Integer > 0	None
C	Component numbers at grids Gi that will be constrained	Integers 1-6	None
GI	ID numbers of the grids that will have component number Ci constrained	Integer > 0	None
DI	The value for the displacement at grid Gi, component Ci	Real	0.

### Remarks:

1. Single point constraint sets must be selected in Case Control with the entry SPC = SID in order for them to be applied.
2. Degrees of freedom defined on SPC entries will be members of the S-set and cannot be defined as being members of any other mutually exclusive set.
3. For format 2, all grids in the model that are in the range G1 through G2 will have component C constrained
4. A degree of freedom may be specified redundantly as a permanent single point constraint on a GRID Bulk Data entry and on an SPC or SPC1 Bulk Data entry.

# SPCADD

## 6.4.1.74 SPCADD

### Description:

Combine single point constraint sets defined on SPC, SPC1 entries

### Format:

1	2	3	4	5	6	7	8	9	10
SPCADD	SID	S1	S2	S3	S4	S5	S6	S7	+CONT
+CONT	S8	S9	(etc)						

### Example:

SPCADD	283	11	74	123	564				
--------	-----	----	----	-----	-----	--	--	--	--

### Data Description:

Field	Contents	Type	Default
SID	Single point constraint set ID number	Integer > 0	None
Si	Set IDs of SPC and/or SPC1 Bulk Data entries	Integer > 0	None

### Remarks:

1. Single point constraint sets must be selected in Case Control with the entry SPC = SID in order for them to be applied.
7. All single point constraints specified on the SPC and/or SPC1 entries whose set IDs are the Si on the SPCADD will be applied to the model if SPC = SID is in Case Control.

# SPOINT

## 6.4.1.75 SPOINT

### Description:

Defines the existence of a scalar point (1 component of displacement) in the model

### Format 1:

1	2	3	4	5	6	7	8	9	10
SPOINT	ID1	ID2	ID3	ID4	ID5	ID6	ID7	ID8	+S01
+S01	ID9	etc							

### Format 2:

1	2	3	4	5	6	7	8	9	10
SPOINT	ID1	THRU	ID2						

### Example:

SPOINT	56	101	3	1.2E-3	201	2	0.0		
--------	----	-----	---	--------	-----	---	-----	--	--

### Data Description:

Field	Contents	Type	Default
IDi	ID of an SPOINT	Integer > 0	None

### Remarks:

1. SPOINT ID's must be unique among all other SPOINT's and among all GRID's
2. SPOINT's are like GRID's but have only 1 component of displacement and their outputs are scalar, not vector, quantities. In the F06 output file, however, the output quantities are reported under the T1 headings.

# SUPPORT

## 6.4.1.76 SUPPORT

### Description:

Defines degrees of freedom that are to be in the R-set (for Craig-Bampton model generation)

### Format:

1	2	3	4	5	6	7	8	9	10
SUPPORT	GID	C	GID	C	GID	C	GID	C	

### Example:

SUPPORT	4981	12	695	123	5647	456			
---------	------	----	-----	-----	------	-----	--	--	--

### Data Description:

Field	Contents	Type	Default
GID	ID of a grid whose components in the next field will be put into the R-set	Integer > 0	None
C	Displacement component numbers (digits 1 through 6)	Integer > 0	None

### Remarks:

1. This Bulk Data entry is meant for use in Craig-Bampton analyses. The degrees of freedom specified on this entry will be treated the same as Single Point Constraints (SPC's) in all other analyses

# TEMP

## 6.4.1.77 TEMP

### Description:

Grid point temperature definition for purposes of calculating thermal loads on the model.

### Format:

1	2	3	4	5	6	7	8	9	10
TEMP	SID	G1	T1	G2	T2	G3	T3		

### Example:

TEMP	4	1011	25.	1012	32.	1013	28.		
------	---	------	-----	------	-----	------	-----	--	--

### Data Description:

Field	Contents	Type	Default
SID	ID number of the temperature set	Integer > 0	None
GI	ID numbers of the grids whose temperature is being defined	Integer > 0	None
Ti	Temperature of grid Gi	Real	0.

### Remarks:

1. Temperature sets must be selected in Case Control with the entry TEMP = SID in order for them to be used in calculating thermal loads
2. Every element in the model must have its temperature defined for set SID, either explicitly through an element temperature entry on TEMPRB, TEMPP1 Bulk Data entry or implicitly using grid temperatures on TEMP, TEMPD Bulk Data entries. Element temperatures defined on element TEMPRB, TEMPP1 entries take precedence over any that might be defined using grid temperatures. If no element temperature is explicitly defined, the element temperature is taken to be the average of the temperatures of the grids to which the element is connected.
3. Thermal loads for the model are calculated using element temperatures defined via TEMP, TEMPD, TEMPRB, TEMPP1 Bulk data entries, the element properties and the material properties (including coefficient of thermal expansion and reference temperature). The thermal loads calculated are based on element temperatures that are the difference between those defined on TEMP, TEMPD, TEMPRB, TEMPP1 and the reference temperature defined on the material entry for the element.
4. Only three grids may have their temperature defined for set SID in one TEMP entry. Additional grid temperatures can be specified using more TEMP Bulk Data entries with the same SID.



# TEMPD

## 6.4.1.78 TEMPD

### Description:

Default grid point temperature definition for purposes of calculating thermal loads on the model.

### Format:

1	2	3	4	5	6	7	8	9	10
TEMP	SID1	T1	SID2	T2	SID3	T3	SID4	T4	

### Example:

TEMP	4	46.2	33	52.1					
------	---	------	----	------	--	--	--	--	--

### Data Description:

Field	Contents	Type	Default
SIDi	ID number of a temperature set	Integer > 0	None
Ti	The default temperature for grids for set SIDi	Real	0.

### Remarks:

1. Temperature sets must be selected in Case Control with the entry TEMP = SID in order for them to be used in calculating thermal loads
2. All grids whose temperature is not defined on a TEMP Bulk Data entry will have the default temperature T, if there is one defined on a TEMPD for set SID.
3. Every element in the model must have its temperature defined for set SID, either explicitly through an element temperature entry on TEMPRB, TEMPP1 Bulk Data entry or implicitly using grid temperatures on TEMP, TEMPD Bulk Data entries. Element temperatures defined on element TEMPRB, TEMPP1 entries take precedence over any that might be defined using grid temperatures. If no element temperature is explicitly defined, the element temperature is taken to be the average of the temperatures of the grids to which the element is connected.
4. Thermal loads for the model are calculated using element temperatures defined via TEMP, TEMPD, TEMPRB, TEMPP1 Bulk data entries, the element properties and the material properties (including coefficient of thermal expansion and reference temperature). The thermal loads calculated are based on element temperatures that are the difference between those defined on TEMP, TEMPD, TEMPRB, TEMPP1 and the reference temperature defined on the material entry for the element.
5. Only four pairs of SIDi/Ti may be defined on one TEMPD entry. Additional pairs can be specified using more TEMPD Bulk Data entries.

# TEMPP1

## 6.4.1.79 TEMPP1

### Description:

Defines temperatures and temperature gradients for 2D plate elements.

### Format No. 1:

1	2	3	4	5	6	7	8	9	10
TEMPP1	SID	EID1	TBAR	TPRIME					+CONT
+CONT	EID2	EID3	EID4	EID5	(etc)				

### Format No. 2:

1	2	3	4	5	6	7	8	9	10
TEMPP1	SID	EID1	TBAR	TPRIME					+CONT
+CONT	EID2	THRU	EID3	EID4	THRU	EID5			

### Examples:

TEMPP1	13	2101	35.7	10.1					+TP1
+TP1	2679	3201	1104	32	5555				

TEMPP1	13	2101	35.7	10.1					+TP1
+TP1	2304	THRU	6789	12	THRU	46			

### Data Description:

Field	Contents	Type	Default
SID	ID number of the temperature set	Integer > 0	None
EID <sub>i</sub>	Element ID numbers	Integer > 0	None
TBAR	Average temperature of the element	Real	0.
TPRIME	Linear thermal gradient through the thickness of the element	Real	0.

### Remarks:

- Any number of continuation entries can be used
- For format number 2, the THRU ranges must have the second element ID greater than the first.
- Temperature sets must be selected in Case Control with the entry TEMP = SID in order for them to be used in calculating thermal loads.
- Every element in the model must have its temperature defined for set SID, either explicitly through an element temperature entry on TEMPRB, TEMPP1 Bulk Data entry or implicitly using grid temperatures on TEMP, TEMPD Bulk Data entries. Element temperatures defined on element TEMPRB, TEMPP1 entries take precedence over any that might be defined using grid temperatures.

If no element temperature is explicitly defined, the element temperature is taken to be the average of the temperatures of the grids to which the element is connected.

5. Thermal loads for the model are calculated using element temperatures defined via TEMP, TEMPD, TEMPRB, TEMPP1 Bulk data entries, the element properties and the material properties (including coefficient of thermal expansion and reference temperature). The thermal loads calculated are based on element temperatures that are the difference between those defined on TEMP, TEMPD, TEMPRB, TEMPP1 and the reference temperature defined on the material entry for the element.

# TEMPRB

## 6.4.1.80 TEMPRB

### Description:

Defines temperatures and temperature gradients for 1D bar elements.

### Format No. 1:

1	2	3	4	5	6	7	8	9	10
TEMPRB	SID	EID1	TA	TB	TP1A	TP1B	TP2A	TP2B	+CONT
+CONT	EID2	EID3	EID4	EID5	(etc)				

### Format No. 2:

1	2	3	4	5	6	7	8	9	10
TEMPRB	SID	EID1	TA	TB	TP1A	TP1B	TP2A	TP2B	+CONT
+CONT	EID2	THRU	EID3	EID4	THRU	EID5			

### Examples:

TEMPRB	13	2101	35.7	10.1					+TP1
+TP1	67	89	2	13	1	789			

TEMPRB	13	2101	35.7	10.1					+TP1
+TP1	68	THRU	97	2101	THRU	4009			

### Data Description:

Field	Contents	Type	Default
SID	ID number of the temperature set	Integer > 0	None
EIDi	Element ID numbers	Integer > 0	None
TA	Average temperature of the element at end a	Real > 0.	0.
TB	Average temperature of the element at end b	Real > 0.	0.
TP1A	Linear temperature gradient in element y axis at end a	Real	0.
TP1B	Linear temperature gradient in element y axis at end b	Real	0.
TP2A	Linear temperature gradient in element z axis at end a	Real	0.
TP2B	Linear temperature gradient in element z axis at end b	Real	0.

### Remarks:

1. Any number of continuation entries can be used
2. For format number 2, the THRU ranges must have the second element ID greater than the first
3. Temperature sets must be selected in Case Control with the entry TEMP = SID in order for them to be used in calculating thermal loads

4. Every element in the model must have its temperature defined for set SID, either explicitly through an element temperature entry on TEMPRB, TEMPP1 Bulk Data entry or implicitly using grid temperatures on TEMP, TEMPD Bulk Data entries. Element temperatures defined on element TEMPRB, TEMPP1 entries take precedence over any that might be defined using grid temperatures. If no element temperature is explicitly defined, the element temperature is taken to be the average of the temperatures of the grids to which the element is connected.
5. Thermal loads for the model are calculated using element temperatures defined via TEMP, TEMPD, TEMPRB, TEMPP1 Bulk data entries, the element properties and the material properties (including coefficient of thermal expansion and reference temperature). The thermal loads calculated are based on element temperatures that are the difference between those defined on TEMP, TEMPD, TEMPRB, TEMPP1 and the reference temperature defined on the material entry for the element.
6. The average temperatures TA and TB at ends a and b respectively are:

$$T_A = \frac{1}{A} \int_A T_a(y,z) dA$$

$$T_B = \frac{1}{A} \int_A T_b(y,z) dA$$

where A is the cross-sectional area and  $T_a(y,z)$  and  $T_b(y,z)$  are the temperature distributions at ends a and b respectively.

7. The linear gradients through the thickness, TP1A, TP1B, TP2A and TP2B, are:

$$TP1A = \frac{1}{I_1} \int_A T_a(y,z) y dA$$

$$TP1B = \frac{1}{I_1} \int_A T_b(y,z) y dA$$

$$TP2A = \frac{1}{I_2} \int_A T_a(y,z) z dA$$

$$TP2B = \frac{1}{I_2} \int_A T_b(y,z) z dA$$

where  $I_1$  and  $I_2$  are the bending moments of inertia for the bar (on the PBAR entry) and  $T_a(y,z)$  and  $T_b(y,z)$  are the temperature distributions at ends a and b respectively.

# USET

## 6.4.1.81 USET

### Description:

Defines a set of degrees of freedom that belong to a user defined set (named either "U1" or "U2"). The purpose is for the user to get an output listing that defines the internal degree of freedom order for the members of the set.

### Format:

1	2	3	4	5	6	7	8	9	10
USET	NAME	G1	C1	G2	C2	G3	C3		

### Example:

USET	U1	101	3	201	2				
------	----	-----	---	-----	---	--	--	--	--

### Data Description:

Field	Contents	Type	Default
NAME	A user defined set. The name must be either "U1" or "U2"	Char	None
GI	ID numbers of the grids that the user wants to be members of the set	Integer > 0	None
CI	Component numbers at grid Gi that will be members of the set	Integers 1-6	None

### Remarks:

1. The Gi, Ci are defined as members of the displacement set named SNAME.
2. A row oriented tabular output showing the internal sort order of the members of the set (named SNAME) can be output if a PARAM, USETSTR, Ui Bulk Data entry is present (I = 1 or 2).
3. In order to get a listing of the internal sort order, a Bulk Data PARAM, USETSTR, Ui (i=1 or 2) must be included

# USET1

## 6.4.1.82 USET1

### Description:

Defines a set of degrees of freedom that belong to a user defined set (named either "U1" or "U2"). The purpose is for the user to get an output listing that defines the internal degree of freedom order for the members of the set.

### Format No. 1:

1	2	3	4	5	6	7	8	9	10
USET1	SNAME	C	G1	G2	G3	G4	G5	G6	+CONT
+CONT	G7	G8	G9	(etc)					

### Format No. 2:

1	2	3	4	5	6	7	8	9	10
USET1	SNAME	C	G1	THRU	G2				

### Examples:

USET1	U2	135	1001	1002	103	1004	2001	2002	+SZA
+SZA	2003	2004							

USET1	U2	135	1001	THRU	1004				
-------	----	-----	------	------	------	--	--	--	--

### Data Description:

Field	Contents	Type	Default
SNAME	A user defined set. The name must be either "U1" or "U2"	Char	None
GI	ID numbers of the grids that are members of the user defined set	Integers 1-6	None
C	Component numbers at grids Gi that are part of the user defined set	Integer > 0	None

### Remarks:

1. The Gi, C are defined as members of the displacement set named SNAME.
2. A row oriented tabular output showing the internal sort order of the members of the set (named SNAME) can be output if a PARAM, USETSTR, Ui Bulk Data entry is present (I = 1 or 2).
3. In order to get a listing of the internal sort order, a Bulk Data PARAM, USETSTR, Ui (i=1 or 2) must be included