



cFS Basecamp Hello Table Coding Lessons




Version 2.7
July 2025

- These slides provide guidance for doing the Hello Table coding tutorial exercises
- The “Hello App Designs” section in Basecamp’s *Application Developer’s Guide* provides design information for all of Hello App coding tutorials
 - Having all of the design information in one place makes the developer’s guide flow better
 - It should be used in conjunction with this guide
- The Hello Table app template adds an example table to the Hello Object application
 - The coding exercises introduce developer’s to the Basecamp’s JSON table design strategy and operations
- Prerequisites
 - Completed Hello Object coding tutorial and met its prerequisites

Objectives

- Learn how a JSON table parameter is stored, parsed during a load command, and written to a dump file
- The following files are modified in this lesson
 - Note how object encapsulation limits the change to the table files

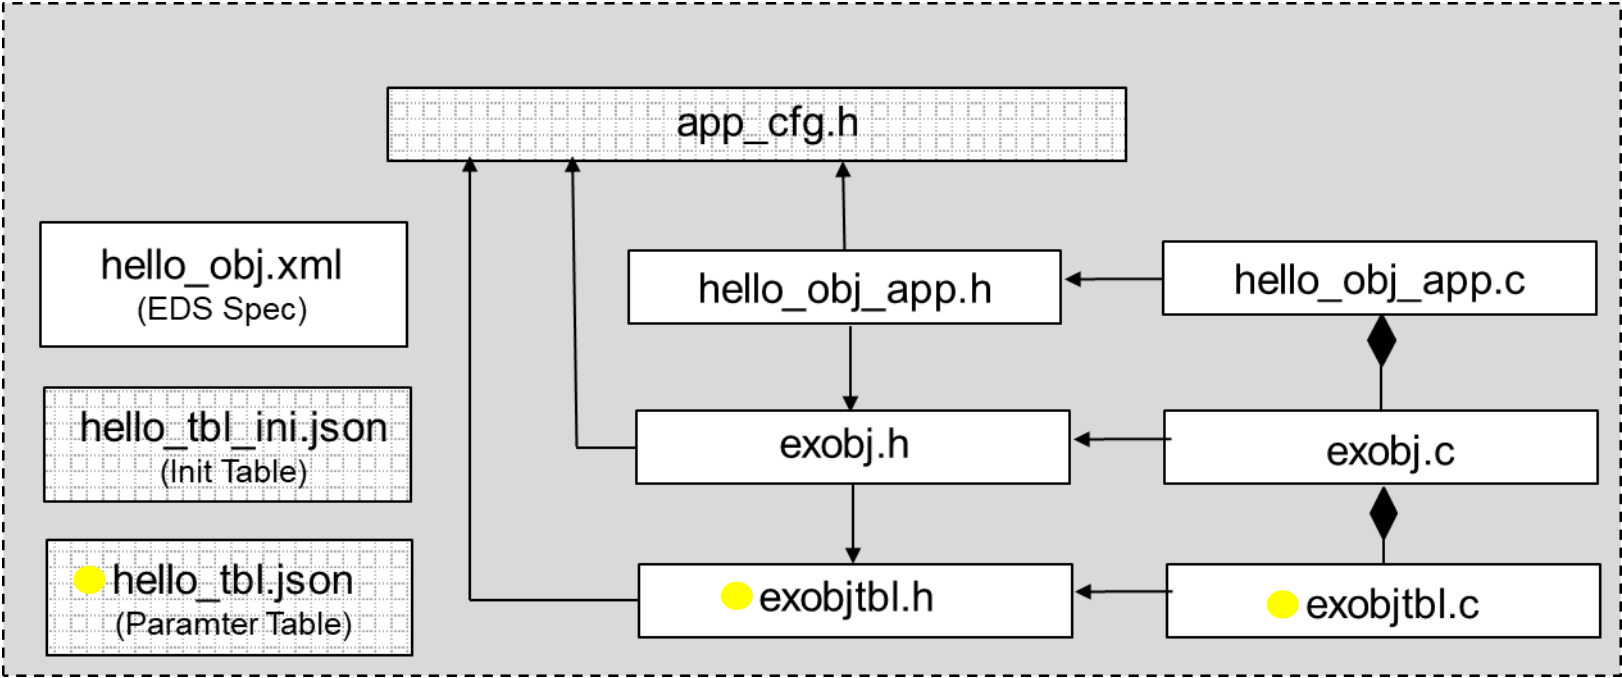

hello_tbl.json

- Add a new parameter “limit-range-max” to the end of the table

```
"decrement":
{
  "low-limit": 50,
  "high-limit": 99
},
"limit-range-max": 100
```

exobjtbl.h

- Table objects provide local storage that is used during a table load
- After a table is loaded and optionally validated, the data is copied into the storage of the object that owns the table

```
typedef struct
{
  EXOBJTBL_Limit_t IncrLimit;
  EXOBJTBL_Limit_t DecrLimit;
  uint16          LimitRangeMax;
} EXOBJTBL_Data_t;
```

exobjtbl.c

- Table file contain the following declaration `static CJSON_Obj_t JsonTblObjs[]` that is used during a table load to instruct the JSON parser how to parse the JSON object and where to store the result
- Table dumps require the developer to hand code print statements to write the JSON objects to a file

- 1. Use the main screen's cFS Build button to build the target**
 - Only existing files changed, so no need to perform a Build New
- 2. Since the EDS was not modified, the GUI does not need to be restarted**
- 3. The following slides describe how to verify the new table parameter**

1. Issue a DumpTbl command to a filename other than the default table name

Send HELLO_TBL/Application/CMD Telecommand

Command: DumpTbl

Parameter Name	Type	Value
Id	HELLO_TBL/TblId	Limits
Unused	BASE_TYPES/uint8	0
Filename	BASE_TYPES/PathName	/cf/temp.json

2. You should see an event message indicating the table was written to the commanded filename

```
EVS Port1 66/1/HELLO_TBL 26: Successfully dumped table 0 to file /cf/temp.json
```


3. Transfer the file to the ground and open it with a text editor

- The values should be identical with the hello_tbl.json values

```
"decrement":
{
  "low-limit": 50,
  "high-limit": 99
},
"limit-range-max": 100
```

Objectives

- Learn how to supply a table load validation function
- The following files are modified in this lesson
 - Note only exobj needs to change because it has the contextual knowledge of how the table parameters are used

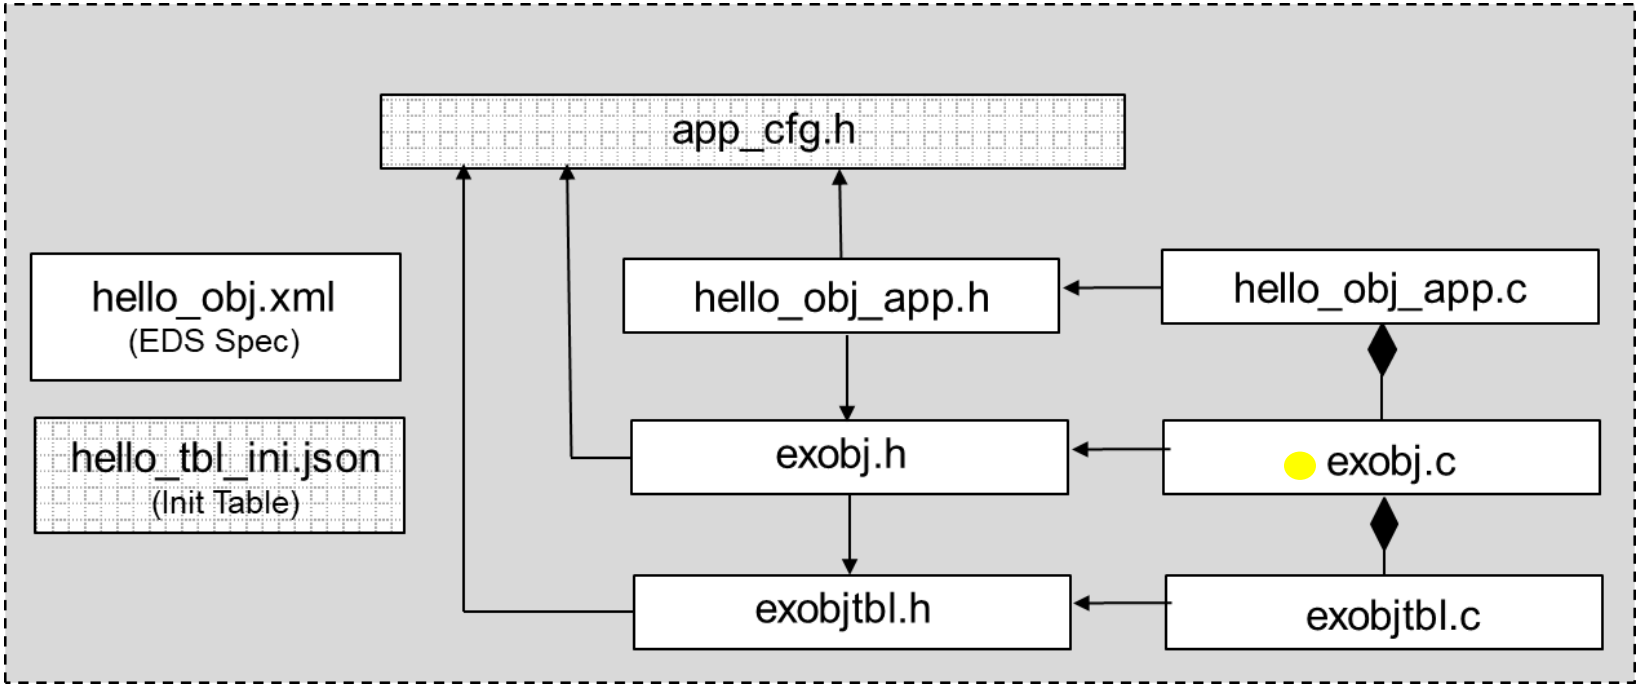

exobj.c

- A pointer to the table validation function is passed to the EXOBJTBL's constructor
 - EXOBJTBL_Constructor(&ExObj->Tbl, IniTbl, AcceptNewTable);
 - This function is called as part of the table load command
- The new validation logic ensures a the table range limits are within the maximum allowed

- 1. Use the main screen's cFS Build button to build the target**
 - Only existing files changed, so no need to perform a Build New
- 2. Since the EDS was not modified, the GUI does not need to be restarted**
- 3. The following slides describe how to verify the new table parameter**

1. Edit the temp.json dump file created in lesson one with an invalid range such as this one

```
"decrement":
{
  "low-limit": 50,
  "high-limit": 199
},
"limit-range-max": 100
```

2. Issue a LoadTbl command

Send HELLO_TBL/Application/CMD Telecommand

Command LoadTbl

Parameter Name	Type	Value
Id	HELLO_TBL/TblId	Limits
Type	APP_C_FW/TblLoadOpti	REPLACE
Filename	BASE_TYPES/PathName	/cf/temp.json

3. You should see an error event message stating the table load failed
- Note the TBLMGR service incorrectly reports the last table load was valid. This bug is captured in issue #59

EVS Port1 66/1/HELLO_TBL 122: Table rejected. Maximum range 100 exceeded. Increment: Low 0, High 49, Decrement: Low 50, High 199