

密级状态： 绝密( ) 秘密( ) 内部资料( ) 公开( √)  
Security Class: Top-Secret ( ) Secret ( ) Internal ( ) Public ( √)

## RK3288(W-Version)\_ANDROID8.1\_SDK 发布说明

### RK3288(W-Version)\_ANDROID8.1\_SDK\_Release\_Instruction

(技术部, 第二系统产品部)

(Technical Department, R & D Dept. II)

<b>文件状态:</b> <b>Status:</b> [ ] 草稿 [ ] Draft [ ] 正在修改 [ ] Modifying [√] 正式发布 [ √ ] Released	<b>文件标识:</b> <b>File No.:</b>	RK-FB-YF-231
	<b>当前版本:</b> <b>Current Version:</b>	V1.00
	<b>作 者:</b> <b>Author:</b>	陈锦森 Chen Jinsen
	<b>完成日期:</b> <b>Finish Date:</b>	2018-05-08
	<b>审 核:</b> <b>Auditor:</b>	刘益星/陈海燕 Liu Yixing/Chen Haiyan
	<b>审核日期:</b> <b>Finish Date:</b>	2018-05-08



## 免责声明

本文档按“现状”提供，福州瑞芯微电子股份有限公司（“本公司”，下同）不对本文档的任何陈述、信息和内容的准确性、可靠性、完整性、适销性、特定目的性和非侵权性提供任何明示或暗示的声明或保证。本文档仅作为使用指导的参考。

由于产品版本升级或其他原因，本文档将可能在未经任何通知的情况下，不定期进行更新或修改。

## Disclaimer

THIS DOCUMENT IS PROVIDED “AS IS”. FUZHOU ROCKCHIP ELECTRONICS CO., LTD. (“ROCKCHIP”) DOES NOT PROVIDE ANY WARRANTY OF ANY KIND, EXPRESSED, IMPLIED OR OTHERWISE, WITH RESPECT TO THE ACCURACY, RELIABILITY, COMPLETENESS, MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY REPRESENTATION, INFORMATION AND CONTENT IN THIS DOCUMENT. THIS DOCUMENT IS FOR REFERENCE ONLY. THIS DOCUMENT MAY BE UPDATED OR CHANGED WITHOUT ANY NOTICE AT ANY TIME DUE TO THE UPGRADES OF THE PRODUCT OR ANY OTHER REASONS.

## 商标声明

“Rockchip”、“瑞芯微”、“瑞芯”均为本公司的注册商标，归本公司所有。

本文档可能提及的其他所有注册商标或商标，由其各自拥有者所有。

## Trademark Statement

“Rockchip”、“瑞芯微”、“瑞芯” shall be Rockchip’s registered trademarks and owned by Rockchip. All the other trademarks or registered trademarks mentioned in this document shall be owned by their respective owners.

## 版权所有 © 2019 福州瑞芯微电子股份有限公司

超越合理使用范畴，非经本公司书面许可，任何单位和个人不得擅自摘抄、复制本文档内容的部分或全部，并不得以任何形式传播。

## Copyright © 2019 Fuzhou Rockchip Electronics Co., Ltd.

Beyond the scope of fair use, neither any entity nor individual shall extract, copy, or distribute this document in any form in whole or in part without the written approval of Rockchip.

福州瑞芯微电子股份有限公司

Fuzhou Rockchip Electronics Co., Ltd.

地址：福建省福州市铜盘路软件园 A 区 18 号

网址：[www.rock-chips.com](http://www.rock-chips.com)

客户服务电话：+86-4007-700-590

客户服务传真：+86-591-83951833

客户服务邮箱：[fae@rock-chips.com](mailto:fae@rock-chips.com)

Fuzhou Rockchip Electronics Co., Ltd.

Address: No. 18 Building, A District, No.89, software Boulevard Fuzhou, Fujian, PRC

Website: [www.rock-chips.com](http://www.rock-chips.com)

Customer service Tel.: +86-4007-700-590

Customer service Fax: +86-591-83951833

Customer service e-mail: [fae@rock-chips.com](mailto:fae@rock-chips.com)

版本历史 Revision History

版本号 Version no.	作者 Author	修改日期 Revision Date	修改说明 Revision description	备注 Remark
V1.00	陈锦森 Chen Jinsen	2018.05.08	初始版本 Initial version release	

## 目 录 Contents

1	概述 OVERVIEW.....	1
2	主要支持功能 MAIN FUNCTIONS.....	1
3	SDK 获取说明 SDK ACQUISITION.....	1
3.1	获取 SDK HOW TO ACQUIRE SDK.....	1
3.2	补充说明 ADDITIONAL REMARKS.....	2
4	SDK 编译说明 SDK COMPILATION INSTRUCTION.....	3
4.1	JDK 安装 JDK INSTALLATION.....	3
4.2	编译模式 COMPILING MODE.....	3
4.3	代码编译 CODE COMPILATION.....	3
4.3.1	uboot 编译步骤 uboot compiling steps.....	3
4.3.2	kernel 编译步骤 kernel compiling steps.....	4
4.3.3	Android 编译及固件生成步骤 Android compiling and image build steps.....	4
4.4	刷机说明 FLASHING INSTRUCTION.....	5
附录 A	编译开发环境搭建 COMPILING AND DEVELOPMENT ENVIRONMENT SETUP.....	7
附录 B	SSH 公钥操作说明 SSH PUBLIC KEY OPERATION INSTRUCTION.....	10
附录 B-1	SSH 公钥生成 SSH PUBLIC KEY GENERATION.....	10
附录 B-2	使用 KEY-CHAIN 管理密钥 USE KEY-CHAIN TO MANAGE THE KEYS.....	11
附录 B-3	多台机器使用相同 SSH 公钥 MULTIPLE DEVICES USE THE SAME SSH PUBLIC KEY.....	11
附录 B-4	一台机器切换不同 SSH 公钥 SWITCH DIFFERENT SSH PUBLIC KEYS ON ONE DEVICE...	12
附录 B-5	密钥权限管理 KEY AUTHORITY MANAGEMENT.....	14
附录 B-6	Git 权限申请说明 GIT AUTHORITY APPLICATION INSTRUCTION.....	14

## 1 概述 Overview

本 SDK 是基于谷歌 Android8.1 系统，适配瑞芯微 RK3288(W 版本)芯片软件包，适用基于 RK3288(W 版本)芯片平台开发的产品。旧 RK3288 芯片不支持 8.1 系统。

This SDK is compatible with Rockchip RK3288(W-Version) chipset software package based on Google Android8.1 system. It is suitable for the product development based on RK3288(W-Version) chipset platform. The old version of RK3288 chipset cannot support Android8.1 system.

注：本 SDK 软件包仅支持 RK3288(W 版本)芯片，不支持旧 RK3288 芯片。

Note: This SDK software package only supports RK3288(W-Version) chipset, and doesn't support older version of RK3288 chipset.

## 2 主要支持功能 Main Functions

参数 Parameter	模块名 Module Names
数据通信 Data communication	Wi-Fi、USB 以太网卡、USB、SDCARD Wi-Fi、USB Ethernet card、USB、SDCARD
应用程序 Application	Launcher3、APK 安装器、浏览器、计算器、日历、相机、闹钟、下载、电子邮件、资源管理器、GMS 应用、音乐、录音、设置、视频播放器 Launcher3, APK installer, browser, calculator, calendar, camera, clock, download, e-mail, resource manager, GMS application, music, audio recorder, setting, video player

## 3 SDK 获取说明 SDK Acquisition

### 3.1 获取 SDK How to acquire SDK

SDK 通过瑞芯微代码服务器对外发布。其编译开发环境，参考[附录 A 编译开发环境搭建](#)。

SDK is released through Rockchip code server. Please refer to [Appendix A](#) to setup the compiling and development environment.

客户向瑞芯微技术窗口申请 SDK，需同步提供 SSH 公钥进行服务器认证授权，获得授权后即可同步代码。关于瑞芯微代码服务器 SSH 公钥授权，请参考[附录 B SSH 公钥操作说明](#)。

Customers apply SDK from Rockchip FAE contact, and will be able to sync code after obtaining the server certificate authorization with SSH public key. For more details about Rockchip code server SSH public key authorization, please refer to [Appendix B SSH public key operation instruction](#).

RK3288(W-Version)\_ANDROID8.1\_MID\_SDK 下载地址如下：

**RK3288(W-Version)\_ANDROID8.1\_MID\_SDK download address is as below:**

```
repo init --repo-url=ssh://git@www.rockchip.com.cn:2222/repo-release/tools/repo.git -u
ssh://git@www.rockchip.com.cn:2222/Android_oreo_stable/platform/rk3288/manifests.git -m
Rk3288_Android_Oreo_release.xml
```

**如果需要包含 GMS 包的 SDK(需要另外开通权限)，使用如下地址：**

**If need SDK with GMS which requires additional authority, use the address as below:**

```
repo init --repo-url=ssh://git@www.rockchip.com.cn:2222/repo-release/tools/repo.git -u
ssh://git@www.rockchip.com.cn:2222/Android_oreo_stable/platform/rk3288/manifests.git -m
Rk3288_Android_Oreo_express_release.xml
```

注，repo 是 google 用 Python 脚本写的调用 git 的一个脚本，主要是用来下载、管理 Android 项目的软件仓库，其下载地址如下：

Note: repo is a script invoking git developed by Google using Python script, and mainly used to download, manage Android project software lib. The download address is as below:

```
git clone ssh://git@www.rockchip.com.cn:2222/repo-release/tools/repo
```

为方便客户快速获取 SDK 源码，瑞芯微技术窗口通常会提供对应版本的 SDK 初始压缩包。以 Rk3288\_Android\_Oreo\_release\_201805012.tar.gz 为例，拷贝到该初始化包后，通过如下命令可检出源码：

Generally, Rockchip FAE contact will provide the initial compressed package of the corresponding version SDK in order to help customers acquire SDK source code quickly. Take Rk3288\_Android\_Oreo\_release\_201805012.tar.gz as an example, you can sync the source code through the following command after getting the initial package:

```
mkdir RK3288
tar zxvf Rk3288_Android_Oreo_release_201805012.tar.gz -C RK3288
cd RK3288
.repo/repo/repo sync -l
.repo/repo/repo sync
```

## 3.2 补充说明 Additional remarks

Android8.1 SDK 已不再支持 UMS 功能，平台设备皆使用合并分区；

Android8.1 SDK does not support UMS function any more, and all the devices use combined partition.

Android8.1 SDK 已支持文件加密功能；

Android8.1 SDK already supports file base encryption function.

Android8.1 SDK 已支持 Verified boot 的功能。

Android8.1 SDK already supports Verified boot function.

## 4 SDK 编译说明 SDK compilation instruction

### 4.1 JDK 安装 JDK installation

Android8.1 系统编译依赖于 JAVA 8。编译之前需安装 OpenJDK。

Android8.1 system compiling is dependent on JAVA 8. Need to install OpenJDK before compiling.

安装命令如下。

Install command is as below:

```
sudo apt-get install openjdk-8-jdk
```

配置 JAVA 环境变量，例如，安装路径为/usr/lib/jvm/java-8-openjdk-amd64，可在终端执行如下命令配置环境变量。

Configure JAVA environment variable, for example, if the install path is /usr/lib/jvm/java-8-openjdk-amd64, it is able to execute the following command to configure the environment variable at the terminal.

```
export JAVA_HOME=/usr/lib/jvm/java-8-openjdk-amd64
export PATH=$JAVA_HOME/bin:$PATH
export CLASSPATH=.:$JAVA_HOME/lib:$JAVA_HOME/lib/tools.jar
```

### 4.2 编译模式 Compiling mode

SDK 默认以 userdebug 模式编译。

SDK default compiling mode is userdebug.

使用 adb 时，需要先执行 adb root 使 shell 获取 root 权限，进而执行其它像 adb remount、adb push 等操作，其中 adb remount 前要先 disable-verity，执行 adb disable-verity

When using adb, first need to execute adb root to make shell acquire root authority, and then execute other operations such as adb remount, adb push, and so on. Need to first execute adb disable-verity for disable-verity before adb remount.

### 4.3 代码编译 Code compilation

#### 4.3.1 uboot 编译步骤 uboot compiling steps

```
cd u-boot
make clean
make rk3288_secure_defconfig
./mkv7.sh
```

编译完，会生成



After compiling, it will generate three files:

trust.img

rk3288\_loader\_vx\_xx\_xxx bin

uboot.img

三个文件。

### 4.3.2 kernel 编译步骤 kernel compiling steps

RK3288(W-Version) EVB 样机配置与编译如下:

The configuration and compilation of RK3288(W-Version) EVB are as below:

```
cd kernel
make ARCH=arm rockchip_defconfig
make ARCH=arm rk3288-evb-android-rk808-edp.img -j12
```

编译完，会生成:

After compiling, it will generate two files:

kernel.img, resource.img

### 4.3.3 Android 编译及固件生成步骤 Android compiling and image build steps

客户按实际编译环境配置好 JDK 环境变量后，按照以下步骤配置完后，执行 make 即可。

Customers configure JDK environment variable per the following steps according to the actual compiling environment, and then execute make.

```
$ source build/envsetup.sh
$ lunch
You're building on Linux
Lunch menu... pick a combo:
  1. aosp_arm-eng
  2. aosp_arm64-eng
  3. aosp_mips-eng
  4. aosp_mips64-eng
  5. aosp_x86-eng
  6. aosp_x86_64-eng
  7. rk3288-userdebug
  8. rk3288-user
选择 rk3288-userdebug，输入对应序号 7。
Select rk3288-userdebug, input the corresponding serial number 7.
$ make -j12
```

完成编译后，执行 SDK 根目录下的 mkimage.sh 脚本生成固件，所有烧写所需的镜像将都会拷贝于 rockdev/Image-rk3288 目录。

After compilation, execute mkimage.sh script under SDK root directory to generate images. All the mirror files required for flashing will be copied to rockdev/Image-rk3288 directory.

```
rockdev/Image-rk3288
├── boot.img
├── kernel.img
├── MiniLoaderAll.bin
├── misc.img
├── oem.img
├── parameter.txt
├── pcba_small_misc.img
├── pcba_whole_misc.img
├── recovery.img
├── resource.img
├── system.img
├── trust.img
├── uboot.img
└── vendor.img
```


得到所有镜像文件后，为了方便烧写及量产，通常可手动将这些单独的镜像通过脚本打包成为 update.img。

After acquiring all the mirror files, usually you can manually use the script to package them as update.img which is convenient for flashing and MP.

## 4.4 刷机说明 Flashing instruction

SDK 提供烧写工具，如下图所示，版本为 2.47。编译生成相应的固件后，进入 loader 模式，即可进行刷机。对于已烧过其它固件的机器，请选择低格设备，擦除 idb，然后进行刷机。

SDK provides the flashing tool with version 2.47 shown as below picture. After compiling to generate the corresponding images, enter loader mode, and then you can flash the images. For those devices with existing images, please select to format the device, erase idb, and then flash the images.

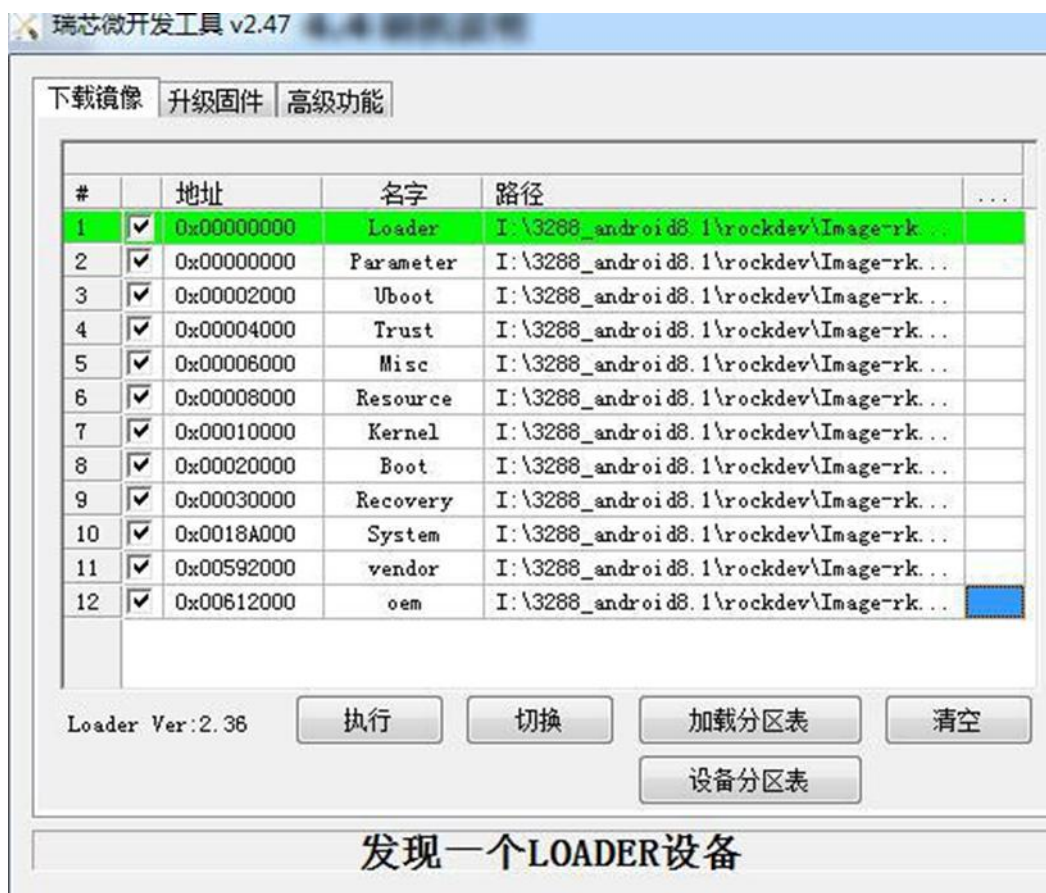

注：烧写工具必须使用 2.47 及以上版本的工具，量产工具使用 1.6 及以上版本；linux 下的烧写工具使用 1.31 及以上版本。

Note: The flashing tool version must be 2.47 or higher, and the MP tool version must be 1.6 or higher. Linux flashing tool version must be 1.31 or higher.

## 附录 A 编译开发环境搭建 **Compiling and development environment setup**

### **1. Initializing a Build Environment**

This section describes how to set up your local work environment to build the Android source files. You must use Linux or Mac OS; building under Windows is not currently supported.

For an overview of the entire code-review and code-update process, see Life of a Patch.

Note: All commands in this site are preceded by a dollar sign (\$) to differentiate them from output or entries within files. You may use the Click to copy feature at the top right of each command box to copy all lines without the dollar signs or triple-click each line to copy it individually without the dollar sign.

### **2. Choosing a Branch**

Some requirements for the build environment are determined by the version of the source code you plan to compile. For a full list of available branches, see Build Numbers. You can also choose to download and build the latest source code (called master), in which case you will simply omit the branch specification when you initialize the repository.

After you have selected a branch, follow the appropriate instructions below to set up your build environment.

### **3. Setting up a Linux build environment**

These instructions apply to all branches, including master.

The Android build is routinely tested in house on recent versions of Ubuntu LTS (14.04) and Debian testing. Most other distributions should have the required build tools available.

For Gingerbread (2.3.x) and newer versions, including the master branch, a 64-bit environment is required. Older versions can be compiled on 32-bit systems.

Note: See Requirements for the complete list of hardware and software requirements, then follow the detailed instructions for Ubuntu and Mac OS below.

### **4. Installing the JDK**

The master branch of Android in the Android Open Source Project (AOSP) comes with prebuilt versions of OpenJDK below prebuilts/jdk/ so no additional installation is required.

Older versions of Android require a separate installation of the JDK. On Ubuntu, use OpenJDK. See JDK Requirements for precise versions and the sections below for instructions.

#### **For Ubuntu >= 15.04**

Run the following:

```
sudo apt-get update
```

```
sudo apt-get install openjdk-8-jdk
```

#### **For Ubuntu LTS 14.04**

There are no available supported OpenJDK 8 packages for Ubuntu 14.04. The Ubuntu 15.04 OpenJDK 8

packages have been used successfully with Ubuntu 14.04. Newer package versions (e.g. those for 15.10, 16.04) were found not to work on 14.04 using the instructions below.

1. Download the .deb packages for 64-bit architecture from [old-releases.ubuntu.com](http://old-releases.ubuntu.com):

[openjdk-8-jre-headless\\_8u45-b14-1\\_amd64.deb](#) with SHA256  
0f5aba8db39088283b51e00054813063173a4d8809f70033976f83e214ab56c0

[openjdk-8-jre\\_8u45-b14-1\\_amd64.deb](#) with SHA256  
9ef76c4562d39432b69baf6c18f199707c5c56a5b4566847df908b7d74e15849

[openjdk-8-jdk\\_8u45-b14-1\\_amd64.deb](#) with SHA256  
6e47215cf6205aa829e6a0a64985075bd29d1f428a4006a80c9db371c2fc3c4c

2. Optionally, confirm the checksums of the downloaded files against the SHA256 string listed with each package above. For example, with the sha256sum tool:

```
sha256sum {downloaded.deb file}
```

3. Install the packages:

```
sudo apt-get update
```

Run dpkg for each of the .deb files you downloaded. It may produce errors due to missing dependencies:

```
sudo dpkg -i {downloaded.deb file}
```

To fix missing dependencies:

```
sudo apt-get -f install
```

### Update the default Java version - optional

Optionally, for the Ubuntu versions above update the default Java version by running:

```
sudo update-alternatives --config javasudo update-alternatives --config javac
```

Note: If, during a build, you encounter version errors for Java, see Wrong Java version for likely causes and solutions.

### Installing required packages (Ubuntu 14.04)

You will need a 64-bit version of Ubuntu. Ubuntu 14.04 is recommended.

```
sudo apt-get install git-core gnupg flex bison gperf build-essential zip curl zlib1g-dev  
gcc-multilib g++-multilib libc6-dev-i386 lib32ncurses5-dev x11proto-core-dev libx11-dev  
lib32z-dev ccache libgl1-mesa-dev libxml2-utils xsltproc unzip
```

Note: To use SELinux tools for policy analysis, also install the python-networkx package. Note: If you are using LDAP and want to run ART host tests, also install the libnss-sss:i386 package.

## 5. Configuring USB Access

Under GNU/Linux systems (and specifically under Ubuntu systems), regular users can't directly access USB devices by default. The system needs to be configured to allow such access.

The recommended approach is to create a file /etc/udev/rules.d/51-android.rules (as the root user) and to

copy the following lines in it. <username> must be replaced by the actual username of the user who is authorized to access the phones over USB.

```
# adb protocol on passion (Rockchip products)
SUBSYSTEM=="usb", ATTR{idVendor}=="2207", ATTR{idProduct}=="0010",
MODE="0600", OWNER="<username>"
```

Those new rules take effect the next time a device is plugged in. It might therefore be necessary to unplug the device and plug it back into the computer.

This is known to work on both Ubuntu Hardy Heron (8.04.x LTS) and Lucid Lynx (10.04.x LTS). Other versions of Ubuntu or other variants of GNU/Linux might require different configurations.

References : <http://source.android.com/source/initializing.html>

## 附录 B SSH 公钥操作说明 SSH public key operation instruction

### 附录 B-1 SSH 公钥生成 SSH public key generation


使用如下命令生成：

Use below command to generate:

```
ssh-keygen -t rsa -C "user@host"
```

请将 user@host 替换成您的邮箱地址。

Please replace user@host with your email address.

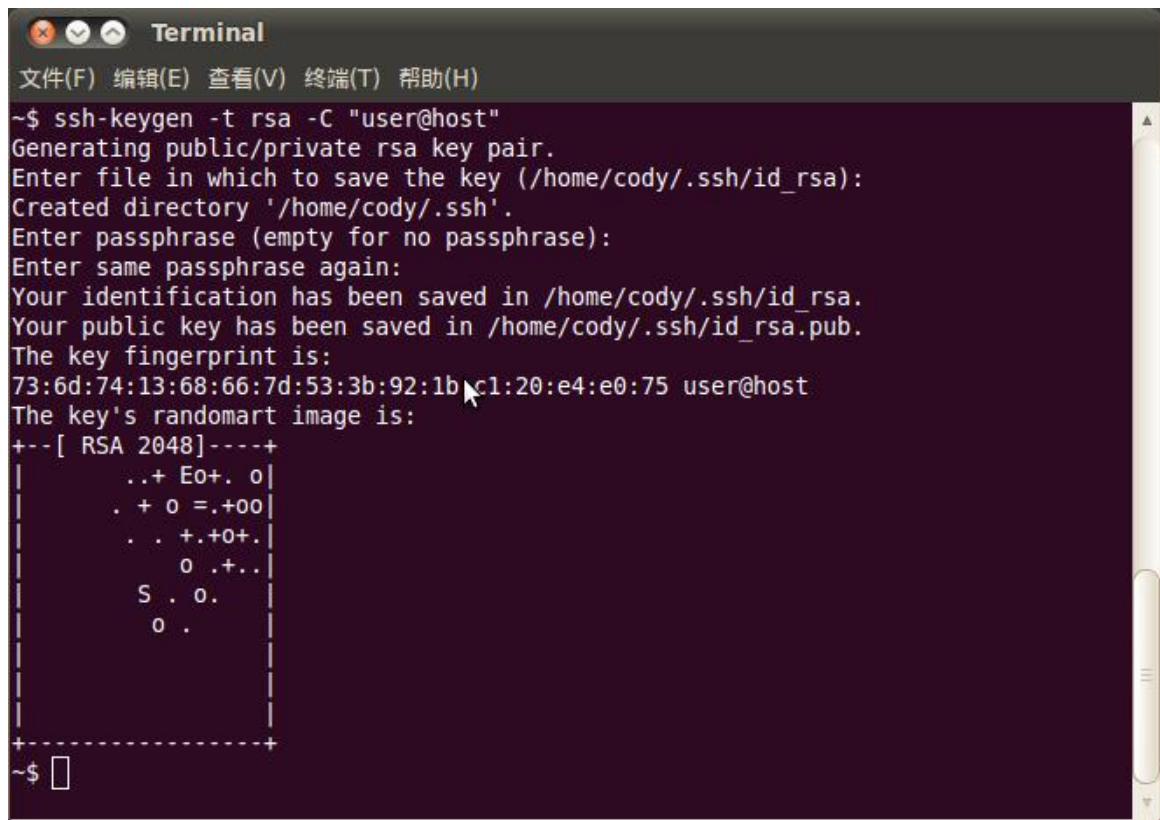

```
Terminal
文件(F) 编辑(E) 查看(V) 终端(T) 帮助(H)
~$ ssh-keygen -t rsa -C "user@host"
Generating public/private rsa key pair.
Enter file in which to save the key (/home/cody/.ssh/id_rsa):
Created directory '/home/cody/.ssh'.
Enter passphrase (empty for no passphrase):
Enter same passphrase again:
Your identification has been saved in /home/cody/.ssh/id_rsa.
Your public key has been saved in /home/cody/.ssh/id_rsa.pub.
The key fingerprint is:
73:6d:74:13:68:66:7d:53:3b:92:1b:4c:1:20:e4:e0:75 user@host
The key's randomart image is:
+---[ RSA 2048]---+
|      .+. Eo+. o |
|    . + o =.+oo |
|    . . +.+o+.  |
|      o .+..    |
|    S . o.      |
|    o .         |
+-----+
~$
```

命令运行完成会在你的目录下生成 key 文件。

It will generate the key file in your directory after the command is executed successfully.

```
~$ ls -l .ssh/
总用量 8
-rw----- 1 cody cody 1675 2012-10-15 11:38 id_rsa
-rw-r--r-- 1 cody cody 391 2012-10-15 11:38 id_rsa.pub
```

请妥善保管生成的私钥文件 id\_rsa 和密码，并将 id\_rsa.pub 发邮件给 SDK 发布服务器的管理员。

Please keep carefully the generated private key file id\_rsa and password, and send id\_rsa.pub to SDK release server admin through email.

## 附录 B-2 使用 key-chain 管理密钥 Use key-chain to manage the keys

推荐您使用比较简易的工具 keychain 管理密钥。

Recommend you use the simple tool keychain to manage the keys.

具体使用方法如下：

The detailed usage is as below:

1. 安装 keychain 软件包：

Install keychain software package:

```
$sudo aptitude install keychain
```

2. 配置使用密钥：

Configure to use the key:

```
$vim ~/.bashrc
```

增加下面这行：

Add the following command:

```
eval `keychain --eval ~/.ssh/id_rsa`
```

其中，id\_rsa 是私钥文件名称。

Among which, id\_rsa is the file name of the private key.

以上配置以后，重新登录控制台，会提示输入密码，只需输入生成密钥时使用的密码即可，若无密码可不输入。

Log in the console again after configuring as above, and it will prompt to input the password. Only need to input the password used for generating the key if there is one.

另外，请尽量不要使用 sudo 或 root 用户，除非您知道如何处理，否则将导致权限以及密钥管理混乱。

Besides, please avoid using sudo or root user unless you know clearly how to deal with, otherwise it will case the authority and key management problems.

## 附录 B-3 多台机器使用相同 ssh 公钥 Multiple devices use the same ssh public key

在不同机器使用，可以将你的 ssh 私钥文件 id\_rsa 拷贝到要使用的机器的“~/.ssh/id\_rsa”即可。

In order to use on different devices, you can copy ssh private key file id\_rsa to the target device “~/.ssh/id\_rsa”.

在使用错误的私钥会出现如下提示，请注意替换成正确的私钥。

Below hint will show up if using the wrong private key. Please replace with the correct private key.



```
~/tmp$ git clone git@172.16.10.211:rk292x/mid/4.1.1_r1
Initialized empty Git repository in /home/cody/tmp/4.1.1_r1/.git/
The authenticity of host '172.16.10.211 (172.16.10.211)' can't be established.
RSA key fingerprint is fe:36:dd:30:bb:83:73:e1:0b:df:90:e2:73:e4:61:46.
Are you sure you want to continue connecting (yes/no)? yes
Warning: Permanently added '172.16.10.211' (RSA) to the list of known hosts.
git@172.16.10.211's password: █
```

添加正确的私钥后，就可以使用 git 克隆代码，如下图。

After adding the correct private key, you can use git to clone code, shown as below picture:

```
~$ cd tmp/
~/tmp$ git clone git@172.16.10.211:rk292x/mid/4.1.1_r1
Initialized empty Git repository in /home/cody/tmp/4.1.1_r1/.git/
The authenticity of host '172.16.10.211 (172.16.10.211)' can't be established.
RSA key fingerprint is fe:36:dd:30:bb:83:73:e1:0b:df:90:e2:73:e4:61:46.
Are you sure you want to continue connecting (yes/no)? yes
Warning: Permanently added '172.16.10.211' (RSA) to the list of known hosts.
remote: Counting objects: 237923, done.
remote: Compressing objects: 100% (168382/168382), done.
Receiving objects: 9% (21570/237923), 61.52 MiB | 11.14 MiB/s
```

添加 ssh 私钥可能出现如下提示错误。

Below error may occur when adding ssh private key:

```
Agent admitted failure to sign using the key
```

在 console 输入如下命令即可解决。

Input below command at console can fix it.


```
ssh-add ~/.ssh/id_rsa
```

## 附录 B-4 一台机器切换不同 ssh 公钥 Switch different ssh public keys on one device

可以参考 ssh\_config 文档配置 ssh。

You can refer to ssh\_config document to configure ssh.

```
~$ man ssh_config
```

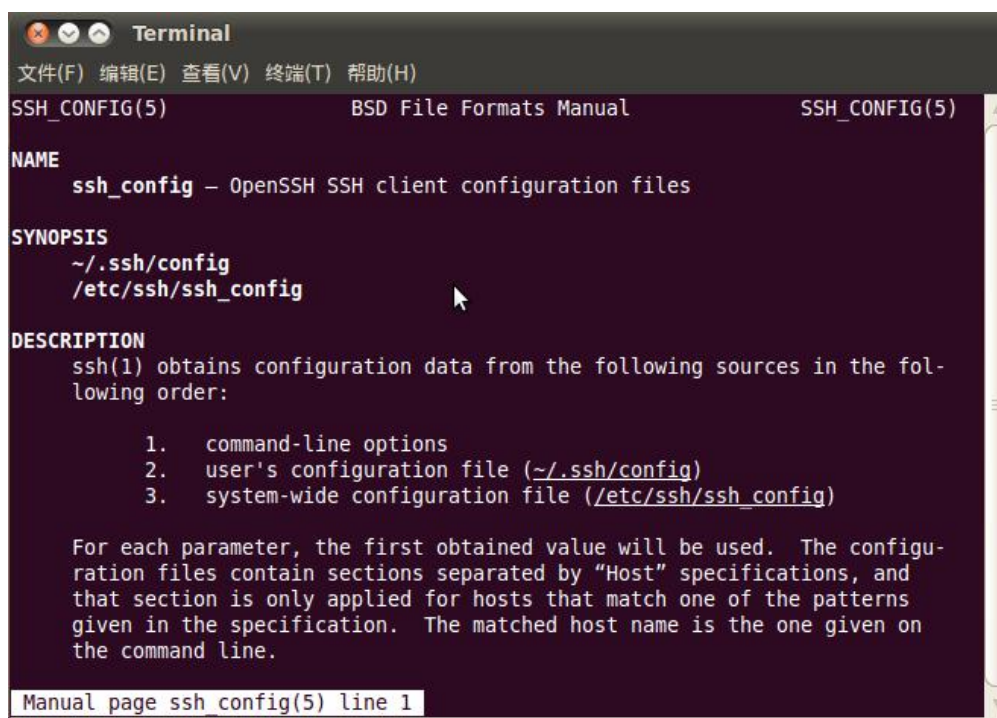

通过如下命令，配置当前用户的 ssh 配置。


Use the following commands to configure ssh for current user.

```
~$ cp /etc/ssh/ssh_config ~/.ssh/config
```

```
~$ vi ~/.ssh/config
```

如图，将 ssh 使用另一个目录的文件“~/.ssh1/id\_rsa”作为认证私钥。通过这种方法，可以切换不同的密钥。

As below picture, identify another directory ssh file “~/.ssh1/id\_rsa” as certificate private key. In this way, you can switch different keys.

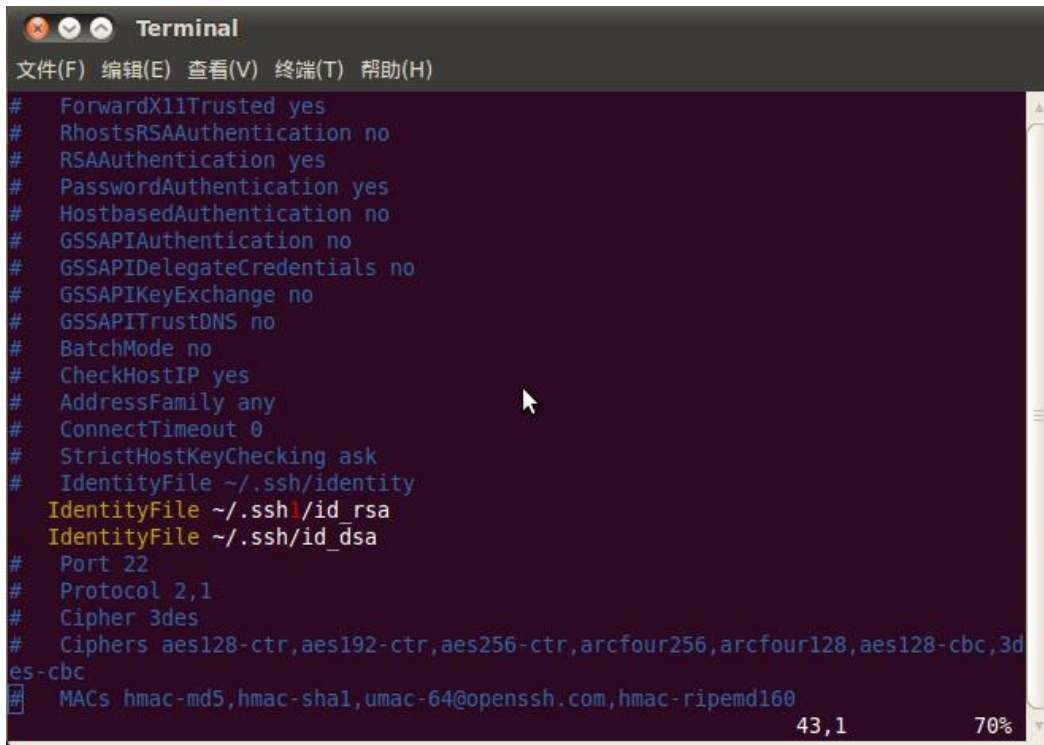

```

Terminal
文件(F) 编辑(E) 查看(V) 终端(T) 帮助(H)
# ForwardX11Trusted yes
# RhostsRSAAuthentication no
# RSAAuthentication yes
# PasswordAuthentication yes
# HostbasedAuthentication no
# GSSAPIAuthentication no
# GSSAPIDelegateCredentials no
# GSSAPIKeyExchange no
# GSSAPITrustDNS no
# BatchMode no
# CheckHostIP yes
# AddressFamily any
# ConnectTimeout 0
# StrictHostKeyChecking ask
# IdentityFile ~/.ssh/identity
IdentityFile ~/.ssh/id_rsa
IdentityFile ~/.ssh/id_dsa
# Port 22
# Protocol 2,1
# Cipher 3des
# Ciphers aes128-ctr,aes192-ctr,aes256-ctr,arcfour256,arcfour128,aes128-cbc,3des-cbc
# MACs hmac-md5,hmac-sha1,umac-64@openssh.com,hmac-ripemd160
43,1 70%

```

## 附录 B-5 密钥权限管理 Key authority management

服务器可以实时监控某个 key 的下载次数、IP 等信息，如果发现异常将禁用相应的 key 的下载权限。

The server can real-time monitor for the specific key the download times, IP and other information. If any abnormal case is found, it will prohibit the download authority of the corresponding key.

请妥善保管私钥文件。并不要二次授权与第三方使用。

Please keep carefully the private key file. DO NOT re-authorize it to the third party.

## 附录 B-6 Git 权限申请说明 Git authority application instruction

参考上述章节，生成公钥文件，发邮件至 [fae@rock-chips.com](mailto:fae@rock-chips.com)，申请开通 SDK 代码下载权限。

Refer to above chapters, generate the public key file, and send email to [fae@rock-chips.com](mailto:fae@rock-chips.com) applying for SDK code download authority.