

Quick Installation Guide


Cloud-Managed Wireless Outdoor Access Point



WI-AP310-Lite | WI-AP316

www.wireless-tek.com

1.Packing Content



1 x AP




1 x Power adpter



2 x Plastic Strap




1 x Ethernet Cable

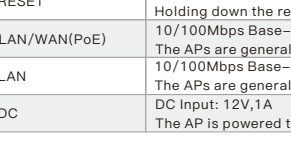


1 x Quick Installation Guide

2. Appearance Overview

- WI-AP310-Lite | WI-AP316



Front Panel

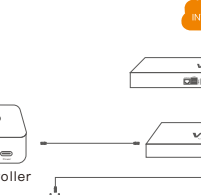

Rear Panel

- LED Indicator


LED Indicators	Status	Description
LAN Indicator	Yellow	The LAN port is connected via Ethernet cable
	Flashing	Data transmission
	Off	The LAN port is disconnected.
LAN/WAN(PoE) Indicator	Yellow	The LAN/WAN port is connected
	Off	The port is disconnected

- Port and Button


Port&Button	Description
RESET	Reset button, which is used to restore the factory. Holding down the reset button for 10 seconds to revert to factory settings.
LAN/WAN(PoE)	10/100Mbps Base-T Ethernet Port, which supports 24V Passive PoE Input. The APs are generally connected to the upstream switch.
LAN	10/100Mbps Base-T Ethernet port. The APs are generally connected to wired LAN devices such as PC.
DC	DC Input: 12V,1A The AP is powered through 12V DC Input.

3.Network Topology

- Bypass mode topology

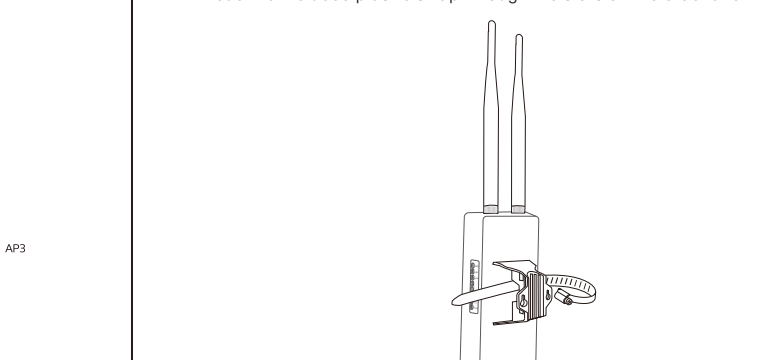


- AC Gateway mode topology

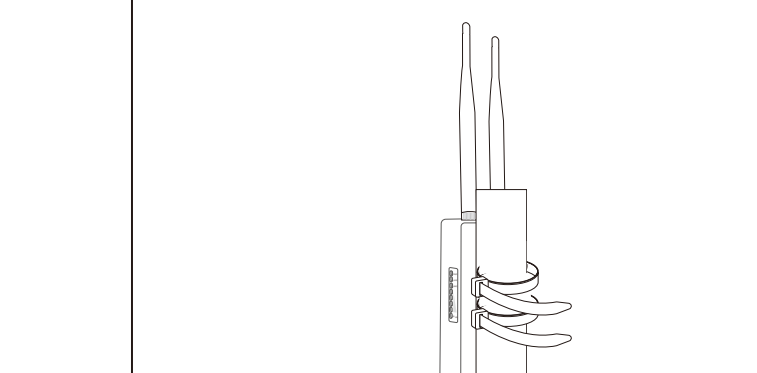


4.Device Installation

- Device Installation

- 1.Thread the included plastic strap through the slots on the bracket of the AP.

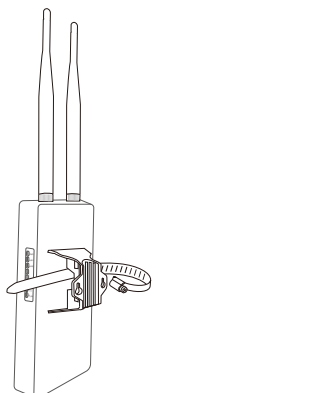

- 2.Adjust the AP's position and direction and tighten the strap to fix the AP.

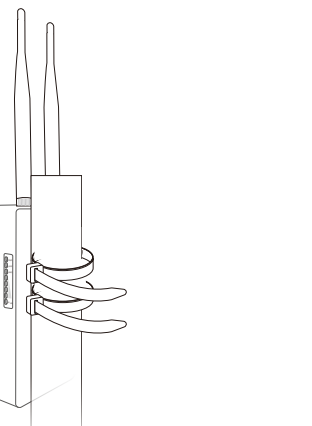


5.Power Supply

- Power via PSE Device


- For WI-AP310-Lite, WI-AP316:

- The APs can be powered via PoE switch which supports 24V Passive PoE output.

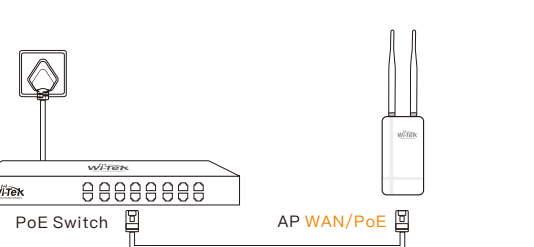


- Power via Power adapter

- The APs can be powered via power adapter which supports 12V DC output.

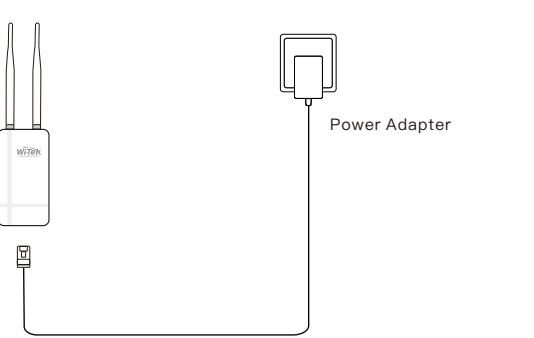


6.Configuration Method


- Method 1. Connect computer to the wireless signal of AP, the default SSID is "WI-TEK xxxx".Password is 88888888

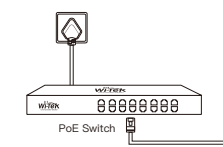

- Method 2. Connect computer to the AP by Ethernet cable.

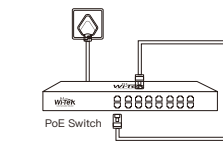

- Step 1. On the computer, please set the static IP under the same subnet with AP, 192.168.1.xx

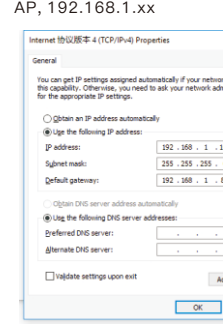

- Step 2. Please launch a browser such as Google Chrome or Firefox, type 192.168.1.88 into address bar and click on enter to get in the login page of wireless access point. The default login password is "admin".

- *Login device




- Step3. After get in the management page,On the left side menu, please go to [Wizard] to setup the access point

7.Cloud management settings

- Step 1 Launch your web browser then enter http://cloud2.wireless-tek.com in the address bar.

- Step 2 Register an account password by user name or email.


- Step 3 log in to the cloud account with the account password after registration.

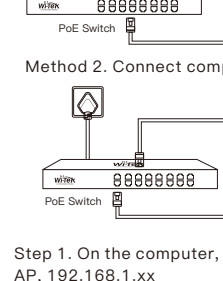

- Step 1 Launch your web browser then enter http://cloud2.wireless-tek.com in the address bar.

- Step 2 Register an account password by user name or email.

- Step 3 log in to the cloud account with the account password after registration.

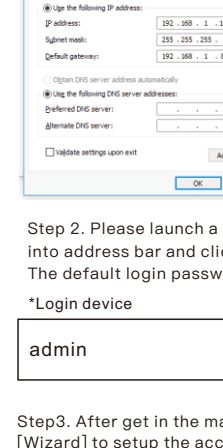

8.FAQ

- Q1. The LED is not lit.

- A1: Please check if the PoE switch is 802.3af/at.

- A2: Make sure the PoE switch is outputting the correct voltage.

- A3: Make sure the Ethernet cable does support PoE function.

- Q2. What can I do if the login window does not appear?

- A1: Please check if the computer is the static IP 192.168.1.xxx.

- A2: Please try another browser.

- A3: Reboot your AP device and try again.

- A4: Disconnect the Internet connection and try again, after login, connect to the internet.



9.Warranty Card

- Username

- Address

- Telephone No.

- Purchase Shop


- Purchase Address

- Product Model No.

- Purchase Time

- Serial No.

- Dealer Signature



- If the product defects within three months after purchase, we will provide you a new product of the same model.

- If the product defects within the three-year warranty period, we will provide the professional maintenance service.

- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.

- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card losing will disqualify the product from limited warranty.

- Wireless-Tek Technology Limited

- Address: Biaofan Technology Building 402, Bao'an street, Baoan District,Shenzhen City, Guangdong, China

- Website:www.wireless-tek.com

- Tel:86-0755-32811290

- Email:sales@wireless-tek.com

- Technical Support:tech@wireless-tek.com

- CE

- FC

- RoHS

- UK

- CA