



SPL-LED-3000 IP



User Manual

Please read the instruction carefully before use

CONTENTS

01/ Safety Information.....	3-4
02/ Technical Specifications.....	5-6
03/ Connecting Power and Data.....	6
04/ Connecting Data.....	7
05/ Address Setting.....	8
06/ Overview.....	9
07/ Display and operation.....	10
08/ DMX Protoco.....	11-12
09/ Troubleshooting.....	13
10/ Fixture Cleaning.....	14

01/ Safety Information

Please keep this User Manual for future consultation. If you sell the unit to another user, be sure that they also receive this instruction manual.

Important:

Damages caused by the disregard of this user manual are not subject to warranty. The dealer

will not accept liability for any resulting defects or problems.

Unpack and check carefully to ensure that there is no transportation damage before using the unit.

This product is suitable for wet locations. Do not immerse in water.

DO install and operate by qualified operator.

DO NOT allow children to operate the fixture.

Use safety chain (made of steel, min. diameter 4.0mm) when fixing the unit. Handle the unit by carrying its base instead of head only.

The unit must be installed in a location with adequate ventilation, at least 50cm from adjacent surfaces.

Be sure that no ventilation slots is blocked, otherwise the unit will be overheated.

Before operation, ensure that you are connecting this product to the proper voltage in accordance with the specifications in this manual or on the product's specification label.

It's important to ground the yellow/green conductor to earth in order to avoid electric shock.

Minimum ambient temperature TA: -10°C. Maximum ambient temperature TA: 40°C. Do not operate this product at a lower or higher temperature.

DO NOT connect the device to any dimmer pack.

Keep flammable materials away from the fixture while operating to avoid fire hazard.

Make sure the power cord is not crimped or damaged; replace it immediately if damaged.

Unit's surface temperature may reach up to 70°C. DO NOT touch the housing bare-handed during its operation.

Avoid any flammable liquids, water or metal from entering the unit. Once it happens, cut off the mains power immediately.

DO NOT operate in a dirty or dusty environment. DO clean the fixture regularly.

DO NOT touch any wire during operation as there might be a hazard of electric

shock.

Avoid entanglement of the power cord with other wires.

The minimum distance to objects/surface must be more than 4 meters.

In the event of serious operating problem, stop using the unit immediately.

Never turn on and off the unit time after time.

The housing, the lenses, or the ultraviolet filter must be replaced if they are visibly damaged.

DO NOT open the housing as there are no user serviceable parts inside.

DO NOT attempt to operate this unit if it becomes damaged. DO NOT attempt any repairs yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center if needed.

Disconnect this product from its power source before servicing.

DO use the original packaging if the device is to be transported.

Check that the head tilt lock is released before packing for transportation.

Avoid direct eye exposure to the light source while the product is on.

DO NOT operate this product if you see damage on the housing, shields, or cables.

Have

the damaged parts replaced by an authorized technician at once.

External sources of light beams from direct sunlight or any other strong light source, which penetrate the front lens of lighting fixtures, can cause severe internal damage.

DO

NOT expose the fixture front lens to light beams from direct sunlight or any other strong

light source from any angle while unpacking, installation, use, and extended idle times outdoors. DO NOT focus a light beam from one lighting fixture directly towards another.

02/ Technical Specifications

Input voltage: AC100-240V 50/60Hz

Power consumption: 1000W

Source: LED 1: 144pcs 5W white LED, 7000K

LED 2: 576pcs 0.5W RGB LED

Color : White+RGB

Average lifespan: 50000 hours

Beam angle: 120°

Electronic Dimming: 0-100%

Strobe: 1S/25

Rotate: Yes

DMX channel: 8/14/18/61CH

Control mode: DMX /RDM

Display mode: LED


IP rating: IP65

Housing color: black


Ambient temperature: -20°C-45°C

Product dimension: 350x200x315 mm

N.W: 13.7kG

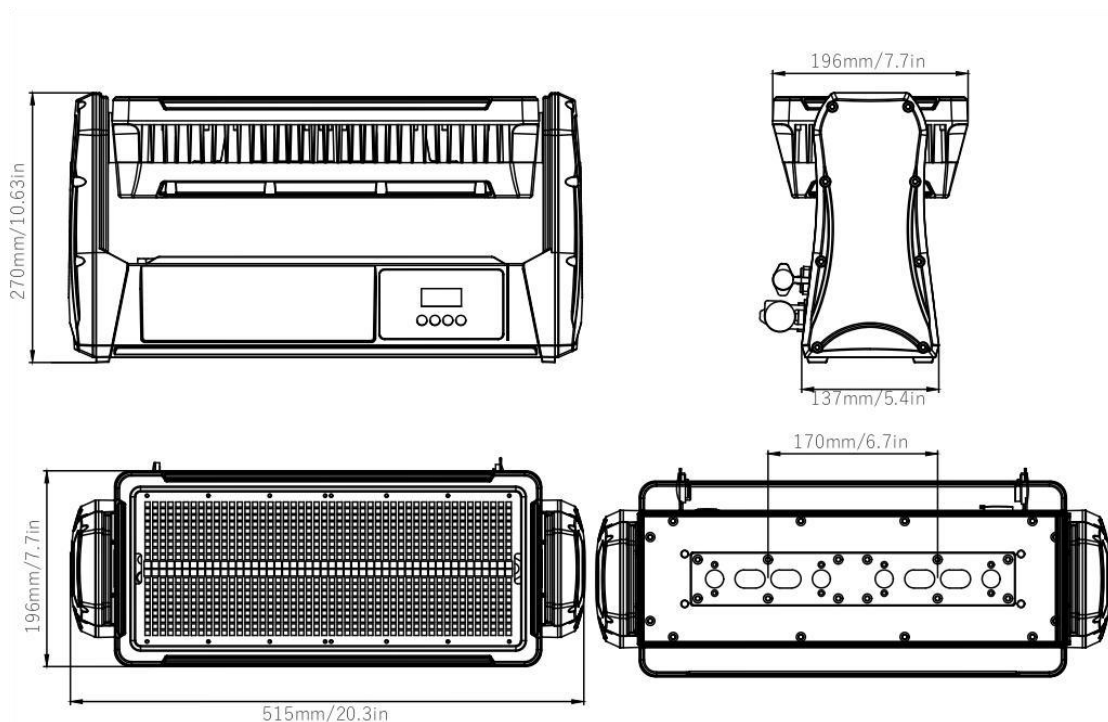

PHOTOMETRIC DIAGRAM:

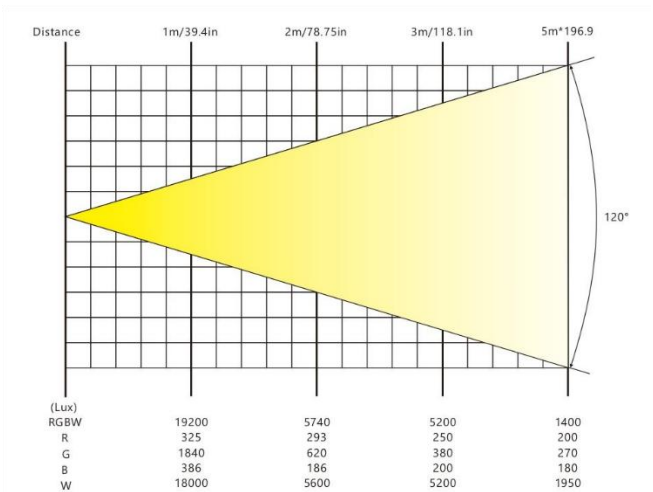

03/ Connecting Power and Data

To apply power, first check that the head pan and tilt locks are released.
This fixture can operate on any 180-240Vac; 50/60Hz AC mains power supply.
The maximum power consumption is 350W.
The fixture must be grounded/earthed and able to be isolated from AC power. The AC power supply must incorporate a fuse or circuit breaker for fault protection.
Wiring and connection work must be carried out by a qualified electrician.
The power cable color coding is given in the figure below:

Wire	Color (US)	Wire	Color (EU)	Symbol	Conductor
	black		brown	L	live
	white		blue	N	neutral
	green		yellow/green	⏏ or ⏏	ground (earth)

Power cord set should be used: Listed SJOW flexible cord with rating: 300V, 105°C, VW-1, 14AWG x 3C, molded with 5-20P attachment plug and terminated with cord connector model RCAC3F-X-000-01 with rating 250V, 16A by Neutrik Technology (Ningbo) Co., Ltd.
The power cord shall be at least 914mm (It is to be measured from the face of attachment plug to the face of connector).
CAUTION!
DO NOT CONNECT THE FIXTURE TO AN ELECTRICAL DIMMER SYSTEM AS DOING SO MAY CAUSE DAMAGE.

04/ Connecting Data

The fixture is equipped with 5-pin (or 3-pin) XLR sockets for DMX input and output.

Use a

high-quality DMX cable designed for RS-485 and 5-pin (or 3-pin) XLR-plugs and connectors

in order to connect the controller with the fixture or one fixture with another. For outdoor

installations, use only IP-rated XLR connectors suitable for outdoor use.

Building a serial DMX chain:

Connect the DMX data output from the controller to the fixture's data input socket.


Connect

the DMX output of the first fixture in the DMX chain with the DMX input of the next fixture.

Always connect one output with the input of the next fixture until all fixtures are connected.

Up to 32 fixtures can be connected to the same DMX link. Terminate the DMX out cable of

the last fixture in the data link with a 120 ohm DMX terminator.

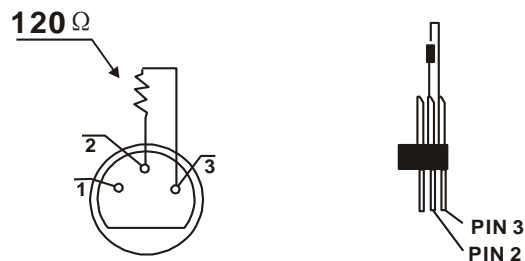

05/ Address Setting

All fixtures should be given a DMX starting address when operating with a DMX controller, in order to ensure that the correct fixture responds to the correct control signal. Incorrect settings will result in unpredictable responses from the lighting controller.

You can set the same starting address for all fixtures or a group of fixtures, or set different addresses for each individual fixture.

Setting all fixtures to the same DMX address will cause all fixtures to react in the same way. In this case, please note that changing the settings of one channel will affect all the fixtures simultaneously.

If you set each fixture to a different DMX address, each unit will “listen” starting at the channel number you have set, based on the quantity of DMX channels of each fixture. That means changing the settings of one channel will only affect the selected fixture.

For example, if the first fixture is set to 43 ch DMX mode with a start DMX address of 1, the following fixture in the DMX chain should then be set to a DMX address of 44. As the first fixture uses all the first 43 DMX channels, the next available channel is 44 ($43+1=44 \gg 44$).

See the chart below for more details:

Channel Mode	Unit 1 Address	Unit 2 Address	Unit 3 Address	Unit 4 Address	Unit xxx Address
43 channels	1	44	87	130
34 channels	1	35	69	103
32 channels	1	33	65	97
23 channels	1	24	47	90

06/ Overview



MODE	Select function
UP	Parameters increment
DOWN	Decreasing parameters
ENTER	Confirm and save

Press and hold the MODE button to enter the unlock display. Input '111' to unlock.

MENU OPERATION:

After powering on, press the Menu button to display the menu function table. Use the Up or Down buttons to adjust the function parameters, and press the Enter button to save the current settings (these settings will be retained after power-off).

Menu function table:

ID	Display	Function
1	EN	Language Option
2	14CH	Channel Display
3	○	Display Reverse
4	Manual	Auto(Table 3.1)
5	Setting	512 Setting (Table 3.2)
6	System	System Setting (Table 2.3-2.4)

07/ Display and operation

ID	Display	Data	Function
1	Address	000-512	
2	Channel	8CH/14CH/ 18CH/61CH	Channels option
3	Run Mode	DMX/AUTO	DMX/Auto
4	Dimmer	01-03	Hold
5	Display Protect	ON/OFF	
6	Temp Protect	45-80	
7	Power Protect	50-250	
8	Fan Speed	40-70	
9	Reset	ON/OFF	Reset
10	Factory Default	ON/OFF	Factory default

MANUAL MODE:

ID	Display	Data	Function
1	Red	000-255	Red dimmer from 0-100%
2	Green	000-255	Green dimmer from 0-100%
3	Blue	000-255	Blue dimmer from 0-100%
4	White	000-255	White dimmer from 0-100%
5	Motor	000-255	Y motor rotate
6	Effect	01-50	Effect
7	Speed	01-99	Effect speed
8	Strobe	01-99	Strobe from slow to fast

SYSTEM:

Password:222

ID	Display	Data	Function
1	Light Setting	000-512	
2	Motor	0000-2000	
3	Motor Fine	000-255	
4	Run Time	001	
5	Version	VX.X	

LIGHT SETTING:

ID	Display	Data	Function
1	Red	000-255	Red dimmer from 0-100%
2	Green	000-255	Green dimmer from 0-100%
3	Blue	000-255	Blue dimmer from 0-100%
4	White	000-255	White dimmer from 0-100%

08/ DMX Protoco

8-CHANNEL MODE:

Channel	Function	Details
CH1	Y	Tilt rotation
CH2	Dimmer	R、G、B、W dimmer from 0-100%
CH3	Strobe	R、G、B、W strobe from slow to fast
CH4	White dimmer	White dimmer from 0-100%
CH5	Red dimmer	Red dimmer from 0-100%
CH6	Green dimmer	Green dimmer from 0-100%
CH7	Blue dimmer	Blue dimmer from 0-100%
CH8	Reset	Data 100-110 reset

14-CHANNEL MODE:

Channel	Function	Details
CH1	Y	Tilt rotation
CH2	Y Fine	Tilt fine
CH3	White Dimmer	White dimmer from 0-100%
CH4	White Strobe	White strobe from slow to fast
CH5	Speed	White auto speed
CH6	White Auto	
CH7	Red Dimmer	Red dimmer from 0-100%
CH8	Green Dimmer	Green dimmer from 0-100%
CH9	Blue Dimmer	Blue dimmer from 0-100%
CH10	RGB Strobe	From slow to fast
CH11	Macro	0-9 dimmer 10-15 effect 1 ... 250-255 effect 50
CH12	Macro Color	Seven color change
CH13	Macro Speed	Auto speed
CH14	RGB Dimmer	RGB dimmer

18-CHANNEL MODE:

Channel	Function	Details
CH1	Y	Tilt rotation
CH2	Y Speed	Speed from fast to slow
CH3	Dimmer	R、G、B、W dimmer from 0-100%
CH4	Strobe	R、G、B、W strobe from slow to fast
CH5	White Dimmer	White dimmer from 0-100%
CH6	White Auto	0-19 dimmer 21-40 effect 1 ... 240-255 effect 12
CH7	White Speed	White auto speed from slow to fast
CH8	Auto Direction	1-128 clockwise; 129-255 anti-clockwise
CH9	Red Dimmer	Red dimmer from 0-100%
CH10	Green Dimmer	Green dimmer from 0-100%
CH11	Blue Dimmer	Blue dimmer from 0-100%
CH12	RGB Auto	0-9 dimmer 10-15 effect 1

		... 250-255 effect 50
CH13	Speed	RGB auto speed from slow to fast
CH14	Auto Direction	1-128 clockwise; 129-255 anti-clockwise
CH15	Red Dimmer	Red dimmer from 0-100%
CH16	Green Dimmer	Green dimmer from 0-100%
CH17	Blue Dimmer	Blue dimmer from 0-100%
CH18	Reset	Data 100-110 reset

61-CHANNEL MODE:

Channel	Function	Details
CH1	Y	Tilt rotation
CH2	Y speed	Speed from fast to slow
CH3	Dimmer	R、G、B、W dimmer from 0-100%
CH4	Strobe	R、G、B、W strobe from slow to fast
CH5	White 1	White 1 dimmer 0-100%
CH6	White 2	White 2 dimmer 0-100%
...
CH12	White 8	White 8 dimmer 0-100%
CH13	Red 1	Red 1 dimmer 0-100%
CH14	Green 1	Green 1 dimmer 0-100%
CH15	Blue 1	Blue 1 dimmer 0-100%
...
CH58	Red 16	Red 16 dimmer 0-100%
CH59	Green 16	Green 16 dimmer 0-100%
CH60	Blue 16	Blue 16 dimmer 0-100%
CH61	Reset	Data 100-110 reset

09/ Troubleshooting

Problem	Potential cause(s)	Remedies
Fixture does not respond or appears to be off.	No power to the fixture.	Confirm that the power is switched on and cables are plugged in.
	No output from PSU.	Replace the PSU.
Fixture suddenly turned off.	Power was turned off.	Check the power supply, switches and breakers
Light output cuts out intermittently.	Fixture is too hot.	Check fixture's stored error messages for more information. Allow fixture to cool. Clean fixture. Reduce ambient temperature.
Fixture suddenly stopped responding.	DMX cables were disconnected.	Inspect DMX cables.
Fixture operates irregularly / abnormal.	Incorrect DMX address or DMX mode.	Inspect and enter the correct DMX address or mode
	DMX link is not terminated.	Install a XLR 120ohm DMX termination at the end of the DMX link.
	Bad data link.	Replace or repair defective cables and/or connections
	One of the fixtures is defective and is disturbing data transmission on the link.	Track and isolate the corrupted fixture. Have the fixture serviced by a qualified technician.
Pan / tilt is skipping / shuddering	Pan/ tilt locks are not released.	Release the pan / tilt locks
	Obstacles are within the required pan / tilt clearance.	Inspect and remove any obstacles constraining free operation of the pan / tilt.
	The Hall element is damaged	Replace the Hall element
	The magnetic steel fell out	Replace the magnetic steel

10/ Fixture Cleaning

Regular cleaning is very important for fixture life and performance. Buildup of dust, dirt, smoke particles, fog fluid residues, etc. degrades the fixture's light output and cooling ability.

Cleaning schedules for lighting fixtures vary greatly depending on the operating environment.

It is therefore impossible to specify precise cleaning intervals for the fixture.

Environmental

factors that may result in a need for frequent cleaning include:

- Use of smoke or fog machines.

- High airflow rates (near air conditioning vents, for example).

- Airborne dust (from stage effects, building structures and fittings or the natural environment at outdoor events, for example).

If one or more of these factors is present, inspect fixtures within their first few hours of operation to see whether cleaning is necessary. Check again at frequent intervals. This procedure will allow you to assess cleaning requirements in your particular situation.

Follow these precautions when cleaning the fixture:

- Work in a clean, dry, well-lit area.

- Use gentle pressure only. A soft lint-free cloth dampened with a solution of water and a mild detergent is recommended, under no circumstances should alcohol, solvents or abrasives be used! Use care when cleaning optical components: surfaces are fragile and easily scratched.

