

DFR0534

1.0.3

Generated by Doxygen 1.12.0

1 DFR0534	1
1.1 License and copyright	1
1.2 Appendix	2
1.2.1 DFR0534 pinout	2
2 Class Index	3
2.1 Class List	3
3 File Index	5
3.1 File List	5
4 Class Documentation	7
4.1 DFR0534 Class Reference	7
4.1.1 Detailed Description	9
4.1.2 Member Enumeration Documentation	9
4.1.2.1 DFR0534CHANNELS	9
4.1.2.2 DFR0534DRIVE	9
4.1.2.3 DFR0534EQ	10
4.1.2.4 DFR0534LOOPMODE	10
4.1.2.5 DFR0534STATUS	11
4.1.3 Constructor & Destructor Documentation	11
4.1.3.1 DFR0534()	11
4.1.4 Member Function Documentation	12
4.1.4.1 decreaseVolume()	12
4.1.4.2 fastBackwardDuration()	12
4.1.4.3 fastForwardDuration()	12
4.1.4.4 getDrive()	12
4.1.4.5 getDrivesStates()	13
4.1.4.6 getDuration()	15
4.1.4.7 getFileName()	16
4.1.4.8 getFileNameNumber()	17
4.1.4.9 getFirstFileNameNumberInCurrentDirectory()	18
4.1.4.10 getRuntime()	19
4.1.4.11 getStatus()	20
4.1.4.12 getTotalFiles()	21
4.1.4.13 getTotalFilesInCurrentDirectory()	22
4.1.4.14 increaseVolume()	23
4.1.4.15 insertFileByNumber()	24
4.1.4.16 pause()	24
4.1.4.17 play()	24
4.1.4.18 playCombined()	24
4.1.4.19 playFileByName()	25
4.1.4.20 playFileByNumber()	26

4.1.4.21 playLastInDirectory()	26
4.1.4.22 playNext()	27
4.1.4.23 playNextDirectory()	27
4.1.4.24 playPrevious()	27
4.1.4.25 prepareFileByNumber()	27
4.1.4.26 repeatPart()	28
4.1.4.27 setChannel()	28
4.1.4.28 setDirectory()	28
4.1.4.29 setDrive()	29
4.1.4.30 setEqualizer()	29
4.1.4.31 setLoopMode()	30
4.1.4.32 setRepeatLoops()	30
4.1.4.33 setVolume()	30
4.1.4.34 startSendingRuntime()	31
4.1.4.35 stop()	31
4.1.4.36 stopCombined()	31
4.1.4.37 stopInsertedFile()	32
4.1.4.38 stopRepeatPart()	32
4.1.4.39 stopSendingRuntime()	32
5 File Documentation	33
5.1 playCombined.ino	33
5.2 playFileByName.ino	34
5.3 playFileByNumber.ino	35
5.4 DFR0534.cpp File Reference	36
5.4.1 Detailed Description	36
5.5 DFR0534.cpp	37
5.6 DFR0534.h File Reference	48
5.6.1 Detailed Description	49
5.6.2 Macro Definition Documentation	50
5.6.2.1 DFR0534_VERSION	50
5.7 DFR0534.h	50
Index	53

Chapter 1

DFR0534

An Arduino Uno/Nano library for a [DFR0534](#) audio module. The library works with SoftwareSerial and is very similar to https://github.com/sleemanj/JQ8400_Serial, but is no fork.

To create a [DFR0534](#) object pass the existing SoftwareSerial object as parameter to the [DFR0534](#) constructor, for example

```
#include <SoftwareSerial.h>
#include <DFR0534.h>

#define TX_PIN A0
#define RX_PIN A1
SoftwareSerial g_serial(RX_PIN, TX_PIN);
DFR0534 g_audio(g_serial);
...
```

Examples how to use the library

- [examples/playFileByName/playFileByName.ino](#)
- [examples/playFileByNumber/playFileByNumber.ino](#)
- [examples/playCombined/playCombined.ino](#)

1.1 License and copyright

This library is licensed under the terms of

BSD 2-Clause License

Copyright (c) 2024, codingABI All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

1.2 Appendix

1.2.1 DFR0534 pinout

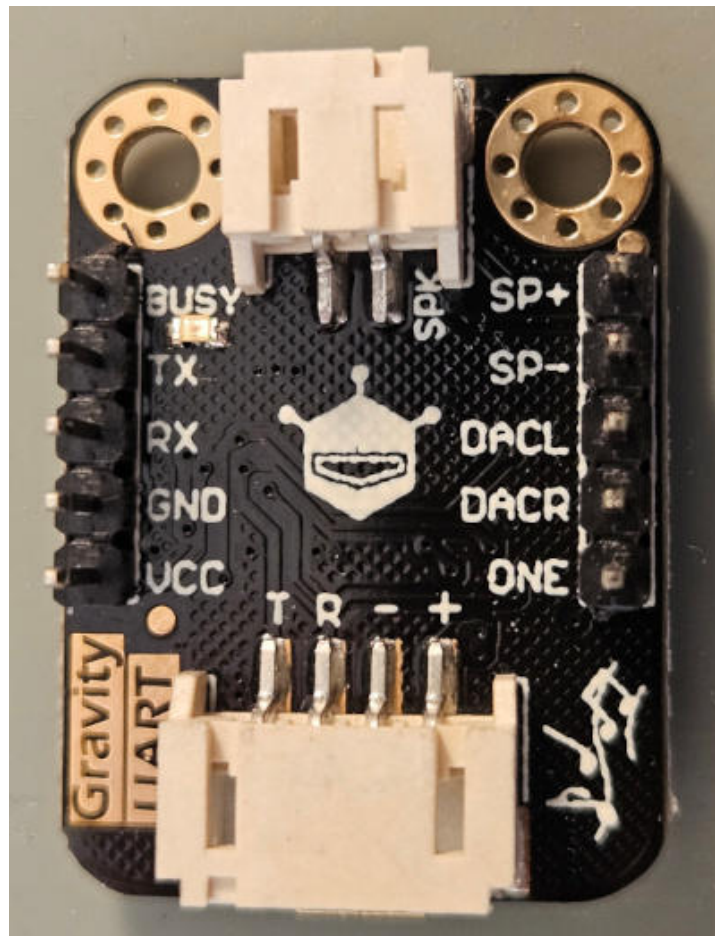


Figure 1.1 DFR0534

Minimal schematic to use this library

Pin	Connected to
TX	SoftwareSerial RX
RX	SoftwareSerial TX*
GND	Ground
VCC	3.3-5V
SP+	Speaker + connector
SP-	Speaker - connector

*If your microcontroller runs at 5V use a 1k resistor between RX and SoftwareSerial TX.

Chapter 2

Class Index

2.1 Class List

Here are the classes, structs, unions and interfaces with brief descriptions:

DFR0534	
Class for a DFR0534 audio module	7

Chapter 3

File Index

3.1 File List

Here is a list of all documented files with brief descriptions:

playCombined.ino	33
playFileByName.ino	34
playFileByNumber.ino	35
DFR0534.cpp	36
DFR0534.h	48

Chapter 4

Class Documentation

4.1 DFR0534 Class Reference

Class for a [DFR0534](#) audio module.

```
#include <DFR0534.h>
```

Public Types

- enum [DFR0534CHANNELS](#) { [CHANNELMP3](#) , [CHANNELAUX](#) , [CHANNELMP3AUX](#) , [CHANNELUNKNOWN](#) }
- enum [DFR0534DRIVE](#) { [DRIVEUSB](#) , [DRIVESD](#) , [DRIVEFLASH](#) , [DRIVEUNKNOWN](#) , [DRIVENO](#) = 0xff }
- enum [DFR0534LOOPMODE](#) { [LOOPBACKALL](#) , [SINGLEAUDIOLOOP](#) , [SINGLEAUDIOSTOP](#) , [PLAYRANDOM](#) , [DIRECTORYLOOP](#) , [RANDOMINDIRECTORY](#) , [SEQUENTIALINDIRECTORY](#) , [SEQUENTIAL](#) , [PLAYMODEUNKNOWN](#) }
- enum [DFR0534EQ](#) { [NORMAL](#) , [POP](#) , [ROCK](#) , [JAZZ](#) , [CLASSIC](#) , [EQUNKNOWN](#) }
- enum [DFR0534STATUS](#) { [STOPPED](#) , [PLAYING](#) , [PAUSED](#) , [STATUSUNKNOWN](#) }

Public Member Functions

- [DFR0534](#) (Stream &stream)
Constructor of a the [DFR0534](#) audio module.
- void [decreaseVolume](#) ()
Decrease volume by one step.
- void [fastBackwardDuration](#) (word seconds)
Fast backward.
- void [fastForwardDuration](#) (word seconds)
Fast forward in seconds.
- byte [getDrive](#) ()
Get current drive.
- byte [getDrivesStates](#) ()

- Checks which drives are ready/online.*

 - bool `getDuration` (byte &hour, byte &minute, byte &second)

Get duration/length of current file.
- bool `getFileName` (char *name)

Get name for current file.
- word `getFileNumber` ()

Get file number of current file.
- int `getFirstFileNumberInCurrentDirectory` ()

Get number of first file in current directory.
- bool `getRuntime` (byte &hour, byte &minute, byte &second)

Get elapsed runtime/duration of the current file.
- byte `getStatus` ()

Get module status.
- int `getTotalFiles` ()

Get total number of supported audio files on current drive.
- int `getTotalFilesInCurrentDirectory` ()

Count all audio files for the current directory.
- void `increaseVolume` ()

Increase volume by one step.
- void `insertFileByNumber` (word track, byte drive=`DRIVEFLASH`)

Pause current file and play another file by number.
- void `pause` ()

Pause the current file.
- void `play` ()

Play the current selected file.
- void `playCombined` (char *list)

Combined/concatenated play of files.
- void `playFileByName` (char *path, byte drive=`DRIVEFLASH`)

Play audio file by file name/path.
- void `playFileByNumber` (word track)

Play audio file by number.
- void `playLastInDirectory` ()

Play last file in directory (in "file copy order")
- void `playNext` ()

Play next file (in "file copy order")
- void `playNextDirectory` ()

Play first file in next directory (in "file copy order")
- void `playPrevious` ()

Play previous file (in "file copy order")
- void `prepareFileByNumber` (word track)

Select file by number, but not start playing.
- void `repeatPart` (byte startMinute, byte startSecond, byte stopMinute, byte stopSecond)

Repeat part of the current file.
- void `setChannel` (byte channel)

Set output for DAC to channel MP3, AUX or both.
- void `setDirectory` (char *path, byte drive=`DRIVEFLASH`)

Should set directory, but does not work for me.
- void `setDrive` (byte drive)

Switch to drive.
- void `setEqualizer` (byte mode)

Set equalizer to NORMAL, POP, ROCK, JAZZ or CLASSIC.

- void [setLoopMode](#) (byte mode)
Set loop mode.
- void [setRepeatLoops](#) (word loops)
Set repeat loops.
- void [setVolume](#) (byte volume)
Set volume.
- void [stop](#) ()
Stop the current file.
- void [stopInsertedFile](#) ()
Stop inserted file.
- void [startSendingRuntime](#) ()
Start sending elapsed runtime every 1 second.
- void [stopCombined](#) ()
Stop combined play (playlist)
- void [stopRepeatPart](#) ()
Stop repeating part of the current file.
- void [stopSendingRuntime](#) ()
Stop sending runtime.

4.1.1 Detailed Description

Class for a [DFR0534](#) audio module.

Definition at line 32 of file [DFR0534.h](#).

4.1.2 Member Enumeration Documentation

4.1.2.1 DFR0534CHANNELS

```
enum DFR0534::DFR0534CHANNELS
```

Supported input channels

Enumerator

CHANNELMP3	Use MP3 input channel for DAC output (=default after device startup)
CHANNELAUX	Use AUX input (P26 and P27) for DAC output
CHANNELMP3AUX	Combines MP3 and AUX audio from P26 and P27 for DAC output
CHANNELUNKNOWN	Unknown

Definition at line 35 of file [DFR0534.h](#).

```
00036     {
00037         CHANNELMP3,
00038         CHANNELAUX,
00039         CHANNELMP3AUX,
00040         CHANNELUNKNOWN
00041     };
```

4.1.2.2 DFR0534DRIVE

```
enum DFR0534::DFR0534DRIVE
```

Supported drives

Enumerator

DRIVEUSB	USB drive
DRIVESD	SD card
DRIVEFLASH	Flash memory chip
DRIVEUNKNOWN	Unknown
DRIVENO	No drive

Definition at line 43 of file [DFR0534.h](#).

```
00044 {
00045     DRIVEUSB,
00046     DRIVESD,
00047     DRIVEFLASH,
00048     DRIVEUNKNOWN,
00049     DRIVENO = 0xff
00050 };
```

4.1.2.3 DFR0534EQ

```
enum DFR0534::DFR0534EQ
```

EQ modes

Enumerator

NORMAL	(=default after device startup)
--------	---------------------------------

Definition at line 65 of file [DFR0534.h](#).

```
00066 {
00067     NORMAL,
00068     POP,
00069     ROCK,
00070     JAZZ ,
00071     CLASSIC,
00072     EQUNKNOWN
00073 };
```

4.1.2.4 DFR0534LOOPMODE

```
enum DFR0534::DFR0534LOOPMODE
```

Loop modes

Enumerator

LOOPBACKALL	Every file on drive in "file copy order" and loop afterwards
SINGLEAUDIOLOOP	Repeat current file
SINGLEAUDIOSTOP	Stops after single file (=default after device startup)
PLAYRANDOM	Random play order
DIRECTORYLOOP	Every file in current director in "file copy order" and loop afterwards
RANDOMINDIRECTORY	Random play order in current directory
SEQUENTIALINDIRECTORY	Every file in current directory in "file copy order" without loop
SEQUENTIAL	Every file on drive in "file copy order" without loop
PLAYMODEUNKNOWN	Unknown

Definition at line 52 of file [DFR0534.h](#).

```
00053     {
00054         LOOPBACKALL,
00055         SINGLEAUDIOLOOP,
00056         SINGLEAUDIOSTOP,
00057         PLAYRANDOM,
00058         DIRECTORYLOOP,
00059         RANDOMINDIRECTORY,
00060         SEQUENTIALINDIRECTORY,
00061         SEQUENTIAL,
00062         PLAYMODEUNKNOWN
00063     };
```

4.1.2.5 DFR0534STATUS

enum [DFR0534::DFR0534STATUS](#)

Modul states

Enumerator

STOPPED	Audio module is idle
PLAYING	Audio module is playing a file
PAUSED	Audio module is paused
STATUSUNKNOWN	Unkown

Definition at line 75 of file [DFR0534.h](#).

```
00076     {
00077         STOPPED,
00078         PLAYING,
00079         PAUSED,
00080         STATUSUNKNOWN
00081     };
```

4.1.3 Constructor & Destructor Documentation

4.1.3.1 DFR0534()

```
DFR0534::DFR0534 (
    Stream & stream) [inline]
```

Constructor of a the [DFR0534](#) audio module.

Parameters

<i>in</i>	<i>stream</i>	Serial connection object, like SoftwareSerial
-----------	---------------	---

Definition at line 87 of file [DFR0534.h](#).

```
00088     {
00089         m_ptrStream = &stream;
00090     }
```

4.1.4 Member Function Documentation

4.1.4.1 decreaseVolume()

```
void DFR0534::decreaseVolume ()
```

Decrease volume by one step.

Definition at line 748 of file [DFR0534.cpp](#).

```
00749 {
00750     if (m_ptrStream == NULL) return; // Should not happen
00751     sendStartingCode();
00752     sendDataByte(0x15);
00753     sendDataByte(0x00);
00754     sendChecksum();
00755 }
```

4.1.4.2 fastBackwardDuration()

```
void DFR0534::fastBackwardDuration (
    word seconds)
```

Fast backward.

Fast backward in seconds

Parameters

in	<i>seconds</i>	Seconds to go backward
----	----------------	------------------------

Definition at line 1025 of file [DFR0534.cpp](#).

```
01026 {
01027     if (m_ptrStream == NULL) return; // Should not happen
01028     sendStartingCode();
01029     sendDataByte(0x22);
01030     sendDataByte(0x02);
01031     sendDataByte((seconds » 8) & 0xff);
01032     sendDataByte(seconds & 0xff);
01033     sendChecksum();
01034 }
```

4.1.4.3 fastForwardDuration()

```
void DFR0534::fastForwardDuration (
    word seconds)
```

Fast forward in seconds.

Parameters

in	<i>seconds</i>	Seconds to go forward
----	----------------	-----------------------

Definition at line 1042 of file [DFR0534.cpp](#).

```
01043 {
01044     if (m_ptrStream == NULL) return; // Should not happen
01045     sendStartingCode();
01046     sendDataByte(0x23);
01047     sendDataByte(0x02);
01048     sendDataByte((seconds » 8) & 0xff);
01049     sendDataByte(seconds & 0xff);
01050     sendChecksum();
01051 }
```

4.1.4.4 getDrive()

```
byte DFR0534::getDrive ()
```

Get current drive.

Return values

<i>DFR0534::DRIVEUSB</i>	USB drive
<i>DFR0534::DRIVESD</i>	SD card
<i>DFR0534::DRIVEFLASH</i>	Flash memory chip
<i>DFR0534::DRIVENO</i>	No drive found
<i>DFR0534::DRIVEUNKNOWN</i>	Error (for example request timeout)

Definition at line 345 of file [DFR0534.cpp](#).

```

00346 {
00347     #define COMMAND 0x0A
00348     #define RECEIVEBYTETIMEOUTMS 100
00349     #define RECEIVEGLOBALTIMEOUTMS 500
00350     #define RECEIVEFAILED DRIVEUNKNOWN
00351     #define RECEIVEHEADERLENGTH 2 // startingcode+command
00352
00353     if (m_ptrStream == NULL) return RECEIVEFAILED; // Should not happen
00354     sendStartingCode();
00355     sendDataByte(COMMAND);
00356     sendDataByte(0x00);
00357     sendChecksum();
00358
00359     // Receive
00360     int i=0;
00361     byte data, firstByte = 0, sum, length=0xff, result = 0;
00362     unsigned long receiveStartMS = millis();
00363     do {
00364         byte dataReady = 0;
00365         unsigned long lastMS = millis();
00366         // Wait for response or timeout
00367         while ((millis()-lastMS < RECEIVEBYTETIMEOUTMS) && (dataReady==0)) dataReady =
m_ptrStream->available();
00368
00369         if (dataReady == 0) return RECEIVEFAILED; // Timeout
00370         data = m_ptrStream->read();
00371
00372         if (i==0) { // Begin of transmission
00373             firstByte=data;
00374             sum = 0;
00375         }
00376         if ((i == 1) && (data != COMMAND)) {
00377             // Invalid signal => reset receive
00378             i=0;
00379             firstByte = 0;
00380         }
00381         if (i == RECEIVEHEADERLENGTH) {
00382             length = data; // Length of receiving data
00383             if (length != 1) {
00384                 // Invalid length => reset receive
00385                 i=0;
00386                 firstByte = 0;
00387             }
00388         }
00389         if ((i > RECEIVEHEADERLENGTH) && (i-RECEIVEHEADERLENGTH-1<length)) {
00390             result = data;
00391         }
00392         if (firstByte == STARTINGCODE) {
00393             if (i-RECEIVEHEADERLENGTH<=length) sum+=data; // Update checksum
00394             i++;
00395         }
00396         if (millis()-receiveStartMS > RECEIVEGLOBALTIMEOUTMS) return RECEIVEFAILED; // Timeout
00397     } while (i<length+RECEIVEHEADERLENGTH+2);
00398
00399     if (data != sum) return RECEIVEFAILED; // Does checksum matches?
00400     return result;
00401 }
```

4.1.4.5 getDrivesStates()

```
byte DFR0534::getDrivesStates ()
```

Checks which drives are ready/online.

Returned value is a bit pattern that shows which drives are ready/online (1=online,0=offline):

- Bit 0 = [DFR0534::DRIVEUSB](#)
- Bit 1 = [DFR0534::DRIVESD](#)
- Bit 2 = [DFR0534::DRIVEFLASH](#)

Returns

Bit pattern for drives

Return values

DFR0534::DRIVEUNKNOWN	Error (for example request timeout)
---------------------------------------	-------------------------------------

Definition at line 278 of file [DFR0534.cpp](#).

```

00279 {
00280     #define COMMAND 0x09
00281     #define RECEIVEBYTETIMEOUTMS 100
00282     #define RECEIVEGLOBALTIMEOUTMS 500
00283     #define RECEIVEFAILED DRIVEUNKNOWN
00284     #define RECEIVEHEADERLENGTH 2 // startingcode+command
00285
00286     if (m_ptrStream == NULL) return RECEIVEFAILED; // Should not happen
00287     sendStartingCode();
00288     sendDataByte(COMMAND);
00289     sendDataByte(0x00);
00290     sendChecksum();
00291
00292     // Receive
00293     int i=0;
00294     byte data, firstByte = 0, sum, length=0xff, result = 0;
00295     unsigned long receiveStartMS = millis();
00296     do {
00297         byte dataReady = 0;
00298         unsigned long lastMS = millis();
00299         // Wait for response or timeout
00300         while ((millis()-lastMS < RECEIVEBYTETIMEOUTMS) && (dataReady==0)) dataReady =
m_ptrStream->available();
00301
00302         if (dataReady == 0) return RECEIVEFAILED; // Timeout
00303         data = m_ptrStream->read();
00304
00305         if (i==0) { // Begin of transmission
00306             firstByte=data;
00307             sum = 0;
00308         }
00309         if ((i == 1) && (data != COMMAND)) {
00310             // Invalid signal => reset receive
00311             i=0;
00312             firstByte = 0;
00313         }
00314         if (i == RECEIVEHEADERLENGTH) {
00315             length = data; // Length of receiving data
00316             if (length != 1) {
00317                 // Invalid length => reset receive
00318                 i=0;
00319                 firstByte = 0;
00320             }
00321         }
00322         if ((i > RECEIVEHEADERLENGTH) && (i-RECEIVEHEADERLENGTH-1<length)) {
00323             result = data;
00324         }
00325         if (firstByte == STARTINGCODE) {
00326             if (i-RECEIVEHEADERLENGTH<=length) sum+=data; // Update checksum
00327             i++;
00328         }
00329         if (millis()-receiveStartMS > RECEIVEGLOBALTIMEOUTMS) return RECEIVEFAILED; // Timeout
00330     } while (i<length+RECEIVEHEADERLENGTH+2);
00331
00332     if (data != sum) return RECEIVEFAILED; // Does checksum matches?
00333     return result;
00334 }

```

4.1.4.6 getDuration()

```
bool DFR0534::getDuration (
    byte & hour,
    byte & minute,
    byte & second)
```

Get duration/length of current file.

Get duration/length of current file in hours:minutes:seconds

Parameters

out	<i>hour</i>	Hours
out	<i>minute</i>	Minutes
out	<i>second</i>	Seconds

Return values

<i>true</i>	Request was successful
<i>false</i>	Request failed

Definition at line 1065 of file DFR0534.cpp.

```
01066 {
01067     #define COMMAND 0x24
01068     #define RECEIVEFAILED false
01069     #define RECEIVEBYTETIMEOUTMS 100
01070     #define RECEIVEGLOBALTIMEOUTMS 500
01071     #define RECEIVEHEADERLENGTH 2 // startingcode+command
01072
01073     if (m_ptrStream == NULL) return false; // Should not happen
01074     sendStartingCode();
01075     sendDataByte(COMMAND);
01076     sendDataByte(0x00);
01077     sendChecksum();
01078
01079     // Receive
01080     int i=0;
01081     byte data, firstByte = 0, sum, length=0xff;
01082     word result = 0;
01083     unsigned long receiveStartMS = millis();
01084     do {
01085         byte dataReady = 0;
01086         unsigned long lastMS = millis();
01087         // Wait for response or timeout
01088         while ((millis()-lastMS < RECEIVEBYTETIMEOUTMS) && (dataReady==0)) dataReady =
m_ptrStream->available();
01089
01090         if (dataReady == 0) return RECEIVEFAILED; // Timeout
01091         data = m_ptrStream->read();
01092
01093         if (i==0) { // Begin of transmission
01094             firstByte=data;
01095             sum = 0;
01096         }
01097         if ((i == 1) && (data != COMMAND)) {
01098             // Invalid signal => reset receive
01099             i=0;
01100             firstByte = 0;
01101         }
01102         if (i == RECEIVEHEADERLENGTH) {
01103             length = data; // Length of receiving data
01104             if (length != 3) {
01105                 // Invalid length => reset receive
01106                 i=0;
01107                 firstByte = 0;
01108             }
01109         }
01110         if ((i > RECEIVEHEADERLENGTH) && (i-RECEIVEHEADERLENGTH-1<length)) {
01111             switch (i-RECEIVEHEADERLENGTH-1) {
01112                 case 0:
```

```

01113         hour=data;
01114         break;
01115     case 1:
01116         minute=data;
01117         break;
01118     case 2:
01119         second=data;
01120         break;
01121     }
01122 }
01123 if (firstByte == STARTINGCODE) {
01124     if (i-RECEIVEHEADERLENGTH<=length) sum+=data; // Update checksum
01125     i++;
01126 }
01127 if (millis()-receiveStartMS > RECEIVEGLOBALTIMEOUTMS) return RECEIVEFAILED; // Timeout
01128 } while (i<length+RECEIVEHEADERLENGTH+2);
01129
01130 return (data == sum); // Does checksum matches?
01131 }

```

4.1.4.7 getFileName()

```

bool DFR0534::getFileName (
    char * name)

```

Get name for current file.

File name is in 8+3 format in upper case, with spaces without the dot "." between name and extension, e.g. "TEST WAV" for the file test.wav

Parameters

out	name	Filename. You have to allocate at least 12 chars memory for this variable.
-----	------	--

Definition at line 913 of file [DFR0534.cpp](#).

```

00914 {
00915     #define COMMAND 0x1E
00916     #define RECEIVEBYTETIMEOUTMS 100
00917     #define RECEIVEGLOBALTIMEOUTMS 500
00918     #define RECEIVEFAILED false
00919     #define RECEIVEHEADERLENGTH 2 // startingcode+command
00920
00921     if (m_ptrStream == NULL) return false; // Should not happen
00922     if (name == NULL) return false;
00923     name[0] = '\0';
00924
00925     sendStartingCode();
00926     sendDataByte(COMMAND);
00927     sendDataByte(0x00);
00928     sendChecksum();
00929
00930     // Receive
00931     int i=0;
00932     byte data, firstByte = 0, sum, length=0xff;
00933     unsigned long receiveStartMS = millis();
00934     do {
00935         byte dataReady = 0;
00936         unsigned long lastMS = millis();
00937         // Wait for response or timeout
00938         while ((millis()-lastMS < RECEIVEBYTETIMEOUTMS) && (dataReady==0)) dataReady =
m_ptrStream->available();
00939
00940         if (dataReady == 0) return RECEIVEFAILED; // Timeout
00941         data = m_ptrStream->read();
00942         if (i==0) { // Begin of transmission
00943             firstByte=data;
00944             sum = 0;
00945         }
00946         if ((i == 1) && (data != COMMAND)) {
00947             // Invalid signal => reset receive
00948             i=0;
00949             firstByte = 0;
00950         }
00951         if (i == RECEIVEHEADERLENGTH) length = data; // Length of receiving string
00952         if ((i > RECEIVEHEADERLENGTH) && (i-RECEIVEHEADERLENGTH-1<length)) {

```

```

00953         if ((i-RECEIVEHEADERLENGTH) < 12) { // I expect no longer file names than 8+3 chars plus '\0'
00954             name[i-RECEIVEHEADERLENGTH-1] = data;
00955             name[i-RECEIVEHEADERLENGTH] = '\0';
00956         }
00957     }
00958     if (firstByte == STARTINGCODE) {
00959         if (i-RECEIVEHEADERLENGTH<=length) sum+=data; // Update checksum
00960         i++;
00961     }
00962     if (millis()-receiveStartMS > RECEIVEGLOBALTIMEOUTMS) return RECEIVEFAILED; // Timeout
00963 } while (i<length+RECEIVEHEADERLENGTH+2);
00964 return (data == sum); // Does checksum matches?
00965 }

```

4.1.4.8 getFileNumber()

word DFR0534::getFileNumber ()

Get file number of current file.

File number is in "file copy order". First audio file copied to the drive get number 1...

Returns

File number

Return values

0	Error (for example request timeout)
---	-------------------------------------

Definition at line 427 of file DFR0534.cpp.

```

00428 {
00429     #define COMMAND 0x0D
00430     #define RECEIVEFAILED 0
00431     #define RECEIVEBYTETIMEOUTMS 100
00432     #define RECEIVEGLOBALTIMEOUTMS 500
00433     #define RECEIVEHEADERLENGTH 2 // startingcode+command
00434
00435     if (m_ptrStream == NULL) return RECEIVEFAILED; // Should not happen
00436     sendStartingCode();
00437     sendDataByte(COMMAND);
00438     sendDataByte(0x00);
00439     sendChecksum();
00440
00441     // Receive
00442     int i=0;
00443     byte data, firstByte = 0, sum, length=0xff;
00444     word result = 0;
00445     unsigned long receiveStartMS = millis();
00446     do {
00447         byte dataReady = 0;
00448         unsigned long lastMS = millis();
00449         // Wait for response or timeout
00450         while ((millis()-lastMS < RECEIVEBYTETIMEOUTMS) && (dataReady==0)) dataReady =
m_ptrStream->available();
00451
00452         if (dataReady == 0) return RECEIVEFAILED; // Timeout
00453         data = m_ptrStream->read();
00454
00455         if (i==0) { // Begin of transmission
00456             firstByte=data;
00457             sum = 0;
00458         }
00459         if ((i == 1) && (data != COMMAND)) {
00460             // Invalid signal => reset receive
00461             i=0;
00462             firstByte = 0;
00463         }
00464         if (i == RECEIVEHEADERLENGTH) {
00465             length = data; // Length of receiving data
00466             if (length != 2) {
00467                 // Invalid length => reset receive
00468                 i=0;

```

```

00469         firstByte = 0;
00470     }
00471 }
00472 if ((i > RECEIVEHEADERLENGTH) && (i-RECEIVEHEADERLENGTH-1<length)) {
00473     switch (i-RECEIVEHEADERLENGTH-1) {
00474         case 0:
00475             result=data<<8;
00476             break;
00477         case 1:
00478             result+=data;
00479             break;
00480     }
00481 }
00482 if (firstByte == STARTINGCODE) {
00483     if (i-RECEIVEHEADERLENGTH<=length) sum+=data; // Update checksum
00484     i++;
00485 }
00486 if (millis()-receiveStartMS > RECEIVEGLOBALTIMEOUTMS) return RECEIVEFAILED; // Timeout
00487 } while (i<length+RECEIVEHEADERLENGTH+2);
00488
00489 if (data != sum) return RECEIVEFAILED; // Does checksum matches?
00490 return result;
00491 }

```

4.1.4.9 getFirstFileNumberInCurrentDirectory()

```
int DFR0534::getFirstFileNumberInCurrentDirectory ()
```

Get number of first file in current directory.

Returns

File number

Return values

-1	Error (for example request timeout)
----	-------------------------------------

Definition at line 595 of file [DFR0534.cpp](#).

```

00596 {
00597     #define COMMAND 0x11
00598     #define RECEIVEFAILED -1
00599     #define RECEIVEBYTETIMEOUTMS 100
00600     #define RECEIVEGLOBALTIMEOUTMS 500
00601     #define RECEIVEHEADERLENGTH 2 // startingcode+command
00602
00603     if (m_ptrStream == NULL) RECEIVEFAILED; // Should not happen
00604     sendStartingCode();
00605     sendDataByte(COMMAND);
00606     sendDataByte(0x00);
00607     sendChecksum();
00608
00609     // Receive
00610     int i=0;
00611     byte data, firstByte = 0, sum, length=0xff;
00612     word result = 0;
00613     unsigned long receiveStartMS = millis();
00614     do {
00615         byte dataReady = 0;
00616         unsigned long lastMS = millis();
00617         // Wait for response or timeout
00618         while ((millis()-lastMS < RECEIVEBYTETIMEOUTMS) && (dataReady==0)) dataReady =
m_ptrStream->available();
00619
00620         if (dataReady == 0) return RECEIVEFAILED; // Timeout
00621         data = m_ptrStream->read();
00622
00623         if (i==0) { // Begin of transmission
00624             firstByte=data;
00625             sum = 0;
00626         }
00627         if ((i == 1) && (data != COMMAND)) {
00628             // Invalid signal => reset receive
00629             i=0;

```

```

00630     firstByte = 0;
00631 }
00632 if (i == RECEIVEHEADERLENGTH) {
00633     length = data; // Length of receiving data
00634     if (length != 2) {
00635         // Invalid length => reset receive
00636         i=0;
00637         firstByte = 0;
00638     }
00639 }
00640 if ((i > RECEIVEHEADERLENGTH) && (i-RECEIVEHEADERLENGTH-1<length)) {
00641     switch (i-RECEIVEHEADERLENGTH-1) {
00642         case 0:
00643             result=data<<8;
00644             break;
00645         case 1:
00646             result+=data;
00647             break;
00648     }
00649 }
00650 if (firstByte == STARTINGCODE) {
00651     if (i-RECEIVEHEADERLENGTH<=length) sum+=data; // Update checksum
00652     i++;
00653 }
00654 if (millis()-receiveStartMS > RECEIVEGLOBALTIMEOUTMS) return RECEIVEFAILED; // Timeout
00655 } while (i<length+RECEIVEHEADERLENGTH+2);
00656
00657 if (data != sum) return RECEIVEFAILED; // Does checksum matches?
00658 return result;
00659 }

```

4.1.4.10 getRuntime()

```

bool DFR0534::getRuntime (
    byte & hour,
    byte & minute,
    byte & second)

```

Get elapsed runtime/duration of the current file.

Runtime is in hours:minutes:seconds. You have to call [startSendingRuntime\(\)](#) before runtimes can be received.

Parameters

out	<i>hour</i>	Hours
out	<i>minute</i>	Minutes
out	<i>second</i>	Seconds

Return values

<i>true</i>	Request was successful
<i>false</i>	Request failed

Definition at line 1158 of file [DFR0534.cpp](#).

```

01159 {
01160     #define COMMAND 0x25
01161     #define RECEIVEFAILED false
01162     #define RECEIVEBYTETIMEOUTMS 100
01163     #define RECEIVEGLOBALTIMEOUTMS 500
01164     #define RECEIVEHEADERLENGTH 2 // startingcode+command
01165
01166     if (m_ptrStream == NULL) return false; // Should not happen
01167
01168     // Receive
01169     int i=0;
01170     byte data, firstByte = 0, sum, length=0xff;
01171     word result = 0;
01172     unsigned long receiveStartMS = millis();
01173     do {

```

```

01174     byte dataReady = 0;
01175     unsigned long lastMS = millis();
01176     // Wait for response or timeout
01177     while ((millis()-lastMS < RECEIVEBYTETIMEOUTMS) && (dataReady==0)) dataReady =
m_ptrStream->available();
01178
01179     if (dataReady == 0) return RECEIVEFAILED; // Timeout
01180     data = m_ptrStream->read();
01181
01182     if (i==0) { // Begin of transmission
01183         firstByte=data;
01184         sum = 0;
01185     }
01186     if ((i == 1) && (data != COMMAND)) {
01187         // Invalid signal => reset receive
01188         i=0;
01189         firstByte = 0;
01190     }
01191     if (i == RECEIVEHEADERLENGTH) {
01192         length = data; // Length of receiving data
01193         if (length != 3) {
01194             // Invalid length => reset receive
01195             i=0;
01196             firstByte = 0;
01197         }
01198     }
01199     if ((i > RECEIVEHEADERLENGTH) && (i-RECEIVEHEADERLENGTH-1<length)) {
01200         switch (i-RECEIVEHEADERLENGTH-1) {
01201             case 0:
01202                 hour=data;
01203                 break;
01204             case 1:
01205                 minute=data;
01206                 break;
01207             case 2:
01208                 second=data;
01209                 break;
01210         }
01211     }
01212     if (firstByte == STARTINGCODE) {
01213         if (i-RECEIVEHEADERLENGTH<=length) sum+=data; // Update checksum
01214         i++;
01215     }
01216     if (millis()-receiveStartMS > RECEIVEGLOBALTIMEOUTMS) return RECEIVEFAILED; // Timeout
01217 } while (i<length+RECEIVEHEADERLENGTH+2);
01218
01219 return (data == sum); // Does checksum matches?
01220 }

```

4.1.4.11 getStatus()

```
byte DFR0534::getStatus ()
```

Get module status.

Return values

<i>DFR0534::STOPPED</i>	Audio module is idle
<i>DFR0534::PLAYING</i>	Audio module is playing a file
<i>DFR0534::PAUSED</i>	Audio module is paused
<i>DFR0534::STATUSUNKNOWN</i>	Error (for example request timeout)

Definition at line 53 of file [DFR0534.cpp](#).

```

00054 {
00055     #define COMMAND 0x01
00056     #define RECEIVEBYTETIMEOUTMS 100
00057     #define RECEIVEGLOBALTIMEOUTMS 500
00058     #define RECEIVEFAILED STATUSUNKNOWN
00059     #define RECEIVEHEADERLENGTH 2 // startingcode+command
00060
00061     if (m_ptrStream == NULL) return RECEIVEFAILED; // Should not happen
00062     sendStartingCode();
00063     sendDataByte(COMMAND);;
00064     sendDataByte(0x00);;
00065     sendChecksum();

```



```

00066
00067 // Receive
00068 int i=0;
00069 byte data, firstByte = 0, sum, length=0xff, result = 0;
00070 unsigned long receiveStartMS = millis();
00071 do {
00072     byte dataReady = 0;
00073     unsigned long lastMS = millis();
00074     // Wait for response or timeout
00075     while ((millis()-lastMS < RECEIVEBYTETIMEOUTMS) && (dataReady==0)) dataReady =
m_ptrStream->available();
00076
00077     if (dataReady == 0) return RECEIVEFAILED; // Timeout
00078     data = m_ptrStream->read();
00079
00080     if (i==0) { // Begin of transmission
00081         firstByte=data;
00082         sum = 0;
00083     }
00084     if ((i == 1) && (data != COMMAND)) {
00085         // Invalid signal => reset receive
00086         i=0;
00087         firstByte = 0;
00088     }
00089     if (i == RECEIVEHEADERLENGTH) {
00090         length = data; // Length of receiving data
00091         if (length != 1) {
00092             // Invalid length => reset receive
00093             i=0;
00094             firstByte = 0;
00095         }
00096     }
00097     if ((i > RECEIVEHEADERLENGTH) && (i-RECEIVEHEADERLENGTH-1<length)) {
00098         result = data;
00099     }
00100     if (firstByte == STARTINGCODE) {
00101         if (i-RECEIVEHEADERLENGTH<=length) sum+=data; // Update checksum
00102         i++;
00103     }
00104     if (millis()-receiveStartMS > RECEIVEGLOBALTIMEOUTMS) return RECEIVEFAILED; // Timeout
00105 } while (i<length+RECEIVEHEADERLENGTH+2);
00106
00107 if (data != sum) return RECEIVEFAILED; // Does checksum matches?
00108 return result;
00109 }

```

4.1.4.12 getTotalFiles()

```
int DFR0534::getTotalFiles ()
```

Get total number of supported audio files on current drive.

Returns

Number of files

Return values

-1	Error (for example request timeout)
----	-------------------------------------

Definition at line 499 of file [DFR0534.cpp](#).

```

00500 {
00501     #define COMMAND 0x0C
00502     #define RECEIVEFAILED -1
00503     #define RECEIVEBYTETIMEOUTMS 100
00504     #define RECEIVEGLOBALTIMEOUTMS 500
00505     #define RECEIVEHEADERLENGTH 2 // startingcode+command
00506
00507     if (m_ptrStream == NULL) return RECEIVEFAILED; // Should not happen
00508     sendStartingCode();
00509     sendDataByte(COMMAND);
00510     sendDataByte(0x00);
00511     sendChecksum();
00512

```

```

00513 // Receive
00514 int i=0;
00515 byte data, firstByte = 0, sum, length=0xff;
00516 word result = 0;
00517 unsigned long receiveStartMS = millis();
00518 do {
00519     byte dataReady = 0;
00520     unsigned long lastMS = millis();
00521     // Wait for response or timeout
00522     while ((millis()-lastMS < RECEIVEBYTETIMEOUTMS) && (dataReady==0)) dataReady =
m_ptrStream->available();
00523
00524     if (dataReady == 0) return RECEIVEFAILED; // Timeout
00525     data = m_ptrStream->read();
00526
00527     if (i==0) { // Begin of transmission
00528         firstByte=data;
00529         sum = 0;
00530     }
00531     if ((i == 1) && (data != COMMAND)) {
00532         // Invalid signal => reset receive
00533         i=0;
00534         firstByte = 0;
00535     }
00536     if (i == RECEIVEHEADERLENGTH) {
00537         length = data; // Length of receiving data
00538         if (length != 2) {
00539             // Invalid length => reset receive
00540             i=0;
00541             firstByte = 0;
00542         }
00543     }
00544     if ((i > RECEIVEHEADERLENGTH) && (i-RECEIVEHEADERLENGTH-1<length)) {
00545         switch (i-RECEIVEHEADERLENGTH-1) {
00546             case 0:
00547                 result=data<<8;
00548                 break;
00549             case 1:
00550                 result+=data;
00551                 break;
00552         }
00553     }
00554     if (firstByte == STARTINGCODE) {
00555         if (i-RECEIVEHEADERLENGTH<=length) sum+=data; // Update checksum
00556         i++;
00557     }
00558     if (millis()-receiveStartMS > RECEIVEGLOBALTIMEOUTMS) return RECEIVEFAILED; // Timeout
00559 } while (i<length+RECEIVEHEADERLENGTH+2);
00560
00561 if (data != sum) return RECEIVEFAILED; // Does checksum matches?
00562 return result;
00563 }

```

4.1.4.13 getTotalFilesInCurrentDirectory()

```
int DFR0534::getTotalFilesInCurrentDirectory ()
```

Count all audio files for the current directory.

Returns

File count

Return values

-1	Error (for example request timeout)
----	-------------------------------------

Definition at line 667 of file [DFR0534.cpp](#).

```

00668 {
00669     #define COMMAND 0x12
00670     #define RECEIVEFAILED -1
00671     #define RECEIVEBYTETIMEOUTMS 100
00672     #define RECEIVEGLOBALTIMEOUTMS 500
00673     #define RECEIVEHEADERLENGTH 2 // startingcode+command

```

```

00674
00675     if (m_ptrStream == NULL) RECEIVEFAILED; // Should not happen
00676     sendStartingCode();
00677     sendDataByte(COMMAND);
00678     sendDataByte(0x00);
00679     sendChecksum();
00680
00681     // Receive
00682     int i=0;
00683     byte data, firstByte = 0, sum, length=0xff;
00684     word result = 0;
00685     unsigned long receiveStartMS = millis();
00686     do {
00687         byte dataReady = 0;
00688         unsigned long lastMS = millis();
00689         // Wait for response or timeout
00690         while ((millis()-lastMS < RECEIVEBYTETIMEOUTMS) && (dataReady==0)) dataReady =
m_ptrStream->available();
00691
00692         if (dataReady == 0) return RECEIVEFAILED; // Timeout
00693         data = m_ptrStream->read();
00694
00695         if (i==0) { // Begin of transmission
00696             firstByte=data;
00697             sum = 0;
00698         }
00699         if ((i == 1) && (data != COMMAND)) {
00700             // Invalid signal => reset receive
00701             i=0;
00702             firstByte = 0;
00703         }
00704         if (i == RECEIVEHEADERLENGTH) {
00705             length = data; // Length of receiving data
00706             if (length != 2) {
00707                 // Invalid length => reset receive
00708                 i=0;
00709                 firstByte = 0;
00710             }
00711         }
00712         if ((i > RECEIVEHEADERLENGTH) && (i-RECEIVEHEADERLENGTH-1<length)) {
00713             switch (i-RECEIVEHEADERLENGTH-1) {
00714                 case 0:
00715                     result=data<<8;
00716                     break;
00717                 case 1:
00718                     result+=data;
00719                     break;
00720             }
00721         }
00722         if (firstByte == STARTINGCODE) {
00723             if (i-RECEIVEHEADERLENGTH<=length) sum+=data; // Update checksum
00724             i++;
00725         }
00726         if (millis()-receiveStartMS > RECEIVEGLOBALTIMEOUTMS) return RECEIVEFAILED; // Timeout
00727     } while (i<length+RECEIVEHEADERLENGTH+2);
00728
00729     if (data != sum) return RECEIVEFAILED; // Does checksum matches?
00730     return result;
00731 }

```

4.1.4.14 increaseVolume()

```
void DFR0534::increaseVolume ()
```

Increase volume by one step.

Definition at line 736 of file [DFR0534.cpp](#).

```

00737 {
00738     if (m_ptrStream == NULL) return; // Should not happen
00739     sendStartingCode();
00740     sendDataByte(0x14);
00741     sendDataByte(0x00);
00742     sendChecksum();
00743 }

```

4.1.4.15 insertFileByNumber()

```
void DFR0534::insertFileByNumber (
    word track,
    byte drive = DRIVEFLASH)
```

Pause current file and play another file by number.

File number order is "file copy order". Continue original file when this file stops

Parameters

in	<i>track</i>	File number of the audio file
in	<i>drive</i>	Drive, where file is stored: Drive DFR0534::DRIVEUSB , DFR0534::DRIVESD or DFR0534::DRIVEFLASH (=default)

Definition at line 765 of file [DFR0534.cpp](#).

```
00766 {
00767     if (m_ptrStream == NULL) return; // Should not happen
00768     if (drive >= DRIVEUNKNOWN) return;
00769     sendStartingCode();
00770     sendDataByte(0x16);
00771     sendDataByte(0x03);
00772     sendDataByte(drive);
00773     sendDataByte((track >> 8) & 0xff);
00774     sendDataByte(track & 0xff);
00775     sendChecksum();
00776 }
```

4.1.4.16 pause()

```
void DFR0534::pause ()
```

Pause the current file.

Definition at line 180 of file [DFR0534.cpp](#).

```
00181 {
00182     if (m_ptrStream == NULL) return; // Should not happen
00183     sendStartingCode();
00184     sendDataByte(0x03);
00185     sendDataByte(0x00);
00186     sendChecksum();
00187 }
```

4.1.4.17 play()

```
void DFR0534::play ()
```

Play the current selected file.

Definition at line 168 of file [DFR0534.cpp](#).

```
00169 {
00170     if (m_ptrStream == NULL) return; // Should not happen
00171     sendStartingCode();
00172     sendDataByte(0x02);
00173     sendDataByte(0x00);
00174     sendChecksum();
00175 }
```

4.1.4.18 playCombined()

```
void DFR0534::playCombined (
    char * list)
```

Combined/concatenated play of files.

Combined is like a playlist, for example `playCombined("0103")` for the two files 01 and 03. The Filenames must be two chars long and the files must be in a directory called /ZH Combined playback ignores loop mode and stops after last file.

Parameters

in	<i>list</i>	Concatenated list of all files to play
----	-------------	--

Definition at line 858 of file DFR0534.cpp.

```

00859 {
00860     if (m_ptrStream == NULL) return; // Should not happen
00861     if (list == NULL) return;
00862     if ((strlen(list) % 2) != 0) return;
00863
00864     sendStartingCode();
00865     sendDataByte(0x1B);
00866     sendDataByte(strlen(list));
00867     for (int i=0; i<strlen(list); i++) {
00868         sendDataByte(list[i]);
00869     }
00870     sendChecksum();
00871 }
```

4.1.4.19 playFileByName()

```

void DFR0534::playFileByName (
    char * path,
    byte drive = DRIVEFLASH)
```

Play audio file by file name/path.

The file name/path is the full path of the audio file to be played in format which looks like a special unix 8+3 format:

- Without the dot for the file extension
- All characters in upper case
- maximal 8 characters
- Every file and folder whose name length is shorter then 8 chars must be filled up to the 8 chars length by space chars
- must end with WAV or MP3
- Only WAV and MP3 files are supported
- Wildcards * (=multiple arbitrary characters) and ? (=one single arbitrary character) are allowed and can be used to reduce the filling space chars

Valid examples:

- "/01 WAV" for a file '/01.wav'
- "/99-AFR~1MP3" for a file '/99-Africa.mp3'
- "/SUN*MP3" for first file matching '/sun*.mp3', for example '/sun.mp3'
- "/99-AFR*MP3" for first file matching '/99-Afr*.mp3'
- "/10*" for first audio file matching '/10*.*'
- "/10 /20 WAV" for the file '/10/20.wav' (first means first in "file copy order")

Parameters

in	<i>path</i>	Full path of the audio file
in	<i>drive</i>	Drive, where file is stored: Drive DFR0534::DRIVEUSB , DFR0534::DRIVESD or DFR0534::DRIVEFLASH (=default)

Definition at line 252 of file [DFR0534.cpp](#).

```

00253 {
00254     if (m_ptrStream == NULL) return; // Should not happen
00255     if (path == NULL) return;
00256     if (drive >= DRIVEUNKNOWN) return;
00257     sendStartingCode();
00258     sendDataByte(0x08);
00259     sendDataByte(strlen(path)+1);
00260     sendDataByte(drive);
00261     for (int i=0; i<strlen(path); i++) {
00262         sendDataByte(path[i]);
00263     }
00264     sendChecksum();
00265 }
```

4.1.4.20 playFileByNumber()

```

void DFR0534::playFileByNumber (
    word track)
```

Play audio file by number.

File number order is "file copy order": First audio file copied to the drive gets number 1, second audio file copied gets number 2...)

Parameters

in	<i>track</i>	File number
----	--------------	-------------

Definition at line 135 of file [DFR0534.cpp](#).

```

00136 {
00137     if (m_ptrStream == NULL) return; // Should not happen
00138     if (track <=0) return;
00139     sendStartingCode();
00140     sendDataByte(0x07);
00141     sendDataByte(0x02);
00142     sendDataByte((track >> 8) & 0xff);
00143     sendDataByte(track & 0xff);
00144     sendChecksum();
00145 }
```

4.1.4.21 playLastInDirectory()

```

void DFR0534::playLastInDirectory ()
```

Play last file in directory (in "file copy order")

Definition at line 568 of file [DFR0534.cpp](#).

```

00569 {
00570     if (m_ptrStream == NULL) return; // Should not happen
00571     sendStartingCode();
00572     sendDataByte(0x0E);
00573     sendDataByte(0x00);
00574     sendChecksum();
00575 }
```

4.1.4.22 playNext()

```
void DFR0534::playNext ()
```

Play next file (in "file copy order")

Definition at line 216 of file [DFR0534.cpp](#).

```

00217 {
00218     if (m_ptrStream == NULL) return; // Should not happen
00219     sendStartingCode();
00220     sendDataByte(0x06);
00221     sendDataByte(0x00);
00222     sendChecksum();
00223 }

```

4.1.4.23 playNextDirectory()

```
void DFR0534::playNextDirectory ()
```

Play first file in next directory (in "file copy order")

Definition at line 580 of file [DFR0534.cpp](#).

```

00581 {
00582     if (m_ptrStream == NULL) return; // Should not happen
00583     sendStartingCode();
00584     sendDataByte(0x0F);
00585     sendDataByte(0x00);
00586     sendChecksum();
00587 }

```

4.1.4.24 playPrevious()

```
void DFR0534::playPrevious ()
```

Play previous file (in "file copy order")

Definition at line 204 of file [DFR0534.cpp](#).

```

00205 {
00206     if (m_ptrStream == NULL) return; // Should not happen
00207     sendStartingCode();
00208     sendDataByte(0x05);
00209     sendDataByte(0x00);
00210     sendChecksum();
00211 }

```

4.1.4.25 prepareFileByNumber()

```
void DFR0534::prepareFileByNumber (
    word track)
```

Select file by number, but not start playing.

Parameters

in	<i>track</i>	Number for file
----	--------------	-----------------

Definition at line 972 of file [DFR0534.cpp](#).

```

00973 {
00974     if (m_ptrStream == NULL) return; // Should not happen
00975     sendStartingCode();
00976     sendDataByte(0x1F);
00977     sendDataByte(0x02);
00978     sendDataByte((track >> 8) & 0xff);
00979     sendDataByte(track & 0xff);
00980     sendChecksum();
00981 }

```

4.1.4.26 repeatPart()

```
void DFR0534::repeatPart (
    byte startMinute,
    byte startSecond,
    byte stopMinute,
    byte stopSecond)
```

Repeat part of the current file.

Repeat between time start and stop position

Parameters

in	<i>startMinute</i>	Minute for start position
in	<i>startSecond</i>	Second for start position
in	<i>stopMinute</i>	Minute for stop position
in	<i>stopSecond</i>	Seconde for stop position

Definition at line 993 of file [DFR0534.cpp](#).

```
00994 {
00995     if (m_ptrStream == NULL) return; // Should not happen
00996     sendStartingCode();
00997     sendDataByte(0x20);
00998     sendDataByte(0x04);
00999     sendDataByte(startMinute);
01000     sendDataByte(startSecond);
01001     sendDataByte(stopMinute);
01002     sendDataByte(stopSecond);
01003     sendChecksum();
01004 }
```

4.1.4.27 setChannel()

```
void DFR0534::setChannel (
    byte channel)
```

Set output for DAC to channel MP3, AUX or both.

I found not P26/P27 for AUX on my [DFR0534](#) => Only [DFR0534::CHANNELMP3](#) makes sense (and is already set by default) Perhaps this function works on other audio modules with the same chip.

Parameters

in	<i>channel</i>	Output channel: DFR0534::CHANNELMP3 , DFR0534::CHANNELAUX or DFR0534::CHANNELMP3AUX
----	----------------	---

Definition at line 893 of file [DFR0534.cpp](#).

```
00894 {
00895     if (m_ptrStream == NULL) return; // Should not happen
00896     if (channel >= CHANNELUNKNOWN) return;
00897     sendStartingCode();
00898     sendDataByte(0x1D);
00899     sendDataByte(0x01);
00900     sendDataByte(channel);
00901     sendChecksum();
00902 }
```

4.1.4.28 setDirectory()

```
void DFR0534::setDirectory (
    char * path,
    byte drive = DRIVEFLASH)
```

Should set directory, but does not work for me.

Parameters

in	<i>path</i>	Directory
in	<i>drive</i>	Drive, where directory is stored: Drive DFR0534::DRIVEUSB , DFR0534::DRIVESD or DFR0534::DRIVEFLASH (=default)

Definition at line 798 of file [DFR0534.cpp](#).

```
00799 {
00800     if (m_ptrStream == NULL) return; // Should not happen
00801     if (path == NULL) return;
00802     if (drive >= DRIVEUNKNOWN) return;
00803     sendStartingCode();
00804     sendDataByte(0x17);
00805     sendDataByte(strlen(path)+1);
00806     sendDataByte(drive);
00807     for (int i=0;i<strlen(path);i++) {
00808         sendDataByte(path[i]);
00809     }
00810     sendChecksum();
00811 }
```

4.1.4.29 setDrive()

```
void DFR0534::setDrive (
    byte drive)
```

Switch to drive.

Parameters

in	<i>drive</i>	Drive DFR0534::DRIVEUSB , DFR0534::DRIVESD or DFR0534::DRIVEFLASH
----	--------------	---

Definition at line 408 of file [DFR0534.cpp](#).

```
00409 {
00410     if (m_ptrStream == NULL) return; // Should not happen
00411     if (drive >= DRIVEUNKNOWN) return;
00412     sendStartingCode();
00413     sendDataByte(0x0B);
00414     sendDataByte(0x01);
00415     sendDataByte(drive);
00416     sendChecksum();
00417 }
```

4.1.4.30 setEqualizer()

```
void DFR0534::setEqualizer (
    byte mode)
```

Set equalizer to NORMAL, POP, ROCK, JAZZ or CLASSIC.

Parameters

in	<i>mode</i>	EQ mode: DFR0534::NORMAL , DFR0534::POP , DFR0534::ROCK , DFR0534::JAZZ or DFR0534::CLASSIC
----	-------------	---

Definition at line 116 of file [DFR0534.cpp](#).

```
00117 {
00118     if (m_ptrStream == NULL) return; // Should not happen
00119     if (mode >= EQUNKNOWN) return;
00120     sendStartingCode();
00121     sendDataByte(0x1A);
00122     sendDataByte(0x01);
00123     sendDataByte(mode);
00124     sendChecksum();
00125 }
```

4.1.4.31 setLoopMode()

```
void DFR0534::setLoopMode (
    byte mode)
```

Set loop mode.

Parameters

in	mode	Loop mode: DFR0534::LOOPBACKALL , DFR0534::SINGLEAUDIOLOOP , DFR0534::SINGLEAUDIOSTOP , DFR0534::PLAYRANDOM , DFR0534::DIRECTORYLOOP , DFR0534::RANDOMINDIRECTORY , DFR0534::SEQUENTIALINDIRECTORY or DFR0534::SEQUENTIAL
----	------	---

Definition at line 818 of file [DFR0534.cpp](#).

```
00819 {
00820     if (m_ptrStream == NULL) return; // Should not happen
00821     if (mode >= PLAYMODEUNKNOWN) return;
00822     sendStartingCode();
00823     sendDataByte(0x18);
00824     sendDataByte(0x01);
00825     sendDataByte(mode);
00826     sendChecksum();
00827 }
```

4.1.4.32 setRepeatLoops()

```
void DFR0534::setRepeatLoops (
    word loops)
```

Set repeat loops.

Only valid for loop modes [DFR0534::LOOPBACKALL](#), [DFR0534::SINGLEAUDIOLOOP](#) or [DFR0534::DIRECTORYLOOP](#)

Parameters

in	loops	Number of loops
----	-------	-----------------

Definition at line 836 of file [DFR0534.cpp](#).

```
00837 {
00838     if (m_ptrStream == NULL) return; // Should not happen
00839     sendStartingCode();
00840     sendDataByte(0x19);
00841     sendDataByte(0x02);
00842     sendDataByte((loops >> 8) & 0xff);
00843     sendDataByte(loops & 0xff);
00844     sendChecksum();
00845 }
```

4.1.4.33 setVolume()

```
void DFR0534::setVolume (
    byte volume)
```

Set volume.

Volumen levels 0-30 are allowed. Audio module starts always with level 20.

Parameters

in	<i>volume</i>	Volume level
----	---------------	--------------

Definition at line 154 of file [DFR0534.cpp](#).

```
00155 {
00156     if (m_ptrStream == NULL) return; // Should not happen
00157     if (volume > 30) volume = 30;
00158     sendStartingCode();
00159     sendDataByte(0x13);
00160     sendDataByte(0x01);
00161     sendDataByte(volume);
00162     sendChecksum();
00163 }
```

4.1.4.34 startSendingRuntime()

```
void DFR0534::startSendingRuntime ()
```

Start sending elapsed runtime every 1 second.

Definition at line 1136 of file [DFR0534.cpp](#).

```
01137 {
01138     if (m_ptrStream == NULL) return; // Should not happen
01139     sendStartingCode();
01140     sendDataByte(0x25);
01141     sendDataByte(0x00);
01142     sendChecksum();
01143 }
```

4.1.4.35 stop()

```
void DFR0534::stop ()
```

Stop the current file.

Definition at line 192 of file [DFR0534.cpp](#).

```
00193 {
00194     if (m_ptrStream == NULL) return; // Should not happen
00195     sendStartingCode();
00196     sendDataByte(0x04);
00197     sendDataByte(0x00);
00198     sendChecksum();
00199 }
```

4.1.4.36 stopCombined()

```
void DFR0534::stopCombined ()
```

Stop combined play (playlist)

Definition at line 876 of file [DFR0534.cpp](#).

```
00877 {
00878     if (m_ptrStream == NULL) return; // Should not happen
00879     sendStartingCode();
00880     sendDataByte(0x1C);
00881     sendDataByte(0x00);
00882     sendChecksum();
00883 }
```

4.1.4.37 stopInsertedFile()

```
void DFR0534::stopInsertedFile ()
```

Stop inserted file.

Continue original file

Definition at line 783 of file [DFR0534.cpp](#).

```
00784 {  
00785     if (m_ptrStream == NULL) return; // Should not happen  
00786     sendStartingCode();  
00787     sendDataByte(0x10);  
00788     sendDataByte(0x00);  
00789     sendChecksum();  
00790 }
```

4.1.4.38 stopRepeatPart()

```
void DFR0534::stopRepeatPart ()
```

Stop repeating part of the current file.

Definition at line 1009 of file [DFR0534.cpp](#).

```
01010 {  
01011     if (m_ptrStream == NULL) return; // Should not happen  
01012     sendStartingCode();  
01013     sendDataByte(0x21);  
01014     sendDataByte(0x00);  
01015     sendChecksum();  
01016 }
```

4.1.4.39 stopSendingRuntime()

```
void DFR0534::stopSendingRuntime ()
```

Stop sending runtime.

Definition at line 1225 of file [DFR0534.cpp](#).

```
01226 {  
01227     if (m_ptrStream == NULL) return; // Should not happen  
01228     sendStartingCode();  
01229     sendDataByte(0x26);  
01230     sendDataByte(0x00);  
01231     sendChecksum();  
01232 }
```

The documentation for this class was generated from the following files:

- [DFR0534.h](#)
- [DFR0534.cpp](#)

Chapter 5

File Documentation

5.1 playCombined.ino

```
00001 /*
00002  * Example for using the DFR0534 for playing combined audio files like a playlist
00003  */
00004
00005 #include <SoftwareSerial.h>
00006 #include <DFR0534.h>
00007
00008 #define TX_PIN A0
00009 #define RX_PIN A1
00010 SoftwareSerial g_serial(RX_PIN, TX_PIN);
00011 DFR0534 g_audio(g_serial);
00012
00013 void setup() {
00014     // Serial for console output
00015     Serial.begin(9600);
00016     // Software serial for communication to DFR0534 module
00017     g_serial.begin(9600);
00018
00019     // Set volume
00020     g_audio.setVolume(18);
00021
00022     /* The parameter string for the playCombined function is just
00023      * a concatenation of all files in the desired order without
00024      * path and without extension.
00025      * All files have to be in the folder /ZH and the each
00026      * file has to have a length (without extension) of two chars.
00027      *
00028      * You can get example files from
00029      * https://github.com/codingABI/DFR0534/tree/main/assets/exampleContent
00030      */
00031     /* Plays files the custom order, like a playlist and stops after the last file:
00032      * /ZH/05.wav
00033      * /ZH/04.wav
00034      * /ZH/03.wav
00035      * /ZH/02.wav
00036      * /ZH/01.wav
00037      * /ZH/0A.wav
00038      */
00039     g_audio.playCombined("05040302010A");
00040 }
00041
00042 void loop() {
00043     static unsigned long lastDisplayMS = millis();
00044     char name[12];
00045
00046     // Show information about current track every 500ms
00047     if (millis() - lastDisplayMS > 500) {
00048         Serial.print("number: ");
00049         word fileNumber = g_audio.getFileNumber();
00050         if (fileNumber > 0) Serial.print(fileNumber); else Serial.print("---");
00051
00052         Serial.print(" name: ");
00053         if (g_audio.getFileName(name)) Serial.print(name);
00054
00055         Serial.print(" status: ");
00056         switch (g_audio.getStatus()) {
00057             case DFR0534::STOPPED:
```

```

00058     Serial.println("Stopped");
00059     break;
00060     case DFR0534::PAUSED:
00061         Serial.println("Paused");
00062         break;
00063     case DFR0534::PLAYING:
00064         Serial.println("Playing");
00065         break;
00066     case DFR0534::STATUSUNKNOWN:
00067         Serial.println("Unknown");
00068         break;
00069     }
00070     lastDisplayMS = millis();
00071 }
00072 }

```

5.2 playFileByName.ino

```

00001 /*
00002  * Example for using the DFR0534 for playing audio files by file name
00003  */
00004
00005 #include <SoftwareSerial.h>
00006 #include <DFR0534.h>
00007
00008 #define TX_PIN A0
00009 #define RX_PIN A1
00010 SoftwareSerial g_serial(RX_PIN, TX_PIN);
00011 DFR0534 g_audio(g_serial);
00012
00013 void setup() {
00014     // Serial for console output
00015     Serial.begin(9600);
00016     // Software serial for communication to DFR0534 module
00017     g_serial.begin(9600);
00018
00019     // Set volume
00020     g_audio.setVolume(18);
00021
00022     /* The file name/path for the function playFileByName() is the
00023      * full path of the audio file to be played in format which looks like
00024      * a special unix 8+3 format:
00025      * - Without the dot for the file extension
00026      * - All characters in upper case
00027      * - maximal 8 characters
00028      * - Every file and folder whose name length is shorter then 8 chars
00029      * must be filled up to the 8 chars length by space chars
00030      * - must end with WAV or MP3
00031      * - Only WAV and MP3 files are supported
00032      * - Wildcards * (=multiple arbitrary characters) and ? (=one single arbitrary character)
00033      * are allowed and can be used to reduce the filling space chars
00034      *
00035      * Valid examples:
00036      * - "/01 WAV" for a file '/01.wav'
00037      * - "/99-AFR-1MP3" for a file '/99-Africa.mp3'
00038      * - "/SUN*MP3" for first file matching '/sun*.mp3', for example '/sun.mp3'
00039      * - "/99-AFR*MP3" for first file matching '/99-Afr*.mp3'
00040      * - "/10*" for first audio file matching '/10*.*'
00041      * - "/10 /20 WAV" for the file '/10/20.wav'
00042      * (first means first in "file copy order")
00043      *
00044      * You can get example files from
00045      * https://github.com/codingABI/DFR0534/tree/main/assets/exampleContent
00046      */
00047
00048     // Play the file "test.wav"
00049     g_audio.playFileByName("/TEST WAV");
00050 }
00051
00052 void loop() {
00053     static unsigned long lastDisplayMS = millis()-500;
00054     char name[12];
00055
00056     // Show information about current track once per second
00057     if (millis()-lastDisplayMS > 1000) {
00058         Serial.print("number: ");
00059         word fileNumber = g_audio.getFileNumber();
00060         if (fileNumber > 0) Serial.print(fileNumber); else Serial.print("--");
00061
00062         Serial.print(" name: ");
00063         if (g_audio.getFileName(name)) Serial.print(name);
00064
00065         Serial.print(" status: ");

```

```

00066     switch (g_audio.getStatus()) {
00067     case DFR0534::STOPPED:
00068         Serial.println("Stopped");
00069         break;
00070     case DFR0534::PAUSED:
00071         Serial.println("Paused");
00072         break;
00073     case DFR0534::PLAYING:
00074         Serial.println("Playing");
00075         break;
00076     case DFR0534::STATUSUNKNOWN:
00077         Serial.println("Unknown");
00078         break;
00079     }
00080     lastDisplayMS = millis();
00081 }
00082 }

```

5.3 playFileByNumber.ino

```

00001 /*
00002  * Example for using the DFR0534 for playing audio files by file number
00003  */
00004
00005 #include <SoftwareSerial.h>
00006 #include <DFR0534.h>
00007
00008 #define TX_PIN A0
00009 #define RX_PIN A1
00010 SoftwareSerial g_serial(RX_PIN, TX_PIN);
00011 DFR0534 g_audio(g_serial);
00012
00013 void setup() {
00014     // Serial for console output
00015     Serial.begin(9600);
00016     // Software serial for communication to DFR0534 module
00017     g_serial.begin(9600);
00018
00019     // Set volume
00020     g_audio.setVolume(18);
00021
00022     // Show some device infos
00023     Serial.print("Ready drives: ");
00024     byte drive = g_audio.getDrivesStates();
00025     if ((drive > DFR0534::DRIVEUSB) & 1) == 1) Serial.print("USB ");
00026     if ((drive > DFR0534::DRIVESD) & 1) == 1) Serial.print("SD ");
00027     if ((drive > DFR0534::DRIVEFLASH) & 1) == 1) Serial.print("FLASH ");
00028     Serial.println();
00029
00030     Serial.print("Current playing drive: ");
00031     switch(g_audio.getDrive()) {
00032     case DFR0534::DRIVEUSB:
00033         Serial.println("USB");
00034         break;
00035     case DFR0534::DRIVESD:
00036         Serial.println("SD");
00037         break;
00038     case DFR0534::DRIVEFLASH:
00039         Serial.println("FLASH");
00040         break;
00041     case DFR0534::DRIVENO:
00042         Serial.println("No drive");
00043         break;
00044     default:
00045         Serial.println("Unknown");
00046         break;
00047     }
00048
00049     Serial.print("Total files: ");
00050     Serial.println(g_audio.getTotalFiles());
00051     Serial.print("Total files in directory: ");
00052     Serial.println(g_audio.getTotalFilesInCurrentDirectory());
00053
00054     Serial.print("First file: ");
00055     Serial.println(g_audio.getFirstFileNumberInCurrentDirectory());
00056
00057     // Play the first audio file copied to the DFR0534
00058     // (Second file copied to the DFR0534 would be number 2...)
00059     g_audio.playFileByNumber(1);
00060 }
00061
00062 void loop() {
00063     static unsigned long lastDisplayMS = millis()-500;

```

```


00064   char name[12];
00065
00066   // Show information about current track once per second
00067   if (millis()-lastDisplayMS > 1000) {
00068       Serial.print("number: ");
00069       word fileNumber = g_audio.getFileNumber();
00070       if (fileNumber > 0) Serial.print(fileNumber); else Serial.print("--");
00071
00072       Serial.print(" name: ");
00073       if (g_audio.getFileName(name)) Serial.print(name);
00074
00075       Serial.print(" status: ");
00076       switch (g_audio.getStatus()) {
00077           case DFR0534::STOPPED:
00078               Serial.println("Stopped");
00079               break;
00080           case DFR0534::PAUSED:
00081               Serial.println("Paused");
00082               break;
00083           case DFR0534::PLAYING:
00084               Serial.println("Playing");
00085               break;
00086           case DFR0534::STATUSUNKNOWN:
00087               Serial.println("Unknown");
00088               break;
00089       }
00090       lastDisplayMS = millis();
00091   }
00092 }

```

5.4 DFR0534.cpp File Reference

#include "DFR0534.h"

Include dependency graph for DFR0534.cpp:

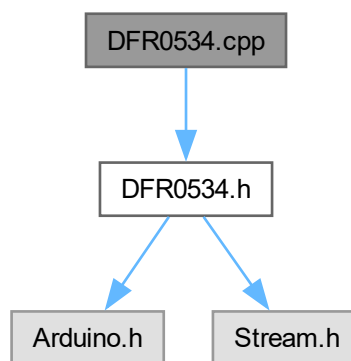

5.4.1 Detailed Description

Class: [DFR0534](#)

Description: Class for controlling a [DFR0534](#) audio module (https://wiki.dfrobot.com/Voice_Module_SKU__DFR0534) by SoftwareSerial

License: 2-Clause BSD License Copyright (c) 2024 codingABI For details see: LICENSE.txt

Notes for [DFR0534](#) audio module:

- Consumes about 20mA when idle ($V_{cc} = 5V$)
- Creates a short "click" noise, when V_{cc} is powered on
- Should be used with a 1k resistor on TX when your MCU runs on 5V, because the DFR0534 uses 3.3V logic (and 5V on TX causes clicks/noise)
- Can be controlled by a RX/TX serial connection (9600 baud) or one-wire protocol
- Can play WAV and MP3 audiofiles
- Can "insert" audiofiles while another audiofile is running. In this case the original audiofile is paused and will be resumed after the "inserted" audiofile
- Can play files in a playlist like mode called "combined" for files stored in a directory /ZH
- Can select the file to play by a file number* or file name** *File number is independent from file name. The first WAV or MP3 copied to the DFR0534 gets file number 1 and so on. To play a file by number use `playFileByNumber()` **File name is a little bit like a 8+3 file path and can be used with `playFileByName()`, but have special rules (see `playFileByName()` for details)
- Can send automatically the file runtime every second (when enabled)
- Has a NS8002 amplifier, JQ8400 Audio chip, W25Q64JVS1Q flash memory
- Has a Sleep mode 0x1B and this mode only works with one-wire protocol (https://github.com/arduino12/mp3_player_module_wire) and does not work for me without additional electric modifications (e.g. disconnecting speakers) => Switching off DFR0534 with a FET is a better solution

Home: <https://github.com/codingABI/DFR0534>

Author

codingABI <https://github.com/codingABI/>

Copyright

2-Clause BSD License

Version

1.0.3

Definition in file [DFR0534.cpp](#).

5.5 DFR0534.cpp

[Go to the documentation of this file.](#)

```
00001
00043 #include "DFR0534.h"
00044
00053 byte DFR0534::getStatus()
00054 {
00055     #define COMMAND 0x01
00056     #define RECEIVEBYTETIMEOUTMS 100
00057     #define RECEIVEGLOBALTIMEOUTMS 500
00058     #define RECEIVEFAILED STATUSUNKNOWN
00059     #define RECEIVEHEADERLENGTH 2 // startingcode+command
00060
00061     if (m_ptrStream == NULL) return RECEIVEFAILED; // Should not happen
00062     sendStartingCode();
```

```

00063     sendDataByte(COMMAND);;
00064     sendDataByte(0x00);;
00065     sendChecksum();
00066
00067     // Receive
00068     int i=0;
00069     byte data, firstByte = 0, sum, length=0xff, result = 0;
00070     unsigned long receiveStartMS = millis();
00071     do {
00072         byte dataReady = 0;
00073         unsigned long lastMS = millis();
00074         // Wait for response or timeout
00075         while ((millis()-lastMS < RECEIVEBYTETIMEOUTMS) && (dataReady==0)) dataReady =
m_ptrStream->available();
00076
00077         if (dataReady == 0) return RECEIVEFAILED; // Timeout
00078         data = m_ptrStream->read();
00079
00080         if (i==0) { // Begin of transmission
00081             firstByte=data;
00082             sum = 0;
00083         }
00084         if ((i == 1) && (data != COMMAND)) {
00085             // Invalid signal => reset receive
00086             i=0;
00087             firstByte = 0;
00088         }
00089         if (i == RECEIVEHEADERLENGTH) {
00090             length = data; // Length of receiving data
00091             if (length != 1) {
00092                 // Invalid length => reset receive
00093                 i=0;
00094                 firstByte = 0;
00095             }
00096         }
00097         if ((i > RECEIVEHEADERLENGTH) && (i-RECEIVEHEADERLENGTH-1<length)) {
00098             result = data;
00099         }
00100         if (firstByte == STARTINGCODE) {
00101             if (i-RECEIVEHEADERLENGTH<=length) sum+=data; // Update checksum
00102             i++;
00103         }
00104         if (millis()-receiveStartMS > RECEIVEGLOBALTIMEOUTMS) return RECEIVEFAILED; // Timeout
00105     } while (i<length+RECEIVEHEADERLENGTH+2);
00106
00107     if (data != sum) return RECEIVEFAILED; // Does checksum matches?
00108     return result;
00109 }
00110
00116 void DFR0534::setEqualizer(byte mode)
00117 {
00118     if (m_ptrStream == NULL) return; // Should not happen
00119     if (mode >= EQUNKNOWN) return;
00120     sendStartingCode();
00121     sendDataByte(0x1A);
00122     sendDataByte(0x01);
00123     sendDataByte(mode);
00124     sendChecksum();
00125 }
00126
00135 void DFR0534::playFileByNumber(word track)
00136 {
00137     if (m_ptrStream == NULL) return; // Should not happen
00138     if (track <=0) return;
00139     sendStartingCode();
00140     sendDataByte(0x07);
00141     sendDataByte(0x02);
00142     sendDataByte((track >> 8) & 0xff);
00143     sendDataByte(track & 0xff);
00144     sendChecksum();
00145 }
00146
00154 void DFR0534::setVolume(byte volume)
00155 {
00156     if (m_ptrStream == NULL) return; // Should not happen
00157     if (volume > 30) volume = 30;
00158     sendStartingCode();
00159     sendDataByte(0x13);
00160     sendDataByte(0x01);
00161     sendDataByte(volume);
00162     sendChecksum();
00163 }
00164
00168 void DFR0534::play()
00169 {
00170     if (m_ptrStream == NULL) return; // Should not happen
00171     sendStartingCode();

```

```

00172     sendDataByte(0x02);
00173     sendDataByte(0x00);
00174     sendChecksum();
00175 }
00176
00180 void DFR0534::pause()
00181 {
00182     if (m_ptrStream == NULL) return; // Should not happen
00183     sendStartingCode();
00184     sendDataByte(0x03);
00185     sendDataByte(0x00);
00186     sendChecksum();
00187 }
00188
00192 void DFR0534::stop()
00193 {
00194     if (m_ptrStream == NULL) return; // Should not happen
00195     sendStartingCode();
00196     sendDataByte(0x04);
00197     sendDataByte(0x00);
00198     sendChecksum();
00199 }
00200
00204 void DFR0534::playPrevious()
00205 {
00206     if (m_ptrStream == NULL) return; // Should not happen
00207     sendStartingCode();
00208     sendDataByte(0x05);
00209     sendDataByte(0x00);
00210     sendChecksum();
00211 }
00212
00216 void DFR0534::playNext()
00217 {
00218     if (m_ptrStream == NULL) return; // Should not happen
00219     sendStartingCode();
00220     sendDataByte(0x06);
00221     sendDataByte(0x00);
00222     sendChecksum();
00223 }
00224
00252 void DFR0534::playFileByName(char *path, byte drive)
00253 {
00254     if (m_ptrStream == NULL) return; // Should not happen
00255     if (path == NULL) return;
00256     if (drive >= DRIVEUNKNOWN) return;
00257     sendStartingCode();
00258     sendDataByte(0x08);
00259     sendDataByte(strlen(path)+1);
00260     sendDataByte(drive);
00261     for (int i=0; i<strlen(path); i++) {
00262         sendDataByte(path[i]);
00263     }
00264     sendChecksum();
00265 }
00266
00278 byte DFR0534::getDrivesStates()
00279 {
00280     #define COMMAND 0x09
00281     #define RECEIVEBYTETIMEOUTMS 100
00282     #define RECEIVEGLOBALTIMEOUTMS 500
00283     #define RECEIVEFAILED DRIVEUNKNOWN
00284     #define RECEIVEHEADERLENGTH 2 // startingcode+command
00285
00286     if (m_ptrStream == NULL) return RECEIVEFAILED; // Should not happen
00287     sendStartingCode();
00288     sendDataByte(COMMAND);
00289     sendDataByte(0x00);
00290     sendChecksum();
00291
00292     // Receive
00293     int i=0;
00294     byte data, firstByte = 0, sum, length=0xff, result = 0;
00295     unsigned long receiveStartMS = millis();
00296     do {
00297         byte dataReady = 0;
00298         unsigned long lastMS = millis();
00299         // Wait for response or timeout
00300         while ((millis()-lastMS < RECEIVEBYTETIMEOUTMS) && (dataReady==0)) dataReady =
m_ptrStream->available();
00301
00302         if (dataReady == 0) return RECEIVEFAILED; // Timeout
00303         data = m_ptrStream->read();
00304
00305         if (i==0) { // Begin of transmission
00306             firstByte=data;
00307             sum = 0;

```

```

00308     }
00309     if ((i == 1) && (data != COMMAND)) {
00310         // Invalid signal => reset receive
00311         i=0;
00312         firstByte = 0;
00313     }
00314     if (i == RECEIVEHEADERLENGTH) {
00315         length = data; // Length of receiving data
00316         if (length != 1) {
00317             // Invalid length => reset receive
00318             i=0;
00319             firstByte = 0;
00320         }
00321     }
00322     if ((i > RECEIVEHEADERLENGTH) && (i-RECEIVEHEADERLENGTH-1<length)) {
00323         result = data;
00324     }
00325     if (firstByte == STARTINGCODE) {
00326         if (i-RECEIVEHEADERLENGTH<=length) sum+=data; // Update checksum
00327         i++;
00328     }
00329     if (millis()-receiveStartMS > RECEIVEGLOBALTIMEOUTMS) return RECEIVEFAILED; // Timeout
00330 } while (i<length+RECEIVEHEADERLENGTH+2);
00331
00332 if (data != sum) return RECEIVEFAILED; // Does checksum matches?
00333 return result;
00334 }
00335
00345 byte DFR0534::getDrive()
00346 {
00347     #define COMMAND 0x0A
00348     #define RECEIVEBYTETIMEOUTMS 100
00349     #define RECEIVEGLOBALTIMEOUTMS 500
00350     #define RECEIVEFAILED DRIVEUNKNOWN
00351     #define RECEIVEHEADERLENGTH 2 // startingcode+command
00352
00353     if (m_ptrStream == NULL) return RECEIVEFAILED; // Should not happen
00354     sendStartingCode();
00355     sendDataByte(COMMAND);
00356     sendDataByte(0x00);
00357     sendChecksum();
00358
00359     // Receive
00360     int i=0;
00361     byte data, firstByte = 0, sum, length=0xff, result = 0;
00362     unsigned long receiveStartMS = millis();
00363     do {
00364         byte dataReady = 0;
00365         unsigned long lastMS = millis();
00366         // Wait for response or timeout
00367         while ((millis()-lastMS < RECEIVEBYTETIMEOUTMS) && (dataReady==0)) dataReady =
m_ptrStream->available();
00368
00369         if (dataReady == 0) return RECEIVEFAILED; // Timeout
00370         data = m_ptrStream->read();
00371
00372         if (i==0) { // Begin of transmission
00373             firstByte=data;
00374             sum = 0;
00375         }
00376         if ((i == 1) && (data != COMMAND)) {
00377             // Invalid signal => reset receive
00378             i=0;
00379             firstByte = 0;
00380         }
00381         if (i == RECEIVEHEADERLENGTH) {
00382             length = data; // Length of receiving data
00383             if (length != 1) {
00384                 // Invalid length => reset receive
00385                 i=0;
00386                 firstByte = 0;
00387             }
00388         }
00389         if ((i > RECEIVEHEADERLENGTH) && (i-RECEIVEHEADERLENGTH-1<length)) {
00390             result = data;
00391         }
00392         if (firstByte == STARTINGCODE) {
00393             if (i-RECEIVEHEADERLENGTH<=length) sum+=data; // Update checksum
00394             i++;
00395         }
00396         if (millis()-receiveStartMS > RECEIVEGLOBALTIMEOUTMS) return RECEIVEFAILED; // Timeout
00397     } while (i<length+RECEIVEHEADERLENGTH+2);
00398
00399     if (data != sum) return RECEIVEFAILED; // Does checksum matches?
00400     return result;
00401 }
00402

```

```

00408 void DFR0534::setDrive(byte drive)
00409 {
00410     if (m_ptrStream == NULL) return; // Should not happen
00411     if (drive >= DRIVEUNKNOWN) return;
00412     sendStartingCode();
00413     sendDataByte(0x0B);
00414     sendDataByte(0x01);
00415     sendDataByte(drive);
00416     sendChecksum();
00417 }
00418
00427 word DFR0534::getFileNumber()
00428 {
00429     #define COMMAND 0x0D
00430     #define RECEIVEFAILED 0
00431     #define RECEIVEBYTETIMEOUTMS 100
00432     #define RECEIVEGLOBALTIMEOUTMS 500
00433     #define RECEIVEHEADERLENGTH 2 // startingcode+command
00434
00435     if (m_ptrStream == NULL) return RECEIVEFAILED; // Should not happen
00436     sendStartingCode();
00437     sendDataByte(COMMAND);
00438     sendDataByte(0x00);
00439     sendChecksum();
00440
00441     // Receive
00442     int i=0;
00443     byte data, firstByte = 0, sum, length=0xff;
00444     word result = 0;
00445     unsigned long receiveStartMS = millis();
00446     do {
00447         byte dataReady = 0;
00448         unsigned long lastMS = millis();
00449         // Wait for response or timeout
00450         while ((millis()-lastMS < RECEIVEBYTETIMEOUTMS) && (dataReady==0)) dataReady =
m_ptrStream->available();
00451
00452         if (dataReady == 0) return RECEIVEFAILED; // Timeout
00453         data = m_ptrStream->read();
00454
00455         if (i==0) { // Begin of transmission
00456             firstByte=data;
00457             sum = 0;
00458         }
00459         if ((i == 1) && (data != COMMAND)) {
00460             // Invalid signal => reset receive
00461             i=0;
00462             firstByte = 0;
00463         }
00464         if (i == RECEIVEHEADERLENGTH) {
00465             length = data; // Length of receiving data
00466             if (length != 2) {
00467                 // Invalid length => reset receive
00468                 i=0;
00469                 firstByte = 0;
00470             }
00471         }
00472         if ((i > RECEIVEHEADERLENGTH) && (i-RECEIVEHEADERLENGTH-1<length)) {
00473             switch (i-RECEIVEHEADERLENGTH-1) {
00474                 case 0:
00475                     result=data<<8;
00476                     break;
00477                 case 1:
00478                     result+=data;
00479                     break;
00480             }
00481         }
00482         if (firstByte == STARTINGCODE) {
00483             if (i-RECEIVEHEADERLENGTH<=length) sum+=data; // Update checksum
00484             i++;
00485         }
00486         if (millis()-receiveStartMS > RECEIVEGLOBALTIMEOUTMS) return RECEIVEFAILED; // Timeout
00487     } while (i<length+RECEIVEHEADERLENGTH+2);
00488
00489     if (data != sum) return RECEIVEFAILED; // Does checksum matches?
00490     return result;
00491 }
00492
00499 int DFR0534::getTotalFiles()
00500 {
00501     #define COMMAND 0x0C
00502     #define RECEIVEFAILED -1
00503     #define RECEIVEBYTETIMEOUTMS 100
00504     #define RECEIVEGLOBALTIMEOUTMS 500
00505     #define RECEIVEHEADERLENGTH 2 // startingcode+command
00506
00507     if (m_ptrStream == NULL) return RECEIVEFAILED; // Should not happen

```

```

00508     sendStartingCode();
00509     sendDataByte(COMMAND);
00510     sendDataByte(0x00);
00511     sendChecksum();
00512
00513     // Receive
00514     int i=0;
00515     byte data, firstByte = 0, sum, length=0xff;
00516     word result = 0;
00517     unsigned long receiveStartMS = millis();
00518     do {
00519         byte dataReady = 0;
00520         unsigned long lastMS = millis();
00521         // Wait for response or timeout
00522         while ((millis()-lastMS < RECEIVEBYTETIMEOUTMS) && (dataReady==0)) dataReady =
m_ptrStream->available();
00523
00524         if (dataReady == 0) return RECEIVEFAILED; // Timeout
00525         data = m_ptrStream->read();
00526
00527         if (i==0) { // Begin of transmission
00528             firstByte=data;
00529             sum = 0;
00530         }
00531         if ((i == 1) && (data != COMMAND)) {
00532             // Invalid signal => reset receive
00533             i=0;
00534             firstByte = 0;
00535         }
00536         if (i == RECEIVEHEADERLENGTH) {
00537             length = data; // Length of receiving data
00538             if (length != 2) {
00539                 // Invalid length => reset receive
00540                 i=0;
00541                 firstByte = 0;
00542             }
00543         }
00544         if ((i > RECEIVEHEADERLENGTH) && (i-RECEIVEHEADERLENGTH-1<length)) {
00545             switch (i-RECEIVEHEADERLENGTH-1) {
00546                 case 0:
00547                     result=data<<8;
00548                     break;
00549                 case 1:
00550                     result+=data;
00551                     break;
00552             }
00553         }
00554         if (firstByte == STARTINGCODE) {
00555             if (i-RECEIVEHEADERLENGTH<=length) sum+=data; // Update checksum
00556             i++;
00557         }
00558         if (millis()-receiveStartMS > RECEIVEGLOBALTIMEOUTMS) return RECEIVEFAILED; // Timeout
00559     } while (i<length+RECEIVEHEADERLENGTH+2);
00560
00561     if (data != sum) return RECEIVEFAILED; // Does checksum matches?
00562     return result;
00563 }
00564
00565 void DFR0534::playLastInDirectory()
00566 {
00567     if (m_ptrStream == NULL) return; // Should not happen
00568     sendStartingCode();
00569     sendDataByte(0x0E);
00570     sendDataByte(0x00);
00571     sendChecksum();
00572 }
00573
00574 void DFR0534::playNextDirectory()
00575 {
00576     if (m_ptrStream == NULL) return; // Should not happen
00577     sendStartingCode();
00578     sendDataByte(0x0F);
00579     sendDataByte(0x00);
00580     sendChecksum();
00581 }
00582
00583 int DFR0534::getFirstFileNumberInCurrentDirectory()
00584 {
00585     #define COMMAND 0x11
00586     #define RECEIVEFAILED -1
00587     #define RECEIVEBYTETIMEOUTMS 100
00588     #define RECEIVEGLOBALTIMEOUTMS 500
00589     #define RECEIVEHEADERLENGTH 2 // startingcode+command
00590
00591     if (m_ptrStream == NULL) return RECEIVEFAILED; // Should not happen
00592     sendStartingCode();
00593     sendDataByte(COMMAND);

```

```

00606     sendDataByte(0x00);
00607     sendChecksum();
00608
00609     // Receive
00610     int i=0;
00611     byte data, firstByte = 0, sum, length=0xff;
00612     word result = 0;
00613     unsigned long receiveStartMS = millis();
00614     do {
00615         byte dataReady = 0;
00616         unsigned long lastMS = millis();
00617         // Wait for response or timeout
00618         while ((millis()-lastMS < RECEIVEBYTETIMEOUTMS) && (dataReady==0)) dataReady =
m_ptrStream->available();
00619
00620         if (dataReady == 0) return RECEIVEFAILED; // Timeout
00621         data = m_ptrStream->read();
00622
00623         if (i==0) { // Begin of transmission
00624             firstByte=data;
00625             sum = 0;
00626         }
00627         if ((i == 1) && (data != COMMAND)) {
00628             // Invalid signal => reset receive
00629             i=0;
00630             firstByte = 0;
00631         }
00632         if (i == RECEIVEHEADERLENGTH) {
00633             length = data; // Length of receiving data
00634             if (length != 2) {
00635                 // Invalid length => reset receive
00636                 i=0;
00637                 firstByte = 0;
00638             }
00639         }
00640         if ((i > RECEIVEHEADERLENGTH) && (i-RECEIVEHEADERLENGTH-1<length)) {
00641             switch (i-RECEIVEHEADERLENGTH-1) {
00642                 case 0:
00643                     result=data<<8;
00644                     break;
00645                 case 1:
00646                     result+=data;
00647                     break;
00648             }
00649         }
00650         if (firstByte == STARTINGCODE) {
00651             if (i-RECEIVEHEADERLENGTH<=length) sum+=data; // Update checksum
00652             i++;
00653         }
00654         if (millis()-receiveStartMS > RECEIVEGLOBALTIMEOUTMS) return RECEIVEFAILED; // Timeout
00655     } while (i<length+RECEIVEHEADERLENGTH+2);
00656
00657     if (data != sum) return RECEIVEFAILED; // Does checksum matches?
00658     return result;
00659 }
00660
00661 int DFR0534::getTotalFilesInCurrentDirectory()
00662 {
00663     #define COMMAND 0x12
00664     #define RECEIVEFAILED -1
00665     #define RECEIVEBYTETIMEOUTMS 100
00666     #define RECEIVEGLOBALTIMEOUTMS 500
00667     #define RECEIVEHEADERLENGTH 2 // startingcode+command
00668
00669     if (m_ptrStream == NULL) return RECEIVEFAILED; // Should not happen
00670     sendStartingCode();
00671     sendDataByte(COMMAND);
00672     sendDataByte(0x00);
00673     sendChecksum();
00674
00675     // Receive
00676     int i=0;
00677     byte data, firstByte = 0, sum, length=0xff;
00678     word result = 0;
00679     unsigned long receiveStartMS = millis();
00680     do {
00681         byte dataReady = 0;
00682         unsigned long lastMS = millis();
00683         // Wait for response or timeout
00684         while ((millis()-lastMS < RECEIVEBYTETIMEOUTMS) && (dataReady==0)) dataReady =
m_ptrStream->available();
00685
00686         if (dataReady == 0) return RECEIVEFAILED; // Timeout
00687         data = m_ptrStream->read();
00688
00689         if (i==0) { // Begin of transmission
00690             firstByte=data;

```

```

00697     sum = 0;
00698 }
00699 if ((i == 1) && (data != COMMAND)) {
00700     // Invalid signal => reset receive
00701     i=0;
00702     firstByte = 0;
00703 }
00704 if (i == RECEIVEHEADERLENGTH) {
00705     length = data; // Length of receiving data
00706     if (length != 2) {
00707         // Invalid length => reset receive
00708         i=0;
00709         firstByte = 0;
00710     }
00711 }
00712 if ((i > RECEIVEHEADERLENGTH) && (i-RECEIVEHEADERLENGTH-1<length)) {
00713     switch (i-RECEIVEHEADERLENGTH-1) {
00714         case 0:
00715             result=data<<8;
00716             break;
00717         case 1:
00718             result+=data;
00719             break;
00720     }
00721 }
00722 if (firstByte == STARTINGCODE) {
00723     if (i-RECEIVEHEADERLENGTH<=length) sum+=data; // Update checksum
00724     i++;
00725 }
00726 if (millis()-receiveStartMS > RECEIVEGLOBALTIMEOUTMS) return RECEIVEFAILED; // Timeout
00727 } while (i<length+RECEIVEHEADERLENGTH+2);
00728
00729 if (data != sum) return RECEIVEFAILED; // Does checksum matches?
00730 return result;
00731 }
00732
00736 void DFR0534::increaseVolume()
00737 {
00738     if (m_ptrStream == NULL) return; // Should not happen
00739     sendStartingCode();
00740     sendDataByte(0x14);
00741     sendDataByte(0x00);
00742     sendChecksum();
00743 }
00744
00748 void DFR0534::decreaseVolume()
00749 {
00750     if (m_ptrStream == NULL) return; // Should not happen
00751     sendStartingCode();
00752     sendDataByte(0x15);
00753     sendDataByte(0x00);
00754     sendChecksum();
00755 }
00756
00765 void DFR0534::insertFileByNumber(word track, byte drive)
00766 {
00767     if (m_ptrStream == NULL) return; // Should not happen
00768     if (drive >= DRIVEUNKNOWN) return;
00769     sendStartingCode();
00770     sendDataByte(0x16);
00771     sendDataByte(0x03);
00772     sendDataByte(drive);
00773     sendDataByte((track >> 8) & 0xff);
00774     sendDataByte(track & 0xff);
00775     sendChecksum();
00776 }
00777
00783 void DFR0534::stopInsertedFile()
00784 {
00785     if (m_ptrStream == NULL) return; // Should not happen
00786     sendStartingCode();
00787     sendDataByte(0x10);
00788     sendDataByte(0x00);
00789     sendChecksum();
00790 }
00791
00798 void DFR0534::setDirectory(char *path, byte drive)
00799 {
00800     if (m_ptrStream == NULL) return; // Should not happen
00801     if (path == NULL) return;
00802     if (drive >= DRIVEUNKNOWN) return;
00803     sendStartingCode();
00804     sendDataByte(0x17);
00805     sendDataByte(strlen(path)+1);
00806     sendDataByte(drive);
00807     for (int i=0;i<strlen(path);i++) {
00808         sendDataByte(path[i]);

```



```

00809     }
00810     sendChecksum();
00811 }
00812
00818 void DFR0534::setLoopMode(byte mode)
00819 {
00820     if (m_ptrStream == NULL) return; // Should not happen
00821     if (mode >= PLAYMODEUNKNOWN) return;
00822     sendStartingCode();
00823     sendDataByte(0x18);
00824     sendDataByte(0x01);
00825     sendDataByte(mode);
00826     sendChecksum();
00827 }
00828
00836 void DFR0534::setRepeatLoops(word loops)
00837 {
00838     if (m_ptrStream == NULL) return; // Should not happen
00839     sendStartingCode();
00840     sendDataByte(0x19);
00841     sendDataByte(0x02);
00842     sendDataByte((loops >> 8) & 0xff);
00843     sendDataByte(loops & 0xff);
00844     sendChecksum();
00845 }
00846
00858 void DFR0534::playCombined(char* list)
00859 {
00860     if (m_ptrStream == NULL) return; // Should not happen
00861     if (list == NULL) return;
00862     if ((strlen(list) % 2) != 0) return;
00863
00864     sendStartingCode();
00865     sendDataByte(0x1B);
00866     sendDataByte(strlen(list));
00867     for (int i=0; i<strlen(list); i++) {
00868         sendDataByte(list[i]);
00869     }
00870     sendChecksum();
00871 }
00872
00876 void DFR0534::stopCombined()
00877 {
00878     if (m_ptrStream == NULL) return; // Should not happen
00879     sendStartingCode();
00880     sendDataByte(0x1C);
00881     sendDataByte(0x00);
00882     sendChecksum();
00883 }
00884
00893 void DFR0534::setChannel(byte channel)
00894 {
00895     if (m_ptrStream == NULL) return; // Should not happen
00896     if (channel >= CHANNELUNKNOWN) return;
00897     sendStartingCode();
00898     sendDataByte(0x1D);
00899     sendDataByte(0x01);
00900     sendDataByte(channel);
00901     sendChecksum();
00902 }
00903
00913 bool DFR0534::getFileName(char *name)
00914 {
00915     #define COMMAND 0x1E
00916     #define RECEIVEBYTETIMEOUTMS 100
00917     #define RECEIVEGLOBALTIMEOUTMS 500
00918     #define RECEIVEFAILED false
00919     #define RECEIVEHEADERLENGTH 2 // startingcode+command
00920
00921     if (m_ptrStream == NULL) return false; // Should not happen
00922     if (name == NULL) return false;
00923     name[0] = '\0';
00924
00925     sendStartingCode();
00926     sendDataByte(COMMAND);
00927     sendDataByte(0x00);
00928     sendChecksum();
00929
00930     // Receive
00931     int i=0;
00932     byte data, firstByte = 0, sum, length=0xff;
00933     unsigned long receiveStartMS = millis();
00934     do {
00935         byte dataReady = 0;
00936         unsigned long lastMS = millis();
00937         // Wait for response or timeout
00938         while ((millis()-lastMS < RECEIVEBYTETIMEOUTMS) && (dataReady==0)) dataReady =

```

```

    m_ptrStream->available();
00939
00940     if (dataReady == 0) return RECEIVEFAILED; // Timeout
00941     data = m_ptrStream->read();
00942     if (i==0) { // Begin of transmission
00943         firstByte=data;
00944         sum = 0;
00945     }
00946     if ((i == 1) && (data != COMMAND)) {
00947         // Invalid signal => reset receive
00948         i=0;
00949         firstByte = 0;
00950     }
00951     if (i == RECEIVEHEADERLENGTH) length = data; // Length of receiving string
00952     if ((i > RECEIVEHEADERLENGTH) && (i-RECEIVEHEADERLENGTH-1<length)) {
00953         if ((i-RECEIVEHEADERLENGTH) < 12) { // I expect no longer file names than 8+3 chars plus '\0'
00954             name[i-RECEIVEHEADERLENGTH-1] = data;
00955             name[i-RECEIVEHEADERLENGTH] = '\0';
00956         }
00957     }
00958     if (firstByte == STARTINGCODE) {
00959         if (i-RECEIVEHEADERLENGTH<=length) sum+=data; // Update checksum
00960         i++;
00961     }
00962     if (millis()-receiveStartMS > RECEIVEGLOBALTIMEOUTMS) return RECEIVEFAILED; // Timeout
00963 } while (i<length+RECEIVEHEADERLENGTH+2);
00964 return (data == sum); // Does checksum matches?
00965 }
00966
00972 void DFR0534::prepareFileByNumber(word track)
00973 {
00974     if (m_ptrStream == NULL) return; // Should not happen
00975     sendStartingCode();
00976     sendDataByte(0x1F);
00977     sendDataByte(0x02);
00978     sendDataByte((track » 8) & 0xff);
00979     sendDataByte(track & 0xff);
00980     sendChecksum();
00981 }
00982
00993 void DFR0534::repeatPart(byte startMinute, byte startSecond, byte stopMinute, byte stopSecond )
00994 {
00995     if (m_ptrStream == NULL) return; // Should not happen
00996     sendStartingCode();
00997     sendDataByte(0x20);
00998     sendDataByte(0x04);
00999     sendDataByte(startMinute);
01000     sendDataByte(startSecond);
01001     sendDataByte(stopMinute);
01002     sendDataByte(stopSecond);
01003     sendChecksum();
01004 }
01005
01009 void DFR0534::stopRepeatPart()
01010 {
01011     if (m_ptrStream == NULL) return; // Should not happen
01012     sendStartingCode();
01013     sendDataByte(0x21);
01014     sendDataByte(0x00);
01015     sendChecksum();
01016 }
01017
01025 void DFR0534::fastBackwardDuration(word seconds)
01026 {
01027     if (m_ptrStream == NULL) return; // Should not happen
01028     sendStartingCode();
01029     sendDataByte(0x22);
01030     sendDataByte(0x02);
01031     sendDataByte((seconds » 8) & 0xff);
01032     sendDataByte(seconds & 0xff);
01033     sendChecksum();
01034 }
01035
01042 void DFR0534::fastForwardDuration(word seconds)
01043 {
01044     if (m_ptrStream == NULL) return; // Should not happen
01045     sendStartingCode();
01046     sendDataByte(0x23);
01047     sendDataByte(0x02);
01048     sendDataByte((seconds » 8) & 0xff);
01049     sendDataByte(seconds & 0xff);
01050     sendChecksum();
01051 }
01052
01065 bool DFR0534::getDuration(byte &hour, byte &minute, byte &second)
01066 {
01067     #define COMMAND 0x24

```

```

01068 #define RECEIVEFAILED false
01069 #define RECEIVEBYTETIMEOUTMS 100
01070 #define RECEIVEGLOBALTIMEOUTMS 500
01071 #define RECEIVEHEADERLENGTH 2 // startingcode+command
01072
01073 if (m_ptrStream == NULL) return false; // Should not happen
01074 sendStartingCode();
01075 sendDataByte(COMMAND);
01076 sendDataByte(0x00);
01077 sendChecksum();
01078
01079 // Receive
01080 int i=0;
01081 byte data, firstByte = 0, sum, length=0xff;
01082 word result = 0;
01083 unsigned long receiveStartMS = millis();
01084 do {
01085     byte dataReady = 0;
01086     unsigned long lastMS = millis();
01087     // Wait for response or timeout
01088     while ((millis()-lastMS < RECEIVEBYTETIMEOUTMS) && (dataReady==0)) dataReady =
m_ptrStream->available();
01089
01090     if (dataReady == 0) return RECEIVEFAILED; // Timeout
01091     data = m_ptrStream->read();
01092
01093     if (i==0) { // Begin of transmission
01094         firstByte=data;
01095         sum = 0;
01096     }
01097     if ((i == 1) && (data != COMMAND)) {
01098         // Invalid signal => reset receive
01099         i=0;
01100         firstByte = 0;
01101     }
01102     if (i == RECEIVEHEADERLENGTH) {
01103         length = data; // Length of receiving data
01104         if (length != 3) {
01105             // Invalid length => reset receive
01106             i=0;
01107             firstByte = 0;
01108         }
01109     }
01110     if ((i > RECEIVEHEADERLENGTH) && (i-RECEIVEHEADERLENGTH-1<length)) {
01111         switch (i-RECEIVEHEADERLENGTH-1) {
01112             case 0:
01113                 hour=data;
01114                 break;
01115             case 1:
01116                 minute=data;
01117                 break;
01118             case 2:
01119                 second=data;
01120                 break;
01121         }
01122     }
01123     if (firstByte == STARTINGCODE) {
01124         if (i-RECEIVEHEADERLENGTH<=length) sum+=data; // Update checksum
01125         i++;
01126     }
01127     if (millis()-receiveStartMS > RECEIVEGLOBALTIMEOUTMS) return RECEIVEFAILED; // Timeout
01128 } while (i<length+RECEIVEHEADERLENGTH+2);
01129
01130 return (data == sum); // Does checksum matches?
01131 }
01132
01136 void DFR0534::startSendingRuntime()
01137 {
01138     if (m_ptrStream == NULL) return; // Should not happen
01139     sendStartingCode();
01140     sendDataByte(0x25);
01141     sendDataByte(0x00);
01142     sendChecksum();
01143 }
01144
01158 bool DFR0534::getRuntime(byte &hour, byte &minute, byte &second)
01159 {
01160     #define COMMAND 0x25
01161     #define RECEIVEFAILED false
01162     #define RECEIVEBYTETIMEOUTMS 100
01163     #define RECEIVEGLOBALTIMEOUTMS 500
01164     #define RECEIVEHEADERLENGTH 2 // startingcode+command
01165
01166     if (m_ptrStream == NULL) return false; // Should not happen
01167
01168     // Receive
01169     int i=0;

```

```

01170     byte data, firstByte = 0, sum, length=0xff;
01171     word result = 0;
01172     unsigned long receiveStartMS = millis();
01173     do {
01174         byte dataReady = 0;
01175         unsigned long lastMS = millis();
01176         // Wait for response or timeout
01177         while ((millis()-lastMS < RECEIVEBYTETIMEOUTMS) && (dataReady==0)) dataReady =
m_ptrStream->available();
01178
01179         if (dataReady == 0) return RECEIVEFAILED; // Timeout
01180         data = m_ptrStream->read();
01181
01182         if (i==0) { // Begin of transmission
01183             firstByte=data;
01184             sum = 0;
01185         }
01186         if ((i == 1) && (data != COMMAND)) {
01187             // Invalid signal => reset receive
01188             i=0;
01189             firstByte = 0;
01190         }
01191         if (i == RECEIVEHEADERLENGTH) {
01192             length = data; // Length of receiving data
01193             if (length != 3) {
01194                 // Invalid length => reset receive
01195                 i=0;
01196                 firstByte = 0;
01197             }
01198         }
01199         if ((i > RECEIVEHEADERLENGTH) && (i-RECEIVEHEADERLENGTH-1<length)) {
01200             switch (i-RECEIVEHEADERLENGTH-1) {
01201                 case 0:
01202                     hour=data;
01203                     break;
01204                 case 1:
01205                     minute=data;
01206                     break;
01207                 case 2:
01208                     second=data;
01209                     break;
01210             }
01211         }
01212         if (firstByte == STARTINGCODE) {
01213             if (i-RECEIVEHEADERLENGTH<=length) sum+=data; // Update checksum
01214             i++;
01215         }
01216         if (millis()-receiveStartMS > RECEIVEGLOBALTIMEOUTMS) return RECEIVEFAILED; // Timeout
01217     } while (i<length+RECEIVEHEADERLENGTH+2);
01218
01219     return (data == sum); // Does checksum matches?
01220 }
01221
01225 void DFR0534::stopSendingRuntime()
01226 {
01227     if (m_ptrStream == NULL) return; // Should not happen
01228     sendStartingCode();
01229     sendDataByte(0x26);
01230     sendDataByte(0x00);
01231     sendChecksum();
01232 }

```


5.6 DFR0534.h File Reference

```


#include <Arduino.h>
#include <Stream.h>

```

Include dependency graph for DFR0534.h:

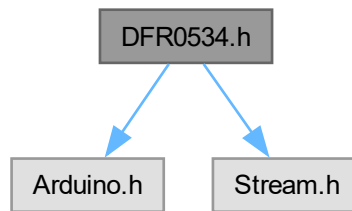

This graph shows which files directly or indirectly include this file:

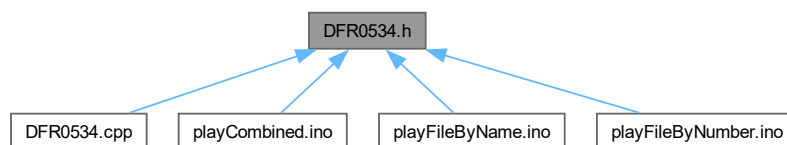

Classes

- class [DFR0534](#)
Class for a [DFR0534](#) audio module.

Macros

- `#define DFR0534_VERSION "1.0.3"`

5.6.1 Detailed Description

Class: [DFR0534](#)

Description: Class for controlling a [DFR0534](#) audio module (https://wiki.dfrobot.com/Voice_↔_Module_SKU__DFR0534) by SoftwareSerial

License: 2-Clause BSD License Copyright (c) 2024 codingABI For details see: LICENSE.txt

Home: <https://github.com/codingABI/DFR0534>

Author

codingABI <https://github.com/codingABI/>

Copyright

2-Clause BSD License

Version

1.0.3

Definition in file [DFR0534.h](#).

5.6.2 Macro Definition Documentation

5.6.2.1 DFR0534_VERSION

```
#define DFR0534_VERSION "1.0.3"
```

Library version

Definition at line 22 of file [DFR0534.h](#).

5.7 DFR0534.h

[Go to the documentation of this file.](#)

```
00001
00019 #pragma once
00020
00022 #define DFR0534_VERSION "1.0.3"
00023
00024 #include <Arduino.h>
00025 #include <Stream.h>
00026
00027 #define STARTINGCODE 0xAA
00028
00032 class DFR0534 {
00033 public:
00035     enum DFR0534CHANNELS
00036     {
00037         CHANNELMP3,
00038         CHANNELAUX,
00039         CHANNELMP3AUX,
00040         CHANNELUNKNOWN
00041     };
00043     enum DFR0534DRIVE
00044     {
00045         DRIVEUSB,
00046         DRIVESD,
00047         DRIVEFLASH,
00048         DRIVEUNKNOWN,
00049         DRIVENO = 0xff
00050     };
00052     enum DFR0534LOOPMODE
00053     {
00054         LOOPBACKALL,
00055         SINGLEAUDIOLOOP,
00056         SINGLEAUDIOSTOP,
00057         PLAYRANDOM,
00058         DIRECTORYLOOP,
00059         RANDOMINDIRECTORY,
00060         SEQUENTIALINDIRECTORY,
00061         SEQUENTIAL,
00062         PLAYMODEUNKNOWN
00063     };
00065     enum DFR0534EQ
00066     {
00067         NORMAL,
00068         POP,
00069         ROCK,
```

```

00070     JAZZ ,
00071     CLASSIC,
00072     EQUUNKNOWN
00073 };
00075 enum DFR0534STATUS
00076 {
00077     STOPPED,
00078     PLAYING,
00079     PAUSED,
00080     STATUSUNKNOWN
00081 };
00087 DFR0534(Stream &stream)
00088 {
00089     m_ptrStream = &stream;
00090 }
00091 void decreaseVolume();
00092 void fastBackwardDuration(word seconds);
00093 void fastForwardDuration(word seconds);
00094 byte getDrive();
00095 byte getDrivesStates();
00096 bool getDuration(byte &hour, byte &minute, byte &second);
00097 bool getFileName(char *name);
00098 word getFileNameNumber();
00099 int getFirstFileNumberInCurrentDirectory();
00100 bool getRuntime(byte &hour, byte &minute, byte &second);
00101 byte getStatus();
00102 int getTotalFiles();
00103 int getTotalFilesInCurrentDirectory();
00104 void increaseVolume();
00105 void insertFileByNumber(word track, byte drive=DRIVEFLASH);
00106 void pause();
00107 void play();
00108 void playCombined(char* list);
00109 void playFileByName(char *path, byte drive=DRIVEFLASH);
00110 void playFileByNumber(word track);
00111 void playLastInDirectory();
00112 void playNext();
00113 void playNextDirectory();
00114 void playPrevious();
00115 void prepareFileByNumber(word track);
00116 void repeatPart(byte startMinute, byte startSecond, byte stopMinute, byte stopSecond);
00117 void setChannel(byte channel);
00118 void setDirectory(char *path, byte drive=DRIVEFLASH);
00119 void setDrive(byte drive);
00120 void setEqualizer(byte mode);
00121 void setLoopMode(byte mode);
00122 void setRepeatLoops(word loops);
00123 void setVolume(byte volume);
00124 void stop();
00125 void stopInsertedFile();
00126 void startSendingRuntime();
00127 void stopCombined();
00128 void stopRepeatPart();
00129 void stopSendingRuntime();
00130 private:
00131 void sendStartingCode() {
00132     m_checksum=STARTINGCODE;
00133     m_ptrStream->write((byte)STARTINGCODE);
00134 }
00135 void sendDataByte(byte data) {
00136     m_checksum +=data;
00137     m_ptrStream->write((byte)data);
00138 }
00139 void sendChecksum() {
00140     m_ptrStream->write((byte)m_checksum);
00141 }
00142 byte m_checksum;
00143 Stream *m_ptrStream = NULL;
00144 };

```


Index

CHANNELAUX
 DFR0534, [9](#)
CHANNELMP3
 DFR0534, [9](#)
CHANNELMP3AUX
 DFR0534, [9](#)
CHANNELUNKNOWN
 DFR0534, [9](#)

decreaseVolume
 DFR0534, [12](#)
DFR0534, [1](#), [7](#)
 CHANNELAUX, [9](#)
 CHANNELMP3, [9](#)
 CHANNELMP3AUX, [9](#)
 CHANNELUNKNOWN, [9](#)
 decreaseVolume, [12](#)
 DFR0534, [11](#)
 DFR0534CHANNELS, [9](#)
 DFR0534DRIVE, [9](#)
 DFR0534EQ, [10](#)
 DFR0534LOOPMODE, [10](#)
 DFR0534STATUS, [11](#)
 DIRECTORYLOOP, [10](#)
 DRIVEFLASH, [10](#)
 DRIVENO, [10](#)
 DRIVESD, [10](#)
 DRIVEUNKNOWN, [10](#)
 DRIVEUSB, [10](#)
 fastBackwardDuration, [12](#)
 fastForwardDuration, [12](#)
 getDrive, [12](#)
 getDrivesStates, [13](#)
 getDuration, [14](#)
 getFileName, [16](#)
 getFileName, [17](#)
 getFirstFileNameInCurrentDirectory, [18](#)
 getRuntime, [19](#)
 getStatus, [20](#)
 getTotalFiles, [21](#)
 getTotalFilesInCurrentDirectory, [22](#)
 increaseVolume, [23](#)
 insertFileByNumber, [23](#)
 LOOPBACKALL, [10](#)
 NORMAL, [10](#)
 pause, [24](#)
 PAUSED, [11](#)
 play, [24](#)
 playCombined, [24](#)
 playFileByName, [25](#)
 playFileByNumber, [26](#)
 PLAYING, [11](#)
 playLastInDirectory, [26](#)
 PLAYMODEUNKNOWN, [10](#)
 playNext, [26](#)
 playNextDirectory, [27](#)
 playPrevious, [27](#)
 PLAYRANDOM, [10](#)
 prepareFileByNumber, [27](#)
 RANDOMINDIRECTORY, [10](#)
 repeatPart, [27](#)
 SEQUENTIAL, [10](#)
 SEQUENTIALINDIRECTORY, [10](#)
 setChannel, [28](#)
 setDirectory, [28](#)
 setDrive, [29](#)
 setEqualizer, [29](#)
 setLoopMode, [29](#)
 setRepeatLoops, [30](#)
 setVolume, [30](#)
 SINGLEAUDIOLOOP, [10](#)
 SINGLEAUDIOSTOP, [10](#)
 startSendingRuntime, [31](#)
 STATUSUNKNOWN, [11](#)
 stop, [31](#)
 stopCombined, [31](#)
 stopInsertedFile, [31](#)
 STOPPED, [11](#)
 stopRepeatPart, [32](#)
 stopSendingRuntime, [32](#)
DFR0534.cpp, [36](#), [37](#)
DFR0534.h, [48](#), [50](#)
 DFR0534_VERSION, [50](#)
DFR0534_VERSION
 DFR0534.h, [50](#)
DFR0534CHANNELS
 DFR0534, [9](#)
DFR0534DRIVE
 DFR0534, [9](#)
DFR0534EQ
 DFR0534, [10](#)
DFR0534LOOPMODE
 DFR0534, [10](#)
DFR0534STATUS
 DFR0534, [11](#)
DIRECTORYLOOP
 DFR0534, [10](#)
DRIVEFLASH
 DFR0534, [10](#)

DRIVENO
 DFR0534, [10](#)
 DRIVESD
 DFR0534, [10](#)
 DRIVEUNKNOWN
 DFR0534, [10](#)
 DRIVEUSB
 DFR0534, [10](#)

 fastBackwardDuration
 DFR0534, [12](#)
 fastForwardDuration
 DFR0534, [12](#)

 getDrive
 DFR0534, [12](#)
 getDrivesStates
 DFR0534, [13](#)
 getDuration
 DFR0534, [14](#)
 getFileName
 DFR0534, [16](#)
 getFileNameNumber
 DFR0534, [17](#)
 getFirstFileNameInCurrentDirectory
 DFR0534, [18](#)
 getRuntime
 DFR0534, [19](#)
 getStatus
 DFR0534, [20](#)
 getTotalFiles
 DFR0534, [21](#)
 getTotalFilesInCurrentDirectory
 DFR0534, [22](#)

 increaseVolume
 DFR0534, [23](#)
 insertFileByNumber
 DFR0534, [23](#)

 LOOPBACKALL
 DFR0534, [10](#)

 NORMAL
 DFR0534, [10](#)

 pause
 DFR0534, [24](#)
 PAUSED
 DFR0534, [11](#)
 play
 DFR0534, [24](#)
 playCombined
 DFR0534, [24](#)
 playCombined.ino, [33](#)
 playFileByName
 DFR0534, [25](#)
 playFileByName.ino, [34](#)
 playFileByNumber
 DFR0534, [26](#)

 playFileByNumber.ino, [35](#)
 PLAYING
 DFR0534, [11](#)
 playLastInDirectory
 DFR0534, [26](#)
 PLAYMODEUNKNOWN
 DFR0534, [10](#)
 playNext
 DFR0534, [26](#)
 playNextDirectory
 DFR0534, [27](#)
 playPrevious
 DFR0534, [27](#)
 PLAYRANDOM
 DFR0534, [10](#)
 prepareFileByNumber
 DFR0534, [27](#)

 RANDOMINDIRECTORY
 DFR0534, [10](#)
 repeatPart
 DFR0534, [27](#)

 SEQUENTIAL
 DFR0534, [10](#)
 SEQUENTIALINDIRECTORY
 DFR0534, [10](#)
 setChannel
 DFR0534, [28](#)
 setDirectory
 DFR0534, [28](#)
 setDrive
 DFR0534, [29](#)
 setEqualizer
 DFR0534, [29](#)
 setLoopMode
 DFR0534, [29](#)
 setRepeatLoops
 DFR0534, [30](#)
 setVolume
 DFR0534, [30](#)
 SINGLEAUDIOLOOP
 DFR0534, [10](#)
 SINGLEAUDIOSTOP
 DFR0534, [10](#)
 startSendingRuntime
 DFR0534, [31](#)
 STATUSUNKNOWN
 DFR0534, [11](#)
 stop
 DFR0534, [31](#)
 stopCombined
 DFR0534, [31](#)
 stopInsertedFile
 DFR0534, [31](#)
 STOPPED
 DFR0534, [11](#)
 stopRepeatPart
 DFR0534, [32](#)

stopSendingRuntime
DFR0534, [32](#)