

CprE 488 - Embedded Systems Design

MP-4: UAV Control (ver. 3.0)

Assigned: Thursday of Week 10

Due: Monday of Week 12

Points: 100 + bonus points

Note: the goal of this Machine Problem is for you to work with your group to increase your exposure to three different aspects of embedded system design:

1. Implementing Embedded Control — you will learn to implement control theory into a discrete system capable of running on a microcontroller.
2. Understanding PID Control Basics — you will tune PID loops to gain familiarity with the impact of different values.
3. Debugging over telemetry — you will learn to debug systems using parameter logging over wireless communication.

Your Mission

[A MAN HAS FALLEN INTO THE RIVER IN LEGO CITY!](#) Start the new rescue quadcopter!

HEY! Program and tune the quadcopter, and off to the rescue! Prepare the lifeline, lower the stretcher, and make the rescue! The CrazyFlie collection from MicroCART!

Say hello to your CrazyFlie drone! The goal at the end of this lab is to be able to smoothly control the CrazyFlie with the algorithms that you will write and test. First, we will give you a brief overview of the CrazyFlie system and how to set up the development environment for this lab.

This lab has been developed over the course of several years by the MicroCart Senior Design project. The [MicroCart Youtube Channel](#) has many videos you may find helpful in case you get stuck during this lab, or for ideas you can do for extra credit.

Part 0: Meet the CrazyFlie (Understanding Lab Infrastructure)

There is only one physical button on the CrazyFlie, the power button. To start the CrazyFlie:

1. Plug in a charged battery. The drone will start up as soon as power is applied.
2. Wait for all four props to do a short spin and the startup tone to play.
3. Place the CrazyFlie on a flat surface to allow its sensors to calibrate. This is indicated by the flashing red LED. If it flashes quickly, then the sensors have been calibrated properly, and the drone is ready to fly. If the LED flashes slowly, then the sensors have not been calibrated yet. If some hardware is damaged on the CrazyFlie, it may fail to pass its self-check on startup. This is indicated by the red led flashing quickly 5 times. In this case, the hardware may be inoperable. If this is the case, notify a TA or the instructor.
4. If you feel that the drone's sensors are not calibrated correctly, turn the drone off and back on using the power button.
5. **Always secure the CrazyFlie to a test stand during PID tuning and Controller development.**

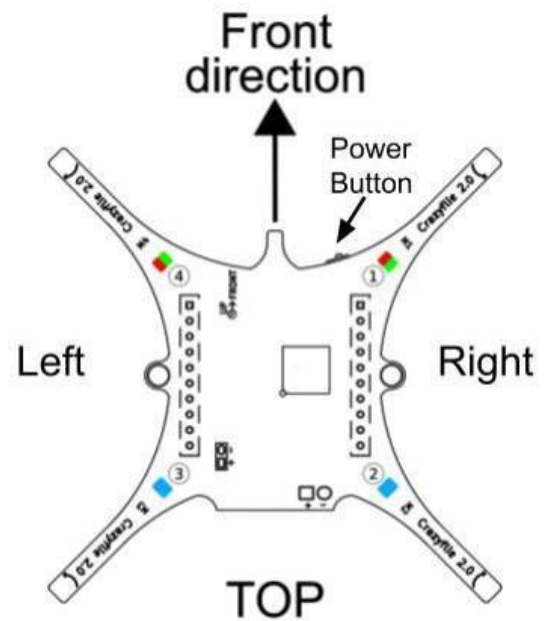


Figure 1. CrazyFlie top-down diagram

<u>LED Lights</u>	<u>Diagnostic</u>
flashing red LED	Calibrating
Slow flashing LED	Sensors have not been calibrated
Red LED flashing 5 times quickly	Failed to pass self-checkup. Talk to TA if this happens.

CrazyFlie System Overview

This is the complete CrazyFlie control system. You will only be modifying a small portion of it, but it will be helpful to understand the full scope of the system you are interfacing with.

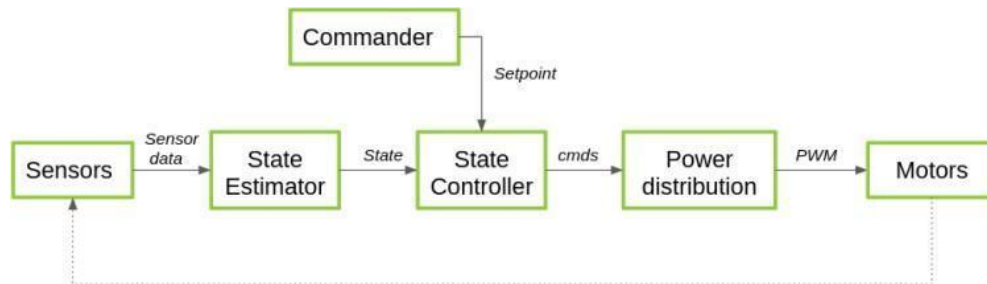


Figure 2. CrazyFlie control diagram

The control process starts with the state estimator module receiving sensor data and using it to calculate the drone's current attitude (its rotation, i.e. roll, pitch, and yaw). The state estimator then sends the calculated attitude to the state controller module, which also receives a setpoint from the commander module (in our case, this is user input specifying the desired attitude or attitude rate and thrust). The state controller module contains a cascading PID controller that uses the inputs from the state estimator to calculate the actuation force needed. That is then sent to the power distribution module, where the actuation force is converted to motor power then the loop starts over again.

You will be implementing the State Controller's cascading PID in Part 2 of this lab.

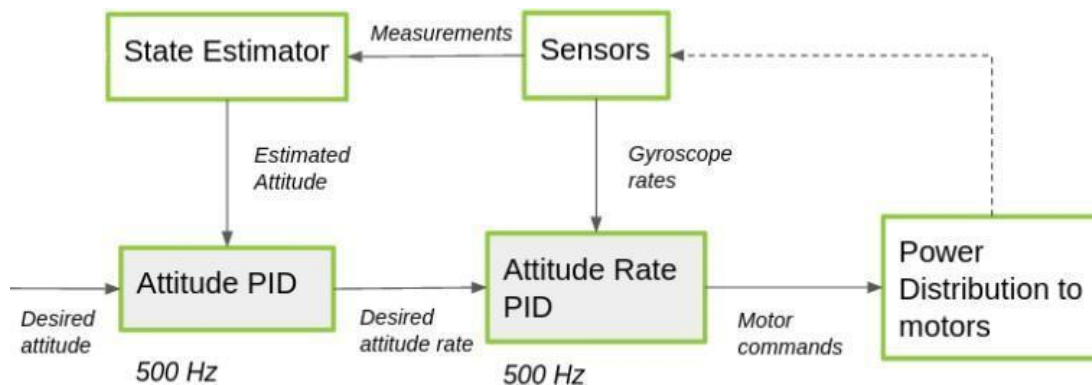


Figure 3. Cascading PID diagram

The CrazyFlie runs off of a cascaded PID system where the output of the first PID controller is then used as an input for a second PID controller. This layout can be seen in Figure 3, the output from the attitude PID controller, the desired attitude rate, becomes the input of the attitude rate PID controller. In Part 2, you will implement the attitude and attitude rate PID controllers for roll, pitch, and yaw. In Part 1, you will determine the PID values that should be present in the controllers by using a working PID controller before implementing it yourself.

CrazyFlie Connection Setup Guide

The tools needed to flash, interact with, and fly the CrazyFlie have been packaged into a virtual image for your convenience.

Step 1: Open the Virtual Machine

The virtual machine has been configured to have the necessary utilities to develop the CrazyFlie firmware. Below are detailed instructions for completing different tasks within the virtual machine. **Login username is bitcraze and password is CrazyFlie.** To do this, you click the big green plus button to add VM Image and not the “Import” button. Then, add the VM Image located in

`C:/Temp/MP4Image/BaseFolder/488_MP-4_VM_s25/488_MP-4_VM_S25.vbox`

If you would like more information about the VM or to download the VM on your personal computer see [Appendix B](#) [1]. **The virtual machine is immutable, which means that if you do not save any files you change elsewhere, they will be reset on startup. For this reason, it is recommended that you use a shared folder, Google Drive, or Git to save work.** This is more important for Part 2 but is still worth mentioning now.

Step 2: Flashing the CrazyFlie

It is possible that another version of the quad software is currently flashed onto the CrazyFlie. To ensure that the Lab Part 1 version of the software is installed, follow these steps.

1. Navigate to the CrazyFlie firmware folder, ex:
`~/MicroCART/crazyflie_software/crazyflie-firmware-lab-part-1/`
2. Plug the Crazyradio into the USB port
3. In the bottom right corner of the VM, there is a USB icon. Make sure the Bitcraze Crazyradio is selected under this menu
 - a. The menu is accessed by right-clicking the icon. Clicking on a device places a checkmark signifying it is mapped to the VM
 - b. **This can be finicky, you may have to physically reconnect the radio a couple of times for it to connect successfully to the VM**

Note: You can also add the USB by going to:

- a. Open Oracle VM VirtualBox Manager
 - b. Click on Settings
 - c. Click on USB
 - d. make sure the Bitcraze Crazyradio is selected under this menu
4. Create the file
`'crazyflie_software/crazyflie-firmware-2021.06/tools/make/config.mk'` if it doesn't already exist and open it with VS Code.
 5. Add `CLOAD_CMDS=-w radio://0/<radio_channel>/2M/E7E7E7E7E7` to the file and replace `<radio_channel>` with your CrazyFlie's radio channel
 - a. Your radio channel can be found in this spreadsheet: [CrazyFlie Radio Map](#) which is mapped to the drone number located on the bottom of the drone.
 - b. This is a one-time process and should not have to be done for any subsequent flashes unless you change which drone you are using or

what folder you are flashing from.

6. Make sure the CrazyFlie is powered on and running.
7. Before flashing the CrazyFlie double-check that the config.mk has the correct radio channel of the drone you intend to flash. Or you may flash to another group's drone, potentially resulting in an incomplete flash. If this happens to your drone, please let a TA know.
8. Flashing the CrazyFlie. For your first time flashing to the drone have a TA come over to check before you flash, as this is common place for CrazyFlies broken
 - a. **FLASHING PART 1**, run *make cload* from the 'crazyflie-firmware-lab-part-1/' firmware folder to begin flashing the compiled firmware to the CrazyFlie specified earlier. **NOTE, while doing Part 1, you should never flash Part 1.**
 - b. **FLASHING PART 2**, compile the CrazyFlie firmware with *make CONTROLLER="Student"* from the 'crazyflie-firmware-lab-part-2/' firmware folder, then run *make cload* in the same folder
9. After you are finished with a CrazyFlie please flash it with the 'crazyflie-firmware-lab-part-1/' firmware. This ensures that the next team using that drone doesn't inherit any of your changes for better or worse.

Step 3: Setting up the test stand

With the drone flashed, we are almost ready to begin tuning the PID values, however we first want to ensure that the drone is secured about whatever axis we will be tuning the rotation for. The test stand is used to secure the drone about an axis of rotation and also to measure the rate of rotation and exact position of the drone.

Step 3a: Test Stand Components

The test stand for MP-4 is more complex than the ones used in MP-1 and consists of three major components plus a couple of wires to connect them. The test stand base holds the rotary encoder used to measure position and can be used in two different configurations depending on the drone orientation needed.

The test stand mount attaches to the encoder shaft and holds the CrazyFlie drone in place through friction. There are two different mounts, which can hold the drone in either a horizontal or vertical position as shown in Figure 4.

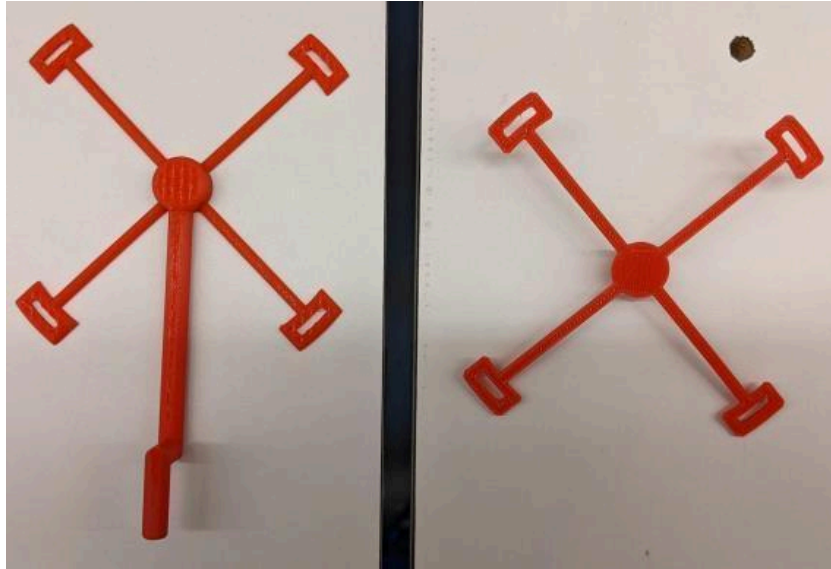


Figure 4: Drone Mounts

Step 3b: Secure Drone

Before starting the ground station, secure the drone to a mount. If you would like to use the external sensor built into the test stand, see [Appendix C](#) [2]. If you choose not to use the sensor, when selecting logging variables, **DO NOT** try to plot the test stand variables, this will break the plotter.

Step 4: Starting the Ground station.

The ground station software is what you will mainly be using to communicate with the CrazyFlie. It has been pre-installed and set up on the virtual machine for this lab.

You need to know the channel assigned to the CrazyFlie. Here is a sheet that lists the channels of each drone. [CrazyFlie Radio Map](#).

To connect to a CrazyFlie and open the GUI, make sure the CrazyFlie is powered on, and the crazyradio is available in the VM, then run the command `crazycart <radio_channel>`. If everything connects successfully, the GUI will open. Steps 5-7 are some details on how to perform tasks in the GUI.

Step 5: Get/Set Parameters

Lets you view and set the parameters of the CrazyFlie

1. Navigate to the Parameters tab, as shown in Figure 6.
2. The top half lets you view the parameter values of the CrazyFlie, while the bottom half lets you set those same parameters.
3. The key parameters used in part 1 can be quickly set by altering a JSON file. Open `~/MicroCART/mp-4Params.json` by clicking the 'edit' by the 'Set Param from JSON file' button and fill in the file with valid values. Next, press the 'Set Param from JSON file' button and wait a few seconds. The 'Complete' text will darken once the list of parameters is set. We recommend using this method.

- Alternatively, You could use the “Set Param” section. You first have to select the group that the parameter is part of then you can select a specific parameter in that group. This allows you to set more parameters than are offered in the JSON.

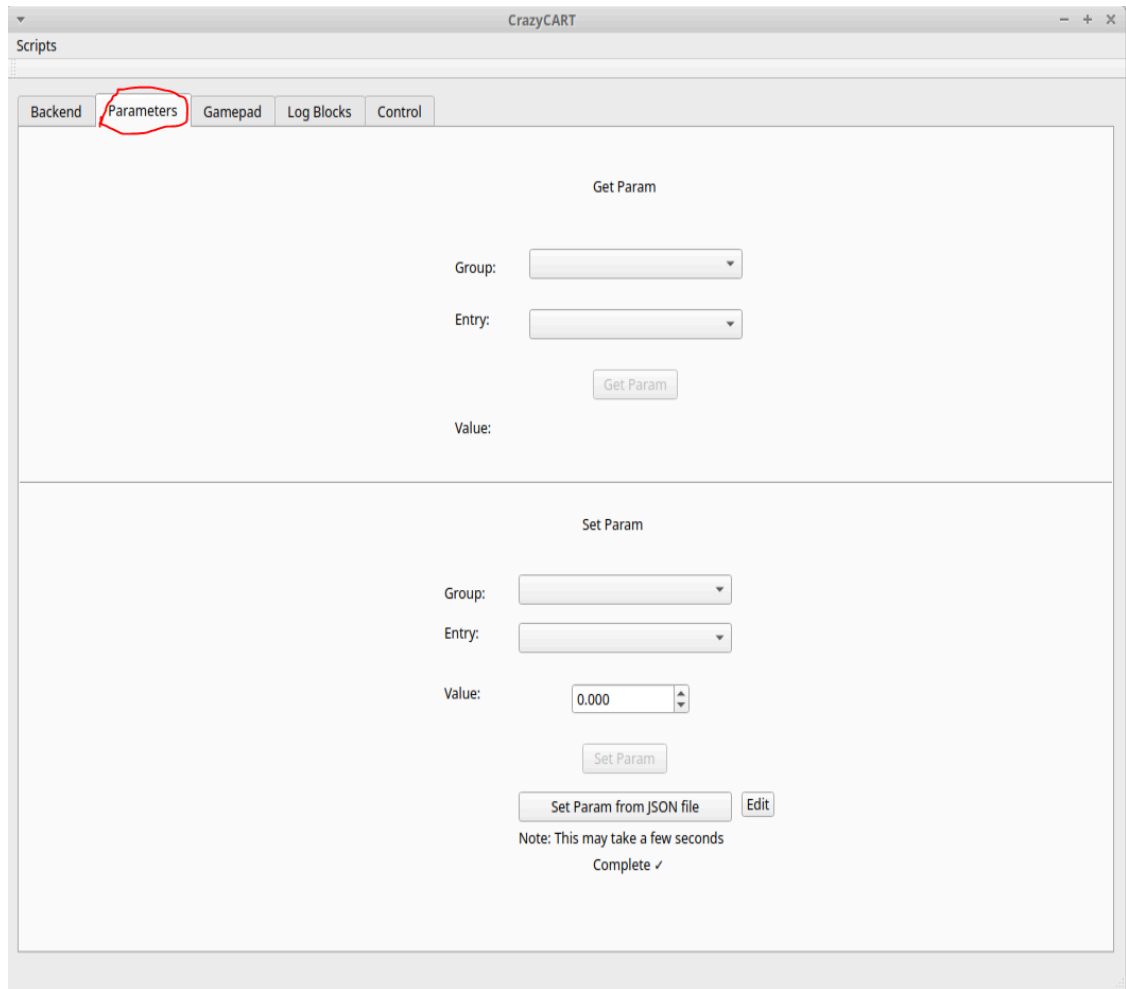


Figure 6: Parameters Tab

Step 6: Sending setpoints

Sends setpoints to the drone

- Navigate to the control tab, as shown in Figure 7.
- Make sure manual setpoint is selected.
- You can enter desired pitch/roll/yaw setpoints and slide the thrust in the boxes below.
- You then choose if you want to send a rate or angle setpoint, then click apply to send it
- Clicking stop will send a stop setpoint (all inputs 0) to the drone.

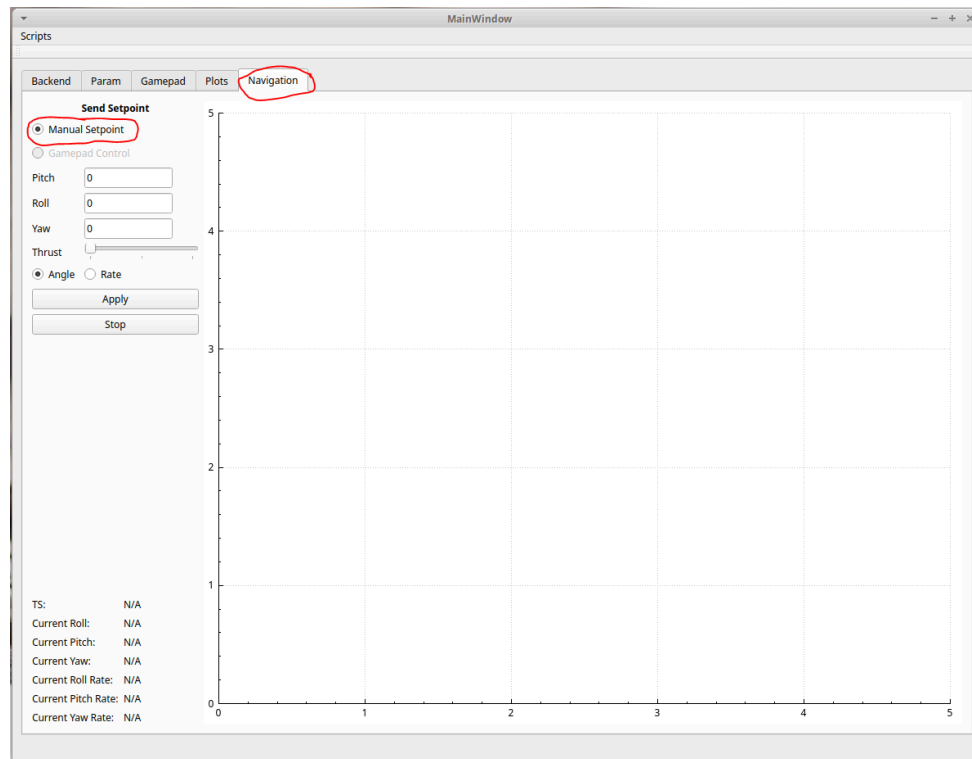


Figure 7: Manual Setpoints

Step 7: Graphing Log Variables

Log variables are the main form of feedback and debugging used in this lab. They will be used to tune PID values and debug code.

1. See [Adding New Logging Variables](#) [3] if needed
2. With the CrazyFlie connected, navigate to the Control tab
3. On the sidebar, you can specify up to 5 variables from **active** logging blocks to plot on the right, as shown in Figure 8.

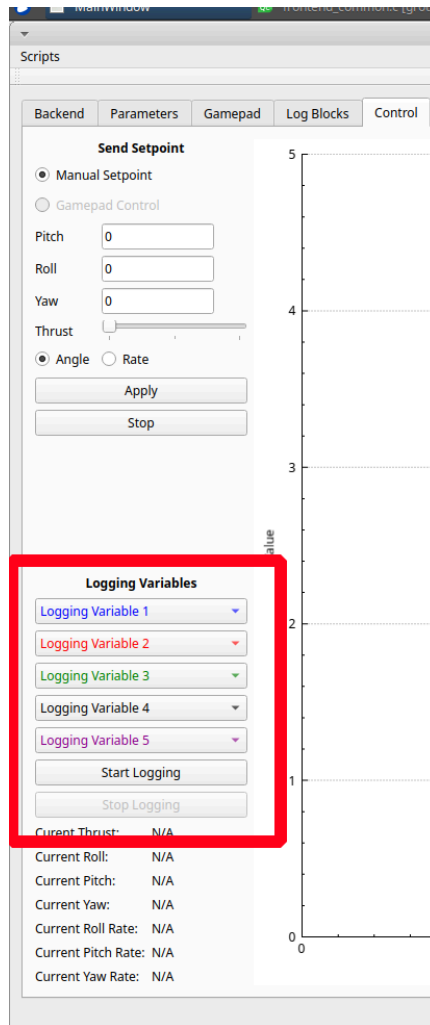


Figure 8. Logging variables

4. Once variables are selected, click start logging to capture data
5. Press the stop logging button when you are done capturing data.
6. The data will be displayed in real-time. After the plotting has stopped, you can zoom in and move around the graph.
7. If nothing is plotted after clicking start logging, refreshing the log block can help, see [Adding New Logging Variables](#) [3]

Step 8: Closing the Application

1. **IMPORTANT:** if you are using the test stand sensor, you must first disconnect the Arduino from the VM physically or by going to the bottom right corner of the VM and dismounting "QinHeng Electronics USB Serial". If not done, the VM will crash.
2. To close the application, you need to "ctrl+c" in the terminal where you ran `crazycart <radio channel>`.

Part 1: Tuning the PID Controller

PID control utilizes a measurement of the state of a system and the comparison of that measurement with a setpoint to determine an error value. By multiplying, integrating, or observing the slope of this error, a PID controller can be developed. The drone uses a series of nested PID controllers to control yaw, pitch, and roll, both as attitude rates and attitude. Each rate, or attitude axis, requires K_p , K_i , and K_d values to act as the coefficients for the PID controller. Your goal for part 1 of the lab is to find K_p , K_i , and K_d values for each of these controllers that enable robust control of the quadcopter. The values you choose will be driven by 1) your observations of the quadcopter's response to changing setpoints and 2) your intuitive understanding of how each coefficient should mathematically impact the quadcopter's response. It may be helpful to read [Using the Test Stand](#) [4] for background information on how to utilize it while tuning. The drones have been flashed with the firmware necessary for this part. **You should NOT flash the CrazyFlie in Part 1**, if you think you need to do so talk with a TA before proceeding.

Tip: Begin with K_p , and then move to K_d values before K_i . When adjusting values, try first to adjust by an order of magnitude (multiply or divide by 10) before making smaller adjustments. Many K_i values can stay very small or zero. Not all PIDs require all or even two coefficients to be non-zero. In general, K_i values are used to improve the disturbance within the system. Since we are tuning the system with a low disturbance factor, the K_i values do not need to be large.

Attitude Rate Control

We will begin by tuning the attitude rate controller. This controls the rate of rotation of the yaw pitch and roll.

Tip: When tuning your rate controller, allow for a “looser” control. In other terms, the percent overshoot and settling time can be a bit larger than typically desired. This allows us to tune the attitude controller “tighter” later. As the attitude PIDs and rate PIDs have somewhat competing goals, there is a limit to how tightly both can be simultaneously tuned.

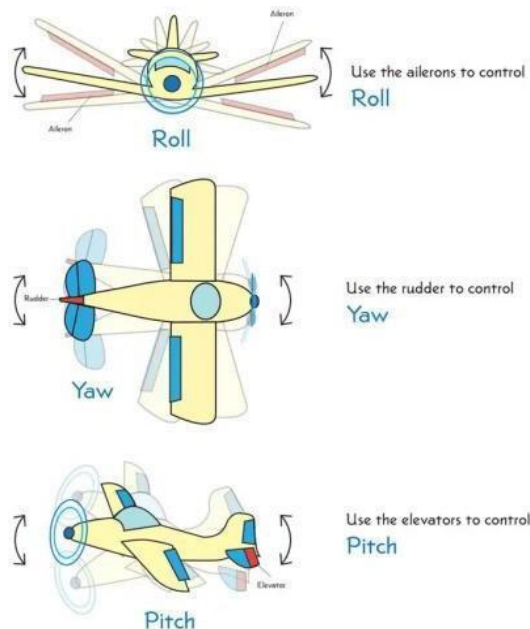


Figure 9: Roll, Yaw, and Pitch Diagram ([source](#))

Step 1: Yaw Rate

First, you will learn how to measure the yaw rate with the test stand. Put the test stand so that it is standing with the three legs on the ground with the attachment that will hold the drone parallel to the ground, as Figure 10 shows.



Figure 10: Yaw rate test stand setup

Now, connect to the CrazyFlie and open the ground station GUI. We will be graphing the test stand rotation rate and the yaw attitude rate setpoint. Details on how to use the test stand and how to set up plotting can be found in [Appendix C](#) [5].

You can now send yaw rate setpoints and thrust setpoints via the ground station, which will tell the CrazyFlie to rotate at a certain speed, the test stand sensor will then measure the actual rate and display that on the GUI. However, with no PID constants set, the CrazyFlie will not respond to setpoints. Your task is to change these constants through the GUI by setting parameters.

Relevant logging variables:

- Test_Stand.rate
 - This is the test stand data for the rate
- ctrlStdnt.yawRate
 - This is the yaw rate setpoint
- ctrlStdnt.r_yaw
 - This is the CrazyFlie's on-board sensor for yaw rate measurements

Be sure to write down the PID values you find while tuning! They will be used in the second half of the lab and are required for submission. Also, the PID values are reset when the CrazyFlie reboots, so be sure to write them down frequently! Additionally, there is an option to save your values through the use of a .json file. This is especially helpful to keep your PID value.

Relevant parameters:

Group: s_pid_rate

- yaw_kp
- yaw_ki
- yaw_kd

Your goal for this part of the lab is to demonstrate that you can send a yaw rate setpoint to the CrazyFlie and then verify through the GUI ground station that the CrazyFlie follows that setpoint closely.

Step 2: Pitch Rate

Now change the mount attachment so that the CrazyFlie will be held vertically and the left or right side of the drone is facing the table, as shown in figure 11.



Figure 11: Pitch rate test stand setup

You will now be tuning pitch rate, this is how fast the CrazyFlie tilts up or down. Repeat the process you did for tuning the yaw rate, but with the appropriate pitch rate parameters and logging values.

Note: The e_stop parameter under the sys group should be set to 0. The e_stop, electronic stop, is a safety feature that turns off the quadcopter if it flips. Setting the e_stop to 0 will prevent the CrazyFlie from automatically rebooting when it detects tumbling.

Relevant logging variables:

- Test_Stand.rate
 - This is test stand data for the rate
- ctrlStdnt.pitchRate
 - This is the pitch rate setpoint
- ctrlStdnt.r_pitch
 - This is the CrazyFlie's on-board sensor for pitch rate measurements

Relevant parameters:

Group: s_pid_rate

- pitch_kp
- pitch_ki
- pitch_kd

Step 3: Roll Rate

Change the orientation of the drone so that the front or back is facing the table.

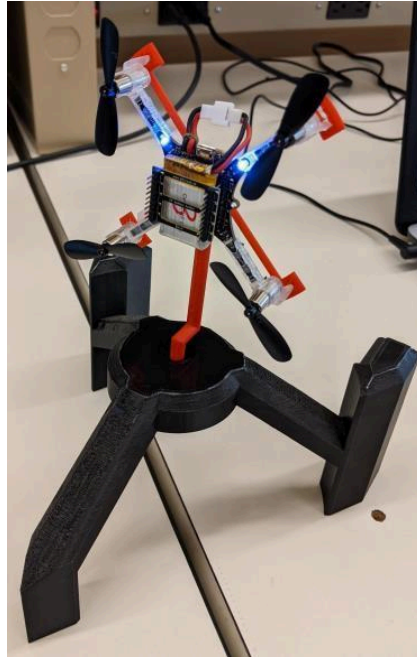


Figure 12: Roll rate test stand setup

You will now be tuning roll rate, which is how fast the CrazyFlie tilts to the side. Repeat the process you did for tuning the yaw rate and pitch rate, but with the appropriate roll rate parameters and logging values.

Remember to set the e_stop parameter under the sys group to 0

Relevant logging variables:

- Test_Stand.rate
 - This is test stand data for the rate
- ctrlStdnt.rollRate
 - This is the roll rate setpoint
- ctrlStdnt.r_roll
 - This is the CrazyFlie's on-board sensor for roll rate measurements

Relevant parameters:

Group: s_pid_rate

- roll_kp
- roll_ki
- roll_kd

Attitude Position Control

We will now tune how the CrazyFlie holds a specific attitude angle. Recall from Figure 3 that the attitude PID controller provides the input setpoint to the attitude rate controller. Therefore, it is important that the rate controller works well and all attitude rate PID values are set before continuing.

Step 4: Yaw Attitude

Change the test stand setup to how you measured the yaw rate. You will now be tuning yaw, which is the angle that the CrazyFlie is oriented. This is done similarly to the yaw rate, except you will be sending degrees rather than degrees per second setpoints. Note, there is a button built into the test stand for setting the 0 point of rotation, this can be used to approximately sync up the test stand angle measurement with the CrazyFlie's built-in measurement. In the end, you will demonstrate that you can make the CrazyFlie rotate to and hold a specific yaw angle, confirming it through the GUI ground station.

Relevant logging variables:

- `Test_Stand.angle`
 - This is test stand data for the angle
- `ctrlStdnt.yaw`
 - This is the yaw setpoint
- `stateEstimate.yaw`
 - This is the CrazyFlie's state estimator for yaw angle

Relevant parameters:

Group: `s_pid_attitude`

- `yaw_kp`
- `yaw_ki`
- `yaw_kd`

Step 5: Pitch Attitude

For this part of the lab, we will turn the test stand on its side and attach the other mount that will hold the CrazyFlie parallel to the floor. Ensure the left or right side of the drone is facing the test stand, as shown in Figure 13.



Figure 13: Pitch test stand setup

Repeat the process you did for tuning the yaw, but with the appropriate pitch parameters and logging values. You will demonstrate that you can make the CrazyFlie rotate to and hold a specific pitch angle. While tuning, keep your setpoints in the range of -45° to 45° . Check values through the GUI.

Remember to set the `e_stop` parameter under the `sys` group to 0

Relevant logging variables:

- `Test_Stand.angle`
 - This is test stand data for the angle
- `ctrlStdnt.pitch`
 - This is the pitch setpoint
- `stateEstimate.pitch`
 - This is the CrazyFlie's state estimator for pitch angle

Relevant parameters:

Group: `s_pid_attitude`

- `pitch_kp`
- `pitch_ki`
- `pitch_kd`

Step 6: Roll Attitude

To measure the roll you will turn the drone 90 degrees such that the back or front of the drone is facing the test stand, as figure 14 shows.

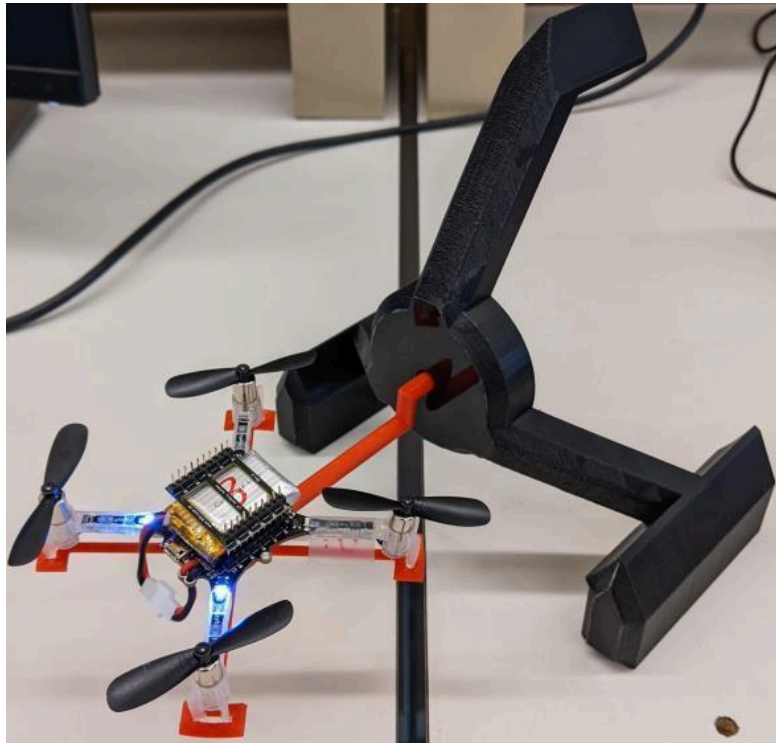


Figure 14: Roll test stand setup

Repeat the process you did for tuning the yaw and pitch, but with the appropriate roll parameters and logging values. You will demonstrate that you can make the CrazyFlie rotate to and hold a specific roll angle. While tuning, keep your setpoints in the range of -45° to 45° . Confirming it through the GUI ground station.

Remember to set the `e_stop` parameter under the `sys` group to 0

Relevant logging variables:

- `Test_Stand.angle` -
 - This is test stand data for the angle
- `ctrlStdnt.roll`
 - This is the roll setpoint
- `stateEstimate.roll`
 - This is the CrazyFlie's state estimator for roll angle

Relevant parameters:

Group: `s_pid_attitude`

- `roll_kp`
- `roll_ki`
- `roll_kd`

Step 7: Maiden Voyage

Now, you are ready to test how well your PID values work in flight. You will be fine-tuning your values through test flights!

At this point you should be able to fully control all axes of the drone through a gamepad. Before you take off for real, it's always a good idea to check that your inputs do what you think they do while on the test stand. Gamepad control uses a mixed setpoint setup where pitch and roll are given as absolute angles, and yaw is given as a rate. Once everything looks ok on the test stand, carefully try to take off and get a feel for how she handles. **Enable estop by setting the parameter to “1” before flying off the test stand. Your MP4Parameters.JSON file sets estop to “0”.** Be aware of others in the lab and try not to crash it too hard.

Step 7a: Gamepad Control

Control CrazyFlie with a gamepad: [This video](#) can also be used as an example.

1. Be sure to pass the USB gamepad to the VM by clicking the USB symbol in the bottom right of the window and selecting the gamepad
2. Navigate to the Gamepad tab as shown in Figure 15.
3. The provided gamepad should be configured already, if not you can click the configure tab then move the joystick to the max and min values to calibrate it

Tip: It may be useful to add a negative to the scales of the axes in order to invert joystick controls.

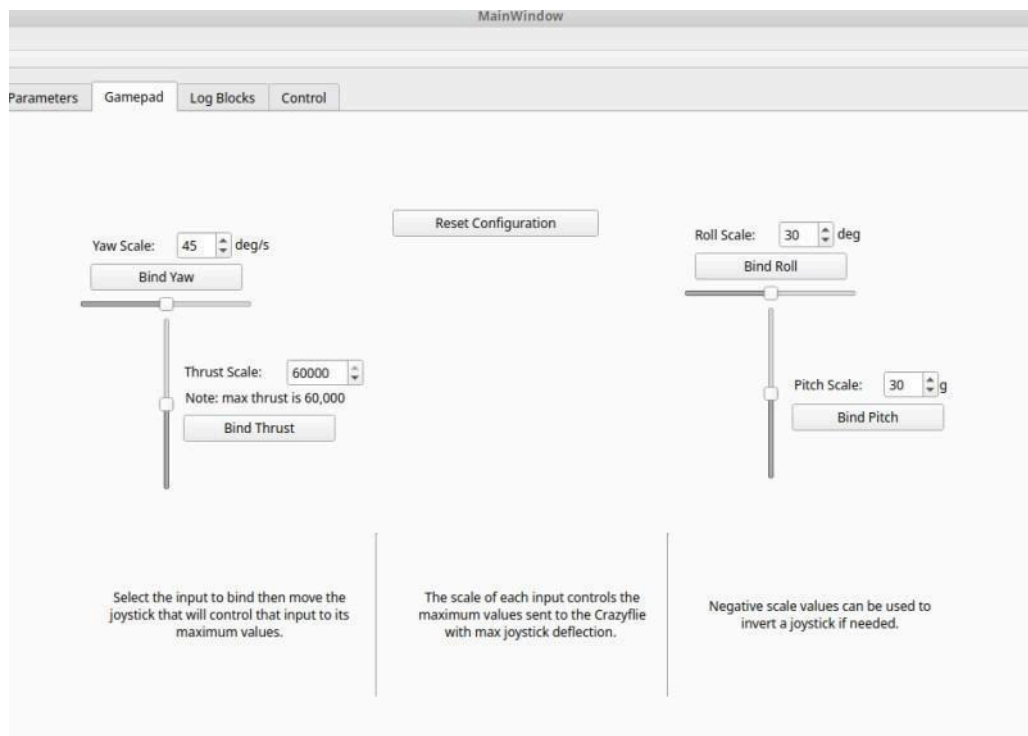


Figure 15: Gamepad Menu

4. Navigate to the control tab and select the gamepad control button after you have plugged in your controller. The ground station will immediately start sending setpoints to the CrazyFlye. The thrust joystick should be held to zero when switching to gamepad control to avoid unexpected takeoffs.



Figure 16: Gamepad Selection

Part 2: Understanding the controller

For this part of the lab, you will be writing your own control algorithms. **Be sure to [set up code exporting](#) [6] from the VM so you don't lose your work. The virtual machines are all immutable, which means that if you do not save your work elsewhere it will be deleted at reboot.** All locations where you will need to write new code have been commented with **488 TODO**. You can use VS code's built-in search function to find all occurrences to make sure you haven't missed anything.

***Make sure to flash the drone with lab Part 2's firmware.* [Flashing the drone](#) [7]**

When you are done working with a drone please re-flash it with part 1 firmware, This is to make sure that the next team that uses the drone would not need to re-flash part 1, giving them a drone in a known state. We want to minimize the flashes to the drone to prevent corruption.

Background

Before beginning, it is recommended to read through the files you will be changing and the corresponding data structures.

Background: Controller Layout

The high level student controller, defined in `controller_student.c`, manages setting up setpoints and forwarding them to the attitude controller, whose output gets fed into the attitude rate controller. Both the attitude and attitude rate controller are defined in `student_attitude_controller.c`. The attitude and attitude rate controller utilize the base pid algorithms defined in `student_pid.c`. The output from the attitude rate controller gets

passed back to the high-level student controller where it then gets forwarded to other modules outside the scope of this lab.

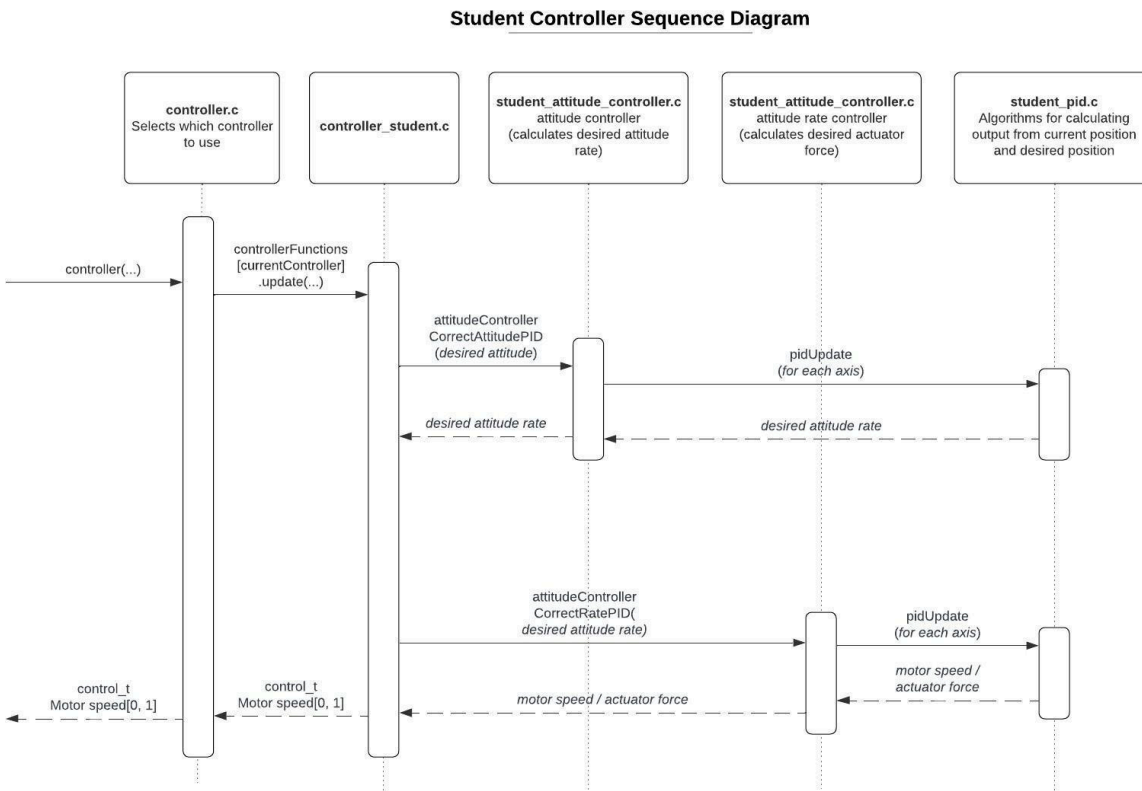


Figure 17: Student Controller Sequence Diagram

Background: Understanding the Code

As a part of writing your own algorithms, it is important to understand the data structures used in the firmware. Additionally, it can be useful to specify what logging information to send to the ground station. Below are details on both subjects which will help in the development of your algorithms. Additionally there are some further details on compiling the CrazyFlie firmware below.

Background: Data Structures

There are four main structures that you will have to be familiar with that the state controller uses to communicate with other modules defined in the `/src/modules/interface/stabilizer_types.h` file. A small but important struct is the attitude struct, containing roll, pitch, and yaw values as floats and has a timestamp. Depending on the control context (viewable in the `setpoint.mode` struct) the values in this struct can represent degrees, or degrees per second for each axis.

```
typedef struct attitude_s {
    uint32_t timestamp; // Timestamp when the data was computed

    float roll;
    float pitch;
    float yaw;
} attitude_t;
```

Figure 18: Attitude struct

The first main struct is the state struct: it contains CrazyFlie's current attitude and other parameters not relevant to this lab. Note that the current attitude rate is not available in the state struct. For this value you will need to read directly from the gyroscope described in the `sensorData` struct.

```
typedef struct state_s {
    attitude_t attitude; // deg (legacy CF2 body
                        // coordinate system,
                        // where pitch is inverted)
    quaternion_t attitudeQuaternion;
    point_t position; // m
    velocity_t velocity; // m/s
    acc_t acc; // Gs (but acc.z without
              // considering gravity)
} state_t;
```

Figure 19: State struct

The sensor data struct contains raw data from several sensors, including the gyroscope. You will need to access information contained in this struct for some of your rate PID calculations

```
typedef struct sensorData_s {
    Axis3f acc;           // Gs
    Axis3f gyro;          // deg/s
    Axis3f mag;           // gauss
    baro_t baro;
#ifdef LOG_SEC_IMU
    Axis3f accSec;        // Gs
    Axis3f gyroSec;       // deg/s
#endif
    uint64_t interruptTimestamp;
} sensorData_t;
```

Figure 20: Sensor data struct

The next major struct that you will interact with is the setpoint struct. The struct contains the setpoint information from the commander module which received setpoints from the ground station. Similar to other structs, it contains many fields of information you do not have to worry about. The important fields are **attitude, attitude rate, and thrust**. The others like velocity and acceleration are not used because you will be implementing an attitude controller, not a position or velocity controller.

Additionally, the mode struct controls how the data in the setpoint struct is interpreted. The modes are set automatically by the ground station based on the control method. For this lab, we are concerned with only two or three control modes, attitude control, attitude rate control, and mixed attitude control.

Background: Control Modes

Attitude control If:

- setpoint.mode.x y and z are set to modeDisable
- AND
- setpoint.mode.roll pitch and yaw are set to modeAbs

Then, the controller will use the values given by setpoint.attitude.

Attitude rate control If:

- setpoint.mode.x y and z are set to modeDisable
- AND
- setpoint.mode.roll pitch and yaw are set to modeVelocity

The controller will use the values given by setpoint.attitudeRate. This mode ignores most of the control algorithm and only uses the attitude rate controller to stabilize and control the quad. This mode is useful if you want to hold a steady rotation speed of the quad body, this is what some other quads call “acro mode”.

Mixed Attitude control If

- setpoint.mode.x y and z are set to modeDisable
- AND
- setpoint.mode.roll and pitch are set to modeAbs and setpoint.mode.yaw is set to modeVelocity

This allows the roll and pitch to be specified as a rate and the yaw to be an angle. This is the method used when a gamepad controller is used.

```
typedef struct setpoint_s {
    uint32_t timestamp;

    attitude_t attitude;        // deg
    attitude_t attitudeRate;    // deg/s
    quaternion_t attitudeQuaternion;
    float thrust;               //0 - 60,000
    point_t position;           // m
    velocity_t velocity;        // m/s
    acc_t acceleration;         // m/s^2
    bool velocity_body;         // true if velocity
                                // is given in body frame;
                                // false if velocity is
                                // given in world frame

    struct {
        stab_mode_t x;
        stab_mode_t y;
        stab_mode_t z;
        stab_mode_t roll;
        stab_mode_t pitch;
        stab_mode_t yaw;
        stab_mode_t quat;
    } mode;
} setpoint_t;
```

Figure 21: Setpoint Struct

The last struct is the control struct. This is the output of your control algorithm and represents the force to apply to the drone's body. It is sent to the power distribution module which converts it into motor commands. **Note that these are 16 bit int values, so a conversion must take place from a float.**

```
typedef struct control_s {
    int16_t roll;
    int16_t pitch;
    int16_t yaw;
    float thrust;
} control_t;
```

Figure 22: Control struct

Background: Logging Instructions

1. At the bottom of the controller_student.c and student_attitude_controller.c you will see a list of log commands. It should look like this in structure but with many more LOG_ADD commands and a couple of groups.

```
/**
 * Log variables of attitude PID controller
 */
LOG_GROUP_START(s_pid_attitude)
/**
 * @brief Proportional output roll
 */
LOG_ADD(LOG_FLOAT, roll_outP, NULL)
LOG_GROUP_STOP(s_pid_attitude)
```

Figure 23: Sample Log Group

2. This is how information is communicated to the ground station such as current yaw, pitch, roll and other information
3. In the spot currently NULL you will put a pointer to the address of the global variable you want to log (ex: you have named your output pitch variable outPitch, you would put &outPitch in the field and it would look like the following)

```
LOG_ADD(LOG_FLOAT, roll_outP, &outPitch)
```

Figure 24: Sample Log Add

4. Now you know how to send information to the GUI ground station :)
5. The parameter macros below the logging are how the GUI sets constants in the firmware, like you did with the PID constants in part 1.
6. Some of the controllers used in part 2 will not function correctly without logging actual values. Ensure that all addresses inserted are not null.

Background: Compiling The CrazyFlie Firmware

The CrazyFlie firmware can be compiled from the firmware root folder, `/MicroCART/crazyflie_software/crazyflie-firmware-lab-part-2/` by running `make CONTROLLER="Student"`. After successful compilation, the binary files will be placed in the root of the firmware folder and can then be flashed to the CrazyFlie by following the instructions above.

Files Containing “488 TODO:”

- `crazyflie_software/crazyflie-firmware-lab-part-2/src/modules/src/`
 - `controller_student.c`
 - `student_pid.c`
 - `student_pid.h`
 - `student_attitude_controller.c`

Writing the controller code.

Now that you understand the structure of the firmware, it's time to start writing your own algorithms. You may want to review [Flashing the CrazyFlie](#), when you're ready to compile run `make CONTROLLER="Student"` from the root of the CrazyFlie firmware.

Below is the suggested order of additions to make to the firmware.

Step 1: General PID

Note, for this section you should **use the PID constants you found in part 1** for known good values. You can set the default values in the `student_pid.h` file. However the constants you discovered earlier may have some assumptions built in so it may be necessary to re-tune the controller if a significantly different algorithm is used.

1. The first thing that you will write is a general PID function and struct. The PID struct that we provide you will be empty and you will decide on what should be included in it, that is defined in `student_pid.h`. You are encouraged to make as many helper functions that you would like in your `student_pid.c` file to help with roll, pitch and yaw calculations.
2. The first thing I would recommend writing is the **PidObject** struct in `student_pid.h`. This struct is used to hold the data that is used for all other PID calculations so it is required to write many of the other functions.
3. Next, write the basic getters and setters for the `PidObject` in `student_pid.c`.
4. Now we can actually write the PID algorithm in the `studentPidUpdate` function.
5. At this point, you should have filled out everything in `student_pid.c` and `student_pid.h`, make sure **all of the “488 TODO” comments have been fulfilled in these files.**

Step 2: Student Attitude Controller

The attitude controller and attitude rate controller have their main functions in `student_attitude_controller.c`, this is where you should begin working.

1. Complete the initialization function for the attitude controller.

2. Implement the student attitude rate controller PID.
3. Test rate controller
4. Next, write the student attitude controller PID.
5. Test attitude controller
6. Then finish the reset PID value helper functions
7. Finally, fill in the logging parameter addresses. Then make sure **all of the “488 TODO” comments have been fulfilled in these files.**

Step 3: Student Controller, Bringing it all together

Now we need to bring everything together in the `controller_student.c` file.

1. Start by reading in the setpoints for roll, pitch and yaw angles as desired values. For mixed attitude mode, the yaw angle should change from the current angle based on the rate given. Also, set the desired thrust.
2. Use the attitude PID controller to set the desired attitude rate to the value calculated. If the controller is in velocity mode, overwrite the attitude rates with the setpoints provided.
3. Next, input the desired attitude rates into the PID controller and use the outputs to set the command variables for roll, pitch, and yaw. Set the output thrust.
4. Copy the values into separate variables for logging purposes.
5. Complete the logging parameters by filling in the addresses.

At this point, you should have filled out everything **in all files**, make sure **all of the “488 TODO” comments have been fulfilled.**

Step 4: Final Check

Before you go flying your CrazyFlie for real, it's a good idea to verify everything works as intended on the test stand. Attach the drone to the test stand and briefly check that all axes respond how you expect. For this step you can use manual setpoints or a gamepad connected to the ground station, see here for details on using a gamepad with the ground station.

If all looks good, take her for a spin and see how she handles! **Be careful of others** in the lab and try not to crash it too hard!

What to submit:

- Kp, Ki, and Kd constants for yaw rate, pitch rate, roll rate, yaw, pitch, and roll
- All documents that were edited in the firmware to complete part 2, see final export for details If you're hungry for further challenges, take a look at the extra credit section of this lab

BONUS credit.

1. Give feedback on this lab (+5 points)
 - a. This is a new lab developed by the MicroCART team as a senior design project. We would appreciate some feedback on what you enjoyed about the lab and what can be improved.
 - b. [Google Form Link](#)
2. Creative Visualization of Data (+5 points)
 - a. This would be taking the raw sensor data and using it to create a visual representation, other than how it is visualized in the GUI.
 - b. A good starting point would be to look at the raw data the GUI uses. The log file is located at:
`/MicroCART/cflib_groundstation/logs/cfile1<date and time>.txt`
a new log file is created each time you start up the GUI.
 - c. Alternatively you can create your own method of capturing data. All Python scripts for logging are located in
`/MicroCART/cflib_groundstation`
3. Manual flight obstacle course (+5 points)
 - a. If teams can demonstrate their stable control algorithm by manually flying through an obstacle course (approved by the TA) extra points can be awarded. Film your obstacle runs and submit.
4. Autonomous flight (+10 points)
 - a. The CrazyFlie has many autonomous capabilities that we have not even touched in this lab. Extra credit will be awarded if you can write a short script to takeoff, fly to some xyz coordinates using a positioning system. If you are interested, talk to your TA about using the lighthouse positioning system..
 - b. You could write a short script that uses the ground station CLI to send commands over and over or you could use the CrazyFlie python library to send high level commands to the CrazyFlie.
 - i. An additional circuit board, the flow deck, or the lighthouse deck is required to use the CrazyFlie python library. If you wish to pursue this, talk to a TA and they can acquire a flow deck from the MicroCART team (sdmay25-32@iastate.edu).
 - ii. A test stand that has been made for the purpose of tuning a positional controller has been made to assist with this task should you use the lighthouse deck. Ask your TA for more information.
 - iii. Details on writing python scripts for the CrazyFlie can be found on the MICROCart seniors design team git repo. Talk to your TA for more details

Appendix A

The CrazyFlie is a versatile, open-source quadcopter platform by Bitcraze. The platform has been specially adapted to meet the needs of this lab but has far more capabilities. If you are interested in exploring the platform further, check out their website [here](#).

CrazyFlie Status Sheet

The current status of quadcopters and their radio channel can be found at [CrazyFlie Radio Map](#).

CrazyFlie LED Codes

One of the main ways the CrazyFlie communicates its status is with the four LEDs mounted to the surface.

<u>LED code</u>	<u>Meaning</u>
2 solid BLUE	All normal, indicates the back of the CrazyFlie
2 Slow flashing BLUE (1 hz)	CrazyFlie is in bootloader mode and is ready to be flashed by the radio
1 Fast flashing BLUE (2 hz)	CrazyFlie is in DFU mode and is ready to be flashed by USB
Back left BLUE flashing	Charging while plugged into USB. The percentage of time the LED is on indicates the battery level.
1 slow flashing RED (0.5 hz)	CrazyFlie is on, but the sensors are not calibrated. Place on a flat surface and keep still to calibrate
1 fast flashing RED (2 hz)	Sensors are calibrated and ready to fly
5 short RED pulses followed by a gap	Self-test failed, hardware may be damaged, notify a TA or the instructor
1 solid RED	Low battery
5 short GREEN pulses	Self-test passed, all normal

Appendix B [\[1\]](#)

Virtual Machine Details

The virtual machine has been configured to have the necessary utilities to develop the CrazyFlie firmware. Below are detailed instructions for completing different tasks within the virtual machine. Login username is **bitcraze** and password is **CrazyFlie**.

Adding the Virtual Machine Instance

The virtual machine is installed on the lab computers as an immutable virtual machine. To access it you may need to add it to the virtual box. Click “Add” and navigate to `C:/Temp/MP4Image/BaseFolder/488_MP-4_VM_s25` and click the **.vbox** file. The virtual machine should now be available.

Importing the Virtual Machine Instance

Other than using a **vbox** file, users are also able to import **ova** instances to get the VM instantiated inside of VirtualBox. Things may be prone to going wrong with the VMs (typically finding them reaching an invalid state). If an **ova** file is available to use, below are the following steps to import the virtual machine **ova**:

New users will not be able to see the VM instance until it is imported.

1. Open Virtual box application
2. Go to Import
3. Navigate to the VM installation, <path-to-ova-file>
4. Open the .ova file. Navigate to “finish” and wait. This process may take a few minutes.
5. The virtual machine should now be available.

RECOMMENDED: Folder Sharing with the Virtual Machine [\[6\]](#)

Go to VM settings, machine → settings then shared folders

On the far right click the blue folder with a green cross to add a new shared folder

Set the folder path to a folder on the windows system to share with the VM Select Auto-mount

For the mount point enter ‘/home/bitcraze/shared-folder’ or some other specified mount point

Select make permanent

This option is only available while the vm is running

Select ok on both dialog boxes to complete the shared folder setup

You should now be able to navigate to `/home/bitcraze/shared-folder` in the VM and see the files in your shared folder

OPTIONAL: Exporting Code From the Virtual Machine

Due to the read only VM image, **you must export your work from the VM before shutting down**. The VM will be reset on reboot and all changes will be reverted.

There are two options to maintain and export your changes from the virtual machine. The first is to use a local git repository stored on your x drive or a USB flash drive. This minimizes network usage. The second option is to use a standard GitHub or GitLab repository. This option is best for working with other people in your group at the same time. If you do use the second option we ask you make your repo private.

With a bare git repository on the host machine

Create a bare repository on your x drive or a removable media device

```
'git init --bare my_repo_name.git'
```

This will create a **folder** called `my_repo_name.git` with no working tree.

Share this folder with the VM and mount it at **'/home/bitcraze/transfer-repo.git'**, see details on [sharing a folder with the VM](#) [7]

Once the bare repository is accessible from within the VM, the Microcart repository should already be setup to use

`'/home/bitcraze/transfer-repo.git'` as a remote, check this with `'git remote -v'`

Commit and push your changes to your shared folder

```
If this fails try setting the remote url again with 'git remote
set-url origin <absolute path to shared
folder>'
```

Your changes will now be on the bare repo in your shared folder, these changes can now be reapplied later

This can be verified by navigating to

```
'/home/bitcraze/transfer-repo.git' and running
git log Lab_Part_2
```

With normal GitHub/GitLab repository

Note: the first commit may take a while as all the git history must be uploaded

Create a new **private** blank repo on github or gitlab, obtain the url or ssh address to the repo

In the `Lab_Part_*` folder run `'git remote set-url origin <address of remote repo>'`

Note this set-url command must be run each time the VM is rebooted due to the immutable hard drive setup

Commit and push your changes as normal

Using git with the Virtual Machine

With a bare git repository on the host machine

Ensure the bare repository is accessible within the VM, see details on [sharing a folder with the VM](#), mount it at **'/home/bitcraze/transfer-repo.git'**

The Microcart repo should already be setup to use

'/home/bitcraze/transfer-repo.git' as a remote

From within the Lab_Part_* folder run 'git pull'

With normal GitHub/GitLab repository

Set the remote repository with 'git remote set-url origin <address of remote repo>'

From within the Lab_Part_* folder run 'git pull'

Troubleshooting the virtual machine

The virtual machine is prone to having some issues when it comes to the stages between downloading, implementing, and use. The following section details the most reported issues in previous years, and how to properly address and fix them.

“The virtual machine is not seeming very responsive and is laggy.”

After importing the virtual machine, make sure to check that:

- The version of the virtual machine matches the version described and provided in lab.
- Make sure that the processor and memory settings are set to max utilization.

To check this, head on over to VirtualBox and right click your virtual machine on the side. Select “Settings” and navigate your way to the “System” tab. There, you should be able to access slides used for setting the amount allocated to the virtual machine.

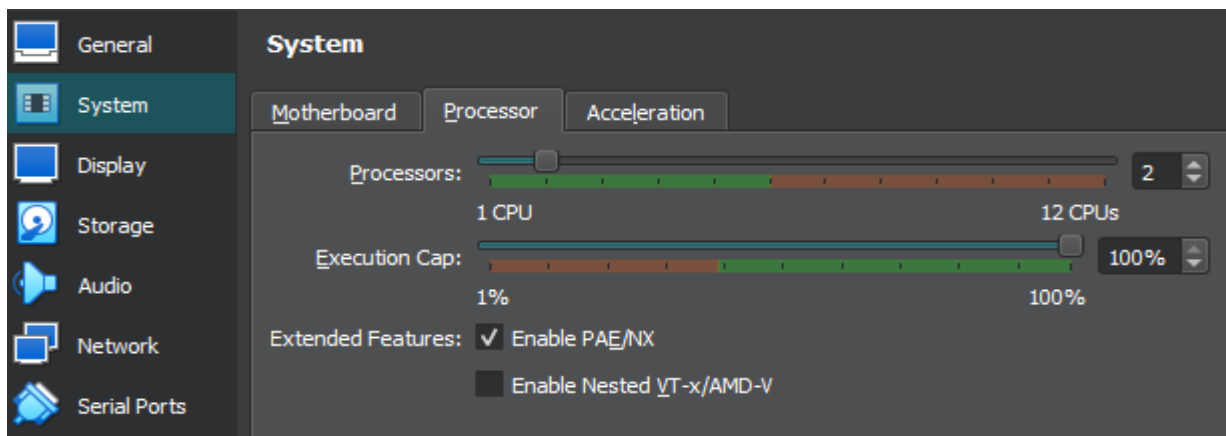


Figure 25: System sidebar menu in VirtualBox

“There’s lots of small error icons floating around when I open my virtual machine.”

We’ve run into a couple issues in the past where exporting and reimporting virtual machines and somehow corrupt parts of the ova file. In some rare cases, VirtualBox will flood the screen with errors, preventing students from accessing the lab content.

To fix this, navigate to the top of the top of the virtual machine while opened, and select the “Devices” tab. Then, click “Upgrade Guest Additions” and let the virtual machine run this process. This might take several minutes.

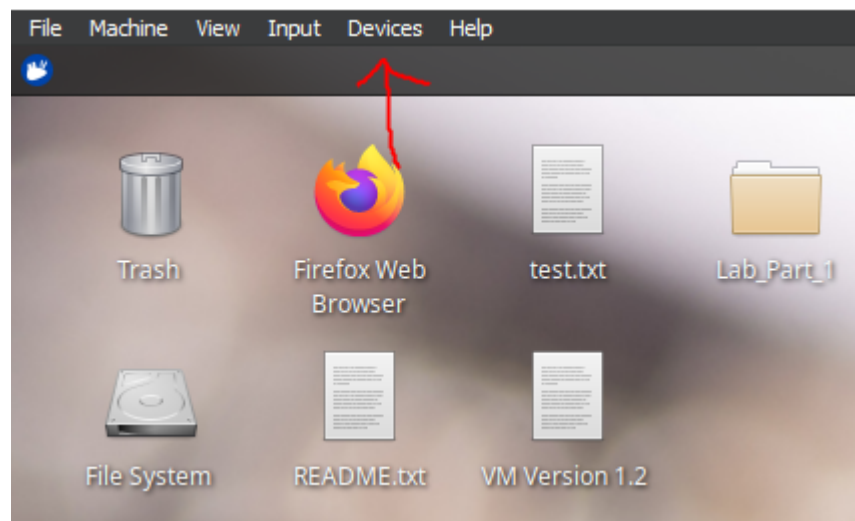


Figure 26: “Devices” location in virtual machine

“I am having frequent issues with getting my USB Crazyradio dongle connected.”

There could be several causes to these issues, including faulty hardware, bad USB drivers, and other hard to spot factors. Luckily, we can check to make sure that our virtual machine isn’t producing these issues.

Head on over to your USB settings (either inside or outside of the virtual machine) by navigating to **Devices** → **USB** → **”USB Settings”**. Remove all of your current USB Device filters and remake a new one for your Crazyradio dongle. Then, Change your USB Controller version to 2.0, and give the virtual machine a reset. Then, try reconnecting your hardware

and give it a few attempts after 10-15 seconds to test for connectivity. If issues persist, be sure to reach out to a TA or leave a message on the class Discord.

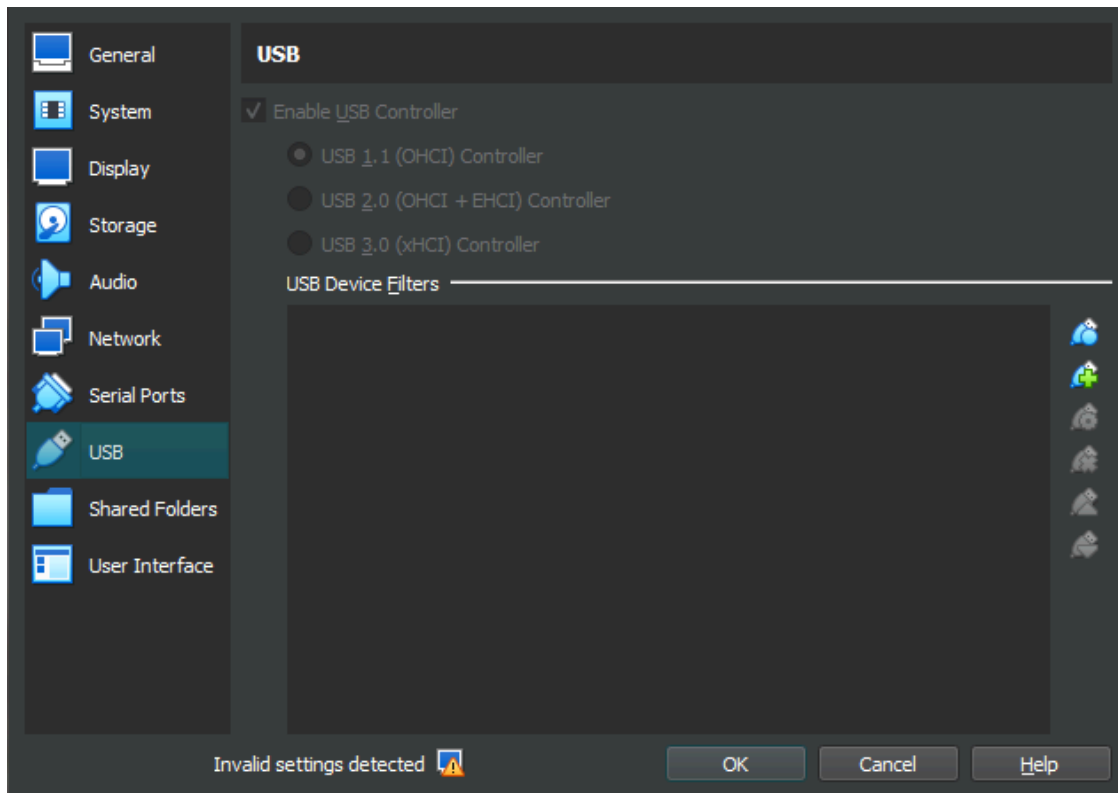


Figure 27: USB Settings Manager

The VirtualBox virtual machines are managed each year by the MicroCART Senior Design team. These are frequently tested and updated to fit the new releases of the MP-4 lab designed. As more changes are made, more error are bound to occur. Please be sure to notify the 488 TAs and MicroCART team of any other new issues that might occur to the Virtual Machine, as they will work to address these changes and push the newest, stable release as soon as possible.

Appendix C [\[2\]](#) [\[5\]](#)

The test stand control board reads the rotary encoder value and transmits either positional or rotation rate data to the computer.

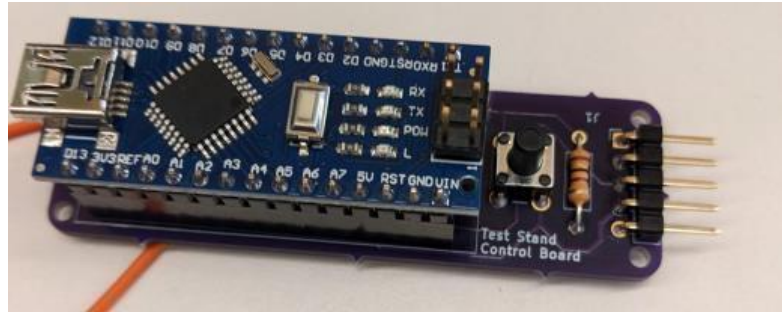


Figure 28: Test Stand Control Board

Utilizing the Test Stand

1. Start the CrazyFlie drone on a flat surface before you attach it to the desired mount.
2. Attach the drone to the mount by inserting each pair of clear plastic legs into a corresponding slot in the mount. If you're using the vertical drone mount, make sure that the drone is mounted appropriately to measure either pitch or roll.
3. Once the drone is mounted, insert the shaft of the mount into the hole on the top of the test stand base, making sure it fits snugly and doesn't rub against the sides.
4. Plug the small three-pin end of the gray cable into the rotary encoder. While you are able to only insert the plug in the correct orientation, please do not force the plug if you are met with resistance. Both the cable and the rotary encoder are fairly expensive, and we have limited replacements.
5. Plug the other end of the gray cable into the 5-pin connector on the test stand control board. Make sure to pay attention to the orientation of the connector since this end of the cable can be plugged in backward, although doing so shouldn't harm anything. Make sure that the black wire on the cable connects to the connector pin with the square solder pad.

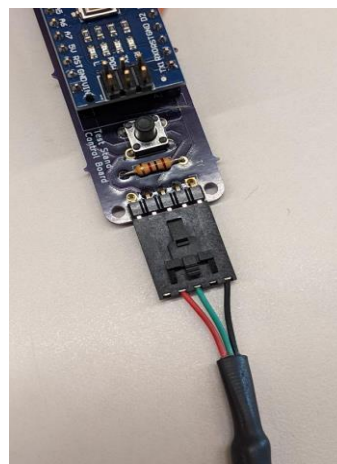


Figure 29: Test Stand Connection

6. Connect the Arduino Nano to your PC using a mini USB cable. It's the same process as getting the radio to mount to the VM. The Arduino shows up as "QinHeng Electronics USB Serial." Once mounted, you may proceed to launch the GUI
7. **IMPORTANT:** Before terminating the GUI process, you must unmount the Arduino or disconnect it entirely. If not, the VM will crash. The crash is a little dramatic, the file system starts to have issues while the desktop environment remains responsive, and ultimately the VM as a whole will become unresponsive. NOTE: exiting out of the GUI does not terminate the backend process, sending a SIGINT (e.g., via Ctrl+C) in the terminal from which the GUI was launched will terminate the process.

Using the Test Stand [\[4\]](#)

Once the test stand is connected and the GUI is open you are now free to plot the test stand logging variables.

When plotting with the drone mounted for yaw tuning, the angle will line up with the state estimate value from the quad. When tuning for roll and pitch, you may notice that the angle is inverted; this is due to the sensor treating counter-clockwise rotation as positive and clockwise as negative. To fix this, flip your drone 180°.

You may also find that the drone's state estimated angle and the test stand angle don't reference the same zero position. To fix this, have the drone facing its 0° angle based on the state estimate variable then press the **black button** on the Arduino's breakout board.

Appendix D [\[3\]](#)

Operating the Ground Station

The Ground Station can be opened using the command `crazycart <radio number>` using the radio number corresponding to your quadcopter.

Adding New Logging Variables

The CrazyFlie uses what are called “Log Blocks” to define what variables are logged and sent to the ground station. A log block specifies what values to send and at what rate. Log blocks can be paused and resumed after initial setup. Note the CrazyFlie communication has a limited bandwidth, **only enable 12 logging variables at a time. NOTE: The 13th and 14th logging variables are always TestStand.angle and TestStand.rate**

1. Navigate to the **Log Blocks** tab.


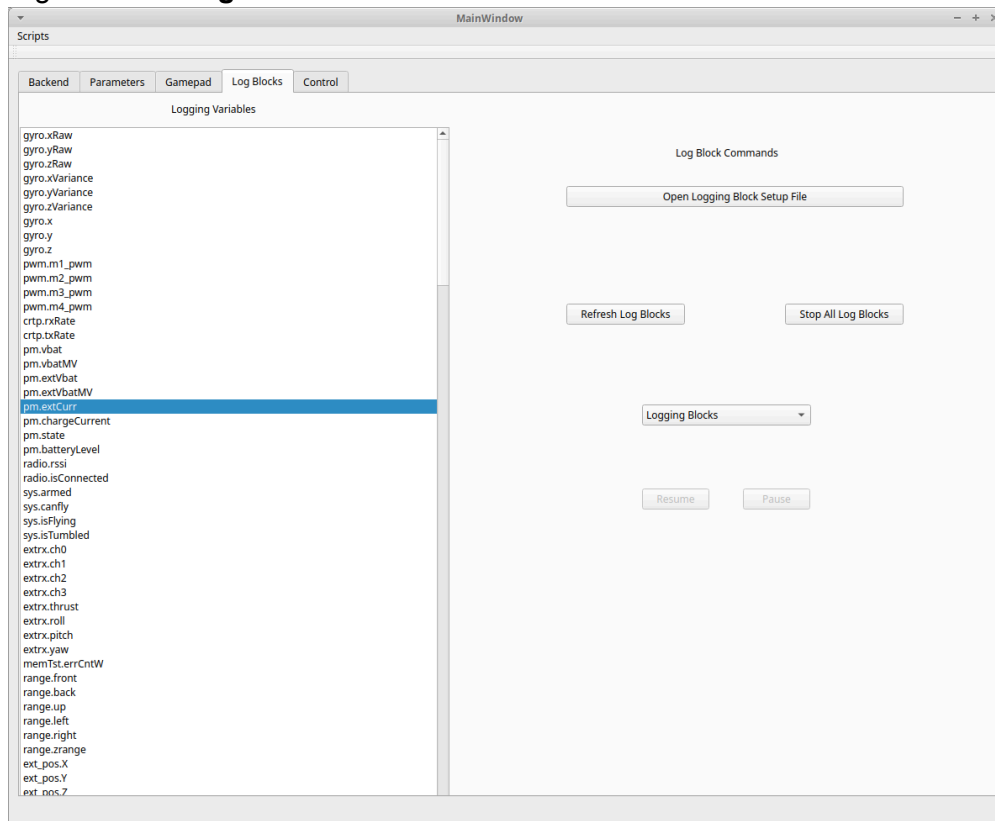


Figure 30: Log Blocks Tab

2. The list on the left shows all available logging variables from the CrazyFlie firmware.
3. To view and modify what logging variables are sent, click the “Open Logging Block Setup File.”

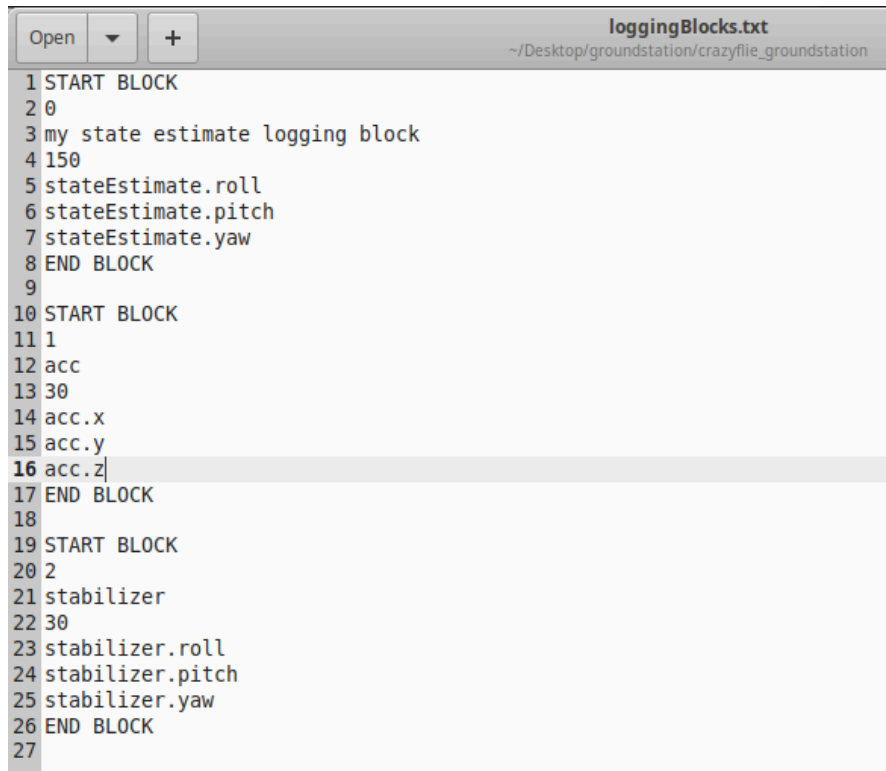

```
1 START BLOCK
2 0
3 my state estimate logging block
4 150
5 stateEstimate.roll
6 stateEstimate.pitch
7 stateEstimate.yaw
8 END BLOCK
9
10 START BLOCK
11 1
12 acc
13 30
14 acc.x
15 acc.y
16 acc.z
17 END BLOCK
18
19 START BLOCK
20 2
21 stabilizer
22 30
23 stabilizer.roll
24 stabilizer.pitch
25 stabilizer.yaw
26 END BLOCK
27
```

Figure 31: Logging Blocks File

- a. The logging blocks have a defined format that must be followed
 - i. A block definition starts with `START BLOCK`
 - ii. The next line is the **logging block integer ID**, it must be **unique** to other logging blocks defined.
 - iii. The next line is the **name** of the logging block, this can be any string you'd like
 - iv. The next line is an integer defining the **period** of the data sent in **milliseconds** by the CrazyFlie, so a period of 100ms means 10 data points are sent per second. A lower period pushes more data to the ground station. **Note, too low of a period can overload the graphing visualization and cause the GUI to slow down.** Safe values are **above 100**.
 - v. The following lines define the **variables** that are in the logging block. These are defined by the firmware and can be viewed in the large list mentioned above. Any number of variables can be in the log block, and they do not have to be from the same logging group.
 - vi. A block definition ends with `END BLOCK`
 - vii. Any lines that are outside of a block definition are ignored
4. Save and close the logging block definition file
5. Click **Refresh Log Blocks** to send the new definition file to CrazyFlie
6. The drop-down on the right should now show your new logging block and will be active

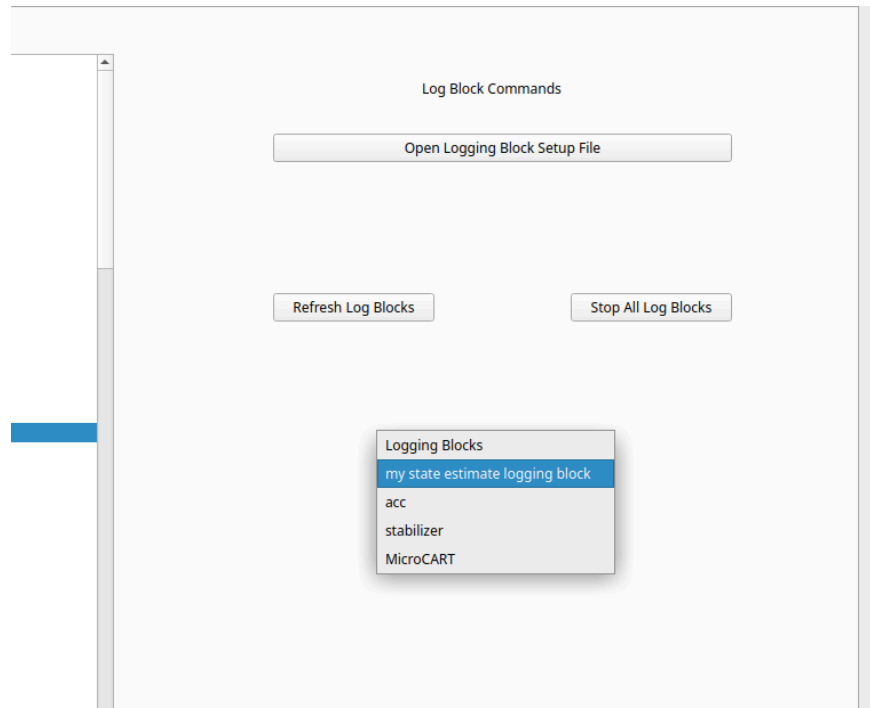


Figure 32: Log Block Commands

7. If needed, you can increase available bandwidth during logging by pausing all other log blocks, selecting your new one from the drop-down, and resuming it.
 - a. The stop all log blocks remove the log blocks from the CrazyFlie. You will need to pause each log block one by one

Changing CrazyCart Logging Period

If your logging process is starting to slow down quite a significant amount, it may be because the CrazyFlie is having a hard time with the logging period. By default the period is set to 100ms (ie. 10 logs per second). This is a known save value, any shorter period may cause performance to degrade.

Refer to the following section of the MicroCART wiki for assistance on changing specific of logging variables and their rates: <https://git.ece.iastate.edu/danc/MicroCART/-/wikis/GUI/GUI>

Notice in the example that the loggingBlocks.txt file has a value of “150” near the top... This value represents the logging block rate. If issues persist, change this value to a lower number to ease the load of logging from the frontend.

Command Line Interface (CLI)

The CLI is the base of the communication with the CrazyFlie drone. It can optionally be used for basic tasks. You shouldn't need to interact with the CLI during the course of the lab, but it can be useful for debugging if something goes wrong. It can be opened by adding a “nogui” flag to the end of the crazyCART script. `crazycart nogui` Run commands with `./Cli ...` Further usage details can be found by appending `--help` to the end of a command. The following

commands are currently implemented.

Command	Description
<code>./Cli outputoverride <enable> <Time> <Throttle> <Pitch> <Roll> <Yaw></code>	output override will send a setpoint that lasts a set amount of time with the specified throttle, roll pitch and yaw. With enable set to 1 it will send the setpoint as a rate and 2 will send the setpoint as an angle
<code>./Cli getparam <block_id 'block_name'> <param_id 'param_name'></code>	Get param will get the value of specified param. Note only the param id is used for this command. The param id is found in the

	logging TOC, use getlogfile 1 command to find this file
<code>./Cli setparam <block_id 'block_name'> <param_id 'param_name'> <value></code>	Set param will set the value of the specified param
<code>./Cli getlogfile <id></code>	Get log file will get a certain log specified by the id of 0: data log 1: param id 2: logging toc
<code>./Cli logblockcommand <id></code>	The log block command performs specific tasks on log files for the specified id of 0: delete all log blocks 1: refresh all log blocks 2: load log blocks 3: delete log block 4: resumelog block 5: pause log block

Document Version Changelog

- Version 1.1
 - Changed optional logging variables in lab part one from gyro.x, y, z to ctrlStdnt.r_roll, r_pitch, r_yaw
 - Changed git instructions for vm to use "Lab_Part_* folder" instead of "Microcart folder."
 - Updated student controller sequence diagram to have desired attitude rate being passed to the attitude rate controller.
 - Removed "Test Stand Control Board Rate mode" extra credit & replaced it with test stand visualization extra credit.
- Version 1.2 (sdmay23-45) Last updated 3/19
 - Reorganized document for readability by adding appendices at the end.
 - Added additional tips to help students progress through the lab more efficiently.

- Version 2.0 (sdmay24-32) Last updated 5/6
 - Added more core information about virtual machines and other VirtualBox logistics.
 - Added logging block value change section.
- Version 3.0 (sdmay25-32)
 - Updates to document links and directory paths
 - Added 488 TODO locations
 - Log block period misconceptions.
 - New Test Stand integration and setup
 - Document internal link closing
 - ie Click link at [1] and go to Appendix B, then click on [1] at Appendix B and then it will close the loop with it