



# **NRC7292 Evaluation Kit**

## **User Guide**

### **(Standalone SDK API)**

#### **Ultra-low power & Long-range Wi-Fi**

**Ver 4.10**  
**Oct. 27, 2023**

**NEWRACOM, Inc.**

## **NRC7292 Evaluation Kit User Guide (Standalone SDK API)**

### **Ultra-low power & Long-range Wi-Fi**

**© 2023 NEWRACOM, Inc.**

All right reserved. No part of this document may be reproduced in any form without written permission from Newracom.

Newracom reserves the right to change in its products or product specification to improve function or design at any time without notice.

### **Office**

Newracom, Inc.

505 Technology Drive, Irvine, CA 92618 USA

<http://www.newracom.com>

# Contents

<b>1</b>	<b>Overview.....</b>	<b>14</b>
<b>2</b>	<b>General .....</b>	<b>15</b>
	2.1.1 Error Type.....	15
<b>3</b>	<b>Wi-Fi .....</b>	<b>16</b>
3.1	Data Type .....	16
3.1.1	API Status Return Value .....	16
3.1.2	Device Mode .....	16
3.1.3	Wi-Fi State .....	17
3.1.4	Country Code .....	17
3.1.5	Security Mode .....	18
3.1.6	Bandwidth .....	18
3.1.7	IP Mode .....	18
3.1.8	Address status .....	19
3.1.9	Scan type .....	19
3.1.10	SCAN_RESULT.....	19
3.1.11	SCAN_RESULTS.....	20
3.1.12	AP_INFO .....	20
3.1.13	STA State .....	20
3.1.14	STA_INFO .....	21
3.1.15	STA_LIST .....	21
3.1.16	Tx Power Type .....	21
3.1.17	Guard Interval(GI) Type .....	22
3.1.18	Version Type.....	22
3.1.19	Ignore Broadcast SSID .....	22
3.2	Function Call.....	23
3.2.1	nrc_wifi_get_device_mode .....	23
3.2.2	nrc_wifi_get_mac_address.....	23
3.2.3	nrc_wifi_get_tx_power .....	24
3.2.4	nrc_wifi_set_tx_power .....	24
3.2.5	nrc_wifi_get_rssi.....	24
3.2.6	nrc_wifi_get_average_rssi .....	25
3.2.7	nrc_wifi_get_snr .....	25
3.2.8	nrc_wifi_get_rate_control .....	26
3.2.9	nrc_wifi_set_rate_control .....	26

3.2.10 nrc_wifi_get_mcs_info .....	26
3.2.11 nrc_wifi_get_mcs .....	27
3.2.12 nrc_wifi_set_mcs .....	28
3.2.13 nrc_wifi_get_cca_threshold .....	28
3.2.14 nrc_wifi_set_cca_threshold .....	28
3.2.15 nrc_wifi_set_tx_time .....	29
3.2.16 nrc_wifi_enable_duty_cycle .....	29
3.2.17 nrc_wifi_disable_duty_cycle .....	30
3.2.18 nrc_wifi_tx_available_duty_cycle .....	30
3.2.19 nrc_wifi_get_state .....	30
3.2.20 nrc_wifi_add_network .....	31
3.2.21 nrc_wifi_remove_network .....	31
3.2.22 nrc_wifi_country_from_string .....	32
3.2.23 nrc_wifi_country_to_string .....	32
3.2.24 nrc_wifi_get_country .....	32
3.2.25 nrc_wifi_set_country .....	33
3.2.26 nrc_wifi_get_channel_bandwidth .....	33
3.2.27 nrc_wifi_get_channel_freq .....	34
3.2.28 nrc_wifi_set_channel_freq .....	34
3.2.29 nrc_wifi_set_channel_freq_bw .....	35
3.2.30 nrc_wifi_set_ssid .....	35
3.2.31 nrc_wifi_get_bssid .....	35
3.2.32 nrc_wifi_set_bssid .....	36
3.2.33 nrc_wifi_set_security .....	36
3.2.34 nrc_wifi_set_pmk .....	37
3.2.35 nrc_wifi_get_scan_freq .....	37
3.2.36 nrc_wifi_set_scan_freq .....	38
3.2.37 nrc_wifi_get_scan_freq_nons1g .....	39
3.2.38 nrc_wifi_set_scan_freq_nons1g .....	39
3.2.39 nrc_wifi_get_aid .....	40
3.2.40 nrc_wifi_scan .....	40
3.2.41 nrc_wifi_scan_timeout .....	41
3.2.42 nrc_wifi_scan_ssid .....	41
3.2.43 nrc_wifi_scan_results .....	42
3.2.44 nrc_wifi_abort_scan .....	42
3.2.45 nrc_wifi_connect .....	43
3.2.46 nrc_wifi_disconnect .....	43
3.2.47 nrc_wifi_wps_pbc .....	44

3.2.48 nrc_wifi_softap_set_conf .....	44
3.2.49 nrc_wifi_softap_set_bss_max_idle .....	45
3.2.50 nrc_wifi_softap_set_ip .....	45
3.2.51 nrc_wifi_softap_start.....	46
3.2.52 nrc_wifi_softap_start_timeout.....	47
3.2.53 nrc_wifi_softap_stop .....	47
3.2.54 nrc_wifi_softap_disassociate.....	47
3.2.55 nrc_wifi_softap_deauthenticate .....	48
3.2.56 nrc_wifi_softap_start_dhcp_server.....	48
3.2.57 nrc_wifi_softap_stop_dhcp_server .....	49
3.2.58 nrc_wifi_softap_get_sta_list.....	49
3.2.59 nrc_wifi_softap_get_sta_by_addr.....	50
3.2.60 nrc_wifi_softap_get_sta_num.....	50
3.2.61 nrc_wifi_register_event_handler .....	50
3.2.62 nrc_wifi_unregister_event_handler .....	51
3.2.63 nrc_addr_get_state.....	51
3.2.64 nrc_wifi_get_ip_mode.....	52
3.2.65 nrc_wifi_set_ip_mode .....	52
3.2.66 nrc_wifi_get_ip_address.....	52
3.2.67 nrc_wifi_set_ip_address.....	53
3.2.68 nrc_wifi_stop_dhcp_client .....	54
3.2.69 nrc_wifi_set_dns.....	54
3.2.70 nrc_wifi_add_etharp.....	54
3.2.71 nrc_wifi_send_addba.....	55
3.2.72 nrc_wifi_send_delba.....	55
3.2.73 nrc_wifi_set_tx_aggr_auto .....	56
3.2.74 nrc_wifi_set_passive_scan .....	56
3.2.75 nrc_wifi_get_ap_info.....	57
3.2.76 nrc_wifi_set_rf_power.....	57
3.2.77 nrc_wifi_set_use_4address .....	58
3.2.78 nrc_wifi_get_use_4address.....	58
3.2.79 nrc_get_hw_version .....	58
3.2.80 nrc_wifi_get_gi.....	59
3.2.81 nrc_wifi_set_gi.....	59
3.2.82 nrc_wifi_set_beacon_loss_detection .....	59
3.2.83 nrc_wifi_softap_get_max_num_sta .....	60
3.2.84 nrc_wifi_softap_set_max_num_sta .....	60
3.2.85 nrc_wifi_set_beacon_loss_detection .....	61

3.2.86 nrc_wifi_get_listen_interval .....	61
3.2.87 nrc_wifi_set_listen_interval .....	62
3.2.88 nrc_wifi_softap_get_beacon_interval .....	62
3.2.89 nrc_wifi_softap_set_beacon_interval .....	63
3.2.90 nrc_wifi_softap_get_ignore_broadcast_ssid .....	63
3.2.91 nrc_wifi_softap_set_ignore_broadcast_ssid .....	64
3.3 Callback Functions & Events .....	65
<b>4 System .....</b>	<b>66</b>
4.1 Function Call.....	66
4.1.1 nrc_get_rtc.....	66
4.1.2 nrc_reset_rtc.....	66
4.1.3 nrc_sw_reset.....	66
4.1.4 nrc_get_user_factory.....	67
4.1.5 nrc_led_trx_init.....	67
4.1.6 nrc_led_trx_deinit.....	68
4.1.7 nrc_wdt_enable .....	68
4.1.8 nrc_wdt_disable.....	68
4.1.9 nrc_set_app_version.....	69
4.1.10 nrc_get_app_version .....	69
4.1.11 nrc_set_app_name .....	69
4.1.12 nrc_get_app_name .....	70
4.1.13 nrc_get_sdk_version .....	70
4.1.14 nrc_set_flash_device_info .....	70
4.1.15 nrc_get_flash_device_info.....	71
4.1.16 nrc_get_user_data_area_size.....	71
4.1.17 nrc_write_user_data.....	71
4.1.18 nrc_read_user_data.....	72
<b>5 UART .....</b>	<b>73</b>
5.1 Data Type .....	73
5.1.1 Channel .....	73
5.1.2 UART Data Bit.....	73
5.1.3 UART Stop Bit .....	73
5.1.4 UART Parity Bit .....	74
5.1.5 UART Hardware Flow Control .....	74
5.1.6 UARTFIFO .....	74
5.1.7 UART Configuration .....	74
5.1.8 UART Interrupt Type .....	75
5.2 Function Call.....	75

5.2.1 nrc_uart_set_config.....	75
5.2.2 nrc_hw_set_channel.....	75
5.2.3 nrc_uart_get_interrupt_type.....	76
5.2.4 nrc_uart_set_interrupt.....	76
5.2.5 nrc_uart_clear_interrupt.....	76
5.2.6 nrc_uart_put.....	77
5.2.7 nrc_uart_get.....	77
5.2.8 nrc_uart_register_interrupt_handler.....	78
5.2.9 nrc_uart_console_enable.....	78
5.3 Callback Functions & Events.....	79
<b>6 GPIO.....</b>	<b>80</b>
6.1 Data Type.....	80
6.1.1 GPIO Pin.....	80
6.1.2 GPIO Direction.....	80
6.1.3 GPIO Mode.....	80
6.1.4 GPIO Level.....	80
6.1.5 GPIO Alternative Function.....	81
6.1.6 GPIO Configurations.....	81
6.1.7 GPIO Interrupt Trigger Mode.....	81
6.1.8 GPIO Interrupt Trigger Level.....	81
6.2 Function Call.....	82
6.2.1 nrc_gpio_config.....	82
6.2.2 nrc_gpio_output.....	82
6.2.3 nrc_gpio_outputb.....	82
6.2.4 nrc_gpio_input.....	83
6.2.5 nrc_gpio_inputb.....	83
6.2.6 nrc_gpio_trigger_config.....	84
6.2.7 nrc_gpio_register_interrupt_handler.....	84
6.3 Callback Functions & Events.....	85
<b>7 I2C.....</b>	<b>86</b>
7.1 Data Type.....	86
7.1.1 I2C_CONTROLLER_ID.....	86
7.1.2 I2C_WIDTH.....	86
7.1.3 I2C_CLOCK_SOURCE.....	86
7.1.4 i2c_device_t.....	87
7.2 Function Call.....	87
7.2.1 nrc_i2c_init.....	87
7.2.2 nrc_i2c_enable.....	87

7.2.3 nrc_i2c_reset.....	88
7.2.4 nrc_i2c_start .....	88
7.2.5 nrc_i2c_stop.....	89
7.2.6 nrc_i2c_writebyte .....	89
7.2.7 nrc_i2c_readbyte .....	89
<b>8 ADC.....</b>	<b>91</b>
8.1 Data Type .....	91
8.1.1 ADC Channel.....	91
8.2 Function Call.....	91
8.2.1 nrc_adc_init .....	91
8.2.2 nrc_adc_deinit .....	91
8.2.3 nrc_adc_get_data .....	92
<b>9 PWM.....</b>	<b>93</b>
9.1 Data Type .....	93
9.1.1 PWM Channel .....	93
9.2 Function Call.....	93
9.2.1 nrc_pwm_hw_init .....	93
9.2.2 nrc_pwm_set_config .....	94
9.2.3 nrc_pwm_set_enable .....	95
<b>10 SPI.....</b>	<b>96</b>
10.1 Data Type .....	96
10.1.1 SPI Mode .....	96
10.1.2 SPI Frame Bits.....	96
10.1.3 SPI Controller ID .....	97
10.1.4 spi_device_t .....	97
10.2 Function Call.....	98
10.2.1 nrc_spi_master_init .....	98
10.2.2 nrc_spi_init_cs .....	98
10.2.3 nrc_spi_enable.....	98
10.2.4 nrc_spi_start_xfer .....	99
10.2.5 nrc_spi_stop_xfer .....	99
10.2.6 nrc_spi_xfer.....	100
10.2.7 nrc_spi_writebyte_value .....	100
10.2.8 nrc_spi_readbyte_value .....	101
10.2.9 nrc_spi_write_values .....	101
10.2.10 nrc_spi_read_values .....	102
<b>11 HTTP Client.....</b>	<b>103</b>



11.1 Data Type .....	103
11.1.1 HTTP Client Return Types .....	103
11.1.2 Define values .....	103
11.1.3 HTTP Client Connection Handle .....	104
11.1.4 SSL Certificate Structure .....	104
11.1.5 HTTP Client Data Type .....	104
11.2 Function Call .....	104
11.2.1 nrc_httpc_get .....	104
11.2.2 nrc_httpc_post .....	105
11.2.3 nrc_httpc_put .....	106
11.2.4 nrc_httpc_delete .....	106
11.2.5 nrc_httpc_delete .....	107
11.2.6 nrc_httpc_rcv_response .....	108
11.2.7 nrc_httpc_close .....	108
<b>12 FOTA .....</b>	<b>109</b>
12.1 Data Type .....	109
12.1.1 FOTA Information .....	109
12.1.2 Broadcast FOTA mode .....	109
12.2 Function Call .....	110
12.2.1 nrc_fota_is_support .....	110
12.2.2 nrc_fota_write .....	110
12.2.3 nrc_fota_erase .....	110
12.2.4 nrc_fota_set_info .....	111
12.2.5 nrc_fota_update_done .....	111
12.2.6 nrc_fota_update_done_bootloader .....	111
12.2.7 nrc_fota_cal_crc .....	112
12.2.8 nrc_bcast_fota_init .....	113
12.2.9 nrc_bcast_fota_set_mode .....	113
12.2.10 nrc_bcast_fota_enable .....	113
<b>13 Power save .....</b>	<b>115</b>
13.1 Data Type .....	115
13.1.1 Power Save Wakeup Source .....	115
13.1.2 Power Save Wakeup Reason .....	115
13.2 Function Call .....	115
13.2.1 nrc_ps_deep_sleep .....	115
13.2.2 nrc_ps_sleep_alone .....	116
13.2.3 nrc_ps_wifi_tim_deep_sleep .....	116
13.2.4 nrc_ps_set_gpio_wakeup_pin .....	117

13.2.5 nrc_ps_set_wakeup_source .....	117
13.2.6 nrc_ps_wakeup_reason .....	118
13.2.7 nrc_ps_set_gpio_direction .....	118
13.2.8 nrc_ps_set_gpio_out .....	118
13.2.9 nrc_ps_set_gpio_pullup.....	119
13.2.10 nrc_ps_add_schedule .....	119
13.2.11 nrc_ps_add_gpio_callback.....	120
13.2.12 nrc_ps_start_schedule.....	120
13.2.13 nrc_ps_resume_deep_sleep.....	120
<b>14 PBC (Push Button) .....</b>	<b>122</b>
14.1 Data Type .....	122
14.1.1 pbc_ops .....	122
14.2 Function Call.....	122
14.2.1 wps_pbc_fail_cb .....	122
14.2.2 wps_pbc_timeout_cb .....	123
14.2.3 wps_pbc_success_cb .....	123
14.2.4 wps_pbc_button_pressed_event .....	124
14.2.5 init_wps_pbc.....	124
<b>15 Middleware API Reference.....</b>	<b>125</b>
15.1 FreeRTOS.....	125
15.2 WPA_suppllicant.....	125
15.3 lwIP.....	125
15.4 MbedTLS.....	126
15.5 NVS library.....	126
<b>16 Abbreviations.....</b>	<b>127</b>
<b>17 Revision history.....</b>	<b>128</b>

# List of Tables

Table 2.1	Error Type.....	15
Table 3.1	tWIFI_STATUS .....	16
Table 3.2	tWIFI_DEVICE_MODE.....	16
Table 3.3	tWIFI_STATE_ID .....	17
Table 3.4	tWIFI_COUNTRY_CODE.....	17
Table 3.5	tWIFI_SECURITY .....	18
Table 3.6	tWIFI_BANDWIDTH.....	18
Table 3.7	tWIFI_IP_MODE .....	18
Table 3.8	tNET_ADDR_STATUS.....	19
Table 3.9	tWIFI_SCAN .....	19
Table 3.10	SCAN_RESULT.....	19
Table 3.11	Security Flags.....	20
Table 3.12	SCAN_RESULTS.....	20
Table 3.13	AP_INFO .....	20
Table 3.14	tWIFI_STA_STATE.....	20
Table 3.15	STA_INFO.....	21
Table 3.16	STA_LIST .....	21
Table 3.17	Tx Power Type .....	21
Table 3.18	Guard Interval(GI) Type.....	22
Table 3.19	Version Type.....	22
Table 3.20	tWIFI_IGNORE_BROADCAST_SSID .....	22
Table 3.21	tWIFI_EVENT_ID.....	65
Table 5.1	NRC_UART_CHANNEL .....	73
Table 5.2	NRC_UART_DATA_BIT.....	73
Table 5.3	NRC_UART_STOP_BIT .....	73
Table 5.4	NRC_UART_PARITY_BIT .....	74
Table 5.5	NRC_UART_HW_FLOW_CTRL .....	74
Table 5.6	NRC_UART_FIFO .....	74
Table 5.7	NRC_UART_CONFIG .....	74
Table 5.8	NRC_UART_INT_TYPE .....	75
Table 6.1	NRC_GPIO_PIN .....	80
Table 6.2	NRC_GPIO_DIR.....	80
Table 6.3	NRC_GPIO_MODE .....	80
Table 6.4	NRC_GPIO_LEVEL .....	81
Table 6.5	NRC_GPIO_ALT.....	81
Table 6.6	NRC_GPIO_CONFIG.....	81
Table 6.7	nrc_gpio_trigger_t .....	81
Table 6.8	nrc_gpio_trigger_t .....	82
Table 7.1	I2C_CONTROLLER_ID .....	86

Table 7.2	I2C_WIDTH .....	86
Table 7.3	I2C_CLOCK_SOURCE .....	86
Table 7.4	i2c_device_t .....	87
Table 8.1	ADC_CH .....	91
Table 9.1	PWM_CH .....	93
Table 10.1	SPI_MODE .....	96
Table 10.2	SPI_FRAME_BITS .....	96
Table 10.3	SPI_CONTROLLER_ID .....	97
Table 10.4	spi_device_t .....	97
Table 11.1	httpc_ret_e .....	103
Table 11.2	Default define values .....	103
Table 11.3	con_handle_t .....	104
Table 11.4	ssl_certs_t .....	104
Table 11.5	httpc_data_t .....	104
Table 12.1	FOTA_INFO .....	109
Table 12.2	Broadcast FOTA mode .....	109
Table 13.1	POWER_SAVE_WAKEUP_SOURCE .....	115
Table 13.2	POWER_SAVE_WAKEUP_REASON .....	115
Table 14.1	pbcs_ops .....	122
Table 16.1	Abbreviations and acronyms .....	127


# List of Figures

Figure 1.1	NRC7292 FreeRTOS Host Architecture .....	14
------------	--	----

# 1 Overview

This document introduces the Application Programming Interface (API) for standalone NRC7292 Software Development Kit (SDK). These APIs are used for Wi-Fi operations and events and other peripherals on the NRC7292 Evaluation Boards (EVB).

The user application is implemented using SDK API, 3<sup>rd</sup> party libraries and system hardware abstract layer (HAL) APIs. The lwIP is used for TCP/IP related codes. The mbedtls is related to encryption and decryption. The FreeRTOS is a real-time operating system kernel for embedded devices. It provides methods for multiple threads or tasks, mutexes, semaphores and software timers. Wi-Fi API is implemented based on wpa\_supplicant. It provides the general Wi-Fi operations such as scan, connect, set Wi-Fi configurations and get system status information such as RSSI, SNR.

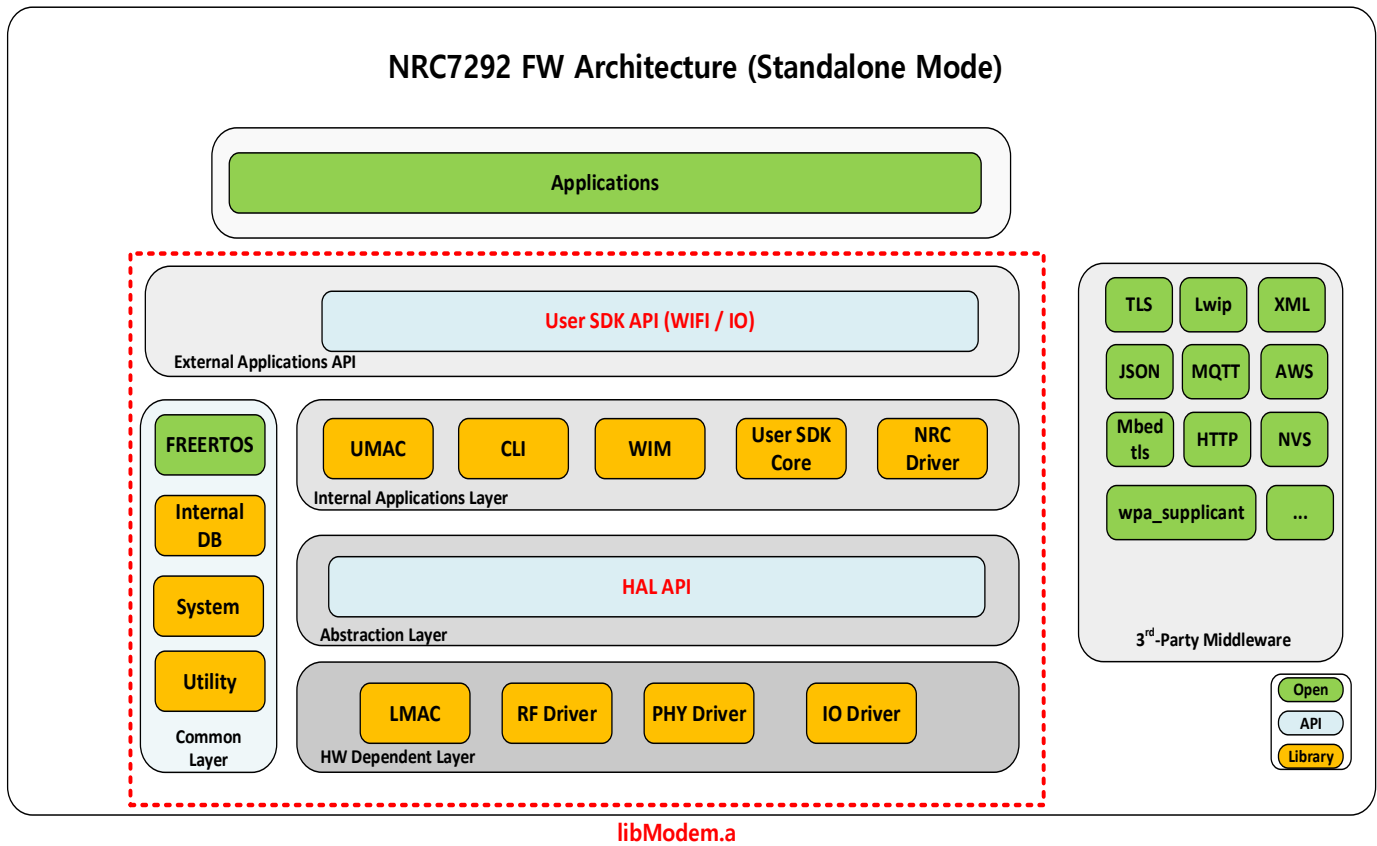

**Figure 1.1 NRC7292 FreeRTOS Host Architecture**

## 2 General

The general data types are defined at the “sdk/include/nrc\_types.h”.

### 2.1.1 Error Type

nrc\_err\_t is an operation function return type.

**Table 2.1 Error Type**

Name	Description
NRC_SUCCESS	Operation was successful
NRC_FAIL	Operation failed

## 3 Wi-Fi

The Wi-Fi API provides functions to:

- Scan & connect to AP
- Configuration the Wi-Fi settings
- Set and get the IP address

### 3.1 Data Type

These types are defined at the “sdk/include/nrc\_types.h”.

#### 3.1.1 API Status Return Value

tWIFI\_STATUS is returned by API functions to indicate whether a function call succeeded or failed.

**Table 3.1 tWIFI\_STATUS**

Name	Description
WIFI_SUCCESS	Operation successful
WIFI_NOMEM	No memory
WIFI_INVALID	Invalid parameter
WIFI_INVALID_STATE	Invalid Wi-Fi state
WIFI_TIMEOUT	Operation timeout
WIFI_TIMEOUT_DHCP	Get IP address is timeout
WIFI_FAIL	Operation failed
WIFI_FAIL_INIT	Wi-Fi initial is failed
WIFI_FAIL_CONNECT	Wi-Fi connection is failed
WIFI_FAIL_DHCP	Get DHCP client is failed
WIFI_FAIL_SET_IP	Set IP address is failed
WIFI_FAIL_SOFTAP	SoftAP start is failed
WIFI_FAIL_SOFTAP_NOSTA	No station is connected to softAP.

#### 3.1.2 Device Mode

tWIFI\_DEVICE\_MODE is the bandwidth.

**Table 3.2 tWIFI\_DEVICE\_MODE**

Name	Description
WIFI_MODE_STATION	Station
WIFI_MODE_AP	Access Point



### 3.1.3 Wi-Fi State

tWIFI\_STATE\_ID is the Wi-Fi state.

**Table 3.3 tWIFI\_STATE\_ID**

Name	Description
WIFI_STATE_UNKNOWN	Not initialized or unknown state
WIFI_STATE_INIT	Initial
WIFI_STATE_CONNECTED	Wi-Fi configuration is done
WIFI_STATE_DISCONNECTED	Disconnected
WIFI_STATE_TRY_CONNECT	Try to connect
WIFI_STATE_TRY_DISCONNECT	Try to disconnect
WIFI_STATE_SOFTAP_CONFIGURED	Set the SoftAP configuration
WIFI_STATE_SOFTAP_TRY_START	Try to start SoftAP
WIFI_STATE_SOFTAP_START	SoftAP is started
WIFI_STATE_DHCPS_START	DHCP server is started

### 3.1.4 Country Code

tWIFI\_COUNTRY\_CODE is the country code.

**Table 3.4 tWIFI\_COUNTRY\_CODE**

Name	Description
WIFI_CC_UNKNOWN	Unknown value
WIFI_CC_JP	Japan
WIFI_CC_TW	Taiwan
WIFI_CC_US	United States of America
WIFI_CC_EU	Europe
WIFI_CC_CN	China
WIFI_CC_NZ	New Zealand
WIFI_CC_AU	Australia
WIFI_CC_K0	Korea USN (921MH~923MH) – LBT
WIFI_CC_K1	Korea USN1 (921MH~923MH) – LBT (Non Standard)
WIFI_CC_K2	Korea USN5 (925MH~931MHz) – MIC detection

### 3.1.5 Security Mode

tWIFI\_SECURITY is the security mode. The NRC7292 supports the OPEN, WPA2, WPA3-SAE and WPA3-OWE security protocols in standalone

※ Please note that WPA3-SAE and WPA3-OWE are not supported in SoftAP mode.

**Table 3.5 tWIFI\_SECURITY**

Name	Description
WIFI_SEC_OPEN	Open
WIFI_SEC_WPA2	WPA2
WIFI_SEC_WPA3_OWE	WPA3 OWE
WIFI_SEC_WPA3_SAE	WPA3 SAE

※ If you intend to use WPA3 in the STA (Station), it will be necessary to modify the AP (Access Point) configurations to support WPA3 as well. Please refer the Appendix A. in 'UG-7292-004-Standalone.pdf'

(1) In order to enable WPA3-OWE (Opportunistic Wireless Encryption), please make the following modification in the 'wpa\_auth.c' file:

Change the value of 'eapol\_key\_timeout\_subseq' to 2000.

(2) NRC7292 does not support PWE (Password-Only Wakeup Enabled).

To utilize WPA3-SAE (Simultaneous Authentication of Equals) without PWE, remove the 'sae\_pwe=1' line from the host configuration file, such as 'hostapd.conf'.

### 3.1.6 Bandwidth

tWIFI\_BANDWIDTH is the bandwidth.

**Table 3.6 tWIFI\_BANDWIDTH**

Name	Description
WIFI_1M	1 MHz bandwidth
WIFI_2M	2 MHz bandwidth
WIFI_4M	4 MHz bandwidth

### 3.1.7 IP Mode

tWIFI\_IP\_MODE is the IP mode.

**Table 3.7 tWIFI\_IP\_MODE**

Name	Description
WIFI_STATIC_IP	Static IP
WIFI_DYNAMIC_IP	Dynamic IP, which uses the DHCP client

### 3.1.8 Address status

tNET\_ADDR\_STATUS is the IP address status.

**Table 3.8 tNET\_ADDR\_STATUS**

Name	Description
NET_ADDR_NOT_SET	IP address is not set
NET_ADDR_DHCP_STARTED	DHCP client is started
NET_ADDR_SET	IP address is set

### 3.1.9 Scan type

tWIFI\_SCAN is the scan type.

**Table 3.9 tWIFI\_SCAN**

Name	Description
WIFI_SCAN_NORMAL	Normal scan
WIFI_SCAN_PASSIVE	Passive scan
WIFI_SCAN_FAST	Fast normal scan (TBD)
WIFI_SCAN_FAST_PASSIVE	Fast passive scan (TBD)

### 3.1.10 SCAN\_RESULT

This is a union of data types for SCAN\_RESULT.

**Table 3.10 SCAN\_RESULT**

Type	Element	Description
		This is union values. Each array entry points members.
char*	items[5]	Items[0] : BSSID items[1] : Frequency items[2] : Signal level items[3] : Flags items[4] : SSID
char*	bssid	BSSID, which is fixed-length, colon-separated hexadecimal ASCII string. (Ex. "84:25:3f:01:5e:50")
char*	freq	Frequency. The frequency is equivalent Wi-Fi channel (2.4/5G frequency) (Ex. "5205"). See the " <a href="#">S1G Channel</a> "
char*	sig_level	Numeric ASCII string of RSSI. (Ex. "-25"). The unit is dBm
char*	flags	ASCII string of the security model for the network.
char*	ssid	ASCII string of SSID.
tWIFI_SECURITY	security	Security. See the " <a href="#">Security Mode</a> "

**Table 3.11 Security Flags**

Name	Description
WPA2-EAP	Wi-Fi Protected Access 2 – Extensible Authentication Protocol
WPA2-PSK	Wi-Fi Protected Access 2 – Pre-Shared Key
WPA3-SAE	Wi-Fi Protected Access 3 – Simultaneous Authentication of Equals
WPA3-OWE	Wi-Fi Protected Access 3 – Opportunistic Wireless Encryption

### 3.1.11 SCAN\_RESULTS

This is a structure for function `nrc_wifi_scan_results()`.

**Table 3.12 SCAN\_RESULTS**

Type	Element	Description
int	n_result	number of scanned BSSID
SCAN_RESULT	result[MAX_SCAN_RESULTS]	scan results

※'MAX\_SCAN\_RESULTS' is a maximum scan results and 30.

### 3.1.12 AP\_INFO

AP information

**Table 3.13 AP\_INFO**

Type	Element	Description
uint8_t	bssid[6]	BSSID
uint8_t	ssid[32]	ASCII string of SSID.
uint8_t	ssid_len	ssid length
uint8_t	cc[2]	ASCII string of the country code
uint16_t	ch	Channel index
uint16_t	freq	Frequency. The frequency is equivalent Wi-Fi channel (2.4/5G frequency) (Ex. "5205"). See the " <a href="#">S1G Channel</a> "
tWIFI_BANDWIDTH	bw	Bandwidth. See the " <a href="#">Bandwidth</a> "
tWIFI_SECURITY	Security	Security. See the " <a href="#">Security Mode</a> "

### 3.1.13 STA State

tWIFI\_STA\_STATE is the STA state which is connected to AP.

**Table 3.14tWIFI\_STA\_STATE**

Name	Description
WIFI_STA_INVALID	STA is not existed in AP information
WIFI_STA_AUTH	STA is authenticated
WIFI_STA_ASSOC	STA is associated

### 3.1.14 STA\_INFO

Station's information which is connected to AP.

**Table 3.15 STA\_INFO**

Type	Element	Description
tWIFI_STA_STATE	state	The state of station. See the <a href="#">“STA state”</a>
int8_t	rssi	Received Signal Strength Indicator value (dBm)
uint8_t	snr	Signal-to-noise ratio
uint16_t	aid	Association ID
uint8_t	addr[6]	MAC address

### 3.1.15 STA\_LIST

Station lists which are connected to AP

**Table 3.16 STA\_LIST**

Type	Element	Description
uint16_t	total_num	Total number of stations
STA_INFO	sta[MAX_STA_CONN_NUM]	The array of station information

### 3.1.16 Tx Power Type

The Tx power type can be configured for the Wi-Fi radio.

**Table 3.17 Tx Power Type**

Name	Description
WIFI_TXPOWER_AUTO	Automatically adjust its Tx power based on the current network conditions. It use the board data.
WIFI_TXPOWER_LIMIT	Automatically adjust its Tx power based on the current network conditions and Max Tx power is limited. It use the board data.
WIFI_TXPOWER_FIXED	The device will use a fixed Tx power level

### 3.1.17 Guard Interval(GI) Type

The guard interval(GI) type can be configured for the Wi-Fi radio.

**Table 3.18 Guard Interval(GI) Type**

Name	Description
WIFI_GI_UNKNOWN	Unknown value
WIFI_GI_LONG	Use the long guard interval(GI)
WIFI_GI_SHORT	Use the short guard interval(GI)

### 3.1.18 Version Type

The version type which includes major, minor and patch.

**Table 3.19 Version Type**

Type	Element	Description
uint8_t	major	major version
uint8_t	minor	minor version
uint8_t	patch	patch version

### 3.1.19 Ignore Broadcast SSID

tWIFI\_IGNORE\_BROADCAST\_SSID is the ignore broadcast types.

**Table 3.20tWIFI\_IGNORE\_BROADCAST\_SSID**

Name	Description
WIFI_IGNORE_BROADCAST_SSID_FULL	Probe requests for broadcast SSID are not ignored. It sends the SSID in beacons.
WIFI_IGNORE_BROADCAST_SSID_EMPTY	An empty (length=0) SSID is sent in beacons, and probe requests for broadcast SSID are ignored.
WIFI_IGNORE_BROADCAST_SSID_CLEAR	The SSID is cleared (ASCII 0), but its original length is retained. This may be necessary for clients that do not support an empty SSID. Probe requests for broadcast SSID are ignored.

## 3.2 Function Call

These APIs are defined at the “sdk/api/api\_wifi.h”.

### 3.2.1 nrc\_wifi\_get\_device\_mode

This function retrieves the device mode of the specified network index.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_get_device_mode(int vif_id, tWIFI_DEVICE_MODE *mode)
```

**Input Parameters :**

vif\_id

Type: int  
Purpose: Network index.

mode

Type: tWIFI\_DEVICE\_MODE \*  
Purpose: Device mode(STA or AP). See “[Device Mode](#)”.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.  
Error code (tWIFI\_STATUS): In case of any other errors.

### 3.2.2 nrc\_wifi\_get\_mac\_address

This function retrieves the MAC address of the specified network index.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_get_mac_address(int vif_id, char *addr)
```

**Input Parameters :**

vif\_id

Type: int  
Purpose: Network index.

addr

Type: char\*  
Purpose: A pointer to get MAC address which is colon-separated hexadecimal ASCII string. (Ex. “84:25:32:11:5e:50”).

**Returns :**

WIFI\_SUCCESS, if the operation was successful.  
Error code (tWIFI\_STATUS): In case of any other errors.

### 3.2.3 nrc\_wifi\_get\_tx\_power

This function retrieves the transmit (TX) power in decibel-milliwatts (dBm), which is valid once the connection is established.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_get_tx_power(int vif_id, uint8_t *txpower)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

txpower

Type: int\*

Purpose: A pointer to store the TX power value in dBm.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS): In case of any other errors.

### 3.2.4 nrc\_wifi\_set\_tx\_power

This function sets the transmit (TX) power and its type.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_set_tx_power(uint8_t txpower, uint8_t type)
```

**Input Parameters :**

txpower

Type: int

Purpose: TX Power (in dBm) (1~30)

type

Type: uint8\_t

Purpose: Auto(0): The device will automatically adjust its Tx power based on the current network conditions and signal strength.

Limit(1): The device will use a specified maximum Tx power limit.

Fixed(2): The device will use a fixed Tx power level.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS): In case of any other errors.

※ The AUTO (0) and LIMIT (1) options operate auto TX gain adjustment using board data file.

### 3.2.5 nrc\_wifi\_get\_rssi

This function retrieves the received signal strength indicator (RSSI) value for STA.



**Prototype :**

```
tWIFI_STATUS nrc_wifi_get_rssi (int vif_id, int8_t *rssi)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

rssi

Type: int8\_t\*

Purpose: A pointer to store the RSSI value in decibels (dB).

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS): In case of any other errors.

### 3.2.6 nrc\_wifi\_get\_average\_rssi

This function retrieves the average received signal strength indicator (RSSI) value with 4 packets for STA.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_get_average_rssi (int vif_id, int8_t *rssi)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

rssi

Type: int8\_t\*

Purpose: A pointer to store the RSSI value in decibels (dB).

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS): In case of any other errors.

### 3.2.7 nrc\_wifi\_get\_snr

This function retrieves the signal-to-noise ratio (SNR) value for STA.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_get_snr(int vif_id, uint8_t *snr)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

snr

Type: uint8\_t\*

Purpose: A pointer to store the SNR value in decibels (dB).

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS): In case of any other errors.

### 3.2.8 nrc\_wifi\_get\_rate\_control

This function retrieves the status of the MCS (Modulation and Coding Scheme) rate control option.

**Prototype :**

```
bool nrc_wifi_get_rate_control(int vif_id)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

**Returns :**

Status : 1(enable) or 0(disable)

### 3.2.9 nrc\_wifi\_set\_rate\_control

This function sets the MCS (Modulation and Coding Scheme) rate control option.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_set_rate_control(int vif_id, bool enable)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

enable

Type: bool

Purpose: Specifies whether to enable or disable the rate control.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS): In case of any other errors.

### 3.2.10 nrc\_wifi\_get\_mcs\_info

This function retrieve the Modulation and Coding Scheme(MCS) information both TX and RX.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_get_mcs_info(int vif_id, uint8_t *tx_mcs, uint8_t *rx_mcs)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

listen\_interval

Type: uint8\_t\*

tx\_mcs

Pointer to store the MCS for transmission(TX).

Purpose: Rate control(RC) OFF : manually configured MCS for transmission (TX)

Rate control(RC) ON : the latest MCS set by Rate Control(RC) for transmission and updated by tx data frames

interval\_ms

Type: uint8\_t\*

rx\_mcs

Purpose: Pointer to store the MCS for reception(RX).

the latest MCS for reception(RX) and updated by rx data frames

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

An error code of type tWIFI\_STATUS for any other errors.

### 3.2.11 nrc\_wifi\_get\_mcs

This function gets the Modulation Coding Scheme (MCS) value for TX

**Prototype :**

```
tWIFI_STATUS nrc_wifi_get_mcs (int vif_id, uint8_t *mcs)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

mcs

Type: uint8\_t

Purpose: A pointer to store the MCS (0 ~ 7, 10)

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS): In case of any other errors.

### 3.2.12 nrc\_wifi\_set\_mcs

This function sets the Modulation Coding Scheme (MCS) value. It is applied when the rate control is disabled.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_set_mcs(uint8_t mcs)
```

**Input Parameters :**

mcs

Type: uint8\_t

Purpose: The Modulation Coding Scheme value (0 ~ 7, 10)

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS): In case of any other errors.

### 3.2.13 nrc\_wifi\_get\_cca\_threshold

This function gets the Clear Channel Assessment (CCA) threshold.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_set_cca_threshold(int vif_id, int* cca_threshold)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

cca\_threshold

Type: int\*

Purpose: CCA threshold in dBm (decibel-milliwatts).

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS): In case of any other errors.

### 3.2.14 nrc\_wifi\_set\_cca\_threshold

This function sets the Clear Channel Assessment (CCA) threshold for a specific network.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_set_cca_threshold(int vif_id, int cca_threshold)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

cca\_threshold

Type: int

Purpose: CCA threshold in dBm (decibel-milliwatts) (-100 to -35).

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS): In case of any other errors.

### 3.2.15 nrc\_wifi\_set\_tx\_time

This function configures the carrier sense time and pause time for packet transmission. It performs channel sensing before transmitting packets, waiting for the carrier sense time. If the channel is busy, it backs off; if it's idle, it transmits packets for the specified resume time (which may be shorter). After transmission, a pause time is observed before the module can sense the channel again for subsequent transmissions.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_set_tx_time(uint16_t cs_time, uint32_t pause_time)
```

**Input Parameters :**

cs\_time

Type: uint16\_t

Purpose: Carrier sensing time for "Listen before Talk(LBT)" in microseconds (0 to 12480).

pause\_time

Type: uint32\_t

Purpose: Pause time between transmissions in microseconds.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS): In case of any other errors.

### 3.2.16 nrc\_wifi\_enable\_duty\_cycle

This function enables the duty cycle feature, which allows for controlling the transmission duration within a specified window.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_enable_duty_cycle(uint32_t window, uint32_t duration, uint32_t margin)
```

**Input Parameters :**

window

Type: uint32\_t

Purpose: Specifies the duty cycle window in microseconds

duration

Type: uint32\_t

Purpose: Specifies the allowed transmission duration within the duty cycle window in microseconds.

cs\_time

Type: uint32\_t

Purpose: Specifies the duty margin in microseconds.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS): In case of any other errors.

### 3.2.17 nrc\_wifi\_disable\_duty\_cycle

This function disables the duty cycle feature, allowing unrestricted transmission without any limitations.

**Prototype :**

tWIFI\_STATUS nrc\_wifi\_disable\_duty\_cycle(void)

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS): In case of any other errors.

### 3.2.18 nrc\_wifi\_tx\_available\_duty\_cycle

This function checks whether the transmission is currently available within the duty cycle window.

**Prototype :**

bool nrc\_wifi\_tx\_available\_duty\_cycle(void)

**Returns :**

True (1) / False (0)

### 3.2.19 nrc\_wifi\_get\_state

This function retrieves the current Wi-Fi connection state for a specific network index.

**Prototype :**

tWIFI\_STATE\_ID nrc\_wifi\_get\_state(int vif\_id)

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

**Returns :**

Current Wi-Fi state, if the operation was successful.  
WIFI\_STATE\_UNKNOWN, if error. See "[Wifi STATE](#)".

**3.2.20 nrc\_wifi\_add\_network**

This function adds a network index associated with the Wi-Fi connection.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_add_network(int *vif_id)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.  
Error code (tWIFI\_STATUS): In case of any other errors.

※ After calling this function, the assigned network index will be stored in the vif\_id variable. You can use this network index for further Wi-Fi configuration or operations.

**3.2.21 nrc\_wifi\_remove\_network**

This function removes a network index associated with the Wi-Fi connection.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_remove_network(int vif_id)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.  
Error code (tWIFI\_STATUS): In case of any other errors.

※ By specifying the network index (vif\_id) to this function, you can remove the associated network from the Wi-Fi connection. After removing the network, it will no longer be available for Wi-Fi operations.

### 3.2.22 nrc\_wifi\_country\_from\_string

This function retrieves the country code index based on the input string representation of the country code.

**Prototype :**

```
tWIFI_COUNTRY_CODE nrc_wifi_country_from_string(const char *str_cc)
```

**Input Parameters :**

str\_cc

Type: const char\*

Purpose: A pointer to a null-terminated string that represents the country code. Valid country code strings. See “Country Code”.

**Returns :**

tWIFI\_COUNTRY\_CODE. See “[Country Code](#)”.

### 3.2.23 nrc\_wifi\_country\_to\_string

This function retrieves a string representation of the country code based on the provided country code index.

**Prototype :**

```
const char *nrc_wifi_country_to_string(int vif_id, tWIFI_COUNTRY_CODE cc)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

cc

Type: tWIFI\_COUNTRY\_CODE

Purpose: The country code index (tWIFI\_COUNTRY\_CODE). See “[Country Code](#)”

**Returns :**

If successful, NULL terminated country code.

NULL if cc provided is not supported.

### 3.2.24 nrc\_wifi\_get\_country

This function retrieves the current country code used for Wi-Fi operation. The country code represents the regulatory domain.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_get_country(tWIFI_COUNTRY_CODE *cc)
```

**Input Parameters :**

cc



Type: char\*

Purpose: A pointer to a variable of type tWIFI\_COUNTRY\_CODE where the country code will be populated. See "Country Code" for the available country code options. See "[Country Code](#)".

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

An error code of type tWIFI\_STATUS for any other errors.

### 3.2.25 nrc\_wifi\_set\_country

This function sets the country code for the specified network index, allowing the Wi-Fi operation to comply with the regulations of the specified regulatory domain.

**Prototype :**

tWIFI\_STATUS nrc\_wifi\_set\_set\_country (int vif\_id, tWIFI\_COUNTRY\_CODE cc)

**Input Parameters :**

vif\_id

Type: Int

Purpose: Network index.

cc

Type: tWIFI\_COUNTRY\_CODE

Purpose: The country code to set. See "[Country Code](#)".

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

An error code of type tWIFI\_STATUS for any other errors.

### 3.2.26 nrc\_wifi\_get\_channel\_bandwidth

This function retrieves the channel bandwidth for the specified network index.

**Prototype :**

tWIFI\_STATUS nrc\_wifi\_get\_channel\_bandwidth(int vif\_id, uint8\_t \*bandwidth)

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

bandwidth

Type: uint8\_t \*

Purpose: A pointer to a variable of type uint8\_t to store the channel bandwidth. The possible values are 0 (1M BW), 1 (2M BW), or 2 (4M BW).

**Returns :**

WIFI\_SUCCESS, if the operation was successful.  
An error code of type tWIFI\_STATUS for any other errors.

**3.2.27 nrc\_wifi\_get\_channel\_freq**

This function retrieves the frequency for Sub-1GHz channels for the specified network index.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_get_channel_freq(int vif_id, uint16_t *s1g_freq)
```

**Input Parameters :**

vif\_id

Type: Int

Purpose: Network index.

s1g\_freq

Type: uint16\_t \*

Purpose: A pointer to a variable of type uint16\_t to store the S1G channel frequency in MHz/10.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.  
An error code of type tWIFI\_STATUS for any other errors.

**3.2.28 nrc\_wifi\_set\_channel\_freq**

This function sets the frequency for Sub-1GHz channels for the specified network index.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_set_channel_freq(int vif_id, uint16_t s1g_freq)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

s1g\_freq

Type: uint16\_t

Purpose: The desired S1G channel frequency in MHz/10.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.  
An error code of type tWIFI\_STATUS for any other errors.

### 3.2.29 nrc\_wifi\_set\_channel\_freq\_bw

The function allows to set the S1G channel frequency and bandwidth for a specific network interface.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_set_channel_freq_bw(int vif_id, uint16_t s1g_freq, uint8_t bw)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

s1g\_freq

Type: uint16\_t

Purpose: The desired S1G channel frequency in MHz/10.

bw

Type: uint8

Purpose: The bandwidth (1, 2, or 4 MHz).

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

An error code of type tWIFI\_STATUS for any other errors.

### 3.2.30 nrc\_wifi\_set\_ssid

Set the SSID of the access point (AP) to connect to in STA mode.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_set_ssid(int vif_id, char * ssid)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

ssid

Type: char\*

Purpose: A pointer to the SSID string (ASCII). The maximum length of the name is 32 bytes.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.31 nrc\_wifi\_get\_bssid

This function is used to get the BSSID (Basic Service Set Identifier) of the connected access point (AP).

**Prototype :**

```
tWIFI_STATUS nrc_wifi_get_bssid(int vif_id, char *bssid)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

bssid

Type: char\*

Purpose: A pointer to get bssid which is colon-separated hexadecimal ASCII string. (Ex. "84:25:3f:01:5e:50"). The maximum length of the name is 17 bytes.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.32 nrc\_wifi\_set\_bssid

This function is used to set the BSSID (Basic Service Set Identifier) of the access point (AP) to connect to. This function is applicable for station (STA) mode only.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_set_bssid(int vif_id, char * bssid)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

bssid

Type: char\*

Purpose: A pointer to set bssid which is colon-separated hexadecimal ASCII string. (Ex. "84:25:3f:01:5e:50"). The maximum length of the name is 17 bytes

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

※ By using this function, you can set the BSSID of the specific AP you want to connect to. The BSSID is a unique identifier assigned to each AP in a Wi-Fi network. By setting the BSSID, you can specify the AP you wish to connect to when multiple APs are available with the same SSID.

### 3.2.33 nrc\_wifi\_set\_security

This function is used to set the security parameters for a Wi-Fi connection.

**Prototype :**

```
void nrc_wifi_set_security (int vif_id, int mode, char *password)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

mode

Type: int

Purpose: Security mode. Refer to "[Security Mode](#)" for available options.

password

Type: char\*

Purpose: A pointer to set password. (Ex. "123ABDC"). (upto 30 Bytes)

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

※ The NRC7292 device supports WPA3 security in STA mode only. Please refer the "[Security Mode](#)"

### 3.2.34 nrc\_wifi\_set\_pmk

This function is used to set the PMK (Pairwise Master Key) parameters for a Wi-Fi connection.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_set_pmk(int vif_id, char *pmk)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

pmk

Type: char\*

Purpose: A pointer to set Pairwise Master Key(PMK).

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

※ The PMK (Pairwise Master Key) is a pre-shared key used for authentication in WPA/WPA2 security modes. By setting the PMK, you specify the secret key for secure communication during Wi-Fi connections. Once successfully set, the PMK is used in the authentication process when establishing a Wi-Fi connection.

### 3.2.35 nrc\_wifi\_get\_scan\_freq

This function is used to retrieve the scan channel list for scanning access points (APs).

**Prototype :**

```
tWIFI_STATUS nrc_wifi_get_scan_freq(int vif_id, uint16_t * freq_list, uint8_t *num_freq)
```

**Input Parameters :**

vif\_id

Type: Int

Purpose: Network index.

freq\_list

Type: uint16\_t\*

Purpose: A pointer to the frequency list. The frequency should be assigned equivalent Wi-Fi channel(2.4 / 5G frequency) (Ex. "5205 5200). See the "[S1G Channel](#)"

num\_freq

Type: uint8\_t\*

Purpose: A pointer to save the number of frequencies.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.36 nrc\_wifi\_set\_scan\_freq

This function is used to set the scan channel list for scanning access points (APs).

**Prototype :**

```
tWIFI_STATUS nrc_wifi_set_scan_freq(int vif_id, uint16_t * freq_list, uint8_t num_freq)
```

**Input Parameters :**

vif\_id

Type: Int

Purpose: Network index.

freq\_list

Type: uint16\_t\*

Purpose: A pointer to the frequency list. The frequency should be assigned equivalent Wi-Fi channel(2.4 / 5G frequency) (Ex. "5205 5200). See the "[S1G Channel](#)"

num\_freq

Type: uint8\_t

Purpose: number of frequencies.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.37 nrc\_wifi\_get\_scan\_freq\_nons1g

This function is used to retrieve the scan channel list for scanning access points (APs). It specifically focuses on setting frequencies for non-1g channels.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_get_scan_freq_nons1g(int vif_id, uint16_t *freq_list, uint8_t *num_freq)
```

**Input Parameters :**

vif\_id

Type: Int

Purpose: Network index.

freq\_list

Type: uint16\_t\*

Purpose: A pointer to the frequency list. The frequency should be assigned equivalent Wi-Fi channel(2.4 / 5G frequency) (Ex. "5205 5200). See the "[S1G Channel](#)"

num\_freq

Type: uint8\_t\*

Purpose: A pointer to save the number of frequencies.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.38 nrc\_wifi\_set\_scan\_freq\_nons1g

This function serves the purpose of configuring the scan channel list for scanning access points (APs). It specifically focuses on setting frequencies for non-1g channels.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_set_scan_freq_nons1g(int vif_id, uint16_t *freq_list, uint8_t num_freq)
```

**Input Parameters :**

vif\_id

Type: Int

Purpose: Network index.

freq\_list

Type: uint16\_t\*

Purpose: A pointer to the frequency list. The frequency should be assigned equivalent Wi-Fi channel(2.4 / 5G frequency) (Ex. "5205 5200). See the "[S1G Channel](#)"

num\_freq

Type: uint8\_t

Purpose: number of frequencies.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.  
Error code (tWIFI\_STATUS) for any other errors.

### 3.2.39 nrc\_wifi\_get\_aid

This function is used to get the Association ID (AID) allocated by the access point (AP) for a specific network interface.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_get_aid(int vif_id, int *aid)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

aid

Type: int\*

Purpose: A pointer to get association ID, which is signed binary number.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.  
Error code (tWIFI\_STATUS) for any other errors.

✂ The Association ID (AID) is a unique identifier assigned by the AP to each associated station (STA) during the Wi-Fi connection establishment. This ID is used to differentiate and identify individual STAs within the network.

### 3.2.40 nrc\_wifi\_scan

This function is used to initiate a scan for available access points (APs) in the Wi-Fi network. This function allows the device to discover and collect information about available APs, such as their SSID, BSSID, signal strength, and security settings.

**Prototype :**

```
int nrc_wifi_scan (int vif_id)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.  
Error code (tWIFI\_STATUS) for any other errors.



※ After calling `nrc_wifi_scan`, the scanning process is initiated, and the device starts scanning the Wi-Fi channels for APs. The scan results can be obtained using `nrc_wifi_get_scan_result()`.

### 3.2.41 `nrc_wifi_scan_timeout`

This function is used to initiate a scan for available access points (APs) in the Wi-Fi network with a specified timeout duration.

**Prototype :**

```
int nrc_wifi_scan_timeout (int vif_id, uint32_t timeout, char *ssid)
```

**Input Parameters :**

`vif_id`

Type: int

Purpose: Network index.

`timeout`

Type: uint32\_t

Purpose: Blocking time in milliseconds. If set to zero, the caller will be blocked until the scan is completed.

`ssid`

Type: char\*

Purpose: SSID to scan for. If NULL, scan for all SSID's.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.42 `nrc_wifi_scan_ssid`

This function initiates a scan for available access points (APs) in the Wi-Fi network and reserves a scan result slot for the specified SSID. It allows the device to gather information about the available APs, ensuring that at least one scan result is dedicated to the provided SSID.

**Prototype :**

```
int nrc_wifi_scan_timeout (int vif_id, uint32_t timeout, char *ssid)
```

**Input Parameters :**

`vif_id`

Type: int

Purpose: Network index.

`ssid`

Type: char\*

Purpose: SSID to scan for. If NULL, scan for all SSID's.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.  
Error code (tWIFI\_STATUS) for any other errors.

**3.2.43 nrc\_wifi\_scan\_results**

This function is used to retrieve the scan results obtained from a previous Wi-Fi scan operation.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_scan_results(int vif_id, SCAN_RESULTS *results)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

results

Type: SCAN\_RESULTS\*

Purpose: A pointer to the SCAN\_RESULTS structure to store the scan listsscan lists. See [“SCAN\\_RESULTS”](#).

**Returns :**

WIFI\_SUCCESS, if the operation was successful.  
Error code (tWIFI\_STATUS) for any other errors.

**3.2.44 nrc\_wifi\_abort\_scan**

This function is used to stop the ongoing scan procedure.

**Prototype :**

```
int nrc_wifi_abort_scan (int vif_id)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.  
Error code (tWIFI\_STATUS) for any other errors.

### 3.2.45 nrc\_wifi\_connect

This function is used to connect to an access point (AP) with the specified network index. Before calling this function, make sure to set the necessary AP information such as SSID and security parameters using the appropriate functions mentioned earlier.

**Prototype :**

```
twifi_status_t nrc_wifi_connect_timeout (int vif_id, uint32_t timeout)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

timeout

Type: uint32\_t

Purpose: Blocking time in milliseconds. If set to zero, the caller will be blocked until the connection is established.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (twifi\_status\_t) for any other errors.

### 3.2.46 nrc\_wifi\_disconnect

The nrc\_wifi\_disconnect\_timeout function is used to disconnect from the access point (AP).

**Prototype :**

```
twifi_status_t nrc_wifi_disconnect_timeout (int vif_id, uint32_t timeout)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

timeout

Type: uint32\_t

Purpose: Blocking time in milliseconds.

If zero, the caller will be blocked until the disconnection is completed.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (twifi\_status\_t) for any other errors.

### 3.2.47 nrc\_wifi\_wps\_pbc

This function is used to initiate the WPS (Wi-Fi Protected Setup) Push Button Configuration method. This method allows for easy and secure Wi-Fi setup by pressing a physical or virtual push button on both the device and the access point.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_wps_pbc(int vif_id)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.48 nrc\_wifi\_softap\_set\_conf

The nrc\_wifi\_softap\_set\_conf function is used to set the configuration for SoftAP (Software Access Point).

**Prototype :**

```
tWIFI_STATUS nrc_wifi_softap_set_conf (int vif_id, char *ssid, uint16_t s1g_freq, uint8_t bw,  
tWIFI_SECURITY sec_mode, char *password)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: network index

ssid

Type: char \*

Purpose: SSID (Service Set Identifier) of the SoftAP.

s1g\_freq

Type: uint16\_t

Purpose: Sub-1GHz channel frequency for the SoftAP.

bw

Type: uint8\_t

Purpose: specify the bandwidth for a wireless connection (0(BW is selected Automatically), 1(WIFI\_1M), 2(WIFI\_2M), 4(WIFI\_4M))

sec\_mode

Type: tWIFI\_SECURITY

Purpose: Security mode for the SoftAP (tWIFI\_SECURITY)

password

Type: char \*

Purpose: Password for the SoftAP, used for authentication and encryption.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.49 nrc\_wifi\_softap\_set\_bss\_max\_idle

This function is used to set the BSS (Basic Service Set) MAX IDLE period and retry count for the SoftAP. This function is typically used when you want to add the BSS Max Idle Information Element (IE) to the SoftAP. This feature is useful for managing the association and disassociation of STAs based on their idle time. If a STA remains idle for a duration longer than the specified BSS Max Idle period, the SoftAP can automatically disassociate the STA. The retry count specifies the number of attempts the SoftAP should make to receive keep-alive packets from the idle STA before considering it disconnected.

**Prototype :**

tWIFI\_STATUS nrc\_wifi\_softap\_set\_bss\_max\_idle(int vif\_id, int period, int retry\_cnt)

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index

period

Type: int

Purpose: BSS Max Idle period. It specifies the maximum duration (in milliseconds) that a STA (Station) can be idle before being disassociated from the SoftAP. The valid range is from 0 to 2,147,483,647 milliseconds.

retry\_cnt

Type: int

Purpose: Retry count for receiving keep-alive packets from the STA. It specifies the number of retries that the SoftAP should attempt to receive a keep-alive packet from an idle STA before considering it as disconnected. The valid range is from 1 to 100.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.50 nrc\_wifi\_softap\_set\_ip

This function is used to set the IP address for the SoftAP.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_softap_set_ip(int vif_id, char *ipaddr, char *netmask, char *gateway)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

mode

Type: tWIFI\_IP\_MODE

Purpose: WIFI\_STATIC\_IP or WIFI\_DYNAMIC\_IP

ipaddr

Type: char \*

Purpose: A pointer to a string representing the IP address to be set. The IP address should be in the IPv4 format (e.g., "192.168.1.10").

netmask

Type: char \*

Purpose: netmask for static IP configuration

gateway

Type: char \*

Purpose: gateway for static IP configuration

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.51 nrc\_wifi\_softap\_start

This function is used to synchronously start the SoftAP. Blocks until SoftAP startup completes.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_softap_start(int vif_id)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: network index

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.52 nrc\_wifi\_softap\_start\_timeout

Start SoftAP asynchronously with timeout.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_softap_start_timeout(int vif_id, uint32_t timeout)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: network index

ip\_addr

Type: uint32\_t

Purpose: Blocking time in milliseconds. If set to zero, the caller will be blocked until the SoftAP is started.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.53 nrc\_wifi\_softap\_stop

This function is used to stop the SoftAP. When called, this function will stop the SoftAP and release any allocated resources.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_softap_stop(int vif_id)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: network index

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.54 nrc\_wifi\_softap\_disassociate

This function is used to disassociate stations from the SoftAP. It can disassociate all stations or a station specified by its MAC address.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_disassociate(int vif_id, char* mac_addr)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

mac\_addr

Type: char\*

Purpose: A pointer to set the MAC address. It can be set to the broadcast address (ff:ff:ff:ff:ff:ff) to disassociate all stations, or a specific station's MAC address as a colon-separated hexadecimal ASCII string.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.55 nrc\_wifi\_softap\_deauthenticate

This function is used to deauthenticate stations from the SoftAP. It can deauthenticate all stations or a station specified by its MAC address.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_softap_deauthenticate (int vif_id, char* mac_addr)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

mac\_addr

Type: char\*

Purpose: A pointer to set the MAC address. It can be set to the broadcast address (ff:ff:ff:ff:ff:ff) to deauthenticate all stations, or a specific station's MAC address as a colon-separated hexadecimal ASCII string.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.56 nrc\_wifi\_softap\_start\_dhcp\_server

This function is used to start the DHCP server for the SoftAP.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_softap_start_dhcp_server(int vif_id)
```



**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

**3.2.57 nrc\_wifi\_softap\_stop\_dhcp\_server**

This function is used to stop the DHCP server for the SoftAP.

**Prototype :**

tWIFI\_STATUS nrc\_wifi\_softap\_stop\_dhcp\_server(int vif\_id)

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

**3.2.58 nrc\_wifi\_softap\_get\_sta\_list**

This function is used to retrieve information about the connected STAs (Stations) in the SoftAP mode.

**Prototype :**

tWIFI\_STATUS nrc\_wifi\_softap\_get\_sta\_list(int vif\_id, STA\_LIST \*info)

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

info

Type STA\_LIST \*

Purpose: A pointer to get STA's information. See "[STA\\_LIST](#)" and "[STA\\_INFO](#)" structures for more details on the information provided.**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.59 nrc\_wifi\_softap\_get\_sta\_by\_addr

This function is used to retrieve information about a specific STA (Station) in the SoftAP mode using its MAC address.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_softap_get_sta_by_addr(int vif_id, uint8_t *addr, STA_INFO *sta)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

addr

Type uint8\_t \*

Purpose: A pointer to the MAC address of the STA

Type STA\_INFO\*

Purpose: A pointer to retrieve the STA's information. It should be of type STA\_INFO\*.  
See the "[STA\\_INFO](#)"

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.60 nrc\_wifi\_softap\_get\_sta\_num

This function is used to retrieve the number of STAs (Stations) currently associated with the SoftAP (Access Point).

**Prototype :**

```
tWIFI_STATUS nrc_wifi_softap_get_sta_num(int vif_id)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

**Returns :**

Number of STAs associated with the SoftAP.

### 3.2.61 nrc\_wifi\_register\_event\_handler

This function is used to register a Wi-Fi event handler callback function. The callback function will be called when a Wi-Fi event happens. See the "[Callback Functions & Events](#)"

**Prototype :**

```
tWIFI_STATUS nrc_wifi_register_event_handler(int vif_id, event_callback_fn fn)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

fn

Type: event\_callback\_fn

Purpose: event handler for Wi-Fi connection.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.62 nrc\_wifi\_unregister\_event\_handler

This function removes a Wi-Fi event handler callback function added by nrc\_wifi\_register\_event\_handler.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_unregister_event_handler(int vif_id, event_callback_fn fn)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

fn

Type: event\_callback\_fn

Purpose: event handler for Wi-Fi connection.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.63 nrc\_addr\_get\_state

This function is used to get the IP address setting state for a specific network interface.

**Prototype :**

```
tNET_ADDR_STATUS nrc_addr_get_state (int vif_id)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

**Returns :**

IP address setting state of type [tNET\\_ADDR\\_STATUS](#).

### 3.2.64 nrc\_wifi\_get\_ip\_mode

This function is used to get the IP mode for a specific network interface.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_get_ip_mode(int vif_id, tWIFI_IP_MODE* mode)
```

**Input Parameters :**

**vif\_id**  
Type: int  
Purpose: Network index.

**mode**  
Type: tWIFI\_IP\_MODE\*  
Purpose: A Pointer to [a tWIFI\\_IP\\_MODE](#) variable.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.  
Error code (tWIFI\_STATUS) for any other errors.

### 3.2.65 nrc\_wifi\_set\_ip\_mode

This function is used to set the IP mode and IP address for a specific network interface.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_set_ip_mode(int vif_id, tWIFI_IP_MODE mode, char* ip_addr)
```

**Input Parameters :**

**vif\_id**  
Type: int  
Purpose: Network index.

**mode**  
Type: tWIFI\_IP\_MODE  
Purpose: IP mode, either WIFI\_IP\_MODE\_STATIC or WIFI\_IP\_MODE\_DYNAMIC.

**ip\_addr**  
Type: char\*  
Purpose: A pointer to set static IP which is ASCII string. (Ex. "192.168.200.23")

**Returns :**

WIFI\_SUCCESS, if the operation was successful.  
Error code (tWIFI\_STATUS) for any other errors.

### 3.2.66 nrc\_wifi\_get\_ip\_address

This function is used to get the current IP address of a specific network interface.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_get_ip_address(int vif_id, char **ip_addr)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

ip\_addr

Type: char\*\*

Purpose: A double pointer to get the address of IP address.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.67 nrc\_wifi\_set\_ip\_address

This function is used to set the IP address configuration for a specific network interface. It allows you to either request a dynamic IP address via DHCP or set a static IP address.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_set_ip_address(int vif_id, tWIFI_IP_MODE mode, char *ipaddr, char *netmask, char *gateway)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

mode

Type: tWIFI\_IP\_MODE

Purpose: WIFI\_STATIC\_IP or WIFI\_DYNAMIC\_IP

ipaddr

Type: char \*

Purpose: IP address for static IP configuration

netmask

Type: char \*

Purpose: netmask for static IP configuration

gateway

Type: char \*

Purpose: gateway for static IP configuration

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.68 nrc\_wifi\_stop\_dhcp\_client

This function is used to stop the DHCP client for a specific network interface. This function is typically called to terminate the DHCP client and release the obtained IP address lease.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_stop_dhcp_client(int vif_id)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.69 nrc\_wifi\_set\_dns

This function is used to set the DNS (Domain Name System) server addresses.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_set_dns(char* pri_dns, char *sec_dns )
```

**Input Parameters :**

pri\_dns

Type: char\*

Purpose: Primary DNS server

sec\_dns

Type: char\*

Purpose: Secondary DNS server

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.70 nrc\_wifi\_add\_etharp

This function is used to add an entry to the Ethernet ARP (Address Resolution Protocol) table.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_add_etharp(int vif_id, const char* addr, char *mac_addr)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

addr

Type: const char\*

Purpose: The IP address you want to add to the ARP table

mac\_addr

Type char\*

Purpose: The MAC address corresponding to the IP address

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.71 nrc\_wifi\_send\_addba

Send ADDBA action frame

**Prototype :**

tWIFI\_STATUS nrc\_wifi\_send\_addba(int vif\_id, tWIFI\_TID tid, char \*mac\_addr)

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

tid

Type: tWIFI\_TID

Purpose: traffic identifier (WIFI\_TID\_BE, WIFI\_TID\_BK, WIFI\_TID\_VI, WIFI\_TID\_VO)

mac\_addr

Type char\*

Purpose: The MAC address

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.72 nrc\_wifi\_send\_delba

Send DELBA action frame

**Prototype :**

tWIFI\_STATUS nrc\_wifi\_send\_delba(int vif\_id, tWIFI\_TID tid, char \*mac\_addr)

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

tid

Type: tWIFI\_TID  
Purpose: traffic identifier (WIFI\_TID\_BE, WIFI\_TID\_BK, WIFI\_TID\_VI, WIFI\_TID\_VO)  
mac\_addr  
Type char\*  
Purpose: The MAC address

**Returns :**

WIFI\_SUCCESS, if the operation was successful.  
Error code (tWIFI\_STATUS) for any other errors.

### 3.2.73 nrc\_wifi\_set\_tx\_aggr\_auto

Enable automatic tx aggregation

**Prototype :**

tWIFI\_STATUS nrc\_wifi\_set\_tx\_aggr\_auto(int vif\_id, tWIFI\_TID tid, uint8\_t max\_agg\_num)

**Input Parameters :**

vif\_id  
Type: int  
Purpose: Network index.  
tid  
Type: tWIFI\_TID  
Purpose: traffic identifier (WIFI\_TID\_BE, WIFI\_TID\_BK, WIFI\_TID\_VI, WIFI\_TID\_VO)  
max\_agg\_num  
Type: uint8\_t  
Purpose: Max aggregation number

**Returns :**

WIFI\_SUCCESS, if the operation was successful.  
Error code (tWIFI\_STATUS) for any other errors.

### 3.2.74 nrc\_wifi\_set\_passive\_scan

This function is used to enable or disable passive scanning in the Wi-Fi module. Passive scanning is a type of Wi-Fi scanning where the Wi-Fi module listens for beacon frames transmitted by access points without actively transmitting probe requests. It allows the module to collect information about nearby access points without actively participating in the scanning process.

\* A passive scan generally takes more time, since the client must listen and wait for a beacon versus actively probing to find an AP.

\* For passive scan operation, AP should be disabled the short beacon in EVK start.py



short_bcn_enable    = 0                      # 0 (disable) or 1 (enable)
--

**Prototype :**

tWIFI\_STATUS nrc\_wifi\_set\_passive\_scan(bool passive\_scan\_on)

**Input Parameters :**

vif\_id

Type:        bool

Purpose:    passive\_scan\_on (1:enable, 0:disable)

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.75 nrc\_wifi\_get\_ap\_info

This function is used to retrieve information about stations information.

**Prototype :**

tWIFI\_STATUS nrc\_wifi\_get\_ap\_info(int vif\_id, AP\_INFO \*info)

**Input Parameters :**

vif\_id

Type:        int

Purpose:    Network index.

info

Type        STA\_LIST \*

Purpose:    A pointer to the AP\_INFO structure where the AP's information will be stored.

See "[AP\\_INFO](#)"

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.76 nrc\_wifi\_set\_rf\_power

This function is used to turn on or off the RF (Radio Frequency) power.

**Prototype :**

tWIFI\_STATUS nrc\_wifi\_set\_rf\_power(bool power\_on)

**Input Parameters :**

power\_on

Type: bool  
Purpose: turn on/off rf power.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.  
Error code (tWIFI\_STATUS) for any other errors.

### 3.2.77 nrc\_wifi\_set\_use\_4address

This function is used to set whether to use four-address support. Four-address support is used in Wi-Fi networks to enable communication between two clients connected to the same AP (Access Point) using Layer 2 bridging.

**Prototype :**

tWIFI\_STATUS nrc\_wifi\_set\_use\_4address(bool value)

**Input Parameters :**

value  
Type: bool  
Purpose: Enable / disable 4-address support.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.  
Error code (tWIFI\_STATUS) for any other errors.

### 3.2.78 nrc\_wifi\_get\_use\_4address

This function is used to get the current setting of whether four-address support is enabled or disabled. Four-address support is used in Wi-Fi networks to enable communication between two clients connected to the same AP (Access Point) using Layer 2 bridging.

**Prototype :**

bool nrc\_wifi\_get\_use\_4address(void)

**Input Parameters :**

void

**Returns :**

True, the 4-address is enabled  
False, the 4-address is disabled

### 3.2.79 nrc\_get\_hw\_version

This function retrieves the hardware version of the Wi-Fi module, which is stored in the flash memory. It allows you to access and retrieve the specific hardware version information of the Wi-Fi module directly from the flash memory.

**Prototype :**

```
uint16_t nrc_get_hw_version(void)
```

**Input Parameters :**

void

**Returns :**

hw\_version

### 3.2.80 nrc\_wifi\_get\_gi

This function gets the Guard Interval(GI) type.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_get_gi(tWIFI_GI* mcs)
```

**Input Parameters :**

mcs

Type: tWIFI\_GI\*

Purpose: A pointer to store the guard interval (0:Long GI, 1:Short GI)

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS): In case of any other errors.

### 3.2.81 nrc\_wifi\_set\_gi

This function sets the Guard Interval (GI) type for a wireless connection. It should be called before association. The default is a long guard interval.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_set_gi(tWIFI_GI mcs)
```

**Input Parameters :**

mcs

Type: tWIFI\_GI

Purpose: The guard interval type (0:Long GI, 1:Short GI)

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS): In case of any other errors.

### 3.2.82 nrc\_wifi\_set\_beacon\_loss\_detection

Sets the operation for beacon loss detection (only for STA). The default : beacon loss detection(1), beacon loss thresh(30) ( $30 * BI(100) * 1024us = \text{about } 3 \text{ sec}$ )

**Prototype :**

```
tWIFI_STATUS nrc_wifi_set_beacon_loss_detection(int vif_id, bool enable,  
                                                uint8_t beacon_loss_thresh)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

enable

Type: bool

Purpose: Specifies whether to enable (1) or disable (0) beacon loss detection.

beacon\_loss\_thresh

Type: uint8\_t

Purpose: disconnection threshold about beacon loss

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.83 nrc\_wifi\_softap\_get\_max\_num\_sta

This function get the maximum number of stations that can be connected to the SoftAP (Software Access Point).

**Prototype :**

```
tWIFI_STATUS nrc_wifi_softap_get_max_num_sta(int vif_id, uint8_t *max_sta_num)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

ssid

Type: uint8\_t \*

Purpose: max\_sta\_num

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.84 nrc\_wifi\_softap\_set\_max\_num\_sta

This function set the maximum number of stations that can be connected to the SoftAP (Software Access Point). The default value is 10.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_softap_set_max_num_sta(int vif_id, uint8_t max_sta_num)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

ssid

Type: uint8\_t \*

Purpose: max\_sta\_num

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

**3.2.85 nrc\_wifi\_set\_beacon\_loss\_detection**

This function configures the operation mode for beacon loss detection, applicable specifically to a Station (STA). By default, the beacon loss detection is enabled, with a beacon loss threshold set at 30.

(ex)  $30 * BI(100) * TU(1024us) = \text{about } 3 \text{ sec}$

**Prototype :**

```
tWIFI_STATUS nrc_wifi_set_beacon_loss_detection(int vif_id, bool enable,  
                                                uint8_t beacon_loss_thresh)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

enable

Type: bool

Purpose: Specifies whether to enable (1) or disable (0) beacon loss detection.

beacon\_loss\_thresh

Type: uint8\_t

Purpose: disconnection threshold about beacon loss

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

An error code of type tWIFI\_STATUS for any other errors.

**3.2.86 nrc\_wifi\_get\_listen\_interval**

This function gets the listen interval for a Station (STA), which determines the duration the station remains in a sleep state before it wakes up to receive buffered data from the connected Access Point (AP). It's important to note that the listen interval should be kept shorter than the BSS (Basic Service Set) maximum idle time.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_get_listen_interval(int vif_id, uint16_t *listen_interval,  
                                          uint32_t *interval_ms)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

listen\_interval

Type: uint16\_t

Purpose: listen interval

Listen Interval Time (us) = listen\_interval \* beacon\_interval \* 1TU (1024 us)

interval\_ms

Type: uint32\_t

Purpose: listen interval time (ms). It should be set after association.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

An error code of type tWIFI\_STATUS for any other errors.

### 3.2.87 nrc\_wifi\_set\_listen\_interval

This function sets the configuration of the listen interval for a Station (STA), determining the period the station stays in a sleep state before awakening to receive buffered data from the connected Access Point (AP). It's important to ensure that the set listen interval remains shorter than the BSS (Basic Service Set) maximum idle time.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_set_listen_interval(int vif_id, uint16_t listen_interval)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

listen\_interval

Type: uint16\_t

Purpose: listen interval

Listen Interval Time (us) = listen\_interval \* beacon\_interval \* 1TU (1024 us)

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

An error code of type tWIFI\_STATUS for any other errors.

### 3.2.88 nrc\_wifi\_softap\_get\_beacon\_interval

This function gets the beacon interval

**Prototype :**

```
tWIFI_STATUS nrc_wifi_softap_get_beacon_interval(int vif_id, uint16_t *beacon_interval)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

beacon\_interval

Type uint16\_t\*

Purpose: A pointer to store beacon interval(TU). (1TU=1024us) (range range 15..65535)

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.89 nrc\_wifi\_softap\_set\_beacon\_interval

This function sets the beacon interval

**Prototype :**

```
tWIFI_STATUS nrc_wifi_softap_set_beacon_interval(int vif_id, uint16_t beacon_interval)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

beacon\_interval

Type uint16\_t

Purpose: beacon interval(TU). (1TU=1024us) (range range 15..65535)

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.90 nrc\_wifi\_softap\_get\_ignore\_broadcast\_ssid

This function gets the ignore broadcast ssid types.

**Prototype :**

```
tWIFI_STATUS nrc_wifi_softap_get_ignore_broadcast_ssid(int vif_id, int *ignore_broadcast_ssid)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

ignore\_broadcast\_ssId

Type Int\*

Purpose: A pointer to store ignore\_broadcast\_ssId

0: Broadcast SSID as usual (default)

1: Send an empty (length=0) SSID in beacons and ignore probe requests for broadcast SSID.

2: Clear SSID (ASCII 0), but keep the original length. (this may be required with some clients that do not support empty SSID) and ignore probe requests for broadcast SSID

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.

### 3.2.91 nrc\_wifi\_softap\_set\_ignore\_broadcast\_ssId

This function sets the ignore broadcast ssid types.

**Prototype :**

tWIFI\_STATUS nrc\_wifi\_softap\_set\_ignore\_broadcast\_ssId(int vif\_id, int ignore\_broadcast\_ssId)

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

ignore\_broadcast\_ssId

Type Int

Purpose: ignore\_broadcast\_ssId

0: Broadcast SSID as usual (default)

1: Send an empty (length=0) SSID in beacons and ignore probe requests for broadcast SSID.

2: Clear SSID (ASCII 0), but keep the original length. (this may be required with some clients that do not support empty SSID) and ignore probe requests for broadcast SSID

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

Error code (tWIFI\_STATUS) for any other errors.



### 3.3 Callback Functions & Events

**Prototype :**

```
void (*event_callback_fn)(int vif_id, tWIFI_EVENT_ID event, int data_len, void *data)
```

**Input Parameters :**

vif\_id

Type: int

Purpose: Network index.

event

Type: tWIFI\_EVENT\_ID

Purpose: Wi-Fi Event

data\_len

Type: int

Purpose: Data length.

data

Type: void \*

Purpose: Data address

**Table 3.21 tWIFI\_EVENT\_ID**

Name	Data	Description
WIFI_EVT_SCAN	N/A	Scan is started
WIFI_EVT_SCAN_DONE	N/A	Scan is finished
WIFI_EVT_CONNECT_SUCCESS	MAC Address	Connection
WIFI_EVT_DISCONNECT	MAC Address	Disconnection
WIFI_EVT_AP_STARTED	N/A	SoftAP is started
WIFI_EVT_VENDOR_IE	VendorIE data	Vendor IE
WIFI_EVT_AP_STA_CONNECTED	MAC Address	STA is connected
WIFI_EVT_AP_STA_DISCONNECTED	MAC Address	STA is disconnected
WIFI_EVT_ASSOC_REJECT	MAC Address	Association is rejected

## 4 System

The system API provides functions to:

- Set and get the system configuration values
- Set the debug log level

### 4.1 Function Call

The header file for system APIs are defined at the “sdk/inc/api\_system.h”.

#### 4.1.1 nrc\_get\_rtc

Retrieve the real time clock value since cold boot

**Prototype :**

```
nrc_err_t nrc_get_rtc(uint64_t* rtc_time)
```

**Input Parameters :**

rtc\_time

Type: uint64\_t\*

Purpose: A pointer to get RTC time.

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

#### 4.1.2 nrc\_reset\_rtc

Reset the real time clock to 0

**Prototype :**

```
void nrc_reset_rtc(void)
```

**Input Parameters :**

None

**Returns :**

None

#### 4.1.3 nrc\_sw\_reset

Reset software

**Prototype :**

```
void nrc_sw_reset(void)
```

**Input Parameters :**

None

**Returns :**

None

#### 4.1.4 nrc\_get\_user\_factory

Get user factory data in flash memory

**Prototype :**

```
nrc_err_t nrc_get_user_factory(char* data, uint16_t buf_len)
```

**Input Parameters :**

data

Type: char\*

Purpose: A pointer to store user factory data

buf\_len

Type: uint16\_t

Purpose: buffer length (should be 512 Bytes)

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

#### 4.1.5 nrc\_led\_trx\_init

Initializes the Tx/Rx LED blinking feature

**Prototype :**

```
nrc_err_t nrc_get_user_factory(char* data, uint16_t buf_len)
```

**Input Parameters :**

tx\_gpio

Type: int

Purpose: The GPIO pin for the Tx LED

rx\_gpio

Type: int

Purpose: The GPIO pin for the Rx LED

timer\_period

Type: int

Purpose: The period for checking the status of the LED blinking

invert

Type: bool

Purpose: invert the LED blinking signal

**Returns :**

NRC\_SUCCESS, if the operation was successful.  
NRC\_FAIL, all other errors.

**4.1.6 nrc\_led\_trx\_deinit**

Deinitializes the Tx/Rx LED blinking feature

**Prototype :**

```
nrc_err_t nrc_led_trx_deinit(void)
```

**Input Parameters :**

None

**Returns :**

NRC\_SUCCESS, if the operation was successful.  
NRC\_FAIL, all other errors.

**4.1.7 nrc\_wdt\_enable**

Enable watchdog monitoring. The default is enabled

**Prototype :**

```
nrc_err_t nrc_wdt_enable(void)
```

**Input Parameters :**

None

**Returns :**

NRC\_SUCCESS, if the operation was successful.  
NRC\_FAIL, all other errors.

**4.1.8 nrc\_wdt\_disable**

Disable watchdog monitoring

**Prototype :**

```
nrc_err_t nrc_wdt_disable(void)
```

**Input Parameters :**

None

**Returns :**

NRC\_SUCCESS, if the operation was successful.  
NRC\_FAIL, all other errors.

#### 4.1.9 nrc\_set\_app\_version

Set application version, which is a mandatory to use broadcast FOTA

**Prototype :**

```
nrc_err_t nrc_set_app_version(VERSION_T* version)
```

**Input Parameters :**

version

Type: VERSION\_T\* (see [Version Type](#))

Purpose: A pointer of application version

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

#### 4.1.10 nrc\_get\_app\_version

Get application version, which is a mandatory to use broadcast FOTA

**Prototype :**

```
VERSION_T* nrc_get_app_version(void)
```

**Input Parameters :**

void

**Returns :**

VERSION\_T\* (see [Version Type](#))

#### 4.1.11 nrc\_set\_app\_name

Set application name, which is a mandatory to use broadcast FOTA

**Prototype :**

```
nrc_err_t nrc_set_app_name(char* appname)
```

**Input Parameters :**

appname

Type: char\*

Purpose: A pointer of application name (Max 32 bytes)

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

#### 4.1.12 nrc\_get\_app\_name

Get application name, which is a mandatory to use broadcast FOTA

**Prototype :**

```
char* nrc_get_app_name(void)
```

**Input Parameters :**

void

**Returns :**

char\*

#### 4.1.13 nrc\_get\_sdk\_version

Get SDK version

**Prototype :**

```
VERSION_T* nrc_get_sdk_version(void)
```

**Input Parameters :**

void

**Returns :**

VERSION\_T\* (see [Version Type](#))

#### 4.1.14 nrc\_set\_flash\_device\_info

This function is designed to facilitate the storage of device information data in the flash memory, with a dedicated space of 4KB allocated for this purpose.

**Prototype :**

```
nrc_err_t nrc_set_flash_device_info(uint8_t* data, uint16_t len)
```

**Input Parameters :**

data

Type: char\*

Purpose: A pointer to store user factory data

buf\_len

Type: uint16\_t

Purpose: buffer length (should be 4KB Bytes)

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

#### 4.1.15 nrc\_get\_flash\_device\_info

This function serves the purpose of getting data from the device information area within the flash memory. The allocated space for this area is 4KB.

**Prototype :**

```
nrc_err_t nrc_get_flash_device_info(uint8_t* data, uint16_t len)
```

**Input Parameters :**

data  
Type: char\*  
Purpose: A pointer to store user factory data

buf\_len  
Type: uint16\_t  
Purpose: buffer length (should be 4KB Bytes)

**Returns :**

NRC\_SUCCESS, if the operation was successful.  
NRC\_FAIL, all other errors.

#### 4.1.16 nrc\_get\_user\_data\_area\_size

This function gets the size of the user data area in flash memory.

**Prototype :**

```
uint32_t nrc_get_user_data_area_size(void)
```

**Input Parameters :**

None

**Returns :**

The size of the user data area in bytes.

#### 4.1.17 nrc\_write\_user\_data

This function writes user data to the user data area in flash memory.

**Prototype :**

```
nrc_err_t nrc_write_user_data(uint32_t user_data_offset, uint8_t* data, uint32_t size)
```

**Input Parameters :**

user\_data\_offset  
Type: uint32\_t  
Purpose: The offset from the user data area's base address. It should be aligned to a 4-

byte boundary.

data

Type: uint8\_t\*

Purpose: A pointer to the data to be written.

size

Type: uint32\_t

Purpose: The size of data to write.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

An error code of type tWIFI\_STATUS for any other errors.

#### 4.1.18 nrc\_read\_user\_data

This function read user data from the user data area in flash memory

**Prototype :**

nrc\_err\_t nrc\_read\_user\_data(uint8\_t\* buffer, uint32\_t user\_data\_offset, uint32\_t size)

**Input Parameters :**

buffer

Type: uint8\_t\*

Purpose: A pointer to the buffer where the data will be stored.

user\_data\_offset

Type: uint32\_t

Purpose: The offset from the user data area's base address. It should be aligned to a 4-byte boundary.

size

Type: uint32\_t

Purpose: The size of data to read.

**Returns :**

WIFI\_SUCCESS, if the operation was successful.

An error code of type tWIFI\_STATUS for any other errors.



## 5 UART

The UART API provides functions to:

- Set the UART channel, configurations, interrupt handler and interrupt type
- Get and put a character and print strings

### 5.1 Data Type

These types are defined at the “lib/sdk/inc/api\_uart.h”.

#### 5.1.1 Channel

NRC\_UART\_CHANNEL is an UART channel. The UART3 channels are not available for user use in NRC7292 EVK. It is dedicated for console.

**Table 5.1 NRC\_UART\_CHANNEL**

Name	Description
NRC_UART_CH0	Channel 0
NRC_UART_CH1	Channel 1
NRC_UART_CH2	Channel 2
NRC_UART_CH3	Channel 3

#### 5.1.2 UART Data Bit

NRC\_UART\_DATA\_BIT is a data bit size.

**Table 5.2 NRC\_UART\_DATA\_BIT**

Name	Description
NRC_UART_DB5	Data bit 5
NRC_UART_DB6	Data bit 6
NRC_UART_DB7	Data bit 7
NRC_UART_DB8	Data bit 8

#### 5.1.3 UART Stop Bit

NRC\_UART\_STOP\_BIT is a data bit size.

**Table 5.3 NRC\_UART\_STOP\_BIT**

Name	Description
NRC_UART_SB1	Stop bit 1
NRC_UART_SB2	Stop bit 2

### 5.1.4 UART Parity Bit

NRC\_UART\_PARITY\_BIT is a type of parity.

**Table 5.4 NRC\_UART\_PARITY\_BIT**

Name	Description
NRC_UART_PB_NONE	None
NRC_UART_PB_ODD	Odd parity bit
NRC_UART_PB_EVEN	Even parity bit

### 5.1.5 UART Hardware Flow Control

NRC\_UART\_HW\_FLOW\_CTRL indicate that a UART hardware flow control is enabled or disabled.

**Table 5.5 NRC\_UART\_HW\_FLOW\_CTRL**

Name	Description
NRC_UART_HFC_DISABLE	Disable
NRC_UART_HFC_ENABLE	Enable

### 5.1.6 UARTFIFO

NRC\_UART\_FIFO indicate that a UART FIFO is enabled or disabled.

**Table 5.6 NRC\_UART\_FIFO**

Name	Description
NRC_UART_FIFO_DISABLE	Disable FIFO
NRC_UART_FIFO_ENABLE	Enable FIFO

### 5.1.7 UART Configuration

NRC\_UART\_CONFIG is a configuration about UART.

**Table 5.7 NRC\_UART\_CONFIG**

Name	Description
ch	Channel number
db	Data bit
br	Baudrate
stop_bit	Stop bit
parity_bit	Parity bit
hw_flow_ctrl	Enable or disable hardware flow control
fifo	Enable or disable FIFO

### 5.1.8 UART Interrupt Type

NRC\_UART\_INT\_TYPE is an interrupt type.

**Table 5.8 NRC\_UART\_INT\_TYPE**

Name	Description
NRC_UART_INT_TIMEOUT	Timeout
NRC_UART_INT_RX_DONE	Rx is done
NRC_UART_INT_TX_EMPTY	Tx is empty

## 5.2 Function Call

The header file for system APIs are defined at the “sdk/inc/api\_uart.h”.

### 5.2.1 nrc\_uart\_set\_config

Set the UART configurations.

**Prototype :**

```
nrc_err_t nrc_uart_set_config(NRC_UART_CONFIG *conf)
```

**Input Parameters :**

conf

Type: NRC\_UART\_CONFIG\*

Purpose: A pointer to set uart configurations. See “[UART Configuration](#)”

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 5.2.2 nrc\_hw\_set\_channel

Set the UART channel

**Prototype :**

```
nrc_err_t nrc_uart_set_channel(int ch)
```

**Input Parameters :**

ch

Type: int

Purpose: UART channel

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 5.2.3 nrc\_uart\_get\_interrupt\_type

Get the UART interrupt type.

**Prototype :**

```
nrc_err_t nrc_uart_get_interrupt_type(int ch, NRC_UART_INT_TYPE *type)
```

**Input Parameters :**

ch

Type: int

Purpose: UART channel

type

Type: NRC\_UART\_INT\_TYPE \*

Purpose: A pointer to set UART interrupt type. See "[UART Interrupt Type](#)"

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 5.2.4 nrc\_uart\_set\_interrupt

Set the UART interrupt.

**Prototype :**

```
nrc_err_t nrc_uart_set_interrupt(int ch, bool tx_en, bool rx_en)
```

**Input Parameters :**

ch

Type: int

Purpose: UART channel

tx\_en

Type: bool

Purpose: Tx enable flag

rx\_en

Type: bool

Purpose: Rx enable flag

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 5.2.5 nrc\_uart\_clear\_interrupt

Clear the UART interrupt.

**Prototype :**

```
nrc_err_t nrc_uart_clear_interrupt(int ch, bool tx_int, bool rx_int, bool timeout_int)
```

**Input Parameters :**

ch

Type: int

Purpose: UART channel

tx\_en

Type: bool

Purpose: Tx enable flag

rx\_en

Type: bool

Purpose: Rx enable flag

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 5.2.6 nrc\_uart\_put

Put the character data to UART.

**Prototype :**

```
nrc_err_t nrc_uart_put(int ch, char data)
```

**Input Parameters :**

ch

Type: int

Purpose: UART channel

data

Type: char

Purpose: data

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 5.2.7 nrc\_uart\_get

Get the character data from UART.

**Prototype :**

```
nrc_err_t nrc_uart_get(int ch, char *data)
```

**Input Parameters :**

ch

Type: int

Purpose: UART channel  
data  
Type: char\*  
Purpose: A pointer to get data

**Returns :**

NRC\_SUCCESS, if the operation was successful.  
NRC\_FAIL, all other errors.

### 5.2.8 nrc\_uart\_register\_interrupt\_handler

Register user callback function for UART input.

**Prototype :**

nrc\_err\_t nrc\_uart\_register\_interrupt\_handler(int ch, intr\_handler\_fn cb)

**Input Parameters :**

ch  
Type: int  
Purpose: timer channel  
cb  
Type: intr\_handler\_fn  
Purpose: callback function

**Returns :**

NRC\_SUCCESS, if the operation was successful.  
NRC\_FAIL, all other errors.

### 5.2.9 nrc\_uart\_console\_enable

Enable/disable uart print and console command.

**Prototype :**

nrc\_err\_t nrc\_uart\_console\_enable(bool enabled)

**Input Parameters :**

Enabled  
Type: bool  
Purpose: true or false to enable or disable console print and command.

**Returns :**

NRC\_SUCCESS, if the operation was successful.  
NRC\_FAIL, all other errors.

## 5.3 Callback Functions & Events

The interrupt handler function pointer type is defined at the “sdk/inc/nrc\_types.h”.

### Prototype :

```
typedef void (*intr_handler_fn)(int vector)
```

### Input Parameters :

vector

Type: int

Purpose: input vector

## 6 GPIO

The GPIO API provides functions to:

- Set the GPIO configurations and interrupt handler
- Get GPIO input values and set GPIO output values

### 6.1 Data Type

These types are defined at the “lib/sdk/inc/api\_gpio.h”.

#### 6.1.1 GPIO Pin

NRC\_GPIO\_PIN is a GPIO pin number.

**Table 6.1 NRC\_GPIO\_PIN**

Name	Description
GPIO_00~GPIO30	GPIO pin number

※The supported GPIO depends on chips. Please reference the hardware guide document.

#### 6.1.2 GPIO Direction

NRC\_GPIO\_DIR is a GPIO direction.

**Table 6.2 NRC\_GPIO\_DIR**

Name	Description
GPIO_INPUT	Input direction
GPIO_OUTPUT	Output direction

#### 6.1.3 GPIO Mode

NRC\_GPIO\_MODE is a GPIO mode.

**Table 6.3 NRC\_GPIO\_MODE**

Name	Description
GPIO_PULL_UP	Pull up
GPIO_FLOATING	Floating

#### 6.1.4 GPIO Level

NRC\_GPIO\_LEVEL is a GPIO level.



Table 6.4 NRC\_GPIO\_LEVEL

Name	Description
GPIO_LEVEL_LOW	0
GPIO_LEVEL_HIGH	1

### 6.1.5 GPIO Alternative Function

NRC\_GPIO\_ALT is an alternative function.

Table 6.5 NRC\_GPIO\_ALT

Name	Description
GPIO_FUNC	GPIO function
GPIO_NOMAL_OP	GPIO Normal operation

### 6.1.6 GPIO Configurations

NRC\_GPIO\_CONFIG is a GPIO configuration.

Table 6.6 NRC\_GPIO\_CONFIG

Name	Description
gpio_pin	Pin number
gpio_dir	Direction
gpio_alt	Alternative function
gpio_mode	Mode

### 6.1.7 GPIO Interrupt Trigger Mode

GPIO interrupt trigger type.

※NRC7292 can't support to set trigger mode. Level trigger is only supported

Table 6.7 nrc\_gpio\_trigger\_t

Name	Description
TRIGGER_EDGE	Edge trigger
TRIGGER_LEVEL	Level trigger

### 6.1.8 GPIO Interrupt Trigger Level

GPIO interrupt trigger level.

※NRC7292 can't support to set trigger mode. High trigger is only supported

Table 6.8 nrc\_gpio\_trigger\_t

Name	Description
TRIGGER_HIGH	High trigger
TRIGGER_LOW	Low trigger

## 6.2 Function Call

The header file for system APIs are defined at the “sdk/inc/api\_gpio.h”.

### 6.2.1 nrc\_gpio\_config

Set the GPIO configuration.

**Prototype :**

```
nrc_err_t nrc_gpio_config(NRC_GPIO_CONFIG *conf)
```

**Input Parameters :**

conf

Type: NRC\_GPIO\_CONFIG\*

Purpose: A pointer to set GPIO configurations. See [“GPIO Configurations”](#)

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 6.2.2 nrc\_gpio\_output

Set the GPIO data (32bits).

**Prototype :**

```
nrc_err_t nrc_gpio_output(uint32_t *word)
```

**Input Parameters :**

conf

Type: uint32\_t \*

Purpose: A pointer to set GPIO output value (32bits)

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 6.2.3 nrc\_gpio\_outputb

Set the GPIO data for a specified pin number.

**Prototype :**

```
nrc_err_t nrc_gpio_outputb(int pin, int level)
```

**Input Parameters :**

pin

Type: int

Purpose: GPIO pin number

level

Type: int

Purpose: output value level

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 6.2.4 nrc\_gpio\_input

Get the GPIO data (32bits).

**Prototype :**

```
nrc_err_t nrc_gpio_input(uint32_t *word)
```

**Input Parameters :**

conf

Type: uint32\_t \*

Purpose: A pointer to get GPIO output value (32bits)

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 6.2.5 nrc\_gpio\_inputb

Get the GPIO data for a specified pin number.

**Prototype :**

```
nrc_err_t nrc_gpio_inputb(int pin, int *level)
```

**Input Parameters :**

pin

Type: int

Purpose: GPIO pin number

level

Type: int

Purpose: A pointer to get GPIO input value

**Returns :**

NRC\_SUCCESS, if the operation was successful.  
NRC\_FAIL, all other errors.

### 6.2.6 nrc\_gpio\_trigger\_config

Configure GPIO interrupt trigger (LEVEL/EDGE, HIGH/LOW signal)

※NRC729 can't support this API.

#### Prototype :

```
nrc_err_t nrc_gpio_trigger_config(int vector, nrc_gpio_trigger_t trigger,  
    nrc_gpio_trigger_level_t level, bool debounce)
```

#### Input Parameters :

vector	Type: int Purpose: interrupt vector (INT_VECTOR0 or INT_VECTOR1)
trigger	Type: nrc_gpio_trigger_t Purpose: TRIGGER_EDGE or TRIGGER_LEVEL
level	Type: nrc_gpio_trigger_level_t Purpose: TRIGGER_HIGH or TRIGGER_LOW
debounce	Type: bool Purpose: true or false to enable/disable debounce logic

#### Returns :

NRC\_SUCCESS, if the operation was successful.  
NRC\_FAIL, all other errors.

### 6.2.7 nrc\_gpio\_register\_interrupt\_handler

Register GPIO interrupt handler.

#### Prototype :

```
nrc_gpio_register_interrupt_handler(int pin, intr_handler_fn cb)
```

#### Input Parameters :

pin	Type: int Purpose: pin number
-----	----------------------------------

cb

Type: intr\_handler\_fn

Purpose: callback function

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

## 6.3 Callback Functions & Events

The interrupt handler function pointer type is defined at the “sdk/inc/nrc\_types.h”.

**Prototype :**

```
typedef void (*intr_handler_fn)(int vector)
```

**Input Parameters :**

vector

Type: int

Purpose: input vector

## 7 I2C

The I2C API provides functions to:

- Set the I2C configurations
- I2C initialize, enable, reset
- Read and write byte via I2C

### 7.1 Data Type

These types are defined at the “lib/sdk/inc/api\_i2c.h”.

#### 7.1.1 I2C\_CONTROLLER\_ID

I2C\_CONTROLLER\_ID is an i2c channel.

**Table 7.1 I2C\_CONTROLLER\_ID**

Name	Description
I2C_MASTER_0	I2C channel 0
I2C_MASTER_1	I2C channel 1
I2C_MASTER_2	I2C channel 2
I2C_MASTER_MAX	Max channel number

#### 7.1.2 I2C\_WIDTH

I2C\_WIDTH is an i2c data width.

**Table 7.2 I2C\_WIDTH**

Name	Description
I2C_WIDTH_8BIT	8 Bits
I2C_WIDTH_16BIT	16 Bits

#### 7.1.3 I2C\_CLOCK\_SOURCE

I2C\_CLOCK\_SOURCE is an i2c clock source.

**Table 7.3 I2C\_CLOCK\_SOURCE**

Name	Description
I2C_CLOCK_CONTROLLER	Clock Controller.
I2C_CLOCK_PCLK	PCLK

### 7.1.4 i2c\_device\_t

i2c\_device\_t is an i2c configurations.

**Table 7.4 i2c\_device\_t**

Name	Description
pin_sda	SDA pin
pin_scl	SCL pin
clock_source	clock source, 0:clock controller, 1:PCLK
controller	ID of i2c controller to use
clock	i2c clock (Hz)
width	i2c data width
address	i2c address

## 7.2 Function Call

The header file for system APIs are defined at the “sdk/inc/api\_i2c.h”.

### 7.2.1 nrc\_i2c\_init

Initialize the I2C controller.

**Prototype :**

```
nrc_err_t nrc_i2c_init(i2c_device_t* i2c)
```

**Input Parameters :**

i2c

Type: i2c\_device\_t\*

Purpose: A pointer to set i2c configurations

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 7.2.2 nrc\_i2c\_enable

Enable or disable the I2C controller.

※ Please disable I2C only after a transaction is stopped.

**Prototype :**

```
nrc_err_t nrc_i2c_enable(i2c_device_t* i2c, bool enable)
```

**Input Parameters :**

i2c

Type: i2c\_device\_t\*

Purpose: A pointer to set i2c configurations

enable

Type: bool

Purpose: I2C controller enable or disable

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 7.2.3 nrc\_i2c\_reset

Reset the I2C controller.

**Prototype :**

nrc\_err\_t nrc\_i2c\_reset(i2c\_device\_t\* i2c)

**Input Parameters :**

i2c

Type: i2c\_device\_t\*

Purpose: A pointer to set i2c configurations

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 7.2.4 nrc\_i2c\_start

Start the I2C operation.

**Prototype :**

nrc\_err\_t nrc\_i2c\_start(i2c\_device\_t\* i2c)

**Input Parameters :**

i2c

Type: i2c\_device\_t\*

Purpose: A pointer to set i2c configurations

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.



### 7.2.5 nrc\_i2c\_stop

Stop the I2C operation.

**Prototype :**

```
nrc_err_t nrc_i2c_stop(i2c_device_t* i2c)
```

**Input Parameters :**

i2c  
Type: i2c\_device\_t\*  
Purpose: A pointer to set i2c configurations

**Returns :**

NRC\_SUCCESS, if the operation was successful.  
NRC\_FAIL, all other errors.

### 7.2.6 nrc\_i2c\_writebyte

Write data to the I2C controller.

**Prototype :**

```
nrc_err_t nrc_i2c_writebyte(i2c_device_t* i2c, uint8_t data)
```

**Input Parameters :**

i2c  
Type: i2c\_device\_t\*  
Purpose: A pointer to set i2c configurations  
data  
Type: uint8\_t  
Purpose: data

**Returns :**

NRC\_SUCCESS, if the operation was successful.  
NRC\_FAIL, all other errors.

### 7.2.7 nrc\_i2c\_readbyte

Read data from the I2C controller.

**Prototype :**

```
nrc_err_t nrc_i2c_readbyte(i2c_device_t* i2c, uint8_t *data, bool ack)
```

**Input Parameters :**

i2c  
Type: i2c\_device\_t\*  
Purpose: A pointer to set i2c configurations  
data

Type: uint8\_t\*

Purpose: A pointer to store the read data

ack

Type: bool

Purpose: ACK flag. If there's no further reading registers, then false. Otherwise, true

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

## 8 ADC

The ADC API provides functions to:

- Initialize / De-initialize the ADC controller
- Read the ADC controller data

### 8.1 Data Type

These types are defined at the “lib/sdk/inc/api\_adc.h”.

#### 8.1.1 ADC Channel

ADC\_CH is an ADC channel. The supported channel number depends on chips.

**Table 8.1 ADC\_CH**

Name	Description
ADC1~ADC3	ADC channel

### 8.2 Function Call

The header file for system APIs are defined at the “sdk/inc/api\_adc.h”.

#### 8.2.1 nrc\_adc\_init

Initialize the ADC controller.

**Prototype :**

```
nrc_err_t nrc_adc_init(void)
```

**Input Parameters :**

N/A

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

#### 8.2.2 nrc\_adc\_deinit

De-initialize the ADC controller.

**Prototype :**

```
nrc_err_t nrc_adc_deinit(void)
```

**Input Parameters :**

N/A

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 8.2.3 nrc\_adc\_get\_data

Read the data from the ADC controller.

**Prototype :**

```
nrc_err_t nrc_adc_get_data(uint32_t id, uint16_t *data)
```

**Input Parameters :**

id

Type: uint32\_t

Purpose: Channel ID

data

Type: uint16\_t \*

Purpose: A pointer for of data(Max value : 0x1FF)

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

## 9 PWM

The PWM API provides functions to:

- Initialize the PWM controller
- Set configuration and enable for PWM

### 9.1 Data Type

These types are defined at the “lib/sdk/inc/api\_pwm.h”.

#### 9.1.1 PWM Channel

PWM\_CH is an PWM channel.

**Table 9.1 PWM\_CH**

Name	Description
PWM_CH0	PWM channel 0
PWM_CH1	PWM channel 1
PWM_CH2	PWM channel 2
PWM_CH3	PWM channel 3
PWM_CH4	PWM channel 0
PWM_CH5	PWM channel 1
PWM_CH6	PWM channel 2
PWM_CH7	PWM channel 3

※ The supported PWM channels are different in each chip. Please reference the hardware guide document.NRC7292(CH0-CH3),NRC7394(CH0-CH7)

### 9.2 Function Call

The header file for system APIs are defined at the “sdk/inc/api\_pwm.h”.

#### 9.2.1 nrc\_pwm\_hw\_init

Initialize the ADC controller.

##### Prototype :

```
nrc_err_t nrc_pwm_hw_init(uint8_t ch, uint8_t gpio_num, uint8_t use_high_clk)
```

##### Input Parameters :

ch

Type: uint8\_t

Purpose: PWM channel ID. See "[PWM Channel](#)"  
gpio\_num  
Type: uint8\_t  
Purpose: GPIO number assigned for PWM  
use\_high\_clk  
Type: uint8\_t  
Purpose: If 0, then the pulse duration for 1-bit in each pattern is about 20.8us.  
Otherwise, about 10.4us

**Returns :**

NRC\_SUCCESS, if the operation was successful.  
NRC\_FAIL, all other errors.

### 9.2.2 nrc\_pwm\_set\_config

Set configuration parameters of PWM. One duty cycle consists of 4 pulse patterns(total 128-bit).

※ It starts with the MSB of pattern1 and ends with the LSB of pattern4.

**Prototype :**

```
nrc_err_t nrc_pwm_set_config(uint8_t ch, uint32_t pattern1, uint32_t pattern2, uint32_t pattern3, uint32_t pattern4)
```

**Input Parameters :**

ch  
Type: uint8\_t  
Purpose: PWM channel ID. See "[PWM Channel](#)"  
pattern1  
Type: uint32\_t  
Purpose: 1<sup>st</sup> pulse pattern(Pattern bits 0~31)  
pattern2  
Type: uint32\_t  
Purpose: 2<sup>nd</sup> pulse pattern(Pattern bits 32~63)  
pattern3  
Type: uint32\_t  
Purpose: 3<sup>rd</sup> pulse pattern(Pattern bits 64~95)  
pattern4  
Type: uint32\_t  
Purpose: 4<sup>th</sup> pulse pattern(Pattern bits 96~127)

**Returns :**

NRC\_SUCCESS, if the operation was successful.  
NRC\_FAIL, all other errors.

### 9.2.3 nrc\_pwm\_set\_enable

Enable the specified PWM channel.

**Prototype :**

```
nrc_err_t nrc_pwm_set_enable(uint32_t ch, bool enable)
```

**Input Parameters :**

ch

Type:        uint32\_t

Purpose:    PWM channel ID. See "[PWM Channel](#)"

enable

Type:        bool

Purpose:    Enable / disable

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

## 10SPI

The SPI API provides functions to:

- Initialize and enable the SPI controller
- Write and read byte via SPI

### 10.1Data Type

These types are defined at the “lib/sdk/inc/api\_spi.h”.

#### 10.1.1 SPI Mode

SPI\_MODE is a SPI mode, which is related to CPOL and CPHA values.

✕ Refer the Serial Peripheral Interface. ([https://en.wikipedia.org/wiki/Serial\\_Peripheral\\_Interface](https://en.wikipedia.org/wiki/Serial_Peripheral_Interface))

**Table 10.1 SPI\_MODE**

Name	Description
SPI_MODE0	SPI mode 0 (CPOL=0, CPHA=0)
SPI_MODE1	SPI mode 1 (CPOL=0, CPHA=1)
SPI_MODE2	SPI mode 2 (CPOL=1, CPHA=0)
SPI_MODE3	SPI mode 3 (CPOL=1, CPHA=1)

#### 10.1.2 SPI Frame Bits

SPI\_FRAME\_BITS is a number of frame bits.

**Table 10.2 SPI\_FRAME\_BITS**

Name	Description
SPI_BIT4	SPI 4-bit frame
SPI_BIT5	SPI 5-bit frame
SPI_BIT6	SPI 6-bit frame
SPI_BIT7	SPI 7-bit frame
SPI_BIT8	SPI 8-bit frame
SPI_BIT9	SPI 9-bit frame
SPI_BIT10	SPI 10-bit frame
SPI_BIT11	SPI 11-bit frame
SPI_BIT12	SPI 12-bit frame
SPI_BIT13	SPI 13-bit frame
SPI_BIT14	SPI 14-bit frame
SPI_BIT15	SPI 15-bit frame
SPI_BIT16	SPI 16-bit frame



### 10.1.3 SPI Controller ID

SPI\_CONTROLLER\_ID is a SPI controller ID.

**Table 10.3 SPI\_CONTROLLER\_ID**

Name	Description
SPI_CONTROLLER_SPI0	SPI 0
SPI_CONTROLLER_SPI1	SPI 1

### 10.1.4 spi\_device\_t

spi\_device\_t is a spi configurations.

**Table 10.4 spi\_device\_t**

Name	Description
pin_miso	SPI MISO pin
pin_mosi	SPI MOSI pin
pin_cs	SPI Chip Select pin
pin_sclk	SPI SCLK pin
frame_bits	SPI frame bits
clock	SPI clock
mode	SPI mode
controller	ID of SPI controller to use
irq_save_flag	irq save flag
lsh_handler	Event handler

## 10.2 Function Call

The header file for system APIs are defined at the “sdk/inc/api\_spi.h”.

### 10.2.1 nrc\_spi\_master\_init

Initialize the SPI controller with the specified mode and bits

**Prototype :**

```
nrc_err_t nrc_spi_master_init(spi_device_t* spi)
```

**Input Parameters :**

spi

Type: spi\_device\_t

Purpose: spi configuration. See [“spi\\_device\\_t”](#)

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 10.2.2 nrc\_spi\_init\_cs

Assign the chip select pin and set active high

**Prototype :**

```
nrc_err_t nrc_spi_init_cs(uint8_t pin_cs)
```

**Input Parameters :**

pin\_cs

Type: uint8\_t

Purpose: Assign GPIO for chip select

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 10.2.3 nrc\_spi\_enable

Enable / disable the SPI controller.

**Prototype :**

```
nrc_err_t nrc_spi_enable(spi_device_t* spi, bool enable)
```

**Input Parameters :**

spi

Type: spi\_device\_t

Purpose: spi configuration. See [“spi\\_device\\_t”](#)  
enable

Type: bool

Purpose: Enable / disable

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 10.2.4 nrc\_spi\_start\_xfer

Enable CS to continuously transfer data.

**Prototype :**

nrc\_err\_t nrc\_spi\_start\_xfer(spi\_device\_t\* spi)

**Input Parameters :**

spi

Type: spi\_device\_t

Purpose: spi configuration. See [“spi\\_device\\_t”](#)

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 10.2.5 nrc\_spi\_stop\_xfer

Disable CS to continuously transfer data.

**Prototype :**

nrc\_err\_t nrc\_spi\_stop\_xfer(spi\_device\_t\* spi)

**Input Parameters :**

spi

Type: spi\_device\_t

Purpose: spi configuration. See [“spi\\_device\\_t”](#)

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 10.2.6 nrc\_spi\_xfer

Transfer the data between master and slave. User can call nrc\_spi\_xfer multiple times to transmit data.  
※This function should run inside nrc\_spi\_start\_xfer() and nrc\_spi\_stop\_xfer().

**Prototype :**

```
nrc_err_t nrc_spi_xfer(spi_device_t* spi, uint8_t *wbuffer, uint8_t *rbuffer, uint32_t size)
```

**Input Parameters :**

spi	Type: spi_device_t
	Purpose: spi configuration. See <a href="#">“spi_device_t”</a>
wbuffer	Type: uint8_t*
	Purpose: A pointer to write data
rbuffer	Type: uint8_t*
	Purpose: A pointer to read data
size	Type: uint32_t
	Purpose: Number of bytes to transfer

**Returns :**

NRC\_SUCCESS, if the operation was successful.  
NRC\_FAIL, all other errors.

### 10.2.7 nrc\_spi\_writebyte\_value

Write one-byte data to the specified register address.

**Prototype :**

```
nrc_err_t nrc_spi_writebyte_value(spi_device_t* spi, uint8_t addr, uint8_t data);
```

**Input Parameters :**

spi	Type: spi_device_t
	Purpose: spi configuration. See <a href="#">“spi_device_t”</a>
addr	Type: uint8_t
	Purpose: register address to write data
data	Type: uint8_t
	Purpose: data to write

**Returns :**

NRC\_SUCCESS, if the operation was successful.  
NRC\_FAIL, all other errors.

### 10.2.8 nrc\_spi\_readbyte\_value

Read one-byte data to the specified register address.

**Prototype :**

```
nrc_err_t nrc_spi_readbyte_value(spi_device_t* spi, uint8_t addr, uint8_t data);
```

**Input Parameters :**

spi  
Type: spi\_device\_t  
Purpose: spi configuration. See [“spi\\_device\\_t”](#)

addr  
Type: uint8\_t  
Purpose: register address to read data

data  
Type: uint8\_t\*  
Purpose: A pointer to read data

**Returns :**

NRC\_SUCCESS, if the operation was successful.  
NRC\_FAIL, all other errors.

### 10.2.9 nrc\_spi\_write\_values

Write bytes data to the specified register address.

**Prototype :**

```
nrc_err_t nrc_spi_write_values(spi_device_t* spi, uint8_t addr, uint8_t *data, int size)
```

**Input Parameters :**

spi  
Type: spi\_device\_t  
Purpose: spi configuration. See [“spi\\_device\\_t”](#)

addr  
Type: uint8\_t  
Purpose: register address to write data

data  
Type: uint8\_t\*  
Purpose: A pointer to write data

size  
Type: int  
Purpose: write data size. The unit is bytes.

**Returns :**

NRC\_SUCCESS, if the operation was successful.  
NRC\_FAIL, all other errors.

### 10.2.10 nrc\_spi\_read\_values

Read bytes data to the specified register address.

**Prototype :**

```
nrc_err_t nrc_spi_read_values(spi_device_t* spi, uint8_t addr, uint8_t *data, int size)
```

**Input Parameters :**

spi

Type: spi\_device\_t

Purpose: spi configuration. See [“spi\\_device\\_t”](#)

addr

Type: uint8\_t

Purpose: register address to read data

data

Type: uint8\_t\*

Purpose: A pointer to read data

size

Type: int

Purpose: read data size. The unit is bytes.

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

## 11 HTTP Client

The HTTP client API provides functions to:

- HTTP request method (GET, PUT, POST, DELETE)
- Retrieves the response data about request function

### 11.1 Data Type

These types are defined at the “lib/sdk/inc/api\_httpc.h”.

#### 11.1.1 HTTP Client Return Types

httpc\_ret\_e is a return type for HTTP client.

**Table 11.1**    httpc\_ret\_e

Name	Description
HTTPC_RET_ERROR_TLS_CONNECTION	TLS connection fail
HTTPC_RET_ERROR_PK_LOADING_FAIL	Private key loading fail
HTTPC_RET_ERROR_CERT_LOADING_FAIL	Certificate loading fail
HTTPC_RET_ERROR_SEED_FAIL	Seed creation fail
HTTPC_RET_ERROR_BODY_SEND_FAIL	Request body send fail
HTTPC_RET_ERROR_HEADER_SEND_FAIL	Request Header send fail
HTTPC_RET_ERROR_INVALID_HANDLE	Invalid handle
HTTPC_RET_ERROR_ALLOC_FAIL	Memory allocation fail
HTTPC_RET_ERROR_SCHEME_NOT_FOUND	Scheme(http:// or https://) not found
HTTPC_RET_ERROR_SOCKET_FAIL	Socket creation fail
HTTPC_RET_ERROR_RESOLVING_DNS	Cannot resolve the hostname
HTTPC_RET_ERROR_CONNECTION	Connection fail
HTTPC_RET_ERROR_UNKNOWN	Unknown error
HTTPC_RET_CON_CLOSED	Connection closed by remote
HTTPC_RET_OK	Success

#### 11.1.2 Define values

**Table 11.2**    Default define values

Define	Value
HTTP_PORT	80
HTTPS_PORT	443
INVALID_HANDLE	0xFFFFFFFF

### 11.1.3 HTTP Client Connection Handle

con\_handle\_t is a connection handle type for HTTP client.

**Table 11.3** con\_handle\_t

Name	Description
con_handle_t	Connection handle

### 11.1.4 SSL Certificate Structure

ssl\_certs\_t is a SSL certificate structure type.

**Table 11.4** ssl\_certs\_t

Name	Description
server_cert	Server certification
client_cert	Client certification
client_pk	Client private key
server_cert_length	Server certification l, server_cert buffer size
client_cert_length	Client certification l, client_cert buffer size
client_pk_length	Client private key l, client_pk buffer size

### 11.1.5 HTTP Client Data Type

httpc\_data\_t is a data type for HTTP client.

**Table 11.5** httpc\_data\_t

Name	Description
data_out	Connection handle
data_out_length	Output buffer length
data_in	Pointer of the input buffer for data receiving
data_in_length	Input buffer length
recved_size	Received data size

## 11.2Function Call

The header file for system APIs are defined at the “sdk/inc/api\_httpc.h”.

### 11.2.1 nrc\_httpc\_get

Executes a GET request on a given URL.

**Prototype :**

```
httpc_ret_e nrc_httpc_get(con_handle_t *handle, const char *url, const char *custom_header,
httpc_data_t *data, ssl_certs_t *certs)
```



**Input Parameters :**

handle  
     Type:        con\_handle\_t\*  
     Purpose:    Connection handle"

url  
     Type:        const char \*  
     Purpose:    URL for the request

custom\_header  
     Type:        const char \*  
     Purpose:    Customized request header. The request-line("<method><uri> HTTP/1.1") and "Host: <host-name>" will be sent in default internally. Other headers can be set as null-terminated string format.

Data  
     Type:        httpc\_data\_t \*  
     Purpose:    A pointer to the #httpc\_data\_t to manage the data sending and receiving

certs  
     Type:        ssl\_certs\_t \*  
     Purpose:    A pointer to the #ssl\_certs\_t for the certificates

**Returns :**

HTTPC\_RET\_OK, if the operation was successful.  
 Negative error value, all other errors.

## 11.2.2 nrc\_httpc\_post

Executes a POST request on a given URL.

**Prototype :**

httpc\_ret\_e    nrc\_httpc\_post(con\_handle\_t \*handle,    const    char    \*url,    const    char  
                  \*custom\_header, httpc\_data\_t \*data, ssl\_certs\_t \*certs)

**Input Parameters :**

handle  
     Type:        con\_handle\_t\*  
     Purpose:    Connection handle"

url  
     Type:        const char \*  
     Purpose:    URL for the request

custom\_header  
     Type:        const char \*  
     Purpose:    Customized request header. The request-line("<method><uri> HTTP/1.1") and "Host: <host-name>" will be sent in default internally. Other headers can be set as null-terminated string format.

Data

Type:        `httpc_data_t *`  
Purpose:    A pointer to the `#httpc_data_t` to manage the data sending and receiving  
certs  
Type:        `ssl_certs_t *`  
Purpose:    A pointer to the `#ssl_certs_t` for the certificates

**Returns :**

HTTPC\_RET\_OK, if the operation was successful.  
Negative error value, all other errors.

### 11.2.3 nrc\_httpc\_put

Executes a PUT request on a given URL.

**Prototype :**

```
httpc_ret_e nrc_httpc_put(con_handle_t *handle, const char *url, const char *custom_header,  
httpc_data_t *data, ssl_certs_t *certs)
```

**Input Parameters :**

handle

Type:        `con_handle_t*`  
Purpose:    Connection handle"

url

Type:        `const char *`  
Purpose:    URL for the request

custom\_header

Type:        `const char *`  
Purpose:    Customized request header. The request-line("<method><uri> HTTP/1.1") and  
"Host: <host-name>" will be sent in default internally. Other headers can be set  
as null-terminated string format.

Data

Type:        `httpc_data_t *`  
Purpose:    A pointer to the `#httpc_data_t` to manage the data sending and receiving

certs

Type:        `ssl_certs_t *`  
Purpose:    A pointer to the `#ssl_certs_t` for the certificates

**Returns :**

HTTPC\_RET\_OK, if the operation was successful.  
Negative error value, all other errors.

### 11.2.4 nrc\_httpc\_delete

Executes a DELETE request on a given URL.

**Prototype :**

```
httpc_ret_e nrc_httpc_delete(con_handle_t *handle, const char *url, const char
*custom_header, httpc_data_t *data, ssl_certs_t *certs)
```

**Input Parameters :**

handle

Type: con\_handle\_t\*  
Purpose: Connection handle"

url

Type: const char \*  
Purpose: URL for the request

custom\_header

Type: const char \*  
Purpose: Customized request header. The request-line("<method><uri> HTTP/1.1") and "Host: <host-name>" will be sent in default internally. Other headers can be set as null-terminated string format.

Data

Type: httpc\_data\_t \*  
Purpose: A pointer to the #httpc\_data\_t to manage the data sending and receiving

certs

Type: ssl\_certs\_t \*  
Purpose: A pointer to the #ssl\_certs\_t for the certificates

**Returns :**

HTTPC\_RET\_OK, if the operation was successful.  
Negative error value, all other errors.

## 11.2.5 nrc\_httpc\_delete

Executes a DELETE request on a given URL.

**Prototype :**

```
httpc_ret_e nrc_httpc_delete(con_handle_t *handle, const char *url, const char
*custom_header, httpc_data_t *data, ssl_certs_t *certs)
```

**Input Parameters :**

handle

Type: con\_handle\_t\*  
Purpose: Connection handle"

url

Type: const char \*  
Purpose: URL for the request

custom\_header

Type: const char \*  
Purpose: Customized request header. The request-line("<method><uri> HTTP/1.1") and

“Host: <host-name>” will be sent in default internally. Other headers can be set as null-terminated string format.

Data

Type:        httpc\_data\_t \*

Purpose:    A pointer to the #httpc\_data\_t to manage the data sending and receiving certs

Type:        ssl\_certs\_t \*

Purpose:    A pointer to the #ssl\_certs\_t for the certificates

**Returns :**

HTTPC\_RET\_OK, if the operation was successful.

Negative error value, all other errors.

### 11.2.6 nrc\_httpc\_rcv\_response

Retrieves the response data when there are remains after executing the request functions.

**Prototype :**

```
httpc_ret_e nrc_httpc_rcv_response(con_handle_t *handle, httpc_data_t *data);
```

**Input Parameters :**

handle

Type:        con\_handle\_t\*

Purpose:    Connection handle”

data

Type:        httpc\_data\_t \*

Purpose:    A pointer to the #httpc\_data\_t to manage the data sending and receiving

**Returns :**

HTTPC\_RET\_OK, if the operation was successful.

Negative error value, all other errors.

### 11.2.7 nrc\_httpc\_close

Close connection. Conneciont is included in each request method function.

**Prototype :**

```
void nrc_httpc_close(con_handle_t *handle)
```

**Input Parameters :**

handle

Type:        bool

Purpose:    Enable / disable

**Returns :**

N/A

## 12 FOTA

The FOTA API provides functions to:

- Check the support of FOTA and set FOTA information
- Erase and write FOTA area.
- Firmware and boot loader FOTA update done function.
- CRC32 calculation.

### 12.1 Data Type

These types are defined at the “lib/sdk/inc/api\_fota.h”.

#### 12.1.1 FOTA Information

FOTA\_INFO is an information about FOTA firmware.

**Table 12.1    FOTA\_INFO**

Name	Description
fw_length	Firmware length
crc	CRC32 value
ready	ready flag (Not used)

#### 12.1.2 Broadcast FOTA mode

The broadcast FOTA mode can be configured for the broadcast FOTA operation.

**Table 12.2    Broadcast FOTA mode**

Name	Description
BC_FOTA_MODE_ANY	Run broadcast FOTA without AP connection
BC_FOTA_MODE_CONNECTED	Run broadcast FOTA when AP connected

## 12.2 Function Call

The header file for system APIs are defined at the “sdk/inc/api\_fota.h”.

### 12.2.1 nrc\_fota\_is\_support

Check the flash is able to support FOTA

**Prototype :**

bool nrc\_fota\_is\_support(void)

**Input Parameters :**

N/A

**Returns :**

True, if it supports FOTA.

False, if it does not support FOTA.

### 12.2.2 nrc\_fota\_write

Write data from source address to destination address in FOTA memory area.

**Prototype :**

nrc\_err\_t nrc\_fota\_write(uint32\_t dst, uint8\_t \*src, uint32\_t len)

**Input Parameters :**

dst

Type:        uint32\_t

Purpose:    offset from fota\_memory start address

src

Type:        uint8\_t\*

Purpose:    source address

len

Type:        uint32\_t

Purpose:    source data length

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 12.2.3 nrc\_fota\_erase

Erase FOTA memory area

**Prototype :**

```
nrc_err_t nrc_fota_erase(void)
```

**Returns :**

NRC\_SUCCESS, if the operation was successful.  
NRC\_FAIL, all other errors.

**12.2.4 nrc\_fota\_set\_info**

Set FOTA binary information (binary length and crc)

**Prototype :**

```
nrc_err_t nrc_fota_set_info(uint32_t len, uint32_t crc)
```

**Input Parameters :**

len

Type:        uint32\_t  
Purpose:    binary size

crc

Type:        uint32\_t  
Purpose:    crc value for binary

**Returns :**

NRC\_SUCCESS, if the operation was successful.  
NRC\_FAIL, all other errors.

**12.2.5 nrc\_fota\_update\_done**

Updated firmware and reboot.

**Prototype :**

```
nrc_err_t nrc_fota_update_done(FOTA_INFO* fw_info)
```

**Input Parameters :**

fw\_info

Type:        FOTA\_INFO\*  
Purpose:    FOTA binary information (binary length and crc)

**Returns :**

NRC\_SUCCESS, if the operation was successful.  
NRC\_FAIL, all other errors.

**12.2.6 nrc\_fota\_update\_done\_bootloader**

Updated boot loader and reboot.

**Prototype :**

```
nrc_err_t nrc_fota_update_done_bootloader(FOTA_INFO* fw_info)
```

**Input Parameters :**

fw\_info

Type:        FOTA\_INFO\*

Purpose:      FOTA binary information (binary length and crc)

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 12.2.7 nrc\_fota\_cal\_crc

Calculate crc32 value.

**Prototype :**

```
nrc_err_t nrc_fota_cal_crc(uint8_t* data, uint32_t len, uint32_t *crc)
```

**Input Parameters :**

data

Type:        uint8\_t\*

Purpose:      A pointer for data

len

Type:        uint32\_t

Purpose:      length for CRC

crc

Type:        uint32\_t

Purpose:      A pointer to store the calculated crc value

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.



### 12.2.8 nrc\_bcast\_fota\_init

Initialize broadcast FOTA

**Prototype :**

```
void nrc_bcast_fota_init(void)
```

**Input Parameters :**

N/A

**Returns :**

NRC\_SUCCESS, if the operation was successful.  
NRC\_FAIL, all other errors.

### 12.2.9 nrc\_bcast\_fota\_set\_mode

Set the broadcast FOTA mode

**Prototype :**

```
void nrc_bcast_fota_set_mode(uint8_t mode)
```

**Input Parameters :**

mode

Type:        uint8\_t

Purpose:    BC\_FOTA\_MODE\_ANY or BC\_FOTA\_MODE\_CONNECTED. These types are defined at the "lib/sdk/inc/api\_bcast\_fota.h".

**Returns :**

NRC\_SUCCESS, if the operation was successful.  
NRC\_FAIL, all other errors.

### 12.2.10 nrc\_bcast\_fota\_enable

Set the broadcast FOTA mode enable or disable

**Prototype :**

```
void nrc_bcast_fota_enable(bool enable)
```

**Input Parameters :**

enable

Type:        uint8\_t

Purpose:    enable/disable broadcast FOTA

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

## 13 Power save

The power save memory API provides functions to:

- Set power save mode
- Set wakeup pin and source

### 13.1 Data Type

These types are defined at the “lib/sdk/inc/api\_ps.h”.

#### 13.1.1 Power Save Wakeup Source

These are related to wakeup source.

**Table 13.1    POWER\_SAVE\_WAKEUP\_SOURCE**

Define	Value
WAKEUP_SOURCE_RTC	0x00000001L << 0
WAKEUP_SOURCE_GPIO	0x00000001L << 1

#### 13.1.2 Power Save Wakeup Reason

These are related to wakeup reason. These are defined at the “sdk/inc/api\_ps.h”.

**Table 13.2    POWER\_SAVE\_WAKEUP\_REASON**

Define	Description
NRC_WAKEUP_REASON_COLDBOOT	Normal power on
NRC_WAKEUP_REASON_RTC	RTC timeout
NRC_WAKEUP_REASON_GPIO	Wakeup by GPIO
NRC_WAKEUP_REASON_TIM	Unicast packet in TIM sleep mode
NRC_WAKEUP_REASON_TIM_TIMER	RTC timeout in TIM sleep mode
NRC_WAKEUP_REASON_NOT_SUPPORTED	Not supported

## 13.2 Function Call

The header file for system APIs are defined at the “sdk/inc/api\_ps.h”.

### 13.2.1 nrc\_ps\_deep\_sleep

Command the device to go to Non-TIM mode deep sleep.

If used after a previous WiFi pairing has been completed, the device will utilize the saved WiFi connection information in retention memory for faster pairing recovery.

※ The sleep\_ms parameter may be overridden by the MIN (BSS MAX IDLE, LISTEN INTERVAL)  
BSS MAX IDLE : set to AP with the default value being about 30 minutes  
LISTEN INTERVAL : set to STA with the default value being 0

So If you want to use Deep sleep with duration you want, you have to check listen interval and bss max idle should be larger than it.

**Prototype :**

```
nrc_err_t nrc_ps_deep_sleep(uint64_t sleep_ms)
```

**Input Parameters :**

interval

Type:        uint64\_t

Purpose:    The duration for deep sleep. The unit is ms. (>= 1000ms)

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 13.2.2 nrc\_ps\_sleep\_alone

Command the device to go to Non-TIM deep sleep.

Unlike nrc\_ps\_deep\_sleep, it will not save pairing information, potentially leading to longer WiFi reconnection time. Additionally, this API will not override the sleep duration specified by the sleep\_ms parameter.

**Prototype :**

```
nrc_err_t nrc_ps_sleep_alone(uint64_t sleep_ms)
```

**Input Parameters :**

timeout

Type:        uint64\_t

Purpose:    Duration for deep sleep. The unit is ms. (>= 1000ms)

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 13.2.3 nrc\_ps\_wifi\_tim\_deep\_sleep

The function commands device to WiFi TIM sleep. The WiFi wakes up if Traffic Indication Map signal received or sleep duration expired. If sleep\_ms is set to 0, the device will wakeup only for TIM traffic.

**Prototype :**

```
nrc_err_t nrc_ps_wifi_tim_deep_sleep(uint32_t idle_timeout_ms, uint32_t sleep_ms)
```

**Input Parameters :**

idle\_timeout\_ms

Type:        uint32\_t

Purpose:      Wait time before entering the modem sleep. The unit is ms.    (0 <= time < 10000ms)

sleep\_ms

Type:        uint32\_t

Purpose:      Duration for deep sleep. The unit is ms. (0(not use) or time >= 1000ms)

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 13.2.4 nrc\_ps\_set\_gpio\_wakeup\_pin

Configure a wakeup-gpio-pin when system state is uCode or deep sleep.

※ This function should be called before deep sleep, if user want to set the wakeup-gpio-pin.

**Prototype :**

```
nrc_err_t nrc_ps_set_gpio_wakeup_pin(bool check_debounce, int pin_number)
```

**Input Parameters :**

check\_debounce

Type:        bool

Purpose:      check mechanical vibration of a switch

pin\_number

Type:        int

Purpose:      GPIO pin number for wakeup when GPIO is enabled for wakeup source

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 13.2.5 nrc\_ps\_set\_wakeup\_source

Configure wakeup sources when system state is deepsleep.

※ This function should be called before deepsleep, if user want to set the wakeup source.

**Prototype :**

```
nrc_err_t nrc_ps_set_wakeup_source(uint8_t wakeup_source)
```

**Input Parameters :**

wakeup\_source

Type:        uint8\_t

Purpose:    wakeup source. See "[Power Save Wakeup Source](#)"

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 13.2.6 nrc\_ps\_wakeup\_reason

Get the wakeup reason.

**Prototype :**

nrc\_err\_t nrc\_ps\_wakeup\_reason(uint8\_t \*reason)

**Input Parameters :**

reason

Type:        uint8\_t\*

Purpose:    A pointer to get wakeup reason. See "[Power Save Wakeup Reason](#)"

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 13.2.7 nrc\_ps\_set\_gpio\_direction

Set the gpio direction mask in deep sleep.

**Prototype :**

void nrc\_ps\_set\_gpio\_direction(uint32\_t bitmask)

**Input Parameters :**

bitmask

Type:        uint32\_t

Purpose:    Set bitmask of GPIO direction, as bits 0-31 (input:0, output:1)

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 13.2.8 nrc\_ps\_set\_gpio\_out

Set the gpio pullup mask in deep sleep.

**Prototype :**

void nrc\_ps\_set\_gpio\_out(uint32\_t bitmask)

**Input Parameters :**

bitmask

Type: uint32\_t

Purpose: Set bitmask of GPIO out value, as bits 0-31 (low:0, high:1)

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 13.2.9 nrc\_ps\_set\_gpio\_pullup

Set the gpio pullup mask in deep sleep.

**Prototype :**

```
void nrc_ps_set_gpio_pullup(uint32_t bitmask)
```

**Input Parameters :**

bitmask

Type: uint32\_t

Purpose: Set bitmask of GPIO pullup value, as bits 0-31 (pulldown:0, pullup:1)

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 13.2.10 nrc\_ps\_add\_schedule

Add schedules to the deep sleep scheduler (NON TIM mode) timeout, whether to enable Wi-Fi, and callback function to execute when the scheduled time is reached. Current implementation can accept up to 4 individual schedules. Each individual schedule should have at least one minute apart in timeout. When adding schedule the callback should be able to finish in the time window.

**Prototype :**

```
nrc_err_t nrc_ps_add_schedule(uint32_t timeout, bool net_init, scheduled_callback func)
```

**Input Parameters :**

timeout

Type: uint32\_t

Purpose: Sleep duration in msec for this schedule

net\_init

Type: bool

Purpose: Whether callback will require Wi-Fi connection

func

Type: scheduled\_callback

Purpose: Scheduled callback function pointer defined as  
void (\*scheduled\_callback)()

**Returns :**

NRC\_SUCCESS, if the operation was successful.  
NRC\_FAIL, all other errors.

**13.2.11 nrc\_ps\_add\_gpio\_callback**

Add gpio exception callback to handle gpio interrupted wake up. This information will be added into retention memory and processed if gpio interrupt occurs. If net\_init is set to true, then Wi-Fi and network will be initialized.

**Prototype :**

```
nrc_err_t nrc_ps_add_gpio_callback(bool net_init, scheduled_callback func)
```

**Input Parameters :**

net\_init

Type:        bool

Purpose:      Whether callback will require Wi-Fi connection

func

Type:        scheduled\_callback

Purpose:      Scheduled\_callback function pointer defined as  
void (\*scheduled\_callback) ()

**Returns :**

NRC\_SUCCESS, if the operation was successful.  
NRC\_FAIL, all other errors.

**13.2.12 nrc\_ps\_start\_schedule**

Start the scheduled deep sleep configured using nrc\_ps\_add\_schedule.

**Prototype :**

```
nrc_err_t nrc_ps_start_schedule()
```

**Input Parameters :**

N/A

**Returns :**

NRC\_SUCCESS, if the operation was successful.  
NRC\_FAIL, all other errors.

**13.2.13 nrc\_ps\_resume\_deep\_sleep**

Command the device to go to deep sleep for remaining scheduled time. This function is used to sleep after none-scheduled wakeup such as GPIO interrupt.

**Prototype :**



void nrc\_ps\_resume\_deep\_sleep()

**Input Parameters :**

N/A

**Returns :**

None

# 14PBC (Push Button)

WPS-PBC for simple network configuration

## 14.1Data Type

These types are defined at the “sdk/inc/api\_pbc.h”.

### 14.1.1 pbc\_ops

pbc\_ops are a structure type.

Table 14.1 pbc\_ops

Name	Description
GPIO_PushButton	WPS-PBC GPIO for push button
nrc_wifi_wps_pbc_fail	WPS-PBC operation fail
nrc_wifi_wps_pbc_timeout	WPS-PBC operation timeout
nrc_wifi_wps_pbc_success	WPS-PBC operation success
nrc_wifi_wps_pbc_pressed	WPS-PBC operation press

## 14.2Function Call

The header file for PBC APIs is defined at the “sdk/inc/api\_pbc.h”.

### 14.2.1 wps\_pbc\_fail\_cb

This callback is called when WPS-PBC operation fail

**Prototype :**

static void wps\_pbc\_fail\_cb(void \*priv)

**Input Parameters :**

priv

Type:

void \*

Purpose:

A void pointer to private data

**Returns :**

NRC\_SUCCESS, if the operation was successful.

NRC\_FAIL, all other errors.

### 14.2.2 wps\_pbc\_timeout\_cb

This callback is called when there is no connection attempt for 120 second and timeout occurs.

**Prototype :**

```
void wps_pbc_timeout_cb (void *priv)
```

**Input Parameters :**

priv	Type:	void *
	Purpose:	A void pointer to private data

**Returns :**

N/A

### 14.2.3 wps\_pbc\_success\_cb

This callback is called when WPS-PBC operation success

**Prototype :**

```
static void wps_pbc_success_cb(void *priv, uint8_t *ssid, uint8_t ssid_len,
                               uint8_t security_mode, char *passphrase)
```

**Input Parameters :**

priv	Type:	void *
	Purpose:	A void pointer to private data
ssid	Type:	uint8_t
	Purpose:	SSID
ssid_len	Type:	uint8_t
	Purpose:	SSID length
security_mode	Type:	uint8_t
	Purpose:	Security mode (WIFI_SEC_OPEN=0, WIFI_SEC_WPA2=1, WIFI_SEC_WPA3_OWE=2, WIFI_SEC_WPA3_SAE=3)
Passphrase	Type:	char*
	Purpose:	WPA ASCII passphrase (ASCII passphrase must be between 8 and 63 characters)

**Returns :**

N/A

### 14.2.4 wps\_pbc\_button\_pressed\_event

This callback is invoked upon a button press, which triggers an interrupt on a registered GPIO pin. The interrupt enables swift response to the button press event.

**Prototype :**

```
void wps_pbc_button_pressed_event(int vector)
```

**Input Parameters :**

vector

Type:        int

Purpose:    GPIO pin number for wakeup when GPIO is enabled for wakeup source

**Returns :**

N/A

### 14.2.5 init\_wps\_pbc

Initialize WPS-PBC function

**Prototype :**

```
void init_wps_pbc(struct pbc_ops *ops)
```

**Input Parameters :**

ops

Type:        struct pbc\_ops \*

Purpose:    structure contains GPIO and callbacks

**Returns :**

N/A

## 15 Middleware API Reference

### 15.1 FreeRTOS

FreeRTOS is a market-leading real-time operating system (RTOS) for microcontrollers and small microprocessors.

- Official Website:
  - <https://www.freertos.org/RTOS.html>
- Online Documentation:
  - <https://www.freertos.org/features.html>
- Git Repository:
  - <https://github.com/FreeRTOS/FreeRTOS>

### 15.2 WPA\_supplicant

Wpa\_supplicant is a WPA Supplicant for Linux, BSD, Mac OS X, and Windows with support for WPA and WPA2 (IEEE 802.11i / RSN). Supplicant is the IEEE 802.1X/WPA component that is used in the client stations. It implements key negotiation with a WPA authenticator, and it controls the roaming and IEEE 802.11 authentication/association of the wlan driver.

- Official website:
  - [https://w1.fi/wpa\\_supplicant/](https://w1.fi/wpa_supplicant/)
- Online Documentation:
  - [https://w1.fi/wpa\\_supplicant/devel/](https://w1.fi/wpa_supplicant/devel/)
- GitHub Page:
  - [git clone git://w1.fi/srv/git/hostap.git](https://github.com/w1fi/wpa_supplicant)

### 15.3 lwIP

lwIP (lightweight IP) is a widely used open-source TCP/IP stack designed for embedded systems.

- Official Website:
  - <http://savannah.nongnu.org/projects/lwip>
- Online Documentation:
  - <http://www.nongnu.org/lwip>
- Git Repository:
  - <https://git.savannah.nongnu.org/git/lwip.git>

## 15.4 MbedTLS

MbedTLS is an implementation of the TLS and SSL protocols and the respective cryptographic algorithms and support code required.

- Official Website:
  - <https://tls.mbed.org>
- Online API Reference:
  - <https://tls.mbed.org/api>
- GitHub Page:
  - <https://github.com/ARMmbed/mbedtls>

## 15.5 NVS library

NVS library used for storing data values in the flash memory. Data are stored in a non-volatile manner, so it is remaining in the memory after power-out or reboot. This lib is inspired and based on [TridentTD ESP32NVS](#) work.

The NVS stored data in the form of key-value. Keys are ASCII strings, up to 15 characters. Values can have one of the following types:

- integer types: uint8\_t, int8\_t, uint16\_t, int16\_t, uint32\_t, int32\_t, uint64\_t, int64\_t
- zero-terminated string
- variable length binary data (blob)

Refer to the NVS ESP32 lib [original documentation](#) for a details about internal NVS lib organization.

## 16 Abbreviations

**Table 16.1    Abbreviations and acronyms**

Name	Description
IP	Internet Protocol
LwIP	Lightweight Internet Protocol
SDK	Software Development Kit
SDK	Software Development Kit
API	Application Programming Interface
EVB	Evaluation Board
AP	Access Point
STA	Station
SSID	Service Set Identifier
BSSID	Basic Service Set Identifier
RSSI	Received Signal Strength Indication
SNR	Signal-to-noise ratio
WPA2	Wi-Fi Protected Access 2
WPA3-SAE	Wi-Fi Protected Access 3 – Simultaneous Authentication of Equals
WPA3-OWE	Wi-Fi Protected Access 3 – Opportunistic Wireless Encryption
EAP	Extensible Authentication Protocol
TCP	Transmission Control Protocol
UDP	User Datagram Protocol
AID	Association ID
MAC	Medium Access Control
dBm	Decibel-milliwatts
S1G	Sub 1 GHz
HAL	Hardware Abstract Layer
ADC	Analog-to-Digital Converter
UART	Universal Asynchronous Receiver-Transmitter
PWM	Pulse-Width Modulation
SPI	Serial Peripheral Interface
TPC	Transmission Power Control
GPIO	General-purpose input/output
CPOL	Clock Polarity
CPHA	Clock Phase
TIM	Traffic Indication Map
NVS	Non-Volatile Storage

## 17 Revision history

Revision No	Date	Comments
Ver 1.0	11/01/2018	Initial version for customer release created
Ver 1.1	03/25/2019	APIs for Wi-Fi, Timer, ADC, and SPI updated
Ver 1.2	04/05/2019	APIs for Wi-Fi, Connection, Timer, I2C, ADC, SPI, PWM updated
Ver 1.3	07/02/2019	APIs for Wi-Fi, Connection updated
Ver 1.4	11/07/2019	Add HTTP Client API and FOTA API
Ver 1.5	07/05/2020	Add Serial Flash API
Ver 1.6	07/23/2020	Add Power save
Ver 1.7	08/20/2020	Add Wi-Fi BSSID setting. Change name 'nrc_wifi_add_network' and added 'nrc_wifi_remove_network'
Ver 1.8	11/20/2020	Add APIs for WIFI (GET: aid, bssid, country, channel, bw, security, device_mode, info, disassoc)
Ver 1.9	12/30/2020	Add APIs for System (bdf, cal, log_level)
Ver 2.0	01/14/2021	Update api_timer and api_i2c. Added wpa_supplicant and AWS IoT SDK in middleware api
Ver 2.1	03/17/2021	Add API for WIFI; nrc_wifi_abort_scan
Ver 3.0	07/26/2021	Update SDK return values
Ver 3.1	09/21/2021	Update pwm api
Ver 3.2	09/30/2021	Remove sflash api, Added NZ, AU channel table and NVS library
Ver 3.3	10/15/2021	Add APIs for WPS PBC
Ver 3.4	02/25/2022	Update power save and system api
Ver 3.5	03/01/2022	Add set tx_time api
Ver 3.6	03/01/2022	Update nrc_uart_console_enable() and remove nrc_uart_printf()
Ver 3.7	03/16/2022	Added Wi-Fi APIs—nrc_wifi_set_bss_max_idle(), nrc_wifi_set_mcs(), nrc_wifi_enable_duty_cycle(), nrc_wifi_disable_duty_cycle(), nrc_wifi_set_cca_threshold() Remove nrc_i2c_waitack()
Ver 3.8	04/01/2022	Updated i2c / spi structures and APIs Added nrc_wifi_get_scan_freq() Change name from nrc_spi_init() to nrc_spi_master_init() Added nrc_spi_init_cs()
Ver 3.9	06/06/2022	Remove nrc_wifi_set_bdf_use(), nrc_wifi_set_bdf_use()
Ver 4.0	08/18/2022	Update Wi-Fi
Ver 4.1	08/31/2022	Remove 'bit_order' in spi parameter. Only MSB order is supported
Ver 4.2	10/22/2022	Update JP channel. Added WIFI_FAIL_SOFTAP_NOSTA status. Added structure types (AP_INFO, STA_INFO, STA_LIST). Added Wi-Fi APIs(nrc_wifi_set_passive_scan, nrc_wifi_get_ap_info



		nrc_wifi_tx_available_duty_cycle, nrc_wifi_softap_disassociate, nrc_wifi_softap_deauthenticate, nrc_wifi_softap_get_sta_list, nrc_wifi_softap_get_sta_by_addr, nrc_wifi_softap_get_sta_num)
Ver 4.3	10/26/2022	Added deep sleep API's. void nrc_ps_set_gpio_direction(uint32_t bitmask) void nrc_ps_set_gpio_out(uint32_t bitmask) void nrc_ps_set_gpio_pullup(uint32_t bitmask) nrc_err_t nrc_ps_add_schedule(uint32_t timeout, bool net_init, scheduled_callback func) nrc_err_t nrc_ps_add_gpio_callback(bool net_init, scheduled_callback func) nrc_err_t nrc_ps_start_schedule() void nrc_ps_resume_deep_sleep() Added software reset api Added description about 'softAP can't support WPA3-SAE'
Ver 4.4	1/12/2023	[Added] nrc_adc_avg_sel(), nrc_gpio_register_interrupt_handler() nrc_gpio_trigger_config() [Modified] nrc_fota_erase(), wps_pbc_success_cb(), nrc_wifi_get_rate_control(), nrc_wifi_softap_disassociate(), nrc_wifi_get_rate_control() [Removed] nrc_wifi_set_cal_use(), nrc_wifi_get_cal_use(), wps_pbc_set_fail_cb(), wps_pbc_set_timeout_cb(), wps_pbc_set_success_cb(), wps_pbc_set_btn_pressed_cb()
Ver 4.5	2/09/2023	Change UART Interrupt Type
Ver 4.6	2/28/2023	Update bw parameter description of 'nrc_wifi_softap_set_conf' bw and added tx power type
Ver 4.7	3/17/2023	Update power save and system APIs. [Added] nrc_ps_wifi_tim_deep_sleep(), nrc_ps_sleep_alone() nrc_get_user_factory(), nrc_led_trx_init(), nrc_led_trx_deinit() [Removed] nrc_ps_wifi_modem_sleep_stop() Remove S1G channel chapter
Ver 4.8	6/26/2023	Update APIs [Added] nrc_wifi_scan_ssid(), nrc_wifi_unregister_event_handler(), nrc_wifi_stop_dhcp_client(), nrc_wifi_send_addba(), nrc_wifi_send_delba(), nrc_wifi_set_rf_power(), nrc_wifi_set_use_4address(), nrc_wifi_get_use_4address(), nrc_get_hw_version(), nrc_bcast_fota_init(), nrc_bcast_fota_set_mode(), nrc_bcast_fota_enable(), nrc_wifi_get_mcs(),

		<p>nrc_wifi_get_gi(), nrc_wifi_set_gi()</p> <p>[Removed]</p> <p>nrc_wifi_set_log_level(), nrc_wifi_get_log_level(), nrc_hw_timer_init(), nrc_hw_timer_deinit(), nrc_hw_timer_start(), nrc_hw_timer_stop(), nrc_hw_timer_clear_irq()</p> <p>[Updated]</p> <p>Data types : tWIFI_COUNTRY_CODE, STA State types</p> <p>Update parameters for nrc_wifi_softap_set_ip()</p>
Ver 4.9	8/31/2023	<p>Update type defines : Added 'VERSION_T'</p> <p>Update type defines : Removed 'ADC_AVRG' type</p> <p>Update APIs</p> <p>[Added]</p> <p>nrc_wifi_softap_get_hidden_ssid(), nrc_wifi_softap_set_hidden_ssid(), nrc_wifi_set_beacon_loss_detection(), nrc_wifi_get_scan_freq_nons1g(), nrc_wifi_set_scan_freq_nons1g(), nrc_wifi_get_average_rssi(), nrc_set_app_version(), nrc_get_app_version(), nrc_set_app_name(), nrc_get_app_name(), nrc_get_sdk_version(), nrc_wdt_enable(), nrc_wdt_disable, nrc_set_flash_device_info(), nrc_get_flash_device_info(), nrc_wifi_softap_get_max_num_sta(), nrc_wifi_softap_set_max_num_sta(), nrc_wifi_set_tx_aggr_auto(), nrc_wifi_set_beacon_loss_detection(), nrc_wifi_get_listen_interval(), nrc_wifi_set_listen_interval()</p> <p>[Updated]</p> <p>nrc_wifi_get_rssi(), nrc_wifi_get_snr() : Added vif_id in parameter wps_pbc_fail_cb(), wps_pbc_timeout_cb(), wps_pbc_success_cb() : Added void* parameters, nrc_wifi_get_tx_power(), nrc_wifi_get_mcs(): Added a vif_id parameter</p> <p>[Removed]</p> <p>nrc_adc_avrg_sel()</p> <p>Added a description about limitation about broadcast FOTA</p> <p>Added security in a SCAN_RESULT structure</p>
Ver 4.10	10/27/2023	<p>[Added]</p> <p>nrc_wifi_softap_get_beacon_interval(), nrc_wifi_softap_set_beacon_interval() nrc_wifi_get_mcs_info(), nrc_wifi_softap_get_ignore_broadcast_ssid(), nrc_wifi_softap_set_ignore_broadcast_ssid() nrc_get_user_data_area_size(), nrc_write_user_data(), nrc_read_user_data() tWIFI_IGNORE_BROADCAST_SSID type</p>

		<p>[Removed]</p> <p>nrc_wifi_softap_get_hidden_ssid(), nrc_wifi_softap_set_hidden_ssid()</p> <p>✕ hidden_ssid APIs are replaced by ignore_broadcast_ssid APIs</p> <p>Update description about nrc_ps_deep_sleep()</p>
--	--	---