

# IntegrationRoutines

5.0

Generated by Doxygen 1.8.5

Wed Jun 1 2022 12:08:42



# Contents

<b>1</b>	<b>Module Index</b>	<b>1</b>
1.1	Modules . . . . .	1
<b>2</b>	<b>Namespace Index</b>	<b>3</b>
2.1	Namespace List . . . . .	3
<b>3</b>	<b>Hierarchical Index</b>	<b>5</b>
3.1	Class Hierarchy . . . . .	5
<b>4</b>	<b>Data Structure Index</b>	<b>7</b>
4.1	Data Structures . . . . .	7
<b>5</b>	<b>File Index</b>	<b>11</b>
5.1	File List . . . . .	11
<b>6</b>	<b>Module Documentation</b>	<b>15</b>
6.1	Models . . . . .	15
6.1.1	Detailed Description . . . . .	15
6.2	Utils . . . . .	16
6.2.1	Detailed Description . . . . .	16
6.3	Integration . . . . .	17
6.3.1	Detailed Description . . . . .	18
6.3.2	Macro Definition Documentation . . . . .	18
6.3.2.1	CLASS . . . . .	18
6.3.2.2	MAKE_MESSAGE_CODE . . . . .	18
6.3.2.3	PATH . . . . .	18
6.4	GaussJackson . . . . .	19
6.4.1	Detailed Description . . . . .	20
6.5	Lsode . . . . .	21
6.5.1	Detailed Description . . . . .	25
6.5.2	Function Documentation . . . . .	25
6.5.2.1	allocate_arrays . . . . .	26
6.5.2.2	allocate_arrays . . . . .	26

6.5.2.3	<a href="#">calculate_epsilon</a>	26
6.5.2.4	<a href="#">calculate_integration_coefficients</a>	26
6.5.2.5	<a href="#">check_interface_data</a>	27
6.5.2.6	<a href="#">create_constructor</a>	27
6.5.2.7	<a href="#">create_copy</a>	27
6.5.2.8	<a href="#">create_copy</a>	27
6.5.2.9	<a href="#">create_copy</a>	28
6.5.2.10	<a href="#">create_copy</a>	28
6.5.2.11	<a href="#">create_copy</a>	28
6.5.2.12	<a href="#">create_first_order_ode_integrator</a>	28
6.5.2.13	<a href="#">create_generalized_deriv_second_order_ode_integrator</a>	28
6.5.2.14	<a href="#">create_integration_controls</a>	29
6.5.2.15	<a href="#">create_second_order_ode_integrator</a>	29
6.5.2.16	<a href="#">destroy_allocated_arrays</a>	29
6.5.2.17	<a href="#">destroy_allocated_arrays</a>	29
6.5.2.18	<a href="#">gauss_elim_factor</a>	30
6.5.2.19	<a href="#">index_of_max_magnitude</a>	30
6.5.2.20	<a href="#">integrate</a>	30
6.5.2.21	<a href="#">integrate</a>	30
6.5.2.22	<a href="#">integrate</a>	31
6.5.2.23	<a href="#">integrate</a>	31
6.5.2.24	<a href="#">integrator_compute_new_order</a>	32
6.5.2.25	<a href="#">integrator_compute_new_order_check_step_error</a>	32
6.5.2.26	<a href="#">integrator_compute_new_order_prep</a>	32
6.5.2.27	<a href="#">integrator_core</a>	33
6.5.2.28	<a href="#">integrator_corrector_converged</a>	34
6.5.2.29	<a href="#">integrator_corrector_failed_part1</a>	34
6.5.2.30	<a href="#">integrator_corrector_failed_part2</a>	34
6.5.2.31	<a href="#">integrator_corrector_iteration</a>	35
6.5.2.32	<a href="#">integrator_error_test_failed</a>	35
6.5.2.33	<a href="#">integrator_fail_reset_order_1_part1</a>	35
6.5.2.34	<a href="#">integrator_fail_reset_order_1_part2</a>	36
6.5.2.35	<a href="#">integrator_predict</a>	36
6.5.2.36	<a href="#">integrator_reset_iteration_loop_part1</a>	36
6.5.2.37	<a href="#">integrator_reset_iteration_loop_part2</a>	37
6.5.2.38	<a href="#">integrator_reset_method_coeffs</a>	37
6.5.2.39	<a href="#">integrator_reset_yh</a>	37
6.5.2.40	<a href="#">integrator_set_new_order</a>	37
6.5.2.41	<a href="#">integrator_terminate</a>	38
6.5.2.42	<a href="#">integrator_test_stepsize_change</a>	38

6.5.2.43	<a href="#">integrator_wrapup</a>	38
6.5.2.44	<a href="#">interpolate_y</a>	38
6.5.2.45	<a href="#">jacobian_prep_init</a>	39
6.5.2.46	<a href="#">jacobian_prep_loop</a>	40
6.5.2.47	<a href="#">jacobian_prep_wrap_up</a>	40
6.5.2.48	<a href="#">linear_chord_iteration</a>	41
6.5.2.49	<a href="#">linear_solver</a>	41
6.5.2.50	<a href="#">load_derivatives</a>	41
6.5.2.51	<a href="#">load_ew_values</a>	41
6.5.2.52	<a href="#">LsodeControlDataInterface</a>	42
6.5.2.53	<a href="#">LsodeControlDataInterface</a>	42
6.5.2.54	<a href="#">LsodeDataArrays</a>	42
6.5.2.55	<a href="#">LsodeDataJacobianPrep</a>	42
6.5.2.56	<a href="#">LsodeDataStode</a>	42
6.5.2.57	<a href="#">LsodeFirstOrderODEIntegrator</a>	42
6.5.2.58	<a href="#">LsodeFirstOrderODEIntegrator</a>	42
6.5.2.59	<a href="#">LsodeGeneralizedDerivSecondOrderODEIntegrator</a>	43
6.5.2.60	<a href="#">LsodeGeneralizedDerivSecondOrderODEIntegrator</a>	43
6.5.2.61	<a href="#">LsodeGeneralizedDerivSecondOrderODEIntegrator</a>	43
6.5.2.62	<a href="#">LsodeIntegrationControls</a>	43
6.5.2.63	<a href="#">LsodeIntegrationControls</a>	43
6.5.2.64	<a href="#">LsodeIntegratorConstructor</a>	43
6.5.2.65	<a href="#">LsodeSecondOrderODEIntegrator</a>	43
6.5.2.66	<a href="#">LsodeSecondOrderODEIntegrator</a>	43
6.5.2.67	<a href="#">LsodeSecondOrderODEIntegrator</a>	44
6.5.2.68	<a href="#">LsodeSimpleSecondOrderODEIntegrator</a>	44
6.5.2.69	<a href="#">LsodeSimpleSecondOrderODEIntegrator</a>	44
6.5.2.70	<a href="#">magnitude_of_weighted_array</a>	44
6.5.2.71	<a href="#">magnitude_of_weighted_array</a>	45
6.5.2.72	<a href="#">manager_check_stop_conditions</a>	45
6.5.2.73	<a href="#">manager_initialize_calculation_part1</a>	45
6.5.2.74	<a href="#">manager_initialize_calculation_part2</a>	45
6.5.2.75	<a href="#">manager_integration_loop_part1</a>	46
6.5.2.76	<a href="#">manager_integration_loop_part2</a>	46
6.5.2.77	<a href="#">manager_integration_loop_part3</a>	46
6.5.2.78	<a href="#">manager_set_calculation_phase_eq_2_reload</a>	46
6.5.2.79	<a href="#">process_entry_point_cycle_start</a>	47
6.5.2.80	<a href="#">reset_integrator</a>	47
6.5.2.81	<a href="#">set_abs_tol</a>	47
6.5.2.82	<a href="#">set_rel_tol</a>	47

6.5.2.83	<a href="#">update_control_data</a>	47
6.5.2.84	<a href="#">~LsodeFirstOrderODEIntegrator</a>	48
6.5.2.85	<a href="#">~LsodeGeneralizedDerivSecondOrderODEIntegrator</a>	48
6.5.2.86	<a href="#">~LsodeSecondOrderODEIntegrator</a>	48
<b>7</b>	<b>Namespace Documentation</b>	<b>49</b>
7.1	<a href="#">er7_utils Namespace Reference</a>	49
7.1.1	<a href="#">Detailed Description</a>	49
7.2	<a href="#">jeod Namespace Reference</a>	49
7.2.1	<a href="#">Detailed Description</a>	52
7.2.2	<a href="#">Typedef Documentation</a>	52
7.2.2.1	<a href="#">GaussJacksonIntegratorBaseFirst</a>	52
7.2.2.2	<a href="#">GaussJacksonIntegratorBaseSecond</a>	52
7.2.3	<a href="#">Function Documentation</a>	52
7.2.3.1	<a href="#">cast_to_gj_controls</a>	52
7.2.3.2	<a href="#">operator&lt;&lt;</a>	52
7.2.3.3	<a href="#">set_default_config_values</a>	52
7.2.3.4	<a href="#">validate_config</a>	53
<b>8</b>	<b>Data Structure Documentation</b>	<b>55</b>
8.1	<a href="#">er7_utils::DoubleTwoDArray Class Reference</a>	55
8.1.1	<a href="#">Detailed Description</a>	55
8.1.2	<a href="#">Friends And Related Function Documentation</a>	55
8.1.2.1	<a href="#">init_attrer7_utils__DoubleTwoDArray</a>	55
8.1.2.2	<a href="#">InputProcessor</a>	55
8.2	<a href="#">jeod::GaussJacksonCoefficientsPair Class Reference</a>	56
8.2.1	<a href="#">Detailed Description</a>	56
8.2.2	<a href="#">Constructor &amp; Destructor Documentation</a>	57
8.2.2.1	<a href="#">GaussJacksonCoefficientsPair</a>	57
8.2.2.2	<a href="#">~GaussJacksonCoefficientsPair</a>	57
8.2.2.3	<a href="#">GaussJacksonCoefficientsPair</a>	57
8.2.3	<a href="#">Member Function Documentation</a>	57
8.2.3.1	<a href="#">allocate_arrays</a>	57
8.2.3.2	<a href="#">apply</a>	57
8.2.3.3	<a href="#">apply</a>	58
8.2.3.4	<a href="#">configure</a>	59
8.2.3.5	<a href="#">deallocate_arrays</a>	59
8.2.3.6	<a href="#">operator=</a>	59
8.2.3.7	<a href="#">print</a>	59
8.2.3.8	<a href="#">swap</a>	59
8.2.4	<a href="#">Friends And Related Function Documentation</a>	60

8.2.4.1	<a href="#">init_attrjeod__GaussJacksonCoefficientsPair</a>	60
8.2.4.2	<a href="#">InputProcessor</a>	60
8.2.5	<a href="#">Field Documentation</a>	60
8.2.5.1	<a href="#">gj_coefs</a>	60
8.2.5.2	<a href="#">sa_coefs</a>	60
8.3	<a href="#">jeod::GaussJacksonCoeffs Class Reference</a>	60
8.3.1	<a href="#">Detailed Description</a>	61
8.3.2	<a href="#">Constructor &amp; Destructor Documentation</a>	61
8.3.2.1	<a href="#">GaussJacksonCoeffs</a>	61
8.3.2.2	<a href="#">GaussJacksonCoeffs</a>	61
8.3.2.3	<a href="#">~GaussJacksonCoeffs</a>	62
8.3.3	<a href="#">Member Function Documentation</a>	62
8.3.3.1	<a href="#">compute_coeffs</a>	62
8.3.3.2	<a href="#">configure</a>	62
8.3.3.3	<a href="#">operator=</a>	62
8.3.3.4	<a href="#">swap</a>	63
8.3.4	<a href="#">Friends And Related Function Documentation</a>	63
8.3.4.1	<a href="#">init_attrjeod__GaussJacksonCoeffs</a>	63
8.3.4.2	<a href="#">InputProcessor</a>	63
8.3.4.3	<a href="#">operator&lt;&lt;</a>	63
8.3.5	<a href="#">Field Documentation</a>	63
8.3.5.1	<a href="#">corrector</a>	63
8.3.5.2	<a href="#">max_order</a>	63
8.3.5.3	<a href="#">order</a>	63
8.3.5.4	<a href="#">predictor</a>	64
8.4	<a href="#">jeod::GaussJacksonConfig Class Reference</a>	64
8.4.1	<a href="#">Detailed Description</a>	65
8.4.2	<a href="#">Member Function Documentation</a>	65
8.4.2.1	<a href="#">default_configuration</a>	65
8.4.2.2	<a href="#">standard_configuration</a>	65
8.4.2.3	<a href="#">validate_configuration</a>	65
8.4.3	<a href="#">Friends And Related Function Documentation</a>	65
8.4.3.1	<a href="#">init_attrjeod__GaussJacksonConfig</a>	65
8.4.3.2	<a href="#">InputProcessor</a>	65
8.4.4	<a href="#">Field Documentation</a>	66
8.4.4.1	<a href="#">absolute_tolerance</a>	66
8.4.4.2	<a href="#">final_order</a>	66
8.4.4.3	<a href="#">initial_order</a>	66
8.4.4.4	<a href="#">max_correction_iterations</a>	66
8.4.4.5	<a href="#">ndoubling_steps</a>	66

8.4.4.6	<a href="#">priming_technique</a>	67
8.4.4.7	<a href="#">relative_tolerance</a>	67
8.5	<a href="#">jeod::GaussJacksonFirstOrderODEIntegrator Class Reference</a>	67
8.5.1	<a href="#">Detailed Description</a>	68
8.5.2	<a href="#">Constructor &amp; Destructor Documentation</a>	68
8.5.2.1	<a href="#">GaussJacksonFirstOrderODEIntegrator</a>	68
8.5.2.2	<a href="#">GaussJacksonFirstOrderODEIntegrator</a>	68
8.5.2.3	<a href="#">~GaussJacksonFirstOrderODEIntegrator</a>	68
8.5.3	<a href="#">Member Function Documentation</a>	68
8.5.3.1	<a href="#">create_copy</a>	68
8.5.3.2	<a href="#">integrate</a>	69
8.5.3.3	<a href="#">JEOD_MAKE_SIM_INTERFACES</a>	69
8.5.3.4	<a href="#">operator=</a>	69
8.5.3.5	<a href="#">reset_integrator</a>	69
8.5.3.6	<a href="#">swap</a>	69
8.6	<a href="#">jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator Class Reference</a>	69
8.6.1	<a href="#">Detailed Description</a>	71
8.6.2	<a href="#">Constructor &amp; Destructor Documentation</a>	71
8.6.2.1	<a href="#">GaussJacksonGeneralizedDerivSecondOrderODEIntegrator</a>	71
8.6.2.2	<a href="#">GaussJacksonGeneralizedDerivSecondOrderODEIntegrator</a>	71
8.6.2.3	<a href="#">GaussJacksonGeneralizedDerivSecondOrderODEIntegrator</a>	71
8.6.2.4	<a href="#">~GaussJacksonGeneralizedDerivSecondOrderODEIntegrator</a>	71
8.6.3	<a href="#">Member Function Documentation</a>	71
8.6.3.1	<a href="#">create_copy</a>	72
8.6.3.2	<a href="#">integrate</a>	72
8.6.3.3	<a href="#">operator=</a>	72
8.6.3.4	<a href="#">reset_integrator</a>	72
8.6.3.5	<a href="#">swap</a>	72
8.6.4	<a href="#">Friends And Related Function Documentation</a>	72
8.6.4.1	<a href="#">init_attrjeod__GaussJacksonGeneralizedDerivSecondOrderODEIntegrator</a>	72
8.6.4.2	<a href="#">InputProcessor</a>	72
8.6.5	<a href="#">Field Documentation</a>	72
8.6.5.1	<a href="#">pos_integrator</a>	73
8.6.5.2	<a href="#">posdot</a>	73
8.6.5.3	<a href="#">posdotdot</a>	73
8.6.5.4	<a href="#">vel_integrator</a>	73
8.7	<a href="#">jeod::GaussJacksonIntegrationControls Class Reference</a>	73
8.7.1	<a href="#">Detailed Description</a>	75
8.7.2	<a href="#">Constructor &amp; Destructor Documentation</a>	75
8.7.2.1	<a href="#">GaussJacksonIntegrationControls</a>	75



8.7.2.2	<a href="#">GaussJacksonIntegrationControls</a>	75
8.7.2.3	<a href="#">GaussJacksonIntegrationControls</a>	76
8.7.2.4	<a href="#">~GaussJacksonIntegrationControls</a>	76
8.7.3	<a href="#">Member Function Documentation</a>	76
8.7.3.1	<a href="#">create_copy</a>	76
8.7.3.2	<a href="#">get_coeff</a>	76
8.7.3.3	<a href="#">get_config</a>	76
8.7.3.4	<a href="#">get_priming_controls</a>	77
8.7.3.5	<a href="#">get_state_machine</a>	77
8.7.3.6	<a href="#">integrate</a>	77
8.7.3.7	<a href="#">integrate_edit</a>	78
8.7.3.8	<a href="#">integrate_gj</a>	78
8.7.3.9	<a href="#">operator=</a>	78
8.7.3.10	<a href="#">reset_integrator</a>	78
8.7.3.11	<a href="#">start_cycle</a>	78
8.7.3.12	<a href="#">swap</a>	79
8.7.4	<a href="#">Friends And Related Function Documentation</a>	79
8.7.4.1	<a href="#">init_attrjeod__GaussJacksonIntegrationControls</a>	79
8.7.4.2	<a href="#">InputProcessor</a>	79
8.7.5	<a href="#">Field Documentation</a>	79
8.7.5.1	<a href="#">at_end_of_tour</a>	79
8.7.5.2	<a href="#">coeff</a>	79
8.7.5.3	<a href="#">config</a>	80
8.7.5.4	<a href="#">cycle_dyndt</a>	80
8.7.5.5	<a href="#">cycle_simdt</a>	80
8.7.5.6	<a href="#">cycle_starttime</a>	80
8.7.5.7	<a href="#">edit_count</a>	80
8.7.5.8	<a href="#">fsm_state</a>	80
8.7.5.9	<a href="#">initial_order</a>	80
8.7.5.10	<a href="#">max_correction_iterations</a>	81
8.7.5.11	<a href="#">order</a>	81
8.7.5.12	<a href="#">priming_controls</a>	81
8.7.5.13	<a href="#">reset_time</a>	81
8.7.5.14	<a href="#">state_machine</a>	81
8.8	<a href="#">jeod::GaussJacksonIntegratorBase&lt; State, Primer &gt; Class Template Reference</a>	82
8.8.1	<a href="#">Detailed Description</a>	85
8.8.2	<a href="#">Constructor &amp; Destructor Documentation</a>	86
8.8.2.1	<a href="#">GaussJacksonIntegratorBase</a>	86
8.8.2.2	<a href="#">GaussJacksonIntegratorBase</a>	86
8.8.2.3	<a href="#">GaussJacksonIntegratorBase</a>	86

8.8.2.4	<a href="#">~GaussJacksonIntegratorBase</a>	87
8.8.3	Member Function Documentation	87
8.8.3.1	<a href="#">advance_edit_integration_constants</a>	87
8.8.3.2	<a href="#">advance_edit_integration_constants</a>	87
8.8.3.3	<a href="#">advance_edit_integration_constants</a>	87
8.8.3.4	<a href="#">advance_predictor_integration_constants</a>	87
8.8.3.5	<a href="#">advance_predictor_integration_constants</a>	87
8.8.3.6	<a href="#">advance_predictor_integration_constants</a>	88
8.8.3.7	<a href="#">allocate_state_contents</a>	89
8.8.3.8	<a href="#">allocate_state_contents</a>	89
8.8.3.9	<a href="#">allocate_state_contents</a>	89
8.8.3.10	<a href="#">base_integrate</a>	89
8.8.3.11	<a href="#">base_reset</a>	90
8.8.3.12	<a href="#">correct</a>	90
8.8.3.13	<a href="#">correct</a>	90
8.8.3.14	<a href="#">correct</a>	90
8.8.3.15	<a href="#">create_primer</a>	90
8.8.3.16	<a href="#">create_primer</a>	91
8.8.3.17	<a href="#">create_primer</a>	91
8.8.3.18	<a href="#">deallocate_state_contents</a>	91
8.8.3.19	<a href="#">deallocate_state_contents</a>	91
8.8.3.20	<a href="#">deallocate_state_contents</a>	91
8.8.3.21	<a href="#">downsample_hist</a>	91
8.8.3.22	<a href="#">edit_point</a>	92
8.8.3.23	<a href="#">initialize_edit_integration_constants</a>	92
8.8.3.24	<a href="#">initialize_edit_integration_constants</a>	92
8.8.3.25	<a href="#">initialize_edit_integration_constants</a>	92
8.8.3.26	<a href="#">initialize_predictor_integration_constants</a>	93
8.8.3.27	<a href="#">initialize_predictor_integration_constants</a>	93
8.8.3.28	<a href="#">initialize_predictor_integration_constants</a>	93
8.8.3.29	<a href="#">integrate_gj</a>	93
8.8.3.30	<a href="#">integrate_primer</a>	94
8.8.3.31	<a href="#">integrate_primer</a>	94
8.8.3.32	<a href="#">integrate_primer</a>	94
8.8.3.33	<a href="#">mid_correct</a>	94
8.8.3.34	<a href="#">mid_correct</a>	94
8.8.3.35	<a href="#">mid_correct</a>	94
8.8.3.36	<a href="#">operator=</a>	95
8.8.3.37	<a href="#">predict</a>	95
8.8.3.38	<a href="#">predict</a>	95

8.8.3.39	predict	95
8.8.3.40	replicate_primer	95
8.8.3.41	replicate_primer	95
8.8.3.42	replicate_primer	96
8.8.3.43	replicate_state	97
8.8.3.44	replicate_state	97
8.8.3.45	replicate_state	97
8.8.3.46	rotate_acc_hist	97
8.8.3.47	save_comparison_data	97
8.8.3.48	save_comparison_data	98
8.8.3.49	save_comparison_data	98
8.8.3.50	save_epoch_data	98
8.8.3.51	save_epoch_data	98
8.8.3.52	save_epoch_data	98
8.8.3.53	start_cycle	98
8.8.3.54	swap	99
8.8.3.55	swap_state	99
8.8.3.56	swap_state	100
8.8.3.57	swap_state	100
8.8.3.58	test_for_convergence	100
8.8.3.59	test_for_convergence	100
8.8.3.60	test_for_convergence	100
8.8.4	Field Documentation	100
8.8.4.1	absolute_tolerance	100
8.8.4.2	acc_hist	101
8.8.4.3	coeff	101
8.8.4.4	corrector_sum	101
8.8.4.5	delinv	101
8.8.4.6	fsm_state	101
8.8.4.7	history_length	102
8.8.4.8	init_state	102
8.8.4.9	initial_order	102
8.8.4.10	max_history_size	102
8.8.4.11	order	102
8.8.4.12	pos_hist	103
8.8.4.13	position_corrector	103
8.8.4.14	primer	103
8.8.4.15	relative_tolerance	103
8.8.4.16	size	104
8.8.4.17	state_machine	104

8.8.4.18	<a href="#">velocity_corrector</a>	104
8.9	<a href="#">jeod::GaussJacksonIntegratorConstructor Class Reference</a>	104
8.9.1	<a href="#">Detailed Description</a>	106
8.9.2	<a href="#">Constructor &amp; Destructor Documentation</a>	106
8.9.2.1	<a href="#">GaussJacksonIntegratorConstructor</a>	106
8.9.2.2	<a href="#">GaussJacksonIntegratorConstructor</a>	106
8.9.2.3	<a href="#">~GaussJacksonIntegratorConstructor</a>	106
8.9.3	<a href="#">Member Function Documentation</a>	106
8.9.3.1	<a href="#">configure</a>	106
8.9.3.2	<a href="#">configure</a>	107
8.9.3.3	<a href="#">create_constructor</a>	107
8.9.3.4	<a href="#">create_copy</a>	107
8.9.3.5	<a href="#">create_first_order_ode_integrator</a>	107
8.9.3.6	<a href="#">create_generalized_deriv_second_order_ode_integrator</a>	108
8.9.3.7	<a href="#">create_integration_controls</a>	108
8.9.3.8	<a href="#">create_second_order_ode_integrator</a>	108
8.9.3.9	<a href="#">get_buffer_size</a>	109
8.9.3.10	<a href="#">get_class_name</a>	109
8.9.3.11	<a href="#">get_transition_table_size</a>	109
8.9.3.12	<a href="#">implements</a>	109
8.9.3.13	<a href="#">operator=</a>	109
8.9.3.14	<a href="#">provides</a>	109
8.9.3.15	<a href="#">swap</a>	110
8.9.4	<a href="#">Friends And Related Function Documentation</a>	110
8.9.4.1	<a href="#">init_attrjeod__GaussJacksonIntegratorConstructor</a>	110
8.9.4.2	<a href="#">InputProcessor</a>	110
8.9.5	<a href="#">Field Documentation</a>	110
8.9.5.1	<a href="#">config</a>	110
8.9.5.2	<a href="#">priming_constructor</a>	110
8.10	<a href="#">jeod::GaussJacksonOneState Class Reference</a>	110
8.10.1	<a href="#">Detailed Description</a>	111
8.10.2	<a href="#">Constructor &amp; Destructor Documentation</a>	111
8.10.2.1	<a href="#">GaussJacksonOneState</a>	111
8.10.2.2	<a href="#">GaussJacksonOneState</a>	111
8.10.3	<a href="#">Friends And Related Function Documentation</a>	111
8.10.3.1	<a href="#">init_attrjeod__GaussJacksonOneState</a>	111
8.10.3.2	<a href="#">InputProcessor</a>	111
8.10.4	<a href="#">Field Documentation</a>	111
8.10.4.1	<a href="#">first</a>	111
8.11	<a href="#">jeod::GaussJacksonRationalCoefficients Class Reference</a>	112

8.11.1	Detailed Description	113
8.11.2	Constructor & Destructor Documentation	113
8.11.2.1	GaussJacksonRationalCoefficients	113
8.11.3	Member Function Documentation	113
8.11.3.1	configure_adams_corrector	113
8.11.3.2	construct_predictor	113
8.11.3.3	construct_stormer_cowell_corrector	113
8.11.3.4	convert_to_ordinate_form	114
8.11.3.5	discard_extra_terms	114
8.11.3.6	displace_back	114
8.11.4	Friends And Related Function Documentation	114
8.11.4.1	init_attrjeod__GaussJacksonRationalCoefficients	114
8.11.4.2	InputProcessor	114
8.11.5	Field Documentation	114
8.11.5.1	coefficients	114
8.12	jeod::GaussJacksonSimpleSecondOrderODEIntegrator Class Reference	115
8.12.1	Detailed Description	116
8.12.2	Constructor & Destructor Documentation	116
8.12.2.1	GaussJacksonSimpleSecondOrderODEIntegrator	116
8.12.2.2	GaussJacksonSimpleSecondOrderODEIntegrator	116
8.12.2.3	GaussJacksonSimpleSecondOrderODEIntegrator	116
8.12.2.4	~GaussJacksonSimpleSecondOrderODEIntegrator	116
8.12.3	Member Function Documentation	117
8.12.3.1	create_copy	117
8.12.3.2	integrate	117
8.12.3.3	operator=	117
8.12.3.4	reset_integrator	117
8.12.3.5	swap	118
8.12.4	Friends And Related Function Documentation	119
8.12.4.1	init_attrjeod__GaussJacksonSimpleSecondOrderODEIntegrator	119
8.12.4.2	InputProcessor	119
8.13	jeod::GaussJacksonStateMachine Class Reference	119
8.13.1	Detailed Description	121
8.13.2	Member Enumeration Documentation	122
8.13.2.1	FsmState	122
8.13.3	Constructor & Destructor Documentation	122
8.13.3.1	GaussJacksonStateMachine	122
8.13.4	Member Function Documentation	122
8.13.4.1	configure	122
8.13.4.2	exit_bootstrap_edit	122

8.13.4.3	<a href="#">exit_bootstrap_step</a>	122
8.13.4.4	<a href="#">exit_priming</a>	123
8.13.4.5	<a href="#">get_at_downsample</a>	123
8.13.4.6	<a href="#">get_at_end_of_tour</a>	123
8.13.4.7	<a href="#">get_at_order_change</a>	123
8.13.4.8	<a href="#">get_at_reinitialize</a>	123
8.13.4.9	<a href="#">get_current_order</a>	123
8.13.4.10	<a href="#">get_cycle_scale</a>	124
8.13.4.11	<a href="#">get_cycle_start_time</a>	124
8.13.4.12	<a href="#">get_fsm_state</a>	124
8.13.4.13	<a href="#">get_history_length</a>	124
8.13.4.14	<a href="#">get_max_history_size</a>	124
8.13.4.15	<a href="#">perform_step</a>	124
8.13.4.16	<a href="#">reset</a>	125
8.13.4.17	<a href="#">set_bootstrap_edit_redo_needed</a>	125
8.13.4.18	<a href="#">state_name</a>	125
8.13.4.19	<a href="#">transition_state</a>	125
8.13.5	<a href="#">Friends And Related Function Documentation</a>	125
8.13.5.1	<a href="#">init_attrjeod__GaussJacksonStateMachine</a>	125
8.13.5.2	<a href="#">InputProcessor</a>	125
8.13.6	<a href="#">Field Documentation</a>	125
8.13.6.1	<a href="#">at_downsample</a>	125
8.13.6.2	<a href="#">at_end_of_tour</a>	126
8.13.6.3	<a href="#">at_order_change</a>	126
8.13.6.4	<a href="#">at_reinitialize</a>	126
8.13.6.5	<a href="#">bootstrap_edit_redo_needed</a>	126
8.13.6.6	<a href="#">correction_iterations</a>	126
8.13.6.7	<a href="#">current_order</a>	126
8.13.6.8	<a href="#">cycle_scale</a>	127
8.13.6.9	<a href="#">cycle_start_time</a>	127
8.13.6.10	<a href="#">final_order</a>	127
8.13.6.11	<a href="#">fsm_state</a>	127
8.13.6.12	<a href="#">history_length</a>	127
8.13.6.13	<a href="#">history_size</a>	127
8.13.6.14	<a href="#">initial_order</a>	128
8.13.6.15	<a href="#">max_correction_iterations</a>	128
8.13.6.16	<a href="#">max_history_size</a>	128
8.13.6.17	<a href="#">ndoubling_steps</a>	128
8.13.6.18	<a href="#">scale_factor</a>	128
8.13.6.19	<a href="#">step_increment</a>	128

8.13.6.20	<a href="#">steps_since_reset</a>	129
8.13.6.21	<a href="#">tour_count</a>	129
8.14	<a href="#">jeod::GaussJacksonTwoState Class Reference</a>	129
8.14.1	<a href="#">Detailed Description</a>	129
8.14.2	<a href="#">Constructor &amp; Destructor Documentation</a>	130
8.14.2.1	<a href="#">GaussJacksonTwoState</a>	130
8.14.2.2	<a href="#">GaussJacksonTwoState</a>	130
8.14.3	<a href="#">Friends And Related Function Documentation</a>	130
8.14.3.1	<a href="#">init_attrjeod__GaussJacksonTwoState</a>	130
8.14.3.2	<a href="#">InputProcessor</a>	130
8.14.4	<a href="#">Field Documentation</a>	130
8.14.4.1	<a href="#">first</a>	130
8.14.4.2	<a href="#">second</a>	130
8.15	<a href="#">jeod::GeneralizedSecondOrderODETechnique Class Reference</a>	131
8.15.1	<a href="#">Detailed Description</a>	131
8.15.2	<a href="#">Member Enumeration Documentation</a>	131
8.15.2.1	<a href="#">TechniqueType</a>	131
8.15.3	<a href="#">Constructor &amp; Destructor Documentation</a>	132
8.15.3.1	<a href="#">GeneralizedSecondOrderODETechnique</a>	132
8.15.3.2	<a href="#">GeneralizedSecondOrderODETechnique</a>	132
8.15.3.3	<a href="#">~GeneralizedSecondOrderODETechnique</a>	132
8.15.4	<a href="#">Member Function Documentation</a>	132
8.15.4.1	<a href="#">is_provided_by</a>	132
8.15.4.2	<a href="#">operator=</a>	132
8.15.4.3	<a href="#">validate_technique</a>	133
8.16	<a href="#">jeod::IntegrationMessages Class Reference</a>	133
8.16.1	<a href="#">Detailed Description</a>	134
8.16.2	<a href="#">Constructor &amp; Destructor Documentation</a>	134
8.16.2.1	<a href="#">IntegrationMessages</a>	134
8.16.2.2	<a href="#">IntegrationMessages</a>	134
8.16.3	<a href="#">Member Function Documentation</a>	134
8.16.3.1	<a href="#">operator=</a>	134
8.16.4	<a href="#">Friends And Related Function Documentation</a>	134
8.16.4.1	<a href="#">init_attrjeod__IntegrationMessages</a>	134
8.16.4.2	<a href="#">InputProcessor</a>	134
8.16.5	<a href="#">Field Documentation</a>	134
8.16.5.1	<a href="#">information</a>	134
8.16.5.2	<a href="#">internal_error</a>	135
8.16.5.3	<a href="#">invalid_item</a>	135
8.16.5.4	<a href="#">invalid_request</a>	135

8.16.5.5	<code>unsupported_option</code>	135
8.17	<code>jeod::JeodIntegrationGroup</code> Class Reference	135
8.17.1	Detailed Description	137
8.17.2	Constructor & Destructor Documentation	137
8.17.2.1	<code>JeodIntegrationGroup</code>	137
8.17.2.2	<code>JeodIntegrationGroup</code>	137
8.17.2.3	<code>~JeodIntegrationGroup</code>	138
8.17.2.4	<code>JeodIntegrationGroup</code>	138
8.17.3	Member Function Documentation	138
8.17.3.1	<code>add_integrable_object</code>	138
8.17.3.2	<code>initialize_group</code>	138
8.17.3.3	<code>integrate_bodies</code>	138
8.17.3.4	<code>integrate_container</code>	139
8.17.3.5	<code>merge_integrator_result</code>	139
8.17.3.6	<code>need_first_step_derivatives</code>	139
8.17.3.7	<code>operator=</code>	140
8.17.3.8	<code>register_classes</code>	140
8.17.3.9	<code>remove_integrable_object</code>	140
8.17.3.10	<code>reset_body_integrators</code>	140
8.17.3.11	<code>reset_container</code>	140
8.17.3.12	<code>respond_to_time_change</code>	140
8.17.3.13	<code>update_from_owner</code>	141
8.17.4	Friends And Related Function Documentation	141
8.17.4.1	<code>init_attrjeod__JeodIntegrationGroup</code>	141
8.17.4.2	<code>InputProcessor</code>	141
8.17.5	Field Documentation	141
8.17.5.1	<code>group_owner</code>	141
8.17.5.2	<code>integ_merger</code>	141
8.17.5.3	<code>integrable_objects</code>	141
8.17.5.4	<code>jeod_integ_interface</code>	141
8.17.5.5	<code>jeod_time_manager</code>	142
8.18	<code>jeod::JeodIntegrationGroupOwner</code> Class Reference	142
8.18.1	Detailed Description	142
8.18.2	Constructor & Destructor Documentation	142
8.18.2.1	<code>~JeodIntegrationGroupOwner</code>	142
8.18.3	Member Function Documentation	142
8.18.3.1	<code>update_integration_group</code>	142
8.19	<code>jeod::JeodIntegrationTime</code> Class Reference	143
8.19.1	Detailed Description	144
8.19.2	Constructor & Destructor Documentation	144



8.19.2.1	<a href="#">JeodIntegrationTime</a>	144
8.19.2.2	<a href="#">~JeodIntegrationTime</a>	144
8.19.2.3	<a href="#">JeodIntegrationTime</a>	144
8.19.3	<a href="#">Member Function Documentation</a>	144
8.19.3.1	<a href="#">add_time_change_subscriber</a>	144
8.19.3.2	<a href="#">get_timestamp_time</a>	144
8.19.3.3	<a href="#">notify_time_change_subscribers</a>	144
8.19.3.4	<a href="#">operator=</a>	145
8.19.3.5	<a href="#">remove_time_change_subscriber</a>	145
8.19.4	<a href="#">Friends And Related Function Documentation</a>	145
8.19.4.1	<a href="#">init_attrjeod__JeodIntegrationTime</a>	145
8.19.4.2	<a href="#">InputProcessor</a>	145
8.19.5	<a href="#">Field Documentation</a>	145
8.19.5.1	<a href="#">time_change_subscribers</a>	145
8.20	<a href="#">jeod::LsodeControlDataInterface Class Reference</a>	145
8.20.1	<a href="#">Detailed Description</a>	147
8.20.2	<a href="#">Member Enumeration Documentation</a>	147
8.20.2.1	<a href="#">CorrectorMethod</a>	147
8.20.2.2	<a href="#">ErrorControlIndicator</a>	148
8.20.2.3	<a href="#">IntegrationMethod</a>	148
8.20.3	<a href="#">Constructor &amp; Destructor Documentation</a>	148
8.20.3.1	<a href="#">~LsodeControlDataInterface</a>	148
8.20.4	<a href="#">Member Function Documentation</a>	148
8.20.4.1	<a href="#">is_corrector_method_functional_iteration</a>	148
8.20.4.2	<a href="#">operator=</a>	148
8.20.5	<a href="#">Friends And Related Function Documentation</a>	148
8.20.5.1	<a href="#">init_attrjeod__LsodeControlDataInterface</a>	148
8.20.5.2	<a href="#">InputProcessor</a>	148
8.20.6	<a href="#">Field Documentation</a>	149
8.20.6.1	<a href="#">abs_tolerance_error_control</a>	149
8.20.6.2	<a href="#">abs_tolerance_error_control_vec</a>	149
8.20.6.3	<a href="#">corrector_method</a>	149
8.20.6.4	<a href="#">error_control_indicator</a>	149
8.20.6.5	<a href="#">error_control_vector_copied_over</a>	149
8.20.6.6	<a href="#">initial_step_size</a>	149
8.20.6.7	<a href="#">integration_method</a>	150
8.20.6.8	<a href="#">max_correction_iters</a>	150
8.20.6.9	<a href="#">max_num_conv_failure</a>	150
8.20.6.10	<a href="#">max_num_small_step_warnings</a>	150
8.20.6.11	<a href="#">max_num_steps</a>	150

8.20.6.12	<code>max_num_steps_jacobian</code>	150
8.20.6.13	<code>max_order</code>	151
8.20.6.14	<code>max_step_size</code>	151
8.20.6.15	<code>min_step_size</code>	151
8.20.6.16	<code>num_odes</code>	151
8.20.6.17	<code>num_odes_at_alloc</code>	152
8.20.6.18	<code>rel_tolerance_error_control</code>	152
8.20.6.19	<code>rel_tolerance_error_control_vec</code>	152
8.21	<code>jeod::LsodeDataArrays</code> Class Reference	152
8.21.1	Detailed Description	153
8.21.2	Constructor & Destructor Documentation	153
8.21.2.1	<code>~LsodeDataArrays</code>	153
8.21.2.2	<code>LsodeDataArrays</code>	154
8.21.3	Member Function Documentation	154
8.21.3.1	<code>operator=</code>	154
8.21.4	Friends And Related Function Documentation	154
8.21.4.1	<code>init_attrjeod__LsodeDataArrays</code>	154
8.21.4.2	<code>InputProcessor</code>	154
8.21.5	Field Documentation	154
8.21.5.1	<code>accum_correction</code>	154
8.21.5.2	<code>allocated</code>	154
8.21.5.3	<code>error_weight</code>	154
8.21.5.4	<code>history</code>	154
8.21.5.5	<code>lin_alg</code>	155
8.21.5.6	<code>lin_alg_1</code>	155
8.21.5.7	<code>lin_alg_2</code>	155
8.21.5.8	<code>lin_alg_index1</code>	155
8.21.5.9	<code>num_odes</code>	155
8.21.5.10	<code>pivots</code>	156
8.21.5.11	<code>save</code>	156
8.22	<code>jeod::LsodeDataJacobianPrep</code> Class Reference	156
8.22.1	Detailed Description	157
8.22.2	Constructor & Destructor Documentation	157
8.22.2.1	<code>~LsodeDataJacobianPrep</code>	157
8.22.2.2	<code>LsodeDataJacobianPrep</code>	157
8.22.3	Member Function Documentation	157
8.22.3.1	<code>operator=</code>	157
8.22.4	Friends And Related Function Documentation	157
8.22.4.1	<code>init_attrjeod__LsodeDataJacobianPrep</code>	157
8.22.4.2	<code>InputProcessor</code>	157

8.22.5	Field Documentation	157
8.22.5.1	fac	157
8.22.5.2	hl0	157
8.22.5.3	index	158
8.22.5.4	index_max	158
8.22.5.5	r0	158
8.22.5.6	yj	158
8.23	jeod::LsodeDataStode Class Reference	158
8.23.1	Detailed Description	159
8.23.2	Constructor & Destructor Documentation	159
8.23.2.1	~LsodeDataStode	159
8.23.2.2	LsodeDataStode	159
8.23.3	Member Function Documentation	159
8.23.3.1	operator=	159
8.23.4	Friends And Related Function Documentation	159
8.23.4.1	init_attrjeod__LsodeDataStode	159
8.23.4.2	InputProcessor	159
8.23.5	Field Documentation	159
8.23.5.1	dsm	159
8.23.5.2	iredo	159
8.23.5.3	iret	160
8.23.5.4	ncf	160
8.23.5.5	new_method_order	160
8.23.5.6	step_ratio	160
8.23.5.7	step_ratio_order_inc	160
8.23.5.8	told	160
8.24	jeod::LsodeFirstOrderODEIntegrator Class Reference	160
8.24.1	Detailed Description	165
8.24.2	Member Enumeration Documentation	166
8.24.2.1	CalculationTask	166
8.24.2.2	EntryPoint	166
8.24.3	Constructor & Destructor Documentation	166
8.24.3.1	LsodeFirstOrderODEIntegrator	166
8.24.4	Member Function Documentation	166
8.24.4.1	get_re_entry_point	166
8.24.4.2	operator=	166
8.24.5	Friends And Related Function Documentation	167
8.24.5.1	init_attrjeod__LsodeFirstOrderODEIntegrator	167
8.24.5.2	InputProcessor	167
8.24.6	Field Documentation	167

8.24.6.1	arrays	167
8.24.6.2	calculation_task	167
8.24.6.3	control_data	167
8.24.6.4	convergence_factor	168
8.24.6.5	convergence_jacobian_flag	168
8.24.6.6	convergence_rate	168
8.24.6.7	cycle_target_time	168
8.24.6.8	data_prepj	168
8.24.6.9	data_stode	168
8.24.6.10	epsilon	169
8.24.6.11	first_pass	169
8.24.6.12	initialized	169
8.24.6.13	internal_state	169
8.24.6.14	iter_delta	169
8.24.6.15	iteration_count	169
8.24.6.16	iteration_matrix_singular	170
8.24.6.17	jacobian_current	170
8.24.6.18	max_history_size	170
8.24.6.19	max_order_internal	170
8.24.6.20	max_rel_change_without_jacobian	170
8.24.6.21	max_step_increase_ratio	170
8.24.6.22	max_step_size_inv	171
8.24.6.23	method_coeff_first	171
8.24.6.24	method_coeffs_complete	171
8.24.6.25	method_coeffs_current	171
8.24.6.26	method_order_current	171
8.24.6.27	modified_iteration_matrix_singular	172
8.24.6.28	num_equations	172
8.24.6.29	num_jacobian_evals	172
8.24.6.30	num_nordsiek_cols	172
8.24.6.31	num_predictor_elements	172
8.24.6.32	num_small_step_warnings	172
8.24.6.33	num_steps_taken	173
8.24.6.34	order_select_para	173
8.24.6.35	prev_good_step_size	173
8.24.6.36	prev_integration_method	173
8.24.6.37	prev_iter_delta	173
8.24.6.38	prev_method_order	173
8.24.6.39	prev_step_size	174
8.24.6.40	prior_num_steps	174

8.24.6.41 re_entry_point . . . . .	174
8.24.6.42 rel_change_since_jacobian . . . . .	174
8.24.6.43 sqrt_epsilon . . . . .	174
8.24.6.44 stage_target_time . . . . .	174
8.24.6.45 step_at_last_jacobian_update . . . . .	175
8.24.6.46 step_error . . . . .	175
8.24.6.47 step_size . . . . .	175
8.24.6.48 test_coeffs_complete . . . . .	175
8.24.6.49 update_jacobian . . . . .	175
8.24.6.50 y . . . . .	176
8.24.6.51 y_dot . . . . .	176
8.25 jeod::LsodeGeneralizedDerivSecondOrderODEIntegrator Class Reference . . . . .	176
8.25.1 Detailed Description . . . . .	177
8.25.2 Member Function Documentation . . . . .	177
8.25.2.1 operator= . . . . .	177
8.25.3 Friends And Related Function Documentation . . . . .	177
8.25.3.1 init_attrjeod__LsodeGeneralizedDerivSecondOrderODEIntegrator . . . . .	177
8.25.3.2 InputProcessor . . . . .	177
8.25.4 Field Documentation . . . . .	178
8.25.4.1 posdot . . . . .	178
8.26 jeod::LsodeIntegrationControls Class Reference . . . . .	178
8.26.1 Detailed Description . . . . .	179
8.26.2 Constructor & Destructor Documentation . . . . .	179
8.26.2.1 ~LsodeIntegrationControls . . . . .	179
8.26.2.2 LsodeIntegrationControls . . . . .	179
8.26.3 Member Function Documentation . . . . .	179
8.26.3.1 operator= . . . . .	179
8.26.4 Friends And Related Function Documentation . . . . .	179
8.26.4.1 init_attrjeod__LsodeIntegrationControls . . . . .	179
8.26.4.2 InputProcessor . . . . .	179
8.27 jeod::LsodeIntegratorConstructor Class Reference . . . . .	179
8.27.1 Detailed Description . . . . .	181
8.27.2 Constructor & Destructor Documentation . . . . .	181
8.27.2.1 LsodeIntegratorConstructor . . . . .	181
8.27.3 Member Function Documentation . . . . .	181
8.27.3.1 get_class_name . . . . .	181
8.27.3.2 get_transition_table_size . . . . .	181
8.27.3.3 implements . . . . .	181
8.27.3.4 operator= . . . . .	181
8.27.3.5 provides . . . . .	182

8.27.4	Friends And Related Function Documentation . . . . .	182
8.27.4.1	init_attrjeod__LsodeIntegratorConstructor . . . . .	182
8.27.4.2	InputProcessor . . . . .	182
8.27.5	Field Documentation . . . . .	182
8.27.5.1	data_interface . . . . .	182
8.28	jeod::LsodeSecondOrderODEIntegrator Class Reference . . . . .	182
8.28.1	Detailed Description . . . . .	183
8.28.2	Constructor & Destructor Documentation . . . . .	183
8.28.2.1	LsodeSecondOrderODEIntegrator . . . . .	183
8.28.3	Member Function Documentation . . . . .	184
8.28.3.1	get_re_entry_point . . . . .	184
8.28.3.2	operator= . . . . .	184
8.28.3.3	reset_integrator . . . . .	184
8.28.4	Friends And Related Function Documentation . . . . .	184
8.28.4.1	init_attrjeod__LsodeSecondOrderODEIntegrator . . . . .	184
8.28.4.2	InputProcessor . . . . .	184
8.28.5	Field Documentation . . . . .	184
8.28.5.1	arrays_allocated . . . . .	184
8.28.5.2	first_derivative_size . . . . .	184
8.28.5.3	first_order_integrator . . . . .	184
8.28.5.4	y . . . . .	185
8.28.5.5	y_dot . . . . .	185
8.28.5.6	zeroth_derivative_size . . . . .	185
8.29	jeod::LsodeSimpleSecondOrderODEIntegrator Class Reference . . . . .	185
8.29.1	Detailed Description . . . . .	186
8.29.2	Constructor & Destructor Documentation . . . . .	186
8.29.2.1	~LsodeSimpleSecondOrderODEIntegrator . . . . .	186
8.29.2.2	LsodeSimpleSecondOrderODEIntegrator . . . . .	186
8.29.3	Member Function Documentation . . . . .	186
8.29.3.1	operator= . . . . .	186
8.29.4	Friends And Related Function Documentation . . . . .	187
8.29.4.1	init_attrjeod__LsodeSimpleSecondOrderODEIntegrator . . . . .	187
8.29.4.2	InputProcessor . . . . .	187
8.30	jeod::Restartable2DSecondOrderIntegrator Class Reference . . . . .	187
8.30.1	Detailed Description . . . . .	188
8.30.2	Constructor & Destructor Documentation . . . . .	188
8.30.2.1	Restartable2DSecondOrderIntegrator . . . . .	188
8.30.2.2	~Restartable2DSecondOrderIntegrator . . . . .	188
8.30.2.3	Restartable2DSecondOrderIntegrator . . . . .	188
8.30.3	Member Function Documentation . . . . .	188

8.30.3.1	<a href="#">create_integrator</a>	188
8.30.3.2	<a href="#">destroy_integrator</a>	189
8.30.3.3	<a href="#">integrate</a>	189
8.30.3.4	<a href="#">operator=</a>	189
8.30.3.5	<a href="#">reset_integrator</a>	189
8.30.3.6	<a href="#">simple_restore</a>	190
8.30.4	<a href="#">Friends And Related Function Documentation</a>	190
8.30.4.1	<a href="#">init_attrjeod__Restartable2DSecondOrderIntegrator</a>	190
8.30.4.2	<a href="#">InputProcessor</a>	190
8.30.5	<a href="#">Field Documentation</a>	190
8.30.5.1	<a href="#">integrator</a>	190
8.30.5.2	<a href="#">integrator_manager</a>	190
8.31	<a href="#">jeod::RestartableFirstOrderODEIntegrator&lt; size &gt; Class Template Reference</a>	190
8.31.1	<a href="#">Detailed Description</a>	191
8.31.2	<a href="#">Constructor &amp; Destructor Documentation</a>	191
8.31.2.1	<a href="#">RestartableFirstOrderODEIntegrator</a>	191
8.31.2.2	<a href="#">RestartableFirstOrderODEIntegrator</a>	192
8.31.2.3	<a href="#">~RestartableFirstOrderODEIntegrator</a>	193
8.31.2.4	<a href="#">RestartableFirstOrderODEIntegrator</a>	193
8.31.3	<a href="#">Member Function Documentation</a>	193
8.31.3.1	<a href="#">create_integrator_internal</a>	193
8.31.3.2	<a href="#">operator=</a>	193
8.32	<a href="#">jeod::RestartableGeneralizedDerivSecondOrderODEIntegrator&lt; position_size, velocity_size, Deriv-Functions &gt; Class Template Reference</a>	193
8.32.1	<a href="#">Detailed Description</a>	194
8.32.2	<a href="#">Constructor &amp; Destructor Documentation</a>	195
8.32.2.1	<a href="#">RestartableGeneralizedDerivSecondOrderODEIntegrator</a>	195
8.32.2.2	<a href="#">RestartableGeneralizedDerivSecondOrderODEIntegrator</a>	195
8.32.2.3	<a href="#">~RestartableGeneralizedDerivSecondOrderODEIntegrator</a>	195
8.32.2.4	<a href="#">RestartableGeneralizedDerivSecondOrderODEIntegrator</a>	195
8.32.3	<a href="#">Member Function Documentation</a>	195
8.32.3.1	<a href="#">create_integrator_internal</a>	195
8.32.3.2	<a href="#">operator=</a>	196
8.32.3.3	<a href="#">simple_restore_internal</a>	196
8.33	<a href="#">jeod::RestartableGeneralizedStepSecondOrderODEIntegrator&lt; position_size, velocity_size, Step-Functions &gt; Class Template Reference</a>	196
8.33.1	<a href="#">Detailed Description</a>	197
8.33.2	<a href="#">Constructor &amp; Destructor Documentation</a>	197
8.33.2.1	<a href="#">RestartableGeneralizedStepSecondOrderODEIntegrator</a>	197
8.33.2.2	<a href="#">RestartableGeneralizedStepSecondOrderODEIntegrator</a>	198

8.33.2.3	<a href="#">~RestartableGeneralizedStepSecondOrderODEIntegrator</a>	199
8.33.2.4	<a href="#">RestartableGeneralizedStepSecondOrderODEIntegrator</a>	199
8.33.3	<a href="#">Member Function Documentation</a>	199
8.33.3.1	<a href="#">create_integrator_internal</a>	199
8.33.3.2	<a href="#">operator=</a>	199
8.33.3.3	<a href="#">simple_restore_internal</a>	199
8.34	<a href="#">jeod::RestartableScalarFirstOrderODEIntegrator Class Reference</a>	200
8.34.1	<a href="#">Detailed Description</a>	201
8.34.2	<a href="#">Constructor &amp; Destructor Documentation</a>	201
8.34.2.1	<a href="#">RestartableScalarFirstOrderODEIntegrator</a>	201
8.34.2.2	<a href="#">~RestartableScalarFirstOrderODEIntegrator</a>	201
8.34.2.3	<a href="#">RestartableScalarFirstOrderODEIntegrator</a>	201
8.34.3	<a href="#">Member Function Documentation</a>	201
8.34.3.1	<a href="#">create_integrator</a>	201
8.34.3.2	<a href="#">destroy_integrator</a>	202
8.34.3.3	<a href="#">integrate</a>	202
8.34.3.4	<a href="#">operator=</a>	202
8.34.3.5	<a href="#">reset_integrator</a>	202
8.34.3.6	<a href="#">simple_restore</a>	202
8.34.4	<a href="#">Friends And Related Function Documentation</a>	202
8.34.4.1	<a href="#">init_attrjeod__RestartableScalarFirstOrderODEIntegrator</a>	203
8.34.4.2	<a href="#">InputProcessor</a>	203
8.34.5	<a href="#">Field Documentation</a>	203
8.34.5.1	<a href="#">integrator</a>	203
8.34.5.2	<a href="#">integrator_manager</a>	203
8.35	<a href="#">jeod::RestartableSecondOrderODEIntegrator Class Reference</a>	203
8.35.1	<a href="#">Detailed Description</a>	204
8.35.2	<a href="#">Constructor &amp; Destructor Documentation</a>	204
8.35.2.1	<a href="#">~RestartableSecondOrderODEIntegrator</a>	204
8.35.2.2	<a href="#">RestartableSecondOrderODEIntegrator</a>	204
8.35.2.3	<a href="#">RestartableSecondOrderODEIntegrator</a>	204
8.35.2.4	<a href="#">RestartableSecondOrderODEIntegrator</a>	204
8.35.3	<a href="#">Member Function Documentation</a>	204
8.35.3.1	<a href="#">operator=</a>	204
8.36	<a href="#">jeod::RestartableSimpleSecondOrderODEIntegrator&lt; size &gt; Class Template Reference</a>	205
8.36.1	<a href="#">Detailed Description</a>	205
8.36.2	<a href="#">Constructor &amp; Destructor Documentation</a>	206
8.36.2.1	<a href="#">RestartableSimpleSecondOrderODEIntegrator</a>	206
8.36.2.2	<a href="#">RestartableSimpleSecondOrderODEIntegrator</a>	206
8.36.2.3	<a href="#">~RestartableSimpleSecondOrderODEIntegrator</a>	206



8.36.2.4	<a href="#">RestartableSimpleSecondOrderODEIntegrator</a>	206
8.36.3	<a href="#">Member Function Documentation</a>	206
8.36.3.1	<a href="#">create_integrator_internal</a>	206
8.36.3.2	<a href="#">operator=</a>	207
8.37	<a href="#">jeod::RestartableSO3SecondOrderODEIntegrator Class Reference</a>	207
8.37.1	<a href="#">Detailed Description</a>	208
8.37.2	<a href="#">Constructor &amp; Destructor Documentation</a>	208
8.37.2.1	<a href="#">RestartableSO3SecondOrderODEIntegrator</a>	208
8.37.2.2	<a href="#">~RestartableSO3SecondOrderODEIntegrator</a>	208
8.37.2.3	<a href="#">RestartableSO3SecondOrderODEIntegrator</a>	208
8.37.3	<a href="#">Member Function Documentation</a>	208
8.37.3.1	<a href="#">create_integrator</a>	208
8.37.3.2	<a href="#">destroy_integrator</a>	209
8.37.3.3	<a href="#">integrate</a>	209
8.37.3.4	<a href="#">operator=</a>	209
8.37.3.5	<a href="#">reset_integrator</a>	209
8.37.3.6	<a href="#">simple_restore</a>	210
8.37.4	<a href="#">Friends And Related Function Documentation</a>	210
8.37.4.1	<a href="#">init_attrjeod__RestartableSO3SecondOrderODEIntegrator</a>	210
8.37.4.2	<a href="#">InputProcessor</a>	210
8.37.5	<a href="#">Field Documentation</a>	210
8.37.5.1	<a href="#">generalized_deriv_integrator_manager</a>	210
8.37.5.2	<a href="#">generalized_step_integrator_manager</a>	210
8.37.5.3	<a href="#">integrator</a>	210
8.37.5.4	<a href="#">technique</a>	211
8.38	<a href="#">jeod::RestartableStateIntegrator&lt; IntegratorType &gt; Class Template Reference</a>	211
8.38.1	<a href="#">Detailed Description</a>	212
8.38.2	<a href="#">Constructor &amp; Destructor Documentation</a>	213
8.38.2.1	<a href="#">~RestartableStateIntegrator</a>	213
8.38.2.2	<a href="#">RestartableStateIntegrator</a>	213
8.38.2.3	<a href="#">RestartableStateIntegrator</a>	214
8.38.2.4	<a href="#">RestartableStateIntegrator</a>	214
8.38.3	<a href="#">Member Function Documentation</a>	214
8.38.3.1	<a href="#">clear_integrator_reference</a>	214
8.38.3.2	<a href="#">create_integrator</a>	214
8.38.3.3	<a href="#">create_integrator_internal</a>	214
8.38.3.4	<a href="#">destroy_integrator</a>	215
8.38.3.5	<a href="#">operator=</a>	215
8.38.3.6	<a href="#">set_integrator_reference</a>	215
8.38.3.7	<a href="#">simple_restore</a>	215

8.38.3.8	<a href="#">simple_restore_internal</a>	216
8.38.4	<a href="#">Field Documentation</a>	216
8.38.4.1	<a href="#">integrator_handle</a>	216
8.39	<a href="#">jeod::RestartableT3SecondOrderODEIntegrator Class Reference</a>	216
8.39.1	<a href="#">Detailed Description</a>	217
8.39.2	<a href="#">Constructor &amp; Destructor Documentation</a>	218
8.39.2.1	<a href="#">RestartableT3SecondOrderODEIntegrator</a>	218
8.39.2.2	<a href="#">~RestartableT3SecondOrderODEIntegrator</a>	218
8.39.2.3	<a href="#">RestartableT3SecondOrderODEIntegrator</a>	218
8.39.3	<a href="#">Member Function Documentation</a>	218
8.39.3.1	<a href="#">create_integrator</a>	218
8.39.3.2	<a href="#">destroy_integrator</a>	218
8.39.3.3	<a href="#">integrate</a>	218
8.39.3.4	<a href="#">operator=</a>	219
8.39.3.5	<a href="#">reset_integrator</a>	219
8.39.3.6	<a href="#">simple_restore</a>	219
8.39.4	<a href="#">Friends And Related Function Documentation</a>	219
8.39.4.1	<a href="#">init_attrjeod__RestartableT3SecondOrderODEIntegrator</a>	219
8.39.4.2	<a href="#">InputProcessor</a>	219
8.39.5	<a href="#">Field Documentation</a>	219
8.39.5.1	<a href="#">integrator</a>	219
8.39.5.2	<a href="#">integrator_manager</a>	220
8.40	<a href="#">jeod::TimeChangeSubscriber Class Reference</a>	220
8.40.1	<a href="#">Detailed Description</a>	220
8.40.2	<a href="#">Constructor &amp; Destructor Documentation</a>	220
8.40.2.1	<a href="#">~TimeChangeSubscriber</a>	220
8.40.3	<a href="#">Member Function Documentation</a>	221
8.40.3.1	<a href="#">respond_to_time_change</a>	221
8.40.4	<a href="#">Friends And Related Function Documentation</a>	221
8.40.4.1	<a href="#">init_attrjeod__TimeChangeSubscriber</a>	221
8.40.4.2	<a href="#">InputProcessor</a>	221
8.41	<a href="#">er7_utils::TwoDArray&lt; T &gt; Class Template Reference</a>	221
8.41.1	<a href="#">Detailed Description</a>	222
8.41.2	<a href="#">Constructor &amp; Destructor Documentation</a>	223
8.41.2.1	<a href="#">TwoDArray</a>	223
8.41.2.2	<a href="#">TwoDArray</a>	223
8.41.2.3	<a href="#">~TwoDArray</a>	223
8.41.3	<a href="#">Member Function Documentation</a>	223
8.41.3.1	<a href="#">allocate</a>	223
8.41.3.2	<a href="#">allocate_internal</a>	223

8.41.3.3	at	224
8.41.3.4	at	225
8.41.3.5	at	225
8.41.3.6	at	225
8.41.3.7	deallocate_internal	226
8.41.3.8	downsample	226
8.41.3.9	operator T *const *	226
8.41.3.10	operator T const *const *	226
8.41.3.11	operator()	227
8.41.3.12	operator()	227
8.41.3.13	operator=	227
8.41.3.14	operator[]	227
8.41.3.15	operator[]	227
8.41.3.16	rotate_down	228
8.41.3.17	rotate_up	228
8.41.3.18	swap	228
8.41.4	Friends And Related Function Documentation	228
8.41.4.1	swap	228
8.41.5	Field Documentation	229
8.41.5.1	data_array	229
8.41.5.2	m	229
8.41.5.3	n	229
8.41.5.4	row_array	229
<b>9</b>	<b>File Documentation</b>	<b>231</b>
9.1	gauss_jackson_coefficients_pair.cc File Reference	231
9.1.1	Detailed Description	231
9.2	gauss_jackson_coefficients_pair.hh File Reference	231
9.2.1	Detailed Description	232
9.3	gauss_jackson_coefs.cc File Reference	232
9.3.1	Detailed Description	232
9.4	gauss_jackson_coefs.hh File Reference	232
9.4.1	Detailed Description	233
9.5	gauss_jackson_config.cc File Reference	233
9.5.1	Detailed Description	233
9.6	gauss_jackson_config.hh File Reference	233
9.6.1	Detailed Description	234
9.7	gauss_jackson_first_order_ode_integrator.hh File Reference	234
9.7.1	Detailed Description	234
9.8	gauss_jackson_generalized_second_order_ode_integrator.cc File Reference	234

9.8.1 Detailed Description . . . . .	235
9.9 gauss_jackson_generalized_second_order_ode_integrator.hh File Reference . . . . .	235
9.9.1 Detailed Description . . . . .	235
9.10 gauss_jackson_integration_controls.cc File Reference . . . . .	235
9.10.1 Detailed Description . . . . .	236
9.11 gauss_jackson_integration_controls.hh File Reference . . . . .	236
9.11.1 Detailed Description . . . . .	236
9.12 gauss_jackson_integrator_base.hh File Reference . . . . .	237
9.12.1 Detailed Description . . . . .	237
9.13 gauss_jackson_integrator_base_first.hh File Reference . . . . .	237
9.13.1 Detailed Description . . . . .	238
9.14 gauss_jackson_integrator_base_second.hh File Reference . . . . .	238
9.14.1 Detailed Description . . . . .	238
9.15 gauss_jackson_integrator_constructor.cc File Reference . . . . .	238
9.15.1 Detailed Description . . . . .	239
9.16 gauss_jackson_integrator_constructor.hh File Reference . . . . .	239
9.16.1 Detailed Description . . . . .	240
9.17 gauss_jackson_one_state.hh File Reference . . . . .	240
9.17.1 Detailed Description . . . . .	240
9.18 gauss_jackson_rational_coeffs.cc File Reference . . . . .	240
9.18.1 Detailed Description . . . . .	240
9.19 gauss_jackson_rational_coeffs.hh File Reference . . . . .	241
9.19.1 Detailed Description . . . . .	241
9.20 gauss_jackson_simple_second_order_ode_integrator.hh File Reference . . . . .	241
9.20.1 Detailed Description . . . . .	242
9.21 gauss_jackson_state_machine.cc File Reference . . . . .	242
9.21.1 Detailed Description . . . . .	242
9.22 gauss_jackson_state_machine.hh File Reference . . . . .	242
9.22.1 Detailed Description . . . . .	242
9.23 gauss_jackson_two_state.hh File Reference . . . . .	243
9.23.1 Detailed Description . . . . .	243
9.24 generalized_second_order_ode_technique.cc File Reference . . . . .	243
9.24.1 Detailed Description . . . . .	243
9.25 generalized_second_order_ode_technique.hh File Reference . . . . .	243
9.25.1 Detailed Description . . . . .	244
9.26 integration_messages.cc File Reference . . . . .	244
9.26.1 Detailed Description . . . . .	244
9.27 integration_messages.hh File Reference . . . . .	244
9.27.1 Detailed Description . . . . .	245
9.28 jeod_integration_group.cc File Reference . . . . .	245

9.28.1 Detailed Description . . . . .	245
9.29 jeod_integration_group.hh File Reference . . . . .	245
9.29.1 Detailed Description . . . . .	246
9.30 jeod_integration_time.cc File Reference . . . . .	246
9.30.1 Detailed Description . . . . .	246
9.31 jeod_integration_time.hh File Reference . . . . .	247
9.31.1 Detailed Description . . . . .	247
9.32 lside_control_data_interface.cc File Reference . . . . .	247
9.32.1 Detailed Description . . . . .	247
9.33 lside_control_data_interface.hh File Reference . . . . .	247
9.33.1 Detailed Description . . . . .	248
9.34 lside_data_classes.cc File Reference . . . . .	248
9.34.1 Detailed Description . . . . .	248
9.35 lside_data_classes.hh File Reference . . . . .	248
9.35.1 Detailed Description . . . . .	249
9.36 lside_first_order_ode_integrator.hh File Reference . . . . .	249
9.36.1 Detailed Description . . . . .	249
9.37 lside_first_order_ode_integrator__integrator.cc File Reference . . . . .	249
9.37.1 Detailed Description . . . . .	250
9.38 lside_first_order_ode_integrator__manager.cc File Reference . . . . .	250
9.38.1 Detailed Description . . . . .	250
9.39 lside_first_order_ode_integrator__support.cc File Reference . . . . .	250
9.39.1 Detailed Description . . . . .	250
9.40 lside_first_order_ode_integrator__utility.cc File Reference . . . . .	250
9.40.1 Detailed Description . . . . .	251
9.41 lside_generalized_second_order_ode_integrator.cc File Reference . . . . .	251
9.41.1 Detailed Description . . . . .	251
9.42 lside_generalized_second_order_ode_integrator.hh File Reference . . . . .	251
9.42.1 Detailed Description . . . . .	252
9.43 lside_integration_controls.cc File Reference . . . . .	252
9.43.1 Detailed Description . . . . .	252
9.44 lside_integration_controls.hh File Reference . . . . .	252
9.44.1 Detailed Description . . . . .	252
9.45 lside_integrator_constructor.cc File Reference . . . . .	253
9.45.1 Detailed Description . . . . .	253
9.46 lside_integrator_constructor.hh File Reference . . . . .	253
9.46.1 Detailed Description . . . . .	253
9.47 lside_second_order_ode_integrator.cc File Reference . . . . .	254
9.47.1 Detailed Description . . . . .	254
9.48 lside_second_order_ode_integrator.hh File Reference . . . . .	254

9.48.1 Detailed Description . . . . .	254
9.49 Isode_simple_second_order_ode_integrator.cc File Reference . . . . .	254
9.49.1 Detailed Description . . . . .	255
9.50 Isode_simple_second_order_ode_integrator.hh File Reference . . . . .	255
9.50.1 Detailed Description . . . . .	255
9.51 restartable_2d_second_order_integrator.hh File Reference . . . . .	255
9.51.1 Detailed Description . . . . .	256
9.52 restartable_state_integrator.hh File Reference . . . . .	256
9.52.1 Detailed Description . . . . .	257
9.53 restartable_state_integrator_templates.hh File Reference . . . . .	257
9.53.1 Detailed Description . . . . .	258
9.54 time_change_subscriber.hh File Reference . . . . .	258
9.54.1 Detailed Description . . . . .	258
9.55 two_d_array.hh File Reference . . . . .	258
9.55.1 Detailed Description . . . . .	259

# Chapter 1

## Module Index

### 1.1 Modules

Here is a list of all modules:

Models . . . . .	15
Utils . . . . .	16
Integration . . . . .	17
GaussJackson . . . . .	19
Lsode . . . . .	21





## Chapter 2

# Namespace Index

### 2.1 Namespace List

Here is a list of all namespaces with brief descriptions:

<a href="#">er7_utils</a>	Namespace <a href="#">er7_utils</a> contains the state integration models used by JEOD . . . . .	<a href="#">49</a>
<a href="#">jeod</a>	Namespace jeod . . . . .	<a href="#">49</a>



## Chapter 3

# Hierarchical Index

### 3.1 Class Hierarchy

This inheritance list is sorted roughly, but not completely, alphabetically:

BaseIntegrationGroup	
jeod::JeodIntegrationGroup . . . . .	135
FirstOrderODEIntegrator	
jeod::GaussJacksonFirstOrderODEIntegrator . . . . .	67
jeod::LsodeFirstOrderODEIntegrator . . . . .	160
jeod::GaussJacksonCoefficientsPair . . . . .	56
jeod::GaussJacksonCoeffs . . . . .	60
jeod::GaussJacksonConfig . . . . .	64
jeod::GaussJacksonIntegratorBase< State, Primer > . . . . .	82
jeod::GaussJacksonFirstOrderODEIntegrator . . . . .	67
jeod::GaussJacksonSimpleSecondOrderODEIntegrator . . . . .	115
jeod::GaussJacksonOneState . . . . .	110
jeod::GaussJacksonRationalCoefficients . . . . .	112
jeod::GaussJacksonStateMachine . . . . .	119
jeod::GaussJacksonTwoState . . . . .	129
jeod::GeneralizedSecondOrderODETechnique . . . . .	131
IntegrationControls	
jeod::GaussJacksonIntegrationControls . . . . .	73
jeod::IntegrationMessages . . . . .	133
IntegratorConstructor	
jeod::GaussJacksonIntegratorConstructor . . . . .	104
jeod::LsodeIntegratorConstructor . . . . .	179
jeod::JeodIntegrationGroupOwner . . . . .	142
jeod::LsodeControlDataInterface . . . . .	145
jeod::LsodeDataArrays . . . . .	152
jeod::LsodeDataJacobianPrep . . . . .	156
jeod::LsodeDataStode . . . . .	158
SecondOrderODEIntegrator	
jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator . . . . .	69
jeod::GaussJacksonSimpleSecondOrderODEIntegrator . . . . .	115
jeod::LsodeSecondOrderODEIntegrator . . . . .	182
jeod::LsodeGeneralizedDerivSecondOrderODEIntegrator . . . . .	176
jeod::LsodeSimpleSecondOrderODEIntegrator . . . . .	185
SimpleCheckpointable	
jeod::Restartable2DSecondOrderIntegrator . . . . .	187
jeod::RestartableScalarFirstOrderODEIntegrator . . . . .	200
jeod::RestartableSO3SecondOrderODEIntegrator . . . . .	207
jeod::RestartableStateIntegrator< IntegratorType > . . . . .	211

jeod::RestartableT3SecondOrderODEIntegrator . . . . .	216
jeod::RestartableStateIntegrator< er7_utils::FirstOrderODEIntegrator > . . . . .	211
jeod::RestartableFirstOrderODEIntegrator< size > . . . . .	190
jeod::RestartableFirstOrderODEIntegrator< 1 > . . . . .	190
jeod::RestartableStateIntegrator< er7_utils::SecondOrderODEIntegrator > . . . . .	211
jeod::RestartableSecondOrderODEIntegrator . . . . .	203
jeod::RestartableGeneralizedDerivSecondOrderODEIntegrator< position_size, velocity_size, DerivFunctions > . . . . .	193
jeod::RestartableGeneralizedStepSecondOrderODEIntegrator< position_size, velocity_size, StepFunctions > . . . . .	196
jeod::RestartableSimpleSecondOrderODEIntegrator< size > . . . . .	205
jeod::RestartableGeneralizedDerivSecondOrderODEIntegrator< 4, 3, er7_utils::LeftQuaternionGeneralizedPositionFunctions > . . . . .	193
jeod::RestartableGeneralizedStepSecondOrderODEIntegrator< 4, 3, er7_utils::LeftQuaternionGeneralizedPositionFunctions > . . . . .	196
jeod::RestartableSimpleSecondOrderODEIntegrator< 2 > . . . . .	205
jeod::RestartableSimpleSecondOrderODEIntegrator< 3 > . . . . .	205
StandardIntegrationControls	
jeod::LsodeIntegrationControls . . . . .	178
jeod::TimeChangeSubscriber . . . . .	220
jeod::JeodIntegrationGroup . . . . .	135
TimeInterface	
jeod::JeodIntegrationTime . . . . .	143
er7_utils::TwoDArray< T > . . . . .	221
er7_utils::TwoDArray< double > . . . . .	221
er7_utils::DoubleTwoDArray . . . . .	55

## Chapter 4

# Data Structure Index

### 4.1 Data Structures

Here are the data structures with brief descriptions:

<a href="#">er7_utils::DoubleTwoDArray</a>	2D array, specialized for doubles . . . . .	55
<a href="#">jeod::GaussJacksonCoefficientsPair</a>	Contains a summed Adams and Gauss-Jackson coefficient pair . . . . .	56
<a href="#">jeod::GaussJacksonCoeffs</a>	Contains the Gauss-Jackson predictor and corrector coefficients . . . . .	60
<a href="#">jeod::GaussJacksonConfig</a>	Contains Gauss-Jackson configuration data . . . . .	64
<a href="#">jeod::GaussJacksonFirstOrderODEIntegrator</a>	Integrates a first order ODE using the summed Adams technique that is embedded within the Gauss-Jackson technique . . . . .	67
<a href="#">jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator</a>	Integrates a generalized derivative second order ODE using Gauss-Jackson . . . . .	69
<a href="#">jeod::GaussJacksonIntegrationControls</a>	IntegrationControls specialized for Gauss-Jackson integration . . . . .	73
<a href="#">jeod::GaussJacksonIntegratorBase&lt; State, Primer &gt;</a>	Base template class for integrating state via the Gauss-Jackson technique . . . . .	82
<a href="#">jeod::GaussJacksonIntegratorConstructor</a>	Create state and time integrators that propagate using Gauss-Jackson . . . . .	104
<a href="#">jeod::GaussJacksonOneState</a>	Essentially just a double* . . . . .	110
<a href="#">jeod::GaussJacksonRationalCoefficients</a>	Contains a set of Adams or Stormer-Cowell coefficients . . . . .	112
<a href="#">jeod::GaussJacksonSimpleSecondOrderODEIntegrator</a>	Integrates a simple second order ODE using the Gauss-Jackson technique . . . . .	115
<a href="#">jeod::GaussJacksonStateMachine</a>	Guides the behavior of the Gauss-Jackson integration process via a finite state machine . . . . .	119
<a href="#">jeod::GaussJacksonTwoState</a>	Essentially just std::pair<double*> . . . . .	129
<a href="#">jeod::GeneralizedSecondOrderODETechnique</a>	Enumerates the integration schemes, generalized Cartesian or Lie group integration, and provides simple utilities that work with this . . . . .	131
<a href="#">jeod::IntegrationMessages</a>	Declares messages associated with the integration test model . . . . .	133
<a href="#">jeod::JeodIntegrationGroup</a>	A <a href="#">JeodIntegrationGroup</a> integrates the state of a set of objects over time . . . . .	135
<a href="#">jeod::JeodIntegrationGroupOwner</a>	The abstract class <a href="#">IntegrationGroupOwner</a> contains an <a href="#">IntegrationGroup</a> . . . . .	142

<a href="#">jeod::JeodIntegrationTime</a>	
The class <a href="#">JeodIntegrationTime</a> adds the concepts of timestamping and notification of changes in the nature of time to the ER7 numerical utilities <a href="#">TimeInterface</a> class . . . . .	143
<a href="#">jeod::LsodeControlDataInterface</a>	
Specifies controls for an LSODE integrator . . . . .	145
<a href="#">jeod::LsodeDataArrays</a>	
The data arrays . . . . .	152
<a href="#">jeod::LsodeDataJacobianPrep</a>	
Data associated with the method DPREPJ . . . . .	156
<a href="#">jeod::LsodeDataStode</a>	
The data associated with method Dstode . . . . .	158
<a href="#">jeod::LsodeFirstOrderODEIntegrator</a>	
Jeod-compatible version of the Livermore ODE solver, LSODE . . . . .	160
<a href="#">jeod::LsodeGeneralizedDerivSecondOrderODEIntegrator</a>	
JEOD-compatible version of the Livermore ODE solver, LSODE, capable of integrating second-order ODEs . . . . .	176
<a href="#">jeod::LsodeIntegrationControls</a>	
Contains controls for an LSODE integrator . . . . .	178
<a href="#">jeod::LsodeIntegratorConstructor</a>	
Create state and time integrators that propagate using standard Lsode . . . . .	179
<a href="#">jeod::LsodeSecondOrderODEIntegrator</a>	
JEOD-compatible version of the Livermore ODE solver, LSODE, capable of integrating second-order ODEs . . . . .	182
<a href="#">jeod::LsodeSimpleSecondOrderODEIntegrator</a>	
JEOD-compatible version of the Livermore ODE solver, LSODE, capable of integrating second-order ODEs . . . . .	185
<a href="#">jeod::Restartable2DSecondOrderIntegrator</a>	
Integrates a second order ODE in two dimensional space, $d^2x/dt^2 = a(x,t)$ , where $x$ is a two-vector . . . . .	187
<a href="#">jeod::RestartableFirstOrderODEIntegrator&lt; size &gt;</a>	
A <a href="#">RestartableFirstOrderODEIntegrator</a> is-a <a href="#">RestartableStateIntegrator</a> that manages an <a href="#">er7_utils::FirstOrderODEIntegrator</a> . . . . .	190
<a href="#">jeod::RestartableGeneralizedDerivSecondOrderODEIntegrator&lt; position_size, velocity_size, Deriv-Functions &gt;</a>	
A <a href="#">RestartableGeneralizedDerivSecondOrderODEIntegrator</a> is-a <a href="#">RestartableStateIntegrator</a> that manages the integrator for a generalized second order ODE problem, one in which the time derivative of the generalized position is some function of the generalized position and the generalized velocity . . . . .	193
<a href="#">jeod::RestartableGeneralizedStepSecondOrderODEIntegrator&lt; position_size, velocity_size, Step-Functions &gt;</a>	
A <a href="#">RestartableGeneralizedStepSecondOrderODEIntegrator</a> is-a <a href="#">RestartableStateIntegrator</a> that manages the integrator for a generalized second order ODE problem, one in which the time derivative of the generalized position is some function of the generalized position and the generalized velocity . . . . .	196
<a href="#">jeod::RestartableScalarFirstOrderODEIntegrator</a>	
A <a href="#">RestartableScalarFirstOrderODEIntegrator</a> integrates a first order ODE, $dx/dt = v(x,t)$ , where $x$ is a scalar . . . . .	200
<a href="#">jeod::RestartableSecondOrderODEIntegrator</a>	
A <a href="#">RestartableSecondOrderODEIntegrator</a> is-a <a href="#">RestartableStateIntegrator</a> that manages the integrator for a second order ODE problem . . . . .	203
<a href="#">jeod::RestartableSimpleSecondOrderODEIntegrator&lt; size &gt;</a>	
A <a href="#">RestartableSimpleSecondOrderODEIntegrator</a> is-a <a href="#">RestartableSecondOrderODEIntegrator</a> that manages the integrator for a simple second order ODE problem, one in which the time derivative of the generalized position is the generalized velocity . . . . .	205
<a href="#">jeod::RestartableSO3SecondOrderODEIntegrator</a>	
A <a href="#">RestartableSO3SecondOrderODEIntegrator</a> integrates a generalized second order ODE that describes rotation in three space . . . . .	207

<a href="#">jeod::RestartableStateIntegrator&lt; IntegratorType &gt;</a>	
A <a href="#">RestartableStateIntegrator</a> establishes the basic capabilities needed to make a state integrator a managed resource . . . . .	211
<a href="#">jeod::RestartableT3SecondOrderODEIntegrator</a>	
A <a href="#">RestartableT3SecondOrderODEIntegrator</a> integrates a second order ODE in three space, $d^2x/dt^2 = a(x,t)$ , where $x$ is a three-vector . . . . .	216
<a href="#">jeod::TimeChangeSubscriber</a>	
A <a href="#">TimeChangeSubscriber</a> is some object that wants to be notified of changes in the nature of time	220
<a href="#">er7_utils::TwoDArray&lt; T &gt;</a>	
RAII template class that implements a rectangular two dimensional array . . . . .	221





## Chapter 5

# File Index

### 5.1 File List

Here is a list of all files with brief descriptions:

<a href="#">gauss_jackson_coefficients_pair.cc</a>	Defines member functions for the class GaussJacksonCoefficientsPair . . . . .	231
<a href="#">gauss_jackson_coefficients_pair.hh</a>	Defines the class GaussJacksonCoefficientsPair, which contains summed Adams and Gauss-- Jackson coefficient pair . . . . .	231
<a href="#">gauss_jackson_coeffs.cc</a>	Defines member functions for the class GaussJacksonCoeffs . . . . .	232
<a href="#">gauss_jackson_coeffs.hh</a>	Defines the class GaussJacksonCoeffs, which contains the Gauss-Jackson predictor and cor- rector coefficients . . . . .	232
<a href="#">gauss_jackson_config.cc</a>	Defines member functions for the class GaussJacksonIntegratorConstructor . . . . .	233
<a href="#">gauss_jackson_config.hh</a>	Defines the class GaussJacksonConfig, which specifies Gauss-Jackson configuration data . .	233
<a href="#">gauss_jackson_first_order_ode_integrator.hh</a>	Defines the class GaussJacksonFirstOrderODEIntegrator, which integrates a first order ODE using the summed Adams technique . . . . .	234
<a href="#">gauss_jackson_generalized_second_order_ode_integrator.cc</a>	Defines member functions for the class GaussJacksonGeneralizedDerivSecondOrderODE- Integrator . . . . .	234
<a href="#">gauss_jackson_generalized_second_order_ode_integrator.hh</a>	Defines the class GaussJacksonGeneralizedDerivSecondOrderODEIntegrator, which integrates a generalized derivative second order ODE using Gauss-Jackson . . . . .	235
<a href="#">gauss_jackson_integration_controls.cc</a>	Defines member functions for the class GaussJacksonIntegrationControls . . . . .	235
<a href="#">gauss_jackson_integration_controls.hh</a>	Defines the class GaussJacksonIntegrationControls, which controls Gauss-Jackson integration process . . . . .	236
<a href="#">gauss_jackson_integrator_base.hh</a>	Defines the template class GaussJacksonIntegratorBase, which provides the basis for Gauss-- Jackson integration . . . . .	237
<a href="#">gauss_jackson_integrator_base_first.hh</a>	Defines the template specializations of GaussJacksonIntegratorBase for a first order ODE . . .	237
<a href="#">gauss_jackson_integrator_base_second.hh</a>	Defines the template specializations of GaussJacksonIntegratorBase for a first order ODE . . .	238
<a href="#">gauss_jackson_integrator_constructor.cc</a>	Defines member functions for the class GaussJacksonIntegratorConstructor . . . . .	238

<a href="#">gauss_jackson_integrator_constructor.hh</a>	Defines the class GaussJacksonIntegratorConstructor, which constructs integrators that use Gauss-Jackson integration . . . . .	239
<a href="#">gauss_jackson_one_state.hh</a>	Defines the class GaussJacksonOneState, which contains a double* pointer . . . . .	240
<a href="#">gauss_jackson_rational_coeffs.cc</a>	Defines member functions for the class GaussJacksonRationalCoefficients . . . . .	240
<a href="#">gauss_jackson_rational_coeffs.hh</a>	Defines the class GaussJacksonRationalCoefficients, which contains a set of Adams or Stormer-Cowell coefficients . . . . .	241
<a href="#">gauss_jackson_simple_second_order_ode_integrator.hh</a>	Defines the class GaussJacksonSimpleSecondOrderODEIntegrator, which integrates a simple second order ODE using Gauss-Jackson . . . . .	241
<a href="#">gauss_jackson_state_machine.cc</a>	Defines member functions for the class GaussJacksonStateMachine . . . . .	242
<a href="#">gauss_jackson_state_machine.hh</a>	Defines the class GaussJacksonStateMachine, which guides the Gauss-Jackson integration process . . . . .	242
<a href="#">gauss_jackson_two_state.hh</a>	Defines the class GaussJacksonTwoState, which contains a pair of double* pointers . . . . .	243
<a href="#">generalized_second_order_ode_technique.cc</a>	Define class GeneralizedSecondOrderODETechnique methods . . . . .	243
<a href="#">generalized_second_order_ode_technique.hh</a>	Define the static class GeneralizedSecondOrderODETechnique . . . . .	243
<a href="#">integration_messages.cc</a>	Implement the class IntegrationMessages . . . . .	244
<a href="#">integration_messages.hh</a>	Define the class IntegrationMessages, the class that specifies the message IDs used in the integration model . . . . .	244
<a href="#">jeod_integration_group.cc</a>	Define JeodIntegrationGroup methods . . . . .	245
<a href="#">jeod_integration_group.hh</a>	Define the extensible class IntegrationGroup, an instance of which is responsible for integrating the states of a set of DynBody objects . . . . .	245
<a href="#">jeod_integration_time.cc</a>	Define JeodIntegrationTime methods . . . . .	246
<a href="#">jeod_integration_time.hh</a>	Define the class JeodIntegrationTime . . . . .	247
<a href="#">lsode_control_data_interface.cc</a>	Define member functions for the class LsodeControlDataInterface . . . . .	247
<a href="#">lsode_control_data_interface.hh</a>	Define the class LsodeControlDataInterface . . . . .	247
<a href="#">lsode_data_classes.cc</a>	Define member functions for the data-grouping classes specified in lsode_data_classes . . . . .	248
<a href="#">lsode_data_classes.hh</a>	Define LSODE classes that contain just data members . . . . .	248
<a href="#">lsode_first_order_ode_integrator.hh</a>	Define the class LsodeFirstOrderODEIntegrator, the Jeod-compatible version of the Livermore ODE solver, LSODE . . . . .	249
<a href="#">lsode_first_order_ode_integrator__integrator.cc</a>	Define member functions for the class LsodeFirstOrderODEIntegrator . . . . .	249
<a href="#">lsode_first_order_ode_integrator__manager.cc</a>	Define member functions for the class LsodeFirstOrderODEIntegrator . . . . .	250
<a href="#">lsode_first_order_ode_integrator__support.cc</a>	Define member functions for the class LsodeFirstOrderODEIntegrator . . . . .	250
<a href="#">lsode_first_order_ode_integrator__utility.cc</a>	Define member functions for the class LsodeFirstOrderODEIntegrator . . . . .	250

<a href="#">lode_generalized_second_order_ode_integrator.cc</a>	
Define member functions for the class LodeGeneralizedDerivSecondOrderODEIntegrator	251
<a href="#">lode_generalized_second_order_ode_integrator.hh</a>	
Define the class LodeGeneralizedDerivSecondOrderODEIntegrator	251
<a href="#">lode_integration_controls.cc</a>	
Define the methods for the class LodeIntegrationControls	252
<a href="#">lode_integration_controls.hh</a>	
Define the class LodeIntegrationControls	252
<a href="#">lode_integrator_constructor.cc</a>	
Define the methods in the class LodeIntegratorConstructor	253
<a href="#">lode_integrator_constructor.hh</a>	
Define the class LodeIntegratorConstructor, the class that constructs the integration controls and the integrators for the LSODE method	253
<a href="#">lode_second_order_ode_integrator.cc</a>	
Define member functions for the class LodeSecondOrderODEIntegrator	254
<a href="#">lode_second_order_ode_integrator.hh</a>	
Define the class LodeSecondOrderODEIntegrator	254
<a href="#">lode_simple_second_order_ode_integrator.cc</a>	
Define member functions for the class LodeSimpleSecondOrderODEIntegrator	254
<a href="#">lode_simple_second_order_ode_integrator.hh</a>	
Define the class LodeSimpleSecondOrderODEIntegrator	255
<a href="#">restartable_2d_second_order_integrator.hh</a>	
Defines the class Restartable2DSecondOrderODEIntegrator	255
<a href="#">restartable_state_integrator.hh</a>	
Define classes that encapsulate the construction, destruction, checkpointing, and restarting of state integrators	256
<a href="#">restartable_state_integrator_templates.hh</a>	
Define template classes that encapsulate the construction, destruction, checkpointing, and restarting of state integrators	257
<a href="#">time_change_subscriber.hh</a>	
Define the class TimeChangeSubscriber	258
<a href="#">two_d_array.hh</a>	
Defines the template class <code>er7_utils::TwoDArray</code> , which implements an RAII rectangular 2D array	258



## Chapter 6

# Module Documentation

### 6.1 Models

#### Modules

- [Utils](#)

#### 6.1.1 Detailed Description

## 6.2 Utils

### Modules

- [Integration](#)

### 6.2.1 Detailed Description

## 6.3 Integration

### Modules

- [GaussJackson](#)
- [Lsode](#)

### Files

- file [generalized\\_second\\_order\\_ode\\_technique.hh](#)  
*Define the static class GeneralizedSecondOrderODETechnique.*
- file [integration\\_messages.hh](#)  
*Define the class IntegrationMessages, the class that specifies the message IDs used in the integration model.*
- file [jeod\\_integration\\_group.hh](#)  
*Define the extensible class IntegrationGroup, an instance of which is responsible for integrating the states of a set of DynBody objects.*
- file [jeod\\_integration\\_time.hh](#)  
*Define the class JeodIntegrationTime.*
- file [restartable\\_2d\\_second\\_order\\_integrator.hh](#)  
*Defines the class Restartable2DSecondOrderODEIntegrator.*
- file [restartable\\_state\\_integrator.hh](#)  
*Define classes that encapsulate the construction, destruction, checkpointing, and restarting of state integrators.*
- file [restartable\\_state\\_integrator\\_templates.hh](#)  
*Define template classes that encapsulate the construction, destruction, checkpointing, and restarting of state integrators.*
- file [time\\_change\\_subscriber.hh](#)  
*Define the class TimeChangeSubscriber.*
- file [generalized\\_second\\_order\\_ode\\_technique.cc](#)  
*Define class GeneralizedSecondOrderODETechnique methods.*
- file [integration\\_messages.cc](#)  
*Implement the class IntegrationMessages.*
- file [jeod\\_integration\\_group.cc](#)  
*Define JeodIntegrationGroup methods.*
- file [jeod\\_integration\\_time.cc](#)  
*Define JeodIntegrationTime methods.*

### Namespaces

- [er7\\_utils](#)  
*Namespace [er7\\_utils](#) contains the state integration models used by JEOD.*
- [jeod](#)  
*Namespace [jeod](#).*

### Macros

- `#define PATH "utils/integration/"`
- `#define CLASS IntegrationMessages`
- `#define MAKE\_MESSAGE\_CODE(id) char const * CLASS::id = PATH #id`

### 6.3.1 Detailed Description

### 6.3.2 Macro Definition Documentation

#### 6.3.2.1 `#define CLASS IntegrationMessages`

Definition at line 33 of file `integration_messages.cc`.

#### 6.3.2.2 `#define MAKE_MESSAGE_CODE( id ) char const * CLASS::id = PATH #id`

Definition at line 34 of file `integration_messages.cc`.

#### 6.3.2.3 `#define PATH "utils/integration/"`

Definition at line 32 of file `integration_messages.cc`.



## 6.4 GaussJackson

### Files

- file [gauss\\_jackson\\_coefficients\\_pair.hh](#)  
*Defines the class GaussJacksonCoefficientsPair, which contains summed Adams and Gauss-Jackson coefficient pair.*
- file [gauss\\_jackson\\_coefs.hh](#)  
*Defines the class GaussJacksonCoefs, which contains the Gauss-Jackson predictor and corrector coefficients.*
- file [gauss\\_jackson\\_config.hh](#)  
*Defines the class GaussJacksonConfig, which specifies Gauss-Jackson configuration data.*
- file [gauss\\_jackson\\_first\\_order\\_ode\\_integrator.hh](#)  
*Defines the class GaussJacksonFirstOrderODEIntegrator, which integrates a first order ODE using the summed Adams technique.*
- file [gauss\\_jackson\\_generalized\\_second\\_order\\_ode\\_integrator.hh](#)  
*Defines the class GaussJacksonGeneralizedDerivSecondOrderODEIntegrator, which integrates a generalized derivative second order ODE using Gauss-Jackson.*
- file [gauss\\_jackson\\_integration\\_controls.hh](#)  
*Defines the class GaussJacksonIntegrationControls, which controls Gauss-Jackson integration process.*
- file [gauss\\_jackson\\_integrator\\_base.hh](#)  
*Defines the template class GaussJacksonIntegratorBase, which provides the basis for Gauss-Jackson integration.*
- file [gauss\\_jackson\\_integrator\\_base\\_first.hh](#)  
*Defines the template specializations of GaussJacksonIntegratorBase for a first order ODE.*
- file [gauss\\_jackson\\_integrator\\_base\\_second.hh](#)  
*Defines the template specializations of GaussJacksonIntegratorBase for a first order ODE.*
- file [gauss\\_jackson\\_integrator\\_constructor.hh](#)  
*Defines the class GaussJacksonIntegratorConstructor, which constructs integrators that use Gauss-Jackson integration.*
- file [gauss\\_jackson\\_one\\_state.hh](#)  
*Defines the class GaussJacksonOneState, which contains a double\* pointer.*
- file [gauss\\_jackson\\_rational\\_coefs.hh](#)  
*Defines the class GaussJacksonRationalCoefficients, which contains a set of Adams or Stormer-Cowell coefficients.*
- file [gauss\\_jackson\\_simple\\_second\\_order\\_ode\\_integrator.hh](#)  
*Defines the class GaussJacksonSimpleSecondOrderODEIntegrator, which integrates a simple second order ODE using Gauss-Jackson.*
- file [gauss\\_jackson\\_state\\_machine.hh](#)  
*Defines the class GaussJacksonStateMachine, which guides the Gauss-Jackson integration process.*
- file [gauss\\_jackson\\_two\\_state.hh](#)  
*Defines the class GaussJacksonTwoState, which contains a pair of double\* pointers.*
- file [two\\_d\\_array.hh](#)  
*Defines the template class `er7_utils::TwoDArray`, which implements an RAII rectangular 2D array.*
- file [gauss\\_jackson\\_coefficients\\_pair.cc](#)  
*Defines member functions for the class GaussJacksonCoefficientsPair.*
- file [gauss\\_jackson\\_coefs.cc](#)  
*Defines member functions for the class GaussJacksonCoefs.*
- file [gauss\\_jackson\\_config.cc](#)  
*Defines member functions for the class GaussJacksonConfig.*
- file [gauss\\_jackson\\_generalized\\_second\\_order\\_ode\\_integrator.cc](#)  
*Defines member functions for the class GaussJacksonGeneralizedDerivSecondOrderODEIntegrator.*
- file [gauss\\_jackson\\_integration\\_controls.cc](#)  
*Defines member functions for the class GaussJacksonIntegrationControls.*
- file [gauss\\_jackson\\_integrator\\_constructor.cc](#)

- Defines member functions for the class `GaussJacksonIntegratorConstructor`.*
- file [gauss\\_jackson\\_rational\\_coeffs.cc](#)  
*Defines member functions for the class `GaussJacksonRationalCoefficients`.*
- file [gauss\\_jackson\\_state\\_machine.cc](#)  
*Defines member functions for the class `GaussJacksonStateMachine`.*

## Namespaces

- [jeod](#)  
*Namespace `jeod`.*
- [er7\\_utils](#)  
*Namespace `er7_utils` contains the state integration models used by JEOD.*

### 6.4.1 Detailed Description

## 6.5 Lsode

### Files

- file [lsode\\_control\\_data\\_interface.hh](#)  
*Define the class LsodeControlDataInterface.*
- file [lsode\\_data\\_classes.hh](#)  
*Define LSODE classes that contain just data members.*
- file [lsode\\_first\\_order\\_ode\\_integrator.hh](#)  
*Define the class LsodeFirstOrderODEIntegrator, the Jeod-compatible version of the Livermore ODE solver, LSODE.*
- file [lsode\\_generalized\\_second\\_order\\_ode\\_integrator.hh](#)  
*Define the class LsodeGeneralizedDerivSecondOrderODEIntegrator.*
- file [lsode\\_integration\\_controls.hh](#)  
*Define the class LsodeIntegrationControls.*
- file [lsode\\_integrator\\_constructor.hh](#)  
*Define the class LsodeIntegratorConstructor, the class that constructs the integration controls and the integrators for the LSODE method.*
- file [lsode\\_second\\_order\\_ode\\_integrator.hh](#)  
*Define the class LsodeSecondOrderODEIntegrator.*
- file [lsode\\_simple\\_second\\_order\\_ode\\_integrator.hh](#)  
*Define the class LsodeSimpleSecondOrderODEIntegrator.*
- file [lsode\\_control\\_data\\_interface.cc](#)  
*Define member functions for the class LsodeControlDataInterface.*
- file [lsode\\_data\\_classes.cc](#)  
*Define member functions for the data-grouping classes specified in lsode\_data\_classes.*
- file [lsode\\_first\\_order\\_ode\\_integrator\\_\\_integrator.cc](#)  
*Define member functions for the class LsodeFirstOrderODEIntegrator.*
- file [lsode\\_first\\_order\\_ode\\_integrator\\_\\_manager.cc](#)  
*Define member functions for the class LsodeFirstOrderODEIntegrator.*
- file [lsode\\_first\\_order\\_ode\\_integrator\\_\\_support.cc](#)  
*Define member functions for the class LsodeFirstOrderODEIntegrator.*
- file [lsode\\_first\\_order\\_ode\\_integrator\\_\\_utility.cc](#)  
*Define member functions for the class LsodeFirstOrderODEIntegrator.*
- file [lsode\\_generalized\\_second\\_order\\_ode\\_integrator.cc](#)  
*Define member functions for the class LsodeGeneralizedDerivSecondOrderODEIntegrator.*
- file [lsode\\_integration\\_controls.cc](#)  
*Define the methods for the class LsodeIntegrationControls.*
- file [lsode\\_integrator\\_constructor.cc](#)  
*Define the methods in the class LsodeIntegratorConstructor.*
- file [lsode\\_second\\_order\\_ode\\_integrator.cc](#)  
*Define member functions for the class LsodeSecondOrderODEIntegrator.*
- file [lsode\\_simple\\_second\\_order\\_ode\\_integrator.cc](#)  
*Define member functions for the class LsodeSimpleSecondOrderODEIntegrator.*

### Namespaces

- [jeod](#)  
*Namespace jeod.*

## Functions

- [jeod::LsodeControlDataInterface::LsodeControlDataInterface](#) (void)  
*constructor*
- [jeod::LsodeControlDataInterface::LsodeControlDataInterface](#) (const [LsodeControlDataInterface](#) &src)  
*copy constructor*
- void [jeod::LsodeControlDataInterface::check\\_interface\\_data](#) ()  
*verifies that the input data has legal values.*
- void [jeod::LsodeControlDataInterface::allocate\\_arrays](#) ()  
*allocates space for vector-populated data to allow for restart*
- void [jeod::LsodeControlDataInterface::destroy\\_allocated\\_arrays](#) ()  
*De-allocates allocated array.*
- void [jeod::LsodeControlDataInterface::set\\_rel\\_tol](#) (int index, double value)  
*set values from external*
- void [jeod::LsodeControlDataInterface::set\\_abs\\_tol](#) (int index, double value)
- [jeod::LsodeDataJacobianPrep::LsodeDataJacobianPrep](#) (void)  
*constructor*
- [jeod::LsodeDataStode::LsodeDataStode](#) (void)  
*constructor*
- [jeod::LsodeDataArrays::LsodeDataArrays](#) (void)  
*constructor*
- void [jeod::LsodeDataArrays::allocate\\_arrays](#) (unsigned int num\_odes, [LsodeControlDataInterface::Corrector-Method](#) corrector\_method)  
*Allocates memory for the variable size arrays.*
- void [jeod::LsodeDataArrays::destroy\\_allocated\\_arrays](#) ()  
*Allows for refactoring and reallocation of newly sized arrays.*
- void [jeod::LsodeFirstOrderODEIntegrator::integrator\\_core](#) ()  
*integrator\_core provides the front-end to all of the integrator\_\*i methods, which together perform one step of the integration of an initial value problem for a system of ordinary differential equations.*
- void [jeod::LsodeFirstOrderODEIntegrator::integrator\\_reset\\_method\\_coeffs](#) ()  
*Sets/resets the method\_coeffs\_current array.*
- void [jeod::LsodeFirstOrderODEIntegrator::integrator\\_test\\_stepsize\\_change](#) ()  
*Tests h against old h.*
- void [jeod::LsodeFirstOrderODEIntegrator::integrator\\_reset\\_yh](#) ()  
*Resets history arrays and time-step.*
- void [jeod::LsodeFirstOrderODEIntegrator::integrator\\_predict](#) ()  
*This section computes the predicted values by multiplying the history array by the Pascal Triangle matrix.*
- void [jeod::LsodeFirstOrderODEIntegrator::integrator\\_reset\\_iteration\\_loop\\_part1](#) ()  
*This method resets the iteration loop to the values generated by the integrator\_predict method, which populated history[\*][0].*
- void [jeod::LsodeFirstOrderODEIntegrator::integrator\\_reset\\_iteration\\_loop\\_part2](#) ()  
*This code follows part 1 after the break-out to get to the external calls, and completes the reset of the integration iteration loop.*
- void [jeod::LsodeFirstOrderODEIntegrator::integrator\\_corrector\\_iteration](#) ()  
*Keeps looping through the iterations until convergence or failure.*
- void [jeod::LsodeFirstOrderODEIntegrator::integrator\\_corrector\\_failed\\_part1](#) ()  
*The corrector iteration failed to converge.*
- void [jeod::LsodeFirstOrderODEIntegrator::integrator\\_corrector\\_failed\\_part2](#) ()  
*Retracts the history array in the case that the correction iteration failed to converge with either functional iteration or with an up-to-date Jacobian.*
- void [jeod::LsodeFirstOrderODEIntegrator::integrator\\_corrector\\_converged](#) ()  
*Starts the processing of a converged iteration.*

- void `jeod::LsodeFirstOrderODEIntegrator::integrator_error_test_failed ()`  
*Restores the history array following the failure of the corrector for exceeding local error bounds.*
- void `jeod::LsodeFirstOrderODEIntegrator::integrator_compute_new_order_prep ()`  
*The first steps in computing whether the order of the integrator should be changed.*
- void `jeod::LsodeFirstOrderODEIntegrator::integrator_compute_new_order ()`  
*Computes the step-size scaling factors that will result once it is determined what happens to the order at the next step.*
- void `jeod::LsodeFirstOrderODEIntegrator::integrator_compute_new_order_check_step_error ()`
- void `jeod::LsodeFirstOrderODEIntegrator::integrator_set_new_order ()`  
*Sets the new order and the step-ratio for the next step - or the current step if redoing it.*
- void `jeod::LsodeFirstOrderODEIntegrator::integrator_fail_reset_order_1_part1 ()`  
*Repopulates the y-array from history, recomputes the original first derivatives, sets the order back to 1, and reduces the step size by a factor of 10.*
- void `jeod::LsodeFirstOrderODEIntegrator::integrator_fail_reset_order_1_part2 ()`  
*Continue reset, with derivatives now at hand.*
- void `jeod::LsodeFirstOrderODEIntegrator::integrator_wrapup ()`  
*Wraps up the completion of the integrator.*
- void `jeod::LsodeFirstOrderODEIntegrator::integrator_terminate ()`  
*this is the only succesful path back from integrator to manager.*
- virtual `er7_utils::IntegratorResult jeod::LsodeFirstOrderODEIntegrator::integrate (double dyn_dt, unsigned int target_stage, double const *y_dot, double *y)`  
*Propagate state via Lsode's method.*
- void `jeod::LsodeFirstOrderODEIntegrator::process_entry_point_cycle_start ()`  
*The code block from the main integrate routine for re\_entry\_point=CycleStartFinish.*
- void `jeod::LsodeFirstOrderODEIntegrator::manager_initialize_calculation_part1 ()`  
*Sets the values for the case with calculation\_phase = 1.*
- void `jeod::LsodeFirstOrderODEIntegrator::manager_initialize_calculation_part2 ()`
- int `jeod::LsodeFirstOrderODEIntegrator::manager_check_stop_conditions ()`  
*verifies whether the convergence conditions have been met to end the cycle.*
- void `jeod::LsodeFirstOrderODEIntegrator::manager_integration_loop_part1 ()`  
*The iteration loop for the integration process.*
- void `jeod::LsodeFirstOrderODEIntegrator::manager_integration_loop_part2 ()`
- void `jeod::LsodeFirstOrderODEIntegrator::manager_integration_loop_part3 ()`
- void `jeod::LsodeFirstOrderODEIntegrator::reset_integrator ()`  
*Resets the integrator when the timestep changes or when identified as needing a reset.*
- void `jeod::LsodeFirstOrderODEIntegrator::manager_set_calculation_phase_eq_2_reload ()`
- void `jeod::LsodeFirstOrderODEIntegrator::calculate_epsilon ()`  
*Identify the smallest double precision value, epsilon, such that the computer can distinguish (1+epsilon) from 1.*
- void `jeod::LsodeFirstOrderODEIntegrator::calculate_integration_coefficients ()`  
*Modified from original DCFODE subroutine.*
- void `jeod::LsodeFirstOrderODEIntegrator::interpolate_y ()`  
*Interpolates the zeroth-derivative of y Adapted from subroutine DINTDY, which was a general method for interpolating the K-th derivative of the dependent variable vector, y.*
- void `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_init ()`  
*Modified from DPREPJ.*
- bool `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_loop ()`
- bool `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_wrap_up ()`
- void `jeod::LsodeFirstOrderODEIntegrator::linear_chord_iteration ()`  
*Modified from DSOLSY.*
- void `jeod::LsodeFirstOrderODEIntegrator::load_ew_values ()`
- `jeod::LsodeFirstOrderODEIntegrator::LsodeFirstOrderODEIntegrator (void)`  
*LsodeFirstOrderODEIntegrator default constructor.*

- `jeod::LsodeFirstOrderODEIntegrator::LsodeFirstOrderODEIntegrator` (const `LsodeControlDataInterface` &data\_in, `er7_utils::IntegrationControls` &controls, unsigned int size)  
*LsodeFirstOrderODEIntegrator* non-default constructor.
- virtual `jeod::LsodeFirstOrderODEIntegrator::~~LsodeFirstOrderODEIntegrator` ()  
*LsodeFirstOrderODEIntegrator* destructor.
- void `jeod::LsodeFirstOrderODEIntegrator::update_control_data` ()  
*Gets the control data from where it can be populated in the constructor and verifies that the input control parameters are not out of sensible range.*
- virtual  
`LsodeFirstOrderODEIntegrator * jeod::LsodeFirstOrderODEIntegrator::create_copy` () const  
*Create a copy of 'this' LsodeFirstOrderODEIntegrator object.*
- double `jeod::LsodeFirstOrderODEIntegrator::magnitude_of_weighted_array` (double \*v)  
*returns the RMS value of {V dot W}, where V and W are N-vectors.*
- double `jeod::LsodeFirstOrderODEIntegrator::magnitude_of_weighted_array` (unsigned int ix, double \*\*v)  
*returns RMS value of v[\*][index]*
- int `jeod::LsodeFirstOrderODEIntegrator::gauss_elim_factor` ()  
*Factors a double array (arrays.lin\_alg) by Gaussian elimination.*
- void `jeod::LsodeFirstOrderODEIntegrator::linear_solver` ()  
*Solves the equation Y' = A Y, with A = arrays.lin\_alg.*
- unsigned int `jeod::LsodeFirstOrderODEIntegrator::index_of_max_magnitude` (unsigned int num\_points, double \*\*mx, int starting\_ix)  
*Modified version of IDAMAX.*
- void `jeod::LsodeFirstOrderODEIntegrator::load_derivatives` (double \*derivs)  
*Load the externally generated derivative values (incoming as y\_dot)i into the array derivs.*
- `jeod::LsodeGeneralizedDerivSecondOrderODEIntegrator::LsodeGeneralizedDerivSecondOrderODEIntegrator` (void)  
*LsodeGeneralizedDerivSecondOrderODEIntegrator* default constructor.
- `jeod::LsodeGeneralizedDerivSecondOrderODEIntegrator::LsodeGeneralizedDerivSecondOrderODEIntegrator` (const `LsodeControlDataInterface` &data\_in, `er7_utils::IntegrationControls` &controls, const `er7_utils::GeneralizedPositionDerivativeFunctions` &deriv\_funs, unsigned int position\_size, unsigned int velocity\_size)  
*non-default constructor*
- `jeod::LsodeGeneralizedDerivSecondOrderODEIntegrator::LsodeGeneralizedDerivSecondOrderODEIntegrator` (const `LsodeGeneralizedDerivSecondOrderODEIntegrator` &src)  
*LsodeGeneralizedDerivSecondOrderODEIntegrator* copy constructor.
- virtual  
`LsodeGeneralizedDerivSecondOrderODEIntegrator * jeod::LsodeGeneralizedDerivSecondOrderODEIntegrator::create_copy` () const  
*Clone a LsodeGeneralizedDerivSecondOrderODEIntegrator.*
- virtual `jeod::LsodeGeneralizedDerivSecondOrderODEIntegrator::~~LsodeGeneralizedDerivSecondOrderODEIntegrator` ()  
*LsodeGeneralizedDerivSecondOrderODEIntegrator* destructor.
- virtual `er7_utils::IntegratorResult jeod::LsodeGeneralizedDerivSecondOrderODEIntegrator::integrate` (double dyn\_dt, unsigned int target\_stage, double const \*accel, double \*velocity, double \*position)  
*Propagate state via Lsode's method.*
- `jeod::LsodeIntegrationControls::LsodeIntegrationControls` (void)  
*LsodeIntegrationControls* default constructor.
- `jeod::LsodeIntegrationControls::LsodeIntegrationControls` (unsigned int num\_stages)
- virtual `LsodeIntegrationControls * jeod::LsodeIntegrationControls::create_copy` () const  
*Create a copy of 'this' StandardIntegrationControls object.*
- virtual unsigned int `jeod::LsodeIntegrationControls::integrate` (double start\_time, double sim\_dt, `er7_utils::TimeInterface` &time\_interface, `er7_utils::IntegratorInterface` &integ\_interface, `er7_utils::BaseIntegrationGroup` &integ\_group)

- Perform one step of the integration process.*
- `jeod::LsodeIntegratorConstructor::LsodeIntegratorConstructor` (const `LsodeIntegratorConstructor` &src)
  - static  
`er7_utils::IntegratorConstructor * jeod::LsodeIntegratorConstructor::create_constructor` (void)  
*Named constructor; create an `LsodeIntegratorConstructor` instance.*
  - virtual  
`er7_utils::IntegratorConstructor * jeod::LsodeIntegratorConstructor::create_copy` (void) const  
*Create a duplicate of the constructor.*
  - virtual  
`er7_utils::IntegrationControls * jeod::LsodeIntegratorConstructor::create_integration_controls` (void) const  
*Create an integration controls that guides the Lsode integration process.*
  - virtual  
`er7_utils::FirstOrderODEIntegrator * jeod::LsodeIntegratorConstructor::create_first_order_ode_integrator` (unsigned int size, `er7_utils::IntegrationControls` &controls) const  
*Create an Lsode state integrator for a first order ODE.*
  - virtual  
`er7_utils::SecondOrderODEIntegrator * jeod::LsodeIntegratorConstructor::create_second_order_ode_integrator` (unsigned int size, `er7_utils::IntegrationControls` &controls) const  
*Create an Lsode state integrator for a simple second order ODE.*
  - virtual  
`er7_utils::SecondOrderODEIntegrator * jeod::LsodeIntegratorConstructor::create_generalized_deriv_second_order_ode_integrator` (unsigned int position\_size, unsigned int velocity\_size, const `er7_utils::GeneralizedPositionDerivativeFunctions` &deriv\_funs, `er7_utils::IntegrationControls` &controls) const  
*Create an Lsode state integrator for a generalized second order ODE where generalized position is advanced with the use of the position derivative function.*
  - `jeod::LsodeSecondOrderODEIntegrator::LsodeSecondOrderODEIntegrator` (void)  
*`LsodeSecondOrderODEIntegrator` default constructor.*
  - `jeod::LsodeSecondOrderODEIntegrator::LsodeSecondOrderODEIntegrator` (const `LsodeControlDataInterface` &data\_in, `er7_utils::IntegrationControls` &controls, unsigned int size)  
*`LsodeSecondOrderODEIntegrator` non-default constructor.*
  - `jeod::LsodeSecondOrderODEIntegrator::LsodeSecondOrderODEIntegrator` (const `LsodeControlDataInterface` &data\_in, `er7_utils::IntegrationControls` &controls, const `er7_utils::GeneralizedPositionDerivativeFunctions` &deriv\_funs, unsigned int position\_size, unsigned int velocity\_size)
  - virtual `jeod::LsodeSecondOrderODEIntegrator::~~LsodeSecondOrderODEIntegrator` ()  
*`LsodeSecondOrderODEIntegrator` destructor.*
  - `jeod::LsodeSimpleSecondOrderODEIntegrator::LsodeSimpleSecondOrderODEIntegrator` (void)  
*`LsodeSimpleSecondOrderODEIntegrator` default constructor.*
  - `jeod::LsodeSimpleSecondOrderODEIntegrator::LsodeSimpleSecondOrderODEIntegrator` (const `LsodeControlDataInterface` &data\_in, `er7_utils::IntegrationControls` &controls, unsigned int size)  
*`LsodeSimpleSecondOrderODEIntegrator` non-default constructor.*
  - virtual  
`LsodeSimpleSecondOrderODEIntegrator * jeod::LsodeSimpleSecondOrderODEIntegrator::create_copy` () const
  - virtual `er7_utils::IntegratorResult jeod::LsodeSimpleSecondOrderODEIntegrator::integrate` (double dyn\_dt, unsigned int target\_stage, double const \*accel, double \*velocity, double \*position)  
*Propagate state via Lsode's method.*

### 6.5.1 Detailed Description

### 6.5.2 Function Documentation

### 6.5.2.1 void LsodeDataArrays::allocate\_arrays ( unsigned int *num\_odes*, LsodeControlDataInterface::Corrector-Method *corrector\_method* )

Allocates memory for the variable size arrays.

Definition at line 107 of file `Lsode_data_classes.cc`.

References `jeod::LsodeDataArrays::accum_correction`, `jeod::LsodeDataArrays::allocated`, `jeod::LsodeDataArrays::error_weight`, `jeod::LsodeControlDataInterface::FunctionalIteration`, `jeod::LsodeDataArrays::history`, `jeod::LsodeControlDataInterface::JacobiNewtonInternalJac`, `jeod::LsodeDataArrays::lin_alg`, `jeod::LsodeDataArrays::lin_alg_index1`, `jeod::LsodeControlDataInterface::NewtonIterInternalJac`, `jeod::LsodeControlDataInterface::NewtonIterUserJac`, `jeod::LsodeDataArrays::num_odes`, `jeod::LsodeDataArrays::pivots`, and `jeod::LsodeDataArrays::save`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::manager_initialize_calculation_part1()`.

### 6.5.2.2 void LsodeControlDataInterface::allocate\_arrays ( )

allocates space for vector-populated data to allow for restart

Definition at line 290 of file `Lsode_control_data_interface.cc`.

References `jeod::LsodeControlDataInterface::abs_tolerance_error_control`, `jeod::LsodeControlDataInterface::abs_tolerance_error_control_vec`, `jeod::LsodeControlDataInterface::error_control_vector_copied_over`, `jeod::LsodeControlDataInterface::num_odes`, `jeod::LsodeControlDataInterface::num_odes_at_alloc`, `jeod::LsodeControlDataInterface::rel_tolerance_error_control`, and `jeod::LsodeControlDataInterface::rel_tolerance_error_control_vec`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::manager_initialize_calculation_part1()`.

### 6.5.2.3 void LsodeFirstOrderODEIntegrator::calculate\_epsilon ( ) [protected]

Identify the smallest double precision value, epsilon, such that the computer can distinguish (1+epsilon) from 1.

Definition at line 58 of file `Lsode_first_order_ode_integrator__support.cc`.

References `jeod::LsodeFirstOrderODEIntegrator::epsilon`, and `jeod::LsodeFirstOrderODEIntegrator::sqrt_epsilon`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::LsodeFirstOrderODEIntegrator()`.

### 6.5.2.4 void LsodeFirstOrderODEIntegrator::calculate\_integration\_coefficients ( ) [protected]

Modified from original DCFODE subroutine.

`calculate_integration_coefficients` is called by `dstode` to set coefficients needed there. The coefficients for the current method, as given by the value of `integration_method`, are set for all orders and saved. The maximum order assumed here is 12 if `integration_method` = `ImplicitAdamsNonStiff` and 5 if `integration_method` = `ImplicitBackDiffStiff`.

NOTE - A smaller value of the maximum order is also allowed and may be set by the user with the value `control_data.max_order`, which gets copied to the protected value `max_order_internal`.

`calculate_integration_coefficients` is called once at the beginning of the problem, and again only if `integration_method` is changed.

The coefficients are stored in two arrays: `method_coeffs_complete` is a 13x12 array that contains a complete set of coefficients for the method `test_coeffs_complete` is a 3x12 array that contains the coefficients for local error tests and selection of the step size and/or order. The 1st set of 12 coeffs is for order `method_order_current` - 1 The 2nd set of 12 coeffs is for order `method_order_current` The 3rd set of 12 coeffs is for order `method_order_current` + 1

The coefficients in `method_coeffs_complete` are computed by a generating polynomial. For a given order (note that order changes during the integration process up to the maximum allowable, and is identified in the integrator as the variable `method_order_current`), abbreviate `method_coeffs_complete[i][order-1]` to `mcc[i]`

Then  $l(x) = mcc[0] + (mcc[1] * x) + (mcc[2] * x^2) + \dots + mcc[order] * (x^{order})$  For the implicit Adams methods,  $l(x)$  is given by  $dl/dx = (x+1)*(x+2)*\dots*(x+order-1)/(order-1)!$ ,  $l(-1) = 0.$ ; For the BDF methods,  $l(x)$  is given by  $l(x) = (x+1)*(x+2)*\dots*(x+order) / ((order)! * (1 + 1/2 + \dots + 1/order))$



(! represents factorial)

Note that while `method_coeffs_compelte` is a rectangular array for convenience, it is effectively a triangular array since `method_coeffs_complete[i][order-1]` has no meaning for  $i \geq (\text{order} + 2)$  `order=1: method_coeffs_complete[0-1][0]` `order=2: method_coeffs_complete[0-2][1]` ... `order=12: method_coeffs_complete[0-12][11]` Hence a 13x12 array.

Definition at line 121 of file `lsode_first_order_ode_integrator__support.cc`.

References `jeod::LsodeFirstOrderODEIntegrator::control_data`, `jeod::LsodeControlDataInterface::ImplicitAdamsNonStiff`, `jeod::LsodeControlDataInterface::ImplicitBackDiffStiff`, `jeod::LsodeControlDataInterface::integration_method`, `jeod::LsodeFirstOrderODEIntegrator::method_coeffs_complete`, and `jeod::LsodeFirstOrderODEIntegrator::test_coeffs_complete`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::integrator_core()`.

#### 6.5.2.5 void LsodeControlDataInterface::check\_interface\_data ( )

verifies that the input data has legal values.

Definition at line 113 of file `lsode_control_data_interface.cc`.

References `jeod::LsodeControlDataInterface::abs_tolerance_error_control_vec`, `jeod::LsodeControlDataInterface::CommonAbsSpecificRel`, `jeod::LsodeControlDataInterface::corrector_method`, `jeod::LsodeControlDataInterface::error_control_indicator`, `jeod::LsodeControlDataInterface::error_control_vector_copied_over`, `jeod::LsodeControlDataInterface::integration_method`, `jeod::LsodeControlDataInterface::max_num_small_step_warnings`, `jeod::LsodeControlDataInterface::max_num_steps`, `jeod::LsodeControlDataInterface::max_order`, `jeod::LsodeControlDataInterface::max_step_size`, `jeod::LsodeControlDataInterface::min_step_size`, `jeod::LsodeControlDataInterface::num_odes`, `jeod::LsodeControlDataInterface::rel_tolerance_error_control_vec`, `jeod::LsodeControlDataInterface::SpecificAbsCommonRel`, and `jeod::LsodeControlDataInterface::SpecificAbsSpecificRel`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::update_control_data()`.

#### 6.5.2.6 er7\_utils::IntegratorConstructor \* LsodeIntegratorConstructor::create\_constructor ( void ) [static]

Named constructor; create an [LsodeIntegratorConstructor](#) instance.

The caller is responsible for deleting the returned object.

##### Returns

Newly created [LsodeIntegratorConstructor](#) instance.

Definition at line 67 of file `lsode_integrator_constructor.cc`.

#### 6.5.2.7 LsodeIntegrationControls \* LsodeIntegrationControls::create\_copy ( void ) const [virtual]

Create a copy of 'this' `StandardIntegrationControls` object.

##### Returns

Clone of 'this'.

Definition at line 61 of file `lsode_integration_controls.cc`.

#### 6.5.2.8 LsodeGeneralizedDerivSecondOrderODEIntegrator \* LsodeGeneralizedDerivSecondOrderODEIntegrator::create\_copy ( void ) const [virtual]

Clone a [LsodeGeneralizedDerivSecondOrderODEIntegrator](#).

Definition at line 97 of file `lsode_generalized_second_order_ode_integrator.cc`.

**6.5.2.9** `LsodeSimpleSecondOrderODEIntegrator * LsodeSimpleSecondOrderODEIntegrator::create_copy ( void ) const` `[virtual]`

Definition at line 70 of file `lsode_simple_second_order_ode_integrator.cc`.

**6.5.2.10** `er7_utils::IntegratorConstructor * LsodeIntegratorConstructor::create_copy ( void ) const` `[virtual]`

Create a duplicate of the constructor.

The caller is responsible for deleting the returned object.

**Returns**

Duplicated constructor.

Definition at line 75 of file `lsode_integrator_constructor.cc`.

**6.5.2.11** `LsodeFirstOrderODEIntegrator * LsodeFirstOrderODEIntegrator::create_copy ( void ) const` `[virtual]`

Create a copy of 'this' [LsodeFirstOrderODEIntegrator](#) object.

**Returns**

Clone of 'this'.

Definition at line 247 of file `lsode_first_order_ode_integrator__utility.cc`.

**6.5.2.12** `er7_utils::FirstOrderODEIntegrator * LsodeIntegratorConstructor::create_first_order_ode_integrator ( unsigned int size, er7_utils::IntegrationControls & controls ) const` `[virtual]`

Create an Lsode state integrator for a first order ODE.

The caller is responsible for deleting the created object.

**Returns**

State integrator

**Parameters**

<code>in</code>	<code>size</code>	State size
<code>in, out</code>	<code>controls</code>	Integration controls

Definition at line 95 of file `lsode_integrator_constructor.cc`.

References `jeod::LsodeIntegratorConstructor::data_interface`.

**6.5.2.13** `er7_utils::SecondOrderODEIntegrator * LsodeIntegratorConstructor::create_generalized_deriv-_second_order_ode_integrator ( unsigned int position_size, unsigned int velocity_size, const er7_utils::GeneralizedPositionDerivativeFunctions & deriv_funs, er7_utils::IntegrationControls & controls ) const` `[virtual]`

Create an Lsode state integrator for a generalized second order ODE where generalized position is advanced with the use of the position derivative function.

The caller is responsible for deleting the created object.

**Returns**

State integrator

## Parameters

in	<i>position_size</i>	Size of the generalized position
in	<i>velocity_size</i>	Size of the generalized velocity
in	<i>deriv_funs</i>	Position derivative functions container
in, out	<i>controls</i>	Integration controls

Definition at line 133 of file `lsode_integrator_constructor.cc`.

References `jeod::LsodeIntegratorConstructor::data_interface`.

**6.5.2.14** `er7_utils::IntegrationControls * LsodeIntegratorConstructor::create_integration_controls ( void ) const`  
`[virtual]`

Create an integration controls that guides the Lsode integration process.

The caller is responsible for deleting the created object.

## Returns

Integration controls object

Definition at line 85 of file `lsode_integrator_constructor.cc`.

**6.5.2.15** `er7_utils::SecondOrderODEIntegrator * LsodeIntegratorConstructor::create_second_order_ode_integrator ( unsigned int size, er7_utils::IntegrationControls & controls ) const` `[virtual]`

Create an Lsode state integrator for a simple second order ODE.

The caller is responsible for deleting the created object.

## Returns

State integrator

## Parameters

in	<i>size</i>	State size
in, out	<i>controls</i>	Integration controls

Definition at line 114 of file `lsode_integrator_constructor.cc`.

References `jeod::LsodeIntegratorConstructor::data_interface`.

**6.5.2.16** `void LsodeDataArrays::destroy_allocated_arrays ( )`

Allows for refactoring and reallocation of newly sized arrays.

Definition at line 202 of file `lsode_data_classes.cc`.

References `jeod::LsodeDataArrays::accum_correction`, `jeod::LsodeDataArrays::allocated`, `jeod::LsodeDataArrays::error_weight`, `jeod::LsodeDataArrays::history`, `jeod::LsodeDataArrays::lin_alg`, `jeod::LsodeDataArrays::lin_alg_index1`, `jeod::LsodeDataArrays::num_odes`, `jeod::LsodeDataArrays::pivots`, and `jeod::LsodeDataArrays::save`.

Referenced by `jeod::LsodeDataArrays::~~LsodeDataArrays()`, and `jeod::LsodeFirstOrderODEIntegrator::~~LsodeFirstOrderODEIntegrator()`.

**6.5.2.17** `void LsodeControlDataInterface::destroy_allocated_arrays ( )`

De-allocates allocated array.

Definition at line 336 of file `lsode_control_data_interface.cc`.

References `jeod::LsodeControlDataInterface::abs_tolerance_error_control`, `jeod::LsodeControlDataInterface::error_control_vector_copied_over`, and `jeod::LsodeControlDataInterface::rel_tolerance_error_control`.

Referenced by `jeod::LsodeControlDataInterface::~~LsodeControlDataInterface()`, and `jeod::LsodeFirstOrderODEIntegrator::~~LsodeFirstOrderODEIntegrator()`.

#### 6.5.2.18 `int LsodeFirstOrderODEIntegrator::gauss_elim_factor ( ) [protected]`

Factors a double array (`arrays.lin_alg`) by Gaussian elimination.

Modified version of DGEFA.

Definition at line 314 of file `lsode_first_order_ode_integrator__utility.cc`.

References `jeod::LsodeFirstOrderODEIntegrator::arrays`, `jeod::LsodeFirstOrderODEIntegrator::control_data`, `jeod::LsodeFirstOrderODEIntegrator::index_of_max_magnitude()`, `jeod::LsodeDataArrays::lin_alg`, `jeod::LsodeControlDataInterface::num_odes`, and `jeod::LsodeDataArrays::pivots`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_wrap_up()`.

#### 6.5.2.19 `unsigned int LsodeFirstOrderODEIntegrator::index_of_max_magnitude ( unsigned int num_points, double ** array, int start_ix ) [protected]`

Modified version of IDAMAX.

IDAMAX has 2 operations, one for situations in which the index increments by 1, and another for the converse. Since all instances in LSODE use the unit-increment method, that is the only one represented here. Search through matrix "array", starting at `array[start_ix_1][start_ix_2]` for the next "num\_points" elements. The boolean `search_ix_1` controls whether to increment index#1 (true), or index#2 (false). Method returns the searched index that corresponds to the largest magnitude.

#### Note

The only call to this method passed "k" in for both indices, so I stripped the second argument. If DGBFA gets implemented, it will have to be added back in; the call from DGBFA is for array starting at (M,K)

Definition at line 479 of file `lsode_first_order_ode_integrator__utility.cc`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::gauss_elim_factor()`.

#### 6.5.2.20 `unsigned int LsodeIntegrationControls::integrate ( double start_time, double sim_dt, er7_utils::TimeInterface & time_interface, er7_utils::IntegratorInterface & integ_interface, er7_utils::BaseIntegrationGroup & integ_group ) [virtual]`

Perform one step of the integration process.

Definition at line 75 of file `lsode_integration_controls.cc`.

#### 6.5.2.21 `er7_utils::IntegratorResult LsodeGeneralizedDerivSecondOrderODEIntegrator::integrate ( double dyn_dt, unsigned int target_stage, double const * accel, double * velocity, double * position ) [virtual]`

Propagate state via Lsode's method.

#### Parameters

---

in	<i>dyn_dt</i>	Integration interval step, dynamic time seconds.
in	<i>target_stage</i>	The stage of the integration process that the integrator should try to attain.
in, out	<i>y_dot</i>	Generalized velocity vector.
in, out	<i>y</i>	Generalized position vector.

**Returns**

The status (time advance, pass/fail status) of the integration.

Definition at line 120 of file `lsode_generalized_second_order_ode_integrator.cc`.

References `jeod::LsodeSecondOrderODEIntegrator::first_derivative_size`, `jeod::LsodeSecondOrderODEIntegrator::first_order_integrator`, `jeod::LsodeFirstOrderODEIntegrator::integrate()`, `jeod::LsodeGeneralizedDerivSecondOrderODEIntegrator::posdot`, `jeod::LsodeSecondOrderODEIntegrator::y`, `jeod::LsodeSecondOrderODEIntegrator::y_dot`, and `jeod::LsodeSecondOrderODEIntegrator::zeroth_derivative_size`.

**6.5.2.22** `er7_utils::IntegratorResult LsodeSimpleSecondOrderODEIntegrator::integrate ( double dyn_dt, unsigned int target_stage, double const * accel, double * velocity, double * position ) [virtual]`

Propagate state via Lsode's method.

**Parameters**

in	<i>dyn_dt</i>	Integration interval step, dynamic time seconds.
in	<i>target_stage</i>	The stage of the integration process that the integrator should try to attain.
in, out	<i>y_dot</i>	Generalized velocity vector.
in, out	<i>y</i>	Generalized position vector.

**Returns**

The status (time advance, pass/fail status) of the integration.

Definition at line 83 of file `lsode_simple_second_order_ode_integrator.cc`.

References `jeod::LsodeSecondOrderODEIntegrator::first_order_integrator`, `jeod::LsodeFirstOrderODEIntegrator::integrate()`, `jeod::LsodeSecondOrderODEIntegrator::y`, `jeod::LsodeSecondOrderODEIntegrator::y_dot`, and `jeod::LsodeSecondOrderODEIntegrator::zeroth_derivative_size`.

**6.5.2.23** `er7_utils::IntegratorResult LsodeFirstOrderODEIntegrator::integrate ( double dyn_dt, unsigned int target_stage, double const * y_dot, double * y ) [virtual]`

Propagate state via Lsode's method.

Propagate state via the LSODE method.

**Parameters**

in	<i>dyn_dt</i>	Integration interval step, dynamic time seconds.
in	<i>target_stage</i>	The stage of the integration process that the integrator should try to attain.
in, out	<i>y_dot</i>	Generalized velocity vector.
in, out	<i>y</i>	Generalized position vector.

**Returns**

The status (time advance, pass/fail status) of the integration.

Definition at line 59 of file `lsode_first_order_ode_integrator__manager.cc`.

References `jeod::LsodeFirstOrderODEIntegrator::arrays`, `jeod::LsodeFirstOrderODEIntegrator::cycle_target_time`, `jeod::LsodeFirstOrderODEIntegrator::CycleStartFinish`, `jeod::LsodeFirstOrderODEIntegrator::DstateResetStep`, `jeod::LsodeFirstOrderODEIntegrator::InitCalc`, `jeod::LsodeFirstOrderODEIntegrator::integrator_corrector_iteration()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_fail_reset_order_1_part2()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_reset_iteration_loop_part2()`, `jeod::LsodeFirstOrderODEIntegrator::IterationLoop`, `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_init()`, `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_loop()`, `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_wrap_up()`, `jeod::LsodeFirstOrderODEIntegrator::JacobianPrep`, `jeod::LsodeFirstOrderODEIntegrator::load_derivatives()`, `jeod::LsodeFirstOrderODEIntegrator::manager_initialize_calculation_part2()`, `jeod::LsodeFirstOrderODEIntegrator::manager_integration_loop_part2()`, `jeod::LsodeFirstOrderODEIntegrator::manager_integration_loop_part3()`, `jeod::LsodeFirstOrderODEIntegrator::process_entry_point_cycle_start()`, `jeod::LsodeFirstOrderODEIntegrator::re_entry_point`, `jeod::LsodeFirstOrderODEIntegrator::ResetIterLoop`, `jeod::LsodeDataArrays::save`, `jeod::LsodeFirstOrderODEIntegrator::stage_target_time`, `jeod::LsodeFirstOrderODEIntegrator::step_error`, `jeod::LsodeFirstOrderODEIntegrator::update_jacobian`, `jeod::LsodeFirstOrderODEIntegrator::y`, and `jeod::LsodeFirstOrderODEIntegrator::y_dot`.

Referenced by `jeod::LsodeGeneralizedDerivSecondOrderODEIntegrator::integrate()`, and `jeod::LsodeSimpleSecondOrderODEIntegrator::integrate()`.

#### 6.5.2.24 `void LsodeFirstOrderODEIntegrator::integrator_compute_new_order ( )` [protected]

Computes the step-size scaling factors that will result once it is determined what happens to the order at the next step.

Definition at line 748 of file `lsode_first_order_ode_integrator__integrator.cc`.

References `jeod::LsodeDataArrays::accum_correction`, `jeod::LsodeFirstOrderODEIntegrator::arrays`, `jeod::LsodeFirstOrderODEIntegrator::control_data`, `jeod::LsodeFirstOrderODEIntegrator::data_stode`, `jeod::LsodeDataStode::dsm`, `jeod::LsodeDataArrays::history`, `jeod::LsodeFirstOrderODEIntegrator::integrator_compute_new_order_check_step_error()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_set_new_order()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_wrapup()`, `jeod::LsodeFirstOrderODEIntegrator::magnitude_of_weighted_array()`, `jeod::LsodeFirstOrderODEIntegrator::method_coeffs_current`, `jeod::LsodeFirstOrderODEIntegrator::method_order_current`, `jeod::LsodeDataStode::new_method_order`, `jeod::LsodeFirstOrderODEIntegrator::num_nordsiek_cols`, `jeod::LsodeControlDataInterface::num_odes`, `jeod::LsodeFirstOrderODEIntegrator::order_select_para`, `jeod::LsodeDataStode::step_ratio`, `jeod::LsodeDataStode::step_ratio_order_inc`, and `jeod::LsodeFirstOrderODEIntegrator::test_coeffs_complete`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::integrator_compute_new_order_prep()`, and `jeod::LsodeFirstOrderODEIntegrator::integrator_error_test_failed()`.

#### 6.5.2.25 `void LsodeFirstOrderODEIntegrator::integrator_compute_new_order_check_step_error ( )` [protected]

Definition at line 817 of file `lsode_first_order_ode_integrator__integrator.cc`.

References `jeod::LsodeFirstOrderODEIntegrator::data_stode`, `jeod::LsodeFirstOrderODEIntegrator::integrator_set_new_order()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_wrapup()`, `jeod::LsodeFirstOrderODEIntegrator::order_select_para`, `jeod::LsodeFirstOrderODEIntegrator::step_error`, and `jeod::LsodeDataStode::step_ratio`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::integrator_compute_new_order()`.

#### 6.5.2.26 `void LsodeFirstOrderODEIntegrator::integrator_compute_new_order_prep ( )` [protected]

The first steps in computing whether the order of the integrator should be changed.

Regardless of the success or failure of the step, the step-ratio factors for an increase, decrease, or retention of the integrator order are computed. In the case of failure, the increase ratio (`data_stode.step_ratio_order_inc`) has already been set to 0.0 to prevent an order increase. The largest of these factors is determined and the new order chosen accordingly. In the unusual case of equality, the priority is given to:

1. retain the order

2. increase the order (if  $\text{inc} = \text{dec} > \text{same}$ )

If the order is to be increased, we compute one additional scaled derivative.

This process is spread over four methods - `integrator_compute_new_order_prep` `integrator_compute_new_order` `integrator_compute_new_order_check_step_error` `integrator_set_new_order`

extracted from lines 520-540

Definition at line 723 of file `lsode_first_order_ode_integrator__integrator.cc`.

References `jeod::LsodeDataArrays::accum_correction`, `jeod::LsodeFirstOrderODEIntegrator::arrays`, `jeod::LsodeFirstOrderODEIntegrator::control_data`, `jeod::LsodeFirstOrderODEIntegrator::data_stode`, `jeod::LsodeDataArrays::history`, `jeod::LsodeFirstOrderODEIntegrator::integrator_compute_new_order()`, `jeod::LsodeFirstOrderODEIntegrator::magnitude_of_weighted_array()`, `jeod::LsodeFirstOrderODEIntegrator::max_history_size`, `jeod::LsodeFirstOrderODEIntegrator::method_order_current`, `jeod::LsodeFirstOrderODEIntegrator::num_nordsiek_cols`, `jeod::LsodeControlDataInterface::num_odes`, `jeod::LsodeDataArrays::save`, `jeod::LsodeDataStode::step_ratio_order_inc`, and `jeod::LsodeFirstOrderODEIntegrator::test_coeffs_complete`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::integrator_corrector_converged()`.

#### 6.5.2.27 `void LsodeFirstOrderODEIntegrator::integrator_core ( )` [protected]

`integrator_core` provides the front-end to all of the `integrator_*i` methods, which together perform one step of the integration of an initial value problem for a system of ordinary differential equations.

Modified from DSTODE

NOTES: The entire `integrator_*` suite is independent of the value of the iteration method indicator, `corrector_method`, when said is  $\neq 0$ , and hence is independent of the type of chord method used, or the Jacobian structure.

The value `internal_state` (JSTART) controls the direction that this method takes.

By commenting out substantial parts of the package that are not useful to the ER7 / JEOD / Trick implementation, the only viable values for `internal_state` are now 0 or 1. `internal_state = 0` : take the first step. `internal_state = 1` : take another step, continuing from the last. `internal_state = -1` was associated with externally driven changes to the input aparameters, something we do not allow. `internal_state = -2` is associated with the critical / singularity time avoidance, something we have not implemented.

Definition at line 77 of file `lsode_first_order_ode_integrator__integrator.cc`.

References `jeod::LsodeFirstOrderODEIntegrator::arrays`, `jeod::LsodeFirstOrderODEIntegrator::calculate_integration_coefficients()`, `jeod::LsodeFirstOrderODEIntegrator::control_data`, `jeod::LsodeFirstOrderODEIntegrator::convergence_factor`, `jeod::LsodeFirstOrderODEIntegrator::convergence_jacobian_flag`, `jeod::LsodeFirstOrderODEIntegrator::convergence_rate`, `jeod::LsodeFirstOrderODEIntegrator::data_stode`, `jeod::LsodeControlDataInterface::integration_method`, `jeod::LsodeFirstOrderODEIntegrator::integrator_predict()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_reset_method_coeffs()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_reset_yh()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_test_stepsize_change()`, `jeod::LsodeFirstOrderODEIntegrator::internal_state`, `jeod::LsodeDataStode::iredo`, `jeod::LsodeDataStode::iret`, `jeod::LsodeControlDataInterface::is_corrector_method_functional_iteration()`, `jeod::LsodeFirstOrderODEIntegrator::iteration_matrix_singular`, `jeod::LsodeFirstOrderODEIntegrator::jacobian_current`, `jeod::LsodeFirstOrderODEIntegrator::magnitude_of_weighted_array()`, `jeod::LsodeFirstOrderODEIntegrator::max_history_size`, `jeod::LsodeFirstOrderODEIntegrator::max_order_internal`, `jeod::LsodeFirstOrderODEIntegrator::max_step_increase_ratio`, `jeod::LsodeFirstOrderODEIntegrator::method_coeff_first`, `jeod::LsodeFirstOrderODEIntegrator::method_coeffs_complete`, `jeod::LsodeFirstOrderODEIntegrator::method_coeffs_current`, `jeod::LsodeFirstOrderODEIntegrator::method_order_current`, `jeod::LsodeControlDataInterface::min_step_size`, `jeod::LsodeFirstOrderODEIntegrator::modified_iteration_matrix_singular`, `jeod::LsodeDataStode::ncf`, `jeod::LsodeFirstOrderODEIntegrator::num_equations`, `jeod::LsodeFirstOrderODEIntegrator::num_nordsiek_cols`, `jeod::LsodeFirstOrderODEIntegrator::num_predictor_elements`, `jeod::LsodeFirstOrderODEIntegrator::order_select_para`, `jeod::LsodeFirstOrderODEIntegrator::prev_integration_method`, `jeod::LsodeFirstOrderODEIntegrator::prev_step_size`, `jeod::LsodeFirstOrderODEIntegrator::rel_change_since_jacobian`, `jeod::LsodeDataArrays::save`, `jeod::LsodeFirstOrderODEIntegrator::stage_target_time`, `jeod::LsodeFirstOrderODEIntegrator::step_at_last_jacobian_update`, `jeod::LsodeFirstOrderODEIntegrator::step_error`, `jeod::LsodeDataStode::step_ratio`, `jeod::LsodeFirstOrderODEIntegrator::step_size`, `jeod::LsodeFirstOrderODEIntegrator::test_coeffs_`

complete, jeod::LsodeDataStode::told, and jeod::LsodeFirstOrderODEIntegrator::update\_jacobian.

Referenced by jeod::LsodeFirstOrderODEIntegrator::manager\_integration\_loop\_part2().

#### 6.5.2.28 void LsodeFirstOrderODEIntegrator::integrator\_corrector\_converged ( ) [protected]

Starts the processing of a converged iteration.

Definition at line 590 of file lsode\_first\_order\_ode\_integrator\_\_integrator.cc.

References jeod::LsodeDataArrays::accum\_correction, jeod::LsodeFirstOrderODEIntegrator::arrays, jeod::LsodeFirstOrderODEIntegrator::control\_data, jeod::LsodeFirstOrderODEIntegrator::data\_stode, jeod::LsodeDataStode::dsm, jeod::LsodeDataArrays::history, jeod::LsodeFirstOrderODEIntegrator::integrator\_compute\_new\_order\_prep(), jeod::LsodeFirstOrderODEIntegrator::integrator\_error\_test\_failed(), jeod::LsodeFirstOrderODEIntegrator::integrator\_wrapup(), jeod::LsodeDataStode::iredo, jeod::LsodeFirstOrderODEIntegrator::iter\_delta, jeod::LsodeFirstOrderODEIntegrator::iteration\_count, jeod::LsodeFirstOrderODEIntegrator::jacobian\_current, jeod::LsodeFirstOrderODEIntegrator::magnitude\_of\_weighted\_array(), jeod::LsodeFirstOrderODEIntegrator::max\_history\_size, jeod::LsodeFirstOrderODEIntegrator::method\_coeffs\_current, jeod::LsodeFirstOrderODEIntegrator::method\_order\_current, jeod::LsodeFirstOrderODEIntegrator::num\_nordsiek\_cols, jeod::LsodeControlDataInterface::num\_odes, jeod::LsodeFirstOrderODEIntegrator::num\_steps\_taken, jeod::LsodeFirstOrderODEIntegrator::order\_select\_para, jeod::LsodeFirstOrderODEIntegrator::prev\_good\_step\_size, jeod::LsodeFirstOrderODEIntegrator::prev\_method\_order, jeod::LsodeFirstOrderODEIntegrator::step\_error, jeod::LsodeFirstOrderODEIntegrator::step\_size, and jeod::LsodeFirstOrderODEIntegrator::test\_coeffs\_complete.

Referenced by jeod::LsodeFirstOrderODEIntegrator::integrator\_corrector\_iteration().

#### 6.5.2.29 void LsodeFirstOrderODEIntegrator::integrator\_corrector\_failed\_part1 ( ) [protected]

The corrector iteration failed to converge.

If corrector\_method != FunctionalIteration and the Jacobian is out of date, exit so that the Jacobian method can be called (externally) for the next try. Otherwise, try changing the step-size in part 2 of the failure recovery.

Extracted from DSTODE lines 410-430

Definition at line 516 of file lsode\_first\_order\_ode\_integrator\_\_integrator.cc.

References jeod::LsodeFirstOrderODEIntegrator::control\_data, jeod::LsodeFirstOrderODEIntegrator::convergence\_jacobian\_flag, jeod::LsodeFirstOrderODEIntegrator::integrator\_corrector\_failed\_part2(), jeod::LsodeFirstOrderODEIntegrator::integrator\_reset\_iteration\_loop\_part1(), jeod::LsodeControlDataInterface::is\_corrector\_method\_functional\_iteration(), jeod::LsodeFirstOrderODEIntegrator::jacobian\_current, and jeod::LsodeFirstOrderODEIntegrator::update\_jacobian.

Referenced by jeod::LsodeFirstOrderODEIntegrator::integrator\_corrector\_iteration().

#### 6.5.2.30 void LsodeFirstOrderODEIntegrator::integrator\_corrector\_failed\_part2 ( ) [protected]

Retracts the history array in the case that the correction iteration failed to converge with either functional iteration or with an up-to-date Jacobian.

If there are problems, the associated flags are set.

Definition at line 544 of file lsode\_first\_order\_ode\_integrator\_\_integrator.cc.

References jeod::LsodeFirstOrderODEIntegrator::arrays, jeod::LsodeFirstOrderODEIntegrator::control\_data, jeod::LsodeFirstOrderODEIntegrator::convergence\_jacobian\_flag, jeod::LsodeFirstOrderODEIntegrator::data\_stode, jeod::LsodeDataArrays::history, jeod::LsodeFirstOrderODEIntegrator::integrator\_reset\_yh(), jeod::LsodeFirstOrderODEIntegrator::integrator\_terminate(), jeod::LsodeDataStode::iredo, jeod::LsodeControlDataInterface::is\_corrector\_method\_functional\_iteration(), jeod::LsodeControlDataInterface::max\_num\_conv\_failure, jeod::LsodeFirstOrderODEIntegrator::max\_step\_increase\_ratio, jeod::LsodeFirstOrderODEIntegrator::method\_order\_current, jeod::LsodeControlDataInterface::min\_step\_size, jeod::LsodeDataStode::ncf, jeod::LsodeFirstOrderODEIntegrator::num\_equations, jeod::LsodeFirstOrderODEIntegrator::stage\_target\_time, jeod::LsodeFirstOrderODEIntegrator::



::step\_error, jeod::LsodeDataStode::step\_ratio, jeod::LsodeFirstOrderODEIntegrator::step\_size, jeod::LsodeDataStode::told, and jeod::LsodeFirstOrderODEIntegrator::update\_jacobian.

Referenced by jeod::LsodeFirstOrderODEIntegrator::integrator\_corrector\_failed\_part1(), and jeod::LsodeFirstOrderODEIntegrator::jacobian\_prep\_wrap\_up().

#### 6.5.2.31 void LsodeFirstOrderODEIntegrator::integrator\_corrector\_iteration ( ) [protected]

Keeps looping through the iterations until convergence or failure.

Definition at line 414 of file lsode\_first\_order\_ode\_integrator\_\_integrator.cc.

References jeod::LsodeDataArrays::accum\_correction, jeod::LsodeFirstOrderODEIntegrator::arrays, jeod::LsodeFirstOrderODEIntegrator::control\_data, jeod::LsodeFirstOrderODEIntegrator::convergence\_factor, jeod::LsodeFirstOrderODEIntegrator::convergence\_rate, jeod::LsodeDataArrays::history, jeod::LsodeFirstOrderODEIntegrator::integrator\_corrector\_converged(), jeod::LsodeFirstOrderODEIntegrator::integrator\_corrector\_failed\_part1(), jeod::LsodeControlDataInterface::is\_corrector\_method\_functional\_iteration(), jeod::LsodeFirstOrderODEIntegrator::iter\_delta, jeod::LsodeFirstOrderODEIntegrator::iteration\_count, jeod::LsodeFirstOrderODEIntegrator::IterationLoop, jeod::LsodeFirstOrderODEIntegrator::linear\_chord\_iteration(), jeod::LsodeFirstOrderODEIntegrator::magnitude\_of\_weighted\_array(), jeod::LsodeControlDataInterface::max\_correction\_iters, jeod::LsodeFirstOrderODEIntegrator::method\_coeffs\_current, jeod::LsodeFirstOrderODEIntegrator::method\_order\_current, jeod::LsodeFirstOrderODEIntegrator::modified\_iteration\_matrix\_singular, jeod::LsodeControlDataInterface::num\_odes, jeod::LsodeFirstOrderODEIntegrator::prev\_iter\_delta, jeod::LsodeFirstOrderODEIntegrator::re\_entry\_point, jeod::LsodeDataArrays::save, jeod::LsodeFirstOrderODEIntegrator::step\_size, jeod::LsodeFirstOrderODEIntegrator::test\_coeffs\_complete, and jeod::LsodeFirstOrderODEIntegrator::y.

Referenced by jeod::LsodeFirstOrderODEIntegrator::integrate().

#### 6.5.2.32 void LsodeFirstOrderODEIntegrator::integrator\_error\_test\_failed ( ) [protected]

Restores the history array following the failure of the corrector for exceeding local error bounds.

Definition at line 662 of file lsode\_first\_order\_ode\_integrator\_\_integrator.cc.

References jeod::LsodeFirstOrderODEIntegrator::arrays, jeod::LsodeFirstOrderODEIntegrator::control\_data, jeod::LsodeFirstOrderODEIntegrator::data\_stode, jeod::LsodeDataArrays::history, jeod::LsodeFirstOrderODEIntegrator::integrator\_compute\_new\_order(), jeod::LsodeFirstOrderODEIntegrator::integrator\_fail\_reset\_order\_1\_part1(), jeod::LsodeFirstOrderODEIntegrator::integrator\_terminate(), jeod::LsodeDataStode::iredo, jeod::LsodeFirstOrderODEIntegrator::max\_step\_increase\_ratio, jeod::LsodeFirstOrderODEIntegrator::method\_order\_current, jeod::LsodeControlDataInterface::min\_step\_size, jeod::LsodeFirstOrderODEIntegrator::num\_equations, jeod::LsodeFirstOrderODEIntegrator::stage\_target\_time, jeod::LsodeFirstOrderODEIntegrator::step\_error, jeod::LsodeDataStode::step\_ratio\_order\_inc, jeod::LsodeFirstOrderODEIntegrator::step\_size, and jeod::LsodeDataStode::told.

Referenced by jeod::LsodeFirstOrderODEIntegrator::integrator\_corrector\_converged().

#### 6.5.2.33 void LsodeFirstOrderODEIntegrator::integrator\_fail\_reset\_order\_1\_part1 ( ) [protected]

Repopulates the y-array from history, recomputes the original first derivatives, sets the order back to 1, and reduces the step size by a factor of 10.

Called when 3 or more failures have occurred. It is assumed that the derivatives that have accumulated in the history array have errors of the wrong order. Hence the first derivative is recomputed, and the order is set to 1. Then the step-size is reduced by a factor of 10, and the step is retried. Repeat until successful, or the step reaches the minimum step-size.

If 10 failures occur, exit with step\_error = -1.

This method is divided in two by a call to calculate the derivatives. Part1 precedes that call, the execution exits from the integrator back to the sim control engine; then on return to the integrator, execution immediately proceeds with part2.

extracted from lines 640-

Definition at line 882 of file `lsode_first_order_ode_integrator__integrator.cc`.

References `jeod::LsodeFirstOrderODEIntegrator::arrays`, `jeod::LsodeFirstOrderODEIntegrator::control_data`, `jeod::LsodeFirstOrderODEIntegrator::data_stode`, `jeod::LsodeFirstOrderODEIntegrator::dstodeResetStep`, `jeod::LsodeDataArrays::history`, `jeod::LsodeFirstOrderODEIntegrator::integrator_terminate()`, `jeod::LsodeControlDataInterface::min_step_size`, `jeod::LsodeControlDataInterface::num_odes`, `jeod::LsodeFirstOrderODEIntegrator::re_entry_point`, `jeod::LsodeFirstOrderODEIntegrator::step_error`, `jeod::LsodeDataStode::step_ratio`, `jeod::LsodeFirstOrderODEIntegrator::step_size`, and `jeod::LsodeFirstOrderODEIntegrator::y`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::integrator_error_test_failed()`.

#### 6.5.2.34 `void LsodeFirstOrderODEIntegrator::integrator_fail_reset_order_1_part2 ( )` `[protected]`

Continue reset, with derivatives now at hand.

See `integrator_fail_reset_order_1_part1` for details.

Definition at line 909 of file `lsode_first_order_ode_integrator__integrator.cc`.

References `jeod::LsodeFirstOrderODEIntegrator::arrays`, `jeod::LsodeFirstOrderODEIntegrator::control_data`, `jeod::LsodeFirstOrderODEIntegrator::data_stode`, `jeod::LsodeDataArrays::history`, `jeod::LsodeFirstOrderODEIntegrator::integrator_predict()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_reset_method_coeffs()`, `jeod::LsodeDataStode::iret`, `jeod::LsodeControlDataInterface::is_corrector_method_functional_iteration()`, `jeod::LsodeFirstOrderODEIntegrator::method_order_current`, `jeod::LsodeFirstOrderODEIntegrator::num_nordsiek_cols`, `jeod::LsodeControlDataInterface::num_odes`, `jeod::LsodeFirstOrderODEIntegrator::order_select_para`, `jeod::LsodeDataArrays::save`, `jeod::LsodeFirstOrderODEIntegrator::step_size`, and `jeod::LsodeFirstOrderODEIntegrator::update_jacobian`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::integrate()`.

#### 6.5.2.35 `void LsodeFirstOrderODEIntegrator::integrator_predict ( )` `[protected]`

This section computes the predicted values by multiplying the history array by the Pascal Triangle matrix.

Extracted from DSTODE lines 200-215

Definition at line 338 of file `lsode_first_order_ode_integrator__integrator.cc`.

References `jeod::LsodeFirstOrderODEIntegrator::arrays`, `jeod::LsodeFirstOrderODEIntegrator::control_data`, `jeod::LsodeDataArrays::history`, `jeod::LsodeFirstOrderODEIntegrator::integrator_reset_iteration_loop_part1()`, `jeod::LsodeControlDataInterface::is_corrector_method_functional_iteration()`, `jeod::LsodeControlDataInterface::max_num_steps_jacobian`, `jeod::LsodeFirstOrderODEIntegrator::max_rel_change_without_jacobian`, `jeod::LsodeFirstOrderODEIntegrator::method_order_current`, `jeod::LsodeFirstOrderODEIntegrator::num_equations`, `jeod::LsodeFirstOrderODEIntegrator::num_steps_taken`, `jeod::LsodeFirstOrderODEIntegrator::rel_change_since_jacobian`, `jeod::LsodeFirstOrderODEIntegrator::stage_target_time`, `jeod::LsodeFirstOrderODEIntegrator::step_at_last_jacobian_update`, `jeod::LsodeFirstOrderODEIntegrator::step_size`, and `jeod::LsodeFirstOrderODEIntegrator::update_jacobian`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::integrator_core()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_fail_reset_order_1_part2()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_reset_method_coeffs()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_reset_yh()`, and `jeod::LsodeFirstOrderODEIntegrator::integrator_test_stepsize_change()`.

#### 6.5.2.36 `void LsodeFirstOrderODEIntegrator::integrator_reset_iteration_loop_part1 ( )` `[protected]`

This method resets the iteration loop to the values generated by the `integrator_predict` method, which populated `history[*][0]`.

Definition at line 377 of file `lsode_first_order_ode_integrator__integrator.cc`.

References `jeod::LsodeFirstOrderODEIntegrator::arrays`, `jeod::LsodeFirstOrderODEIntegrator::control_data`, `jeod::LsodeDataArrays::history`, `jeod::LsodeFirstOrderODEIntegrator::iteration_count`, `jeod::LsodeControlDataInterface::`

::num\_odes, jeod::LsodeFirstOrderODEIntegrator::re\_entry\_point, jeod::LsodeFirstOrderODEIntegrator::ResetIterationLoop, and jeod::LsodeFirstOrderODEIntegrator::y.

Referenced by jeod::LsodeFirstOrderODEIntegrator::integrator\_corrector\_failed\_part1(), and jeod::LsodeFirstOrderODEIntegrator::integrator\_predict().

#### 6.5.2.37 void LsodeFirstOrderODEIntegrator::integrator\_reset\_iteration\_loop\_part2 ( ) [protected]

This code follows part 1 after the break-out to get to the external calls, and completes the reset of the integration iteration loop.

Definition at line 395 of file lsode\_first\_order\_ode\_integrator\_\_integrator.cc.

References jeod::LsodeDataArrays::accum\_correction, jeod::LsodeFirstOrderODEIntegrator::arrays, jeod::LsodeFirstOrderODEIntegrator::control\_data, jeod::LsodeFirstOrderODEIntegrator::iter\_delta, jeod::LsodeControlDataInterface::num\_odes, and jeod::LsodeFirstOrderODEIntegrator::prev\_iter\_delta.

Referenced by jeod::LsodeFirstOrderODEIntegrator::integrate().

#### 6.5.2.38 void LsodeFirstOrderODEIntegrator::integrator\_reset\_method\_coeffs ( ) [protected]

Sets/resets the method\_coeffs\_current array.

Definition at line 235 of file lsode\_first\_order\_ode\_integrator\_\_integrator.cc.

References jeod::LsodeFirstOrderODEIntegrator::control\_data, jeod::LsodeFirstOrderODEIntegrator::convergence\_factor, jeod::LsodeFirstOrderODEIntegrator::data\_stode, jeod::LsodeFirstOrderODEIntegrator::integrator\_predict(), jeod::LsodeFirstOrderODEIntegrator::integrator\_reset\_yh(), jeod::LsodeFirstOrderODEIntegrator::integrator\_test\_stepsize\_change(), jeod::LsodeDataStode::iret, jeod::LsodeFirstOrderODEIntegrator::method\_coeff\_first, jeod::LsodeFirstOrderODEIntegrator::method\_coeffs\_complete, jeod::LsodeFirstOrderODEIntegrator::method\_coeffs\_current, jeod::LsodeFirstOrderODEIntegrator::method\_order\_current, jeod::LsodeControlDataInterface::min\_step\_size, jeod::LsodeFirstOrderODEIntegrator::num\_equations, jeod::LsodeFirstOrderODEIntegrator::num\_nordsiek\_cols, jeod::LsodeFirstOrderODEIntegrator::num\_predictor\_elements, jeod::LsodeFirstOrderODEIntegrator::rel\_change\_since\_jacobian, jeod::LsodeDataStode::step\_ratio, and jeod::LsodeFirstOrderODEIntegrator::step\_size.

Referenced by jeod::LsodeFirstOrderODEIntegrator::integrator\_core(), jeod::LsodeFirstOrderODEIntegrator::integrator\_fail\_reset\_order\_1\_part2(), and jeod::LsodeFirstOrderODEIntegrator::integrator\_set\_new\_order().

#### 6.5.2.39 void LsodeFirstOrderODEIntegrator::integrator\_reset\_yh ( ) [protected]

Resets history arrays and time-step.

Definition at line 299 of file lsode\_first\_order\_ode\_integrator\_\_integrator.cc.

References jeod::LsodeFirstOrderODEIntegrator::arrays, jeod::LsodeFirstOrderODEIntegrator::control\_data, jeod::LsodeFirstOrderODEIntegrator::data\_stode, jeod::LsodeDataArrays::history, jeod::LsodeFirstOrderODEIntegrator::integrator\_predict(), jeod::LsodeFirstOrderODEIntegrator::integrator\_wrapup(), jeod::LsodeDataStode::iredo, jeod::LsodeFirstOrderODEIntegrator::max\_step\_increase\_ratio, jeod::LsodeFirstOrderODEIntegrator::max\_step\_size\_inv, jeod::LsodeFirstOrderODEIntegrator::num\_nordsiek\_cols, jeod::LsodeControlDataInterface::num\_odes, jeod::LsodeFirstOrderODEIntegrator::order\_select\_para, jeod::LsodeFirstOrderODEIntegrator::rel\_change\_since\_jacobian, jeod::LsodeDataStode::step\_ratio, and jeod::LsodeFirstOrderODEIntegrator::step\_size.

Referenced by jeod::LsodeFirstOrderODEIntegrator::integrator\_core(), jeod::LsodeFirstOrderODEIntegrator::integrator\_corrector\_failed\_part2(), jeod::LsodeFirstOrderODEIntegrator::integrator\_reset\_method\_coeffs(), jeod::LsodeFirstOrderODEIntegrator::integrator\_set\_new\_order(), and jeod::LsodeFirstOrderODEIntegrator::integrator\_test\_stepsize\_change().

#### 6.5.2.40 void LsodeFirstOrderODEIntegrator::integrator\_set\_new\_order ( ) [protected]

Sets the new order and the step-ratio for the next step - or the current step if redoing it.

Definition at line 841 of file `lsode_first_order_ode_integrator__integrator.cc`.

References `jeod::LsodeFirstOrderODEIntegrator::control_data`, `jeod::LsodeFirstOrderODEIntegrator::data_stode`, `jeod::LsodeFirstOrderODEIntegrator::integrator_reset_method_coeffs()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_reset_yh()`, `jeod::LsodeDataStode::iret`, `jeod::LsodeFirstOrderODEIntegrator::method_order_current`, `jeod::LsodeControlDataInterface::min_step_size`, `jeod::LsodeDataStode::new_method_order`, `jeod::LsodeFirstOrderODEIntegrator::num_nordsiek_cols`, `jeod::LsodeDataStode::step_ratio`, and `jeod::LsodeFirstOrderODEIntegrator::step_size`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::integrator_compute_new_order()`, and `jeod::LsodeFirstOrderODEIntegrator::integrator_compute_new_order_check_step_error()`.

#### 6.5.2.41 `void LsodeFirstOrderODEIntegrator::integrator_terminate ( )` [protected]

this is the only succesful path back from integrator to manager.

All other returns from `integrator_*` back to `manager_*` are in response to a need for new derivatives and carry with them a modified `re_entry_point` to provide access back to the integrator on reentry. All returns with `re_entry_point = CycleStartFinish` should go through this method.

Definition at line 956 of file `lsode_first_order_ode_integrator__integrator.cc`.

References `jeod::LsodeFirstOrderODEIntegrator::internal_state`, `jeod::LsodeFirstOrderODEIntegrator::prev_step_size`, and `jeod::LsodeFirstOrderODEIntegrator::step_size`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::integrator_corrector_failed_part2()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_error_test_failed()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_fail_reset_order_1_part1()`, and `jeod::LsodeFirstOrderODEIntegrator::integrator_wrapup()`.

#### 6.5.2.42 `void LsodeFirstOrderODEIntegrator::integrator_test_stepsize_change ( )` [protected]

Tests `h` against old `h`.

Definition at line 275 of file `lsode_first_order_ode_integrator__integrator.cc`.

References `jeod::LsodeFirstOrderODEIntegrator::data_stode`, `jeod::LsodeFirstOrderODEIntegrator::integrator_predict()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_reset_yh()`, `jeod::LsodeDataStode::iredo`, `jeod::LsodeFirstOrderODEIntegrator::prev_step_size`, `jeod::LsodeDataStode::step_ratio`, and `jeod::LsodeFirstOrderODEIntegrator::step_size`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::integrator_core()`, and `jeod::LsodeFirstOrderODEIntegrator::integrator_reset_method_coeffs()`.

#### 6.5.2.43 `void LsodeFirstOrderODEIntegrator::integrator_wrapup ( )` [protected]

Wraps up the completion of the integrator.

Definition at line 933 of file `lsode_first_order_ode_integrator__integrator.cc`.

References `jeod::LsodeDataArrays::accum_correction`, `jeod::LsodeFirstOrderODEIntegrator::arrays`, `jeod::LsodeFirstOrderODEIntegrator::control_data`, `jeod::LsodeFirstOrderODEIntegrator::integrator_terminate()`, `jeod::LsodeControlDataInterface::num_odes`, `jeod::LsodeFirstOrderODEIntegrator::prev_method_order`, and `jeod::LsodeFirstOrderODEIntegrator::test_coeffs_complete`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::integrator_compute_new_order()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_compute_new_order_check_step_error()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_corrector_converged()`, and `jeod::LsodeFirstOrderODEIntegrator::integrator_reset_yh()`.

#### 6.5.2.44 `void LsodeFirstOrderODEIntegrator::interpolate_y ( )` [protected]

Interpolates the zeroth-derivative of `y` Adapted from subroutine DINTDY, which was a general method for interpolating the `K`-th derivative of the dependent variable vector, `y`.

Implementation notes - DINTDY was called exclusively with three input values that always matched.

1. Argument #1 T (time). Calls to DINTDY always passed TOUT (now cycle\_target\_time) in for T
2. Argument #2 K (order). Calls to DINTDY always passed 0 in for K
3. Argument #5 DKY (value). DKY is the value that DINTDY interpolates. Calls to DINTDY always passed Y in for DKY. This routine uses y directly in place of DKY, so can only interpolate the 0-th derivative (since that is y), and always evaluates at cycle\_target\_time. replaced accordingly.

The computed values are gotten by interpolation using the Nordsieck history array, arrays.history. The formula for Y is:

$$Y[i] = \sum_{j=0}^{\text{method\_order\_current}} \{ (\text{cycle\_target\_time} - \text{stage\_target\_time})^j * \text{arrays.history}[i-1][j] / h^j \}$$

Definition at line 268 of file lsode\_first\_order\_ode\_integrator\_\_support.cc.

References jeod::LsodeFirstOrderODEIntegrator::arrays, jeod::LsodeFirstOrderODEIntegrator::control\_data, jeod::LsodeFirstOrderODEIntegrator::cycle\_target\_time, jeod::LsodeFirstOrderODEIntegrator::epsilon, jeod::LsodeDataArrays::history, jeod::LsodeFirstOrderODEIntegrator::method\_order\_current, jeod::LsodeFirstOrderODEIntegrator::num\_nordsiek\_cols, jeod::LsodeControlDataInterface::num\_odes, jeod::LsodeFirstOrderODEIntegrator::prev\_good\_step\_size, jeod::LsodeFirstOrderODEIntegrator::stage\_target\_time, jeod::LsodeFirstOrderODEIntegrator::step\_size, and jeod::LsodeFirstOrderODEIntegrator::y.

Referenced by jeod::LsodeFirstOrderODEIntegrator::manager\_check\_stop\_conditions(), and jeod::LsodeFirstOrderODEIntegrator::manager\_integration\_loop\_part3().

#### 6.5.2.45 void LsodeFirstOrderODEIntegrator::jacobian\_prep\_init ( ) [protected]

Modified from DPREPJ.

DPREPJ was called by DSTODE to compute and process the matrix  $P = I - h * el(1) * J$ , where J is an approximation to the Jacobian.

#### NOTES

DPREPJ has been split into 3 parts, book-ended by the external-calls. jacobian\_prep\_init contains the code that precedes the first external-call jacobian\_prep\_loop contains the code that continues to loop according to the limits as written is DPREPJ. jacobian\_prep\_wrap\_up contains the code that follows successful completion of the looping section of DPREPJ.

Note that the division in this implementation is not linear with that in the original Fortran. The external calls within the original fortran are embedded within switch-blocks and for loops; the return points - to go to the next routine will pick up from one of several locations in the Fortran code, depending on the configuration at the time the external call was made.

For the ER7\_Utils / JEOD / Trick implementation, the derivative/jac calls must be external to the integrate call, so we must fully back out and then reenter. Rentry goes to jacobian\_prep\_loop.

Some variables that were local have been moved to the class so that their value is not lost in going from jacobian\_prep\_init to jacobian\_prep\_loop. These are typically identified with \*\*\*\_dprepj to indicate that their sole purpose is within dprepj (the original name of the jacobian\_prep\_\* routines).

Here the jacobian is computed by the user-supplied routine JAC if corrector\_method = NewtonIterUserJac or NewtonIterUserBandJac, or by finite differencing if corrector\_method = NewtonIterInternalJac, JacobiNewtonInternalJac, or NewtonIterInternalBandJac.

If corrector\_method = JacobiNewtonInternalJac, a diagonal approximation to the Jacobian is used. The Jacobian is stored in arrays lin\_alg

If corrector\_method != JacobiNewtonInternalJac, P is subjected to LU decomposition in preparation for later solution of linear systems with P as coefficient matrix. This is done by gauss\_elim\_factor (DGEFA) if corrector\_method = NewtonIterUserJac or NewtonIterInternalJac, and by linear\_solver (DGBFA) if corrector\_method = NewtonIterUserBandJac or NewtonIterInternalBandJac.

Note that the `corrector_method` using the banded Jacobians is not supported in this release, so `linear_solver` is not used.

FTEM and ACOR were effectively the same, now `arrays.accum_correction`. SAVF is now `arrays.save`. WM is now `arrays.lin_alg`

Definition at line 378 of file `lsode_first_order_ode_integrator__support.cc`.

References `jeod::LsodeFirstOrderODEIntegrator::arrays`, `jeod::LsodeFirstOrderODEIntegrator::control_data`, `jeod::LsodeControlDataInterface::corrector_method`, `jeod::LsodeFirstOrderODEIntegrator::data_prepj`, `jeod::LsodeFirstOrderODEIntegrator::epsilon`, `jeod::LsodeDataArrays::error_weight`, `jeod::LsodeDataJacobianPrep::fac`, `jeod::LsodeDataArrays::history`, `jeod::LsodeDataJacobianPrep::hl0`, `jeod::LsodeDataJacobianPrep::index`, `jeod::LsodeDataJacobianPrep::index_max`, `jeod::LsodeFirstOrderODEIntegrator::iteration_matrix_singular`, `jeod::LsodeFirstOrderODEIntegrator::jacobian_current`, `jeod::LsodeFirstOrderODEIntegrator::JacobianPrep`, `jeod::LsodeControlDataInterface::JacobiNewtonInternalJac`, `jeod::LsodeDataArrays::lin_alg`, `jeod::LsodeDataArrays::lin_alg_1`, `jeod::LsodeDataArrays::lin_alg_2`, `jeod::LsodeFirstOrderODEIntegrator::magnitude_of_weighted_array()`, `jeod::LsodeFirstOrderODEIntegrator::method_coeff_first`, `jeod::LsodeControlDataInterface::NewtonIterInternalBandJac`, `jeod::LsodeControlDataInterface::NewtonIterInternalJac`, `jeod::LsodeControlDataInterface::NewtonIterUserBandJac`, `jeod::LsodeControlDataInterface::NewtonIterUserJac`, `jeod::LsodeFirstOrderODEIntegrator::num_jacobian_evals`, `jeod::LsodeControlDataInterface::num_odes`, `jeod::LsodeDataJacobianPrep::r0`, `jeod::LsodeFirstOrderODEIntegrator::re_entry_point`, `jeod::LsodeDataArrays::save`, `jeod::LsodeFirstOrderODEIntegrator::step_size`, `jeod::LsodeFirstOrderODEIntegrator::y`, and `jeod::LsodeDataJacobianPrep::yj`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::integrate()`.

#### 6.5.2.46 `bool LsodeFirstOrderODEIntegrator::jacobian_prep_loop( )` [protected]

Definition at line 517 of file `lsode_first_order_ode_integrator__support.cc`.

References `jeod::LsodeDataArrays::accum_correction`, `jeod::LsodeFirstOrderODEIntegrator::arrays`, `jeod::LsodeFirstOrderODEIntegrator::control_data`, `jeod::LsodeControlDataInterface::corrector_method`, `jeod::LsodeFirstOrderODEIntegrator::data_prepj`, `jeod::LsodeDataArrays::error_weight`, `jeod::LsodeDataJacobianPrep::fac`, `jeod::LsodeDataJacobianPrep::hl0`, `jeod::LsodeDataJacobianPrep::index`, `jeod::LsodeDataJacobianPrep::index_max`, `jeod::LsodeControlDataInterface::JacobiNewtonInternalJac`, `jeod::LsodeDataArrays::lin_alg`, `jeod::LsodeDataArrays::lin_alg_1`, `jeod::LsodeFirstOrderODEIntegrator::load_derivatives()`, `jeod::LsodeControlDataInterface::NewtonIterInternalJac`, `jeod::LsodeControlDataInterface::NewtonIterUserJac`, `jeod::LsodeControlDataInterface::num_odes`, `jeod::LsodeDataJacobianPrep::r0`, `jeod::LsodeDataArrays::save`, `jeod::LsodeFirstOrderODEIntegrator::y`, and `jeod::LsodeDataJacobianPrep::yj`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::integrate()`.

#### 6.5.2.47 `bool LsodeFirstOrderODEIntegrator::jacobian_prep_wrap_up( )` [protected]

Definition at line 617 of file `lsode_first_order_ode_integrator__support.cc`.

References `jeod::LsodeFirstOrderODEIntegrator::arrays`, `jeod::LsodeFirstOrderODEIntegrator::control_data`, `jeod::LsodeFirstOrderODEIntegrator::convergence_rate`, `jeod::LsodeControlDataInterface::corrector_method`, `jeod::LsodeFirstOrderODEIntegrator::data_prepj`, `jeod::LsodeFirstOrderODEIntegrator::epsilon`, `jeod::LsodeDataArrays::error_weight`, `jeod::LsodeControlDataInterface::FunctionalIteration`, `jeod::LsodeFirstOrderODEIntegrator::gauss_elim_factor()`, `jeod::LsodeDataArrays::history`, `jeod::LsodeDataJacobianPrep::hl0`, `jeod::LsodeFirstOrderODEIntegrator::integrator_corrector_failed_part2()`, `jeod::LsodeFirstOrderODEIntegrator::iteration_matrix_singular`, `jeod::LsodeControlDataInterface::JacobiNewtonInternalJac`, `jeod::LsodeDataArrays::lin_alg`, `jeod::LsodeFirstOrderODEIntegrator::load_derivatives()`, `jeod::LsodeControlDataInterface::NewtonIterInternalBandJac`, `jeod::LsodeControlDataInterface::NewtonIterInternalJac`, `jeod::LsodeControlDataInterface::NewtonIterUserBandJac`, `jeod::LsodeControlDataInterface::NewtonIterUserJac`, `jeod::LsodeControlDataInterface::num_odes`, `jeod::LsodeFirstOrderODEIntegrator::num_steps_taken`, `jeod::LsodeFirstOrderODEIntegrator::rel_change_since_jacobian`, `jeod::LsodeDataArrays::save`, `jeod::LsodeFirstOrderODEIntegrator::step_at_last_jacobian_update`, `jeod::LsodeFirstOrderODEIntegrator::step_size`, and `jeod::LsodeFirstOrderODEIntegrator::update_jacobian`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::integrate()`.

#### 6.5.2.48 void LsodeFirstOrderODEIntegrator::linear\_chord\_iteration ( ) [protected]

Modified from DSOLSY.

This routine manages the solution of the linear system arising from a chord iteration. It is called if corrector\_method != FunctionalIteration.

If corrector\_method == NewtonIterUserJac || NewtonIterInternalJac, it calls linear\_solver (was DGESL). If corrector\_method = JacobiNewtonInternalJac it updates the coefficient hI0 = step\_size \* method\_coeff\_first (previously H\*-ELO) in the diagonal matrix, and then computes the solution.

Definition at line 735 of file lsode\_first\_order\_ode\_integrator\_\_support.cc.

References jeod::LsodeFirstOrderODEIntegrator::arrays, jeod::LsodeFirstOrderODEIntegrator::control\_data, jeod::LsodeControlDataInterface::corrector\_method, jeod::LsodeControlDataInterface::JacobiNewtonInternalJac, jeod::LsodeDataArrays::lin\_alg, jeod::LsodeDataArrays::lin\_alg\_2, jeod::LsodeFirstOrderODEIntegrator::linear\_solver(), jeod::LsodeFirstOrderODEIntegrator::method\_coeff\_first, jeod::LsodeFirstOrderODEIntegrator::modified\_iteration\_matrix\_singular, jeod::LsodeControlDataInterface::NewtonIterInternalJac, jeod::LsodeControlDataInterface::NewtonIterUserJac, jeod::LsodeControlDataInterface::num\_odes, jeod::LsodeFirstOrderODEIntegrator::step\_size, and jeod::LsodeFirstOrderODEIntegrator::y.

Referenced by jeod::LsodeFirstOrderODEIntegrator::integrator\_corrector\_iteration().

#### 6.5.2.49 void LsodeFirstOrderODEIntegrator::linear\_solver ( ) [protected]

Solves the equation  $Y' = A Y$ , with  $A = \text{arrays.lin\_alg}$ .

Definition at line 393 of file lsode\_first\_order\_ode\_integrator\_\_utility.cc.

References jeod::LsodeFirstOrderODEIntegrator::arrays, jeod::LsodeFirstOrderODEIntegrator::control\_data, jeod::LsodeDataArrays::lin\_alg, jeod::LsodeControlDataInterface::num\_odes, jeod::LsodeDataArrays::pivots, and jeod::LsodeFirstOrderODEIntegrator::y.

Referenced by jeod::LsodeFirstOrderODEIntegrator::linear\_chord\_iteration().

#### 6.5.2.50 void LsodeFirstOrderODEIntegrator::load\_derivatives ( double \* *derivs* ) [protected]

Load the externally generated derivative values (incoming as y\_dot)i into the array derivs.

Definition at line 505 of file lsode\_first\_order\_ode\_integrator\_\_utility.cc.

References jeod::LsodeFirstOrderODEIntegrator::control\_data, jeod::LsodeControlDataInterface::num\_odes, and jeod::LsodeFirstOrderODEIntegrator::y\_dot.

Referenced by jeod::LsodeFirstOrderODEIntegrator::integrate(), jeod::LsodeFirstOrderODEIntegrator::jacobian\_prep\_loop(), and jeod::LsodeFirstOrderODEIntegrator::jacobian\_prep\_wrap\_up().

#### 6.5.2.51 void LsodeFirstOrderODEIntegrator::load\_ew\_values ( ) [protected]

Definition at line 796 of file lsode\_first\_order\_ode\_integrator\_\_support.cc.

References jeod::LsodeControlDataInterface::abs\_tolerance\_error\_control, jeod::LsodeFirstOrderODEIntegrator::arrays, jeod::LsodeControlDataInterface::CommonAbsCommonRel, jeod::LsodeControlDataInterface::CommonAbsSpecificRel, jeod::LsodeFirstOrderODEIntegrator::control\_data, jeod::LsodeControlDataInterface::error\_control\_indicator, jeod::LsodeDataArrays::error\_weight, jeod::LsodeDataArrays::history, jeod::LsodeControlDataInterface::num\_odes, jeod::LsodeControlDataInterface::rel\_tolerance\_error\_control, jeod::LsodeControlDataInterface::SpecificAbsCommonRel, and jeod::LsodeControlDataInterface::SpecificAbsSpecificRel.

Referenced by jeod::LsodeFirstOrderODEIntegrator::manager\_initialize\_calculation\_part2(), and jeod::LsodeFirstOrderODEIntegrator::manager\_integration\_loop\_part1().

#### 6.5.2.52 LsodeControlDataInterface::LsodeControlDataInterface ( void )

constructor

Definition at line 53 of file lsode\_control\_data\_interface.cc.

References jeod::LsodeControlDataInterface::abs\_tolerance\_error\_control\_vec, and jeod::LsodeControlDataInterface::rel\_tolerance\_error\_control\_vec.

#### 6.5.2.53 LsodeControlDataInterface::LsodeControlDataInterface ( const LsodeControlDataInterface & src )

copy constructor

Definition at line 82 of file lsode\_control\_data\_interface.cc.

#### 6.5.2.54 LsodeDataArrays::LsodeDataArrays ( void )

constructor

Definition at line 87 of file lsode\_data\_classes.cc.

#### 6.5.2.55 LsodeDataJacobianPrep::LsodeDataJacobianPrep ( void )

constructor

Definition at line 55 of file lsode\_data\_classes.cc.

#### 6.5.2.56 LsodeDataStode::LsodeDataStode ( void )

constructor

Definition at line 70 of file lsode\_data\_classes.cc.

#### 6.5.2.57 LsodeFirstOrderODEIntegrator::LsodeFirstOrderODEIntegrator ( void )

[LsodeFirstOrderODEIntegrator](#) default constructor.

Definition at line 54 of file lsode\_first\_order\_ode\_integrator\_\_utility.cc.

References jeod::LsodeFirstOrderODEIntegrator::calculate\_epsilon(), jeod::LsodeFirstOrderODEIntegrator::method\_coeffs\_complete, jeod::LsodeFirstOrderODEIntegrator::method\_coeffs\_current, and jeod::LsodeFirstOrderODEIntegrator::test\_coeffs\_complete.

#### 6.5.2.58 LsodeFirstOrderODEIntegrator::LsodeFirstOrderODEIntegrator ( const LsodeControlDataInterface & data\_in, er7\_utils::IntegrationControls & controls, unsigned int size )

[LsodeFirstOrderODEIntegrator](#) non-default constructor.

Parameters

in	size	State size
in, out	controls	Integration controls

Definition at line 123 of file lsode\_first\_order\_ode\_integrator\_\_utility.cc.

References jeod::LsodeFirstOrderODEIntegrator::calculate\_epsilon(), jeod::LsodeFirstOrderODEIntegrator::control\_data, jeod::LsodeFirstOrderODEIntegrator::method\_coeffs\_complete, jeod::LsodeFirstOrderODEIntegrator::method\_coeffs\_current, jeod::LsodeControlDataInterface::num\_odes, jeod::LsodeFirstOrderODEIntegrator::test\_coeffs\_complete, and jeod::LsodeFirstOrderODEIntegrator::update\_control\_data().



6.5.2.59 **LsodeGeneralizedDerivSecondOrderODEIntegrator::LsodeGeneralizedDerivSecondOrderODEIntegrator ( void )**

[LsodeGeneralizedDerivSecondOrderODEIntegrator](#) default constructor.

Default Constructor.

Definition at line 55 of file `lsode_generalized_second_order_ode_integrator.cc`.

6.5.2.60 **LsodeGeneralizedDerivSecondOrderODEIntegrator::LsodeGeneralizedDerivSecondOrderODEIntegrator ( const LsodeGeneralizedDerivSecondOrderODEIntegrator & src )**

[LsodeGeneralizedDerivSecondOrderODEIntegrator](#) copy constructor.

Copy Constructor.

Parameters

<code>in</code>	<code>src</code>	Item to be copied.
-----------------	------------------	--------------------

Definition at line 82 of file `lsode_generalized_second_order_ode_integrator.cc`.

6.5.2.61 **LsodeGeneralizedDerivSecondOrderODEIntegrator::LsodeGeneralizedDerivSecondOrderODEIntegrator ( const LsodeControlDataInterface & data\_in, er7\_utils::IntegrationControls & controls, const er7\_utils::GeneralizedPositionDerivativeFunctions & deriv\_funs, unsigned int position\_size, unsigned int velocity\_size )**

non-default constructor

Definition at line 63 of file `lsode_generalized_second_order_ode_integrator.cc`.

References `jeod::LsodeGeneralizedDerivSecondOrderODEIntegrator::posdot`.

6.5.2.62 **LsodeIntegrationControls::LsodeIntegrationControls ( void )**

[LsodeIntegrationControls](#) default constructor.

Definition at line 50 of file `lsode_integration_controls.cc`.

6.5.2.63 **LsodeIntegrationControls::LsodeIntegrationControls ( unsigned int num\_stages )**

Definition at line 53 of file `lsode_integration_controls.cc`.

6.5.2.64 **LsodeIntegratorConstructor::LsodeIntegratorConstructor ( const LsodeIntegratorConstructor & src )**

Definition at line 58 of file `lsode_integrator_constructor.cc`.

6.5.2.65 **LsodeSecondOrderODEIntegrator::LsodeSecondOrderODEIntegrator ( void )** `[protected]`

[LsodeSecondOrderODEIntegrator](#) default constructor.

Definition at line 53 of file `lsode_second_order_ode_integrator.cc`.

6.5.2.66 **LsodeSecondOrderODEIntegrator::LsodeSecondOrderODEIntegrator ( const LsodeControlDataInterface & data\_in, er7\_utils::IntegrationControls & controls, unsigned int size )** `[protected]`

[LsodeSecondOrderODEIntegrator](#) non-default constructor.

**Parameters**

<i>in</i>	<i>data_in</i>	LSODE-specific control data.
<i>in, out</i>	<i>controls</i>	Integration controls.
<i>in</i>	<i>size</i>	State size.

Definition at line 64 of file `lsode_second_order_ode_integrator.cc`.

References `jeod::LsodeSecondOrderODEIntegrator::arrays_allocated`, `jeod::LsodeSecondOrderODEIntegrator::y`, and `jeod::LsodeSecondOrderODEIntegrator::y_dot`.

**6.5.2.67** `LsodeSecondOrderODEIntegrator::LsodeSecondOrderODEIntegrator ( const LsodeControlDataInterface & data_in, er7_utils::IntegrationControls & controls, const er7_utils::GeneralizedPositionDerivativeFunctions & deriv_funs, unsigned int position_size, unsigned int velocity_size ) [protected]`

Definition at line 86 of file `lsode_second_order_ode_integrator.cc`.

References `jeod::LsodeSecondOrderODEIntegrator::arrays_allocated`, `jeod::LsodeSecondOrderODEIntegrator::y`, and `jeod::LsodeSecondOrderODEIntegrator::y_dot`.

**6.5.2.68** `LsodeSimpleSecondOrderODEIntegrator::LsodeSimpleSecondOrderODEIntegrator ( void )`

[LsodeSimpleSecondOrderODEIntegrator](#) default constructor.

Definition at line 51 of file `lsode_simple_second_order_ode_integrator.cc`.

**6.5.2.69** `LsodeSimpleSecondOrderODEIntegrator::LsodeSimpleSecondOrderODEIntegrator ( const LsodeControlDataInterface & data_in, er7_utils::IntegrationControls & controls, unsigned int size )`

[LsodeSimpleSecondOrderODEIntegrator](#) non-default constructor.

**Parameters**

<i>in</i>	<i>size</i>	State size
<i>in, out</i>	<i>controls</i>	Integration controls

Definition at line 58 of file `lsode_simple_second_order_ode_integrator.cc`.

**6.5.2.70** `double LsodeFirstOrderODEIntegrator::magnitude_of_weighted_array ( double * v ) [protected]`

returns the RMS value of  $\{V \cdot W\}$ , where  $V$  and  $W$  are  $N$ -vectors.

Modified version of DVNORM

The only places DVNORM is used, it is multiplying some array by the `error_weight` array (`arrays.error_weight`) across `control_data.num_odes` terms. These values are fixed for our application, and do not need to be passed in.

We provide two implementations, one for a one-dimensional array, and one for a two-dimensional array in which the first index is the variable.

**Parameters**

<i>v</i>	array
----------	-------

Definition at line 275 of file `lsode_first_order_ode_integrator_utility.cc`.

References `jeod::LsodeFirstOrderODEIntegrator::arrays`, `jeod::LsodeFirstOrderODEIntegrator::control_data`, `jeod::LsodeDataArrays::error_weight`, and `jeod::LsodeControlDataInterface::num_odes`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::integrator_compute_new_order()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_compute_new_order_prep()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_core()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_corrector_converged()`, `jeod::LsodeFirstOrderODEIntegrator::integrator-`

`_corrector_iteration()`, `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_init()`, `jeod::LsodeFirstOrderODEIntegrator::manager_initialize_calculation_part2()`, and `jeod::LsodeFirstOrderODEIntegrator::manager_integration_loop_part2()`.

**6.5.2.71** `double LsodeFirstOrderODEIntegrator::magnitude_of_weighted_array ( unsigned int index, double ** v )`  
[protected]

returns RMS value of `v[*][index]`

Modified version of DVNORM, second implementation.

Parameters

<i>index</i>	use this index
<i>v</i>	array

Definition at line 295 of file `lsode_first_order_ode_integrator__utility.cc`.

References `jeod::LsodeFirstOrderODEIntegrator::arrays`, `jeod::LsodeFirstOrderODEIntegrator::control_data`, `jeod::LsodeDataArrays::error_weight`, and `jeod::LsodeControlDataInterface::num_odes`.

**6.5.2.72** `int LsodeFirstOrderODEIntegrator::manager_check_stop_conditions ( )` [protected]

verifies whether the convergence conditions have been met to end the cycle.

Definition at line 515 of file `lsode_first_order_ode_integrator__manager.cc`.

References `jeod::LsodeFirstOrderODEIntegrator::calculation_task`, `jeod::LsodeFirstOrderODEIntegrator::CompleteCycle`, `jeod::LsodeFirstOrderODEIntegrator::cycle_target_time`, `jeod::LsodeFirstOrderODEIntegrator::interpolate_y()`, `jeod::LsodeFirstOrderODEIntegrator::Normal`, `jeod::LsodeFirstOrderODEIntegrator::num_steps_taken`, `jeod::LsodeFirstOrderODEIntegrator::OneStep`, `jeod::LsodeFirstOrderODEIntegrator::OneStepWithSingularity`, `jeod::LsodeFirstOrderODEIntegrator::prior_num_steps`, `jeod::LsodeFirstOrderODEIntegrator::stage_target_time`, and `jeod::LsodeFirstOrderODEIntegrator::step_size`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::process_entry_point_cycle_start()`.

**6.5.2.73** `void LsodeFirstOrderODEIntegrator::manager_initialize_calculation_part1 ( )` [protected]

Sets the values for the case with `calculation_phase = 1`.

Definition at line 328 of file `lsode_first_order_ode_integrator__manager.cc`.

References `jeod::LsodeDataArrays::allocate_arrays()`, `jeod::LsodeControlDataInterface::allocate_arrays()`, `jeod::LsodeFirstOrderODEIntegrator::arrays`, `jeod::LsodeFirstOrderODEIntegrator::control_data`, `jeod::LsodeControlDataInterface::corrector_method`, `jeod::LsodeFirstOrderODEIntegrator::InitCalc`, `jeod::LsodeFirstOrderODEIntegrator::internal_state`, `jeod::LsodeControlDataInterface::is_corrector_method_functional_iteration()`, `jeod::LsodeDataArrays::lin_alg_1`, `jeod::LsodeControlDataInterface::num_odes`, `jeod::LsodeFirstOrderODEIntegrator::re_entry_point`, and `jeod::LsodeFirstOrderODEIntegrator::sqrt_epsilon`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::process_entry_point_cycle_start()`.

**6.5.2.74** `void LsodeFirstOrderODEIntegrator::manager_initialize_calculation_part2 ( )` [protected]

Definition at line 381 of file `lsode_first_order_ode_integrator__manager.cc`.

References `jeod::LsodeControlDataInterface::abs_tolerance_error_control`, `jeod::LsodeFirstOrderODEIntegrator::arrays`, `jeod::LsodeControlDataInterface::CommonAbsSpecificRel`, `jeod::LsodeFirstOrderODEIntegrator::control_data`, `jeod::LsodeFirstOrderODEIntegrator::cycle_target_time`, `jeod::LsodeFirstOrderODEIntegrator::epsilon`, `jeod::LsodeControlDataInterface::error_control_indicator`, `jeod::LsodeDataArrays::error_weight`, `jeod::LsodeDataArrays::history`, `jeod::LsodeControlDataInterface::initial_step_size`, `jeod::LsodeFirstOrderODEIntegrator::load_ew_values()`, `jeod::LsodeFirstOrderODEIntegrator::magnitude_of_weighted_array()`, `jeod::LsodeFirstOrderODE`

Integrator::max\_step\_size\_inv, jeod::LsodeFirstOrderODEIntegrator::method\_order\_current, jeod::LsodeControlDataInterface::num\_odes, jeod::LsodeControlDataInterface::rel\_tolerance\_error\_control, jeod::LsodeControlDataInterface::SpecificAbsCommonRel, jeod::LsodeControlDataInterface::SpecificAbsSpecificRel, jeod::LsodeFirstOrderODEIntegrator::step\_size, jeod::LsodeFirstOrderODEIntegrator::y, and jeod::LsodeFirstOrderODEIntegrator::y\_dot.

Referenced by jeod::LsodeFirstOrderODEIntegrator::integrate().

#### 6.5.2.75 void LsodeFirstOrderODEIntegrator::manager\_integration\_loop\_part1 ( ) [protected]

The iteration loop for the integration process.

Definition at line 634 of file lsode\_first\_order\_ode\_integrator\_\_manager.cc.

References jeod::LsodeFirstOrderODEIntegrator::arrays, jeod::LsodeFirstOrderODEIntegrator::control\_data, jeod::LsodeDataArrays::error\_weight, jeod::LsodeFirstOrderODEIntegrator::load\_ew\_values(), jeod::LsodeFirstOrderODEIntegrator::manager\_integration\_loop\_part2(), jeod::LsodeControlDataInterface::max\_num\_steps, jeod::LsodeControlDataInterface::num\_odes, jeod::LsodeFirstOrderODEIntegrator::num\_steps\_taken, jeod::LsodeFirstOrderODEIntegrator::prior\_num\_steps, and jeod::LsodeFirstOrderODEIntegrator::stage\_target\_time.

Referenced by jeod::LsodeFirstOrderODEIntegrator::manager\_integration\_loop\_part3(), and jeod::LsodeFirstOrderODEIntegrator::process\_entry\_point\_cycle\_start().

#### 6.5.2.76 void LsodeFirstOrderODEIntegrator::manager\_integration\_loop\_part2 ( ) [protected]

Definition at line 685 of file lsode\_first\_order\_ode\_integrator\_\_manager.cc.

References jeod::LsodeFirstOrderODEIntegrator::arrays, jeod::LsodeFirstOrderODEIntegrator::control\_data, jeod::LsodeFirstOrderODEIntegrator::CycleStartFinish, jeod::LsodeFirstOrderODEIntegrator::epsilon, jeod::LsodeDataArrays::history, jeod::LsodeFirstOrderODEIntegrator::integrator\_core(), jeod::LsodeFirstOrderODEIntegrator::magnitude\_of\_weighted\_array(), jeod::LsodeFirstOrderODEIntegrator::manager\_integration\_loop\_part3(), jeod::LsodeControlDataInterface::max\_num\_small\_step\_warnings, jeod::LsodeFirstOrderODEIntegrator::num\_small\_step\_warnings, jeod::LsodeFirstOrderODEIntegrator::re\_entry\_point, jeod::LsodeFirstOrderODEIntegrator::stage\_target\_time, and jeod::LsodeFirstOrderODEIntegrator::step\_size.

Referenced by jeod::LsodeFirstOrderODEIntegrator::integrate(), and jeod::LsodeFirstOrderODEIntegrator::manager\_integration\_loop\_part1().

#### 6.5.2.77 void LsodeFirstOrderODEIntegrator::manager\_integration\_loop\_part3 ( ) [protected]

Definition at line 743 of file lsode\_first\_order\_ode\_integrator\_\_manager.cc.

References jeod::LsodeFirstOrderODEIntegrator::calculation\_task, jeod::LsodeFirstOrderODEIntegrator::CompleteCycle, jeod::LsodeFirstOrderODEIntegrator::control\_data, jeod::LsodeFirstOrderODEIntegrator::cycle\_target\_time, jeod::LsodeFirstOrderODEIntegrator::initialized, jeod::LsodeFirstOrderODEIntegrator::interpolate\_y(), jeod::LsodeFirstOrderODEIntegrator::manager\_integration\_loop\_part1(), jeod::LsodeControlDataInterface::min\_step\_size, jeod::LsodeFirstOrderODEIntegrator::Normal, jeod::LsodeFirstOrderODEIntegrator::NormalWithSingularity, jeod::LsodeFirstOrderODEIntegrator::OneStep, jeod::LsodeFirstOrderODEIntegrator::OneStepWithSingularity, jeod::LsodeFirstOrderODEIntegrator::stage\_target\_time, jeod::LsodeFirstOrderODEIntegrator::step\_error, and jeod::LsodeFirstOrderODEIntegrator::step\_size.

Referenced by jeod::LsodeFirstOrderODEIntegrator::integrate(), and jeod::LsodeFirstOrderODEIntegrator::manager\_integration\_loop\_part2().

#### 6.5.2.78 void LsodeFirstOrderODEIntegrator::manager\_set\_calculation\_phase\_eq\_2\_reload ( ) [protected]

Definition at line 889 of file lsode\_first\_order\_ode\_integrator\_\_manager.cc.

**6.5.2.79 void LsodeFirstOrderODEIntegrator::process\_entry\_point\_cycle\_start ( ) [protected]**

The code block from the main integrate routine for re\_entry\_point=CycleStartFinish.

Definition at line 258 of file lsode\_first\_order\_ode\_integrator\_\_manager.cc.

References jeod::LsodeFirstOrderODEIntegrator::control\_data, jeod::LsodeFirstOrderODEIntegrator::cycle\_target\_time, jeod::LsodeFirstOrderODEIntegrator::first\_pass, jeod::LsodeControlDataInterface::initial\_step\_size, jeod::LsodeFirstOrderODEIntegrator::initialized, jeod::LsodeFirstOrderODEIntegrator::manager\_check\_stop\_conditions(), jeod::LsodeFirstOrderODEIntegrator::manager\_initialize\_calculation\_part1(), jeod::LsodeFirstOrderODEIntegrator::manager\_integration\_loop\_part1(), jeod::LsodeFirstOrderODEIntegrator::num\_equations, jeod::LsodeControlDataInterface::num\_odes, and jeod::LsodeFirstOrderODEIntegrator::stage\_target\_time.

Referenced by jeod::LsodeFirstOrderODEIntegrator::integrate().

**6.5.2.80 void LsodeFirstOrderODEIntegrator::reset\_integrator ( )**

Resets the integrator when the timestep changes or when identified as needing a reset.

Definition at line 864 of file lsode\_first\_order\_ode\_integrator\_\_manager.cc.

References jeod::LsodeFirstOrderODEIntegrator::arrays, jeod::LsodeFirstOrderODEIntegrator::control\_data, jeod::LsodeFirstOrderODEIntegrator::cycle\_target\_time, jeod::LsodeFirstOrderODEIntegrator::first\_pass, jeod::LsodeDataArrays::history, jeod::LsodeFirstOrderODEIntegrator::InitCalc, jeod::LsodeControlDataInterface::initial\_step\_size, jeod::LsodeFirstOrderODEIntegrator::method\_order\_current, jeod::LsodeControlDataInterface::num\_odes, jeod::LsodeFirstOrderODEIntegrator::prev\_good\_step\_size, jeod::LsodeFirstOrderODEIntegrator::re\_entry\_point, and jeod::LsodeFirstOrderODEIntegrator::stage\_target\_time.

Referenced by jeod::LsodeSecondOrderODEIntegrator::reset\_integrator().

**6.5.2.81 void LsodeControlDataInterface::set\_abs\_tol ( int index, double value )**

Definition at line 400 of file lsode\_control\_data\_interface.cc.

References jeod::LsodeControlDataInterface::abs\_tolerance\_error\_control, jeod::LsodeControlDataInterface::abs\_tolerance\_error\_control\_vec, jeod::LsodeControlDataInterface::error\_control\_vector\_copied\_over, and jeod::LsodeControlDataInterface::num\_odes\_at\_alloc.

**6.5.2.82 void LsodeControlDataInterface::set\_rel\_tol ( int index, double value )**

set values from external

Definition at line 352 of file lsode\_control\_data\_interface.cc.

References jeod::LsodeControlDataInterface::error\_control\_vector\_copied\_over, jeod::LsodeControlDataInterface::num\_odes\_at\_alloc, jeod::LsodeControlDataInterface::rel\_tolerance\_error\_control, and jeod::LsodeControlDataInterface::rel\_tolerance\_error\_control\_vec.

**6.5.2.83 void LsodeFirstOrderODEIntegrator::update\_control\_data ( )**

Gets the control data from where it can be populated in the constructor and verifies that the input control parameters are not out of sensible range.

Definition at line 216 of file lsode\_first\_order\_ode\_integrator\_\_utility.cc.

References jeod::LsodeControlDataInterface::check\_interface\_data(), jeod::LsodeFirstOrderODEIntegrator::control\_data, jeod::LsodeControlDataInterface::ImplicitAdamsNonStiff, jeod::LsodeControlDataInterface::integration\_method, jeod::LsodeControlDataInterface::max\_order, jeod::LsodeFirstOrderODEIntegrator::max\_order\_internal, jeod::LsodeControlDataInterface::max\_step\_size, and jeod::LsodeFirstOrderODEIntegrator::max\_step\_size\_inv.

Referenced by jeod::LsodeFirstOrderODEIntegrator::LsodeFirstOrderODEIntegrator().

**6.5.2.84 LsodeFirstOrderODEIntegrator::~LsodeFirstOrderODEIntegrator ( ) [virtual]**

[LsodeFirstOrderODEIntegrator](#) destructor.

Definition at line 201 of file `lsode_first_order_ode_integrator__utility.cc`.

References `jeod::LsodeFirstOrderODEIntegrator::arrays`, `jeod::LsodeFirstOrderODEIntegrator::control_data`, `jeod::LsodeDataArrays::destroy_allocated_arrays()`, `jeod::LsodeControlDataInterface::destroy_allocated_arrays()`, and `jeod::LsodeFirstOrderODEIntegrator::first_pass`.

**6.5.2.85 LsodeGeneralizedDerivSecondOrderODEIntegrator::~LsodeGeneralizedDerivSecondOrderODEIntegrator ( void ) [virtual]**

[LsodeGeneralizedDerivSecondOrderODEIntegrator](#) destructor.

Destructor.

Definition at line 112 of file `lsode_generalized_second_order_ode_integrator.cc`.

References `jeod::LsodeGeneralizedDerivSecondOrderODEIntegrator::posdot`.

**6.5.2.86 LsodeSecondOrderODEIntegrator::~LsodeSecondOrderODEIntegrator ( void ) [virtual]**

[LsodeSecondOrderODEIntegrator](#) destructor.

Definition at line 114 of file `lsode_second_order_ode_integrator.cc`.

References `jeod::LsodeSecondOrderODEIntegrator::arrays_allocated`, `jeod::LsodeSecondOrderODEIntegrator::y`, and `jeod::LsodeSecondOrderODEIntegrator::y_dot`.

## Chapter 7

# Namespace Documentation

### 7.1 er7\_utils Namespace Reference

Namespace [er7\\_utils](#) contains the state integration models used by JEOD.

#### Data Structures

- class [TwoDArray](#)  
*RAII template class that implements a rectangular two dimensional array.*
- class [DoubleTwoDArray](#)  
*2D array, specialized for doubles.*

#### 7.1.1 Detailed Description

Namespace [er7\\_utils](#) contains the state integration models used by JEOD.

### 7.2 jeod Namespace Reference

Namespace [jeod](#).

#### Data Structures

- class [GaussJacksonCoefficientsPair](#)  
*Contains a summed Adams and Gauss-Jackson coefficient pair.*
- class [GaussJacksonCoeffs](#)  
*Contains the Gauss-Jackson predictor and corrector coefficients.*
- class [GaussJacksonConfig](#)  
*Contains Gauss-Jackson configuration data.*
- class [GaussJacksonFirstOrderODEIntegrator](#)  
*Integrates a first order ODE using the summed Adams technique that is embedded within the Gauss-Jackson technique.*
- class [GaussJacksonGeneralizedDerivSecondOrderODEIntegrator](#)  
*Integrates a generalized derivative second order ODE using Gauss-Jackson.*
- class [GaussJacksonIntegrationControls](#)  
*IntegrationControls specialized for Gauss-Jackson integration.*
- class [GaussJacksonIntegratorBase](#)

- Base template class for integrating state via the Gauss-Jackson technique.*

  - class [GaussJacksonIntegratorConstructor](#)

*Create state and time integrators that propagate using Gauss-Jackson.*
  - class [GaussJacksonOneState](#)

*Essentially just a double\*.*
  - class [GaussJacksonRationalCoefficients](#)

*Contains a set of Adams or Stormer-Cowell coefficients.*
  - class [GaussJacksonSimpleSecondOrderODEIntegrator](#)

*Integrates a simple second order ODE using the Gauss-Jackson technique.*
  - class [GaussJacksonStateMachine](#)

*Guides the behavior of the Gauss-Jackson integration process via a finite state machine.*
  - class [GaussJacksonTwoState](#)

*Essentially just std::pair<double\*>.*
  - class [GeneralizedSecondOrderODETechnique](#)

*Enumerates the integration schemes, generalized Cartesian or Lie group integration, and provides simple utilities that work with this.*
  - class [IntegrationMessages](#)

*Declares messages associated with the integration test model.*
  - class [JeodIntegrationGroupOwner](#)

*The abstract class IntegrationGroupOwner contains an IntegrationGroup.*
  - class [JeodIntegrationGroup](#)

*A JeodIntegrationGroup integrates the state of a set of objects over time.*
  - class [JeodIntegrationTime](#)

*The class JeodIntegrationTime adds the concepts of timestamping and notification of changes in the nature of time to the ER7 numerical utilities TimeInterface class.*
  - class [Restartable2DSecondOrderIntegrator](#)

*Integrates a second order ODE in two dimensional space,  $d^2x/dt^2 = a(x,t)$ , where  $x$  is a two-vector.*
  - class [RestartableScalarFirstOrderODEIntegrator](#)

*A RestartableScalarFirstOrderODEIntegrator integrates a first order ODE,  $dx/dt = v(x,t)$ , where  $x$  is a scalar.*
  - class [RestartableT3SecondOrderODEIntegrator](#)

*A RestartableT3SecondOrderODEIntegrator integrates a second order ODE in three space,  $d^2x/dt^2 = a(x,t)$ , where  $x$  is a three-vector.*
  - class [RestartableSO3SecondOrderODEIntegrator](#)

*A RestartableSO3SecondOrderODEIntegrator integrates a generalized second order ODE that describes rotation in three space.*
  - class [RestartableStateIntegrator](#)

*A RestartableStateIntegrator establishes the basic capabilities needed to make a state integrator a managed resource.*
  - class [RestartableFirstOrderODEIntegrator](#)

*A RestartableFirstOrderODEIntegrator is-a RestartableStateIntegrator that manages an er7\_utils::FirstOrderODE-Integrator.*
  - class [RestartableSecondOrderODEIntegrator](#)

*A RestartableSecondOrderODEIntegrator is-a RestartableStateIntegrator that manages the integrator for a second order ODE problem.*
  - class [RestartableSimpleSecondOrderODEIntegrator](#)

*A RestartableSimpleSecondOrderODEIntegrator is-a RestartableSecondOrderODEIntegrator that manages the integrator for a simple second order ODE problem, one in which the time derivative of the generalized position is the generalized velocity.*
  - class [RestartableGeneralizedDerivSecondOrderODEIntegrator](#)

*A RestartableGeneralizedDerivSecondOrderODEIntegrator is-a RestartableStateIntegrator that manages the integrator for a generalized second order ODE problem, one in which the time derivative of the generalized position is some function of the generalized position and the generalized velocity.*
  - class [RestartableGeneralizedStepSecondOrderODEIntegrator](#)



A [RestartableGeneralizedStepSecondOrderODEIntegrator](#) is-a [RestartableStateIntegrator](#) that manages the integrator for a generalized second order ODE problem, one in which the time derivative of the generalized position is some function of the generalized position and the generalized velocity.

- class [TimeChangeSubscriber](#)  
A [TimeChangeSubscriber](#) is some object that wants to be notified of changes in the nature of time.
- class [LsodeControlDataInterface](#)  
Specifies controls for an LSODE integrator.
- class [LsodeDataJacobianPrep](#)  
Data associated with the method DPREPJ.
- class [LsodeDataArrays](#)  
The data arrays.
- class [LsodeDataStode](#)  
The data associated with method Dstode.
- class [LsodeFirstOrderODEIntegrator](#)  
Jeod-compatible version of the Livermore ODE solver, LSODE.
- class [LsodeGeneralizedDerivSecondOrderODEIntegrator](#)  
JEOD-compatible version of the Livermore ODE solver, LSODE, capable of integrating second-order ODEs.
- class [LsodeIntegrationControls](#)  
Contains controls for an LSODE integrator.
- class [LsodeIntegratorConstructor](#)  
Create state and time integrators that propagate using standard Lsode.
- class [LsodeSecondOrderODEIntegrator](#)  
JEOD-compatible version of the Livermore ODE solver, LSODE, capable of integrating second-order ODEs.
- class [LsodeSimpleSecondOrderODEIntegrator](#)  
JEOD-compatible version of the Livermore ODE solver, LSODE, capable of integrating second-order ODEs.

## Typedefs

- typedef  
[GaussJacksonIntegratorBase](#)  
< [GaussJacksonOneState](#),  
[er7\\_utils::FirstOrderODEIntegrator](#) > [GaussJacksonIntegratorBaseFirst](#)  
Alias for a first order Gauss Jackson integrator.
- typedef  
[GaussJacksonIntegratorBase](#)  
< [GaussJacksonTwoState](#),  
[er7\\_utils::SecondOrderODEIntegrator](#) > [GaussJacksonIntegratorBaseSecond](#)  
Alias for a second order Gauss Jackson integrator.

## Functions

- [std::ostream & operator<<](#) ([std::ostream &stream](#), const [GaussJacksonCoeffs](#) &coeff)
- static [GaussJacksonConfig set\\_default\\_config\\_values](#) (const [GaussJacksonConfig](#) &config)  
Swap the negative ones in the supplied config with the default values, some of which are computed.
- static unsigned int [validate\\_config](#) (const [GaussJacksonConfig](#) &config)  
Check for invalid values in the supplied config.
- static  
[GaussJacksonIntegrationControls \\* cast\\_to\\_gj\\_controls](#) ([er7\\_utils::IntegrationControls](#) &controls)  
Cast the provided integration controls to a [GaussJacksonIntegrationControls](#).

### 7.2.1 Detailed Description

Namespace jeod.

### 7.2.2 Typedef Documentation

**7.2.2.1** `typedef GaussJacksonIntegratorBase< GaussJacksonOneState, er7_utils::FirstOrderODEIntegrator>  
jeod::GaussJacksonIntegratorBaseFirst`

Alias for a first order Gauss Jackson integrator.

Definition at line 48 of file gauss\_jackson\_integrator\_base\_first.hh.

**7.2.2.2** `typedef GaussJacksonIntegratorBase< GaussJacksonTwoState, er7_utils::SecondOrderODEIntegrator>  
jeod::GaussJacksonIntegratorBaseSecond`

Alias for a second order Gauss Jackson integrator.

Definition at line 48 of file gauss\_jackson\_integrator\_base\_second.hh.

### 7.2.3 Function Documentation

**7.2.3.1** `static GaussJacksonIntegrationControls* jeod::cast_to_gj_controls ( er7_utils::IntegrationControls & controls )  
[static]`

Cast the provided integration controls to a [GaussJacksonIntegrationControls](#).

Parameters

<i>controls</i>	Generic controls to be cast.
-----------------	------------------------------

Returns

[GaussJacksonIntegrationControls](#) pointer, guaranteed to be non-null.

Definition at line 52 of file gauss\_jackson\_integrator\_constructor.cc.

Referenced by `jeod::GaussJacksonIntegratorConstructor::create_first_order_ode_integrator()`, `jeod::GaussJacksonIntegratorConstructor::create_generalized_deriv_second_order_ode_integrator()`, and `jeod::GaussJacksonIntegratorConstructor::create_second_order_ode_integrator()`.

**7.2.3.2** `std::ostream& jeod::operator<< ( std::ostream & stream, const GaussJacksonCoeffs & coeff )`

Parameters

<i>stream</i>	The stream to be printed to.
<i>coeff</i>	The coefficients to be printed.

Definition at line 143 of file gauss\_jackson\_coeffs.cc.

References `jeod::GaussJacksonCoeffs::corrector`, `jeod::GaussJacksonCoeffs::order`, `jeod::GaussJacksonCoeffs::predictor`, and `jeod::GaussJacksonCoefficientsPair::print()`.

**7.2.3.3** `static GaussJacksonConfig jeod::set_default_config_values ( const GaussJacksonConfig & config )  
[static]`

Swap the negative ones in the supplied config with the default values, some of which are computed.

Definition at line 74 of file gauss\_jackson\_config.cc.

References jeod::GaussJacksonConfig::absolute\_tolerance, jeod::GaussJacksonConfig::final\_order, jeod::GaussJacksonConfig::initial\_order, jeod::GaussJacksonConfig::max\_correction\_iterations, jeod::GaussJacksonConfig::ndoubling\_steps, jeod::GaussJacksonConfig::priming\_technique, and jeod::GaussJacksonConfig::relative\_tolerance.

Referenced by jeod::GaussJacksonConfig::validate\_configuration().

#### 7.2.3.4 static unsigned int jeod::validate\_config ( const GaussJacksonConfig & config ) [static]

Check for invalid values in the supplied config.

Definition at line 160 of file gauss\_jackson\_config.cc.

References jeod::GaussJacksonConfig::absolute\_tolerance, jeod::GaussJacksonConfig::final\_order, jeod::GaussJacksonConfig::initial\_order, jeod::GaussJacksonConfig::ndoubling\_steps, and jeod::GaussJacksonConfig::relative\_tolerance.

Referenced by jeod::GaussJacksonConfig::validate\_configuration().



## Chapter 8


# Data Structure Documentation

### 8.1 er7\_utils::DoubleTwoDArray Class Reference

2D array, specialized for doubles.

```
#include <two_d_array.hh>
```

Inheritance diagram for er7\_utils::DoubleTwoDArray:

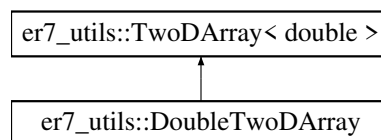

#### Friends

- class [InputProcessor](#)
- void [init\\_attrer7\\_utils\\_\\_DoubleTwoDArray](#) ()

#### Additional Inherited Members

##### 8.1.1 Detailed Description

2D array, specialized for doubles.

Definition at line 389 of file two\_d\_array.hh.

##### 8.1.2 Friends And Related Function Documentation

8.1.2.1 void [init\\_attrer7\\_utils\\_\\_DoubleTwoDArray](#) ( ) [[friend](#)]

8.1.2.2 friend class [InputProcessor](#) [[friend](#)]

Definition at line 391 of file two\_d\_array.hh.

The documentation for this class was generated from the following file:

- [two\\_d\\_array.hh](#)

## 8.2 jeod::GaussJacksonCoefficientsPair Class Reference

Contains a summed Adams and Gauss-Jackson coefficient pair.

```
#include <gauss_jackson_coefficients_pair.hh>
```

### Public Member Functions

- [GaussJacksonCoefficientsPair](#) ()  
*Default constructor.*
- [~GaussJacksonCoefficientsPair](#) ()  
*Destructor.*
- void [configure](#) (int max\_order)  
*Allocate (re-allocate) memory for the coefficients.*
- void [swap](#) ([GaussJacksonCoefficientsPair](#) &other)  
*Non-throwing swap.*
- void [allocate\\_arrays](#) (int size)  
*Allocate space for the coefficients.*
- void [deallocate\\_arrays](#) ()  
*Release allocated memory.*
- void [apply](#) (int nelelem, int ncoeff, double const \*const \*acc\_hist, [GaussJacksonTwoState](#) &state\_sum) const  
*Apply both sets of coefficients to the supplied history data.*
- void [apply](#) (int nelelem, int ncoeff, double const \*const \*acc\_hist, [GaussJacksonOneState](#) &state\_sum) const  
*Apply just the Adams coefficients to the supplied history data.*
- void [print](#) (int order, std::ostream &stream) const  
*Print the coefficients.*

### Data Fields

- double \* [sa\\_coefs](#)  
*Summed Adams coefficients, in ordinate form.*
- double \* [gj\\_coefs](#)  
*Gauss Jackson coefficients, in ordinate form.*

### Private Member Functions

- [GaussJacksonCoefficientsPair](#) (const [GaussJacksonCoefficientsPair](#) &)  
*Not implemented.*
- [GaussJacksonCoefficientsPair](#) & [operator=](#) (const [GaussJacksonCoefficientsPair](#) &)  
*Not implemented.*

### Friends

- class [InputProcessor](#)
- void [init\\_attrjeod\\_\\_GaussJacksonCoefficientsPair](#) ()

#### 8.2.1 Detailed Description

Contains a summed Adams and Gauss-Jackson coefficient pair.

Definition at line 49 of file gauss\_jackson\_coefficients\_pair.hh.

## 8.2.2 Constructor & Destructor Documentation

### 8.2.2.1 jeod::GaussJacksonCoefficientsPair::GaussJacksonCoefficientsPair ( ) [inline]

Default constructor.

Definition at line 73 of file gauss\_jackson\_coefficients\_pair.hh.

### 8.2.2.2 jeod::GaussJacksonCoefficientsPair::~~GaussJacksonCoefficientsPair ( ) [inline]

Destructor.

Definition at line 82 of file gauss\_jackson\_coefficients\_pair.hh.

References deallocate\_arrays().

### 8.2.2.3 jeod::GaussJacksonCoefficientsPair::GaussJacksonCoefficientsPair ( const GaussJacksonCoefficientsPair & ) [private]

Not implemented.

## 8.2.3 Member Function Documentation

### 8.2.3.1 void jeod::GaussJacksonCoefficientsPair::allocate\_arrays ( int size )

Allocate space for the coefficients.

Parameters

<i>size</i>	Array size.
-------------	-------------

Definition at line 37 of file gauss\_jackson\_coefficients\_pair.cc.

References gj\_coefs, and sa\_coefs.

Referenced by configure().

### 8.2.3.2 void jeod::GaussJacksonCoefficientsPair::apply ( int nelem, int ncoeff, double const \*const \* acc\_hist, GaussJacksonTwoState & state\_sum ) const

Apply both sets of coefficients to the supplied history data.

The first element of the output state\_sum is calculated as the inner products of the acceleration history with the summed Adams coefficients. The second element is calculated as the inner product with the Gauss-Jackson coefficients. (First = first integral; second = second integral.)

Parameters

<i>nelem</i>	Dimensionality of each acceleration history element
<i>ncoeff</i>	Number of elements in the acceleration history
<i>acc_hist</i>	Acceleration history
<i>state_sum</i>	Output inner products

Definition at line 63 of file gauss\_jackson\_coefficients\_pair.cc.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::integrate\_gj().

8.2.3.3 void jeod::GaussJacksonCoefficientsPair::apply ( int *nelem*, int *ncoeff*, double const \*const \* *acc\_hist*,  
GaussJacksonOneState & *state\_sum* ) const

Apply just the Adams coefficients to the supplied history data.



## Parameters

<i>nelem</i>	Dimensionality of each acceleration history element
<i>ncoeff</i>	Number of elements in the acceleration history
<i>acc_hist</i>	Acceleration history
<i>state_sum</i>	Output inner products

Definition at line 96 of file gauss\_jackson\_coefficients\_pair.cc.

#### 8.2.3.4 void jeod::GaussJacksonCoefficientsPair::configure ( int *max\_order* ) [inline]

Allocate (re-allocate) memory for the coefficients.

Arrays are size & to contain max\_order+1 elements.

## Parameters

<i>max_order</i>	Maximum order that will be used.
------------------	----------------------------------

Definition at line 92 of file gauss\_jackson\_coefficients\_pair.hh.

References allocate\_arrays(), and deallocate\_arrays().

Referenced by jeod::GaussJacksonCoeffs::configure().

#### 8.2.3.5 void jeod::GaussJacksonCoefficientsPair::deallocate\_arrays ( )

Release allocated memory.

Definition at line 46 of file gauss\_jackson\_coefficients\_pair.cc.

References gj\_coefs, and sa\_coefs.

Referenced by configure(), and ~GaussJacksonCoefficientsPair().

#### 8.2.3.6 GaussJacksonCoefficientsPair& jeod::GaussJacksonCoefficientsPair::operator= ( const GaussJacksonCoefficientsPair & ) [private]

Not implemented.

#### 8.2.3.7 void jeod::GaussJacksonCoefficientsPair::print ( int *order*, std::ostream & *stream* ) const

Print the coefficients.

## Parameters

<i>order</i>	Coefficients order
<i>stream</i>	Output stream

Definition at line 123 of file gauss\_jackson\_coefficients\_pair.cc.

References gj\_coefs, and sa\_coefs.

Referenced by jeod::operator<<().

#### 8.2.3.8 void jeod::GaussJacksonCoefficientsPair::swap ( GaussJacksonCoefficientsPair & *other* )

Non-throwing swap.

**Parameters**

<i>other</i>	Coeffs pair with which contents are to be swapped.
--------------	--

Definition at line 54 of file gauss\_jackson\_coefficients\_pair.cc.

References `gj_coefs`, and `sa_coefs`.

Referenced by `jeod::GaussJacksonCoeffs::swap()`.

**8.2.4 Friends And Related Function Documentation**

**8.2.4.1** `void init_attrjeod__GaussJacksonCoefficientsPair ( )` [*friend*]

**8.2.4.2** `friend class InputProcessor` [*friend*]

Definition at line 51 of file gauss\_jackson\_coefficients\_pair.hh.

**8.2.5 Field Documentation**

**8.2.5.1** `double* jeod::GaussJacksonCoefficientsPair::gj_coefs`

Gauss Jackson coefficients, in ordinate form.

`trick_units(-)`

Definition at line 65 of file gauss\_jackson\_coefficients\_pair.hh.

Referenced by `allocate_arrays()`, `jeod::GaussJacksonCoeffs::compute_coefs()`, `deallocate_arrays()`, `print()`, `jeod::GaussJacksonIntegratorBase< State, Primer >::start_cycle()`, and `swap()`.

**8.2.5.2** `double* jeod::GaussJacksonCoefficientsPair::sa_coefs`

Summed Adams coefficients, in ordinate form.

`trick_units(-)`

Definition at line 60 of file gauss\_jackson\_coefficients\_pair.hh.

Referenced by `allocate_arrays()`, `jeod::GaussJacksonCoeffs::compute_coefs()`, `deallocate_arrays()`, `print()`, `jeod::GaussJacksonIntegratorBase< State, Primer >::start_cycle()`, and `swap()`.

The documentation for this class was generated from the following files:

- [gauss\\_jackson\\_coefficients\\_pair.hh](#)
- [gauss\\_jackson\\_coefficients\\_pair.cc](#)

**8.3 jeod::GaussJacksonCoeffs Class Reference**

Contains the Gauss-Jackson predictor and corrector coefficients.

```
#include <gauss_jackson_coeffs.hh>
```

**Public Member Functions**

- [GaussJacksonCoeffs](#) ()  
*Default constructor.*
- [GaussJacksonCoeffs](#) (const [GaussJacksonCoeffs](#) &src)

- Copy constructor.*
- [~GaussJacksonCoeffs](#) ()
- Destructor.*
- [GaussJacksonCoeffs](#) & [operator=](#) ([GaussJacksonCoeffs](#) src)
- Copy-and-swap assignment operator.*
- void [swap](#) ([GaussJacksonCoeffs](#) &src)
- Non-throwing swap.*
- void [configure](#) (unsigned int max\_order\_in)
- Configure to enable coefficients up to the specified maximum order.*
- void [compute\\_coeffs](#) (unsigned int order\_in)
- Compute coefficients for the specified order.*

## Data Fields

- [GaussJacksonCoefficientsPair](#) predictor
- Summed Adams and Gauss-Jackson predictor coefficients.*
- [GaussJacksonCoefficientsPair](#) \* corrector
- Summed Adams and Gauss-Jackson corrector coefficients.*
- unsigned int [max\\_order](#)
- Maximum order; used for sizing.*
- unsigned int [order](#)
- Current order; dictates the coefficient values.*

## Friends

- class [InputProcessor](#)
- void [init\\_attrjeod\\_\\_GaussJacksonCoeffs](#) ()
- std::ostream & [operator<<](#) (std::ostream &stream, const [GaussJacksonCoeffs](#) &coeff)
- Print the coefficients.*

### 8.3.1 Detailed Description

Contains the Gauss-Jackson predictor and corrector coefficients.

Definition at line 43 of file gauss\_jackson\_coeffs.hh.

### 8.3.2 Constructor & Destructor Documentation

#### 8.3.2.1 jeod::GaussJacksonCoeffs::GaussJacksonCoeffs ( ) [\[inline\]](#)

Default constructor.

Definition at line 77 of file gauss\_jackson\_coeffs.hh.

#### 8.3.2.2 jeod::GaussJacksonCoeffs::GaussJacksonCoeffs ( const GaussJacksonCoeffs & src ) [\[inline\]](#)

Copy constructor.

Note that this doesn't copy; it recomputes. The end result is as if a copy had been made.

## Parameters

<i>src</i>	Object to be copied.
------------	----------------------

Definition at line 91 of file gauss\_jackson\_coefs.hh.

References compute\_coefs(), configure(), max\_order, and order.

### 8.3.2.3 jeod::GaussJacksonCoefs::~~GaussJacksonCoefs ( )

Destructor.

Definition at line 45 of file gauss\_jackson\_coefs.cc.

References corrector.

## 8.3.3 Member Function Documentation

### 8.3.3.1 void jeod::GaussJacksonCoefs::compute\_coefs ( unsigned int *order\_in* )

Compute coefficients for the specified order.

## Parameters

<i>order_in</i>	The current order.
-----------------	--------------------

Definition at line 85 of file gauss\_jackson\_coefs.cc.

References jeod::GaussJacksonRationalCoefficients::configure\_adams\_corrector(), jeod::GaussJacksonRationalCoefficients::construct\_predictor(), jeod::GaussJacksonRationalCoefficients::construct\_stormer\_cowell\_corrector(), jeod::GaussJacksonRationalCoefficients::convert\_to\_ordinate\_form(), corrector, jeod::GaussJacksonRationalCoefficients::discard\_extra\_terms(), jeod::GaussJacksonRationalCoefficients::displace\_back(), jeod::GaussJacksonCoefficientsPair::gj\_coefs, max\_order, order, predictor, and jeod::GaussJacksonCoefficientsPair::sa\_coefs.

Referenced by GaussJacksonCoefs(), jeod::GaussJacksonIntegrationControls::GaussJacksonIntegrationControls(), and jeod::GaussJacksonIntegrationControls::start\_cycle().

### 8.3.3.2 void jeod::GaussJacksonCoefs::configure ( unsigned int *max\_order\_in* )

Configure to enable coefficients up to the specified maximum order.

## Parameters

<i>max_order_in</i>	The maximum order to be used.
---------------------	-------------------------------

Definition at line 65 of file gauss\_jackson\_coefs.cc.

References jeod::GaussJacksonCoefficientsPair::configure(), corrector, max\_order, order, and predictor.

Referenced by GaussJacksonCoefs(), and jeod::GaussJacksonIntegrationControls::GaussJacksonIntegrationControls().

### 8.3.3.3 GaussJacksonCoefs& jeod::GaussJacksonCoefs::operator= ( GaussJacksonCoefs *src* ) [inline]

Copy-and-swap assignment operator.

## Parameters

<i>src</i>	Object to be copied.
------------	----------------------

Definition at line 111 of file gauss\_jackson\_coefs.hh.

References swap().

**8.3.3.4 void jeod::GaussJacksonCoeffs::swap ( GaussJacksonCoeffs & src )**

Non-throwing swap.

Parameters

<i>src</i>	Object to swap contents with.
------------	-------------------------------

Definition at line 53 of file gauss\_jackson\_coeffs.cc.

References corrector, max\_order, order, predictor, and jeod::GaussJacksonCoefficientsPair::swap().

Referenced by operator=().

**8.3.4 Friends And Related Function Documentation****8.3.4.1 void init\_attrjeod\_\_GaussJacksonCoeffs ( ) [friend]****8.3.4.2 friend class InputProcessor [friend]**

Definition at line 45 of file gauss\_jackson\_coeffs.hh.

**8.3.4.3 std::ostream& operator<< ( std::ostream & stream, const GaussJacksonCoeffs & coeff ) [friend]**

Print the coefficients.

Parameters

<i>stream</i>	The stream to be printed to.
<i>coeff</i>	The coefficients to be printed.

Definition at line 143 of file gauss\_jackson\_coeffs.cc.

**8.3.5 Field Documentation****8.3.5.1 GaussJacksonCoefficientsPair\* jeod::GaussJacksonCoeffs::corrector**

Summed Adams and Gauss-Jackson corrector coefficients.

trick\_units(-)

Definition at line 59 of file gauss\_jackson\_coeffs.hh.

Referenced by compute\_coeffs(), configure(), jeod::GaussJacksonIntegratorBase< State, Primer >::integrate\_gj(), jeod::operator<<(), jeod::GaussJacksonIntegratorBase< State, Primer >::start\_cycle(), swap(), and ~Gauss-JacksonCoeffs().

**8.3.5.2 unsigned int jeod::GaussJacksonCoeffs::max\_order**

Maximum order; used for sizing.

trick\_units(-)

Definition at line 64 of file gauss\_jackson\_coeffs.hh.

Referenced by compute\_coeffs(), configure(), GaussJacksonCoeffs(), and swap().

**8.3.5.3 unsigned int jeod::GaussJacksonCoeffs::order**

Current order; dictates the coefficient values.

trick\_units(-)

Definition at line 69 of file gauss\_jackson\_coeffs.hh.

Referenced by compute\_coeffs(), configure(), GaussJacksonCoeffs(), jeod::operator<<(), and swap().

#### 8.3.5.4 GaussJacksonCoefficientsPair jeod::GaussJacksonCoeffs::predictor

Summed Adams and Gauss-Jackson predictor coefficients.

trick\_units(-)

Definition at line 54 of file gauss\_jackson\_coeffs.hh.

Referenced by compute\_coeffs(), configure(), jeod::operator<<(), and swap().

The documentation for this class was generated from the following files:

- [gauss\\_jackson\\_coeffs.hh](#)
- [gauss\\_jackson\\_coeffs.cc](#)

## 8.4 jeod::GaussJacksonConfig Class Reference

Contains Gauss-Jackson configuration data.

```
#include <gauss_jackson_config.hh>
```

### Static Public Member Functions

- static [GaussJacksonConfig default\\_configuration](#) ()  
*Creates a [GaussJacksonConfig](#) with all members set to -1.*
- static [GaussJacksonConfig standard\\_configuration](#) ()  
*Creates a [GaussJacksonConfig](#) with all members set to their defaults.*
- static [GaussJacksonConfig validate\\_configuration](#) (const [GaussJacksonConfig](#) &config)  
*Creates a [GaussJacksonConfig](#) based on the supplied configuration.*

### Data Fields

- er7\_utils::Integration::Technique [priming\\_technique](#)  
*The integration technique to be used to prime the Gauss-Jackson process.*
- unsigned int [initial\\_order](#)  
*The order of the Gauss Jackson integrator immediately after priming.*
- unsigned int [final\\_order](#)  
*The order of the Gauss Jackson integrator once it's operational.*
- unsigned int [ndoubling\\_steps](#)  
*The number of time doubling steps involved in the bootstrap operation.*
- unsigned int [max\\_correction\\_iterations](#)  
*Maximum number of correction steps allowed before the integrator is deemed to be not converging.*
- double [relative\\_tolerance](#)  
*Number that indicates the allowable relative difference for two states to be considered converged.*
- double [absolute\\_tolerance](#)  
*Number that indicates the allowable absolute difference for two states to be considered converged.*

## Friends

- class [InputProcessor](#)
- void [init\\_attrjeod\\_\\_GaussJacksonConfig](#) ()

### 8.4.1 Detailed Description

Contains Gauss-Jackson configuration data.

All member data are public; this is essentially a struct.

Definition at line 41 of file `gauss_jackson_config.hh`.

### 8.4.2 Member Function Documentation

#### 8.4.2.1 GaussJacksonConfig jeod::GaussJacksonConfig::default\_configuration ( ) [static]

Creates a [GaussJacksonConfig](#) with all members set to -1.

This otherwise invalid value has a special meaning to the validation function. When encountered, the item is silently replaced with the default for that item.

Definition at line 37 of file `gauss_jackson_config.cc`.

References `absolute_tolerance`, `final_order`, `initial_order`, `max_correction_iterations`, `ndoubling_steps`, `priming_technique`, and `relative_tolerance`.

#### 8.4.2.2 GaussJacksonConfig jeod::GaussJacksonConfig::standard\_configuration ( ) [static]

Creates a [GaussJacksonConfig](#) with all members set to their defaults.

Definition at line 54 of file `gauss_jackson_config.cc`.

References `absolute_tolerance`, `final_order`, `initial_order`, `max_correction_iterations`, `ndoubling_steps`, `priming_technique`, and `relative_tolerance`.

Referenced by `jeod::GaussJacksonIntegratorConstructor::create_integration_controls()`, and `validate_configuration()`.

#### 8.4.2.3 GaussJacksonConfig jeod::GaussJacksonConfig::validate\_configuration ( const GaussJacksonConfig & config ) [static]

Creates a [GaussJacksonConfig](#) based on the supplied configuration.

Values of -1 are replaced with their defaults. The standard configuration is used if any invalid item is invalid.

Definition at line 231 of file `gauss_jackson_config.cc`.

References `jeod::set_default_config_values()`, `standard_configuration()`, and `jeod::validate_config()`.

Referenced by `jeod::GaussJacksonIntegratorConstructor::configure()`.

### 8.4.3 Friends And Related Function Documentation

#### 8.4.3.1 void init\_attrjeod\_\_GaussJacksonConfig ( ) [friend]

#### 8.4.3.2 friend class InputProcessor [friend]

Definition at line 43 of file `gauss_jackson_config.hh`.

## 8.4.4 Field Documentation

### 8.4.4.1 double jeod::GaussJacksonConfig::absolute\_tolerance

Number that indicates the allowable absolute difference for two states to be considered converged.

Defaults to 1e-10.trick\_units(-)

Definition at line 123 of file gauss\_jackson\_config.hh.

Referenced by default\_configuration(), jeod::set\_default\_config\_values(), standard\_configuration(), and jeod::validate\_config().

### 8.4.4.2 unsigned int jeod::GaussJacksonConfig::final\_order

The order of the Gauss Jackson integrator once it's operational.

This must be an even number between initial\_order and 14, inclusive. Defaults to 12.trick\_units(-)

Definition at line 92 of file gauss\_jackson\_config.hh.

Referenced by jeod::GaussJacksonStateMachine::configure(), default\_configuration(), jeod::GaussJacksonIntegrationControls::GaussJacksonIntegrationControls(), jeod::set\_default\_config\_values(), standard\_configuration(), and jeod::validate\_config().

### 8.4.4.3 unsigned int jeod::GaussJacksonConfig::initial\_order

The order of the Gauss Jackson integrator immediately after priming.

This must be an even number and must be 14 or less. Defaults to 4.trick\_units(-)

Definition at line 85 of file gauss\_jackson\_config.hh.

Referenced by jeod::GaussJacksonStateMachine::configure(), default\_configuration(), jeod::set\_default\_config\_values(), standard\_configuration(), and jeod::validate\_config().

### 8.4.4.4 unsigned int jeod::GaussJacksonConfig::max\_correction\_iterations

Maximum number of correction steps allowed before the integrator is deemed to be not converging.

The algorithm is run in predict-only mode if this limit is zero. The corrector is applied but once with the limit is one. A one-time warning is issued if the limit is 2 or more and if the the algorithm would make more corrections were it not for this limit. Defaults to 10.trick\_units(-)

Definition at line 109 of file gauss\_jackson\_config.hh.

Referenced by jeod::GaussJacksonStateMachine::configure(), default\_configuration(), jeod::set\_default\_config\_values(), and standard\_configuration().

### 8.4.4.5 unsigned int jeod::GaussJacksonConfig::ndoubling\_steps

The number of time doubling steps involved in the bootstrap operation.

Defaults to (final\_order - initial\_order)/2.trick\_units(-)

Definition at line 98 of file gauss\_jackson\_config.hh.

Referenced by jeod::GaussJacksonStateMachine::configure(), default\_configuration(), jeod::set\_default\_config\_values(), standard\_configuration(), and jeod::validate\_config().



#### 8.4.4.6 er7\_utils::Integration::Technique jeod::GaussJacksonConfig::priming\_technique

The integration technique to be used to prime the Gauss-Jackson process.

Defaults to `er7_utils::Integration::Unspecified`, the interpretation of which depends on the initial order.`trick_units(-)`

Definition at line 78 of file `gauss_jackson_config.hh`.

Referenced by `jeod::GaussJacksonIntegratorConstructor::configure()`, `default_configuration()`, `jeod::set_default_config_values()`, and `standard_configuration()`.

#### 8.4.4.7 double jeod::GaussJacksonConfig::relative\_tolerance

Number that indicates the allowable relative difference for two states to be considered converged.

Defaults to `1e-14.trick_units(-)`

Definition at line 116 of file `gauss_jackson_config.hh`.

Referenced by `default_configuration()`, `jeod::set_default_config_values()`, `standard_configuration()`, and `jeod::validate_config()`.

The documentation for this class was generated from the following files:


- [gauss\\_jackson\\_config.hh](#)
- [gauss\\_jackson\\_config.cc](#)

## 8.5 jeod::GaussJacksonFirstOrderODEIntegrator Class Reference

Integrates a first order ODE using the summed Adams technique that is embedded within the Gauss-Jackson technique.

```
#include <gauss_jackson_first_order_ode_integrator.hh>
```

Inheritance diagram for `jeod::GaussJacksonFirstOrderODEIntegrator`:

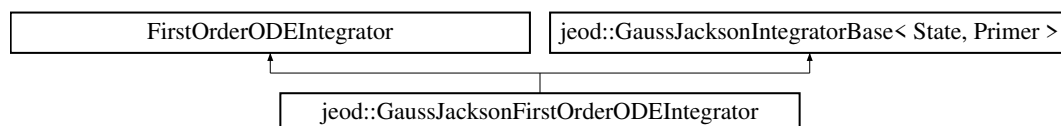

### Private Member Functions

- [JEOD\\_MAKE\\_SIM\\_INTERFACES](#) ([GaussJacksonFirstOrderODEIntegrator](#)) public  
*Default constructor.*
- [GaussJacksonFirstOrderODEIntegrator](#) (const [er7\\_utils::IntegratorConstructor](#) &priming\_constructor, [Gauss-JacksonIntegrationControls](#) &controls, unsigned int size\_in, [er7\\_utils::IntegrationControls](#) &priming\_controls)  
*Non-default constructor.*
- [GaussJacksonFirstOrderODEIntegrator](#) (const [GaussJacksonFirstOrderODEIntegrator](#) &src)  
*Copy constructor.*
- [~GaussJacksonFirstOrderODEIntegrator](#) ()  
*Destructor.*
- [GaussJacksonFirstOrderODEIntegrator](#) & operator= ( [GaussJacksonFirstOrderODEIntegrator](#) src)  
*Assignment operator.*
- void [swap](#) ([GaussJacksonFirstOrderODEIntegrator](#) &other)  
*Non-throwing swap.*

- virtual  
er7\_utils::FirstOrderODEIntegrator \* [create\\_copy](#) () const  
*Replicate this.*
- void [reset\\_integrator](#) ()  
*Reset the integrator.*
- er7\_utils::IntegratorResult [integrate](#) (double dyn\_dt, unsigned int target\_stage, double const \*ER7\_UTILS\_RESTRICT deriv, double \*ER7\_UTILS\_RESTRICT state)  
*Integrate.*

## Additional Inherited Members

### 8.5.1 Detailed Description

Integrates a first order ODE using the summed Adams technique that is embedded within the Gauss-Jackson technique.

Definition at line 46 of file gauss\_jackson\_first\_order\_ode\_integrator.hh.

### 8.5.2 Constructor & Destructor Documentation

**8.5.2.1** jeod::GaussJacksonFirstOrderODEIntegrator::GaussJacksonFirstOrderODEIntegrator ( const er7\_utils::IntegratorConstructor & *priming\_constructor*, GaussJacksonIntegrationControls & *controls*, unsigned int *size\_in*, er7\_utils::IntegrationControls & *priming\_controls* ) [inline], [private]

Non-default constructor.

Parameters

<i>priming_constructor</i>	Integrator constructor for the technique used during priming.
<i>controls</i>	The Gauss-Jackson integration controls that drives this state integrator.
<i>size_in</i>	State size.
<i>priming_controls</i>	Integration controls used during priming.

Definition at line 74 of file gauss\_jackson\_first\_order\_ode\_integrator.hh.

**8.5.2.2** jeod::GaussJacksonFirstOrderODEIntegrator::GaussJacksonFirstOrderODEIntegrator ( const GaussJacksonFirstOrderODEIntegrator & *src* ) [inline], [private]

Copy constructor.

Definition at line 90 of file gauss\_jackson\_first\_order\_ode\_integrator.hh.

**8.5.2.3** jeod::GaussJacksonFirstOrderODEIntegrator::~~GaussJacksonFirstOrderODEIntegrator ( ) [inline], [private]

Destructor.

Definition at line 101 of file gauss\_jackson\_first\_order\_ode\_integrator.hh.

### 8.5.3 Member Function Documentation

**8.5.3.1** virtual er7\_utils::FirstOrderODEIntegrator\* jeod::GaussJacksonFirstOrderODEIntegrator::create\_copy ( ) const [inline], [private], [virtual]

Replicate this.

Definition at line 127 of file gauss\_jackson\_first\_order\_ode\_integrator.hh.

```
8.5.3.2 er7_utils::IntegratorResult jeod::GaussJacksonFirstOrderODEIntegrator::integrate ( double dyn_dt, unsigned int
      target_stage, double const *ER7_UTILS_RESTRICT deriv, double *ER7_UTILS_RESTRICT state ) [inline],
      [private]
```

Integrate.

Definition at line 143 of file gauss\_jackson\_first\_order\_ode\_integrator.hh.

References jeod::GaussJacksonIntegratorBase< State, Primer >::base\_integrate().

Referenced by jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator::integrate().

```
8.5.3.3 jeod::GaussJacksonFirstOrderODEIntegrator::JEOD_MAKE_SIM_INTERFACES ( GaussJacksonFirstOrderODE-
      Integrator ) [inline], [private]
```

Default constructor.

Definition at line 50 of file gauss\_jackson\_first\_order\_ode\_integrator.hh.

```
8.5.3.4 GaussJacksonFirstOrderODEIntegrator& jeod::GaussJacksonFirstOrderODEIntegrator::operator= (
      GaussJacksonFirstOrderODEIntegrator src ) [inline], [private]
```

Assignment operator.

Definition at line 107 of file gauss\_jackson\_first\_order\_ode\_integrator.hh.

References swap().

```
8.5.3.5 void jeod::GaussJacksonFirstOrderODEIntegrator::reset_integrator ( ) [inline], [private]
```

Reset the integrator.

Definition at line 135 of file gauss\_jackson\_first\_order\_ode\_integrator.hh.

References jeod::GaussJacksonIntegratorBase< State, Primer >::base\_reset().

Referenced by jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator::reset\_integrator().

```
8.5.3.6 void jeod::GaussJacksonFirstOrderODEIntegrator::swap ( GaussJacksonFirstOrderODEIntegrator & other )
      [inline], [private]
```

Non-throwing swap.

Definition at line 117 of file gauss\_jackson\_first\_order\_ode\_integrator.hh.

References jeod::GaussJacksonIntegratorBase< State, Primer >::swap().

Referenced by operator=(), and jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator::swap().

The documentation for this class was generated from the following file:


- [gauss\\_jackson\\_first\\_order\\_ode\\_integrator.hh](#)

## 8.6 jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator Class Reference

Integrates a generalized derivative second order ODE using Gauss-Jackson.

```
#include <gauss_jackson_generalized_second_order_ode_integrator.hh>
```

Inheritance diagram for jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator:

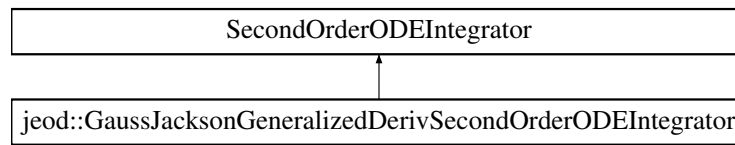

## Public Member Functions

- [GaussJacksonGeneralizedDerivSecondOrderODEIntegrator](#) ()  
*Default constructor.*
- [GaussJacksonGeneralizedDerivSecondOrderODEIntegrator](#) (const er7\_utils::IntegratorConstructor &priming\_constructor, [GaussJacksonIntegrationControls](#) &controls, unsigned int position\_size, unsigned int velocity\_size, const er7\_utils::GeneralizedPositionDerivativeFunctions &deriv\_funs, er7\_utils::IntegrationControls &priming\_controls)  
*Non-default constructor.*
- [GaussJacksonGeneralizedDerivSecondOrderODEIntegrator](#) (const [GaussJacksonGeneralizedDerivSecondOrderODEIntegrator](#) &src)  
*Copy constructor.*
- [~GaussJacksonGeneralizedDerivSecondOrderODEIntegrator](#) ()  
*Destructor.*
- [GaussJacksonGeneralizedDerivSecondOrderODEIntegrator](#) & operator= ([GaussJacksonGeneralizedDerivSecondOrderODEIntegrator](#) src)  
*Assignment operator.*
- void [swap](#) ([GaussJacksonGeneralizedDerivSecondOrderODEIntegrator](#) &other)  
*Non-throwing swap.*
- virtual  
er7\_utils::SecondOrderODEIntegrator \* [create\\_copy](#) () const  
*Replicate this.*
- void [reset\\_integrator](#) ()  
*Reset the integrator.*
- er7\_utils::IntegratorResult [integrate](#) (double dyn\_dt, unsigned int target\_stage, double const \*acc, double \*vel, double \*pos)  
*Integrate state.*

## Private Attributes

- [GaussJacksonFirstOrderODEIntegrator](#) vel\_integrator  
*Integrator for the generalized velocity.*
- [GaussJacksonSimpleSecondOrderODEIntegrator](#) pos\_integrator  
*Integrator for the generalized position.*
- double \* [posdot](#)  
*Generalized position time derivative.*
- double \* [posdotdot](#)  
*Generalized position second time derivative.*

## Friends

- class [InputProcessor](#)
- void [init\\_attrjeod\\_\\_GaussJacksonGeneralizedDerivSecondOrderODEIntegrator](#) ()

### 8.6.1 Detailed Description

Integrates a generalized derivative second order ODE using Gauss-Jackson.

Generalized position is integrated via a simple second order Gauss-Jackson integrator. Generalized velocity is integrated via a first order summed Adams integrator.

Definition at line 50 of file gauss\_jackson\_generalized\_second\_order\_ode\_integrator.hh.

### 8.6.2 Constructor & Destructor Documentation

#### 8.6.2.1 jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator ( ) [inline]

Default constructor.

Definition at line 60 of file gauss\_jackson\_generalized\_second\_order\_ode\_integrator.hh.

#### 8.6.2.2 jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator ( const er7\_utils::IntegratorConstructor & *priming\_constructor*, GaussJacksonIntegrationControls & *controls*, unsigned int *position\_size*, unsigned int *velocity\_size*, const er7\_utils::GeneralizedPositionDerivativeFunctions & *deriv\_funs*, er7\_utils::IntegrationControls & *priming\_controls* )

Non-default constructor.

Parameters

<i>priming_constructor</i>	Integrator constructor for the technique used during priming.
<i>controls</i>	The Gauss-Jackson integration controls that drives this state integrator.
<i>position_size</i>	Generalized position vector size.
<i>velocity_size</i>	Generalized velocity vector size.
<i>deriv_funs</i>	Position vector time deriv functions.
<i>priming_controls</i>	Integration controls used during priming.

Definition at line 37 of file gauss\_jackson\_generalized\_second\_order\_ode\_integrator.cc.

References posdot, and posdotdot.

#### 8.6.2.3 jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator ( const GaussJacksonGeneralizedDerivSecondOrderODEIntegrator & *src* )

Copy constructor.

Definition at line 61 of file gauss\_jackson\_generalized\_second\_order\_ode\_integrator.cc.

References posdot, and posdotdot.

#### 8.6.2.4 jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator::~GaussJacksonGeneralizedDerivSecondOrderODEIntegrator ( )

Destructor.

Definition at line 81 of file gauss\_jackson\_generalized\_second\_order\_ode\_integrator.cc.

References posdot, and posdotdot.

### 8.6.3 Member Function Documentation

**8.6.3.1** `er7_utils::SecondOrderODEIntegrator * jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator::create_copy ( ) const [virtual]`

Replicate this.

Definition at line 103 of file `gauss_jackson_generalized_second_order_ode_integrator.cc`.

**8.6.3.2** `er7_utils::IntegratorResult jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator::integrate ( double dyn_dt, unsigned int target_stage, double const * acc, double * vel, double * pos ) [inline]`

Integrate state.

Definition at line 143 of file `gauss_jackson_generalized_second_order_ode_integrator.hh`.

References `jeod::GaussJacksonFirstOrderODEIntegrator::integrate()`, `jeod::GaussJacksonSimpleSecondOrderODEIntegrator::integrate()`, `pos_integrator`, `posdot`, `posdotdot`, and `vel_integrator`.

**8.6.3.3** `GaussJacksonGeneralizedDerivSecondOrderODEIntegrator& jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator::operator= ( GaussJacksonGeneralizedDerivSecondOrderODEIntegrator src ) [inline]`

Assignment operator.

Definition at line 107 of file `gauss_jackson_generalized_second_order_ode_integrator.hh`.

References `swap()`.

**8.6.3.4** `void jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator::reset_integrator ( ) [inline]`

Reset the integrator.

Definition at line 133 of file `gauss_jackson_generalized_second_order_ode_integrator.hh`.

References `pos_integrator`, `jeod::GaussJacksonFirstOrderODEIntegrator::reset_integrator()`, `jeod::GaussJacksonSimpleSecondOrderODEIntegrator::reset_integrator()`, and `vel_integrator`.

**8.6.3.5** `void jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator::swap ( GaussJacksonGeneralizedDerivSecondOrderODEIntegrator & other )`

Non-throwing swap.

Definition at line 89 of file `gauss_jackson_generalized_second_order_ode_integrator.cc`.

References `pos_integrator`, `posdot`, `posdotdot`, `jeod::GaussJacksonFirstOrderODEIntegrator::swap()`, `jeod::GaussJacksonSimpleSecondOrderODEIntegrator::swap()`, and `vel_integrator`.

Referenced by `operator=()`.

## 8.6.4 Friends And Related Function Documentation

**8.6.4.1** `void init_attrjeod__GaussJacksonGeneralizedDerivSecondOrderODEIntegrator ( ) [friend]`

**8.6.4.2** `friend class InputProcessor [friend]`

Definition at line 53 of file `gauss_jackson_generalized_second_order_ode_integrator.hh`.

## 8.6.5 Field Documentation

#### 8.6.5.1 GaussJacksonSimpleSecondOrderODEIntegrator jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator::pos\_integrator [private]

Integrator for the generalized position.

trick\_units(—)

Definition at line 169 of file gauss\_jackson\_generalized\_second\_order\_ode\_integrator.hh.

Referenced by integrate(), reset\_integrator(), and swap().

#### 8.6.5.2 double\* jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator::posdot [private]

Generalized position time derivative.

trick\_units(—)

Definition at line 174 of file gauss\_jackson\_generalized\_second\_order\_ode\_integrator.hh.

Referenced by GaussJacksonGeneralizedDerivSecondOrderODEIntegrator(), integrate(), swap(), and ~GaussJacksonGeneralizedDerivSecondOrderODEIntegrator().

#### 8.6.5.3 double\* jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator::posdotdot [private]

Generalized position second time derivative.

trick\_units(—)

Definition at line 179 of file gauss\_jackson\_generalized\_second\_order\_ode\_integrator.hh.

Referenced by GaussJacksonGeneralizedDerivSecondOrderODEIntegrator(), integrate(), swap(), and ~GaussJacksonGeneralizedDerivSecondOrderODEIntegrator().

#### 8.6.5.4 GaussJacksonFirstOrderODEIntegrator jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator::vel\_integrator [private]

Integrator for the generalized velocity.

trick\_units(—)

Definition at line 164 of file gauss\_jackson\_generalized\_second\_order\_ode\_integrator.hh.

Referenced by integrate(), reset\_integrator(), and swap().

The documentation for this class was generated from the following files:


- [gauss\\_jackson\\_generalized\\_second\\_order\\_ode\\_integrator.hh](#)
- [gauss\\_jackson\\_generalized\\_second\\_order\\_ode\\_integrator.cc](#)

## 8.7 jeod::GaussJacksonIntegrationControls Class Reference

IntegrationControls specialized for Gauss-Jackson integration.

```
#include <gauss_jackson_integration_controls.hh>
```

Inheritance diagram for jeod::GaussJacksonIntegrationControls:

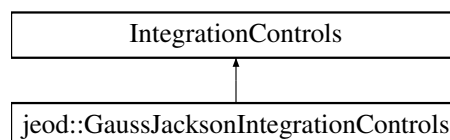

## Public Member Functions

- [GaussJacksonIntegrationControls](#) ()  
*Default constructor.*
- [GaussJacksonIntegrationControls](#) (const [er7\\_utils::IntegratorConstructor](#) &priming\_constructor, const [GaussJacksonConfig](#) &config\_in)  
*Non-default constructor.*
- [GaussJacksonIntegrationControls](#) (const [GaussJacksonIntegrationControls](#) &src)  
*Copy constructor.*
- [~GaussJacksonIntegrationControls](#) ()  
*Destructor.*
- [GaussJacksonIntegrationControls](#) & operator= ([GaussJacksonIntegrationControls](#) src)  
*Copy and swap assignment operator.*
- virtual  
[er7\\_utils::IntegrationControls](#) \* [create\\_copy](#) () const  
*Create a duplicate of this object.*
- [er7\\_utils::IntegrationControls](#) & [get\\_priming\\_controls](#) () const  
*Getter for the priming\_controls data member.*
- const [GaussJacksonCoeffs](#) & [get\\_coeff](#) () const  
*Getter for the coeff data member.*
- const [GaussJacksonConfig](#) & [get\\_config](#) () const  
*Getter for the config data member.*
- const [GaussJacksonStateMachine](#) & [get\\_state\\_machine](#) () const  
*Getter for the state\_machine data member.*
- void [reset\\_integrator](#) ()  
*Reset the integration controls object.*
- unsigned int [integrate](#) (double start\_time, double sim\_dt, [er7\\_utils::TimeInterface](#) &time\_interface, [er7\\_utils::IntegratorInterface](#) &integ\_interface, [er7\\_utils::BaseIntegrationGroup](#) &integ\_group)  
*Make one step in the process that eventually integrates state from the start\_time to start\_time+sim\_dt.*

## Protected Member Functions

- virtual void [swap](#) ([GaussJacksonIntegrationControls](#) &other)  
*Non-throwing swap function.*

## Private Member Functions

- void [start\\_cycle](#) (double sim\_dt)  
*Perform start of integration cycle actions.*
- void [integrate\\_edit](#) ([er7\\_utils::TimeInterface](#) &time\_interface, [er7\\_utils::BaseIntegrationGroup](#) &integ\_group)  
*Guide integration while in BootstrapEdit mode.*
- void [integrate\\_gj](#) ([er7\\_utils::TimeInterface](#) &time\_interface, [er7\\_utils::BaseIntegrationGroup](#) &integ\_group)  
*Guide integration while in BootstrapStep or Operational mode.*

## Private Attributes

- [er7\\_utils::IntegrationControls](#) \* [priming\\_controls](#)  
*The integration controls object used to prime the Gauss-Jackson integration process.*
- double [cycle\\_starttime](#)  
*The simulation time of the start of the current integration cycle.*
- double [cycle\\_simdt](#)



- The simulation time span of the current integration cycle.*

  - double [cycle\\_dyndt](#)

*The dynamic time span corresponding to cycle\_simdt.*
- double [reset\\_time](#)

*The simulation time of the most recent reset.*
- [GaussJacksonCoeffs](#) [coeff](#)

*The Gauss-Jackson corrector and predictor coefficients.*
- [GaussJacksonConfig](#) [config](#)

*The Gauss-Jackson configuration data.*
- [GaussJacksonStateMachine](#) [state\\_machine](#)

*The Gauss-Jackson state machine.*
- [GaussJacksonStateMachine::FsmState](#) [fsm\\_state](#)

*The state machine's finite state.*
- unsigned int [max\\_correction\\_iterations](#)

*Maximum number of correction iterations allowed.*
- unsigned int [initial\\_order](#)

*The order of the Gauss Jackson integrator immediately after priming.*
- unsigned int [order](#)

*The current order of the Gauss Jackson integrator.*
- unsigned int [edit\\_count](#)

*Number of times that the current set of history have been edited.*
- bool [at\\_end\\_of\\_tour](#)

*Flag indicating that the current integration cycle is the last one in an integration tour (i.e., that a major time step will be completed).*

## Friends

- class [InputProcessor](#)
- void [init\\_attrjeod\\_\\_GaussJacksonIntegrationControls](#) ()

### 8.7.1 Detailed Description

IntegrationControls specialized for Gauss-Jackson integration.

Definition at line 51 of file `gauss_jackson_integration_controls.hh`.

### 8.7.2 Constructor & Destructor Documentation

#### 8.7.2.1 jeod::GaussJacksonIntegrationControls::GaussJacksonIntegrationControls ( )

Default constructor.

Definition at line 46 of file `gauss_jackson_integration_controls.cc`.

#### 8.7.2.2 jeod::GaussJacksonIntegrationControls::GaussJacksonIntegrationControls ( const er7\_utils::IntegratorConstructor & priming\_constructor, const GaussJacksonConfig & config\_in )

Non-default constructor.

This is the constructor invoked by the [GaussJacksonIntegratorConstructor](#).

## Parameters

<i>priming_constructor</i>	Integrator constructor for the technique used during priming.
<i>config_in</i>	Gauss-Jackson configuration data.

Definition at line 70 of file gauss\_jackson\_integration\_controls.cc.

References `coeff`, `jeod::GaussJacksonCoeffs::compute_coeffs()`, `config`, `jeod::GaussJacksonCoeffs::configure()`, `jeod::GaussJacksonStateMachine::configure()`, `jeod::GaussJacksonConfig::final_order`, `initial_order`, `priming_controls`, and `state_machine`.

#### 8.7.2.3 `jeod::GaussJacksonIntegrationControls::GaussJacksonIntegrationControls ( const GaussJacksonIntegrationControls & src )`

Copy constructor.

## Parameters

<i>src</i>	Object to be copied.
------------	----------------------

Definition at line 100 of file gauss\_jackson\_integration\_controls.cc.

References `priming_controls`.

#### 8.7.2.4 `jeod::GaussJacksonIntegrationControls::~~GaussJacksonIntegrationControls ( void )`

Destructor.

Definition at line 127 of file gauss\_jackson\_integration\_controls.cc.

References `priming_controls`.

### 8.7.3 Member Function Documentation

#### 8.7.3.1 `er7_utils::IntegrationControls * jeod::GaussJacksonIntegrationControls::create_copy ( ) const [virtual]`

Create a duplicate of this object.

## Returns

Replicated [GaussJacksonIntegrationControls](#).

Definition at line 134 of file gauss\_jackson\_integration\_controls.cc.

#### 8.7.3.2 `const GaussJacksonCoeffs& jeod::GaussJacksonIntegrationControls::get_coeff ( ) const [inline]`

Getter for the `coeff` data member.

## Returns

Reference to the Gauss-Jackson coefficients object.

Definition at line 116 of file gauss\_jackson\_integration\_controls.hh.

References `coeff`.

#### 8.7.3.3 `const GaussJacksonConfig& jeod::GaussJacksonIntegrationControls::get_config ( ) const [inline]`

Getter for the `config` data member.

**Returns**

Reference to the Gauss-Jackson configuration object.

Definition at line 125 of file gauss\_jackson\_integration\_controls.hh.

References config.

#### 8.7.3.4 er7\_utils::IntegrationControls& jeod::GaussJacksonIntegrationControls::get\_priming\_controls ( ) const [inline]

Getter for the priming\_controls data member.

**Returns**

Reference to the integration controls used during priming.

Definition at line 107 of file gauss\_jackson\_integration\_controls.hh.

References priming\_controls.

Referenced by jeod::GaussJacksonIntegratorConstructor::create\_first\_order\_ode\_integrator(), jeod::GaussJacksonIntegratorConstructor::create\_generalized\_deriv\_second\_order\_ode\_integrator(), and jeod::GaussJacksonIntegratorConstructor::create\_second\_order\_ode\_integrator().

#### 8.7.3.5 const GaussJacksonStateMachine& jeod::GaussJacksonIntegrationControls::get\_state\_machine ( ) const [inline]

Getter for the state\_machine data member.

**Returns**

Reference to the Gauss-Jackson state\_machine object.

Definition at line 134 of file gauss\_jackson\_integration\_controls.hh.

References state\_machine.

#### 8.7.3.6 unsigned int jeod::GaussJacksonIntegrationControls::integrate ( double start\_time, double sim\_dt, er7\_utils::TimeInterface & time\_interface, er7\_utils::IntegratorInterface & integ\_interface, er7\_utils::BaseIntegrationGroup & integ\_group )

Make one step in the process that eventually integrates state from the start\_time to start\_time+sim\_dt.

**Returns**

Step number; zero when finished.

**Parameters**

in	start_time	The simulation engine time at the start of the integration tour.
in	sim_dt	The difference between the simulation time at the end and start of the integration tour.
in, out	time_interface	Object external to the ER7 utilities suite that represents time.
in, out	integ_interface	Interface with the simulation engine for this integration controls.

<i>in, out</i>	<i>integ_group</i>	The integration group that contains this integration controls.
----------------	--------------------	--

Definition at line 177 of file gauss\_jackson\_integration\_controls.cc.

References `at_end_of_tour`, `jeod::GaussJacksonStateMachine::BootstrapEdit`, `jeod::GaussJacksonStateMachine::BootstrapStep`, `cycle_dyndt`, `cycle_simdt`, `cycle_starttime`, `fsm_state`, `jeod::GaussJacksonStateMachine::get_cycle_scale()`, `integrate_edit()`, `integrate_gj()`, `jeod::GaussJacksonStateMachine::Operational`, `jeod::GaussJacksonStateMachine::Priming`, `priming_controls`, `reset_integrator()`, `reset_time`, `start_cycle()`, and `state_machine`.

**8.7.3.7** `void jeod::GaussJacksonIntegrationControls::integrate_edit ( er7_utils::TimeInterface & time_interface, er7_utils::BaseIntegrationGroup & integ_group ) [private]`

Guide integration while in BootstrapEdit mode.

Definition at line 273 of file gauss\_jackson\_integration\_controls.cc.

References `cycle_dyndt`, `cycle_starttime`, `edit_count`, `jeod::GaussJacksonStateMachine::get_history_length()`, `max_correction_iterations`, `order`, `jeod::GaussJacksonStateMachine::set_bootstrap_edit_redo_needed()`, and `state_machine`.

Referenced by `integrate()`.

**8.7.3.8** `void jeod::GaussJacksonIntegrationControls::integrate_gj ( er7_utils::TimeInterface & time_interface, er7_utils::BaseIntegrationGroup & integ_group ) [private]`

Guide integration while in BootstrapStep or Operational mode.

Definition at line 309 of file gauss\_jackson\_integration\_controls.cc.

References `cycle_dyndt`, `cycle_simdt`, `cycle_starttime`, `edit_count`, and `max_correction_iterations`.

Referenced by `integrate()`.

**8.7.3.9** `GaussJacksonIntegrationControls& jeod::GaussJacksonIntegrationControls::operator= ( GaussJacksonIntegrationControls src ) [inline]`

Copy and swap assignment operator.

Parameters

<i>src</i>	Object to be copied.
------------	----------------------

Definition at line 89 of file gauss\_jackson\_integration\_controls.hh.

References `swap()`.

**8.7.3.10** `void jeod::GaussJacksonIntegrationControls::reset_integrator ( )`

Reset the integration controls object.

Definition at line 165 of file gauss\_jackson\_integration\_controls.cc.

References `at_end_of_tour`, `edit_count`, `fsm_state`, `initial_order`, `order`, `jeod::GaussJacksonStateMachine::Reset`, `jeod::GaussJacksonStateMachine::reset()`, and `state_machine`.

Referenced by `integrate()`.

**8.7.3.11** `void jeod::GaussJacksonIntegrationControls::start_cycle ( double sim_dt ) [private]`

Perform start of integration cycle actions.

Definition at line 342 of file gauss\_jackson\_integration\_controls.cc.

References `at_end_of_tour`, `jeod::GaussJacksonStateMachine::BootstrapEdit`, `coeff`, `jeod::GaussJacksonCoeffs::compute_coeffs()`, `cycle_dyndt`, `cycle_simdt`, `cycle_starttime`, `edit_count`, `fsm_state`, `jeod::GaussJacksonStateMachine::get_at_downsample()`, `jeod::GaussJacksonStateMachine::get_at_end_of_tour()`, `jeod::GaussJacksonStateMachine::get_at_order_change()`, `jeod::GaussJacksonStateMachine::get_at_reinitialize()`, `jeod::GaussJacksonStateMachine::get_current_order()`, `jeod::GaussJacksonStateMachine::get_cycle_scale()`, `jeod::GaussJacksonStateMachine::get_cycle_start_time()`, `jeod::GaussJacksonStateMachine::get_fsm_state()`, `order`, `jeod::GaussJacksonStateMachine::perform_step()`, `reset_time`, and `state_machine`.

Referenced by `integrate()`.

**8.7.3.12** `void jeod::GaussJacksonIntegrationControls::swap ( GaussJacksonIntegrationControls & other )`  
`[protected], [virtual]`

Non-throwing swap function.

Swap contents of 'this' with that of the other.

**Parameters**

<code>in</code>	<code>other</code>	Item with which contents are to be swapped.
-----------------	--------------------	---

Definition at line 142 of file `gauss_jackson_integration_controls.cc`.

References `at_end_of_tour`, `coeff`, `config`, `cycle_dyndt`, `cycle_simdt`, `cycle_starttime`, `edit_count`, `fsm_state`, `initial_order`, `max_correction_iterations`, `order`, `priming_controls`, `reset_time`, and `state_machine`.

Referenced by operator=`()`.

## 8.7.4 Friends And Related Function Documentation

**8.7.4.1** `void init_attrjeod__GaussJacksonIntegrationControls ( )` `[friend]`

**8.7.4.2** `friend class InputProcessor` `[friend]`

Definition at line 53 of file `gauss_jackson_integration_controls.hh`.

## 8.7.5 Field Documentation

**8.7.5.1** `bool jeod::GaussJacksonIntegrationControls::at_end_of_tour` `[private]`

Flag indicating that the current integration cycle is the last one in an integration tour (i.e., that a major time step will be completed).

`trick_units(-)`

Definition at line 254 of file `gauss_jackson_integration_controls.hh`.

Referenced by `integrate()`, `reset_integrator()`, `start_cycle()`, and `swap()`.

**8.7.5.2** `GaussJacksonCoeffs jeod::GaussJacksonIntegrationControls::coeff` `[private]`

The Gauss-Jackson corrector and predictor coefficients.

`trick_units(-)`

Definition at line 213 of file `gauss_jackson_integration_controls.hh`.

Referenced by `GaussJacksonIntegrationControls()`, `get_coeff()`, `start_cycle()`, and `swap()`.

#### 8.7.5.3 **GaussJacksonConfig** `jeod::GaussJacksonIntegrationControls::config` `[private]`

The Gauss-Jackson configuration data.

`trick_units(-)`

Definition at line 218 of file `gauss_jackson_integration_controls.hh`.

Referenced by `GaussJacksonIntegrationControls()`, `get_config()`, and `swap()`.

#### 8.7.5.4 **double** `jeod::GaussJacksonIntegrationControls::cycle_dyndt` `[private]`

The dynamic time span corresponding to `cycle_simdt`.

`trick_units(s)`

Definition at line 203 of file `gauss_jackson_integration_controls.hh`.

Referenced by `integrate()`, `integrate_edit()`, `integrate_gj()`, `start_cycle()`, and `swap()`.

#### 8.7.5.5 **double** `jeod::GaussJacksonIntegrationControls::cycle_simdt` `[private]`

The simulation time span of the current integration cycle.

`trick_units(-)`

Definition at line 198 of file `gauss_jackson_integration_controls.hh`.

Referenced by `integrate()`, `integrate_gj()`, `start_cycle()`, and `swap()`.

#### 8.7.5.6 **double** `jeod::GaussJacksonIntegrationControls::cycle_starttime` `[private]`

The simulation time of the start of the current integration cycle.

An integration cycle starts when `cycle_stage` is zero and ends when it reaches zero once again.  
`trick_units(-)`

Definition at line 193 of file `gauss_jackson_integration_controls.hh`.

Referenced by `integrate()`, `integrate_edit()`, `integrate_gj()`, `start_cycle()`, and `swap()`.

#### 8.7.5.7 **unsigned int** `jeod::GaussJacksonIntegrationControls::edit_count` `[private]`

Number of times that the current set of history have been edited.

`trick_units(-)`

Definition at line 248 of file `gauss_jackson_integration_controls.hh`.

Referenced by `integrate_edit()`, `integrate_gj()`, `reset_integrator()`, `start_cycle()`, and `swap()`.

#### 8.7.5.8 **GaussJacksonStateMachine::FsmState** `jeod::GaussJacksonIntegrationControls::fsm_state` `[private]`

The state machine's finite state.

`trick_units(-)`

Definition at line 228 of file `gauss_jackson_integration_controls.hh`.

Referenced by `integrate()`, `reset_integrator()`, `start_cycle()`, and `swap()`.

#### 8.7.5.9 **unsigned int** `jeod::GaussJacksonIntegrationControls::initial_order` `[private]`

The order of the Gauss Jackson integrator immediately after priming.

trick\_units(-)

Definition at line 238 of file gauss\_jackson\_integration\_controls.hh.

Referenced by GaussJacksonIntegrationControls(), reset\_integrator(), and swap().

#### 8.7.5.10 unsigned int jeod::GaussJacksonIntegrationControls::max\_correction\_iterations [private]

Maximum number of correction iterations allowed.

trick\_units(-)

Definition at line 233 of file gauss\_jackson\_integration\_controls.hh.

Referenced by integrate\_edit(), integrate\_gj(), and swap().

#### 8.7.5.11 unsigned int jeod::GaussJacksonIntegrationControls::order [private]

The current order of the Gauss Jackson integrator.

trick\_units(-)

Definition at line 243 of file gauss\_jackson\_integration\_controls.hh.

Referenced by integrate\_edit(), reset\_integrator(), start\_cycle(), and swap().

#### 8.7.5.12 er7\_utils::IntegrationControls\* jeod::GaussJacksonIntegrationControls::priming\_controls [private]

The integration controls object used to prime the Gauss-Jackson integration process.

trick\_units(-)

Definition at line 186 of file gauss\_jackson\_integration\_controls.hh.

Referenced by GaussJacksonIntegrationControls(), get\_priming\_controls(), integrate(), swap(), and ~Gauss-JacksonIntegrationControls().

#### 8.7.5.13 double jeod::GaussJacksonIntegrationControls::reset\_time [private]

The simulation time of the most recent reset.

trick\_units(-)

Definition at line 208 of file gauss\_jackson\_integration\_controls.hh.

Referenced by integrate(), start\_cycle(), and swap().

#### 8.7.5.14 GaussJacksonStateMachine jeod::GaussJacksonIntegrationControls::state\_machine [private]

The Gauss-Jackson state machine.

trick\_units(-)

Definition at line 223 of file gauss\_jackson\_integration\_controls.hh.

Referenced by GaussJacksonIntegrationControls(), get\_state\_machine(), integrate(), integrate\_edit(), reset\_integrator(), start\_cycle(), and swap().

The documentation for this class was generated from the following files:


- [gauss\\_jackson\\_integration\\_controls.hh](#)
- [gauss\\_jackson\\_integration\\_controls.cc](#)

## 8.8 jeod::GaussJacksonIntegratorBase< State, Primer > Class Template Reference

Base template class for integrating state via the Gauss-Jackson technique.

```
#include <gauss_jackson_integrator_base.hh>
```

Inheritance diagram for jeod::GaussJacksonIntegratorBase< State, Primer >:

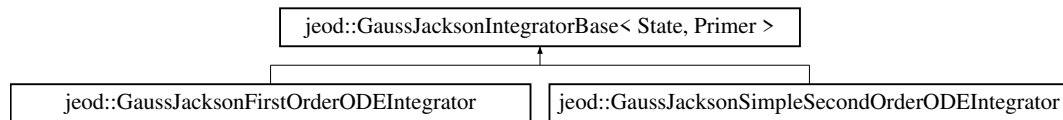

### Public Member Functions

- [GaussJacksonIntegratorBase](#) ()  
*Default constructor.*
- [GaussJacksonIntegratorBase](#) (const [er7\\_utils::IntegratorConstructor](#) &priming\_constructor, const [GaussJacksonIntegrationControls](#) &controls, unsigned int size\_in, [er7\\_utils::IntegrationControls](#) &priming\_controls)  
*Non-default constructor.*
- [GaussJacksonIntegratorBase](#) (const [GaussJacksonIntegratorBase](#) &src)  
*Copy constructor.*
- [~GaussJacksonIntegratorBase](#) ()  
*Destructor.*

### Data Fields

- const [GaussJacksonCoeffs](#) \* [coeff](#)  
*The summed Adams and Gauss-Jackson coefficients, in ordinate form.*
- const [GaussJacksonStateMachine](#) \* [state\\_machine](#)  
*The Gauss-Jackson state machine.*
- [Primer](#) \* [primer](#)  
*The integrator used to prime the Gauss-Jackson integration process.*
- [State](#) [init\\_state](#)  
*The state at the time of the last reset.*
- [State](#) [delinv](#)  
*Inverse backward differences.*
- [State](#) [corrector\\_sum](#)  
*Speed hack for the corrector.*
- [er7\\_utils::DoubleTwoDArray](#) [acc\\_hist](#)  
*Acceleration history.*
- [er7\\_utils::DoubleTwoDArray](#) [pos\\_hist](#)  
*Position history (or velocity history in case of a first order ODE).*
- double [relative\\_tolerance](#)  
*Number that indicates the allowable relative difference for two states to be considered converged.*
- double [absolute\\_tolerance](#)  
*Number that indicates the allowable absolute difference for two states to be considered converged.*
- double [velocity\\_corrector](#)  
*Correction coefficient for the first integral (velocity).*
- double [position\\_corrector](#)  
*Correction coefficient for the second integral (position).*



- [GaussJacksonStateMachine::FsmState fsm\\_state](#)

*Finite state machine state.*

- unsigned int [max\\_history\\_size](#)

*Maximum history size.*

- unsigned int [initial\\_order](#)

*Initial order.*

- unsigned int [order](#)

*Current order.*

- unsigned int [size](#)

*State size.*

- unsigned int [history\\_length](#)

*Current history length.*

## Protected Member Functions

- void [base\\_reset](#) ()

*Reset the integrator.*

- er7\_utils::IntegratorResult [base\\_integrate](#) (double dyn\_dt, unsigned int target\_stage, double const \*deriv, State state)

*Propagate state to the specified target\_stage.*

- void [swap](#) (GaussJacksonIntegratorBase &other)

*Non-throwing swap.*

## Private Member Functions

- void [start\\_cycle](#) (double dt, const double \*acc, State &state)

*Start an integration cycle.*

- bool [edit\\_point](#) (double dt, const double \*acc, State &state)

*Edit the specified point using the mid-corrector that pertains to the point being edited, which is that at history\_length.*

- bool [integrate\\_gj](#) (double dt, unsigned int target\_stage, int advance\_index, int target\_index, const double \*acc, const double \*const \*ahist, State &state)

*Integrate using the Gauss-Jackson predictor and corrector.*

- void [downsample\\_hist](#) ()

*Downsample the acceleration and position histories.*

- void [rotate\\_acc\\_hist](#) ()

*Rotate the acceleration history.*

- er7\_utils::IntegratorResult [integrate\\_primer](#) (double dyn\_dt, unsigned int target\_stage, double const \*deriv, State &state)

*Integrate state using the primer.*

- void [save\\_epoch\\_data](#) (const double \*acc, const State &state)

*Save epoch data.*

- void [save\\_comparison\\_data](#) (const State &state, double \*pos\_hist\_elem)

*Save comparison data.*

- void [initialize\\_edit\\_integration\\_constants](#) (double dt)

*Initialize the integration constants (i.e., delinv).*

- void [initialize\\_predictor\\_integration\\_constants](#) (double dt)

*Initialize the integration constants (i.e., delinv).*

- void [advance\\_edit\\_integration\\_constants](#) (unsigned int index)

*Advance the integration constants by one cycle.*

- void [advance\\_predictor\\_integration\\_constants](#) (unsigned int index)

- Advance the integration constants by one cycle.*

  - void [mid\\_correct](#) (unsigned int coeff\_idx, double dt, State &state)

*Apply a mid-corrector.*

  - void [predict](#) (double dt, double const \*const \*ahist, State &state)

*Apply the predictor.*

  - void [correct](#) (double dt, const double \*acc, State &state)

*Apply the corrector.*

  - bool [test\\_for\\_convergence](#) (const State &state, double \*hist\_data)

*Test for convergence.*

  - void [swap\\_state](#) (State &item, State &other\_item)

*Swap state data with another of the same.*

  - void [replicate\\_state](#) (const State &source, State &target)

*Replicate state data.*

  - void [allocate\\_state\\_contents](#) (State &item)

*Allocate memory for a state item.*

  - void [deallocate\\_state\\_contents](#) (State &item)

*Deallocate state item memory.*

  - [GaussJacksonIntegratorBase](#) & [operator=](#) (const [GaussJacksonIntegratorBase](#) &)

*Not implemented.*
- template<>
  - er7\_utils::FirstOrderODEIntegrator \* [create\\_primer](#) (const er7\_utils::IntegratorConstructor &priming\_constructor, unsigned int [size](#), er7\_utils::IntegrationControls &priming\_controls)
- template<>
  - er7\_utils::FirstOrderODEIntegrator \* [replicate\\_primer](#) (const er7\_utils::FirstOrderODEIntegrator \*src)
- template<>
  - er7\_utils::IntegratorResult [integrate\\_primer](#) (double dyn\_dt, unsigned int target\_stage, double const \*deriv, [GaussJacksonOneState](#) &state)
- template<>
  - void [save\\_epoch\\_data](#) (const double \*acc, const [GaussJacksonOneState](#) &state)
- template<>
  - void [save\\_comparison\\_data](#) (const [GaussJacksonOneState](#) &state, double \*pos\_hist\_elem)
- template<>
  - void [initialize\\_edit\\_integration\\_constants](#) (double dt)
- template<>
  - void [advance\\_edit\\_integration\\_constants](#) (unsigned int index)
- template<>
  - void [initialize\\_predictor\\_integration\\_constants](#) (double dt)
- template<>
  - void [advance\\_predictor\\_integration\\_constants](#) (unsigned int index)
- template<>
  - void [mid\\_correct](#) (unsigned int coeff\_idx, double dt, [GaussJacksonOneState](#) &state)
- template<>
  - void [predict](#) (double dt, double const \*const \*ahist, [GaussJacksonOneState](#) &state)
- template<>
  - void [correct](#) (double dt, const double \*acc, [GaussJacksonOneState](#) &state)
- template<>
  - bool [test\\_for\\_convergence](#) (const [GaussJacksonOneState](#) &state, double \*hist\_data)
- template<>
  - void [swap\\_state](#) ([GaussJacksonOneState](#) &item, [GaussJacksonOneState](#) &other\_item)
- template<>
  - void [replicate\\_state](#) ([GaussJacksonOneState](#) const &source, [GaussJacksonOneState](#) &target)
- template<>
  - void [allocate\\_state\\_contents](#) ([GaussJacksonOneState](#) &item)
- template<>
  - void [deallocate\\_state\\_contents](#) ([GaussJacksonOneState](#) &item)

- template<>  
er7\_utils::SecondOrderODEIntegrator \* [create\\_primer](#) (const er7\_utils::IntegratorConstructor &priming\_constructor, unsigned int [size](#), er7\_utils::IntegrationControls &priming\_controls)
- template<>  
er7\_utils::SecondOrderODEIntegrator \* [replicate\\_primer](#) (const er7\_utils::SecondOrderODEIntegrator \*src)
- template<>  
er7\_utils::IntegratorResult [integrate\\_primer](#) (double dyn\_dt, unsigned int target\_stage, double const \*deriv, [GaussJacksonTwoState](#) &state)
- template<>  
void [save\\_epoch\\_data](#) (const double \*acc, const [GaussJacksonTwoState](#) &state)
- template<>  
void [save\\_comparison\\_data](#) (const [GaussJacksonTwoState](#) &state, double \*pos\_hist\_elem)
- template<>  
void [initialize\\_edit\\_integration\\_constants](#) (double dt)
- template<>  
void [advance\\_edit\\_integration\\_constants](#) (unsigned int index)
- template<>  
void [initialize\\_predictor\\_integration\\_constants](#) (double dt)
- template<>  
void [advance\\_predictor\\_integration\\_constants](#) (unsigned int index)
- template<>  
void [mid\\_correct](#) (unsigned int coeff\_idx, double dt, [GaussJacksonTwoState](#) &state)
- template<>  
void [predict](#) (double dt, double const \*const \*ahist, [GaussJacksonTwoState](#) &state)
- template<>  
void [correct](#) (double dt, const double \*acc, [GaussJacksonTwoState](#) &state)
- template<>  
bool [test\\_for\\_convergence](#) (const [GaussJacksonTwoState](#) &state, double \*hist\_data)
- template<>  
void [swap\\_state](#) ([GaussJacksonTwoState](#) &item, [GaussJacksonTwoState](#) &other\_item)
- template<>  
void [replicate\\_state](#) ([GaussJacksonTwoState](#) const &source, [GaussJacksonTwoState](#) &target)
- template<>  
void [allocate\\_state\\_contents](#) ([GaussJacksonTwoState](#) &item)
- template<>  
void [deallocate\\_state\\_contents](#) ([GaussJacksonTwoState](#) &item)

## Static Private Member Functions

- static Primer \* [create\\_primer](#) (const er7\_utils::IntegratorConstructor &priming\_constructor, unsigned int size\_in, er7\_utils::IntegrationControls &priming\_controls)  
*Create the integrator to be used during priming.*
- static Primer \* [replicate\\_primer](#) (const Primer \*src)  
*Create a replica of the provided primer.*

### 8.8.1 Detailed Description

template<typename State, typename Primer>class jeod::GaussJacksonIntegratorBase< State, Primer >

Base template class for integrating state via the Gauss-Jackson technique.

## Template Parameters

<i>State</i>	Structure that contains the state.
<i>Primer</i>	Class for priming the Gauss-Jackson integrator.

Definition at line 55 of file gauss\_jackson\_integrator\_base.hh.

## 8.8.2 Constructor &amp; Destructor Documentation

8.8.2.1 `template<typename State , typename Primer > jeod::GaussJacksonIntegratorBase< State, Primer >::GaussJacksonIntegratorBase ( ) [inline]`

Default constructor.

Definition at line 160 of file gauss\_jackson\_integrator\_base.hh.

8.8.2.2 `template<typename State , typename Primer > jeod::GaussJacksonIntegratorBase< State, Primer >::GaussJacksonIntegratorBase ( const er7_utils::IntegratorConstructor & priming_constructor, const GaussJacksonIntegrationControls & controls, unsigned int size_in, er7_utils::IntegrationControls & priming_controls ) [inline]`

Non-default constructor.

## Parameters

<i>priming_constructor</i>	Integrator constructor for the technique used during priming.
<i>controls</i>	The Gauss-Jackson integration controls that drives this state integrator.
<i>size_in</i>	State size.
<i>priming_controls</i>	Integration controls used during priming.

Definition at line 196 of file gauss\_jackson\_integrator\_base.hh.

References jeod::GaussJacksonIntegratorBase< State, Primer >::acc\_hist, er7\_utils::TwoDArray< T >::allocate(), jeod::GaussJacksonIntegratorBase< State, Primer >::allocate\_state\_contents(), jeod::GaussJacksonIntegratorBase< State, Primer >::corrector\_sum, jeod::GaussJacksonIntegratorBase< State, Primer >::create\_primer(), jeod::GaussJacksonIntegratorBase< State, Primer >::delinv, jeod::GaussJacksonIntegratorBase< State, Primer >::init\_state, jeod::GaussJacksonIntegratorBase< State, Primer >::max\_history\_size, jeod::GaussJacksonIntegratorBase< State, Primer >::pos\_hist, jeod::GaussJacksonIntegratorBase< State, Primer >::primer, and jeod::GaussJacksonIntegratorBase< State, Primer >::size.

8.8.2.3 `template<typename State , typename Primer > jeod::GaussJacksonIntegratorBase< State, Primer >::GaussJacksonIntegratorBase ( const GaussJacksonIntegratorBase< State, Primer > & src ) [inline]`

Copy constructor.

## Parameters

<i>src</i>	Item to be copied.
------------	--------------------

Definition at line 244 of file gauss\_jackson\_integrator\_base.hh.

References jeod::GaussJacksonIntegratorBase< State, Primer >::corrector\_sum, jeod::GaussJacksonIntegratorBase< State, Primer >::delinv, jeod::GaussJacksonIntegratorBase< State, Primer >::init\_state, jeod::GaussJacksonIntegratorBase< State, Primer >::primer, jeod::GaussJacksonIntegratorBase< State, Primer >::replicate\_primer(), and jeod::GaussJacksonIntegratorBase< State, Primer >::replicate\_state().

**8.8.2.4** `template<typename State , typename Primer > jeod::GaussJacksonIntegratorBase< State, Primer >::~~GaussJacksonIntegratorBase ( ) [inline]`

Destructor.

Definition at line 281 of file gauss\_jackson\_integrator\_base.hh.

References jeod::GaussJacksonIntegratorBase< State, Primer >::corrector\_sum, jeod::GaussJacksonIntegratorBase< State, Primer >::deallocate\_state\_contents(), jeod::GaussJacksonIntegratorBase< State, Primer >::delinv, jeod::GaussJacksonIntegratorBase< State, Primer >::init\_state, and jeod::GaussJacksonIntegratorBase< State, Primer >::primer.

### 8.8.3 Member Function Documentation

**8.8.3.1** `template<> void jeod::GaussJacksonIntegratorBase< GaussJacksonOneState, er7_utils::FirstOrderODEIntegrator >::advance_edit_integration_constants ( unsigned int index ) [inline], [private]`

Definition at line 167 of file gauss\_jackson\_integrator\_base\_first.hh.

References jeod::GaussJacksonOneState::first.

**8.8.3.2** `template<> void jeod::GaussJacksonIntegratorBase< GaussJacksonTwoState, er7_utils::SecondOrderODEIntegrator >::advance_edit_integration_constants ( unsigned int index ) [inline], [private]`

Definition at line 167 of file gauss\_jackson\_integrator\_base\_second.hh.

References jeod::GaussJacksonTwoState::second.

**8.8.3.3** `template<typename State , typename Primer > void jeod::GaussJacksonIntegratorBase< State, Primer >::advance_edit_integration_constants ( unsigned int index ) [private]`

Advance the integration constants by one cycle.

Parameters

<i>index</i>	Coefficient index.
--------------	--------------------

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::edit\_point().

**8.8.3.4** `template<> void jeod::GaussJacksonIntegratorBase< GaussJacksonOneState, er7_utils::FirstOrderODEIntegrator >::advance_predictor_integration_constants ( unsigned int index ) [inline], [private]`

Definition at line 204 of file gauss\_jackson\_integrator\_base\_first.hh.

References jeod::GaussJacksonOneState::first.

**8.8.3.5** `template<> void jeod::GaussJacksonIntegratorBase< GaussJacksonTwoState, er7_utils::SecondOrderODEIntegrator >::advance_predictor_integration_constants ( unsigned int index ) [inline], [private]`

Definition at line 204 of file gauss\_jackson\_integrator\_base\_second.hh.

References jeod::GaussJacksonTwoState::first.

```
8.8.3.6  template<typename State , typename Primer > void jeod::GaussJacksonIntegratorBase< State, Primer  
        >::advance_predictor_integration_constants ( unsigned int index )  [private]
```

Advance the integration constants by one cycle.

## Parameters

<i>index</i>	Coefficient index.
--------------	--------------------

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::integrate\_gj().

**8.8.3.7** `template<> void jeod::GaussJacksonIntegratorBase< GaussJacksonOneState, er7_utils::FirstOrderODEIntegrator >::allocate_state_contents ( GaussJacksonOneState & item ) [inline], [private]`

Definition at line 349 of file gauss\_jackson\_integrator\_base\_first.hh.

References jeod::GaussJacksonOneState::first.

**8.8.3.8** `template<> void jeod::GaussJacksonIntegratorBase< GaussJacksonTwoState, er7_utils::SecondOrderODEIntegrator >::allocate_state_contents ( GaussJacksonTwoState & item ) [inline], [private]`

Definition at line 354 of file gauss\_jackson\_integrator\_base\_second.hh.

References jeod::GaussJacksonTwoState::first, and jeod::GaussJacksonTwoState::second.

**8.8.3.9** `template<typename State , typename Primer > void jeod::GaussJacksonIntegratorBase< State, Primer >::allocate_state_contents ( State & item ) [private]`

Allocate memory for a state item.

## Parameters

<i>item</i>	State item to be allocated.
-------------	-----------------------------

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::GaussJacksonIntegratorBase().

**8.8.3.10** `template<typename State , typename Primer > er7_utils::IntegratorResult jeod::GaussJacksonIntegratorBase< State, Primer >::base_integrate ( double dyn_dt, unsigned int target_stage, double const * deriv, State state ) [inline], [protected]`

Propagate state to the specified target\_stage.

## Parameters

<i>in</i>	<i>dyn_dt</i>	Dynamic time step, in dynamic time seconds.
<i>in</i>	<i>target_stage</i>	The stage of the integration process that the integrator should try to attain.
<i>in</i>	<i>deriv</i>	Acceleration vector.
<i>in, out</i>	<i>state</i>	State vector(s).

## Returns

The status (time advance, pass/fail status) of the integration.

Definition at line 314 of file gauss\_jackson\_integrator\_base.hh.

References jeod::GaussJacksonIntegratorBase< State, Primer >::acc\_hist, jeod::GaussJacksonStateMachine::BootstrapEdit, jeod::GaussJacksonStateMachine::BootstrapStep, jeod::GaussJacksonIntegratorBase< State, Primer >::edit\_point(), jeod::GaussJacksonIntegratorBase< State, Primer >::fsm\_state, jeod::GaussJacksonIntegratorBase< State, Primer >::history\_length, jeod::GaussJacksonIntegratorBase< State, Primer >::integrate\_gj(), jeod::GaussJacksonIntegratorBase< State, Primer >::integrate\_primer(), jeod::GaussJacksonStateMachine::Operational, jeod::GaussJacksonIntegratorBase< State, Primer >::order, jeod::GaussJacksonIntegratorBase< State, Primer >::pos\_hist, jeod::GaussJacksonStateMachine::Priming, jeod::GaussJacksonIntegratorBase< State,

Primer >::rotate\_acc\_hist(), jeod::GaussJacksonIntegratorBase< State, Primer >::save\_comparison\_data(), jeod::GaussJacksonIntegratorBase< State, Primer >::size, and jeod::GaussJacksonIntegratorBase< State, Primer >::start\_cycle().

Referenced by jeod::GaussJacksonFirstOrderODEIntegrator::integrate(), and jeod::GaussJacksonSimpleSecondOrderODEIntegrator::integrate().

**8.8.3.11** `template<typename State, typename Primer> void jeod::GaussJacksonIntegratorBase< State, Primer >::base_reset( ) [inline],[protected]`

Reset the integrator.

Definition at line 297 of file gauss\_jackson\_integrator\_base.hh.

References jeod::GaussJacksonIntegratorBase< State, Primer >::fsm\_state, jeod::GaussJacksonIntegratorBase< State, Primer >::history\_length, jeod::GaussJacksonIntegratorBase< State, Primer >::initial\_order, jeod::GaussJacksonIntegratorBase< State, Primer >::order, and jeod::GaussJacksonStateMachine::Reset.

Referenced by jeod::GaussJacksonFirstOrderODEIntegrator::reset\_integrator(), and jeod::GaussJacksonSimpleSecondOrderODEIntegrator::reset\_integrator().

**8.8.3.12** `template<> void jeod::GaussJacksonIntegratorBase< GaussJacksonTwoState, er7_utils::SecondOrderODEIntegrator>::correct( double dt, const double * acc, GaussJacksonTwoState & state ) [inline],[private]`

Definition at line 268 of file gauss\_jackson\_integrator\_base\_second.hh.

References jeod::GaussJacksonTwoState::first, and jeod::GaussJacksonTwoState::second.

**8.8.3.13** `template<> void jeod::GaussJacksonIntegratorBase< GaussJacksonOneState, er7_utils::FirstOrderODEIntegrator>::correct( double dt, const double * acc, GaussJacksonOneState & state ) [inline],[private]`

Definition at line 269 of file gauss\_jackson\_integrator\_base\_first.hh.

References jeod::GaussJacksonOneState::first.

**8.8.3.14** `template<typename State, typename Primer> void jeod::GaussJacksonIntegratorBase< State, Primer >::correct( double dt, const double * acc, State & state ) [private]`

Apply the corrector.

Parameters

<i>dt</i>	Dynamic time step.
<i>acc</i>	Acceleration data.
<i>state</i>	Corrected state.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::integrate\_gj().

**8.8.3.15** `template<> er7_utils::SecondOrderODEIntegrator * jeod::GaussJacksonIntegratorBase< GaussJacksonTwoState, er7_utils::SecondOrderODEIntegrator>::create_primer( const er7_utils::IntegratorConstructor & priming_constructor, unsigned int size, er7_utils::IntegrationControls & priming_controls ) [inline],[private]`

Definition at line 63 of file gauss\_jackson\_integrator\_base\_second.hh.



```
8.8.3.16 template<> er7_utils::FirstOrderODEIntegrator * jeod::GaussJacksonIntegratorBase<
    GaussJacksonOneState, er7_utils::FirstOrderODEIntegrator >::create_primer ( const
    er7_utils::IntegratorConstructor & priming_constructor, unsigned int size, er7_utils::IntegrationControls &
    priming_controls ) [inline], [private]
```

Definition at line 64 of file gauss\_jackson\_integrator\_base\_first.hh.

```
8.8.3.17 template<typename State , typename Primer > static Primer* jeod::GaussJacksonIntegratorBase< State,
    Primer >::create_primer ( const er7_utils::IntegratorConstructor & priming_constructor, unsigned int size_in,
    er7_utils::IntegrationControls & priming_controls ) [static], [private]
```

Create the integrator to be used during priming.

Parameters

<i>priming_constructor</i>	Integrator constructor for the technique used during priming.
<i>size_in</i>	State size.
<i>priming_controls</i>	Integration controls used during priming.

Returns

Constructed primer.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::GaussJacksonIntegratorBase().

```
8.8.3.18 template<> void jeod::GaussJacksonIntegratorBase< GaussJacksonOneState,
    er7_utils::FirstOrderODEIntegrator >::deallocate_state_contents ( GaussJacksonOneState & item )
    [inline], [private]
```

Definition at line 363 of file gauss\_jackson\_integrator\_base\_first.hh.

References jeod::GaussJacksonOneState::first.

```
8.8.3.19 template<> void jeod::GaussJacksonIntegratorBase< GaussJacksonTwoState,
    er7_utils::SecondOrderODEIntegrator >::deallocate_state_contents ( GaussJacksonTwoState & item )
    [inline], [private]
```

Definition at line 368 of file gauss\_jackson\_integrator\_base\_second.hh.

References jeod::GaussJacksonTwoState::first, and jeod::GaussJacksonTwoState::second.

```
8.8.3.20 template<typename State , typename Primer > void jeod::GaussJacksonIntegratorBase< State, Primer
    >::deallocate_state_contents ( State & item ) [private]
```

Deallocate state item memory.

Parameters

<i>item</i>	State item to be deallocated.
-------------	-------------------------------

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::~~GaussJacksonIntegratorBase().

```
8.8.3.21 template<typename State , typename Primer > void jeod::GaussJacksonIntegratorBase< State, Primer
    >::downsample_hist( ) [inline], [private]
```

Downsample the acceleration and position histories.

Definition at line 593 of file gauss\_jackson\_integrator\_base.hh.

References jeod::GaussJacksonIntegratorBase< State, Primer >::acc\_hist, er7\_utils::TwoDArray< T >::downsample(), jeod::GaussJacksonIntegratorBase< State, Primer >::history\_length, and jeod::GaussJacksonIntegratorBase< State, Primer >::pos\_hist.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::start\_cycle().

**8.8.3.22** `template<typename State , typename Primer > bool jeod::GaussJacksonIntegratorBase< State, Primer >::edit_point ( double dt, const double * acc, State & state ) [inline], [private]`

Edit the specified point using the mid-corrector that pertains to the point being edited, which is that at history\_length.

Parameters

in	dt	Dynamic time step, in dynamic time seconds.
in	acc	Acceleration vector.
out	state	State vector(s).

Definition at line 543 of file gauss\_jackson\_integrator\_base.hh.

References jeod::GaussJacksonIntegratorBase< State, Primer >::advance\_edit\_integration\_constants(), jeod::GaussJacksonIntegratorBase< State, Primer >::history\_length, jeod::GaussJacksonIntegratorBase< State, Primer >::mid\_correct(), jeod::GaussJacksonIntegratorBase< State, Primer >::order, jeod::GaussJacksonIntegratorBase< State, Primer >::pos\_hist, and jeod::GaussJacksonIntegratorBase< State, Primer >::test\_for\_convergence().

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::base\_integrate().

**8.8.3.23** `template<> void jeod::GaussJacksonIntegratorBase< GaussJacksonTwoState, er7_utils::SecondOrderODEIntegrator >::initialize_edit_integration_constants ( double dt ) [inline], [private]`

Definition at line 147 of file gauss\_jackson\_integrator\_base\_second.hh.

References jeod::GaussJacksonTwoState::first.

**8.8.3.24** `template<> void jeod::GaussJacksonIntegratorBase< GaussJacksonOneState, er7_utils::FirstOrderODEIntegrator >::initialize_edit_integration_constants ( double dt ) [inline], [private]`

Definition at line 149 of file gauss\_jackson\_integrator\_base\_first.hh.

References jeod::GaussJacksonOneState::first.

**8.8.3.25** `template<typename State , typename Primer > void jeod::GaussJacksonIntegratorBase< State, Primer >::initialize_edit_integration_constants ( double dt ) [private]`

Initialize the integration constants (i.e., delinv).

Parameters

dt	Dynamic time step.
----	--------------------

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::start\_cycle().

```
8.8.3.26 template<> void jeod::GaussJacksonIntegratorBase< GaussJacksonTwoState,
er7_utils::SecondOrderODEIntegrator >::initialize_predictor_integration_constants ( double dt ) [inline],
[private]
```

Definition at line 183 of file gauss\_jackson\_integrator\_base\_second.hh.

```
8.8.3.27 template<> void jeod::GaussJacksonIntegratorBase< GaussJacksonOneState,
er7_utils::FirstOrderODEIntegrator >::initialize_predictor_integration_constants ( double dt ) [inline],
[private]
```

Definition at line 186 of file gauss\_jackson\_integrator\_base\_first.hh.

```
8.8.3.28 template<typename State , typename Primer > void jeod::GaussJacksonIntegratorBase< State, Primer
>::initialize_predictor_integration_constants ( double dt ) [private]
```

Initialize the integration constants (i.e., delinv).

Parameters

<i>dt</i>	Dynamic time step.
-----------	--------------------

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::start\_cycle().

```
8.8.3.29 template<typename State , typename Primer > bool jeod::GaussJacksonIntegratorBase< State, Primer
>::integrate_gj ( double dt, unsigned int target_stage, int advance_index, int target_index, const double * acc,
const double *const * ahist, State & state ) [inline],[private]
```

Integrate using the Gauss-Jackson predictor and corrector.

Parameters

in	<i>dt</i>	Dynamic time step, in dynamic time seconds.
in	<i>target_stage</i>	The stage of the integration process that the integrator should try to attain.
in	<i>advance_index</i>	Acceleration history index.
in	<i>target_index</i>	Position history index.
in	<i>acc</i>	Acceleration vector.
in	<i>ahist</i>	Acceleration vector history.
out	<i>state</i>	State vector(s).

Returns

True if step was successful, false otherwise.

Definition at line 567 of file gauss\_jackson\_integrator\_base.hh.

References jeod::GaussJacksonIntegratorBase< State, Primer >::advance\_predictor\_integration\_constants(), jeod::GaussJacksonCoefficientsPair::apply(), jeod::GaussJacksonIntegratorBase< State, Primer >::coeff, jeod::GaussJacksonIntegratorBase< State, Primer >::correct(), jeod::GaussJacksonCoeffs::corrector, jeod::GaussJacksonIntegratorBase< State, Primer >::corrector\_sum, jeod::GaussJacksonIntegratorBase< State, Primer >::order, jeod::GaussJacksonIntegratorBase< State, Primer >::pos\_hist, jeod::GaussJacksonIntegratorBase< State, Primer >::predict(), jeod::GaussJacksonIntegratorBase< State, Primer >::save\_comparison\_data(), jeod::GaussJacksonIntegratorBase< State, Primer >::size, and jeod::GaussJacksonIntegratorBase< State, Primer >::test\_for\_convergence().

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::base\_integrate().

```
8.8.3.30 template<> er7_utils::IntegratorResult jeod::GaussJacksonIntegratorBase< GaussJacksonTwoState,
er7_utils::SecondOrderODEIntegrator >::integrate_primer ( double dyn_dt, unsigned int target_stage, double const *
deriv, GaussJacksonTwoState & state ) [inline], [private]
```

Definition at line 98 of file gauss\_jackson\_integrator\_base\_second.hh.

References jeod::GaussJacksonTwoState::first, and jeod::GaussJacksonTwoState::second.

```
8.8.3.31 template<> er7_utils::IntegratorResult jeod::GaussJacksonIntegratorBase< GaussJacksonOneState,
er7_utils::FirstOrderODEIntegrator >::integrate_primer ( double dyn_dt, unsigned int target_stage, double const *
deriv, GaussJacksonOneState & state ) [inline], [private]
```

Definition at line 100 of file gauss\_jackson\_integrator\_base\_first.hh.

References jeod::GaussJacksonOneState::first.

```
8.8.3.32 template<typename State , typename Primer > er7_utils::IntegratorResult jeod::GaussJacksonIntegrator-
Base< State, Primer >::integrate_primer ( double dyn_dt, unsigned int target_stage, double const * deriv, State &
state ) [private]
```

Integrate state using the primer.

#### Parameters

in	<i>dyn_dt</i>	Dynamic time step, in dynamic time seconds.
in	<i>target_stage</i>	The stage of the integration process that the integrator should try to attain.
in	<i>deriv</i>	Acceleration vector.
in, out	<i>state</i>	State vector(s).

#### Returns

The status (time advance, pass/fail status) of the integration.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::base\_integrate().

```
8.8.3.33 template<> void jeod::GaussJacksonIntegratorBase< GaussJacksonTwoState,
er7_utils::SecondOrderODEIntegrator >::mid_correct ( unsigned int coeff_idx, double dt,
GaussJacksonTwoState & state ) [inline], [private]
```

Definition at line 220 of file gauss\_jackson\_integrator\_base\_second.hh.

References jeod::GaussJacksonTwoState::first, and jeod::GaussJacksonTwoState::second.

```
8.8.3.34 template<> void jeod::GaussJacksonIntegratorBase< GaussJacksonOneState,
er7_utils::FirstOrderODEIntegrator >::mid_correct ( unsigned int coeff_idx, double dt, GaussJacksonOneState
& state ) [inline], [private]
```

Definition at line 223 of file gauss\_jackson\_integrator\_base\_first.hh.

References jeod::GaussJacksonOneState::first.

```
8.8.3.35 template<typename State , typename Primer > void jeod::GaussJacksonIntegratorBase< State, Primer
>::mid_correct ( unsigned int coeff_idx, double dt, State & state ) [private]
```

Apply a mid-corrector.

## Parameters

<i>coeff_idx</i>	Coefficient index; item to be corrected.
<i>dt</i>	Dynamic time step.
<i>state</i>	Corrected state.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::edit\_point().

**8.8.3.36** `template<typename State , typename Primer > GaussJacksonIntegratorBase& jeod::GaussJacksonIntegratorBase< State, Primer >::operator= ( const GaussJacksonIntegratorBase< State, Primer > & )`  
[private]

Not implemented.

**8.8.3.37** `template<> void jeod::GaussJacksonIntegratorBase< GaussJacksonTwoState, er7_utils::SecondOrderODEIntegrator >::predict ( double dt, double const *const * ahist, GaussJacksonTwoState & state )` [inline], [private]

Definition at line 242 of file gauss\_jackson\_integrator\_base\_second.hh.

References jeod::GaussJacksonTwoState::first, and jeod::GaussJacksonTwoState::second.

**8.8.3.38** `template<> void jeod::GaussJacksonIntegratorBase< GaussJacksonOneState, er7_utils::FirstOrderODEIntegrator >::predict ( double dt, double const *const * ahist, GaussJacksonOneState & state )` [inline], [private]

Definition at line 246 of file gauss\_jackson\_integrator\_base\_first.hh.

References jeod::GaussJacksonOneState::first.

**8.8.3.39** `template<typename State , typename Primer > void jeod::GaussJacksonIntegratorBase< State, Primer >::predict ( double dt, double const *const * ahist, State & state )` [private]

Apply the predictor.

## Parameters

<i>dt</i>	Dynamic time step.
<i>ahist</i>	Acceleration history.
<i>state</i>	Corrected state.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::integrate\_gj().

**8.8.3.40** `template<> er7_utils::SecondOrderODEIntegrator * jeod::GaussJacksonIntegratorBase< GaussJacksonTwoState, er7_utils::SecondOrderODEIntegrator >::replicate_primer ( const er7_utils::SecondOrderODEIntegrator * src )` [inline], [private]

Definition at line 79 of file gauss\_jackson\_integrator\_base\_second.hh.

**8.8.3.41** `template<> er7_utils::FirstOrderODEIntegrator * jeod::GaussJacksonIntegratorBase< GaussJacksonOneState, er7_utils::FirstOrderODEIntegrator >::replicate_primer ( const er7_utils::FirstOrderODEIntegrator * src )` [inline], [private]

Definition at line 81 of file gauss\_jackson\_integrator\_base\_first.hh.

8.8.3.42 `template<typename State , typename Primer > static Primer* jeod::GaussJacksonIntegratorBase< State, Primer >::replicate_primer ( const Primer * src ) [static],[private]`

Create a replica of the provided primer.

## Parameters

<i>src</i>	Primer to be replicated.
------------	--------------------------

## Returns

Constructed primer.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::GaussJacksonIntegratorBase().

**8.8.3.43** `template<> void jeod::GaussJacksonIntegratorBase< GaussJacksonOneState, er7_utils::FirstOrderODEIntegrator >::replicate_state ( GaussJacksonOneState const & source, GaussJacksonOneState & target ) [inline], [private]`

Definition at line 334 of file gauss\_jackson\_integrator\_base\_first.hh.

References jeod::GaussJacksonOneState::first.

**8.8.3.44** `template<> void jeod::GaussJacksonIntegratorBase< GaussJacksonTwoState, er7_utils::SecondOrderODEIntegrator >::replicate_state ( GaussJacksonTwoState const & source, GaussJacksonTwoState & target ) [inline], [private]`

Definition at line 339 of file gauss\_jackson\_integrator\_base\_second.hh.

References jeod::GaussJacksonTwoState::first, and jeod::GaussJacksonTwoState::second.

**8.8.3.45** `template<typename State , typename Primer > void jeod::GaussJacksonIntegratorBase< State, Primer >::replicate_state ( const State & source, State & target ) [private]`

Replicate state data.

## Parameters

<i>source</i>	State item to be copied.
<i>target</i>	Replicated state item.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::GaussJacksonIntegratorBase().

**8.8.3.46** `template<typename State , typename Primer > void jeod::GaussJacksonIntegratorBase< State, Primer >::rotate_acc_hist ( ) [inline], [private]`

Rotate the acceleration history.

Definition at line 605 of file gauss\_jackson\_integrator\_base.hh.

References jeod::GaussJacksonIntegratorBase< State, Primer >::acc\_hist, jeod::GaussJacksonIntegratorBase< State, Primer >::order, and er7\_utils::TwoDArray< T >::rotate\_down().

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::base\_integrate().

**8.8.3.47** `template<> void jeod::GaussJacksonIntegratorBase< GaussJacksonTwoState, er7_utils::SecondOrderODEIntegrator >::save_comparison_data ( const GaussJacksonTwoState & state, double * pos_hist_elem ) [inline], [private]`

Definition at line 133 of file gauss\_jackson\_integrator\_base\_second.hh.

References jeod::GaussJacksonTwoState::second.

**8.8.3.48** `template<> void jeod::GaussJacksonIntegratorBase< GaussJacksonOneState, er7_utils::FirstOrderODEIntegrator >::save_comparison_data ( const GaussJacksonOneState & state, double * pos_hist_elem ) [inline], [private]`

Definition at line 134 of file gauss\_jackson\_integrator\_base\_first.hh.

References jeod::GaussJacksonOneState::first.

**8.8.3.49** `template<typename State , typename Primer > void jeod::GaussJacksonIntegratorBase< State, Primer >::save_comparison_data ( const State & state, double * pos_hist_elem ) [private]`

Save comparison data.

Parameters

<i>state</i>	State to be saved.
<i>pos_hist_elem</i>	Element of the position history to be updated.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::base\_integrate(), and jeod::GaussJacksonIntegratorBase< State, Primer >::integrate\_gj().

**8.8.3.50** `template<> void jeod::GaussJacksonIntegratorBase< GaussJacksonTwoState, er7_utils::SecondOrderODEIntegrator >::save_epoch_data ( const double * acc, const GaussJacksonTwoState & state ) [inline], [private]`

Definition at line 116 of file gauss\_jackson\_integrator\_base\_second.hh.

References jeod::GaussJacksonTwoState::first, and jeod::GaussJacksonTwoState::second.

**8.8.3.51** `template<> void jeod::GaussJacksonIntegratorBase< GaussJacksonOneState, er7_utils::FirstOrderODEIntegrator >::save_epoch_data ( const double * acc, const GaussJacksonOneState & state ) [inline], [private]`

Definition at line 117 of file gauss\_jackson\_integrator\_base\_first.hh.

References jeod::GaussJacksonOneState::first.

**8.8.3.52** `template<typename State , typename Primer > void jeod::GaussJacksonIntegratorBase< State, Primer >::save_epoch_data ( const double * acc, const State & state ) [private]`

Save epoch data.

Parameters

<i>acc</i>	Acceleration to be saved.
<i>state</i>	State to be saved.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::start\_cycle().

**8.8.3.53** `template<typename State , typename Primer > void jeod::GaussJacksonIntegratorBase< State, Primer >::start_cycle ( double dt, const double * acc, State & state ) [inline], [private]`

Start an integration cycle.



## Parameters

in	<i>dt</i>	Dynamic time step, in dynamic time seconds.
in	<i>acc</i>	Acceleration vector.
in	<i>state</i>	State vector(s).

Definition at line 490 of file gauss\_jackson\_integrator\_base.hh.

References jeod::GaussJacksonIntegratorBase< State, Primer >::acc\_hist, jeod::GaussJacksonStateMachine::BootstrapEdit, jeod::GaussJacksonIntegratorBase< State, Primer >::coeff, jeod::GaussJacksonCoeffs::corrector, jeod::GaussJacksonIntegratorBase< State, Primer >::downsample\_hist(), jeod::GaussJacksonIntegratorBase< State, Primer >::fsm\_state, jeod::GaussJacksonStateMachine::get\_at\_downsample(), jeod::GaussJacksonStateMachine::get\_at\_order\_change(), jeod::GaussJacksonStateMachine::get\_at\_reinitialize(), jeod::GaussJacksonStateMachine::get\_current\_order(), jeod::GaussJacksonStateMachine::get\_fsm\_state(), jeod::GaussJacksonCoefficientsPair::gj\_coefs, jeod::GaussJacksonIntegratorBase< State, Primer >::history\_length, jeod::GaussJacksonIntegratorBase< State, Primer >::initialize\_edit\_integration\_constants(), jeod::GaussJacksonIntegratorBase< State, Primer >::initialize\_predictor\_integration\_constants(), jeod::GaussJacksonIntegratorBase< State, Primer >::order, jeod::GaussJacksonIntegratorBase< State, Primer >::position\_corrector, jeod::GaussJacksonStateMachine::Reset, jeod::GaussJacksonCoefficientsPair::sa\_coefs, jeod::GaussJacksonIntegratorBase< State, Primer >::save\_epoch\_data(), jeod::GaussJacksonIntegratorBase< State, Primer >::size, jeod::GaussJacksonIntegratorBase< State, Primer >::state\_machine, and jeod::GaussJacksonIntegratorBase< State, Primer >::velocity\_corrector.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::base\_integrate().

**8.8.3.54** `template<typename State, typename Primer> void jeod::GaussJacksonIntegratorBase< State, Primer >::swap ( GaussJacksonIntegratorBase< State, Primer> & other ) [inline], [protected]`

Non-throwing swap.

## Parameters

<i>other</i>	Item whose contents are to be swapped with this.
--------------	--

Definition at line 425 of file gauss\_jackson\_integrator\_base.hh.

References jeod::GaussJacksonIntegratorBase< State, Primer >::absolute\_tolerance, jeod::GaussJacksonIntegratorBase< State, Primer >::acc\_hist, jeod::GaussJacksonIntegratorBase< State, Primer >::coeff, jeod::GaussJacksonIntegratorBase< State, Primer >::corrector\_sum, jeod::GaussJacksonIntegratorBase< State, Primer >::delinv, jeod::GaussJacksonIntegratorBase< State, Primer >::fsm\_state, jeod::GaussJacksonIntegratorBase< State, Primer >::history\_length, jeod::GaussJacksonIntegratorBase< State, Primer >::init\_state, jeod::GaussJacksonIntegratorBase< State, Primer >::initial\_order, jeod::GaussJacksonIntegratorBase< State, Primer >::max\_history\_size, jeod::GaussJacksonIntegratorBase< State, Primer >::order, jeod::GaussJacksonIntegratorBase< State, Primer >::pos\_hist, jeod::GaussJacksonIntegratorBase< State, Primer >::position\_corrector, jeod::GaussJacksonIntegratorBase< State, Primer >::primer, jeod::GaussJacksonIntegratorBase< State, Primer >::relative\_tolerance, jeod::GaussJacksonIntegratorBase< State, Primer >::size, jeod::GaussJacksonIntegratorBase< State, Primer >::state\_machine, er7\_utils::TwoDArray< T >::swap(), jeod::GaussJacksonIntegratorBase< State, Primer >::swap\_state(), and jeod::GaussJacksonIntegratorBase< State, Primer >::velocity\_corrector.

Referenced by jeod::GaussJacksonFirstOrderODEIntegrator::swap(), and jeod::GaussJacksonSimpleSecondOrderODEIntegrator::swap().

**8.8.3.55** `template<> void jeod::GaussJacksonIntegratorBase< GaussJacksonOneState, er7_utils::FirstOrderODEIntegrator>::swap_state ( GaussJacksonOneState & item, GaussJacksonOneState & other_item ) [inline], [private]`

Definition at line 319 of file gauss\_jackson\_integrator\_base\_first.hh.

References jeod::GaussJacksonOneState::first.

```
8.8.3.56 template<> void jeod::GaussJacksonIntegratorBase< GaussJacksonTwoState,
er7_utils::SecondOrderODEIntegrator >::swap_state ( GaussJacksonTwoState & item,
GaussJacksonTwoState & other_item ) [inline],[private]
```

Definition at line 324 of file gauss\_jackson\_integrator\_base\_second.hh.

References jeod::GaussJacksonTwoState::first, and jeod::GaussJacksonTwoState::second.

```
8.8.3.57 template<typename State , typename Primer > void jeod::GaussJacksonIntegratorBase< State, Primer
>::swap_state ( State & item, State & other_item ) [private]
```

Swap state data with another of the same.

Parameters

<i>item</i>	State item.
<i>other_item</i>	The other state item.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::swap().

```
8.8.3.58 template<> bool jeod::GaussJacksonIntegratorBase< GaussJacksonOneState,
er7_utils::FirstOrderODEIntegrator >::test_for_convergence ( const GaussJacksonOneState & state, double *
hist_data ) [inline],[private]
```

Definition at line 293 of file gauss\_jackson\_integrator\_base\_first.hh.

References jeod::GaussJacksonOneState::first.

```
8.8.3.59 template<> bool jeod::GaussJacksonIntegratorBase< GaussJacksonTwoState,
er7_utils::SecondOrderODEIntegrator >::test_for_convergence ( const GaussJacksonTwoState & state, double
* hist_data ) [inline],[private]
```

Definition at line 300 of file gauss\_jackson\_integrator\_base\_second.hh.

References jeod::GaussJacksonTwoState::second.

```
8.8.3.60 template<typename State , typename Primer > bool jeod::GaussJacksonIntegratorBase< State, Primer
>::test_for_convergence ( const State & state, double * hist_data ) [private]
```

Test for convergence.

Parameters

<i>state</i>	Item to be compared.
<i>hist_data</i>	Previous state value.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::edit\_point(), and jeod::GaussJacksonIntegratorBase< State, Primer >::integrate\_gj().

## 8.8.4 Field Documentation

```
8.8.4.1 template<typename State , typename Primer > double jeod::GaussJacksonIntegratorBase< State, Primer
>::absolute_tolerance
```

Number that indicates the allowable absolute difference for two states to be considered converged.

trick\_units(-)

Definition at line 112 of file gauss\_jackson\_integrator\_base.hh.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::swap().

#### 8.8.4.2 `template<typename State , typename Primer > er7_utils::DoubleTwoDArray jeod::GaussJacksonIntegratorBase< State, Primer >::acc_hist`

Acceleration history.

trick\_units(–)

Definition at line 95 of file gauss\_jackson\_integrator\_base.hh.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::base\_integrate(), jeod::GaussJacksonIntegratorBase< State, Primer >::downsample\_hist(), jeod::GaussJacksonIntegratorBase< State, Primer >::GaussJacksonIntegratorBase(), jeod::GaussJacksonIntegratorBase< State, Primer >::rotate\_acc\_hist(), jeod::GaussJacksonIntegratorBase< State, Primer >::start\_cycle(), and jeod::GaussJacksonIntegratorBase< State, Primer >::swap().

#### 8.8.4.3 `template<typename State , typename Primer > const GaussJacksonCoeffs* jeod::GaussJacksonIntegratorBase< State, Primer >::coeff`

The summed Adams and Gauss-Jackson coefficients, in ordinate form.

trick\_units(–)

Definition at line 65 of file gauss\_jackson\_integrator\_base.hh.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::integrate\_gj(), jeod::GaussJacksonIntegratorBase< State, Primer >::start\_cycle(), and jeod::GaussJacksonIntegratorBase< State, Primer >::swap().

#### 8.8.4.4 `template<typename State , typename Primer > State jeod::GaussJacksonIntegratorBase< State, Primer >::corrector_sum`

Speed hack for the corrector.

trick\_units(–)

Definition at line 90 of file gauss\_jackson\_integrator\_base.hh.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::GaussJacksonIntegratorBase(), jeod::GaussJacksonIntegratorBase< State, Primer >::integrate\_gj(), jeod::GaussJacksonIntegratorBase< State, Primer >::swap(), and jeod::GaussJacksonIntegratorBase< State, Primer >::~GaussJacksonIntegratorBase().

#### 8.8.4.5 `template<typename State , typename Primer > State jeod::GaussJacksonIntegratorBase< State, Primer >::delinv`

Inverse backward differences.

trick\_units(–)

Definition at line 85 of file gauss\_jackson\_integrator\_base.hh.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::GaussJacksonIntegratorBase(), jeod::GaussJacksonIntegratorBase< State, Primer >::swap(), and jeod::GaussJacksonIntegratorBase< State, Primer >::~GaussJacksonIntegratorBase().

#### 8.8.4.6 `template<typename State , typename Primer > GaussJacksonStateMachine::FsmState jeod::GaussJacksonIntegratorBase< State, Primer >::fsm_state`

Finite state machine state.

trick\_units(–)

Definition at line 127 of file gauss\_jackson\_integrator\_base.hh.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::base\_integrate(), jeod::GaussJacksonIntegratorBase< State, Primer >::base\_reset(), jeod::GaussJacksonIntegratorBase< State, Primer >::start\_cycle(), and jeod::GaussJacksonIntegratorBase< State, Primer >::swap().

**8.8.4.7** `template<typename State , typename Primer > unsigned int jeod::GaussJacksonIntegratorBase< State, Primer >::history_length`

Current history length.

trick\_units(-)

Definition at line 152 of file gauss\_jackson\_integrator\_base.hh.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::base\_integrate(), jeod::GaussJacksonIntegratorBase< State, Primer >::base\_reset(), jeod::GaussJacksonIntegratorBase< State, Primer >::downsample\_hist(), jeod::GaussJacksonIntegratorBase< State, Primer >::edit\_point(), jeod::GaussJacksonIntegratorBase< State, Primer >::start\_cycle(), and jeod::GaussJacksonIntegratorBase< State, Primer >::swap().

**8.8.4.8** `template<typename State , typename Primer > State jeod::GaussJacksonIntegratorBase< State, Primer >::init_state`

The state at the time of the last reset.

trick\_units(-)

Definition at line 80 of file gauss\_jackson\_integrator\_base.hh.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::GaussJacksonIntegratorBase(), jeod::GaussJacksonIntegratorBase< State, Primer >::swap(), and jeod::GaussJacksonIntegratorBase< State, Primer >::~GaussJacksonIntegratorBase().

**8.8.4.9** `template<typename State , typename Primer > unsigned int jeod::GaussJacksonIntegratorBase< State, Primer >::initial_order`

Initial order.

trick\_units(-)

Definition at line 137 of file gauss\_jackson\_integrator\_base.hh.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::base\_reset(), and jeod::GaussJacksonIntegratorBase< State, Primer >::swap().

**8.8.4.10** `template<typename State , typename Primer > unsigned int jeod::GaussJacksonIntegratorBase< State, Primer >::max_history_size`

Maximum history size.

trick\_units(-)

Definition at line 132 of file gauss\_jackson\_integrator\_base.hh.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::GaussJacksonIntegratorBase(), and jeod::GaussJacksonIntegratorBase< State, Primer >::swap().

**8.8.4.11** `template<typename State , typename Primer > unsigned int jeod::GaussJacksonIntegratorBase< State, Primer >::order`

Current order.

trick\_units(-)

Definition at line 142 of file gauss\_jackson\_integrator\_base.hh.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::base\_integrate(), jeod::GaussJacksonIntegratorBase< State, Primer >::base\_reset(), jeod::GaussJacksonIntegratorBase< State, Primer >::edit\_point(), jeod::GaussJacksonIntegratorBase< State, Primer >::integrate\_gj(), jeod::GaussJacksonIntegratorBase< State, Primer >::rotate\_acc\_hist(), jeod::GaussJacksonIntegratorBase< State, Primer >::start\_cycle(), and jeod::GaussJacksonIntegratorBase< State, Primer >::swap().

#### 8.8.4.12 template<typename State , typename Primer > er7\_utils::DoubleTwoDArray jeod::GaussJacksonIntegratorBase< State, Primer >::pos\_hist

Position history (or velocity history in case of a first order ODE).

trick\_units(-)

Definition at line 100 of file gauss\_jackson\_integrator\_base.hh.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::base\_integrate(), jeod::GaussJacksonIntegratorBase< State, Primer >::downsample\_hist(), jeod::GaussJacksonIntegratorBase< State, Primer >::edit\_point(), jeod::GaussJacksonIntegratorBase< State, Primer >::GaussJacksonIntegratorBase(), jeod::GaussJacksonIntegratorBase< State, Primer >::integrate\_gj(), and jeod::GaussJacksonIntegratorBase< State, Primer >::swap().

#### 8.8.4.13 template<typename State , typename Primer > double jeod::GaussJacksonIntegratorBase< State, Primer >::position\_corrector

Correction coefficient for the second integral (position).

trick\_units(-)

Definition at line 122 of file gauss\_jackson\_integrator\_base.hh.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::start\_cycle(), and jeod::GaussJacksonIntegratorBase< State, Primer >::swap().

#### 8.8.4.14 template<typename State , typename Primer > Primer\* jeod::GaussJacksonIntegratorBase< State, Primer >::primer

The integrator used to prime the Gauss-Jackson integration process.

trick\_units(-)

Definition at line 75 of file gauss\_jackson\_integrator\_base.hh.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::GaussJacksonIntegratorBase(), jeod::GaussJacksonIntegratorBase< State, Primer >::swap(), and jeod::GaussJacksonIntegratorBase< State, Primer >::~GaussJacksonIntegratorBase().

#### 8.8.4.15 template<typename State , typename Primer > double jeod::GaussJacksonIntegratorBase< State, Primer >::relative\_tolerance

Number that indicates the allowable relative difference for two states to be considered converged.

trick\_units(-)

Definition at line 106 of file gauss\_jackson\_integrator\_base.hh.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::swap().

**8.8.4.16** `template<typename State , typename Primer > unsigned int jeod::GaussJacksonIntegratorBase< State, Primer >::size`

State size.

`trick_units(-)`

Definition at line 147 of file `gauss_jackson_integrator_base.hh`.

Referenced by `jeod::GaussJacksonIntegratorBase< State, Primer >::base_integrate()`, `jeod::GaussJacksonIntegratorBase< State, Primer >::GaussJacksonIntegratorBase()`, `jeod::GaussJacksonIntegratorBase< State, Primer >::integrate_gj()`, `jeod::GaussJacksonIntegratorBase< State, Primer >::start_cycle()`, and `jeod::GaussJacksonIntegratorBase< State, Primer >::swap()`.

**8.8.4.17** `template<typename State , typename Primer > const GaussJacksonStateMachine* jeod::GaussJacksonIntegratorBase< State, Primer >::state_machine`

The Gauss-Jackson state machine.

`trick_units(-)`

Definition at line 70 of file `gauss_jackson_integrator_base.hh`.

Referenced by `jeod::GaussJacksonIntegratorBase< State, Primer >::start_cycle()`, and `jeod::GaussJacksonIntegratorBase< State, Primer >::swap()`.

**8.8.4.18** `template<typename State , typename Primer > double jeod::GaussJacksonIntegratorBase< State, Primer >::velocity_corrector`

Correction coefficient for the first integral (velocity).

`trick_units(-)`

Definition at line 117 of file `gauss_jackson_integrator_base.hh`.

Referenced by `jeod::GaussJacksonIntegratorBase< State, Primer >::start_cycle()`, and `jeod::GaussJacksonIntegratorBase< State, Primer >::swap()`.

The documentation for this class was generated from the following file:


- [gauss\\_jackson\\_integrator\\_base.hh](#)

## 8.9 jeod::GaussJacksonIntegratorConstructor Class Reference

Create state and time integrators that propagate using Gauss-Jackson.

```
#include <gauss_jackson_integrator_constructor.hh>
```

Inheritance diagram for `jeod::GaussJacksonIntegratorConstructor`:

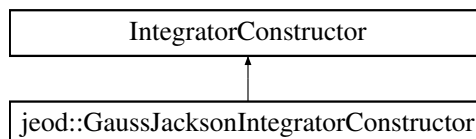

### Public Member Functions

- [GaussJacksonIntegratorConstructor](#) (void)

- GaussJackson default constructor.*
- [GaussJacksonIntegratorConstructor](#) (const [GaussJacksonIntegratorConstructor](#) &src)  
*GaussJacksonIntegratorConstructor copy constructor.*
- [~GaussJacksonIntegratorConstructor](#) ()  
*GaussJacksonIntegratorConstructor destructor.*
- [GaussJacksonIntegratorConstructor](#) & operator= (GaussJacksonIntegratorConstructor src)  
*GaussJacksonIntegratorConstructor assignment operator.*
- void [configure](#) (const [GaussJacksonConfig](#) &config\_in, er7\_utils::Integration::Technique priming\_technique=er7\_utils::Integration::Unspecified)  
*Configure the Gauss-Jackson integrator constructor.*
- void [configure](#) (const [GaussJacksonConfig](#) &config\_in, const er7\_utils::IntegratorConstructor &priming\_cotr\_in)  
*Configure the Gauss-Jackson integrator constructor.*
- virtual const char \* [get\\_class\\_name](#) (void) const  
*Return the class name.*
- virtual bool [implements](#) (er7\_utils::Integration::ODEProblemType problem\_type) const  
*GaussJackson does not implement a 2nd order generalized step integrator.*
- virtual bool [provides](#) (er7\_utils::Integration::ODEProblemType problem\_type) const  
*GaussJackson does not provide a 2nd order generalized step integrator.*
- virtual void [swap](#) ([GaussJacksonIntegratorConstructor](#) &src)  
*Non-throwing swap.*
- virtual  
er7\_utils::IntegratorConstructor \* [create\\_copy](#) (void) const  
*Create a duplicate of the constructor.*
- virtual  
er7\_utils::IntegrationControls \* [create\\_integration\\_controls](#) (void) const  
*Create an integration controls that guides the GaussJackson integration process.*
- virtual  
er7\_utils::FirstOrderODEIntegrator \* [create\\_first\\_order\\_ode\\_integrator](#) (unsigned int size, er7\_utils::IntegrationControls &controls) const  
*Create a GaussJackson state integrator for a first order ODE.*
- virtual  
er7\_utils::SecondOrderODEIntegrator \* [create\\_second\\_order\\_ode\\_integrator](#) (unsigned int size, er7\_utils::IntegrationControls &controls) const  
*Create a GaussJackson state integrator for a simple second order ODE.*
- virtual  
er7\_utils::SecondOrderODEIntegrator \* [create\\_generalized\\_deriv\\_second\\_order\\_ode\\_integrator](#) (unsigned int position\_size, unsigned int velocity\_size, const er7\_utils::GeneralizedPositionDerivativeFunctions &deriv\_funs, er7\_utils::IntegrationControls &controls) const  
*Create a GaussJackson state integrator for a generalized second order ODE where generalized position is advanced with the use of the position derivative function.*
- virtual unsigned int [get\\_buffer\\_size](#) (void) const  
*GaussJackson can use a large number of steps per Trick cycle.*
- virtual unsigned int [get\\_transition\\_table\\_size](#) (void) const  
*GaussJackson uses two steps per cycle once primed.*

## Static Public Member Functions

- static  
er7\_utils::IntegratorConstructor \* [create\\_constructor](#) (void)  
*Named constructor; create an GaussJacksonIntegratorConstructor instance.*

## Private Attributes

- `er7_utils::IntegratorConstructor * priming_constructor`  
*The integrator constructor that creates the priming integrators.*
- `GaussJacksonConfig config`  
*Data used to configure the Gauss-Jackson integration process.*

## Friends

- class `InputProcessor`
- void `init_attrjeod__GaussJacksonIntegratorConstructor()`

### 8.9.1 Detailed Description

Create state and time integrators that propagate using Gauss-Jackson.

Definition at line 45 of file `gauss_jackson_integrator_constructor.hh`.

### 8.9.2 Constructor & Destructor Documentation

#### 8.9.2.1 `jeod::GaussJacksonIntegratorConstructor::GaussJacksonIntegratorConstructor( void )`

GaussJackson default constructor.

Definition at line 79 of file `gauss_jackson_integrator_constructor.cc`.

#### 8.9.2.2 `jeod::GaussJacksonIntegratorConstructor::GaussJacksonIntegratorConstructor( const GaussJacksonIntegratorConstructor & src )`

`GaussJacksonIntegratorConstructor` copy constructor.

Definition at line 90 of file `gauss_jackson_integrator_constructor.cc`.

References `priming_constructor`.

#### 8.9.2.3 `jeod::GaussJacksonIntegratorConstructor::~~GaussJacksonIntegratorConstructor( )`

`GaussJacksonIntegratorConstructor` destructor.

Definition at line 105 of file `gauss_jackson_integrator_constructor.cc`.

References `priming_constructor`.

### 8.9.3 Member Function Documentation

#### 8.9.3.1 `void jeod::GaussJacksonIntegratorConstructor::configure( const GaussJacksonConfig & config_in, er7_utils::Integration::Technique priming_technique = er7_utils::Integration::Unspecified )`

Configure the Gauss-Jackson integrator constructor.

Definition at line 123 of file `gauss_jackson_integrator_constructor.cc`.

References `config`, `priming_constructor`, `jeod::GaussJacksonConfig::priming_technique`, and `jeod::GaussJacksonConfig::validate_configuration()`.

Referenced by `create_integration_controls()`.



8.9.3.2 void jeod::GaussJacksonIntegratorConstructor::configure ( const GaussJacksonConfig & config\_in, const er7\_utils::IntegratorConstructor & priming\_cotr\_in )

Configure the Gauss-Jackson integrator constructor.

Definition at line 141 of file gauss\_jackson\_integrator\_constructor.cc.

References config, priming\_constructor, and jeod::GaussJacksonConfig::validate\_configuration().

8.9.3.3 er7\_utils::IntegratorConstructor \* jeod::GaussJacksonIntegratorConstructor::create\_constructor ( void )  
[static]

Named constructor; create an [GaussJacksonIntegratorConstructor](#) instance.

The caller is responsible for deleting the returned object.

#### Returns

Newly created [GaussJacksonIntegratorConstructor](#) instance.

Definition at line 71 of file gauss\_jackson\_integrator\_constructor.cc.

8.9.3.4 er7\_utils::IntegratorConstructor \* jeod::GaussJacksonIntegratorConstructor::create\_copy ( void ) const  
[virtual]

Create a duplicate of the constructor.

The caller is responsible for deleting the returned object.

#### Returns

Duplicated constructor.

Definition at line 152 of file gauss\_jackson\_integrator\_constructor.cc.

8.9.3.5 er7\_utils::FirstOrderODEIntegrator \* jeod::GaussJacksonIntegratorConstructor::create\_first\_order\_ode\_integrator ( unsigned int size, er7\_utils::IntegrationControls & controls ) const [virtual]

Create a GaussJackson state integrator for a first order ODE.

The caller is responsible for deleting the created object.

#### Returns

State integrator

#### Parameters

in	size	State size
in, out	controls	Integration controls

Definition at line 180 of file gauss\_jackson\_integrator\_constructor.cc.

References jeod::cast\_to\_gj\_controls(), jeod::GaussJacksonIntegrationControls::get\_priming\_controls(), and priming\_constructor.

```
8.9.3.6 er7_utils::SecondOrderODEIntegrator * jeod::GaussJacksonIntegratorConstructor::create_generalized-
      _deriv_second_order_ode_integrator ( unsigned int position_size, unsigned int velocity_size, const
      er7_utils::GeneralizedPositionDerivativeFunctions & deriv_funs, er7_utils::IntegrationControls & controls ) const
      [virtual]
```

Create a GaussJackson state integrator for a generalized second order ODE where generalized position is advanced with the use of the position derivative function.

The caller is responsible for deleting the created object.

#### Returns

State integrator

#### Parameters

in	<i>position_size</i>	Size of the generalized position
in	<i>velocity_size</i>	Size of the generalized velocity
in	<i>deriv_funs</i>	Position derivative functions container
in, out	<i>controls</i>	Integration controls

Definition at line 223 of file gauss\_jackson\_integrator\_constructor.cc.

References jeod::cast\_to\_gj\_controls(), jeod::GaussJacksonIntegrationControls::get\_priming\_controls(), and priming\_constructor.

```
8.9.3.7 er7_utils::IntegrationControls * jeod::GaussJacksonIntegratorConstructor::create_integration_controls ( void ) const
      [virtual]
```

Create an integration controls that guides the GaussJackson integration process.

The caller is responsible for deleting the created object.

#### Returns

Integration controls object

Definition at line 161 of file gauss\_jackson\_integrator\_constructor.cc.

References config, configure(), priming\_constructor, and jeod::GaussJacksonConfig::standard\_configuration().

```
8.9.3.8 er7_utils::SecondOrderODEIntegrator * jeod::GaussJacksonIntegratorConstructor::create_second-
      _order_ode_integrator ( unsigned int size, er7_utils::IntegrationControls & controls ) const
      [virtual]
```

Create a GaussJackson state integrator for a simple second order ODE.

The caller is responsible for deleting the created object.

#### Returns

State integrator

#### Parameters

in	<i>size</i>	State size
----	-------------	------------

<i>in, out</i>	<i>controls</i>	Integration controls
----------------	-----------------	----------------------

Definition at line 201 of file gauss\_jackson\_integrator\_constructor.cc.

References `jeod::cast_to_gj_controls()`, `jeod::GaussJacksonIntegrationControls::get_priming_controls()`, and `priming_constructor`.

**8.9.3.9** `virtual unsigned int jeod::GaussJacksonIntegratorConstructor::get_buffer_size ( void ) const` `[inline]`,  
`[virtual]`

GaussJackson can use a large number of steps per Trick cycle.

The magic number 192 is for order=16, ndboubbling=6.

#### Returns

Always returns 192.

Definition at line 204 of file gauss\_jackson\_integrator\_constructor.hh.

**8.9.3.10** `virtual const char* jeod::GaussJacksonIntegratorConstructor::get_class_name ( void ) const` `[inline]`,  
`[virtual]`

Return the class name.

Definition at line 111 of file gauss\_jackson\_integrator\_constructor.hh.

**8.9.3.11** `virtual unsigned int jeod::GaussJacksonIntegratorConstructor::get_transition_table_size ( void ) const`  
`[inline]`, `[virtual]`

GaussJackson uses two steps per cycle once primed.

#### Returns

Always returns 2.

Definition at line 211 of file gauss\_jackson\_integrator\_constructor.hh.

**8.9.3.12** `virtual bool jeod::GaussJacksonIntegratorConstructor::implements ( er7_utils::Integration::ODEProblemType  
problem_type ) const` `[inline]`, `[virtual]`

GaussJackson does not implement a 2nd order generalized step integrator.

Definition at line 117 of file gauss\_jackson\_integrator\_constructor.hh.

**8.9.3.13** `GaussJacksonIntegratorConstructor& jeod::GaussJacksonIntegratorConstructor::operator= (`  
`GaussJacksonIntegratorConstructor src )` `[inline]`

[GaussJacksonIntegratorConstructor](#) assignment operator.

Definition at line 83 of file gauss\_jackson\_integrator\_constructor.hh.

References `swap()`.

**8.9.3.14** `virtual bool jeod::GaussJacksonIntegratorConstructor::provides ( er7_utils::Integration::ODEProblemType  
problem_type ) const` `[inline]`, `[virtual]`

GaussJackson does not provide a 2nd order generalized step integrator.

Definition at line 128 of file gauss\_jackson\_integrator\_constructor.hh.

**8.9.3.15** `void jeod::GaussJacksonIntegratorConstructor::swap ( GaussJacksonIntegratorConstructor & src )`  
`[virtual]`

Non-throwing swap.

Parameters

<code>in, out</code>	<code>src</code>	Object with which contents are to be swapped.
----------------------	------------------	---

Definition at line 113 of file gauss\_jackson\_integrator\_constructor.cc.

References `config`, and `priming_constructor`.

Referenced by `operator=()`.

## 8.9.4 Friends And Related Function Documentation

**8.9.4.1** `void init_attrjeod__GaussJacksonIntegratorConstructor ( )` `[friend]`

**8.9.4.2** `friend class InputProcessor` `[friend]`

Definition at line 47 of file gauss\_jackson\_integrator\_constructor.hh.

## 8.9.5 Field Documentation

**8.9.5.1** `GaussJacksonConfig jeod::GaussJacksonIntegratorConstructor::config` `[private]`

Data used to configure the Gauss-Jackson integration process.

`trick_units(-)`

Definition at line 224 of file gauss\_jackson\_integrator\_constructor.hh.

Referenced by `configure()`, `create_integration_controls()`, and `swap()`.

**8.9.5.2** `er7_utils::IntegratorConstructor* jeod::GaussJacksonIntegratorConstructor::priming_constructor` `[private]`

The integrator constructor that creates the priming integrators.

`trick_units(-)`

Definition at line 219 of file gauss\_jackson\_integrator\_constructor.hh.

Referenced by `configure()`, `create_first_order_ode_integrator()`, `create_generalized_deriv_second_order_ode_integrator()`, `create_integration_controls()`, `create_second_order_ode_integrator()`, `GaussJacksonIntegratorConstructor()`, `swap()`, and `~GaussJacksonIntegratorConstructor()`.

The documentation for this class was generated from the following files:

- [gauss\\_jackson\\_integrator\\_constructor.hh](#)
- [gauss\\_jackson\\_integrator\\_constructor.cc](#)

## 8.10 jeod::GaussJacksonOneState Class Reference

Essentially just a `double*`.

```
#include <gauss_jackson_one_state.hh>
```

## Public Member Functions

- [GaussJacksonOneState](#) ()  
*Default constructor.*
- [GaussJacksonOneState](#) (double \*first\_in)  
*Conversion constructor.*

## Data Fields

- double \* [first](#)  
*The pointed-to data.*

## Friends

- class [InputProcessor](#)
- void [init\\_attrjeod\\_\\_GaussJacksonOneState](#) ()

### 8.10.1 Detailed Description

Essentially just a double\*.

Definition at line 36 of file gauss\_jackson\_one\_state.hh.

### 8.10.2 Constructor & Destructor Documentation

#### 8.10.2.1 jeod::GaussJacksonOneState::GaussJacksonOneState ( ) [inline]

Default constructor.

Definition at line 51 of file gauss\_jackson\_one\_state.hh.

#### 8.10.2.2 jeod::GaussJacksonOneState::GaussJacksonOneState ( double \* first\_in ) [inline]

Conversion constructor.

Parameters

<i>first_in</i>	The pointed-to data.
-----------------	----------------------

Definition at line 60 of file gauss\_jackson\_one\_state.hh.

### 8.10.3 Friends And Related Function Documentation

#### 8.10.3.1 void init\_attrjeod\_\_GaussJacksonOneState ( ) [friend]

#### 8.10.3.2 friend class InputProcessor [friend]

Definition at line 38 of file gauss\_jackson\_one\_state.hh.

### 8.10.4 Field Documentation

#### 8.10.4.1 double\* jeod::GaussJacksonOneState::first

The pointed-to data.

trick\_units(-)

Definition at line 45 of file gauss\_jackson\_one\_state.hh.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::advance\_edit\_integration\_constants(), jeod::GaussJacksonIntegratorBase< State, Primer >::advance\_predictor\_integration\_constants(), jeod::GaussJacksonIntegratorBase< State, Primer >::allocate\_state\_contents(), jeod::GaussJacksonIntegratorBase< State, Primer >::correct(), jeod::GaussJacksonIntegratorBase< State, Primer >::deallocate\_state\_contents(), jeod::GaussJacksonIntegratorBase< State, Primer >::initialize\_edit\_integration\_constants(), jeod::GaussJacksonIntegratorBase< State, Primer >::integrate\_primer(), jeod::GaussJacksonIntegratorBase< State, Primer >::mid\_correct(), jeod::GaussJacksonIntegratorBase< State, Primer >::predict(), jeod::GaussJacksonIntegratorBase< State, Primer >::replicate\_state(), jeod::GaussJacksonIntegratorBase< State, Primer >::save\_comparison\_data(), jeod::GaussJacksonIntegratorBase< State, Primer >::save\_epoch\_data(), jeod::GaussJacksonIntegratorBase< State, Primer >::swap\_state(), and jeod::GaussJacksonIntegratorBase< State, Primer >::test\_for\_convergence().

The documentation for this class was generated from the following file:

- [gauss\\_jackson\\_one\\_state.hh](#)

## 8.11 jeod::GaussJacksonRationalCoefficients Class Reference

Contains a set of Adams or Stormer-Cowell coefficients.

```
#include <gauss_jackson_rational_coeffs.hh>
```

### Public Member Functions

- [GaussJacksonRationalCoefficients](#) ()  
*Default constructor.*
- void [configure\\_adams\\_corrector](#) (unsigned int nelemt)  
*Configure the coefficients as an Adams corrector in difference form.*
- [GaussJacksonRationalCoefficients construct\\_stormer\\_cowell\\_corrector](#) () const  
*Construct a [GaussJacksonRationalCoefficients](#) that contains the Stormer-Cowell corrector coefficients.*
- [GaussJacksonRationalCoefficients construct\\_predictor](#) () const  
*Construct a [GaussJacksonRationalCoefficients](#) that contains a set of predictor coefficients.*
- void [convert\\_to\\_ordinate\\_form](#) (er7\_utils::NChooseM &n\_choose\_m, double \*result) const  
*Convert the coefficients to ordinate form.*
- void [discard\\_extra\\_terms](#) (unsigned int nfront, unsigned int nback)  
*Discard the specified number of terms from the front and back of the coefficients array.*
- void [displace\\_back](#) ()  
*Displace the corrector coefficients back one time step.*

### Data Fields

- std::vector< er7\_utils::Ratio128 > [coefficients](#)  
*The coefficients.*

### Friends

- class [InputProcessor](#)
- void [init\\_attrjeod\\_\\_GaussJacksonRationalCoefficients](#) ()

### 8.11.1 Detailed Description

Contains a set of Adams or Stormer-Cowell coefficients.

Definition at line 53 of file gauss\_jackson\_rational\_coefs.hh.

### 8.11.2 Constructor & Destructor Documentation

#### 8.11.2.1 jeod::GaussJacksonRationalCoefficients::GaussJacksonRationalCoefficients ( ) `[inline]`

Default constructor.

Definition at line 68 of file gauss\_jackson\_rational\_coefs.hh.

### 8.11.3 Member Function Documentation

#### 8.11.3.1 void jeod::GaussJacksonRationalCoefficients::configure\_adams\_corrector ( unsigned int *nelem* )

Configure the coefficients as an Adams corrector in difference form.

Parameters

<i>nelem</i>	The number of elements in the coefficients vector.
--------------	--

Definition at line 39 of file gauss\_jackson\_rational\_coefs.cc.

References coefficients.

Referenced by jeod::GaussJacksonCoeffs::compute\_coefs().

#### 8.11.3.2 GaussJacksonRationalCoefficients jeod::GaussJacksonRationalCoefficients::construct\_predictor ( ) const

Construct a [GaussJacksonRationalCoefficients](#) that contains a set of predictor coefficients.

The coefficients are assumed to be configured as either Adams or Stormer-Cowell corrector coefficients.

Returns

A [GaussJacksonRationalCoefficients](#) object with the coefficients configured as Adams or Stormer-Cowell predictor coefficients.

Definition at line 87 of file gauss\_jackson\_rational\_coefs.cc.

References coefficients.

Referenced by jeod::GaussJacksonCoeffs::compute\_coefs().

#### 8.11.3.3 GaussJacksonRationalCoefficients jeod::GaussJacksonRationalCoefficients::construct\_stormer\_cowell\_corrector ( ) const

Construct a [GaussJacksonRationalCoefficients](#) that contains the Stormer-Cowell corrector coefficients.

The coefficients are assumed to be configured as Adams coefficients in difference form.

Returns

A [GaussJacksonRationalCoefficients](#) object with the coefficients configured as Stormer-Cowell corrector coefficients.

Definition at line 62 of file gauss\_jackson\_rational\_coefs.cc.

References coefficients.

Referenced by jeod::GaussJacksonCoeffs::compute\_coeffs().

**8.11.3.4** void jeod::GaussJacksonRationalCoefficients::convert\_to\_ordinate\_form ( er7\_utils::NChooseM & *n\_choose\_m*, double \* *result* ) const

Convert the coefficients to ordinate form.

Parameters

<i>n_choose_m</i>	An NChooseM object that computes N choose M.
<i>result</i>	The output ordinate form coefficients.

Definition at line 112 of file gauss\_jackson\_rational\_coeffs.cc.

References coefficients.

Referenced by jeod::GaussJacksonCoeffs::compute\_coeffs().

**8.11.3.5** void jeod::GaussJacksonRationalCoefficients::discard\_extra\_terms ( unsigned int *nfront*, unsigned int *nback* )

Discard the specified number of terms from the front and back of the coefficients array.

Parameters

<i>nfront</i>	The number of terms to be discarded from the front of the coefficients vector.
<i>nback</i>	The number of terms to be discarded from the back of the coefficients vector.

Definition at line 146 of file gauss\_jackson\_rational\_coeffs.cc.

References coefficients.

Referenced by jeod::GaussJacksonCoeffs::compute\_coeffs().

**8.11.3.6** void jeod::GaussJacksonRationalCoefficients::displace\_back ( )

Displace the corrector coefficients back one time step.

Definition at line 163 of file gauss\_jackson\_rational\_coeffs.cc.

References coefficients.

Referenced by jeod::GaussJacksonCoeffs::compute\_coeffs().

## 8.11.4 Friends And Related Function Documentation

**8.11.4.1** void init\_attrjeod\_\_GaussJacksonRationalCoefficients ( ) [friend]

**8.11.4.2** friend class InputProcessor [friend]

Definition at line 55 of file gauss\_jackson\_rational\_coeffs.hh.

## 8.11.5 Field Documentation

**8.11.5.1** std::vector<er7\_utils::Ratio128> jeod::GaussJacksonRationalCoefficients::coefficients

The coefficients.

trick\_units(-)

Definition at line 62 of file gauss\_jackson\_rational\_coeffs.hh.



Referenced by `configure_adams_corrector()`, `construct_predictor()`, `construct_stormer_cowell_corrector()`, `convert_to_ordinate_form()`, `discard_extra_terms()`, and `displace_back()`.

The documentation for this class was generated from the following files:


- [gauss\\_jackson\\_rational\\_coeffs.hh](#)
- [gauss\\_jackson\\_rational\\_coeffs.cc](#)

## 8.12 jeod::GaussJacksonSimpleSecondOrderODEIntegrator Class Reference

Integrates a simple second order ODE using the Gauss-Jackson technique.

```
#include <gauss_jackson_simple_second_order_ode_integrator.hh>
```

Inheritance diagram for `jeod::GaussJacksonSimpleSecondOrderODEIntegrator`:

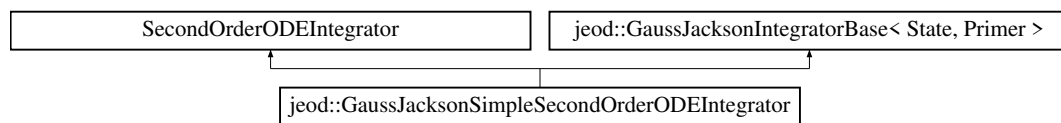

### Public Member Functions

- [GaussJacksonSimpleSecondOrderODEIntegrator](#) ()  
*Default constructor.*
- [GaussJacksonSimpleSecondOrderODEIntegrator](#) (const `er7_utils::IntegratorConstructor` &priming\_constructor, [GaussJacksonIntegrationControls](#) &controls, unsigned int size\_in, `er7_utils::IntegrationControls` &priming\_controls)  
*Non-default constructor.*
- [GaussJacksonSimpleSecondOrderODEIntegrator](#) (const [GaussJacksonSimpleSecondOrderODEIntegrator](#) &src)  
*Copy constructor.*
- [~GaussJacksonSimpleSecondOrderODEIntegrator](#) ()  
*Destructor.*
- [GaussJacksonSimpleSecondOrderODEIntegrator](#) & `operator=` ([GaussJacksonSimpleSecondOrderODEIntegrator](#) src)  
*Copy and swap assignment operator.*
- void [swap](#) ([GaussJacksonSimpleSecondOrderODEIntegrator](#) &other)  
*Non-throwing swap.*
- virtual `er7_utils::SecondOrderODEIntegrator * create\_copy () const`  
*Replicate this.*
- void [reset\\_integrator](#) ()  
*Reset the integrator.*
- `er7_utils::IntegratorResult integrate (double dyn_dt, unsigned int target_stage, double const *acc, double *vel, double *pos)`  
*Propagate state using Gauss-Jackson.*

### Friends

- class [InputProcessor](#)
- void [init\\_attrjeod\\_\\_GaussJacksonSimpleSecondOrderODEIntegrator](#) ()

## Additional Inherited Members

### 8.12.1 Detailed Description

Integrates a simple second order ODE using the Gauss-Jackson technique.

The class inherits from `er7_utils::SecondOrderODEIntegrator` as an is-a relationship (public inheritance) and from `GaussJacksonIntegratorBaseSecond` as an is-implemented-by relationship (private inheritance). Using composition instead of private inheritance would make Trick 13 checkpoint/restart a lot trickier to implement. With private inheritance, the Trick 13 `io_src` file contains all the necessary information.

Definition at line 49 of file `gauss_jackson_simple_second_order_ode_integrator.hh`.

### 8.12.2 Constructor & Destructor Documentation

#### 8.12.2.1 `jeod::GaussJacksonSimpleSecondOrderODEIntegrator::GaussJacksonSimpleSecondOrderODEIntegrator ( )` [inline]

Default constructor.

Definition at line 59 of file `gauss_jackson_simple_second_order_ode_integrator.hh`.

#### 8.12.2.2 `jeod::GaussJacksonSimpleSecondOrderODEIntegrator::GaussJacksonSimpleSecondOrderODEIntegrator ( const er7_utils::IntegratorConstructor & priming_constructor, GaussJacksonIntegrationControls & controls, unsigned int size_in, er7_utils::IntegrationControls & priming_controls )` [inline]

Non-default constructor.

This is the constructor invoked by the [GaussJacksonIntegratorConstructor](#).

##### Parameters

<i>priming_constructor</i>	Integrator constructor for the technique used during priming.
<i>controls</i>	The Gauss-Jackson integration controls that drives this state integrator.
<i>size_in</i>	State size.
<i>priming_controls</i>	Integration controls used during priming.

Definition at line 77 of file `gauss_jackson_simple_second_order_ode_integrator.hh`.

#### 8.12.2.3 `jeod::GaussJacksonSimpleSecondOrderODEIntegrator::GaussJacksonSimpleSecondOrderODEIntegrator ( const GaussJacksonSimpleSecondOrderODEIntegrator & src )` [inline]

Copy constructor.

##### Parameters

<i>src</i>	Item to be copied.
------------	--------------------

Definition at line 94 of file `gauss_jackson_simple_second_order_ode_integrator.hh`.

#### 8.12.2.4 `jeod::GaussJacksonSimpleSecondOrderODEIntegrator::~~GaussJacksonSimpleSecondOrderODEIntegrator ( )` [inline]

Destructor.

Definition at line 106 of file `gauss_jackson_simple_second_order_ode_integrator.hh`.

### 8.12.3 Member Function Documentation

**8.12.3.1** `virtual er7_utils::SecondOrderODEIntegrator* jeod::GaussJacksonSimpleSecondOrderODEIntegrator::create_copy ( void ) const [inline], [virtual]`

Replicate this.

#### Returns

Replicate of this.

Definition at line 138 of file `gauss_jackson_simple_second_order_ode_integrator.hh`.

**8.12.3.2** `er7_utils::IntegratorResult jeod::GaussJacksonSimpleSecondOrderODEIntegrator::integrate ( double dyn_dt, unsigned int target_stage, double const * acc, double * vel, double * pos ) [inline]`

Propagate state using Gauss-Jackson.

#### Parameters

in	<i>dyn_dt</i>	Dynamic time step, in dynamic time seconds.
in	<i>target_stage</i>	The stage of the integration process that the integrator should try to attain.
in	<i>acc</i>	Acceleration vector.
in, out	<i>vel</i>	Velocity vector.
in, out	<i>pos</i>	Position vector.

#### Returns

The status (time advance, pass/fail status) of the integration.

Definition at line 164 of file `gauss_jackson_simple_second_order_ode_integrator.hh`.

References `jeod::GaussJacksonIntegratorBase< State, Primer >::base_integrate()`.

Referenced by `jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator::integrate()`.

**8.12.3.3** `GaussJacksonSimpleSecondOrderODEIntegrator& jeod::GaussJacksonSimpleSecondOrderODEIntegrator::operator= ( GaussJacksonSimpleSecondOrderODEIntegrator src ) [inline]`

Copy and swap assignment operator.

#### Parameters

<i>src</i>	Item to be copied.
------------	--------------------

Definition at line 114 of file `gauss_jackson_simple_second_order_ode_integrator.hh`.

References `swap()`.

**8.12.3.4** `void jeod::GaussJacksonSimpleSecondOrderODEIntegrator::reset_integrator ( ) [inline]`

Reset the integrator.

Definition at line 147 of file `gauss_jackson_simple_second_order_ode_integrator.hh`.

References `jeod::GaussJacksonIntegratorBase< State, Primer >::base_reset()`.

Referenced by `jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator::reset_integrator()`.

8.12.3.5 `void jeod::GaussJacksonSimpleSecondOrderODEIntegrator::swap ( GaussJacksonSimpleSecondOrderODE-Integrator & other ) [inline]`

Non-throwing swap.

## Parameters

<i>other</i>	Item whose contents are to be swapped with this.
--------------	--

Definition at line 126 of file gauss\_jackson\_simple\_second\_order\_ode\_integrator.hh.

References `jeod::GaussJacksonIntegratorBase< State, Primer >::swap()`.

Referenced by `operator=()`, and `jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator::swap()`.

## 8.12.4 Friends And Related Function Documentation

8.12.4.1 `void init_attrjeod__GaussJacksonSimpleSecondOrderODEIntegrator ( ) [friend]`

8.12.4.2 `friend class InputProcessor [friend]`

Definition at line 52 of file gauss\_jackson\_simple\_second\_order\_ode\_integrator.hh.

The documentation for this class was generated from the following file:

- [gauss\\_jackson\\_simple\\_second\\_order\\_ode\\_integrator.hh](#)

## 8.13 jeod::GaussJacksonStateMachine Class Reference

Guides the behavior of the Gauss-Jackson integration process via a finite state machine.

```
#include <gauss_jackson_state_machine.hh>
```

### Public Types

- enum `FsmState` {  
[Reset](#), [Priming](#), [BootstrapEdit](#), [BootstrapStep](#),  
[Operational](#) }  
*Specifies the Gauss-Jackson finite state machine states.*

### Public Member Functions

- [GaussJacksonStateMachine](#) ()  
*Default constructor.*
- [FsmState get\\_fsm\\_state](#) () const  
*Get the finite state machine state.*
- unsigned int [get\\_max\\_history\\_size](#) () const  
*Get the maximum history size.*
- unsigned int [get\\_current\\_order](#) () const  
*Get the current order.*
- unsigned int [get\\_history\\_length](#) () const  
*Get the current history length.*
- double [get\\_cycle\\_scale](#) () const  
*Get the current time scale factor.*
- double [get\\_cycle\\_start\\_time](#) () const  
*Get the current cycle start time.*
- bool [get\\_at\\_downsample](#) () const  
*Get the at\_downsample flag.*
- bool [get\\_at\\_reinitialize](#) () const

- *Get the `at_reinitialize` flag.*
- bool `get_at_order_change` () const  
*Get the `at_order_change` flag.*
- bool `get_at_end_of_tour` () const  
*Get the `at_end_of_tour` flag.*
- void `set_bootstrap_edit_redo_needed` ()  
*Tell the state machine that the edit did not pass a convergence test.*
- void `configure` (const `GaussJacksonConfig` &config)  
*Configure (or reconfigure) the Gauss-Jackson state machine.*
- void `reset` ()  
*Reset the Gauss-Jackson state machine.*
- void `perform_step` ()  
*Advance the state machine by one step.*

### Static Public Member Functions

- static std::string `state_name` (`FsmState` state)  
*Translates a finite state machine state value to a string.*

### Private Member Functions

- void `transition_state` ()  
*Make a state transition.*
- void `exit_priming` ()  
*Make the transition out of Priming.*
- void `exit_bootstrap_edit` ()  
*Make a transition out of BootstrapEdit.*
- void `exit_bootstrap_step` ()  
*Make a transition out of BootstrapStep.*

### Private Attributes

- unsigned int `initial_order`  
*The order to be used immediately after priming is complete.*
- unsigned int `final_order`  
*The order to be used in operational mode.*
- unsigned int `ndoubling_steps`  
*The number of times the time step is to be doubled between priming and operational modes.*
- unsigned int `max_correction_iterations`  
*The maximum number of corrections to be performed.*
- unsigned int `max_history_size`  
*The maximum history size.*
- unsigned int `tour_count`  
*The number of small steps that represent a step to the simulation engine,  $2 * n\_doubling\_steps$ .*
- `FsmState` `fsm_state`  
*The finite state machine state.*
- unsigned int `current_order`  
*The current order.*
- unsigned int `history_size`  
*The current history size, the number of history elements that must be accumulated to transition to the next state.*

- unsigned int [history\\_length](#)  
*The current history length, the number of history elements that have been accumulated so far.*
- unsigned int [scale\\_factor](#)  
*A power of two that starts at  $2^{ndoubling\_steps}$  and is halved with each downsample.*
- unsigned int [step\\_increment](#)  
*A power of two that starts at 1 and is doubled with each downsample.*
- unsigned int [steps\\_since\\_reset](#)  
*The number of steps since the reset, measured in units of priming cycle steps.*
- unsigned int [correction\\_iterations](#)  
*The number of correction iterations made during BootstrapEdit.*
- double [cycle\\_scale](#)  
*The unitless time step size of the current integration cycle, measured in integration tour time step units.*
- double [cycle\\_start\\_time](#)  
*The unitless start time of the current integration cycle, measured in integration tour time step units.*
- bool [bootstrap\\_edit\\_redo\\_needed](#)  
*Flag indicating that the current edit sequence has failed to converge.*
- bool [at\\_downsample](#)  
*Flag indicating that history data are to be downsampled and the time step is to be doubled.*
- bool [at\\_reinitialize](#)  
*Flag indicating that the Gauss-Jackson integration constants are to be reinitialized.*
- bool [at\\_order\\_change](#)  
*Flag indicating that the order is to be increased.*
- bool [at\\_end\\_of\\_tour](#)  
*Flag indicating that the current integration cycle is the last one in an integration tour (i.e., that a major time step will be completed).*

## Friends

- class [InputProcessor](#)
- void [init\\_attrjeod\\_\\_GaussJacksonStateMachine](#) ()

### 8.13.1 Detailed Description

Guides the behavior of the Gauss-Jackson integration process via a finite state machine.

The Gauss-Jackson integration process comprises four distinct modes:

- Priming: Using an alternate integrator, the primer, to build the requisite number of data points needed by the initial Gauss-Jackson algorithm.
- Editing: Using a Gauss-Jackson mid-corrector to make the collected data consistent with the Gauss-Jackson technique.
- Stepping: Using a Gauss-Jackson predictor/corrector to build the requisite number of data points needed by the next step of the Gauss-Jackson algorithm.
- Operational: Using the Gauss-Jackson predictor/corrector at the final user-specified time step and order.

Definition at line 55 of file `gauss_jackson_state_machine.hh`.

### 8.13.2 Member Enumeration Documentation

#### 8.13.2.1 enum jeod::GaussJacksonStateMachine::FsmState

Specifies the Gauss-Jackson finite state machine states.

Enumerator

**Reset** Module was just commanded to reset itself.

**Priming** Using primer to build initial set of data.

**BootstrapEdit** Editing primer / lower-level Gauss-Jackson data.

**BootstrapStep** Building toward downsample / change in order.

**Operational** At desired rate and order.

Definition at line 62 of file gauss\_jackson\_state\_machine.hh.

### 8.13.3 Constructor & Destructor Documentation

#### 8.13.3.1 jeod::GaussJacksonStateMachine::GaussJacksonStateMachine ( )

Default constructor.

Definition at line 47 of file gauss\_jackson\_state\_machine.cc.

### 8.13.4 Member Function Documentation

#### 8.13.4.1 void jeod::GaussJacksonStateMachine::configure ( const GaussJacksonConfig & config )

Configure (or reconfigure) the Gauss-Jackson state machine.

Definition at line 79 of file gauss\_jackson\_state\_machine.cc.

References jeod::GaussJacksonConfig::final\_order, final\_order, jeod::GaussJacksonConfig::initial\_order, initial\_order, jeod::GaussJacksonConfig::max\_correction\_iterations, max\_correction\_iterations, max\_history\_size, jeod::GaussJacksonConfig::ndoubling\_steps, ndoubling\_steps, and tour\_count.

Referenced by jeod::GaussJacksonIntegrationControls::GaussJacksonIntegrationControls().

#### 8.13.4.2 void jeod::GaussJacksonStateMachine::exit\_bootstrap\_edit ( ) [private]

Make a transition out of BootstrapEdit.

Definition at line 228 of file gauss\_jackson\_state\_machine.cc.

References at\_reinitialize, bootstrap\_edit\_redo\_needed, BootstrapEdit, BootstrapStep, correction\_iterations, current\_order, final\_order, fsm\_state, history\_length, history\_size, Operational, scale\_factor, step\_increment, and steps\_since\_reset.

Referenced by exit\_bootstrap\_step(), exit\_priming(), and transition\_state().

#### 8.13.4.3 void jeod::GaussJacksonStateMachine::exit\_bootstrap\_step ( ) [private]

Make a transition out of BootstrapStep.

Definition at line 279 of file gauss\_jackson\_state\_machine.cc.

References at\_downsample, at\_order\_change, at\_reinitialize, bootstrap\_edit\_redo\_needed, BootstrapEdit, correction\_iterations, current\_order, cycle\_scale, exit\_bootstrap\_edit(), final\_order, fsm\_state, history\_length, history\_size, max\_correction\_iterations, scale\_factor, and step\_increment.



Referenced by `transition_state()`.

#### 8.13.4.4 void jeod::GaussJacksonStateMachine::exit\_priming ( ) [private]

Make the transition out of Priming.

Definition at line 205 of file `gauss_jackson_state_machine.cc`.

References `at_order_change`, `at_reinitialize`, `bootstrap_edit_redo_needed`, `BootstrapEdit`, `correction_iterations`, `current_order`, `exit_bootstrap_edit()`, `fsm_state`, `history_length`, `initial_order`, and `max_correction_iterations`.

Referenced by `transition_state()`.

#### 8.13.4.5 bool jeod::GaussJacksonStateMachine::get\_at\_downsample ( ) const [inline]

Get the `at_downsample` flag.

Definition at line 128 of file `gauss_jackson_state_machine.hh`.

References `at_downsample`.

Referenced by `jeod::GaussJacksonIntegrationControls::start_cycle()`, and `jeod::GaussJacksonIntegratorBase<State, Primer>::start_cycle()`.

#### 8.13.4.6 bool jeod::GaussJacksonStateMachine::get\_at\_end\_of\_tour ( ) const [inline]

Get the `at_end_of_tour` flag.

Definition at line 146 of file `gauss_jackson_state_machine.hh`.

References `at_end_of_tour`.

Referenced by `jeod::GaussJacksonIntegrationControls::start_cycle()`.

#### 8.13.4.7 bool jeod::GaussJacksonStateMachine::get\_at\_order\_change ( ) const [inline]

Get the `at_order_change` flag.

Definition at line 140 of file `gauss_jackson_state_machine.hh`.

References `at_order_change`.

Referenced by `jeod::GaussJacksonIntegrationControls::start_cycle()`, and `jeod::GaussJacksonIntegratorBase<State, Primer>::start_cycle()`.

#### 8.13.4.8 bool jeod::GaussJacksonStateMachine::get\_at\_reinitialize ( ) const [inline]

Get the `at_reinitialize` flag.

Definition at line 134 of file `gauss_jackson_state_machine.hh`.

References `at_reinitialize`.

Referenced by `jeod::GaussJacksonIntegrationControls::start_cycle()`, and `jeod::GaussJacksonIntegratorBase<State, Primer>::start_cycle()`.

#### 8.13.4.9 unsigned int jeod::GaussJacksonStateMachine::get\_current\_order ( ) const [inline]

Get the current order.

Definition at line 104 of file `gauss_jackson_state_machine.hh`.

References `current_order`.

Referenced by `jeod::GaussJacksonIntegrationControls::start_cycle()`, and `jeod::GaussJacksonIntegratorBase< State, Primer >::start_cycle()`.

#### 8.13.4.10 `double jeod::GaussJacksonStateMachine::get_cycle_scale ( ) const [inline]`

Get the current time scale factor.

Definition at line 116 of file `gauss_jackson_state_machine.hh`.

References `cycle_scale`.

Referenced by `jeod::GaussJacksonIntegrationControls::integrate()`, and `jeod::GaussJacksonIntegrationControls::start_cycle()`.

#### 8.13.4.11 `double jeod::GaussJacksonStateMachine::get_cycle_start_time ( ) const [inline]`

Get the current cycle start time.

Definition at line 122 of file `gauss_jackson_state_machine.hh`.

References `cycle_start_time`.

Referenced by `jeod::GaussJacksonIntegrationControls::start_cycle()`.

#### 8.13.4.12 `FsmState jeod::GaussJacksonStateMachine::get_fsm_state ( ) const [inline]`

Get the finite state machine state.

Definition at line 92 of file `gauss_jackson_state_machine.hh`.

References `fsm_state`.

Referenced by `jeod::GaussJacksonIntegrationControls::start_cycle()`, and `jeod::GaussJacksonIntegratorBase< State, Primer >::start_cycle()`.

#### 8.13.4.13 `unsigned int jeod::GaussJacksonStateMachine::get_history_length ( ) const [inline]`

Get the current history length.

Definition at line 110 of file `gauss_jackson_state_machine.hh`.

References `history_length`.

Referenced by `jeod::GaussJacksonIntegrationControls::integrate_edit()`.

#### 8.13.4.14 `unsigned int jeod::GaussJacksonStateMachine::get_max_history_size ( ) const [inline]`

Get the maximum history size.

Definition at line 98 of file `gauss_jackson_state_machine.hh`.

References `max_history_size`.

#### 8.13.4.15 `void jeod::GaussJacksonStateMachine::perform_step ( )`

Advance the state machine by one step.

Definition at line 133 of file `gauss_jackson_state_machine.cc`.

References `at_downsample`, `at_end_of_tour`, `at_order_change`, `at_reinitialize`, `BootstrapEdit`, `cycle_start_time`, `fsm_state`, `history_length`, `history_size`, `step_increment`, `steps_since_reset`, `tour_count`, and `transition_state()`.

Referenced by `jeod::GaussJacksonIntegrationControls::start_cycle()`.

**8.13.4.16 void jeod::GaussJacksonStateMachine::reset ( )**

Reset the Gauss-Jackson state machine.

Definition at line 97 of file gauss\_jackson\_state\_machine.cc.

References `at_downsample`, `at_end_of_tour`, `at_order_change`, `at_reinitialize`, `current_order`, `cycle_scale`, `cycle_start_time`, `fsm_state`, `history_length`, `history_size`, `initial_order`, `Reset`, `scale_factor`, `step_increment`, `steps_since_reset`, and `tour_count`.

Referenced by `jeod::GaussJacksonIntegrationControls::reset_integrator()`.

**8.13.4.17 void jeod::GaussJacksonStateMachine::set\_bootstrap\_edit\_redo\_needed ( )**

Tell the state machine that the edit did not pass a convergence test.

Definition at line 124 of file gauss\_jackson\_state\_machine.cc.

References `bootstrap_edit_redo_needed`, `BootstrapEdit`, `correction_iterations`, `fsm_state`, and `max_correction_iterations`.

Referenced by `jeod::GaussJacksonIntegrationControls::integrate_edit()`.

**8.13.4.18 std::string jeod::GaussJacksonStateMachine::state\_name ( FsmState state ) [static]**

Translates a finite state machine state value to a string.

Definition at line 34 of file gauss\_jackson\_state\_machine.cc.

References `BootstrapEdit`, `BootstrapStep`, `Operational`, `Priming`, and `Reset`.

**8.13.4.19 void jeod::GaussJacksonStateMachine::transition\_state ( ) [private]**

Make a state transition.

Definition at line 160 of file gauss\_jackson\_state\_machine.cc.

References `BootstrapEdit`, `BootstrapStep`, `current_order`, `exit_bootstrap_edit()`, `exit_bootstrap_step()`, `exit_priming()`, `fsm_state`, `history_size`, `initial_order`, `Operational`, `Priming`, `Reset`, and `steps_since_reset`.

Referenced by `perform_step()`.

**8.13.5 Friends And Related Function Documentation****8.13.5.1 void init\_attrjeod\_\_GaussJacksonStateMachine ( ) [friend]****8.13.5.2 friend class InputProcessor [friend]**

Definition at line 56 of file gauss\_jackson\_state\_machine.hh.

**8.13.6 Field Documentation****8.13.6.1 bool jeod::GaussJacksonStateMachine::at\_downsample [private]**

Flag indicating that history data are to be downsampled and the time step is to be doubled.

The flag is set on transitions from `BootstrapStep` to `BootstrapEdit` when the step size has not yet reached the desired value, clear otherwise.`trick_units(-)`

Definition at line 286 of file gauss\_jackson\_state\_machine.hh.

Referenced by `exit_bootstrap_step()`, `get_at_downsample()`, `perform_step()`, and `reset()`.

#### 8.13.6.2 `bool jeod::GaussJacksonStateMachine::at_end_of_tour` [private]

Flag indicating that the current integration cycle is the last one in an integration tour (i.e., that a major time step will be completed).

The flag is set at the start of the cycle that completes the tour, clear otherwise. This flag is never set during `BootstrapEdit.trick_units(-)`

Definition at line 308 of file `gauss_jackson_state_machine.hh`.

Referenced by `get_at_end_of_tour()`, `perform_step()`, and `reset()`.

#### 8.13.6.3 `bool jeod::GaussJacksonStateMachine::at_order_change` [private]

Flag indicating that the order is to be increased.

The flag is set on on transitions from `BootstrapStep` to `BootstrapEdit` when the order has has not yet reached the desired value, clear otherwise.`trick_units(-)`

Definition at line 300 of file `gauss_jackson_state_machine.hh`.

Referenced by `exit_bootstrap_step()`, `exit_priming()`, `get_at_order_change()`, `perform_step()`, and `reset()`.

#### 8.13.6.4 `bool jeod::GaussJacksonStateMachine::at_reinitialize` [private]

Flag indicating that the Gauss-Jackson integration constants are to be reinitialized.

The flag is set on entry to any state except `Reset` and `Priming`, clear otherwise.`trick_units(-)`

Definition at line 293 of file `gauss_jackson_state_machine.hh`.

Referenced by `exit_bootstrap_edit()`, `exit_bootstrap_step()`, `exit_priming()`, `get_at_reinitialize()`, `perform_step()`, and `reset()`.

#### 8.13.6.5 `bool jeod::GaussJacksonStateMachine::bootstrap_edit_redo_needed` [private]

Flag indicating that the current edit sequence has failed to converge.

This flag is set externally by the Gauss-Jackson integration controls.`trick_units(-)`

Definition at line 278 of file `gauss_jackson_state_machine.hh`.

Referenced by `exit_bootstrap_edit()`, `exit_bootstrap_step()`, `exit_priming()`, and `set_bootstrap_edit_redo_needed()`.

#### 8.13.6.6 `unsigned int jeod::GaussJacksonStateMachine::correction_iterations` [private]

The number of correction iterations made during `BootstrapEdit`.

`trick_units(-)`

Definition at line 257 of file `gauss_jackson_state_machine.hh`.

Referenced by `exit_bootstrap_edit()`, `exit_bootstrap_step()`, `exit_priming()`, and `set_bootstrap_edit_redo_needed()`.

#### 8.13.6.7 `unsigned int jeod::GaussJacksonStateMachine::current_order` [private]

The current order.

This is incremented by two on transitions from `BootstrapStep` to `BootstrapEdit` until the `final_order` is reached.`trick_units(-)`

Definition at line 221 of file gauss\_jackson\_state\_machine.hh.

Referenced by `exit_bootstrap_edit()`, `exit_bootstrap_step()`, `exit_priming()`, `get_current_order()`, `reset()`, and `transition_state()`.

#### 8.13.6.8 `double jeod::GaussJacksonStateMachine::cycle_scale` [private]

The unitless time step size of the current integration cycle, measured in integration tour time step units.

This starts at  $2^{**(-ndoubling\_steps)}$  and doubles with each `downsample.trick_units(-)`

Definition at line 265 of file gauss\_jackson\_state\_machine.hh.

Referenced by `exit_bootstrap_step()`, `get_cycle_scale()`, and `reset()`.

#### 8.13.6.9 `double jeod::GaussJacksonStateMachine::cycle_start_time` [private]

The unitless start time of the current integration cycle, measured in integration tour time step units.

`trick_units(-)`

Definition at line 271 of file gauss\_jackson\_state\_machine.hh.

Referenced by `get_cycle_start_time()`, `perform_step()`, and `reset()`.

#### 8.13.6.10 `unsigned int jeod::GaussJacksonStateMachine::final_order` [private]

The order to be used in operational mode.

This must be an even integer and must not be less than `initial_order.trick_units(-)`

Definition at line 186 of file gauss\_jackson\_state\_machine.hh.

Referenced by `configure()`, `exit_bootstrap_edit()`, and `exit_bootstrap_step()`.

#### 8.13.6.11 `FsmState jeod::GaussJacksonStateMachine::fsm_state` [private]

The finite state machine state.

`trick_units(-)`

Definition at line 215 of file gauss\_jackson\_state\_machine.hh.

Referenced by `exit_bootstrap_edit()`, `exit_bootstrap_step()`, `exit_priming()`, `get_fsm_state()`, `perform_step()`, `reset()`, `set_bootstrap_edit_redo_needed()`, and `transition_state()`.

#### 8.13.6.12 `unsigned int jeod::GaussJacksonStateMachine::history_length` [private]

The current history length, the number of history elements that have been accumulated so far.

`trick_units(-)`

Definition at line 233 of file gauss\_jackson\_state\_machine.hh.

Referenced by `exit_bootstrap_edit()`, `exit_bootstrap_step()`, `exit_priming()`, `get_history_length()`, `perform_step()`, and `reset()`.

#### 8.13.6.13 `unsigned int jeod::GaussJacksonStateMachine::history_size` [private]

The current history size, the number of history elements that must be accumulated to transition to the next state.

`trick_units(-)`

Definition at line 227 of file gauss\_jackson\_state\_machine.hh.

Referenced by exit\_bootstrap\_edit(), exit\_bootstrap\_step(), perform\_step(), reset(), and transition\_state().

#### 8.13.6.14 unsigned int jeod::GaussJacksonStateMachine::initial\_order [private]

The order to be used immediately after priming is complete.

This must be an even, non-negative integer.trick\_units(-)

Definition at line 180 of file gauss\_jackson\_state\_machine.hh.

Referenced by configure(), exit\_priming(), reset(), and transition\_state().

#### 8.13.6.15 unsigned int jeod::GaussJacksonStateMachine::max\_correction\_iterations [private]

The maximum number of corrections to be performed.

trick\_units(-)

Definition at line 197 of file gauss\_jackson\_state\_machine.hh.

Referenced by configure(), exit\_bootstrap\_step(), exit\_priming(), and set\_bootstrap\_edit\_redo\_needed().

#### 8.13.6.16 unsigned int jeod::GaussJacksonStateMachine::max\_history\_size [private]

The maximum history size.

This is calculated for the benefit of state integrators.trick\_units(-)

Definition at line 203 of file gauss\_jackson\_state\_machine.hh.

Referenced by configure(), and get\_max\_history\_size().

#### 8.13.6.17 unsigned int jeod::GaussJacksonStateMachine::ndoubling\_steps [private]

The number of times the time step is to be doubled between priming and operational modes.

trick\_units(-)

Definition at line 192 of file gauss\_jackson\_state\_machine.hh.

Referenced by configure().

#### 8.13.6.18 unsigned int jeod::GaussJacksonStateMachine::scale\_factor [private]

A power of two that starts at  $2^{ndoubling\_steps}$  and is halved with each downsample.

When the scale\_factor reaches 1 it is time to transition to operational mode.trick\_units(-)

Definition at line 240 of file gauss\_jackson\_state\_machine.hh.

Referenced by exit\_bootstrap\_edit(), exit\_bootstrap\_step(), and reset().

#### 8.13.6.19 unsigned int jeod::GaussJacksonStateMachine::step\_increment [private]

A power of two that starts at 1 and is doubled with each downsample.

trick\_units(-)

Definition at line 245 of file gauss\_jackson\_state\_machine.hh.

Referenced by exit\_bootstrap\_edit(), exit\_bootstrap\_step(), perform\_step(), and reset().

8.13.6.20 unsigned int jeod::GaussJacksonStateMachine::steps\_since\_reset [private]

The number of steps since the reset, measured in units of priming cycle steps.

The counter is incremented by the step\_increment upon completion of a cycle and is reset to zero on entry into BootstrapEdit.trick\_units(–)

Definition at line 252 of file gauss\_jackson\_state\_machine.hh.

Referenced by exit\_bootstrap\_edit(), perform\_step(), reset(), and transition\_state().

8.13.6.21 unsigned int jeod::GaussJacksonStateMachine::tour\_count [private]

The number of small steps that represent a step to the simulation engine, 2\*\*n\_doubling\_steps.

trick\_units(–)

Definition at line 209 of file gauss\_jackson\_state\_machine.hh.

Referenced by configure(), perform\_step(), and reset().

The documentation for this class was generated from the following files:

- [gauss\\_jackson\\_state\\_machine.hh](#)
- [gauss\\_jackson\\_state\\_machine.cc](#)

## 8.14 jeod::GaussJacksonTwoState Class Reference

Essentially just std::pair<double\*>.

```
#include <gauss_jackson_two_state.hh>
```

### Public Member Functions

- [GaussJacksonTwoState](#) ()  
*Default constructor.*
- [GaussJacksonTwoState](#) (double \*first\_in, double \*second\_in)  
*Non-default constructor.*

### Data Fields

- double \* [first](#)  
*The first element of the pair.*
- double \* [second](#)  
*The second element of the pair.*

### Friends

- class [InputProcessor](#)
- void [init\\_attrjeod\\_\\_GaussJacksonTwoState](#) ()

#### 8.14.1 Detailed Description

Essentially just std::pair<double\*>.

Definition at line 37 of file gauss\_jackson\_two\_state.hh.

## 8.14.2 Constructor & Destructor Documentation

### 8.14.2.1 `jeod::GaussJacksonTwoState::GaussJacksonTwoState ( ) [inline]`

Default constructor.

Definition at line 57 of file `gauss_jackson_two_state.hh`.

### 8.14.2.2 `jeod::GaussJacksonTwoState::GaussJacksonTwoState ( double * first_in, double * second_in ) [inline]`

Non-default constructor.

Parameters

<i>first_in</i>	The first element of the pair.
<i>second_in</i>	The second element of the pair.

Definition at line 68 of file `gauss_jackson_two_state.hh`.

## 8.14.3 Friends And Related Function Documentation

### 8.14.3.1 `void init_attrjeod__GaussJacksonTwoState ( ) [friend]`

### 8.14.3.2 `friend class InputProcessor [friend]`

Definition at line 39 of file `gauss_jackson_two_state.hh`.

## 8.14.4 Field Documentation

### 8.14.4.1 `double* jeod::GaussJacksonTwoState::first`

The first element of the pair.

`trick_units(-)`

Definition at line 46 of file `gauss_jackson_two_state.hh`.

Referenced by `jeod::GaussJacksonIntegratorBase< State, Primer >::advance_predictor_integration_constants()`, `jeod::GaussJacksonIntegratorBase< State, Primer >::allocate_state_contents()`, `jeod::GaussJacksonIntegratorBase< State, Primer >::correct()`, `jeod::GaussJacksonIntegratorBase< State, Primer >::deallocate_state_contents()`, `jeod::GaussJacksonIntegratorBase< State, Primer >::initialize_edit_integration_constants()`, `jeod::GaussJacksonIntegratorBase< State, Primer >::integrate_primer()`, `jeod::GaussJacksonIntegratorBase< State, Primer >::mid_correct()`, `jeod::GaussJacksonIntegratorBase< State, Primer >::predict()`, `jeod::GaussJacksonIntegratorBase< State, Primer >::replicate_state()`, `jeod::GaussJacksonIntegratorBase< State, Primer >::save_epoch_data()`, and `jeod::GaussJacksonIntegratorBase< State, Primer >::swap_state()`.

### 8.14.4.2 `double* jeod::GaussJacksonTwoState::second`

The second element of the pair.

`trick_units(-)`

Definition at line 51 of file `gauss_jackson_two_state.hh`.

Referenced by `jeod::GaussJacksonIntegratorBase< State, Primer >::advance_edit_integration_constants()`, `jeod::GaussJacksonIntegratorBase< State, Primer >::allocate_state_contents()`, `jeod::GaussJacksonIntegratorBase< State, Primer >::correct()`, `jeod::GaussJacksonIntegratorBase< State, Primer >::deallocate_state_contents()`, `jeod::GaussJacksonIntegratorBase< State, Primer >::integrate_primer()`, `jeod::GaussJacksonIntegratorBase< State, Primer >::mid_correct()`, `jeod::GaussJacksonIntegratorBase< State, Primer >::predict()`, `jeod::GaussJacksonIntegratorBase< State, Primer >::replicate_state()`, `jeod::GaussJacksonIntegratorBase< State, Primer`



>::save\_comparison\_data(), jeod::GaussJacksonIntegratorBase< State, Primer >::save\_epoch\_data(), jeod::GaussJacksonIntegratorBase< State, Primer >::swap\_state(), and jeod::GaussJacksonIntegratorBase< State, Primer >::test\_for\_convergence().

The documentation for this class was generated from the following file:

- [gauss\\_jackson\\_two\\_state.hh](#)

## 8.15 jeod::GeneralizedSecondOrderODETechnique Class Reference

Enumerates the integration schemes, generalized Cartesian or Lie group integration, and provides simple utilities that work with this.

```
#include <generalized_second_order_ode_technique.hh>
```

### Public Types

- enum [TechniqueType](#) { [Unspecified](#), [Cartesian](#), [LieGroup](#) }

*Enumerates the types of second order ODE solvers that can be used to integrate a generalized second order ODE.*

### Static Public Member Functions

- static bool [is\\_provided\\_by](#) (const er7\_utils::IntegratorConstructor &generator, [TechniqueType](#) technique)  
*Test whether an integration method provides an integrator for the specified technique.*
- static [TechniqueType](#) [validate\\_technique](#) (const er7\_utils::IntegratorConstructor &generator, [TechniqueType](#) technique, const char \*file, unsigned int line, const char \*requester, const char \*name)  
*Validate the specified technique with respect to the integration method.*

### Private Member Functions

- [GeneralizedSecondOrderODETechnique](#) ()  
*Not implemented.*
- [GeneralizedSecondOrderODETechnique](#) (const [GeneralizedSecondOrderODETechnique](#) &)  
*Not implemented.*
- [~GeneralizedSecondOrderODETechnique](#) ()  
*Not implemented.*
- [GeneralizedSecondOrderODETechnique](#) & operator= (const [GeneralizedSecondOrderODETechnique](#) &)  
*Not implemented.*

### 8.15.1 Detailed Description

Enumerates the integration schemes, generalized Cartesian or Lie group integration, and provides simple utilities that work with this.

Definition at line 51 of file generalized\_second\_order\_ode\_technique.hh.

### 8.15.2 Member Enumeration Documentation

#### 8.15.2.1 enum jeod::GeneralizedSecondOrderODETechnique::TechniqueType

Enumerates the types of second order ODE solvers that can be used to integrate a generalized second order ODE.

## Enumerator

**Unspecified** No technique specified (an error).

**Cartesian** Integrate using a generalized derivative scheme. The integrator treats generalized position as if it lives in some Cartesian space.

**LieGroup** Integrate using a generalized step scheme. The integrator treats generalized position as if it lives in some Lie group.

Definition at line 62 of file generalized\_second\_order\_ode\_technique.hh.

## 8.15.3 Constructor & Destructor Documentation

8.15.3.1 `jeod::GeneralizedSecondOrderODETechnique::GeneralizedSecondOrderODETechnique ( ) [private]`

Not implemented.

8.15.3.2 `jeod::GeneralizedSecondOrderODETechnique::GeneralizedSecondOrderODETechnique ( const GeneralizedSecondOrderODETechnique & ) [private]`

Not implemented.

8.15.3.3 `jeod::GeneralizedSecondOrderODETechnique::~~GeneralizedSecondOrderODETechnique ( ) [private]`

Not implemented.

## 8.15.4 Member Function Documentation

8.15.4.1 `bool jeod::GeneralizedSecondOrderODETechnique::is_provided_by ( const er7_utils::IntegratorConstructor & generator, TechniqueType technique ) [static]`

Test whether an integration method provides an integrator for the specified technique.

### Parameters

in	<i>generator</i>	Integrator constructor for the integration technique.
in	<i>technique</i>	Technique to be queried.

### Returns

True if the constructor can create an integrator for the specified technique, false otherwise.

Definition at line 47 of file generalized\_second\_order\_ode\_technique.cc.

References Cartesian, jeod::IntegrationMessages::invalid\_request, and LieGroup.

Referenced by validate\_technique().

8.15.4.2 `GeneralizedSecondOrderODETechnique& jeod::GeneralizedSecondOrderODETechnique::operator= ( const GeneralizedSecondOrderODETechnique & ) [private]`

Not implemented.

**8.15.4.3 GeneralizedSecondOrderODETechnique::TechniqueType** jeod::GeneralizedSecondOrderODETechnique::validate\_technique ( const er7\_utils::IntegratorConstructor & *generator*, TechniqueType *technique*, const char \* *file*, unsigned int *line*, const char \* *requester*, const char \* *name* ) [static]

Validate the specified technique with respect to the integration method.

Possible outcomes are:

- Failure if the generator doesn't provide either of the generalized second order ODE integrators.
- Switch to plan B if the generator doesn't provide the requested integrator but does provide the alternate technique.
- Nothing happens if the generator does provide the requested integrator.

#### Parameters

in	<i>generator</i>	Integrator constructor for the integration technique.
in	<i>technique</i>	Technique to be queried.
in	<i>file</i>	Typically <b>FILE</b>
in	<i>line</i>	Typically <b>LINE</b>
in	<i>requester</i>	Something to identify the caller.
in	<i>name</i>	The name of the object associated with the caller.

#### Returns

Input technique if supported, alternate if not. The function does not return if neither of the options is supported.

Definition at line 73 of file generalized\_second\_order\_ode\_technique.cc.

References Cartesian, jeod::IntegrationMessages::invalid\_request, is\_provided\_by(), LieGroup, and jeod::IntegrationMessages::unsupported\_option.

The documentation for this class was generated from the following files:

- [generalized\\_second\\_order\\_ode\\_technique.hh](#)
- [generalized\\_second\\_order\\_ode\\_technique.cc](#)

## 8.16 jeod::IntegrationMessages Class Reference

Declares messages associated with the integration test model.

```
#include <integration_messages.hh>
```

#### Static Public Attributes

- static char const \* [unsupported\\_option](#) = "utils/integration/" "unsupported\_option"  
*Issued when some user input is invalid.*
- static char const \* [invalid\\_item](#) = "utils/integration/" "invalid\_item"  
*Issued when an item is somehow invalid; a duplicate entry for example.*
- static char const \* [internal\\_error](#) = "utils/integration/" "internal\_error"  
*Issued when the JEOD programmer messed up.*
- static char const \* [invalid\\_request](#) = "utils/integration/" "invalid\_request"  
*Issued when a non-JEOD programmer messed up.*
- static char const \* [information](#) = "utils/integration/" "information"  
*Issued in non-error messages.*

## Private Member Functions

- [IntegrationMessages](#) (void)  
*Not implemented.*
- [IntegrationMessages](#) (const [IntegrationMessages](#) &)  
*Not implemented.*
- [IntegrationMessages](#) & [operator=](#) (const [IntegrationMessages](#) &)  
*Not implemented.*

## Friends

- class [InputProcessor](#)
- void [init\\_attrjeod\\_\\_IntegrationMessages](#) ()

### 8.16.1 Detailed Description

Declares messages associated with the integration test model.

Definition at line 48 of file `integration_messages.hh`.

### 8.16.2 Constructor & Destructor Documentation

8.16.2.1 `jeod::IntegrationMessages::IntegrationMessages ( void )` `[private]`

Not implemented.

8.16.2.2 `jeod::IntegrationMessages::IntegrationMessages ( const IntegrationMessages & )` `[private]`

Not implemented.

### 8.16.3 Member Function Documentation

8.16.3.1 `IntegrationMessages& jeod::IntegrationMessages::operator= ( const IntegrationMessages & )`  
`[private]`

Not implemented.

### 8.16.4 Friends And Related Function Documentation

8.16.4.1 `void init_attrjeod__IntegrationMessages ( )` `[friend]`

8.16.4.2 `friend class InputProcessor` `[friend]`

Definition at line 49 of file `integration_messages.hh`.

### 8.16.5 Field Documentation

8.16.5.1 `char const * jeod::IntegrationMessages::information = "utils/integration/" "information"` `[static]`

Issued in non-error messages.

`trick_units(-)`

Definition at line 79 of file integration\_messages.hh.

**8.16.5.2** `char const * jeod::IntegrationMessages::internal_error = "utils/integration/" "internal_error" [static]`

Issued when the JEOD programmer messed up.

trick\_units(-)

Definition at line 69 of file integration\_messages.hh.

**8.16.5.3** `char const * jeod::IntegrationMessages::invalid_item = "utils/integration/" "invalid_item" [static]`

Issued when an item is somehow invalid; a duplicate entry for example.

trick\_units(-)

Definition at line 64 of file integration\_messages.hh.

Referenced by `jeod::RestartableSO3SecondOrderODEIntegrator::create_integrator()`, and `jeod::JeodIntegrationGroup::remove_integrable_object()`.

**8.16.5.4** `char const * jeod::IntegrationMessages::invalid_request = "utils/integration/" "invalid_request" [static]`

Issued when a non-JEOD programmer messed up.

trick\_units(-)

Definition at line 74 of file integration\_messages.hh.

Referenced by `jeod::JeodIntegrationTime::add_time_change_subscriber()`, `jeod::RestartableStateIntegrator<er7_utils::SecondOrderODEIntegrator >::create_integrator()`, `jeod::GeneralizedSecondOrderODETechnique::is_provided_by()`, `jeod::JeodIntegrationTime::remove_time_change_subscriber()`, and `jeod::GeneralizedSecondOrderODETechnique::validate_technique()`.

**8.16.5.5** `char const * jeod::IntegrationMessages::unsupported_option = "utils/integration/" "unsupported_option" [static]`

Issued when some user input is invalid.

trick\_units(-)

Definition at line 59 of file integration\_messages.hh.

Referenced by `jeod::GeneralizedSecondOrderODETechnique::validate_technique()`.

The documentation for this class was generated from the following files:


- [integration\\_messages.hh](#)
- [integration\\_messages.cc](#)

## 8.17 jeod::JeodIntegrationGroup Class Reference

A [JeodIntegrationGroup](#) integrates the state of a set of objects over time.

```
#include <jeod_integration_group.hh>
```

Inheritance diagram for `jeod::JeodIntegrationGroup`:

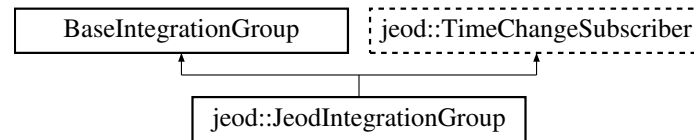

## Public Member Functions

- [JeodIntegrationGroup](#) ()  
*JeodIntegrationGroup* default constructor, needed for checkpoint/restart, and to support derived classes' default constructors.
- [JeodIntegrationGroup](#) ([JeodIntegrationGroupOwner](#) &owner, [er7\\_utils::IntegratorConstructor](#) &integ\_cotr, [JeodIntegratorInterface](#) &integ\_inter, [JeodIntegrationTime](#) &time\_mngr)  
*JeodIntegrationGroup* non-default constructor.
- virtual [~JeodIntegrationGroup](#) ()  
*JeodIntegrationGroup* destructor.
- bool [need\\_first\\_step\\_derivatives](#) (void) const  
Indicate whether derivatives need to be calculated on the initial step of an integration cycle.
- void [update\\_from\\_owner](#) (void)  
Update the group via its owner.
- bool [merge\\_integrator\\_result](#) (const [er7\\_utils::IntegratorResult](#) &new\_result, [er7\\_utils::IntegratorResult](#) &merged\_result) const  
Merge an *IntegratorResult* into another.
- virtual void [respond\\_to\\_time\\_change](#) ()  
Respond to a change in the nature of time.
- virtual void [initialize\\_group](#) ()  
Initialize the integration group.
- virtual void [reset\\_body\\_integrators](#) (void)  
Reset the integrators for the integrable objects managed by this group.
- virtual [er7\\_utils::IntegratorResult](#) [integrate\\_bodies](#) (double cycle\_dyndt, unsigned int target\_stage)  
Integrate the states of the integrable objects managed by this group.
- virtual void [add\\_integrable\\_object](#) ([er7\\_utils::IntegrableObject](#) &integrable\_object)  
Add an integrable object to the vector of such.
- virtual void [remove\\_integrable\\_object](#) ([er7\\_utils::IntegrableObject](#) &integrable\_object)  
Remove an integrable object from the vector of such.

## Static Public Member Functions

- static void [register\\_classes](#) ()  
Register classes associated with integration.

## Protected Member Functions

- template<typename T >  
void [reset\\_container](#) (const T &container)  
Issue a reset to each member of a container.
- template<typename T >  
[er7\\_utils::IntegratorResult](#) [integrate\\_container](#) (double dyn\_dt, unsigned int target\_stage, const T &container)  
Integrate each member of a collection.

## Protected Attributes

- [JeodIntegrationGroupOwner](#) \*const [group\\_owner](#)  
*The object that owns this integration group, typically by containment.*
- [er7\\_utils::IntegratorResultMergerContainer](#) [integ\\_merger](#)  
*The object that merges results from multiple integrators.*
- [JeodIntegratorInterface](#) \*const [jeod\\_integ\\_interface](#)  
*The interface between the integration module and the simulation engine's integration structure.*
- [JeodIntegrationTime](#) \*const [jeod\\_time\\_manager](#)  
*The interface between the integration module and the object that represents time.*
- [JeodPointerVector](#)  
< [er7\\_utils::IntegrableObject](#) >  
::type [integrable\\_objects](#)  
*The objects whose states are integrated by this integration group.*

## Private Member Functions

- [JeodIntegrationGroup](#) (const [JeodIntegrationGroup](#) &)  
*Not implemented.*
- [JeodIntegrationGroup](#) & [operator=](#) (const [JeodIntegrationGroup](#) &)  
*Not implemented.*

## Friends

- class [InputProcessor](#)
- void [init\\_attrjeod\\_\\_JeodIntegrationGroup](#) ()

### 8.17.1 Detailed Description

A [JeodIntegrationGroup](#) integrates the state of a set of objects over time.

This class is designed for extensibility. Authors of derived classes should follow the extension notes in the source file.

Definition at line 86 of file [jeod\\_integration\\_group.hh](#).

### 8.17.2 Constructor & Destructor Documentation

#### 8.17.2.1 [jeod::JeodIntegrationGroup::JeodIntegrationGroup](#) ( )

[JeodIntegrationGroup](#) default constructor, needed for checkpoint/restart, and to support derived classes' default constructors.

Definition at line 64 of file [jeod\\_integration\\_group.cc](#).

References [integrable\\_objects](#), and [register\\_classes\(\)](#).

#### 8.17.2.2 [jeod::JeodIntegrationGroup::JeodIntegrationGroup](#) ( [JeodIntegrationGroupOwner](#) & *owner*, [er7\\_utils::IntegratorConstructor](#) & *integ\_cotr*, [JeodIntegratorInterface](#) & *integ\_inter*, [JeodIntegrationTime](#) & *time\_mgr* )

[JeodIntegrationGroup](#) non-default constructor.

**Parameters**

in	<i>owner</i>	The object that contains this group.
in	<i>integ_cotr</i>	Integrator constructor
in	<i>integ_inter</i>	Integrator interface
in	<i>time_mngr</i>	Time manager

Definition at line 80 of file `jeod_integration_group.cc`.

References `jeod::JeodIntegrationTime::add_time_change_subscriber()`, `integ_merger`, `integrable_objects`, and `register_classes()`.

#### 8.17.2.3 `jeod::JeodIntegrationGroup::~JeodIntegrationGroup ( )` [virtual]

[JeodIntegrationGroup](#) destructor.

Definition at line 103 of file `jeod_integration_group.cc`.

References `integrable_objects`, `jeod_time_manager`, and `jeod::JeodIntegrationTime::remove_time_change_subscriber()`.

#### 8.17.2.4 `jeod::JeodIntegrationGroup::JeodIntegrationGroup ( const JeodIntegrationGroup & )` [private]

Not implemented.

### 8.17.3 Member Function Documentation

#### 8.17.3.1 `void jeod::JeodIntegrationGroup::add_integrable_object ( er7_utils::IntegrableObject & integrable_object )` [virtual]

Add an integrable object to the vector of such.

**Parameters**

in	<i>integrable_object</i>	Object to be added.
----	--------------------------	---------------------

Definition at line 115 of file `jeod_integration_group.cc`.

References `integrable_objects`.

#### 8.17.3.2 `void jeod::JeodIntegrationGroup::initialize_group ( )` [virtual]

Initialize the integration group.

Some integration techniques are configurable by user input, and thus the creation of the controls and integrators needs to be delayed a bit.

Definition at line 177 of file `jeod_integration_group.cc`.

References `integrable_objects`.

#### 8.17.3.3 `virtual er7_utils::IntegratorResult jeod::JeodIntegrationGroup::integrate_bodies ( double cycle_dyndt, unsigned int target_stage )` [inline],[virtual]

Integrate the states of the integrable objects managed by this group.

This function should only be called by `IntegrationControls::integrate` or by an override of that function. Derived classes are free to override this default implementation. However, those derived class overrides either must call this method to integrate the states of the registered integrable bodies or must somehow take on the burden of integrating those states.



## Parameters

in	<i>cycle_dyndt</i>	Dynamic time step, in dynamic time seconds.
in	<i>target_stage</i>	The stage of the integration process that the integrator should try to attain.

## Returns

The status (time advance, pass/fail status) of the integration.

Definition at line 212 of file jeod\_integration\_group.hh.

References integrable\_objects, and integrate\_container().

**8.17.3.4** `template<typename T > er7_utils::IntegratorResult jeod::JeodIntegrationGroup::integrate_container ( double dyn_dt, unsigned int target_stage, const T & container ) [inline], [protected]`

Integrate each member of a collection.

## Template Parameters

<i>T</i>	The container type.
----------	---------------------

## Parameters

in	<i>dyn_dt</i>	Dynamic time step, in dynamic time seconds.
in	<i>target_stage</i>	The stage of the integration process that the integrator should try to attain.
in, out	<i>container</i>	The container to be integrated.

Definition at line 267 of file jeod\_integration\_group.hh.

References integ\_merger.

Referenced by integrate\_bodies().

**8.17.3.5** `bool jeod::JeodIntegrationGroup::merge_integrator_result ( const er7_utils::IntegratorResult & new_result, er7_utils::IntegratorResult & merged_result ) const [inline]`

Merge an IntegratorResult into another.

## Returns

True if merger was successful, false if some error occurred.

## Parameters

in	<i>new_result</i>	Size of the generalized position vector
in, out	<i>merged_result</i>	Size of the generalized position vector

Definition at line 157 of file jeod\_integration\_group.hh.

References integ\_merger.

**8.17.3.6** `bool jeod::JeodIntegrationGroup::need_first_step_derivatives ( void ) const [inline]`

Indicate whether derivatives need to be calculated on the initial step of an integration cycle.

## Returns

Desired flag.

Definition at line 138 of file jeod\_integration\_group.hh.

**8.17.3.7** `JeodIntegrationGroup& jeod::JeodIntegrationGroup::operator= ( const JeodIntegrationGroup & )`  
`[private]`

Not implemented.

**8.17.3.8** `void jeod::JeodIntegrationGroup::register_classes ( ) [static]`

Register classes associated with integration.

This is a static method, and is best called prior to initialization time.

Definition at line 54 of file `jeod_integration_group.cc`.

Referenced by `JeodIntegrationGroup()`.

**8.17.3.9** `void jeod::JeodIntegrationGroup::remove_integrable_object ( er7_utils::IntegrableObject & integrable_object )`  
`[virtual]`

Remove an integrable object from the vector of such.

#### Parameters

<code>in</code>	<code><i>integrable_object</i></code>	Object to be removed.
-----------------	---------------------------------------	-----------------------

Definition at line 146 of file `jeod_integration_group.cc`.

References `integrable_objects`, and `jeod::IntegrationMessages::invalid_item`.

**8.17.3.10** `virtual void jeod::JeodIntegrationGroup::reset_body_integrators ( void ) [inline], [virtual]`

Reset the integrators for the integrable objects managed by this group.

Resets can occur when time changes behavior (call is internal to the integration process) or when some external event would render an integrator's history invalid (call comes from outside). When either happens, integrators that depend on history need to reset their internal state to indicate that the saved data are invalid.)

Definition at line 194 of file `jeod_integration_group.hh`.

References `integrable_objects`, and `reset_container()`.

**8.17.3.11** `template<typename T> void jeod::JeodIntegrationGroup::reset_container ( const T & container ) [inline],`  
`[protected]`

Issue a reset to each member of a container.

#### Template Parameters

<code>T</code>	The container type.
----------------	---------------------

#### Parameters

<code>in, out</code>	<code><i>container</i></code>	The container to be reset.
----------------------	-------------------------------	----------------------------

Definition at line 246 of file `jeod_integration_group.hh`.

Referenced by `reset_body_integrators()`.

**8.17.3.12** `virtual void jeod::JeodIntegrationGroup::respond_to_time_change ( ) [inline], [virtual]`

Respond to a change in the nature of time.

Implements [jeod::TimeChangeSubscriber](#).

Definition at line 172 of file jeod\_integration\_group.hh.

**8.17.3.13** `void jeod::JeodIntegrationGroup::update_from_owner ( void ) [inline]`

Update the group via its owner.

Definition at line 146 of file jeod\_integration\_group.hh.

References `group_owner`, and `jeod::JeodIntegrationGroupOwner::update_integration_group()`.

## 8.17.4 Friends And Related Function Documentation

**8.17.4.1** `void init_attrjeod__JeodIntegrationGroup ( ) [friend]`

**8.17.4.2** `friend class InputProcessor [friend]`

Definition at line 90 of file jeod\_integration\_group.hh.

## 8.17.5 Field Documentation

**8.17.5.1** `JeodIntegrationGroupOwner* const jeod::JeodIntegrationGroup::group_owner [protected]`

The object that owns this integration group, typically by containment.

`trick_units(-)`

Definition at line 295 of file jeod\_integration\_group.hh.

Referenced by `update_from_owner()`.

**8.17.5.2** `er7_utils::IntegratorResultMergerContainer jeod::JeodIntegrationGroup::integ_merger [protected]`

The object that merges results from multiple integrators.

`trick_units(-)`

Definition at line 301 of file jeod\_integration\_group.hh.

Referenced by `integrate_container()`, `JeodIntegrationGroup()`, and `merge_integrator_result()`.

**8.17.5.3** `JeodPointerVector<er7_utils::IntegrableObject>::type jeod::JeodIntegrationGroup::integrable_objects [protected]`

The objects whose states are integrated by this integration group.

`trick_io(**)`

Definition at line 319 of file jeod\_integration\_group.hh.

Referenced by `add_integrable_object()`, `initialize_group()`, `integrate_bodies()`, `JeodIntegrationGroup()`, `remove_integrable_object()`, `reset_body_integrators()`, and `~JeodIntegrationGroup()`.

**8.17.5.4** `JeodIntegratorInterface* const jeod::JeodIntegrationGroup::jeod_integ_interface [protected]`

The interface between the integration module and the simulation engine's integration structure.

`trick_units(-)`

Definition at line 307 of file jeod\_integration\_group.hh.

#### 8.17.5.5 `JeodIntegrationTime*` `const jeod::JeodIntegrationGroup::jeod_time_manager` `[protected]`

The interface between the integration module and the object that represents time.

`trick_units(-)`

Definition at line 313 of file `jeod_integration_group.hh`.

Referenced by `~JeodIntegrationGroup()`.

The documentation for this class was generated from the following files:

- [jeod\\_integration\\_group.hh](#)
- [jeod\\_integration\\_group.cc](#)

## 8.18 `jeod::JeodIntegrationGroupOwner` Class Reference

The abstract class `IntegrationGroupOwner` contains an `IntegrationGroup`.

```
#include <jeod_integration_group.hh>
```

### Public Member Functions

- virtual [~JeodIntegrationGroupOwner](#) ()  
*Destructor.*
- virtual void [update\\_integration\\_group](#) ([JeodIntegrationGroup](#) &group)=0  
*Somehow update the specified integration group.*

#### 8.18.1 Detailed Description

The abstract class `IntegrationGroupOwner` contains an `IntegrationGroup`.

This simple interface class has no data members.

Definition at line 64 of file `jeod_integration_group.hh`.

#### 8.18.2 Constructor & Destructor Documentation

##### 8.18.2.1 `virtual jeod::JeodIntegrationGroupOwner::~~JeodIntegrationGroupOwner ( )` `[inline]`, `[virtual]`

Destructor.

Definition at line 70 of file `jeod_integration_group.hh`.

#### 8.18.3 Member Function Documentation

##### 8.18.3.1 `virtual void jeod::JeodIntegrationGroupOwner::update_integration_group ( JeodIntegrationGroup & group )` `[pure virtual]`

Somehow update the specified integration group.

**Parameters**

---

<code>in, out</code>	<code>group</code>	Integration group to be updated.
----------------------	--------------------	----------------------------------

Referenced by `jeod::JeodIntegrationGroup::update_from_owner()`.

The documentation for this class was generated from the following file:


- [jeod\\_integration\\_group.hh](#)

## 8.19 jeod::JeodIntegrationTime Class Reference

The class [JeodIntegrationTime](#) adds the concepts of timestamping and notification of changes in the nature of time to the ER7 numerical utilities `TimeInterface` class.

```
#include <jeod_integration_time.hh>
```

Inheritance diagram for `jeod::JeodIntegrationTime`:

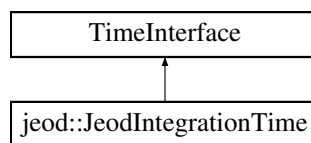

### Public Member Functions

- [JeodIntegrationTime](#) ()  
*JeodIntegrationTime constructor.*
- virtual [~JeodIntegrationTime](#) ()  
*JeodIntegrationTime destructor.*
- virtual double [get\\_timestamp\\_time](#) () const =0  
*Get the time used to timestamp some object.*
- void [add\\_time\\_change\\_subscriber](#) ([TimeChangeSubscriber](#) &subscriber)  
*Add a time change subscriber.*
- void [remove\\_time\\_change\\_subscriber](#) ([TimeChangeSubscriber](#) &subscriber)  
*Remove a time change subscriber.*

### Protected Member Functions

- void [notify\\_time\\_change\\_subscribers](#) ()  
*Notify subscribers that the nature of time has changed.*

### Private Member Functions

- [JeodIntegrationTime](#) (const [JeodIntegrationTime](#) &)  
*Not implemented.*
- [JeodIntegrationTime](#) & [operator=](#) (const [JeodIntegrationTime](#) &)  
*Not implemented.*

### Private Attributes

- `JeodPointerVector`  
`< TimeChangeSubscriber >::type` [time\\_change\\_subscribers](#)  
*List of pointers to objects that wish to be notified of a change in the nature of time.*

## Friends

- class [InputProcessor](#)
- void [init\\_attrjeod\\_\\_JeodIntegrationTime](#) ()

### 8.19.1 Detailed Description

The class [JeodIntegrationTime](#) adds the concepts of timestamping and notification of changes in the nature of time to the ER7 numerical utilities TimeInterface class.

Definition at line 50 of file `jeod_integration_time.hh`.

### 8.19.2 Constructor & Destructor Documentation

#### 8.19.2.1 `jeod::JeodIntegrationTime::JeodIntegrationTime ( )`

[JeodIntegrationTime](#) constructor.

Definition at line 47 of file `jeod_integration_time.cc`.

References `time_change_subscribers`.

#### 8.19.2.2 `jeod::JeodIntegrationTime::~JeodIntegrationTime ( ) [virtual]`

[JeodIntegrationTime](#) destructor.

Definition at line 62 of file `jeod_integration_time.cc`.

References `time_change_subscribers`.

#### 8.19.2.3 `jeod::JeodIntegrationTime::JeodIntegrationTime ( const JeodIntegrationTime & ) [private]`

Not implemented.

### 8.19.3 Member Function Documentation

#### 8.19.3.1 `void jeod::JeodIntegrationTime::add_time_change_subscriber ( TimeChangeSubscriber & subscriber )`

Add a time change subscriber.

Parameters

<i>subscriber</i>	Object to be added to list of subscribers.
-------------------	--

Definition at line 75 of file `jeod_integration_time.cc`.

References `jeod::IntegrationMessages::invalid_request`, and `time_change_subscribers`.

Referenced by `jeod::JeodIntegrationGroup::JeodIntegrationGroup()`.

#### 8.19.3.2 `virtual double jeod::JeodIntegrationTime::get_timestamp_time ( ) const [pure virtual]`

Get the time used to timestamp some object.

#### 8.19.3.3 `void jeod::JeodIntegrationTime::notify_time_change_subscribers ( ) [protected]`

Notify subscribers that the nature of time has changed.

Definition at line 123 of file jeod\_integration\_time.cc.

References `time_change_subscribers`.

**8.19.3.4** `JeodIntegrationTime& jeod::JeodIntegrationTime::operator= ( const JeodIntegrationTime & )`  
`[private]`

Not implemented.

**8.19.3.5** `void jeod::JeodIntegrationTime::remove_time_change_subscriber ( TimeChangeSubscriber & subscriber )`

Remove a time change subscriber.

Parameters

<code>subscriber</code>	Object to be removed from list of subscribers.
-------------------------	--

Definition at line 99 of file jeod\_integration\_time.cc.

References `jeod::IntegrationMessages::invalid_request`, and `time_change_subscribers`.

Referenced by `jeod::JeodIntegrationGroup::~JeodIntegrationGroup()`.

## 8.19.4 Friends And Related Function Documentation

**8.19.4.1** `void init_attrjeod__JeodIntegrationTime ( )` `[friend]`

**8.19.4.2** `friend class InputProcessor` `[friend]`

Definition at line 52 of file jeod\_integration\_time.hh.

## 8.19.5 Field Documentation

**8.19.5.1** `JeodPointerVector<TimeChangeSubscriber>::type jeod::JeodIntegrationTime::time_change_subscribers`  
`[private]`

List of pointers to objects that wish to be notified of a change in the nature of time.

`trick_io(**)`

Definition at line 97 of file jeod\_integration\_time.hh.

Referenced by `add_time_change_subscriber()`, `JeodIntegrationTime()`, `notify_time_change_subscribers()`, `remove_time_change_subscriber()`, and `~JeodIntegrationTime()`.

The documentation for this class was generated from the following files:

- [jeod\\_integration\\_time.hh](#)
- [jeod\\_integration\\_time.cc](#)

## 8.20 jeod::LsodeControlDataInterface Class Reference

Specifies controls for an LSODE integrator.

```
#include <lsode_control_data_interface.hh>
```

## Public Types

- enum `IntegrationMethod` { `ImplicitAdamsNonStiff` = 1, `ImplicitBackDiffStiff` = 2 }
- enum `CorrectorMethod` {  
`FunctionalIteration` = 0, `NewtonIterUserJac` = 1, `NewtonIterInternalJac` = 2, `JacobiNewtonInternalJac` = 3,  
`NewtonIterUserBandJac` = 4, `NewtonIterInternalBandJac` = 5 }
- enum `ErrorControlIndicator` { `CommonAbsCommonRel` = 1, `SpecificAbsCommonRel` = 2, `CommonAbs-SpecificRel` = 3, `SpecificAbsSpecificRel` = 4 }

## Public Member Functions

- virtual `~LsodeControlDataInterface` (void)  
*Destructor.*
- `LsodeControlDataInterface` (void)  
*constructor*
- `LsodeControlDataInterface` (const `LsodeControlDataInterface` &src)  
*copy constructor*
- void `check_interface_data` ()  
*verifies that the input data has legal values.*
- void `set_rel_tol` (int index, double value)  
*set values from external*
- void `set_abs_tol` (int index, double value)
- void `allocate_arrays` ()  
*allocates space for vector-populated data to allow for restart*
- void `destroy_allocated_arrays` ()  
*De-allocates allocated array.*
- bool `is_corrector_method_functional_iteration` ()  
*Tests whether corrector is functional iteration.*

## Data Fields

- `ErrorControlIndicator error_control_indicator`  
*Was ITOL.*
- `std::vector< double > abs_tolerance_error_control_vec`  
*Temporary pre-initialized place to store loaded error values.*
- `std::vector< double > rel_tolerance_error_control_vec`  
*Temporary pre-initialized place to store loaded error values.*
- bool `error_control_vector_copied_over`
- unsigned int `num_odes_at_alloc`
- double \* `abs_tolerance_error_control`  
*Was ATOL.*
- double \* `rel_tolerance_error_control`  
*Was RTOL.*
- unsigned int `num_odes`  
*Was N, in DLS001 common block.*
- `IntegrationMethod integration_method`  
*Was METH, in DLS001 common block.*
- `CorrectorMethod corrector_method`  
*Was MITER, in DLS001 common block.*
- double `min_step_size`  
*was HMIN, in DLS001 common block.*



- double [max\\_step\\_size](#)  
*was HMAX.*
- double [initial\\_step\\_size](#)  
*Was H0.*
- unsigned int [max\\_order](#)  
*Was MAXORD, in DLS001 common block.*
- unsigned int [max\\_num\\_small\\_step\\_warnings](#)  
*Was MXHNLI, in DLS001 common block.*
- unsigned int [max\\_correction\\_iters](#)  
*Was MAXCOR, in DLS001 common block Maximum number of corrector-iterations to attempt on any step.*
- unsigned int [max\\_num\\_steps\\_jacobian](#)  
*Was MSBP, in DLS001 common block.*
- unsigned int [max\\_num\\_conv\\_failure](#)  
*Was MXNCF, in DLS001 common block.*
- unsigned int [max\\_num\\_steps](#)  
*Was MXSTEP, in DLS001 common block.*

### Private Member Functions

- [LsodeControlDataInterface](#) & [operator=](#) (const [LsodeControlDataInterface](#) &src)

### Friends

- class [InputProcessor](#)
- void [init\\_attrjeod\\_\\_LsodeControlDataInterface](#) ()

## 8.20.1 Detailed Description

Specifies controls for an LSODE integrator.

Definition at line 48 of file `lsode_control_data_interface.hh`.

## 8.20.2 Member Enumeration Documentation

### 8.20.2.1 enum `jeod::LsodeControlDataInterface::CorrectorMethod`

Enumerator

- FunctionalIteration*** Functional iteration.
- NewtonIterUserJac*** Modified Newton iteration with.
- NewtonIterInternalJac*** Modified Newton iteration with internally.
- JacobiNewtonInternalJac*** Modified Jacobi-Newton iteration with.
- NewtonIterUserBandJac*** Modified Newton iteration with.
- NewtonIterInternalBandJac*** Modified Newton iteration with internally.

Definition at line 68 of file `lsode_control_data_interface.hh`.

### 8.20.2.2 enum jeod::LsodeControlDataInterface::ErrorControlIndicator

Enumerator

**CommonAbsCommonRel** Use the same absolute and relative values.

**SpecificAbsCommonRel** Use separate absolute values for each.

**CommonAbsSpecificRel** Use a common absolute values and separate.

**SpecificAbsSpecificRel** Use separate absolute and relative values.

Definition at line 87 of file lsode\_control\_data\_interface.hh.

### 8.20.2.3 enum jeod::LsodeControlDataInterface::IntegrationMethod

Enumerator

**ImplicitAdamsNonStiff** Variable-step, variable-order, implicit Adams.

**ImplicitBackDiffStiff** Variable-step, variable-order, implicit.

Definition at line 57 of file lsode\_control\_data\_interface.hh.

## 8.20.3 Constructor & Destructor Documentation

### 8.20.3.1 virtual jeod::LsodeControlDataInterface::~~LsodeControlDataInterface ( void ) [inline], [virtual]

Destructor.

Definition at line 102 of file lsode\_control\_data\_interface.hh.

References `destroy_allocated_arrays()`.

## 8.20.4 Member Function Documentation

### 8.20.4.1 bool jeod::LsodeControlDataInterface::is\_corrector\_method\_functional\_iteration ( ) [inline]

Tests whether corrector is functional iteration.

Definition at line 119 of file lsode\_control\_data\_interface.hh.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::integrator_core()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_corrector_failed_part1()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_corrector_failed_part2()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_corrector_iteration()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_fail_reset_order_1_part2()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_predict()`, and `jeod::LsodeFirstOrderODEIntegrator::manager_initialize_calculation_part1()`.

### 8.20.4.2 LsodeControlDataInterface& jeod::LsodeControlDataInterface::operator= ( const LsodeControlDataInterface & src ) [private]

## 8.20.5 Friends And Related Function Documentation

### 8.20.5.1 void init\_attrjeod\_LsodeControlDataInterface ( ) [friend]

### 8.20.5.2 friend class InputProcessor [friend]

Definition at line 50 of file lsode\_control\_data\_interface.hh.

### 8.20.6 Field Documentation

#### 8.20.6.1 `double* jeod::LsodeControlDataInterface::abs_tolerance_error_control`

Was ATOL.

Vector of the absolute error tolerances.`trick_units(-)`

Definition at line 143 of file `lsode_control_data_interface.hh`.

Referenced by `allocate_arrays()`, `destroy_allocated_arrays()`, `jeod::LsodeFirstOrderODEIntegrator::load_ew_values()`, `jeod::LsodeFirstOrderODEIntegrator::manager_initialize_calculation_part2()`, and `set_abs_tol()`.

#### 8.20.6.2 `std::vector<double> jeod::LsodeControlDataInterface::abs_tolerance_error_control_vec`

Temporary pre-initialized place to store loaded error values.

`trick_units(-)`

Definition at line 131 of file `lsode_control_data_interface.hh`.

Referenced by `allocate_arrays()`, `check_interface_data()`, `LsodeControlDataInterface()`, and `set_abs_tol()`.

#### 8.20.6.3 `CorrectorMethod jeod::LsodeControlDataInterface::corrector_method`

Was MITER, in DLS001 common block.

`trick_units(-)`

Definition at line 166 of file `lsode_control_data_interface.hh`.

Referenced by `check_interface_data()`, `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_init()`, `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_loop()`, `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_wrap_up()`, `jeod::LsodeFirstOrderODEIntegrator::linear_chord_iteration()`, and `jeod::LsodeFirstOrderODEIntegrator::manager_initialize_calculation_part1()`.

#### 8.20.6.4 `ErrorControlIndicator jeod::LsodeControlDataInterface::error_control_indicator`

Was ITOL.

`trick_units(-)`

Definition at line 120 of file `lsode_control_data_interface.hh`.

Referenced by `check_interface_data()`, `jeod::LsodeFirstOrderODEIntegrator::load_ew_values()`, and `jeod::LsodeFirstOrderODEIntegrator::manager_initialize_calculation_part2()`.

#### 8.20.6.5 `bool jeod::LsodeControlDataInterface::error_control_vector_copied_over`

Definition at line 138 of file `lsode_control_data_interface.hh`.

Referenced by `allocate_arrays()`, `check_interface_data()`, `destroy_allocated_arrays()`, `set_abs_tol()`, and `set_rel_tol()`.

#### 8.20.6.6 `double jeod::LsodeControlDataInterface::initial_step_size`

Was H0.

Initial guess at the step size. May be input, will be calculated if not. Note - this is the actual step, not the magnitude of the step. whereas `max_step_size` and `min_step_size` are magnitudes.`trick_units(-)`

Definition at line 186 of file `lsode_control_data_interface.hh`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::manager_initialize_calculation_part2()`, `jeod::LsodeFirstOrderODEIntegrator::process_entry_point_cycle_start()`, and `jeod::LsodeFirstOrderODEIntegrator::reset_integrator()`.

#### 8.20.6.7 `IntegrationMethod jeod::LsodeControlDataInterface::integration_method`

Was METH, in DLS001 common block.

`trick_units(-)`

Definition at line 161 of file `lsode_control_data_interface.hh`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::calculate_integration_coefficients()`, `check_interface_data()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_core()`, and `jeod::LsodeFirstOrderODEIntegrator::update_control_data()`.

#### 8.20.6.8 `unsigned int jeod::LsodeControlDataInterface::max_correction_iters`

Was MAXCOR, in DLS001 common block Maximum number of corrector-iterations to attempt on any step.

`trick_units(-)`

Definition at line 203 of file `lsode_control_data_interface.hh`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::integrator_corrector_iteration()`.

#### 8.20.6.9 `unsigned int jeod::LsodeControlDataInterface::max_num_conv_failure`

Was MXNCF, in DLS001 common block.

Maximum number of convergence failures on one step.`trick_units(-)`

Definition at line 213 of file `lsode_control_data_interface.hh`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::integrator_corrector_failed_part2()`.

#### 8.20.6.10 `unsigned int jeod::LsodeControlDataInterface::max_num_small_step_warnings`

Was MXHNILI, in DLS001 common block.

Populated from IWORK[7] Maximum number of small-step warnings that may be printed.`trick_units(-)`

Definition at line 198 of file `lsode_control_data_interface.hh`.

Referenced by `check_interface_data()`, and `jeod::LsodeFirstOrderODEIntegrator::manager_integration_loop_part2()`.

#### 8.20.6.11 `unsigned int jeod::LsodeControlDataInterface::max_num_steps`

Was MXSTEP, in DLS001 common block.

Maximum number of steps that the integrator may take. Default = 500.`trick_units(-)`

Definition at line 218 of file `lsode_control_data_interface.hh`.

Referenced by `check_interface_data()`, and `jeod::LsodeFirstOrderODEIntegrator::manager_integration_loop_part1()`.

#### 8.20.6.12 `unsigned int jeod::LsodeControlDataInterface::max_num_steps_jacobian`

Was MSBP, in DLS001 common block.

Populated from IWORK[6] Maximum number of steps for which the same Jacobian can be used. `trick_units(-)`

Definition at line 208 of file `lsode_control_data_interface.hh`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::integrator_predict()`.

#### 8.20.6.13 unsigned int jeod::LsodeControlDataInterface::max\_order

Was MAXORD, in DLS001 common block.

Populated from IWORK[5] Maximum order allowable. `trick_units(-)`

Definition at line 193 of file `lsode_control_data_interface.hh`.

Referenced by `check_interface_data()`, and `jeod::LsodeFirstOrderODEIntegrator::update_control_data()`.

#### 8.20.6.14 double jeod::LsodeControlDataInterface::max\_step\_size

was HMAX.

RWORK[6] Maximum absolute value of step size allowable. Default to 0.0, interpreted as infinity. user-specified otherwise. `trick_units(-)`

Definition at line 179 of file `lsode_control_data_interface.hh`.

Referenced by `check_interface_data()`, and `jeod::LsodeFirstOrderODEIntegrator::update_control_data()`.

#### 8.20.6.15 double jeod::LsodeControlDataInterface::min\_step\_size

was HMIN, in DLS001 common block.

Minimum absolute value of step size allowable. Default to 0.0, user-specified otherwise. `trick_units(-)`

Definition at line 173 of file `lsode_control_data_interface.hh`.

Referenced by `check_interface_data()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_core()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_corrector_failed_part2()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_error_test_failed()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_fail_reset_order_1_part1()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_reset_method_coeffs()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_set_new_order()`, and `jeod::LsodeFirstOrderODEIntegrator::manager_integration_loop_part3()`.

#### 8.20.6.16 unsigned int jeod::LsodeControlDataInterface::num\_odes

Was N, in DLS001 common block.

Number of ODEs to be solved at next step. In this implementation, `num_odes` = `num_equations`. In original implementation, `num_odes` (N) was set to NEQ at the start, the some subset could be identified, NYH and solved for. `trick_units(-)`

Definition at line 156 of file `lsode_control_data_interface.hh`.

Referenced by `allocate_arrays()`, `check_interface_data()`, `jeod::LsodeFirstOrderODEIntegrator::gauss_elim_factor()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_compute_new_order()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_compute_new_order_prep()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_corrector_converged()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_corrector_iteration()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_fail_reset_order_1_part1()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_fail_reset_order_1_part2()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_reset_iteration_loop_part1()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_reset_iteration_loop_part2()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_reset_yh()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_wrapup()`, `jeod::LsodeFirstOrderODEIntegrator::interpolate_y()`, `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_init()`, `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_loop()`, `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_wrap_up()`, `jeod::LsodeFirstOrderODEIntegrator::linear_chord_iteration()`, `jeod::LsodeFirstOrderODEIntegrator::linear_solver()`, `jeod::LsodeFirstOrder`

ODEIntegrator::load\_derivatives(), jeod::LsodeFirstOrderODEIntegrator::load\_ew\_values(), jeod::LsodeFirstOrderODEIntegrator::LsodeFirstOrderODEIntegrator(), jeod::LsodeFirstOrderODEIntegrator::magnitude\_of\_weighted\_array(), jeod::LsodeFirstOrderODEIntegrator::manager\_initialize\_calculation\_part1(), jeod::LsodeFirstOrderODEIntegrator::manager\_initialize\_calculation\_part2(), jeod::LsodeFirstOrderODEIntegrator::manager\_integration\_loop\_part1(), jeod::LsodeFirstOrderODEIntegrator::process\_entry\_point\_cycle\_start(), and jeod::LsodeFirstOrderODEIntegrator::reset\_integrator().

#### 8.20.6.17 unsigned int jeod::LsodeControlDataInterface::num\_odes\_at\_alloc

Definition at line 139 of file lsode\_control\_data\_interface.hh.

Referenced by allocate\_arrays(), set\_abs\_tol(), and set\_rel\_tol().

#### 8.20.6.18 double\* jeod::LsodeControlDataInterface::rel\_tolerance\_error\_control

Was RTOL.

Vector of the relative error tolerances.trick\_units(-)

Definition at line 147 of file lsode\_control\_data\_interface.hh.

Referenced by allocate\_arrays(), destroy\_allocated\_arrays(), jeod::LsodeFirstOrderODEIntegrator::load\_ew\_values(), jeod::LsodeFirstOrderODEIntegrator::manager\_initialize\_calculation\_part2(), and set\_rel\_tol().

#### 8.20.6.19 std::vector<double> jeod::LsodeControlDataInterface::rel\_tolerance\_error\_control\_vec

Temporary pre-initialized place to store loaded error values.

trick\_units(-)

Definition at line 136 of file lsode\_control\_data\_interface.hh.

Referenced by allocate\_arrays(), check\_interface\_data(), LsodeControlDataInterface(), and set\_rel\_tol().

The documentation for this class was generated from the following files:

- [lsode\\_control\\_data\\_interface.hh](#)
- [lsode\\_control\\_data\\_interface.cc](#)

## 8.21 jeod::LsodeDataArrays Class Reference

The data arrays.

```
#include <lsode_data_classes.hh>
```

### Public Member Functions

- virtual [~LsodeDataArrays](#) (void)  
*Destructor.*
- [LsodeDataArrays](#) (void)  
*constructor*
- void [allocate\\_arrays](#) (unsigned int num\_odes, [LsodeControlDataInterface::CorrectorMethod](#) corrector\_method)  
*Allocates memory for the variable size arrays.*
- void [destroy\\_allocated\\_arrays](#) ()  
*Allows for refactoring and reallocation of newly sized arrays.*

## Data Fields

- int \* [pivots](#)  
*Was IWM(21) or IPVT.*
- double \*\* [history](#)  
*was RWORK[LYH:LYH+NYH\*(MAXORD+1)-1].*
- double [lin\\_alg\\_1](#)
- double [lin\\_alg\\_2](#)
- double \*\* [lin\\_alg](#)  
*was RWORK[LWM:LWM+LENWM-1].*
- double \* [error\\_weight](#)  
*was RWORK[LEWT:LEWT+N-1].*
- double \* [save](#)  
*was RWORK[LSAVF:LSAVF+N-1].*
- double \* [accum\\_correction](#)  
*was RWORK[LACOR:LACOR+N-1].*
- unsigned int [lin\\_alg\\_index1](#)  
*Number of record, this is the value used for data allocation.*
- unsigned int [num\\_odes](#)  
*Number of record, this is the value used for data allocation.*
- bool [allocated](#)  
*Indicator of whether the arrays have been allocated.*

## Private Member Functions

- [LsodeDataArrays & operator=](#) (const [LsodeDataArrays](#) &src)
- [LsodeDataArrays](#) (const [LsodeDataArrays](#) &src)

## Friends

- class [InputProcessor](#)
- void [init\\_attrjeod\\_\\_LsodeDataArrays](#) ()

### 8.21.1 Detailed Description

The data arrays.

Definition at line 81 of file `lsode_data_classes.hh`.

### 8.21.2 Constructor & Destructor Documentation

8.21.2.1 `virtual jeod::LsodeDataArrays::~~LsodeDataArrays ( void )` `[inline]`, `[virtual]`

Destructor.

Definition at line 90 of file `lsode_data_classes.hh`.

References `destroy_allocated_arrays()`.

8.21.2.2 `jeod::LsodeDataArrays::LsodeDataArrays ( const LsodeDataArrays & src ) [private]`

### 8.21.3 Member Function Documentation

8.21.3.1 `LsodeDataArrays& jeod::LsodeDataArrays::operator= ( const LsodeDataArrays & src ) [private]`

### 8.21.4 Friends And Related Function Documentation

8.21.4.1 `void init_attrjeod__LsodeDataArrays ( ) [friend]`

8.21.4.2 `friend class InputProcessor [friend]`

Definition at line 83 of file `lsode_data_classes.hh`.

### 8.21.5 Field Documentation

8.21.5.1 `double* jeod::LsodeDataArrays::accum_correction`

was `RWORK[LACOR:LACOR+N-1]`.

`LACOR = LSAVF + N` `accum_correction[i] = rwork[lacor+i].trick_units(-)`

Definition at line 149 of file `lsode_data_classes.hh`.

Referenced by `allocate_arrays()`, `destroy_allocated_arrays()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_compute_new_order()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_compute_new_order_prep()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_corrector_converged()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_corrector_iteration()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_reset_iteration_loop_part2()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_wrapup()`, and `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_loop()`.

8.21.5.2 `bool jeod::LsodeDataArrays::allocated`

Indicator of whether the arrays have been allocated.

`trick_units(-)`

Definition at line 164 of file `lsode_data_classes.hh`.

Referenced by `allocate_arrays()`, and `destroy_allocated_arrays()`.

8.21.5.3 `double* jeod::LsodeDataArrays::error_weight`

was `RWORK[LEWT:LEWT+N-1]`.

`LEWT = LWM + LENWM` `error_weight[i] = rwork[lewt+i].trick_units(-)`

Definition at line 139 of file `lsode_data_classes.hh`.

Referenced by `allocate_arrays()`, `destroy_allocated_arrays()`, `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_init()`, `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_loop()`, `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_wrap_up()`, `jeod::LsodeFirstOrderODEIntegrator::load_ew_values()`, `jeod::LsodeFirstOrderODEIntegrator::magnitude_of_weighted_array()`, `jeod::LsodeFirstOrderODEIntegrator::manager_initialize_calculation_part2()`, and `jeod::LsodeFirstOrderODEIntegrator::manager_integration_loop_part1()`.

8.21.5.4 `double** jeod::LsodeDataArrays::history`

was `RWORK[LYH:LYH+NYH*(MAXORD+1)-1]`.

`LYH = 21` First index is to "i" in `y_i`, second index is to history order. `history[i,j] = rwork[LYH + j*nyh + i]`, with `lyh = 21` typically. `trick_units(-)`



Definition at line 118 of file lsode\_data\_classes.hh.

Referenced by allocate\_arrays(), destroy\_allocated\_arrays(), jeod::LsodeFirstOrderODEIntegrator::integrator\_compute\_new\_order(), jeod::LsodeFirstOrderODEIntegrator::integrator\_compute\_new\_order\_prep(), jeod::LsodeFirstOrderODEIntegrator::integrator\_corrector\_converged(), jeod::LsodeFirstOrderODEIntegrator::integrator\_corrector\_failed\_part2(), jeod::LsodeFirstOrderODEIntegrator::integrator\_corrector\_iteration(), jeod::LsodeFirstOrderODEIntegrator::integrator\_error\_test\_failed(), jeod::LsodeFirstOrderODEIntegrator::integrator\_fail\_reset\_order\_1\_part1(), jeod::LsodeFirstOrderODEIntegrator::integrator\_fail\_reset\_order\_1\_part2(), jeod::LsodeFirstOrderODEIntegrator::integrator\_predict(), jeod::LsodeFirstOrderODEIntegrator::integrator\_reset\_iteration\_loop\_part1(), jeod::LsodeFirstOrderODEIntegrator::integrator\_reset\_yh(), jeod::LsodeFirstOrderODEIntegrator::interpolate\_y(), jeod::LsodeFirstOrderODEIntegrator::jacobian\_prep\_init(), jeod::LsodeFirstOrderODEIntegrator::jacobian\_prep\_wrap\_up(), jeod::LsodeFirstOrderODEIntegrator::load\_ew\_values(), jeod::LsodeFirstOrderODEIntegrator::manager\_initialize\_calculation\_part2(), jeod::LsodeFirstOrderODEIntegrator::manager\_integration\_loop\_part2(), and jeod::LsodeFirstOrderODEIntegrator::reset\_integrator().

#### 8.21.5.5 double\*\* jeod::LsodeDataArrays::lin\_alg

was RWORK[LWM:LWM+LENWM-1].

LWM = LYH + (NYH\*(MAXORD+1)) lin\_alg\_1 = rwork[lwm] lin\_alg\_2 = rwork[lwm + 1] lin\_alg[i,j] = rwork[lwm+ j\*n + i + 2]. The first two elements are treated differently, then it goes to an array that is sized based on the correction\_method. The array sizes are as follows, ordered by value of correction\_method: 0: 0 1,2: n x n 3: 1 x n 4,5: (2\*ml+mu+1) x n.trick\_units(-)

Definition at line 134 of file lsode\_data\_classes.hh.

Referenced by allocate\_arrays(), destroy\_allocated\_arrays(), jeod::LsodeFirstOrderODEIntegrator::gauss\_elim\_factor(), jeod::LsodeFirstOrderODEIntegrator::jacobian\_prep\_init(), jeod::LsodeFirstOrderODEIntegrator::jacobian\_prep\_loop(), jeod::LsodeFirstOrderODEIntegrator::jacobian\_prep\_wrap\_up(), jeod::LsodeFirstOrderODEIntegrator::linear\_chord\_iteration(), and jeod::LsodeFirstOrderODEIntegrator::linear\_solver().

#### 8.21.5.6 double jeod::LsodeDataArrays::lin\_alg\_1

Definition at line 119 of file lsode\_data\_classes.hh.

Referenced by jeod::LsodeFirstOrderODEIntegrator::jacobian\_prep\_init(), jeod::LsodeFirstOrderODEIntegrator::jacobian\_prep\_loop(), and jeod::LsodeFirstOrderODEIntegrator::manager\_initialize\_calculation\_part1().

#### 8.21.5.7 double jeod::LsodeDataArrays::lin\_alg\_2

Definition at line 120 of file lsode\_data\_classes.hh.

Referenced by jeod::LsodeFirstOrderODEIntegrator::jacobian\_prep\_init(), and jeod::LsodeFirstOrderODEIntegrator::linear\_chord\_iteration().

#### 8.21.5.8 unsigned int jeod::LsodeDataArrays::lin\_alg\_index1

Number of record, this is the value used for data allocation.

trick\_units(-)

Definition at line 155 of file lsode\_data\_classes.hh.

Referenced by allocate\_arrays(), and destroy\_allocated\_arrays().

#### 8.21.5.9 unsigned int jeod::LsodeDataArrays::num\_odes

Number of record, this is the value used for data allocation.

trick\_units(-)

Definition at line 159 of file `lsode_data_classes.hh`.

Referenced by `allocate_arrays()`, and `destroy_allocated_arrays()`.

#### 8.21.5.10 `int* jeod::LsodeDataArrays::pivots`

Was IWM(21) or IPVT.

Pivot vector generated in `dgefa`, and used in `dgesl.trick_units(-)`

Definition at line 102 of file `lsode_data_classes.hh`.

Referenced by `allocate_arrays()`, `destroy_allocated_arrays()`, `jeod::LsodeFirstOrderODEIntegrator::gauss_elim_factor()`, and `jeod::LsodeFirstOrderODEIntegrator::linear_solver()`.

#### 8.21.5.11 `double* jeod::LsodeDataArrays::save`

was `RWORK[LSAVF:LSAVF+N-1]`.

`LSAVF = LEWT + N save[i] = rwork[lsavf+i].trick_units(-)`

Definition at line 144 of file `lsode_data_classes.hh`.

Referenced by `allocate_arrays()`, `destroy_allocated_arrays()`, `jeod::LsodeFirstOrderODEIntegrator::integrate()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_compute_new_order_prep()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_core()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_corrector_iteration()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_fail_reset_order_1_part2()`, `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_init()`, `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_loop()`, and `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_wrap_up()`.

The documentation for this class was generated from the following files:

- [lsode\\_data\\_classes.hh](#)
- [lsode\\_data\\_classes.cc](#)

## 8.22 `jeod::LsodeDataJacobianPrep` Class Reference

Data associated with the method `DPREPJ`.

```
#include <lsode_data_classes.hh>
```

### Public Member Functions

- virtual `~LsodeDataJacobianPrep` (void)  
*Destructor.*
- `LsodeDataJacobianPrep` (void)  
*constructor*

### Data Fields

- double `fac`
- double `hl0`
- int `index`
- int `index_max`
- double `r0`
- double `yj`

## Private Member Functions

- [LsodeDataJacobianPrep & operator=](#) (const [LsodeDataJacobianPrep](#) &src)
- [LsodeDataJacobianPrep](#) (const [LsodeDataJacobianPrep](#) &src)

## Friends

- class [InputProcessor](#)
- void [init\\_attrjeod\\_\\_LsodeDataJacobianPrep](#) ()

### 8.22.1 Detailed Description

Data associated with the method DPREPJ.

Definition at line 51 of file `lsode_data_classes.hh`.

### 8.22.2 Constructor & Destructor Documentation

8.22.2.1 `virtual jeod::LsodeDataJacobianPrep::~~LsodeDataJacobianPrep ( void ) [inline], [virtual]`

Destructor.

Definition at line 60 of file `lsode_data_classes.hh`.

8.22.2.2 `jeod::LsodeDataJacobianPrep::LsodeDataJacobianPrep ( const LsodeDataJacobianPrep & src ) [private]`

### 8.22.3 Member Function Documentation

8.22.3.1 `LsodeDataJacobianPrep& jeod::LsodeDataJacobianPrep::operator= ( const LsodeDataJacobianPrep & src ) [private]`

### 8.22.4 Friends And Related Function Documentation

8.22.4.1 `void init_attrjeod__LsodeDataJacobianPrep ( ) [friend]`

8.22.4.2 `friend class InputProcessor [friend]`

Definition at line 53 of file `lsode_data_classes.hh`.

### 8.22.5 Field Documentation

8.22.5.1 `double jeod::LsodeDataJacobianPrep::fac`

Definition at line 65 of file `lsode_data_classes.hh`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_init()`, and `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_loop()`.

8.22.5.2 `double jeod::LsodeDataJacobianPrep::hl0`

Definition at line 66 of file `lsode_data_classes.hh`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_init()`, `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_loop()`, and `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_wrap_up()`.

### 8.22.5.3 `int jeod::LsodeDataJacobianPrep::index`

Definition at line 67 of file `lsode_data_classes.hh`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_init()`, and `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_loop()`.

### 8.22.5.4 `int jeod::LsodeDataJacobianPrep::index_max`

Definition at line 68 of file `lsode_data_classes.hh`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_init()`, and `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_loop()`.

### 8.22.5.5 `double jeod::LsodeDataJacobianPrep::r0`

Definition at line 69 of file `lsode_data_classes.hh`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_init()`, and `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_loop()`.

### 8.22.5.6 `double jeod::LsodeDataJacobianPrep::yj`

Definition at line 70 of file `lsode_data_classes.hh`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_init()`, and `jeod::LsodeFirstOrderODEIntegrator::jacobian_prep_loop()`.

The documentation for this class was generated from the following files:

- [lsode\\_data\\_classes.hh](#)
- [lsode\\_data\\_classes.cc](#)

## 8.23 `jeod::LsodeDataStode` Class Reference

The data associated with method `Dstode`.

```
#include <lsode_data_classes.hh>
```

### Public Member Functions

- virtual [~LsodeDataStode](#) (void)  
*Destructor.*
- [LsodeDataStode](#) (void)  
*constructor*

### Data Fields

- double [step\\_ratio](#)
- double [step\\_ratio\\_order\\_inc](#)
- double [told](#)
- double [dsm](#)
- int [iredo](#)
- int [iret](#)
- unsigned int [ncf](#)
- unsigned int [new\\_method\\_order](#)

## Private Member Functions

- [LsodeDataStode & operator=](#) (const [LsodeDataStode](#) &src)
- [LsodeDataStode](#) (const [LsodeDataStode](#) &src)

## Friends

- class [InputProcessor](#)
- void [init\\_attrjeod\\_\\_LsodeDataStode](#) ()

### 8.23.1 Detailed Description

The data associated with method Dstode.

Definition at line 175 of file lsode\_data\_classes.hh.

### 8.23.2 Constructor & Destructor Documentation

**8.23.2.1** virtual [jeod::LsodeDataStode::~~LsodeDataStode](#) ( void ) [inline],[virtual]

Destructor.

Definition at line 184 of file lsode\_data\_classes.hh.

**8.23.2.2** [jeod::LsodeDataStode::LsodeDataStode](#) ( const [LsodeDataStode](#) & src ) [private]

### 8.23.3 Member Function Documentation

**8.23.3.1** [LsodeDataStode& jeod::LsodeDataStode::operator=](#) ( const [LsodeDataStode](#) & src ) [private]

### 8.23.4 Friends And Related Function Documentation

**8.23.4.1** void [init\\_attrjeod\\_\\_LsodeDataStode](#) ( ) [friend]

**8.23.4.2** friend class [InputProcessor](#) [friend]

Definition at line 177 of file lsode\_data\_classes.hh.

### 8.23.5 Field Documentation

**8.23.5.1** double [jeod::LsodeDataStode::dsm](#)

Definition at line 193 of file lsode\_data\_classes.hh.

Referenced by [jeod::LsodeFirstOrderODEIntegrator::integrator\\_compute\\_new\\_order\(\)](#), and [jeod::LsodeFirstOrderODEIntegrator::integrator\\_corrector\\_converged\(\)](#).

**8.23.5.2** int [jeod::LsodeDataStode::iredo](#)

Definition at line 194 of file lsode\_data\_classes.hh.

Referenced by [jeod::LsodeFirstOrderODEIntegrator::integrator\\_core\(\)](#), [jeod::LsodeFirstOrderODEIntegrator::integrator\\_corrector\\_converged\(\)](#), [jeod::LsodeFirstOrderODEIntegrator::integrator\\_corrector\\_failed\\_part2\(\)](#), [jeod::LsodeFirstOrderODEIntegrator::integrator\\_error\\_test\\_failed\(\)](#), [jeod::LsodeFirstOrderODEIntegrator::integrator\\_reset\\_yh\(\)](#), and [jeod::LsodeFirstOrderODEIntegrator::integrator\\_test\\_stepsize\\_change\(\)](#).

### 8.23.5.3 `int jeod::LsodeDataStode::iret`

Definition at line 195 of file `lsode_data_classes.hh`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::integrator_core()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_fail_reset_order_1_part2()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_reset_method_coeffs()`, and `jeod::LsodeFirstOrderODEIntegrator::integrator_set_new_order()`.

### 8.23.5.4 `unsigned int jeod::LsodeDataStode::ncf`

Definition at line 196 of file `lsode_data_classes.hh`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::integrator_core()`, and `jeod::LsodeFirstOrderODEIntegrator::integrator_corrector_failed_part2()`.

### 8.23.5.5 `unsigned int jeod::LsodeDataStode::new_method_order`

Definition at line 197 of file `lsode_data_classes.hh`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::integrator_compute_new_order()`, and `jeod::LsodeFirstOrderODEIntegrator::integrator_set_new_order()`.

### 8.23.5.6 `double jeod::LsodeDataStode::step_ratio`

Definition at line 190 of file `lsode_data_classes.hh`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::integrator_compute_new_order()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_compute_new_order_check_step_error()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_core()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_corrector_failed_part2()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_fail_reset_order_1_part1()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_reset_method_coeffs()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_reset_yh()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_set_new_order()`, and `jeod::LsodeFirstOrderODEIntegrator::integrator_test_stepsize_change()`.

### 8.23.5.7 `double jeod::LsodeDataStode::step_ratio_order_inc`

Definition at line 191 of file `lsode_data_classes.hh`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::integrator_compute_new_order()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_compute_new_order_prep()`, and `jeod::LsodeFirstOrderODEIntegrator::integrator_error_test_failed()`.

### 8.23.5.8 `double jeod::LsodeDataStode::told`

Definition at line 192 of file `lsode_data_classes.hh`.

Referenced by `jeod::LsodeFirstOrderODEIntegrator::integrator_core()`, `jeod::LsodeFirstOrderODEIntegrator::integrator_corrector_failed_part2()`, and `jeod::LsodeFirstOrderODEIntegrator::integrator_error_test_failed()`.

The documentation for this class was generated from the following files:


- [lsode\\_data\\_classes.hh](#)
- [lsode\\_data\\_classes.cc](#)

## 8.24 `jeod::LsodeFirstOrderODEIntegrator` Class Reference

Jeod-compatible version of the Livermore ODE solver, LSODE.

```
#include <lsode_first_order_ode_integrator.hh>
```

Inheritance diagram for jeod::LsodeFirstOrderODEIntegrator:

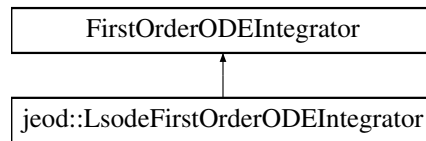

## Public Types

- enum `EntryPoint` {  
`CycleStartFinish` = 0, `InitCalc` = 1, `JacobianPrep` = 2, `ResetIterLoop` = 3,  
`IterationLoop` = 4, `DstodeResetStep` = 5 }
- enum `CalculationTask` {  
`Normal` = 1, `OneStep` = 2, `CompleteCycle` = 3, `NormalWithSingularity` = 4,  
`OneStepWithSingularity` = 5 }

## Public Member Functions

- `LsodeFirstOrderODEIntegrator` (void)  
*LsodeFirstOrderODEIntegrator* default constructor.
- `LsodeFirstOrderODEIntegrator` (const `LsodeControlDataInterface` &data\_in, `er7_utils::IntegrationControls` &controls, unsigned int size)  
*LsodeFirstOrderODEIntegrator* non-default constructor.
- virtual `~LsodeFirstOrderODEIntegrator` ()  
*LsodeFirstOrderODEIntegrator* destructor.
- virtual  
`LsodeFirstOrderODEIntegrator * create_copy` () const  
Create a copy of 'this' *LsodeFirstOrderODEIntegrator* object.
- `EntryPoint get_re_entry_point` ()  
Get *re\_entry\_point* member.
- virtual `er7_utils::IntegratorResult integrate` (double dyn\_dt, unsigned int target\_stage, double const \**y\_dot*, double \**y*)  
Propagate state via *Lsode's* method.
- void `reset_integrator` ()  
Resets the integrator when the timestep changes or when identified as needing a reset.
- void `update_control_data` ()  
Gets the control data from where it can be populated in the constructor and verifies that the input control parameters are not out of sensible range.

## Data Fields

- double \* *y*  
Was *Y*.
- const double \* *y\_dot*  
Was *.*
- double *cycle\_target\_time*  
Was *TOUT*.
- double *convergence\_factor*  
was *CONIT*, in *DLS001* common block.

- double [convergence\\_rate](#)  
*was CRATE, in DLS001 common block.*
- unsigned int [order\\_select\\_para](#)  
*Was IALTH, in DLS001 common block.*
- unsigned int [num\\_equations](#)  
*Was NYH, in DLS001 common block.*
- unsigned int [num\\_nordsiek\\_cols](#)  
*Was L, in DLS001 common block Number of columns in Nordsiek array.*
- unsigned int [max\\_history\\_size](#)  
*Was LMAX, in DLS001 common block Maximum allowable number of histories.*
- unsigned int [num\\_predictor\\_elements](#)  
*Was NQNYH, in DLS001 common block.*
- unsigned int [method\\_order\\_current](#)  
*Was NQ, in DLS001 common block.*
- double [stage\\_target\\_time](#)  
*was TN, in DLS001 common block.*
- double [max\\_step\\_increase\\_ratio](#)  
*was RMAX, in DLS001 common block.*
- double [max\\_rel\\_change\\_without\\_jacobian](#)  
*was CCMAX, in DLS001 common block.*

## Protected Member Functions

- void [process\\_entry\\_point\\_cycle\\_start](#) ()  
*The code block from the main integrate routine for re\_entry\_point=CycleStartFinish.*
- void [manager\\_initialize\\_calculation\\_part1](#) ()  
*Sets the values for the case with calculation\_phase = 1.*
- void [manager\\_initialize\\_calculation\\_part2](#) ()
- int [manager\\_check\\_stop\\_conditions](#) ()  
*verifies whether the convergence conditions have been met to end the cycle.*
- void [manager\\_integration\\_loop\\_part1](#) ()  
*The iteration loop for the integration process.*
- void [manager\\_integration\\_loop\\_part2](#) ()
- void [manager\\_integration\\_loop\\_part3](#) ()
- void [manager\\_set\\_calculation\\_phase\\_eq\\_2\\_reload](#) ()
- void [integrator\\_core](#) ()  
*integrator\_core provides the front-end to all of the integrator\_\*i methods, which together perform one step of the integration of an initial value problem for a system of ordinary differential equations.*
- void [integrator\\_reset\\_method\\_coeffs](#) ()  
*Sets/resets the method\_coeffs\_current array.*
- void [integrator\\_test\\_stepsize\\_change](#) ()  
*Tests h against old h.*
- void [integrator\\_reset\\_yh](#) ()  
*Resets history arrays and time-step.*
- void [integrator\\_predict](#) ()  
*This section computes the predicted values by multiplying the history array by the Pascal Triangle matrix.*
- void [integrator\\_reset\\_iteration\\_loop\\_part1](#) ()  
*This method resets the iteration loop to the values generated by the integrator\_predict method, which populated history[\*][0].*
- void [integrator\\_reset\\_iteration\\_loop\\_part2](#) ()



*This code follows part 1 after the break-out to get to the external calls, and completes the reset of the integration iteration loop.*

- void [integrator\\_corrector\\_iteration](#) ()  
*Keeps looping through the iterations until convergence or failure.*
- void [integrator\\_corrector\\_failed\\_part1](#) ()  
*The corrector iteration failed to converge.*
- void [integrator\\_corrector\\_failed\\_part2](#) ()  
*Retracts the history array in the case that the correction iteration failed to converge with either functional iteration or with an up-to-date Jacobian.*
- void [integrator\\_corrector\\_converged](#) ()  
*Starts the processing of a converged iteration.*
- void [integrator\\_error\\_test\\_failed](#) ()  
*Restores the history array following the failure of the corrector for exceeding local error bounds.*
- void [integrator\\_compute\\_new\\_order\\_prep](#) ()  
*The first steps in computing whether the order of the integrator should be changed.*
- void [integrator\\_compute\\_new\\_order](#) ()  
*Computes the step-size scaling factors that will result once it is determined what happens to the order at the next step.*
- void [integrator\\_compute\\_new\\_order\\_check\\_step\\_error](#) ()
- void [integrator\\_set\\_new\\_order](#) ()  
*Sets the new order and the step-ratio for the next step - or the current step if redoing it.*
- void [integrator\\_fail\\_reset\\_order\\_1\\_part1](#) ()  
*Repopulates the y-array from history, recomputes the original first derivatives, sets the order back to 1, and reduces the step size by a factor of 10.*
- void [integrator\\_fail\\_reset\\_order\\_1\\_part2](#) ()  
*Continue reset, with derivatives now at hand.*
- void [integrator\\_wrapup](#) ()  
*Wraps up the completion of the integrator.*
- void [integrator\\_terminate](#) ()  
*this is the only succesful path back from integrator to manager.*
- void [calculate\\_epsilon](#) ()  
*Identify the smallest double precision value, epsilon, such that the computer can distinguish (1+epsilon) from 1.*
- void [calculate\\_integration\\_coefficients](#) ()  
*Modified from original DCFODE subroutine.*
- void [interpolate\\_y](#) ()  
*Interpolates the zeroth-derivative of y Adapted from subroutine DINTDY, which was a general method for interpolating the K-th derivative of the dependent variable vector, y.*
- void [jacobian\\_prep\\_init](#) ()  
*Modified from DPREPJ.*
- bool [jacobian\\_prep\\_loop](#) ()
- bool [jacobian\\_prep\\_wrap\\_up](#) ()
- void [linear\\_chord\\_iteration](#) ()  
*Modified from DSOLSY.*
- void [load\\_ew\\_values](#) ()
- double [magnitude\\_of\\_weighted\\_array](#) (double \*v)  
*returns the RMS value of {V dot W}, where V and W are N-vectors.*
- double [magnitude\\_of\\_weighted\\_array](#) (unsigned int ix, double \*\*v)  
*returns RMS value of v[\*][index]*
- int [gauss\\_elim\\_factor](#) ()  
*Factors a double array (arrays.lin\_alg) by Gaussian elimination.*
- void [linear\\_solver](#) ()  
*Solves the equation  $Y' = A Y$ , with  $A = \text{arrays.lin\_alg}$ .*

- unsigned int [index\\_of\\_max\\_magnitude](#) (unsigned int num\_points, double \*\*mx, int starting\_ix)  
*Modified version of IDAMAX.*
- void [load\\_derivatives](#) (double \*derivs)  
*Load the externally generated derivative values (incoming as y\_dot)i into the array derivs.*

## Protected Attributes

- [LsodeDataJacobianPrep data\\_prepj](#)  
*data used exclusively for the DPREPJ method.*
- [LsodeDataArrays arrays](#)  
*data arrays, multiple purposes.*
- [LsodeDataStode data\\_stode](#)  
*data used exclusively for the DSTODE method.*
- unsigned int [num\\_steps\\_taken](#)  
*Was NST, in DLS001 common block.*
- unsigned int [prior\\_num\\_steps](#)  
*Was NSLAST, in DLS001 common block.*
- int [step\\_error](#)  
*Was KFLAG, in DLS001 common block 0: step was successful -1: requested accuracy could not be achieved.*
- unsigned int [num\\_small\\_step\\_warnings](#)  
*Was NHNIL, in DLS001 common block.*
- unsigned int [num\\_jacobian\\_evals](#)  
*Was NJE, in DLS001 common block Number of jacobian evaluations so far for the problem.*
- double [iter\\_delta](#)  
*Was DEL, in DSTODE, local variable.*
- double [prev\\_iter\\_delta](#)  
*Was DELP, in DSTODE, local variable.*
- bool [first\\_pass](#)  
*was ISTATE.*
- [EntryPoint re\\_entry\\_point](#)  
*Indicates where in the integrator to return to following an exit to gether new derivatives.*
- bool [initialized](#)  
*was INIT, in DLS001 common block.*
- int [internal\\_state](#)  
*Was JSTART, in DLS001 common block.*
- [CalculationTask calculation\\_task](#)  
*Was ITASK.*
- unsigned int [max\\_order\\_internal](#)  
*Was MAXORD.*
- [LsodeControlDataInterface control\\_data](#)
- [LsodeControlDataInterface::IntegrationMethod prev\\_integration\\_method](#)  
*Was MEO, in DLS001 common block Integration method used in previous call (see integration\_method).*
- unsigned int [prev\\_method\\_order](#)  
*Was NQU, in DLS001 common block.*
- double [method\\_coeff\\_first](#)  
*was EL0, in DLS001 common block.*
- double [method\\_coeffs\\_current](#) [13]  
*was EL, in DLS001 common block.*
- double [method\\_coeffs\\_complete](#) [13][12]  
*was ELCO, in DLS001 common block.*

- double [test\\_coefs\\_complete](#) [3][12]  
*was TESCO, in DLS001 common block.*
- double [step\\_size](#)  
*was H, in DLS001 common block.*
- double [prev\\_step\\_size](#)  
*was HOLD, in DLS001 common block.*
- double [prev\\_good\\_step\\_size](#)  
*was HU, in DLS001 common block.*
- double [max\\_step\\_size\\_inv](#)  
*was HMXI.*
- bool [jacobian\\_current](#)  
*Was JCUR, in DLS001 common block Is the jacobian current.*
- bool [update\\_jacobian](#)  
*Was IPUP, in DLS001 common block.*
- unsigned int [step\\_at\\_last\\_jacobian\\_update](#)  
*Was NSLP, in DLS001 common block.*
- unsigned int [convergence\\_jacobian\\_flag](#)  
*Was ICF, in DLS001 common block.*
- double [rel\\_change\\_since\\_jacobian](#)  
*was RC, in DLS001 common block.*
- bool [iteration\\_matrix\\_singular](#)  
*Was IERPJ, in DLS001 common block.*
- bool [modified\\_iteration\\_matrix\\_singular](#)  
*Was IERSL, in DLS001 common block.*
- unsigned int [iteration\\_count](#)
- double [epsilon](#)  
*was UROUND, in DLS001 common block.*
- double [sqrt\\_epsilon](#)  
*NEW.*

## Private Member Functions

- [LsodeFirstOrderODEIntegrator](#) & [operator=](#) (const [LsodeFirstOrderODEIntegrator](#) &)  
*Deleted assignment operator.*
- [LsodeFirstOrderODEIntegrator](#) (const [LsodeFirstOrderODEIntegrator](#) &)  
*Deleted copy constructor.*

## Friends

- class [InputProcessor](#)
- void [init\\_attrjeod\\_\\_LsodeFirstOrderODEIntegrator](#) ()

### 8.24.1 Detailed Description

Jeod-compatible version of the Livermore ODE solver, LSODE.

Definition at line 61 of file `lsode_first_order_ode_integrator.hh`.

## 8.24.2 Member Enumeration Documentation

### 8.24.2.1 enum jeod::LsodeFirstOrderODEIntegrator::CalculationTask

Enumerator

**Normal** Normal operation. Interpolate to target.

**OneStep** Take only one step and return.

**CompleteCycle** Stop at first mesh point at or beyond.

**NormalWithSingularity** Normal computation, with safeguard on.

**OneStepWithSingularity** Take one step without passing t\_crit.

Definition at line 95 of file lsode\_first\_order\_ode\_integrator.hh.

### 8.24.2.2 enum jeod::LsodeFirstOrderODEIntegrator::EntryPoint

Enumerator

**CycleStartFinish** Default value. Assumption is that the current.

**InitCalc** Reset during initialization. Valid only during.

**JacobianPrep** Set at the end of the initialization of the.

**ResetIterLoop** Set when the iteration loop (part of DSTODE) has.

**IterationLoop** Set during the routine operation of the iteration.

**DstodeResetStep** Set in dstode\_640 when there have been too many.

Definition at line 73 of file lsode\_first\_order\_ode\_integrator.hh.

## 8.24.3 Constructor & Destructor Documentation

### 8.24.3.1 jeod::LsodeFirstOrderODEIntegrator::LsodeFirstOrderODEIntegrator ( const LsodeFirstOrderODEIntegrator & ) [private]

Deleted copy constructor.

## 8.24.4 Member Function Documentation

### 8.24.4.1 EntryPoint jeod::LsodeFirstOrderODEIntegrator::get\_re\_entry\_point ( ) [inline]

Get re\_entry\_point member.

Definition at line 161 of file lsode\_first\_order\_ode\_integrator.hh.

References re\_entry\_point.

Referenced by jeod::LsodeSecondOrderODEIntegrator::get\_re\_entry\_point().

### 8.24.4.2 LsodeFirstOrderODEIntegrator& jeod::LsodeFirstOrderODEIntegrator::operator= ( const LsodeFirstOrderODEIntegrator & ) [private]

Deleted assignment operator.

## 8.24.5 Friends And Related Function Documentation

8.24.5.1 `void init_attrjeod__LsodeFirstOrderODEIntegrator ( ) [friend]`

8.24.5.2 `friend class InputProcessor [friend]`

Definition at line 65 of file `lsode_first_order_ode_integrator.hh`.

## 8.24.6 Field Documentation

8.24.6.1 `LsodeDataArrays jeod::LsodeFirstOrderODEIntegrator::arrays [protected]`

data arrays, multiple purposes.

`trick_units(-)`

Definition at line 412 of file `lsode_first_order_ode_integrator.hh`.

Referenced by `gauss_elim_factor()`, `integrate()`, `integrator_compute_new_order()`, `integrator_compute_new_order_prep()`, `integrator_core()`, `integrator_corrector_converged()`, `integrator_corrector_failed_part2()`, `integrator_corrector_iteration()`, `integrator_error_test_failed()`, `integrator_fail_reset_order_1_part1()`, `integrator_fail_reset_order_1_part2()`, `integrator_predict()`, `integrator_reset_iteration_loop_part1()`, `integrator_reset_iteration_loop_part2()`, `integrator_reset_yh()`, `integrator_wrapup()`, `interpolate_y()`, `jacobian_prep_init()`, `jacobian_prep_loop()`, `jacobian_prep_wrap_up()`, `linear_chord_iteration()`, `linear_solver()`, `load_ew_values()`, `magnitude_of_weighted_array()`, `manager_initialize_calculation_part1()`, `manager_initialize_calculation_part2()`, `manager_integration_loop_part1()`, `manager_integration_loop_part2()`, `reset_integrator()`, and `~LsodeFirstOrderODEIntegrator()`.

8.24.6.2 `CalculationTask jeod::LsodeFirstOrderODEIntegrator::calculation_task [protected]`

Was ITASK.

1: Normal 2:Take one step and return. 3:Stop at first mesh point at or beyond `cycle_target_time` and return 4:Normal computation, with safeguard on singularity time, `t_crit` 5:Take one step without passing `t_crit`. This implementation only allows for `calculation_task = 1`, so it is a protected variable until such time as it is extended to include additional options.

Only case 1 is supported.`trick_units(-)`

Definition at line 512 of file `lsode_first_order_ode_integrator.hh`.

Referenced by `manager_check_stop_conditions()`, and `manager_integration_loop_part3()`.

8.24.6.3 `LsodeControlDataInterface jeod::LsodeFirstOrderODEIntegrator::control_data [protected]`

Definition at line 519 of file `lsode_first_order_ode_integrator.hh`.

Referenced by `calculate_integration_coefficients()`, `gauss_elim_factor()`, `integrator_compute_new_order()`, `integrator_compute_new_order_prep()`, `integrator_core()`, `integrator_corrector_converged()`, `integrator_corrector_failed_part1()`, `integrator_corrector_failed_part2()`, `integrator_corrector_iteration()`, `integrator_error_test_failed()`, `integrator_fail_reset_order_1_part1()`, `integrator_fail_reset_order_1_part2()`, `integrator_predict()`, `integrator_reset_iteration_loop_part1()`, `integrator_reset_iteration_loop_part2()`, `integrator_reset_method_coeffs()`, `integrator_reset_yh()`, `integrator_set_new_order()`, `integrator_wrapup()`, `interpolate_y()`, `jacobian_prep_init()`, `jacobian_prep_loop()`, `jacobian_prep_wrap_up()`, `linear_chord_iteration()`, `linear_solver()`, `load_derivatives()`, `load_ew_values()`, `LsodeFirstOrderODEIntegrator()`, `magnitude_of_weighted_array()`, `manager_initialize_calculation_part1()`, `manager_initialize_calculation_part2()`, `manager_integration_loop_part1()`, `manager_integration_loop_part2()`, `manager_integration_loop_part3()`, `process_entry_point_cycle_start()`, `reset_integrator()`, `update_control_data()`, and `~LsodeFirstOrderODEIntegrator()`.

**8.24.6.4 double jeod::LsodeFirstOrderODEIntegrator::convergence\_factor**

was CONIT, in DLS001 common block.

trick\_units(-)

Definition at line 286 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by integrator\_core(), integrator\_corrector\_iteration(), and integrator\_reset\_method\_coeffs().

**8.24.6.5 unsigned int jeod::LsodeFirstOrderODEIntegrator::convergence\_jacobian\_flag [protected]**

Was ICF, in DLS001 common block.

0: Solution converged 1: Convergence failed; Jacobian is not current. 2: Convergence failed; Jacobian is current or not needed.trick\_units(-)

Definition at line 619 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by integrator\_core(), integrator\_corrector\_failed\_part1(), and integrator\_corrector\_failed\_part2().

**8.24.6.6 double jeod::LsodeFirstOrderODEIntegrator::convergence\_rate**

was CRATE, in DLS001 common block.

trick\_units(-)

Definition at line 290 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by integrator\_core(), integrator\_corrector\_iteration(), and jacobian\_prep\_wrap\_up().

**8.24.6.7 double jeod::LsodeFirstOrderODEIntegrator::cycle\_target\_time**

Was TOUT.

The overall integration target time, reset on each externally-commanded cycle.trick\_units(-)

Definition at line 275 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by integrate(), interpolate\_y(), manager\_check\_stop\_conditions(), manager\_initialize\_calculation\_part2(), manager\_integration\_loop\_part3(), process\_entry\_point\_cycle\_start(), and reset\_integrator().

**8.24.6.8 LsodeDataJacobianPrep jeod::LsodeFirstOrderODEIntegrator::data\_prepj [protected]**

data used exclusively for the DPREPJ method.

trick\_units(-)

Definition at line 408 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by jacobian\_prep\_init(), jacobian\_prep\_loop(), and jacobian\_prep\_wrap\_up().

**8.24.6.9 LsodeDataStode jeod::LsodeFirstOrderODEIntegrator::data\_stode [protected]**

data used exclusively for the DSTODE method.

trick\_units(-)

Definition at line 416 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by integrator\_compute\_new\_order(), integrator\_compute\_new\_order\_check\_step\_error(), integrator\_compute\_new\_order\_prep(), integrator\_core(), integrator\_corrector\_converged(), integrator\_corrector\_failed\_part2(), integrator\_error\_test\_failed(), integrator\_fail\_reset\_order\_1\_part1(), integrator\_fail\_reset\_order\_1\_part2(),

integrator\_reset\_method\_coeffs(), integrator\_reset\_yh(), integrator\_set\_new\_order(), and integrator\_test\_stepsize\_change().

#### 8.24.6.10 double jeod::LsodeFirstOrderODEIntegrator::epsilon [protected]

was UROUND, in DLS001 common block.

Small number.trick\_units(-)

Definition at line 662 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by calculate\_epsilon(), interpolate\_y(), jacobian\_prep\_init(), jacobian\_prep\_wrap\_up(), manager\_initialize\_calculation\_part2(), and manager\_integration\_loop\_part2().

#### 8.24.6.11 bool jeod::LsodeFirstOrderODEIntegrator::first\_pass [protected]

was ISTATE.

true: was IASTATE = 1: first call for the problem, require initialization. false: was IASTATE = 2: subsequent call, no change to input parameters. not covered: IASTATE = 3: subsequent call, input parameters have changed.trick\_units(-)

Definition at line 473 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by process\_entry\_point\_cycle\_start(), reset\_integrator(), and ~LsodeFirstOrderODEIntegrator().

#### 8.24.6.12 bool jeod::LsodeFirstOrderODEIntegrator::initialized [protected]

was INIT, in DLS001 common block.

Flag representing whether the problem has been initialized.trick\_units(-)

Definition at line 483 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by manager\_integration\_loop\_part3(), and process\_entry\_point\_cycle\_start().

#### 8.24.6.13 int jeod::LsodeFirstOrderODEIntegrator::internal\_state [protected]

Was JSTART, in DLS001 common block.

0: First step for problem 1: Continue normal calculation -1: Next step has new values of step-size, order, or methods. -2: Undocumented.trick\_units(-)

Definition at line 491 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by integrator\_core(), integrator\_terminate(), and manager\_initialize\_calculation\_part1().

#### 8.24.6.14 double jeod::LsodeFirstOrderODEIntegrator::iter\_delta [protected]

Was DEL, in DSTODE, local variable.

RMS value of {y dot error\_weight\_data}trick\_units(-)

Definition at line 453 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by integrator\_corrector\_converged(), integrator\_corrector\_iteration(), and integrator\_reset\_iteration\_loop\_part2().

#### 8.24.6.15 unsigned int jeod::LsodeFirstOrderODEIntegrator::iteration\_count [protected]

Definition at line 652 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by `integrator_corrector_converged()`, `integrator_corrector_iteration()`, and `integrator_reset_iteration_loop_part1()`.

#### 8.24.6.16 `bool jeod::LsodeFirstOrderODEIntegrator::iteration_matrix_singular` [protected]

Was IERPJ, in DLS001 common block.

false: Iteration matrix was successfully LU-decomposed (iteration-method = 1,2,4,5) or inverted (iteration-method = 3). true: Matrix is singular.`trick_units(-)`

Definition at line 644 of file `lsode_first_order_ode_integrator.hh`.

Referenced by `integrator_core()`, `jacobian_prep_init()`, and `jacobian_prep_wrap_up()`.

#### 8.24.6.17 `bool jeod::LsodeFirstOrderODEIntegrator::jacobian_current` [protected]

Was JCUR, in DLS001 common block Is the jacobian current.

`trick_units(-)`

Definition at line 602 of file `lsode_first_order_ode_integrator.hh`.

Referenced by `integrator_core()`, `integrator_corrector_converged()`, `integrator_corrector_failed_part1()`, and `jacobian_prep_init()`.

#### 8.24.6.18 `unsigned int jeod::LsodeFirstOrderODEIntegrator::max_history_size`

Was LMAX, in DLS001 common block Maximum allowable number of histories.

`trick_units(-)`

Definition at line 322 of file `lsode_first_order_ode_integrator.hh`.

Referenced by `integrator_compute_new_order_prep()`, `integrator_core()`, and `integrator_corrector_converged()`.

#### 8.24.6.19 `unsigned int jeod::LsodeFirstOrderODEIntegrator::max_order_internal` [protected]

Was MAXORD.

Populated from IWORK[5] Maximum order allowable.`trick_units(-)`

Definition at line 517 of file `lsode_first_order_ode_integrator.hh`.

Referenced by `integrator_core()`, and `update_control_data()`.

#### 8.24.6.20 `double jeod::LsodeFirstOrderODEIntegrator::max_rel_change_without_jacobian`

was CCMAX, in DLS001 common block.

Max relative change to (`step_size * method_coeff_first`) before Jacobian matrix is updated. see also `rel_change_since_jacobian`.`trick_units(-)`

Definition at line 375 of file `lsode_first_order_ode_integrator.hh`.

Referenced by `integrator_predict()`.

#### 8.24.6.21 `double jeod::LsodeFirstOrderODEIntegrator::max_step_increase_ratio`

was RMAX, in DLS001 common block.

Max ratio by which step size may be increased.`trick_units(-)`

Definition at line 362 of file `lsode_first_order_ode_integrator.hh`.



Referenced by `integrator_core()`, `integrator_corrector_failed_part2()`, `integrator_error_test_failed()`, and `integrator_reset_yh()`.

**8.24.6.22** `double jeod::LsodeFirstOrderODEIntegrator::max_step_size_inv` `[protected]`

was HMXI.

Inverse of maximum absolute step size allowable. Default to 0.0 (i.e. there is no upper bound), calculated from `max_step_size` if `max_step_size` is user-specified.`trick_units(-)`

Definition at line 588 of file `lsode_first_order_ode_integrator.hh`.

Referenced by `integrator_reset_yh()`, `manager_initialize_calculation_part2()`, and `update_control_data()`.

**8.24.6.23** `double jeod::LsodeFirstOrderODEIntegrator::method_coeff_first` `[protected]`

was EL0, in DLS001 common block.

method coefficient `l_0` for current method and order.`trick_units(-)`

Definition at line 545 of file `lsode_first_order_ode_integrator.hh`.

Referenced by `integrator_core()`, `integrator_reset_method_coeffs()`, `jacobian_prep_init()`, and `linear_chord_iteration()`.

**8.24.6.24** `double jeod::LsodeFirstOrderODEIntegrator::method_coeffs_complete[13][12]` `[protected]`

was ELCO, in DLS001 common block.

The array of all of the method coefficients.`trick_units(-)`

Definition at line 554 of file `lsode_first_order_ode_integrator.hh`.

Referenced by `calculate_integration_coefficients()`, `integrator_core()`, `integrator_reset_method_coeffs()`, and `LsodeFirstOrderODEIntegrator()`.

**8.24.6.25** `double jeod::LsodeFirstOrderODEIntegrator::method_coeffs_current[13]` `[protected]`

was EL, in DLS001 common block.

`trick_units(-)`

Definition at line 549 of file `lsode_first_order_ode_integrator.hh`.

Referenced by `integrator_compute_new_order()`, `integrator_core()`, `integrator_corrector_converged()`, `integrator_corrector_iteration()`, `integrator_error_test_failed()`, `integrator_fail_reset_order_1_part2()`, `integrator_predict()`, `integrator_reset_method_coeffs()`, `integrator_set_new_order()`, `interpolate_y()`, `manager_initialize_calculation_part2()`, and `reset_integrator()`.

**8.24.6.26** `unsigned int jeod::LsodeFirstOrderODEIntegrator::method_order_current`

Was NQ, in DLS001 common block.

Method order being tried on this or next step.`trick_units(-)`

Definition at line 340 of file `lsode_first_order_ode_integrator.hh`.

Referenced by `integrator_compute_new_order()`, `integrator_compute_new_order_prep()`, `integrator_core()`, `integrator_corrector_converged()`, `integrator_corrector_failed_part2()`, `integrator_corrector_iteration()`, `integrator_error_test_failed()`, `integrator_fail_reset_order_1_part2()`, `integrator_predict()`, `integrator_reset_method_coeffs()`, `integrator_set_new_order()`, `interpolate_y()`, `manager_initialize_calculation_part2()`, and `reset_integrator()`.

**8.24.6.27 bool jeod::LsodeFirstOrderODEIntegrator::modified\_iteration\_matrix\_singular [protected]**

Was IERSL, in DLS001 common block.

Like iteration\_matrix\_singular, only applied to the iteration matrix that has been modified to account for the new step for iteration-method 3.trick\_units(-)

Definition at line 651 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by integrator\_core(), integrator\_corrector\_iteration(), and linear\_chord\_iteration().

**8.24.6.28 unsigned int jeod::LsodeFirstOrderODEIntegrator::num\_equations**

Was NYH, in DLS001 common block.

Number of ODEs to be solved in the current problem. In this implementation, num\_odes = num\_equations.trick\_units(-)

Definition at line 310 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by integrator\_core(), integrator\_corrector\_failed\_part2(), integrator\_error\_test\_failed(), integrator\_predict(), integrator\_reset\_method\_coeffs(), and process\_entry\_point\_cycle\_start().

**8.24.6.29 unsigned int jeod::LsodeFirstOrderODEIntegrator::num\_jacobian\_evals [protected]**

Was NJE, in DLS001 common block Number of jacobian evaluations so far for the problem.

trick\_units(-)

Definition at line 448 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by jacobian\_prep\_init().

**8.24.6.30 unsigned int jeod::LsodeFirstOrderODEIntegrator::num\_nordsiek\_cols**

Was L, in DLS001 common block Number of columns in Nordsiek array.

This appears to be a variable that s equal to the current order of the integrator + 1.trick\_units(-)

Definition at line 317 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by integrator\_compute\_new\_order(), integrator\_compute\_new\_order\_prep(), integrator\_core(), integrator\_corrector\_converged(), integrator\_fail\_reset\_order\_1\_part2(), integrator\_reset\_method\_coeffs(), integrator\_reset\_yh(), integrator\_set\_new\_order(), and interpolate\_y().

**8.24.6.31 unsigned int jeod::LsodeFirstOrderODEIntegrator::num\_predictor\_elements**

Was NQNYH, in DLS001 common block.

Number of elements of history array that are changed by predictor.trick\_units(-)

Definition at line 327 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by integrator\_core(), and integrator\_reset\_method\_coeffs().

**8.24.6.32 unsigned int jeod::LsodeFirstOrderODEIntegrator::num\_small\_step\_warnings [protected]**

Was NHNIL, in DLS001 common block.

Number of small-step encounters fo the problem so far.trick\_units(-)

Definition at line 443 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by manager\_integration\_loop\_part2().

**8.24.6.33** unsigned int jeod::LsodeFirstOrderODEIntegrator::num\_steps\_taken [protected]

Was NST, in DLS001 common block.

Number of steps taken for this problem.trick\_units(-)

Definition at line 426 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by integrator\_corrector\_converged(), integrator\_predict(), jacobian\_prep\_wrap\_up(), manager\_check\_stop\_conditions(), and manager\_integration\_loop\_part1().

**8.24.6.34** unsigned int jeod::LsodeFirstOrderODEIntegrator::order\_select\_para

Was IALTH, in DLS001 common block.

0: Select optimal step size and method order 1: If prev\_success\_order < maximum\_order, save vector so that an increase can be considered. >1: Perform neither.trick\_units(-)

Definition at line 298 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by integrator\_compute\_new\_order(), integrator\_compute\_new\_order\_check\_step\_error(), integrator\_core(), integrator\_corrector\_converged(), integrator\_fail\_reset\_order\_1\_part2(), and integrator\_reset\_yh().

**8.24.6.35** double jeod::LsodeFirstOrderODEIntegrator::prev\_good\_step\_size [protected]

was HU, in DLS001 common block.

The size of the last successful step.trick\_units(-)

Definition at line 581 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by integrator\_corrector\_converged(), interpolate\_y(), and reset\_integrator().

**8.24.6.36** LsodeControlDataInterface::IntegrationMethod jeod::LsodeFirstOrderODEIntegrator::prev\_integration\_method [protected]

Was MEO, in DLS001 common block Integration method used in previous call (see integration\_method).

trick\_units(-)

Definition at line 529 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by integrator\_core().

**8.24.6.37** double jeod::LsodeFirstOrderODEIntegrator::prev\_iter\_delta [protected]

Was DELP, in DSTODE, local variable.

Previous value of iter\_delta, used for comparison to identify rate at which iteration is converging / identifying divergence of iteration.trick\_units(-)

Definition at line 460 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by integrator\_corrector\_iteration(), and integrator\_reset\_iteration\_loop\_part2().

**8.24.6.38** unsigned int jeod::LsodeFirstOrderODEIntegrator::prev\_method\_order [protected]

Was NQU, in DLS001 common block.

Method order used in last successful step.trick\_units(-)

Definition at line 534 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by integrator\_corrector\_converged(), and integrator\_wrapup().

**8.24.6.39 double jeod::LsodeFirstOrderODEIntegrator::prev\_step\_size [protected]**

was HOLD, in DLS001 common block.

trick\_units(-)

Definition at line 576 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by integrator\_core(), integrator\_terminate(), and integrator\_test\_stepsize\_change().

**8.24.6.40 unsigned int jeod::LsodeFirstOrderODEIntegrator::prior\_num\_steps [protected]**

Was NSLAST, in DLS001 common block.

Number of steps taken for the problem prior to this call to Lsode.trick\_units(-)

Definition at line 431 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by manager\_check\_stop\_conditions(), and manager\_integration\_loop\_part1().

**8.24.6.41 EntryPoint jeod::LsodeFirstOrderODEIntegrator::re\_entry\_point [protected]**

Indicates where in the integrator to return to following an exit to gether new derivatives.

trick\_units(-)

Definition at line 478 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by get\_re\_entry\_point(), integrate(), integrator\_corrector\_iteration(), integrator\_fail\_reset\_order\_1\_part1(), integrator\_reset\_iteration\_loop\_part1(), jacobian\_prep\_init(), manager\_initialize\_calculation\_part1(), manager\_integration\_loop\_part2(), and reset\_integrator().

**8.24.6.42 double jeod::LsodeFirstOrderODEIntegrator::rel\_change\_since\_jacobian [protected]**

was RC, in DLS001 common block.

Relative change to (step\_size \* method\_coeff\_first) since last update to Jacobian matrix.trick\_units(-)

Definition at line 625 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by integrator\_core(), integrator\_predict(), integrator\_reset\_method\_coeffs(), integrator\_reset\_yh(), and jacobian\_prep\_wrap\_up().

**8.24.6.43 double jeod::LsodeFirstOrderODEIntegrator::sqrt\_epsilon [protected]**

NEW.

square root of epsilon.trick\_units(-)

Definition at line 667 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by calculate\_epsilon(), and manager\_initialize\_calculation\_part1().

**8.24.6.44 double jeod::LsodeFirstOrderODEIntegrator::stage\_target\_time**

was TN, in DLS001 common block.

Value of the independent variable, typically time, to which the integrator has successfully advanced, or to which it will advance in the next step/stage.trick\_units(-)

Definition at line 357 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by integrate(), integrator\_core(), integrator\_corrector\_failed\_part2(), integrator\_error\_test\_failed(), integrator\_predict(), interpolate\_y(), manager\_check\_stop\_conditions(), manager\_integration\_loop\_part1(),

manager\_integration\_loop\_part2(), manager\_integration\_loop\_part3(), process\_entry\_point\_cycle\_start(), and reset\_integrator().

#### 8.24.6.45 unsigned int jeod::LsodeFirstOrderODEIntegrator::step\_at\_last\_jacobian\_update [protected]

Was NSLP, in DLS001 common block.

Step number at last Jacobian update.trick\_units(-)

Definition at line 612 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by integrator\_core(), integrator\_predict(), and jacobian\_prep\_wrap\_up().

#### 8.24.6.46 int jeod::LsodeFirstOrderODEIntegrator::step\_error [protected]

Was KFLAG, in DLS001 common block 0: step was successful -1: requested accuracy could not be achieved.

<=-2: repeated convergence failures.trick\_units(-)

Definition at line 438 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by integrate(), integrator\_compute\_new\_order\_check\_step\_error(), integrator\_core(), integrator\_corrector\_converged(), integrator\_corrector\_failed\_part2(), integrator\_error\_test\_failed(), integrator\_fail\_reset\_order\_1\_part1(), and manager\_integration\_loop\_part3().

#### 8.24.6.47 double jeod::LsodeFirstOrderODEIntegrator::step\_size [protected]

was H, in DLS001 common block.

Step size used on this step, or to be attempted on next.trick\_units(-)

Definition at line 572 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by integrator\_core(), integrator\_corrector\_converged(), integrator\_corrector\_failed\_part2(), integrator\_corrector\_iteration(), integrator\_error\_test\_failed(), integrator\_fail\_reset\_order\_1\_part1(), integrator\_fail\_reset\_order\_1\_part2(), integrator\_predict(), integrator\_reset\_method\_coeffs(), integrator\_reset\_yh(), integrator\_set\_new\_order(), integrator\_terminate(), integrator\_test\_stepsize\_change(), interpolate\_y(), jacobian\_prep\_init(), jacobian\_prep\_wrap\_up(), linear\_chord\_iteration(), manager\_check\_stop\_conditions(), manager\_initialize\_calculation\_part2(), manager\_integration\_loop\_part2(), and manager\_integration\_loop\_part3().

#### 8.24.6.48 double jeod::LsodeFirstOrderODEIntegrator::test\_coeffs\_complete[3][12] [protected]

was TESCO, in DLS001 common block.

The array of all of the test coefficientstrick\_units(-)

Definition at line 559 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by calculate\_integration\_coefficients(), integrator\_compute\_new\_order(), integrator\_compute\_new\_order\_prep(), integrator\_core(), integrator\_corrector\_converged(), integrator\_corrector\_iteration(), integrator\_wrapup(), and LsodeFirstOrderODEIntegrator().

#### 8.24.6.49 bool jeod::LsodeFirstOrderODEIntegrator::update\_jacobian [protected]

Was IPUP, in DLS001 common block.

Flag to indicate whether it is necessary to update the Jacobian.trick\_units(-)

Definition at line 607 of file lsode\_first\_order\_ode\_integrator.hh.

Referenced by integrate(), integrator\_core(), integrator\_corrector\_failed\_part1(), integrator\_corrector\_failed\_part2(), integrator\_fail\_reset\_order\_1\_part2(), integrator\_predict(), and jacobian\_prep\_wrap\_up().

#### 8.24.6.50 `double* jeod::LsodeFirstOrderODEIntegrator::y`

Was Y.

State vector (zeroth derivative).trick\_units(—)

Definition at line 260 of file `lsode_first_order_ode_integrator.hh`.

Referenced by `integrate()`, `integrator_corrector_iteration()`, `integrator_fail_reset_order_1_part1()`, `integrator_reset_iteration_loop_part1()`, `interpolate_y()`, `jacobian_prep_init()`, `jacobian_prep_loop()`, `linear_chord_iteration()`, `linear_solver()`, and `manager_initialize_calculation_part2()`.

#### 8.24.6.51 `const double* jeod::LsodeFirstOrderODEIntegrator::y_dot`

Was .

State vector (first derivative).trick\_units(—)

Definition at line 265 of file `lsode_first_order_ode_integrator.hh`.

Referenced by `integrate()`, `load_derivatives()`, and `manager_initialize_calculation_part2()`.

The documentation for this class was generated from the following files:


- [lsode\\_first\\_order\\_ode\\_integrator.hh](#)
- [lsode\\_first\\_order\\_ode\\_integrator\\_\\_integrator.cc](#)
- [lsode\\_first\\_order\\_ode\\_integrator\\_\\_manager.cc](#)
- [lsode\\_first\\_order\\_ode\\_integrator\\_\\_support.cc](#)
- [lsode\\_first\\_order\\_ode\\_integrator\\_\\_utility.cc](#)

## 8.25 `jeod::LsodeGeneralizedDerivSecondOrderODEIntegrator` Class Reference

JEOD-compatible version of the Livermore ODE solver, LSODE, capable of integrating second-order ODEs.

```
#include <lsode_generalized_second_order_ode_integrator.hh>
```

Inheritance diagram for `jeod::LsodeGeneralizedDerivSecondOrderODEIntegrator`:

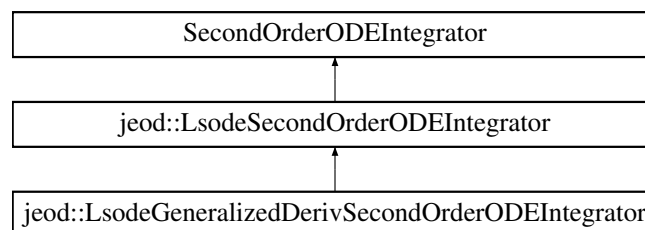

### Public Member Functions

- [LsodeGeneralizedDerivSecondOrderODEIntegrator](#) (void)  
*LsodeGeneralizedDerivSecondOrderODEIntegrator* default constructor.
- [LsodeGeneralizedDerivSecondOrderODEIntegrator](#) (const [LsodeGeneralizedDerivSecondOrderODEIntegrator](#) &src)  
*LsodeGeneralizedDerivSecondOrderODEIntegrator* copy constructor.
- [LsodeGeneralizedDerivSecondOrderODEIntegrator](#) (const [LsodeControlDataInterface](#) &data\_in, er7\_utils::IntegrationControls &controls, const er7\_utils::GeneralizedPositionDerivativeFunctions &deriv\_funs, unsigned int position\_size, unsigned int velocity\_size)  
*non-default constructor*

- virtual [~LsodeGeneralizedDerivSecondOrderODEIntegrator](#) ()  
*LsodeGeneralizedDerivSecondOrderODEIntegrator destructor.*
- virtual [LsodeGeneralizedDerivSecondOrderODEIntegrator \\* create\\_copy](#) () const  
*Clone a LsodeGeneralizedDerivSecondOrderODEIntegrator.*
- virtual [er7\\_utils::IntegratorResult integrate](#) (double dyn\_dt, unsigned int target\_stage, double const \*accel, double \*velocity, double \*position)  
*Propagate state via Lsode's method.*

## Data Fields

- double \* [posdot](#)  
*Stash space for the result of the computation of the derivative of the zeroth-derivative.*

## Private Member Functions

- [LsodeGeneralizedDerivSecondOrderODEIntegrator & operator=](#) (const [LsodeGeneralizedDerivSecondOrderODEIntegrator](#) &src)  
*LsodeGeneralizedDerivSecondOrderODEIntegrator assignment operator.*

## Friends

- class [InputProcessor](#)
- void [init\\_attrjeod\\_\\_LsodeGeneralizedDerivSecondOrderODEIntegrator](#) ()

## Additional Inherited Members

### 8.25.1 Detailed Description

JEOD-compatible version of the Livermore ODE solver, LSODE, capable of integrating second-order ODEs.  
Definition at line 57 of file `lsode_generalized_second_order_ode_integrator.hh`.

### 8.25.2 Member Function Documentation

- 8.25.2.1 [LsodeGeneralizedDerivSecondOrderODEIntegrator& jeod::LsodeGeneralizedDerivSecondOrderODEIntegrator::operator=](#) ( const [LsodeGeneralizedDerivSecondOrderODEIntegrator](#) & src )  
[private]

[LsodeGeneralizedDerivSecondOrderODEIntegrator](#) assignment operator.

not implemented.

#### Parameters

<a href="#">src</a>	Item to be copied.
---------------------	--------------------

### 8.25.3 Friends And Related Function Documentation

- 8.25.3.1 [void init\\_attrjeod\\_\\_LsodeGeneralizedDerivSecondOrderODEIntegrator](#) ( ) [friend]

- 8.25.3.2 [friend class InputProcessor](#) [friend]

Definition at line 59 of file `lsode_generalized_second_order_ode_integrator.hh`.

## 8.25.4 Field Documentation

### 8.25.4.1 `double* jeod::LsodeGeneralizedDerivSecondOrderODEIntegrator::posdot`

Stash space for the result of the computation of the derivative of the zeroth-derivative.

Used with the Generalized derivative form, in which the derivative of the zeroth derivative is not equal to the first-derivative.trick\_units(-)

Definition at line 129 of file `lsode_generalized_second_order_ode_integrator.hh`.

Referenced by `integrate()`, `LsodeGeneralizedDerivSecondOrderODEIntegrator()`, and `~LsodeGeneralizedDerivSecondOrderODEIntegrator()`.

The documentation for this class was generated from the following files:


- [lsode\\_generalized\\_second\\_order\\_ode\\_integrator.hh](#)
- [lsode\\_generalized\\_second\\_order\\_ode\\_integrator.cc](#)

## 8.26 `jeod::LsodeIntegrationControls` Class Reference

Contains controls for an LSODE integrator.

```
#include <lsode_integration_controls.hh>
```

Inheritance diagram for `jeod::LsodeIntegrationControls`:

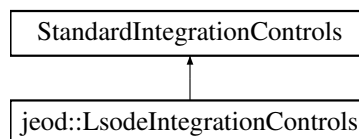

### Public Member Functions

- [LsodeIntegrationControls](#) (void)  
*LsodeIntegrationControls default constructor.*
- [LsodeIntegrationControls](#) (unsigned int num\_stages)
- virtual [~LsodeIntegrationControls](#) ()  
*LsodeIntegrationControls destructor.*
- virtual unsigned int [integrate](#) (double start\_time, double sim\_dt, [er7\\_utils::TimeInterface](#) &time\_interface, [er7\\_utils::IntegratorInterface](#) &integ\_interface, [er7\\_utils::BaseIntegrationGroup](#) &integ\_group)  
*Perform one step of the integration process.*
- virtual [LsodeIntegrationControls \\* create\\_copy](#) () const  
*Create a copy of 'this' StandardIntegrationControls object.*

### Private Member Functions

- [LsodeIntegrationControls & operator=](#) (const [LsodeIntegrationControls](#) &src)  
*LsodeIntegrationControls assignment operator.*
- [LsodeIntegrationControls](#) (const [LsodeIntegrationControls](#) &src)  
*LsodeIntegrationControls copy constructor.*



## Friends

- class [InputProcessor](#)
- void [init\\_attrjeod\\_\\_LsodeIntegrationControls](#) ()

### 8.26.1 Detailed Description

Contains controls for an LSODE integrator.

Definition at line 54 of file `lsode_integration_controls.hh`.

### 8.26.2 Constructor & Destructor Documentation

8.26.2.1 `virtual jeod::LsodeIntegrationControls::~~LsodeIntegrationControls ( ) [inline], [virtual]`

[LsodeIntegrationControls](#) destructor.

Definition at line 72 of file `lsode_integration_controls.hh`.

8.26.2.2 `jeod::LsodeIntegrationControls::LsodeIntegrationControls ( const LsodeIntegrationControls & src ) [private]`

[LsodeIntegrationControls](#) copy constructor.

Parameters

<code>in</code>	<code>src</code>	Item to be copied.
-----------------	------------------	--------------------

### 8.26.3 Member Function Documentation

8.26.3.1 `LsodeIntegrationControls& jeod::LsodeIntegrationControls::operator= ( const LsodeIntegrationControls & src ) [private]`

[LsodeIntegrationControls](#) assignment operator.

Parameters

<code>src</code>	Item to be copied.
------------------	--------------------

### 8.26.4 Friends And Related Function Documentation

8.26.4.1 `void init_attrjeod__LsodeIntegrationControls ( ) [friend]`

8.26.4.2 `friend class InputProcessor [friend]`

Definition at line 57 of file `lsode_integration_controls.hh`.

The documentation for this class was generated from the following files:


- [lsode\\_integration\\_controls.hh](#)
- [lsode\\_integration\\_controls.cc](#)

## 8.27 jeod::LsodeIntegratorConstructor Class Reference

Create state and time integrators that propagate using standard Lsode.

```
#include <lsode_integrator_constructor.hh>
```

Inheritance diagram for jeod::LsodeIntegratorConstructor:

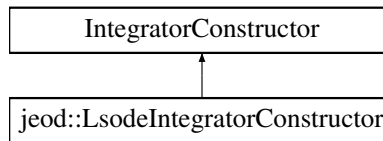

## Public Member Functions

- [LsodeIntegratorConstructor](#) (void)  
*Default constructor.*
- [LsodeIntegratorConstructor](#) (const [LsodeIntegratorConstructor](#) &src)
- virtual const char \* [get\\_class\\_name](#) (void) const  
*Return the class name.*
- virtual bool [implements](#) (er7\_utils::Integration::ODEProblemType problem\_type) const  
*Lsode currently does not implement a second order generalized step integrator.*
- virtual bool [provides](#) (er7\_utils::Integration::ODEProblemType problem\_type) const  
*Lsode currently does not provide a second order generalized step integrator.*
- virtual  
er7\_utils::IntegratorConstructor \* [create\\_copy](#) (void) const  
*Create a duplicate of the constructor.*
- virtual  
er7\_utils::IntegrationControls \* [create\\_integration\\_controls](#) (void) const  
*Create an integration controls that guides the Lsode integration process.*
- virtual  
er7\_utils::FirstOrderODEIntegrator \* [create\\_first\\_order\\_ode\\_integrator](#) (unsigned int size, er7\_utils::IntegrationControls &controls) const  
*Create an Lsode state integrator for a first order ODE.*
- virtual  
er7\_utils::SecondOrderODEIntegrator \* [create\\_second\\_order\\_ode\\_integrator](#) (unsigned int size, er7\_utils::IntegrationControls &controls) const  
*Create an Lsode state integrator for a simple second order ODE.*
- virtual  
er7\_utils::SecondOrderODEIntegrator \* [create\\_generalized\\_deriv\\_second\\_order\\_ode\\_integrator](#) (unsigned int position\_size, unsigned int velocity\_size, const er7\_utils::GeneralizedPositionDerivativeFunctions &deriv\_funs, er7\_utils::IntegrationControls &controls) const  
*Create an Lsode state integrator for a generalized second order ODE where generalized position is advanced with the use of the position derivative function.*
- virtual unsigned int [get\\_transition\\_table\\_size](#) (void) const  
*Lsode does not use a linear transition table.*

## Static Public Member Functions

- static  
er7\_utils::IntegratorConstructor \* [create\\_constructor](#) (void)  
*Named constructor; create an [LsodeIntegratorConstructor](#) instance.*

## Data Fields

- [LsodeControlDataInterface](#) data\_interface

## Private Member Functions

- [LsodeIntegratorConstructor](#) & [operator=](#) (const [LsodeIntegratorConstructor](#) &src)

## Friends

- class [InputProcessor](#)
- void [init\\_attrjeod\\_\\_LsodeIntegratorConstructor](#) ()

### 8.27.1 Detailed Description

Create state and time integrators that propagate using standard Lsode.

Definition at line 62 of file `lsode_integrator_constructor.hh`.

### 8.27.2 Constructor & Destructor Documentation

**8.27.2.1** `jeod::LsodeIntegratorConstructor::LsodeIntegratorConstructor ( void )` `[inline]`

Default constructor.

Definition at line 74 of file `lsode_integrator_constructor.hh`.

### 8.27.3 Member Function Documentation

**8.27.3.1** `virtual const char* jeod::LsodeIntegratorConstructor::get_class_name ( void ) const` `[inline], [virtual]`

Return the class name.

Definition at line 91 of file `lsode_integrator_constructor.hh`.

**8.27.3.2** `virtual unsigned int jeod::LsodeIntegratorConstructor::get_transition_table_size ( void ) const` `[inline], [virtual]`

Lsode does not use a linear transition table.

#### Returns

Always returns 0.

Definition at line 173 of file `lsode_integrator_constructor.hh`.

**8.27.3.3** `virtual bool jeod::LsodeIntegratorConstructor::implements ( er7_utils::Integration::ODEProblemType problem_type ) const` `[inline], [virtual]`

Lsode currently does not implement a second order generalized step integrator.

Definition at line 98 of file `lsode_integrator_constructor.hh`.

**8.27.3.4** `LsodeIntegratorConstructor& jeod::LsodeIntegratorConstructor::operator= ( const LsodeIntegratorConstructor &src )` `[private]`

8.27.3.5 `virtual bool jeod::LsodeIntegratorConstructor::provides ( er7_utils::Integration::ODEProblemType problem_type ) const` `[inline],[virtual]`

Lsode currently does not provide a second order generalized step integrator.

Definition at line 108 of file `lsode_integrator_constructor.hh`.

## 8.27.4 Friends And Related Function Documentation

8.27.4.1 `void init_attrjeod__LsodeIntegratorConstructor ( )` `[friend]`

8.27.4.2 `friend class InputProcessor` `[friend]`

Definition at line 64 of file `lsode_integrator_constructor.hh`.

## 8.27.5 Field Documentation

8.27.5.1 `LsodeControlDataInterface jeod::LsodeIntegratorConstructor::data_interface`

Definition at line 177 of file `lsode_integrator_constructor.hh`.

Referenced by `create_first_order_ode_integrator()`, `create_generalized_deriv_second_order_ode_integrator()`, and `create_second_order_ode_integrator()`.

The documentation for this class was generated from the following files:


- [lsode\\_integrator\\_constructor.hh](#)
- [lsode\\_integrator\\_constructor.cc](#)

## 8.28 jeod::LsodeSecondOrderODEIntegrator Class Reference

JEOD-compatible version of the Livermore ODE solver, LSODE, capable of integrating second-order ODEs.

```
#include <lsode_second_order_ode_integrator.hh>
```

Inheritance diagram for `jeod::LsodeSecondOrderODEIntegrator`:

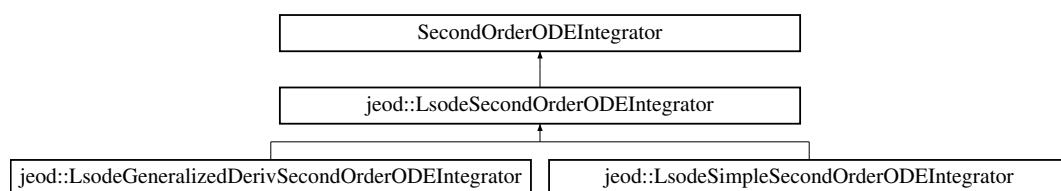

### Public Member Functions

- `virtual ~LsodeSecondOrderODEIntegrator ( )`  
*LsodeSecondOrderODEIntegrator destructor.*
- `int get_re_entry_point ( )`  
*Get the integrator's reentry point.*

### Data Fields

- `double * y`

State vector (zeroth derivative).

- double \* [y\\_dot](#)

State vector (first derivative).

- unsigned int [zeroth\\_derivative\\_size](#)
- unsigned int [first\\_derivative\\_size](#)
- [LsodeFirstOrderODEIntegrator](#) [first\\_order\\_integrator](#)
- bool [arrays\\_allocated](#)

## Protected Member Functions

- [LsodeSecondOrderODEIntegrator](#) (void)

*[LsodeSecondOrderODEIntegrator](#) default constructor.*

- [LsodeSecondOrderODEIntegrator](#) (const [LsodeControlDataInterface](#) &data\_in, [er7\\_utils::IntegrationControls](#) &controls, unsigned int size)

*[LsodeSecondOrderODEIntegrator](#) non-default constructor.*

- [LsodeSecondOrderODEIntegrator](#) (const [LsodeControlDataInterface](#) &data\_in, [er7\\_utils::IntegrationControls](#) &controls, const [er7\\_utils::GeneralizedPositionDerivativeFunctions](#) &deriv\_funs, unsigned int position\_size, unsigned int velocity\_size)
- void [reset\\_integrator](#) ()

*Reset the integrator.*

## Private Member Functions

- [LsodeSecondOrderODEIntegrator](#) & [operator=](#) (const [LsodeSecondOrderODEIntegrator](#) &)

*[LsodeSecondOrderODEIntegrator](#) assignment operator.*

- [LsodeSecondOrderODEIntegrator](#) (const [LsodeSecondOrderODEIntegrator](#) &)

*[LsodeSecondOrderODEIntegrator](#) copy constructor.*

## Friends

- class [InputProcessor](#)
- void [init\\_attrjeod\\_\\_LsodeSecondOrderODEIntegrator](#) ()

## 8.28.1 Detailed Description

JEOD-compatible version of the Livermore ODE solver, LSODE, capable of integrating second-order ODEs.

Definition at line 57 of file [lsode\\_second\\_order\\_ode\\_integrator.hh](#).

## 8.28.2 Constructor & Destructor Documentation

8.28.2.1 `jeod::LsodeSecondOrderODEIntegrator::LsodeSecondOrderODEIntegrator ( const LsodeSecondOrderODEIntegrator & ) [private]`

[LsodeSecondOrderODEIntegrator](#) copy constructor.

Not implemented.

### 8.28.3 Member Function Documentation

#### 8.28.3.1 `int jeod::LsodeSecondOrderODEIntegrator::get_re_entry_point ( ) [inline]`

Get the integrator's reentry point.

Definition at line 77 of file `lsode_second_order_ode_integrator.hh`.

References `first_order_integrator`, and `jeod::LsodeFirstOrderODEIntegrator::get_re_entry_point()`.

#### 8.28.3.2 `LsodeSecondOrderODEIntegrator& jeod::LsodeSecondOrderODEIntegrator::operator= ( const LsodeSecondOrderODEIntegrator & ) [private]`

[LsodeSecondOrderODEIntegrator](#) assignment operator.

Not implemented.

#### 8.28.3.3 `void jeod::LsodeSecondOrderODEIntegrator::reset_integrator ( ) [inline], [protected]`

Reset the integrator.

Definition at line 107 of file `lsode_second_order_ode_integrator.hh`.

References `first_order_integrator`, and `jeod::LsodeFirstOrderODEIntegrator::reset_integrator()`.

### 8.28.4 Friends And Related Function Documentation

#### 8.28.4.1 `void init_attrjeod__LsodeSecondOrderODEIntegrator ( ) [friend]`

#### 8.28.4.2 `friend class InputProcessor [friend]`

Definition at line 60 of file `lsode_second_order_ode_integrator.hh`.

### 8.28.5 Field Documentation

#### 8.28.5.1 `bool jeod::LsodeSecondOrderODEIntegrator::arrays_allocated`

Definition at line 145 of file `lsode_second_order_ode_integrator.hh`.

Referenced by `LsodeSecondOrderODEIntegrator()`, and `~LsodeSecondOrderODEIntegrator()`.

#### 8.28.5.2 `unsigned int jeod::LsodeSecondOrderODEIntegrator::first_derivative_size`

Definition at line 141 of file `lsode_second_order_ode_integrator.hh`.

Referenced by `jeod::LsodeGeneralizedDerivSecondOrderODEIntegrator::integrate()`.

#### 8.28.5.3 `LsodeFirstOrderODEIntegrator jeod::LsodeSecondOrderODEIntegrator::first_order_integrator`

Definition at line 143 of file `lsode_second_order_ode_integrator.hh`.

Referenced by `get_re_entry_point()`, `jeod::LsodeGeneralizedDerivSecondOrderODEIntegrator::integrate()`, `jeod::LsodeSimpleSecondOrderODEIntegrator::integrate()`, and `reset_integrator()`.

**8.28.5.4** `double* jeod::LsodeSecondOrderODEIntegrator::y`

State vector (zeroth derivative).

trick\_units(-)

Definition at line 133 of file `lsode_second_order_ode_integrator.hh`.

Referenced by `jeod::LsodeGeneralizedDerivSecondOrderODEIntegrator::integrate()`, `jeod::LsodeSimpleSecondOrderODEIntegrator::integrate()`, `LsodeSecondOrderODEIntegrator()`, and `~LsodeSecondOrderODEIntegrator()`.

**8.28.5.5** `double* jeod::LsodeSecondOrderODEIntegrator::y_dot`

State vector (first derivative).

trick\_units(-)

Definition at line 138 of file `lsode_second_order_ode_integrator.hh`.

Referenced by `jeod::LsodeGeneralizedDerivSecondOrderODEIntegrator::integrate()`, `jeod::LsodeSimpleSecondOrderODEIntegrator::integrate()`, `LsodeSecondOrderODEIntegrator()`, and `~LsodeSecondOrderODEIntegrator()`.

**8.28.5.6** `unsigned int jeod::LsodeSecondOrderODEIntegrator::zeroth_derivative_size`

Definition at line 140 of file `lsode_second_order_ode_integrator.hh`.

Referenced by `jeod::LsodeGeneralizedDerivSecondOrderODEIntegrator::integrate()`, and `jeod::LsodeSimpleSecondOrderODEIntegrator::integrate()`.

The documentation for this class was generated from the following files:


- [lsode\\_second\\_order\\_ode\\_integrator.hh](#)
- [lsode\\_second\\_order\\_ode\\_integrator.cc](#)

**8.29 jeod::LsodeSimpleSecondOrderODEIntegrator Class Reference**

JEOD-compatible version of the Livermore ODE solver, LSODE, capable of integrating second-order ODEs.

```
#include <lsode_simple_second_order_ode_integrator.hh>
```

Inheritance diagram for `jeod::LsodeSimpleSecondOrderODEIntegrator`:

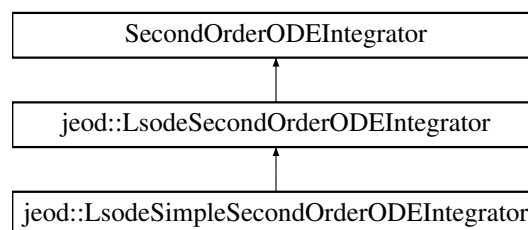**Public Member Functions**

- virtual `~LsodeSimpleSecondOrderODEIntegrator` (void)  
*LsodeSimpleSecondOrderODEIntegrator destructor.*
- `LsodeSimpleSecondOrderODEIntegrator` (void)  
*LsodeSimpleSecondOrderODEIntegrator default constructor.*
- `LsodeSimpleSecondOrderODEIntegrator` (const [LsodeControlDataInterface](#) &data\_in, `er7_utils::IntegrationControls` &controls, unsigned int size)

- [LsodeSimpleSecondOrderODEIntegrator](#) non-default constructor.
- virtual [LsodeSimpleSecondOrderODEIntegrator \\* create\\_copy \(\)](#) const
- virtual `er7_utils::IntegratorResult integrate` (double dyn\_dt, unsigned int target\_stage, double const \*accel, double \*velocity, double \*position)  
*Propagate state via Lsode's method.*

## Private Member Functions

- [LsodeSimpleSecondOrderODEIntegrator & operator=](#) (const [LsodeSimpleSecondOrderODEIntegrator](#) &src)  
[LsodeSimpleSecondOrderODEIntegrator](#) assignment operator.
- [LsodeSimpleSecondOrderODEIntegrator](#) (const [LsodeSimpleSecondOrderODEIntegrator](#) &src)  
[LsodeSimpleSecondOrderODEIntegrator](#) copy constructor.

## Friends

- class [InputProcessor](#)
- void `init_attrjeod__LsodeSimpleSecondOrderODEIntegrator ()`

## Additional Inherited Members

### 8.29.1 Detailed Description

JEOD-compatible version of the Livermore ODE solver, LSODE, capable of integrating second-order ODEs.

Definition at line 60 of file `lsode_simple_second_order_ode_integrator.hh`.

### 8.29.2 Constructor & Destructor Documentation

8.29.2.1 `virtual jeod::LsodeSimpleSecondOrderODEIntegrator::~~LsodeSimpleSecondOrderODEIntegrator ( void )`  
`[inline], [virtual]`

[LsodeSimpleSecondOrderODEIntegrator](#) destructor.

Definition at line 71 of file `lsode_simple_second_order_ode_integrator.hh`.

8.29.2.2 `jeod::LsodeSimpleSecondOrderODEIntegrator::LsodeSimpleSecondOrderODEIntegrator ( const LsodeSimpleSecondOrderODEIntegrator &src )` `[private]`

[LsodeSimpleSecondOrderODEIntegrator](#) copy constructor.

#### Parameters

<code>in</code>	<code>src</code>	Item to be copied.
-----------------	------------------	--------------------

### 8.29.3 Member Function Documentation

8.29.3.1 `LsodeSimpleSecondOrderODEIntegrator& jeod::LsodeSimpleSecondOrderODEIntegrator::operator= ( const LsodeSimpleSecondOrderODEIntegrator &src )` `[private]`

[LsodeSimpleSecondOrderODEIntegrator](#) assignment operator.

not implemented.



## Parameters

<i>src</i>	Item to be copied.
------------	--------------------

## 8.29.4 Friends And Related Function Documentation

8.29.4.1 `void init_attrjeod_LsodeSimpleSecondOrderODEIntegrator ( )` [*friend*]

8.29.4.2 `friend class InputProcessor` [*friend*]

Definition at line 62 of file `lsode_simple_second_order_ode_integrator.hh`.

The documentation for this class was generated from the following files:


- [lsode\\_simple\\_second\\_order\\_ode\\_integrator.hh](#)
- [lsode\\_simple\\_second\\_order\\_ode\\_integrator.cc](#)

## 8.30 jeod::Restartable2DSecondOrderIntegrator Class Reference

Integrates a second order ODE in two dimensional space,  $d^2x/dt^2 = a(x,t)$ , where  $x$  is a two-vector.

```
#include <restartable_2d_second_order_integrator.hh>
```

Inheritance diagram for `jeod::Restartable2DSecondOrderIntegrator`:

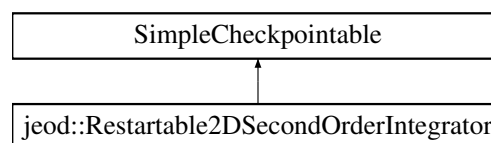

## Public Member Functions

- [Restartable2DSecondOrderIntegrator \( \)](#)  
*Default constructor.*
- `virtual ~Restartable2DSecondOrderIntegrator ( )`  
*Destructor.*
- `void create_integrator (const er7_utils::IntegratorConstructor &generator, er7_utils::IntegrationControls &controls)`  
*Create the integrator to be managed.*
- `void destroy_integrator ( )`  
*Destroy the integrator.*
- `er7_utils::IntegratorResult integrate (double dyn_dt, unsigned int target_stage, double const *accel, double *velocity, double *position)`  
*Propagate state to the specified stage of the integration process for an overall integration time interval of dyn\_dt.*
- `void reset_integrator ( )`  
*Tell the integrator to reset itself.*
- `virtual void simple_restore ( )`  
*Restore the integrator on restart.*

## Private Member Functions

- [Restartable2DSecondOrderIntegrator](#) (const [Restartable2DSecondOrderIntegrator](#) &)  
*Not implemented.*
- [Restartable2DSecondOrderIntegrator](#) & operator= (const [Restartable2DSecondOrderIntegrator](#) &)  
*Not implemented.*

## Private Attributes

- `er7_utils::SecondOrderODEIntegrator * integrator`  
*The pointer to the object that performs integration.*
- [RestartableSimpleSecondOrderODEIntegrator](#)< 2 > [integrator\\_manager](#)  
*The object that creates and manages the integrator object.*

## Friends

- class [InputProcessor](#)
- void [init\\_attrjeod\\_\\_Restartable2DSecondOrderIntegrator](#) ()

### 8.30.1 Detailed Description

Integrates a second order ODE in two dimensional space,  $d^2x/dt^2 = a(x,t)$ , where  $x$  is a two-vector.

Definition at line 48 of file `restartable_2d_second_order_integrator.hh`.

### 8.30.2 Constructor & Destructor Documentation

8.30.2.1 `jeod::Restartable2DSecondOrderIntegrator::Restartable2DSecondOrderIntegrator ( )` `[inline]`

Default constructor.

Definition at line 57 of file `restartable_2d_second_order_integrator.hh`.

8.30.2.2 `virtual jeod::Restartable2DSecondOrderIntegrator::~~Restartable2DSecondOrderIntegrator ( )` `[inline]`,  
`[virtual]`

Destructor.

Definition at line 69 of file `restartable_2d_second_order_integrator.hh`.

References `destroy_integrator()`.

8.30.2.3 `jeod::Restartable2DSecondOrderIntegrator::Restartable2DSecondOrderIntegrator ( const Restartable2DSecondOrderIntegrator & )` `[private]`

Not implemented.

### 8.30.3 Member Function Documentation

8.30.3.1 `void jeod::Restartable2DSecondOrderIntegrator::create_integrator ( const er7_utils::IntegratorConstructor & generator, er7_utils::IntegrationControls & controls )` `[inline]`

Create the integrator to be managed.

## Parameters

in	<i>generator</i>	Generator used to create the integrator.
in, out	<i>controls</i>	Controls to be passed to the generator.

Definition at line 80 of file `restartable_2d_second_order_integrator.hh`.

References `jeod::RestartableStateIntegrator< IntegratorType >::create_integrator()`, and `integrator_manager`.

### 8.30.3.2 void jeod::Restartable2DSecondOrderIntegrator::destroy\_integrator ( ) [inline]

Destroy the integrator.

Definition at line 90 of file `restartable_2d_second_order_integrator.hh`.

References `jeod::RestartableStateIntegrator< IntegratorType >::destroy_integrator()`, `integrator`, `integrator_manager`, and `jeod::RestartableStateIntegrator< IntegratorType >::set_integrator_reference()`.

Referenced by `~Restartable2DSecondOrderIntegrator()`.

### 8.30.3.3 er7\_utils::IntegratorResult jeod::Restartable2DSecondOrderIntegrator::integrate ( double dyn\_dt, unsigned int target\_stage, double const \* accel, double \* velocity, double \* position ) [inline]

Propagate state to the specified stage of the integration process for an overall integration time interval of `dyn_dt`.

Note that this is a pass-through to the encapsulated integrator object. See `er7_utils::SecondOrderODEIntegrator::integrate` for details.

## Parameters

in	<i>dyn_dt</i>	Dynamic time step, in dynamic time seconds.
in	<i>target_stage</i>	The stage of the integration process that the integrator should try to attain.
in	<i>accel</i>	Time derivative of the generalized velocity.
in, out	<i>velocity</i>	Generalized velocity vector.
in, out	<i>position</i>	Generalized position vector.

## Returns

The status (time advance, pass/fail status) of the integration.

Definition at line 112 of file `restartable_2d_second_order_integrator.hh`.

References `integrator`.

### 8.30.3.4 Restartable2DSecondOrderIntegrator& jeod::Restartable2DSecondOrderIntegrator::operator= ( const Restartable2DSecondOrderIntegrator & ) [private]

Not implemented.

### 8.30.3.5 void jeod::Restartable2DSecondOrderIntegrator::reset\_integrator ( ) [inline]

Tell the integrator to reset itself.

This should be called when the time step or time direction changes or upon a discrete change in state such docking/undocking. Such events invalidate saved state (if any). The integrator needs to restart from scratch when such events occur.

Definition at line 130 of file `restartable_2d_second_order_integrator.hh`.

References `integrator`.

**8.30.3.6** `virtual void jeod::Restartable2DSecondOrderIntegrator::simple_restore ( ) [inline],[virtual]`

Restore the integrator on restart.

Definition at line 138 of file `restartable_2d_second_order_integrator.hh`.

References `integrator`, `integrator_manager`, `jeod::RestartableStateIntegrator< IntegratorType >::set_integrator_reference()`, and `jeod::RestartableStateIntegrator< IntegratorType >::simple_restore()`.

## 8.30.4 Friends And Related Function Documentation

**8.30.4.1** `void init_attrjeod__Restartable2DSecondOrderIntegrator ( ) [friend]`

**8.30.4.2** `friend class InputProcessor [friend]`

Definition at line 50 of file `restartable_2d_second_order_integrator.hh`.

## 8.30.5 Field Documentation

**8.30.5.1** `er7_utils::SecondOrderODEIntegrator* jeod::Restartable2DSecondOrderIntegrator::integrator [private]`

The pointer to the object that performs integration.

This object is created managed by the integrator manager.`trick_units(-)`

Definition at line 151 of file `restartable_2d_second_order_integrator.hh`.

Referenced by `destroy_integrator()`, `integrate()`, `reset_integrator()`, and `simple_restore()`.

**8.30.5.2** `RestartableSimpleSecondOrderODEIntegrator<2> jeod::Restartable2DSecondOrderIntegrator::integrator_manager [private]`

The object that creates and manages the integrator object.

`trick_io(**)`

Definition at line 157 of file `restartable_2d_second_order_integrator.hh`.

Referenced by `create_integrator()`, `destroy_integrator()`, and `simple_restore()`.

The documentation for this class was generated from the following file:


- [restartable\\_2d\\_second\\_order\\_integrator.hh](#)

## 8.31 jeod::RestartableFirstOrderODEIntegrator< size > Class Template Reference

A [RestartableFirstOrderODEIntegrator](#) is-a [RestartableStateIntegrator](#) that manages an `er7_utils::FirstOrderODEIntegrator`.

```
#include <restartable_state_integrator_templates.hh>
```

Inheritance diagram for `jeod::RestartableFirstOrderODEIntegrator< size >`:

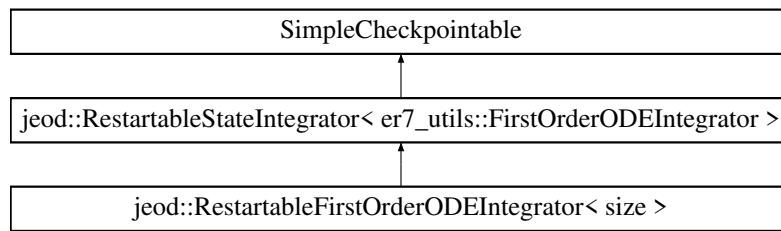

## Public Member Functions

- [RestartableFirstOrderODEIntegrator](#) ()  
*Default constructor.*
- [RestartableFirstOrderODEIntegrator](#) (er7\_utils::FirstOrderODEIntegrator \*&integ\_ref)  
*Non-default constructor.*
- virtual [~RestartableFirstOrderODEIntegrator](#) ()  
*Destructor.*

## Private Member Functions

- virtual  
er7\_utils::FirstOrderODEIntegrator \* [create\\_integrator\\_internal](#) (const er7\_utils::IntegratorConstructor &generator, er7\_utils::IntegrationControls &controls)  
*Create the integrator to be managed.*
- [RestartableFirstOrderODEIntegrator](#) (const [RestartableFirstOrderODEIntegrator](#) &)  
*Not implemented.*
- [RestartableFirstOrderODEIntegrator](#) & [operator=](#) (const [RestartableFirstOrderODEIntegrator](#) &)  
*Not implemented.*

## Additional Inherited Members

### 8.31.1 Detailed Description

template<unsigned int size>class jeod::RestartableFirstOrderODEIntegrator< size >

A [RestartableFirstOrderODEIntegrator](#) is-a [RestartableStateIntegrator](#) that manages an er7\_utils::FirstOrderODE-Integrator.

#### Template Parameters

<i>size</i>	Dimensionality of the state vector.
-------------	-------------------------------------

Definition at line 300 of file restartable\_state\_integrator\_templates.hh.

### 8.31.2 Constructor & Destructor Documentation

8.31.2.1 template<unsigned int size> jeod::RestartableFirstOrderODEIntegrator< size >::RestartableFirstOrderODEIntegrator ( ) [inline]

Default constructor.

Definition at line 308 of file restartable\_state\_integrator\_templates.hh.

```
8.31.2.2  template<unsigned int size> jeod::RestartableFirstOrderODEIntegrator< size  
          >::RestartableFirstOrderODEIntegrator ( er7_utils::FirstOrderODEIntegrator *& integ_ref ) [inline],  
          [explicit]
```

Non-default constructor.

## Parameters

<i>in, out</i>	<i>integ_ref</i>	Reference to the pointer to the integrator that is to be managed.
----------------	------------------	---

Definition at line 317 of file restartable\_state\_integrator\_templates.hh.

8.31.2.3 `template<unsigned int size> virtual jeod::RestartableFirstOrderODEIntegrator< size >::~RestartableFirstOrderODEIntegrator ( ) [inline], [virtual]`

Destructor.

Definition at line 325 of file restartable\_state\_integrator\_templates.hh.

8.31.2.4 `template<unsigned int size> jeod::RestartableFirstOrderODEIntegrator< size >::~RestartableFirstOrderODEIntegrator ( const RestartableFirstOrderODEIntegrator< size > & ) [private]`

Not implemented.

## 8.31.3 Member Function Documentation

8.31.3.1 `template<unsigned int size> virtual er7_utils::FirstOrderODEIntegrator* jeod::RestartableFirstOrderODEIntegrator< size >::create_integrator_internal ( const er7_utils::IntegratorConstructor & generator, er7_utils::IntegrationControls & controls ) [inline], [private], [virtual]`

Create the integrator to be managed.

## Parameters

<i>in</i>	<i>generator</i>	Integrator constructor used to create the integrator.
<i>in, out</i>	<i>controls</i>	Integration controls to be passed to the generator.

Implements [jeod::RestartableStateIntegrator< er7\\_utils::FirstOrderODEIntegrator >](#).

Definition at line 338 of file restartable\_state\_integrator\_templates.hh.

8.31.3.2 `template<unsigned int size> RestartableFirstOrderODEIntegrator& jeod::RestartableFirstOrderODEIntegrator< size >::operator= ( const RestartableFirstOrderODEIntegrator< size > & ) [private]`

Not implemented.

The documentation for this class was generated from the following file:


- [restartable\\_state\\_integrator\\_templates.hh](#)

## 8.32 jeod::RestartableGeneralizedDerivSecondOrderODEIntegrator&lt; position\_size, velocity\_size, DerivFunctions &gt; Class Template Reference

A [RestartableGeneralizedDerivSecondOrderODEIntegrator](#) is-a [RestartableStateIntegrator](#) that manages the integrator for a generalized second order ODE problem, one in which the time derivative of the generalized position is some function of the generalized position and the generalized velocity.

```
#include <restartable_state_integrator_templates.hh>
```

Inheritance diagram for `jeod::RestartableGeneralizedDerivSecondOrderODEIntegrator< position_size, velocity_size, DerivFunctions >`:

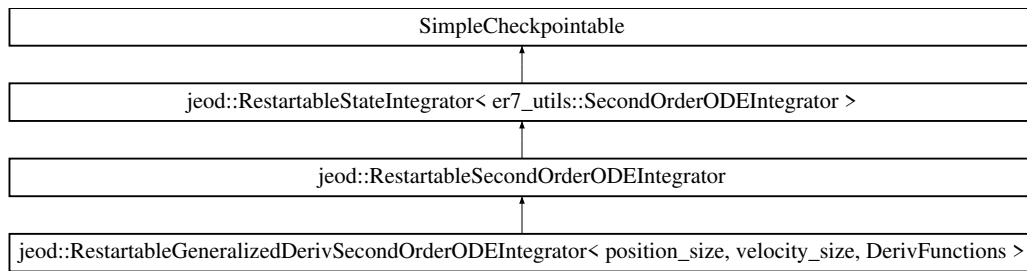

## Public Member Functions

- [RestartableGeneralizedDerivSecondOrderODEIntegrator](#) ()  
*Default constructor.*
- [RestartableGeneralizedDerivSecondOrderODEIntegrator](#) (er7\_utils::SecondOrderODEIntegrator \* &integ\_ref)  
*Non-default constructor.*
- virtual [~RestartableGeneralizedDerivSecondOrderODEIntegrator](#) ()  
*Destructor.*

## Private Member Functions

- virtual  
er7\_utils::SecondOrderODEIntegrator \* [create\\_integrator\\_internal](#) (const er7\_utils::IntegratorConstructor &generator, er7\_utils::IntegrationControls &controls)  
*Create the integrator to be managed.*
- virtual void [simple\\_restore\\_internal](#) (er7\_utils::SecondOrderODEIntegrator \*integrator\_ptr)  
*Perform technique-specific restart actions.*
- [RestartableGeneralizedDerivSecondOrderODEIntegrator](#) (const [RestartableGeneralizedDerivSecondOrderODEIntegrator](#) &)  
*Not implemented.*
- [RestartableGeneralizedDerivSecondOrderODEIntegrator](#) & [operator=](#) (const [RestartableGeneralizedDerivSecondOrderODEIntegrator](#) &)  
*Not implemented.*

## Additional Inherited Members

### 8.32.1 Detailed Description

template<unsigned int position\_size, unsigned int velocity\_size, typename DerivFunctions> class jeod::RestartableGeneralizedDerivSecondOrderODEIntegrator< position\_size, velocity\_size, DerivFunctions >

A [RestartableGeneralizedDerivSecondOrderODEIntegrator](#) is-a [RestartableStateIntegrator](#) that manages the integrator for a generalized second order ODE problem, one in which the time derivative of the generalized position is some function of the generalized position and the generalized velocity.

#### Template Parameters

<i>position_size</i>	The dimensionality of the generalized position.
<i>velocity_size</i>	The dimensionality of the generalized velocity.



<i>DerivFunctions</i>	Class that derives from the class er7_utils::GeneralizedPositionDerivative-Functions.
-----------------------	---

Definition at line 503 of file restartable\_state\_integrator\_templates.hh.

## 8.32.2 Constructor & Destructor Documentation

8.32.2.1 `template<unsigned int position_size, unsigned int velocity_size, typename DerivFunctions>  
jeod::RestartableGeneralizedDerivSecondOrderODEIntegrator< position_size, velocity_size,  
DerivFunctions >::RestartableGeneralizedDerivSecondOrderODEIntegrator ( ) [inline]`

Default constructor.

Definition at line 511 of file restartable\_state\_integrator\_templates.hh.

8.32.2.2 `template<unsigned int position_size, unsigned int velocity_size, typename DerivFunctions>  
jeod::RestartableGeneralizedDerivSecondOrderODEIntegrator< position_size,  
velocity_size, DerivFunctions >::RestartableGeneralizedDerivSecondOrderODEIntegrator (   
er7_utils::SecondOrderODEIntegrator *& integ_ref ) [inline],[explicit]`

Non-default constructor.

Parameters

<i>in, out</i>	<i>integ_ref</i>	Reference to the pointer to the integrator that is to be managed.
----------------	------------------	---

Definition at line 520 of file restartable\_state\_integrator\_templates.hh.

8.32.2.3 `template<unsigned int position_size, unsigned int velocity_size, typename DerivFunctions> virtual  
jeod::RestartableGeneralizedDerivSecondOrderODEIntegrator< position_size, velocity_size,  
DerivFunctions >::~~RestartableGeneralizedDerivSecondOrderODEIntegrator ( ) [inline],  
[virtual]`

Destructor.

Definition at line 528 of file restartable\_state\_integrator\_templates.hh.

8.32.2.4 `template<unsigned int position_size, unsigned int velocity_size, typename DerivFunctions>  
jeod::RestartableGeneralizedDerivSecondOrderODEIntegrator< position_size, velocity_size,  
DerivFunctions >::RestartableGeneralizedDerivSecondOrderODEIntegrator ( const  
RestartableGeneralizedDerivSecondOrderODEIntegrator< position_size, velocity_size, DerivFunctions >  
& ) [private]`

Not implemented.

## 8.32.3 Member Function Documentation

8.32.3.1 `template<unsigned int position_size, unsigned int velocity_size, typename DerivFunctions> virtual  
er7_utils::SecondOrderODEIntegrator* jeod::RestartableGeneralizedDerivSecondOrderODEIntegrator<  
position_size, velocity_size, DerivFunctions >::create_integrator_internal ( const er7_utils::IntegratorConstructor &  
generator, er7_utils::IntegrationControls & controls ) [inline],[private],[virtual]`

Create the integrator to be managed.

## Parameters

in	<i>generator</i>	Integrator constructor used to create the integrator.
in, out	<i>controls</i>	Integration controls to be passed to the generator.

Implements [jeod::RestartableStateIntegrator< er7\\_utils::SecondOrderODEIntegrator >](#).

Definition at line 541 of file restartable\_state\_integrator\_templates.hh.

```
8.32.3.2  template<unsigned int position_size, unsigned int velocity_size, typename DerivFunctions>
          RestartableGeneralizedDerivSecondOrderODEIntegrator& jeod::RestartableGeneralized-
          DerivSecondOrderODEIntegrator< position_size, velocity_size, DerivFunctions >::operator= ( const
          RestartableGeneralizedDerivSecondOrderODEIntegrator< position_size, velocity_size, DerivFunctions >
          & ) [private]
```

Not implemented.

```
8.32.3.3  template<unsigned int position_size, unsigned int velocity_size, typename DerivFunctions> virtual void
          jeod::RestartableGeneralizedDerivSecondOrderODEIntegrator< position_size, velocity_size,
          DerivFunctions >::simple_restore_internal ( er7_utils::SecondOrderODEIntegrator * integrator_ptr ) [inline],
          [private],[virtual]
```

Perform technique-specific restart actions.

The generalized second order ODE integrators need the pointer to the derivative function to be restored.

## Parameters

in, out	<i>integrator_ptr</i>	The base class's integrator data member
---------	-----------------------	---

Reimplemented from [jeod::RestartableStateIntegrator< er7\\_utils::SecondOrderODEIntegrator >](#).

Definition at line 555 of file restartable\_state\_integrator\_templates.hh.

The documentation for this class was generated from the following file:


- [restartable\\_state\\_integrator\\_templates.hh](#)

### 8.33 jeod::RestartableGeneralizedStepSecondOrderODEIntegrator< position\_size, velocity\_size, StepFunctions > Class Template Reference

A [RestartableGeneralizedStepSecondOrderODEIntegrator](#) is-a [RestartableStateIntegrator](#) that manages the integrator for a generalized second order ODE problem, one in which the time derivative of the generalized position is some function of the generalized position and the generalized velocity.

```
#include <restartable_state_integrator_templates.hh>
```

Inheritance diagram for [jeod::RestartableGeneralizedStepSecondOrderODEIntegrator< position\\_size, velocity\\_size, StepFunctions >](#):

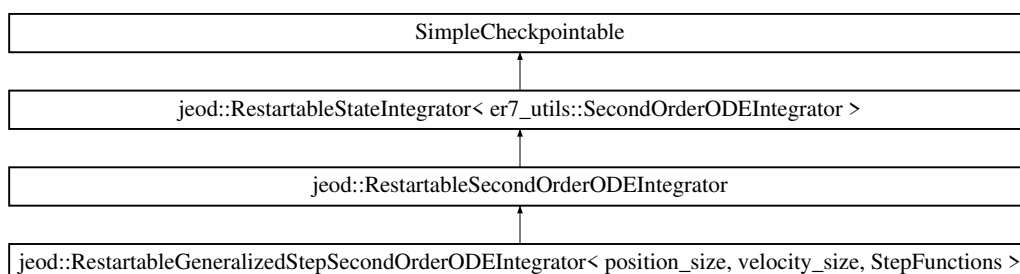

## Public Member Functions

- [RestartableGeneralizedStepSecondOrderODEIntegrator](#) ()  
*Default constructor.*
- [RestartableGeneralizedStepSecondOrderODEIntegrator](#) (er7\_utils::SecondOrderODEIntegrator \* &integ\_ref)  
*Non-default constructor.*
- virtual [~RestartableGeneralizedStepSecondOrderODEIntegrator](#) ()  
*Destructor.*

## Private Member Functions

- virtual er7\_utils::SecondOrderODEIntegrator \* [create\\_integrator\\_internal](#) (const er7\_utils::IntegratorConstructor &generator, er7\_utils::IntegrationControls &controls)  
*Create the integrator to be managed.*
- virtual void [simple\\_restore\\_internal](#) (er7\_utils::SecondOrderODEIntegrator \*integrator\_ptr)  
*Perform technique-specific restart actions.*
- [RestartableGeneralizedStepSecondOrderODEIntegrator](#) (const [RestartableGeneralizedStepSecondOrderODEIntegrator](#) &)  
*Not implemented.*
- [RestartableGeneralizedStepSecondOrderODEIntegrator](#) & [operator=](#) (const [RestartableGeneralizedStepSecondOrderODEIntegrator](#) &)  
*Not implemented.*

## Additional Inherited Members

### 8.33.1 Detailed Description

template<unsigned int position\_size, unsigned int velocity\_size, typename StepFunctions>class jeod::RestartableGeneralizedStepSecondOrderODEIntegrator< position\_size, velocity\_size, StepFunctions >

A [RestartableGeneralizedStepSecondOrderODEIntegrator](#) is-a [RestartableStateIntegrator](#) that manages the integrator for a generalized second order ODE problem, one in which the time derivative of the generalized position is some function of the generalized position and the generalized velocity.

#### Template Parameters

<i>position_size</i>	The dimensionality of the generalized position.
<i>velocity_size</i>	The dimensionality of the generalized velocity.
<i>StepFunctions</i>	Class that derives from er7_utils::GeneralizedPositionStepFunctions.

Definition at line 595 of file restartable\_state\_integrator\_templates.hh.

### 8.33.2 Constructor & Destructor Documentation

8.33.2.1 template<unsigned int position\_size, unsigned int velocity\_size, typename StepFunctions>  
jeod::RestartableGeneralizedStepSecondOrderODEIntegrator< position\_size, velocity\_size, StepFunctions >::RestartableGeneralizedStepSecondOrderODEIntegrator ( ) [inline]

Default constructor.

Definition at line 603 of file restartable\_state\_integrator\_templates.hh.

```
8.33.2.2  template<unsigned int position_size, unsigned int velocity_size, typename StepFunctions> jeod::-  
          RestartableGeneralizedStepSecondOrderODEIntegrator< position_size, velocity_size, StepFunctions  
          >::RestartableGeneralizedStepSecondOrderODEIntegrator ( er7_utils::SecondOrderODEIntegrator *&  
          integ_ref ) [inline],[explicit]
```

Non-default constructor.

## Parameters

<i>in, out</i>	<i>integ_ref</i>	Reference to the pointer to the integrator that is to be managed.
----------------	------------------	---

Definition at line 612 of file restartable\_state\_integrator\_templates.hh.

```
8.33.2.3  template<unsigned int position_size, unsigned int velocity_size, typename StepFunctions> virtual
          jeod::RestartableGeneralizedStepSecondOrderODEIntegrator< position_size, velocity_size,
          StepFunctions >::~RestartableGeneralizedStepSecondOrderODEIntegrator ( ) [inline],
          [virtual]
```

Destructor.

Definition at line 620 of file restartable\_state\_integrator\_templates.hh.

```
8.33.2.4  template<unsigned int position_size, unsigned int velocity_size, typename StepFunctions>
          jeod::RestartableGeneralizedStepSecondOrderODEIntegrator< position_size, velocity_size,
          StepFunctions >::~RestartableGeneralizedStepSecondOrderODEIntegrator ( const
          RestartableGeneralizedStepSecondOrderODEIntegrator< position_size, velocity_size, StepFunctions > &
          ) [private]
```

Not implemented.

## 8.33.3 Member Function Documentation

```
8.33.3.1  template<unsigned int position_size, unsigned int velocity_size, typename StepFunctions> virtual
          er7_utils::SecondOrderODEIntegrator* jeod::RestartableGeneralizedStepSecondOrderODEIntegrator<
          position_size, velocity_size, StepFunctions >::create_integrator_internal ( const er7_utils::IntegratorConstructor &
          generator, er7_utils::IntegrationControls & controls ) [inline], [private], [virtual]
```

Create the integrator to be managed.

## Parameters

<i>in</i>	<i>generator</i>	Integrator constructor used to create the integrator.
<i>in, out</i>	<i>controls</i>	Integration controls to be passed to the generator.

Implements [jeod::RestartableStateIntegrator< er7\\_utils::SecondOrderODEIntegrator >](#).

Definition at line 633 of file restartable\_state\_integrator\_templates.hh.

```
8.33.3.2  template<unsigned int position_size, unsigned int velocity_size, typename StepFunctions>
          RestartableGeneralizedStepSecondOrderODEIntegrator& jeod::RestartableGeneralized-
          StepSecondOrderODEIntegrator< position_size, velocity_size, StepFunctions >::operator= ( const
          RestartableGeneralizedStepSecondOrderODEIntegrator< position_size, velocity_size, StepFunctions > &
          ) [private]
```

Not implemented.

```
8.33.3.3  template<unsigned int position_size, unsigned int velocity_size, typename StepFunctions> virtual void
          jeod::RestartableGeneralizedStepSecondOrderODEIntegrator< position_size, velocity_size,
          StepFunctions >::simple_restore_internal ( er7_utils::SecondOrderODEIntegrator * integrator_ptr ) [inline],
          [private], [virtual]
```

Perform technique-specific restart actions.

The generalized second order ODE integrators need the pointer to the derivative function to be restored.

## Parameters

<code>in, out</code>	<code>integrator_ptr</code>	The base class's integrator data member
----------------------	-----------------------------	---

Reimplemented from [jeod::RestartableStateIntegrator< er7\\_utils::SecondOrderODEIntegrator >](#).

Definition at line 647 of file `restartable_state_integrator_templates.hh`.

The documentation for this class was generated from the following file:


- [restartable\\_state\\_integrator\\_templates.hh](#)

## 8.34 jeod::RestartableScalarFirstOrderODEIntegrator Class Reference

A [RestartableScalarFirstOrderODEIntegrator](#) integrates a first order ODE,  $dx/dt = v(x,t)$ , where  $x$  is a scalar.

```
#include <restartable_state_integrator.hh>
```

Inheritance diagram for `jeod::RestartableScalarFirstOrderODEIntegrator`:

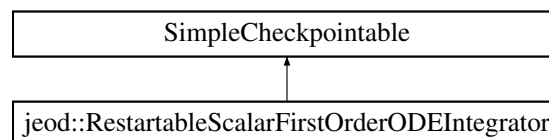

### Public Member Functions

- [RestartableScalarFirstOrderODEIntegrator](#) ()  
*Default constructor.*
- virtual [~RestartableScalarFirstOrderODEIntegrator](#) ()  
*Destructor.*
- void [create\\_integrator](#) (const er7\_utils::IntegratorConstructor &generator, er7\_utils::IntegrationControls &controls)  
*Create the integrator to be managed.*
- void [destroy\\_integrator](#) ()  
*Destroy the integrator.*
- er7\_utils::IntegratorResult [integrate](#) (double dyn\_dt, unsigned int target\_stage, double \*xdot, double \*x)  
*Propagate state to the specified stage of the integration process for an overall integration time interval of dyn\_dt.*
- void [reset\\_integrator](#) ()  
*Tell the integrator to reset itself.*
- virtual void [simple\\_restore](#) ()  
*Restore the integrator on restart.*

### Private Member Functions

- [RestartableScalarFirstOrderODEIntegrator](#) (const [RestartableScalarFirstOrderODEIntegrator](#) &)  
*Not implemented.*
- [RestartableScalarFirstOrderODEIntegrator](#) & operator= (const [RestartableScalarFirstOrderODEIntegrator](#) &)  
*Not implemented.*

## Private Attributes

- `er7_utils::FirstOrderODEIntegrator * integrator`  
*Pointer to the object that performs integration.*
- `RestartableFirstOrderODEIntegrator< 1 > integrator_manager`  
*Object that creates and manages the integrator object.*

## Friends

- class `InputProcessor`
- void `init_attrjeod__RestartableScalarFirstOrderODEIntegrator ()`

### 8.34.1 Detailed Description

A `RestartableScalarFirstOrderODEIntegrator` integrates a first order ODE,  $dx/dt = v(x,t)$ , where  $x$  is a scalar.  
Definition at line 57 of file `restartable_state_integrator.hh`.

### 8.34.2 Constructor & Destructor Documentation

#### 8.34.2.1 `jeod::RestartableScalarFirstOrderODEIntegrator::RestartableScalarFirstOrderODEIntegrator ( )` `[inline]`

Default constructor.

Definition at line 65 of file `restartable_state_integrator.hh`.

#### 8.34.2.2 `virtual jeod::RestartableScalarFirstOrderODEIntegrator::~~RestartableScalarFirstOrderODEIntegrator ( )` `[inline], [virtual]`

Destructor.

Definition at line 77 of file `restartable_state_integrator.hh`.

#### 8.34.2.3 `jeod::RestartableScalarFirstOrderODEIntegrator::RestartableScalarFirstOrderODEIntegrator ( const RestartableScalarFirstOrderODEIntegrator & )` `[private]`

Not implemented.

### 8.34.3 Member Function Documentation

#### 8.34.3.1 `void jeod::RestartableScalarFirstOrderODEIntegrator::create_integrator ( const er7_utils::IntegratorConstructor & generator, er7_utils::IntegrationControls & controls )` `[inline]`

Create the integrator to be managed.

Parameters

<code>in</code>	<code>generator</code>	Integrator constructor used to create the integrator.
<code>in, out</code>	<code>controls</code>	Integration controls to be passed to the generator.

Definition at line 84 of file `restartable_state_integrator.hh`.

References `jeod::RestartableStateIntegrator< IntegratorType >::create_integrator()`, and `integrator_manager`.

#### 8.34.3.2 void jeod::RestartableScalarFirstOrderODEIntegrator::destroy\_integrator ( ) [inline]

Destroy the integrator.

Definition at line 94 of file restartable\_state\_integrator.hh.

References jeod::RestartableStateIntegrator< IntegratorType >::destroy\_integrator(), and integrator\_manager.

#### 8.34.3.3 er7\_utils::IntegratorResult jeod::RestartableScalarFirstOrderODEIntegrator::integrate ( double dyn\_dt, unsigned int target\_stage, double \* xdot, double \* x ) [inline]

Propagate state to the specified stage of the integration process for an overall integration time interval of dyn\_dt.

Note that this is a pass-through to the encapsulated integrator object. See er7\_utils::FirstOrderODEIntegrator::integrate for details.

##### Parameters

in	<i>dyn_dt</i>	Dynamic time step, in dynamic time seconds.
in	<i>target_stage</i>	The stage of the integration process that the integrator should try to attain.
in	<i>xdot</i>	Time derivative of x.
in, out	<i>x</i>	Item to be integrated.

##### Returns

The status (time advance, pass/fail status) of the integration.

Definition at line 114 of file restartable\_state\_integrator.hh.

References integrator.

#### 8.34.3.4 RestartableScalarFirstOrderODEIntegrator& jeod::RestartableScalarFirstOrderODEIntegrator::operator= ( const RestartableScalarFirstOrderODEIntegrator & ) [private]

Not implemented.

#### 8.34.3.5 void jeod::RestartableScalarFirstOrderODEIntegrator::reset\_integrator ( ) [inline]

Tell the integrator to reset itself.

This should be called when the time step or time direction changes or upon a discrete change in state such docking/undocking. Such events invalidate saved state (if any). The integrator needs to restart from scratch when such events occur.

Definition at line 130 of file restartable\_state\_integrator.hh.

References integrator.

#### 8.34.3.6 virtual void jeod::RestartableScalarFirstOrderODEIntegrator::simple\_restore ( ) [inline], [virtual]

Restore the integrator on restart.

Definition at line 138 of file restartable\_state\_integrator.hh.

References integrator, integrator\_manager, jeod::RestartableStateIntegrator< IntegratorType >::set\_integrator\_reference(), and jeod::RestartableStateIntegrator< IntegratorType >::simple\_restore().

### 8.34.4 Friends And Related Function Documentation



8.34.4.1 `void init_attrjeod__RestartableScalarFirstOrderODEIntegrator ( ) [friend]`

8.34.4.2 `friend class InputProcessor [friend]`

Definition at line 58 of file `restartable_state_integrator.hh`.

### 8.34.5 Field Documentation

8.34.5.1 `er7_utils::FirstOrderODEIntegrator* jeod::RestartableScalarFirstOrderODEIntegrator::integrator [private]`

Pointer to the object that performs integration.

The object is created managed by the integrator manager.`trick_units(-)`

Definition at line 151 of file `restartable_state_integrator.hh`.

Referenced by `integrate()`, `reset_integrator()`, and `simple_restore()`.

8.34.5.2 `RestartableFirstOrderODEIntegrator<1> jeod::RestartableScalarFirstOrderODEIntegrator::integrator_manager [private]`

Object that creates and manages the integrator object.

`trick_io(**)`

Definition at line 156 of file `restartable_state_integrator.hh`.

Referenced by `create_integrator()`, `destroy_integrator()`, and `simple_restore()`.

The documentation for this class was generated from the following file:

- [restartable\\_state\\_integrator.hh](#)

## 8.35 jeod::RestartableSecondOrderODEIntegrator Class Reference

A [RestartableSecondOrderODEIntegrator](#) is-a [RestartableStateIntegrator](#) that manages the integrator for a second order ODE problem.

```
#include <restartable_state_integrator_templates.hh>
```

Inheritance diagram for `jeod::RestartableSecondOrderODEIntegrator`:



### Public Member Functions

- virtual [~RestartableSecondOrderODEIntegrator](#) ()  
*Destructor.*

### Protected Member Functions

- [RestartableSecondOrderODEIntegrator](#) ()  
*Default constructor.*
- [RestartableSecondOrderODEIntegrator](#) (er7\_utils::SecondOrderODEIntegrator \*&integ\_ref)  
*Non-default constructor.*

## Private Member Functions

- [RestartableSecondOrderODEIntegrator](#) (const [RestartableSecondOrderODEIntegrator](#) &)  
*Not implemented.*
- [RestartableSecondOrderODEIntegrator](#) & operator= (const [RestartableSecondOrderODEIntegrator](#) &)  
*Not implemented.*

### 8.35.1 Detailed Description

A [RestartableSecondOrderODEIntegrator](#) is-a [RestartableStateIntegrator](#) that manages the integrator for a second order ODE problem.

Definition at line 367 of file `restartable_state_integrator_templates.hh`.

### 8.35.2 Constructor & Destructor Documentation

8.35.2.1 `virtual jeod::RestartableSecondOrderODEIntegrator::~~RestartableSecondOrderODEIntegrator ( ) [inline], [virtual]`

Destructor.

Definition at line 377 of file `restartable_state_integrator_templates.hh`.

8.35.2.2 `jeod::RestartableSecondOrderODEIntegrator::RestartableSecondOrderODEIntegrator ( ) [inline], [protected]`

Default constructor.

Definition at line 386 of file `restartable_state_integrator_templates.hh`.

8.35.2.3 `jeod::RestartableSecondOrderODEIntegrator::RestartableSecondOrderODEIntegrator ( er7_utils::SecondOrderODEIntegrator *& integ_ref ) [inline], [explicit], [protected]`

Non-default constructor.

Parameters

<code>in, out</code>	<code>integ_ref</code>	Reference to the pointer to the integrator that is to be managed.
----------------------	------------------------	---

Definition at line 395 of file `restartable_state_integrator_templates.hh`.

8.35.2.4 `jeod::RestartableSecondOrderODEIntegrator::RestartableSecondOrderODEIntegrator ( const RestartableSecondOrderODEIntegrator & ) [private]`

Not implemented.

### 8.35.3 Member Function Documentation

8.35.3.1 `RestartableSecondOrderODEIntegrator& jeod::RestartableSecondOrderODEIntegrator::operator= ( const RestartableSecondOrderODEIntegrator & ) [private]`

Not implemented.

The documentation for this class was generated from the following file:


- [restartable\\_state\\_integrator\\_templates.hh](#)

## 8.36 jeod::RestartableSimpleSecondOrderODEIntegrator< size > Class Template Reference

A [RestartableSimpleSecondOrderODEIntegrator](#) is-a [RestartableSecondOrderODEIntegrator](#) that manages the integrator for a simple second order ODE problem, one in which the time derivative of the generalized position is the generalized velocity.

```
#include <restartable_state_integrator_templates.hh>
```

Inheritance diagram for jeod::RestartableSimpleSecondOrderODEIntegrator< size >:

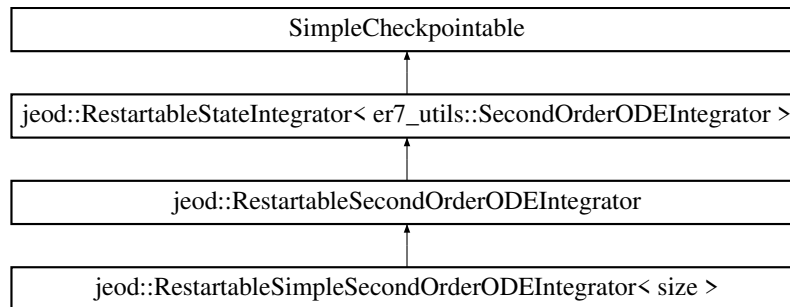

### Public Member Functions

- [RestartableSimpleSecondOrderODEIntegrator](#) ()  
*Default constructor.*
- [RestartableSimpleSecondOrderODEIntegrator](#) (er7\_utils::SecondOrderODEIntegrator \* &integ\_ref)  
*Non-default constructor.*
- virtual [~RestartableSimpleSecondOrderODEIntegrator](#) ()  
*Destructor.*

### Private Member Functions

- virtual  
er7\_utils::SecondOrderODEIntegrator \* [create\\_integrator\\_internal](#) (const er7\_utils::IntegratorConstructor &generator, er7\_utils::IntegrationControls &controls)  
*Create the integrator to be managed.*
- [RestartableSimpleSecondOrderODEIntegrator](#) (const [RestartableSimpleSecondOrderODEIntegrator](#) &)  
*Not implemented.*
- [RestartableSimpleSecondOrderODEIntegrator](#) & [operator=](#) (const [RestartableSimpleSecondOrderODEIntegrator](#) &)  
*Not implemented.*

### Additional Inherited Members

#### 8.36.1 Detailed Description

```
template<unsigned int size>class jeod::RestartableSimpleSecondOrderODEIntegrator< size >
```

A [RestartableSimpleSecondOrderODEIntegrator](#) is-a [RestartableSecondOrderODEIntegrator](#) that manages the integrator for a simple second order ODE problem, one in which the time derivative of the generalized position is the generalized velocity.

## Template Parameters

<i>size</i>	Size of the position vector (and also of velocity).
-------------	---

Definition at line 427 of file restartable\_state\_integrator\_templates.hh.

## 8.36.2 Constructor &amp; Destructor Documentation

8.36.2.1 `template<unsigned int size> jeod::RestartableSimpleSecondOrderODEIntegrator< size >::RestartableSimpleSecondOrderODEIntegrator ( ) [inline]`

Default constructor.

Definition at line 435 of file restartable\_state\_integrator\_templates.hh.

8.36.2.2 `template<unsigned int size> jeod::RestartableSimpleSecondOrderODEIntegrator< size >::RestartableSimpleSecondOrderODEIntegrator ( er7_utils::SecondOrderODEIntegrator *& integ_ref ) [inline], [explicit]`

Non-default constructor.

## Parameters

<i>in, out</i>	<i>integ_ref</i>	Reference to the pointer to the integrator that is to be managed.
----------------	------------------	---

Definition at line 444 of file restartable\_state\_integrator\_templates.hh.

8.36.2.3 `template<unsigned int size> virtual jeod::RestartableSimpleSecondOrderODEIntegrator< size >::~RestartableSimpleSecondOrderODEIntegrator ( ) [inline], [virtual]`

Destructor.

Definition at line 452 of file restartable\_state\_integrator\_templates.hh.

8.36.2.4 `template<unsigned int size> jeod::RestartableSimpleSecondOrderODEIntegrator< size >::RestartableSimpleSecondOrderODEIntegrator ( const RestartableSimpleSecondOrderODEIntegrator< size > & ) [private]`

Not implemented.

## 8.36.3 Member Function Documentation

8.36.3.1 `template<unsigned int size> virtual er7_utils::SecondOrderODEIntegrator* jeod::RestartableSimpleSecondOrderODEIntegrator< size >::create_integrator_internal ( const er7_utils::IntegratorConstructor & generator, er7_utils::IntegrationControls & controls ) [inline], [private], [virtual]`

Create the integrator to be managed.

## Parameters

<i>in</i>	<i>generator</i>	Integrator constructor used to create the integrator.
<i>in, out</i>	<i>controls</i>	Integration controls to be passed to the generator.

Implements [jeod::RestartableStateIntegrator< er7\\_utils::SecondOrderODEIntegrator >](#).

Definition at line 465 of file restartable\_state\_integrator\_templates.hh.

```
8.36.3.2 template<unsigned int size> RestartableSimpleSecondOrderODEIntegrator&
      jeod::RestartableSimpleSecondOrderODEIntegrator< size >::operator= ( const
      RestartableSimpleSecondOrderODEIntegrator< size > & ) [private]
```

Not implemented.

The documentation for this class was generated from the following file:


- [restartable\\_state\\_integrator\\_templates.hh](#)

## 8.37 jeod::RestartableSO3SecondOrderODEIntegrator Class Reference

A [RestartableSO3SecondOrderODEIntegrator](#) integrates a generalized second order ODE that describes rotation in three space.

```
#include <restartable_state_integrator.hh>
```

Inheritance diagram for jeod::RestartableSO3SecondOrderODEIntegrator:

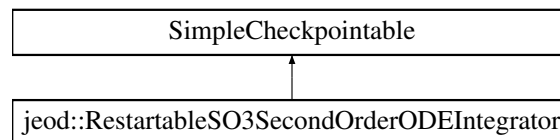

### Public Member Functions

- [RestartableSO3SecondOrderODEIntegrator](#) ()  
*Default constructor.*
- virtual [~RestartableSO3SecondOrderODEIntegrator](#) ()  
*Destructor.*
- void [create\\_integrator](#) ([GeneralizedSecondOrderODETechnique::TechniqueType](#) technique\_in, const er7\_utils::IntegratorConstructor &generator, er7\_utils::IntegrationControls &controls)  
*Create the integrator to be managed.*
- void [destroy\\_integrator](#) ()  
*Destroy the integrator.*
- er7\_utils::IntegratorResult [integrate](#) (double dyn\_dt, unsigned int target\_stage, double const \*accel, double \*velocity, double \*position)  
*Propagate state to the specified stage of the integration process for an overall integration time interval of dyn\_dt.*
- void [reset\\_integrator](#) ()  
*Tell the integrator to reset itself.*
- virtual void [simple\\_restore](#) ()  
*Restore the integrator on restart.*

### Private Member Functions

- [RestartableSO3SecondOrderODEIntegrator](#) (const [RestartableSO3SecondOrderODEIntegrator](#) &)  
*Not implemented.*
- [RestartableSO3SecondOrderODEIntegrator](#) & operator= (const [RestartableSO3SecondOrderODEIntegrator](#) &)  
*Not implemented.*

## Private Attributes

- [GeneralizedSecondOrderODETechnique::TechniqueType technique](#)  
*Specifies the mechanism for integrating rotational state.*
- `er7_utils::SecondOrderODEIntegrator * integrator`  
*Pointer to the object that performs integration.*
- [RestartableGeneralizedDerivSecondOrderODEIntegrator](#)  
< 4, 3, `er7_utils::LeftQuaternionGeneralizedPositionFunctions` > [generalized\\_deriv\\_integrator\\_manager](#)  
*SO3 generalized derivative integrator.*
- [RestartableGeneralizedStepSecondOrderODEIntegrator](#)  
< 4, 3, `er7_utils::LeftQuaternionGeneralizedPositionFunctions` > [generalized\\_step\\_integrator\\_manager](#)  
*SO3 Lie Group integrator.*

## Friends

- class [InputProcessor](#)
- void [init\\_attrjeod\\_\\_RestartableSO3SecondOrderODEIntegrator](#) ()

### 8.37.1 Detailed Description

A [RestartableSO3SecondOrderODEIntegrator](#) integrates a generalized second order ODE that describes rotation in three space.

Definition at line 305 of file `restartable_state_integrator.hh`.

### 8.37.2 Constructor & Destructor Documentation

8.37.2.1 `jeod::RestartableSO3SecondOrderODEIntegrator::RestartableSO3SecondOrderODEIntegrator ( )` `[inline]`

Default constructor.

Definition at line 313 of file `restartable_state_integrator.hh`.

8.37.2.2 `virtual jeod::RestartableSO3SecondOrderODEIntegrator::~~RestartableSO3SecondOrderODEIntegrator ( )`  
`[inline], [virtual]`

Destructor.

Definition at line 327 of file `restartable_state_integrator.hh`.

References `destroy_integrator()`.

8.37.2.3 `jeod::RestartableSO3SecondOrderODEIntegrator::RestartableSO3SecondOrderODEIntegrator ( const RestartableSO3SecondOrderODEIntegrator & )` `[private]`

Not implemented.

### 8.37.3 Member Function Documentation

8.37.3.1 `void jeod::RestartableSO3SecondOrderODEIntegrator::create_integrator ( GeneralizedSecondOrderODETechnique::TechniqueType technique_in, const er7_utils::IntegratorConstructor & generator, er7_utils::IntegrationControls & controls )` `[inline]`

Create the integrator to be managed.

## Parameters

in	<i>technique_in</i>	Integration technique; generalized step vs deriv.
in	<i>generator</i>	Integrator constructor used to create the integrator.
in, out	<i>controls</i>	Integration controls to be passed to the generator.

Definition at line 338 of file restartable\_state\_integrator.hh.

References jeod::GeneralizedSecondOrderODETechnique::Cartesian, jeod::RestartableStateIntegrator< IntegratorType >::create\_integrator(), generalized\_deriv\_integrator\_manager, generalized\_step\_integrator\_manager, integrator, jeod::IntegrationMessages::invalid\_item, jeod::GeneralizedSecondOrderODETechnique::LieGroup, jeod::RestartableStateIntegrator< IntegratorType >::set\_integrator\_reference(), and technique.

### 8.37.3.2 void jeod::RestartableSO3SecondOrderODEIntegrator::destroy\_integrator ( ) [inline]

Destroy the integrator.

Definition at line 369 of file restartable\_state\_integrator.hh.

References jeod::RestartableStateIntegrator< IntegratorType >::destroy\_integrator(), generalized\_deriv\_integrator\_manager, generalized\_step\_integrator\_manager, technique, and jeod::GeneralizedSecondOrderODETechnique::Unspecified.

Referenced by ~RestartableSO3SecondOrderODEIntegrator().

### 8.37.3.3 er7\_utils::IntegratorResult jeod::RestartableSO3SecondOrderODEIntegrator::integrate ( double dyn\_dt, unsigned int target\_stage, double const \* accel, double \* velocity, double \* position ) [inline]

Propagate state to the specified stage of the integration process for an overall integration time interval of dyn\_dt.

Note that this is a pass-through to the encapsulated integrator object. See er7\_utils::SecondOrderODEIntegrator::integrate for details.

## Parameters

in	<i>dyn_dt</i>	Dynamic time step, in dynamic time seconds.
in	<i>target_stage</i>	The stage of the integration process that the integrator should try to attain.
in	<i>accel</i>	Time derivative of the generalized velocity.
in, out	<i>velocity</i>	Generalized velocity vector.
in, out	<i>position</i>	Generalized position vector.

## Returns

The status (time advance, pass/fail status) of the integration.

Definition at line 393 of file restartable\_state\_integrator.hh.

References integrator.

### 8.37.3.4 RestartableSO3SecondOrderODEIntegrator& jeod::RestartableSO3SecondOrderODEIntegrator::operator= ( const RestartableSO3SecondOrderODEIntegrator & ) [private]

Not implemented.

### 8.37.3.5 void jeod::RestartableSO3SecondOrderODEIntegrator::reset\_integrator ( ) [inline]

Tell the integrator to reset itself.

This should be called when the time step or time direction changes or upon a discrete change in state such docking/undocking. Such events invalidate saved state (if any). The integrator needs to restart from scratch when such events occur.

Definition at line 411 of file restartable\_state\_integrator.hh.

References integrator.

**8.37.3.6** `virtual void jeod::RestartableSO3SecondOrderODEIntegrator::simple_restore ( ) [inline],[virtual]`

Restore the integrator on restart.

Definition at line 419 of file restartable\_state\_integrator.hh.

References jeod::GeneralizedSecondOrderODETechnique::Cartesian, jeod::RestartableStateIntegrator< IntegratorType >::clear\_integrator\_reference(), generalized\_deriv\_integrator\_manager, generalized\_step\_integrator\_manager, integrator, jeod::GeneralizedSecondOrderODETechnique::LieGroup, jeod::RestartableStateIntegrator< IntegratorType >::set\_integrator\_reference(), jeod::RestartableStateIntegrator< IntegratorType >::simple\_restore(), and technique.

## 8.37.4 Friends And Related Function Documentation

**8.37.4.1** `void init_attrjeod__RestartableSO3SecondOrderODEIntegrator ( ) [friend]`

**8.37.4.2** `friend class InputProcessor [friend]`

Definition at line 306 of file restartable\_state\_integrator.hh.

## 8.37.5 Field Documentation

**8.37.5.1** `RestartableGeneralizedDerivSecondOrderODEIntegrator< 4, 3, er7_utils::LeftQuaternionGeneralizedPositionFunctions> jeod::RestartableSO3SecondOrderODEIntegrator::generalized_deriv_integrator_manager [private]`

SO3 generalized derivative integrator.

trick\_io(\*\*)

Definition at line 459 of file restartable\_state\_integrator.hh.

Referenced by create\_integrator(), destroy\_integrator(), and simple\_restore().

**8.37.5.2** `RestartableGeneralizedStepSecondOrderODEIntegrator< 4, 3, er7_utils::LeftQuaternionGeneralizedPositionFunctions> jeod::RestartableSO3SecondOrderODEIntegrator::generalized_step_integrator_manager [private]`

SO3 Lie Group integrator.

trick\_io(\*\*)

Definition at line 466 of file restartable\_state\_integrator.hh.

Referenced by create\_integrator(), destroy\_integrator(), and simple\_restore().

**8.37.5.3** `er7_utils::SecondOrderODEIntegrator* jeod::RestartableSO3SecondOrderODEIntegrator::integrator [private]`

Pointer to the object that performs integration.

This object is created and managed by one of the integrator managers defined below. The technique dictates which of the two is used. `trick_units(-)`

Definition at line 452 of file restartable\_state\_integrator.hh.

Referenced by create\_integrator(), integrate(), reset\_integrator(), and simple\_restore().



#### 8.37.5.4 GeneralizedSecondOrderODETechnique::TechniqueType jeod::RestartableSO3SecondOrderODEIntegrator::technique [private]

Specifies the mechanism for integrating rotational state.

trick\_units(-)

Definition at line 445 of file restartable\_state\_integrator.hh.

Referenced by create\_integrator(), destroy\_integrator(), and simple\_restore().

The documentation for this class was generated from the following file:


- [restartable\\_state\\_integrator.hh](#)

## 8.38 jeod::RestartableStateIntegrator< IntegratorType > Class Template Reference

A [RestartableStateIntegrator](#) establishes the basic capabilities needed to make a state integrator a managed resource.

```
#include <restartable_state_integrator_templates.hh>
```

Inheritance diagram for jeod::RestartableStateIntegrator< IntegratorType >:

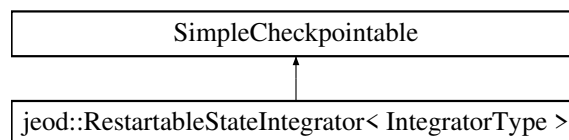

### Public Member Functions

- virtual [~RestartableStateIntegrator](#) ()  
*Destructor.*
- void [create\\_integrator](#) (const er7\_utils::IntegratorConstructor &generator, er7\_utils::IntegrationControls &controls)  
*Create the integrator to be managed.*
- void [destroy\\_integrator](#) ()  
*Destroy the integrator.*
- void [clear\\_integrator\\_reference](#) ()  
*Clear the pointer to the external integrator object.*
- void [set\\_integrator\\_reference](#) (IntegratorType \*&integ\_ptr)  
*Set the pointer to the external integrator object.*
- virtual void [simple\\_restore](#) ()  
*Restore the integrator on restart.*

### Protected Member Functions

- [RestartableStateIntegrator](#) ()  
*Default constructor.*
- [RestartableStateIntegrator](#) (IntegratorType \*&integ\_ref)  
*Non-default constructor.*

## Private Member Functions

- virtual IntegratorType \* [create\\_integrator\\_internal](#) (const er7\_utils::IntegratorConstructor &generator, er7\_utils::IntegrationControls &controls)=0  
*Create the integrator to be managed.*
- virtual void [simple\\_restore\\_internal](#) (IntegratorType \*integrator\_ptr)  
*Perform technique-specific restart actions.*
- [RestartableStateIntegrator](#) (const [RestartableStateIntegrator](#) &)  
*Not implemented.*
- [RestartableStateIntegrator](#) & operator= (const [RestartableStateIntegrator](#) &)  
*Not implemented.*

## Private Attributes

- IntegratorType \*\* [integrator\\_handle](#)  
*Pointer to the containing object's integrator pointer.*

## 8.38.1 Detailed Description

template<typename IntegratorType>class jeod::RestartableStateIntegrator< IntegratorType >

A [RestartableStateIntegrator](#) establishes the basic capabilities needed to make a state integrator a managed resource.

This includes

- Creating the integrator object,
- Restoring the integrator's derivative function on restart, and
- Destroying the integrator when the [RestartableStateIntegrator](#) instance goes out of scope.

### Template Parameters

<i>IntegratorType</i>	The type of integrator to be managed, either er7_utils::FirstOrderODEIntegrator or er7_utils::SecondOrderODEIntegrator.
-----------------------	---

### Usage:

This base class template is not directly usable. One must instead use one of the three class templates that derive from this class template:

- [RestartableFirstOrderODEIntegrator](#) to manage an er7\_utils::FirstOrderODEIntegrator pointer;
- [RestartableGeneralizedDerivSecondOrderODEIntegrator](#) to manage an er7\_utils::SecondOrderODEIntegrator pointer for a generalized second order ODE, one in which the time derivative of generalized position is a function of generalized position and generalized velocity; and
- [RestartableGeneralizedStepSecondOrderODEIntegrator](#) to manage an er7\_utils::SecondOrderODEIntegrator pointer for a generalized second order ODE, one in which the time derivative of generalized position is a function of generalized position and generalized velocity; and
- [RestartableSimpleSecondOrderODEIntegrator](#) to manage an er7\_utils::SecondOrderODEIntegrator pointer for a simple second order ODE, one in which the time derivative of generalized position is the generalized velocity.

Each state integrator to be used in some class needs a pair of data members declared in the definition of that class. The first of these pairs is a pointer to the appropriate state integrator type (either `er7_utils::FirstOrderODEIntegrator` or `er7_utils::SecondOrderODEIntegrator`). The second of the pairs of data members is an instance of the appropriate derived class of [RestartableStateIntegrator](#) that will manage the pointer. An example:

```
class MyClass {
...
    er7_utils::SecondOrderODEIntegrator * integrator;
    RestartableSimpleSecondOrderODEIntegrator<3> integ_manager;
...
};
```

The pointer itself must be exposed to Trick for checkpoint and restart. The `RestartableStateIntegrator`-derived object should be hidden from Trick.

The connection between the pointer and the manager for that pointer is made in the initializer lists of the constructors for the class. Use the [RestartableStateIntegrator](#) non-default constructor to tie the [RestartableStateIntegrator](#) object with the pointer it is to manage:

```
MyClass::MyClass ()
:
...
    integrator(NULL),
    integ_manager(integrator),
...
{
    // Body of MyClass constructor
}
```

Note that there the [RestartableStateIntegrator](#) default constructors exist only for the sake of the simulation engine. The default constructors do not create viable instances. One must use the non-default constructor to initialize [RestartableStateIntegrator](#) instances.

The integrator itself is not created at construction time. Creating the integrator is the job of the `create_integrator` method. This method should be called at initialization time after having created the integration constructor and the integration controls objects.

The counterpart to the `create_integrator` method is `destroy_integrator`. This method must be called prior to calling `create_integrator` if the integrator has already been created via a previous call to `create_integrator`. (For example, switching to a different integration technique). The `destroy_integrator` can be called at shutdown or destruction time, but this call is not essential. The [RestartableStateIntegrator](#) object will call this method internally when it goes out of scope.

### Class Design

This class template uses the non-virtual interface (NVI) design pattern, aka the template method design pattern (no relation to C++ class templates). The public `create_integrator` and `simple_restore` member functions use the private virtual `create_integrator_internal` and `simple_restore_internal` functions to create and restore the integrators.

Definition at line 139 of file `restartable_state_integrator_templates.hh`.

## 8.38.2 Constructor & Destructor Documentation

**8.38.2.1** `template<typename IntegratorType> virtual jeod::RestartableStateIntegrator< IntegratorType >::~RestartableStateIntegrator( ) [inline],[virtual]`

Destructor.

Definition at line 148 of file `restartable_state_integrator_templates.hh`.

**8.38.2.2** `template<typename IntegratorType> jeod::RestartableStateIntegrator< IntegratorType >::RestartableStateIntegrator( ) [inline],[protected]`

Default constructor.

Definition at line 229 of file restartable\_state\_integrator\_templates.hh.

```
8.38.2.3  template<typename IntegratorType> jeod::RestartableStateIntegrator< IntegratorType
>::RestartableStateIntegrator ( IntegratorType *& integ_ref ) [inline], [explicit],
[protected]
```

Non-default constructor.

Parameters

<i>in, out</i>	<i>integ_ref</i>	Reference to the pointer to the integrator that is to be managed.
----------------	------------------	---

Definition at line 240 of file restartable\_state\_integrator\_templates.hh.

```
8.38.2.4  template<typename IntegratorType> jeod::RestartableStateIntegrator< IntegratorType
>::RestartableStateIntegrator ( const RestartableStateIntegrator< IntegratorType > & ) [private]
```

Not implemented.

### 8.38.3 Member Function Documentation

```
8.38.3.1  template<typename IntegratorType> void jeod::RestartableStateIntegrator< IntegratorType
>::clear_integrator_reference ( ) [inline]
```

Clear the pointer to the external integrator object.

This currently (pre-Trick 13.0) needs to be called on restart because both pointers point to invalid objects.

Definition at line 192 of file restartable\_state\_integrator\_templates.hh.

Referenced by jeod::RestartableSO3SecondOrderODEIntegrator::simple\_restore().

```
8.38.3.2  template<typename IntegratorType> void jeod::RestartableStateIntegrator< IntegratorType
>::create_integrator ( const er7_utils::IntegratorConstructor & generator, er7_utils::IntegrationControls & controls )
[inline]
```

Create the integrator to be managed.

Parameters

<i>in</i>	<i>generator</i>	Integrator constructor used to create the integrator.
<i>in, out</i>	<i>controls</i>	Integration controls to be passed to the generator.

Definition at line 158 of file restartable\_state\_integrator\_templates.hh.

Referenced by jeod::Restartable2DSecondOrderIntegrator::create\_integrator(), jeod::RestartableScalarFirstOrderODEIntegrator::create\_integrator(), jeod::RestartableT3SecondOrderODEIntegrator::create\_integrator(), and jeod::RestartableSO3SecondOrderODEIntegrator::create\_integrator().

```
8.38.3.3  template<typename IntegratorType> virtual IntegratorType* jeod::RestartableStateIntegrator< IntegratorType
>::create_integrator_internal ( const er7_utils::IntegratorConstructor & generator, er7_utils::IntegrationControls &
controls ) [private], [pure virtual]
```

Create the integrator to be managed.

## Parameters

<i>in</i>	<i>generator</i>	Integrator constructor used to create the integrator.
<i>in, out</i>	<i>controls</i>	Integration controls to be passed to the generator.

## Returns

The constructed integrator.

Implemented in [jeod::RestartableGeneralizedStepSecondOrderODEIntegrator< position\\_size, velocity\\_size, StepFunctions >](#), [jeod::RestartableGeneralizedStepSecondOrderODEIntegrator< 4, 3, er7\\_utils::LeftQuaternionGeneralizedPositionFunctions >](#), [jeod::RestartableGeneralizedDerivSecondOrderODEIntegrator< position\\_size, velocity\\_size, DerivFunctions >](#), [jeod::RestartableGeneralizedDerivSecondOrderODEIntegrator< 4, 3, er7\\_utils::LeftQuaternionGeneralizedPositionFunctions >](#), [jeod::RestartableSimpleSecondOrderODEIntegrator< size >](#), [jeod::RestartableSimpleSecondOrderODEIntegrator< 2 >](#), [jeod::RestartableSimpleSecondOrderODEIntegrator< 3 >](#), [jeod::RestartableFirstOrderODEIntegrator< size >](#), and [jeod::RestartableFirstOrderODEIntegrator< 1 >](#).

Referenced by [jeod::RestartableStateIntegrator< er7\\_utils::SecondOrderODEIntegrator >::create\\_integrator\(\)](#).

**8.38.3.4** `template<typename IntegratorType> void jeod::RestartableStateIntegrator< IntegratorType >::destroy_integrator( ) [inline]`

Destroy the integrator.

Definition at line 180 of file `restartable_state_integrator_templates.hh`.

Referenced by [jeod::RestartableStateIntegrator< er7\\_utils::SecondOrderODEIntegrator >::create\\_integrator\(\)](#), [jeod::Restartable2DSecondOrderIntegrator::destroy\\_integrator\(\)](#), [jeod::RestartableScalarFirstOrderODEIntegrator::destroy\\_integrator\(\)](#), [jeod::RestartableT3SecondOrderODEIntegrator::destroy\\_integrator\(\)](#), [jeod::RestartableSO3SecondOrderODEIntegrator::destroy\\_integrator\(\)](#), and [jeod::RestartableStateIntegrator< er7\\_utils::SecondOrderODEIntegrator >::~~RestartableStateIntegrator\(\)](#).

**8.38.3.5** `template<typename IntegratorType> RestartableStateIntegrator& jeod::RestartableStateIntegrator< IntegratorType >::operator=( const RestartableStateIntegrator< IntegratorType > & ) [private]`

Not implemented.

**8.38.3.6** `template<typename IntegratorType> void jeod::RestartableStateIntegrator< IntegratorType >::set_integrator_reference( IntegratorType *& integ_ptr ) [inline]`

Set the pointer to the external integrator object.

This currently (pre-Trick 13.0) needs to be called on restart because the `integrator_handle` is not properly restored by checkpoint.

## Parameters

<i>in, out</i>	<i>integ_ptr</i>	Reference to the external integrator object.
----------------	------------------	--

Definition at line 203 of file `restartable_state_integrator_templates.hh`.

Referenced by [jeod::RestartableSO3SecondOrderODEIntegrator::create\\_integrator\(\)](#), [jeod::Restartable2DSecondOrderIntegrator::destroy\\_integrator\(\)](#), [jeod::Restartable2DSecondOrderIntegrator::simple\\_restore\(\)](#), [jeod::RestartableScalarFirstOrderODEIntegrator::simple\\_restore\(\)](#), [jeod::RestartableT3SecondOrderODEIntegrator::simple\\_restore\(\)](#), and [jeod::RestartableSO3SecondOrderODEIntegrator::simple\\_restore\(\)](#).

**8.38.3.7** `template<typename IntegratorType> virtual void jeod::RestartableStateIntegrator< IntegratorType >::simple_restore( ) [inline],[virtual]`

Restore the integrator on restart.

This currently (pre-Trick 13.0) needs to be called after calling `set_integrator_reference`.

Definition at line 214 of file `restartable_state_integrator_templates.hh`.

Referenced by `jeod::Restartable2DSecondOrderIntegrator::simple_restore()`, `jeod::RestartableScalarFirstOrderODEIntegrator::simple_restore()`, `jeod::RestartableT3SecondOrderODEIntegrator::simple_restore()`, and `jeod::RestartableSO3SecondOrderODEIntegrator::simple_restore()`.

**8.38.3.8** `template<typename IntegratorType> virtual void jeod::RestartableStateIntegrator< IntegratorType >::simple_restore_internal ( IntegratorType * integrator_ptr ) [inline], [private], [virtual]`

Perform technique-specific restart actions.

The default is to do nothing.

Parameters

<code>in, out</code>	<code>integrator_ptr</code>	The integrator object to be restored
----------------------	-----------------------------	--------------------------------------

Reimplemented in `jeod::RestartableGeneralizedStepSecondOrderODEIntegrator< position_size, velocity_size, StepFunctions >`, `jeod::RestartableGeneralizedStepSecondOrderODEIntegrator< 4, 3, er7_utils::LeftQuaternionGeneralizedPositionFunctions >`, `jeod::RestartableGeneralizedDerivSecondOrderODEIntegrator< position_size, velocity_size, DerivFunctions >`, and `jeod::RestartableGeneralizedDerivSecondOrderODEIntegrator< 4, 3, er7_utils::LeftQuaternionGeneralizedPositionFunctions >`.

Definition at line 267 of file `restartable_state_integrator_templates.hh`.

Referenced by `jeod::RestartableStateIntegrator< er7_utils::SecondOrderODEIntegrator >::simple_restore()`.

## 8.38.4 Field Documentation

**8.38.4.1** `template<typename IntegratorType> IntegratorType** jeod::RestartableStateIntegrator< IntegratorType >::integrator_handle [private]`

Pointer to the containing object's integrator pointer.

`trick_io(**)`

Definition at line 277 of file `restartable_state_integrator_templates.hh`.

Referenced by `jeod::RestartableStateIntegrator< er7_utils::SecondOrderODEIntegrator >::clear_integrator_reference()`, `jeod::RestartableStateIntegrator< er7_utils::SecondOrderODEIntegrator >::create_integrator()`, `jeod::RestartableStateIntegrator< er7_utils::SecondOrderODEIntegrator >::destroy_integrator()`, `jeod::RestartableStateIntegrator< er7_utils::SecondOrderODEIntegrator >::set_integrator_reference()`, and `jeod::RestartableStateIntegrator< er7_utils::SecondOrderODEIntegrator >::simple_restore()`.

The documentation for this class was generated from the following file:


- [restartable\\_state\\_integrator\\_templates.hh](#)

## 8.39 jeod::RestartableT3SecondOrderODEIntegrator Class Reference

A [RestartableT3SecondOrderODEIntegrator](#) integrates a second order ODE in three space,  $d^2x/dt^2 = a(x,t)$ , where  $x$  is a three-vector.

```
#include <restartable_state_integrator.hh>
```

Inheritance diagram for `jeod::RestartableT3SecondOrderODEIntegrator`:

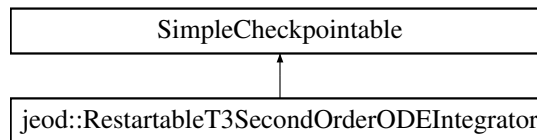

## Public Member Functions

- [RestartableT3SecondOrderODEIntegrator](#) ()  
*Default constructor.*
- virtual [~RestartableT3SecondOrderODEIntegrator](#) ()  
*Destructor.*
- void [create\\_integrator](#) (const er7\_utils::IntegratorConstructor &generator, er7\_utils::IntegrationControls &controls)  
*Create the integrator to be managed.*
- void [destroy\\_integrator](#) ()  
*Destroy the integrator.*
- er7\_utils::IntegratorResult [integrate](#) (double dyn\_dt, unsigned int target\_stage, double const \*accel, double \*velocity, double \*position)  
*Propagate state to the specified stage of the integration process for an overall integration time interval of dyn\_dt.*
- void [reset\\_integrator](#) ()  
*Tell the integrator to reset itself.*
- virtual void [simple\\_restore](#) ()  
*Restore the integrator on restart.*

## Private Member Functions

- [RestartableT3SecondOrderODEIntegrator](#) (const [RestartableT3SecondOrderODEIntegrator](#) &)  
*Not implemented.*
- [RestartableT3SecondOrderODEIntegrator](#) & operator= (const [RestartableT3SecondOrderODEIntegrator](#) &)  
*Not implemented.*

## Private Attributes

- er7\_utils::SecondOrderODEIntegrator \* [integrator](#)  
*Pointer to the object that performs integration.*
- [RestartableSimpleSecondOrderODEIntegrator](#)< 3 > [integrator\\_manager](#)  
*Object that creates and manages the integrator object.*

## Friends

- class [InputProcessor](#)
- void [init\\_attrjeod\\_\\_RestartableT3SecondOrderODEIntegrator](#) ()

### 8.39.1 Detailed Description

A [RestartableT3SecondOrderODEIntegrator](#) integrates a second order ODE in three space,  $d^2x/dt^2 = a(x,t)$ , where  $x$  is a three-vector.

Definition at line 179 of file restartable\_state\_integrator.hh.

## 8.39.2 Constructor & Destructor Documentation

### 8.39.2.1 `jeod::RestartableT3SecondOrderODEIntegrator::RestartableT3SecondOrderODEIntegrator ( )` `[inline]`

Default constructor.

Definition at line 187 of file `restartable_state_integrator.hh`.

### 8.39.2.2 `virtual jeod::RestartableT3SecondOrderODEIntegrator::~~RestartableT3SecondOrderODEIntegrator ( )` `[inline], [virtual]`

Destructor.

Definition at line 199 of file `restartable_state_integrator.hh`.

### 8.39.2.3 `jeod::RestartableT3SecondOrderODEIntegrator::RestartableT3SecondOrderODEIntegrator ( const RestartableT3SecondOrderODEIntegrator & )` `[private]`

Not implemented.

## 8.39.3 Member Function Documentation

### 8.39.3.1 `void jeod::RestartableT3SecondOrderODEIntegrator::create_integrator ( const er7_utils::IntegratorConstructor & generator, er7_utils::IntegrationControls & controls )` `[inline]`

Create the integrator to be managed.

Parameters

<code>in</code>	<code>generator</code>	Integrator constructor used to create the integrator.
<code>in, out</code>	<code>controls</code>	Integration controls to be passed to the generator.

Definition at line 206 of file `restartable_state_integrator.hh`.

References `jeod::RestartableStateIntegrator< IntegratorType >::create_integrator()`, and `integrator_manager`.

### 8.39.3.2 `void jeod::RestartableT3SecondOrderODEIntegrator::destroy_integrator ( )` `[inline]`

Destroy the integrator.

Definition at line 216 of file `restartable_state_integrator.hh`.

References `jeod::RestartableStateIntegrator< IntegratorType >::destroy_integrator()`, and `integrator_manager`.

### 8.39.3.3 `er7_utils::IntegratorResult jeod::RestartableT3SecondOrderODEIntegrator::integrate ( double dyn_dt, unsigned int target_stage, double const * accel, double * velocity, double * position )` `[inline]`

Propagate state to the specified stage of the integration process for an overall integration time interval of `dyn_dt`.

Note that this is a pass-through to the encapsulated integrator object. See `er7_utils::SecondOrderODEIntegrator::integrate` for details.

Parameters

<code>in</code>	<code>dyn_dt</code>	Dynamic time step, in dynamic time seconds.
-----------------	---------------------	---



in	<i>target_stage</i>	The stage of the integration process that the integrator should try to attain.
in	<i>accel</i>	Time derivative of the generalized velocity.
in, out	<i>velocity</i>	Generalized velocity vector.
in, out	<i>position</i>	Generalized position vector.

#### Returns

The status (time advance, pass/fail status) of the integration.

Definition at line 237 of file restartable\_state\_integrator.hh.

References integrator.

#### 8.39.3.4 RestartableT3SecondOrderODEIntegrator& jeod::RestartableT3SecondOrderODEIntegrator::operator= ( const RestartableT3SecondOrderODEIntegrator & ) [private]

Not implemented.

#### 8.39.3.5 void jeod::RestartableT3SecondOrderODEIntegrator::reset\_integrator ( ) [inline]

Tell the integrator to reset itself.

This should be called when the time step or time direction changes or upon a discrete change in state such docking/undocking. Such events invalidate saved state (if any). The integrator needs to restart from scratch when such events occur.

Definition at line 255 of file restartable\_state\_integrator.hh.

References integrator.

#### 8.39.3.6 virtual void jeod::RestartableT3SecondOrderODEIntegrator::simple\_restore ( ) [inline],[virtual]

Restore the integrator on restart.

Definition at line 263 of file restartable\_state\_integrator.hh.

References integrator, integrator\_manager, jeod::RestartableStateIntegrator< IntegratorType >::set\_integrator\_reference(), and jeod::RestartableStateIntegrator< IntegratorType >::simple\_restore().

### 8.39.4 Friends And Related Function Documentation

#### 8.39.4.1 void init\_attrjeod\_\_RestartableT3SecondOrderODEIntegrator ( ) [friend]

#### 8.39.4.2 friend class InputProcessor [friend]

Definition at line 180 of file restartable\_state\_integrator.hh.

### 8.39.5 Field Documentation

#### 8.39.5.1 er7\_utils::SecondOrderODEIntegrator\* jeod::RestartableT3SecondOrderODEIntegrator::integrator [private]

Pointer to the object that performs integration.

The object is created managed by the integrator manager.trick\_units(–)

Definition at line 276 of file restartable\_state\_integrator.hh.

Referenced by integrate(), reset\_integrator(), and simple\_restore().

### 8.39.5.2 RestartableSimpleSecondOrderODEIntegrator<3> jeod::RestartableT3SecondOrderODEIntegrator- ::integrator\_manager [private]

Object that creates and manages the integrator object.

trick\_io(\*\*)

Definition at line 282 of file restartable\_state\_integrator.hh.

Referenced by create\_integrator(), destroy\_integrator(), and simple\_restore().

The documentation for this class was generated from the following file:


- [restartable\\_state\\_integrator.hh](#)

## 8.40 jeod::TimeChangeSubscriber Class Reference

A [TimeChangeSubscriber](#) is some object that wants to be notified of changes in the nature of time.

```
#include <time_change_subscriber.hh>
```

Inheritance diagram for jeod::TimeChangeSubscriber:

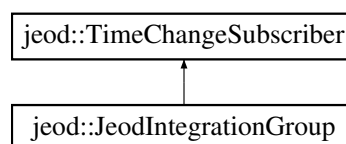

### Public Member Functions

- virtual [~TimeChangeSubscriber](#) ()  
*Destructor.*
- virtual void [respond\\_to\\_time\\_change](#) ()=0  
*Somehow respond to a change in the nature of time.*

### Friends

- class [InputProcessor](#)
- void [init\\_attrjeod\\_\\_TimeChangeSubscriber](#) ()

### 8.40.1 Detailed Description

A [TimeChangeSubscriber](#) is some object that wants to be notified of changes in the nature of time.

Definition at line 39 of file time\_change\_subscriber.hh.

### 8.40.2 Constructor & Destructor Documentation

#### 8.40.2.1 virtual jeod::TimeChangeSubscriber::~~TimeChangeSubscriber ( ) [inline], [virtual]

Destructor.

Definition at line 53 of file time\_change\_subscriber.hh.

### 8.40.3 Member Function Documentation

8.40.3.1 `virtual void jeod::TimeChangeSubscriber::respond_to_time_change ( ) [pure virtual]`

Somehow respond to a change in the nature of time.

Implemented in [jeod::JeodIntegrationGroup](#).

### 8.40.4 Friends And Related Function Documentation

8.40.4.1 `void init_attrjeod__TimeChangeSubscriber ( ) [friend]`

8.40.4.2 `friend class InputProcessor [friend]`

Definition at line 41 of file `time_change_subscriber.hh`.

The documentation for this class was generated from the following file:

- [time\\_change\\_subscriber.hh](#)

## 8.41 er7\_utils::TwoDArray< T > Class Template Reference

RAII template class that implements a rectangular two dimensional array.

```
#include <two_d_array.hh>
```

### Public Member Functions

- [TwoDArray](#) ()  
*Default constructor.*
- [TwoDArray](#) (const [TwoDArray](#)< T > &src)  
*Copy constructor.*
- [~TwoDArray](#) ()  
*Destructor.*
- [TwoDArray](#)< T > & [operator=](#) ([TwoDArray](#)< T > src)  
*Copy and swap assignment constructor.*
- const T \* [operator\[\]](#) (int N) const  
*Const overloaded index operator.*
- T \* [operator\[\]](#) (int N)  
*Non-const overloaded index operator.*
- const T & [operator\(\)](#) (int N, int M) const  
*Const overloaded function operator.*
- T & [operator\(\)](#) (int N, int M)  
*Non-const overloaded function operator.*
- [operator](#) T const \*const \* () const  
*Const conversion operator to T const\* const\*.*
- [operator](#) T \*const \* ()  
*Non-const conversion operator to T\*const\*.*
- const T \* [at](#) (int N) const  
*Range-checked equivalent of const T\* [operator\[\]](#)(int N) const.*
- T \* [at](#) (int N)  
*Range-checked equivalent of T\* [operator\[\]](#)(int N).*

- `const T & at (int N, int M) const`  
*Range-checked equivalent of `const T& operator()(int N, int M) const`.*
- `T & at (int N, int M)`  
*Range-checked equivalent of `T& operator()(int N, int M)`.*
- `void allocate (std::size_t N, std::size_t M)`  
*Allocate the array.*
- `void rotate_down (int limit)`  
*Rotate elements 0 to limit downward, with array element 0 moved to array element limit.*
- `void rotate_up (int limit)`  
*Rotate elements 0 to limit upward, with array element limit moved to array element 0.*
- `void downsample (int limit)`  
*Downsample the array by swapping pointers.*
- `void swap (TwoDArray< T > &other)`  
*Swap the contents of \*this with the other.*

## Protected Attributes

- `int n`  
*The number of rows in the array.*
- `int m`  
*The number of columns in the array.*
- `T * data_array`  
*The array data, as an NxM array of T.*
- `T ** row_array`  
*The rows in the array.*

## Private Member Functions

- `void allocate_internal ()`  
*Allocate memory for the array.*
- `void deallocate_internal ()`  
*Deallocate memory for the array.*

## Friends

- `void swap (TwoDArray< T > &first, TwoDArray< T > &second)`  
*Swap the contents of the two provided arrays.*

### 8.41.1 Detailed Description

```
template<typename T>class er7_utils::TwoDArray< T >
```

RAII template class that implements a rectangular two dimensional array.

The implementation provides two special-purpose features that are needed by some of the ER7 utilities and JEOD integrators. The rows of the array can be rotated and downsampled.

## Template Parameters

<i>T</i>	Type of each element of the array.
----------	------------------------------------

Definition at line 47 of file two\_d\_array.hh.

## 8.41.2 Constructor &amp; Destructor Documentation

8.41.2.1 `template<typename T> er7_utils::TwoDArray< T >::TwoDArray ( ) [inline]`

Default constructor.

Definition at line 54 of file two\_d\_array.hh.

8.41.2.2 `template<typename T> er7_utils::TwoDArray< T >::TwoDArray ( const TwoDArray< T > & src ) [inline]`

Copy constructor.

## Parameters

<i>src</i>	Item to be copied.
------------	--------------------

Definition at line 66 of file two\_d\_array.hh.

8.41.2.3 `template<typename T> er7_utils::TwoDArray< T >::~~TwoDArray ( ) [inline]`

Destructor.

Definition at line 89 of file two\_d\_array.hh.

## 8.41.3 Member Function Documentation

8.41.3.1 `template<typename T> void er7_utils::TwoDArray< T >::allocate ( std::size_t N, std::size_t M ) [inline]`

Allocate the array.

## Parameters

<i>N</i>	Number of rows in the array.
<i>M</i>	Number of columns in the array.

## Exceptions

<i>std::domain_error</i>	N and/or M won't fit in a signed int.
--------------------------	---------------------------------------

Definition at line 237 of file two\_d\_array.hh.

Referenced by `jeod::GaussJacksonIntegratorBase< State, Primer >::GaussJacksonIntegratorBase()`, and `er7_utils::TwoDArray< double >::TwoDArray()`.

8.41.3.2 `template<typename T> void er7_utils::TwoDArray< T >::allocate_internal ( ) [inline], [private]`

Allocate memory for the array.

Definition at line 369 of file two\_d\_array.hh.

Referenced by `er7_utils::TwoDArray< double >::allocate()`.

8.41.3.3 `template<typename T> const T* er7_utils::TwoDArray< T >::at ( int N ) const` `[inline]`

Range-checked equivalent of `const T* operator[](int N) const`.

## Parameters

<i>N</i>	Row index.
----------	------------

## Returns

Const pointer to the Nth row in the array.

## Exceptions

<i>std::out_of_range</i>	If <i>N</i> is an invalid index.
--------------------------	----------------------------------

Definition at line 175 of file two\_d\_array.hh.

8.41.3.4 `template<typename T> T* er7_utils::TwoDArray< T >::at ( int N ) [inline]`

Range-checked equivalent of `T* operator[](int N)`.

## Parameters

<i>N</i>	Row index.
----------	------------

## Returns

Modifiable pointer to the Nth row in the array.

## Exceptions

<i>std::out_of_range</i>	If <i>N</i> is an invalid index.
--------------------------	----------------------------------

Definition at line 189 of file two\_d\_array.hh.

8.41.3.5 `template<typename T> const T& er7_utils::TwoDArray< T >::at ( int N, int M ) const [inline]`

Range-checked equivalent of `const T& operator()(int N, int M) const`.

## Parameters

<i>N</i>	Row index.
<i>M</i>	Column index.

## Returns

Const reference to the N,M element of the array.

## Exceptions

<i>std::out_of_range</i>	If <i>N</i> or <i>M</i> is an invalid index.
--------------------------	--

Definition at line 205 of file two\_d\_array.hh.

8.41.3.6 `template<typename T> T& er7_utils::TwoDArray< T >::at ( int N, int M ) [inline]`

Range-checked equivalent of `T& operator()(int N, int M)`.

## Parameters

<i>N</i>	Row index.
<i>M</i>	Column index.

## Returns

Reference to the *N,M* element of the array.

## Exceptions

<i>std::out_of_range</i>	If <i>N</i> or <i>M</i> is an invalid index.
--------------------------	--

Definition at line 221 of file `two_d_array.hh`.

**8.41.3.7** `template<typename T> void er7_utils::TwoDArray< T >::deallocate_internal ( ) [inline],`  
`[private]`

Deallocate memory for the array.

Definition at line 378 of file `two_d_array.hh`.

Referenced by `er7_utils::TwoDArray< double >::allocate()`, and `er7_utils::TwoDArray< double >::~TwoDArray()`.

**8.41.3.8** `template<typename T> void er7_utils::TwoDArray< T >::downsample ( int limit ) [inline]`

Downsample the array by swapping pointers.

## Parameters

<i>limit</i>	Number of usable rows after downsample.
--------------	---

## Exceptions

<i>std::out_of_range</i>	If <i>limit</i> represents an invalid index.
--------------------------	--

Definition at line 302 of file `two_d_array.hh`.

Referenced by `jeod::GaussJacksonIntegratorBase< State, Primer >::downsample_hist()`.

**8.41.3.9** `template<typename T> er7_utils::TwoDArray< T >::operator T*const* ( ) [inline]`

Non-const conversion operator to `T*const*`.

## Returns

Modifiable pointer to the array.

Definition at line 163 of file `two_d_array.hh`.

References `er7_utils::TwoDArray< T >::row_array`.

**8.41.3.10** `template<typename T> er7_utils::TwoDArray< T >::operator T const*const* ( ) const [inline]`

Const conversion operator to `T const* const*`.

## Returns

Non-modifiable pointer to the array.

Definition at line 154 of file `two_d_array.hh`.

References `er7_utils::TwoDArray< T >::row_array`.



8.41.3.11 `template<typename T> const T& er7_utils::TwoDArray< T >::operator()( int N, int M ) const` `[inline]`

Const overloaded function operator.

Parameters

<i>N</i>	Row index.
<i>M</i>	Column index.

Returns

Const reference to the *N*,*M* element of the array.

Definition at line 133 of file two\_d\_array.hh.

8.41.3.12 `template<typename T> T& er7_utils::TwoDArray< T >::operator()( int N, int M )` `[inline]`

Non-const overloaded function operator.

Parameters

<i>N</i>	Row index.
<i>M</i>	Column index.

Returns

Reference to the *N*,*M* element of the array.

Definition at line 144 of file two\_d\_array.hh.

8.41.3.13 `template<typename T> TwoDArray<T>& er7_utils::TwoDArray< T >::operator= ( TwoDArray< T > src )`  
`[inline]`

Copy and swap assignment constructor.

Parameters

<i>src</i>	Item to be copied.
------------	--------------------

Definition at line 99 of file two\_d\_array.hh.

8.41.3.14 `template<typename T> const T* er7_utils::TwoDArray< T >::operator[]( int N ) const` `[inline]`

Const overloaded index operator.

Parameters

<i>N</i>	Row index.
----------	------------

Returns

Const pointer to the *N*th row in the array.

Definition at line 111 of file two\_d\_array.hh.

8.41.3.15 `template<typename T> T* er7_utils::TwoDArray< T >::operator[]( int N )` `[inline]`

Non-const overloaded index operator.

## Parameters

<i>N</i>	Row index.
----------	------------

## Returns

Modifiable pointer to the Nth row in the array.

Definition at line 121 of file two\_d\_array.hh.

**8.41.3.16** `template<typename T> void er7_utils::TwoDArray< T >::rotate_down ( int limit ) [inline]`

Rotate elements 0 to limit downward, with array element 0 moved to array element limit.

## Parameters

<i>limit</i>	Index of last element participating in the rotation.
--------------	--

## Exceptions

<code>std::out_of_range</code>	If <i>limit</i> is an invalid index.
--------------------------------	--------------------------------------

Definition at line 264 of file two\_d\_array.hh.

Referenced by jeod::GaussJacksonIntegratorBase< State, Primer >::rotate\_acc\_hist().

**8.41.3.17** `template<typename T> void er7_utils::TwoDArray< T >::rotate_up ( int limit ) [inline]`

Rotate elements 0 to limit upward, with array element limit moved to array element 0.

## Parameters

<i>limit</i>	Index of last element participating in the rotation.
--------------	--

## Exceptions

<code>std::out_of_range</code>	If <i>limit</i> is an invalid index.
--------------------------------	--------------------------------------

Definition at line 283 of file two\_d\_array.hh.

**8.41.3.18** `template<typename T> void er7_utils::TwoDArray< T >::swap ( TwoDArray< T > & other ) [inline]`

Swap the contents of \*this with the other.

## Parameters

<i>other</i>	Other array.
--------------	--------------

Definition at line 318 of file two\_d\_array.hh.

Referenced by er7\_utils::TwoDArray< double >::operator=(), and jeod::GaussJacksonIntegratorBase< State, Primer >::swap().

## 8.41.4 Friends And Related Function Documentation

**8.41.4.1** `template<typename T> void swap ( TwoDArray< T > & first, TwoDArray< T > & second ) [friend]`

Swap the contents of the two provided arrays.

## Parameters

<i>first</i>	First array.
<i>second</i>	Second array.

Definition at line 331 of file two\_d\_array.hh.

### 8.41.5 Field Documentation

#### 8.41.5.1 `template<typename T> T* er7_utils::TwoDArray< T >::data_array` [protected]

The array data, as an NxM array of T.

trick\_units(-)

Definition at line 355 of file two\_d\_array.hh.

Referenced by `er7_utils::TwoDArray< double >::allocate()`, `er7_utils::TwoDArray< double >::allocate_internal()`, `er7_utils::TwoDArray< double >::deallocate_internal()`, and `er7_utils::TwoDArray< double >::swap()`.

#### 8.41.5.2 `template<typename T> int er7_utils::TwoDArray< T >::m` [protected]

The number of columns in the array.

trick\_units(-)

Definition at line 350 of file two\_d\_array.hh.

Referenced by `er7_utils::TwoDArray< double >::allocate()`, `er7_utils::TwoDArray< double >::allocate_internal()`, `er7_utils::TwoDArray< double >::at()`, `er7_utils::TwoDArray< double >::swap()`, and `er7_utils::TwoDArray< double >::TwoDArray()`.

#### 8.41.5.3 `template<typename T> int er7_utils::TwoDArray< T >::n` [protected]

The number of rows in the array.

trick\_units(-)

Definition at line 345 of file two\_d\_array.hh.

Referenced by `er7_utils::TwoDArray< double >::allocate()`, `er7_utils::TwoDArray< double >::allocate_internal()`, `er7_utils::TwoDArray< double >::at()`, `er7_utils::TwoDArray< double >::downsample()`, `er7_utils::TwoDArray< double >::rotate_down()`, `er7_utils::TwoDArray< double >::rotate_up()`, `er7_utils::TwoDArray< double >::swap()`, and `er7_utils::TwoDArray< double >::TwoDArray()`.

#### 8.41.5.4 `template<typename T> T** er7_utils::TwoDArray< T >::row_array` [protected]

The rows in the array.

trick\_units(-)

Definition at line 360 of file two\_d\_array.hh.

Referenced by `er7_utils::TwoDArray< double >::allocate()`, `er7_utils::TwoDArray< double >::allocate_internal()`, `er7_utils::TwoDArray< double >::at()`, `er7_utils::TwoDArray< double >::deallocate_internal()`, `er7_utils::TwoDArray< double >::downsample()`, `er7_utils::TwoDArray< T >::operator T *const *()`, `er7_utils::TwoDArray< T >::operator T const *const *()`, `er7_utils::TwoDArray< double >::operator()()`, `er7_utils::TwoDArray< double >::operator[]()`, `er7_utils::TwoDArray< double >::rotate_down()`, `er7_utils::TwoDArray< double >::rotate_up()`, `er7_utils::TwoDArray< double >::swap()`, and `er7_utils::TwoDArray< double >::TwoDArray()`.

The documentation for this class was generated from the following file:

- [two\\_d\\_array.hh](#)



## Chapter 9

# File Documentation

### 9.1 gauss\_jackson\_coefficients\_pair.cc File Reference

Defines member functions for the class GaussJacksonCoefficientsPair.

```
#include "../include/gauss_jackson_coefficients_pair.hh"
#include "../include/gauss_jackson_two_state.hh"
#include "er7_utils/interface/include/alloc.hh"
#include <algorithm>
#include <iostream>
```

#### Namespaces

- [jeod](#)

*Namespace jeod.*

#### 9.1.1 Detailed Description

Defines member functions for the class GaussJacksonCoefficientsPair.

Definition in file [gauss\\_jackson\\_coefficients\\_pair.cc](#).

### 9.2 gauss\_jackson\_coefficients\_pair.hh File Reference

Defines the class GaussJacksonCoefficientsPair, which contains summed Adams and Gauss-Jackson coefficient pair.

```
#include "gauss_jackson_one_state.hh"
#include "gauss_jackson_two_state.hh"
#include "utils/sim_interface/include/jeod_class.hh"
#include "er7_utils/interface/include/config.hh"
#include <cstdint>
#include <iosfwd>
```

#### Data Structures

- class [jeod::GaussJacksonCoefficientsPair](#)

*Contains a summed Adams and Gauss-Jackson coefficient pair.*

## Namespaces

- [jeod](#)

*Namespace jeod.*

### 9.2.1 Detailed Description

Defines the class GaussJacksonCoefficientsPair, which contains summed Adams and Gauss-Jackson coefficient pair.

Definition in file [gauss\\_jackson\\_coefficients\\_pair.hh](#).

## 9.3 gauss\_jackson\_coefs.cc File Reference

Defines member functions for the class GaussJacksonCoeffs.

```
#include "../include/gauss_jackson_coefs.hh"
#include "../include/gauss_jackson_coefficients_pair.hh"
#include "../include/gauss_jackson_rational_coefs.hh"
#include "er7_utils/math/include/n_choose_m.hh"
#include "er7_utils/interface/include/alloc.hh"
#include <algorithm>
#include <cassert>
#include <iostream>
```

## Namespaces

- [jeod](#)

*Namespace jeod.*

## Functions

- `std::ostream & jeod::operator<< (std::ostream &stream, const GaussJacksonCoeffs &coeff)`

### 9.3.1 Detailed Description

Defines member functions for the class GaussJacksonCoeffs.

Definition in file [gauss\\_jackson\\_coefs.cc](#).

## 9.4 gauss\_jackson\_coefs.hh File Reference

Defines the class GaussJacksonCoeffs, which contains the Gauss-Jackson predictor and corrector coefficients.

```
#include "gauss_jackson_coefficients_pair.hh"
#include "utils/sim_interface/include/jeod_class.hh"
#include <iosfwd>
```

## Data Structures

- class [jeod::GaussJacksonCoeffs](#)  
*Contains the Gauss-Jackson predictor and corrector coefficients.*

## Namespaces

- [jeod](#)  
*Namespace jeod.*

### 9.4.1 Detailed Description

Defines the class GaussJacksonCoeffs, which contains the Gauss-Jackson predictor and corrector coefficients.

Definition in file [gauss\\_jackson\\_coeffs.hh](#).

## 9.5 gauss\_jackson\_config.cc File Reference

Defines member functions for the class GaussJacksonIntegratorConstructor.

```
#include "../include/gauss_jackson_config.hh"
#include "er7_utils/integration/core/include/integration_messages.hh"
#include "er7_utils/interface/include/message_handler.hh"
#include <algorithm>
```

## Namespaces

- [jeod](#)  
*Namespace jeod.*

## Functions

- static GaussJacksonConfig [jeod::set\\_default\\_config\\_values](#) (const GaussJacksonConfig &config)  
*Swap the negative ones in the supplied config with the default values, some of which are computed.*
- static unsigned int [jeod::validate\\_config](#) (const GaussJacksonConfig &config)  
*Check for invalid values in the supplied config.*

### 9.5.1 Detailed Description

Defines member functions for the class GaussJacksonIntegratorConstructor.

Definition in file [gauss\\_jackson\\_config.cc](#).

## 9.6 gauss\_jackson\_config.hh File Reference

Defines the class GaussJacksonConfig, which specifies Gauss-Jackson configuration data.

```
#include "utils/sim_interface/include/jeod_class.hh"
#include "er7_utils/integration/core/include/integration_technique.hh"
```

## Data Structures

- class [jeod::GaussJacksonConfig](#)  
*Contains Gauss-Jackson configuration data.*

## Namespaces

- [jeod](#)  
*Namespace jeod.*

### 9.6.1 Detailed Description

Defines the class GaussJacksonConfig, which specifies Gauss-Jackson configuration data.

Definition in file [gauss\\_jackson\\_config.hh](#).

## 9.7 gauss\_jackson\_first\_order\_ode\_integrator.hh File Reference

Defines the class GaussJacksonFirstOrderODEIntegrator, which integrates a first order ODE using the summed Adams technique.

```
#include "gauss_jackson_integrator_base_first.hh"
#include "utils/sim_interface/include/jeod_class.hh"
#include "er7_utils/integration/core/include/first_order_ode_integrator.hh"
```

## Data Structures

- class [jeod::GaussJacksonFirstOrderODEIntegrator](#)  
*Integrates a first order ODE using the summed Adams technique that is embedded within the Gauss-Jackson technique.*

## Namespaces

- [jeod](#)  
*Namespace jeod.*

### 9.7.1 Detailed Description

Defines the class GaussJacksonFirstOrderODEIntegrator, which integrates a first order ODE using the summed Adams technique.

- Note: This is a header-only implementation. There is no source file that corresponds to this header.

Definition in file [gauss\\_jackson\\_first\\_order\\_ode\\_integrator.hh](#).

## 9.8 gauss\_jackson\_generalized\_second\_order\_ode\_integrator.cc File Reference

Defines member functions for the class GaussJacksonGeneralizedDerivSecondOrderODEIntegrator.



```
#include "../include/gauss_jackson_generalized_second_order_ode_integrator.-  
hh"  
#include "er7_utils/interface/include/alloc.hh"  
#include <algorithm>
```

## Namespaces

- [jeod](#)

*Namespace jeod.*

### 9.8.1 Detailed Description

Defines member functions for the class GaussJacksonGeneralizedDerivSecondOrderODEIntegrator.

Definition in file [gauss\\_jackson\\_generalized\\_second\\_order\\_ode\\_integrator.cc](#).

## 9.9 gauss\_jackson\_generalized\_second\_order\_ode\_integrator.hh File Reference

Defines the class GaussJacksonGeneralizedDerivSecondOrderODEIntegrator, which integrates a generalized derivative second order ODE using Gauss-Jackson.

```
#include "gauss_jackson_first_order_ode_integrator.hh"  
#include "gauss_jackson_simple_second_order_ode_integrator.hh"  
#include "utils/sim_interface/include/jeod_class.hh"  
#include "er7_utils/integration/core/include/second_order_ode_integrator.-  
hh"
```

## Data Structures

- class [jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator](#)  
*Integrates a generalized derivative second order ODE using Gauss-Jackson.*

## Namespaces

- [jeod](#)

*Namespace jeod.*

### 9.9.1 Detailed Description

Defines the class GaussJacksonGeneralizedDerivSecondOrderODEIntegrator, which integrates a generalized derivative second order ODE using Gauss-Jackson.

Definition in file [gauss\\_jackson\\_generalized\\_second\\_order\\_ode\\_integrator.hh](#).

## 9.10 gauss\_jackson\_integration\_controls.cc File Reference

Defines member functions for the class GaussJacksonIntegrationControls.

```
#include "../include/gauss_jackson_integration_controls.hh"
#include "er7_utils/integration/core/include/base_integration_group.hh"
#include "er7_utils/integration/core/include/integrator_constructor.hh"
#include "er7_utils/integration/core/include/integrator_result.hh"
#include "er7_utils/integration/core/include/time_interface.hh"
#include "er7_utils/interface/include/alloc.hh"
#include <cassert>
```

## Namespaces

- [jeod](#)

*Namespace jeod.*

### 9.10.1 Detailed Description

Defines member functions for the class GaussJacksonIntegrationControls.

Definition in file [gauss\\_jackson\\_integration\\_controls.cc](#).

## 9.11 gauss\_jackson\_integration\_controls.hh File Reference

Defines the class GaussJacksonIntegrationControls, which controls Gauss-Jackson integration process.

```
#include "gauss_jackson_coeffs.hh"
#include "gauss_jackson_config.hh"
#include "gauss_jackson_state_machine.hh"
#include "utils/sim_interface/include/jeod_class.hh"
#include "er7_utils/integration/core/include/integration_controls.hh"
```

## Data Structures

- class [jeod::GaussJacksonIntegrationControls](#)

*IntegrationControls specialized for Gauss-Jackson integration.*

## Namespaces

- [er7\\_utils](#)

*Namespace [er7\\_utils](#) contains the state integration models used by JEOD.*

- [jeod](#)

*Namespace jeod.*

### 9.11.1 Detailed Description

Defines the class GaussJacksonIntegrationControls, which controls Gauss-Jackson integration process.

Definition in file [gauss\\_jackson\\_integration\\_controls.hh](#).

## 9.12 gauss\_jackson\_integrator\_base.hh File Reference

Defines the template class GaussJacksonIntegratorBase, which provides the basis for Gauss-Jackson integration.

```
#include "two_d_array.hh"
#include "gauss_jackson_coeffs.hh"
#include "gauss_jackson_config.hh"
#include "gauss_jackson_integration_controls.hh"
#include "gauss_jackson_state_machine.hh"
#include "utils/sim_interface/include/jeod_class.hh"
#include "er7_utils/integration/core/include/integrator_result.hh"
#include "er7_utils/integration/core/include/integ_utils.hh"
#include "er7_utils/interface/include/alloc.hh"
#include <algorithm>
#include <cassert>
```

### Data Structures

- class [jeod::GaussJacksonIntegratorBase< State, Primer >](#)

*Base template class for integrating state via the Gauss-Jackson technique.*

### Namespaces

- [jeod](#)

*Namespace jeod.*

#### 9.12.1 Detailed Description

Defines the template class GaussJacksonIntegratorBase, which provides the basis for Gauss-Jackson integration.

Definition in file [gauss\\_jackson\\_integrator\\_base.hh](#).

## 9.13 gauss\_jackson\_integrator\_base\_first.hh File Reference

Defines the template specializations of GaussJacksonIntegratorBase for a first order ODE.

```
#include "gauss_jackson_integrator_base.hh"
#include "gauss_jackson_one_state.hh"
#include "er7_utils/integration/core/include/first_order_ode_integrator.hh"
#include "er7_utils/integration/core/include/integrator_constructor.hh"
#include "er7_utils/interface/include/alloc.hh"
#include <algorithm>
#include <cmath>
```

### Namespaces

- [jeod](#)

*Namespace jeod.*

## Typedefs

- typedef  
GaussJacksonIntegratorBase  
< GaussJacksonOneState,  
er7\_utils::FirstOrderODEIntegrator > [jeod::GaussJacksonIntegratorBaseFirst](#)  
*Alias for a first order Gauss Jackson integrator.*

### 9.13.1 Detailed Description

Defines the template specializations of GaussJacksonIntegratorBase for a first order ODE.

Definition in file [gauss\\_jackson\\_integrator\\_base\\_first.hh](#).

## 9.14 gauss\_jackson\_integrator\_base\_second.hh File Reference

Defines the template specializations of GaussJacksonIntegratorBase for a first order ODE.

```
#include "gauss_jackson_integrator_base.hh"
#include "gauss_jackson_two_state.hh"
#include "er7_utils/integration/core/include/second_order_ode_integrator.-
hh"
#include "er7_utils/integration/core/include/integrator_constructor.hh"
#include "er7_utils/interface/include/alloc.hh"
#include <algorithm>
#include <cmath>
```

## Namespaces

- [jeod](#)  
*Namespace jeod.*

## Typedefs

- typedef  
GaussJacksonIntegratorBase  
< GaussJacksonTwoState,  
er7\_utils::SecondOrderODEIntegrator > [jeod::GaussJacksonIntegratorBaseSecond](#)  
*Alias for a second order Gauss Jackson integrator.*

### 9.14.1 Detailed Description

Defines the template specializations of GaussJacksonIntegratorBase for a first order ODE.

Definition in file [gauss\\_jackson\\_integrator\\_base\\_second.hh](#).

## 9.15 gauss\_jackson\_integrator\_constructor.cc File Reference

Defines member functions for the class GaussJacksonIntegratorConstructor.

```
#include "../include/gauss_jackson_integrator_constructor.hh"
#include "../include/gauss_jackson_first_order_ode_integrator.hh"
#include "../include/gauss_jackson_simple_second_order_ode_integrator.hh"
#include "../include/gauss_jackson_generalized_second_order_ode_integrator.-
hh"
#include "er7_utils/integration/core/include/integrator_constructor_factory.-
hh"
#include "er7_utils/integration/core/include/integrator_constructor_utils.-
hh"
#include "er7_utils/integration/core/include/integration_controls.hh"
#include "er7_utils/integration/core/include/integration_messages.hh"
#include "er7_utils/interface/include/alloc.hh"
#include "er7_utils/interface/include/message_handler.hh"
#include <algorithm>
```

## Namespaces

- [jeod](#)  
*Namespace jeod.*

## Functions

- static  
GaussJacksonIntegrationControls \* [jeod::cast\\_to\\_gj\\_controls](#) (er7\_utils::IntegrationControls &controls)  
*Cast the provided integration controls to a [GaussJacksonIntegrationControls](#).*

### 9.15.1 Detailed Description

Defines member functions for the class GaussJacksonIntegratorConstructor.

Definition in file [gauss\\_jackson\\_integrator\\_constructor.cc](#).

## 9.16 gauss\_jackson\_integrator\_constructor.hh File Reference

Defines the class GaussJacksonIntegratorConstructor, which constructs integrators that use Gauss-Jackson integration.

```
#include "gauss_jackson_config.hh"
#include "utils/sim_interface/include/jeod_class.hh"
#include "er7_utils/integration/core/include/integrator_constructor.hh"
```

## Data Structures

- class [jeod::GaussJacksonIntegratorConstructor](#)  
*Create state and time integrators that propagate using Gauss-Jackson.*

## Namespaces

- [jeod](#)  
*Namespace jeod.*

### 9.16.1 Detailed Description

Defines the class GaussJacksonIntegratorConstructor, which constructs integrators that use Gauss-Jackson integration.

Definition in file [gauss\\_jackson\\_integrator\\_constructor.hh](#).

## 9.17 gauss\_jackson\_one\_state.hh File Reference

Defines the class GaussJacksonOneState, which contains a double\* pointer.

```
#include "utils/sim_interface/include/jeod_class.hh"
#include <cstdint>
```

### Data Structures

- class [jeod::GaussJacksonOneState](#)

*Essentially just a double\*.*

### Namespaces

- [jeod](#)

*Namespace jeod.*

### 9.17.1 Detailed Description

Defines the class GaussJacksonOneState, which contains a double\* pointer.

Definition in file [gauss\\_jackson\\_one\\_state.hh](#).

## 9.18 gauss\_jackson\_rational\_coeffs.cc File Reference

Defines member functions for the class GaussJacksonRationalCoefficients.

```
#include "../include/gauss_jackson_rational_coeffs.hh"
#include "er7_utils/math/include/n_choose_m.hh"
#include "er7_utils/math/include/ratio128.hh"
#include <cassert>
```

### Namespaces

- [jeod](#)

*Namespace jeod.*

### 9.18.1 Detailed Description

Defines member functions for the class GaussJacksonRationalCoefficients.

Definition in file [gauss\\_jackson\\_rational\\_coeffs.cc](#).

## 9.19 gauss\_jackson\_rational\_coefs.hh File Reference

Defines the class GaussJacksonRationalCoefficients, which contains a set of Adams or Stormer-Cowell coefficients.

```
#include "utils/sim_interface/include/jeod_class.hh"
#include "er7_utils/math/include/ratio128.hh"
#include <vector>
```

### Data Structures

- class [jeod::GaussJacksonRationalCoefficients](#)  
*Contains a set of Adams or Stormer-Cowell coefficients.*

### Namespaces

- [er7\\_utils](#)  
*Namespace [er7\\_utils](#) contains the state integration models used by JEOD.*
- [jeod](#)  
*Namespace [jeod](#).*

#### 9.19.1 Detailed Description

Defines the class GaussJacksonRationalCoefficients, which contains a set of Adams or Stormer-Cowell coefficients.

Definition in file [gauss\\_jackson\\_rational\\_coefs.hh](#).

## 9.20 gauss\_jackson\_simple\_second\_order\_ode\_integrator.hh File Reference

Defines the class GaussJacksonSimpleSecondOrderODEIntegrator, which integrates a simple second order ODE using Gauss-Jackson.

```
#include "gauss_jackson_integrator_base_second.hh"
#include "gauss_jackson_two_state.hh"
#include "utils/sim_interface/include/jeod_class.hh"
#include "er7_utils/integration/core/include/second_order_ode_integrator.-
hh"
```

### Data Structures

- class [jeod::GaussJacksonSimpleSecondOrderODEIntegrator](#)  
*Integrates a simple second order ODE using the Gauss-Jackson technique.*

### Namespaces

- [jeod](#)  
*Namespace [jeod](#).*

### 9.20.1 Detailed Description

Defines the class GaussJacksonSimpleSecondOrderODEIntegrator, which integrates a simple second order ODE using Gauss-Jackson.

Definition in file [gauss\\_jackson\\_simple\\_second\\_order\\_ode\\_integrator.hh](#).

## 9.21 gauss\_jackson\_state\_machine.cc File Reference

Defines member functions for the class GaussJacksonStateMachine.

```
#include "../include/gauss_jackson_state_machine.hh"
#include "../include/gauss_jackson_config.hh"
#include <algorithm>
#include <cassert>
#include <string>
```

### Namespaces

- [jeod](#)

*Namespace jeod.*

### 9.21.1 Detailed Description

Defines member functions for the class GaussJacksonStateMachine.

Definition in file [gauss\\_jackson\\_state\\_machine.cc](#).

## 9.22 gauss\_jackson\_state\_machine.hh File Reference

Defines the class GaussJacksonStateMachine, which guides the Gauss-Jackson integration process.

```
#include "utils/sim_interface/include/jeod_class.hh"
#include <string>
```

### Data Structures

- class [jeod::GaussJacksonStateMachine](#)

*Guides the behavior of the Gauss-Jackson integration process via a finite state machine.*

### Namespaces

- [jeod](#)

*Namespace jeod.*

### 9.22.1 Detailed Description

Defines the class GaussJacksonStateMachine, which guides the Gauss-Jackson integration process.

Definition in file [gauss\\_jackson\\_state\\_machine.hh](#).



## 9.23 gauss\_jackson\_two\_state.hh File Reference

Defines the class GaussJacksonTwoState, which contains a pair of double\* pointers.

```
#include "utils/sim_interface/include/jeod_class.hh"
#include <cstdint>
```

### Data Structures

- class [jeod::GaussJacksonTwoState](#)  
*Essentially just `std::pair<double*>`.*

### Namespaces

- [jeod](#)  
*Namespace jeod.*

#### 9.23.1 Detailed Description

Defines the class GaussJacksonTwoState, which contains a pair of double\* pointers.

Definition in file [gauss\\_jackson\\_two\\_state.hh](#).

## 9.24 generalized\_second\_order\_ode\_technique.cc File Reference

Define class GeneralizedSecondOrderODETechnique methods.

```
#include <cstdint>
#include "er7_utils/integration/core/include/integrator_constructor.hh"
#include "utils/message/include/message_handler.hh"
#include "../include/generalized_second_order_ode_technique.hh"
#include "../include/integration_messages.hh"
```

### Namespaces

- [jeod](#)  
*Namespace jeod.*

#### 9.24.1 Detailed Description

Define class GeneralizedSecondOrderODETechnique methods.

Definition in file [generalized\\_second\\_order\\_ode\\_technique.cc](#).

## 9.25 generalized\_second\_order\_ode\_technique.hh File Reference

Define the static class GeneralizedSecondOrderODETechnique.

```
#include "er7_utils/integration/core/include/integration_technique.hh"
```

## Data Structures

- class [jeod::GeneralizedSecondOrderODETechnique](#)

*Enumerates the integration schemes, generalized Cartesian or Lie group integration, and provides simple utilities that work with this.*

## Namespaces

- [er7\\_utils](#)

*Namespace [er7\\_utils](#) contains the state integration models used by JEOD.*

- [jeod](#)

*Namespace [jeod](#).*

### 9.25.1 Detailed Description

Define the static class GeneralizedSecondOrderODETechnique.

Definition in file [generalized\\_second\\_order\\_ode\\_technique.hh](#).

## 9.26 integration\_messages.cc File Reference

Implement the class IntegrationMessages.

```
#include "../include/integration_messages.hh"
```

## Namespaces

- [jeod](#)

*Namespace [jeod](#).*

## Macros

- #define [PATH](#) "utils/integration/"
- #define [CLASS](#) IntegrationMessages
- #define [MAKE\\_MESSAGE\\_CODE](#)(id) char const \* CLASS::id = [PATH](#) #id

### 9.26.1 Detailed Description

Implement the class IntegrationMessages.

Definition in file [integration\\_messages.cc](#).

## 9.27 integration\_messages.hh File Reference

Define the class IntegrationMessages, the class that specifies the message IDs used in the integration model.

```
#include "utils/sim_interface/include/jeod_class.hh"
```

## Data Structures

- class [jeod::IntegrationMessages](#)

*Declares messages associated with the integration test model.*

## Namespaces

- [jeod](#)

*Namespace jeod.*

### 9.27.1 Detailed Description

Define the class `IntegrationMessages`, the class that specifies the message IDs used in the integration model.

Definition in file [integration\\_messages.hh](#).

## 9.28 jeod\_integration\_group.cc File Reference

Define `JeodIntegrationGroup` methods.

```
#include "../include/jeod_integration_group.hh"
#include "../include/jeod_integration_time.hh"
#include "../include/integration_messages.hh"
#include "utils/sim_interface/include/jeod_class.hh"
#include "utils/memory/include/jeod_alloc.hh"
#include "utils/message/include/message_handler.hh"
#include "er7_utils/integration/core/include/integrable_object.hh"
#include "er7_utils/integration/core/include/integrator_constructor.hh"
#include <algorithm>
#include <cstdint>
```

## Namespaces

- [jeod](#)

*Namespace jeod.*

### 9.28.1 Detailed Description

Define `JeodIntegrationGroup` methods.

Definition in file [jeod\\_integration\\_group.cc](#).

## 9.29 jeod\_integration\_group.hh File Reference

Define the extensible class `IntegrationGroup`, an instance of which is responsible for integrating the states of a set of `DynBody` objects.

```
#include "time_change_subscriber.hh"
#include "utils/sim_interface/include/jeod_class.hh"
#include "utils/container/include/pointer_vector.hh"
#include "utils/sim_interface/include/jeod_integrator_interface.hh"
#include "er7_utils/integration/core/include/base_integration_group.hh"
#include "er7_utils/integration/core/include/integrable_object.hh"
#include "er7_utils/integration/core/include/integrator_constructor.hh"
#include "er7_utils/integration/core/include/integrator_result_merger_
container.hh"
#include <cstdlib>
```

## Data Structures

- class [jeod::JeodIntegrationGroupOwner](#)  
*The abstract class `IntegrationGroupOwner` contains an `IntegrationGroup`.*
- class [jeod::JeodIntegrationGroup](#)  
*A `JeodIntegrationGroup` integrates the state of a set of objects over time.*

## Namespaces

- [jeod](#)  
*Namespace `jeod`.*

### 9.29.1 Detailed Description

Define the extensible class `IntegrationGroup`, an instance of which is responsible for integrating the states of a set of `DynBody` objects.

Definition in file [jeod\\_integration\\_group.hh](#).

## 9.30 jeod\_integration\_time.cc File Reference

Define `JeodIntegrationTime` methods.

```
#include <algorithm>
#include <cstdlib>
#include "utils/memory/include/jeod_alloc.hh"
#include "utils/message/include/message_handler.hh"
#include "../include/integration_messages.hh"
#include "../include/jeod_integration_time.hh"
#include "../include/time_change_subscriber.hh"
```

## Namespaces

- [jeod](#)  
*Namespace `jeod`.*

### 9.30.1 Detailed Description

Define `JeodIntegrationTime` methods.

Definition in file [jeod\\_integration\\_time.cc](#).

## 9.31 jeod\_integration\_time.hh File Reference

Define the class JeodIntegrationTime.

```
#include "er7_utils/integration/core/include/time_interface.hh"
#include "utils/container/include/pointer_vector.hh"
#include "utils/sim_interface/include/jeod_class.hh"
```

### Data Structures

- class [jeod::JeodIntegrationTime](#)

*The class [JeodIntegrationTime](#) adds the concepts of timestamping and notification of changes in the nature of time to the ER7 numerical utilities TimeInterface class.*

### Namespaces

- [jeod](#)

*Namespace [jeod](#).*

#### 9.31.1 Detailed Description

Define the class JeodIntegrationTime.

Definition in file [jeod\\_integration\\_time.hh](#).

## 9.32 lsode\_control\_data\_interface.cc File Reference

Define member functions for the class LsodeControlDataInterface.

```
#include "er7_utils/interface/include/message_handler.hh"
#include "er7_utils/integration/core/include/integration_messages.hh"
#include "er7_utils/interface/include/alloc.hh"
#include "../include/lsode_control_data_interface.hh"
```

#### 9.32.1 Detailed Description

Define member functions for the class LsodeControlDataInterface.

Definition in file [lsode\\_control\\_data\\_interface.cc](#).

## 9.33 lsode\_control\_data\_interface.hh File Reference

Define the class LsodeControlDataInterface.

```
#include <vector>
#include "utils/sim_interface/include/jeod_class.hh"
```

## Data Structures

- class [jeod::LsodeControlDataInterface](#)  
*Specifies controls for an LSODE integrator.*

## Namespaces

- [jeod](#)  
*Namespace jeod.*

### 9.33.1 Detailed Description

Define the class LsodeControlDataInterface.

Definition in file [lsode\\_control\\_data\\_interface.hh](#).

## 9.34 lsode\_data\_classes.cc File Reference

Define member functions for the data-grouping classes specified in lsode\_data\_classes.

```
#include "er7_utils/interface/include/message_handler.hh"
#include "er7_utils/integration/core/include/integration_messages.hh"
#include "er7_utils/interface/include/alloc.hh"
#include "../include/lsode_data_classes.hh"
```

### 9.34.1 Detailed Description

Define member functions for the data-grouping classes specified in lsode\_data\_classes.

Definition in file [lsode\\_data\\_classes.cc](#).

## 9.35 lsode\_data\_classes.hh File Reference

Define LSODE classes that contain just data members.

```
#include "utils/sim_interface/include/jeod_class.hh"
#include "lsode_control_data_interface.hh"
```

## Data Structures

- class [jeod::LsodeDataJacobianPrep](#)  
*Data associated with the method DPREPJ.*
- class [jeod::LsodeDataArrays](#)  
*The data arrays.*
- class [jeod::LsodeDataStode](#)  
*The data associated with method Dstode.*

## Namespaces

- [jeod](#)

*Namespace jeod.*

### 9.35.1 Detailed Description

Define LSODE classes that contain just data members.

Definition in file [lsode\\_data\\_classes.hh](#).

## 9.36 `lsode_first_order_ode_integrator.hh` File Reference

Define the class `LsodeFirstOrderODEIntegrator`, the Jeod-compatible version of the Livermore ODE solver, LSODE.

```
#include "utils/sim_interface/include/jeod_class.hh"
#include "er7_utils/integration/core/include/first_order_ode_integrator.hh"
#include "er7_utils/integration/core/include/integrator_result.hh"
#include "er7_utils/integration/core/include/integration_controls.hh"
#include "lsode_control_data_interface.hh"
#include "lsode_data_classes.hh"
#include "lsode_integration_controls.hh"
```

## Data Structures

- class [jeod::LsodeFirstOrderODEIntegrator](#)

*Jeod-compatible version of the Livermore ODE solver, LSODE.*

## Namespaces

- [jeod](#)

*Namespace jeod.*

### 9.36.1 Detailed Description

Define the class `LsodeFirstOrderODEIntegrator`, the Jeod-compatible version of the Livermore ODE solver, LSODE.

Definition in file [lsode\\_first\\_order\\_ode\\_integrator.hh](#).

## 9.37 `lsode_first_order_ode_integrator__integrator.cc` File Reference

Define member functions for the class `LsodeFirstOrderODEIntegrator`.

```
#include <math.h>
#include <cmath>
#include "er7_utils/interface/include/alloc.hh"
#include "er7_utils/integration/core/include/integ_utils.hh"
#include "er7_utils/interface/include/message_handler.hh"
#include "er7_utils/integration/core/include/integration_messages.hh"
#include "er7_utils/integration/core/include/integration_controls.hh"
#include "../include/lsode_first_order_ode_integrator.hh"
```

### 9.37.1 Detailed Description

Define member functions for the class `LsodeFirstOrderODEIntegrator`.

Definition in file [lsode\\_first\\_order\\_ode\\_integrator\\_\\_integrator.cc](#).

## 9.38 lsode\_first\_order\_ode\_integrator\_\_manager.cc File Reference

Define member functions for the class `LsodeFirstOrderODEIntegrator`.

```
#include <cmath>
#include "er7_utils/interface/include/alloc.hh"
#include "er7_utils/integration/core/include/integ_utils.hh"
#include "er7_utils/interface/include/message_handler.hh"
#include "er7_utils/integration/core/include/integration_messages.hh"
#include "er7_utils/integration/core/include/integration_controls.hh"
#include "../include/lsode_first_order_ode_integrator.hh"
```

### 9.38.1 Detailed Description

Define member functions for the class `LsodeFirstOrderODEIntegrator`.

Definition in file [lsode\\_first\\_order\\_ode\\_integrator\\_\\_manager.cc](#).

## 9.39 lsode\_first\_order\_ode\_integrator\_\_support.cc File Reference

Define member functions for the class `LsodeFirstOrderODEIntegrator`.

```
#include <math.h>
#include <cmath>
#include "er7_utils/interface/include/alloc.hh"
#include "er7_utils/integration/core/include/integ_utils.hh"
#include "er7_utils/interface/include/message_handler.hh"
#include "er7_utils/integration/core/include/integration_messages.hh"
#include "er7_utils/integration/core/include/integration_controls.hh"
#include "../include/lsode_first_order_ode_integrator.hh"
```

### 9.39.1 Detailed Description

Define member functions for the class `LsodeFirstOrderODEIntegrator`.

Definition in file [lsode\\_first\\_order\\_ode\\_integrator\\_\\_support.cc](#).

## 9.40 lsode\_first\_order\_ode\_integrator\_\_utility.cc File Reference

Define member functions for the class `LsodeFirstOrderODEIntegrator`.



```
#include <math.h>
#include <cmath>
#include "er7_utils/interface/include/alloc.hh"
#include "er7_utils/integration/core/include/integ_utils.hh"
#include "er7_utils/interface/include/message_handler.hh"
#include "er7_utils/integration/core/include/integration_messages.hh"
#include "er7_utils/integration/core/include/integration_controls.hh"
#include "../include/lsode_first_order_ode_integrator.hh"
```

### 9.40.1 Detailed Description

Define member functions for the class `LsodeFirstOrderODEIntegrator`.

Definition in file [lsode\\_first\\_order\\_ode\\_integrator\\_\\_utility.cc](#).

## 9.41 `lsode_generalized_second_order_ode_integrator.cc` File Reference

Define member functions for the class `LsodeGeneralizedDerivSecondOrderODEIntegrator`.

```
#include "er7_utils/interface/include/alloc.hh"
#include "er7_utils/integration/core/include/integ_utils.hh"
#include "er7_utils/interface/include/message_handler.hh"
#include "er7_utils/integration/core/include/integration_messages.hh"
#include "er7_utils/integration/core/include/integration_controls.hh"
#include "../include/lsode_control_data_interface.hh"
#include "../include/lsode_generalized_second_order_ode_integrator.hh"
```

### 9.41.1 Detailed Description

Define member functions for the class `LsodeGeneralizedDerivSecondOrderODEIntegrator`.

Definition in file [lsode\\_generalized\\_second\\_order\\_ode\\_integrator.cc](#).

## 9.42 `lsode_generalized_second_order_ode_integrator.hh` File Reference

Define the class `LsodeGeneralizedDerivSecondOrderODEIntegrator`.

```
#include "utils/sim_interface/include/jeod_class.hh"
#include "er7_utils/integration/core/include/second_order_ode_integrator.-
hh"
#include "lsode_second_order_ode_integrator.hh"
```

### Data Structures

- class [jeod::LsodeGeneralizedDerivSecondOrderODEIntegrator](#)  
*JEOD-compatible version of the Livermore ODE solver, LSODE, capable of integrating second-order ODEs.*

### Namespaces

- [jeod](#)

Namespace *jeod*.

### 9.42.1 Detailed Description

Define the class `LsodeGeneralizedDerivSecondOrderODEIntegrator`.

Definition in file [lsode\\_generalized\\_second\\_order\\_ode\\_integrator.hh](#).

## 9.43 lsode\_integration\_controls.cc File Reference

Define the methods for the class `LsodeIntegrationControls`.

```
#include "er7_utils/integration/core/include/base_integration_group.hh"
#include "er7_utils/integration/core/include/integrator_interface.hh"
#include "er7_utils/integration/core/include/time_interface.hh"
#include "er7_utils/interface/include/message_handler.hh"
#include "er7_utils/integration/core/include/integration_messages.hh"
#include "../include/lsode_integration_controls.hh"
```

### 9.43.1 Detailed Description

Define the methods for the class `LsodeIntegrationControls`.

Definition in file [lsode\\_integration\\_controls.cc](#).

## 9.44 lsode\_integration\_controls.hh File Reference

Define the class `LsodeIntegrationControls`.

```
#include "er7_utils/interface/include/alloc.hh"
#include "utils/sim_interface/include/jeod_class.hh"
#include "er7_utils/integration/core/include/standard_integration_controls.-
hh"
#include "er7_utils/integration/core/include/generalized_position_derivative.-
hh"
```

## Data Structures

- class [jeod::LsodeIntegrationControls](#)  
*Contains controls for an LSODE integrator.*

## Namespaces

- [jeod](#)  
*Namespace jeod.*

### 9.44.1 Detailed Description

Define the class `LsodeIntegrationControls`.

Definition in file [lsode\\_integration\\_controls.hh](#).

## 9.45 `lsode_integrator_constructor.cc` File Reference

Define the methods in the class `LsodeIntegratorConstructor`.

```
#include "er7_utils/interface/include/alloc.hh"
#include "er7_utils/integration/core/include/integrator_constructor_utils.-
hh"
#include "er7_utils/interface/include/message_handler.hh"
#include "er7_utils/integration/core/include/integration_messages.hh"
#include "../include/lsode_integrator_constructor.hh"
#include "../include/lsode_first_order_ode_integrator.hh"
#include "../include/lsode_second_order_ode_integrator.hh"
#include "../include/lsode_simple_second_order_ode_integrator.hh"
#include "../include/lsode_generalized_second_order_ode_integrator.hh"
#include "../include/lsode_integration_controls.hh"
```

### 9.45.1 Detailed Description

Define the methods in the class `LsodeIntegratorConstructor`.

Definition in file [lsode\\_integrator\\_constructor.cc](#).

## 9.46 `lsode_integrator_constructor.hh` File Reference

Define the class `LsodeIntegratorConstructor`, the class that constructs the integration controls and the integrators for the LSODE method.

```
#include <vector>
#include "utils/sim_interface/include/jeod_class.hh"
#include "er7_utils/integration/core/include/integrator_constructor.hh"
#include "lsode_first_order_ode_integrator.hh"
#include "lsode_second_order_ode_integrator.hh"
#include "lsode_simple_second_order_ode_integrator.hh"
#include "lsode_generalized_second_order_ode_integrator.hh"
#include "lsode_control_data_interface.hh"
```

### Data Structures

- class [jeod::LsodeIntegratorConstructor](#)  
*Create state and time integrators that propagate using standard Lsode.*

### Namespaces

- [jeod](#)  
*Namespace jeod.*

### 9.46.1 Detailed Description

Define the class `LsodeIntegratorConstructor`, the class that constructs the integration controls and the integrators for the LSODE method.

Definition in file [lsode\\_integrator\\_constructor.hh](#).

## 9.47 lsode\_second\_order\_ode\_integrator.cc File Reference

Define member functions for the class LsodeSecondOrderODEIntegrator.

```
#include "er7_utils/interface/include/alloc.hh"
#include "er7_utils/integration/core/include/integ_utils.hh"
#include "er7_utils/interface/include/message_handler.hh"
#include "er7_utils/integration/core/include/integration_messages.hh"
#include "er7_utils/integration/core/include/integration_controls.hh"
#include "../include/lsode_control_data_interface.hh"
#include "../include/lsode_second_order_ode_integrator.hh"
```

### 9.47.1 Detailed Description

Define member functions for the class LsodeSecondOrderODEIntegrator.

Definition in file [lsode\\_second\\_order\\_ode\\_integrator.cc](#).

## 9.48 lsode\_second\_order\_ode\_integrator.hh File Reference

Define the class LsodeSecondOrderODEIntegrator.

```
#include "utils/sim_interface/include/jeod_class.hh"
#include "er7_utils/integration/core/include/second_order_ode_integrator.-
hh"
#include "lsode_first_order_ode_integrator.hh"
#include "lsode_integration_controls.hh"
```

### Data Structures

- class [jeod::LsodeSecondOrderODEIntegrator](#)

*JEOD-compatible version of the Livermore ODE solver, LSODE, capable of integrating second-order ODEs.*

### Namespaces

- [jeod](#)

*Namespace jeod.*

### 9.48.1 Detailed Description

Define the class LsodeSecondOrderODEIntegrator.

Definition in file [lsode\\_second\\_order\\_ode\\_integrator.hh](#).

## 9.49 lsode\_simple\_second\_order\_ode\_integrator.cc File Reference

Define member functions for the class LsodeSimpleSecondOrderODEIntegrator.

```
#include "er7_utils/interface/include/alloc.hh"
#include "er7_utils/interface/include/message_handler.hh"
#include "er7_utils/integration/core/include/integration_messages.hh"
#include "../include/lsode_control_data_interface.hh"
#include "../include/lsode_simple_second_order_ode_integrator.hh"
```

### 9.49.1 Detailed Description

Define member functions for the class `LsodeSimpleSecondOrderODEIntegrator`.

Definition in file [lsode\\_simple\\_second\\_order\\_ode\\_integrator.cc](#).

## 9.50 lsode\_simple\_second\_order\_ode\_integrator.hh File Reference

Define the class `LsodeSimpleSecondOrderODEIntegrator`.

```
#include "utils/sim_interface/include/jeod_class.hh"
#include "er7_utils/integration/core/include/second_order_ode_integrator.-
hh"
#include "lsode_second_order_ode_integrator.hh"
```

### Data Structures

- class [jeod::LsodeSimpleSecondOrderODEIntegrator](#)  
*JEOD-compatible version of the Livermore ODE solver, LSODE, capable of integrating second-order ODEs.*

### Namespaces

- [jeod](#)  
*Namespace jeod.*

### 9.50.1 Detailed Description

Define the class `LsodeSimpleSecondOrderODEIntegrator`.

Definition in file [lsode\\_simple\\_second\\_order\\_ode\\_integrator.hh](#).

## 9.51 restartable\_2d\_second\_order\_integrator.hh File Reference

Defines the class `Restartable2DSecondOrderODEIntegrator`.

```
#include "restartable_state_integrator_templates.hh"
#include "generalized_second_order_ode_technique.hh"
#include "integration_messages.hh"
#include "utils/container/include/simple_checkpointable.hh"
#include "utils/message/include/message_handler.hh"
#include "utils/memory/include/jeod_alloc.hh"
#include "utils/sim_interface/include/jeod_class.hh"
#include "er7_utils/integration/core/include/first_order_ode_integrator.hh"
#include "er7_utils/integration/core/include/second_order_ode_integrator.-
```

```
hh"
#include "er7_utils/integration/core/include/left_quaternion_functions.hh"
#include <cstdlib>
```

## Data Structures

- class [jeod::Restartable2DSecondOrderIntegrator](#)

*Integrates a second order ODE in two dimensional space,  $d^2x/dt^2 = a(x,t)$ , where  $x$  is a two-vector.*

## Namespaces

- [jeod](#)

*Namespace jeod.*

### 9.51.1 Detailed Description

Defines the class Restartable2DSecondOrderODEIntegrator.

Definition in file [restartable\\_2d\\_second\\_order\\_integrator.hh](#).

## 9.52 restartable\_state\_integrator.hh File Reference

Define classes that encapsulate the construction, destruction, checkpointing, and restarting of state integrators.

```
#include "restartable_state_integrator_templates.hh"
#include "generalized_second_order_ode_technique.hh"
#include "integration_messages.hh"
#include "utils/container/include/simple_checkpointable.hh"
#include "utils/message/include/message_handler.hh"
#include "utils/memory/include/jeod_alloc.hh"
#include "utils/sim_interface/include/jeod_class.hh"
#include "er7_utils/integration/core/include/first_order_ode_integrator.hh"
#include "er7_utils/integration/core/include/second_order_ode_integrator.-
hh"
#include "er7_utils/integration/core/include/left_quaternion_functions.hh"
#include <cstdlib>
```

## Data Structures

- class [jeod::RestartableScalarFirstOrderODEIntegrator](#)

*A [RestartableScalarFirstOrderODEIntegrator](#) integrates a first order ODE,  $dx/dt = v(x,t)$ , where  $x$  is a scalar.*

- class [jeod::RestartableT3SecondOrderODEIntegrator](#)

*A [RestartableT3SecondOrderODEIntegrator](#) integrates a second order ODE in three space,  $d^2x/dt^2 = a(x,t)$ , where  $x$  is a three-vector.*

- class [jeod::RestartableSO3SecondOrderODEIntegrator](#)

*A [RestartableSO3SecondOrderODEIntegrator](#) integrates a generalized second order ODE that describes rotation in three space.*

## Namespaces

- [jeod](#)

Namespace *jeod*.

### 9.52.1 Detailed Description

Define classes that encapsulate the construction, destruction, checkpointing, and restarting of state integrators.

Definition in file [restartable\\_state\\_integrator.hh](#).

## 9.53 restartable\_state\_integrator\_templates.hh File Reference

Define template classes that encapsulate the construction, destruction, checkpointing, and restarting of state integrators.

```
#include <cstddef>
#include "er7_utils/integration/core/include/integrator_constructor.hh"
#include "er7_utils/integration/core/include/first_order_ode_integrator.hh"
#include "er7_utils/integration/core/include/second_order_ode_integrator.-
hh"
#include "utils/container/include/simple_checkpointable.hh"
#include "utils/message/include/message_handler.hh"
#include "utils/sim_interface/include/jeod_class.hh"
#include "integration_messages.hh"
```

## Data Structures

- class [jeod::RestartableStateIntegrator< IntegratorType >](#)  
A [RestartableStateIntegrator](#) establishes the basic capabilities needed to make a state integrator a managed resource.
- class [jeod::RestartableFirstOrderODEIntegrator< size >](#)  
A [RestartableFirstOrderODEIntegrator](#) is-a [RestartableStateIntegrator](#) that manages an [er7\\_utils::FirstOrderODEIntegrator](#).
- class [jeod::RestartableSecondOrderODEIntegrator](#)  
A [RestartableSecondOrderODEIntegrator](#) is-a [RestartableStateIntegrator](#) that manages the integrator for a second order ODE problem.
- class [jeod::RestartableSimpleSecondOrderODEIntegrator< size >](#)  
A [RestartableSimpleSecondOrderODEIntegrator](#) is-a [RestartableSecondOrderODEIntegrator](#) that manages the integrator for a simple second order ODE problem, one in which the time derivative of the generalized position is the generalized velocity.
- class [jeod::RestartableGeneralizedDerivSecondOrderODEIntegrator< position\\_size, velocity\\_size, Deriv-Functions >](#)  
A [RestartableGeneralizedDerivSecondOrderODEIntegrator](#) is-a [RestartableStateIntegrator](#) that manages the integrator for a generalized second order ODE problem, one in which the time derivative of the generalized position is some function of the generalized position and the generalized velocity.
- class [jeod::RestartableGeneralizedStepSecondOrderODEIntegrator< position\\_size, velocity\\_size, Step-Functions >](#)  
A [RestartableGeneralizedStepSecondOrderODEIntegrator](#) is-a [RestartableStateIntegrator](#) that manages the integrator for a generalized second order ODE problem, one in which the time derivative of the generalized position is some function of the generalized position and the generalized velocity.

## Namespaces

- [jeod](#)

*Namespace jeod.*

### 9.53.1 Detailed Description

Define template classes that encapsulate the construction, destruction, checkpointing, and restarting of state integrators.

Definition in file [restartable\\_state\\_integrator\\_templates.hh](#).

## 9.54 time\_change\_subscriber.hh File Reference

Define the class TimeChangeSubscriber.

```
#include "utils/sim_interface/include/jeod_class.hh"
```

## Data Structures

- class [jeod::TimeChangeSubscriber](#)

*A [TimeChangeSubscriber](#) is some object that wants to be notified of changes in the nature of time.*

## Namespaces

- [jeod](#)

*Namespace jeod.*

### 9.54.1 Detailed Description

Define the class TimeChangeSubscriber.

Definition in file [time\\_change\\_subscriber.hh](#).

## 9.55 two\_d\_array.hh File Reference

Defines the template class [er7\\_utils::TwoDArray](#), which implements an RAII rectangular 2D array.

```
#include "er7_utils/interface/include/er7_class.hh"
#include "er7_utils/interface/include/alloc.hh"
#include <algorithm>
#include <cstddef>
#include <cstring>
#include <limits>
#include <stdexcept>
```

## Data Structures

- class [er7\\_utils::TwoDArray< T >](#)

*RAII template class that implements a rectangular two dimensional array.*



- class [er7\\_utils::DoubleTwoDArray](#)  
*2D array, specialized for doubles.*

## Namespaces

- [er7\\_utils](#)  
*Namespace [er7\\_utils](#) contains the state integration models used by JEOD.*

### 9.55.1 Detailed Description

Defines the template class [er7\\_utils::TwoDArray](#), which implements an RAII rectangular 2D array.

Definition in file [two\\_d\\_array.hh](#).

# Index

- ~GaussJacksonCoefficientsPair
  - jeod::GaussJacksonCoefficientsPair, [57](#)
- ~GaussJacksonCoeffs
  - jeod::GaussJacksonCoeffs, [62](#)
- ~GaussJacksonFirstOrderODEIntegrator
  - jeod::GaussJacksonFirstOrderODEIntegrator, [68](#)
- ~GaussJacksonGeneralizedDerivSecondOrderODE-Integrator
  - jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator, [71](#)
- ~GaussJacksonIntegrationControls
  - jeod::GaussJacksonIntegrationControls, [76](#)
- ~GaussJacksonIntegratorBase
  - jeod::GaussJacksonIntegratorBase, [86](#)
- ~GaussJacksonIntegratorConstructor
  - jeod::GaussJacksonIntegratorConstructor, [106](#)
- ~GaussJacksonSimpleSecondOrderODEIntegrator
  - jeod::GaussJacksonSimpleSecondOrderODEIntegrator, [116](#)
- ~GeneralizedSecondOrderODETechnique
  - jeod::GeneralizedSecondOrderODETechnique, [132](#)
- ~JeodIntegrationGroup
  - jeod::JeodIntegrationGroup, [138](#)
- ~JeodIntegrationGroupOwner
  - jeod::JeodIntegrationGroupOwner, [142](#)
- ~JeodIntegrationTime
  - jeod::JeodIntegrationTime, [144](#)
- ~LsodeControlDataInterface
  - jeod::LsodeControlDataInterface, [148](#)
- ~LsodeDataArrays
  - jeod::LsodeDataArrays, [153](#)
- ~LsodeDataJacobianPrep
  - jeod::LsodeDataJacobianPrep, [157](#)
- ~LsodeDataStode
  - jeod::LsodeDataStode, [159](#)
- ~LsodeFirstOrderODEIntegrator
  - Lsode, [47](#)
- ~LsodeGeneralizedDerivSecondOrderODEIntegrator
  - Lsode, [48](#)
- ~LsodeIntegrationControls
  - jeod::LsodeIntegrationControls, [179](#)
- ~LsodeSecondOrderODEIntegrator
  - Lsode, [48](#)
- ~LsodeSimpleSecondOrderODEIntegrator
  - jeod::LsodeSimpleSecondOrderODEIntegrator, [186](#)
- ~Restartable2DSecondOrderIntegrator
  - jeod::Restartable2DSecondOrderIntegrator, [188](#)
- ~RestartableFirstOrderODEIntegrator
  - jeod::RestartableFirstOrderODEIntegrator, [193](#)
- ~RestartableGeneralizedDerivSecondOrderODE-Integrator
  - jeod::RestartableGeneralizedDerivSecondOrderODEIntegrator, [195](#)
- ~RestartableGeneralizedStepSecondOrderODE-Integrator
  - jeod::RestartableGeneralizedStepSecondOrderODEIntegrator, [199](#)
- ~RestartableSO3SecondOrderODEIntegrator
  - jeod::RestartableSO3SecondOrderODEIntegrator, [208](#)
- ~RestartableScalarFirstOrderODEIntegrator
  - jeod::RestartableScalarFirstOrderODEIntegrator, [201](#)
- ~RestartableSecondOrderODEIntegrator
  - jeod::RestartableSecondOrderODEIntegrator, [204](#)
- ~RestartableSimpleSecondOrderODEIntegrator
  - jeod::RestartableSimpleSecondOrderODEIntegrator, [206](#)
- ~RestartableStateIntegrator
  - jeod::RestartableStateIntegrator, [213](#)
- ~RestartableT3SecondOrderODEIntegrator
  - jeod::RestartableT3SecondOrderODEIntegrator, [218](#)
- ~TimeChangeSubscriber
  - jeod::TimeChangeSubscriber, [220](#)
- ~TwoDArray
  - er7\_utils::TwoDArray, [223](#)
- abs\_tolerance\_error\_control
  - jeod::LsodeControlDataInterface, [149](#)
- abs\_tolerance\_error\_control\_vec
  - jeod::LsodeControlDataInterface, [149](#)
- absolute\_tolerance
  - jeod::GaussJacksonConfig, [66](#)
  - jeod::GaussJacksonIntegratorBase, [100](#)
- acc\_hist
  - jeod::GaussJacksonIntegratorBase, [101](#)
- accum\_correction
  - jeod::LsodeDataArrays, [154](#)
- add\_integrable\_object
  - jeod::JeodIntegrationGroup, [138](#)
- add\_time\_change\_subscriber
  - jeod::JeodIntegrationTime, [144](#)
- advance\_edit\_integration\_constants
  - jeod::GaussJacksonIntegratorBase, [87](#)
- advance\_predictor\_integration\_constants
  - jeod::GaussJacksonIntegratorBase, [87](#)

- allocate
  - er7\_utils::TwoDArray, [223](#)
- allocate\_arrays
  - jeod::GaussJacksonCoefficientsPair, [57](#)
  - Lsode, [25](#), [26](#)
- allocate\_internal
  - er7\_utils::TwoDArray, [223](#)
- allocate\_state\_contents
  - jeod::GaussJacksonIntegratorBase, [89](#)
- allocated
  - jeod::LsodeDataArrays, [154](#)
- apply
  - jeod::GaussJacksonCoefficientsPair, [57](#)
- arrays
  - jeod::LsodeFirstOrderODEIntegrator, [167](#)
- arrays\_allocated
  - jeod::LsodeSecondOrderODEIntegrator, [184](#)
- at
  - er7\_utils::TwoDArray, [223](#), [225](#)
- at\_downsample
  - jeod::GaussJacksonStateMachine, [125](#)
- at\_end\_of\_tour
  - jeod::GaussJacksonIntegrationControls, [79](#)
  - jeod::GaussJacksonStateMachine, [126](#)
- at\_order\_change
  - jeod::GaussJacksonStateMachine, [126](#)
- at\_reinitialize
  - jeod::GaussJacksonStateMachine, [126](#)
- base\_integrate
  - jeod::GaussJacksonIntegratorBase, [89](#)
- base\_reset
  - jeod::GaussJacksonIntegratorBase, [90](#)
- BootstrapEdit
  - jeod::GaussJacksonStateMachine, [122](#)
- BootstrapStep
  - jeod::GaussJacksonStateMachine, [122](#)
- bootstrap\_edit\_redo\_needed
  - jeod::GaussJacksonStateMachine, [126](#)
- CLASS
  - Integration, [18](#)
- calculate\_epsilon
  - Lsode, [26](#)
- calculate\_integration\_coefficients
  - Lsode, [26](#)
- calculation\_task
  - jeod::LsodeFirstOrderODEIntegrator, [167](#)
- CalculationTask
  - jeod::LsodeFirstOrderODEIntegrator, [166](#)
- Cartesian
  - jeod::GeneralizedSecondOrderODETechnique, [132](#)
- cast\_to\_gj\_controls
  - jeod, [52](#)
- check\_interface\_data
  - Lsode, [27](#)
- clear\_integrator\_reference
  - jeod::RestartableStateIntegrator, [214](#)
- coeff
  - jeod::GaussJacksonIntegrationControls, [79](#)
  - jeod::GaussJacksonIntegratorBase, [101](#)
- coefficients
  - jeod::GaussJacksonRationalCoefficients, [114](#)
- CommonAbsCommonRel
  - jeod::LsodeControlDataInterface, [148](#)
- CommonAbsSpecificRel
  - jeod::LsodeControlDataInterface, [148](#)
- CompleteCycle
  - jeod::LsodeFirstOrderODEIntegrator, [166](#)
- compute\_coeffs
  - jeod::GaussJacksonCoeffs, [62](#)
- config
  - jeod::GaussJacksonIntegrationControls, [79](#)
  - jeod::GaussJacksonIntegratorConstructor, [110](#)
- configure
  - jeod::GaussJacksonCoefficientsPair, [59](#)
  - jeod::GaussJacksonCoeffs, [62](#)
  - jeod::GaussJacksonIntegratorConstructor, [106](#)
  - jeod::GaussJacksonStateMachine, [122](#)
- configure\_adams\_corrector
  - jeod::GaussJacksonRationalCoefficients, [113](#)
- construct\_predictor
  - jeod::GaussJacksonRationalCoefficients, [113](#)
- construct\_stormer\_cowell\_corrector
  - jeod::GaussJacksonRationalCoefficients, [113](#)
- control\_data
  - jeod::LsodeFirstOrderODEIntegrator, [167](#)
- convergence\_factor
  - jeod::LsodeFirstOrderODEIntegrator, [167](#)
- convergence\_jacobian\_flag
  - jeod::LsodeFirstOrderODEIntegrator, [168](#)
- convergence\_rate
  - jeod::LsodeFirstOrderODEIntegrator, [168](#)
- convert\_to\_ordinate\_form
  - jeod::GaussJacksonRationalCoefficients, [114](#)
- correct
  - jeod::GaussJacksonIntegratorBase, [90](#)
- correction\_iterations
  - jeod::GaussJacksonStateMachine, [126](#)
- corrector
  - jeod::GaussJacksonCoeffs, [63](#)
- corrector\_method
  - jeod::LsodeControlDataInterface, [149](#)
- corrector\_sum
  - jeod::GaussJacksonIntegratorBase, [101](#)
- CorrectorMethod
  - jeod::LsodeControlDataInterface, [147](#)
- create\_constructor
  - jeod::GaussJacksonIntegratorConstructor, [107](#)
  - Lsode, [27](#)
- create\_copy
  - jeod::GaussJacksonFirstOrderODEIntegrator, [68](#)
  - jeod::GaussJacksonGeneralizedDerivSecond-OrderODEIntegrator, [71](#)
  - jeod::GaussJacksonIntegrationControls, [76](#)
  - jeod::GaussJacksonIntegratorConstructor, [107](#)

- jeod::GaussJacksonSimpleSecondOrderODE-  
Integrator, 117
- Lsode, 27, 28
- create\_first\_order\_ode\_integrator
  - jeod::GaussJacksonIntegratorConstructor, 107
  - Lsode, 28
- create\_generalized\_deriv\_second\_order\_ode\_integrator
  - jeod::GaussJacksonIntegratorConstructor, 107
  - Lsode, 28
- create\_integration\_controls
  - jeod::GaussJacksonIntegratorConstructor, 108
  - Lsode, 29
- create\_integrator
  - jeod::Restartable2DSecondOrderIntegrator, 188
  - jeod::RestartableScalarFirstOrderODEIntegrator, 201
  - jeod::RestartableSO3SecondOrderODEIntegrator, 208
  - jeod::RestartableStateIntegrator, 214
  - jeod::RestartableT3SecondOrderODEIntegrator, 218
- create\_integrator\_internal
  - jeod::RestartableFirstOrderODEIntegrator, 193
  - jeod::RestartableGeneralizedDerivSecondOrderODEIntegrator, 195
  - jeod::RestartableGeneralizedStepSecondOrderODEIntegrator, 199
  - jeod::RestartableSimpleSecondOrderODEIntegrator, 206
  - jeod::RestartableStateIntegrator, 214
- create\_primer
  - jeod::GaussJacksonIntegratorBase, 90, 91
- create\_second\_order\_ode\_integrator
  - jeod::GaussJacksonIntegratorConstructor, 108
  - Lsode, 29
- current\_order
  - jeod::GaussJacksonStateMachine, 126
- CycleStartFinish
  - jeod::LsodeFirstOrderODEIntegrator, 166
- cycle\_dyndt
  - jeod::GaussJacksonIntegrationControls, 80
- cycle\_scale
  - jeod::GaussJacksonStateMachine, 127
- cycle\_simdt
  - jeod::GaussJacksonIntegrationControls, 80
- cycle\_start\_time
  - jeod::GaussJacksonStateMachine, 127
- cycle\_starttime
  - jeod::GaussJacksonIntegrationControls, 80
- cycle\_target\_time
  - jeod::LsodeFirstOrderODEIntegrator, 168
- data\_array
  - er7\_utils::TwoDArray, 229
- data\_interface
  - jeod::LsodeIntegratorConstructor, 182
- data\_prepj
  - jeod::LsodeFirstOrderODEIntegrator, 168
- data\_stode
  - jeod::LsodeFirstOrderODEIntegrator, 168
- deallocate\_arrays
  - jeod::GaussJacksonCoefficientsPair, 59
- deallocate\_internal
  - er7\_utils::TwoDArray, 226
- deallocate\_state\_contents
  - jeod::GaussJacksonIntegratorBase, 91
- default\_configuration
  - jeod::GaussJacksonConfig, 65
- delinv
  - jeod::GaussJacksonIntegratorBase, 101
- destroy\_allocated\_arrays
  - Lsode, 29
- destroy\_integrator
  - jeod::Restartable2DSecondOrderIntegrator, 189
  - jeod::RestartableScalarFirstOrderODEIntegrator, 201
  - jeod::RestartableSO3SecondOrderODEIntegrator, 209
  - jeod::RestartableStateIntegrator, 215
  - jeod::RestartableT3SecondOrderODEIntegrator, 218
- discard\_extra\_terms
  - jeod::GaussJacksonRationalCoefficients, 114
- displace\_back
  - jeod::GaussJacksonRationalCoefficients, 114
- downsample
  - er7\_utils::TwoDArray, 226
- downsample\_hist
  - jeod::GaussJacksonIntegratorBase, 91
- dsm
  - jeod::LsodeDataStode, 159
- DstodeResetStep
  - jeod::LsodeFirstOrderODEIntegrator, 166
- edit\_count
  - jeod::GaussJacksonIntegrationControls, 80
- edit\_point
  - jeod::GaussJacksonIntegratorBase, 92
- EntryPoint
  - jeod::LsodeFirstOrderODEIntegrator, 166
- epsilon
  - jeod::LsodeFirstOrderODEIntegrator, 169
- er7\_utils, 49
- er7\_utils::DoubleTwoDArray, 55
- init\_attrer7\_utils\_\_DoubleTwoDArray, 55
- InputProcessor, 55
- er7\_utils::TwoDArray
  - ~TwoDArray, 223
  - allocate, 223
  - allocate\_internal, 223
  - at, 223, 225
  - data\_array, 229
  - deallocate\_internal, 226
  - downsample, 226
  - m, 229
  - n, 229
  - operator T \*const \*, 226
  - operator T const \*const \*, 226

- operator(), [226](#), [227](#)
- operator=, [227](#)
- rotate\_down, [228](#)
- rotate\_up, [228](#)
- row\_array, [229](#)
- swap, [228](#)
- TwoDArray, [223](#)
- er7\_utils::TwoDArray< T >, [221](#)
- error\_control\_indicator
  - jeod::LsodeControlDataInterface, [149](#)
- error\_control\_vector\_copied\_over
  - jeod::LsodeControlDataInterface, [149](#)
- error\_weight
  - jeod::LsodeDataArrays, [154](#)
- ErrorControlIndicator
  - jeod::LsodeControlDataInterface, [147](#)
- exit\_bootstrap\_edit
  - jeod::GaussJacksonStateMachine, [122](#)
- exit\_bootstrap\_step
  - jeod::GaussJacksonStateMachine, [122](#)
- exit\_priming
  - jeod::GaussJacksonStateMachine, [123](#)
- fac
  - jeod::LsodeDataJacobianPrep, [157](#)
- final\_order
  - jeod::GaussJacksonConfig, [66](#)
  - jeod::GaussJacksonStateMachine, [127](#)
- first
  - jeod::GaussJacksonOneState, [111](#)
  - jeod::GaussJacksonTwoState, [130](#)
- first\_derivative\_size
  - jeod::LsodeSecondOrderODEIntegrator, [184](#)
- first\_order\_integrator
  - jeod::LsodeSecondOrderODEIntegrator, [184](#)
- first\_pass
  - jeod::LsodeFirstOrderODEIntegrator, [169](#)
- fsm\_state
  - jeod::GaussJacksonIntegrationControls, [80](#)
  - jeod::GaussJacksonIntegratorBase, [101](#)
  - jeod::GaussJacksonStateMachine, [127](#)
- FsmState
  - jeod::GaussJacksonStateMachine, [122](#)
- Functionallteration
  - jeod::LsodeControlDataInterface, [147](#)
- gauss\_elim\_factor
  - Lsode, [30](#)
- gauss\_jackson\_coefficients\_pair.cc, [231](#)
- gauss\_jackson\_coefficients\_pair.hh, [231](#)
- gauss\_jackson\_coeffs.cc, [232](#)
- gauss\_jackson\_coeffs.hh, [232](#)
- gauss\_jackson\_config.cc, [233](#)
- gauss\_jackson\_config.hh, [233](#)
- gauss\_jackson\_first\_order\_ode\_integrator.hh, [234](#)
- gauss\_jackson\_generalized\_second\_order\_ode\_integrator.cc, [234](#)
- gauss\_jackson\_generalized\_second\_order\_ode\_integrator.hh, [235](#)
- gauss\_jackson\_integration\_controls.cc, [235](#)
- gauss\_jackson\_integration\_controls.hh, [236](#)
- gauss\_jackson\_integrator\_base.hh, [237](#)
- gauss\_jackson\_integrator\_base\_first.hh, [237](#)
- gauss\_jackson\_integrator\_base\_second.hh, [238](#)
- gauss\_jackson\_integrator\_constructor.cc, [238](#)
- gauss\_jackson\_integrator\_constructor.hh, [239](#)
- gauss\_jackson\_one\_state.hh, [240](#)
- gauss\_jackson\_rational\_coeffs.cc, [240](#)
- gauss\_jackson\_rational\_coeffs.hh, [241](#)
- gauss\_jackson\_simple\_second\_order\_ode\_integrator.-hh, [241](#)
- gauss\_jackson\_state\_machine.cc, [242](#)
- gauss\_jackson\_state\_machine.hh, [242](#)
- gauss\_jackson\_two\_state.hh, [243](#)
- GaussJackson, [19](#)
- GaussJacksonCoefficientsPair
  - jeod::GaussJacksonCoefficientsPair, [57](#)
- GaussJacksonCoeffs
  - jeod::GaussJacksonCoeffs, [61](#)
- GaussJacksonFirstOrderODEIntegrator
  - jeod::GaussJacksonFirstOrderODEIntegrator, [68](#)
- GaussJacksonGeneralizedDerivSecondOrderODEIntegrator
  - jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator, [71](#)
- GaussJacksonIntegrationControls
  - jeod::GaussJacksonIntegrationControls, [75](#), [76](#)
- GaussJacksonIntegratorBase
  - jeod::GaussJacksonIntegratorBase, [86](#)
- GaussJacksonIntegratorBaseFirst
  - jeod, [52](#)
- GaussJacksonIntegratorBaseSecond
  - jeod, [52](#)
- GaussJacksonIntegratorConstructor
  - jeod::GaussJacksonIntegratorConstructor, [106](#)
- GaussJacksonOneState
  - jeod::GaussJacksonOneState, [111](#)
- GaussJacksonRationalCoefficients
  - jeod::GaussJacksonRationalCoefficients, [113](#)
- GaussJacksonSimpleSecondOrderODEIntegrator
  - jeod::GaussJacksonSimpleSecondOrderODEIntegrator, [116](#)
- GaussJacksonStateMachine
  - jeod::GaussJacksonStateMachine, [122](#)
- GaussJacksonTwoState
  - jeod::GaussJacksonTwoState, [130](#)
- generalized\_deriv\_integrator\_manager
  - jeod::RestartableSO3SecondOrderODEIntegrator, [210](#)
- generalized\_second\_order\_ode\_technique.cc, [243](#)
- generalized\_second\_order\_ode\_technique.hh, [243](#)
- generalized\_step\_integrator\_manager
  - jeod::RestartableSO3SecondOrderODEIntegrator, [210](#)
- GeneralizedSecondOrderODETechnique
  - jeod::GeneralizedSecondOrderODETechnique, [132](#)

- get\_at\_downsample
  - jeod::GaussJacksonStateMachine, 123
- get\_at\_end\_of\_tour
  - jeod::GaussJacksonStateMachine, 123
- get\_at\_order\_change
  - jeod::GaussJacksonStateMachine, 123
- get\_at\_reinitialize
  - jeod::GaussJacksonStateMachine, 123
- get\_buffer\_size
  - jeod::GaussJacksonIntegratorConstructor, 109
- get\_class\_name
  - jeod::GaussJacksonIntegratorConstructor, 109
  - jeod::LsodeIntegratorConstructor, 181
- get\_coeff
  - jeod::GaussJacksonIntegrationControls, 76
- get\_config
  - jeod::GaussJacksonIntegrationControls, 76
- get\_current\_order
  - jeod::GaussJacksonStateMachine, 123
- get\_cycle\_scale
  - jeod::GaussJacksonStateMachine, 124
- get\_cycle\_start\_time
  - jeod::GaussJacksonStateMachine, 124
- get\_fsm\_state
  - jeod::GaussJacksonStateMachine, 124
- get\_history\_length
  - jeod::GaussJacksonStateMachine, 124
- get\_max\_history\_size
  - jeod::GaussJacksonStateMachine, 124
- get\_priming\_controls
  - jeod::GaussJacksonIntegrationControls, 77
- get\_re\_entry\_point
  - jeod::LsodeFirstOrderODEIntegrator, 166
  - jeod::LsodeSecondOrderODEIntegrator, 184
- get\_state\_machine
  - jeod::GaussJacksonIntegrationControls, 77
- get\_timestamp\_time
  - jeod::JeodIntegrationTime, 144
- get\_transition\_table\_size
  - jeod::GaussJacksonIntegratorConstructor, 109
  - jeod::LsodeIntegratorConstructor, 181
- gj\_coefs
  - jeod::GaussJacksonCoefficientsPair, 60
- group\_owner
  - jeod::JeodIntegrationGroup, 141
- history
  - jeod::LsodeDataArrays, 154
- history\_length
  - jeod::GaussJacksonIntegratorBase, 102
  - jeod::GaussJacksonStateMachine, 127
- history\_size
  - jeod::GaussJacksonStateMachine, 127
- hl0
  - jeod::LsodeDataJacobianPrep, 157
- implements
  - jeod::GaussJacksonIntegratorConstructor, 109
  - jeod::LsodeIntegratorConstructor, 181
- ImplicitAdamsNonStiff
  - jeod::LsodeControlDataInterface, 148
- ImplicitBackDiffStiff
  - jeod::LsodeControlDataInterface, 148
- index
  - jeod::LsodeDataJacobianPrep, 157
- index\_max
  - jeod::LsodeDataJacobianPrep, 158
- index\_of\_max\_magnitude
  - Lsode, 30
- information
  - jeod::IntegrationMessages, 134
- InitCalc
  - jeod::LsodeFirstOrderODEIntegrator, 166
- init\_attr7\_utils\_\_DoubleTwoDArray
  - er7\_utils::DoubleTwoDArray, 55
- init\_attrjeod\_\_GaussJacksonCoefficientsPair
  - jeod::GaussJacksonCoefficientsPair, 60
- init\_attrjeod\_\_GaussJacksonCoeffs
  - jeod::GaussJacksonCoeffs, 63
- init\_attrjeod\_\_GaussJacksonConfig
  - jeod::GaussJacksonConfig, 65
- init\_attrjeod\_\_GaussJacksonIntegrationControls
  - jeod::GaussJacksonIntegrationControls, 79
- init\_attrjeod\_\_GaussJacksonIntegratorConstructor
  - jeod::GaussJacksonIntegratorConstructor, 110
- init\_attrjeod\_\_GaussJacksonOneState
  - jeod::GaussJacksonOneState, 111
- init\_attrjeod\_\_GaussJacksonRationalCoefficients
  - jeod::GaussJacksonRationalCoefficients, 114
- init\_attrjeod\_\_GaussJacksonStateMachine
  - jeod::GaussJacksonStateMachine, 125
- init\_attrjeod\_\_GaussJacksonTwoState
  - jeod::GaussJacksonTwoState, 130
- init\_attrjeod\_\_IntegrationMessages
  - jeod::IntegrationMessages, 134
- init\_attrjeod\_\_JeodIntegrationGroup
  - jeod::JeodIntegrationGroup, 141
- init\_attrjeod\_\_JeodIntegrationTime
  - jeod::JeodIntegrationTime, 145
- init\_attrjeod\_\_LsodeControlDataInterface
  - jeod::LsodeControlDataInterface, 148
- init\_attrjeod\_\_LsodeDataArrays
  - jeod::LsodeDataArrays, 154
- init\_attrjeod\_\_LsodeDataJacobianPrep
  - jeod::LsodeDataJacobianPrep, 157
- init\_attrjeod\_\_LsodeDataStode
  - jeod::LsodeDataStode, 159
- init\_attrjeod\_\_LsodeFirstOrderODEIntegrator
  - jeod::LsodeFirstOrderODEIntegrator, 167
- init\_attrjeod\_\_LsodeIntegrationControls
  - jeod::LsodeIntegrationControls, 179
- init\_attrjeod\_\_LsodeIntegratorConstructor
  - jeod::LsodeIntegratorConstructor, 182
- init\_attrjeod\_\_LsodeSecondOrderODEIntegrator
  - jeod::LsodeSecondOrderODEIntegrator, 184
- init\_attrjeod\_\_LsodeSimpleSecondOrderODEIntegrator



- jeod::LsodeSimpleSecondOrderODEIntegrator, 187
- init\_attrjeod\_\_Restartable2DSecondOrderIntegrator
  - jeod::Restartable2DSecondOrderIntegrator, 190
- init\_attrjeod\_\_TimeChangeSubscriber
  - jeod::TimeChangeSubscriber, 221
- init\_state
  - jeod::GaussJacksonIntegratorBase, 102
- initial\_order
  - jeod::GaussJacksonConfig, 66
  - jeod::GaussJacksonIntegrationControls, 80
  - jeod::GaussJacksonIntegratorBase, 102
  - jeod::GaussJacksonStateMachine, 128
- initial\_step\_size
  - jeod::LsodeControlDataInterface, 149
- initialize\_edit\_integration\_constants
  - jeod::GaussJacksonIntegratorBase, 92
- initialize\_group
  - jeod::JeodIntegrationGroup, 138
- initialize\_predictor\_integration\_constants
  - jeod::GaussJacksonIntegratorBase, 92, 93
- initialized
  - jeod::LsodeFirstOrderODEIntegrator, 169
- InputProcessor
  - er7\_utils::DoubleTwoDArray, 55
  - jeod::GaussJacksonCoefficientsPair, 60
  - jeod::GaussJacksonCoeffs, 63
  - jeod::GaussJacksonConfig, 65
  - jeod::GaussJacksonGeneralizedDerivSecond-OrderODEIntegrator, 72
  - jeod::GaussJacksonIntegrationControls, 79
  - jeod::GaussJacksonIntegratorConstructor, 110
  - jeod::GaussJacksonOneState, 111
  - jeod::GaussJacksonRationalCoefficients, 114
  - jeod::GaussJacksonSimpleSecondOrderODE-Integrator, 119
  - jeod::GaussJacksonStateMachine, 125
  - jeod::GaussJacksonTwoState, 130
  - jeod::IntegrationMessages, 134
  - jeod::JeodIntegrationGroup, 141
  - jeod::JeodIntegrationTime, 145
  - jeod::LsodeControlDataInterface, 148
  - jeod::LsodeDataArrays, 154
  - jeod::LsodeDataJacobiPrep, 157
  - jeod::LsodeDataStode, 159
  - jeod::LsodeFirstOrderODEIntegrator, 167
  - jeod::LsodeGeneralizedDerivSecondOrderODE-Integrator, 177
  - jeod::LsodeIntegrationControls, 179
  - jeod::LsodeIntegratorConstructor, 182
  - jeod::LsodeSecondOrderODEIntegrator, 184
  - jeod::LsodeSimpleSecondOrderODEIntegrator, 187
  - jeod::Restartable2DSecondOrderIntegrator, 190
  - jeod::RestartableScalarFirstOrderODEIntegrator, 203
  - jeod::RestartableSO3SecondOrderODEIntegrator, 210
- jeod::RestartableT3SecondOrderODEIntegrator, 219
- jeod::TimeChangeSubscriber, 221
- integ\_merger
  - jeod::JeodIntegrationGroup, 141
- integrable\_objects
  - jeod::JeodIntegrationGroup, 141
- integrate
  - jeod::GaussJacksonFirstOrderODEIntegrator, 69
  - jeod::GaussJacksonGeneralizedDerivSecond-OrderODEIntegrator, 72
  - jeod::GaussJacksonIntegrationControls, 77
  - jeod::GaussJacksonSimpleSecondOrderODE-Integrator, 117
  - jeod::Restartable2DSecondOrderIntegrator, 189
  - jeod::RestartableScalarFirstOrderODEIntegrator, 202
  - jeod::RestartableSO3SecondOrderODEIntegrator, 209
  - jeod::RestartableT3SecondOrderODEIntegrator, 218
  - Lsode, 30, 31
- integrate\_bodies
  - jeod::JeodIntegrationGroup, 138
- integrate\_container
  - jeod::JeodIntegrationGroup, 139
- integrate\_edit
  - jeod::GaussJacksonIntegrationControls, 78
- integrate\_gj
  - jeod::GaussJacksonIntegrationControls, 78
  - jeod::GaussJacksonIntegratorBase, 93
- integrate\_primer
  - jeod::GaussJacksonIntegratorBase, 93, 94
- Integration, 17
  - CLASS, 18
  - MAKE\_MESSAGE\_CODE, 18
  - PATH, 18
- integration\_messages.cc, 244
- integration\_messages.hh, 244
- integration\_method
  - jeod::LsodeControlDataInterface, 150
- IntegrationMessages
  - jeod::IntegrationMessages, 134
- IntegrationMethod
  - jeod::LsodeControlDataInterface, 148
- integrator
  - jeod::Restartable2DSecondOrderIntegrator, 190
  - jeod::RestartableScalarFirstOrderODEIntegrator, 203
  - jeod::RestartableSO3SecondOrderODEIntegrator, 210
  - jeod::RestartableT3SecondOrderODEIntegrator, 219
- integrator\_compute\_new\_order
  - Lsode, 32
- integrator\_compute\_new\_order\_check\_step\_error
  - Lsode, 32
- integrator\_compute\_new\_order\_prep

- Lsode, [32](#)
- integrator\_core
  - Lsode, [33](#)
- integrator\_corrector\_converged
  - Lsode, [34](#)
- integrator\_corrector\_failed\_part1
  - Lsode, [34](#)
- integrator\_corrector\_failed\_part2
  - Lsode, [34](#)
- integrator\_corrector\_iteration
  - Lsode, [35](#)
- integrator\_error\_test\_failed
  - Lsode, [35](#)
- integrator\_fail\_reset\_order\_1\_part1
  - Lsode, [35](#)
- integrator\_fail\_reset\_order\_1\_part2
  - Lsode, [36](#)
- integrator\_handle
  - jeod::RestartableStateIntegrator, [216](#)
- integrator\_manager
  - jeod::Restartable2DSecondOrderIntegrator, [190](#)
  - jeod::RestartableScalarFirstOrderODEIntegrator, [203](#)
  - jeod::RestartableT3SecondOrderODEIntegrator, [219](#)
- integrator\_predict
  - Lsode, [36](#)
- integrator\_reset\_iteration\_loop\_part1
  - Lsode, [36](#)
- integrator\_reset\_iteration\_loop\_part2
  - Lsode, [37](#)
- integrator\_reset\_method\_coeffs
  - Lsode, [37](#)
- integrator\_reset\_yh
  - Lsode, [37](#)
- integrator\_set\_new\_order
  - Lsode, [37](#)
- integrator\_terminate
  - Lsode, [38](#)
- integrator\_test\_stepsize\_change
  - Lsode, [38](#)
- integrator\_wrapup
  - Lsode, [38](#)
- internal\_error
  - jeod::IntegrationMessages, [135](#)
- internal\_state
  - jeod::LsodeFirstOrderODEIntegrator, [169](#)
- interpolate\_y
  - Lsode, [38](#)
- invalid\_item
  - jeod::IntegrationMessages, [135](#)
- invalid\_request
  - jeod::IntegrationMessages, [135](#)
- iredo
  - jeod::LsodeDataStode, [159](#)
- iret
  - jeod::LsodeDataStode, [159](#)
- is\_corrector\_method\_functional\_iteration
  - jeod::LsodeControlDataInterface, [148](#)
- is\_provided\_by
  - jeod::GeneralizedSecondOrderODETechnique, [132](#)
- iter\_delta
  - jeod::LsodeFirstOrderODEIntegrator, [169](#)
- IterationLoop
  - jeod::LsodeFirstOrderODEIntegrator, [166](#)
- iteration\_count
  - jeod::LsodeFirstOrderODEIntegrator, [169](#)
- iteration\_matrix\_singular
  - jeod::LsodeFirstOrderODEIntegrator, [170](#)
- JacobiNewtonInternalJac
  - jeod::LsodeControlDataInterface, [147](#)
- JacobianPrep
  - jeod::LsodeFirstOrderODEIntegrator, [166](#)
- jacobian\_current
  - jeod::LsodeFirstOrderODEIntegrator, [170](#)
- jacobian\_prep\_init
  - Lsode, [39](#)
- jacobian\_prep\_loop
  - Lsode, [40](#)
- jacobian\_prep\_wrap\_up
  - Lsode, [40](#)
- jeod, [49](#)
  - cast\_to\_gj\_controls, [52](#)
  - GaussJacksonIntegratorBaseFirst, [52](#)
  - GaussJacksonIntegratorBaseSecond, [52](#)
  - operator<<, [52](#)
  - set\_default\_config\_values, [52](#)
  - validate\_config, [53](#)
- jeod::GaussJacksonStateMachine
  - BootstrapEdit, [122](#)
  - BootstrapStep, [122](#)
  - Operational, [122](#)
  - Priming, [122](#)
  - Reset, [122](#)
- jeod::GeneralizedSecondOrderODETechnique
  - Cartesian, [132](#)
  - LieGroup, [132](#)
  - Unspecified, [132](#)
- jeod::LsodeControlDataInterface
  - CommonAbsCommonRel, [148](#)
  - CommonAbsSpecificRel, [148](#)
  - FunctionalIteration, [147](#)
  - ImplicitAdamsNonStiff, [148](#)
  - ImplicitBackDiffStiff, [148](#)
  - JacobiNewtonInternalJac, [147](#)
  - NewtonIterInternalBandJac, [147](#)
  - NewtonIterInternalJac, [147](#)
  - NewtonIterUserBandJac, [147](#)
  - NewtonIterUserJac, [147](#)
  - SpecificAbsCommonRel, [148](#)
  - SpecificAbsSpecificRel, [148](#)
- jeod::LsodeFirstOrderODEIntegrator
  - CompleteCycle, [166](#)
  - CycleStartFinish, [166](#)
  - DstodeResetStep, [166](#)



- InitCalc, 166
- IterationLoop, 166
- JacobianPrep, 166
- Normal, 166
- NormalWithSingularity, 166
- OneStep, 166
- OneStepWithSingularity, 166
- ResetIterLoop, 166
- jeod::GaussJacksonCoefficientsPair, 56
  - ~GaussJacksonCoefficientsPair, 57
  - allocate\_arrays, 57
  - apply, 57
  - configure, 59
  - deallocate\_arrays, 59
  - GaussJacksonCoefficientsPair, 57
  - gj\_coefs, 60
  - init\_attrjeod\_\_GaussJacksonCoefficientsPair, 60
  - InputProcessor, 60
  - operator=, 59
  - print, 59
  - sa\_coefs, 60
  - swap, 59
- jeod::GaussJacksonCoeffs, 60
  - ~GaussJacksonCoeffs, 62
  - compute\_coefs, 62
  - configure, 62
  - corrector, 63
  - GaussJacksonCoeffs, 61
  - init\_attrjeod\_\_GaussJacksonCoeffs, 63
  - InputProcessor, 63
  - max\_order, 63
  - operator<<, 63
  - operator=, 62
  - order, 63
  - predictor, 64
  - swap, 62
- jeod::GaussJacksonConfig, 64
  - absolute\_tolerance, 66
  - default\_configuration, 65
  - final\_order, 66
  - init\_attrjeod\_\_GaussJacksonConfig, 65
  - initial\_order, 66
  - InputProcessor, 65
  - max\_correction\_iterations, 66
  - ndoubling\_steps, 66
  - priming\_technique, 66
  - relative\_tolerance, 67
  - standard\_configuration, 65
  - validate\_configuration, 65
- jeod::GaussJacksonFirstOrderODEIntegrator, 67
  - ~GaussJacksonFirstOrderODEIntegrator, 68
  - create\_copy, 68
  - GaussJacksonFirstOrderODEIntegrator, 68
  - integrate, 69
  - operator=, 69
  - reset\_integrator, 69
  - swap, 69
- jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator, 69
  - create\_copy, 71
  - InputProcessor, 72
  - integrate, 72
  - operator=, 72
  - pos\_integrator, 72
  - posdot, 73
  - posdotdot, 73
  - reset\_integrator, 72
  - swap, 72
  - vel\_integrator, 73
- jeod::GaussJacksonIntegrationControls, 73
  - ~GaussJacksonIntegrationControls, 76
  - at\_end\_of\_tour, 79
  - coeff, 79
  - config, 79
  - create\_copy, 76
  - cycle\_dyndt, 80
  - cycle\_simdt, 80
  - cycle\_starttime, 80
  - edit\_count, 80
  - fsm\_state, 80
  - GaussJacksonIntegrationControls, 75, 76
  - get\_coeff, 76
  - get\_config, 76
  - get\_priming\_controls, 77
  - get\_state\_machine, 77
  - init\_attrjeod\_\_GaussJacksonIntegrationControls, 79
  - initial\_order, 80
  - InputProcessor, 79
  - integrate, 77
  - integrate\_edit, 78
  - integrate\_gj, 78
  - max\_correction\_iterations, 81
  - operator=, 78
  - order, 81
  - priming\_controls, 81
  - reset\_integrator, 78
  - reset\_time, 81
  - start\_cycle, 78
  - state\_machine, 81
  - swap, 79
- jeod::GaussJacksonIntegratorBase
  - ~GaussJacksonIntegratorBase, 86
  - absolute\_tolerance, 100
  - acc\_hist, 101
  - advance\_edit\_integration\_constants, 87
  - advance\_predictor\_integration\_constants, 87
  - allocate\_state\_contents, 89
  - base\_integrate, 89
  - base\_reset, 90
  - coeff, 101
  - correct, 90
  - corrector\_sum, 101
  - create\_primer, 90, 91
  - deallocate\_state\_contents, 91

- delinv, 101
- downsample\_hist, 91
- edit\_point, 92
- fsm\_state, 101
- GaussJacksonIntegratorBase, 86
- history\_length, 102
- init\_state, 102
- initial\_order, 102
- initialize\_edit\_integration\_constants, 92
- initialize\_predictor\_integration\_constants, 92, 93
- integrate\_gj, 93
- integrate\_primer, 93, 94
- max\_history\_size, 102
- mid\_correct, 94
- operator=, 95
- order, 102
- pos\_hist, 103
- position\_corrector, 103
- predict, 95
- primer, 103
- relative\_tolerance, 103
- replicate\_primer, 95
- replicate\_state, 97
- rotate\_acc\_hist, 97
- save\_comparison\_data, 97, 98
- save\_epoch\_data, 98
- size, 103
- start\_cycle, 98
- state\_machine, 104
- swap, 99
- swap\_state, 99, 100
- test\_for\_convergence, 100
- velocity\_corrector, 104
- jeod::GaussJacksonIntegratorBase< State, Primer >, 82
- jeod::GaussJacksonIntegratorConstructor, 104
  - ~GaussJacksonIntegratorConstructor, 106
  - config, 110
  - configure, 106
  - create\_constructor, 107
  - create\_copy, 107
  - create\_first\_order\_ode\_integrator, 107
  - create\_generalized\_deriv\_second\_order\_ode\_integrator, 107
  - create\_integration\_controls, 108
  - create\_second\_order\_ode\_integrator, 108
  - GaussJacksonIntegratorConstructor, 106
  - get\_buffer\_size, 109
  - get\_class\_name, 109
  - get\_transition\_table\_size, 109
  - implements, 109
  - init\_attrjeod\_\_GaussJacksonIntegratorConstructor, 110
  - InputProcessor, 110
  - operator=, 109
  - priming\_constructor, 110
  - provides, 109
  - swap, 110
- jeod::GaussJacksonOneState, 110
  - first, 111
  - GaussJacksonOneState, 111
  - init\_attrjeod\_\_GaussJacksonOneState, 111
  - InputProcessor, 111
- jeod::GaussJacksonRationalCoefficients, 112
  - coefficients, 114
  - configure\_adams\_corrector, 113
  - construct\_predictor, 113
  - construct\_stormer\_cowell\_corrector, 113
  - convert\_to\_ordinate\_form, 114
  - discard\_extra\_terms, 114
  - displace\_back, 114
  - GaussJacksonRationalCoefficients, 113
  - init\_attrjeod\_\_GaussJacksonRationalCoefficients, 114
  - InputProcessor, 114
- jeod::GaussJacksonSimpleSecondOrderODEIntegrator, 115
  - create\_copy, 117
  - GaussJacksonSimpleSecondOrderODEIntegrator, 116
  - InputProcessor, 119
  - integrate, 117
  - operator=, 117
  - reset\_integrator, 117
  - swap, 117
- jeod::GaussJacksonStateMachine, 119
  - at\_downsample, 125
  - at\_end\_of\_tour, 126
  - at\_order\_change, 126
  - at\_reinitialize, 126
  - bootstrap\_edit\_redo\_needed, 126
  - configure, 122
  - correction\_iterations, 126
  - current\_order, 126
  - cycle\_scale, 127
  - cycle\_start\_time, 127
  - exit\_bootstrap\_edit, 122
  - exit\_bootstrap\_step, 122
  - exit\_priming, 123
  - final\_order, 127
  - fsm\_state, 127
  - FsmState, 122
  - GaussJacksonStateMachine, 122
  - get\_at\_downsample, 123
  - get\_at\_end\_of\_tour, 123
  - get\_at\_order\_change, 123
  - get\_at\_reinitialize, 123
  - get\_current\_order, 123
  - get\_cycle\_scale, 124
  - get\_cycle\_start\_time, 124
  - get\_fsm\_state, 124
  - get\_history\_length, 124
  - get\_max\_history\_size, 124
  - history\_length, 127
  - history\_size, 127
  - init\_attrjeod\_\_GaussJacksonStateMachine, 125

- initial\_order, 128
- InputProcessor, 125
- max\_correction\_iterations, 128
- max\_history\_size, 128
- ndoubling\_steps, 128
- perform\_step, 124
- reset, 124
- scale\_factor, 128
- set\_bootstrap\_edit\_redo\_needed, 125
- state\_name, 125
- step\_increment, 128
- steps\_since\_reset, 128
- tour\_count, 129
- transition\_state, 125
- jeod::GaussJacksonTwoState, 129
  - first, 130
  - GaussJacksonTwoState, 130
  - init\_attrjeod\_\_GaussJacksonTwoState, 130
  - InputProcessor, 130
  - second, 130
- jeod::GeneralizedSecondOrderODETechnique, 131
  - ~GeneralizedSecondOrderODETechnique, 132
  - GeneralizedSecondOrderODETechnique, 132
  - is\_provided\_by, 132
  - operator=, 132
  - TechniqueType, 131
  - validate\_technique, 132
- jeod::IntegrationMessages, 133
  - information, 134
  - init\_attrjeod\_\_IntegrationMessages, 134
  - InputProcessor, 134
  - IntegrationMessages, 134
  - internal\_error, 135
  - invalid\_item, 135
  - invalid\_request, 135
  - operator=, 134
  - unsupported\_option, 135
- jeod::JeodIntegrationGroup, 135
  - ~JeodIntegrationGroup, 138
  - add\_integrable\_object, 138
  - group\_owner, 141
  - init\_attrjeod\_\_JeodIntegrationGroup, 141
  - initialize\_group, 138
  - InputProcessor, 141
  - integ\_merger, 141
  - integrable\_objects, 141
  - integrate\_bodies, 138
  - integrate\_container, 139
  - jeod\_integ\_interface, 141
  - jeod\_time\_manager, 141
  - JeodIntegrationGroup, 137, 138
  - merge\_integrator\_result, 139
  - need\_first\_step\_derivatives, 139
  - operator=, 139
  - register\_classes, 140
  - remove\_integrable\_object, 140
  - reset\_body\_integrators, 140
  - reset\_container, 140
  - respond\_to\_time\_change, 140
  - update\_from\_owner, 141
- jeod::JeodIntegrationGroupOwner, 142
  - ~JeodIntegrationGroupOwner, 142
  - update\_integration\_group, 142
- jeod::JeodIntegrationTime, 143
  - ~JeodIntegrationTime, 144
  - add\_time\_change\_subscriber, 144
  - get\_timestamp\_time, 144
  - init\_attrjeod\_\_JeodIntegrationTime, 145
  - InputProcessor, 145
  - JeodIntegrationTime, 144
  - notify\_time\_change\_subscribers, 144
  - operator=, 145
  - remove\_time\_change\_subscriber, 145
  - time\_change\_subscribers, 145
- jeod::LsodeControlDataInterface, 145
  - ~LsodeControlDataInterface, 148
  - abs\_tolerance\_error\_control, 149
  - abs\_tolerance\_error\_control\_vec, 149
  - corrector\_method, 149
  - CorrectorMethod, 147
  - error\_control\_indicator, 149
  - error\_control\_vector\_copied\_over, 149
  - ErrorControlIndicator, 147
  - init\_attrjeod\_\_LsodeControlDataInterface, 148
  - initial\_step\_size, 149
  - InputProcessor, 148
  - integration\_method, 150
  - IntegrationMethod, 148
  - is\_corrector\_method\_functional\_iteration, 148
  - max\_correction\_iters, 150
  - max\_num\_conv\_failure, 150
  - max\_num\_small\_step\_warnings, 150
  - max\_num\_steps, 150
  - max\_num\_steps\_jacobian, 150
  - max\_order, 151
  - max\_step\_size, 151
  - min\_step\_size, 151
  - num\_odes, 151
  - num\_odes\_at\_alloc, 152
  - operator=, 148
  - rel\_tolerance\_error\_control, 152
  - rel\_tolerance\_error\_control\_vec, 152
- jeod::LsodeDataArrays, 152
  - ~LsodeDataArrays, 153
  - accum\_correction, 154
  - allocated, 154
  - error\_weight, 154
  - history, 154
  - init\_attrjeod\_\_LsodeDataArrays, 154
  - InputProcessor, 154
  - lin\_alg, 155
  - lin\_alg\_1, 155
  - lin\_alg\_2, 155
  - lin\_alg\_index1, 155
  - LsodeDataArrays, 153
  - num\_odes, 155

- operator=, 154
- pivots, 156
- save, 156
- jeod::LsodeDataJacobianPrep, 156
  - ~LsodeDataJacobianPrep, 157
  - fac, 157
  - hl0, 157
  - index, 157
  - index\_max, 158
  - init\_attrjeod\_\_LsodeDataJacobianPrep, 157
  - InputProcessor, 157
  - LsodeDataJacobianPrep, 157
  - operator=, 157
  - r0, 158
  - yj, 158
- jeod::LsodeDataStode, 158
  - ~LsodeDataStode, 159
  - dsm, 159
  - init\_attrjeod\_\_LsodeDataStode, 159
  - InputProcessor, 159
  - iredo, 159
  - iret, 159
  - LsodeDataStode, 159
  - ncf, 160
  - new\_method\_order, 160
  - operator=, 159
  - step\_ratio, 160
  - step\_ratio\_order\_inc, 160
  - told, 160
- jeod::LsodeFirstOrderODEIntegrator, 160
  - arrays, 167
  - calculation\_task, 167
  - CalculationTask, 166
  - control\_data, 167
  - convergence\_factor, 167
  - convergence\_jacobian\_flag, 168
  - convergence\_rate, 168
  - cycle\_target\_time, 168
  - data\_prepj, 168
  - data\_stode, 168
  - EntryPoint, 166
  - epsilon, 169
  - first\_pass, 169
  - get\_re\_entry\_point, 166
  - initialized, 169
  - InputProcessor, 167
  - internal\_state, 169
  - iter\_delta, 169
  - iteration\_count, 169
  - iteration\_matrix\_singular, 170
  - jacobian\_current, 170
  - LsodeFirstOrderODEIntegrator, 166
  - max\_history\_size, 170
  - max\_order\_internal, 170
  - max\_rel\_change\_without\_jacobian, 170
  - max\_step\_increase\_ratio, 170
  - max\_step\_size\_inv, 171
  - method\_coeff\_first, 171
  - method\_coeffs\_complete, 171
  - method\_coeffs\_current, 171
  - method\_order\_current, 171
  - modified\_iteration\_matrix\_singular, 171
  - num\_equations, 172
  - num\_jacobian\_evals, 172
  - num\_nordsiek\_cols, 172
  - num\_predictor\_elements, 172
  - num\_small\_step\_warnings, 172
  - num\_steps\_taken, 172
  - operator=, 166
  - order\_select\_para, 173
  - prev\_good\_step\_size, 173
  - prev\_integration\_method, 173
  - prev\_iter\_delta, 173
  - prev\_method\_order, 173
  - prev\_step\_size, 173
  - prior\_num\_steps, 174
  - re\_entry\_point, 174
  - rel\_change\_since\_jacobian, 174
  - sqrt\_epsilon, 174
  - stage\_target\_time, 174
  - step\_at\_last\_jacobian\_update, 175
  - step\_error, 175
  - step\_size, 175
  - test\_coeffs\_complete, 175
  - update\_jacobian, 175
  - y, 175
  - y\_dot, 176
- jeod::LsodeGeneralizedDerivSecondOrderODEIntegrator, 176
  - InputProcessor, 177
  - operator=, 177
  - posdot, 178
- jeod::LsodeIntegrationControls, 178
  - ~LsodeIntegrationControls, 179
  - init\_attrjeod\_\_LsodeIntegrationControls, 179
  - InputProcessor, 179
  - LsodeIntegrationControls, 179
  - operator=, 179
- jeod::LsodeIntegratorConstructor, 179
  - data\_interface, 182
  - get\_class\_name, 181
  - get\_transition\_table\_size, 181
  - implements, 181
  - init\_attrjeod\_\_LsodeIntegratorConstructor, 182
  - InputProcessor, 182
  - LsodeIntegratorConstructor, 181
  - operator=, 181
  - provides, 181
- jeod::LsodeSecondOrderODEIntegrator, 182
  - arrays\_allocated, 184
  - first\_derivative\_size, 184
  - first\_order\_integrator, 184
  - get\_re\_entry\_point, 184
  - InputProcessor, 184
  - LsodeSecondOrderODEIntegrator, 183
  - operator=, 184

- reset\_integrator, 184
- y, 184
- y\_dot, 185
- zeroth\_derivative\_size, 185
- jeod::LsodeSimpleSecondOrderODEIntegrator, 185
  - ~LsodeSimpleSecondOrderODEIntegrator, 186
  - InputProcessor, 187
  - LsodeSimpleSecondOrderODEIntegrator, 186
  - operator=, 186
- jeod::Restartable2DSecondOrderIntegrator, 187
  - ~Restartable2DSecondOrderIntegrator, 188
  - create\_integrator, 188
  - destroy\_integrator, 189
  - init\_attrjeod\_\_Restartable2DSecondOrderIntegrator, 190
  - InputProcessor, 190
  - integrate, 189
  - integrator, 190
  - integrator\_manager, 190
  - operator=, 189
  - reset\_integrator, 189
  - Restartable2DSecondOrderIntegrator, 188
  - simple\_restore, 189
- jeod::RestartableFirstOrderODEIntegrator
  - ~RestartableFirstOrderODEIntegrator, 193
  - create\_integrator\_internal, 193
  - operator=, 193
  - RestartableFirstOrderODEIntegrator, 191, 193
- jeod::RestartableFirstOrderODEIntegrator< size >, 190
- jeod::RestartableGeneralizedDerivSecondOrderODE-Integrator
  - create\_integrator\_internal, 195
  - operator=, 196
  - simple\_restore\_internal, 196
- jeod::RestartableGeneralizedDerivSecondOrderODE-Integrator< position\_size, velocity\_size, DerivFunctions >, 193
- jeod::RestartableGeneralizedStepSecondOrderODE-Integrator
  - create\_integrator\_internal, 199
  - operator=, 199
  - RestartableGeneralizedStepSecondOrderODE-Integrator, 197, 199
  - simple\_restore\_internal, 199
- jeod::RestartableGeneralizedStepSecondOrderODE-Integrator< position\_size, velocity\_size, Step-Functions >, 196
- jeod::RestartableSO3SecondOrderODEIntegrator, 207
  - create\_integrator, 208
  - destroy\_integrator, 209
  - generalized\_deriv\_integrator\_manager, 210
  - generalized\_step\_integrator\_manager, 210
  - InputProcessor, 210
  - integrate, 209
  - integrator, 210
  - operator=, 209
  - reset\_integrator, 209
  - RestartableSO3SecondOrderODEIntegrator, 208
  - simple\_restore, 210
  - technique, 210
- jeod::RestartableScalarFirstOrderODEIntegrator, 200
  - ~RestartableScalarFirstOrderODEIntegrator, 201
  - create\_integrator, 201
  - destroy\_integrator, 201
  - InputProcessor, 203
  - integrate, 202
  - integrator, 203
  - integrator\_manager, 203
  - operator=, 202
  - reset\_integrator, 202
  - RestartableScalarFirstOrderODEIntegrator, 201
  - simple\_restore, 202
- jeod::RestartableSecondOrderODEIntegrator, 203
  - ~RestartableSecondOrderODEIntegrator, 204
  - operator=, 204
  - RestartableSecondOrderODEIntegrator, 204
- jeod::RestartableSimpleSecondOrderODEIntegrator
  - ~RestartableSimpleSecondOrderODEIntegrator, 206
  - create\_integrator\_internal, 206
  - operator=, 206
  - RestartableSimpleSecondOrderODEIntegrator, 206
- jeod::RestartableSimpleSecondOrderODEIntegrator< size >, 205
- jeod::RestartableStateIntegrator
  - ~RestartableStateIntegrator, 213
  - clear\_integrator\_reference, 214
  - create\_integrator, 214
  - create\_integrator\_internal, 214
  - destroy\_integrator, 215
  - integrator\_handle, 216
  - operator=, 215
  - RestartableStateIntegrator, 213, 214
  - set\_integrator\_reference, 215
  - simple\_restore, 215
  - simple\_restore\_internal, 216
- jeod::RestartableStateIntegrator< IntegratorType >, 211
- jeod::RestartableT3SecondOrderODEIntegrator, 216
  - ~RestartableT3SecondOrderODEIntegrator, 218
  - create\_integrator, 218
  - destroy\_integrator, 218
  - InputProcessor, 219
  - integrate, 218
  - integrator, 219
  - integrator\_manager, 219
  - operator=, 219
  - reset\_integrator, 219
  - RestartableT3SecondOrderODEIntegrator, 218
  - simple\_restore, 219
- jeod::TimeChangeSubscriber, 220
  - ~TimeChangeSubscriber, 220
  - init\_attrjeod\_\_TimeChangeSubscriber, 221
  - InputProcessor, 221
  - respond\_to\_time\_change, 221

- jeod\_integ\_interface
  - jeod::JeodIntegrationGroup, 141
- jeod\_integration\_group.cc, 245
- jeod\_integration\_group.hh, 245
- jeod\_integration\_time.cc, 246
- jeod\_integration\_time.hh, 247
- jeod\_time\_manager
  - jeod::JeodIntegrationGroup, 141
- JeodIntegrationGroup
  - jeod::JeodIntegrationGroup, 137, 138
- JeodIntegrationTime
  - jeod::JeodIntegrationTime, 144
- LieGroup
  - jeod::GeneralizedSecondOrderODETechnique, 132
- lin\_alg
  - jeod::LsodeDataArrays, 155
- lin\_alg\_1
  - jeod::LsodeDataArrays, 155
- lin\_alg\_2
  - jeod::LsodeDataArrays, 155
- lin\_alg\_index1
  - jeod::LsodeDataArrays, 155
- linear\_chord\_iteration
  - Lsode, 40
- linear\_solver
  - Lsode, 41
- load\_derivatives
  - Lsode, 41
- load\_ew\_values
  - Lsode, 41
- Lsode, 21
  - ~LsodeFirstOrderODEIntegrator, 47
  - ~LsodeGeneralizedDerivSecondOrderODEIntegrator, 48
  - ~LsodeSecondOrderODEIntegrator, 48
  - allocate\_arrays, 25, 26
  - calculate\_epsilon, 26
  - calculate\_integration\_coefficients, 26
  - check\_interface\_data, 27
  - create\_constructor, 27
  - create\_copy, 27, 28
  - create\_first\_order\_ode\_integrator, 28
  - create\_generalized\_deriv\_second\_order\_ode\_integrator, 28
  - create\_integration\_controls, 29
  - create\_second\_order\_ode\_integrator, 29
  - destroy\_allocated\_arrays, 29
  - gauss\_elim\_factor, 30
  - index\_of\_max\_magnitude, 30
  - integrate, 30, 31
  - integrator\_compute\_new\_order, 32
  - integrator\_compute\_new\_order\_check\_step\_error, 32
  - integrator\_compute\_new\_order\_prep, 32
  - integrator\_core, 33
  - integrator\_corrector\_converged, 34
  - integrator\_corrector\_failed\_part1, 34
  - integrator\_corrector\_failed\_part2, 34
  - integrator\_corrector\_iteration, 35
  - integrator\_error\_test\_failed, 35
  - integrator\_fail\_reset\_order\_1\_part1, 35
  - integrator\_fail\_reset\_order\_1\_part2, 36
  - integrator\_predict, 36
  - integrator\_reset\_iteration\_loop\_part1, 36
  - integrator\_reset\_iteration\_loop\_part2, 37
  - integrator\_reset\_method\_coeffs, 37
  - integrator\_reset\_yh, 37
  - integrator\_set\_new\_order, 37
  - integrator\_terminate, 38
  - integrator\_test\_stepsize\_change, 38
  - integrator\_wrapup, 38
  - interpolate\_y, 38
  - jacobian\_prep\_init, 39
  - jacobian\_prep\_loop, 40
  - jacobian\_prep\_wrap\_up, 40
  - linear\_chord\_iteration, 40
  - linear\_solver, 41
  - load\_derivatives, 41
  - load\_ew\_values, 41
  - LsodeControlDataInterface, 41, 42
  - LsodeDataArrays, 42
  - LsodeDataJacobianPrep, 42
  - LsodeDataStode, 42
  - LsodeFirstOrderODEIntegrator, 42
  - LsodeGeneralizedDerivSecondOrderODEIntegrator, 42, 43
  - LsodeIntegrationControls, 43
  - LsodeIntegratorConstructor, 43
  - LsodeSecondOrderODEIntegrator, 43, 44
  - LsodeSimpleSecondOrderODEIntegrator, 44
  - magnitude\_of\_weighted\_array, 44, 45
  - manager\_check\_stop\_conditions, 45
  - manager\_initialize\_calculation\_part1, 45
  - manager\_initialize\_calculation\_part2, 45
  - manager\_integration\_loop\_part1, 46
  - manager\_integration\_loop\_part2, 46
  - manager\_integration\_loop\_part3, 46
  - manager\_set\_calculation\_phase\_eq\_2\_reload, 46
  - process\_entry\_point\_cycle\_start, 46
  - reset\_integrator, 47
  - set\_abs\_tol, 47
  - set\_rel\_tol, 47
  - update\_control\_data, 47
  - lsode\_control\_data\_interface.cc, 247
  - lsode\_control\_data\_interface.hh, 247
  - lsode\_data\_classes.cc, 248
  - lsode\_data\_classes.hh, 248
  - lsode\_first\_order\_ode\_integrator.hh, 249
  - lsode\_first\_order\_ode\_integrator\_\_integrator.cc, 249
  - lsode\_first\_order\_ode\_integrator\_\_manager.cc, 250
  - lsode\_first\_order\_ode\_integrator\_\_support.cc, 250
  - lsode\_first\_order\_ode\_integrator\_\_utility.cc, 250
  - lsode\_generalized\_second\_order\_ode\_integrator.cc, 251



- lsode\_generalized\_second\_order\_ode\_integrator.hh, 251
- lsode\_integration\_controls.cc, 252
- lsode\_integration\_controls.hh, 252
- lsode\_integrator\_constructor.cc, 253
- lsode\_integrator\_constructor.hh, 253
- lsode\_second\_order\_ode\_integrator.cc, 254
- lsode\_second\_order\_ode\_integrator.hh, 254
- lsode\_simple\_second\_order\_ode\_integrator.cc, 254
- lsode\_simple\_second\_order\_ode\_integrator.hh, 255
- LsodeControlDataInterface
  - Lsode, 41, 42
- LsodeDataArrays
  - jeod::LsodeDataArrays, 153
  - Lsode, 42
- LsodeDataJacobianPrep
  - jeod::LsodeDataJacobianPrep, 157
  - Lsode, 42
- LsodeDataStode
  - jeod::LsodeDataStode, 159
  - Lsode, 42
- LsodeFirstOrderODEIntegrator
  - jeod::LsodeFirstOrderODEIntegrator, 166
  - Lsode, 42
- LsodeGeneralizedDerivSecondOrderODEIntegrator
  - Lsode, 42, 43
- LsodeIntegrationControls
  - jeod::LsodeIntegrationControls, 179
  - Lsode, 43
- LsodeIntegratorConstructor
  - jeod::LsodeIntegratorConstructor, 181
  - Lsode, 43
- LsodeSecondOrderODEIntegrator
  - jeod::LsodeSecondOrderODEIntegrator, 183
  - Lsode, 43, 44
- LsodeSimpleSecondOrderODEIntegrator
  - jeod::LsodeSimpleSecondOrderODEIntegrator, 186
  - Lsode, 44
- m
  - er7\_utils::TwoDArray, 229
- MAKE\_MESSAGE\_CODE
  - Integration, 18
- magnitude\_of\_weighted\_array
  - Lsode, 44, 45
- manager\_check\_stop\_conditions
  - Lsode, 45
- manager\_initialize\_calculation\_part1
  - Lsode, 45
- manager\_initialize\_calculation\_part2
  - Lsode, 45
- manager\_integration\_loop\_part1
  - Lsode, 46
- manager\_integration\_loop\_part2
  - Lsode, 46
- manager\_integration\_loop\_part3
  - Lsode, 46
- manager\_set\_calculation\_phase\_eq\_2\_reload
  - Lsode, 46
- max\_correction\_iterations
  - jeod::GaussJacksonConfig, 66
  - jeod::GaussJacksonIntegrationControls, 81
  - jeod::GaussJacksonStateMachine, 128
- max\_correction\_iters
  - jeod::LsodeControlDataInterface, 150
- max\_history\_size
  - jeod::GaussJacksonIntegratorBase, 102
  - jeod::GaussJacksonStateMachine, 128
  - jeod::LsodeFirstOrderODEIntegrator, 170
- max\_num\_conv\_failure
  - jeod::LsodeControlDataInterface, 150
- max\_num\_small\_step\_warnings
  - jeod::LsodeControlDataInterface, 150
- max\_num\_steps
  - jeod::LsodeControlDataInterface, 150
- max\_num\_steps\_jacobian
  - jeod::LsodeControlDataInterface, 150
- max\_order
  - jeod::GaussJacksonCoeffs, 63
  - jeod::LsodeControlDataInterface, 151
- max\_order\_internal
  - jeod::LsodeFirstOrderODEIntegrator, 170
- max\_rel\_change\_without\_jacobian
  - jeod::LsodeFirstOrderODEIntegrator, 170
- max\_step\_increase\_ratio
  - jeod::LsodeFirstOrderODEIntegrator, 170
- max\_step\_size
  - jeod::LsodeControlDataInterface, 151
- max\_step\_size\_inv
  - jeod::LsodeFirstOrderODEIntegrator, 171
- merge\_integrator\_result
  - jeod::JeodIntegrationGroup, 139
- method\_coeff\_first
  - jeod::LsodeFirstOrderODEIntegrator, 171
- method\_coeffs\_complete
  - jeod::LsodeFirstOrderODEIntegrator, 171
- method\_coeffs\_current
  - jeod::LsodeFirstOrderODEIntegrator, 171
- method\_order\_current
  - jeod::LsodeFirstOrderODEIntegrator, 171
- mid\_correct
  - jeod::GaussJacksonIntegratorBase, 94
- min\_step\_size
  - jeod::LsodeControlDataInterface, 151
- Models, 15
- modified\_iteration\_matrix\_singular
  - jeod::LsodeFirstOrderODEIntegrator, 171
- n
  - er7\_utils::TwoDArray, 229
- ncf
  - jeod::LsodeDataStode, 160
- ndoubling\_steps
  - jeod::GaussJacksonConfig, 66
  - jeod::GaussJacksonStateMachine, 128
- need\_first\_step\_derivatives
  - jeod::JeodIntegrationGroup, 139

- new\_method\_order
  - jeod::LsodeDataStode, 160
- NewtonIterInternalBandJac
  - jeod::LsodeControlDataInterface, 147
- NewtonIterInternalJac
  - jeod::LsodeControlDataInterface, 147
- NewtonIterUserBandJac
  - jeod::LsodeControlDataInterface, 147
- NewtonIterUserJac
  - jeod::LsodeControlDataInterface, 147
- Normal
  - jeod::LsodeFirstOrderODEIntegrator, 166
- NormalWithSingularity
  - jeod::LsodeFirstOrderODEIntegrator, 166
- notify\_time\_change\_subscribers
  - jeod::JeodIntegrationTime, 144
- num\_equations
  - jeod::LsodeFirstOrderODEIntegrator, 172
- num\_jacobian\_evals
  - jeod::LsodeFirstOrderODEIntegrator, 172
- num\_nordsiek\_cols
  - jeod::LsodeFirstOrderODEIntegrator, 172
- num\_odes
  - jeod::LsodeControlDataInterface, 151
  - jeod::LsodeDataArrays, 155
- num\_odes\_at\_alloc
  - jeod::LsodeControlDataInterface, 152
- num\_predictor\_elements
  - jeod::LsodeFirstOrderODEIntegrator, 172
- num\_small\_step\_warnings
  - jeod::LsodeFirstOrderODEIntegrator, 172
- num\_steps\_taken
  - jeod::LsodeFirstOrderODEIntegrator, 172
- OneStep
  - jeod::LsodeFirstOrderODEIntegrator, 166
- OneStepWithSingularity
  - jeod::LsodeFirstOrderODEIntegrator, 166
- Operational
  - jeod::GaussJacksonStateMachine, 122
- operator T \*const \*
  - er7\_utils::TwoDArray, 226
- operator T const \*const \*
  - er7\_utils::TwoDArray, 226
- operator<<
  - jeod, 52
  - jeod::GaussJacksonCoeffs, 63
- operator()
  - er7\_utils::TwoDArray, 226, 227
- operator=
  - er7\_utils::TwoDArray, 227
  - jeod::GaussJacksonCoefficientsPair, 59
  - jeod::GaussJacksonCoeffs, 62
  - jeod::GaussJacksonFirstOrderODEIntegrator, 69
  - jeod::GaussJacksonGeneralizedDerivSecond-OrderODEIntegrator, 72
  - jeod::GaussJacksonIntegrationControls, 78
  - jeod::GaussJacksonIntegratorBase, 95
  - jeod::GaussJacksonIntegratorConstructor, 109
  - jeod::GaussJacksonSimpleSecondOrderODE-Integrator, 117
  - jeod::GeneralizedSecondOrderODETechnique, 132
  - jeod::IntegrationMessages, 134
  - jeod::JeodIntegrationGroup, 139
  - jeod::JeodIntegrationTime, 145
  - jeod::LsodeControlDataInterface, 148
  - jeod::LsodeDataArrays, 154
  - jeod::LsodeDataJacobianPrep, 157
  - jeod::LsodeDataStode, 159
  - jeod::LsodeFirstOrderODEIntegrator, 166
  - jeod::LsodeGeneralizedDerivSecondOrderODE-Integrator, 177
  - jeod::LsodeIntegrationControls, 179
  - jeod::LsodeIntegratorConstructor, 181
  - jeod::LsodeSecondOrderODEIntegrator, 184
  - jeod::LsodeSimpleSecondOrderODEIntegrator, 186
  - jeod::Restartable2DSecondOrderIntegrator, 189
  - jeod::RestartableFirstOrderODEIntegrator, 193
  - jeod::RestartableGeneralizedDerivSecondOrderODEIntegrator, 196
  - jeod::RestartableGeneralizedStepSecondOrderODEIntegrator, 199
  - jeod::RestartableScalarFirstOrderODEIntegrator, 202
  - jeod::RestartableSecondOrderODEIntegrator, 204
  - jeod::RestartableSimpleSecondOrderODEIntegrator, 206
  - jeod::RestartableSO3SecondOrderODEIntegrator, 209
  - jeod::RestartableStateIntegrator, 215
  - jeod::RestartableT3SecondOrderODEIntegrator, 219
- order
  - jeod::GaussJacksonCoeffs, 63
  - jeod::GaussJacksonIntegrationControls, 81
  - jeod::GaussJacksonIntegratorBase, 102
- order\_select\_para
  - jeod::LsodeFirstOrderODEIntegrator, 173
- PATH
  - Integration, 18
- perform\_step
  - jeod::GaussJacksonStateMachine, 124
- pivots
  - jeod::LsodeDataArrays, 156
- pos\_hist
  - jeod::GaussJacksonIntegratorBase, 103
- pos\_integrator
  - jeod::GaussJacksonGeneralizedDerivSecond-OrderODEIntegrator, 72
- posdot
  - jeod::GaussJacksonGeneralizedDerivSecond-OrderODEIntegrator, 73
  - jeod::LsodeGeneralizedDerivSecondOrderODE-Integrator, 178
- posdotdot



- jeod::GaussJacksonGeneralizedDerivSecond-  
OrderODEIntegrator, 73
- position\_corrector
  - jeod::GaussJacksonIntegratorBase, 103
- predict
  - jeod::GaussJacksonIntegratorBase, 95
- predictor
  - jeod::GaussJacksonCoeffs, 64
- prev\_good\_step\_size
  - jeod::LsodeFirstOrderODEIntegrator, 173
- prev\_integration\_method
  - jeod::LsodeFirstOrderODEIntegrator, 173
- prev\_iter\_delta
  - jeod::LsodeFirstOrderODEIntegrator, 173
- prev\_method\_order
  - jeod::LsodeFirstOrderODEIntegrator, 173
- prev\_step\_size
  - jeod::LsodeFirstOrderODEIntegrator, 173
- primer
  - jeod::GaussJacksonIntegratorBase, 103
- Priming
  - jeod::GaussJacksonStateMachine, 122
- priming\_constructor
  - jeod::GaussJacksonIntegratorConstructor, 110
- priming\_controls
  - jeod::GaussJacksonIntegrationControls, 81
- priming\_technique
  - jeod::GaussJacksonConfig, 66
- print
  - jeod::GaussJacksonCoefficientsPair, 59
- prior\_num\_steps
  - jeod::LsodeFirstOrderODEIntegrator, 174
- process\_entry\_point\_cycle\_start
  - Lsode, 46
- provides
  - jeod::GaussJacksonIntegratorConstructor, 109
  - jeod::LsodeIntegratorConstructor, 181
- r0
  - jeod::LsodeDataJacobianPrep, 158
- re\_entry\_point
  - jeod::LsodeFirstOrderODEIntegrator, 174
- register\_classes
  - jeod::JeodIntegrationGroup, 140
- rel\_change\_since\_jacobian
  - jeod::LsodeFirstOrderODEIntegrator, 174
- rel\_tolerance\_error\_control
  - jeod::LsodeControlDataInterface, 152
- rel\_tolerance\_error\_control\_vec
  - jeod::LsodeControlDataInterface, 152
- relative\_tolerance
  - jeod::GaussJacksonConfig, 67
  - jeod::GaussJacksonIntegratorBase, 103
- remove\_integrable\_object
  - jeod::JeodIntegrationGroup, 140
- remove\_time\_change\_subscriber
  - jeod::JeodIntegrationTime, 145
- replicate\_primer
  - jeod::GaussJacksonIntegratorBase, 95
- replicate\_state
  - jeod::GaussJacksonIntegratorBase, 97
- Reset
  - jeod::GaussJacksonStateMachine, 122
- reset
  - jeod::GaussJacksonStateMachine, 124
- ResetIterLoop
  - jeod::LsodeFirstOrderODEIntegrator, 166
- reset\_body\_integrators
  - jeod::JeodIntegrationGroup, 140
- reset\_container
  - jeod::JeodIntegrationGroup, 140
- reset\_integrator
  - jeod::GaussJacksonFirstOrderODEIntegrator, 69
  - jeod::GaussJacksonGeneralizedDerivSecond-  
OrderODEIntegrator, 72
  - jeod::GaussJacksonIntegrationControls, 78
  - jeod::GaussJacksonSimpleSecondOrderODE-  
Integrator, 117
  - jeod::LsodeSecondOrderODEIntegrator, 184
  - jeod::Restartable2DSecondOrderIntegrator, 189
  - jeod::RestartableScalarFirstOrderODEIntegrator,  
202
  - jeod::RestartableSO3SecondOrderODEIntegrator,  
209
  - jeod::RestartableT3SecondOrderODEIntegrator,  
219
  - Lsode, 47
- reset\_time
  - jeod::GaussJacksonIntegrationControls, 81
- respond\_to\_time\_change
  - jeod::JeodIntegrationGroup, 140
  - jeod::TimeChangeSubscriber, 221
- Restartable2DSecondOrderIntegrator
  - jeod::Restartable2DSecondOrderIntegrator, 188
- restartable\_2d\_second\_order\_integrator.hh, 255
- restartable\_state\_integrator.hh, 256
- restartable\_state\_integrator\_templates.hh, 257
- RestartableFirstOrderODEIntegrator
  - jeod::RestartableFirstOrderODEIntegrator, 191,  
193
- RestartableGeneralizedDerivSecondOrderODEIntegrator
  - jeod::RestartableGeneralizedDerivSecondOrderO-  
DEIntegrator, 195
- RestartableGeneralizedStepSecondOrderODEIntegrator
  - jeod::RestartableGeneralizedStepSecondOrderO-  
DEIntegrator, 197, 199
- RestartableSO3SecondOrderODEIntegrator
  - jeod::RestartableSO3SecondOrderODEIntegrator,  
208
- RestartableScalarFirstOrderODEIntegrator
  - jeod::RestartableScalarFirstOrderODEIntegrator,  
201
- RestartableSecondOrderODEIntegrator
  - jeod::RestartableSecondOrderODEIntegrator, 204
- RestartableSimpleSecondOrderODEIntegrator
  - jeod::RestartableSimpleSecondOrderODEIntegrator,  
206

- RestartableStateIntegrator
  - jeod::RestartableStateIntegrator, [213](#), [214](#)
- RestartableT3SecondOrderODEIntegrator
  - jeod::RestartableT3SecondOrderODEIntegrator, [218](#)
- rotate\_acc\_hist
  - jeod::GaussJacksonIntegratorBase, [97](#)
- rotate\_down
  - er7\_utils::TwoDArray, [228](#)
- rotate\_up
  - er7\_utils::TwoDArray, [228](#)
- row\_array
  - er7\_utils::TwoDArray, [229](#)
- sa\_coefs
  - jeod::GaussJacksonCoefficientsPair, [60](#)
- save
  - jeod::LsodeDataArrays, [156](#)
- save\_comparison\_data
  - jeod::GaussJacksonIntegratorBase, [97](#), [98](#)
- save\_epoch\_data
  - jeod::GaussJacksonIntegratorBase, [98](#)
- scale\_factor
  - jeod::GaussJacksonStateMachine, [128](#)
- second
  - jeod::GaussJacksonTwoState, [130](#)
- set\_abs\_tol
  - Lsode, [47](#)
- set\_bootstrap\_edit\_redo\_needed
  - jeod::GaussJacksonStateMachine, [125](#)
- set\_default\_config\_values
  - jeod, [52](#)
- set\_integrator\_reference
  - jeod::RestartableStateIntegrator, [215](#)
- set\_rel\_tol
  - Lsode, [47](#)
- simple\_restore
  - jeod::Restartable2DSecondOrderIntegrator, [189](#)
  - jeod::RestartableScalarFirstOrderODEIntegrator, [202](#)
  - jeod::RestartableSO3SecondOrderODEIntegrator, [210](#)
  - jeod::RestartableStateIntegrator, [215](#)
  - jeod::RestartableT3SecondOrderODEIntegrator, [219](#)
- simple\_restore\_internal
  - jeod::RestartableGeneralizedDerivSecondOrderODEIntegrator, [196](#)
  - jeod::RestartableGeneralizedStepSecondOrderODEIntegrator, [199](#)
  - jeod::RestartableStateIntegrator, [216](#)
- size
  - jeod::GaussJacksonIntegratorBase, [103](#)
- SpecificAbsCommonRel
  - jeod::LsodeControlDataInterface, [148](#)
- SpecificAbsSpecificRel
  - jeod::LsodeControlDataInterface, [148](#)
- sqrt\_epsilon
  - jeod::LsodeFirstOrderODEIntegrator, [174](#)
- stage\_target\_time
  - jeod::LsodeFirstOrderODEIntegrator, [174](#)
- standard\_configuration
  - jeod::GaussJacksonConfig, [65](#)
- start\_cycle
  - jeod::GaussJacksonIntegrationControls, [78](#)
  - jeod::GaussJacksonIntegratorBase, [98](#)
- state\_machine
  - jeod::GaussJacksonIntegrationControls, [81](#)
  - jeod::GaussJacksonIntegratorBase, [104](#)
- state\_name
  - jeod::GaussJacksonStateMachine, [125](#)
- step\_at\_last\_jacobian\_update
  - jeod::LsodeFirstOrderODEIntegrator, [175](#)
- step\_error
  - jeod::LsodeFirstOrderODEIntegrator, [175](#)
- step\_increment
  - jeod::GaussJacksonStateMachine, [128](#)
- step\_ratio
  - jeod::LsodeDataStode, [160](#)
- step\_ratio\_order\_inc
  - jeod::LsodeDataStode, [160](#)
- step\_size
  - jeod::LsodeFirstOrderODEIntegrator, [175](#)
- steps\_since\_reset
  - jeod::GaussJacksonStateMachine, [128](#)
- swap
  - er7\_utils::TwoDArray, [228](#)
  - jeod::GaussJacksonCoefficientsPair, [59](#)
  - jeod::GaussJacksonCoeffs, [62](#)
  - jeod::GaussJacksonFirstOrderODEIntegrator, [69](#)
  - jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator, [72](#)
  - jeod::GaussJacksonIntegrationControls, [79](#)
  - jeod::GaussJacksonIntegratorBase, [99](#)
  - jeod::GaussJacksonIntegratorConstructor, [110](#)
  - jeod::GaussJacksonSimpleSecondOrderODEIntegrator, [117](#)
- swap\_state
  - jeod::GaussJacksonIntegratorBase, [99](#), [100](#)
- technique
  - jeod::RestartableSO3SecondOrderODEIntegrator, [210](#)
- TechniqueType
  - jeod::GeneralizedSecondOrderODETechnique, [131](#)
- test\_coefs\_complete
  - jeod::LsodeFirstOrderODEIntegrator, [175](#)
- test\_for\_convergence
  - jeod::GaussJacksonIntegratorBase, [100](#)
- time\_change\_subscriber.hh, [258](#)
- time\_change\_subscribers
  - jeod::JeodIntegrationTime, [145](#)
- told
  - jeod::LsodeDataStode, [160](#)
- tour\_count
  - jeod::GaussJacksonStateMachine, [129](#)
- transition\_state

- [jeod::GaussJacksonStateMachine, 125](#)
- [two\\_d\\_array.hh, 258](#)
- [TwoDArray](#)
  - [er7\\_utils::TwoDArray, 223](#)
- [Unspecified](#)
  - [jeod::GeneralizedSecondOrderODETechnique, 132](#)
- [unsupported\\_option](#)
  - [jeod::IntegrationMessages, 135](#)
- [update\\_control\\_data](#)
  - [Lsode, 47](#)
- [update\\_from\\_owner](#)
  - [jeod::JeodIntegrationGroup, 141](#)
- [update\\_integration\\_group](#)
  - [jeod::JeodIntegrationGroupOwner, 142](#)
- [update\\_jacobian](#)
  - [jeod::LsodeFirstOrderODEIntegrator, 175](#)
- [Utils, 16](#)
- [validate\\_config](#)
  - [jeod, 53](#)
- [validate\\_configuration](#)
  - [jeod::GaussJacksonConfig, 65](#)
- [validate\\_technique](#)
  - [jeod::GeneralizedSecondOrderODETechnique, 132](#)
- [vel\\_integrator](#)
  - [jeod::GaussJacksonGeneralizedDerivSecondOrderODEIntegrator, 73](#)
- [velocity\\_corrector](#)
  - [jeod::GaussJacksonIntegratorBase, 104](#)
- [y](#)
  - [jeod::LsodeFirstOrderODEIntegrator, 175](#)
  - [jeod::LsodeSecondOrderODEIntegrator, 184](#)
- [y\\_dot](#)
  - [jeod::LsodeFirstOrderODEIntegrator, 176](#)
  - [jeod::LsodeSecondOrderODEIntegrator, 185](#)
- [yj](#)
  - [jeod::LsodeDataJacobianPrep, 158](#)
- [zeroth\\_derivative\\_size](#)
  - [jeod::LsodeSecondOrderODEIntegrator, 185](#)