

# A.L.I.S.H.A. Mini

## (AM6 Walsh MK-85 Version)

*ATTiny LED & Integrated Servo Helmet Actuator* Mini version AM6-W85 is a simple to install ATTiny85 shield module that allows DIY people to easily motorize and light up their favorite 3D printed Iron Man helmet or any other helmets (i.e. Batman, Gray Fox, etc.). Drives up to 3 MG90S servos (recommended), Control for 2 LEDs for eyes (PWM), and 1 button/switch port for controlling board operation.

**\*\*\*Operating voltage is 5v (2.1A)\*\*\***


Each LED port has a current limiting resistor.

Full documentation, and instructions are on the [\*Crash Works 3D GitHub Page\*](#).

**Board size:** 30mm x 27mm

### Includes:

- ATTiny85 Microcontroller
- AM6 board with JST-XH (2.54mm) female pin headers for easy jumper wire connection
- 3 - 3-pin headers for jumper wire connection to Servos
- 1 - 2-pin header for jumper wire connection to Power In Port
- 1 - 2-pin header for jumper wire connection to Input Switch
- 1 - 3 pin header for jumper wire connection to LEDs

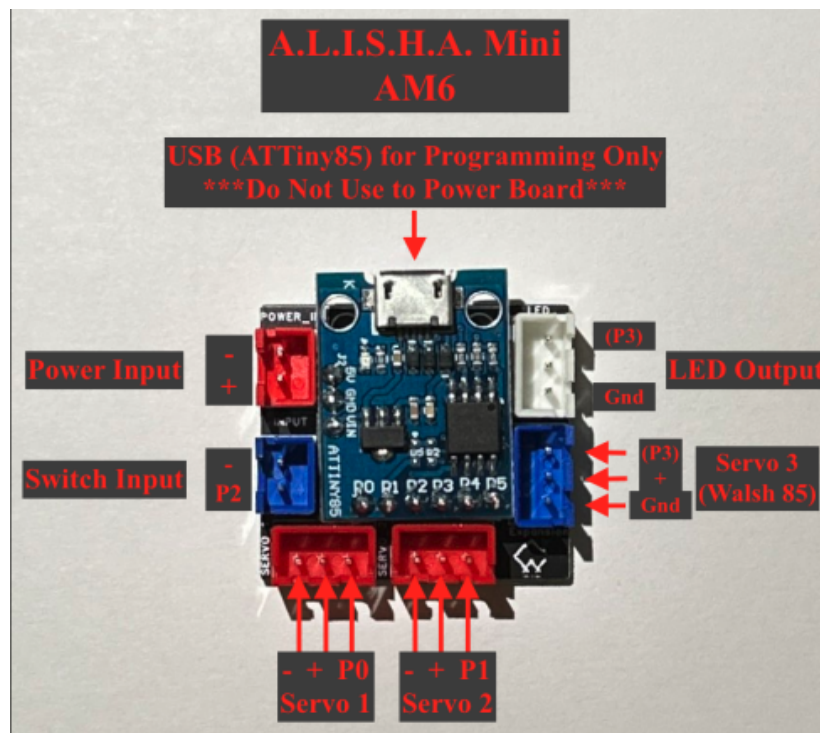

Included are the following pre-wired connectors.

- Two 3-pin wired connectors for servos; they are color coded (**Black = Ground / Red = + / Yellow = S**). *\*\*MG90s servos Signal = Orange\*\**
- One 2-pin wired connector for power input. (**Red = + / Black = Ground**)
- One 2-pin wired connector for switch input (Either **Green wire** set or a **Blue wire** set) *\*\*\* Switch input is not polarity sensitive\*\*\**
- One 3-pin wired connector for LEDs (**Red = + / Black = Ground**)

The board is powered using the “Power-in” connection on the top-left side of the board; this is a standard JST-XH (2.54) connector. You can use the included 2-pin wired connector to power the AM6. **\*\*\* Do not power the board by plugging a USB cable directly into the ATTiny85, also the input voltage is 5V DC, and cannot be exceeded\*\*\***

You can connect your LEDs using the included 3-pin wired connector, the **Red** wire connects to the positive of your LED, and the **Black** wire connects to the negative of your LED.

***\*\*\*Note the LEDs are PWM controlled, and in coding can have their intensity adjusted as well as the option to have them blink.\*\*\****

The Input is triggered by a momentary “Normally Open” type switch, which you provide. You can use the provided 2-pin wired (either **Green wire** set or **Blue wire** set) connector to add your switch for controlling board operation.

***\*\*\* You cannot use a “Normally Closed” Type Switch. If using a Limit switch, you must wire to the “C” (common) and “NO” (Normally Open) terminals on the switch. \*\*\****

The ATTiny85 is pre-flashed with the Crashworks 3D code. Once you have correctly wired your Servos and LEDs, upon initial power up the LEDs will blink and the servos will move to their home position. Upon the 1<sup>st</sup> input (button press from switch) it will let the system know you are ready for operation. Each button press after this will trigger a function to either open the helmet (turn the LEDs off) –or- close the helmet (turn the LEDs on). If you “**Double Tap**” the Button the Button it will adjust the brightness of the LED eyes, there are 4 settings: Off, Low Brightness, Middle Brightness, and High Brightness.

If you are looking for 3D printable file kits for Iron Man helmet motorization, visit Crash Works 3D Thingiverse page, which contains kits and documentation for the Iron Man MK7, Iron Man MK46, and Iron Man MK85 helmets.

<https://www.thingiverse.com/crashworks3d/designs>


Additional resources, and products can be found on our Linktree.

<https://linktr.ee/crashworks3d>

Thank you for your purchase, we hope you enjoy using our system and wish you the best with your project.

## Walsh - Additional Instructions

If you selected “AM6 (W85)” when purchasing, the board has been pre-programmed to operate 3 servos. Two servos operate the faceplate, and a third servo operates the chin. The following information will aid you in getting everything properly installed and working. Prior to installation in your helmet, it is strongly recommended you stage all of the components in your workspace first to make sure everything is working as expected.

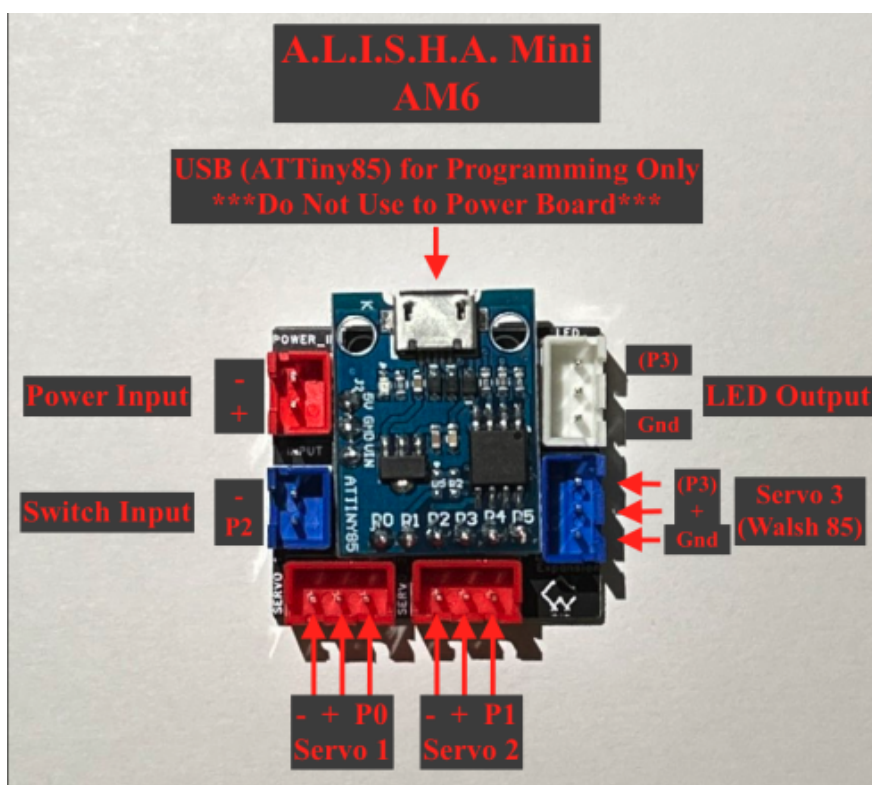

Along with the board, there will be a 3<sup>rd</sup> servo cable to connect to the Jaw/Chin Servo. The board has been pre-loaded with the code to properly operate the Walsh version of helmets, enabling the chin to open and close along with the faceplate.