

Cisco Software Manager (CSM) Migrate to IOS XR 64 bit on ASR9K

ASR9K IOS XR 64 Bit (ASR9K-64) Migration User Guide

This document will help you in getting started with your migration from ASR9K standard 32 bit image to the new 64 bit image. Prior to scheduling migration, you can use these two modules to verify and prepare for migration:

- Configuration Conversion – Visualization of configuration conversion/migration
- Migration-Audit – Hardware audit for migration

Actual migration takes three major steps:

- Pre-Migrate – System preparation
- Migrate – Installation of new 64-bit OS
- Post-Migrate – Post-installation actions

Notes on Device Configurations

Important: The ASR 9000 operational configuration is not completely compatible with ASR9K-64, therefore it must be converted/migrated* for use in the 64-bit version. A copy of the 32-bit configuration is backed up for reference.

You have the following two options:

Option 1: Migration of On-box Configurations

- CSM will migrate the “on-box” ASR9K configurations (admin & IOS-XR) only

Option 2: Loading Custom Configurations


- CSM will migrate the “on-box” ASR9K admin configuration
- In addition, CSM will load any valid ASR9K-64 user-specified IOS-XR configuration

* Configuration migration is accomplished using the NoX tool. For more information, please visit this site:

http://xrgeeks.cisco.com/sox/Nox_Tool.html

Configuration Conversion

- In the Configuration Conversion module, CSM allows users to see how NoX processes each line of ASR9K configuration.
- **How to access:** [Tools > ASR9K to ASR9K-64 Migration](#), click on [Configuration Conversion](#) tab.
- Choose a ASR9K configuration file on the file system and click Convert.

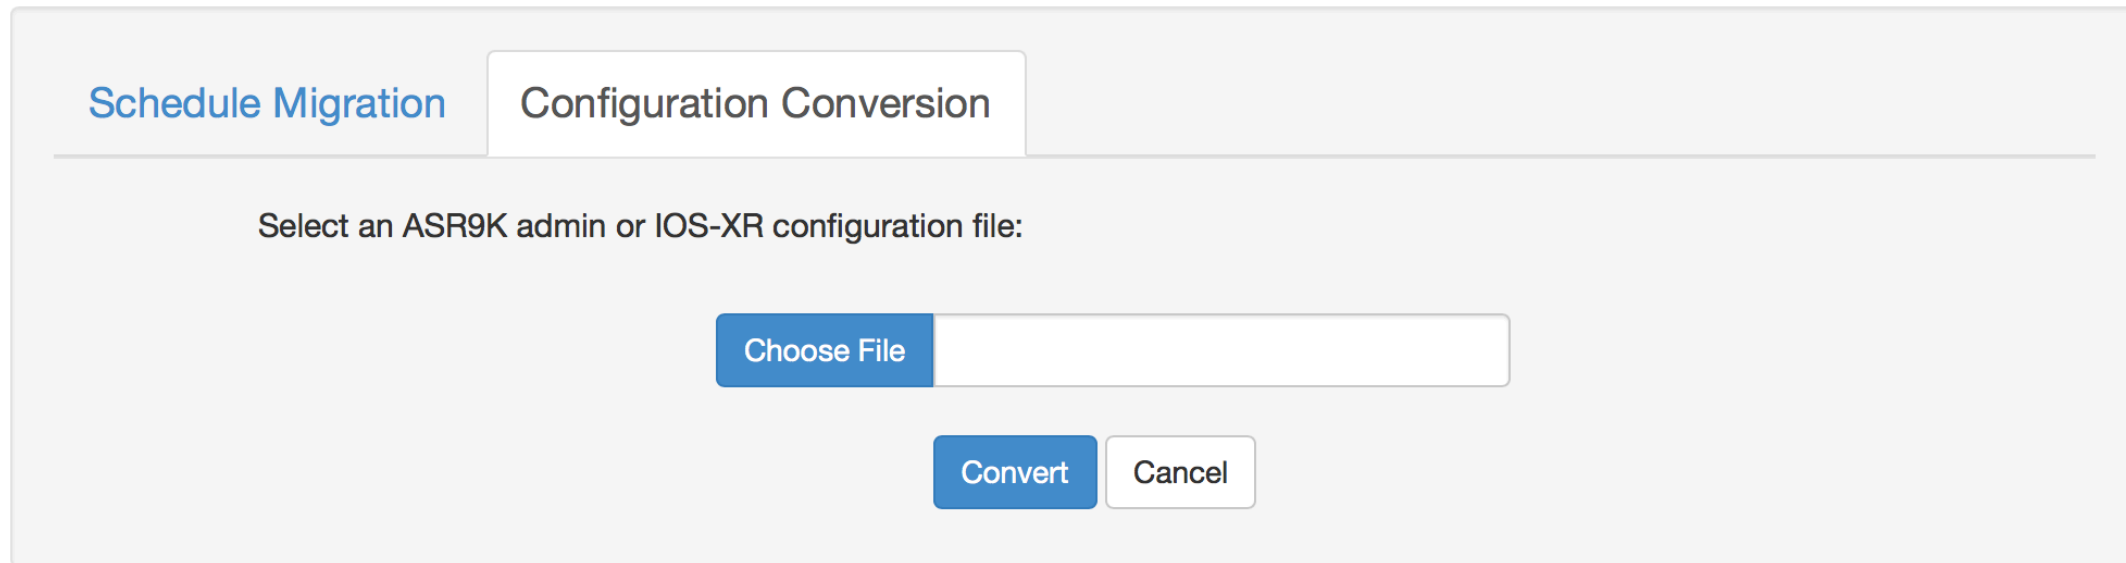

The screenshot shows a web interface for the Configuration Conversion module. At the top, there are two tabs: 'Schedule Migration' and 'Configuration Conversion'. The 'Configuration Conversion' tab is active. Below the tabs, the text 'Select an ASR9K admin or IOS-XR configuration file:' is displayed. Underneath this text is a file selection area consisting of a blue button labeled 'Choose File' and a white text input field. Below the input field are two buttons: a blue 'Convert' button and a white 'Cancel' button.

Configuration Conversion (Cont.)

- The conversion process will first make sure that the latest NoX conversion tool from CCO is downloaded.
- Depending on the size of the configuration file, it may take up to minutes to finish conversion and loading.
- The status of the conversion is displayed under the convert button. Some possible statuses:
 - Preparing the conversion
 - Converting the configurations
 - Conversion completed. Loading the files.

[Schedule Migration](#) Configuration Conversion


Select an ASR9K admin or IOS-XR configuration file:

Choose File

PE1-configs

Convert

Cancel



Preparing the conversion

Configuration Conversion (Cont.)

In the end, you will see this pop-up.

- The textbox on the left contains your input configuration file, with each line color coded according to the conversion report from NoX.
- The color code/category is explained in the tooltip when you hover over it.
- You can choose to filter certain categories to hide and show lines that belong to certain category. Note that if the configuration file is large, it will take several seconds to update the display.
- The textbox on the right displays the converted ASR9K-64 configurations.
- The part on the bottom allows user to upload converted configuration file(s) to a selected server repository. Click the blue instruction icon to see why there could be one or two converted files.
- The input file and converted files can be found at `csm_data/temp/<username>/config_conversion/`

The screenshot displays the NoX configuration conversion tool interface. It features two side-by-side text boxes. The left box, titled "ASR9K Configuration", shows a configuration file with lines color-coded by category: green for supported/default, red for unsupported, blue for unprocessed, and purple for unrecognized. The right box, titled "Converted ASR9K-64 Configuration", shows the converted configuration file. Below the text boxes, there are checkboxes for filtering: "Supported/Default" (checked), "Unsupported" (checked), "Unprocessed" (checked), "Unrecognized" (checked), "Unimplemented" (checked), and "Syntax Errors" (checked). At the bottom, there is a section titled "Select Server Repository to Upload Converted Configuration File(s):" with a blue information icon. It includes two dropdown menus for "Server Repository" and "Server Directory", and an "Upload" button. A green arrow and a red X icon are also present next to the "Server Directory" dropdown.

Migration Pre-requisites

- In order to migrate to ASR9K-64 images, the release version on device MUST be at release 5.3.3 or greater.
- Supported hardware for RP, RSP, FC, FAN, PEM and MPA. The full list is on next page.
 - The unsupported line cards may not boot up after migration.
 - User also has a chance to skip the hardware audit for FAN and PEM with the acknowledgement that the unsupported FAN and PEM will fail to boot.
- All supported hardware are in their appropriate final states:
 - RSP, RP and LC: IOS XR RUN
 - FC: OK
 - FAN and PEM: READY
 - MPA: OK
- User must provide console connection for all devices on CSM.
- Must be able to ping the selected server repository (TFTP, FTP, or SFTP)
- FPD package must be already installed on device.
- User must select the unified FPD SMU for Pre-Migrate if the release version on device is below 6.1.1.

Supported hardware: (*Note: Card types in red are only supported in 6.2.1 onwards, everything else is supported in 6.1.1 onwards.)

Supported RP/RSP	Supported Line Cards	Supported Fans PIDs	Supported PEMS PIDs	Supported FC PIDs	Supported MPA PIDs
ASR-9922-RP-SE	A9K-4X100GE-SE	ASR-9904-FAN	PWR-2KW-DC-V2	A99-SFC2	*A9K-MPA-20X10GE
ASR-9922-RP-TR	A9K-4X100GE-TR	ASR-9006-FAN-V2	PWR-3KW-AC-V2	*A99-SFC-S	*A9K-MPA-4X10GE
A99-RP2-SE	A99-8X100GE-CM	ASR-9010-FAN-V2	PWR-6KW-AC-V3		
A99-RP2-TR	A99-8X100GE-SE	ASR-9910-FAN	PWR-4.4KW-DC-V3		
A9K-RSP880-SE	A99-8X100GE-TR	ASR-9912-FAN			
A9K-RSP880-TR	A9K-8X100GE-CM	ASR-9922-FAN-V2			
*A99-RSP-SE	A9K-8X100GE-SE				
*A99-RSP-TR	A9K-8X100GE-TR				
	A9K-8X100GE-L-SE				
	A9K-8X100GE-L-TR				
	A9K-8X100GE-LB-SE				
	A9K-8X100GE-LB-TR				
	A99-12x100GE				
	*A9K-400G-DWDM-TR				
	*A9K-400G-DWDM-SE				
	*A9K-MOD400-TR				
	*A9K-MOD400-SE				
	*A9K-MOD200-TR				
	*A9K-MOD200-SE				

CSM Migration to ASR9K-64

- CSM allows for the migration from IOS-XR (classic) to IOS-XR 64 bit for ASR9K devices.
- **How to access:** [Tools > ASR9K to ASR9K-64 Migration](#).
- **Verification action:** [Migration-Audit](#)
[Migration-Audit](#) checks if the hardware on device(s) is supported in ASR9K-64 and is in operational state.
- **Migration actions:** [Pre-Migrate](#), [Migrate](#) and [Post-Migrate](#).
[Pre-Migrate](#) prepares the device(s) for migration. It also executes Migration-Audit as a part of the pre-requisite check.
[Migrate](#) updates settings and reloads the device(s) to boot ASR9K-64 image.
[Post-Migrate](#) loads migrated configurations and upgrades FPD's upon successful booting. (More details later)

The screenshot displays the 'Configuration Conversion' tab in the CSM interface. On the left, there are three input fields: 'Install Action', 'Scheduled Time', and 'Custom Command Profile'. On the right, a dropdown menu titled 'Select Desirable Action(s)' is open, showing a list of actions. The 'Verification' section is expanded, and 'Migration-Audit' is highlighted in blue. Below it, the 'Migration' section lists 'Pre-Migrate', 'Migrate', and 'Post-Migrate'. At the bottom of the list is an 'ALL' option.

Install Action	Scheduled Time	Custom Command Profile	Select Desirable Action(s)
			Verification
			Migration-Audit
			Migration
			Pre-Migrate
			Migrate
			Post-Migrate
			ALL

Scheduling Action

- Dependencies of the actions:
 - The verification action Migration-Audit can only be selected by itself. The three migration actions has no dependency on it.
 - In order to complete migration, all three migration actions must have successfully executed.
 - Migration actions can be scheduled all at once or one at a time, but they must occur in the order shown below.
 - For example, Migrate cannot be scheduled unless Pre-Migrate has already run or is scheduled to run.
 - Failures in pre-requisite actions will suspend the execution of any remaining options.
 - Deleting the pre-requisite will also delete all actions that are dependent on it.
- Choose desirable scheduled time.

The screenshot shows a web interface for scheduling a migration. At the top, there are two tabs: 'Schedule Migration' (active) and 'Configuration Conversion'. Below the tabs, there are three main sections: 'Install Action', 'Scheduled Time', and 'Custom Command Profile'. The 'Install Action' section contains three buttons: 'x Pre-Migrate', 'x Migrate', and 'x Post-Migrate'. The 'Scheduled Time' section shows a date and time '07/27/2016 03:37 PM' with a calendar icon to its right. The 'Custom Command Profile' section has a text input field containing the word 'Optional'. At the bottom right, there are two buttons: 'Continue' (blue) and 'Cancel' (white).

Field	Value
Install Action	x Pre-Migrate x Migrate x Post-Migrate
Scheduled Time	07/27/2016 03:37 PM
Custom Command Profile	Optional

Scheduling Action (Cont.)

- (Optional) Use the Custom Command Profile if you wish to capture any CLI command output. These custom commands will be executed **before** each selected migration action executes.
- Note: By default, the following CLI commands already run in their appropriate stages and do not need to be duplicated in the Custom Command Profile: admin show running-config, show running-config, show platform.
- Click Continue to trigger the Migration Wizard.

Schedule Migration

Configuration Conversion

Install Action

× Migration-Audit

Scheduled Time

07/27/2016 03:37 PM

Custom Command Profile

× show filesystem

Continue

Cancel

Scheduling Migration-Audit

Depending on the action(s) selected, the Migration Wizard will prompt the user with different options.

If the Migration-Audit is selected, you will start on the screen shown to the right in the “SELECT HOST” section.

In this first section, you will select the device(s) to schedule the action on.

Migration Audit

SELECT HOST

SELECT SOFTWARE VERSION

Region

San Jose

Role

Software Version

Available Hosts - showing 23

Filter

.

9904_EXR

a9k-Issus

Ares

CRS Test Install

dummy

Eddie eXR

flexr-host

Hades

Hera

➡

➡

⬅

⬅

Selected Hosts - showing 0

Filter

Next

Scheduling Migration-Audit (Cont.)


After selecting device(s), you will see the second section, where you select the version of ASR9K-64 you plan to migrate to.

Then, click Schedule to schedule the Migration-Audit.

Migration Audit

SELECT HOST

SELECT SOFTWARE VERSION

Select the version of ASR9K-64 you plan to migrate to: 

ASR9K-64 Software Version

✓

6.1.1

6.2.1


Previous

Schedule

Install Dashboard

- After scheduling any of the verification or migration actions, CSM will redirect you to the install dashboard, where you can:
 - Monitor the job in progress by checking the status and clicking into the Session Logs.
 - Edit scheduled or failed jobs and resubmit them.
 - Check completed jobs.
 - Delete scheduled or failed jobs.

 [Install Dashboard](#)

Action 

Scheduled **5**

In Progress **0**

Failed **0**

Completed (showing **10** of **168**)

10 records per page

Search:

Hostname	Install Action	Dependency	Scheduled Time	Packages	Created By	Action
Hera	Pre-Migrate		07/20/2016 09:00 AM	asr9k-mini-x64.tar-6.1.1 asr9k-px-5.3.3.CSCuy10934.pie	root	Delete
Hera	Migrate	Another Installation	07/20/2016 09:00 AM		root	Delete
Hera	Post-Migrate	Another Installation	07/20/2016 09:00 AM		root	Delete
Saturn	Migration-Audit		08/12/2016 09:00 AM		root	Delete
Venus	Migration-Audit		08/12/2016 09:00 AM		root	Delete


Showing 1 to 5 of 5 entries

[← Previous](#) **1** [Next →](#)


Session Logs: Migration-Audit

Scheduled 2 In Progress 0 Failed 1 Completed (showing 10 of 168)


10 records per page Search:

Hostname	Install Action	Scheduled Time	Start Time	Packages	Failed Time	Log	Created By	Action
Saturn	Migration-Audit	07/28/2016 03:33 PM	07/28/2016 03:33 PM		07/28/2016 03:34 PM		root	Delete


- Session Logs are available for in-progress, failed and completed jobs.
- If a job failed, check plugins.log, session.log and condoor.log for error.

Session Logs: Saturn 


Session Log Files



172_27_143_156-2016_07_28_22_33_43-547/condoor.log



172_27_143_156-2016_07_28_22_33_43-547/plugins.log



172_27_143_156-2016_07_28_22_33_43-547/session.log

Session Logs: Migration-Audit (Cont.)

- Below is an example of plugins.log for a failed Migration-Audit. In this case, PEM on the device is not in operational state for migration.

Session Logs: Saturn 

Contents

```
2016-07-28 15:33:43,275 INFO: Phase: Device Discovery
2016-07-28 15:33:56,931 INFO: Hostname: ios
2016-07-28 15:33:56,931 INFO: Hardware family: ASR9K
2016-07-28 15:33:56,931 INFO: Hardware platform: ASR9K
2016-07-28 15:33:56,932 INFO: OS type: XR
2016-07-28 15:33:56,932 INFO: Version: 6.1.1.21I
2016-07-28 15:33:56,932 INFO: Connection type: console
2016-07-28 15:34:08,702 INFO: Phase: Migration-Audit
2016-07-28 15:34:08,702 INFO: Dispatching: 'Migration Audit Plugin'
2016-07-28 15:34:08,713 INFO: [Migration Audit Plugin] Key 'hardware_audit_software_version' loaded from CSM storage
2016-07-28 15:34:08,713 INFO: [Migration Audit Plugin] Key 'hardware_audit_software_version' loaded from CSM storage
2016-07-28 15:34:08,713 INFO: [Migration Audit Plugin] Key 'hardware_audit_version' loaded from CSM storage
2016-07-28 15:34:08,713 INFO: [Migration Audit Plugin] Key 'hardware_audit_version' loaded from CSM storage
2016-07-28 15:34:08,713 INFO: [Migration Audit Plugin] Hardware audit for software release version 6.1.1
2016-07-28 15:34:08,713 INFO: [Migration Audit Plugin] Key 'hardware_audit_override_hw_req' loaded from CSM storage
2016-07-28 15:34:08,713 INFO: [Migration Audit Plugin] Key 'hardware_audit_override_hw_req' loaded from CSM storage
2016-07-28 15:34:08,713 INFO: [Migration Audit Plugin] Running hardware audit on all nodes.
2016-07-28 15:34:09,130 INFO: [Migration Audit Plugin] Check if cards on device are supported for migration.
2016-07-28 15:34:09,137 ERROR: [Migration Audit Plugin] 0/PS0/M0/SP is supported in ASR9K-64, but it's in FAILED state. Valid operational state for migration: READY
```


Scheduling a Migration

If any of the migration action(s) is selected, you will start in the “SELECT HOST” section, where you select the device(s) to schedule the migration

Migrate to ASR9K-64

SELECT HOST

PRE-MIGRATE

POST-MIGRATE

Region

San Jose

Role

Software Version

Available Hosts - showing 21

Filter

Hades
Hera
Keres
MTRON21
Mahendra
NCS6K
NCS6K Test Install
R2
Samurai-1
Saturn Mamt IP

Selected Hosts - showing 2

Filter

Saturn
Venus

Next

Scheduling a Migration (Cont.)

- If you selected “Pre-Migrate”, you will be prompted to specify a TFTP, FTP or SFTP server repository and the directory. At this stage, only the following two packages can be selected:
 1. The ASR9K-64 tar file containing the ISO image and boot files. The filename must match wildcard expression **asr9k*.tar*** and must include the 3 digit ASR9K-64 version. Example: asr9k-x64-mini.tar-6.1.1
 2. And the mandatory unified FPD SMU only if your current release version is below 6.1.1
(asr9k-px-<release>.CSCuy10934.pie)
*Filename subjected to change.
- (Optional) You can select a customized IOS-XR configuration file for CSM to load during Post-Migrate. If so, the existing IOS-XR configurations on device will be ignored.
- Alternatively, if no file is provided, CSM will migrate and load the existing configurations.
- You also have the option of overriding the hardware audit for FAN and PEM.

Migrate to ASR9K-64

SELECT HOST

PRE-MIGRATE

POST-MIGRATE

Select Software Packages: ⓘ

Server Repository

tftp-asr9k-sw

Server Directory

↑

×

Auto Select

Available Packages - showing 19

Filter

.migrate_to_eXR.swp

PE1-configs.cal

PE1-configs.iox

Saturn_admin.cal

Saturn_admin.iox

Saturn_xr.iox

Venus_admin.cal

Venus_admin.iox

Venus_xr.iox

⋮ ➤

➤

⬅

⬅ ⋮

Selected Packages - showing 1

Filter

asr9k-mini-x64.tar-6.1.1

Select a custom ASR9K-64 config file to be loaded after migration: ⓘ

Optional

By default, migration requires that all RSP, RP, FC, FAN and PEM on device are supported in ASR9K-64 and are in operational states. Do you wish to skip the hardware audit for FAN and PEM? ⓘ

☐ Yes

☒ No

Previous

Next

Scheduling a Migration (Cont.)

- If you selected “Post-Migrate”, you will be prompted to choose whether you’d like to commit the IOS-XR configurations with best effort during this stage.
- Click Schedule to schedule the actions.
- The migration action(s) can only be scheduled if CSM confirms that:
 - The pre-requisite for the selected actions is scheduled or completed successfully.
 - The latest configuration migration tool NoX from CCO is in csm_data/migration/, if not, CSM will download it before scheduling the actions.

Migrate to ASR9K-64

SELECT HOST

POST-MIGRATE

When the IOS-XR configurations, either migrated by the CSM Server or provided by you during Pre-Migrate, cannot be applied on eXR directly, would you like the CSM Server to:

☐ Abort the configuration commit

☐ Commit the configurations with best effort

Previous



Schedule

Walk-Through: Pre-Migrate


The CSM Pre-Migrate step is a collection of automated tasks designed to ensure your system is prepared for migration. Actions include (but are not limited to):

- Hardware and software checks
- Remove content from `harddiskb:/` and `harddisk:/dumper` and `harddisk:/showtech`
- Copy, conversion and storage of existing operational configuration (to be applied later in the Post-Migrate step)
- Copy the ASR9K-64 tar file to `harddisk:/`
- Install the unified FPD SMU, check relevant FPD versions and perform FPD upgrades if necessary.









Session Logs: Pre-Migrate

Venus	Pre-Migrate	04/20/2016 02:04 PM	04/20/2016 02:16 PM		04/20/2016 02:24 PM		root
-------	-------------	---------------------	---------------------	---	---------------------	---	------

- Same as the other actions, check plugins.log, session.log and condoor.log for errors if any.
- Other Pre-Migrate logs:
 - .txt – Are CLI command output capture files.
 - Config Log (shown in green) – Are available when the configuration migration tool (NoX) encounters configuration conversion issues. This does not necessarily mean the Pre-Migration step will fail but you are advised to inspect these files if they exist.

Session Logs: Venus 

Session Log Files

	172_27_143_156-2016_04_20_21_16_54-191/admin-show-running-config.txt
	172_27_143_156-2016_04_20_21_16_54-191/condoor.log
	172_27_143_156-2016_04_20_21_16_54-191/plugins.log
	172_27_143_156-2016_04_20_21_16_54-191/session.log
	172_27_143_156-2016_04_20_21_16_54-191/show-platform.txt
	172_27_143_156-2016_04_20_21_16_54-191/show-running-config.txt
	172_27_143_156-2016_04_20_21_16_54-191/supported_config_in_xr_configuration
	172_27_143_156-2016_04_20_21_16_54-191/unsupported_config_in_xr_configuration

Session Logs: Pre-Migrate (Cont.)

More concerning the configuration logs

- If you only scheduled a Pre-Migrate, you can choose to download “show-running-config.txt” and “admin-show-running-config.txt” and use the Configuration Conversion module to see details of the conversion.
- You can also check `supported_config_in_xr_configuration` and `unsupported_config_in_xr_configuration` for a brief overview.

Configurations Known and Supported to the NoX Conversion Tool

Line No.	Configuration
5	interface MgmtEth0/RSP0/CPU0/0
6	ipv4 address 1.66.27.25 255.255.0.0
8	interface MgmtEth0/RSP0/CPU0/1
9	shutdown
11	interface MgmtEth0/RSP1/CPU0/0
12	shutdown
14	interface MgmtEth0/RSP1/CPU0/1
15	shutdown
23	interface HundredGigE0/0/0/0
24	shutdown
26	interface HundredGigE0/0/0/1
27	shutdown
29	interface HundredGigE0/0/0/2
30	shutdown
32	interface HundredGigE0/0/0/3
33	shutdown
35	interface HundredGigE0/0/0/4
36	shutdown
38	interface HundredGigE0/0/0/5
39	shutdown
41	interface HundredGigE0/0/0/6
42	shutdown
44	interface HundredGigE0/0/0/7
45	shutdown
47	router static
48	address-family ipv4 unicast
49	223.255.254.0/24 MgmtEth0/RSP0/CPU0/0 1.66.0.1

Please find original configuration in `csm_data/migration/Venus/xr.cfg`
The final converted configuration is in `csm_data/migration/Venus/xr.iox`

Session Logs: Pre-Migrate (Cont.)

More concerning the configuration conversion logs (supported_config_in_xr_configuration and unsupported_config_in_xr_configuration)

- At the end of both files, CSM points you to the original configuration file and the migrated configuration file. They are stored in csm_data/migration/<hostname_of_device>/. The hostname may be slightly different from the one stored in CSM to ensure it's valid filename.
- If you only scheduled a Pre-Migrate, you will have the option of checking how the conversion went. Otherwise, if there is no serious failure, you can check if any configurations failed to be converted/loaded after the Post-Migrate.
- The following files are available after Pre-Migrate completes:
 - admin.cfg and xr.cfg are the original configurations on device.
 - admin.cal is a part of the migrated admin.cfg that should be loaded in Calvados in ASR9K-64.
 - admin.iox is a part of the migrated admin.cfg that should be loaded in XR in ASR9K-64.
 - xr.iox is a part of the migrated xr.cfg that should be loaded in XR in ASR9K-64.
 - admin.csv and xr.csv contain the line by line migration detail.

Configurations Known and Supported to the NoX Conversion Tool

Line No.	Configuration
5	interface MgmtEth0/RSP0/CPU0/0
6	ipv4 address 1.66.27.25 255.255.0.0
8	interface MgmtEth0/RSP0/CPU0/1
9	shutdown
11	interface MgmtEth0/RSP1/CPU0/0
12	shutdown
14	interface MgmtEth0/RSP1/CPU0/1
15	shutdown
23	interface HundredGigE0/0/0/0
24	shutdown
26	interface HundredGigE0/0/0/1
27	shutdown
29	interface HundredGigE0/0/0/2
30	shutdown
32	interface HundredGigE0/0/0/3
33	shutdown
35	interface HundredGigE0/0/0/4
36	shutdown
38	interface HundredGigE0/0/0/5
39	shutdown
41	interface HundredGigE0/0/0/6
42	shutdown
44	interface HundredGigE0/0/0/7
45	shutdown
47	router static
48	address-family ipv4 unicast
49	223.255.254.0/24 MgmtEth0/RSP0/CPU0/0 1.66.0.1

Please find original configuration in csm_data/migration/Venus/xr.cfg
The final converted configuration is in csm_data/migration/Venus/xr.iox

Walk-Through: Migrate






CSM manages the system migration which includes (but is not limited to) these major steps:

- Un-tars the tar file to put image and boot files in place.
- Sets the boot mode to load the ASR9K-64 image from /harddiskb:/
- Backs up the admin and IOS-XR configurations
- Reloads the device in order to load the ASR9K-64 image
- Waits for all RSP/RP and supported line cards to reach their final operational state

Session Logs: Migrate

- A completed Migrate action will have the logs shown below (or more if added by the operator during the scheduling phase).
- By default, “show platform” is executed after the device boots up ASR9K-64 image. Click the red file comparison icon to compare the node status after Migrate completes with the node status during Pre-Migrate.

Session Log Files

	172_27_143_156-2016_04_20_21_58_52-193/condoor.log	
	172_27_143_156-2016_04_20_21_58_52-193/plugins.log	
	172_27_143_156-2016_04_20_21_58_52-193/session.log	
	172_27_143_156-2016_04_20_21_58_52-193/show-platform.txt	

Click to view diff









Walk-Through: Post-Migrate

Once the Migrate action has completed, CSM performs the following during the Post-Migrate phase:

- Ensures all RSP/RP and supported line cards are in their final operational state
- Loads the migrated (converted) admin configurations
- CSM loads either the (a) migrated (converted) IOS-XR configuration or (b) a user-provided (custom) IOS-XR configuration (depending on the operators selection during scheduling)
- Checks FPD versions and, if needed, upgrade FPD's and reload device

Session Logs: Post-Migrate

- A completed Post-Migrate will have at least the txt files below besides the logs. Post-Migrate executes “admin show running-config” and “show running-config” after loading corresponding configurations. It executes “show platform” in the end. Click the red icon to compare outputs with those from Pre-Migrate.

Session Log Files		
	172_27_143_156-2016_04_20_22_20_54-194/admin-show-running-config.txt	
	172_27_143_156-2016_04_20_22_20_54-194/condoor.log	
	172_27_143_156-2016_04_20_22_20_54-194/plugins.log	
	172_27_143_156-2016_04_20_22_20_54-194/session.log	
	172_27_143_156-2016_04_20_22_20_54-194/show-platform.txt	
	172_27_143_156-2016_04_20_22_20_54-194/show-running-config.txt	