
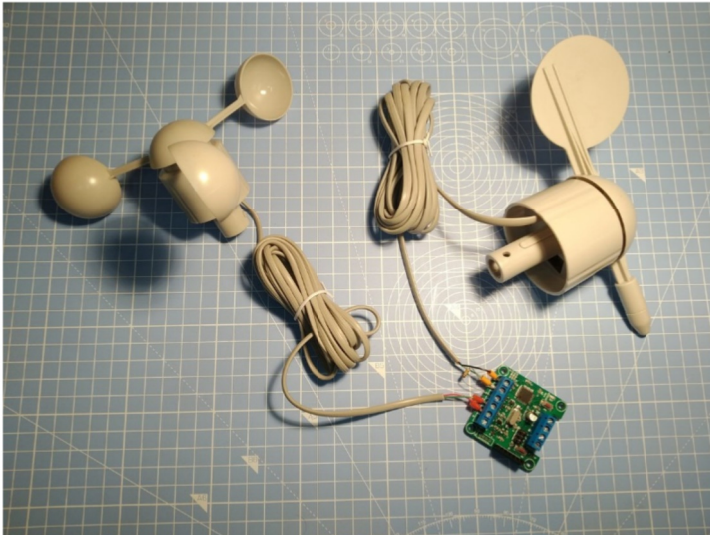


Date:	22/10/21	Version:	1.0	By:	Matt Little
-------	----------	----------	-----	-----	-------------

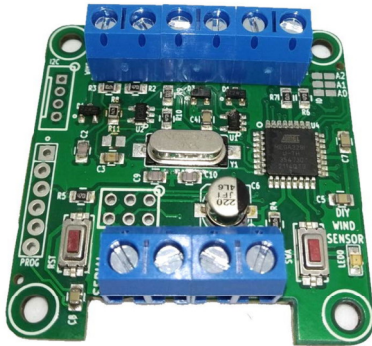

This connects to various anemometers and wind vanes and provides a serial interface for averaged data from the pulses.

The problem with measuring wind anemometers and wind vane is that they constantly need to be checked. You need to always know when pulses have come in and which direction the wind vane is facing. This requires a bit of microcontroller time and processing.


This unit is designed to solve that. Wire up your vane and anemometer. Power the unit up. Then it will save the averaged data for you. You can then get hold of the data through serial requests and process as you need.

This unit can be 'trained' for your Wind Vane and the pulses converted into a real wind speed with a " $Y=mX+c$ " conversion. The conversion values can be adjusted for your anemometer.

All the firmware, unit operation and serial commands can be found here:

<https://github.com/curiouselectric/WindSensor>

**Parts included:**

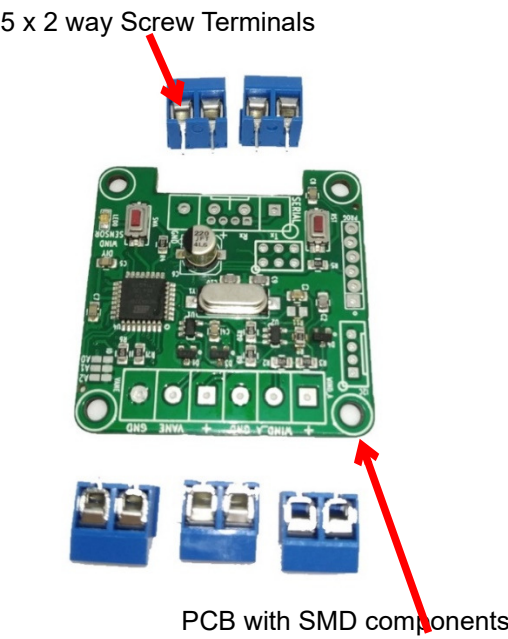

**Parts list:**


Item	Ref	Quantity
2 way screw terminals		5
PCB with all SMD components soldered		1

## Tools required:

Soldering Iron

Solder

Side cutters

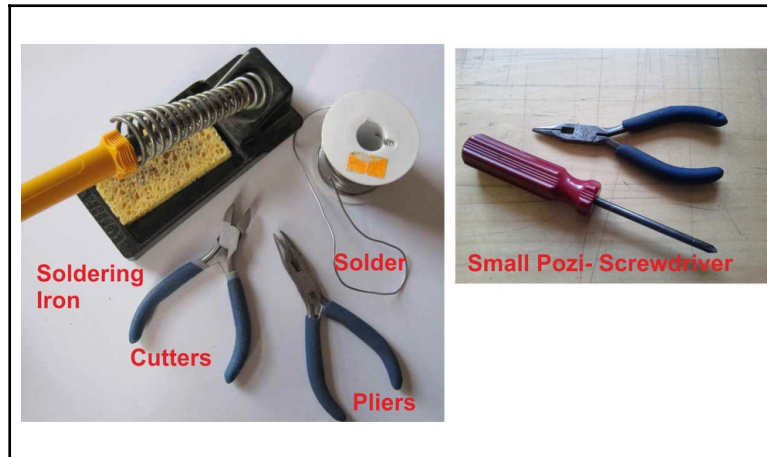

Long-nosed  
Pliers

Posi-drive  
Screwdriver

## Additional Items

- USB to 6 way 'FTDI' style serial converter:
  - Search for "FT232RL USB to TTL MiniUSB Port FTDI Serial Adapter Module for Arduino 5V 3.3V" on eBay
  - Or this FTDI one: <https://ftdichip.com/products/ttl-232r-3v3/>
  - You can also use an Arduino as a USB to serial converter.
- To update/change code: Computer with Arduino IDE and additional libraries installed. (see software section for more details)

## Instructions:


### Step: 1 Solder Screw Terminals

There are 5 2 way screw terminals to solder.

Link two of them to make a 4 way connector and solder into the 'serial' connection.

Link three of them and solder into the WIND\_A connections.

That's all the soldering done!

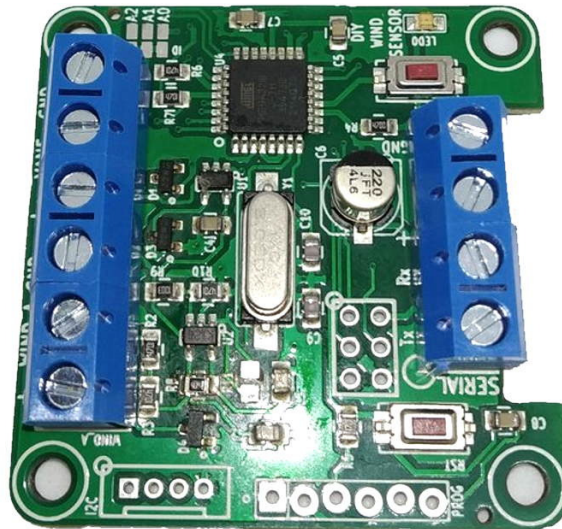

### Step: 2 Set ID

This step is not usually required. You can set the ID of the unit by connecting some pads with a solder blob.

Solder according to this table. "Solder" means connect the two pads, "NC" means no connection. The default is 0.

A0	A1	A2	ID
NC	NC	NC	0
Solder	NC	NC	1
NC	Solder	NC	2
Solder	Solder	NC	3
NC	NC	Solder	4
Solder	NC	Solder	5
NC	Solder	Solder	6
Solder	Solder	Solder	7



### Step: 3 Wire up Anemometer

Wiring for this depends upon the type of anemometer:

#### **For switched pulse**

**anemometers:** connect the switch to 0V and to PULSE input, as there is a pull-up resistor.

#### **For NPN output anemometers:**


The +V will supply the Vcc to your anemometer. Typically, this is 3.3V or 5V.

Wire this to the +ve of your anemometer. 0V is ground.

Wire the NPN pulse output to PULSE.

#### **For Hall-Effect anemometers:**

Connect the output to the 0V and the PULSE input.

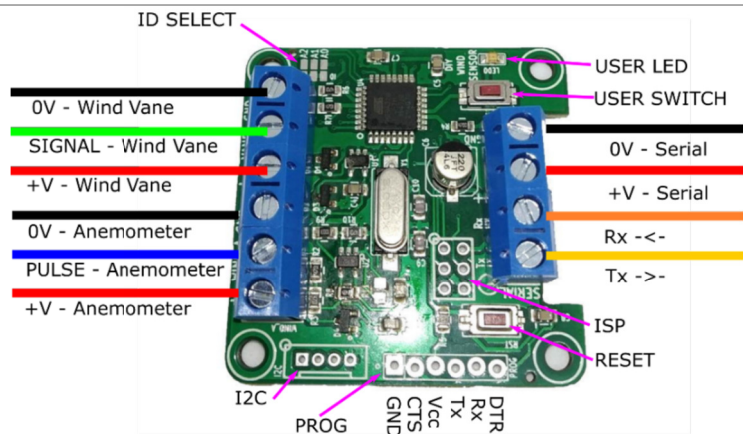


### Step: 4 Wire up Wind Vane

The wind vane wiring will also be different depending upon the type of vane.


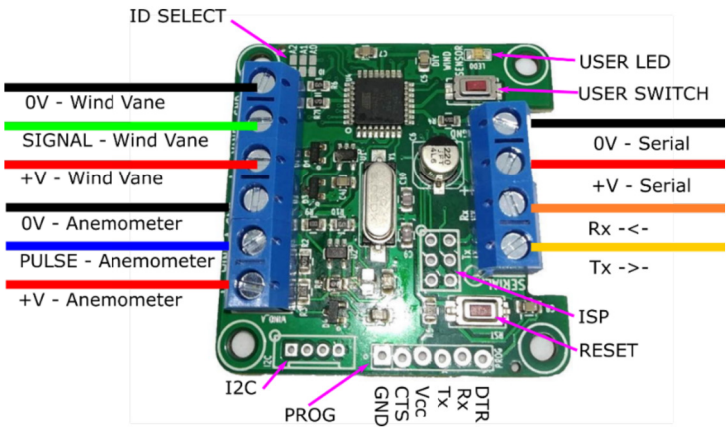
For a resistive switched output, then you will need to use a 10k or 100k pull up resistor. Wire the vane output to 0V and SIGNAL. Wire a pull-up resistor to SIGNAL and +5V.

For potentiometer output sensors wire the 0V to one side of the variable resistor and the +5V for the other side of the variable resistor. The wire the wiper to SIGNAL.

Basically, you are trying to make a variable voltage input for the SIGNAL input.

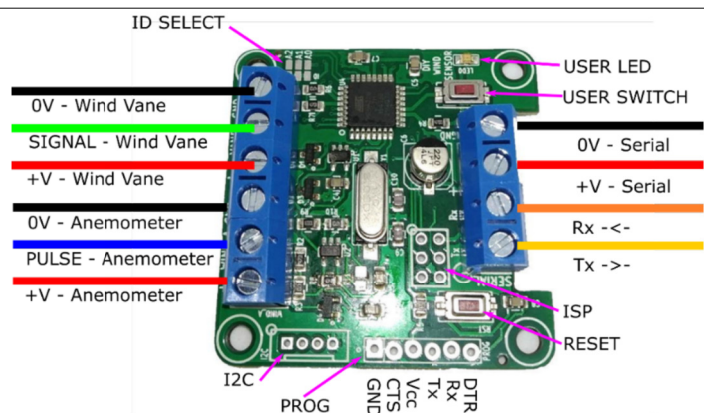



<b>Step: 5</b>	PCB is finished!
<p data-bbox="153 248 488 282">Have a nice cup of tea.</p> 	<p data-bbox="531 248 932 282">That didn't take long, did it?</p>
<b>Step: 6</b>	Connect to Arduino or USB-Serial Converter
<p data-bbox="153 528 683 640">There is one main serial connector which has 0V, +V for the serial and also Rx and Tx.</p> <p data-bbox="153 674 683 819">Upload a blank or 'bare minimum' sketch to an Arduino. You can wire your Arduino Tx to Rx and Rx to Tx.</p> <p data-bbox="153 853 683 965">If you monitor the serial port at 9600 baud then you can send and receive responses.</p> <p data-bbox="153 999 683 1155">Follow the github examples and information for the most up to date information regarding the serial data and the functionality of the unit.</p>	
<b>Step: 7</b>	Send Serial Commands
<p data-bbox="153 1328 1043 1402">There are many serial commands that the unit can respond to. Please see:</p> <p data-bbox="320 1402 1276 1451"><a href="https://github.com/curiouselectric/WindSensor">https://github.com/curiouselectric/WindSensor</a></p> <p data-bbox="153 1451 1287 1487">For the most recent information. This is kept online, so it can be easily updated.</p>	

<b>Step: 8</b>	Write your own code
<p>Everyone's application is different, so this is where things get fun for your application!</p> <p>You need to think about what you would like from the unit.</p> <p>I have set up units that send out data at regular 1min outputs with a wireless transmitter. This used broadcast mode.</p> <p>I have also set up units that record the data to an SD card by using request mode.</p>	

<b>Upload Firmware</b>
<p>This is not needed for standard use of the unit.</p> <p>This can be where the fun begins! You can alter the code and improve it as you need.</p> <p>This project has software stored on GITHUB software repository here:</p> <p style="text-align: center;"><a href="https://github.com/curiouselectric/WindSensor"><u>https://github.com/curiouselectric/WindSensor</u></a></p> <p>Please follow the readme in this repository for the most up to date instructions.</p>

## Contact details:

This kit has been designed and produced by:

**The Curious Electric Company**  
**hello@curiouselectric.co.uk**  
**www.curiouselectric.co.uk**  
 4 Cragland Park, Great Urswick, Ulverston, LA12 0TX



We would like you to be happy with this kit. If you are not happy for any reason, then please contact us and we will help to sort it out.

Please email **hello@curiouselectric.co.uk** with any questions or comments.  
 Please tweet us at **@curiouselectric**


If any parts are missing from your kit, then please email **hello@curiouselectric.co.uk** with details, including when and where the kit was purchased.

More technical information can be found via **www.curiouselectric.co.uk**


### Circuit Schematic:

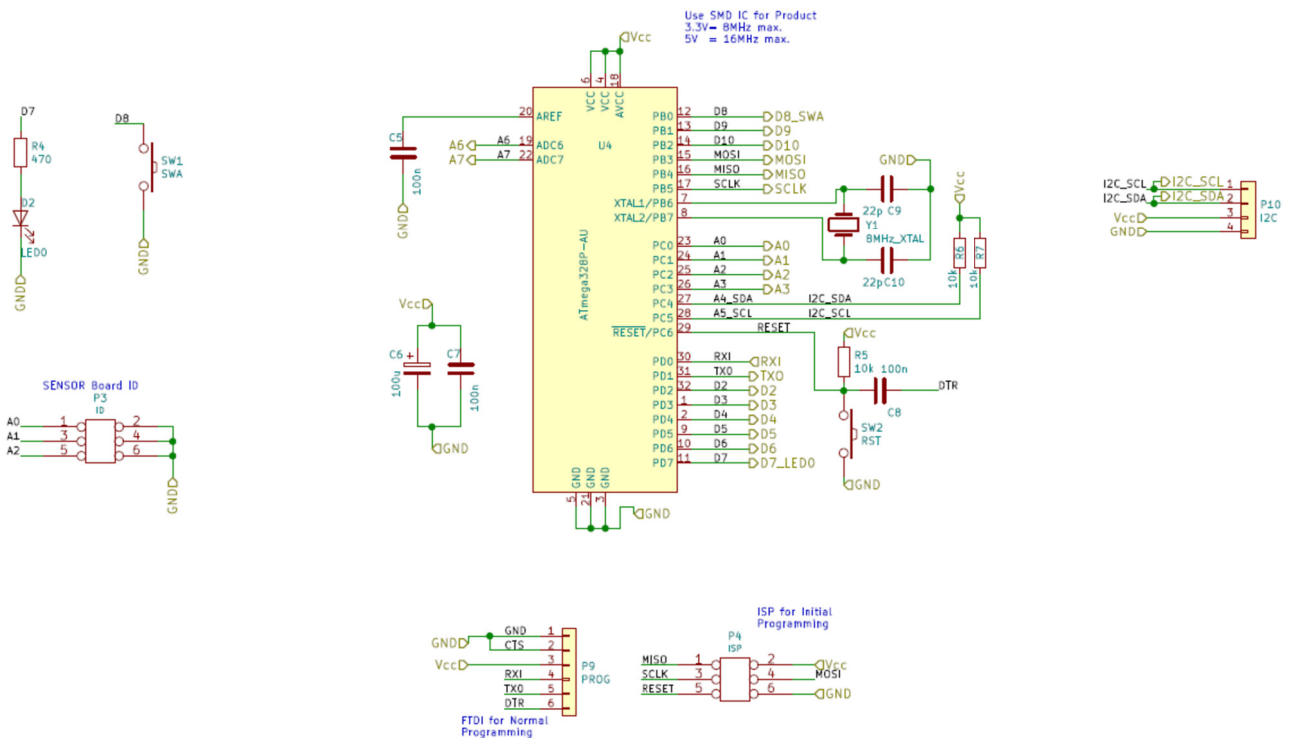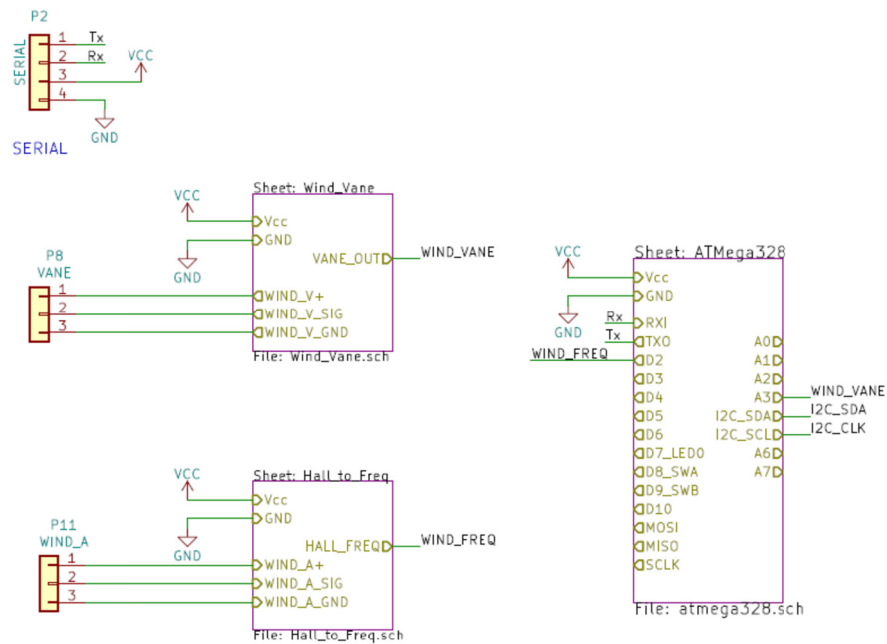



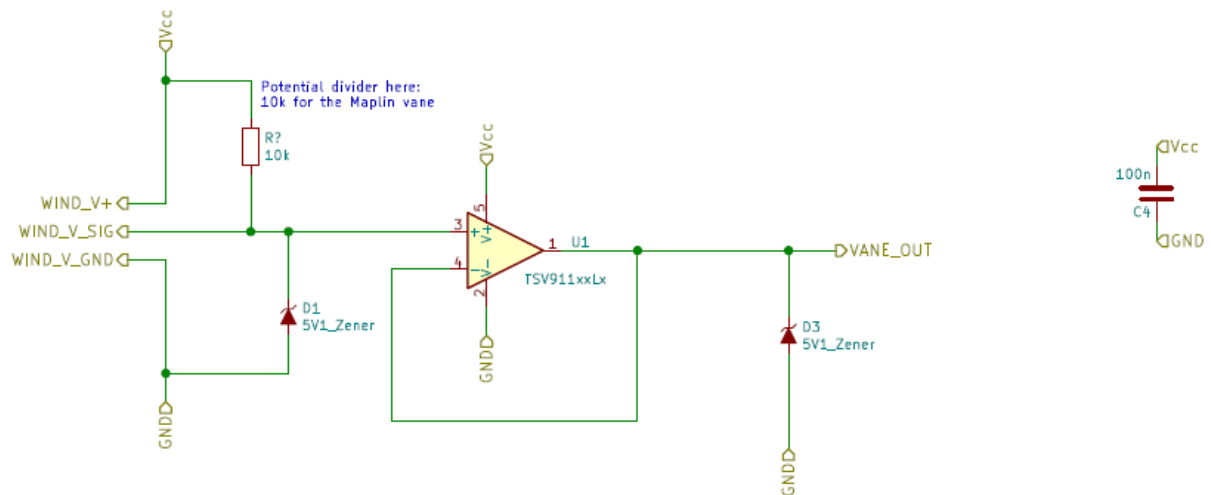

This adds some filtering and overvoltage protection for different wind vanes  
 Wind vane with 8 reed switches + resistors – Output is stepped voltage  
 Wind vane with potentiometer – Output is continuous voltage

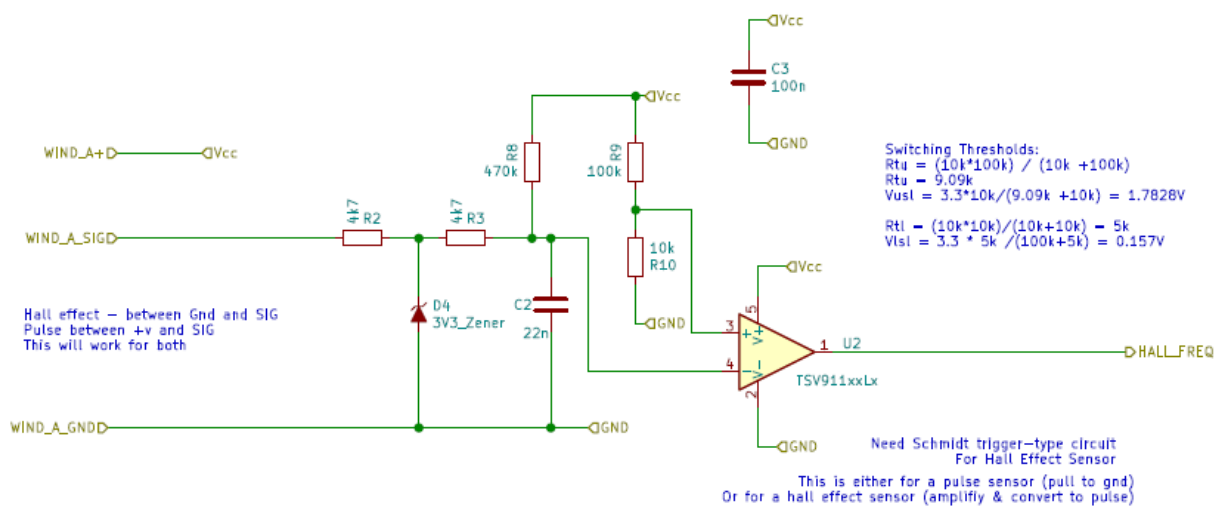

## PCB Design:

