


INSPECTION

1. INSPECT STOP LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Switch pin free (Pedal depressed)	-	No continuity
Switch pin pushed in (Pedal released)	1 - 2	Continuity
Switch pin free (Pedal depressed)	-	No continuity
Switch pin pushed in (Pedal released)	3 - 4	Continuity

If continuity is not as specified, replace the switch.

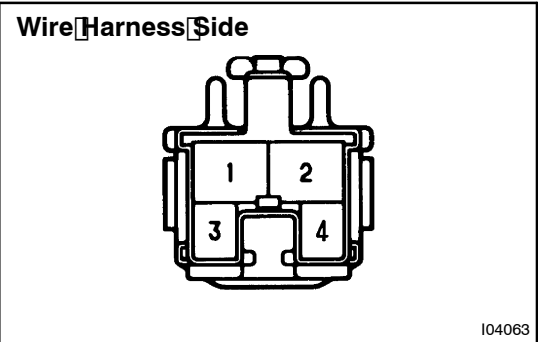


2. INSPECT STOP LIGHT SWITCH CIRCUIT
(See page DI-675)

Disconnect the connector from the switch and inspect the connector on the wire harness side, as shown.

Tester connection	Condition	Specified condition
2 - Ground	Constant	Battery voltage


If circuit is not as specified, inspect the power source or wire harness.

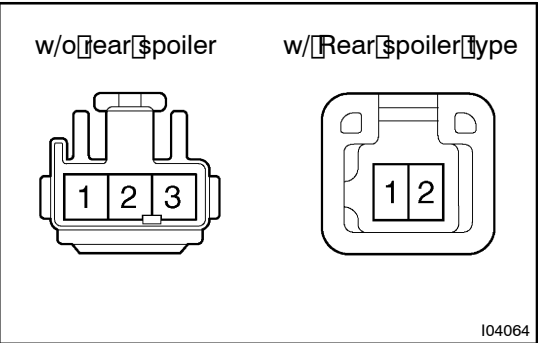

3. INSPECT HI-MOUNTED STOP LIGHT CONTINUITY

Using an ohmmeter, check that continuity exists between terminals.

If continuity is not as specified, replace the light assembly or bulb.

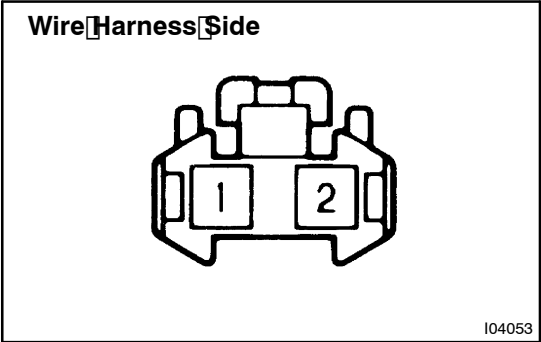

4. INSPECT HI-MOUNTED STOP LIGHT CIRCUIT

Disconnect the connector from the light and inspect the connector on the wire harness side, as shown.

TesterConnection	Condition	SpecifiedCondition
2 - Ground	Constant	Continuity

If circuit is not as specified, inspect the power source or wire harness.

5. INSPECT LIGHT FAILURE SENSOR
(See page DI-677 and BE-105)