


BODY DIMENSION DRAWINGS
ENGINE COMPARTMENT


(Three-Dimensional Distance)

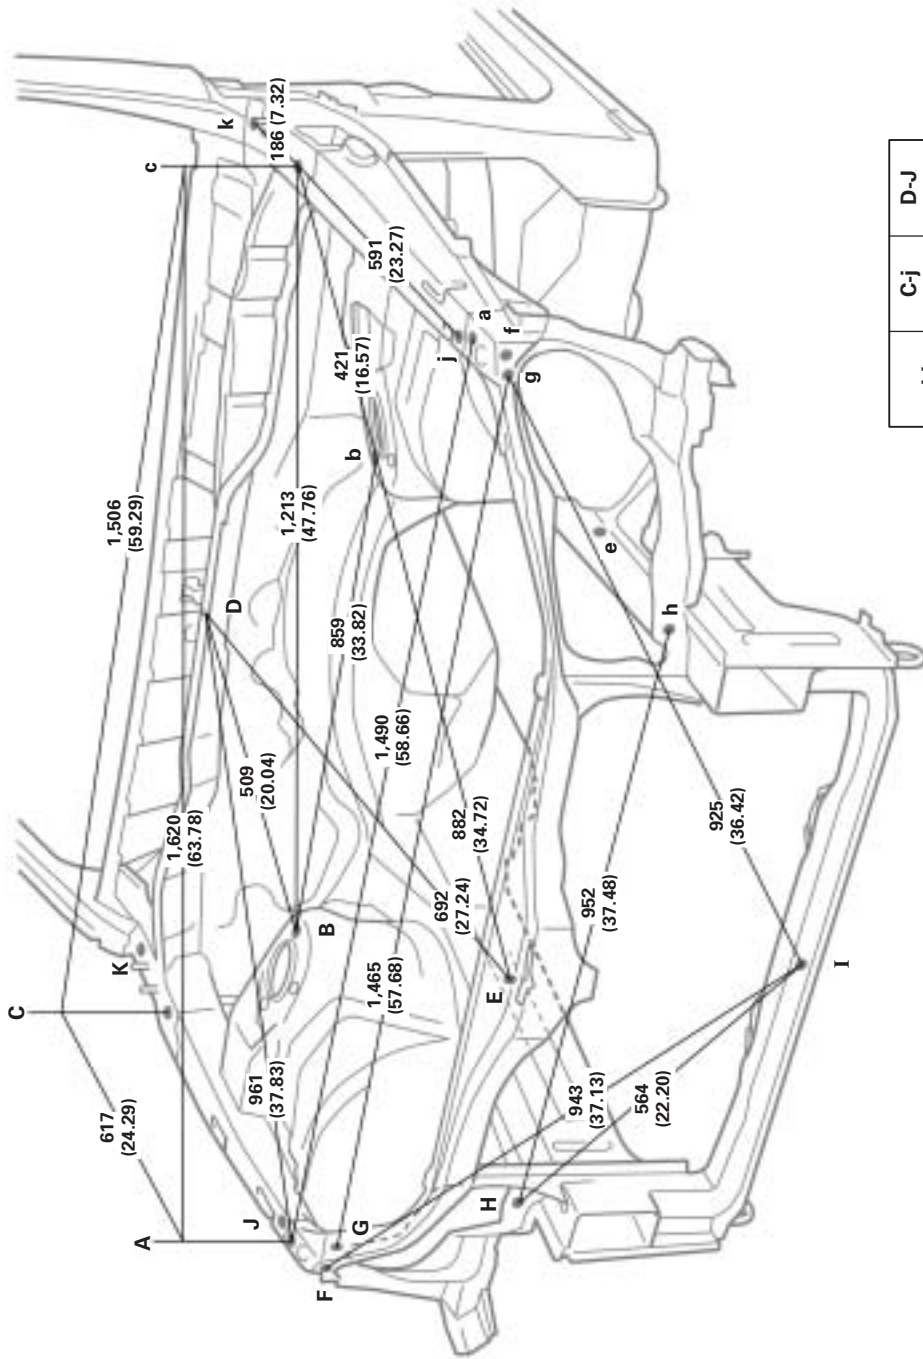


HINT: For symbols, capital letters indicate right side of vehicle,
small letters indicate left side of vehicle (Seen from rear).

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Radiator upper support standard hole	10 (0.39)	G, g	Radiator support standard hole	10 (0.39)
B, b	Front spring support hole-inner	13 (0.51)	H, h	Radiator support standard hole	10 (0.39)
C, c	Cowl top side panel standard hole	10 (0.39)	I	Hood lock support installation nut	6 (0.24) nut
D	Cowl top panel vehicle center mark	1 (0.04) R	J, j	Front fender apron standard hole	10 (0.39)
E, e	Front side member standard hole	13 (0.51)	K, k	Cowl top side panel standard hole	10 (0.39)
F, f	Front fender installation nut	6 (0.24) nut	—	—	—


BODY OPENING AREAS (Side View: Front)

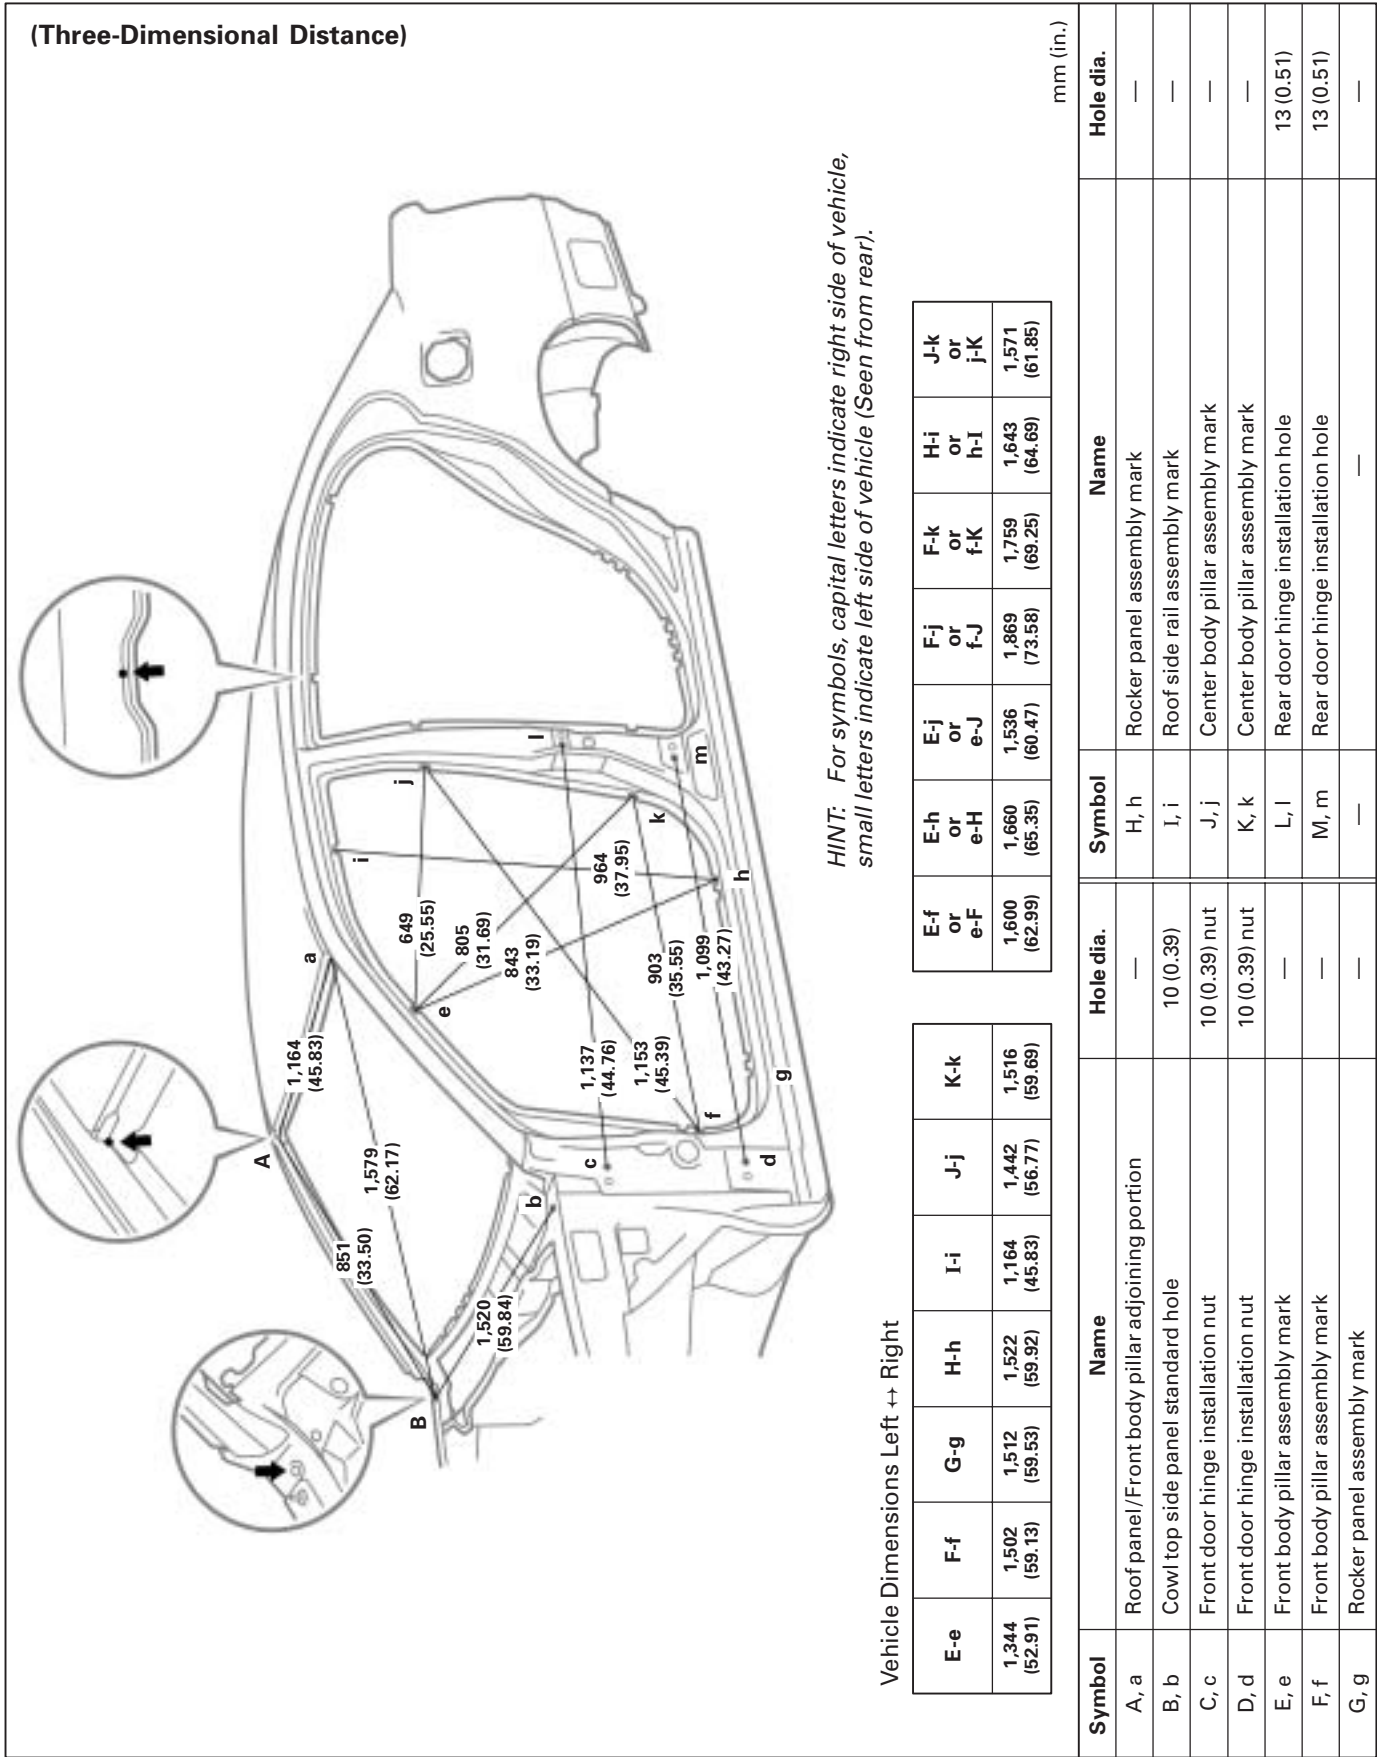

BODY OPENING AREAS (Rear View)

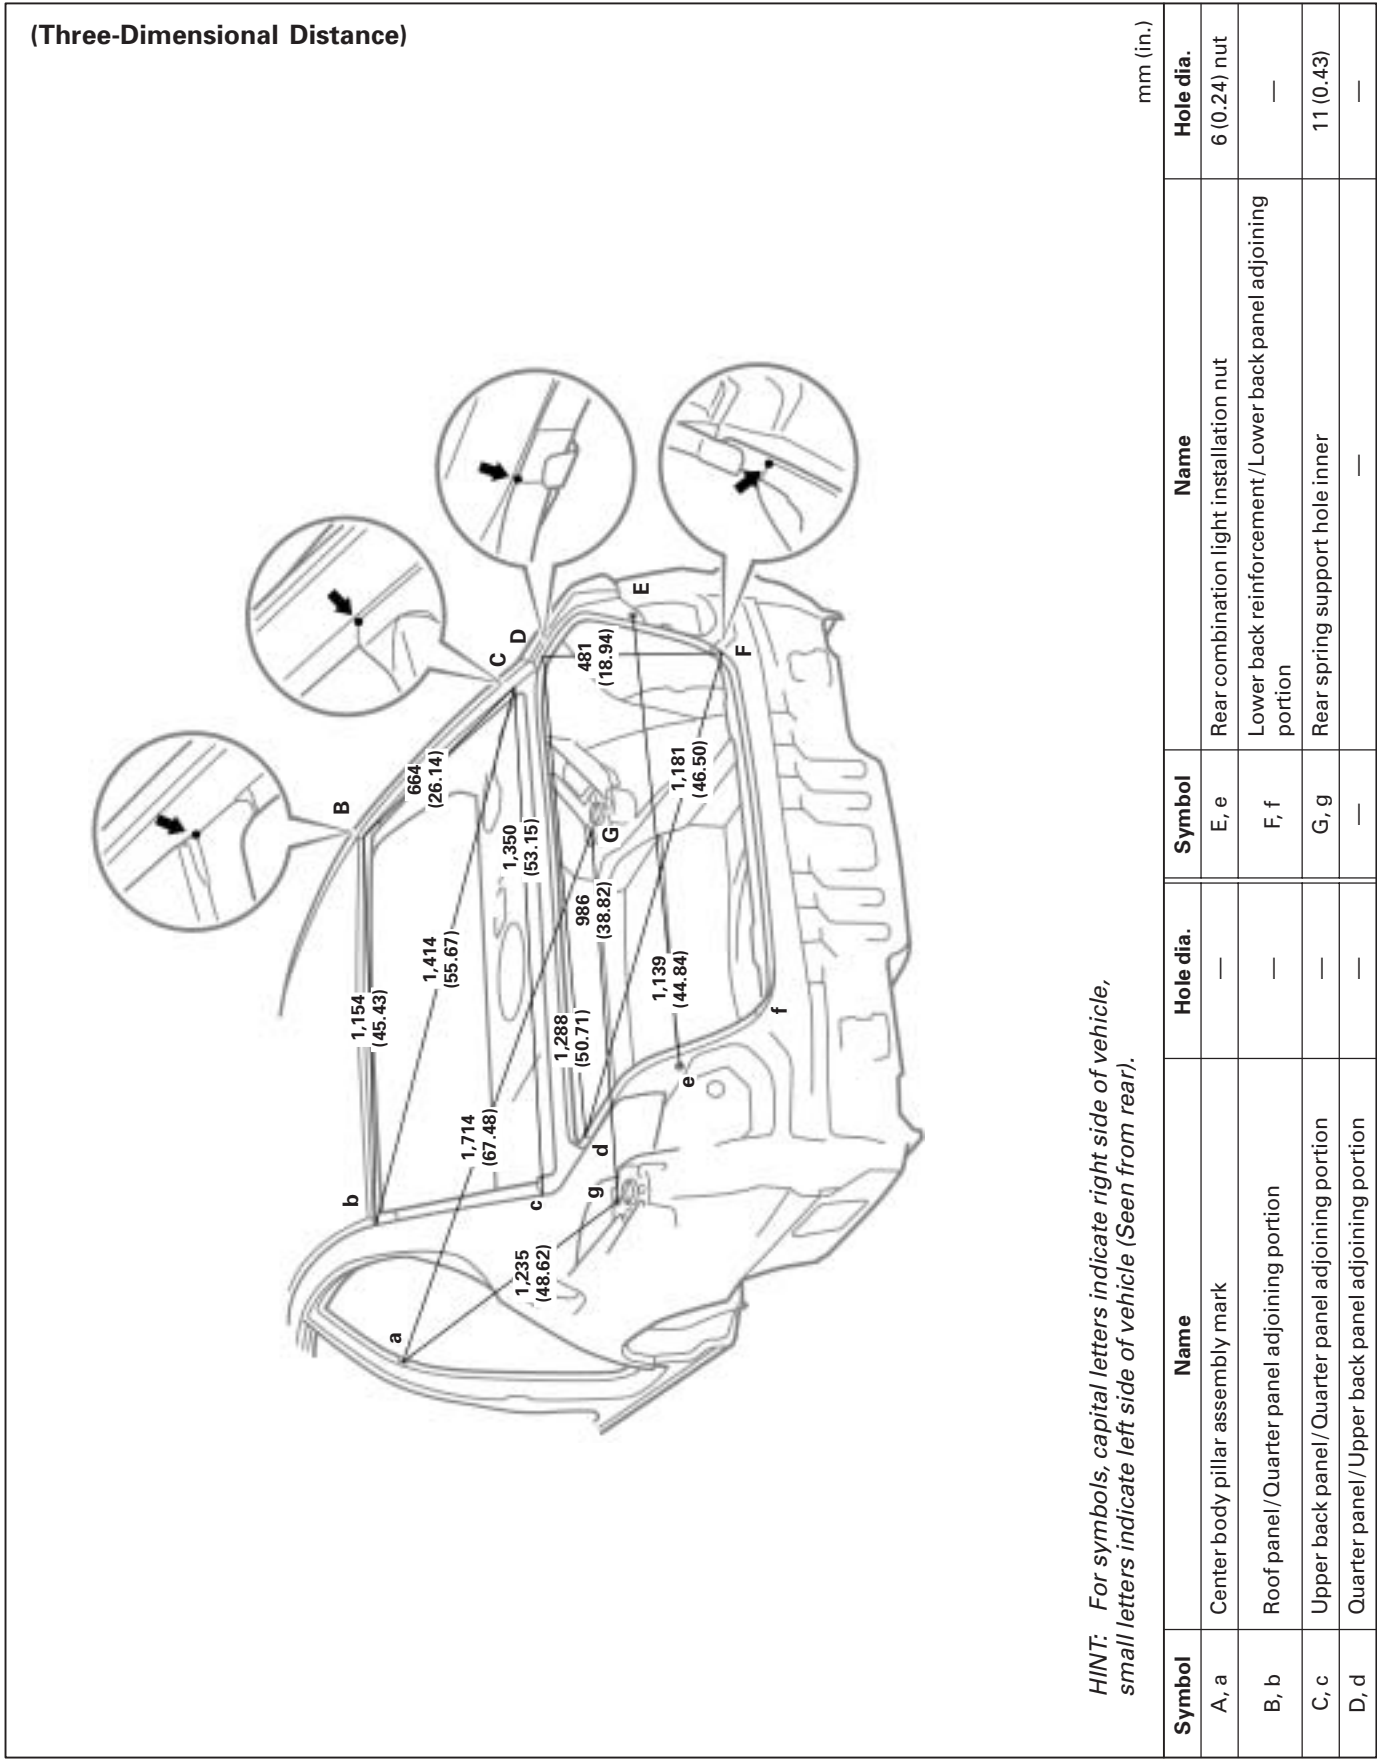


(Three-Dimensional Distance)

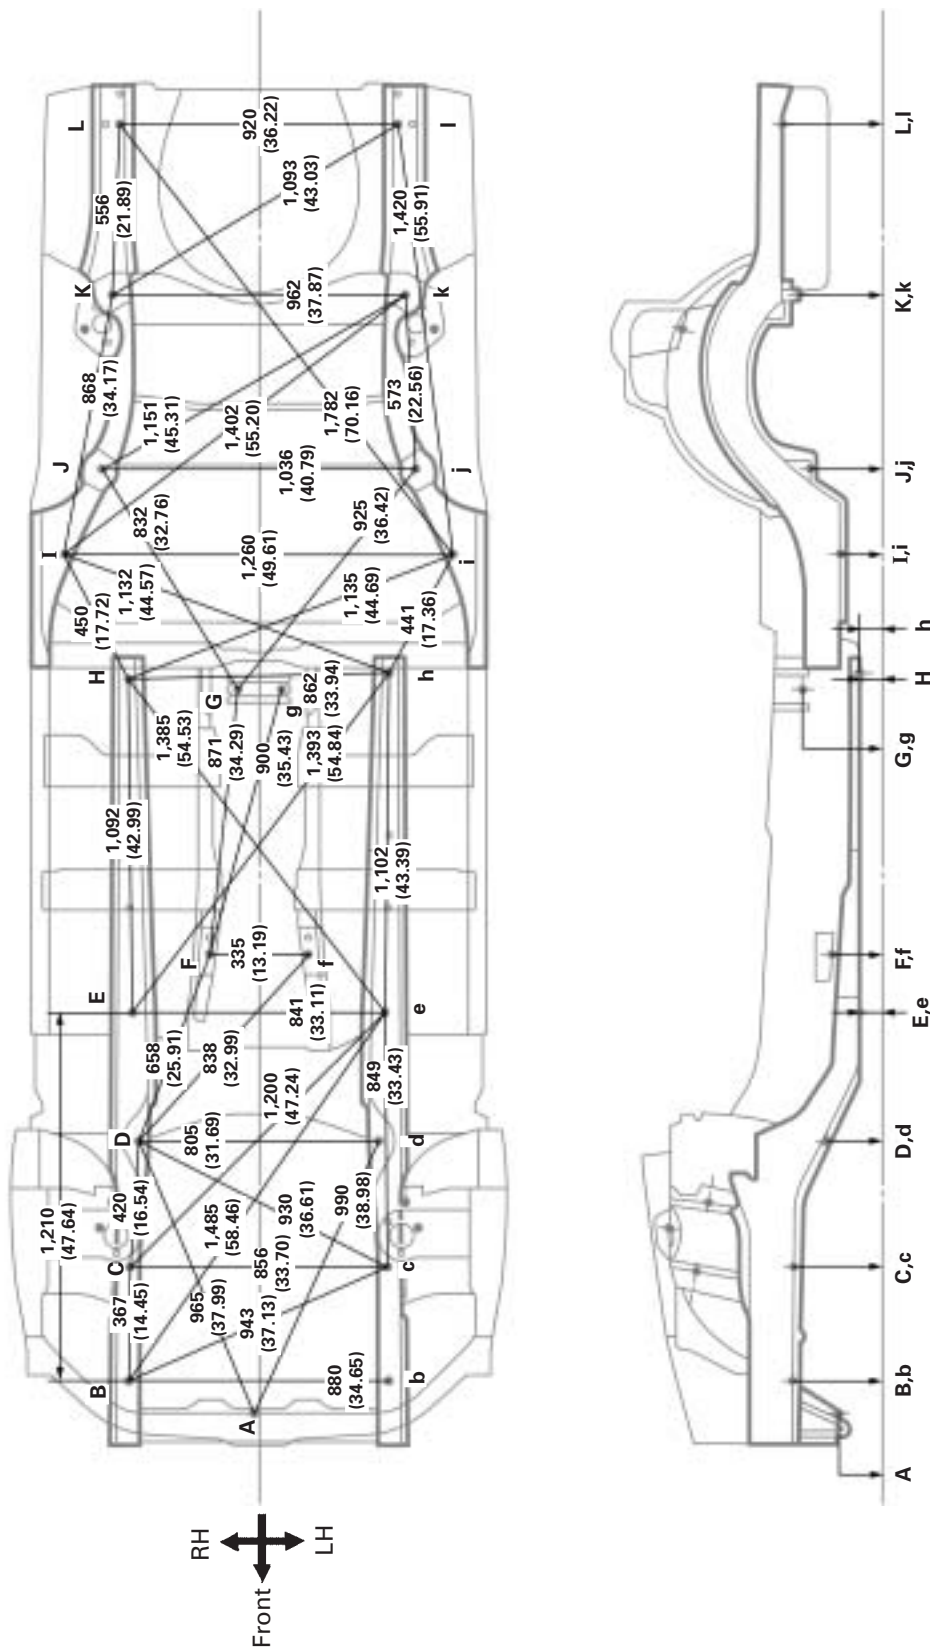



Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A	Intercooler tube installation nut	6 (0.24) nut	G, g	Drive shaft center support bearing installation nut	10 (0.39) nut
B, b	Front side member standard hole	25 (0.98)	H, h	Front floor under reinforcement standard hole	18 (0.71)
C, c	Front suspension crossmember installation nut	14 (0.55) nut	I, i	Rear floor side member standard hole	18 (0.71)
D, d	Strut bar installation nut	14 (0.55) nut	J, j	Rear suspension member installation nut	14 (0.55) nut
E, e	Front side member standard hole	25 (0.98)	K, k	Rear suspension member installation nut	14 (0.55) nut
F, f	Engine rear mounting member installation nut-front	10 (0.39) nut	L, l	Transport hook installation nut-front inner	12 (0.47) nut

UNDER BODY (Cont'd)


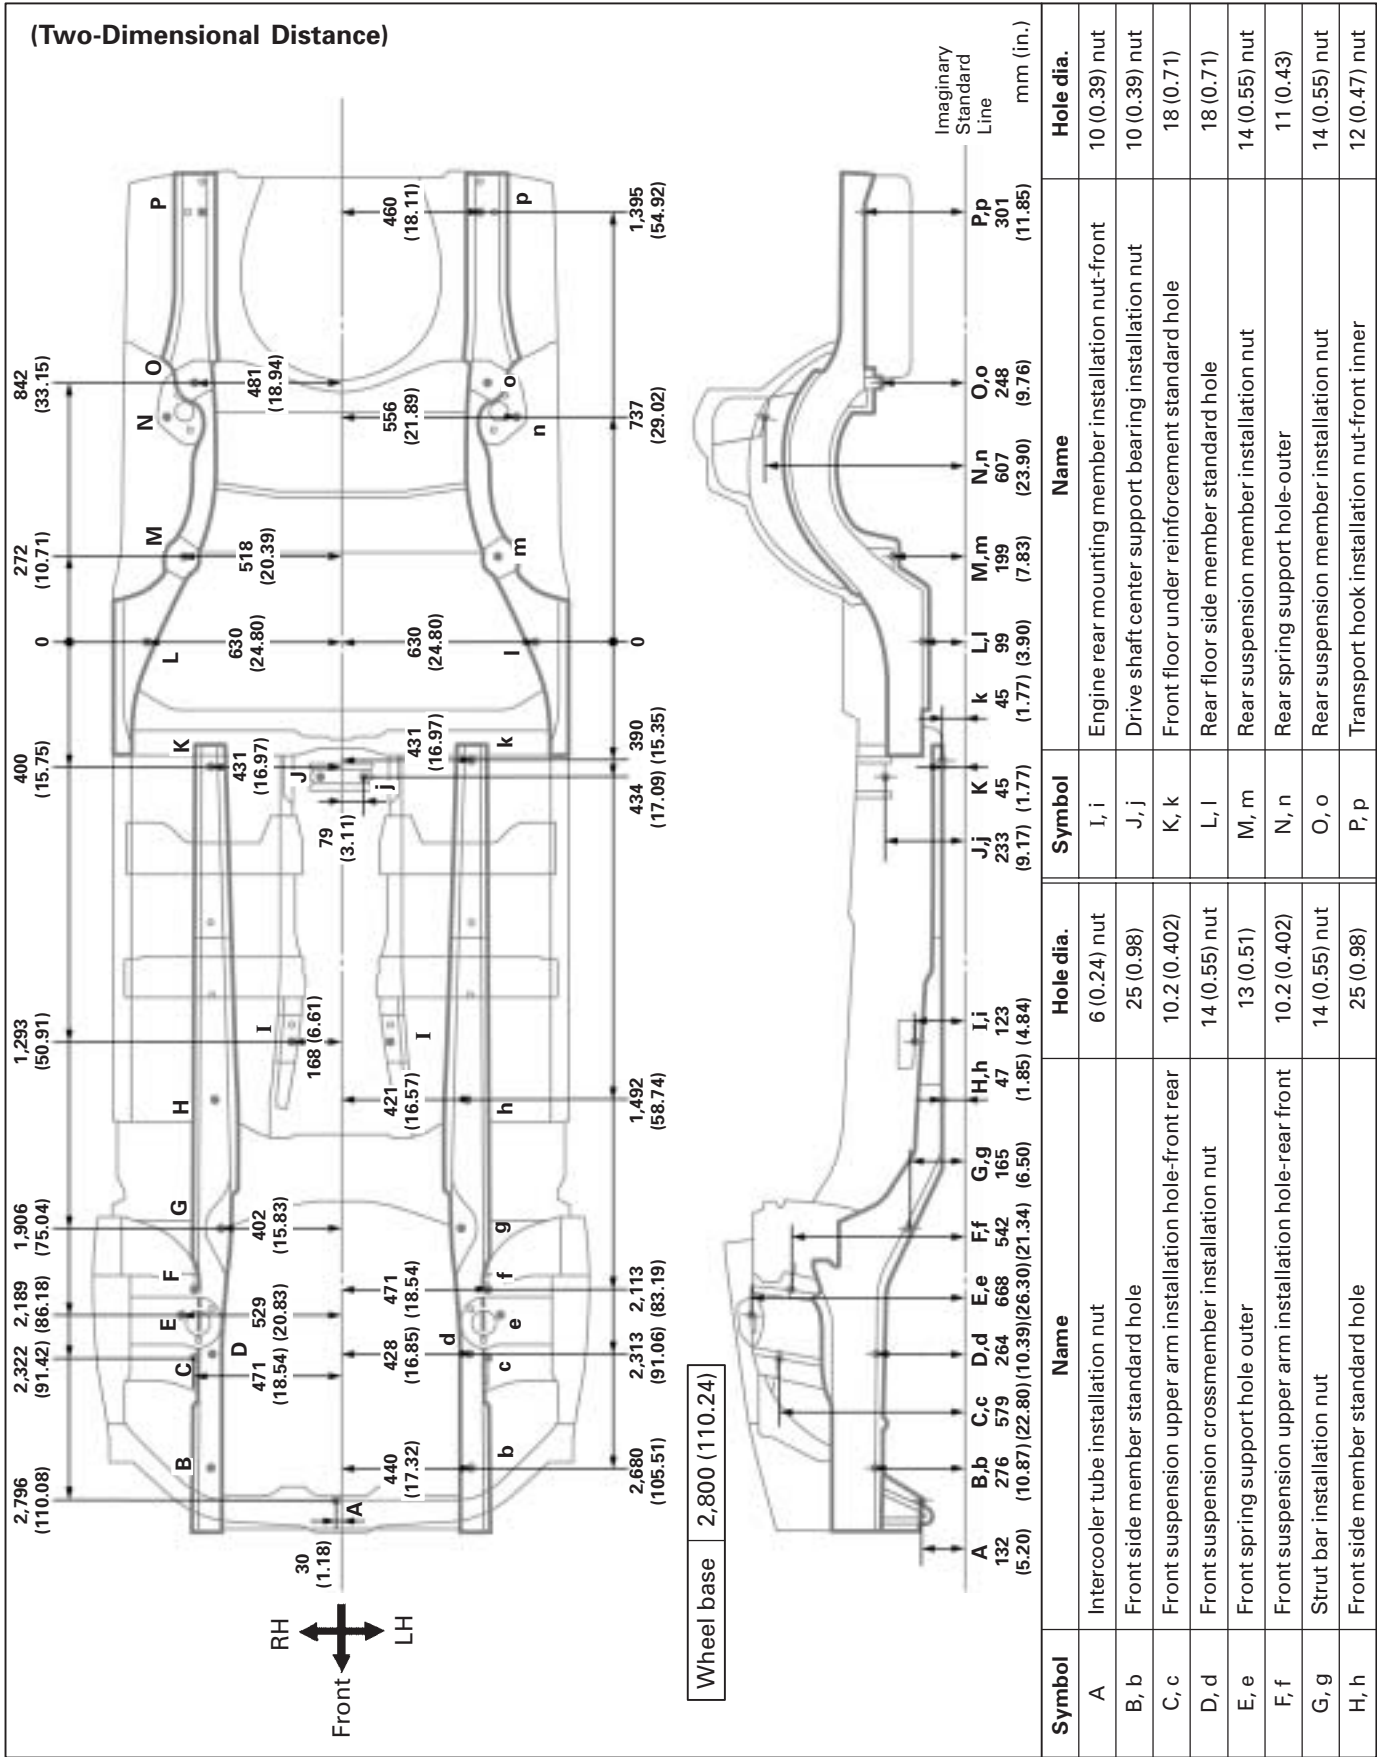


FRONT SUSPENSION CROSSMEMBER (LHD)

(Three-Dimensional Distance)

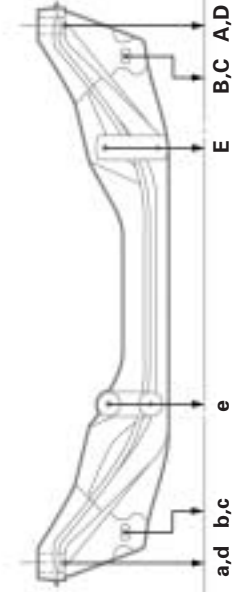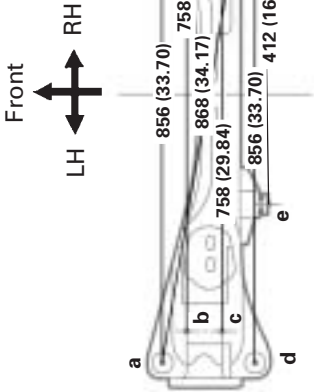


(Two-Dimensional Distance)

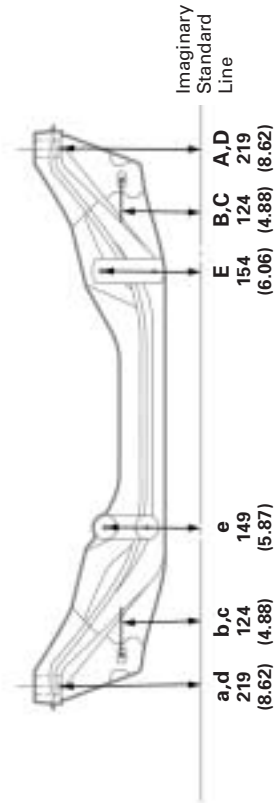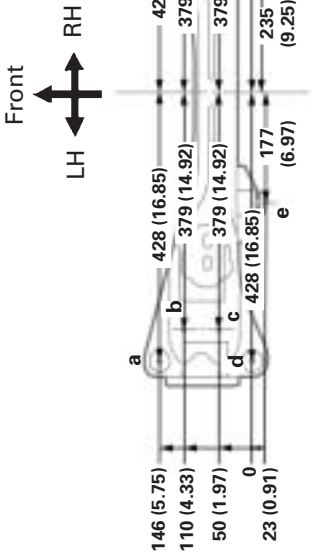




Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Front suspension crossmember installation hole-lower	18 (0.71)	D, d	Front suspension crossmember installation hole-lower	18 (0.71)
B, b	Lower arm installation hole-front	26.5 x 14.5 (1.043 x 0.571)	E, e	Steering gear box installation nut	12 (0.47) nut
C, c	Lower arm installation hole-rear	26.5 x 14.5 (1.043 x 0.571)	—	—	—

FRONT SUSPENSION CROSSMEMBER (RHD)

(Two-Dimensional Distance)

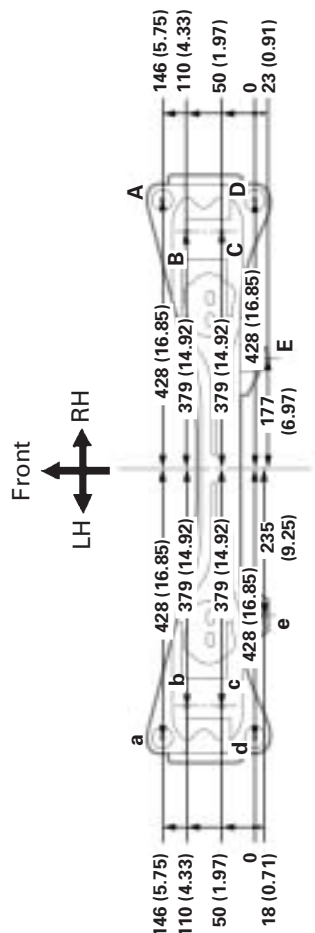


(Three-Dimensional Distance)

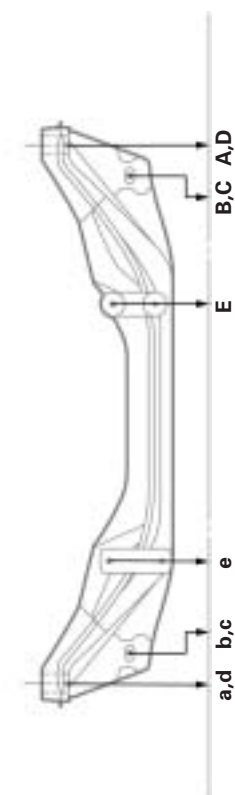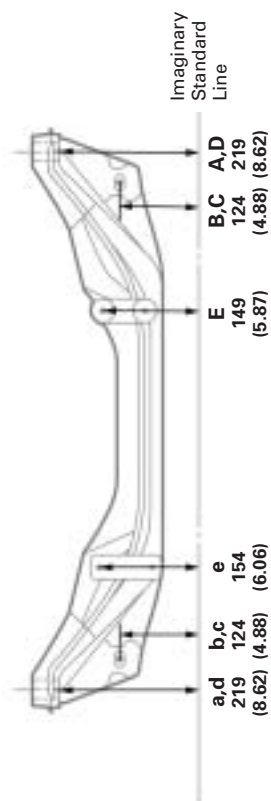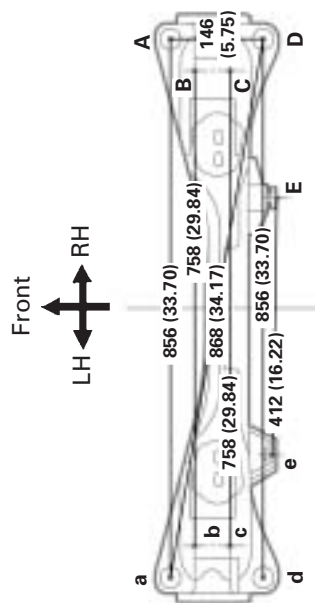




Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Front suspension crossmember installation hole-lower	18 (0.71)	D, d	Front suspension crossmember installation hole-lower	18 (0.71)
B, b	Lower arm installation hole-front	26.5 x 14.5 (1.043 x 0.571)	E, e	Steering gear box installation nut	12 (0.47) nut
C, c	Lower arm installation hole-rear	26.5 x 14.5 (1.043 x 0.571)	—	—	—

REAR SUSPENSION MEMBER

(Three-Dimensional Distance)

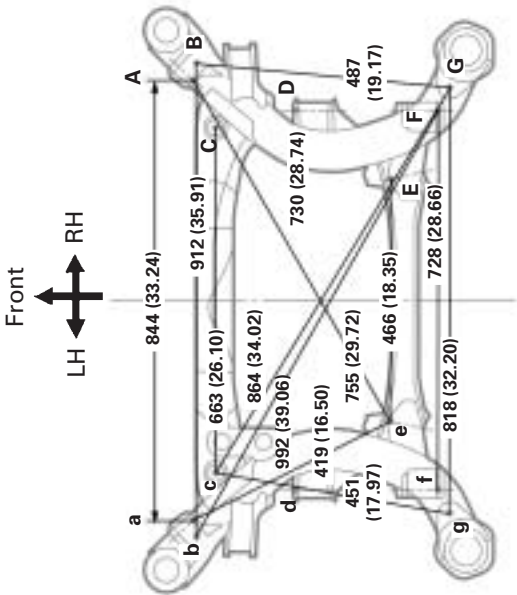

(Two-Dimensional Distance)

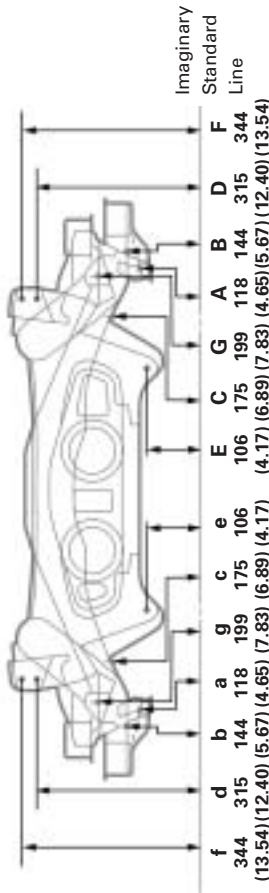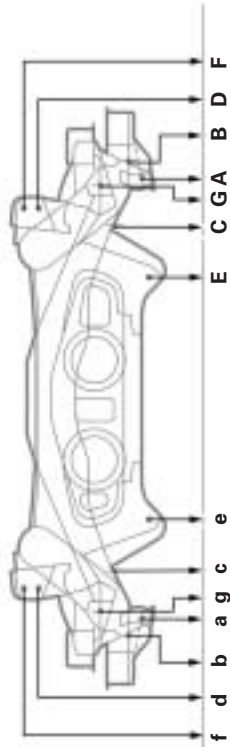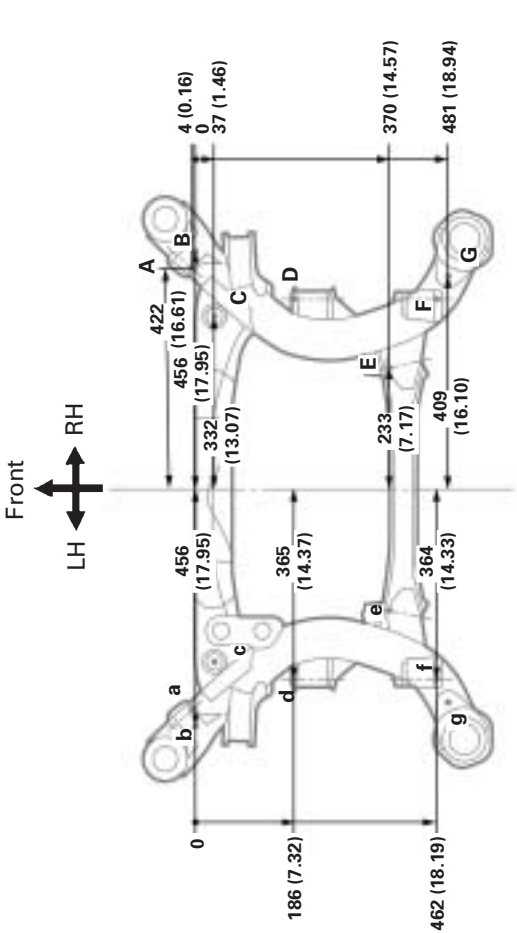

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Lower arm installation hole-rear	12.2 (0.480)	E, e	Lower arm installation hole-front	14.2 (0.559)
B, b	Rear suspension member standard hole	15 (0.59)	F, f	Upper arm installation hole-rear	12.2 (0.480)
C, c	Rear suspension member standard hole	15 (0.59)	G, g	Rear suspension member standard hole	15 (0.59)
D, d	Upper arm installation hole-front	12.2 (0.480)	—	—	—

