

I04043


INSPECTION

1. Ex. Australia Models:

INSPECT TURN SIGNAL SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Left turn	1 – 2	Continuity
Neutral	–	No continuity
Right turn	2 – 3	Continuity

If continuity is not as specified, replace the switch.

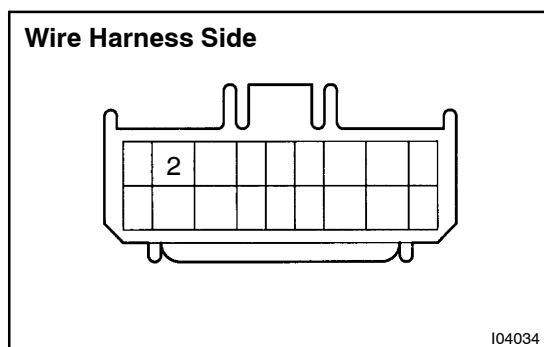

I04034

2. Ex. Australia Models:


INSPECT TURN SIGNAL SWITCH CIRCUIT

Connector disconnected:

Disconnect the connector from the combination switch and inspect the connector on the wire harness side, as shown.

Tester connection	Condition	Specified condition
2 – Ground	Constant	Continuity

If circuit is not as specified, inspect the wire harness.

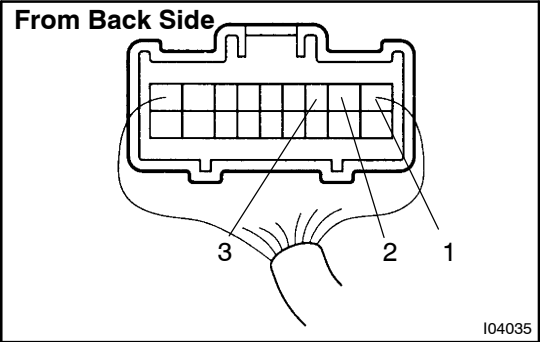


3. Ex. Australia Models:
INSPECT TURN SIGNAL SWITCH CIRCUIT
Connector connected:

Connect the wire harness side connector to the combination switch and inspect the connector form the back side, as shown.

Tester connection	Condition	Specified condition
2 – Ground	Ignition switch ON and turn signal switch Neutral	No voltage
1 – Ground	Ignition switch ON and turn signal switch Left	Battery positive voltage ↔ 0 V
3 – Ground	Ignition switch ON and turn signal switch Right	Battery positive voltage ↔ 0 V


If circuit is not as specified, inspect the circuits connected to other parts.

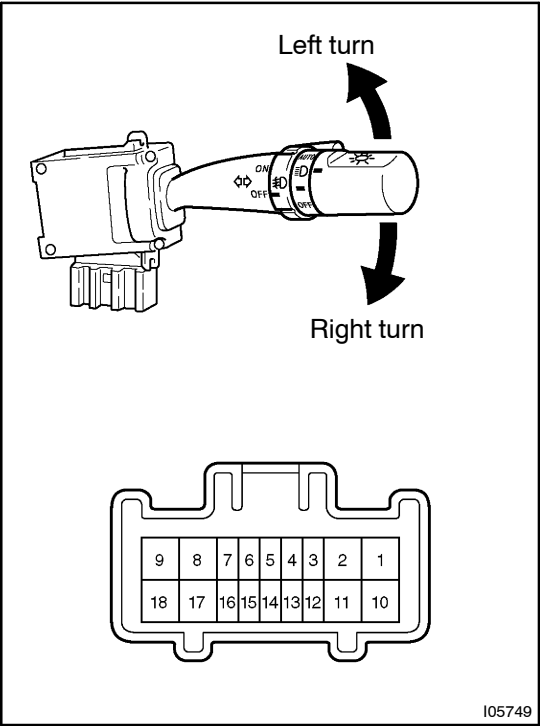

4. Australia Models:
INSPECT TURN SIGNAL SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Left turn	6 – 7	Continuity
Neutral	–	No continuity
Right turn	7 – 8	Continuity

If continuity is not as specified, replace the switch.

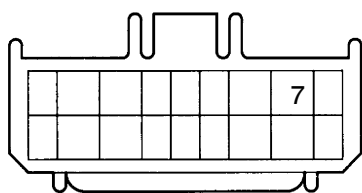Wire Harness Side


I04034

5. Australia Models:
INSPECT TURN SIGNAL SWITCH CIRCUIT
Connector disconnected:

Disconnect the connector from the combination switch and inspect the connector on the wire harness side, as shown.

Tester connection	Condition	Specified condition
7 – Ground	Constant	Continuity

If circuit is not as specified, inspect the wire harness.

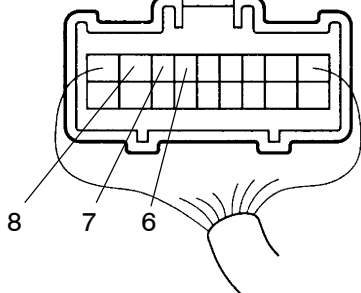From Back Side


I04035

6. Australia Models:
INSPECT TURN SIGNAL SWITCH CIRCUIT
Connector connected:

Connect the wire harness side connector to the combination switch and inspect the connector from the back side, as shown.

Tester connection	Condition	Specified condition
7 – Ground	Ignition switch ON and turn signal switch Neutral	No voltage
6 – Ground	Ignition switch ON and turn signal switch Left	Battery voltage \leftrightarrow 0 V
8 – Ground	Ignition switch ON and turn signal switch Right	Battery voltage \leftrightarrow 0 V

If circuit is not as specified, inspect the circuits connected to other parts.

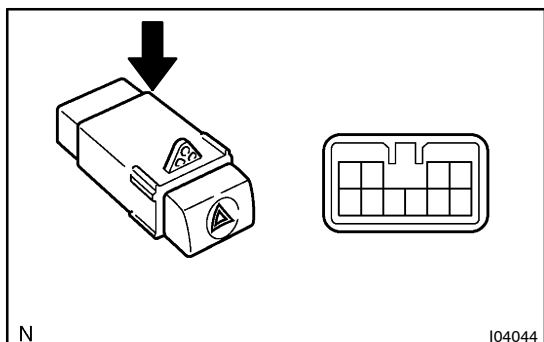


I04044

7. INSPECT HAZARD WARNING SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Switch OFF	7 – 10	Continuity
Switch ON	7 – 8	Continuity
Illumination circuit	2 – 3	Continuity

If continuity is not as specified, replace the switch.

Wire Harness Side

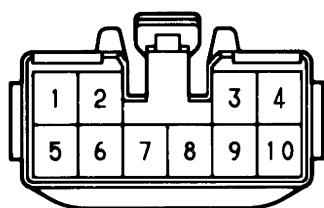

I04045


8. INSPECT HAZARD WARNING SWITCH CIRCUIT (See page DI-650)

Disconnect the switch connector and inspect the connection on the wire harness side, as shown.

Tester connection	Condition	Specified condition
8 – Ground	Constant	Continuity

If circuit is not as specified, inspect the circuits connected to other parts.

Wire Harness Side

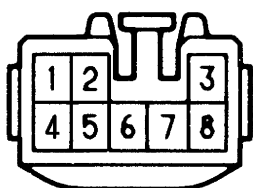

I04046

9. INSPECT TURN SIGNAL FLASHER CIRCUIT

Disconnect the connector from the combination switch and inspect the connector on the wire harness side, as shown.

Tester connection	Condition	Specified condition
2 – Ground	Constant	Continuity
3 – Ground	Constant	Continuity
5 – Ground	Turn signal switch RIGHT or OFF	No continuity
5 – Ground	Turn signal switch LEFT	Continuity
6 – Ground	Turn signal switch LEFT or OFF	No continuity
6 – Ground	Turn signal switch RIGHT	Continuity
7 – Ground	Constant	Continuity
8 – Ground	Hazard warning switch OFF	No continuity
8 – Ground	Hazard warning switch ON	Continuity
1 – Ground	Ignition switch LOCK or ACC	No voltage
1 – Ground	Ignition switch ON	Battery voltage
4 – Ground	Constant	Battery voltage

If circuit is as specified, replace the relay.

If circuit is not as specified, inspect the circuits connected to other parts.