


## CIRCUIT INSPECTION

### Power source circuit

### CIRCUIT DESCRIPTION

This circuit provides power to operate the body No.1 ECU.

### WIRING DIAGRAM

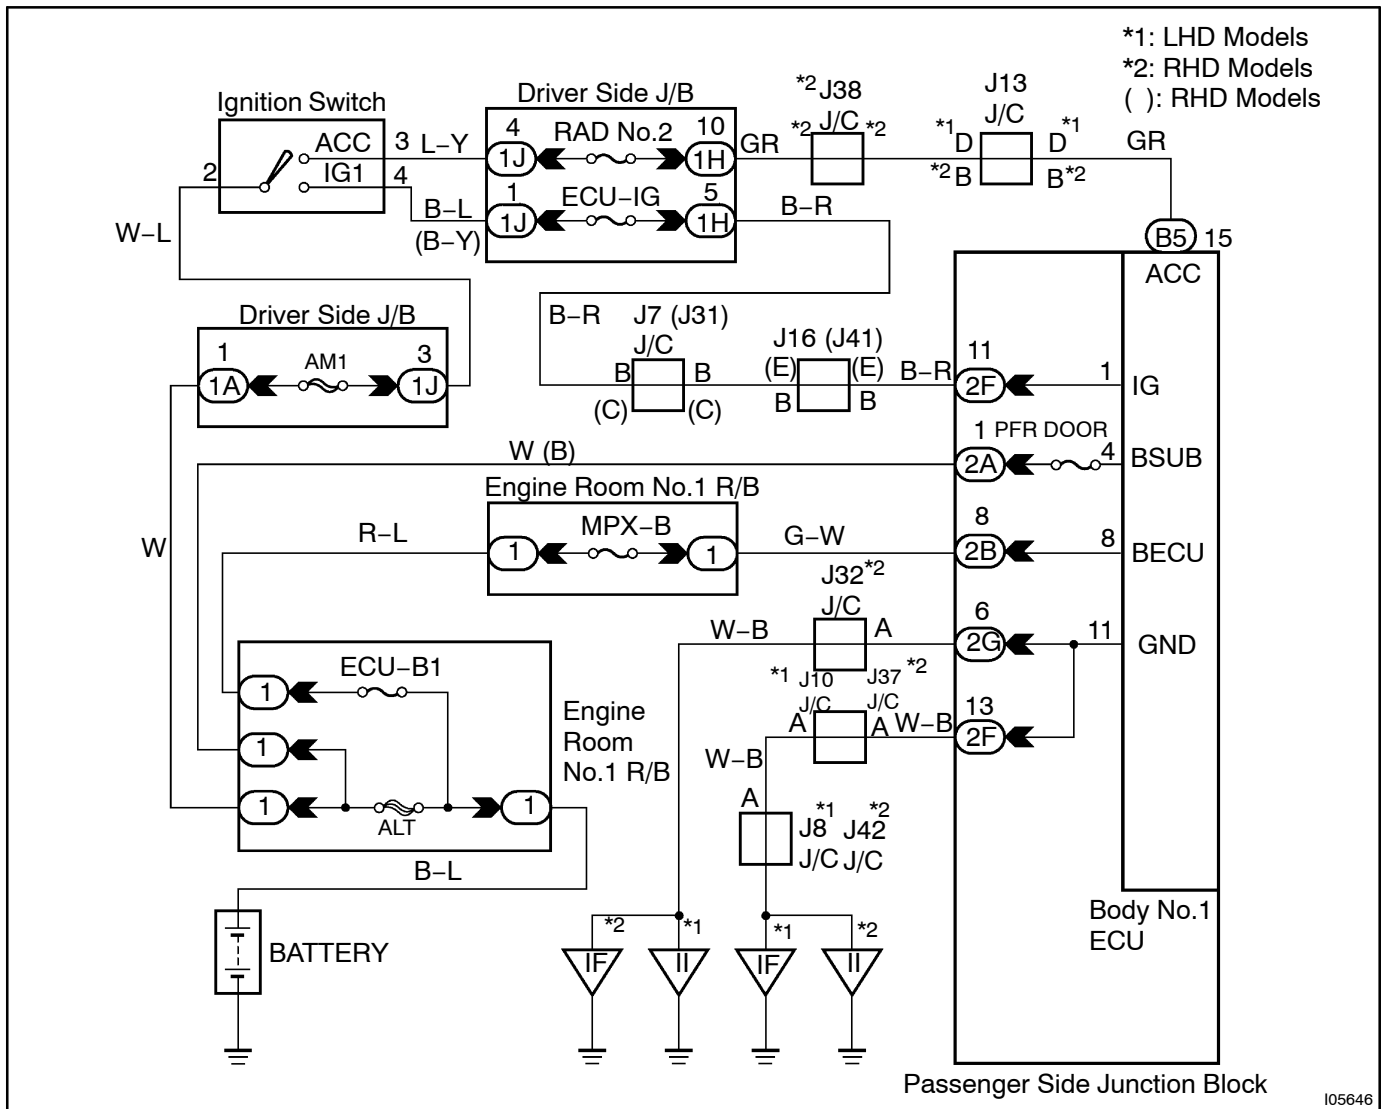

I05646

**INSPECTION PROCEDURE**

**1** Check MPX-B, RADIO No.2, DOOR (FL) and GAUGE fuse.

**CHECK:**

Check continuity of MPX-B, RADIO No.2, DOOR (FL), and GAUGE fuse.

**OK:**

Continuity

NG

Replace the failure fuse.

OK

**2** Check voltage between terminals BECU, BSUB, IG, and ACC and GND of body No.1 ECU connector.

**PREPARATION:**

(a) Turn ignition switch OFF.

(b) Disconnect the body No.1 ECU connector.

**CHECK:**

Measure voltage between terminals IG, ACC, and GND.

**OK:**

Voltage: 10 – 14V

OK

Proceed to next circuit inspection shown on matrix chart. (See page DI-616)

NG

**3** Check wireharness and connector between body No.1 ECU and body ground.

NG

Repair or replace wireharness or connector.

OK

Check and repair wireharness and connector between body No.1 ECU and battery.