


CIRCUIT INSPECTION

Power source circuit

CIRCUIT DESCRIPTION

This circuit provides power to operate the body No.2 ECU.

WIRING DIAGRAM

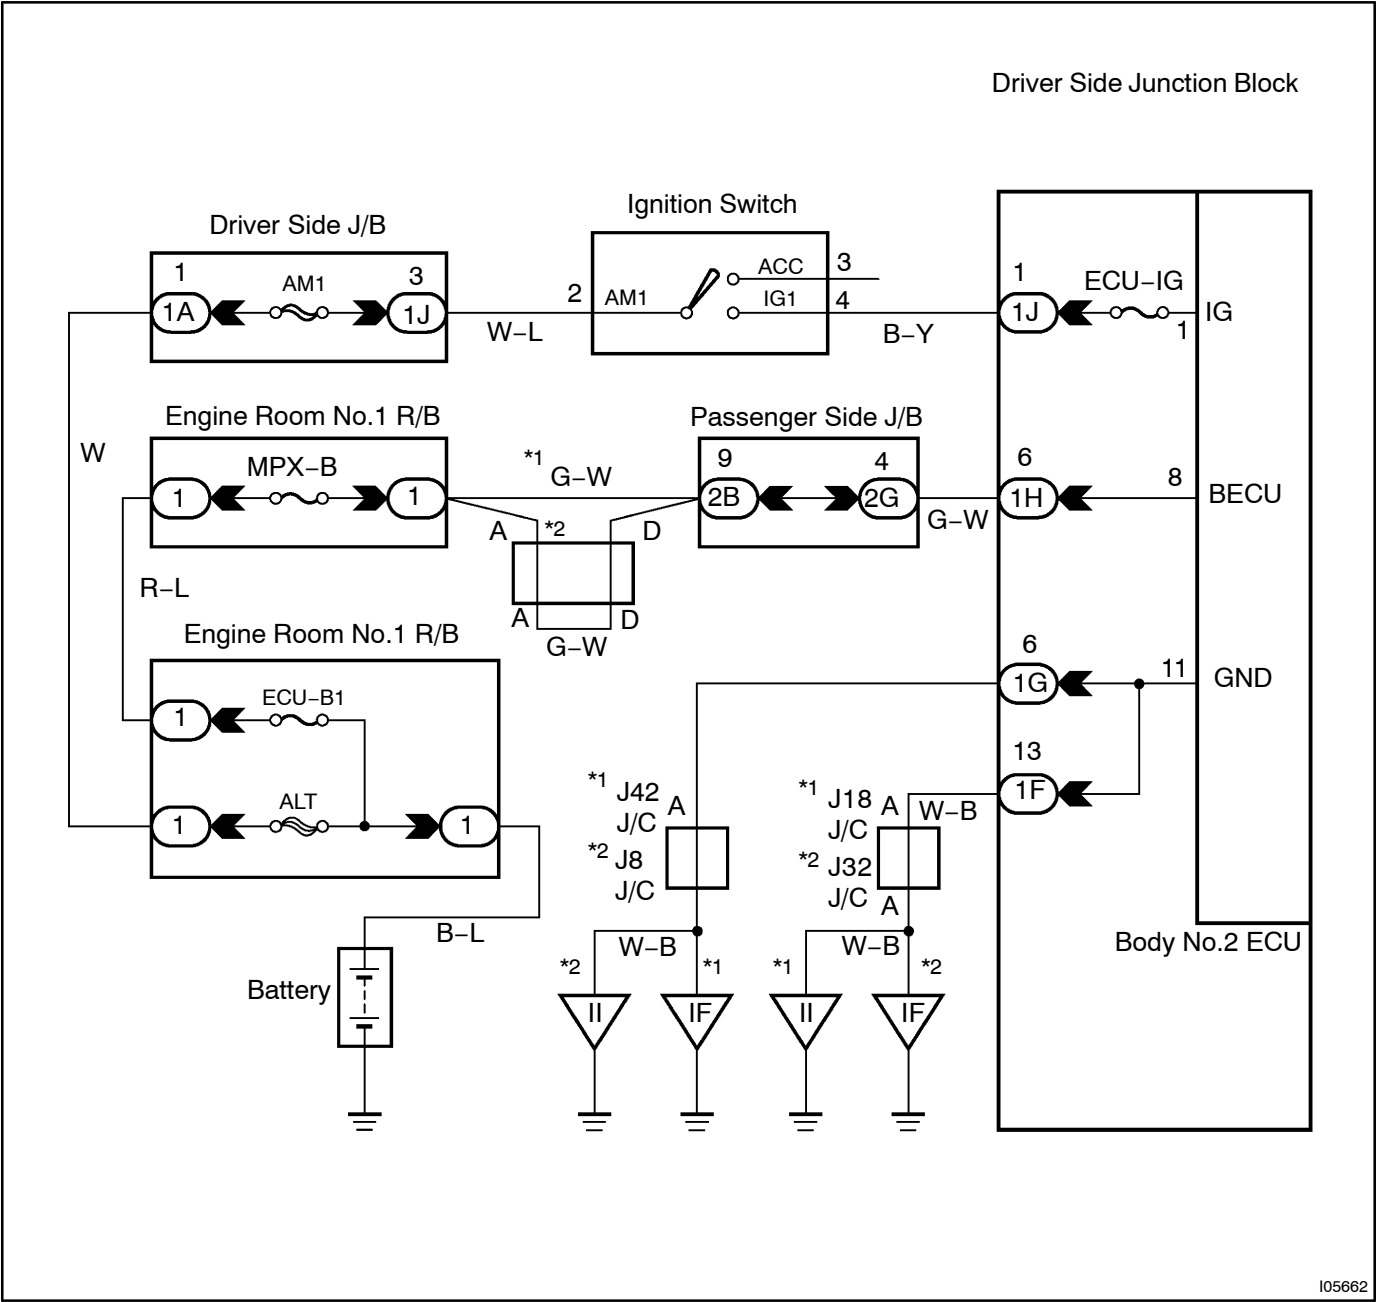

INSPECTION PROCEDURE**1 Check MPX-B and GAUGE fuse.****CHECK:**

Check continuity of MPX-B and GAUGE fuse.

OK:

Continuity

NG**Replace the failure fuse.****OK****2 Check voltage between terminals BECU, IG and GND of body No.2 ECU connector.****PREPARATION:**

Turn ignition switch ON.

CHECK:

Measure voltage between terminals IG and GND.

OK:**Voltage: 10 – 14V****PREPARATION:**

(a) Turn ignition switch OFF.

(b) Disconnect the body No.2 ECU connector.

CHECK:

Measure voltage between terminals BECU and GND.

OK:**Voltage: 10 – 14V****OK****Proceed to next circuit inspection shown on problem symptoms table (See page DI-660).****NG**

3**Check wireharness and connector between body No.2 ECU and body ground.****NG****Repair or replace wireharness or connector.****OK****Check and repair wireharness and connector
between body No.2 ECU and battery.**