

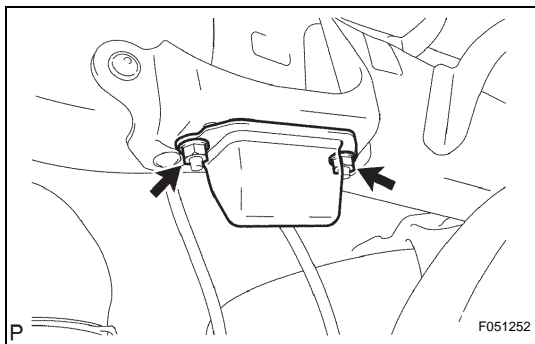
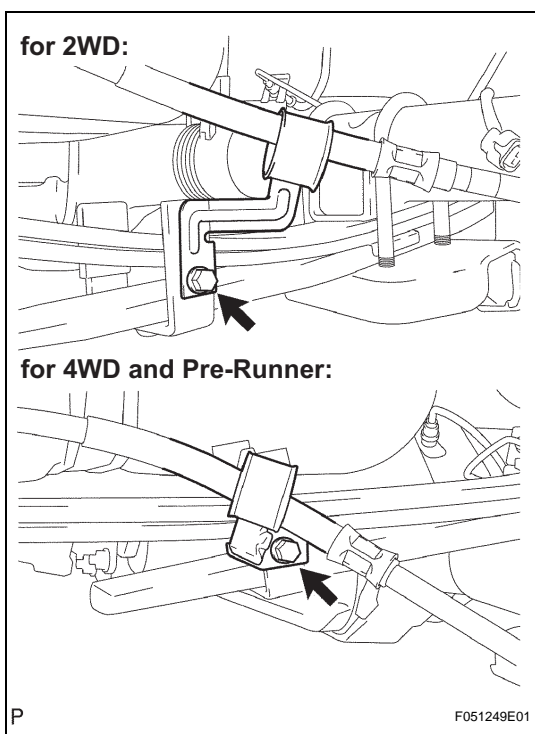


REMOVAL


1. REMOVE REAR WHEEL
2. REMOVE SPARE TIRE (for 4WD and Pre-Runner)
3. SEPARATE REAR SHOCK ABSORBER
 - (a) Support the rear axle housing.
 - (b) Remove the bolt, nut and washer.
 - (c) for 2WD:
 - (1) Separate the shock absorber from the rear spring seat.
 - (d) for 4WD and Pre-Runner:
 - (1) Separate the shock absorber from the rear axle housing.
4. SEPARATE PARKING BRAKE CABLE ASSEMBLY NO. 3
 - (a) Remove the bolt, then separate the parking brake cable.
5. REMOVE REAR SPRING BUMPER NO. 1 (for 2WD)
 - (a) Remove the 2 nuts and spring bumper.

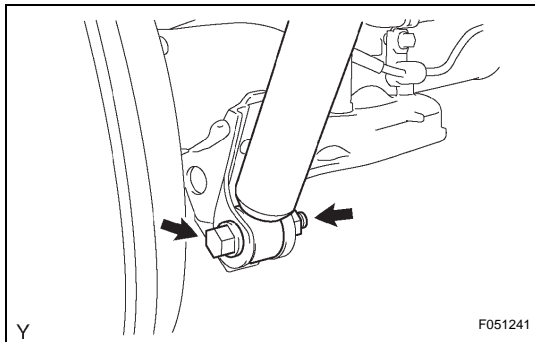

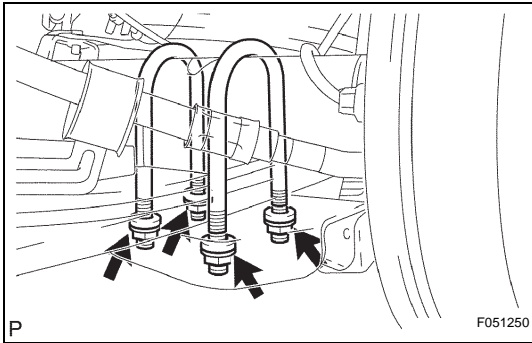


6. REMOVE REAR SPRING U BOLT (for 2WD)

- (a) Remove the 4 nuts and 4 washers.
- (b) Remove the spring seat and 2 U-bolts.

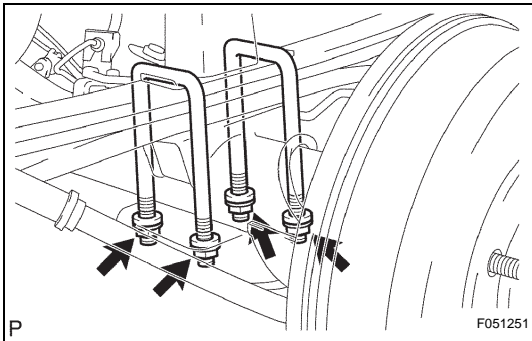


7. REMOVE REAR SPRING U BOLT (for 4WD and Pre-Runner)

- (a) Remove the 4 nuts and 4 washers.
- (b) Remove the spring seat and 2 U-bolts.
- (c) Remove the spring bumper.

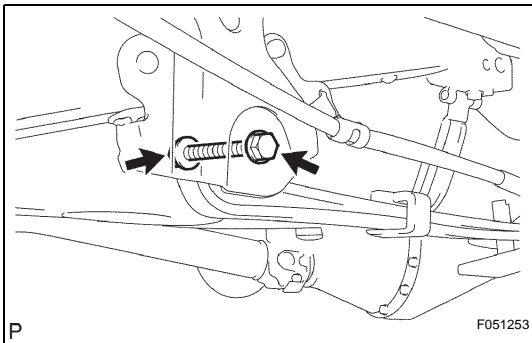

8. REMOVE REAR LEAF SPRING

- (a) Remove the nut, washer and through bolt.

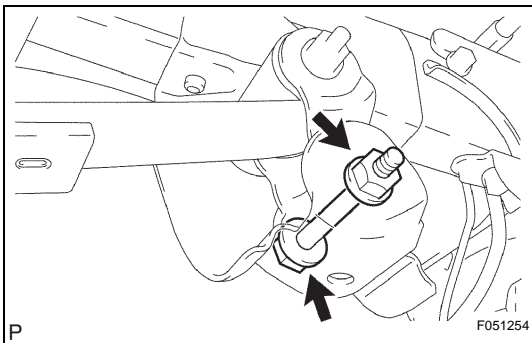


- (b) Remove the nut, washer and through bolt.

NOTICE:

Be careful not to drop the spring when removing the through bolt.

- (c) Remove the spring

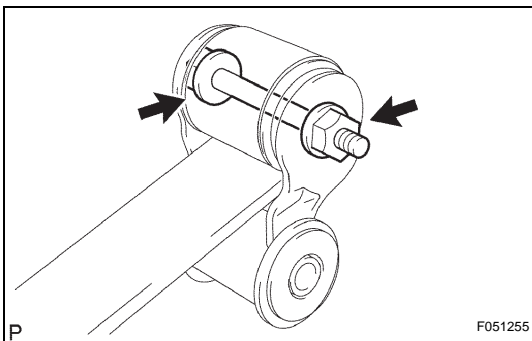

9. REMOVE REAR SPRING SHACKLE SUB-ASSEMBLY NO. 2

- (a) Remove the nut, washer, through bolt and shackle.