



## **Amlogic Buildroot Openlinux Release Note**

Revision V20180131

### **AMLOGIC, Inc.**

2518 Mission College Blvd,  
Suite 120, Santa Clara, CA 95054  
U.S.A.

[www.amlogic.com](http://www.amlogic.com)

AMLOGIC reserves the right to change any information described herein at any time without notice.  
AMLOGIC assumes no responsibility or liability from use of such information.

## Amlogic Openlinux Release Notes

### Revision History

Revision	Date	Author	Changes
V20170630	Jun 30, 2017	Peipeng Zhao	Alpha Release for Chip A113D/A113X
V20170731	July 31,2017	Peipeng Zhao	Beta Release for Chip A113D/A113X
V20170831	Aug 31,2017	Peipeng Zhao	MP Release for Chip A113D/A113X
V20171031	Oct 31,2017	Yuegui.He	MP Release for Chip A113D/A113X
V20180131	Jan 31,2018	Yuegui.He	20180131 MP Release for Chip A113D/A113X

# Amlogic Openlinux Release Notes

---

## Content

<b>1. Overview.....</b>	<b>4</b>
<b>2.Supported Boards.....</b>	<b>5</b>
<b>3.System Requirements .....</b>	<b>6</b>
<b>4. How to Get Code and Compile the System.....</b>	<b>7</b>
4.1 INTRODUCTION .....	7
4.2 HOW TO GET CODE .....	7
4.3 COMPILE THE SYSTEM .....	7
4.4 HOW TO UPGRADE.....	8
<b>5. A113D/A113X Audio Feature .....</b>	<b>11</b>
5.1 AUDIO FEATURE LIST .....	11
5.2 S400/S420 32 BIT ENABLE SPEAKER PROCESSING.....	11
<b>6.Test Reports.....</b>	<b>13</b>
<b>7. Change List.....</b>	<b>15</b>
<b>8. Known Issues.....</b>	<b>15</b>
<b>9. Player Software List.....</b>	<b>16</b>
<b>10. Supported Packages.....</b>	<b>16</b>
<b>11. Appendix A: Wi-Fi Configuration .....</b>	<b>19</b>
11.1 SDIO INTERFACE WI-FI ENABLING PROCEDURES .....	19
11.2 WEB-UI ENABLING WI-FI .....	20
11.3 APP ENABLING WI-FI .....	21
11.4 SMARTCONFIG ENABLING WI-FI (ONLY AP6255).....	22
<b>12. Appendix B: Audio Application.....</b>	<b>23</b>
<b>13. Appendix C: Upgrade.....</b>	<b>24</b>
<b>14. Appendix D: ADC Key.....</b>	<b>24</b>
<b>15. Appendix E: AVS Setup And Run Procedures.....</b>	<b>25</b>
<b>16. Appendix F: Debug.....</b>	<b>28</b>
<b>17. Appendix G: BT Source.....</b>	<b>28</b>
<b>18. Appendix H: SecureOs Version.....</b>	<b>28</b>

## 1. Overview

This document describes the packages and features that are supported in Amlogic A113D/A113X chips.

It includes:

- Supported Boards
- System Requirements
- How to Get Code and Compile the System
- A113D/A113X Audio Feature
- Test Reports
- Change List
- Known Issues
- Player Software List
- Supported Packages
- Appendix A: Wi-Fi Configuration
- Appendix B: Audio application
- Appendix C: Upgrade
- Appendix D: ADC key
- Appendix E: AVS Setup And Run Procedures
- Appendix F: Debug
- Appendix G: BT CONNECT
- Appendix H: SecurOs Version

## 2.Supported Boards

This chapter lists the reference boards that Amlogic currently supports.

Amlogic supports the following reference boards for Chip A113D and A113X, This section lists the features and peripherals for these boards.

### S400 Board:

● Amlogic A113D CPU
● 1G Bytes DDR4( <a href="#">K4A8G165WB-BCRC - 2400</a> )
● SDIO WiFi/BT (AP6255)
● ADC Key x 6
● USB 2.0 OTG
● SLC NAND 512M Bytes( <a href="#">MX30LF4G18AC</a> )
● SPDIF_IN/SPDIF_OUT
● UART Interface(RS232 & jtag)
● Audio Interface x 2(MIC_Connector & SPK_Connector)
● LINE_IN/LINE_OUT
● IR_IN/IR_OUT
● PCIE 2.0 Port x2(size:22mm x 30mm)
● MiPi Display Interface
● Gigabit Ethernet( <a href="#">RTL8211F-CG</a> )
● Power(12V-3A)

### S420 Board:

● Amlogic A113X CPU
● 512M Bytes DDR3( <a href="#">H5TC4G63CFR-RDC</a> )
● SDIO WiFi/BT (AP6356S)
● ADC Key x 6
● USB 2.0 OTG
● SLC NAND 512M Bytes( <a href="#">MX30LF4G18AC</a> )
● SPDIF_IN
● UART Interface
● Audio Interface x 2(MIC_Connector & SPK_Connector)
● LINE_IN/LINE_OUT
● IR_IN/IR_OUT
● Power(12V-3A)

### 3. System Requirements

Buildroot is designed to run on Linux systems. Please use 64bit Ubuntu 12.04 or 14.04 or 16.04 version.

While Buildroot itself will build most host packages it needs for the compilation, certain standard Linux utilities are expected to be already installed on the host system. Below you will find an overview of the mandatory

#### Mandatory packages

##### Build tools:

- Which
- sed
- make (version 3.81 or any later)
- binutils
- gcc (version 2.95 or any later)
- g++ (version 2.95 or any later)
- bash
- patch
- gzip
- bzip2
- perl (version 5.8.7 or any later)
- tar
- cpio
- python (version 2.6 or any later)
- unzip
- rsync
- file
- Bc
- Texinfo
- libmpc.so.2
- git

##### Source fetching tools:

- wget

# 4. How to Get Code and Compile the System

## 4.1 Introduction

This document provides the openlinux notes for Amlogic buildroot reference source code release running on Amlogic reference hardware. To obtain Amlogic Buildroot reference source code, you will need to have an account to access Amlogic GIT source code repository.

## 4.2 How to Get Code

You can download Buildroot source code by running the following repo commands:

```
If customer is IN China, please use the following method to download code.
$ cd ~/<your-buildroot-repo-dir>/
$ repo init -u ssh://git@openlinux.amlogic.com/buildroot-audio/linux/manifest.git
-b buildroot-openlinux --repo-url=ssh://git@openlinux.amlogic.com/repo.git
$ repo init -m 20180131.xml
$ repo sync

If customer is NOT IN China, please use the following method to download code.
$ cd ~/<your-buildroot-repo-dir>/
$ repo init -u ssh://git@openlinux2.amlogic.com/buildroot-audio/linux/manifest.git
-b buildroot-openlinux --repo-url=ssh://git@openlinux2.amlogic.com/repo.git
$ repo init -m 20180131.xml
$ repo sync
```

## 4.3 Compile the System

We use repo tool to manage the source code. Previous tar package are still existed, but tar package is not a efficient source code management.

Compilation:

```
$ source buildroot/build/setenv.sh
You're building on Linux
Lunch menu...pick a combo:
1. mesonaxg_s400_32_release
2. mesonaxg_s400_32_debug
3. mesonaxg_s400_debug
4. mesonaxg_s400_release
5. mesonaxg_s400_32_emmc
6. mesonaxg_s400_emmc
7. mesonaxg_s420_32_debug
8. mesonaxg_s420_32_release
9. mesonaxg_s420_debug
10. mesonaxg_s420_release
```

## Amlogic Openlinux Release Notes

---

Which would you like? [Choice Number]

\$ make

Note: Do not use make -jN here as Buildroot does not support top-level parallel make. This does not mean that Buildroot does not support parallel compilation, but just that it will handle this inside the Buildroot compilation system.

### 4.4 How to Upgrade

There are 4 ways for update.

- **Upgrade with USB\_Burning\_Tool ,using latest version 2.1.2,include this version.**

1. Copy aml\_upgrade\_package.img to your PC.
2. Install the usb device driver for the board and usb burning tool on your PC.
3. Connect the USB cable between PC and board.
4. With uboot burned on your platform, under uboot command line mode,execute "update", then enter usb burning mode.  
# update
5. When the status shows connection is successful, import the aml\_upgrade\_package.img.
6. Press the start button, then aml\_upgrade\_package.img will be flashed on the board.
7. When the status shows flashing is successful, unplug the USB cable and reboot.

System will boot up with kernel and root filesystem on NAND.

- **Single image burn with Flash disk**

- 1). Flash disk with one partition in vfat format
- 2). Copy u-boot.bin, dtb.img,boot.img, rootfs.ubi to Flash disk
- 3).Insert Flash disk into your platform and reboot into uboot.
- 4).Uboot burn:  
#usb\_update bootloader u-boot.bin  
#reset
- 5).dtb.img burn:  
#usb\_update \_aml\_dtb dtb.img  
#reset
- 6).Kernel burn:  
#nand erase.part boot  
#usb\_update boot boot.img  
#reset
- 7).Rootfs burn  
#nand erase.part system  
#usb\_update system rootfs.ubi  
#reset

- **Using update command to single image burn with PC, support Linux version and Windows version**

Mainly Related Informations:

Windows OS : update.exe:

Windows version of the update tool, it's command line mode so need be called at Windows' shell cmd.exe.

Linux OS : Aml\_usb\_update\_tool\_4\_ubuntu.zip:



## Amlogic Openlinux Release Notes

Linux version of this update tool, only 64-bit binary is provided, can be called at Ubuntu shell terminal.

1). Copy u-boot.bin dtb.img boot.img rootfs.ubi to PC disk

2).Uboot burn:

Windows:

#update.exe partition bootloader u-boot.bin

#update.exe bulkcmd "reset"

Ubuntu:

#update partition bootloader u-boot.bin

#update bulkcmd "reset"

3).dtb.img burn:

Windows:

#update.exe partition \_aml\_dtb dtb.img

#update.exe bulkcmd "reset"

Ubuntu:

#update partition \_aml\_dtb dtb.img

#update bulkcmd "reset"

4).Kernel burn:

Windows:

#update.exe partition boot boot.img

#update.exe bulkcmd "reset"

Ubuntu:

#update partition boot boot.img

#update bulkcmd "reset"

5).Rootfs burn

Windows:

#update.exe partition system rootfs.ubi

#update.exe bulkcmd "reset"

Ubuntu:

#update partition system rootfs.ubi

#update bulkcmd "reset"

- **Single image burn by fastboot**

1) usb link pc & board

2) under uboot command,enter fastboot mode

#fastboot

3) pc cmd burn single image by fastboot

Windows:

(1) Bootloader burn:

fastboot erase bootloader

fastboot flash bootloader u-boot.bin.usb.bl2

fastboot erase tpl

fastboot flash tpl u-boot.bin.usb.tpl

(2) kernel burn:

fastboot erase boot

fastboot flash boot boot.img

(3) rootfs burn:

fastboot erase system

fastboot flash system rootfs.ubi

## Amlogic Openlinux Release Notes

---

(4) dtb burn:  
fastboot erase dtb  
fastboot flash dtb dtb.img

If you want to get more detail information, please check with your Amlogic Sales/Technical support window for latest document “Amlogic Update USB Tool User Guide”.

## 5. A113D/A113X Audio Feature

### 5.1 audio Feature list

Module	Feature Description	Status
TDM in	i2s/pcm mode	Verified
	different bit number	16,24,32 bit verified
	different channel number	2~16 channels verified
	different sample rate	8K~192K verified
TDM out	i2s/pcm mode	Verified
	different bit number	16,24,32 bit verified
	different channel number	2~16 channels verified
	different sample rate	8K ~192K verified
S/PDIF in	different sample rate	22K ~ 192K verified
	different bit number	16, 24,32 bit verified
S/PDIFout	different sample rate	22K ~ 192K verified
	different bit number	16,24,32 bit verified
PDM IN	different bit number	16,24,32 bit Verified
	different channel bit	1,2,4,8 channels
	different sample rate	8K ~ 48K verified

**Note: audio change : input & output clk same source for avs.**

**Note: if you need develop not avs product ,you need change input & output clk.**


### 5.2 S400/S420 32 bit enable speaker processing

The speaker processing module is designed as a daemon running outside of players, To add additional processing onto audio output data, it send player output data to a loopback device(aloop) instead of real speaker hardware device, and the Speaker Processing module get data from the other end of the loopback devices, do some linearity turning and then send back hardware device.

The Loopback device is provided by the Generic loopback driver, to enable this device, need enable CONFIG\_SND\_ALOOP in kernel config.

S400\_32 / S420\_32 Audio path look like:

## Amlogic Openlinux Release Notes

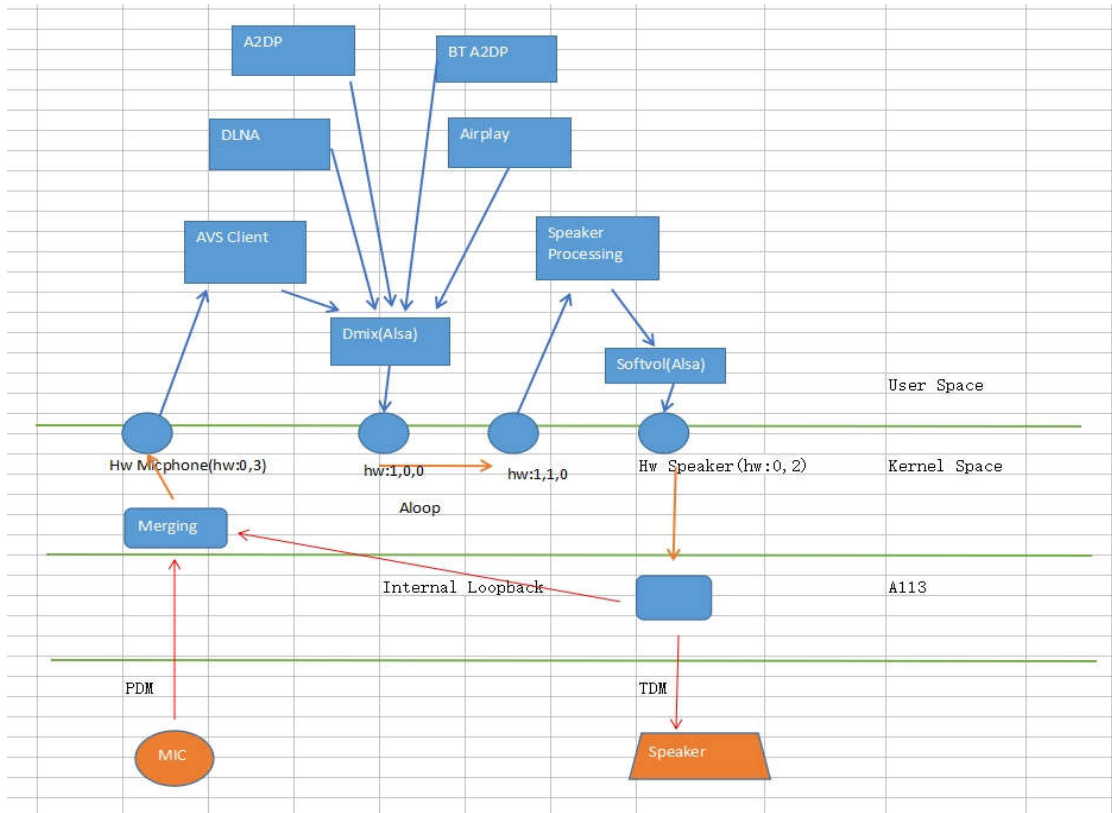

## 6.Test Reports

### Functional Test

name	test case	module case	detail	status
USB OTG		inserted or not		pass
		read		pass
		write		pass
Alsaplayer		wav		pass
		mp3		pass
		flac		pass
		ogg		pass
W-iFi	SDIO	wifi driver		pass
		wifi connected		pass
		wifi ping		pass
		wifi throughput		pass
	PCIE	wifi driver		pass
		wifi connected		pass
		wifi ping		pass
		wifi throughput		pass
BT		bt connected		pass
		send file		pass
		A2DP		pass
Multi Bootloader	BL2	erase	1~7	pass
		bad data	1~7	pass
		half ture data	1~3	pass
	TPL	erase	1~3	pass
		bad data	1~3	pass
		half ture data	1~3	pass
Ethernet		Ethernet connected		pass
		Ethernet ping		pass
		Ethernet throughput		pass
Display	OSD+GE2D	768x1024		pass
		256x256		pass
		1920x1080		pass
	MiPi	lit LCD		pass

## Amlogic Openlinux Release Notes

	QT+DirectFB	QT test		pass
<b>Airplay</b>	shairprot-sync	play/pause		pass
		Pre song/next song		pass
		Volume control		pass
		Device identification		pass
		Play music fluncy		pass
<b>DLNA</b>		play/pause		pass
		Pre song/next song		pass
		Volume control		pass
		Device identification		pass
		Play music fluncy		pass
<b>UART</b>		Mutli transmission rate		pass
<b>ADC_KEY</b>		6 keys		pass
<b>SPDIF</b>	IN/OUT	Mutli sample rate		pass
<b>Line in/out</b>		Mutli sample rate Mutli bit number		pass
<b>ADB</b>				pass
<b>RNDIS</b>				pass
<b>FASTBOOT</b>				pass
<b>OTA</b>				pass
<b>SecureOs</b>				pass
<b>SecureBoot</b>				pass
<b>AVS</b>  <b>loopback</b> <b>Web-ui</b>  <b>Display card</b> <b>pulseaudio</b>	account setup			pass
	Light Animation			pass
	Normal function			pass
				pass
	Wifi setting			pass
	spotify			pass
	OTA			pass
				pass
				pass

If you want to get more detail information, please check with your Amlogic Sales/Technical support window for latest test reports.

### 7. Change List

- 1) WiFi-BT:
  - \*Support WiFi setup via BLE(alpha version)
  - \*Support Bluetooth A2DP source profile(alpha version)
  - \*Support ap6398 & 8723bs
  - \*Support WiFi smartconfig(AP6255)
- 2) USB:
  - \*Add mass storage function
  - \*Fix ADB error when USB hotplug
- 3) AVS:
  - \*Optimize AVS companion APP
  - \*Support AVS display cards features(s400), More details refs to <https://developer.amazon.com/docs/alexa-voice-service/display-cards-tablets.html>
  - \*AVS device SDK up to 1.4.0, More details refs to <https://github.com/alexa/avs-device-sdk>
  - \*Support avs recognize the voice direction
  - \*Support adc key Mute & tap avs
  - \*Version has a 30-second start-up time and 1 hour timeout
  - \*Sensory library will time out on 2/28/2019
- 4) web\_ui: Add Web\_ui record function
- 5) OTA(swupdate):
  - \*Support update ext4 filesystem
  - \*Support a/b system update
- 6) Optimize system boot up speed
- 7) Re-define pinmux with the same format (more detail refs to: **Amlogic A113 GPIO Pinctrl User Manual V0.4 20180110.pdf**)
  - \*Update pinmux define name
  - \*The same pin no longer support the bilateral detection along the interrupt
  - \*GPIO ID update
- 8) Audio
  - \*Support audio codec es7243 driver
  - \*Support PDM resume function
  - \*External loopback
- 9) Kernel
  - \*Add headphone detect function
  - \*Fix auto suspend & resume because of RTC bug
- 10) LED light ring
  - \*Add LED Ring driver
  - \*Support Different ways of flashing lights
  - \*LED light animation HAL

### 8. Known Issues

- \*SPDIF IN noise
- \*BT Not Support Suspend and Resume
- \*WiFi Not Support Suspend and Resume
- \*BT Source Unstable

### 9. Player Software List

- 1) aplay ,only support wav audio format.
- 2) alsaplayer, support mp3, ogg, flac and wav 4 audio formats.
- 3) Gstreamer1, support audio and video function, support mp3,flac and wav 3 audio format.
- 4) Airplay play music (Shairport), iOS version 9.3.2, 10.3.2.
- 5) DLNA play music (MediaRendererTest)
- 6) Spotify play music (Librespot)
- 7) VLC play music, support mp3, ogg, flac and wav 4 audio formats. (format: cvlc --alsa-audio-device default \*.wav/\*.ogg/\*.flac/\*.mp3)

### 10. Supported Packages

Amlogic adopts Buildroot as package management system. See <http://buildroot.org/> for more details on how it works.

List of Supported Package

Package	Version	Description
alsa-lib	1.1.3	ALSA User space library. See <a href="http://www.alsa-project.org/">http://www.alsa-project.org/</a>
alsa-utils	1.1.3	Command line utilities for the ALSA. See <a href="http://www.alsa-project.org/">http://www.alsa-project.org/</a>
boost	1.61.0	Set of libraries for C++. See <a href="http://www.boost.org/">http://www.boost.org/</a>
brcmap6xxx		Broadcom wifi driver
busybox	1.26.2	Tiny versions of many common UNIX utilities. See <a href="http://www.busybox.net/">http://www.busybox.net/</a>
bzip2	1.0.6	Bzip compression utility. See <a href="http://www.bzip.org/">http://www.bzip.org/</a>
cairo	1.14.8	2D graphics library. See <a href="http://cairographics.org">http://cairographics.org</a>
cjson	1.2.1	ANSI-C compliant JSON parser. See <a href="http://sourceforge.net/projects/cjson/">http://sourceforge.net/projects/cjson/</a>
dbus	1.10.16	Message bus system. See <a href="http://www.freedesktop.org/wiki/Software/dbus/">http://www.freedesktop.org/wiki/Software/dbus/</a>
dhcpcd	6.11.5	DHCP client daemon. See <a href="http://roy.marples.name/projects/dhcpcd/wiki">http://roy.marples.name/projects/dhcpcd/wiki</a>
directfb	1.7.7	Graphics library. See <a href="http://www.directfb.org/">http://www.directfb.org/</a>
dnsmasq	2.76	Network utility. See <a href="http://www.thekelleys.org.uk/dnsmasq/doc.html">http://www.thekelleys.org.uk/dnsmasq/doc.html</a>
e2fsprogs	1.43.3	Filesystem utilities for use with the ext2/3/4 filesystem. See <a href="http://e2fsprogs.sourceforge.net/">http://e2fsprogs.sourceforge.net/</a>
expat	2.2.0	Library for parsing XML written in C. See <a href="http://expat.sourceforge.net/">http://expat.sourceforge.net/</a>
fbdump	0.4.2	Tools to captures the contents of framebuffer device. See <a href="http://www.rcdrummond.net/fbdump/">http://www.rcdrummond.net/fbdump/</a>



## Amlogic Openlinux Release Notes

fbgrab	1.3	Framebuffer screenshot program. See <a href="http://freecode.com/projects/fbgrab">http://freecode.com/projects/fbgrab</a>
fbset	2.1	Fbset. See <a href="http://users.telenet.be/geertu/Linux/fbdev/">http://users.telenet.be/geertu/Linux/fbdev/</a>
fbterm	1.7.0	Framebuffer based terminal emulator. See <a href="http://code.google.com/p/fbterm/">http://code.google.com/p/fbterm/</a>
fb-test-app	rosetta-1.1.0	Test suite for Linux framebuffer. See <a href="https://github.com/prpplague/fb-test-app">https://github.com/prpplague/fb-test-app</a>
fontconfig	2.12.1	Font configuration and customization library. See <a href="http://www.freedesktop.org/wiki/Software/fontconfig/">http://www.freedesktop.org/wiki/Software/fontconfig/</a>
freetype	2.7.1	Fonts rendering library. See <a href="http://www.freetype.org">http://www.freetype.org</a>
gdb	7.10.1	GNU debugger. See <a href="https://www.gnu.org/software/gdb/">https://www.gnu.org/software/gdb/</a>
gmp	6.1.2	Library for arbitrary precision arithmetic. See <a href="https://gmplib.org/">https://gmplib.org/</a>
gnutls	3.5.8	Transport Layer Security Library. See <a href="http://www.gnutls.org/">http://www.gnutls.org/</a>
gst1-plugins-bad	1.10.4	Gstreamer bad set. See <a href="http://gstreamer.freedesktop.org/modules/gst-plugins-bad.html">http://gstreamer.freedesktop.org/modules/gst-plugins-bad.html</a>
gst1-plugins-base	1.10.4	See <a href="http://gstreamer.freedesktop.org/modules/gst-plugins-base.html">http://gstreamer.freedesktop.org/modules/gst-plugins-base.html</a>
gst1-plugins-good	1.10.4	See <a href="http://gstreamer.freedesktop.org/modules/gst-plugins-good.html">http://gstreamer.freedesktop.org/modules/gst-plugins-good.html</a>
gst1-plugins-ugly	1.10.4	See <a href="http://gstreamer.freedesktop.org/modules/gst-plugins-ugly.html">http://gstreamer.freedesktop.org/modules/gst-plugins-ugly.html</a>
gstreamer1	1.10.4	Gstreamer. See <a href="http://gstreamer.freedesktop.org/">http://gstreamer.freedesktop.org/</a>
harfbuzz	1.4.2	Opentext shaping engine. See <a href="http://www.freedesktop.org/wiki/Software/HarfBuzz/">http://www.freedesktop.org/wiki/Software/HarfBuzz/</a>
icu	58.2	International Components for Unicode. See <a href="http://site.icu-project.org/">http://site.icu-project.org/</a>
iw	4.9	nl80211 based utility for wireless devices. See <a href="http://wireless.kernel.org/en/users/Documentation/iw">http://wireless.kernel.org/en/users/Documentation/iw</a>
kmod	23	Kernel module tools. See <a href="https://www.kernel.org/pub/linux/utils/kernel/kmod/">https://www.kernel.org/pub/linux/utils/kernel/kmod/</a>
libcurl	7.53.0	Multiprotocol file transfer library. See <a href="http://c-ares.haxx.se/">http://c-ares.haxx.se/</a>
liberation	2.00.1	Font. See <a href="http://www.fedorahosted.org/releases/l/i/liberation-fonts">http://www.fedorahosted.org/releases/l/i/liberation-fonts</a>
libevent	2.1.8-stable	Signaling events. See <a href="http://libevent.org/">http://libevent.org/</a>
libffi	3.2.1	Event notification library. See <a href="http://libevent.org/">http://libevent.org/</a>
libglib2	2.50	See <a href="https://developer.gnome.org/glib/">https://developer.gnome.org/glib/</a>
libid3tag	0.15.1b	See <a href="http://sourceforge.net/projects/mad/files/libid3tag/">http://sourceforge.net/projects/mad/files/libid3tag/</a>
libjpeg	9b	Jpeg library. See <a href="http://libjpeg.sourceforge.net/">http://libjpeg.sourceforge.net/</a>
libmad	0.15.1b	MPEG audio decoder. See <a href="http://sourceforge.net/projects/mad/">http://sourceforge.net/projects/mad/</a>
libnl	3.2.27	Libraries for netlink protocol. See

## Amlogic Openlinux Release Notes

		<a href="http://www.infradead.org/~tgr/libnl/doc/api/">http://www.infradead.org/~tgr/libnl/doc/api/</a>
libogg	1.3.2	Ogg container. See <a href="https://xiph.org/ogg/">https://xiph.org/ogg/</a>
libpng	1.6.28	PNG reference library. See <a href="http://www.libpng.org/pub/png/libpng.html">http://www.libpng.org/pub/png/libpng.html</a>
libsamplerate	0.1.8	Sample rate converter. See <a href="http://www.mega-nerd.com/SRC/">http://www.mega-nerd.com/SRC/</a>
libtasn1	4.9	ASN.1 library. See <a href="https://www.gnu.org/software/libtasn1/">https://www.gnu.org/software/libtasn1/</a>
libxml2	2.9.4	XML toolkit. See <a href="http://xmlsoft.org/">http://xmlsoft.org/</a>
libxslt	1.1.29	XSLT support for libxml2. See <a href="http://xmlsoft.org/XSLT/">http://xmlsoft.org/XSLT/</a>
linux-amlogic	4.9.36	Amlogic Linux kernel
ncurses	5.9	New curses library. See <a href="http://www.gnu.org/software/ncurses/">http://www.gnu.org/software/ncurses/</a>
nettle	3.3	Crypto library. See <a href="http://www.lysator.liu.se/~nisse/nettle/">http://www.lysator.liu.se/~nisse/nettle/</a>
openssl	1.0.2k	Cryptography library. See <a href="http://www.openssl.org/">http://www.openssl.org/</a>
pango	1.40.3	Library for layout and rendering of text. See <a href="http://www.pango.org/">http://www.pango.org/</a>
pcre	8.40	Perl compatible regular expression. See <a href="http://www.pcre.org/">http://www.pcre.org/</a>
pixman	0.34.0	Low-level pixel manipulation library. See <a href="http://www.pixman.org/">http://www.pixman.org/</a>
qt5base	5.9.2	Cross-platform application and UI framework. See <a href="http://qt-project.org/">http://qt-project.org/</a>
qt5imageformats	5.9.2	See <a href="http://qt-project.org/">http://qt-project.org/</a>
qt5multimedia	5.9.2	See <a href="http://qt-project.org/">http://qt-project.org/</a>
qt5sensors	5.9.2	See <a href="http://qt-project.org/">http://qt-project.org/</a>
qt5serialport	5.9.2	See <a href="http://qt-project.org/">http://qt-project.org/</a>
qt5svg	5.9.2	See <a href="http://qt-project.org/">http://qt-project.org/</a>
qt5quickcontrols	5.9.2	See <a href="http://qt-project.org/">http://qt-project.org/</a>
qt5declarative	5.9.2	See <a href="http://qt-project.org/">http://qt-project.org/</a>
qt5xmlpatterns	5.9.2	See <a href="http://qt-project.org/">http://qt-project.org/</a>
rtk8188eu		Realtek 8188EU driver
rtk8189es		Realtek 8189ES driver
rtk8723au		Realtek 8723AU driver
rtk8723bs		Realtek 8723AU driver
sqlite	3190300	SQL database engine. See <a href="http://www.sqlite.org/">http://www.sqlite.org/</a>
taglib	1.11.1	Audio tags. See <a href="https://taglib.github.io/">https://taglib.github.io/</a>
util-linux	2.29.2	Essential utilities for Linux. See <a href="https://www.kernel.org/pub/linux/utils/util-linux/">https://www.kernel.org/pub/linux/utils/util-linux/</a>
wavpack	5.1.0	Open audio codec. See <a href="http://www.wavpack.com/">http://www.wavpack.com/</a>
wpa_supplicant	2.6	See <a href="http://hostap.epitest.fi/wpa_supplicant/">http://hostap.epitest.fi/wpa_supplicant/</a>
Shairport-sync	3.1.3	<a href="https://github.com/mikebrady/shairport-sync">https://github.com/mikebrady/shairport-sync</a>
boa	0.94.14rc21	<a href="http://www.boa.org">http://www.boa.org</a>
Upnp-app	1.0.0	vendor/amlogic/external/platinum/upnp-app/src
zlib	1.2.11	Data compression library. See <a href="http://www.zlib.net/">http://www.zlib.net/</a>

# 11. Appendix A: Wi-Fi Configuration

## 11.1 SDIO Interface Wi-Fi Enabling Procedures

The appendix describes procedures for enabling Wi-Fi on Amlogic Linux platform manually:

- 1) Check module existence:

```
# lsmod
Module                Size  Used by    Not tainted
dhd                   410618  0
```

If not,

```
# modprobe dhd
```

**Note:** “dhd” is the driver module name for broadcomm Wi-Fi module. This name may vary depends on different Wi-Fi modules equipped on your platform.

- 2) Set up /etc/wpa\_supplicant.conf:

Example:

```
ctrl_interface=/var/run/wpa_supplicant
ctrl_interface_group=0
ap_scan=1
```

```
network={
    ssid="myAP"
    pairwise=CCMP TKIP
    group=CCMP TKIP
    proto=WPA RSN
    key_mgmt=WPA-PSK
    priority=5
    psk="my_passwd"
}
```

- 3) Restart wpa\_supplicant:

```
# /etc/init.d/S42wifi reload
```

or enable wpa\_supplicant directly:

```
# wpa_supplicant -B -Dnl80211 -iwlan0 -c/etc/wpa_supplicant.conf
```

- 4) Enable DHCP client:

```
# dhcpcd
```

- 5) Put your wpa\_supplicant.conf under /board/amlogic/mesonaxg\_XXX/rootfs/etc/ and regenerate your file system. Next time system will automatically enable Wi-Fi.

# Amlogic Openlinux Release Notes


## 11.2 WEB-UI Enabling Wi-Fi

This appendix demonstrates how to switch mode between Wi-Fi AP mode and Wi-Fi Station mode.

1) After the device is upgraded, Wi-Fi will auto enter AP mode. You can use web to send SSID and Password to device, it will connect to Wi-Fi AP.

**Step1:** Open WLAN on your phone or your tablet PC , you can find AP, its name is “amlogic-audio-XXXXXXXXXX”, please to connect it, password is “12345678”.  
(XXXXXXXXXXXX: S400/S420 Mac address)

**Step2:** Open web app to setup Wi-Fi, please input the URL : 192.168.2.1 ,and then click search button, you will find the following picture(10.2.1).

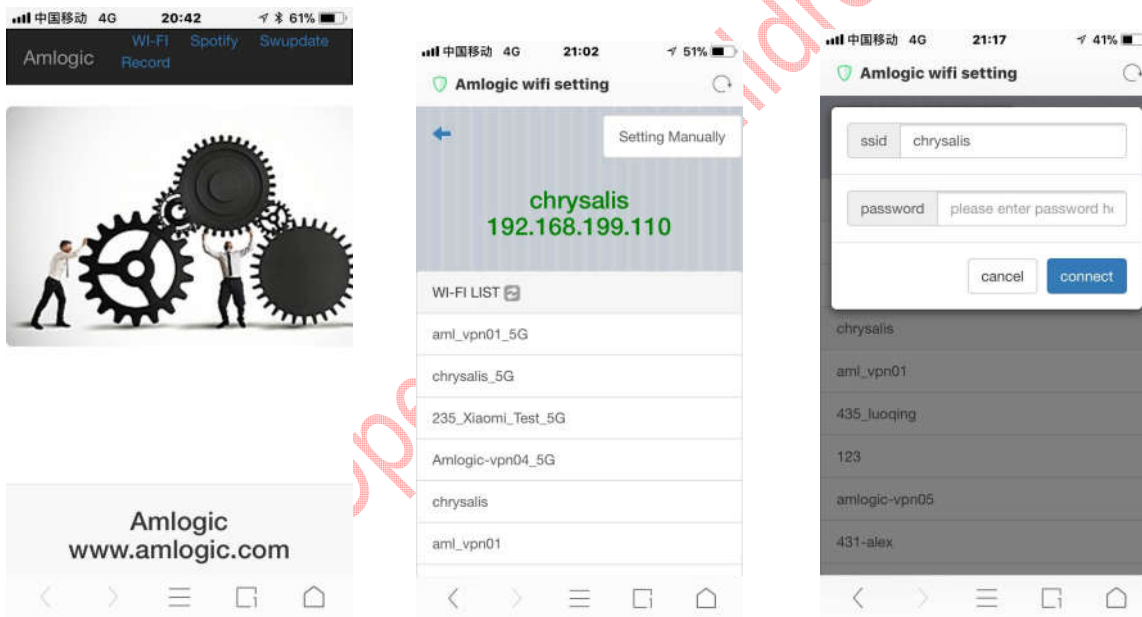

10.2.1

10.2.2

10.2.3


**Step3:** scannig near wifi ssid, click on **WI-FI LIST** eg: 10.2.2

**Step4:** set s400/s420 connect other Wi-Fi(for connect internet), eg:10.2.3

## Amlogic Openlinux Release Notes

### 11.3 APP Enabling WI-FI

- 1) Install your app (vendor/amlogic/companion\_apps/ble-1.2.1.apk)
- 2) App using procedures:

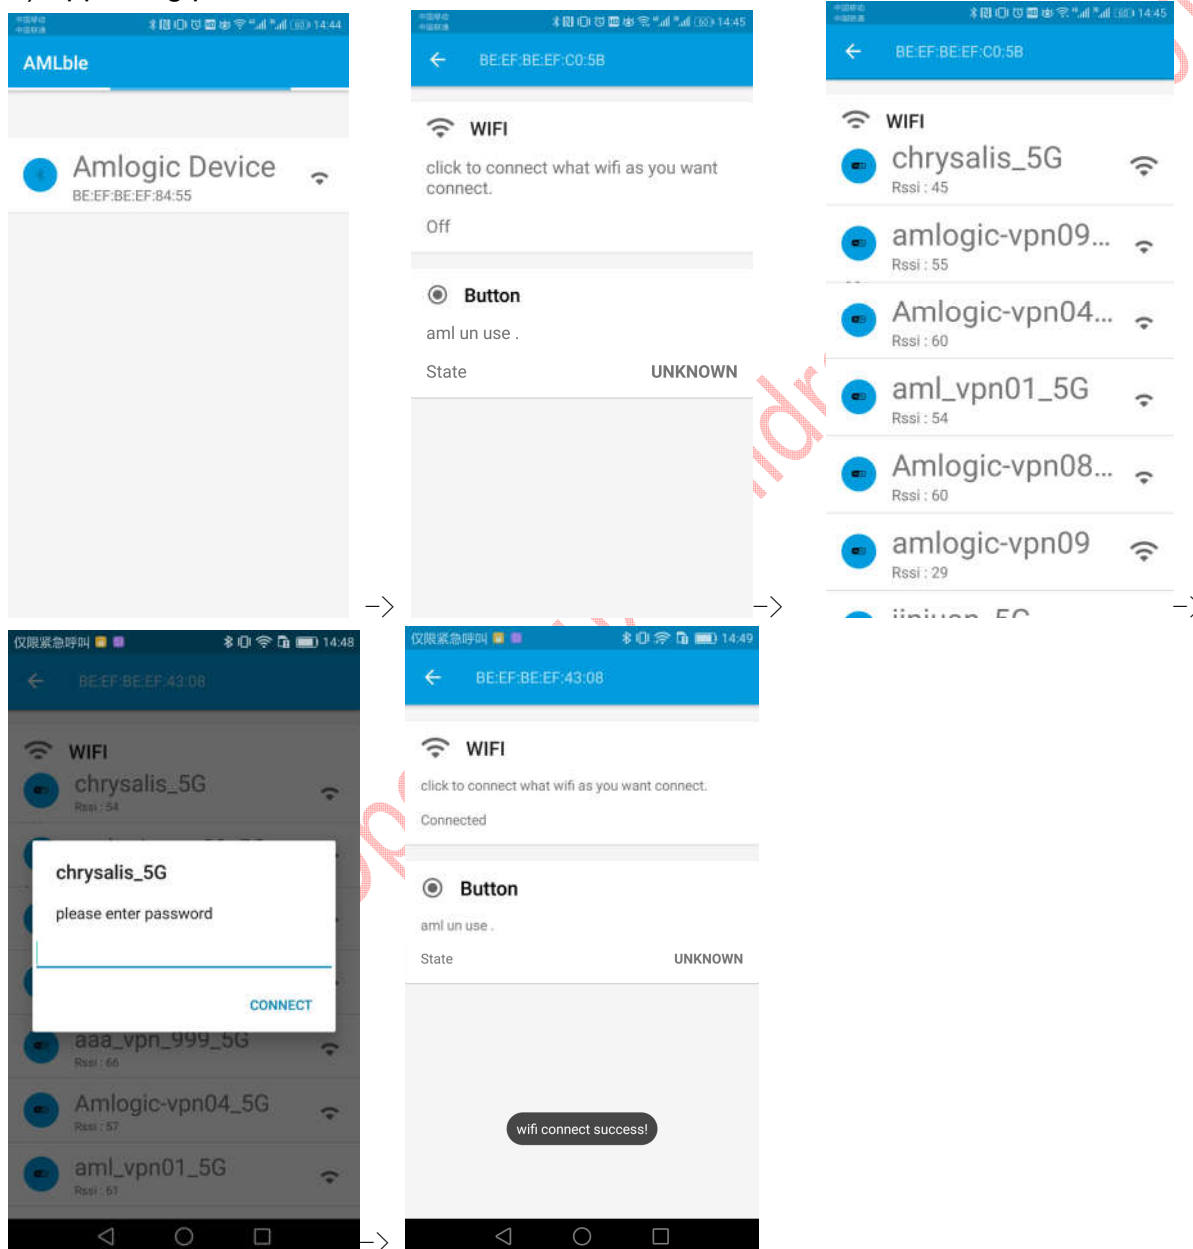

## Amlogic Openlinux Release Notes

### 11.4 smartconfig Enabling Wi-Fi (only AP6255)

The appendix describes procedures for smartconfig on Amlogic Linux platform manually:

Work with BrcmNeeze app

- 1) Mobilephone need to connect an useful ssid, eg: "chrysalis".
- 2) Open BrcmNeeze then input correct password.
- 3) Touch start button.



## 12. Appendix B: Audio Application

### 1) GStreamer

This appendix demonstrates how to use gst-play-1.0 to exercise Gstreamer.


Interactive mode - keyboard controls:

space	: pause/unpause
q or ESC	: quit
> or n	: play next
< or b	: play previous
?	: seek forward
?	: seek backward
?	: volume up
?	: volume down
+	: increase playback rate
-	: decrease playback rate
d	: change playback direction
t	: enable/disable trick modes
a	: change audio track
v	: change video track
s	: change subtitle track
0	: seek to beginning
k	: show keyboard shortcuts

### 2) Spotify

Amlogic support spotify application,. WEB-UI Setting spotify: device name & username & password to using spotify.

## Amlogic Openlinux Release Notes

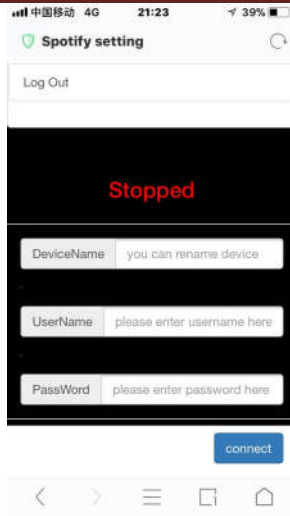

### 3) Shairport & DLNA

Amlogic support shairport and DLNA base on kugou player.

Shairport:

Config: package/shairport-sync/shairport-sync-\*.conf

DLNA:

Config: package/gstreamer1/gstreamer1/gst-soundcard.conf

## 13. Appendix C: Upgrade

OTA Upgrade(swupdate) support nand and emmc storage.

output/mesonaxg\_\*\_release/images/aml-software\_1.0.swu, upgrade procedures:

- 1) Connected device, open WEB-UI
- 2) Choice Swupdate , and choice OTA package(aml-software\_1.0.swu)

More detail information , pls reference: [Amlogic Linux OTA upgrade\\_en.docx](#)

## 14. Appendix D: ADC Key

Amlogic opelnux support adc key application(Base on Amlogic):

<< : Avs Mute

>> : Avs Top

Wifi :

Short : BLE Mode

Long : Smartconfig Mode



## Amlogic Openlinux Release Notes

---

Vol+: Reduce Volume

Vol- : Increase Volume

Voice: Suspend and Resume

## 15. Appendix E: AVS Setup And Run Procedures


### Method 1. AVS base on Amlogic app

###step 1: create your amazon account

[https://developer.amazon.com/public/apis/engage/login-with-amazon/docs/adding\\_website.html](https://developer.amazon.com/public/apis/engage/login-with-amazon/docs/adding_website.html)


###step 2: update AlexaClientSDKConfig.json by Amlogic avs apk(**android**)

- (1) S400/S420 connect wifi network (12. Appendix C: WiFi Setup Procedures)
- (2) Android device install Amlogic avs apk & connect wifi network(the same local area network with S400/S420).
- (3) update AlexaClientSDKConfig.json  
Open amlogic avs app, you find S400/S420 ip(eg: 192.168.199.208)

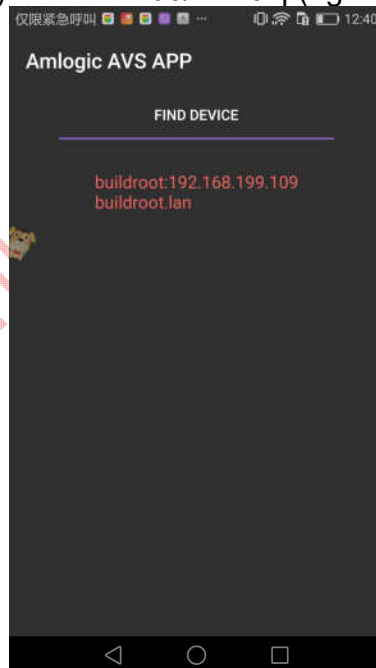

click on “buildroot 192.168.199.208” , click on “log in”, after will update AlexaClientSDKConfig.json

## Amlogic Openlinux Release Notes

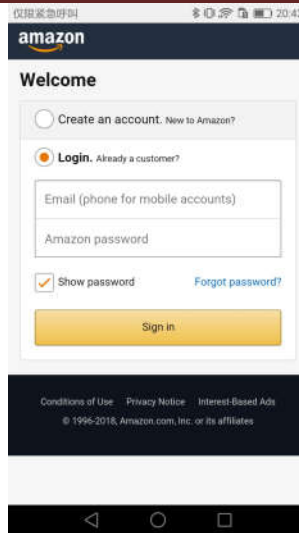

(4) using AVS function.

Speaking to S400/S420 , that will connect amaon server,and respond your request.

### Method 2: AVS base on your alexa function envirmment

#### 1).Create your AlexaClientSDKConfig.json for Alexa Auth

Before you create your build, you'll need to install some software that is required to run `AuthServer`. `AuthServer` is a minimal authorization server built in Python using Flask. It provides an easy way to obtain your first refresh token, which will be used for integration tests and obtaining access token that are required for all interactions with AVS.

**\*\*IMPORTANT NOTE\*\*:** `AuthServer` is for testing purposed only. A commercial product is expected to obtain Login with Amazon (LWA) credentials using the instructions provided on the Amazon Developer Portal for **\*\*Remote Authorization\*\*** and **\*\*Local Authorization\*\***. For additional information, see [AVS Authorization](https://developer.amazon.com/public/solutions/alexa/alexa-voice-service/content/avs-api-overview#authorization).

### Step 1: Install `pip`

If `pip` isn't installed on your system, follow the detailed install instructions [here](https://packaging.python.org/installing/#install-pip-setuptools-and-wheel).

### Step 2: Install `flask` and `requests`

For Windows run this command:

...

## Amlogic Openlinux Release Notes

---

pip install flask requests  
...

For Unix/Mac run this command:  
...

pip install --user flask requests  
...

### Step 3: Obtain Your Device Type ID, Client ID, and Client Secret

If you haven't already, follow these instructions to [register a product and create a security profile](https://github.com/alexa/alexa-avs-sample-app/wiki/Create-Security-Profile).

Make sure you note the following, you'll need these later when you configure `AuthServer`:

- \* Device Type ID
- \* Client ID
- \* Client Secret

**python AuthServer/AuthServer.py /path/to/AlexaClientSDKConfig.json**

**\*\*IMPORTANT NOTE\*\*:** Make sure that you've set your **\*\*Allowed Origins\*\*** and **\*\*Allowed Return URLs\*\*** in the **\*\*Web Settings Tab\*\***:

- \* Allowed Origins: http://localhost:3000
- \* Allowed Return URLs: http://localhost:3000/authresponse

More details

in [https://developer.amazon.com/public/apis/engage/login-with-amazon/docs/adding\\_website.html](https://developer.amazon.com/public/apis/engage/login-with-amazon/docs/adding_website.html)

## 2). Download and to run

Update aml\_upgrade\_package.img via usb\_burning tool  
cp AlexaClientSDKConfig.json to **/etc/**  
cd /usr/bin (ONLY support SampleApp from /usr/bin now )  
./SampleApp /etc/AlexaClientSDKConfig.json

### 16. Appendix F: Debug.

Support Adb , Telnet, Rndis, Ssh

Adb: download adb.exe to use it

Telnet: Use windows telnet or other tools

Rndis:

1) Install Rndis driver

2) Config Rndis Network Card IP (192.168.5.\*)

Ssh: username "root", password is null

### 17. Appendix G: BT Source

1) Enabling Bluetooth A2DP source profile

#

#pulseaudio

#

BR2\_PACKAGE\_ALSA\_PLUGINS=y

BR2\_PACKAGE\_PULSEAUDIO=y

BR2\_PACKAGE\_PULSEAUDIO\_DAEMON=y

BR2\_PACKAGE\_BT\_SETUP=y

2) Scanning bluetooth device and connecting to A2DP sink device

User can operate SmartSpeaker Bluetooth from web UI, login in with

[http://<device\\_ip>/btlist.html](http://<device_ip>/btlist.html), scanned Bluetooth device is showed in the web page, click the device you want connect to. Once you connected to sink device, audio output device will switch to the connected device.

### 18. Appendix H: SecureOs Version

More detail information, please refs to: Amlogic TDK Integration User Guide V1.0.docx

branch	commit
tdk-v2.4	21cd6d1c43b70f53a24ae59e15f39aa37e4ad084