

A thick dark blue vertical bar runs down the left side of the page. A blue arrow-shaped graphic points to the right, containing the text 'ELEC 5614'. Below this, several thin, curved lines in dark blue and light grey sweep upwards from the bottom left corner.

ELEC 5614

Snowy Hydro Scheme Simulation

Real Time Computing

June 7, 214

Christopher Rosiak - 309217679
Han Lin - 430068030
Kelvin D'Amore - 430515051
Stephen Tridgell - 309205867

Table of Contents

Introduction	1
Project Description.....	1
Snowy Hydro Map Scheme	2
Snowy Scheme Information	3
Deliverable 1	5
Use Case Diagram	5
Deliverable 2	6
Functional and Non-functional Requirements.....	6
1. Functional Requirements.....	6
2. Non-Functional Requirements	7
Deliverable 3	10
State Diagram.....	10
System Level Sequence Diagram	11
Flow Diagram	12
Class Diagram.....	13
Deliverable 4	14
Real Time System Code.....	14
Deliverable 5	16
Test Case 1	16
Test Case 2	17
Test Case 3	19
Bibliography	20

Introduction


Power and water consumption are integral parts of any type of community to provide the basic necessities available for people to use. This makes the use of a hydroelectric dam system to be largely important to be able to extract both appropriate power and water needs for a community while calculating important water capacity constraints between dams and ensuring appropriate flow. This makes the use of real time computing widely important as data such as dam capacity, power usage, water usage, river flow and upstream pumping are highly competing factors that have large impacts on the system all of which must be done at real time to ensure appropriate calculations are carried out and constraints are being adhered to so that the functional and non-functional requirements of the system is met.

Project Description

As a hydroelectric dam system designed to provide adequate water and electricity to a typical community has such a large reliance on real time systems a simulation was designed for this project to analyse appropriate real time calculations and provide an advanced overview of expected outcomes of the system dependent on many different constraints including electricity usage, water usage and water availability. The simulation in particular tested the Snowy Mountains Scheme in New South Wales, Australia. The scheme consists of a major network of hydroelectric and normal dams spanning through the system utilising 15 major dams and 7 power stations. The scheme itself is seen to be one of the largest engineering projects seen in Australia and provides water and electricity to surrounding communities

To start development on the scheme appropriate information needed to be researched about the system first of which was how each dam connected with each other. Unfortunately as no adequate map is available that shows the complete dam and hydroelectric system utilised by snowy hydro. An original map had to be created to develop appropriate connections between rivers, pipes, outflow, dams and hydropower stations. This map was simplified and utilised for the programming part of the project to design an adequate and real time system of the snowy hydro scheme. The map in particular manipulated variables such as rivers being seen as a huge dam and the simplification of connections between dams, pipes and rivers as well as some minor rivers being removed. The complete mapping system for the project can be seen below:

Snowy Hydro Map Scheme

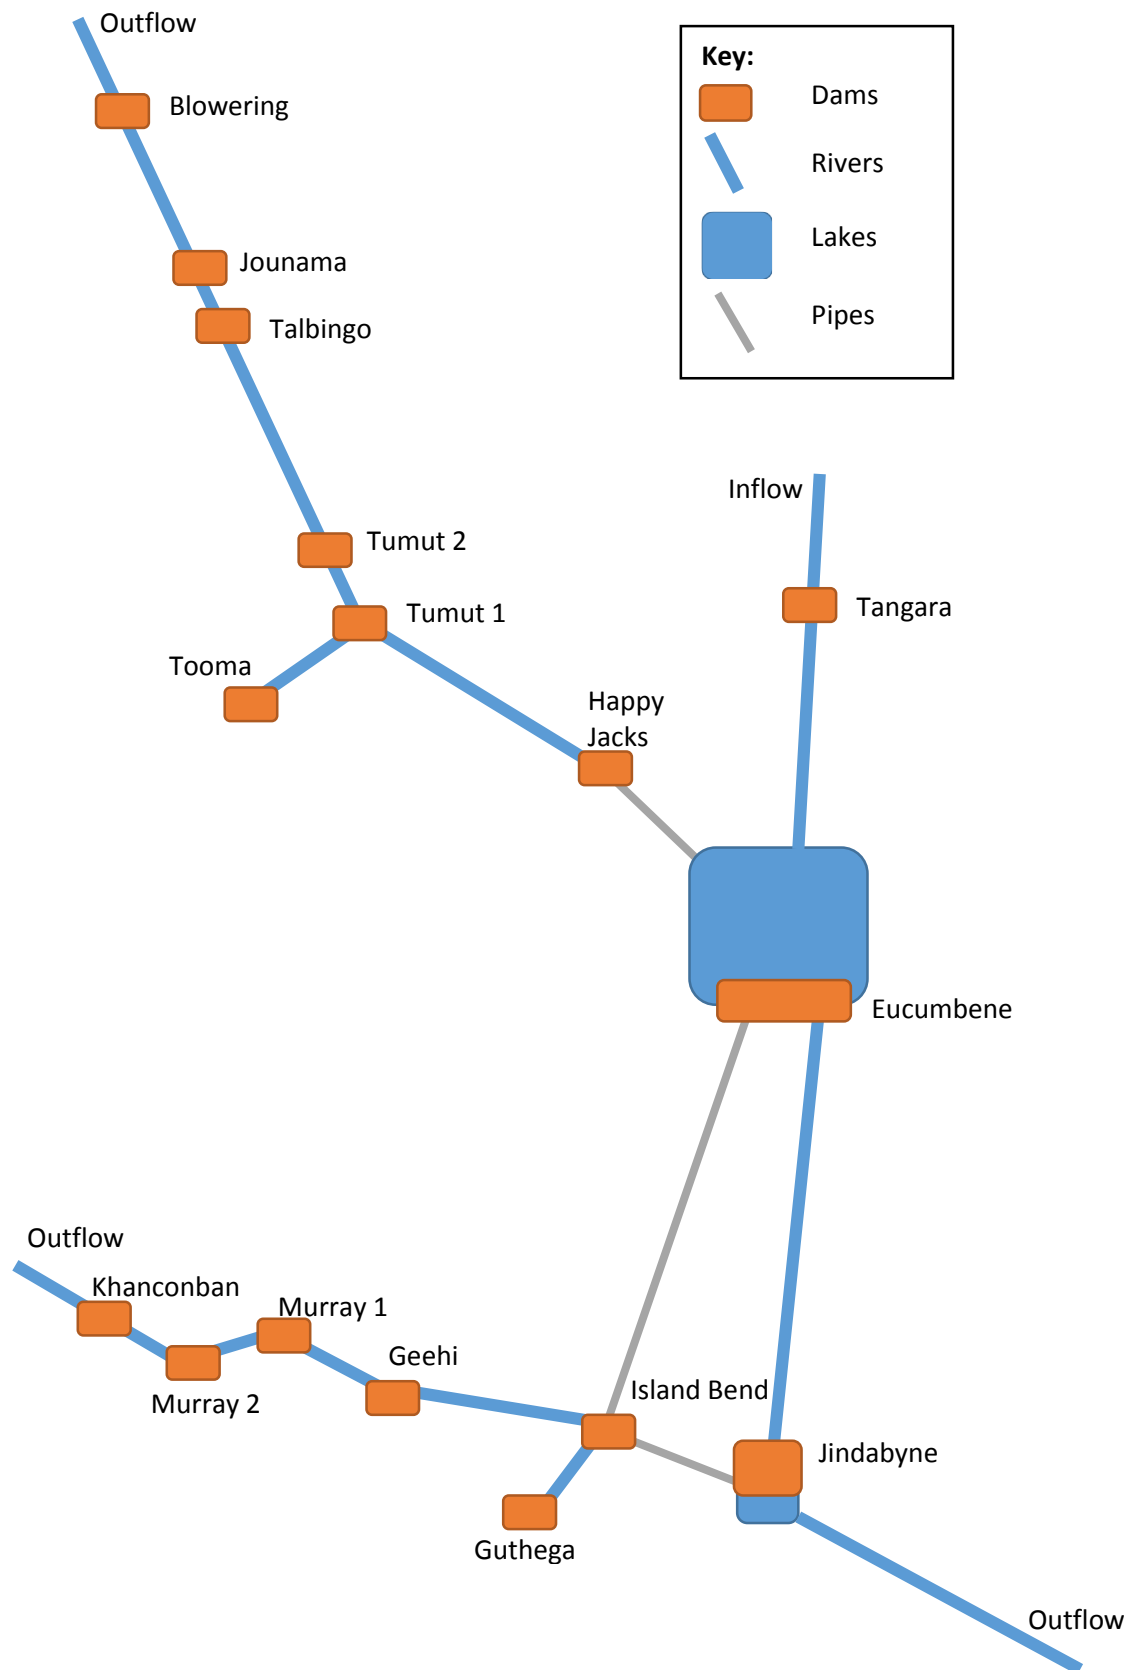

Snowy Scheme Information

Information provided by Snowy Hydro for the Dam and hydroelectric system made the following quantifiable variables:

Dam Name	Capacity (ML)	Max Power (MW)
Blowering	1628000	80
Talbingo	921400	1500
Tumut 2	2677	286
Tumut 1	52793	330
Guthega	1604	60
Murray	2344	1500
Jounama	43542	0
Tooma	28124	0
Happy Jacks	271	0
Tangara	254099	0
Eucumbene	4798400	0
Jindabyne	688287	0
Island Bend	3084	0
Geehi	21093	0
Khancoban	26643	0


Rivers and piping system also had to be analysed throughout the snowy hydro scheme. Unfortunately very limited information is given about these integral variables for the system and thus a lot of information needed to be obtained in approximate amounts. The lengths were developed by analysing river maps of the scheme system and measuring the lengths seen between these dams and scaling them appropriately. This made it possible to obtain much higher accuracy type estimations as it is based on the actual mapping of the snowy mountains. The maximum river capacity values will be three times its average flow rate. The minimum capacity value was then viewed as 10 percent of this value providing an adequate estimation of the complete snowy scheme. The importance of a maximum value for a river was used as any water capacity above this point would be found to flood the river and cause damage to the system. Alternatively a minimum capacity was needed as if the river flow is too low, it can highly effect the ecological life of the river themselves also causing damage.

Name	Type	Max Cap (ML)	Min Cap (ML)	Length (m)	End Point
Blowering to Ocean	River	1000	100	10	Ocean
Junama To Blowering	River	54	5	17857	Blowering
Talbingo to Jumama	River	27	3	8923	Jounama
Tumut to Talbingo	River	89	9	29762	Talbingo
Tumut 1 to Tumut 2	River	27	3	8929	Tumut 2
Tooma to Tumut 1	River	45	5	14881	
Happy Jacks to Tumut 1	River	45	5	14881	Tumut 1
Eucumbene to Happy Jacks	Pipe				
Tangara to Eucumbene	River	107	10	35714	Eucumbene
Eucumbene to Jinabyne	River	928	93	32738	Jindabyne
Snowy River	River	1000	10	100	Ocean
JindaBune to Island Bend	Pipe				
Eucumbene to Island	Pipe				
Guthega to Island Bend	River	54	5	17857	Island Bend Dam
Island Bend to Geehi	River	48	5	16071	Geehi
Geehi to Murray	River	45	5	14881	Murray
Murray to Khancoban	River	31	3	10119	Khancoban
Khancoban to Ocean	River	100	0	100	Ocean

Data of the flow of the snowy scheme needed to be analysed so that appropriate simulation could be undertaken in a close to accurate test of the system. Research online showed that from the year of 2012 to 2013 the water inflow through snowy hydro was about 2,188GL of water. This value could thus be utilised as appropriate water inflow for about a year and could be shared among the dams to provide adequate use for electricity and water. Research for power itself found that about 260 litres of water is used to obtain 1000 KWh of power. Utilising this data would show that 3.8462 KWh of electricity is provided by the hydroelectric dams if converted to a typical litre. Outflow of the water was also found to be about 2,100 GL each year to the Murray Darling Basin, and about 4500 Gigawatt hours of energy is outputted by the scheme to meet the yearly demand.

Deliverable 1

Use Case Diagram

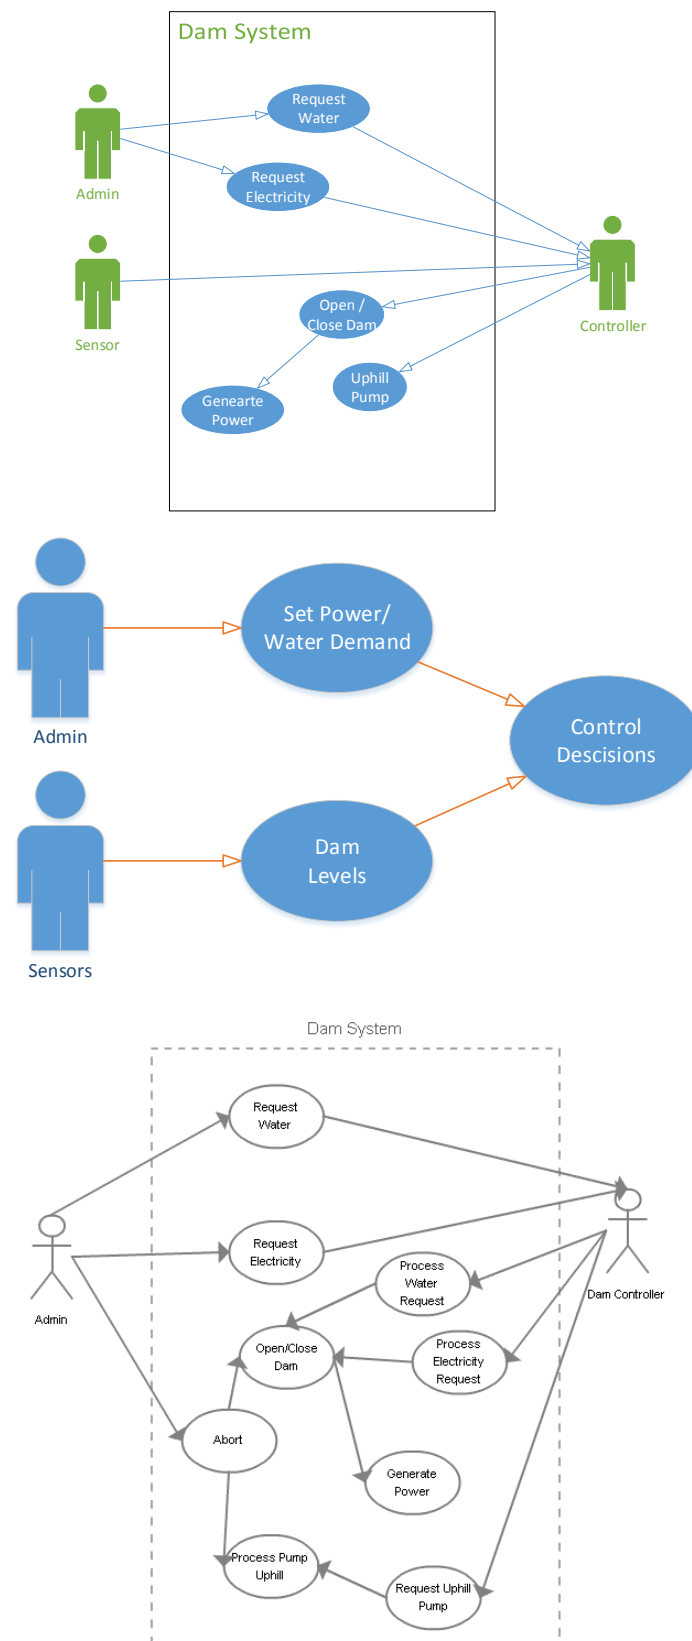

Deliverable 2

Functional and Non-functional Requirements

1. Functional Requirements

1.1. System Functions

- 1.1.1. The System shall automatically provide appropriate electricity based on demand
 - 1.1.1.1. The appropriate electricity output will calculate dam consumption and send the request
 - 1.1.1.2. The system will automatically open the correct dam depending on request to allow flow for power generation
 - 1.1.1.3. All dams through the system will be utilised for appropriate water flow although only the dams with hydroelectric plants will provide power
- 1.1.2. The System shall automatically provide appropriate water output based on demand
 - 1.1.2.1. The appropriate water output will be calculated automatically and then the dam request will be sent
 - 1.1.2.2. The system will automatically open the appropriate dams to ensure water flow to the correct dam, this includes the dams with hydroelectric plants.
- 1.1.3. Pipes can send water both up and down streams to dams utilising power from the snowy hydro scheme.
 - 1.1.3.1. The pipe system will utilise power while flowing water up stream only.
 - 1.1.3.2. Flowing water downstream should not use any power.
- 1.1.4. Dams will provide adequate storage for water loading to be used for demand periods of water and power.
 - 1.1.4.1. During times of high rain or snow, water will be stored among the dam systems
 - 1.1.4.2. During times of low rain or snow the water will be released as part of the water outflow request.
- 1.1.5. The system will automatically return information for appropriate dam usage.
 - 1.1.5.1. Specific dam level will be returned by the system.
 - 1.1.5.2. Overflow values of each dam will be returned by the system.
- 1.1.6. All 15 dams should be able to be updated and used concurrently and in real time.

1.2. User Interface

- 1.2.1. The interface will provide all water data in terms of mega litres (ML) to ensure appropriate estimation and use within the scheme.
- 1.2.2. All power values will utilise a megawatt (MW) or megawatt per hour (MWh) value for decisive calculation and estimation of the scheme.
- 1.2.3. Overflow values will be shown in Boolean of either “true” if overflowed or “false” if it hasn’t.
- 1.2.4. All dams as part of the interface will show its name, capacity, level and overflow value.
- 1.2.5. The user interface will endeavour to aspire to typical GUI conventions to ensure that the program itself is intuitive to use.

1.3. Design Constraints

- 1.3.1. The snowy scheme will be designed utilising the Java programming language.
- 1.3.2. The scheme will have support on both PC and UNIX or Linux platforms.
- 1.3.3. Dynamic data will be utilised to ensure appropriate storing and utilisation of values.

2. Non-Functional Requirements

2.1. Safety

- 2.1.1. The Scheme will adhere to all compliance standards
 - 2.1.1.1. Typical international standards for software development will be utilised as part of the scheme
 - 2.1.1.2. All units as part of the scheme will ensure to keep within units of the metric system.
- 2.1.2. Rivers will be periodically tested to ensure it doesn’t go above or below approved flow.
 - 2.1.2.1. Rivers will have a minimum of 10 percent capacity at all times to ensure drought times does not affect the river structure or ecology.
- 2.1.3. The snowy scheme will ensure that dams will not go above its specific maximum capacity value
 - 2.1.3.1. Return values of dam level capacity must be sent to the user interface periodically to ensure this doesn’t happen.

2.2. Maintenance

- 2.2.1. The MTBF should be 96 percent of the total running time of the scheme per annum.
- 2.2.2. Non-critical scheme faults will be addressed within 48 hours.

2.3. Reliability

2.3.1. Error Handling

- 2.3.1.1. When an error occurs the scheme itself should halt as opposed to running with the error.
- 2.3.1.2. Current running data should be saved so that it can be reused as part of the scheme without the error.
- 2.3.1.3. Incorrect inputs should be reported back to the user instantaneously.

2.3.2. Ease of Recovery

- 2.3.2.1. Recovering back into being able to reconfigure the scheme again after an error should be done within 5 seconds.

2.4. Performance

- 2.4.1. The Hydro Snowy Scheme will have less than 5 percent down time a year
- 2.4.2. Water based demand will be requested and processed within seconds.
- 2.4.3. Electricity based demand will be requested and process within seconds.
- 2.4.4. Degradation of system performance during peak load of power and water should still output at least 90 percent of both water and power demand.
- 2.4.5. Response Time
 - 2.4.5.1. The system should respond to scheme updates within a few milliseconds.
 - 2.4.5.2. Dam scheme processing should be done in under 2 seconds.
 - 2.4.5.3. Dam level feedback should be returned within milliseconds.
- 2.4.6. Resource Usage
 - 2.4.6.1. Computing resource should utilise the minimum amount needed to ensure that appropriate calculations are available for the system.
- 2.4.7. User interface will update itself automatically every 100 milliseconds.


2.5. Accuracy and Precision

- 2.5.1. Electricity precision needs to be at least 5 percent within the required demand value.
- 2.5.2. Dam level values need to be adequately accurate and precise to ensure appropriate user view.
 - 2.5.2.1. The maximum dam capacity will be accurate to a single decimal place of its specified unit.


- 2.5.2.2. The current water level of a dam will be accurate to a single decimal place of the specified unit.
- 2.5.3. Water and power demand needs to be accurately represented to ensure that the correct amount is supplied to the scheme
 - 2.5.3.1. Water demands should be given as a single float value with a maximum of 32 bits.
 - 2.5.3.2. Electricity demand should be given as a float value of a maximum of 32 bit

Deliverable 3


State Diagram

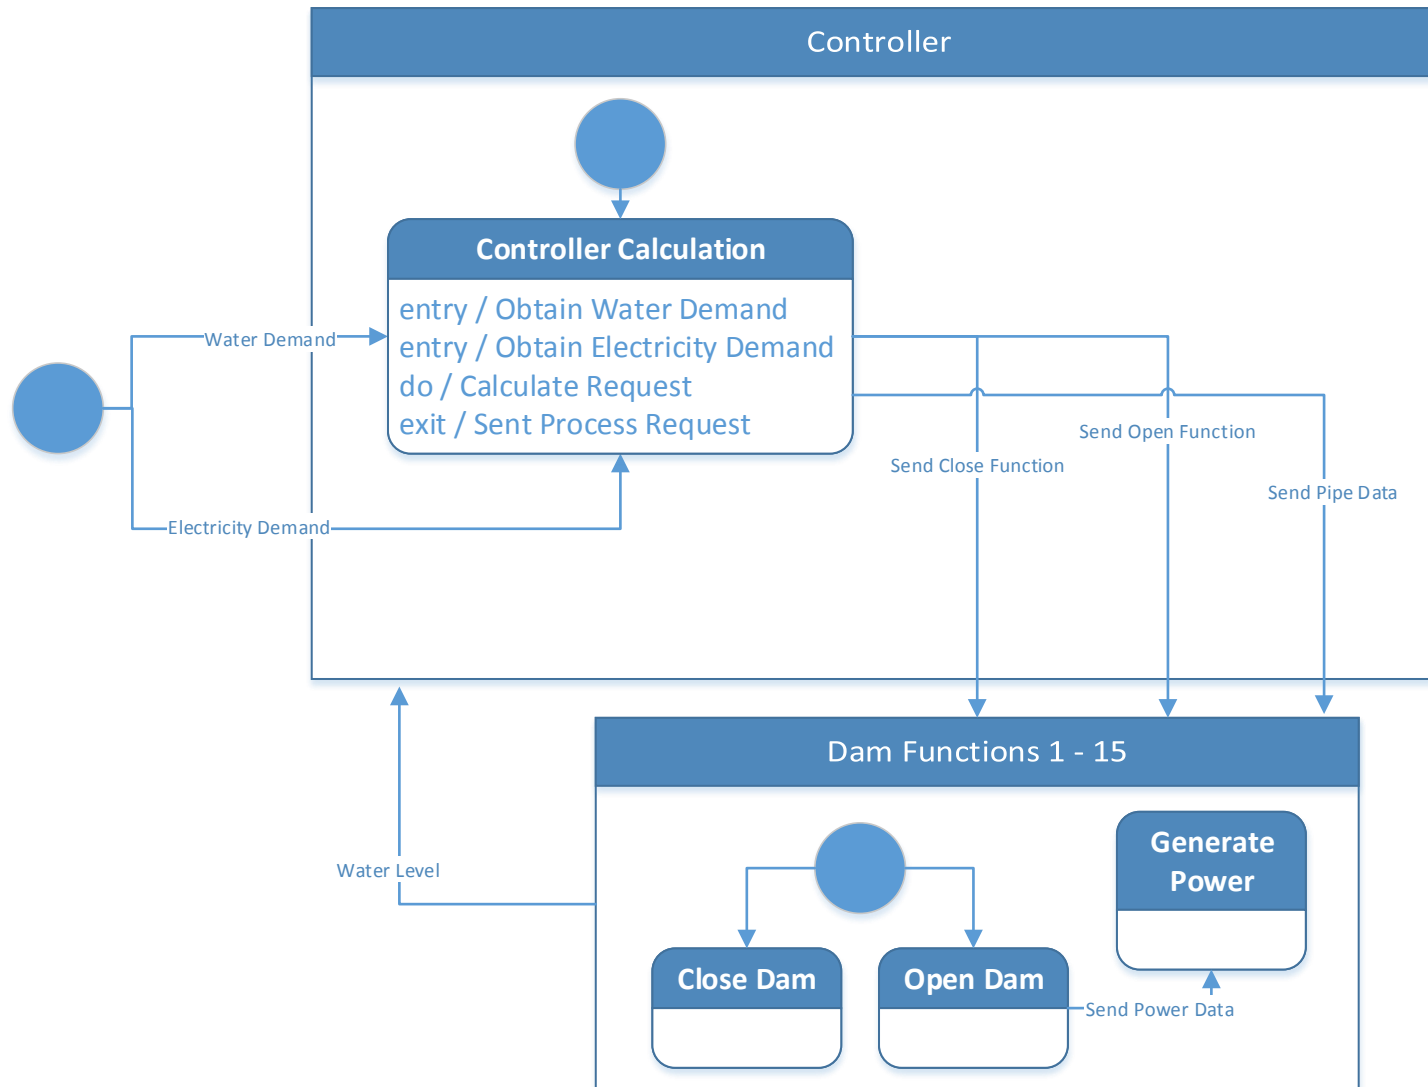

System Level Sequence Diagram

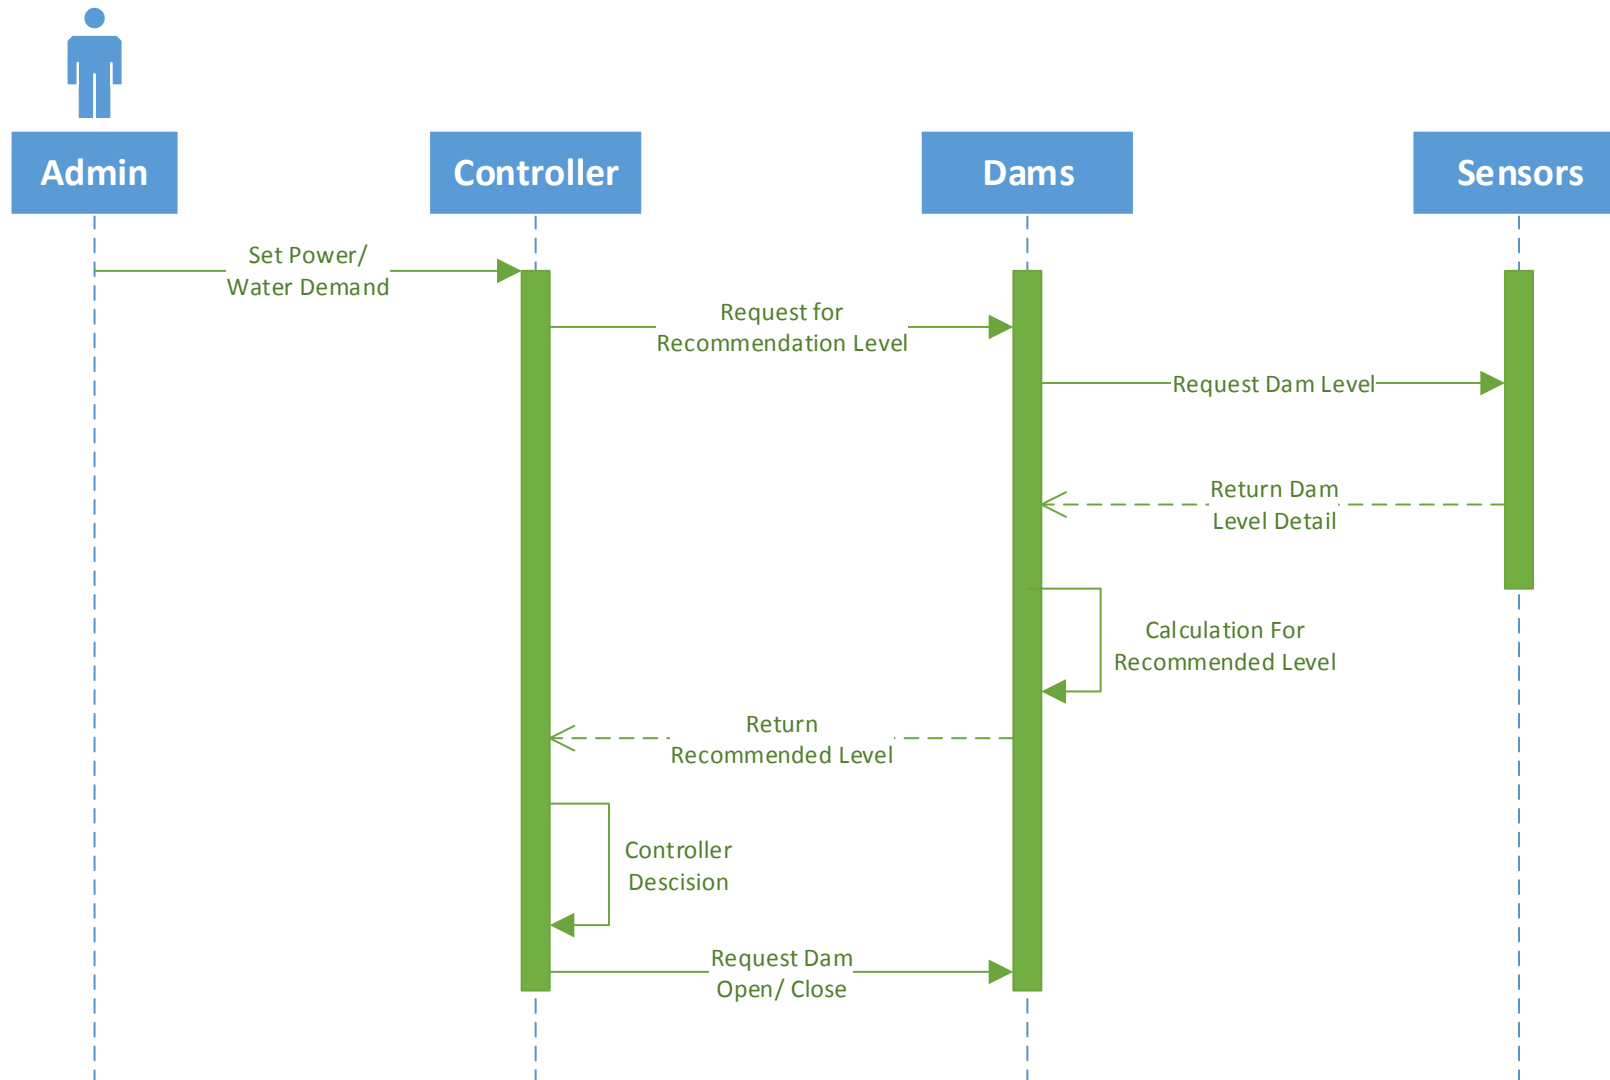


Flow Diagram

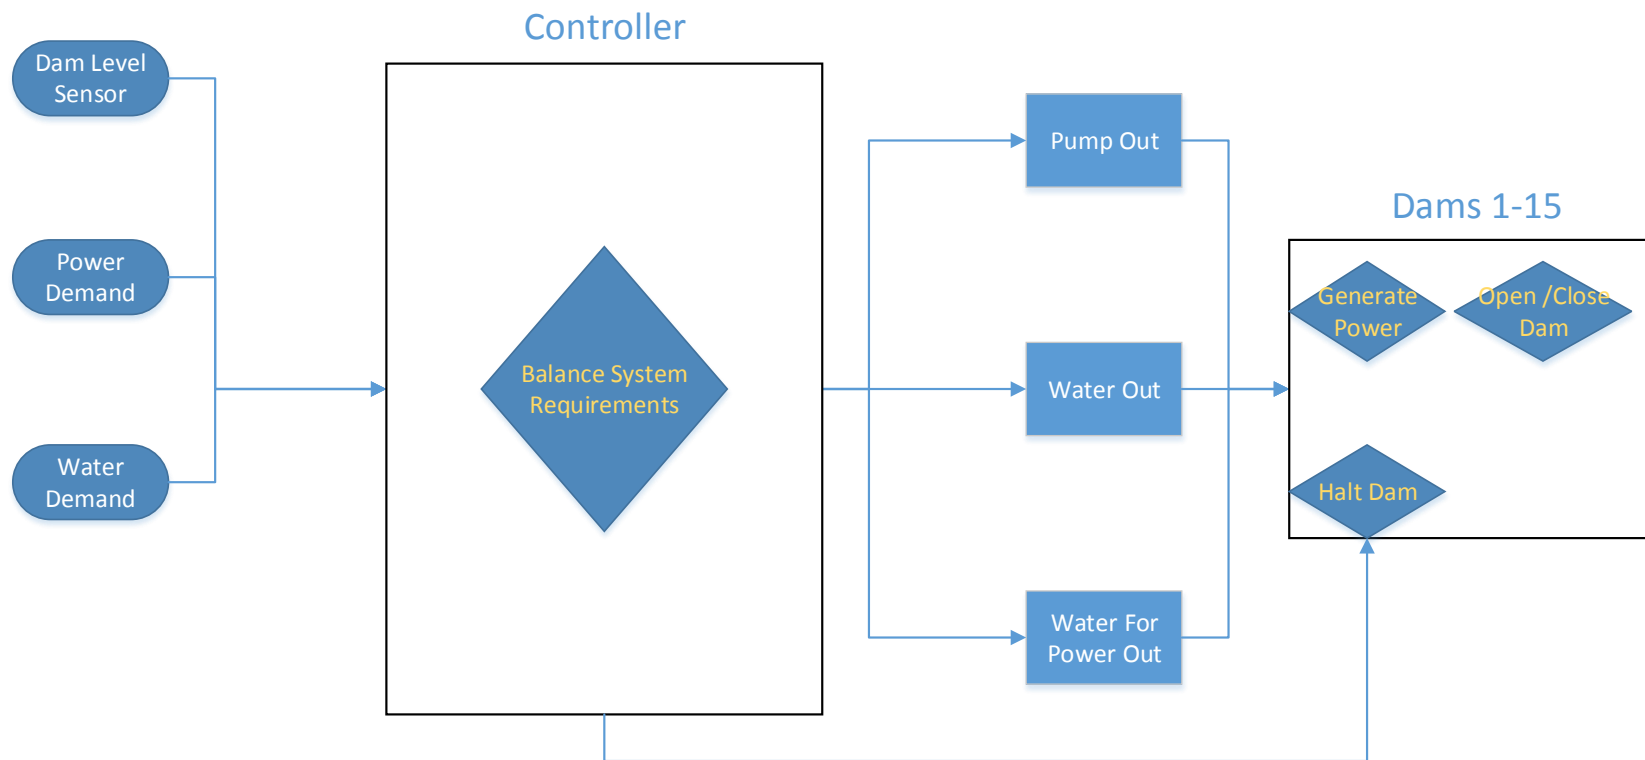

Class Diagram

Controller Class Diagram

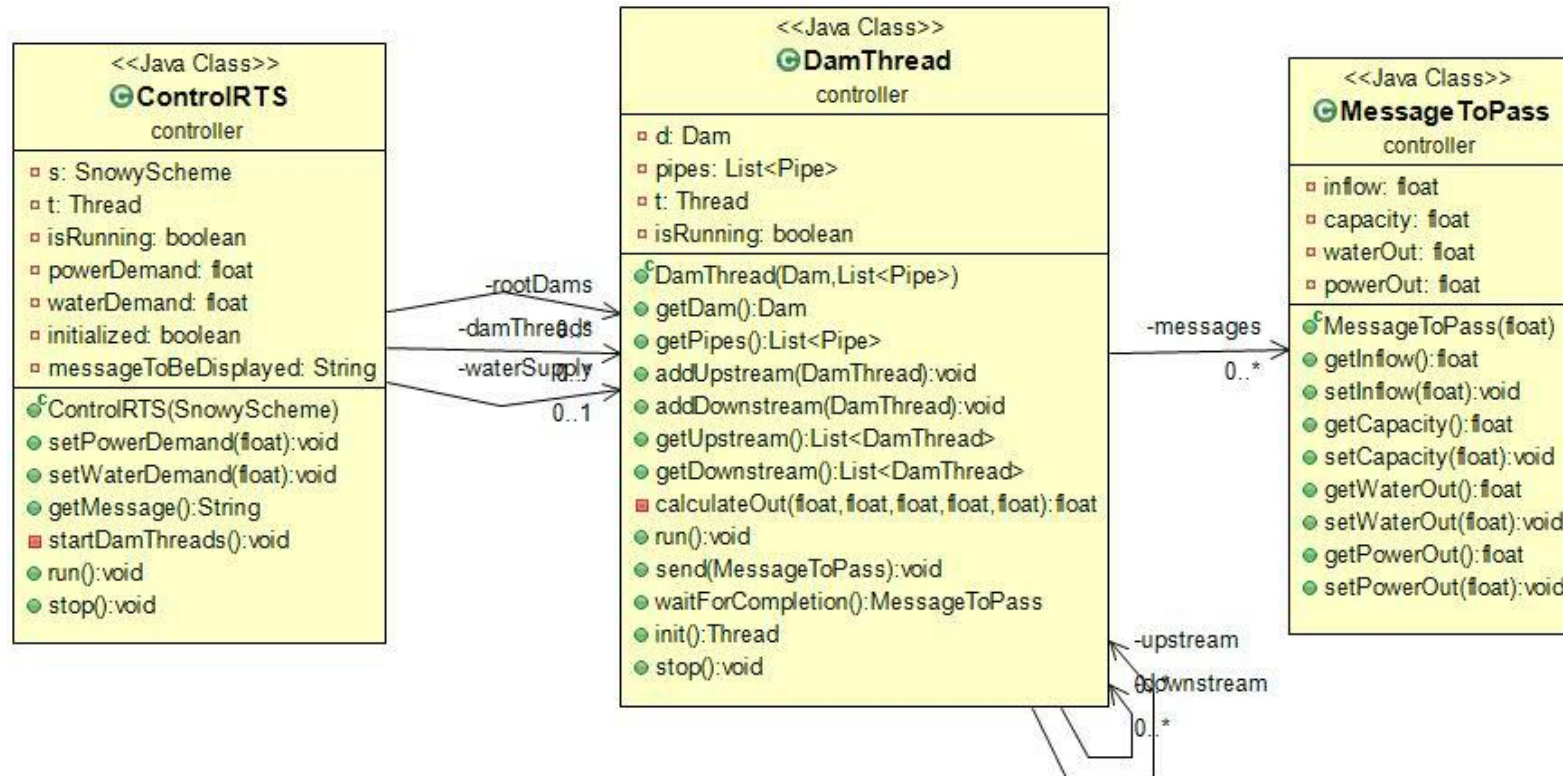

Deliverable 4

Real Time System Code

See the Zipped code.

1. To run the Snowy Hydro Scheme Simulation, find and execute the runDisplay class inside the display package.
2. To simulate rainfall in different dams, enter the rainfall desired in the text box under each dam's name, then press "set rain level (increment)"

Note: The increment button moves water about 1 kilometre each press.


To change the power demand, enter the desired demand level in the text box after "set rain level (increment)" then press the "change power demand" button.

To change the water demand, enter the desired demand level in the text box after "set rain level (increment)" then press the "change water demand" button.

To start the dam simulation, press the "start" button. It will change the dam level in different dams and show the results in the display called "RTC snowy Hydro".

The screenshot shows a Java Swing window titled "Simulation Window". It contains a grid of input fields for ten dams: Blowering, Tumut 1, Jounama, Tangara, Island Bend, Talbingo, Guthega, Tooma, Eucumbene, Geehi, Tumut 2, Murray, Happy Jacks, Jindabyne, and Khancoban. Each dam name is followed by a text box containing the number "0". The "Blowering" text box is currently selected. To the right of the grid is a "Demand Control" section with two buttons: "Change Power Demand" and "Change Water Demand". Below these buttons is a text box labeled "Enter float value here". Below that is a button labeled "Set rain level (increment)". At the bottom of the Demand Control section are two buttons: "Start" and "Increment".

3. This is the real time display of the dams and rivers. It shows the water level, capacity and flow of each item in the system.

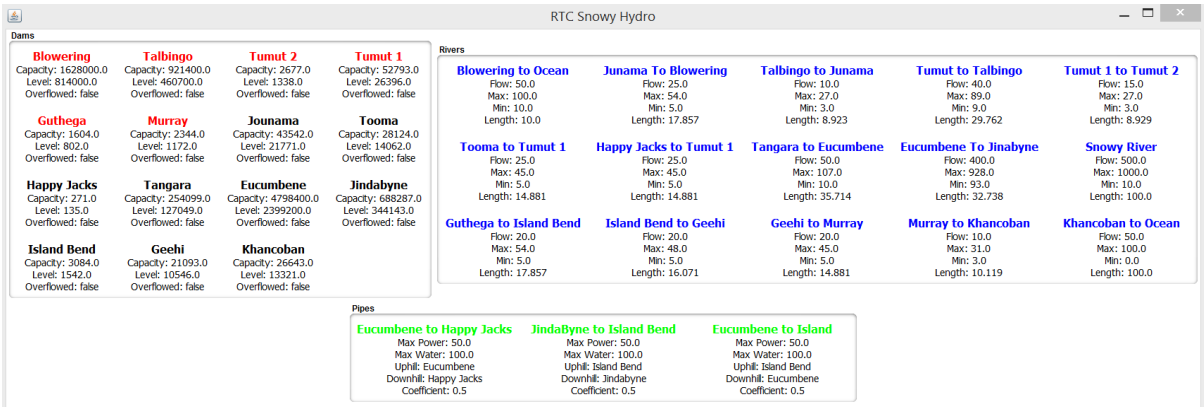

Deliverable 5

Test Case 1

Test Case ID: 1.1.1 – Typical usage

Type of test: Functional Testing

Purpose: Ensure that under typical stress and load that the snowy scheme correctly meets both water and power demands

Prerequisite:

- The dam should be in its typical running state
- No previous errors have occurred on the dam scheme
- No overflow is apparent on the dam scheme
- Initial capacity values are set to half the dam capacity
- All 15 dams including ones with power generation are operating normally

Test data / Input data / Entry criteria:

- Water rain flow should be set to 100 ML for all dams
- Power demand is set to 50 MW
- Water demand should be 50 ML
- Current dam level is set to half the dam capacity.

Steps:

1. Assuming a balanced water inflow over the snowy scheme, type down the value of “100” for each dam for rain under the simulation window.
2. Type down 50 ML in the simulation window under the float value labelled area and click on change water demand.
3. Type down 50 MW under the float value label area and click on change power demand.
4. Click the “Set rain level (increment)” button about 10 times
5. [Check] the RTC Snowy Hydro window to see if any overflow, or over levelled values have occurred.
6. [Check] The console to make sure both water and electricity demand is correctly met.

Output:

Expected				Actual			
Dams				Dams			
Blowering Capacity: 1628000.0 Level: 814711.2 Overflowed: false	Talbingo Capacity: 921400.0 Level: 461982.4 Overflowed: false	Tumut 2 Capacity: 2677.0 Level: 1800.1514 Overflowed: false	Tumut 1 Capacity: 52793.0 Level: 27876.377 Overflowed: false	Blowering Capacity: 1628000.0 Level: 814711.2 Overflowed: false	Talbingo Capacity: 921400.0 Level: 461982.4 Overflowed: false	Tumut 2 Capacity: 2677.0 Level: 1800.1514 Overflowed: false	Tumut 1 Capacity: 52793.0 Level: 27876.377 Overflowed: false
Guthega Capacity: 1604.0 Level: 1346.3204 Overflowed: false	Murray Capacity: 2344.0 Level: 1645.5612 Overflowed: false	Jounama Capacity: 43542.0 Level: 22579.58 Overflowed: false	Tooma Capacity: 28124.0 Level: 14794.67 Overflowed: false	Guthega Capacity: 1604.0 Level: 1346.3204 Overflowed: false	Murray Capacity: 2344.0 Level: 1645.5612 Overflowed: false	Jounama Capacity: 43542.0 Level: 22579.58 Overflowed: false	Tooma Capacity: 28124.0 Level: 14794.67 Overflowed: false
Happy Jacks Capacity: 271.0 Level: 221.40274 Overflowed: true	Tangara Capacity: 254099.0 Level: 127461.38 Overflowed: false	Eucumbene Capacity: 4798400.0 Level: 2395687.5 Overflowed: false	Jindabyne Capacity: 688287.0 Level: 344239.22 Overflowed: false	Happy Jacks Capacity: 271.0 Level: 221.40274 Overflowed: true	Tangara Capacity: 254099.0 Level: 127461.38 Overflowed: false	Eucumbene Capacity: 4798400.0 Level: 2395687.5 Overflowed: false	Jindabyne Capacity: 688287.0 Level: 344239.22 Overflowed: false
Island Bend Capacity: 3084.0 Level: 2345.317 Overflowed: false	Geehi Capacity: 21093.0 Level: 11504.249 Overflowed: false	Khancoban Capacity: 26643.0 Level: 13925.698 Overflowed: false		Island Bend Capacity: 3084.0 Level: 2345.317 Overflowed: false	Geehi Capacity: 21093.0 Level: 11504.249 Overflowed: false	Khancoban Capacity: 26643.0 Level: 13925.698 Overflowed: false	

Exit criteria:

Pass:

- Overflow did not occur ✓
- Water level was kept under capacity ✓
- All inflow water was added to the scheme without error ✓
- Power demand was met by the scheme ✓
- Water demand is met appropriately by the scheme ✓

Fail:

- Errors occurred of the water inflow
- Overflow occurred
- Water level went above capacity
- Power demand or water demand is not met

Recommendations:

Notes, Issues and Questions:

Test Case 2

Test Case ID: 1.1.2 – Overflow of dam level

Type of test: Scenario Testing

Purpose: This test will check to make sure that if excess rain or snow flowing into a particular dam will change the overflow flag to “true”.

Prerequisite:

- The dam should be in its initial running state
- No previous errors have occurred on the dam scheme

- Initial capacity values are set to half the dam capacity
- All 15 dams including ones with power generation are operating normally

Test data / Input data / Entry criteria:

- Khancoban dam water inflow is: “27000 ML”
- Power demand is set to “100 MW” per annum.
- Water demand should be “100 ML” per annum.
- Current dam level is set to half the dam capacity.

Steps:

1. Type in the value box the water demand of 100 and click on the “change water demand” button.
2. Type in the box 100 in the and click on “change power demand” button
3. Under the Khancoban dam type an inflow of “27000” going above its typical capacity.
4. Click on the “Set Rain Level (increment)” button about 10 times.
5. [Check] that all rain levels were inputted correctly.
6. [Check] the RTC Snowy Hydro window to ensure that the Khancoban overflow has turned its Boolean to true.

Output:

Expected	Actual
Khancoban Capacity: 26643.0 Level: 26544.982 Overflowed: true	Khancoban Capacity: 26643.0 Level: 26544.982 Overflowed: true

Exit criteria:

Pass:

- Power demand should give a “Power Low: Warning” message ✓
- Water demand should be met by the snowy system ✓
- Khancoban should show that it has gone to overflow in the RTC Snowy Hydro Window ✓
- Khancoban should return to under capacity level ✓

Fail:

- No overflow Boolean change is seen in RTC Snowy Hydro window.
- Power demand is not met
- Water demand is not met

Recommendations:

Notes, Issues and Questions:

Test Case 3

Test Case ID: 1.1.3 – Too high electricity demand

Type of test: Black Box Testing

Purpose: The main purpose of this test case is to ensure that during a time of electricity demand being above possible outputs, the appropriate error will return.

Prerequisite:

- The dam should be in its typical running state
- No previous errors have occurred on the dam scheme
- Initial capacity values are set to half the dam capacity
- All 15 dams including ones with power generation are operating normally

Test data / Input data / Entry criteria:

- Power demand is set to 10000 MW
- Water demand should be 10 ML
- Current dam level is set to half the dam capacity.
- Rain flow is set to 100 ML for all dams

Steps:

1. Under the simulation window add “100” to every dam inflow value.
2. Enter a Power demand of “10000” and click on the “Change Power Demand” button.
3. Enter a water demand of “10” and then press the “Change Water Demand” button.
4. Click the “Set Rain Level (increment)” button about 10 times.
5. [Check] the console and ensure that an error occurs which states that the power demand cannot be met.

Output:

Expected	Actual
Power Low: warning Cannot meet demand	Power Low: warning Cannot meet demand

Exit criteria:

Pass:

- No dam went over capacity ✓
- Rain and snow inflow levels were added without errors ✓
- Power Low Warning ✓
- Cannot Meet Demand ✓

Fail:

- Adding rain and snow levels achieved an error
- Any dam went over its capacity
- The “Power demand not met” error didn’t appear.

Recommendations:

Notes, Issues and Questions:

Bibliography

Jones, Willie D. "How Much Water Does It Take to Make Electricity?" *Spectrum*. IEEE Spectrum, 1 Apr. 2008. Web. 09 June 2014. <<http://spectrum.ieee.org/energy/environment/how-much-water-does-it-take-to-make-electricity>>.

"New South Wales - Water." *New South Wales SMEC*. SMEC, n.d. Web. 09 June 2014. <<http://www.smec.com/our-business/divisions/australia/new-south-wales>>.

"Snowy Today." *Snowy Hydro*. N.p., n.d. Web. 09 June 2014. <<http://www.snowyhydro.com.au/>>.