

LG Resu CANBus Monitoring System

Jens Kaemmerer

Version 1.0, 03-22-2018

Table of Contents

1. Hardware configuration	1
1.1. Hardware components	1
1.2. Power	2
1.3. Network	2
1.4. Canbus.....	2
1.4.1. Connect CANBus Monitoring System at the end of CANBus cable	2
1.4.2. Connect CANBus Monitoring System in between existing CANBus nodes	2
2. Software configuration.....	2
2.1. Software components	3
2.2. CANBus	3
2.2.1. Automated configuration	3
2.2.2. Manual configuration	3
2.3. DHCP	4
2.4. SSH.....	4
2.5. sudo	5
2.6. HDMI	5
2.7. logrotate	5
2.8. lgresu.....	6
3. Monitoring.....	6
4. Troubleshooting.....	7
4.1. Problem: Node disconnected with the CANBus state BUS-OFF (and the flag: NO-CARRIER).....	7

1. Hardware configuration

1.1. Hardware components

The 3 main components of the system are:

Raspberry PI 1 model B:

https://en.wikipedia.org/wiki/Raspberry_Pi

CANBus module :


<http://ww1.microchip.com/downloads/en/DeviceDoc/21801e.pdf>

<https://www.nxp.com/docs/en/data-sheet/TJA1050.pdf>

DC-DC buck converter:

<http://www.ti.com/lit/ds/symlink/lm2596.pdf>

Output voltage is set to 5VDC. Input voltage can be as high as 40VDC.

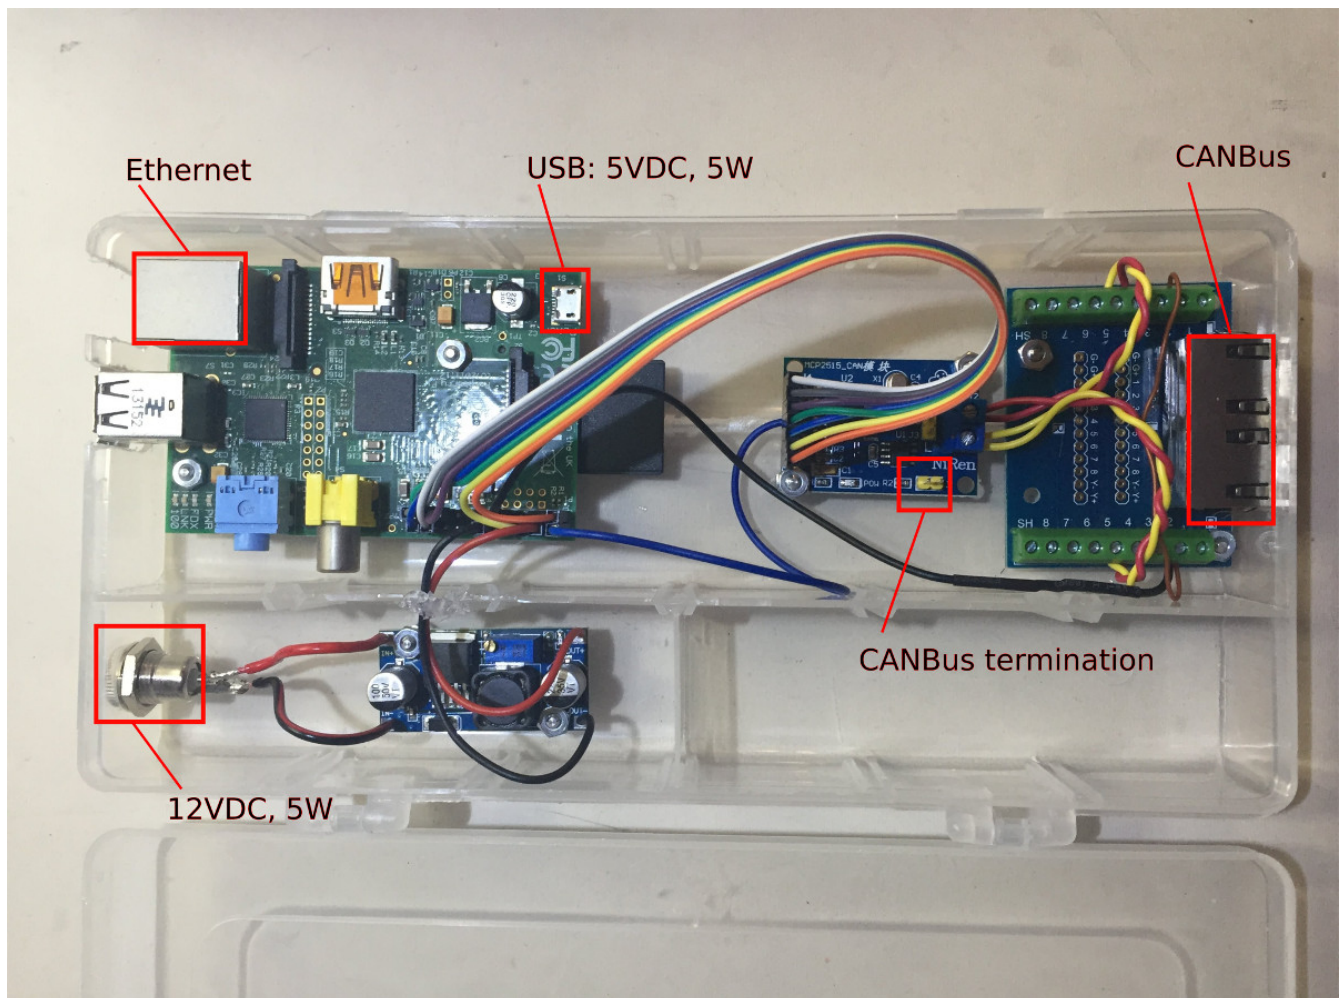

1.2. Power

The system can be powered with either 5VDC (micro USB plug) or with 12VDC (DC connector: 2.1mm inner diameter, 5.5mm outer diameter). The powersupply should be able to output 5W continuous.

The Raspberry PI 1 power consumption is less than 3W, the monitoring software consumes very little CPU time.

1.3. Network

The Raspberry PI 1 has a build in 100 MBit Ethernet adapter. A USB Wifi adapter can be inserted into a USB port.

1.4. Canbus

1.4.1. Connect CANBus Monitoring System at the end of CANBus cable

A CANBus network needs a 120 Ohm termination resistor at each end of the network. The LG Resu 10 LV already has one of the termination resistors. The second termination resistor needs to be enabled with the J1 jumper on the CANBus module (see picture in section: Hardware components).

The CANBus cable can be inserted into either of the 2 RJ45 ports.

CANBUS network nodes:

```
LG Resu Monitoring system (120 Ohm R) <-> LG Resu 10 LV battery (120 Ohm R)
```

1.4.2. Connect CANBus Monitoring System in between existing CANBus nodes

Addition of the monitoring system at any point between 2 existing CANBus nodes requires that the termination resistor on the CANBus module is disabled (no jumper on J1).

Two CANBus cables needs to be inserted into the 2 RJ45 ports.

CANBUS network nodes (example):

```
Conext Bridge (120 Ohm R) <-> LG Resu Monitoring system <-> LG Resu 10 LV battery (120 Ohm R)
```

2. Software configuration

2.1. Software components

SocketCAN CANBus driver:

Raspbian Stretch Lite (Linux kernel 4.9): <https://www.raspberrypi.org/>

SocketCAN (Linux kernel 4.9): <https://www.kernel.org/doc/Documentation/networking/can.txt>

CANBus command line utilities:

can-utils (0.0+git20161220-1): <https://github.com/linux-can/can-utils>

LG Resu Monitoring application:

lgresu (1.0): <https://github.com/jens18/lgresu>

2.2. CANBus

2.2.1. Automated configuration

Configuration of the CANBus interface on the Raspberry PI has been automated in:

`/etc/rc.local`

```
# configure CANBus interface
/sbin/ip link set can0 type can bitrate 500000 restart-ms 100
/sbin/ifconfig can0 up
/sbin/ifconfig can0
/usr/bin/candump -n 5 can0
```

2.2.2. Manual configuration

The required speed for a CANBus node communicating with the LG Resu 10 LV is 500 kBit/s.

CANBus speed needs to be specified when configuring the Linux SocketCAN interface:

```
# /sbin/ip link set can0 type can bitrate 500000 restart-ms 100
```

The interface can be started with:

```
# /sbin/ifconfig can0 up
```

and stopped with:

```
# /sbin/ifconfig can0 down
```

Display interface details:

```
$ ifconfig can0
ifconfig can0
can0: flags=193<UP,RUNNING,NOARP> mtu 16
      unspec 00-00-00-00-00-00-00-00-00-00-00-00-00-00-00 txqueuelen 10
(UNSPEC)
      RX packets 868643 bytes 6949144 (6.6 MiB)
      RX errors 0 dropped 97 overruns 0 frame 0
      TX packets 8502 bytes 68016 (66.4 KiB)
      TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0
```

NOTE

It is normal to see **dropped** packets (in the example: 97). This number will increase until a CANBus application (for example: **candump**) connects to the interface for the first time.

2.3. DHCP

DHCP is enabled.

A *static lease* can be configured in the router for the MAC address contained in the output of the **ifconfig** command:

```
# ifconfig eth0
eth0: flags=4163<UP,BROADCAST,RUNNING,MULTICAST> mtu 1500
      inet 192.168.29.34 netmask 255.255.255.0 broadcast 192.168.29.255
      inet6 fe80::10ad:7c00:43c6:c9ef prefixlen 64 scopeid 0x20<link>
      ether b8:27:eb:d9:82:b1 txqueuelen 1000 (Ethernet)
      RX packets 2451 bytes 131185 (128.1 KiB)
      RX errors 0 dropped 2 overruns 0 frame 0
      TX packets 432 bytes 74969 (73.2 KiB)
      TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0
```

The example MAC address is:

```
b8:27:eb:d9:82:b1
```

2.4. SSH

Logging into the LG Resu Monitor system is possible using any SSH client:

```
$ ssh -l pi 192.168.X.Y
```

login: pi

password: raspberry

NOTE

`raspberr`y is the default `pi` user password for Rasbian and should be changed.

2.5. sudo

Login as the super user `root` is only possible via `sudo`:

```
$ sudo bash
#
```

`sudo` is enabled for the regular user `pi`.

2.6. HDMI

HDMI can be permanently disabled to reduce power consumption by removing the `#` character in front of the `tvservice` command in `/etc/rc.local`:

```
# turn HDMI circuit off
# /usr/bin/tvservice -o
```

WARNING

With HDMI disabled, it will not be possible to connect the Raspberry PI to a monitor / keyboard in the event a network connection can not be established.

HDMI can be re-enable with the command:

```
$ /usr/bin/tvservice -p
```

2.7. logrotate

Logfile rotation for the logfiles generated by the LG Resu CANBus Monitoring System has been configured in:

```
# more /etc/logrotate.d/lgresu
/opt/lgresu/log/*.log {
    missingok
    notifempty
    compress
    size 20k
    daily
    copytruncate
}
```

2.8. lgresu

The **lgresu** software package has been installed in:

/opt/lgresu

The ``lgresu'` software package contains the following files:

```
lgresu
├── bin
│   └── lg_resu_mon
├── doc
│   └── LgResuMon.pdf
├── log
│   ├── lg_resu_mon.log
│   ├── lg_resu_mon.log.1.gz
│   ├── lg_resu_mon.log.2.gz
│   ├── lg_resu_mon.log.3.gz
│   └── lg_resu_mon.log.4.gz
├── script
│   ├── can_stats.sh
│   ├── keep_alive.sh
│   └── start_interface.sh
└── start_lg_resu_mon.sh
```

The startup of the **lg_resu_mon** server program with the script **start_lg_resu_mon.sh** is integrated with the Rasbian operating system startup in:

/etc/rc.local

```
# lg_resu_mon
/opt/lgresu/start_lg_resu_mon.sh
```

The manual startup command is:

```
# /opt/lgresu/start_lg_resu_mon.sh
```

3. Monitoring

Display the decoded CANBus message data from the LG Resu 10 LV:


```
# cd /opt/lgresu/log
# tail -11 lg_resu_mon.log
max charge voltage = 57.70 [VDC]
max charge current = 91.30 [ADC]
max discharge current = 91.30 [ADC]

soc = 78 %
soh = 99 %

voltage = 54.71 [VDC]
current = 3.10 [ADC]
temperature = 18.9 [Celsius]
```

Display the raw CANBus message data from from the LG Resu 10 LV:

```
# /usr/bin/candump -n 5 can0
can0 359 [8] 00 00 00 00 00 00 00 00
can0 351 [8] 41 02 91 03 91 03 00 00
can0 355 [8] 4E 00 63 00 00 00 00 00
can0 356 [8] 60 15 1C 00 BD 00 00 00
can0 354 [8] 04 C0 00 1F 03 00 00 00
```

4. Troubleshooting

4.1. Problem: Node disconnected with the CANBus state **BUS-OFF** (and the flag: **NO-CARRIER**).

Example:

```
$ bash ./can_stats.sh
3: can0: <NO-CARRIER,NOARP,UP,ECHO> mtu 16 qdisc pfifo_fast state DOWN mode DEFAULT
group default qlen 10
  link/can promiscuity 0
  can state BUS-OFF restart-ms 0
    bitrate 500000 sample-point 0.750
    tq 250 prop-seg 2 phase-seg1 3 phase-seg2 2 sjw 1
    mcp251x: tseg1 3..16 tseg2 2..8 sjw 1..4 brp 1..64 brp-inc 1
    clock 4000000
    re-started bus-errors arbit-lost error-warn error-pass bus-off
      0          0          0          2          2          1          numtxqueues 1
gso_max_size 65536 gso_max_segs 65535
RX: bytes  packets  errors  dropped overrun mcast
355424    44451     0      530      0        0
TX: bytes  packets  errors  dropped carrier collsns
3440      430      0       0       0        0
```

In this condition, **top** output typically shows that the interrupt handler is consuming a high CPU percentage:

```
$ top
top - 07:39:29 up 9:29, 1 user, load average: 2.98, 2.78, 2.58
Tasks: 89 total, 2 running, 87 sleeping, 0 stopped, 0 zombie
%Cpu(s): 0.0 us, 96.3 sy, 0.0 ni, 3.7 id, 0.0 wa, 0.0 hi, 0.0 si, 0.0 st
KiB Mem : 444452 total, 221044 free, 22848 used, 200560 buff/cache
KiB Swap: 102396 total, 102396 free, 0 used. 369788 avail Mem

  PID USER      PR  NI   VIRT   RES   SHR S %CPU %MEM    TIME+  COMMAND
  562 root      -51   0     0       0       0 R  99.9  0.0 396:21.67 irq/185-mcp251x
 1208 pi        20   0   8096   3204   2720 R   1.5  0.7   0:00.20 top
 1128 root       20   0     0       0       0 S   0.2  0.0   0:00.29 kworker/0:2
 1160 pi        20   0  11636   3900   3136 S   0.2  0.9   0:00.25 sshd
```

Solution:

Restart the interface with the following commands:

```
# ip link set can0 down
# ip link set can0 up
```

Verify that the interface is now in the state **ERROR-ACTIVE** (normal operation).

Example:

```
# bash ../script/can_stats.sh
3: can0: <NOARP,UP,LOWER_UP,ECHO> mtu 16 qdisc pfifo_fast state UNKNOWN mode DEFAULT
group default qlen 10
    link/can promiscuity 0
    can state ERROR-ACTIVE restart-ms 100
    bitrate 500000 sample-point 0.750
    tq 250 prop-seg 2 phase-seg1 3 phase-seg2 2 sjw 1
    mcp251x: tseg1 3..16 tseg2 2..8 sjw 1..4 brp 1..64 brp-inc 1
    clock 4000000
    re-started bus-errors arbit-lost error-warn error-pass bus-off
        0          0          0          0          0          0          numtxqueues 1
gso_max_size 65536 gso_max_segs 65535
    RX: bytes  packets  errors  dropped overrun mcast
    45408      5676      0       0       0       0
    TX: bytes  packets  errors  dropped carrier collsns
    440        55       0       0       0       0
```