



CI-V REFERENCE GUIDE

HF/VHF/UHF ALL MODE
TRANSCEIVER

IC-705

TABLE OF CONTENTS

REMOTE CONTROL 2

Remote control (CI-V) information 2

◇ CI-V connection 2

◇ Preparing 2

◇ About the data format 2

◇ Command table 3

◇ Command formats 17

• Operating frequency 17

• Operating mode 17

• Band edge frequency settings 17

• Duplex Offset frequency setting 17

• Codes for CW message contents 17

• Memory content 18

• Codes for character entries 19

• Band stacking register 19

• Keyer memory character entries 20

• Keyer memory content 20

• IF filter width settings 20

• AGC time constant settings 20

• RX HPF/LPF setting for each operating mode... 20

• SSB/SSB-DATA

transmission passband width settings 20

• Split offset frequency setting 20

• UTC Offset setting 21

• Remote MIC Key setting 21

• Color settings 21

• Bandscope edge frequency settings 21

• [VOX/BK-IN] setting 21

• [AUTOTUNE/RX>CS] setting 22

• Manually entered position data 22

• D-PRS Symbol setting 22

• Alarm area (Group) setting 22

• Data mode with filter width settings 22

• Repeater tone/tone squelch frequency

settings 22

• DTCS code and polarity setting 22

• DV Digital code squelch setting 23

• DV MY call sign setting 23

• DV TX call signs setting

(24 characters or 8 characters) 23

• DV TX message setting 23

• DV RX call sign data 24

• DV RX message 24

• DV RX Status setting 24

• GPS/D-PRS data 25

• GPS/D-PRS message 26

• RIT frequency settings 27

• DV TX data 27

• DV RX data (transceive) 27

• MY position data 27

• Selected or unselected VFO frequency

settings 27

• Selected or unselected VFO's operating

mode and filter settings 27

• Scope waveform data 28

• Scope span settings
(in the Center mode and
SCROLL-C mode Scope) 29

• Scope Reference level settings 29

• Scope Fixed edge frequency settings 29

REMOTE CONTROL

Remote control (CI-V) information

◆CI-V connection


The transceiver's operating frequency, mode, VFO and memory selection, can be remotely controlled using a PC.

The Icom Communications Interface V (CI-V) controls the transceiver.

Connect the transceiver to a PC with a USB cable (User supplied).

① Make the connection as short as possible. The transceiver may not be recognized by the controller, depending on the USB cable length.

② When connecting to a USB port on your PC with the USB driver installed, USB (A) and USB (B) are named as "IC-705 Serial Port A (CI-V)" and "IC-705 Serial Port B."

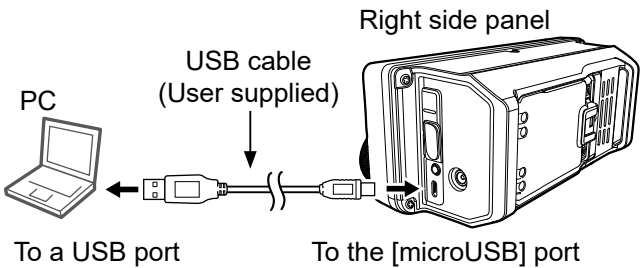

To use the USB cable between the transceiver and a PC, you must first install a USB driver. The latest USB driver and installation guide can be downloaded from the Icom website.

Carefully read the guide, before installing the driver.
<https://www.icomjapan.com/support/>

◆Preparing


The Icom Communications Interface V (CI-V) is used for remote control.

To control the transceiver, first set its address, data communication speed, and transceive function. These settings are set in the Set mode (Refer to the IC-705 instruction manual).

◆About the data format


The CI-V system can be written using the following data formats. Data formats differ according to command numbers. A data area or sub command is added for some commands.

Controller to IC-705

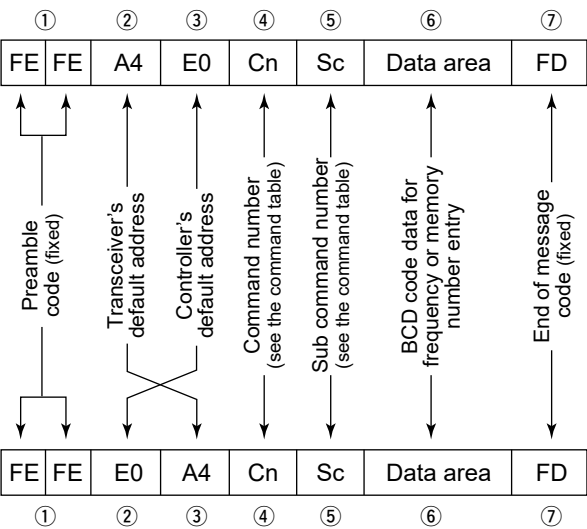


IC-705 to controller

OK message to controller

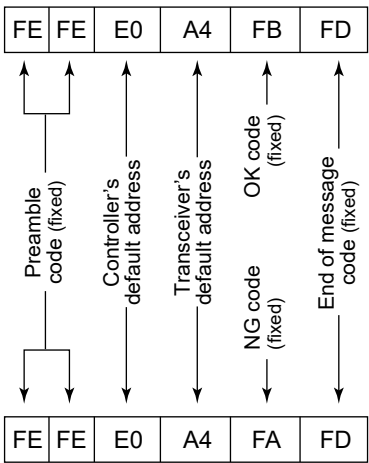

NG message to controller



REMOTE CONTROL

Remote control (CI-V) information

◇ Command table

Cmd.	Sub cmd.	Data	Description
00		See p. 17.	Send the frequency data (transceive)
01		See p. 17.	Send the mode data (transceive)
02* ¹		See p. 17.	Read the band edge frequencies
03* ¹		See p. 17.	Read the operating frequency
04* ¹		See p. 17.	Read the operating mode
05* ²		See p. 17.	Set the operating frequency
06* ²		See p. 17.	Set the operating mode
07			Select the VFO mode
	00		Select VFO A
	01		Select VFO B
	A0		Equalize VFO A and VFO B ① When the split frequency operation is OFF in the Memory mode or the Call channel mode, "FA" (NG) is returned.
	B0		Exchange VFO A and VFO B. ① When the split frequency operation is OFF in the Memory mode or the Call channel mode, "FA" (NG) is returned.
08* ²			Select the Memory mode
		0000 ~ 0099	Select the Memory channel (Memory channel: 0000 ~ 0099 Call channel: 0000 (144C1), 0001 (144C2), 0002 (430C1), 0003 (430C2))
	A0	0000 ~ 0100	Select the Memory group (Memory channel group: 0000 ~ 0099 Call channel group: 0100)
09			Memory write
0A			Memory copy to VFO
0B			Memory clear
0C* ¹		See p. 17.	Read frequency offset
0D* ²		See p. 17.	Send frequency offset
0E	00		Cancel the scan
	01		Start a Programmed/memory scan
	02		Start a Programmed scan
	03		Start a ΔF scan
	12		Start a Fine programmed scan
	13		Start a Fine ΔF scan
	22		Start a Memory scan
	23		Start a Select memory scan
	24		Start a Mode Select scan
	Ax* ² (x=1 ~ 7)		Select ΔF scan span (x=1 (±5kHz), x=2 (±10kHz), x=3 (±20kHz), x=4 (±50kHz), x=5 (±100kHz), x=6 (±500kHz), x=7 (±1MHz))
	B0* ²		Clear the Select channel setting

Cmd.	Sub cmd.	Data	Description
0E	B1* ²		Set as select channel ① The previously set number by CI-V is set after turning power ON, or "1" is selected if no selection is performed.
		01 ~ 03	Set the channel as a Select channel (01=SEL1, 02=SEL2, 03=SEL3)
	B2* ²	00 ~ 03	Set the Select memory scan channel (00=ALL, 01=SEL1, 02=SEL2, 03=SEL3)
	D0* ²		Set Scan resume OFF
	D3* ²		Set Scan resume ON (Close&Delay)
0F		00* ¹	Read Split OFF setting
		01* ¹	Read Split ON setting
		11* ¹	Read DUP- operation
		12* ¹	Read DUP+ operation
	00* ²		Set Split function OFF
	01* ²		Set Split function ON
	10* ²		Set the simplex operation
	11* ²		Set DUP- operation
	12* ²		Set DUP+ operation
10*		00 ~ 13	Send/read the tuning step (00=OFF (10Hz or 1Hz) 01=100Hz 02=500Hz 03=1kHz 04=5kHz 05=6.25kHz 06=8.33kHz 07=9kHz 08=10kHz 09=12.5kHz 10=20kHz 11=25kHz 12=50kHz 13=100kHz)
11*		00	Send/read attenuator OFF setting
		20	Send/read 20 dB attenuator setting ① You can set in the HF and 50 MHz bands.
13	00		Speech all data by voice synthesizer (S meter level, frequency, and mode)
	01		Speech the operating frequency and S meter level by voice synthesizer
	02		Speech the operating mode by voice synthesizer ① The mode is announced after the ongoing speech.
14*	01	0000 ~ 0255	Send/read the AF level (0000=Minimum ~ 0255=Maximum)
	02	0000 ~ 0255	Send/read the RF gain level (0000=Minimum ~ 0255=Maximum)
	03	0000 ~ 0255	Send/read the squelch level (0000=Minimum ~ 0255=Maximum)
	06	0000 ~ 0255	Send/read the NR level (0000=0% ~ 0255=100%)
	07	0000 ~ 0255	Send/read [TWIN PBT] (PBT1) position (0000=max. Counter Clockwise ~ 0128=center ~ 0255=max. Clockwise)
	08	0000 ~ 0255	Send/read [TWIN PBT] (PBT2) position (0000=max. Counter Clockwise ~ 0128=center ~ 0255=max. Clockwise)

REMOTE CONTROL

Remote control (CI-V) information

◇ Command table

Cmd.	Sub cmd.	Data	Description
14*	09	0000 ~ 0255	Send/read CW pitch (5 Hz steps) (0000=300 Hz ~ 0128=600 Hz ~ 0255=900 Hz)
	0A	0000 ~ 0255	Send/read the selected band's RF power (0000=Minimum ~ 0255=Maximum)
	0B	0000 ~ 0255	Send/read MIC gain (0000=Minimum ~ 0255=Maximum)
	0C	0000 ~ 0255	Send/read keying speed (0000=6 WPM ~ 0255=48 WPM)
	0D	0000 ~ 0255	Send/read Notch filter setting (0000=max. Counter Clockwise ~ 0128=center ~ 0255=max. Clockwise)
	0E	0000 ~ 0255	Send/read the COMP level (0000=0 ~ 0255=10)
	0F	0000 ~ 0255	Send/read the Break-IN Delay setting (0000=2.0d ~ 0255=13.0d)
	12	0000 ~ 0255	Send/read NB level (0000=0% ~ 0255=100%)
	15	0000 ~ 0255	Send/read Monitor audio [MONI] level (0000=0% ~ 0255=100%)
	16	0000 ~ 0255	Send/read the VOX gain (0000=0% ~ 0255=100%)
	17	0000 ~ 0255	Send/read the Anti VOX gain (0000=0% ~ 0255=100%)
	19	0000 ~ 0255	Send/read LCD backlight brightness (0000=0% ~ 0255=100%)
15*1	01	00/01	Read noise or S-meter squelch status (00=Close, 01=Open)
	02	0000 ~ 0255	Read S-meter level (0000=S0, 0120=S9, 0241=S9+60 dB)
	05	00/01	Read various squelch (tone squelch, and so on) status (00=Close, 01=Open)
	07	00/01	Read the OVF status (00=OVF indicator is OFF, 01=OVF indicator is ON)
	11	0000 ~ 0255	Read the Po meter level (0000=0% ~ 0143=50% ~ 0213=100%)
	12	0000 ~ 0255	Read SWR meter level (0000=SWR1.0, 0048=SWR1.5, 0080=SWR2.0, 0120=SWR3.0)
	13	0000 ~ 0255	Read ALC meter level (0000=Minimum ~ 0120=Maximum)
	14	0000 ~ 0255	Read COMP meter level (0000=0 dB ~ 0130=15 dB ~ 0210=25.5 dB)
	15	0000 ~ 0255	Read Vd meter level (0000=0 V ~ 0075=5 V ~ 0241=16 V)
16*	02	00 ~ 02	Send/read the Preamp (00=OFF, 01=P.AMP1, 02=P.AMP2) (In the 144 or 430 MHz bands, 00=OFF, 01=ON)
	12	01 ~ 03	Send/read the AGC time constant (01=FAST, 02=MID, 03=SLOW)

Cmd.	Sub cmd.	Data	Description
16*	22	00/01	Send/read the Noise blanker (00=OFF, 01=ON)
	40	00/01	Send/read the Noise reduction (00=OFF, 01=ON)
	41	00/01	Send/read the Auto Notch function (00=OFF, 01=ON)
	42	00/01	Send/read the Repeater tone (00=OFF, 01=ON)
	43	00/01	Send/read the Tone squelch (00=OFF, 01=ON)
	44	00/01	Send/read the Speech compressor (00=OFF, 01=ON)
	45	00/01	Send/read the Monitor [MONI] function (00=OFF, 01=ON)
	46	00/01	Send/read the VOX function (00=OFF, 01=ON)
	47	00 ~ 02	Send/read the BK-IN function (00=BK-IN OFF, 01=Semi BK-IN ON, 02=Full BK-IN ON)
	48	00/01	Send/read the Manual Notch function (00=OFF, 01=ON)
	4B	00/01	Send/read the DTCS function (00=OFF, 01=ON)
	4F	00/01	Send/read the Twin peak filter (00=OFF, 01=ON) (Can be turned ON only when Mark and Shift are set to 2125 Hz and 170 Hz, respectively)
	50	00/01	Send/read the Dial lock function (00=OFF, 01=ON)
	56	00/01	Send/read DSP IF filter type in the operating band (00=SHARP, 01=SOFT)
	57	00 ~ 02	Send/read the Manual Notch width (00=WIDE, 01=MID, 02=NAR)
	58	00 ~ 02	Send/read SSB transmit bandwidth (00=WIDE, 01=MID, 02=NAR) (One of following values is applied, depending on the "COMP" status (ON or OFF): WIDE (Command: 1A 05 0017), MID (Command: 1A 05 0018), or NAR (Command: 1A 05 0019))
	5B	00 ~ 02	Send/read the DSQ (Digital Call Sign squelch)/CSQ (Digital Code squelch) setting (DV mode only) (00=OFF, 01=DSQ, 02=CSQ)
	5C	00 ~ 02	Send/read the GPS TX mode (00=OFF, 01=D-PRS, 02=NMEA)
	5D	00 ~ 03, 06 ~ 09	Send/read the Tone squelch function (00=OFF, 01=TONE, 02=TSQ, 03=DTCS, 06=DTCS (T), 07=TONE (T)/DTCS (R), 08=DTCS (T)/TSQ (R), 09=TONE (T)/TSQ (R))
17*3		See p. 17.	Send CW messages
18	00		Turn OFF the transceiver
	01*4		Turn ON the transceiver

REMOTE CONTROL

Remote control (CI-V) information

◇ Command table

Cmd.	Sub cmd.	Data	Description
19*1	00		Read the transceiver ID
1A*	00	See pp. 18 and 19.	Send/read memory contents
	01	See p. 19.	Send/read band stacking register contents
	02*5	See p. 20.	Send/read memory keyer contents
	03	See p. 20.	Send/read the selected IF filter width
	04	See p. 20.	Send/read the selected AGC time constant
	05	SET > Tone Control/TBW	
	0001	See p. 20.	RX > SSB > Send/read RX HPF/LPF settings
	0002	00 ~ 10	RX > SSB > Send/read RX Tone (Bass) level (00=-5 ~ 10=+5)
	0003	00 ~ 10	RX > SSB > Send/read RX Tone (Treble) level (00=-5 ~ 10=+5)
	0004	See p. 20.	RX > AM > Send/read RX HPF/LPF settings
	0005	00 ~ 10	RX > AM > Send/read RX Tone (Bass) level (00=-5 ~ 10=+5)
	0006	00 ~ 10	RX > AM > Send/read RX Tone (Treble) level (00=-5 ~ 10=+5)
	0007	See p. 20.	RX > FM > Send/read RX HPF/LPF settings
	0008	00 ~ 10	RX > FM > Send/read RX Tone (Bass) level (00=-5 ~ 10=+5)
	0009	00 ~ 10	RX > FM > Send/read RX Tone (Treble) level (00=-5 ~ 10=+5)
	0010	See p. 20.	RX > DV > Send/read RX HPF/LPF settings
	0011	00 ~ 10	RX > DV > Send/read RX Tone (Bass) level (00=-5 ~ 10=+5)
	0012	00 ~ 10	RX > DV > Send/read RX Tone (Treble) level (00=-5 ~ 10=+5)
	0013	00 ~ 10	RX > WFM > Send/read RX Tone (Bass) level (00=-5 ~ 10=+5)
	0014	00 ~ 10	RX > WFM > Send/read RX Tone (Treble) level (00=-5 ~ 10=+5)
	0015	See p. 20.	RX > CW > Send/read RX HPF/LPF settings
	0016	See p. 20.	RX > RTTY > Send/read RX HPF/LPF settings
	0017	00 ~ 10	TX > SSB > Send/read TX Tone (Bass) level (00=-5 ~ 10=+5)
	0018	00 ~ 10	TX > SSB > Send/read TX Tone (Treble) level (00=-5 ~ 10=+5)
	0019	See p. 20.	TX > SSB > Send/read TX bandwidth for wide

Cmd.	Sub cmd.	Data	Description
1A*	05	SET > Tone Control/TBW	
	0020	See p. 20.	TX > SSB > Send/read TX bandwidth for mid
	0021	See p. 20.	TX > SSB > Send/read TX bandwidth for narrow
	0022	See p. 20.	TX > SSB-D > Send/read TX bandwidth
	0023	00 ~ 10	TX > AM > Send/read TX Tone (Bass) level (00=-5 ~ 10=+5)
	0024	00 ~ 10	TX > AM > Send/read TX Tone (Treble) level (00=-5 ~ 10=+5)
	0025	00 ~ 10	TX > FM > Send/read TX Tone (Bass) level (00=-5 ~ 10=+5)
	0026	00 ~ 10	TX > FM > Send/read TX Tone (Treble) level (00=-5 ~ 10=+5)
	0027	00 ~ 10	TX > DV > Send/read TX Tone (Bass) level (00=-5 ~ 10=+5)
	0028	00 ~ 10	TX > DV > Send/read TX Tone (Treble) level (00=-5 ~ 10=+5)
		SET > Function	
	0029	0000 ~ 0255	Send/read the Beep Level setting (0000=Minimum ~ 0255=Maximum)
	0030	00/01	Send/read the Beep Level Limit setting (00=OFF, 01=ON)
	0031	00/01	Send/read the Beep (Confirmation) setting (00=OFF, 01=ON)
	0032	00/01	Send/read the Home CH Beep setting (00=OFF, 01=ON)
	0033	00 ~ 03	Send/read the Band Edge Beep setting (00=OFF, 01=ON (Default), 02=ON (User), 03=ON (User) & TX Limit)
	0034	00 ~ 04	Send/read the Auto Power OFF setting (00=OFF, 01=30 min, 02=60 min, 03=90 min, 04=120 min)
	0035	00 ~ 03	Send/read the Power Save setting (00=OFF, 01=Auto (Short), 02=Auto (Middle), 03=Auto (Long))
	0036	00 ~ 03	Send/read the Max TX Power (Battery Pack) setting (00=0.5 W, 01=1 W, 02=2.5 W, 03=5 W)
	0037	00 ~ 04	Send/read the Max TX Power (DC 13.8V) setting (00=0.5 W, 01=1 W, 02=2.5 W, 03=5 W, 04=10 W)
	0038	00 ~ 05	Send/read the TX Delay (HF) setting (00=OFF, 01=10 ms, 02=15 ms, 03=20 ms, 04=25 ms, 05=30 ms)

REMOTE CONTROL

Remote control (CI-V) information

◇ Command table

Cmd.	Sub cmd.	Data	Description
1A*	05	SET > Function	
	0039	00 ~ 05	Send/read the TX Delay (50 MHz) setting (00=OFF, 01=10 ms, 02=15 ms, 03=20 ms, 04=25 ms, 05=30 ms)
	0041	00 ~ 05	Send/read the TX Delay (144 MHz) setting (00=OFF, 01=10 ms, 02=15 ms, 03=20 ms, 04=25 ms, 05=30 ms)
	0042	00 ~ 05	Send/read the TX Delay (430 MHz) setting (00=OFF, 01=10 ms, 02=15 ms, 03=20 ms, 04=25 ms, 05=30 ms)
	0043	00 ~ 05	Send/read the Time-Out Timer setting (00=OFF, 01=3 min, 02=5 min, 03=10 min, 04=20 min, 05=30 min)
	0044	00/01	Send/read the PTT Lock setting (00=OFF, 01=ON)
	0045	00/01	SPLIT > Send/read the Quick SPLIT setting (00=OFF, 01=ON)
	0046	See p. 20.	SPLIT > Send/read the SPLIT Offset setting
	0047	00/01	SPLIT > Send/read the SPLIT LOCK setting (00=OFF, 01=ON)
	0048	00/01	Tuner > Send/read the PTT Start setting (00=OFF, 01=ON)
	0049	00 ~ 02	Send/read the Auto Repeater setting (00=OFF, 01=ON (DUP), 02=ON (DUP,TONE))
	0050	00 ~ 02	Send/read the RTTY Mark Frequency setting (00=1275 Hz, 01=1615 Hz, 02=2125 Hz)
	0051	00 ~ 02	Send/read the RTTY Shift Width setting (00=170 Hz, 01=200 Hz, 02=425 Hz)
	0052	00/01	Send/read the RTTY Keying Polarity setting (00=Normal, 01=Reverse)
	0053	00/01	SPEECH > Send/read the SPEECH Language setting (00=Japanese, 01=English)
	0054	00/01	SPEECH > Send/read the Alphabet setting (00=Normal, 01=Phonetic Code)
	0055	00/01	SPEECH > Send/read the SPEECH Speed setting (00=Slow, 01=Fast)
	0056	00 ~ 02	SPEECH > Send/read the RX Call Sign SPEECH setting (00=OFF, 01=ON (Kerchunk), 02=ON (All))

Cmd.	Sub cmd.	Data	Description
1A*	05	SET > Function	
	0057	00/01	SPEECH > Send/read the RX>CS SPEECH setting (00=OFF, 01=ON)
	0058	00/01	SPEECH > Send/read the MIC Up/Down SPEECH setting (00=OFF, 01=ON)
	0059	00/01	SPEECH > Send/read the S-Level SPEECH setting (00=OFF, 01=ON)
	0060	00/01	SPEECH > Send/read the MODE SPEECH setting (00=OFF, 01=ON)
	0061	0000 ~ 0255	SPEECH > Send/read the SPEECH Level setting (0000=0% ~ 0255=100%)
	0062	00/01	Send/read the [SPEECH/LOCK] Switch setting (00=SPEECH/LOCK, 01=LOCK/SPEECH)
	0063	00/01	Send/read the Lock Function setting (00=MAIN DIAL, 01=PANEL)
	0064	00/01	Send/read the Memo Pad Quantity setting (00=5 ch, 01=10 ch)
	0065	00 ~ 02	Send/read the MAIN DIAL Auto TS setting (00=OFF, 01=Low, 02=High)
	0066	00/01	Send/read the MIC Up/Down Speed setting (00=Slow, 01=Fast)
	0067	00 ~ 02	Send/read the [NOTCH] Switch (SSB) setting (00=Auto, 01=Manual, 02=Auto/Manual)
	0068	00 ~ 02	Send/read the [NOTCH] Switch (AM) setting (00=Auto, 01=Manual, 02=Auto/Manual)
	0069	00/01	Send/read the SSB/CW Synchronous Tuning setting (00=OFF, 01=ON)
	0070	00/01	Send/read the CW Normal Side setting (00=LSB, 01=USB)
	0071	00/01	Send/read the Charging (Power ON) setting (00=OFF, 01=ON)
	0072	00/01	Send/read the USB Power Input (Phone, Tablet, PC) setting (00=OFF, 01=ON)
	0073	00/01	Send/read the Power OFF Setting (for Remote Control) setting (00=Shutdown only, 01=Standby/Shutdown)
		SET > Function > Remote MIC Key	
	0074	See p. 21.	Send/read the [A] setting
	0075	See p. 21.	Send/read the [B] setting
	0076	See p. 21.	Send/read the [△] setting
	0077	See p. 21.	Send/read the [▽] setting

REMOTE CONTROL

Remote control (CI-V) information

◇ Command table

Cmd.	Sub cmd.	Data	Description
1A*	05	SET > Function > Remote MIC Key	
		0078 00/01	Send/read the Mode Select (SSB) setting (00=OFF, 01=ON)
		0079 00/01	Send/read the Mode Select (CW) setting (00=OFF, 01=ON)
		0080 00/01	Send/read the Mode Select (RTTY) setting (00=OFF, 01=ON)
		0081 00/01	Send/read the Mode Select (AM) setting (00=OFF, 01=ON)
		0082 00/01	Send/read the Mode Select (FM) setting (00=OFF, 01=ON)
		0083 00/01	Send/read the Mode Select (DV) setting (00=OFF, 01=ON)
		0084 00/01	Send/read the Mode Select (WFM) setting (00=OFF, 01=ON)
	SET > Function		
	0085	00/01	Send/read the Keyboard Type setting (00=Ten-key, 01=Full Keyboard)
		00 ~ 02	Send/read the Full Keyboard Layout setting (00=English, 01=German, 02=French)
	0087	00/01	Send/read the Screen Capture [POWER] Switch setting (00=OFF, 01=ON)
	0088	00/01	Send/read the Screen Capture File Type setting (00=PNG, 01=BMP)
	0089	0000 ~ 0511	Send/read the REF Adjust setting (0000=0% ~ 0511=100%)
	SET > DV Set		
	0090	00 ~ 03	Send/read the Standby Beep setting (00=OFF, 01=ON, 02=ON (to me:High Tone), 03=ON (to me:Alarm/High Tone))
	0091	00 ~ 03	Send/read the Auto Reply setting (00=OFF, 01=ON, 02=Voice, 03=Position)
	0092	00/01	Send/read the DV Data TX setting (00=PTT, 01=Auto)
	0093	00/01	DV Fast Data > Send/read the Fast Data setting (00=OFF, 01=ON)
	0094	00/01	DV Fast Data > Send/read the GPS Data Speed setting (00=Slow, 01=Fast)
	0095	00 ~ 10	DV Fast Data > Send/read the TX Delay (PTT) setting (00=OFF, 01=1sec ~ 10=10sec)
	0096	00 ~ 02	Send/read the Digital Monitor setting (00=Auto, 01=Digital, 02=Analog)

Cmd.	Sub cmd.	Data	Description
1A*	05	SET > DV Set	
		0097 00/01	Send/read the Digital Repeater Set setting (00=OFF, 01=ON)
		0098 00/01	Send/read the DV Auto Detect setting (00=OFF, 01=ON)
		0099 00/01	Send/read the RX Record (RPT) setting (00=ALL, 01=Latest Only)
		0100 00/01	Send/read the BK setting (00=OFF, 01=ON)
		0101 00/01	Send/read the EMR setting (00=OFF, 01=ON)
		0102 0000 ~ 0255	Send/read the EMR AF Level setting (0000=0% ~ 0255=100%)
	SET > QSO/RX Log		
	0103	00/01	Send/read the QSO Log setting (00=OFF, 01=ON)
	0104	00/01	Send/read the RX History Log setting (00=OFF, 01=ON)
	0105	00 ~ 02	CSV Format > Send/read the Separator/Decimal setting (00=Separator is “,” and Decimal is “.”, 01=Separator is “;” and Decimal is “.”, 02=Separator is “;” and Decimal is “,”)
	0106	00 ~ 02	CSV Format > Send/read the Date setting (00=“yyyy/mm/dd,” 01=“mm/dd/yyyy,” 02=“dd/mm/yyyy”)
	SET > Connectors		
	0107	00 ~ 02	Send/read the SP Jack Function setting (00=Speaker, 01=Phone, 02=Phone (L+R))
	0108	00 ~ 30	Send/read the Phones Level setting (00=-15 ~ 30=+15)
	0109	00/01	USB AF/IF Output > Send/read the Output Select setting (00=AF, 01=IF)
	0110	0000 ~ 0255	USB AF/IF Output > Send/read the AF Output Level setting (0000=0% ~ 0255=100%)
	0111	00/01	USB AF/IF Output > Send/read the AF SQL setting (00=OFF (Open), 01=ON)
	0112	00/01	USB AF/IF Output > Send/read the AF Beep/Speech... Output setting (00=OFF, 01=ON)
	0113	0000 ~ 0255	USB AF/IF Output > Send/read the IF Output Level setting (0000=0% ~ 0255=100%)
	0114	00/01	WLAN AF/IF Output > Send/read the Output Select setting (00=AF, 01=IF)
	0115	00/01	WLAN AF/IF Output > Send/read the AF SQL setting (00=OFF (Open), 01=ON)

REMOTE CONTROL

Remote control (CI-V) information

◇ Command table

Cmd.	Sub cmd.	Data	Description
1A*	05	SET > Connectors	
	0116	0000 ~ 0255	MOD Input > Send/read the USB MOD Level setting (0000=0% ~ 0255=100%)
	0117	0000 ~ 0255	MOD Input > Send/read the WLAN MOD Level setting (0000=0% ~ 0255=100%)
	0118	00 ~ 03	MOD Input > Send/read the DATA OFF MOD setting (00=MIC, 01=USB, 02=MIC, USB, 03=WLAN)
	0119	00 ~ 03	MOD Input > Send/read the DATA MOD setting (00=MIC, 01=USB, 02=MIC, USB, 03=WLAN)
	0120	00/01	SEND Output > Send/read the HF setting (00=OFF, 01=ON)
	0121	00/01	SEND Output > Send/read the 50M setting (00=OFF, 01=ON)
	0123	00/01	SEND Output > Send/read the 144M setting (00=OFF, 01=ON)
	0124	00/01	SEND Output > Send/read the 430M setting (00=OFF, 01=ON)
	0125	00 ~ 04	USB SEND/Keying > Send/read the USB SEND setting (00=OFF, 01=USB (A) DTR, 02=USB (A) RTS, 03=USB (B) DTR, 04=USB (B) RTS) ① You cannot select the terminal which is already selected in the "USB Keying (CW)" or "USB Keying (RTTY)" item.
	0126	00 ~ 04	USB SEND/Keying > Send/read the USB Keying (CW) setting (00=OFF, 01=USB (A) DTR, 02=USB (A) RTS, 03=USB (B) DTR, 04=USB (B) RTS) ① You cannot select the terminal which is already selected in the "USB SEND" or "USB Keying (RTTY)" item.
	0127	00 ~ 04	USB SEND/Keying > Send/read the USB Keying (RTTY) setting (00=OFF, 01=USB (A) DTR, 02=USB (A) RTS, 03=USB (B) DTR, 04=USB (B) RTS) ① You cannot select the terminal which is already selected in the "USB SEND" or "USB Keying (CW)" item.
	0128	00/01	External Keypad > Send/read the VOICE setting (00=OFF, 01=ON)

Cmd.	Sub cmd.	Data	Description
1A*	05	SET > Connectors	
	0129	00/01	External Keypad > Send/read the KEYER setting (00=OFF, 01=ON)
	0130	00/01	External Keypad > Send/read the RTTY setting (00=OFF, 01=ON)
	0131	00/01	CI-V > Send/read the CI-V Transceive setting (00=OFF, 01=ON)
	0132	00/01	CI-V > Send/read the CI-V USB Echo Back setting (00=OFF, 01=ON)
	0133	00 ~ 03	USB (B) Function > Send/read the USB (B) Function setting (00=OFF, 01=RTTY Decode, 02=DV Data, 03=Weather)
	0134	00/01	USB (B) Function > Send/read the GPS Out setting (00=OFF, 01=ON) ① It is valid when "USB (B) Function" is set to "OFF" or "DV Data."
	0135	00/01	Send/read the MIC Jack 8V Output setting (00=OFF, 01=ON)
		SET > Display	
	0136	0000 ~ 0255	Send/read the LCD Backlight setting (0000=0% ~ 0255=100%)
	0137	00/01	Send/read the LCD Backlight Auto Adjust setting (00=OFF, 01=ON)
	0138	00 ~ 06	Send/read the Screen Saver (Battery Pack) setting (00=OFF, 01=1min, 02=2min, 03=5min, 04=15min, 05=30min, 06=60min)
	0139	00 ~ 06	Send/read the Screen Saver (DC 13.8 V) setting (00=OFF, 01=1min, 02=2min, 03=5min, 04=15min, 05=30min, 06=60min)
	0140	00/01	Send/read the Screen OFF [POWER] Switch setting (00=OFF, 01=ON)
	0141	00/01	Send/read the RX LED setting (00=OFF, 01=ON)
	0142	00/01	Send/read the Meter Peak Hold setting (00=OFF, 01=ON)
	0143	00/01	Send/read the Memory Name setting (00=OFF, 01=ON)
	0144	00/01	Send/read the Group Name Popup setting (00=OFF, 01=ON)

REMOTE CONTROL

Remote control (CI-V) information

◇ Command table

Cmd.	Sub cmd.	Data	Description
1A*	05	SET > Display	
		0145 00 ~ 03	Send/read the RX Call Sign Display setting (00=OFF, 01=Normal, 02=RX Hold, 03=Hold)
		0146 00/01	Send/read the RX Position Indicator setting (00=OFF, 01=ON)
		0147 00/01	Send/read the RX Position Display setting (00=OFF, 01=ON)
		0148 00 ~ 04	Send/read the RX Position Display Timer setting (00=5sec, 01=10sec, 02=15sec, 03=30sec, 04=Hold)
		0149 00/01	Send/read the Reply Position Display setting (00=OFF, 01=ON)
		0150 00/01	Send/read the RX Picture Indicator setting (00=OFF, 01=ON)
		0151 00/01	Send/read the DV RX Backlight setting (00=OFF, 01=ON)
		0152 00 ~ 02	Send/read the TX Call Sign Display setting (00=OFF, 01=Your Call Sign, 02=My Call Sign)
		0153 00/01	Send/read the Scroll Speed setting (00=Slow, 01=Fast)
		0154 00/01	Send/read the Opening Message setting (00=OFF, 01=ON)
		0155 00/01	Send/read the Power ON Check setting (00=OFF, 01=ON)
		0156 00 ~ 02	Display Unit > Send/read the Latitude/Longitude setting (00=ddd°mm.mm', 01=ddd°mm'ss", 02=ddd.ddd°)
		0157 00/01	Display Unit > Send/read the Altitude/Distance setting (00=m, 01=ft/mi)
		0158 00 ~ 02	Display Unit > Send/read the Speed setting (00=km/h, 01=mph, 02=knots)
		0159 00/01	Display Unit > Send/read the Temperature setting (00=°C, 01=°F)
		0160 00 ~ 03	Display Unit > Send/read the Barometric setting (00=hPa, 01=mb, 02=mmHg, 03=inHg)
		0161 00/01	Display Unit > Send/read the Rainfall setting (00=mm, 01=inch)
		0162 00 ~ 03	Display Unit > Send/read the Wind Speed setting (00=m/s, 01=km/h, 02=mph, 03=knots)
		0163 00/01	Send/read the Display Language setting (00=English, 01=Japanese)
		0164 00/01	Send/read the System Language setting (00=English, 01=Japanese)

Cmd.	Sub cmd.	Data	Description
1A*	05	SET > Time Set	
		0165 20200101 ~ 20991231	Date/Time > Send/read the Date setting (20200101=2020/1/1~ 20991231=2099/12/31)
		0166 0000 ~ 2359	Date/Time > Send/read the Time setting (0000=00:00 ~ 2359=23:59)
		0167 00/01	Date/Time > Send/read the NTP Function setting (00=OFF, 01=ON)
		0168 See p. 19.	Date/Time > Send/read the NTP Server Address setting (Up to 64 characters)
		0169 00/01	Date/Time > Send/read the GPS Time Correct setting (00=OFF, 01=Auto)
		0170 See p. 21.	Send/read the UTC Offset setting
		SET > SD Card	
		0171 00 ~ 02	Import/Export > CSV Format > Send/read the Separator/Decimal setting (00=Separator is " ," and Decimal is " . ," 01=Separator is " ; " and Decimal is " . ," 02=Separator is " ; " and Decimal is " , ")
		0172 00 ~ 02	Import/Export > CSV Format > Send/read the Date setting (00="yyyy/mm/dd," 01="mm/dd/yyyy," 02="dd/mm/yyyy")
		SCOPE > SCOPE SET	
		0173 00/01	Send/read the Scope during Tx (CENTER Type) setting (00=OFF, 01=ON)
		0174 00 ~ 02	Send/read the Max Hold setting (00=OFF, 01=10s Hold, 02=ON)
		0175 00 ~ 02	Send/read the CENTER Type Display setting (00=Filter Center, 01=Carrier Point Center, 02=Carrier Point Center (Abs. Freq.))
		0176 00/01	Send/read the Marker Position (FIX Type/SCROLL Type) setting (00=Filter Center, 01=Carrier Point)
		0177 00/01	Send/read the VBW setting (00=Narrow, 01=Wide)
		0178 00 ~ 03	Send/read the Averaging setting (00=OFF, 01=2, 02=3, 03=4)
		0179 00/01	Send/read the Waveform Type setting (00=Fill, 01=Fill+Line)
		0180 See p. 21.	Send/read the Waveform Color (Current) setting
		0181 See p. 21.	Send/read the Waveform Color (Line) setting
		0182 See p. 21.	Send/read the Waveform Color (Max Hold) setting
		0183 00/01	Send/read the Waterfall Display setting (00=OFF, 01=ON)

REMOTE CONTROL

Remote control (CI-V) information

◇ Command table

Cmd.	Sub cmd.	Data	Description
1A*	05	SCOPE > SCOPE SET	
		0184 00 ~ 02	Send/read the Waterfall Speed setting (00=Slow, 01=Mid, 02=Fast)
		0185 00 ~ 02	Send/read the Waterfall Size (Expand Screen) setting (00=Small, 01=Mid, 02=Large)
		0186 00 ~ 07	Send/read the Waterfall Peak Color Level setting (00=Grid1 ~ 07=Grid8)
		0187 00/01	Send/read the Waterfall Marker Auto-hide setting (00=OFF, 01=ON)
		0188 See p. 21.	FIX Edges > 0.03 - 1.60 > Send/read the No.1 setting
		0189 See p. 21.	FIX Edges > 0.03 - 1.60 > Send/read the No.2 setting
		0190 See p. 21.	FIX Edges > 0.03 - 1.60 > Send/read the No.3 setting
		0191 See p. 21.	FIX Edges > 1.60 - 2.00 > Send/read the No.1 setting
		0192 See p. 21.	FIX Edges > 1.60 - 2.00 > Send/read the No.2 setting
		0193 See p. 21.	FIX Edges > 1.60 - 2.00 > Send/read the No.3 setting
		0194 See p. 21.	FIX Edges > 2.00 - 6.00 > Send/read the No.1 setting
		0195 See p. 21.	FIX Edges > 2.00 - 6.00 > Send/read the No.2 setting
		0196 See p. 21.	FIX Edges > 2.00 - 6.00 > Send/read the No.3 setting
		0197 See p. 21.	FIX Edges > 6.00 - 8.00 > Send/read the No.1 setting
		0198 See p. 21.	FIX Edges > 6.00 - 8.00 > Send/read the No.2 setting
		0199 See p. 21.	FIX Edges > 6.00 - 8.00 > Send/read the No.3 setting
		0200 See p. 21.	FIX Edges > 8.00 - 11.00 > Send/read the No.1 setting
		0201 See p. 21.	FIX Edges > 8.00 - 11.00 > Send/read the No.2 setting
		0202 See p. 21.	FIX Edges > 8.00 - 11.00 > Send/read the No.3 setting
		0203 See p. 21.	FIX Edges > 11.00 - 15.00 > Send/read the No.1 setting
		0204 See p. 21.	FIX Edges > 11.00 - 15.00 > Send/read the No.2 setting
		0205 See p. 21.	FIX Edges > 11.00 - 15.00 > Send/read the No.3 setting
		0206 See p. 21.	FIX Edges > 15.00 - 20.00 > Send/read the No.1 setting
		0207 See p. 21.	FIX Edges > 15.00 - 20.00 > Send/read the No.2 setting
		0208 See p. 21.	FIX Edges > 15.00 - 20.00 > Send/read the No.3 setting
		0209 See p. 21.	FIX Edges > 20.00 - 22.00 > Send/read the No.1 setting
		0210 See p. 21.	FIX Edges > 20.00 - 22.00 > Send/read the No.2 setting

Cmd.	Sub cmd.	Data	Description
1A*	05	SCOPE > SCOPE SET	
		0211 See p. 21.	FIX Edges > 20.00 - 22.00 > Send/read the No.3 setting
		0212 See p. 21.	FIX Edges > 22.00 - 26.00 > Send/read the No.1 setting
		0213 See p. 21.	FIX Edges > 22.00 - 26.00 > Send/read the No.2 setting
		0214 See p. 21.	FIX Edges > 22.00 - 26.00 > Send/read the No.3 setting
		0215 See p. 21.	FIX Edges > 26.00 - 30.00 > Send/read the No.1 setting
		0216 See p. 21.	FIX Edges > 26.00 - 30.00 > Send/read the No.2 setting
		0217 See p. 21.	FIX Edges > 26.00 - 30.00 > Send/read the No.3 setting
		0218 See p. 21.	FIX Edges > 30.00 - 45.00 > Send/read the No.1 setting
		0219 See p. 21.	FIX Edges > 30.00 - 45.00 > Send/read the No.2 setting
		0220 See p. 21.	FIX Edges > 30.00 - 45.00 > Send/read the No.3 setting
		0221 See p. 21.	FIX Edges > 45.00 - 60.00 > Send/read the No.1 setting
		0222 See p. 21.	FIX Edges > 45.00 - 60.00 > Send/read the No.2 setting
		0223 See p. 21.	FIX Edges > 45.00 - 60.00 > Send/read the No.3 setting
		0224 See p. 21.	FIX Edges > 60.00 - 74.80 > Send/read the No.1 setting
		0225 See p. 21.	FIX Edges > 60.00 - 74.80 > Send/read the No.2 setting
		0226 See p. 21.	FIX Edges > 60.00 - 74.80 > Send/read the No.3 setting
		0227 See p. 21.	FIX Edges > 74.80 - 108.00 > Send/read the No.1 setting
		0228 See p. 21.	FIX Edges > 74.80 - 108.00 > Send/read the No.2 setting
		0229 See p. 21.	FIX Edges > 74.80 - 108.00 > Send/read the No.3 setting
		0230 See p. 21.	FIX Edges > 108.00 - 137.00 > Send/read the No.1 setting
		0231 See p. 21.	FIX Edges > 108.00 - 137.00 > Send/read the No.2 setting
		0232 See p. 21.	FIX Edges > 108.00 - 137.00 > Send/read the No.3 setting
		0233 See p. 21.	FIX Edges > 137.00 - 200.00 > Send/read the No.1 setting
		0234 See p. 21.	FIX Edges > 137.00 - 200.00 > Send/read the No.2 setting
		0235 See p. 21.	FIX Edges > 137.00 - 200.00 > Send/read the No.3 setting
		0236 See p. 21.	FIX Edges > 400.00 - 470.00 > Send/read the No.1 setting
		0237 See p. 21.	FIX Edges > 400.00 - 470.00 > Send/read the No.2 setting
		0238 See p. 21.	FIX Edges > 400.00 - 470.00 > Send/read the No.3 setting

REMOTE CONTROL

Remote control (CI-V) information

◇ Command table

Cmd.	Sub cmd.	Data	Description
1A*	05	AUDIO > AUDIO SCOPE SET	
		0239 00/01	Send/read the FFT Scope Waveform Type setting (00=Line, 01=Fill)
		0240 See p. 21.	Send/read the FFT Scope Waveform Color setting
		0241 00/01	Send/read the FFT Scope Waterfall Display setting (00=OFF, 01=ON)
		0242 See p. 21.	Send/read the Oscilloscope Waveform Color setting
		VOICE	
		0243 0000 ~ 0255	Send/read the TX LEVEL setting (0000=0% ~ 0255=100%)
		0244 00/01	VOICE TX SET > Send/read the Auto Monitor setting (00=OFF, 01=ON)
		0245 01 ~ 15	VOICE TX SET > Send/read the Repeat Time setting (01=1sec ~ 15=15sec)
		KEYER > KEYER 001	
		0246 00 ~ 04	Send/read the Number Style setting (00=Normal, 01=190→ANO, 02=190→ANT, 03=90→NO, 04=90→NT)
		0247 01 ~ 08	Send/read the Count Up Trigger setting (01=M1 ~ 08=M8)
		0248 0001 ~ 9999	Send/read Present Number setting (0001=1 ~ 9999=9999)
		KEYER > CW-KEY SET	
		0249 0000 ~ 0255	Send/read Side Tone Level setting (0000=0% ~ 0255=100%)
		0250 00/01	Send/read Side Tone Level Limit setting (00=OFF, 01=ON)
		0251 01 ~ 60	Send/read Keyer Repeat Time setting (01=1sec ~ 60=60sec)
		0252 28 ~ 45	Send/read Dot/Dash Ratio setting (28=1:1:2.8 ~ 45=1:1:4.5 in 0.1 steps)
		0253 00 ~ 03	Send/read Rise Time setting (00=2ms, 01=4ms, 02=6ms, 03=8ms)
		0254 00/01	Send/read Paddle Polarity setting (00=Normal, 01=Reverse)
		0255 00 ~ 02	Send/read Key Type setting (00=Straight, 01=Bug, 02=Paddle)
		0256 00 ~ 02	Send/read MIC Up/Down Keyer setting (00=OFF, 01=ON (UP/DOWN), 02=ON (A/B))
		DECODE > RTTY DECODE SET	
		0257 00 ~ 03	Send/read the FFT Scope Averaging setting (00=OFF, 01=2, 02=3, 03=4)
		0258 See p. 21.	Send/read the FFT Scope Waveform Color setting
		0259 00/01	Send/read the Decode USOS setting (00=OFF, 01=ON)

Cmd.	Sub cmd.	Data	Description
1A*	05	DECODE > RTTY DECODE SET	
		0260 00/01	Send/read the Decode New Line Code setting (00=CR,LF,CR+LF, 01=CR+LF)
		0261 00/01	Send/read the TX USOS setting (00=OFF, 01=ON)
		0262 See p. 21.	Send/read the Font Color (Receive) setting
		0263 See p. 21.	Send/read the Font Color (Transmit) setting
		DECODE > RTTY DECODE LOG	
		0264 00/01	Send/read the Decode Log setting (00=OFF, 01=ON)
		0265 00/01	Log Set > Send/read the File Type setting (00=Text, 01=HTML)
		0266 00/01	Log Set > Send/read the Time Stamp setting (00=OFF, 01=ON)
		0267 00/01	Log Set > Send/read the Time Stamp (Time) setting (00=Local, 01=UTC)
		0268 00/01	Log Set > Send/read the Time Stamp (Frequency) setting (00=OFF, 01=ON)
		RECORD > Recorder Set	
		0269 00/01	Send/read the TX REC Audio setting (00=Direct, 01= Monitor)
		0270 00/01	Send/read the RX REC Condition setting (00=Always, 01=Squelch Auto)
		0271 00/01	Send/read the File Split setting (00=OFF, 01=ON)
		0272 00/01	Send/read the PTT Auto REC setting (00=OFF, 01=ON)
		0273 00 ~ 03	Send/read the PRE-REC for PTT Auto REC setting (00=OFF, 01=5sec, 02=10sec, 03=15sec)
		RECORD > Player Set	
		0274 00 ~ 03	Send/read the Skip Time setting (00=3sec, 01=5sec, 02=10sec, 03=30sec)
		SCAN > SCAN SET	
		0275 00/01	Send/read the SCAN Speed setting (00=Slow, 01=Fast)
		0276 00/01	Send/read the SCAN Resume setting (00=OFF, 01=ON)
		0277 00 ~ 10	Send/read the Pause Timer setting (00=2sec ~ 09=20sec in 2 seconds, 10=HOLD)
		0278 00 ~ 06	Send/read the Resume Timer setting (00=0sec ~ 05=5sec, 06=HOLD)
		0279 00 ~ 04	Send/read the Temporary Skip Timer setting (00=5min, 01=10min, 02=15min, 03=While Scanning, 04=While Powered ON)

REMOTE CONTROL

Remote control (CI-V) information

◇ Command table

Cmd.	Sub cmd.	Data	Description
1A*	05	SCAN > SCAN SET	
		0280 00/01	Send/read the MAIN DIAL Operation (SCAN) setting (00=OFF, 01=Up/Down)
		GPS	
		0281 00 ~ 02	GPS Set > Send/read the GPS Select setting (00=OFF, 01=ON, 02=Manual)
		0282 00/01	GPS Set > GPS Option > Send/read the SBAS setting (00=OFF, 01=ON)
		0283 00/01	GPS Set > GPS Option > Send/read the GLONASS setting (00=OFF, 01=ON)
		0284 00 ~ 05	GPS Set > GPS Option > Send/read the Power Save setting (00=OFF, 01=1min, 02=2min, 03=4min, 04=8min, 05=Auto)
		0285 00/01	GPS Set > GPS Option > Send/read the Satellite Information Out setting (00=GPS/QZSS/GLONASS, 01=GPS Only)
		0286 See p. 22.	GPS Set > Send/read the Manual Position setting
		0287 00 ~ 02	Send/read the GPS TX Mode setting (00=OFF, 01=D-PRS, 02=NMEA)
		GPS > GPS TX Mode > D-PRS	
		0288 See p. 19.	Send/read the Unproto Address setting (Up to 56 characters)
		0289 00 ~ 03	Send/read the TX Format setting (00=Position, 01=Object, 02=Item, 03=Weather)
		GPS > GPS TX Mode > D-PRS > TX Format > Position	
		0290 00 ~ 03	Send/read the Symbol setting (00=No.1, 01=No.2, 02=No.3, 03=No.4)
		0291 See pp. 19 and 22.	Send/read the Symbol No.1 setting (2 characters)
		0292 See pp. 19 and 22.	Send/read the Symbol No.2 setting (2 characters)
		0293 See pp. 19 and 22.	Send/read the Symbol No.3 setting (2 characters)
		0294 See pp. 19 and 22.	Send/read the Symbol No.4 setting (2 characters)
		0295 00 ~ 42	Send/read the SSID setting (00= - - -, 01=(- 0), 02= -1 ~ 16= -15, 17= -A ~ 42=-Z)
		0296 00 ~ 03	Send/read the Comment setting (00=No.1, 01=No.2, 02=No.3, 03=No.4)
		0297 See p. 19.	Send/read the Comment No.1 setting (Up to 43 characters)
		0298 See p. 19.	Send/read the Comment No.2 setting (Up to 43 characters)
		0299 See p. 19.	Send/read the Comment No.3 setting (Up to 43 characters)
		0300 See p. 19.	Send/read the Comment No.4 setting (Up to 43 characters)

Cmd.	Sub cmd.	Data	Description
1A*	05	GPS > GPS TX Mode > D-PRS > TX Format > Position	
		0301 00 ~ 02	Send/read the Time Stamp setting (00=OFF, 01=DHM, 02=HMS)
		0302 00/01	Send/read the Altitude setting (00=OFF, 01=ON)
		0303 00 ~ 02	Send/read the Data Extension setting (00=OFF, 01=Course/Speed, 02=Power/Height/Gain/Directivity)
		0304 00 ~ 09	Send/read the Power setting (00=0W, 01=1W, 02=4W, 03=9W, 04=16W, 05=25W, 06=36W, 07=49W, 08=64W, 09=81W)
		0305 00 ~ 09	Send/read the Height setting (00=3m, 01=6m, 02=12m, 03=24m, 04=49m, 05=98m, 06=195m, 07=390m, 08=780m, 09=1561m)
		0306 00 ~ 09	Send/read the Gain setting (00=0dB ~ 09=9dB)
		0307 00 ~ 08	Send/read the Directivity setting (00=Omni, 01=45°NE, 02=90°E, 03=135°SE, 04=180°S, 05=225°SW, 06=270°W, 07=315°NW, 08=360°N)
		GPS > GPS TX Mode > D-PRS > TX Format > Object	
		0308 See p. 19.	Send/read the Object Name setting (Up to 9 characters)
		0309 00/01	Send/read the Data Type setting (00=Live Object, 01=Kill Object)
		0310 See pp. 19 and 22.	Send/read the Symbol setting (2 characters)
		0311 See p. 19.	Send/read the Comment setting (Up to 43 characters)
		0312 See p. 22.	Send/read the Position setting
		0313 00 ~ 02	Send/read the Data Extension setting (00=OFF, 01=Course/Speed, 02=Power/Height/Gain/Directivity)
		0314 000 ~ 360	Send/read the Course setting (000=0° ~ 360=360°)
		0315 0000 ~ 1850	Send/read the Speed setting (0000=0km/h ~ 1850=1850km/h)
		0316 00 ~ 09	Send/read the Power setting (00=0W, 01=1W, 02=4W, 03=9W, 04=16W, 05=25W, 06=36W, 07=49W, 08=64W, 09=81W)
		0317 00 ~ 09	Send/read the Height setting (00=3m, 01=6m, 02=12m, 03=24m, 04=49m, 05=98m, 06=195m, 07=390m, 08=780m, 09=1561m)
		0318 00 ~ 09	Send/read the Gain setting (00=0dB ~ 09=9dB)
		0319 00 ~ 08	Send/read the Directivity setting (00=Omni, 01=45°NE, 02=90°E, 03=135°SE, 04=180°S, 05=225°SW, 06=270°W, 07=315°NW, 08=360°N)
		0320 00 ~ 42	Send/read the SSID setting (00= - - -, 01=(- 0), 02= -1 ~ 16= -15, 17= -A ~ 42=-Z)
		0321 00/01	Send/read the Time Stamp setting (00=DHM, 01=HMS)

REMOTE CONTROL

Remote control (CI-V) information

◇ Command table

Cmd.	Sub cmd.	Data	Description
1A*	05	GPS > GPS TX Mode > D-PRS > TX Format > Item	
		0322	See p. 19. Send/read the Item Name setting (Up to 9 characters)
		0323	00/01 Send/read the Data Type setting (00=Live Item, 01=Killed Item)
		0324	See pp. 19 and 22. Send/read the Symbol setting (2 characters)
		0325	See p. 19. Send/read the Comment setting (Up to 43 characters)
		0326	See p. 22. Send/read the Position setting
		0327	00 ~ 02 Send/read the Data Extension setting (00=OFF, 01=Course/Speed, 02=Power/Height/Gain/Directivity)
		0328	000 ~ 360 Send/read the Course setting (000 ~ 360=0° ~ 360°)
		0329	0000 ~ 1850 Send/read the Speed setting (0000=0km/h ~ 1850=1850km/h)
		0330	00 ~ 09 Send/read the Power setting (00=0W, 01=1W, 02=4W, 03=9W, 04=16W, 05=25W, 06=36W, 07=49W, 08=64W, 09=81W)
		0331	00 ~ 09 Send/read the Height setting (00=3m, 01=6m, 02=12m, 03=24m, 04=49m, 05=98m, 06=195m, 07=390m, 08=780m, 09=1561m)
		0332	00 ~ 09 Send/read the Gain setting (00=0dB ~ 09=9dB)
		0333	00 ~ 08 Send/read the Directivity setting (00=Omni, 01=45°NE, 02=90°E, 03=135°SE, 04=180°S, 05=225°SW, 06=270°W, 07=315°NW, 08=360°N)
		0334	00 ~ 42 Send/read the SSID setting (00= - - -, 01=(- 0), 02= -1 ~ 16= -15, 17= -A ~ 42= -Z)
		GPS > GPS TX Mode > D-PRS > TX Format > Weather	
		0335	See pp. 19 and 22. Send/read the Symbol setting (2 characters)
		0336	00 ~ 42 Send/read the SSID setting (00= - - -, 01=(- 0), 02= -1 ~ 16= -15, 17= -A ~ 42= -Z)
		0337	See p. 19. Send/read the Comment setting (Up to 43 characters)
		0338	00 ~ 02 Send/read the Time Stamp setting (00=OFF, 01=DHM, 02=HMS)
		GPS > GPS TX Mode > NMEA	
		0339*6	00/01 GPS Sentence > Send/read the RMC setting (00=OFF, 01=ON)
		0340*6	00/01 GPS Sentence > Send/read the GGA setting (00=OFF, 01=ON)
		0341*6	00/01 GPS Sentence > Send/read the GLL setting (00=OFF, 01=ON)

Cmd.	Sub cmd.	Data	Description
1A*	05	GPS > GPS TX Mode > NMEA	
		0342*6	00/01 GPS Sentence > Send/read the GSA setting (00=OFF, 01=ON)
		0343*6	00/01 GPS Sentence > Send/read the VTG setting (00=OFF, 01=ON)
		0344*6	00/01 GPS Sentence > Send/read the GSV setting (00=OFF, 01=ON)
		0345	See p. 19. Send/read the GPS Message setting (Up to 20 characters)
		GPS > GPS Alarm	
		0346	See p. 22. Send/read the Alarm Area (Group) setting
		0347	00 ~ 02 Send/read the Alarm Area (RX/Memory) setting (00=Limited, 01=Extended, 02=Both)
		GPS > GPS Logger	
		0348	00/01 Send/read the GPS Logger setting (00=OFF, 01=ON)
		0349	00 ~ 06 Send/read the Record Interval setting (00=1sec, 01=5sec, 02=10sec, 03=30sec, 04=1min, 05=5min, 06=10min)
		0350	00/01 Record Sentence > Send/read the RMC setting (00=OFF, 01=ON)
		0351	00/01 Record Sentence > Send/read the GGA setting (00=OFF, 01=ON)
		0352	00/01 Record Sentence > Send/read the VTG setting (00=OFF, 01=ON)
		0353	00/01 Record Sentence > Send/read the GSA setting (00=OFF, 01=ON)
		GPS	
		0354	00 ~ 06 Send/read the GPS Auto TX setting (00=OFF, 01=30sec, 02=1min, 03=3min, 04=5min, 05=10min, 06=30min)
		DTMF > DTMF SET	
		0355	00 ~ 03 Send/read the DTMF Speed setting (00=100ms, 01=200ms, 02=300ms, 03=500ms)
		NB	
		0356	0000 ~ 0255 Send/read the NB LEVEL setting (0000=0% ~ 0255=100%)
		0357	00 ~ 09 Send/read the NB DEPTH setting (00=1 ~ 09=10)
		0358	0000 ~ 0255 Send/read the NB WIDTH setting (0000=1 ~ 0255=100)

REMOTE CONTROL

Remote control (CI-V) information

◇ Command table

Cmd.	Sub cmd.	Data	Description
1A*	05	VOX	
		0359 00 ~ 20	Send/read the VOX DELAY setting (00=0.0s ~ 20=2.0s in 0.1s steps)
		0360 00 ~ 03	Send/read the VOICE DELAY setting (00=OFF, 01=SHORT, 02=MID, 03=LONG)
		CD	
		0361 00/01	Send/read the Call Sign Display/ Name Display setting (00=Call Sign Display, 01=Name Display)
		GPS Position	
		0362 00 ~ 02	Send/read the Compass Direction setting (00=Heading Up, 01=North Up, 02=South Up)
		SET > Function	
		0363 00/01	Send/read the Battery Pack Select setting (00=BP-272, 01=BP-307)
		0364 00/01	Send/read the Battery Pack Confirmation setting (00=OFF, 01=ON)
		SET > Function > Tuner	
		0365 00/01	Send/read the Tuner Select setting (00=AH-705, 01=Others)
		0366 00/01	AH-705 > Send/read the Tune Memory setting (00=OFF, 01=ON)
		SET > Function > Front Key Customize	
		0367 See p. 21.	Send/read the [VOX/BK-IN] setting
		0368 See p. 22.	Send/read the [AUTOTUNE/RX>CS] setting
		SCOPE > SCOPE SET	
		0369 See p. 21.	FIX Edges > 0.03 - 1.60 > Send/read the No.4 setting
		0370 See p. 21.	FIX Edges > 1.60 - 2.00 > Send/read the No.4 setting
		0371 See p. 21.	FIX Edges > 2.00 - 6.00 > Send/read the No.4 setting
		0372 See p. 21.	FIX Edges > 6.00 - 8.00 > Send/read the No.4 setting
		0373 See p. 21.	FIX Edges > 8.00 - 11.00 > Send/read the No.4 setting
		0374 See p. 21.	FIX Edges > 11.00 - 15.00 > Send/read the No.4 setting
		0375 See p. 21.	FIX Edges > 15.00 - 20.00 > Send/read the No.4 setting
		0376 See p. 21.	FIX Edges > 20.00 - 22.00 > Send/read the No.4 setting
		0377 See p. 21.	FIX Edges > 22.00 - 26.00 > Send/read the No.4 setting
		0378 See p. 21.	FIX Edges > 26.00 - 30.00 > Send/read the No.4 setting

Cmd.	Sub cmd.	Data	Description
1A*	05	SCOPE > SCOPE SET	
		0379 See p. 21.	FIX Edges > 30.00 - 45.00 > Send/read the No.4 setting
		0380 See p. 21.	FIX Edges > 45.00 - 60.00 > Send/read the No.4 setting
		0381 See p. 21.	FIX Edges > 60.00 - 74.80 > Send/read the No.4 setting
		0382 See p. 21.	FIX Edges > 74.80 - 108.00 > Send/read the No.4 setting
		0383 See p. 21.	FIX Edges > 108.00 - 137.00 > Send/read the No.4 setting
		0384 See p. 21.	FIX Edges > 137.00 - 200.00 > Send/read the No.4 setting
		0385 See p. 21.	FIX Edges > 400.00 - 470.00 > Send/read the No.4 setting
	06	See p. 22.	Send/read the DATA mode setting
	07	00/01	Send/read the NTP server access (00=Terminate, 01=Initiate)
	08*1	00 ~ 02	Read NTP server access result (00=Accessing, or have not accessed after Power ON, 01=Succeeded, 02=Failed)
	09*1	00/01	Read the OVF indicator status (00=OFF, 01=ON)
	0A	00 ~ 02	Send/read the Share Pictures function status (00=OFF, 01=ON, 02=ON (Repeat)) ① While transmitting the picture using the DV Fast Data function, sends ON even if the status is set to OFF.
	0B*1	00/01	Read the type of power supply based on the current voltage (00=External power supply, 01=Battery pack)
	0C	00/01	Send/read the PRT MONI setting (00=OFF, 01=ON)
	1B*	00	See p. 22.
		01	See p. 22.
		02	See p. 22.
		07	See p. 23.
	1C	00*	00/01
		01*	00 ~ 02
		02*	00/01
		03*1	See p. 17.
	1E	00*1	
		01*1	See p. 17.
		02*1	
		03*	See p. 17.

REMOTE CONTROL

Remote control (CI-V) information

◇ Command table

Cmd.	Sub cmd.	Data	Description
1F*	00	See p. 23.	SET > My Station > Send/read the My Call Sign setting
	01	See p. 23.	CS > Send/read the UR, R1, R2 setting
	02	See p. 23.	SET > My Station > Send/read the TX Message setting
20	00	00*	00/01* ⁷ Send/read the Auto DV RX Call signs output (00=OFF, 01=ON)
		01	See p. 24. Output DV RX Call signs for transceive
		02* ¹	See p. 24. Read Auto DV RX Call signs
	01	00*	00/01* ⁷ Send/read the Auto DV RX message output (00=OFF, 01=ON)
		01	See p. 24. Output DV RX message for transceive
		02* ¹	See p. 24. Read Auto DV RX message
	02	00*	00/01* ⁷ Send/read the Auto DV RX status output (00=OFF, 01=ON)
		01	See p. 24. Output DV RX status for transceive
		02* ¹	See p. 24. Read Auto DV RX status
	03	00*	00/01 Send/read the Auto DV RX GPS/D-PRS data output (00=OFF, 01=ON)
		0100	See p. 25. Output DV RX GPS/D-PRS Position for transceive
		0101	See p. 25. Output DV RX D-PRS Object status for transceive
		0102	See p. 26. Output DV RX D-PRS Item status for transceive
		0103	See p. 26. Output DV RX D-PRS Weather status for transceive
		0200* ¹	See p. 25. Read Auto DV RX GPS/D-PRS Position status
		0201* ¹	See p. 25. Read Auto DV RX D-PRS Object status
		0202* ¹	See p. 26. Read Auto DV RX D-PRS Item status
		0203* ¹	See p. 26. Read Auto DV RX D-PRS Weather status
	04	00*	00/01 Send/read Auto DV RX GPS/D-PRS message output (00=OFF, 01=ON)
		01	See p. 26. Output DV RX D-PRS message for transceive
		02* ¹	See p. 26. Read Auto DV RX D-PRS message status
21*	00	See p. 27.	Send/read the RIT frequency
	01	00/01	Send/read the RIT setting (00=OFF, 01=ON)
	02	00/01	Send/read the ΔTX setting (00=OFF, 01=ON)

Cmd.	Sub cmd.	Data	Description
22	00	See p. 27.	Set the DV TX data (Up to 30 byte)
	01	00*	00/01 Set the Auto DV RX data output (00=OFF, 01=ON)
		01	See p. 27. Set the DV RX data for transceive
	02*	00/01	SET > DV Set > Send/read the DV Data TX setting (00=PTT, 01=Auto)
	03*	00/01	SET > DV Set > DV Fast Data > Send/read the Fast Data setting (00=OFF, 01=ON)
	04*	00/01	SET > DV Set > DV Fast Data > Send/read the GPS Data Speed setting (00=Slow, 01=Fast)
	05*	00 ~ 10	SET > DV Set > DV Fast Data > Send/read the TX Delay (PTT) setting (00=OFF, 01=1sec ~ 10=10sec)
23	00* ¹	See p. 27.	Read the position status
	01*	00/01/03	GPS > GPS Set > Send/read the GPS Select setting (00=OFF, 01=ON, 03=Manual)
		02*	See p. 22. GPS > GPS Set > Send/read the Manual Position setting
24	00	00*	00/01 Send/read TX output power setting (00=OFF, 01=ON)
		01	00/01 Set the TX output power for transceive (00=OFF, 01=ON)
25*		See p. 27.	Send/read the selected or unselected VFO frequency
26*		See p. 27.	Send/read the selected or unselected VFO's operating mode and filter
27*	00	See p. 28.	Read the Scope waveform data (Only when "Scope ON/OFF status" (Command: 27 10) and "Scope data output" (Command: 27 11) are set to "ON," outputs the waveform data to the controller.)
	10	00/01	Send/read the Scope ON/OFF status (00=OFF, 01=ON)
	11	00/01	Send/read the Scope wave data output (00=OFF, 01=ON)
	12	00	Send/read the Main or Sub scope setting (00=Main (fixed))
	13	00	Send/read the Single/Dual scope setting (00=Single (fixed))
	14	0000 ~ 0003	Send/read the Scope Center mode, Fixed mode, SCROLL-C mode, or SCROLL-F mode setting (0000=CENTER mode, 0001=FIX mode, 0002=SCROLL-C mode, 0003=SCROLL-F mode)
	15	See p. 29.	Send/read the Span setting in the Center mode or SCROLL-C mode Scope
	16	0001 ~ 0004	Send/read the Edge number setting in the Fixed mode or SCROLL-F mode Scope

REMOTE CONTROL

Remote control (CI-V) information

◇ Command table

Cmd.	Sub cmd.	Data	Description
27*	17	0000/ 0001	Send/read the Scope hold function ON/OFF status (0000=OFF, 0001=ON)
	19	See p. 29.	Send/read the Scope Reference level setting
	1A	0000 ~ 0002	Send/read the Sweep speed setting (0000=FAST, 0001=MID, 0002=SLOW)
	1B	00/01	SCOPE > SCOPE SET > Send/read the Scope during Tx (CENTER TYPE) setting (00=OFF, 01=ON)
	1C	00 ~ 02	SCOPE > SCOPE SET > Send/read the CENTER Type Display setting (00=Filter Center, 01=Carrier Point Center, 02=Carrier Point Center (Abs. Freq.))
	1D	0000/ 0001	Send/read the Scope VBW setting (0000=NAR, 0001=WIDE)
	1E	See p. 29.	Send/read the Scope Fixed edge frequencies
	20	00/01	SCOPE > SCOPE SET > Send/read Marker Position (FIX Type/SCROLL Type) setting (00=Filter Center, 01=Carrier Point)
28	00	00 ~ 08	Transmit the Voice TX Memory (00=Stop, 01=T1 ~ 08=T8)

*(Asterisk) Send/read data

*1 Read only data

*2 Send only data

*3 In the CW mode, if the [PTT] or an external TX switch is ON, or the Break-in function is ON, a message will be transmitted as CW code when you send it from your PC.

*4 Sending the power ON command (18 01) turns ON the transceiver when the transceiver is OFF (Standby/Shutdown).

*5 To insert a counter, first clear the other channel's counter.

*6 Set at least 1 GPS sentence to ON.

Up to 4 GPS sentences can be set to ON at the same time.


*7 Output setting is automatically set to OFF after turning OFF the transceiver.

Remote control (CI-V) information

◇ Command formats


• Operating frequency

Command: 00, 03, 05, 1C 03

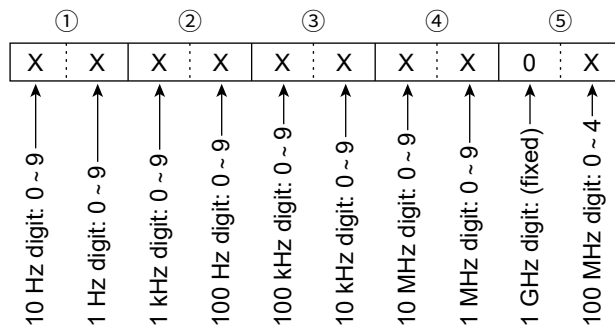

• Operating mode

Command: 01, 04, 06




① Operating mode		② Filter setting
00: LSB	05: FM	01: FIL1
01: USB	06: WFM	02: FIL2
02: AM	07: CW-R	03: FIL3
03: CW	08: RTTY-R	—
04: RTTY	17: DV	—

① Filter setting, (②) can be skipped with command 01 and 06. In that case, "FIL1" is selected with command 01 and the default filter setting of the operating mode is automatically selected with command 06.

• Band edge frequency settings


Command: 02*, 1E 01, 1E 03

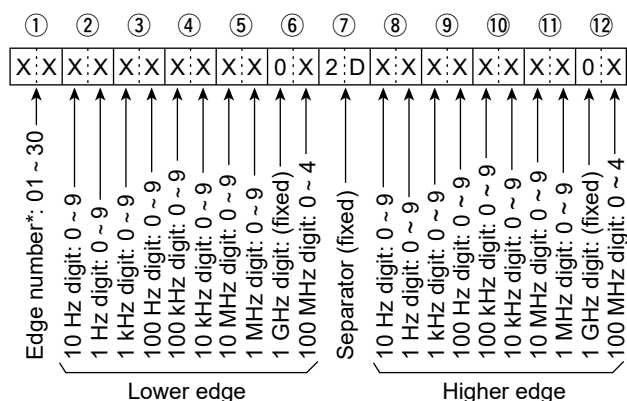

* When obtaining the edge number (by command "02"), the edge number (①) is not returned.

• Duplex Offset frequency setting

Command: 0C, 0D

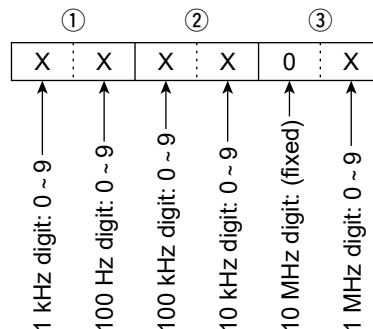

• Codes for CW message contents

Command: 17 (Up to 30 characters)

To send CW messages, use the following character codes.

Character	ASCII code	Character	ASCII code
0 ~ 9	30 ~ 39	'	27
A ~ Z	41 ~ 5A	(28
a ~ z	61 ~ 7A)	29
/	2F	=	3D
?	3F	+	2B
.	2E	"	22
-	2D	@	40
,	2C	Space	20
:	3A		

① "FF" stops sending CW messages.


① "A" is used to transmit a string of characters with no inter-character space.

Remote control (CI-V) information

◇ Command formats

• Memory content

Command: 1A 00

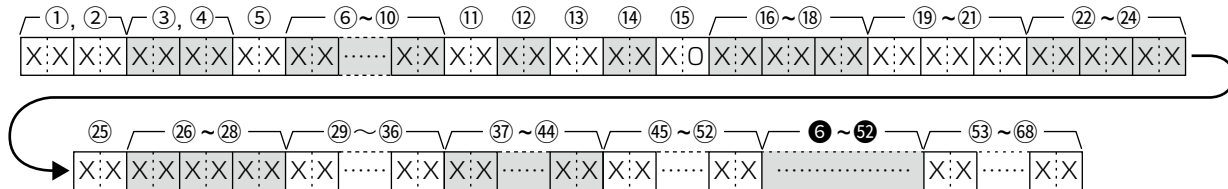

①, ②: Memory group number

0000 ~ 0099: Memory channel group

0100: Call channel group

③, ④: Memory channel numbers

- When Memory channel group is selected,


0000 ~ 0099: 00 ~ 99

- When Call channel group is selected,

0000, 0001: 144 C1, C2

0002, 0003: 430 C1, C2

⑤: Split and Select memory setting

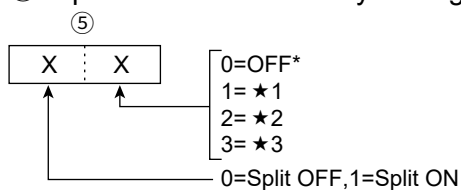

* Set 0 for Call channel.

⑥~⑩: Operating frequency setting

① See "Operating frequency." (p. 17)

⑪, ⑫: Operating mode setting

① See "Operating mode." (p. 17)


⑬: Data mode setting

1 byte data (XX)


00: Data mode OFF

01: Data mode ON

⑭: Duplex and Tone settings

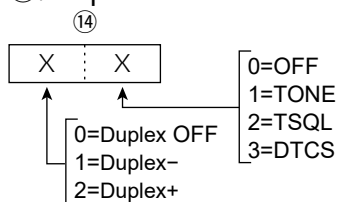

⑮: Digital squelch setting

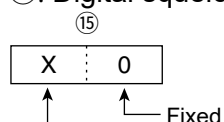

0=Digital squelch function OFF
1=Digital call sign squelch function ON (DSQL)
2=Digital code squelch function ON (CSQL)

⑯~⑰: Repeater tone frequency setting

⑱~⑲: Repeater tone frequency setting

① See "Repeater tone/tone squelch frequency setting." (p. 22)

⑳~㉔: DTCS code setting

① See "DTCS code and polarity setting." (p. 22)

㉕: DV Digital code squelch setting

① See "DV Digital code squelch setting." (p. 23)

㉖~㉘: Duplex offset frequency setting

① See "Duplex Offset frequency setting." (p. 17)

㉙~㉛: UR (Destination) call sign setting
(8 characters, fixed)

㉜~㉟: R1 (Access repeater) call sign setting
(8 characters, fixed)

㊱~㊵: R2 (Gateway/Link repeater) call sign setting
(8 characters, fixed)

① See "DV TX call signs setting." (p. 23)

㊶~㊺: Memory name setting (16 characters, fixed)

① See "Codes for character entries." (p. 19)

To clear the memory channel contents on 1A 00:

①, ②: Memory channel group (0000~0099)

You cannot specify group "0100" (Call channel group)

③, ④: Memory channel (0000~0099)

⑤: "FF," ⑥ ~ : None

NOTE:

- The same data as ⑥ ~ ㉕ are stored in ㉖ ~ ㊵.
- When the Split function is ON, the data of ㉖ ~ ㊵ is used for transmit.
- Even if the Split function is OFF, enter the data into ㉖ ~ ㊵ to match your transceiver. We recommend that you set the same data as ⑥ ~ ㉕.

REMOTE CONTROL

Remote control (CI-V) information

◇ Command formats

• Codes for character entries

Command: 1A 00,
1A 05 0168, 0288, 0308, 0310,
0311, 0322, 0325, 0337,
0345,
1A 05 0291 ~ 1A 05 0294,
1A 05 0297 ~ 1A 05 0300

- Character codes— Letters and Numbers

Character	ASCII code	Character	ASCII code
A ~ Z	41 ~ 5A	a ~ z	61 ~ 7A
0 ~ 9	30 ~ 39		

- Character codes— Symbols

Character	ASCII code	Character	ASCII code
!	21	#	23
\$	24	%	25
&	26	\	5C
?	3F	"	22
'	27	`	60
^	5E	+	2B
-	2D	*	2A
/	2F	.	2E
,	2C	:	3A
;	3B	=	3D
<	3C	>	3E
(28)	29
[5B]	5D
{	7B	}	7D
	7C	_	5F
~	7E	@	40

Cmd.	Sub cmd.	Set item/selectable characters
1A	00	Memory name All characters are usable.
	05 0168	NTP Server Address A ~ Z, a ~ z, 0 ~ 9, ., -

• Band stacking register

Command: 1A 01

①	②
X	X
X	X

NOTE: When sending the contents, the codes, such as operating frequency and operating mode*, should be added after the frequency band code and the register code, as shown below.

* See ⑥ ~ ⑫ on “Memory content.” (p. 18)

①: Frequency band codes

Code	Freq. band	Frequency range (unit: MHz)
01	1.9	1.800000 ~ 1.999999
02	3.5	3.400000 ~ 4.099999
03	7	6.900000 ~ 7.499999
04	10	9.900000 ~ 10.499999
05	14	13.900000 ~ 14.499999
06	18	17.900000 ~ 18.499999
07	21	20.900000 ~ 21.499999
08	24	24.400000 ~ 25.099999
09	28	28.000000 ~ 29.999999
10	50	50.000000 ~ 54.000000
11	WFM	74.800000 ~ 107.999999
12	Air	108.000000 ~ 136.999999
13	144	144.000000 ~ 148.000000
14	430	420.000000 ~ 450.000000
15	GENE	Other than above

②: Register codes

Code	Registered number
01	1 (Display on left side)
02	2 (Display in center)
03	3 (Display on Right side)

To read the contents, the register code should be added after the frequency band code, as shown below.

Example: When reading the frequency displayed in the center of the display in the 21 MHz band, use code “0703.”

REMOTE CONTROL

Remote control (CI-V) information

◇ Command formats

• Keyer memory character entries

Command: 1A 02

- Character codes


Character	ASCII code	Description
0 ~ 9	30 ~ 39	Numbers
A ~ Z	41 ~ 5A	Letters
Space	20	Word space
/	2F	Symbol
?	3F	Symbol
,	2C	Symbol
.	2E	Symbol
@	40	Symbol
^	5E	Example: to send BT, enter ^4254
*	2A	Inserts the contest number (can be used for 1 channel only)

① Information

- "FA" (NG) is returned if you insert the content number in more than 1 channel.
- Spaces after the end of the sentence are not necessary.
- To clear the Keyer memory contents, send one or more spaces.

• Keyer memory content

Command: 1A 02

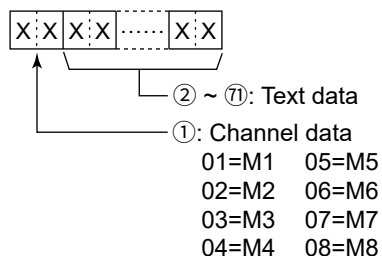

• IF filter width settings

Command: 1A 03

Mode	Data	Steps
SSB/CW/RTTY	0 ~ 9	50 ~ 500 Hz (50 Hz)
SSB/CW	10 ~ 40	600 Hz ~ 3.6 kHz (100 Hz)
RTTY	10 ~ 31	600 ~ 2.7 kHz (100 Hz)
AM	0 ~ 49	200 Hz ~ 10.0 kHz (200 Hz)


• AGC time constant settings

Command: 1A 04

Data	AGC time constant (sec.)	
	SSB/CW/RTTY	AM
00	OFF	OFF
01	0.1	0.3
02	0.2	0.5
03	0.3	0.8
04	0.5	1.2
05	0.8	1.6
06	1.2	2.0
07	1.6	2.5
08	2.0	3.0
09	2.5	4.0
10	3.0	5.0
11	4.0	6.0
12	5.0	7.0
13	6.0	8.0


• RX HPF/LPF setting for each operating mode

Command: 1A 05 0001, 0004, 0007, 0010, 0015, 0016

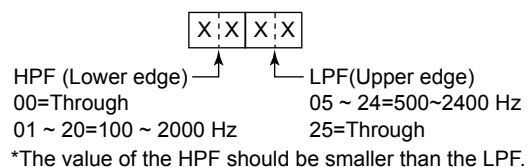


• SSB/SSB-DATA transmission passband width settings

Command: 1A 05 0019 ~ 0022

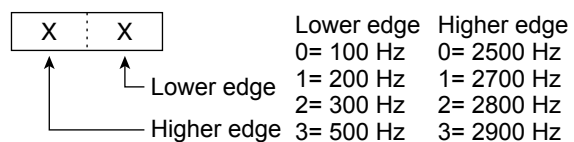

• Split offset frequency setting

Command: 1A 05 0046

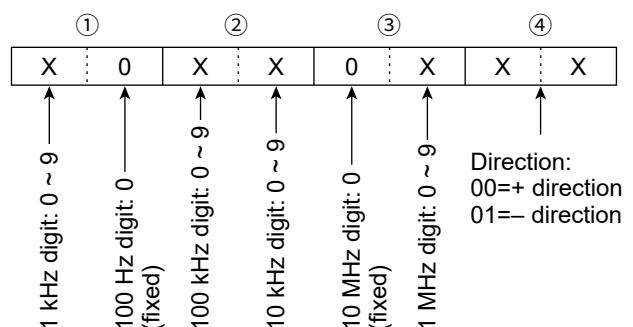


REMOTE CONTROL

Remote control (CI-V) information

◆ Command formats

• UTC Offset setting

Command: 1A 05 0170

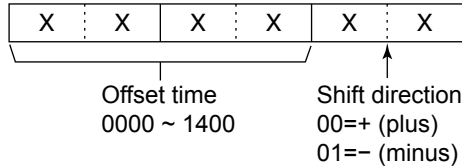


• Remote MIC Key setting

Command: 1A 05 0074 ~ 1A 05 0077

Data	Function
00	No function
01	UP
02	DOWN
03	UP (VFO: kHz)
04	DOWN (VFO: kHz)
05	VOL UP
06	VOL DOWN
07	XFC
08	CALL
09	VFO/MEMO
10	DR
11	FROM/TO (DR)
12	Home CH
13	BAND/GROUP UP
14	BAND/GROUP DOWN
15	SCAN
16	Temporary Skip
17	SPEECH
18	MODE
19	RF Power
20	Voice/Keyer/RTTY Memory 1
21	Voice/Keyer/RTTY Memory 2
22	Voice/Keyer/RTTY Memory 3
23	Voice/Keyer/RTTY Memory 4
24	T-CALL*
25	RX>CS
26	TS
27	MPAD
28	SPLIT
29	A/B
30	TUNER


• Color settings

Command: 1A 05 0180, 0181, 0182, 0240,
0242, 0258, 0262, 0263

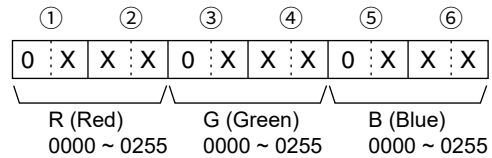

• Bandscope edge frequency settings

Command: 1A 05 0188 ~ 1A 05 0238,
1A 05 0369 ~ 1A 05 0385

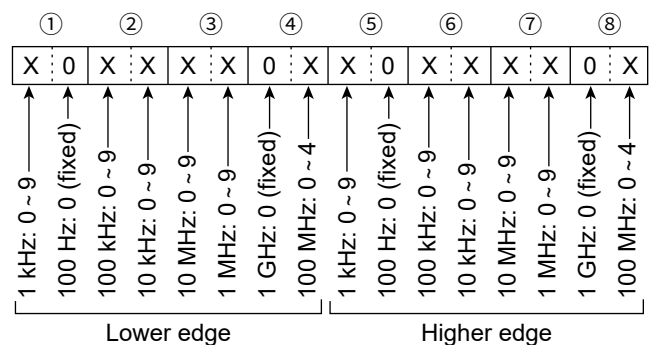

• [VOX/BK-IN] setting

Command: 1A 05 0367

Data	Function
00	TRANSMIT
01	TUNER
02	VOX/BK-IN
03	P.AMP/ATT
04	NOTCH
05	NB
06	NR
07	SPLIT
08	A/B
09	VFO/MEMO
10	CD
11	PRESET
12	Home CH
13	Temporary Skip
14	Voice/Keyer/RTTY Memory 1
15	Voice/Keyer/RTTY Memory 2
16	Voice/Keyer/RTTY Memory 3
17	Voice/Keyer/RTTY Memory 4

* Only for European version.

REMOTE CONTROL

Remote control (CI-V) information

◇ Command formats


• [AUTOTUNE/RX>CS] setting

Command: 1A 05 0368

Data	Function
00	AUTOTUNE/RX>CS
01	CD/RX>CS
02	PRESET/RX>CS
03	Home CH/RX>CS
04	Temporary Skip/RX>CS

• Manually entered position data

Command: 1A 05 0286, 0312, 0326,
23 02

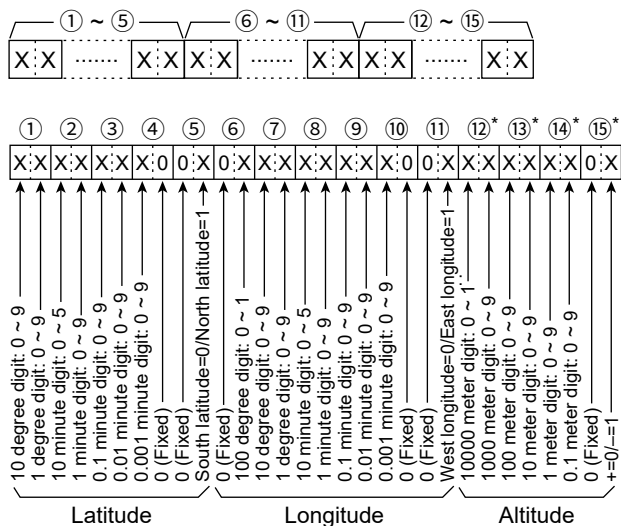

① ~ ⑤: Latitude (dd°mm.mmm format)

⑥ ~ ⑪: Longitude (ddd°mm.mmm format)

⑫ ~ ⑮: Altitude (0.1 meter steps)

* When reading the contents with no altitude, sends
⑫, ⑬, ⑭, and ⑮ as "FF."

* When sending the contents with no altitude, set ⑫,
⑬, ⑭, and ⑮ to "FF."

• D-PRS Symbol setting

Command: 1A 05 0291 ~ 1A 05 0294,
1A 05 0310, 0324, 0335




First digit Second digit

• /, \, 0 to 9, A to Z can be used for the first digit character.

• See "Codes for character entries" for the second digit character. (p. 19)


• Alarm area (Group) setting

Command: 1A 05 0346

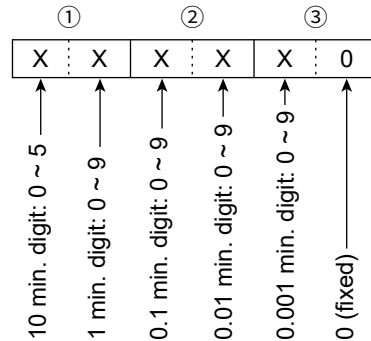

• Data mode with filter width settings

Command: 1A 06

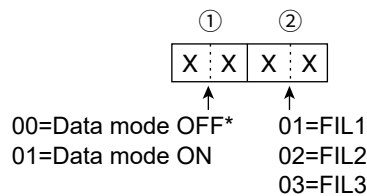

00=Data mode OFF*

01=Data mode ON

01=FIL1


02=FIL2

03=FIL3

*When 00 is set, also set 00 to ②.

• Repeater tone/tone squelch frequency settings


Command: 1B 00, 1B 01

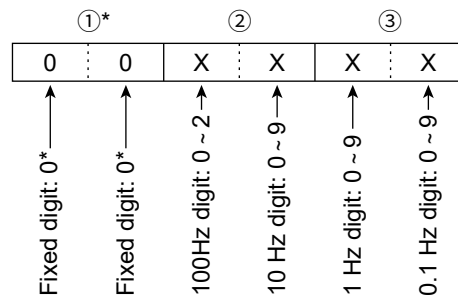

*Not necessary when setting a frequency.

• DTCS code and polarity setting

Command: 1B 02

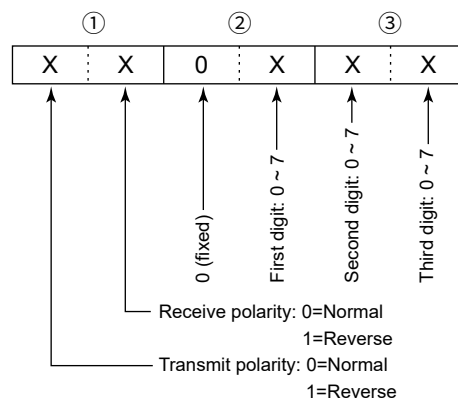


Remote control (CI-V) information

◇ Command formats

• DV Digital code squelch setting

Command: 1B 07

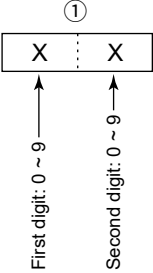


• DV MY call sign setting

Command: 1F 00

Set your own call sign and note of up to 12 characters.

See “Character’s code of the call sign.”



- ① ~ ⑧: Your own call sign setting (8 characters)
- ⑨ ~ ⑫: Note setting (4 characters)


• DV TX call signs setting
(24 characters or 8 characters)

Command: 1F 01

Set “UR,” “R1,” and “R2” call signs of 8 characters (fixed), or only the “UR” call sign.


See “Character’s code of the call sign.”

When setting “UR,” “R1,” and “R2” call signs



- ① ~ ⑧: UR (Destination) call sign setting (8 characters)
- ⑨ ~ ⑰: R1 (Access/Area repeater) call sign setting (8 characters)
- ⑱ ~ ㉔: R2 (Link/Gateway repeater) call sign setting (8 characters)

When setting only the “UR” call sign



- ① ~ ⑧: UR (Destination) call sign setting (8 characters)

Character’s code of the call sign

Character	ASCII code
0 ~ 9	30 ~ 39
A ~ Z	41 ~ 5A
(Space)	20
/	2F

• DV TX message setting

Command: 1F 02

Set the transmit message of up to 20 characters.

See “Codes for character entries.” (p. 19)

“FF” stops sending or reading messages.


REMOTE CONTROL

Remote control (CI-V) information

◇ Command formats

• DV RX call sign data

Command: 20 0001, 0002

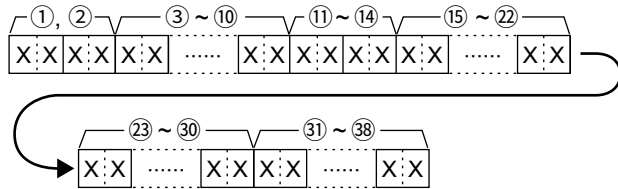

①: Header flag data (First byte)

Data	Description
bit7 (0: Fixed)	—
bit6 (0: Fixed)	—
bit5 (0: Fixed)	—
bit4 0/1	0=Voice, 1=Data
bit3 0/1	0=Direct, 1=Through repeater
bit2 0/1	0=No Break-in, 1=Break-in
bit1 0/1	0=Data, 1=Control
bit0 0/1	0=Normal, 1=EMR

②: Header flag data (Second byte)

Data			Description
bit2	bit1	bit0	
1	1	1	Repeater control
1	1	0	Send auto acknowledge
1	0	1	(Not used)
1	0	0	Request to re-transmit
0	1	1	Send acknowledge
0	1	0	Receive no reply
0	0	1	Repeater disabled
0	0	0	NULL


- ③ ~ ⑩: Call sign of the caller station (8 characters, fixed)
- ⑪ ~ ⑭: Note of the caller station (4 characters, fixed)
- ⑮ ~ ⑲: Call sign of the called station (8 characters, fixed)
- ⑳ ~ ⑳: Call sign of the access/area repeater (R1) (8 characters, fixed)
- ㉑ ~ ㉑: Call sign of the link/gateway repeater (R2) (8 characters, fixed)

See “Codes for character entries.” (p. 19)

①FF: When no call sign is received since the transceiver power was turned ON.


• DV RX message

Command: 20 0101, 0102



- ① ~ ⑳: Message (20 characters)
 - ㉑ ~ ㉑: Call sign of the caller station (8 characters)
 - ㉒ ~ ㉒: Note of the caller station (4 characters)
- See “Codes for character entries.” (p. 19)
- ①FF: When no call sign is received since the transceiver power was turned ON.

Example: When a Gateway call is received

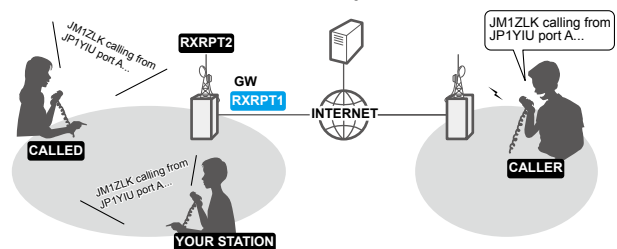

CALLER: Caller's call sign

CALLED: Called station call sign

RXRPT1: Call sign of the repeater that was accessed by the caller station

①If it was a call through a gateway and the internet, this item displays the gateway call sign of the repeater you received the call from.

RXRPT2: Call sign of the repeater you received the call from

• DV RX Status setting

Command: 20 0201, 0202

Data	Function	Description
bit7 0	(Fixed)	—
bit6 0/1	Receiving a voice call	While receiving a digital voice signal, select “1.” (Regardless of DSQ and CSQ setting)
bit5 0/1	Last call finisher	When the last call was finished by you, select “1.”
bit4 0/1	Receiving a signal	When the audio tone can be heard, select “1.”
bit3 0/1	Receiving a BK call	While receiving a BK call, select “1.”
bit2 0/1	Receiving a EMR call	While receiving a EMR call, select “1.”
bit1 0/1	Receiving a signal other than DV	When “DV” and “FM” are blinking, select “1.”
bit0 0/1	Packet loss status	While displaying packet loss, “1” is returned.

Remote control (CI-V) information

◇ Command formats

• GPS/D-PRS data


Command: 20 03 0100, 0101, 0102, 0103,
0200, 0201, 0202, 0203

Data number and description

Data number	Description
00	D-PRS — Position
01	D-PRS — Object
02	D-PRS — Item
03	D-PRS — Weather

Position

Command: 20 03 0100, 0200

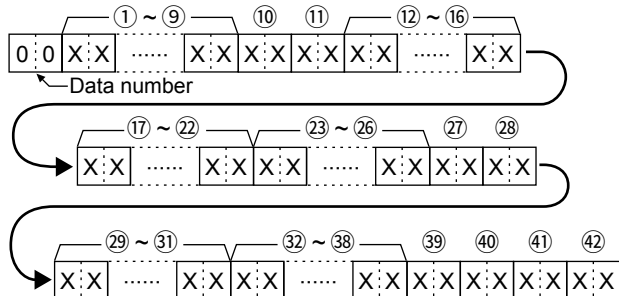


- ① ~ ⑨: Call sign/SSID
(9 ASCII characters (A ~ Z, 0 ~ 9, /, -, space))
- ⑩, ⑪: Symbol (2 ASCII characters (00h ~ EFh))
- ⑫ ~ ⑯: Latitude (dd°mm.mmm format)
- ⑰ ~ ⑳: Longitude (ddd°mm.mmm format)
- ㉓ ~ ㉖: Altitude (0.1 meter steps)
- ㉗, ㉘: Course (1 degree steps)
- ㉙ ~ ㉛: Speed (0.1 km/h steps)
- ㉜ ~ ㉟: Date (UTC: yyyyymmddHHMMSS)
(y: Year, m: Month, d: Day,
H: Hour, M: Minute, S: Second)
- ㉟ ~ ㊲: See the table below.

	㉟ Power	㊰ Height	㊱ Gain	㊲ Directivity
Data	(W)	(m/ft)	(dB)	(deg)
0	0	3/10	0	Omni-direction
1	1	6/20	1	45° NE
2	4	12/40	2	90° E
3	9	24/80	3	135° SE
4	16	49/160	4	180° S
5	25	98/320	5	225° SW
6	36	195/640	6	270° W
7	49	390/1280	7	315° NW
8	64	780/2560	8	360° N
9	81	1561/5120	9	—

- ① The item, that is not contained the received data, is filled with "FF."
- ① FF: No signal has been received since the power was turned ON.

Object

Command: 20 03 0101, 0201

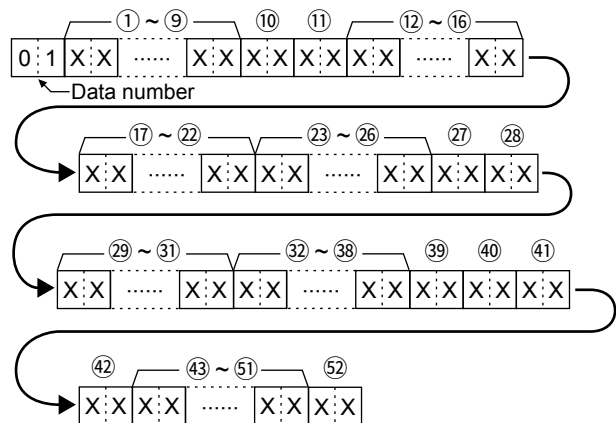

- ① ~ ⑨: Call sign/SSID
(9 ASCII characters (A ~ Z, 0 ~ 9, /, -, space))
- ⑩, ⑪: Symbol (2 ASCII characters (00h ~ EFh))
- ⑫ ~ ⑯: Latitude (dd°mm.mmm format)
- ⑰ ~ ⑳: Longitude (ddd°mm.mmm format)
- ㉓ ~ ㉖: Altitude (0.1 meter steps)
- ㉗, ㉘: Course (1 degree steps)
- ㉙ ~ ㉛: Speed (0.1 km/h steps)
- ㉜ ~ ㉟: Date (UTC: yyyyymmddHHMMSS)
(y: Year, m: Month, d: Day,
H: Hour, M: Minute, S: Second)
- ㉟ ~ ㊲: See the table below.

	㉟ Power	㊰ Height	㊱ Gain	㊲ Directivity
Data	(W)	(m/ft)	(dB)	(deg)
0	0	3/10	0	Omni-direction
1	1	6/20	1	45° NE
2	4	12/40	2	90° E
3	9	24/80	3	135° SE
4	16	49/160	4	180° S
5	25	98/320	5	225° SW
6	36	195/640	6	270° W
7	49	390/1280	7	315° NW
8	64	780/2560	8	360° N
9	81	1561/5120	9	—

- ㉟ ~ ㊱: Name
(9 ASCII characters (00h ~ EFh))
- ㊲: Type (1= Live, 0= Killed)

- ① The item, that is not contained the received data, is filled with "FF."
- ① FF: No signal has been received since the power was turned ON.

REMOTE CONTROL


Remote control (CI-V) information

◇ Command formats

• GPS/D-PRS data (Continued)

Item

Command: 20 03 0102, 0202

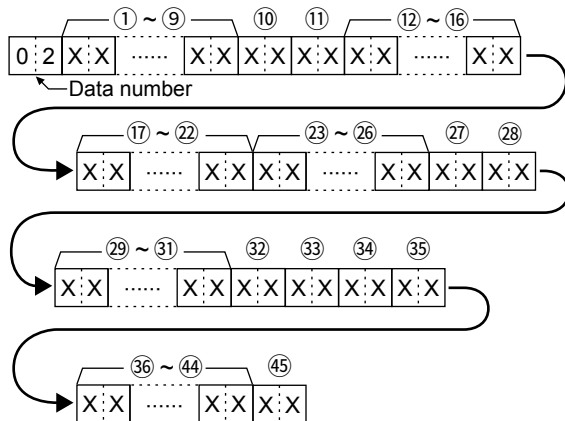

- ① ~ ⑨: Call sign/SSID
(9 ASCII characters (A ~ Z, 0 ~ 9, /, -, space))
 ⑩, ⑪: Symbol (2 ASCII characters (00h ~ EFh))
 ⑫ ~ ⑯: Latitude (dd°mm.mmm format)
 ⑰ ~ ⑳: Longitude (ddd°mm.mmm format)
 ㉓ ~ ㉖: Altitude (0.1 meter steps)
 ㉗, ㉘: Course (1 degree steps)
 ㉙ ~ ㉚: Speed (0.1 km/h steps)
 ㉛ ~ ㉝: See the table below.


	㉛ Power	㉜ Height	㉝ Gain	㉞ Directivity
Data	(W)	(m/ft)	(dB)	(deg)
0	0	3/10	0	Omni-direction
1	1	6/20	1	45° NE
2	4	12/40	2	90° E
3	9	24/80	3	135° SE
4	16	49/160	4	180° S
5	25	98/320	5	225° SW
6	36	195/640	6	270° W
7	49	390/1280	7	315° NW
8	64	780/2560	8	360° N
9	81	1561/5120	9	—

- ㉞ ~ ㉟: Name
(9 ASCII characters (00h ~ EFh))
 ㊱: Type (1= Live, 0= Killed)

- ① The item, that is not contained the received data, is filled with "FF."
 ① FF: No signal has been received since the power was turned ON.

Weather

Command: 20 03 0103, 0203

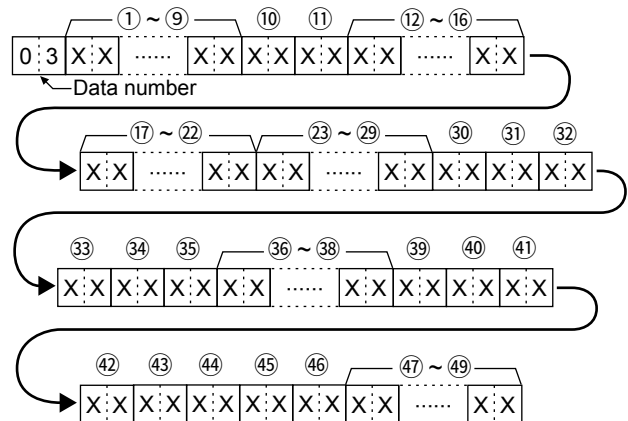


- ① ~ ⑨: Call sign/SSID
(9 ASCII characters (A ~ Z, 0 ~ 9, /, -, space))
 ⑩, ⑪: Symbol (2 ASCII characters (00h ~ EFh))
 ⑫ ~ ⑯: Latitude (dd°mm.mmm format)
 ⑰ ~ ⑳: Longitude (ddd°mm.mmm format)
 ㉓ ~ ㉙: Date (UTC: yyyyymmddHHMMSS)
 (y: Year, m: Month, d: Day, H: Hour, M: Minute, S: Second)
 ㉚, ㉛: Wind direction (1 degree steps)
 ㉜, ㉝: Wind speed (0.1 m/s steps)
 ㉞, ㉟: Gust speed (0.1 m/s steps)
 ㊱ ~ ㊲: Temperature (0.1°C steps)
 ㊳: Temperature (0= + degree, 1= - degree)
 ㊴, ㊵: Rainfall (0.1 mm steps)
 ㊶, ㊷: Rainfall (24 hours) (0.1 mm steps)
 ㊸, ㊹: Rainfall (Midnight) (0.1 mm steps)
 ㊺, ㊻: Humidity (1% steps)
 ㊼ ~ ㊾: Barometric pressure (0.1 hPa steps)

- ① The item, that is not contained the received data, is filled with "FF."
 ① FF: No signal has been received since the power was turned ON.

• GPS/D-PRS message

Command: 20 0401, 0402




- ① ~ ⑨: Call sign/SSID
(9 ASCII characters (A ~ Z, 0 ~ 9, /, -, space))
 ⑩ ~ ㉚: Message
(Up to 43 ASCII characters (00h ~ EFh))
 ① FF: No signal has been received since the power was turned ON.

Remote control (CI-V) information

◇ Command formats


• RIT frequency settings

Command: 21 00

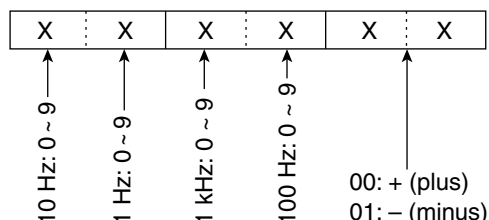

• DV TX data

Command: 22 00



① ~ ③①: TX data (Up to 30 Byte)

① "FA" to "FF" are entered after converted to "FF 0A" to "FF 0F" automatically. Up to 60 Byte data can be entered in this case.

• DV RX data (transceive)


Command: 22 0101

① ~ ③①: RX data (Up to 30 Byte)

① "FA" to "FF" are entered after converted to "FF 0A" to "FF 0F" automatically. Up to 60 Byte data can be entered in this case.

• MY position data


Command: 23 00

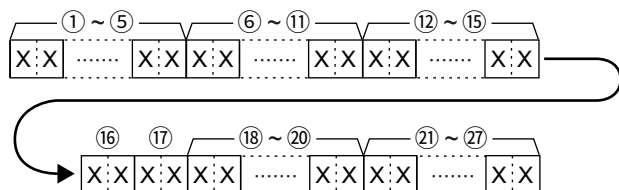

① ~ ⑤: Latitude (dd°mm.mmm format)
 ⑥ ~ ⑪: Longitude (ddd°mm.mmm format)
 ⑫ ~ ⑮: Altitude (0.1 meter steps)
 ⑰, ⑱: Course (1 degree steps)
 ⑲ ~ ㉓: Speed (0.1 km/h steps)
 ㉔ ~ ㉖: Date (UTC: yyyyymmddHHMMSS)
 (y: Year, m: Month, d: Day,
 H: Hour, M: Minute, S: Second)

• Selected or unselected VFO frequency settings

Command: 25

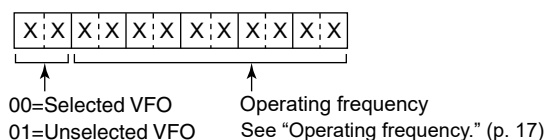


① When using the DR function, the transceiver returns "FA" (NG) because these cannot be set to 01.

- When VFO A is selected
 00=frequency of VFO A changes
 01=frequency of VFO B changes
- When VFO B is selected
 00=frequency of VFO B changes
 01=frequency of VFO A changes

• Selected or unselected VFO's operating mode and filter settings

Command: 26

Both data and filter settings can be skipped. In that case, "DATA OFF" and the default filter setting of the operating mode is automatically selected.

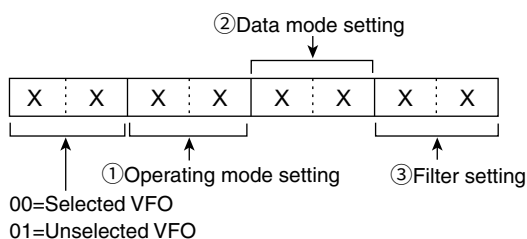

① When using the DR function, the transceiver returns "FA" (NG) because these cannot be set to 01.

- When VFO A is selected
 00 = operating mode of VFO A changes
 01 = operating mode of VFO B changes
- When VFO B is selected
 00 = operating mode of VFO B changes
 01 = operating mode of VFO A changes

① Operating mode setting		② Data mode setting	③ Filter setting
00:LSB	05:FM	00: Data mode OFF	01:FIL1
01:USB	06:WFM	01: Data mode ON	02:FIL2
02:AM	07:CW-R	—	03:FIL3
03:CW	08:RTTY-R	—	—
04:RTTY	17:DV	—	—


Remote control (CI-V) information

◇ Command formats

• Scope waveform data

Command: 27 00

Outputs the waveform data to the controller.



①: 00 (Fixed)

②: Order of division data (Current): 01~11

③: Division number (Maximum): 01(WLAN), 11(USB)

① When data is sent to the controller using the WLAN function, all data is sent together. However, when the data is sent through the [microUSB] port, the data is divided by 11 and sent in sequential order.

① The 1st data sends only the wave information (① ~ ⑥) without the waveform data (⑦). The 2nd or later data sends the minimum wave information (① ~ ③) with waveform data (⑦).


④: Spectrum scope mode data:

- 00 = Center mode scope
- 01 = Fixed mode scope
- 02 = SCROLL-C mode scope
- 03 = SCROLL-F mode scope

⑤: Waveform information:

The waveform information differs, depending on the Spectrum scope mode.

- In the Center mode:
Center frequency and span are sent.
See page 17 for Operating frequency data, and the Scope span settings (② ~ ⑥) on page 29.
- In the Fixed, SCROLL-C, and SCROLL-F modes:
Lower edge and higher edge frequencies are sent.

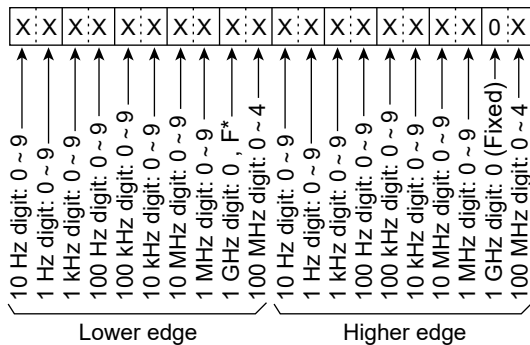

* "F" means that the Lower edge frequency is a negative value.

⑥: Out of range information:

- 00 = In range
- 01 = Out of range

① If the scope data is out of range, the waveform data (⑦) is omitted.

⑦: Waveform data:

The transceiver outputs the drawn waveform data. The data range or data length of the waveform data is judged by the controller. (The data range is basically the same as the display size of the scope on the controller.)

- Data range: 0 ~ 160
- Data length: 475

Remote control (CI-V) information

◇ Command formats

- **Scope span settings**

(in the Center mode and SCROLL-C mode Scope)

Command: 27 15

①	②	③	④	⑤	⑥
0	0	X	X	0	0
0 (Fixed)	0 (Fixed)	10 Hz digit: 0 (Fixed)	10 kHz digit: 0, 1, 2, 5	10 MHz digit: 0 (Fixed)	1 GHz digit: 0 (Fixed)
		1 Hz digit: 0 (Fixed)	10 kHz digit: 0, 1, 2, 5	1 MHz digit: 0 (Fixed)	100 MHz digit: 0 (Fixed)
		1 kHz digit: 0, 2, 5			
		100 Hz digit: 0, 5			

Span (kHz)	
2500	2.5
5000	5
10000	10
25000	25
50000	50
100000	100
250000	250
500000	500

- **Scope Reference level settings**

Command: 27 19

Diagram illustrating the digital signal for the first 8 samples of a 1000 Hz sine wave. The signal is represented by a sequence of 8 bits: X, X, X, X, X, 0, X, X. The bits are mapped to sample values as follows:

- Bit 1: 0 (Fixed)
- Bit 2: 0 (Fixed)
- Bit 3: 10 dB digit: 0, 1, 2
- Bit 4: 1 dB digit: 0 ~ 9
- Bit 5: 0.1 dB digit: 0, 5
- Bit 6: 0.01 dB digit: 0
- Bit 7: 00 = + (plus), 01 = - (minus)
- Bit 8: (Fixed)

Adjustable range: $-20.0\text{ dB} \sim +20.0\text{ dB}$
in 0.5 dB steps.

- **Scope Fixed edge frequency settings**

Command: 27 1E

Pin	Function	Input	Output
1	Frequency range	X	X
2	Edge number: 01 ~ 04	0	X
3	10 Hz digit: 0 ~ 9	X	X
4	1 Hz digit: 0 ~ 9	X	X
5	1 kHz digit: 0 ~ 9	X	X
6	100 Hz digit: 0 ~ 9	X	X
7	100 kHz digit: 0 ~ 9	X	X
8	10 MHz digit: 0 ~ 9	X	X
9	1 MHz digit: 0 ~ 9	X	X
10	1 GHz digit: 0 (Fixed)	0	X
11	100 MHz digit: 0 ~ 4	X	X
12	Higher edge	0	X

① Entry of less than 1 kHz digits are ignored.

① Selectable Frequency ranges:

Data	Frequency range (Hz)
01	0.03 ~ 1.60
02	1.60 ~ 2.00
03	2.00 ~ 6.00
04	6.00 ~ 8.00
05	8.00 ~ 11.00
06	11.00 ~ 15.00
07	15.00 ~ 20.00
08	20.00 ~ 22.00
09	22.00 ~ 26.00
10	26.00 ~ 30.00
11	30.00 ~ 45.00
12	45.00 ~ 60.00
13	60.00 ~ 74.80
14	74.80 ~ 108.00
15	108.00 ~ 137.00
16	137.00 ~ 200.00
17	400.00 ~ 470.00

② Selectable Edge number: 01=1, 02=2, 03=3, 04=4