

§

# AREDN Setup

## V2.1

Andreas Spiess, HB9BLA ([hb9bla@gmail.com](mailto:hb9bla@gmail.com))

13.11.2024


## Content

Preparation .....	3
Yealink Phones .....	5
Flash the Phone.....	5
Phone Setup.....	6
Standard phone book.....	9
Backup phonebook (with full mesh address).....	9
Flash Mikrotik devices.....	11
Preparations.....	11
Change PC to a fixed IP address.....	11
Flash rb.elf to target device .....	13
Flash AREDN Firmware .....	15
Configure AREDN .....	16
My recommended settings for the hap routers (for the moment) .....	17
Make your telephone visible to the network .....	18
Set up a tunnel to the AREDN network.....	19
Install the Phonebook .....	22
Principle of operation .....	22
Installation .....	23
Troubleshooting:.....	24
Is the phonebook downloaded? .....	24
Config file (only for experts) .....	24
Using a PBX in parallel.....	25
Attachments.....	26
Google Sheets replication .....	26


## Preparation

You can find all relevant files on GitHub (<https://github.com/dhamstack/AREDNstack> )

Press "code" and "Download ZIP". The file is quite big (>500M):

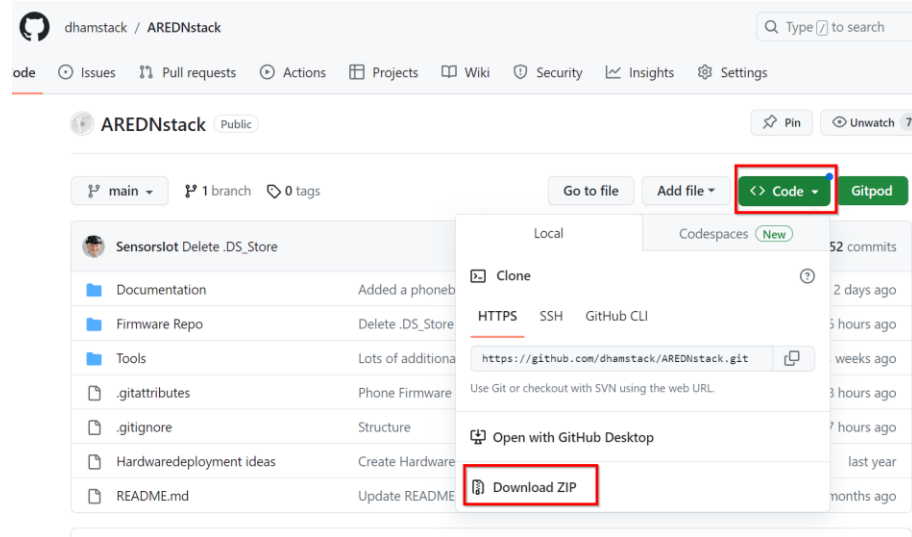

Extract the ZIP file:

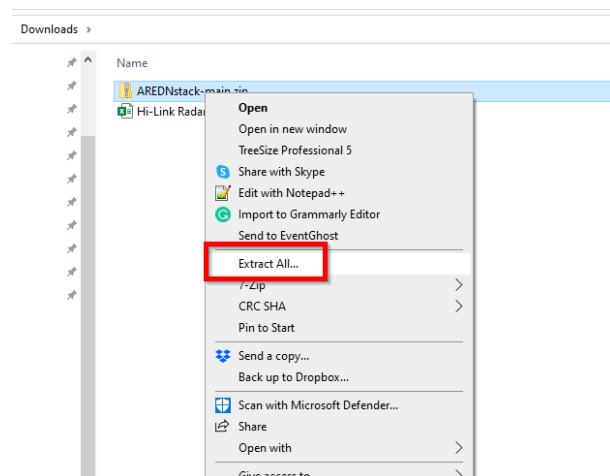

Now you should have all needed files in your Downloads/AREDNstack-main/ folder:

Downloads > AREDNstack-main > AREDNstack-main

Name	Date modified	Type	Size
Documentation	20.09.2023 15:32	File folder	
Firmware Repo	20.09.2023 15:32	File folder	
Tools	20.09.2023 15:32	File folder	
Hardwaredeployment ideas	20.09.2023 15:32	File	1 KB
README.md	20.09.2023 15:32	MD File	2 KB
.gitattributes	20.09.2023 15:32	Text Document	1 KB
.gitignore	20.09.2023 15:32	Text Document	1 KB

Here you find firmware for our typical phones to flash with "free" firmware (not connected to a provider).

Name	Date modified	Type
ConfigManager 2.0.0.17(V86)	20.09.2023 15:32	File folder
T41P	20.09.2023 15:32	File folder
T41S	20.09.2023 15:32	File folder
T42	20.09.2023 15:32	File folder
T46G	20.09.2023 15:32	File folder
T46S	20.09.2023 15:32	File folder
T48G	20.09.2023 15:32	File folder
T48S	20.09.2023 15:32	File folder
T58A	20.09.2023 15:32	File folder

# Yealink Phones

## Flash the Phone

**This is not always needed.** Try first without this step and return if needed. Continue with “Phone Setup”.


1. Download and unzip tftpd64.464.zip (the "run", not the setup version)  
(<https://bitbucket.org/phjounin/tftpd64/downloads/> )
2. Disconnect your computer from Wi-Fi and Ethernet and set a fixed IP address (e.g., 192.168.0.4)
3. Start tftpd64.exe
4. Click the browse button to locate the TFTP root directory

AREDNstack-main > AREDNstack-main > Firmware Repo > Yealink phones Firmware > T46G

Name	Date modified	Type	Size
T46.bin	20.09.2023 15:32	BIN File	1'710 KB
T46.rfs	20.09.2023 15:32	RFS File	8'192 KB
T46.rom	20.09.2023 15:32	ROM File	23'065 KB
T46G.cfg	20.09.2023 15:32	CFG File	2 KB

You should be able to see the files your phone will request during flashing.

5. Select the local IP address from the "Server Interface" drop-down menu.

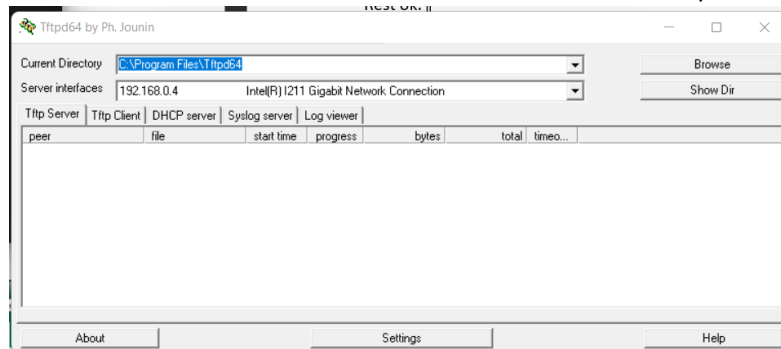

If you do not find your fixed IP, something is wrong, and you must start over.

6. Connect the SIP phone to the PC with an Ethernet cable. Use the “Internet” socket on the telephone. Use the “Internet” socket on the telephone
7. Power the Yealink with the speaker button pressed until you see a selection(TFTP or USB) or the below screen. Press 1 for TFTP if presented.
8. Fill in the fields as shown. Make sure you use a free IP address for the telephone (e.g., 192.168.0.230 ):

```
IP Addr: 192.168.0.230
Netmask: 255.255.255.0
Gateway: 192.168.0.1
TFTP IP: 192.168.0.4
```

9. Hit enter (OK) and wait. The display on the phone shows “Start Updating...”. You should see in the tftpd64 window on the PC that the phone fetches files from your computer.





10. As soon as all files have been read from the PC, the phone will automatically restart. However, this can take a few minutes. As soon as the phone displays a display again (e.g. "Obtaining IP address...") carry out the following step
11. Hold down the OK button until the message "Reset to factory setting?" appears. Confirm this message with the »OK« key. The message "Resetting to factory setting, please wait" appears, and then the welcome screen appears.
12. Remove power from the phone
13. The flashing of the SIP phone is now finished, and the phone is now ready for settings for the AREDN mesh.
14. Connect the phone to your hap router (port 2-4) and to power. After booting, go to the "About" menu on your phone to find the IP address.

Now, you are ready for the next step.

## Phone Setup

With the firmware for your phone, you also find a file with the extension .CFG.

AREDNstack-main > AREDNstack-main > Firmware Repo > Yealink phones Firmware > T46G

Name	Date modified	Type	Size
 T46.bin	20.09.2023 15:32	BIN File	1'710 KB
 T46.rfs	20.09.2023 15:32	RFS File	8'192 KB
 T46.rom	20.09.2023 15:32	ROM File	23'065 KB
 T46G.cfg	20.09.2023 15:32	CFG File	2 KB

Edit this file and replace XXXXXX with the phone number you want for your phone. You can change the language by placing the # in the right place.

```

#!version:1.0.0.1


### This file is the exported MAC-all.cfg.

### For security, the following parameters with password haven't been display in this file.
account.1.password = admin
account.1.enable = 1
account.1.label = SOP
account.1.display name = Test
account.1.user_name = XXXXXX
account.1.auth_name = XXXXXX
account.1.sip_server.1.address = localnode.local.mesh
features.remote_phonebook.flash_time = 3600
features.remote_phonebook.enable = 1
features.relog_offtime = 999
lang.gui = German
#lang.gui = French
#lang.gui = English
account.1.codec.pcmu.priority = 3
account.1.codec.pcma.priority = 4
account.1.codec.g729.priority = 1
account.1.codec.g722.priority = 2
local_time.time_zone = +1
local_time.time_zone_name = Germany(Berlin)
local_time.ntp_server1 = ch.pool.ntp.org
local_time.dhcp_time = 1
local_time.date_format = 1
local_time.manual_ntp_srv_prior = 1
### Static Configuration ###
static.auto_provision.power_on = 0
static.auto_provision.pnp_enable = 0
static.auto_provision.dhcp_option_enable = 0
static.network.dhcp_host_name = XXXXXX
remote_phonebook.data.1.url = http://localnode.local.mesh/arednstack/phonebook_generic_direct.xml
remote_phonebook.display_name = AREDN
remote_phonebook.data.1.name = Direct
remote_phonebook.data.2.url = http://localnode.local.mesh/arednstack/phonebook_generic_pbx.xml
remote_phonebook.data.2.name = PBX
features.remote_phonebook.enable = 1
features.direct_ip_call_enable = 1
#directory_setting.url = http://localnode.local.mesh/arednstack/favorite_setting.xml
#super_search.url = http://localnode.local.mesh/arednstack/super_search.xml
#super_search.recent_call = 1
#security.var_enable = 1
#web_item_level.url = http://localnode.local.mesh/AREDNstack/WebItemsLevel.cfg

```

Replace the display.name if you want. Save it. SOP means Swiss Official Phonebook, BTW.

Go to a browser, type the IP address of your phone into the address, and login using admin/admin.

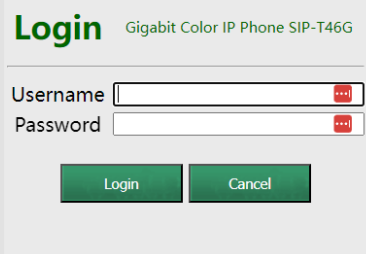

**Login** Gigabit Color IP Phone SIP-T46G

Username

Password

Change your password if you want.

Now go to Settings → Configuration.

The screenshot shows the Yealink T46G web interface. The top navigation bar includes 'Status', 'Account', 'Network', 'Dsskey', 'Features', 'Settings' (selected), 'Directory', and 'Security'. A warning message states: 'Default password is in use. Please change!'. The left sidebar lists various settings categories, with 'Configuration' selected. The main content area is titled 'Export or Import Configuration' and contains several sections:

- Export or Import Configuration:** Includes a 'Browse...' button and 'Import' and 'Export' buttons.
- Export CFG Configuration File:** Includes a dropdown menu set to 'Static Settings' and an 'Export' button.
- Import CFG Configuration File:** Includes a 'Browse...' button, 'Import', and 'Cancel' buttons.
- Pcap Type:** A dropdown menu set to 'Enhanced'.
- Pcap Feature:** 'Start' and 'Stop' buttons.
- Local Log:**
  - Enable Local Log:** A dropdown menu set to 'Enabled'.
  - Local Log Level:** A dropdown menu set to '3'.
  - Max Log File Size (256-2048KB):** A text input field set to '1024'.
  - Export Local Log:** An 'Export' button.
- Syslog:**
  - Enable Syslog:** A dropdown menu set to 'Disabled'.
  - Syslog Server:** A text input field.
  - Port:** A text input field set to '514'.

On the right side, there is a 'NOTE' section titled 'Configuration' with the following text: 'IP phones can provide feedback in a variety of forms such as log files, packets, status indicators and so on, which can help an administrator more easily find the system problem and fix it.' Below this, there is a list of links: 'Log Files', 'Capturing Packets', and 'Configuration File (\*.cfg/\*.bin)'. At the bottom of the note, there is a link: 'Click here to get more product documents.'

Go to "Import CFG configuration file and browse to the Txx.cfg file you edited before. Hit "Import" and wait till the phone rebooted.

After reboot, go to Directory → Remote Phone Book and check if the remote phone book screen looks like that:

The screenshot shows the Yealink T46G web interface with the 'Directory' tab selected. The left sidebar lists 'Local Directory', 'Remote Phone Book' (selected), 'Phone Call Info', 'LDAP', 'Multicast IP', and 'Setting'. The main content area is titled 'Remote Phone Book' and contains a table with the following columns: 'Index', 'Remote URL', and 'Display Name'.

Index	Remote URL	Display Name
1	<a href="http://localnode.local.mesh:8081/phonebook?format=PBX&amp;t">http://localnode.local.mesh:8081/phonebook?format=PBX&amp;t</a>	Standard
2	<a href="http://localnode.local.mesh:8081/phonebook?format=direct&amp;t">http://localnode.local.mesh:8081/phonebook?format=direct&amp;t</a>	Direct (only for Backup)
3		
4		
5		

Below the table, there are two settings:

- Incoming/Outgoing Call Lookup:** A dropdown menu set to 'Enabled'.
- Update Time Interval(Seconds):** A text input field set to '3600'.

At the bottom, there are 'Confirm' and 'Cancel' buttons. On the right side, there is a 'NOTE' section titled 'Remote Phone Book' with the following text: 'It is a centrally maintained phone book, stored in the remote server. Users only need the access URL of the remote phone book. The IP phone can establish a connection with the remote server and download the phone book, and then display the remote phone book entries on the phone user interface.' Below this, there is a link: 'Click here to get more product documents.'

The two phonebooks for copy-paste (if they are not here):



Standard phone book

<http://localnode.local.mesh:8081/phonebook?format=PBX&target=generic&ia=true>

This file only stores the telephone number. The PBX knows this number anyway, and the SIP server automatically creates the mesh address for direct calling.

Backup phonebook (with full mesh address)

If you want to store the full mesh address as a backup on your phone, you can add the second line. It is not needed.

<http://localnode.local.mesh:8081/phonebook?format=direct&target=generic&ia=true>

Go to Directory → Setting and fill the fields like that:

Yealink | T46G

Default password is in use. Please change

Log Out English(English)

Status Account Network Dsskey Features Settings Directory Security

Local Directory  
Remote Phone Book  
Phone Call Info  
LDAP  
Multicast IP  
Setting

Directory ?

Disabled

Local Directory  
History  
Blacklist

Enabled

Remote Phone Book

Search Source List In Dialing ?

Disabled

Local Directory

Enabled

Remote Phonebook History

Recent Call In Dialing

Enabled

Confirm Cancel

**NOTE**

**Directory**  
It provides easy access to frequently used lists.

**Search Source in Dialing**  
It allows the IP phone to automatically search entries from the search source list based on the entered string, and display results on the pre-dialing screen.

**Recent Call In Dialing**  
It allows users to view the placed calls list when the phone is on the pre-dialing screen.

Click here to get more product documents.

Confirm

Now, you should see a small phone in your phone's display that shows it is ready for the AREDN network. You should also see a "direct" and "PBX" folder if you press the "Directory" button on your phone.

Check if you phone is enabled for IP telephony:

Yealink T48S Log Out

⚠ These users (admin,user) are using the default password, please change the password!

English (English)

---

**Status** **Account** **Network** **Display** **Features** **Settings** **Directory** **Security**

---

Forward & DND

General Information

Audio

Intercom

**General Information**

Call Waiting	Enabled	?
Call Waiting On Code		?
Call Waiting Off Code		?
Auto Redial	Disabled	?

**NOTE**

**Call Waiting**  
It allows IP phones to receive a new incoming call when there is already an active call.

**Auto Redial**  
It allows IP phones to automatically redial a busy...

Send Pound Key	Disabled	?
Fwd International	Enabled	?
Diversion/History-Info	Enabled	?
BLF LED Mode	0	?
Auto Logout Time (1~1000min)	999	?
Call Number Filter		?
Accept SIP Trust Server Only	Disabled	?
Allow IP Call	Enabled	?
IP Direct Auto Answer	Disabled	?
Call List Show Number	Name	?
Voice Mail Tone	Enabled	?
DHCP Hostname	441531	?
Reboot in Talking	Disabled	?
Hide Feature Access Codes	Disabled	?
Display Method on Dialing	Username	?
Auto Linekeys	Disabled	?

If your Mikrotik router already works with AREDN, you can skip the next step and install the phonebook.  
If not, continue with the next chapter.

## Flash Mikrotik devices

### Preparations

The small Mikrotik hap ac-lite/ac3 box or square Access PointSXTsq (AP) will hereafter be referred to as "target devices." **Green are the notes for the AP.**


Download the "kernel" and "sysupdate" files for your device. **Every letter in the name counts!**

<https://downloads.arednmesh.org/afs/www/>

*Rename the kernel bin file file to rb.elf.*

Download the Tiny PXE Server (<http://erwan.labalec.fr/tinypxeserver/pxesrv.zip>) and unpack it to a convenient directory.


Go to the Tiny PXE Server directory:

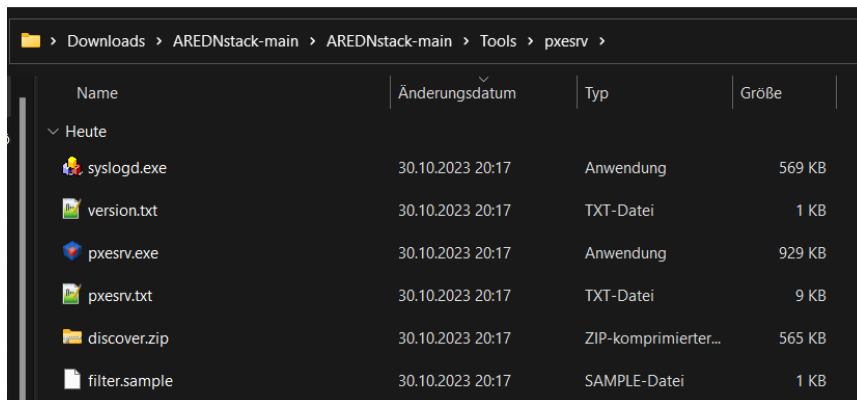

Name	Änderungsdatum	Typ	Größe
Heute			
syslogd.exe	30.10.2023 20:17	Anwendung	569 KB
version.txt	30.10.2023 20:17	TXT-Datei	1 KB
pxesrv.exe	30.10.2023 20:17	Anwendung	929 KB
pxesrv.txt	30.10.2023 20:17	TXT-Datei	9 KB
discover.zip	30.10.2023 20:17	ZIP-komprimierter...	565 KB
filter.sample	30.10.2023 20:17	SAMPLE-Datei	1 KB

And copy the rb.elf file from before to the «Files» folder of the PXE server (overwrite if necessary).

Connect your target device to a switch as shown below (connect the LAN cable to the "internet" port of the hap router):

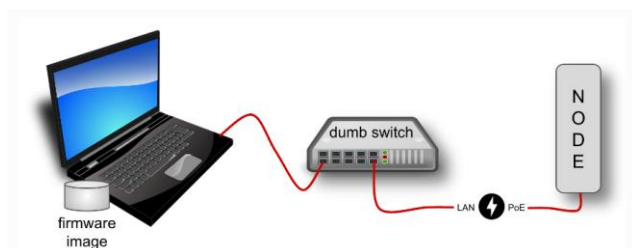


Deactivate Wi-Fi on the PC and supply power to the dumb switch.

### Change PC to a fixed IP address


Type

ncpa.cpl


into Windows search

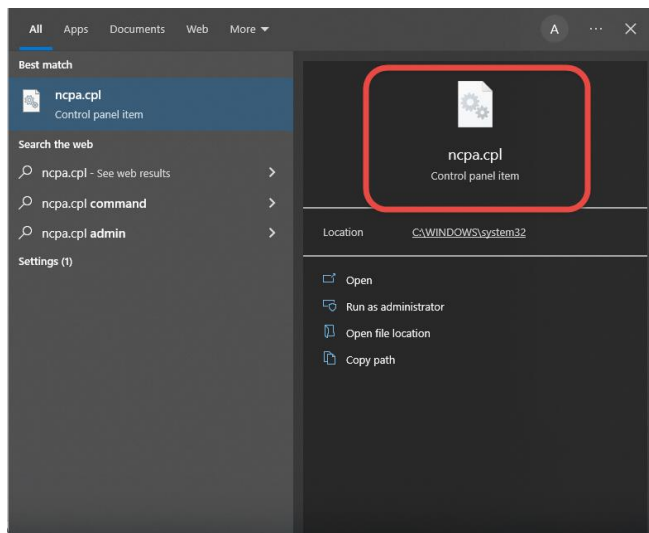


Select "Ethernet"

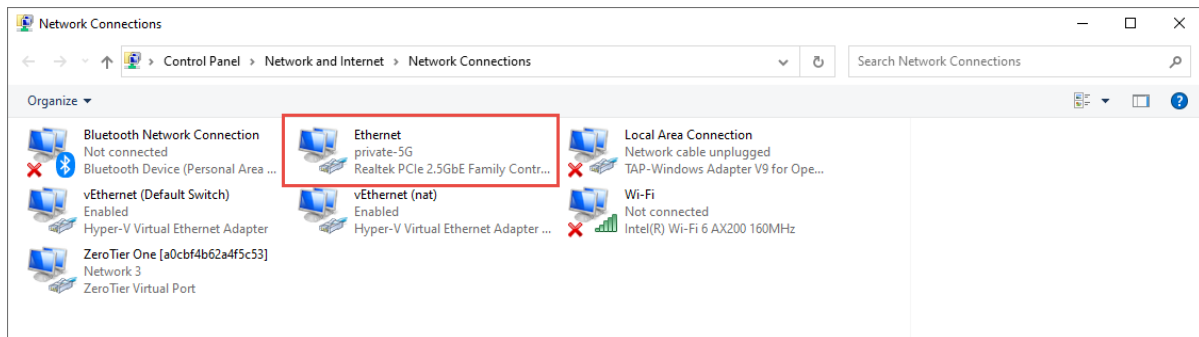


Select «Properties»:

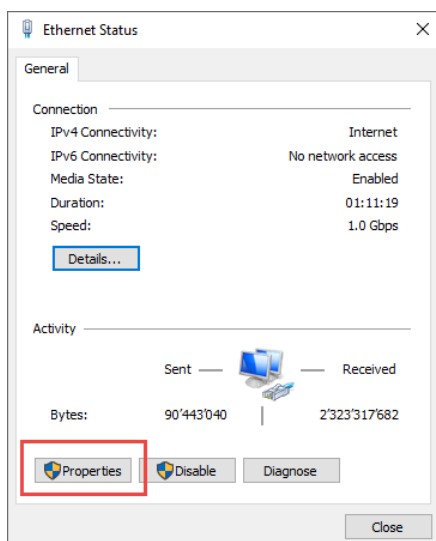

Select IPV4:

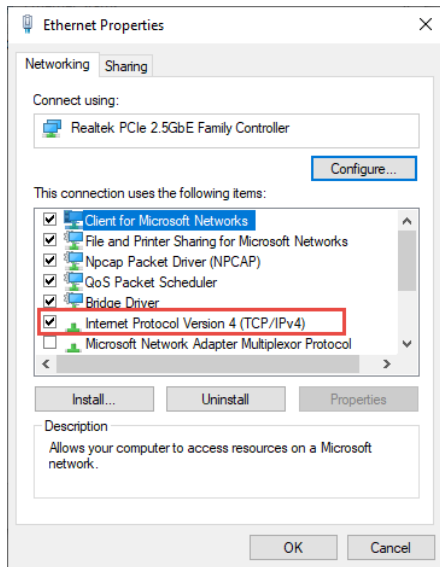

Input IP address 192.168.1.50:

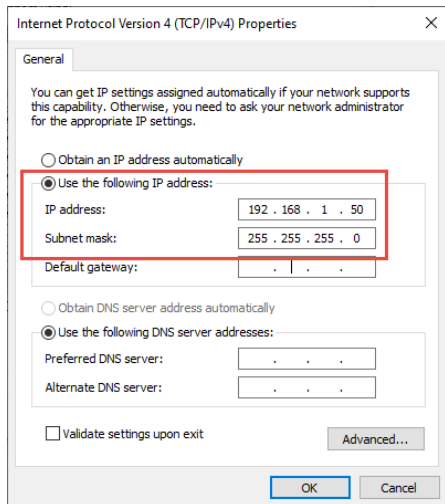

Press OK and Close


Flash rb.elf to target device

Power the hap devices with a power supply, not with PoE.

Check if the ethernet cable is connected to **port 1** of the hap router (labeled with Internet), supply the router with power and wait until the top red LED is off and the green LED above with the number 1 flickers. Possibly Windows detects a new network. Then a larger blue window will appear on the right side of the screen, mentioning the new network. Confirm with OK. The whole thing takes about 3 minutes.

Do the same with the AP. Use the PoE injector (Y-cable) or a **passive** PoE switch for the power supply. The power supply unit of the router also works here (both are 24V).

Start Tiny PXE Server (double click on the pxesrv.exe file in the «pxesrv» directory). You might get this warning:

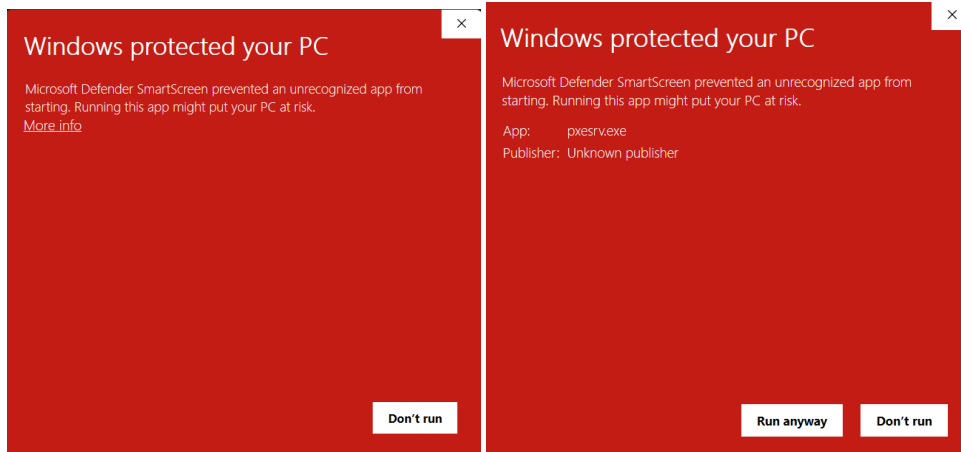


Press «More info» and let the program run.

Now pull the power of the target device.

In the Tiny PXE Server window, select the IP address entered on the Ethernet adapter from the drop-down box (192.168.1.50). If this IP address cannot be selected, close the Tiny PXE Server and start it again. If it still doesn't work, check the IP4 adapter settings and start again.

Find and select rb.elf in the «Boot File» section. This file can be found in the «...\pxesrv\files» folder.

Uncheck «Filename if user class...». No additional settings are necessary.

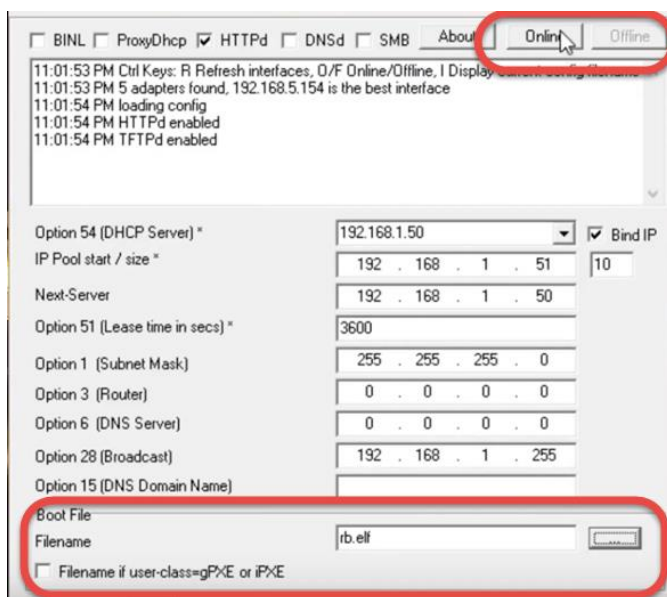

Now switch the Tiny PXE Server to «Online» in the upper right corner.

Then press the reset button in the target device with a pointed object (e.g., paper clip or toothpick) and then plug in the power cable to the target device. The USB LED will be on, flashing, and off (5 seconds each). Check the log window. Immediately after the bottom line says "Do ReadFile:rb.elf ....." release the reset button and switch the Tiny PXE Server to "Offline." This procedure takes about 20 seconds. The target device now boots with the AREDN firmware.

Don't keep the reset button pressed for too long, or you'll have to start over!

Keep the device powered. Otherwise, you have to start over!

If new messages (new requests) keep appearing in the window, you must use a different PC. Preferably one with little software installed.

After a few minutes, the process should be finished.

Plug the Ethernet cable into **port 2** on your router

With the AP, the Ethernet cable remains in the only socket. The rest is the same

### Flash AREDN Firmware

Now open a browser and enter 192.168.1.1. The picture should look something like this.



#### Welcome

Congratulations on booting AREDN®

AREDN® is currently running in RAM. The next step is to install AREDN® into Flash.

Download the **sysupgrade.bin** file for this device (it should be at the same place you found this **kernel.bin** file) and upload it using the file selector below

Select Firmware File

aredn-3.24.10.0-tpq40xx-mikro...-ac3-squashfs-sysupgrade.bin

If not, back to start.

Now you can select the sysupgrade file for your router and hit "Upload". Wait till you get an answer on <http://192.168.1.1>



## Welcome

Congratulations on installing AREDN®  
There's a few pieces of basic information we need to start setting up your node.

Node Name

This is the unique name given to your node. It must start with your callsign which must be capitalized. For example, **K6AH-home**

New Password

Retype Password

Enter a password, twice, to assign to your node for access to configuration information later

Save & Reboot

Enter the node name **beginning with your call sign.**

## Configure AREDN

Change your PC to DHCP. Open the browser and enter the following line

<http://localnode.local.mesh>

If there is no answer, the process is not yet complete. Try again and again. If you still can't connect after 15 minutes, go back and start over.

The new screen should show up where you can login to administer the node.

**HB9BLA-HAP3-1** status

**None**  
description

10:28 pm  
time

0:07  
uptime

0.02 0.14 0.09  
load average

94.608 MB 178.648 MB  
free flash free ram

3.24.10.0  
firmware version issues release notes

**NETWORK**  
10.242.159.161 / 8  
mesh address  
10.148.253.9 / 29  
lan address

**LOCAL SERVICES**  
None

**LOCAL DEVICES**  
None

**LOCAL NODES**  
None


**NEIGHBORHOOD NODES**  
None

**RADIO**  
MikroTik hAP ac3  
model

**MESH**  
-2 2392 - 2402 MHz 10 MHz  
channel frequencies bandwidth  
19 dBm 80 km 15  
tx power maximum distance minimum snr

**ANTENNA**  
3 dBi Omni  
antenna  
- - -  
azimuth height elevation

**MESH**  
1 1  
nodes devices

**Old UI**  Login

You see if you are in administration node when the UI looks like that:



**HB9BLA-HAP3-1** admin Old UI

**None**  
description  
-  
notes

10:35 pm  
time

0:14  
uptime

0.00 0.03 0.05  
load average

94.608 MB 179.128 MB  
free flash free ram

3.24.10.0  
firmware version issues release notes

0  
installed packages

**NETWORK**  
10.242.159.161 / 8  
mesh address  
10.148.253.9 / 29  
lan address

**To Do**  
Set the latitude and longitude

**INTERNAL SERVICES**  
☒ active Cloud Mesh ☐ inactive Metrics  
☒ disabled Watchdog ☒ disabled Remote Logging  
☒ active IPerf3 Server ☒ disabled Supernode  
☒ active WAN ssh ☒ active WAN telnet  
☒ active WAN web ☒ disabled PoE out

**LOCAL SERVICES**  
None

**LOCAL DEVICES**  
None

**LOCAL NODES**  
lq nlq snr n snr errors mbps km

**NEIGHBORHOOD NODES**  
None

**RADIO**  
MikroTik hAP ac3  
model

**MESH**  
-2 2392 - 2402 MHz 10 MHz  
channel frequencies bandwidth  
19 dBm 80 km 15  
tx power maximum distance minimum snr

**ANTENNA**  
3 dBi Omni  
antenna  
- - -  
azimuth height elevation

**MESH**  
1 1  
nodes devices

**LAN DHCP**  
Active  
status  
10.148.253.9 / 29 10.148.253.10 - 10.148.253.14

Changes are made everywhere on the screen when you see a grey shadow.

After changes, you have to commit them, and sometimes you are asked to reboot. There is no «reboot» button anymore.

My recommended settings for the hap routers (for the moment)

**Radios & Antennas** Help

**Radio 2.4GHz**  
Radio purpose: WAN Client  
SSID: private-2G  
Password:   
Client password:   
Antenna: 3 dBi Omni  
Antenna height in meters:   
Antenna elevation in degrees:   
Radio 5GHz  
Radio purpose: Mesh  
Channel: 149 (5745)  
Channel Width: 10 MHz  
Cancel Done

I connect my hap routers to Wi-Fi and create a mesh on 5GHz to test with other AREDN nodes. If you connect the hap via cable to the internet, you can switch the 2.4GHz radio to “off”.

## Make your telephone visible to the network

Telephones have to be visible to others. This is why we have to reserve the address. This is done in the “LAN DHCP” area on the right. If you click it you get to this screen:

LAN DHCP

Address Reservations  
Hostnames with fixed addresses

hostname	ip address	mac address	do not propagate
SIP-T48S	10.148.253.10	80:5e:c0:76:d3:55	<input checked="" type="checkbox"/>

Active Leases  
Addresses currently in use

hostname	ip address	mac address
SIP-T48S	10.148.253.10	80:5e:c0:76:d3:55

Advanced options

Cancel Done

If you connect your Yealink phone, it should already be visible, and you just have to press the “+” button. Change its name to one of your unique phone numbers. You get the telephone numbers from HB9JAT, HB9BND, or HB9BLA. MAC address is found on the telephone under «information» (if needed).

Remove the tick at “do not propagate” to make it visible in the net.

LAN DHCP

Address Reservations  
Hostnames with fixed addresses

hostname	ip address	mac address	do not propagate
441533	10.148.253.10	80:5e:c0:76:d3:55	<input type="checkbox"/>


Active Leases  
Addresses currently in use

hostname	ip address	mac address
441533	10.148.253.10	80:5e:c0:76:d3:55

Advanced options

Cancel Done

Now it is time to go to the network overview:

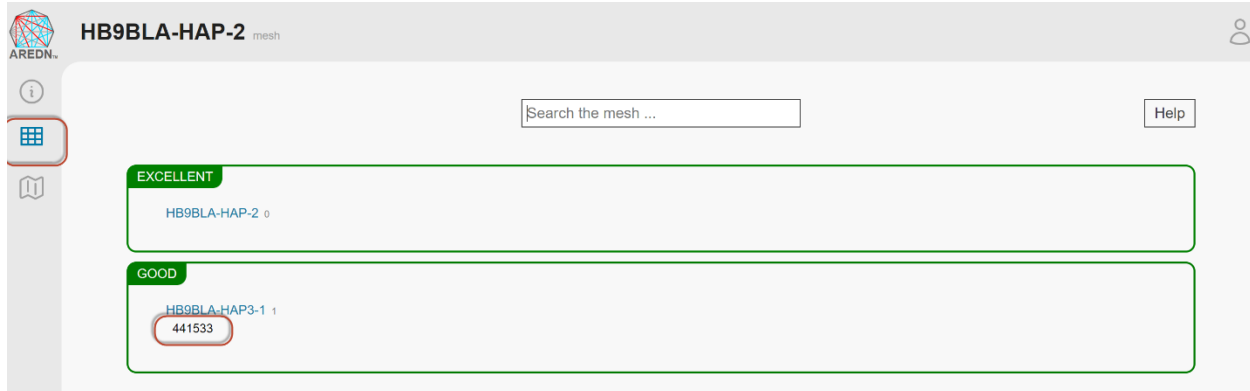

The phone should be visible under your router name.

Set up a tunnel to the AREDN network


(only necessary if you connect via an Internet tunnel)

This chapter only applies to the hap routers.

Connect port 1 (Internet) to the Internet or connect via the network as shown before in my recommended settings.

From now on, you can access the router either if you connect a cable from your PC to ports 2-4 or via Wi-Fi.


The router should provide a network.

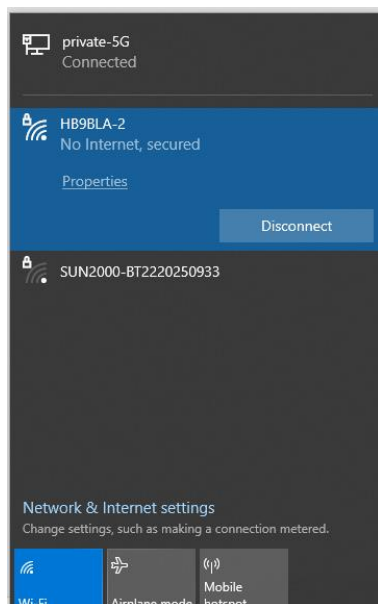

There are two different tunnels available. The owner of the tunnel server decides which one you have to use. Wireguard tunnels are the future.


The tunnel owner will send you a file with the needed info. For legacy tunnels, make sure your node name matches the one given to you by the owner. Otherwise it will not work.

Server: his server address  
PwD: The password he assigned to your tunnel  
Network: The address of your tunnel

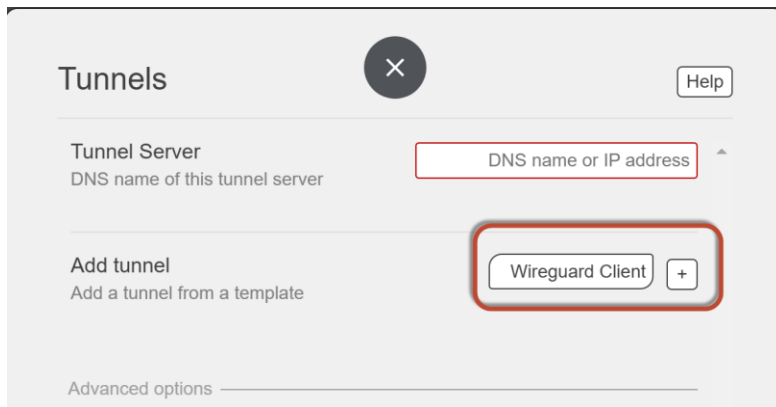

The screenshot shows a window titled 'Tunnels' with a close button (X) and a 'Help' button. Below the title bar, there is a section for 'Tunnel Server' with a label 'DNS name of this tunnel server' and a text input field containing 'DNS name or IP address'. Below this is the 'Add tunnel' section with a label 'Add a tunnel from a template'. A red box highlights the 'Wireguard Client' button with a plus sign. At the bottom, there is an 'Advanced options' section with a horizontal line.

The field “Tunnel server” is left blank for clients. Chose Wireguard or Legacy client, press the plus sign, and fill in the information you got from the tunnel owner.

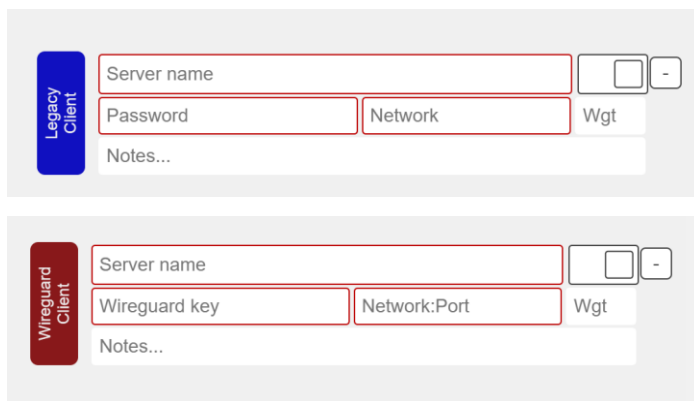

The first screenshot shows the 'Legacy Client' configuration form. It has a blue header with 'Legacy Client' text. The form includes a 'Server name' input field, a 'Password' input field, a 'Network' input field, and a 'Notes...' input field. There are also checkboxes and a minus sign button. The second screenshot shows the 'Wireguard Client' configuration form. It has a red header with 'Wireguard Client' text. The form includes a 'Server name' input field, a 'Wireguard key' input field, a 'Network:Port' input field, and a 'Notes...' input field. There are also checkboxes and a minus sign button.

After you commit the changes, you should be connected (green) and your network should start to populate. You are now connected to the AREDN network. Go to «Node-Status» / «Mesh Status» and enjoy the success.

## HB9BLA-HAP-2 mesh

[Help](#)

### EXCELLENT

HB9BLA-HAP-2 0

### FAIR

HB9BLA-VM-TUNNELSERVER 2.4  
SwissDigitalNetPBX

filerepo   
SwissDigitalNetPBX

HB9BLA-VM-1 2.5  
441531  
441530

HB9BLA-BASEL-SUPERNODE 2.5  
lan.HB9BLA-BASEL-  
SUPERNODE.local.mesh

### SLOW

HB9BLA-HAP3-1 3.2  
441533

HB9SP-HAP-TUNNELSERVER 3.4

DO5JWA-HAP-1 3.4  
16792

HB9LU-HAP-TUNNELSERVER 3.4

HB9ZCY-HAP-1 3.4  
804830

HB9HFM-HAP-1 3.4  
178230

HB9EDI-VM-GW 3.4  
mrtg  
422530

filerepo   
mesh-traffic-ch

HB9GNO-HAP-TUNNELSERVER 3.4  
720830

HB9REY-HAP-1 3.4  
813430

HB9GVM-VM-1 3.4

HB9HHH-HAP-1 3.4  
141831

HB9HOO-HAP-1 3.4  
443430

HB9AG-TUNNELSERVER-1 3.4  
533330

HB9JBP-hap-1 3.4  
860030

## Install the Phonebook

This project aims to create a common Global AREDN telephone network. Local telephone books are distributed to all participating AREDN phones connected to the SwissDigitalNetwork or, via Supernodes, worldwide. By storing the latest version on each router, we can ensure that, during an emergency, we have no single point of failure. Each phone can call all reachable phones without a (central) PBX.

### Principle of operation

You can skip this chapter and go to "Installation" if you are not interested in how the telephone book works.

AREDN is a mesh network, and we do not want to create a single point of failure. This is why the telephones get their phonebook files from the hap router they are connected to. So, a phone gets its phonebook as long as its router works.

We use direct calling instead of a PBX to avoid a single point of failure for communication, reduce the latency time, and reduce the overload of single mesh segments. The address used for this case is an FQDN like [178230@178230.local.mesh](https://178230@178230.local.mesh). If you want or need to operate a PBX, the address is just a phone number like 178230. In Switzerland, we use the city's zip code of the HAM plus a two-digit number in the range of 30-70. Lower numbers are reserved for official use.

The "Official" Swiss AREDN phonebook (SOP) is on Google:

[https://docs.google.com/spreadsheets/d/1g33BHSXMC8T4Cmfz\\_Zq-XxtPP17dtEBexF2i4KKe\\_Mc/edit?usp=sharing](https://docs.google.com/spreadsheets/d/1g33BHSXMC8T4Cmfz_Zq-XxtPP17dtEBexF2i4KKe_Mc/edit?usp=sharing). You can create a comment to add or change something or notify one of the administrators to do it for you.

Other countries will have their own telephone book (one per international area code). The maximum length of a local phone number is 7.

xxx-yyyyyyy

xxx: 3-digit area code

yyyyyyy: 7-digit local number (in Switzerland, currently only 6 are used)

Examples:

A global number in Switzerland starts with 041 (e.g. 041441530). For your comfort, you only have to dial the short number (in Switzerland, 441530). The SIP server on your router automatically adds 041 (it is defined in the config file).

Other nations use their international area code. It must have three digits. So, the US has 001 and Lichtenstein 423.

Currently, we support Yealink telephones. Cisco phones should also work.

At power-up and every hour, the telephones used for AREDN automatically load phonebooks from the connected router. The file format used for that process is XML.

How is the information transferred from the Google Sheets to your hap router? The first step is to copy the .csv version of the sheet from Google to two web servers (one acts as a backup) in the AREDN mesh.

If Google is down, we could still edit this .csv file manually. This transfer is done every hour. You find more info in attachment.

## Installation

Go to the releases page and open “Assets”:

<https://github.com/arednch/packages/releases>

Releases Tags

12 hours ago  
finfinack  
v1.9.1  
aa84944  
Compare

**v1.9.1** Pre-release

Alpha release with new changes/fixes:

- memory profiling and reduction
  - removing the pretty interface (CSS) to reduce memory use
  - some structure optimizations removing unneeded fields
- move CSS to node base webserver instead

**IMPORTANT:** Remove the `sipserver` and `libstdc++` packages from the node before installing this version of phonebook as this includes a (really really basic and incapable) SIP server of its own listening on the same port.

Only update this if you know what your doing - all at your own risk as this is an experimental feature for the time being.

▼ Assets 5

phonebook_1.9.1-r1_arm_cortex-a7_neon-vfpv4.ipk	2.1 MB	12 hours ago
phonebook_1.9.1-r1_mips_24kc.ipk	2.02 MB	12 hours ago
phonebook_1.9.1-r1_x86_64.ipk	2.5 MB	12 hours ago
Source code (zip)		12 hours ago
Source code (tar.gz)		12 hours ago

Download the respective ipk file (mips-24kc for the small hap lite and arm-cortex for the hap3). The ipk file includes the phonebook, the SIP server, and all libraries.

Go to “installed packages” on the left:

**Packages** Help

**Download Package**  
Download package from an AREDN server.

**Upload Package**  
Upload a package file from your computer.

**Remove Package**  
Uninstall package from node.

Advanced options




Chose the correct “phonebook” file and “upload it. This starts its installation.

Downloads

Search Downloads

Sort

View

Name	Date modified	Date created	Type
Today			
 phonebook_1.9.1-r1_arm_cortex-a7_neon-vfpv4.ipk	09/07/2024 08:46	09/07/2024 08:46	IPK File
 phonebook_1.9.1-r1_mips_24kc.ipk	09/07/2024 08:46	09/07/2024 08:46	IPK File
 phonebook_1.9.1-r1_x86_64.ipk	09/07/2024 08:46	09/07/2024 08:46	IPK File

Now, you can connect your router to your AREDN network. After rebooting, the attached phone should connect to the sip server, and you should be able to download the phonebook with all numbers.

## Troubleshooting:

Is the phonebook downloaded?

[localnode.local.mesh:8081/phonebook?format=direct&target=generic&ia=true](http://localnode.local.mesh:8081/phonebook?format=direct&target=generic&ia=true)

should show you the actual phonebook

This XML file does not appear to have any style information associated with it. The document tree is shown below.

```
<IPPhoneDirectory>
  <DirectoryEntry>
    <Name>HB9CF SEC 1</Name>
    <Telephone>644040@644040.local.mesh</Telephone>
  </DirectoryEntry>
  <DirectoryEntry>
    <Name>HB9CF SEC 2</Name>
    <Telephone>644041@644041.local.mesh</Telephone>
  </DirectoryEntry>
  <DirectoryEntry>
    <Name>HB9ZG SEC 1</Name>
    <Telephone>630040@630040.local.mesh</Telephone>
  </DirectoryEntry>
  <DirectoryEntry>
    <Name>HB9ZG SEC 2</Name>
    <Telephone>630041@630041.local.mesh</Telephone>
  </DirectoryEntry>
  <DirectoryEntry>
    <Name>DL8TW @DK0NFK (DL8TW-1)</Name>
    <Telephone>9118931@9118931.local.mesh</Telephone>
  </DirectoryEntry>
</IPPhoneDirectory>
```

if not, type:

[localnode.local.mesh:8081/reload](http://localnode.local.mesh:8081/reload)

should load the actual telephone book from the AREDN server

## Phonebook: Reload

Version: 1.11-5  
Commit hash: "a6db137d8da43807f55d19bdc79209d6848ffa08"

Last phonebook update: 2024-11-13T16:17:19Z

Phonebook reloaded from [http://hb9bla-vm-tunnelsrvr.local.mesh/filerepo/Phonebook/AREDN\\_PhonebookV2.csv](http://hb9bla-vm-tunnelsrvr.local.mesh/filerepo/Phonebook/AREDN_PhonebookV2.csv)

## Config file (only for experts)

You can influence the behaviour of your phonebook software by changing parameters with the command

`vi /etc/phonebook.conf`



Important are these two parts:

**formats: Comma separated list of formats to export.**

Default:

```
"formats": [  
    "direct",  
    "pbx"  
],
```

- Supported: "pbx,direct,combined"

**targets: Comma-separated list of targets to export.**

Default:

```
"targets": [  
    "generic"  
],
```

- Supported: generic,yealink,cisco,snom

[Using a PBX in parallel](#)

If you want to use a PBX, you must add a second account with the respective information given to you by the PBX operator.

This is the end of the manual. The rest is for Administrators

---

## Attachments

These steps are executed on the server with the file repo.

### Google Sheets replication

Create a file on the “phonebook repo” server (in my case the tunnel server):

```
vi /etc/cron.hourly/load_phonebook_from_google
```

and insert:

```
#!/bin/sh
curl -L "https://docs.google.com/spreadsheets/d/e/2PACX-1vTZw1cw1V6pdFETvC-
JnI0gPwKRwR0rBUc2XqX9V3LV1NfrB0zvhhWkmrYVS1eippbs911MLfkeXj6-
/pub?gid=0&single=true&output=csv" -o
/www/filerepo/Phonebook/AREDN_PhonebookV2.csv
curl -L "https://docs.google.com/spreadsheets/d/e/2PACX-1vTZw1cw1V6pdFETvC-
JnI0gPwKRwR0rBUc2XqX9V3LV1NfrB0zvhhWkmrYVS1eippbs911MLfkeXj6-
/pub?gid=0&single=true&output=csv" -o /www/filerepo/Phonebook/AREDN_Phonebook.csv
curl -L "https://docs.google.com/spreadsheets/d/e/2PACX-1vTZw1cw1V6pdFETvC-
JnI0gPwKRwR0rBUc2XqX9V3LV1NfrB0zvhhWkmrYVS1eippbs911MLfkeXj6-
/pub?gid=208565882&single=true&output=csv"
```

```
#!/bin/sh
curl -L "https://docs.google.com/spreadsheets/d/e/2PACX-1vTZw1cw1V6pdFETvC-
JnI0gPwKRwR0rBUc2XqX9V3LV1NfrB0zvhhWkmrYVS1eippbs911MLfkeXj6-
/pub?gid=0&single=true&output=csv" -o /www/filerepo/Phonebook/AREDN_PhonebookV2.csv
curl -L "https://docs.google.com/spreadsheets/d/e/2PACX-1vTZw1cw1V6pdFETvC-
JnI0gPwKRwR0rBUc2XqX9V3LV1NfrB0zvhhWkmrYVS1eippbs911MLfkeXj6-
/pub?gid=0&single=true&output=csv" -o /www/filerepo/Phonebook/AREDN_Phonebook.csv
```

Include the route to this phonebook repo (and eventually a backup server) to this file on all routers with the appropriate phonebook software:

```
vi /etc/phonebook.conf
```

```
"sources": [
  "http://hb9hla-vm-tunnelserver.local.mesh/filerepo/Phonebook/AREDN_Phonebook.csv",
  "http://hb9edi-vm-gw.local.mesh/filerepo/Phonebook/AREDN_Phonebook.csv"
],
"olsr_file": "/tmp/run/hosts_olsr",
"sysinfo_url": "http://localnode.local.mesh/cgi-bin/sysinfo.json?hosts=1",
"ldap_server": true,
"sip_server": true,
"debug": false,
"allow_runtime_config_changes": false,
"allow_permanent_config_changes": false,
"path": "/www/arednstack",
"formats": [
  "combined",
  "direct",
  "pbx"
],
"targets": [
  "generic"
],
"resolve": false,
"indicate_active": true,
"filter_inactive": false,
"active_pfx": "*",
"include_routable": true,
"port": 8081,
"reload_seconds": 3600,
"web_user": "aredn",
"web_pwd": "arednsecret",
"ldap_port": 3890,
"ldap_user": "aredn",
"ldap_pwd": "aredn",
"sip_port": 5060
```

The second path is for backup.