


Lirc Setup

This setup was performed on a Raspberry PI 3 running the 11 / 25 / 2016 Jessie Lite version of Raspbian.

```
Linux xxxxxx 4.4.34-v7+ #930 SMP Wed Nov 23 15:20:41 GMT 2016 armv7l
GNU/Linux
```

lirc was setup for sending ir commands to a JVC receiver. Receiving ir commands was not required. The version in the repo was several revisions old and therefore I chose to build lirc from source.

The ir led was setup using a npn 2222 transitory wired to 5v, G and GPIO 22 with a 10K and a 220 ohm resistors to complete the circuit.

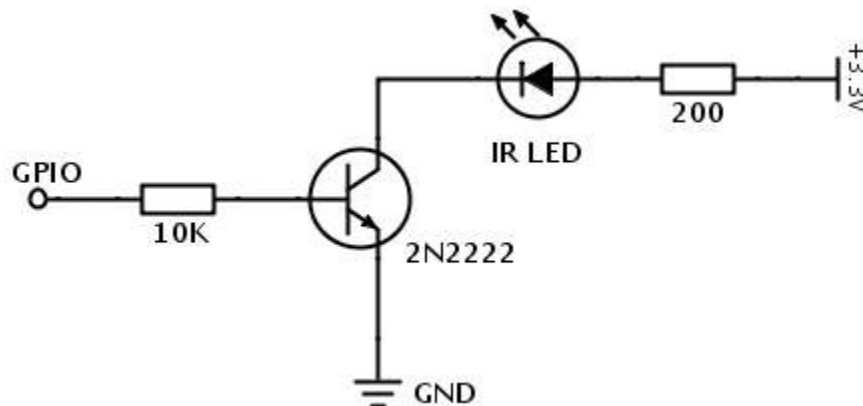

Circuit diagram by Dmitri Popov: <http://www.raspberry-pi-geek.com/Archive/2015/10/Raspberry-Pi-IR-remote>

Install lircd using apt-get install or if a newer version is desired build from source.

```
sudo apt-get install lirc
```

To build from source:

Download the source. As of 12 / 23 / 2016 the source is found on Sourceforge under files in the lirc project area. The source file is lirc-0.9.4c.tar.gz.

Install dependencies:

```
sudo apt-get install autoconf automake autopoint autotools-dev bsd-mailx
dctrl-tools debhelper      debian-keyring debootstrap devscripts dh-autoreconf
dh-python      dh-strip-nondeterminism diffstat distro-info-data dput equivs
exim4-base     exim4-config exim4-daemon-light gettext gettext-base hardening-
includes      intltool-debian libapt-pkg-perl libarchive-zip-perl libasprintf-
dev          libasprintf0c2 libclass-accessor-perl libclass-inspector-perl
libclone-perl libcommon-sense-perl libconvert-binx-perl libcroco3
libcrypt-ssleay-perl libdigest-hmac-perl libdistro-info-perl libemail-
valid-perl liberror-perl libexporter-lite-perl libfile-
stripnondeterminism-perl libgettextpo-dev libgettextpo0 libio-pty-perl
libio-sessiondata-perl libio-socket-inet6-perl libio-string-perl libio-
stringy-perl libipc-run-perl libjson-perl libjson-xs-perl liblist-
moreutils-perl liblockfile-bin liblockfile1 libltdl-dev libltdl7 libmail-
```

```
sendmail-perl libmime-tools-perl libmpdec2      libnet-dns-perl libnet-domain-
tld-perl libnet-ip-perl libossp-uuid-perl      libossp-uuid16 libparse-
debcontrol-perl libparse-debianchangelog-perl  libperlio-gzip-perl
libpython3-stdlib libpython3.4-minimal        libpython3.4-stdlib libsigsegv2
libsoap-lite-perl libsocket6-perl             libsub-name-perl libsys-hostname-long-
perl libtask-weaken-perl                      libtext-levenshtein-perl libtool libunistring0
libxmlrpc-lite-perl lintian                   m4 patchutils pbuilder po-debconf python3
python3-apt python3-chardet                   python3-debian python3-magic python3-minimal
python3-pkg-resources                         python3-six python3.4 python3.4-minimal tlutils
wdiff
```

Run `./configure` as shown below. This will configure the install the same way the armhf Debian package is.

```
./configure --build=arm-linux-gnueabi --prefix=/usr --
includedir=\${prefix}/include --mandir=\${prefix}/share/man --
infodir=\${prefix}/share/info --sysconfdir=/etc --localstatedir=/var --
disable-silent-rules --libdir=\${prefix}/lib/arm-linux-gnueabi --
libexecdir=\${prefix}/lib/arm-linux-gnueabi --disable-maintainer-mode --
disable-dependency-tracking HAVE_UINPUT=1
```

Run `make` and `sudo make install`.

```
make
sudo make install.
```

The lirc build is complete.

lirc Setup:

Ensure that the following lines are in your `/boot/config.txt` and not commented out. The `debug=on` is optional but helps with debugging.

```
# Uncomment this to enable the lirc-rpi module
dtoverlay=lirc-rpi,gpio_out_pin=22,gpio_in_pin=23,debug=on
```

Add `lirc_rpi.conf` to `/etc/modprobe.d`:

```
options lirc_rpi gpio_in_pin=23 gpio_out_pin=22
```

Add `lirc.conf` to `/etc/modules-load.d`:

```
lirc_dev
lirc_rpi
```

Update the configuration files in `/etc/lirc` and add `jbc_rm-sr309u.conf` to `/etc/lirc/lircd.conf.d`.

Remove `lirc` from `/etc/init.d` and enable system scripts:

```
sudo systemctl enable lirc-setup
sudo systemctl enable lircd.services
sudo systemctl enable lircd.socket
```

For a more secure setup lircd should run under a user other than root. Setup lircd user

```
sudo useradd -M --shell /bin/false lircd
sudo usermod -L lircd
sudo adduser lircd video
```

Ensure that in the lircd_options.conf file the effective_user is set to the user created above.

If you wish to provide tcp/ip access to lirc you will need to make sure that the listen option is set in the lircd_options.conf file.

Reboot and check the following for errors:

```
dmesg
/var/log/syslog
sudo systemctl status lirc-setup
sudo systemctl status lirc.service
sudo systemctl status lirc.socket
```

Testing

Test JCV remote with the command below. The **--count=2 is critical** for JVC as if you just send the command once it will be ignored.

```
lrsend --count=2 SEND_ONCE RM-SR3 09U power_audio
```

Troubleshooting

To run lircd from the command line use the command below:

```
sudo lircd --nodaemon --driver=de_fault --device=/dev/lirc0 --uinput
```

If you run into problems with your driver not being loadable check that your plugins directory is set right. This is done on the command line using the --plugindir option or can be set in the lirc_options.conf file. Using the ./configure command string above will put the plugins in /usr/lib/arm-linux-gnueabi/lirc/plugins.

Sources

Raspberry Pi IR remote by Dmitri Popov: <http://www.raspberry-pi-geek.com/Archive/2015/10/Raspberry-Pi-IR-remote>

Setting Up LIRC on the RaspberryPi by Alex Bain: <http://alexba.in/blog/2013/01/06/setting-up-lirc-on-the-raspberrypi/>

Lirc.org website: <http://www.lirc.org/>

Appendix Files

cat hardware.conf

```
#####
# /etc/lirc/hardware.conf
#
# Arguments which will be used when launching lircd
LIRCD_ARGS="--uinput"

# Don't start lircmd even if there seems to be a good config file
# START_LIRCMD=false

# Don't start irexec, even if a good config file seems to exist.
# START_IEXEC=false

# Try to load appropriate kernel modules
LOAD_MODULES=true

# Run "lircd --driver=help" for a list of supported drivers.
DRIVER="default"
# usually /dev/lirc0 is the correct setting for systems using udev
DEVICE="/dev/lirc0"
MODULES="lirc_rpi"

# Default configuration files for your hardware if any
LIRCD_CONF=""
LIRCMD_CONF=""
#####
```

cat lircd.conf

```
# Populated config files can be found at http://sf.net/p/lirc-remotes. The
# irdb-get(1) and lirc-setup(1) tools can be used to search and download
# config files.
#
# From 0.9.2 config files could just be dropped as-is in the lircd.conf.d
# directory and be included by this file.

include "lircd.conf.d/*.conf"
```

cat lircmd.conf

```
# Populated config files can be http://sf.net/p/lirc-remotes. The
# irdb-get(1) and lirc-setup(1) tools can be used to search and download
# config files.
```

cat lirc_options.conf

```
# These are the default options to lircd, if installed as
# /etc/lirc/lirc_options.conf. See the lircd(8) and lircmd(8)
# manpages for info on the different options.
```

```

[lircd]
nodaemon      = False
driver        = default
device        = /dev/lirc0
output        = /var/run/lirc/lircd
pidfile       = /var/run/lirc/lircd.pid
plugindir     = /usr/lib/arm-linux-gnueabi/hf/lirc/plugins
permission    = 666
allow-simulate = No
repeat-max    = 600
effective-user = lircd
listen        = 8765
#connect      = host[:port]
#debug        = 6
#uinput       = ...
#release      = ...
#logfile      = ...

[lircmd]
uinput        = False
nodaemon      = False

[modprobe]
#modules      = [lirc_dev, lirc_sir...]

```

cat jvc_rm-sr309u.conf

```

# Please make this file available to others
# by sending it to <lirc@bartelmus.de>
#
# this config file was automatically generated
# using lirc-0.9.0-pre1(default) on Thu Dec 24 21:34:43 2015
#
# contributed by
#
# brand:                jvc.codes
# model no. of remote control:
# devices being controlled by this remote:
#

```

begin remote

```

name    RM-SR309U
bits    16
flags   SPACE_ENC
eps     30
aeps    100

one      582 1524
zero     582 470
ptrail   582
gap      20485
toggle_bit_mask 0x0

```

```

begin codes
    power_audio          0xC5E8
    power_vcr            0xC2D0
    power_tv             0xC0E8
    source_phono         0xC53C
    source_cd            0xC5BC
    source_tape1         0xC5FC
    source_tape2         0xC5E0
    source_fm            0xC510
    source_am            0xC590
    vcr_play             0xC230
    vcr_stop             0xC2C0
    vcr_pause           0xC2B0
    vcr_rewind          0xC2E0
    vcr_forward          0xC260
    tape_play            0xC130
    tape_prev           0xC118
    tape_next           0xC198
    tape_stop           0xC1C0
    tape_pause          0xC1B0
    tape_rewind         0xC1E0
    tape_forward        0xC160
    cd_play             0xCD9E
    cd_prev            0xCD5E
    cd_next            0xCDDE
    cd_stop            0xCD3E
    cd_pause           0xCDBE
    cd_rewind          0xCD7E
    cd_forward         0xCD1E
    preset_minus       0xC518
    preset_plus        0xC598
    fade              0xC538
    volume_down        0xC5F8
    volume_up          0xC578
end codes

end remote

```