

CleverTank Operating & Installation Manual

Contents

Designated use.....	4
General safety guidelines.....	4
CT1500.....	5
Product description.....	5
Delivery scope.....	6
Diagram.....	7
Installing CleverTank 1500.....	8
Assembly space requirements.....	8
Assembly.....	8
Assembling group 1.....	8
Assembling group 1.....	9
Assembling group 2.....	9
Connecting the system to the control panel.....	9
Initial operation.....	9
CT3000.....	10
Product description.....	10
Delivery scope.....	11
Diagram.....	12
Installing CleverTank 3000.....	13
Assembly space requirements.....	13
Assembly.....	13
Assembling group 1.....	13
Assembling group 2.....	14
Assembling group 3.....	14
Connecting the system to the control panel.....	14
Initial operation.....	14
CT4500.....	15
Product description.....	15
Delivery scope.....	16
Diagram.....	17
Installing CleverTank 4500.....	18
Assembly space requirements.....	18
Assembly.....	18
Assembling group 1.....	18
Assembling group 2.....	19
Assembling group 3.....	19
Connecting the system to the control panel.....	19
Initial operation.....	19
CT6000.....	20
Product description.....	20
Delivery scope.....	21
Diagram.....	22
Installing CleverTank 6000.....	23
Assembly space requirements.....	23
Assembly.....	23

Assembling group 1.....	23
Assembling group 2.....	24
Assembling group 3.....	24
Connecting the system to the control panel.....	24
Initial operation.....	24
CT10000.....	25
Product description.....	25
Delivery scope.....	26
Diagram.....	27
Installing CleverTank 10000.....	28
Assembly space requirements.....	28
Assembly.....	28
Assembling group 1.....	28
Assembling group 2.....	29
Assembling group 3.....	29
Connecting the system to the control panel.....	29
Initial operation.....	29

Designated use

Safety devices installed in the system by the manufacturer are only for the basic prevention of accidents. The main responsibility for an accident-free workflow mainly lies with the business owner who operates the system as well as with the individuals they nominate to operate the system, perform maintenance or carry out any other work on the system.











The appropriate operation according to the intended purpose and compliance with the care, service and maintenance measures, that are prescribed by the manufacturer, ensure the functionality as well as a high lifespan of the membrane modules and of the system components, thus helping to prevent work-related accidents and occupational injuries.

The staff intended to operate and maintain the system described in this document must read and understand the specific chapter written in the operation manual and must apply the instructions with due diligence. In the interest of operational safety and accident prevention, only staff who are well-trained may be assigned the task of handling the system. The staff must receive special instructions regarding any potential risk.

The manufacturer is not liable for any damage to persons or equipment, resulting from improper handling or non-compliance with the instructions indicated above. The Owner and/or the Operator of the system shall assume the full liability.

Operating the system in a different manner than that described in the operation manual will result in the loss of any warranty or warranty claims against the manufacturer.

General safety guidelines

-  **CAUTION:** Labelling regulations for all service water lines with "NOT POTABLE WATER"! apply e.g. as CleverTank labelling system.
-  **Important: Potable Water Regulation (TrinkwV 2001) § 13 (3)** “The business owner and other owners of systems that are intended for obtaining or providing water that does not meet the quality of water for human consumption, and which are installed domestically in addition to the water supply systems as defined in § 3, No. 2, must present these systems to the competent authority at the moment of commissioning. If such systems are already being operated, notification must be submitted immediately” (see [Registration of grey water installation](#))
-  **Important: Waste Water Regulation AbwV § 3 (2)** “Prior to the installation of an own recovery system, the customer must inform the water utility company. The customer must take the appropriate steps to ensure that the own system will not have any repercussions on the public water supply network” (see [Registration with the water utilities](#))
-  **Restriction:** Installation must be carried out by trained qualified staff.
-  **CAUTION:** When carrying out the installation the current technical rules for domestic installations must be observed (*DIN1988, EN1717*).
-  **CAUTION:** The system must be fitted with its own fuse protection (FI).
-  **CAUTION:** The installation room must be provided with floor drainage.
-  **CAUTION:** The grey water manifolds must be vented in such a way that the air blown into the wastewater system can escape freely via the vent of the grey water manifold.
-  **Note:** When operated correctly, the treated grey water will attain the quality stipulated in the *Bathing Water Directive of the EU*.
-  **DANGER:** The system must be **disconnected from the supply voltage** before performing any maintenance or repair work.

Restriction: Emptying of the grey water vessel must only be carried out by trained service staff. If the filter dries out, this will destroy the membrane.



CAUTION:

EN 12056-1 defines grey water as slightly contaminated wastewater, such as that accumulated from taking showers, or baths or from washing hands, and also that which comes out of the washing machine and can be used as service and process water when treated. A grey water treatment system is used exclusively for the treatment and recycling of slightly contaminated wastewater.

Due to the fat content, a kitchen drain should not be connected.


In the case of highly contaminated wastewater from toilets, kitchen drains or washing machines, quality objectives of treatment will not be achieved and damage to the membrane cannot be ruled out.

The supply of strong alkaline cleaning products (chlorine cleaner etc.), dispersion paints, lacquers, hair dyes, oils and fats affects the performance of the membrane and the quality of the service water and must be avoided. Large amounts of fats and oils in particular can cause irreversible damage to the membrane.

CT1500

Product description

The systems are intended for multi-stage treatment of grey water and provision of service water. The system comprises multiple assembly groups.

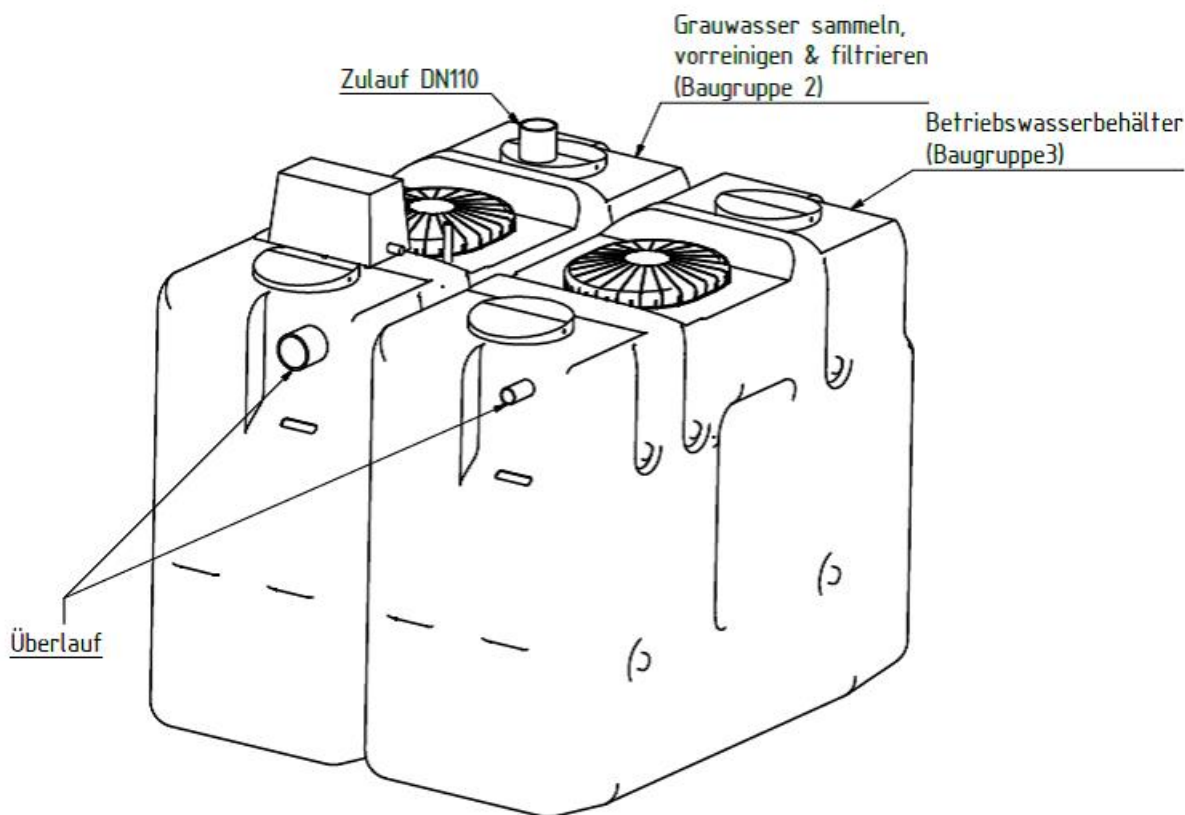

- **Group 1:** Collect, purify and filter grey water

In the first assembly group, grey water is collected, purified and filtered.

- **Group 1:** Collect and purify grey water

In the first assembly group, grey water is collected and purified.

- **Group 1:** Grey water filtration

The second assembly group is for grey water filtration with the CleverTank membrane modules.

- **Group 2:** Service water storage

In this assembly group the filtered grey water is stored as service water. In addition, the last tank has a potable water feed in order to ensure the supply of service water to the network.

- **Group 3:** Control system

CleverTank grey water systems are equipped with a fourth assembly group, a fully automatic control system for regulating and monitoring. It is provided with a potential-free contact to integrate fault indications in the building management system.

Tank volumes can vary according to the type of system.

Delivery scope

The grey water system CleverTank 1500 is delivered with the following components:

Group 1

- 0 x tank 0
- 0 x ventilation system
- 0 x permeate pump

Group 1

- 1 x tank 1500l
- 1 x membrane unit
- 1 x ventilation system
- 1 x permeate pump


Group 2

- 1 x tank 1500l
- potable water backfeed

Group 3

- control system

Diagram

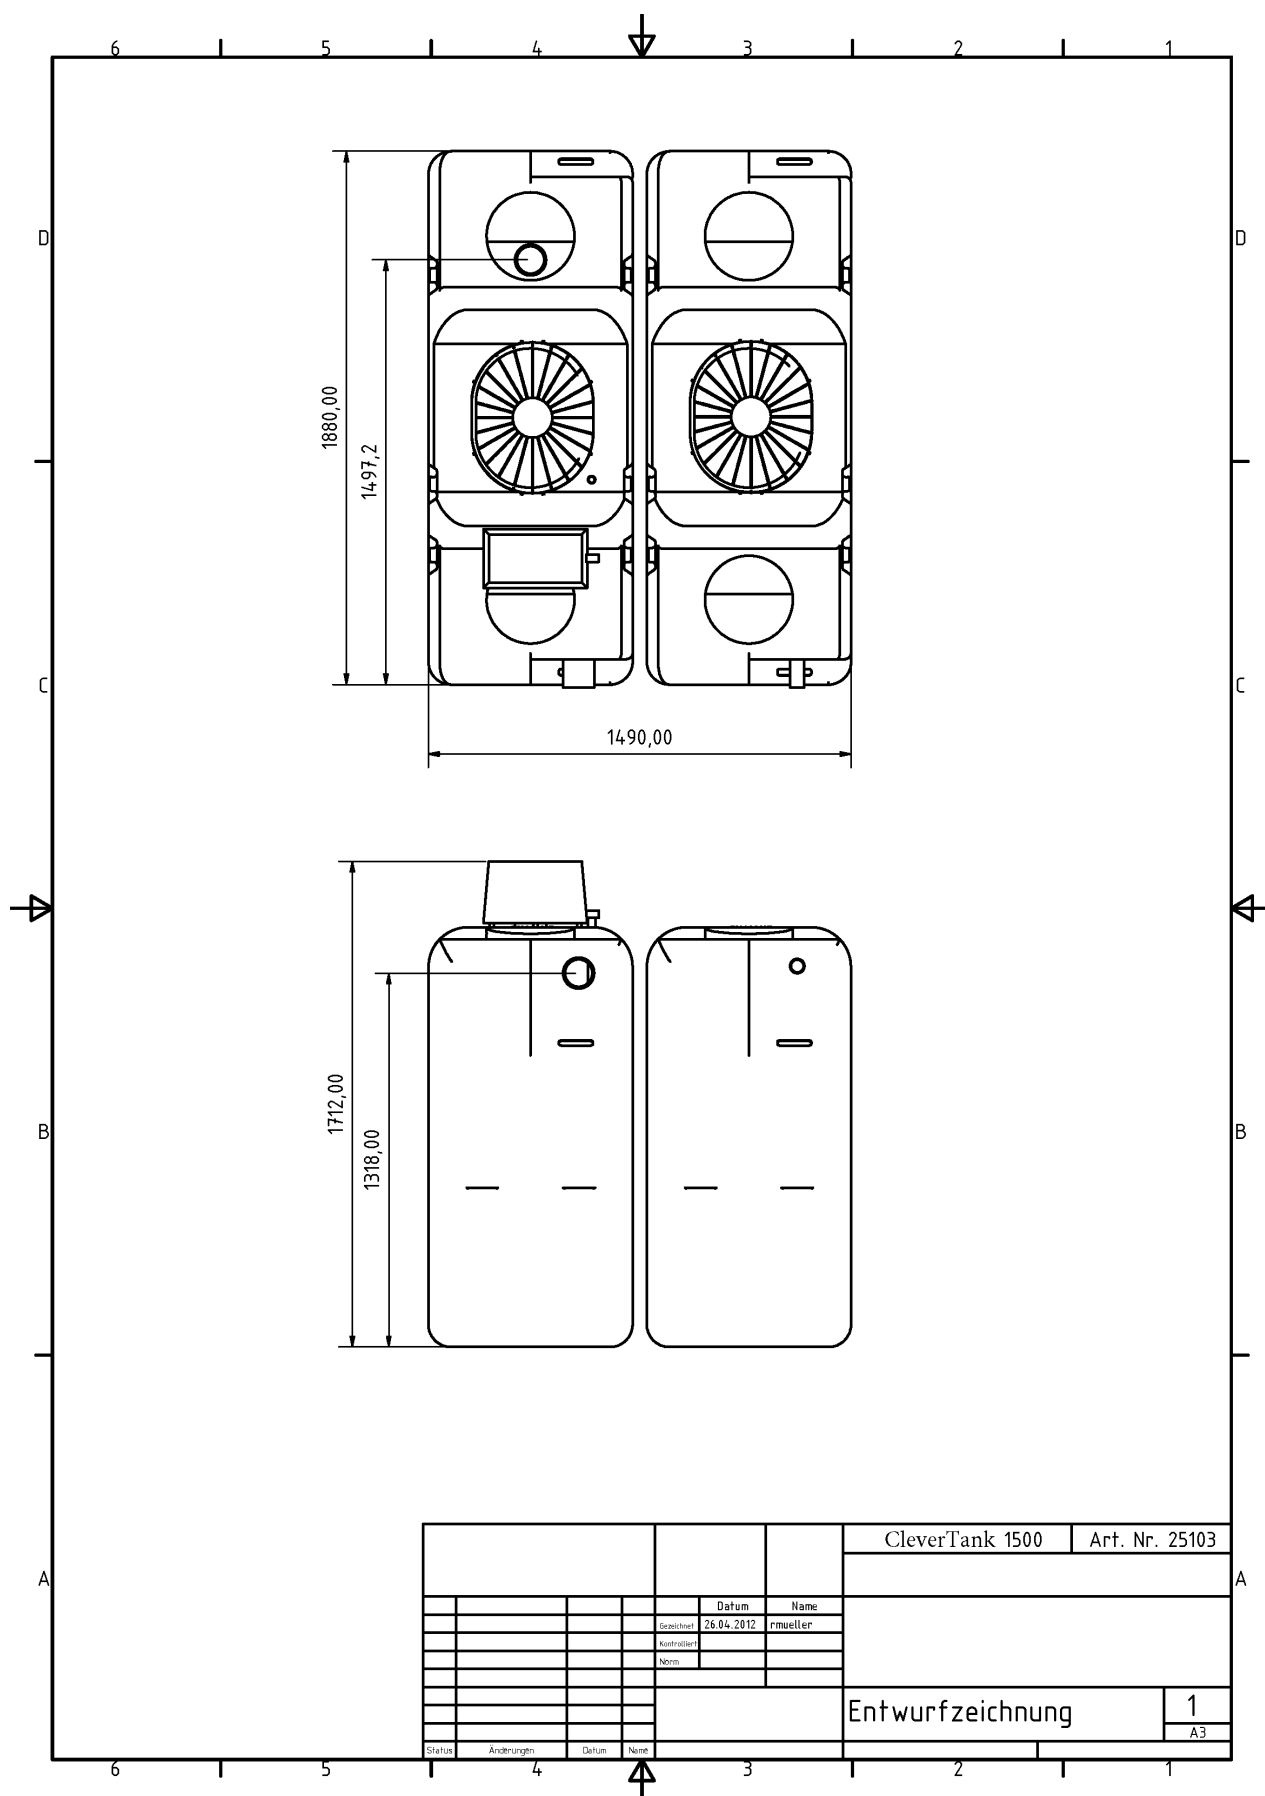

Installing CleverTank 1500



Attention:

- In case of non-compliance, warranty claims will be void!
- After proper setup and installation of the system, perform the electrical installation and check the tightness of all water connections.
- Avoid tempering with other system components, the control module, the pumps or any individual additional components.

1. Align and position the tanks
2. Connect tanks
3. Mount the overflow (backflow device and/ or lifting system provided on-site)
4. Connect pressure booster unit to the tank
5. Connect potable water backfeed
6. Connect inlet
7. Connect pressure booster unit to the service water network
8. Make the necessary electrical connections

Assembly space requirements

The grey water system with its PE tank must be erected on an even, levelled, clean and solid surface in order to prevent any malfunction during operation of the system.

Install the system at a sufficient distance (working space) to adjacent walls: laterally min. 0.5 m and at the back min. 0.5 m.

When erecting the individual PE storage tanks please make strict use of the technical drawings in the operating and installation manual. Each PE storage tank is to be labelled and marked accordingly.

The control system has been designed for mounting on the wall.

Assembly

Assembling group 1

Please refer to the technical data sheet for all connecting dimensions.

1. Locate the grey water inflow from the building.
2. Connect the inflow.

Venting must be ensured via the inflow.

3. Connect the overflow.

The grey water overflow must be provided with an on-site connection to the existing wastewater line.

Please ensure an adequate backflow device in the overflow line.

4. Connect the greywater tanks (0 pcs).

The accompanying connecting lines for venting must be mounted on top of the tank, and for level equalising at the front of the tank.

5. Connect the tubes of the filtration pump (0 pcs) to the nozzles of assembly group 2 (observe designation/colour coding).

Assembling group 1

1. Connect the grey water filtration overflow to the on-site wastewater line.
2. Mount the corresponding connecting lines for venting on top of the filtering tanks (1 pcs), and the lines for levelling at the front of the tanks.
3. Connect vent.

In addition, the assembly group with tank 0 must be vented via an accompanying connection to assembly group 1 i.e the first tank in this group to the last tank in group 0.

4. Connect the tube of the feed pump (0 pcs).
5. The tubes of the filtration pump (1 pcs) must be connected to the nozzles of assembly group 2, provided for that purpose (observe designation/colour coding).

Assembling group 2

The transfer point of service water is mounted on this tank. Eventually, an external pressure booster unit can be connected here.

Please apply all connecting dimensions according to the technical data sheet.

1. Connect the service water tanks (1 pcs) to each other via an accompanying connecting line.
2. The overflow of the service water group must also be connected on-site to the existing wastewater line.
3. In order to ensure the supply to the service water network, the potable water backfeed must be connected on-site by means of a pressure line.
4. Connect the tube of the filtration pump (1 pcs) of assembly group 1.

Connecting the system to the control panel

Make sure all indicated connections have been made by a professional.

1. Connect the cables of assembly groups 1 and 2 to the control panel (see Circuit diagram/ Terminal diagram, observe designation).
2. Fill the system with grey water.

Initial operation

After all the guidelines regarding the assembly space and the assembly have been carried out by a professional, you can put the system into operation.

Please check the following points once more and carry them out in the given order.

1. Perform tightness tests on all connections.
2. Switch the main switch of the system to **OFF** (control box).
3. Open the gate valve of the potable water line.
4. Keep the pressure line for service water behind an external pressure boosting system closed.
5. Switch the main switch in the control box to **ON**.
6. When switching on for the first time, you must adjust the date and time and confirm using the **OK** button.

The system is now immediately switched to automatic mode.

Since assembly group 2 does not have any service water yet, the solenoid valve of the potable water line opens immediately and the service water reservoir will be filled to the minimum level.

After achieving the minimum water level in the service water tank, the solenoid valve switches off immediately, and the shut-off valve in the pressure line for service water can be opened.

7. The external pressure booster unit can now be put into operation . (see Operation Manual of the Manufacturer – Pressure Increase).

8. Grey water should now flow to the first assembly group via the grey water inflow. If necessary, please allow some connected showers, bathtubs or washbasins to run for assembly group 1 to be sufficiently filled with water.
9. The water will be aerated at time intervals.
10. On achieving the max. level in assembly group 1, allow the feed pump in assembly group 1 to run during manual mode until the membranes are covered with at least 5 cm of water (refer to Operation of the control system).


The system can now be used in automatic mode.

Only when sufficient grey water has entered the system and the levels in grey water and filter groups have reached the maximum values, will grey water be filtered and collected in assembly group 2.

CT3000

Product description

The systems are intended for multi-stage treatment of grey water and provision of service water. The system comprises multiple assembly groups.

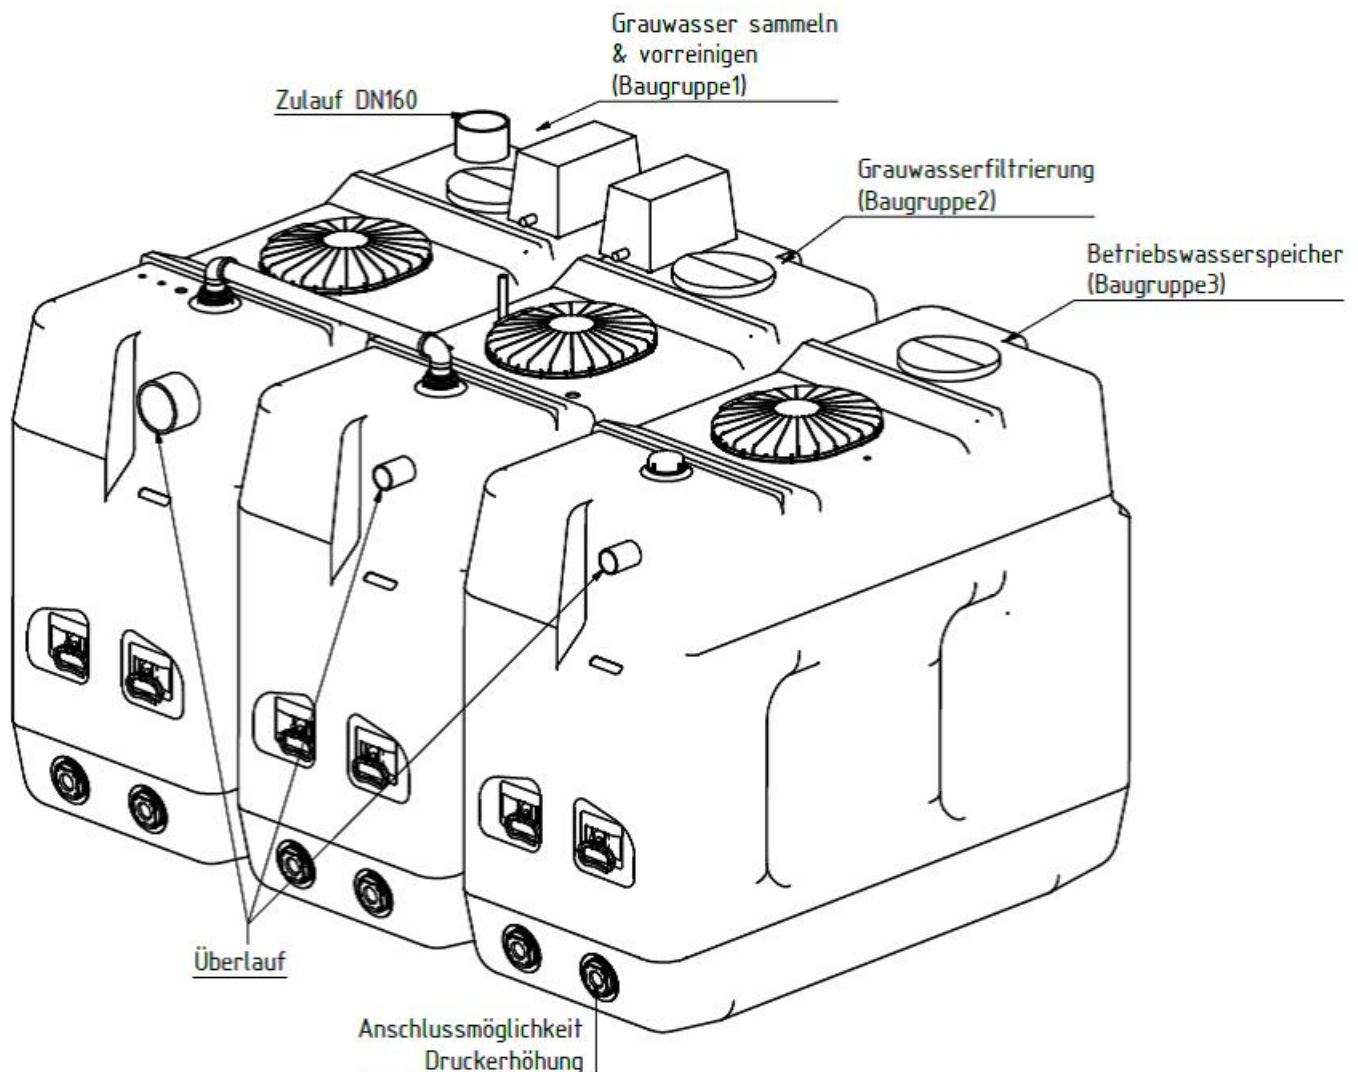

- **Group 1:** Collect, purify and filter grey water

In the first assembly group, grey water is collected, purified and filtered.

- **Group 1:** Collect and purify grey water

In the first assembly group, grey water is collected and purified.

- **Group 2:** Grey water filtration

The second assembly group is for grey water filtration with the CleverTank membrane modules.

- **Group 3:** Service water storage

In this assembly group the filtered grey water is stored as service water. In addition, the last tank has a potable water feed in order to ensure the supply of service water to the network.

- **Group 4:** Control system

CleverTank grey water systems are equipped with a fourth assembly group, a fully automatic control system for regulating and monitoring. It is provided with a potential-free contact to integrate fault indications in the building management system.

Tank volumes can vary according to the type of system.

Delivery scope

The grey water system CleverTank 3000 is delivered with the following components:

Group 1

- 1 x tank 2000l
- 1 x ventilation system
- 1 x permeate pump

Group 2

- 1 x tank 2000l
- 1 x membrane unit
- 1 x ventilation system
- 1 x permeate pump


Group 3

- 1 x tank 2000l
- potable water backfeed

Group 4

- control system

Diagram

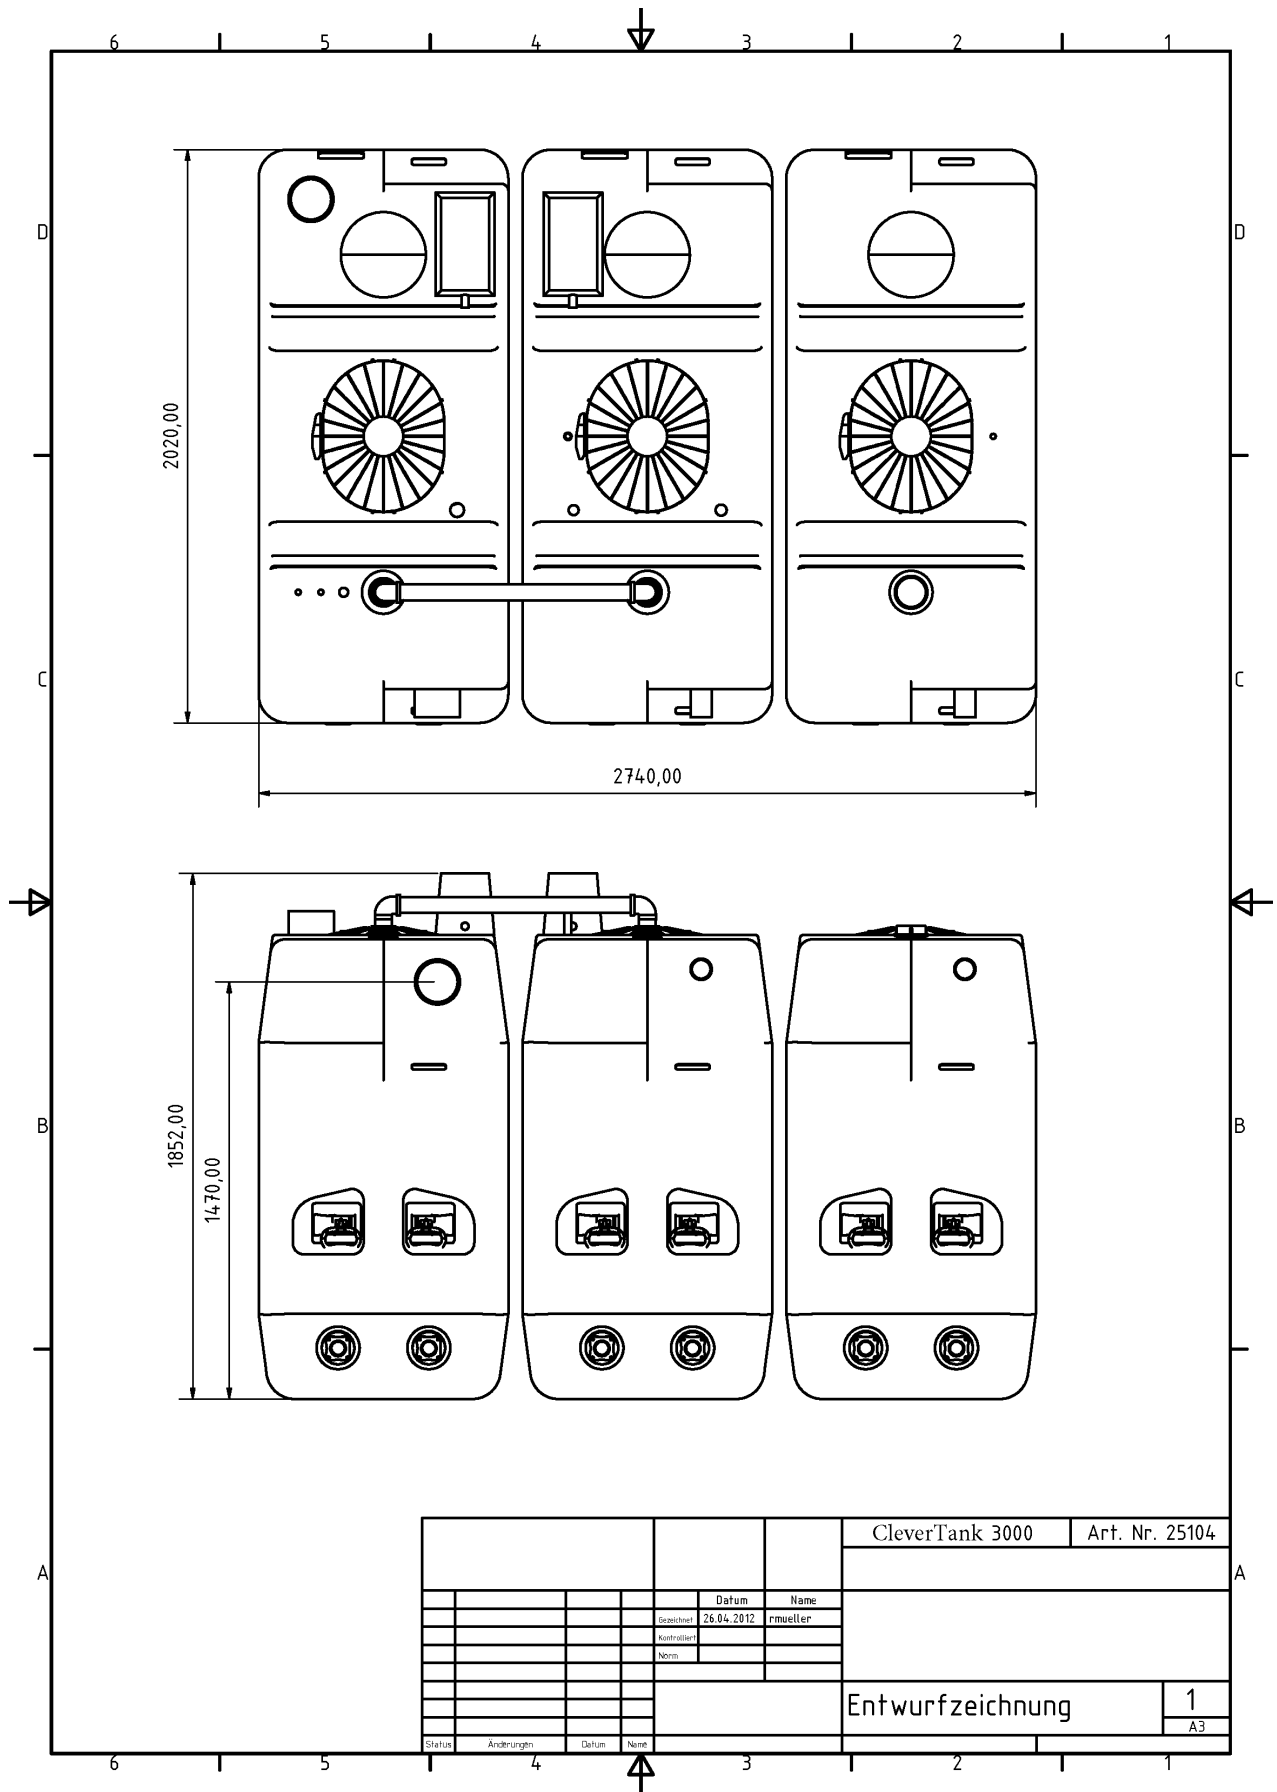

Installing CleverTank 3000



Attention:

- In case of non-compliance, warranty claims will be void!
- After proper setup and installation of the system, perform the electrical installation and check the tightness of all water connections.
- Avoid tempering with other system components, the control module, the pumps or any individual additional components.

1. Align and position the tanks
2. Connect tanks
3. Mount the overflow (backflow device and/ or lifting system provided on-site)
4. Connect pressure booster unit to the tank
5. Connect potable water backfeed
6. Connect inlet
7. Connect pressure booster unit to the service water network
8. Make the necessary electrical connections

Assembly space requirements

The grey water system with its PE tank must be erected on an even, levelled, clean and solid surface in order to prevent any malfunction during operation of the system.

Install the system at a sufficient distance (working space) to adjacent walls: laterally min. 0.5 m and at the back min. 0.5 m.

When erecting the individual PE storage tanks please make strict use of the technical drawings in the operating and installation manual. Each PE storage tank is to be labelled and marked accordingly.

The control system has been designed for mounting on the wall.

Assembly

Assembling group 1

Please refer to the technical data sheet for all connecting dimensions.

1. Locate the grey water inflow from the building.
2. Connect the inflow.

Venting must be ensured via the inflow.

3. Connect the overflow.

The grey water overflow must be provided with an on-site connection to the existing wastewater line.

Please ensure an adequate backflow device in the overflow line.

4. Connect the greywater tanks (1 pcs).

The accompanying connecting lines for venting must be mounted on top of the tank, and for level equalising at the front of the tank.

5. Connect the tubes of the filtration pump (1 pcs) to the nozzles of assembly group 2 (observe designation/colour coding).

Assembling group 2

1. Connect the grey water filtration overflow to the on-site wastewater line.
2. Mount the corresponding connecting lines for venting on top of the filtering tanks (1 pcs), and the lines for levelling at the front of the tanks.
3. Connect vent.

In addition, the assembly group with tank 1 must be vented via an accompanying connection to assembly group 2 i.e the first tank in this group to the last tank in group 1.

4. Connect the tube of the feed pump (1 pcs).
5. The tubes of the filtration pump (1 pcs) must be connected to the nozzles of assembly group 3, provided for that purpose (observe designation/colour coding).

Assembling group 3

The transfer point of service water is mounted on this tank. Eventually, an external pressure booster unit can be connected here.

Please apply all connecting dimensions according to the technical data sheet.

1. Connect the service water tanks (1 pcs) to each other via an accompanying connecting line.
2. The overflow of the service water group must also be connected on-site to the existing wastewater line.
3. In order to ensure the supply to the service water network, the potable water backfeed must be connected on-site by means of a pressure line.
4. Connect the tube of the filtration pump (1 pcs) of assembly group 2.

Connecting the system to the control panel

Make sure all indicated connections have been made by a professional.

1. Connect the cables of assembly groups 2 and 3 to the control panel (see Circuit diagram/ Terminal diagram, observe designation).
2. Fill the system with grey water.

Initial operation

After all the guidelines regarding the assembly space and the assembly have been carried out by a professional, you can put the system into operation.

Please check the following points once more and carry them out in the given order.

1. Perform tightness tests on all connections.
2. Switch the main switch of the system to **OFF** (control box).
3. Open the gate valve of the potable water line.
4. Keep the pressure line for service water behind an external pressure boosting system closed.
5. Switch the main switch in the control box to **ON**.
6. When switching on for the first time, you must adjust the date and time and confirm using the **OK** button.

The system is now immediately switched to automatic mode.

Since assembly group 3 does not have any service water yet, the solenoid valve of the potable water line opens immediately and the service water reservoir will be filled to the minimum level.

After achieving the minimum water level in the service water tank, the solenoid valve switches off immediately, and the shut-off valve in the pressure line for service water can be opened.

7. The external pressure booster unit can now be put into operation . (see Operation Manual of the Manufacturer – Pressure Increase).

8. Grey water should now flow to the first assembly group via the grey water inflow. If necessary, please allow some connected showers, bathtubs or washbasins to run for assembly group 1 to be sufficiently filled with water.
9. The water will be aerated at time intervals.
10. On achieving the max. level in assembly group 1, allow the feed pump in assembly group 2 to run during manual mode until the membranes are covered with at least 5 cm of water (refer to Operation of the control system).


The system can now be used in automatic mode.

Only when sufficient grey water has entered the system and the levels in grey water and filter groups have reached the maximum values, will grey water be filtered and collected in assembly group 3.

CT4500

Product description

The systems are intended for multi-stage treatment of grey water and provision of service water. The system comprises multiple assembly groups.

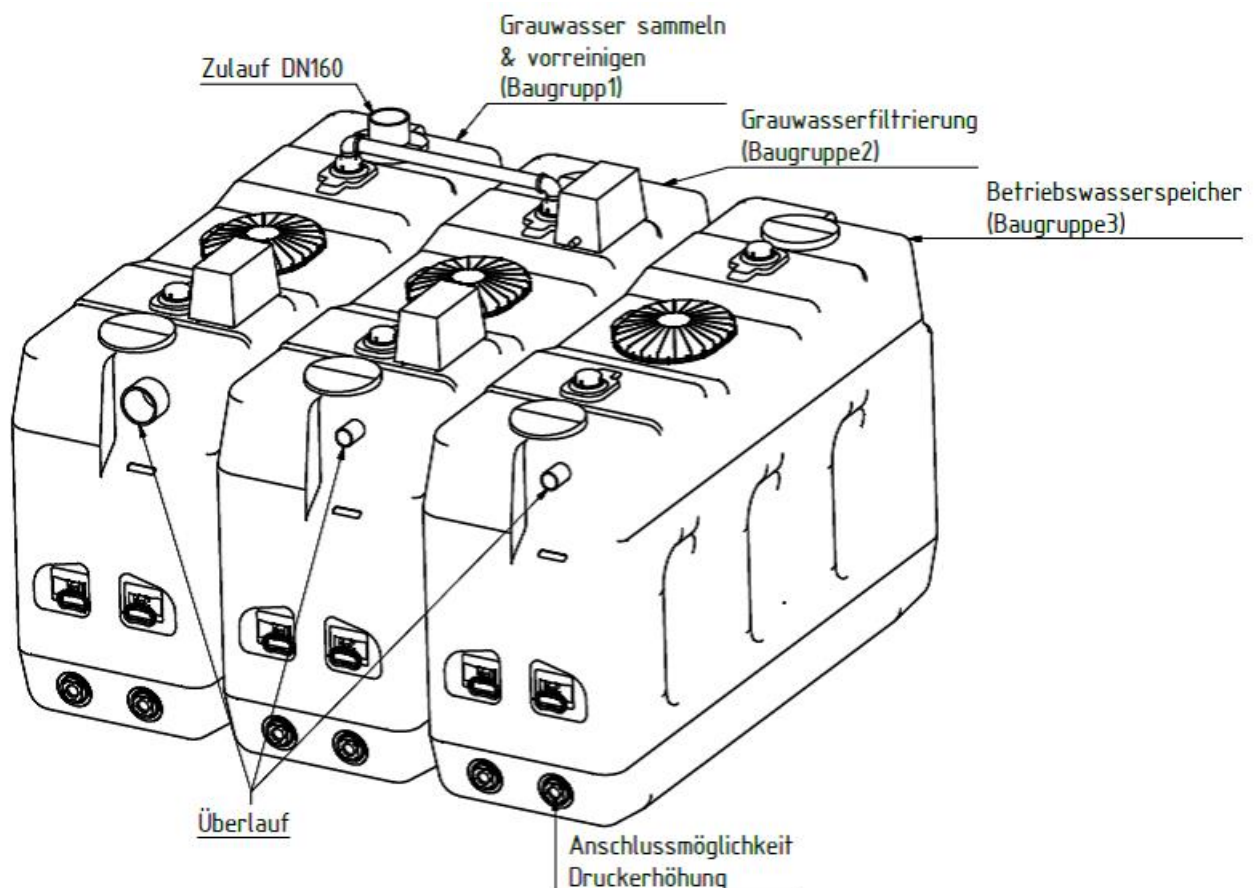

- **Group 1:** Collect, purify and filter grey water

In the first assembly group, grey water is collected, purified and filtered.

- **Group 1:** Collect and purify grey water

In the first assembly group, grey water is collected and purified.

- **Group 2:** Grey water filtration

The second assembly group is for grey water filtration with the CleverTank membrane modules.

- **Group 3:** Service water storage

In this assembly group the filtered grey water is stored as service water. In addition, the last tank has a potable water feed in order to ensure the supply of service water to the network.

- **Group 4:** Control system

CleverTank grey water systems are equipped with a fourth assembly group, a fully automatic control system for regulating and monitoring. It is provided with a potential-free contact to integrate fault indications in the building management system.

Tank volumes can vary according to the type of system.

Delivery scope

The grey water system CleverTank 4500 is delivered with the following components:

Group 1

- 1 x tank 3000l
- 1 x ventilation system
- 1 x permeate pump

Group 2

- 1 x tank 3000l
- 2 x membrane unit
- 2 x ventilation system
- 1 x permeate pump


Group 3

- 1 x tank 3000l
- potable water backfeed

Group 4

- control system

Diagram

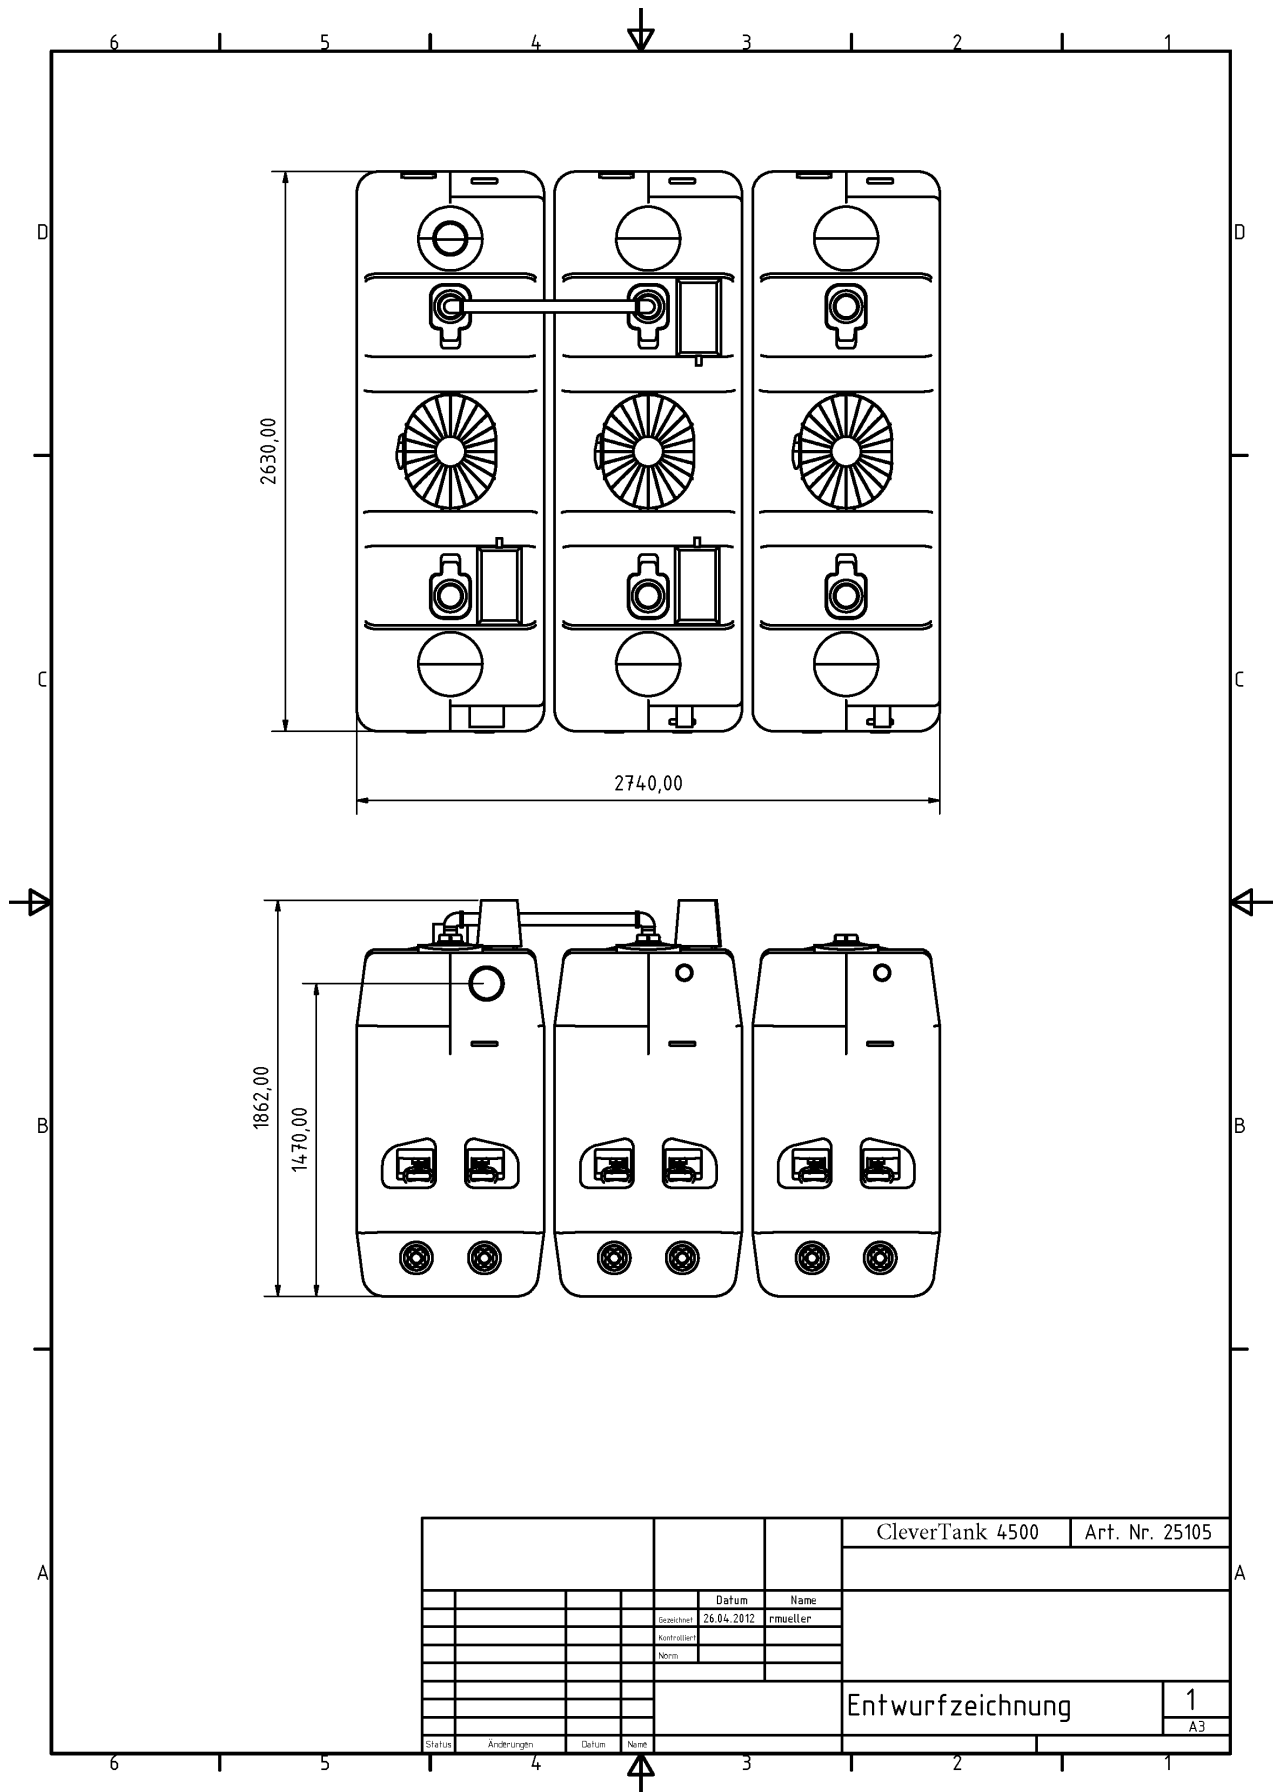

Installing CleverTank 4500



Attention:

- In case of non-compliance, warranty claims will be void!
- After proper setup and installation of the system, perform the electrical installation and check the tightness of all water connections.
- Avoid tempering with other system components, the control module, the pumps or any individual additional components.

1. Align and position the tanks
2. Connect tanks
3. Mount the overflow (backflow device and/ or lifting system provided on-site)
4. Connect pressure booster unit to the tank
5. Connect potable water backfeed
6. Connect inlet
7. Connect pressure booster unit to the service water network
8. Make the necessary electrical connections

Assembly space requirements

The grey water system with its PE tank must be erected on an even, levelled, clean and solid surface in order to prevent any malfunction during operation of the system.

Install the system at a sufficient distance (working space) to adjacent walls: laterally min. 0.5 m and at the back min. 0.5 m.

When erecting the individual PE storage tanks please make strict use of the technical drawings in the operating and installation manual. Each PE storage tank is to be labelled and marked accordingly.

The control system has been designed for mounting on the wall.

Assembly

Assembling group 1

Please refer to the technical data sheet for all connecting dimensions.

1. Locate the grey water inflow from the building.
2. Connect the inflow.

Venting must be ensured via the inflow.

3. Connect the overflow.

The grey water overflow must be provided with an on-site connection to the existing wastewater line.

Please ensure an adequate backflow device in the overflow line.

4. Connect the greywater tanks (1 pcs).

The accompanying connecting lines for venting must be mounted on top of the tank, and for level equalising at the front of the tank.

5. Connect the tubes of the filtration pump (1 pcs) to the nozzles of assembly group 2 (observe designation/colour coding).

Assembling group 2

1. Connect the grey water filtration overflow to the on-site wastewater line.
2. Mount the corresponding connecting lines for venting on top of the filtering tanks (1 pcs), and the lines for levelling at the front of the tanks.
3. Connect vent.

In addition, the assembly group with tank 1 must be vented via an accompanying connection to assembly group 2 i.e the first tank in this group to the last tank in group 1.

4. Connect the tube of the feed pump (1 pcs).
5. The tubes of the filtration pump (1 pcs) must be connected to the nozzles of assembly group 3, provided for that purpose (observe designation/colour coding).

Assembling group 3

The transfer point of service water is mounted on this tank. Eventually, an external pressure booster unit can be connected here.

Please apply all connecting dimensions according to the technical data sheet.

1. Connect the service water tanks (1 pcs) to each other via an accompanying connecting line.
2. The overflow of the service water group must also be connected on-site to the existing wastewater line.
3. In order to ensure the supply to the service water network, the potable water backfeed must be connected on-site by means of a pressure line.
4. Connect the tube of the filtration pump (1 pcs) of assembly group 2.

Connecting the system to the control panel

Make sure all indicated connections have been made by a professional.

1. Connect the cables of assembly groups 2 and 3 to the control panel (see Circuit diagram/ Terminal diagram, observe designation).
2. Fill the system with grey water.

Initial operation

After all the guidelines regarding the assembly space and the assembly have been carried out by a professional, you can put the system into operation.

Please check the following points once more and carry them out in the given order.

1. Perform tightness tests on all connections.
2. Switch the main switch of the system to **OFF** (control box).
3. Open the gate valve of the potable water line.
4. Keep the pressure line for service water behind an external pressure boosting system closed.
5. Switch the main switch in the control box to **ON**.
6. When switching on for the first time, you must adjust the date and time and confirm using the **OK** button.

The system is now immediately switched to automatic mode.

Since assembly group 3 does not have any service water yet, the solenoid valve of the potable water line opens immediately and the service water reservoir will be filled to the minimum level.

After achieving the minimum water level in the service water tank, the solenoid valve switches off immediately, and the shut-off valve in the pressure line for service water can be opened.

7. The external pressure booster unit can now be put into operation . (see Operation Manual of the Manufacturer – Pressure Increase).

8. Grey water should now flow to the first assembly group via the grey water inflow. If necessary, please allow some connected showers, bathtubs or washbasins to run for assembly group 1 to be sufficiently filled with water.
9. The water will be aerated at time intervals.
10. On achieving the max. level in assembly group 1, allow the feed pump in assembly group 2 to run during manual mode until the membranes are covered with at least 5 cm of water (refer to Operation of the control system).


The system can now be used in automatic mode.

Only when sufficient grey water has entered the system and the levels in grey water and filter groups have reached the maximum values, will grey water be filtered and collected in assembly group 3.

CT6000

Product description

The systems are intended for multi-stage treatment of grey water and provision of service water. The system comprises multiple assembly groups.

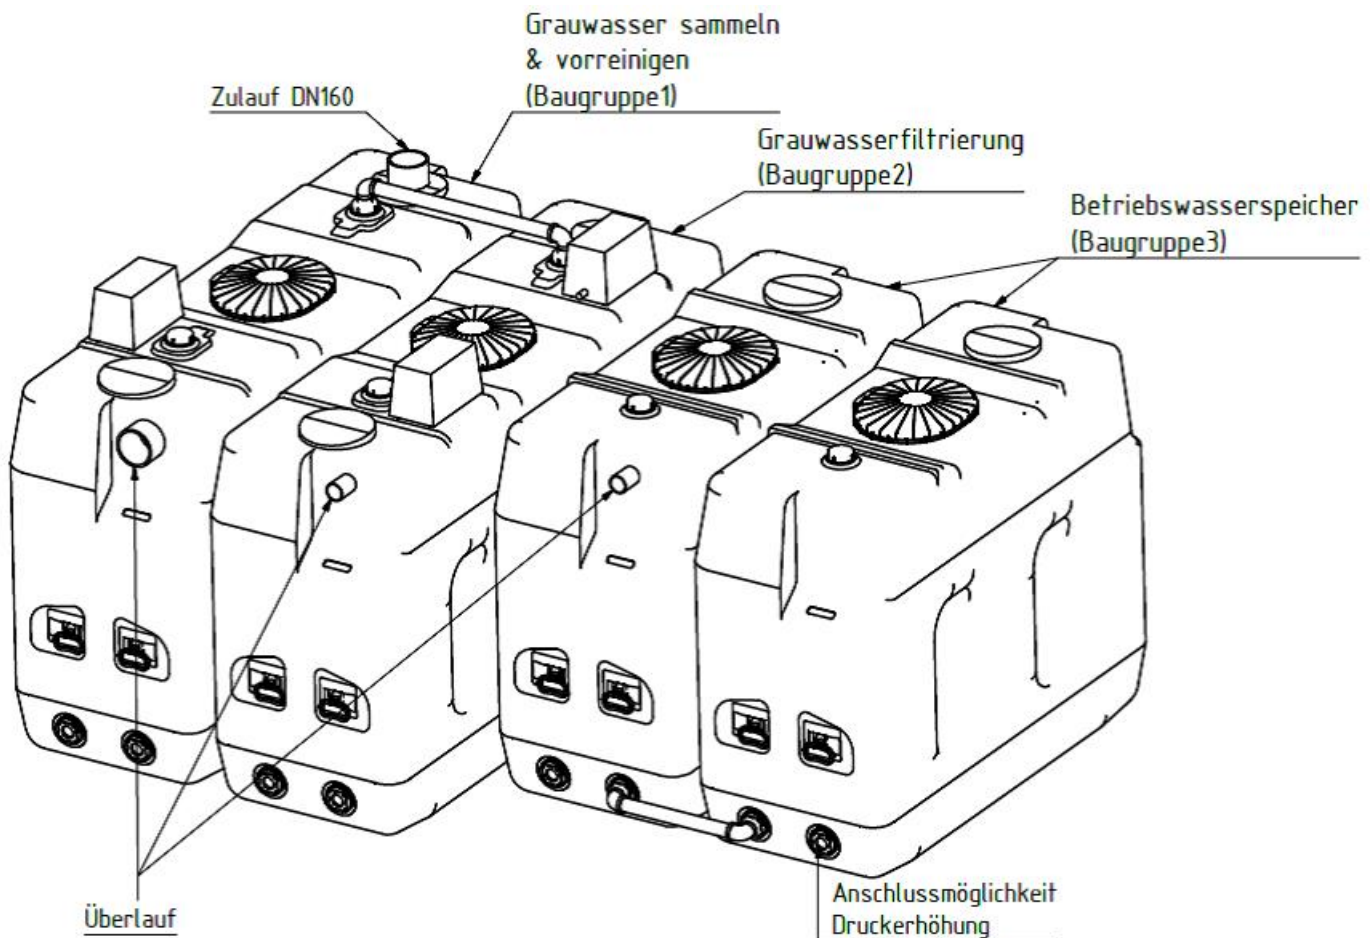

- **Group 1:** Collect, purify and filter grey water

In the first assembly group, grey water is collected, purified and filtered.

- **Group 1:** Collect and purify grey water

In the first assembly group, grey water is collected and purified.

- **Group 2:** Grey water filtration

The second assembly group is for grey water filtration with the CleverTank membrane modules.

- **Group 3:** Service water storage

In this assembly group the filtered grey water is stored as service water. In addition, the last tank has a potable water feed in order to ensure the supply of service water to the network.

- **Group 4:** Control system

CleverTank grey water systems are equipped with a fourth assembly group, a fully automatic control system for regulating and monitoring. It is provided with a potential-free contact to integrate fault indications in the building management system.

Tank volumes can vary according to the type of system.

Delivery scope

The grey water system CleverTank 6000 is delivered with the following components:

Group 1

- 1 x tank 3000l
- 1 x ventilation system
- 1 x permeate pump

Group 2

- 1 x tank 3000l
- 2 x membrane unit
- 2 x ventilation system
- 1 x permeate pump


Group 3

- 2 x tank 2000l
- potable water backfeed

Group 4

- control system

Diagram

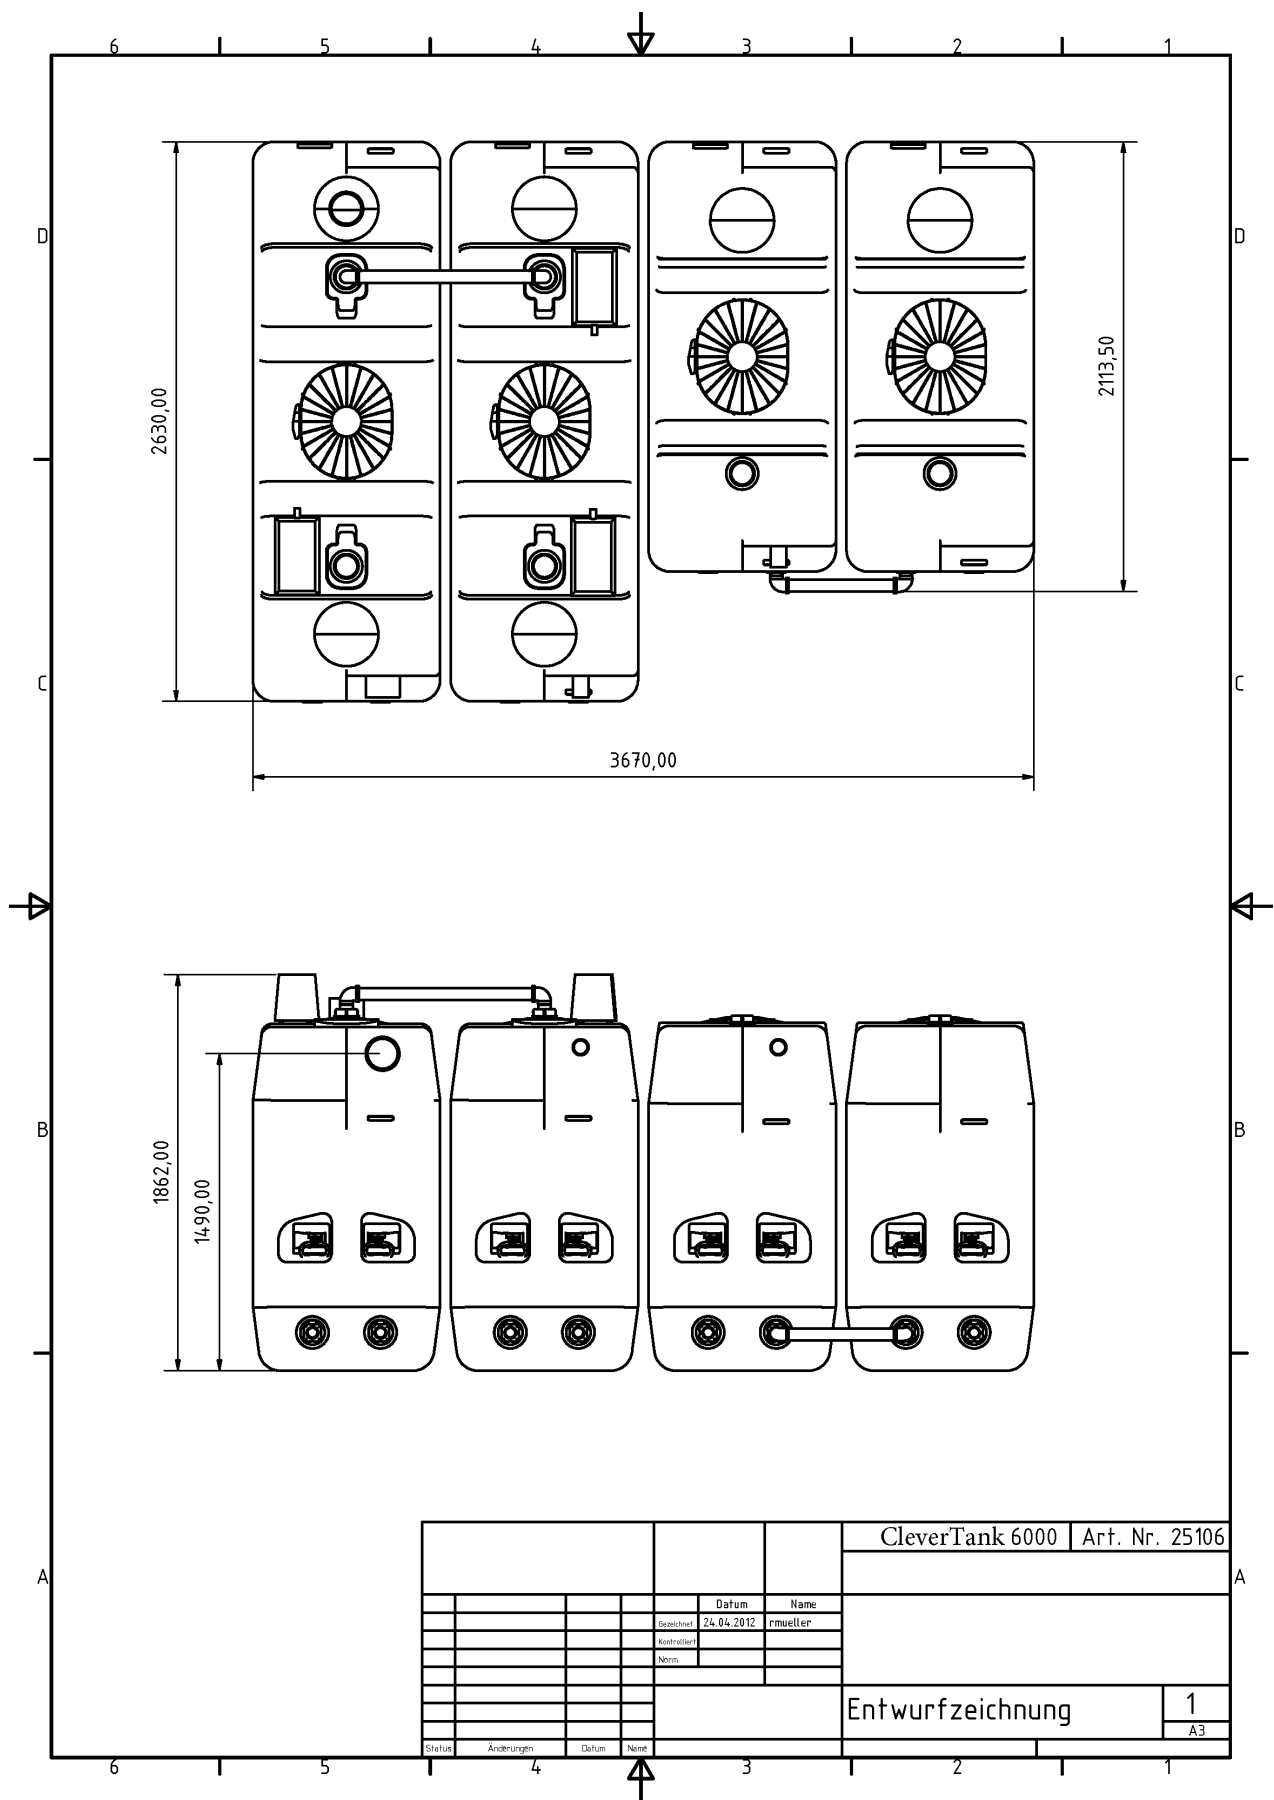

Installing CleverTank 6000



Attention:

- In case of non-compliance, warranty claims will be void!
- After proper setup and installation of the system, perform the electrical installation and check the tightness of all water connections.
- Avoid tempering with other system components, the control module, the pumps or any individual additional components.

1. Align and position the tanks
2. Connect tanks
3. Mount the overflow (backflow device and/ or lifting system provided on-site)
4. Connect pressure booster unit to the tank
5. Connect potable water backfeed
6. Connect inlet
7. Connect pressure booster unit to the service water network
8. Make the necessary electrical connections

Assembly space requirements

The grey water system with its PE tank must be erected on an even, levelled, clean and solid surface in order to prevent any malfunction during operation of the system.

Install the system at a sufficient distance (working space) to adjacent walls: laterally min. 0.5 m and at the back min. 0.5 m.

When erecting the individual PE storage tanks please make strict use of the technical drawings in the operating and installation manual. Each PE storage tank is to be labelled and marked accordingly.

The control system has been designed for mounting on the wall.

Assembly

Assembling group 1

Please refer to the technical data sheet for all connecting dimensions.

1. Locate the grey water inflow from the building.
2. Connect the inflow.

Venting must be ensured via the inflow.

3. Connect the overflow.

The grey water overflow must be provided with an on-site connection to the existing wastewater line.

Please ensure an adequate backflow device in the overflow line.

4. Connect the greywater tanks (1 pcs).

The accompanying connecting lines for venting must be mounted on top of the tank, and for level equalising at the front of the tank.

5. Connect the tubes of the filtration pump (1 pcs) to the nozzles of assembly group 2 (observe designation/colour coding).

Assembling group 2

1. Connect the grey water filtration overflow to the on-site wastewater line.
2. Mount the corresponding connecting lines for venting on top of the filtering tanks (1 pcs), and the lines for levelling at the front of the tanks.
3. Connect vent.

In addition, the assembly group with tank 1 must be vented via an accompanying connection to assembly group 2 i.e the first tank in this group to the last tank in group 1.

4. Connect the tube of the feed pump (1 pcs).
5. The tubes of the filtration pump (1 pcs) must be connected to the nozzles of assembly group 3, provided for that purpose (observe designation/colour coding).

Assembling group 3

The transfer point of service water is mounted on this tank. Eventually, an external pressure booster unit can be connected here.

Please apply all connecting dimensions according to the technical data sheet.

1. Connect the service water tanks (2 pcs) to each other via an accompanying connecting line.
2. The overflow of the service water group must also be connected on-site to the existing wastewater line.
3. In order to ensure the supply to the service water network, the potable water backfeed must be connected on-site by means of a pressure line.
4. Connect the tube of the filtration pump (1 pcs) of assembly group 2.

Connecting the system to the control panel

Make sure all indicated connections have been made by a professional.

1. Connect the cables of assembly groups 2 and 3 to the control panel (see Circuit diagram/ Terminal diagram, observe designation).
2. Fill the system with grey water.

Initial operation

After all the guidelines regarding the assembly space and the assembly have been carried out by a professional, you can put the system into operation.

Please check the following points once more and carry them out in the given order.

1. Perform tightness tests on all connections.
2. Switch the main switch of the system to **OFF** (control box).
3. Open the gate valve of the potable water line.
4. Keep the pressure line for service water behind an external pressure boosting system closed.
5. Switch the main switch in the control box to **ON**.
6. When switching on for the first time, you must adjust the date and time and confirm using the **OK** button.

The system is now immediately switched to automatic mode.

Since assembly group 3 does not have any service water yet, the solenoid valve of the potable water line opens immediately and the service water reservoir will be filled to the minimum level.

After achieving the minimum water level in the service water tank, the solenoid valve switches off immediately, and the shut-off valve in the pressure line for service water can be opened.

7. The external pressure booster unit can now be put into operation . (see Operation Manual of the Manufacturer – Pressure Increase).

8. Grey water should now flow to the first assembly group via the grey water inflow. If necessary, please allow some connected showers, bathtubs or washbasins to run for assembly group 1 to be sufficiently filled with water.
9. The water will be aerated at time intervals.
10. On achieving the max. level in assembly group 1, allow the feed pump in assembly group 2 to run during manual mode until the membranes are covered with at least 5 cm of water (refer to Operation of the control system).


The system can now be used in automatic mode.

Only when sufficient grey water has entered the system and the levels in grey water and filter groups have reached the maximum values, will grey water be filtered and collected in assembly group 3.

CT10000

Product description

The systems are intended for multi-stage treatment of grey water and provision of service water. The system comprises multiple assembly groups.

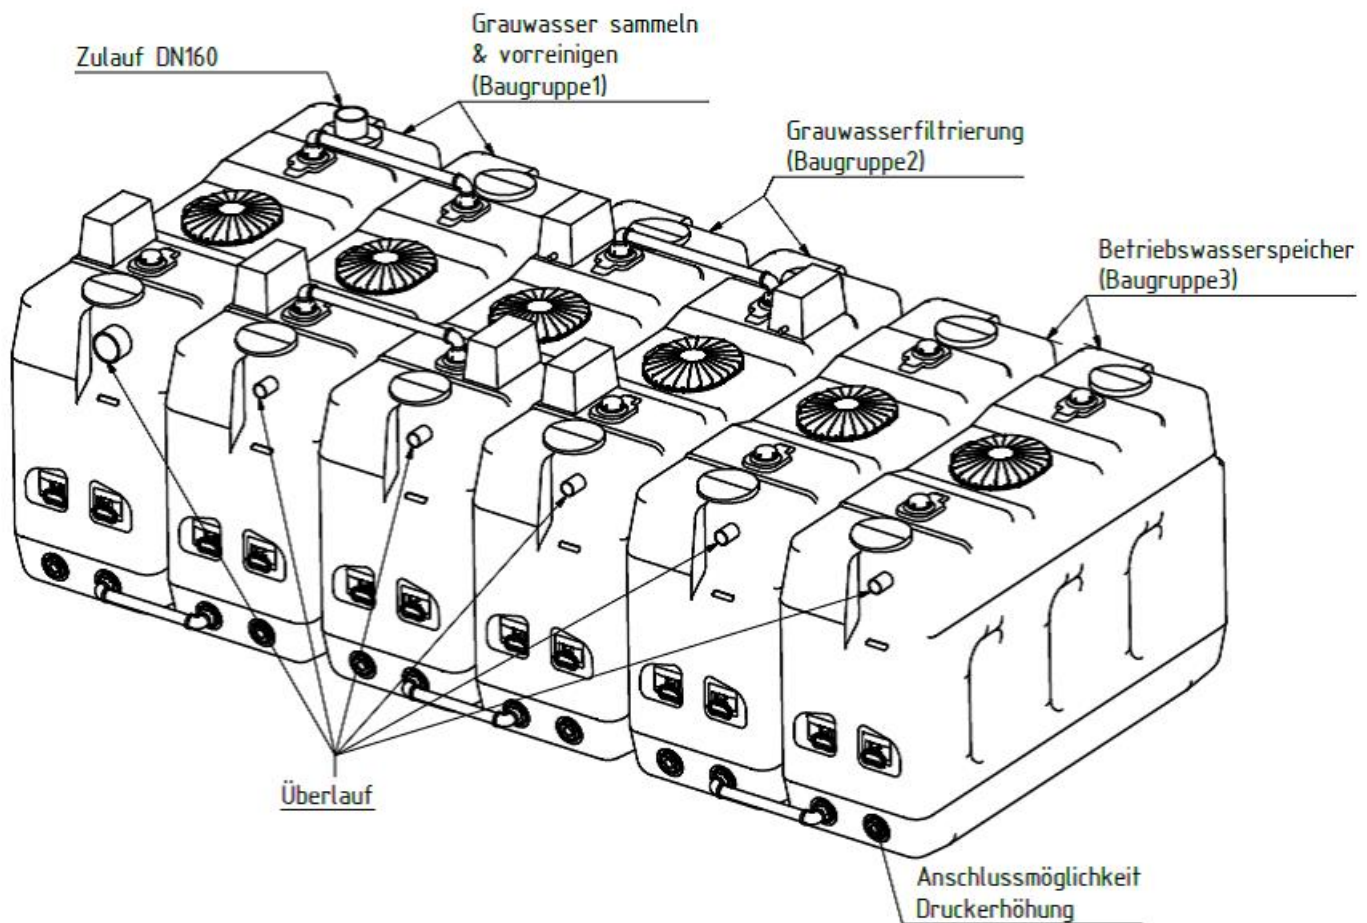

- **Group 1:** Collect, purify and filter grey water

In the first assembly group, grey water is collected, purified and filtered.

- **Group 1:** Collect and purify grey water

In the first assembly group, grey water is collected and purified.

- **Group 2:** Grey water filtration

The second assembly group is for grey water filtration with the CleverTank membrane modules.

- **Group 3:** Service water storage

In this assembly group the filtered grey water is stored as service water. In addition, the last tank has a potable water feed in order to ensure the supply of service water to the network.

- **Group 4:** Control system

CleverTank grey water systems are equipped with a fourth assembly group, a fully automatic control system for regulating and monitoring. It is provided with a potential-free contact to integrate fault indications in the building management system.

Tank volumes can vary according to the type of system.

Delivery scope

The grey water system CleverTank 10000 is delivered with the following components:

Group 1

- 2 x tank 3000l
- 2 x ventilation system
- 2 x permeate pump

Group 2

- 2 x tank 3000l
- 4 x membrane unit
- 4 x ventilation system
- 2 x permeate pump


Group 3

- 2 x tank 3000l
- potable water backfeed

Group 4

- control system

Diagram

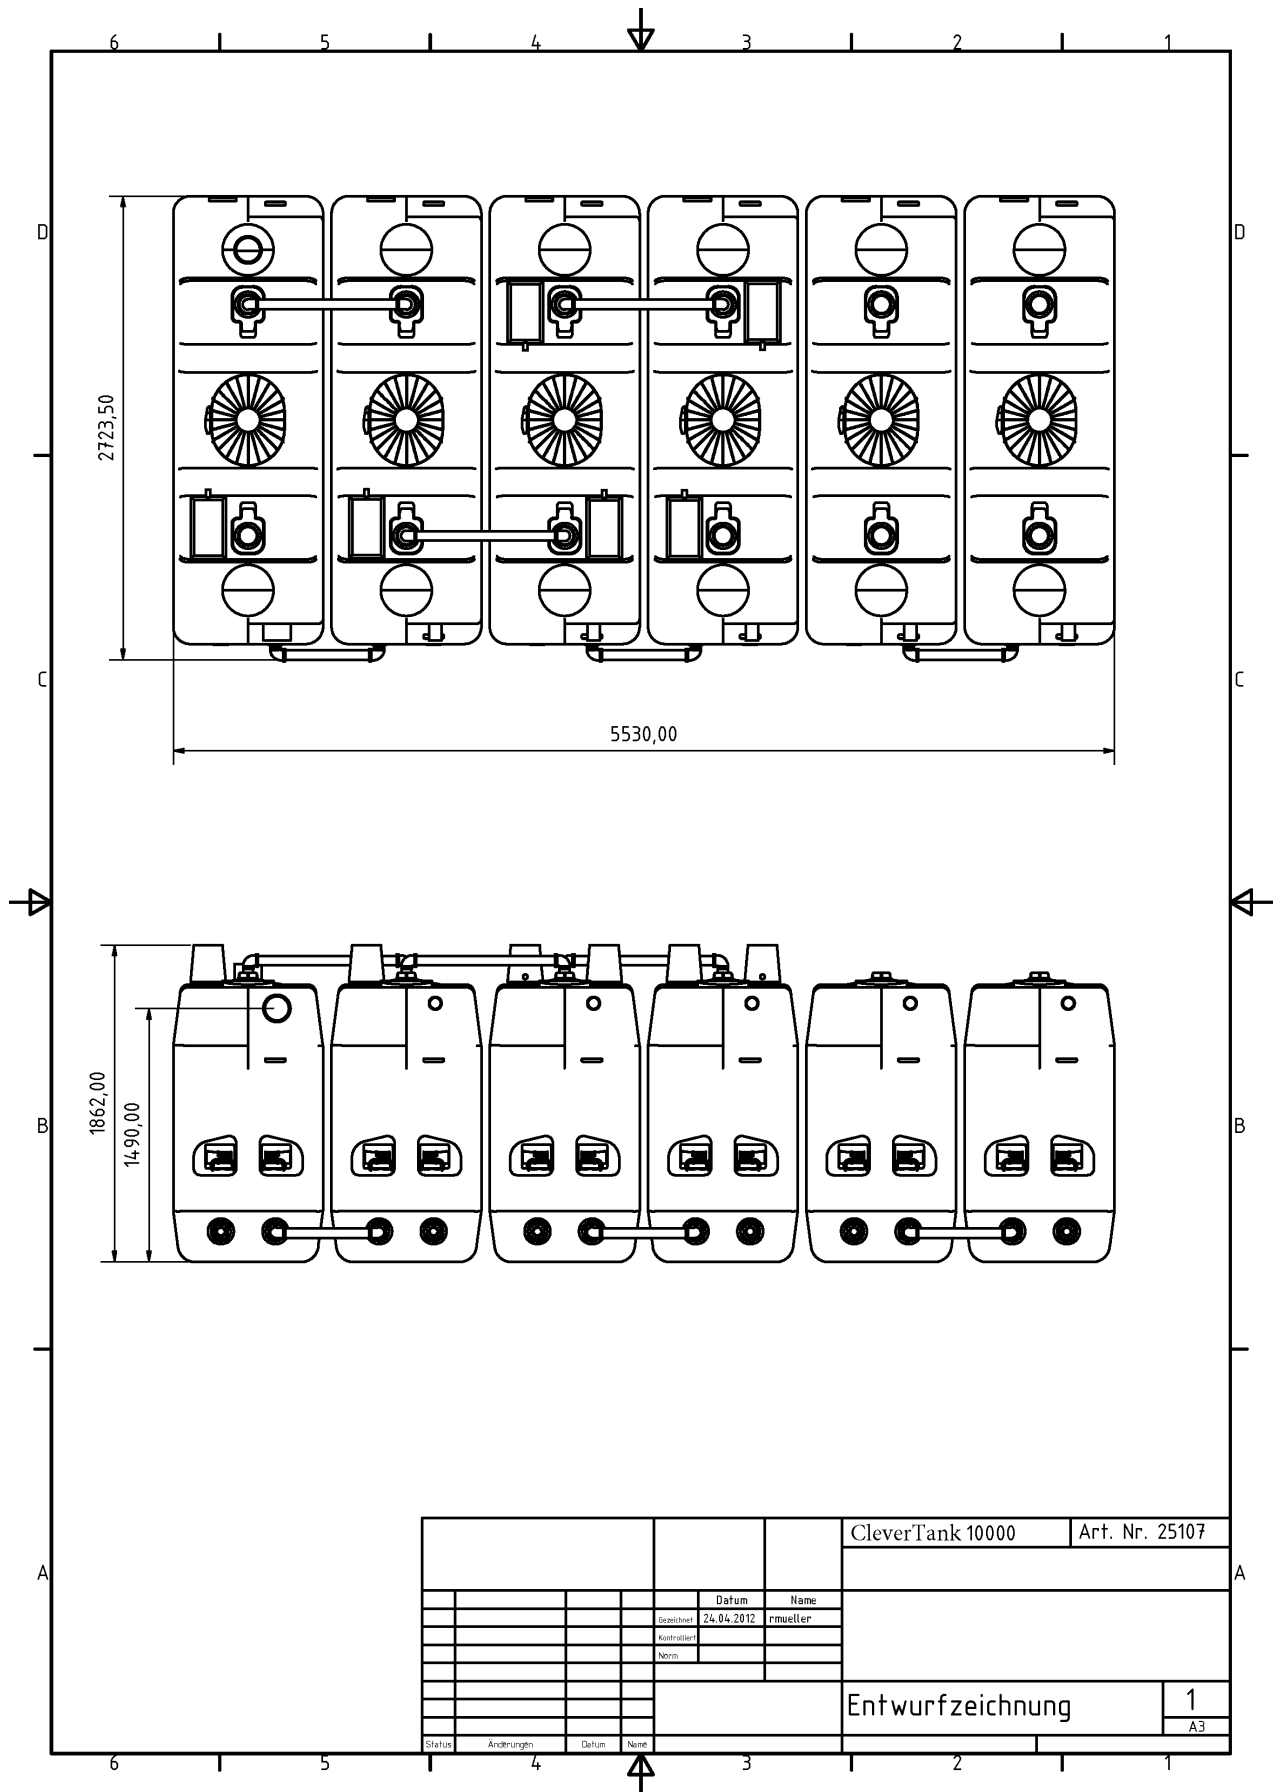

Installing CleverTank 10000



Attention:

- In case of non-compliance, warranty claims will be void!
- After proper setup and installation of the system, perform the electrical installation and check the tightness of all water connections.
- Avoid tempering with other system components, the control module, the pumps or any individual additional components.

1. Align and position the tanks
2. Connect tanks
3. Mount the overflow (backflow device and/ or lifting system provided on-site)
4. Connect pressure booster unit to the tank
5. Connect potable water backfeed
6. Connect inlet
7. Connect pressure booster unit to the service water network
8. Make the necessary electrical connections

Assembly space requirements

The grey water system with its PE tank must be erected on an even, levelled, clean and solid surface in order to prevent any malfunction during operation of the system.

Install the system at a sufficient distance (working space) to adjacent walls: laterally min. 0.5 m and at the back min. 0.5 m.

When erecting the individual PE storage tanks please make strict use of the technical drawings in the operating and installation manual. Each PE storage tank is to be labelled and marked accordingly.

The control system has been designed for mounting on the wall.

Assembly

Assembling group 1

Please refer to the technical data sheet for all connecting dimensions.

1. Locate the grey water inflow from the building.
2. Connect the inflow.

Venting must be ensured via the inflow.

3. Connect the overflow.

The grey water overflow must be provided with an on-site connection to the existing wastewater line.

Please ensure an adequate backflow device in the overflow line.

4. Connect the greywater tanks (2 pcs).

The accompanying connecting lines for venting must be mounted on top of the tank, and for level equalising at the front of the tank.

5. Connect the tubes of the filtration pump (2 pcs) to the nozzles of assembly group 2 (observe designation/colour coding).

Assembling group 2

1. Connect the grey water filtration overflow to the on-site wastewater line.
2. Mount the corresponding connecting lines for venting on top of the filtering tanks (2 pcs), and the lines for levelling at the front of the tanks.
3. Connect vent.

In addition, the assembly group with tank 1 must be vented via an accompanying connection to assembly group 2 i.e the first tank in this group to the last tank in group 1.

4. Connect the tube of the feed pump (2 pcs).
5. The tubes of the filtration pump (2 pcs) must be connected to the nozzles of assembly group 3, provided for that purpose (observe designation/colour coding).

Assembling group 3

The transfer point of service water is mounted on this tank. Eventually, an external pressure booster unit can be connected here.

Please apply all connecting dimensions according to the technical data sheet.

1. Connect the service water tanks (2 pcs) to each other via an accompanying connecting line.
2. The overflow of the service water group must also be connected on-site to the existing wastewater line.
3. In order to ensure the supply to the service water network, the potable water backfeed must be connected on-site by means of a pressure line.
4. Connect the tube of the filtration pump (2 pcs) of assembly group 2.

Connecting the system to the control panel

Make sure all indicated connections have been made by a professional.

1. Connect the cables of assembly groups 2 and 3 to the control panel (see Circuit diagram/ Terminal diagram, observe designation).
2. Fill the system with grey water.

Initial operation

After all the guidelines regarding the assembly space and the assembly have been carried out by a professional, you can put the system into operation.

Please check the following points once more and carry them out in the given order.

1. Perform tightness tests on all connections.
2. Switch the main switch of the system to **OFF** (control box).
3. Open the gate valve of the potable water line.
4. Keep the pressure line for service water behind an external pressure boosting system closed.
5. Switch the main switch in the control box to **ON**.
6. When switching on for the first time, you must adjust the date and time and confirm using the **OK** button.

The system is now immediately switched to automatic mode.

Since assembly group 3 does not have any service water yet, the solenoid valve of the potable water line opens immediately and the service water reservoir will be filled to the minimum level.

After achieving the minimum water level in the service water tank, the solenoid valve switches off immediately, and the shut-off valve in the pressure line for service water can be opened.

7. The external pressure booster unit can now be put into operation . (see Operation Manual of the Manufacturer – Pressure Increase).

8. Grey water should now flow to the first assembly group via the grey water inflow. If necessary, please allow some connected showers, bathtubs or washbasins to run for assembly group 1 to be sufficiently filled with water.
9. The water will be aerated at time intervals.
10. On achieving the max. level in assembly group 1, allow the feed pump in assembly group 2 to run during manual mode until the membranes are covered with at least 5 cm of water (refer to Operation of the control system).

The system can now be used in automatic mode.

Only when sufficient grey water has entered the system and the levels in grey water and filter groups have reached the maximum values, will grey water be filtered and collected in assembly group 3.